# COTEK

BP-□□□□A Series Lotate Switch-Mode 3 Stage

Battery Charger User's Manual









# **Table of Contents**

1.	Impo	rtant Safety Information	1
	1-1	General Safety Precautions	1
	1-2	Battery Precautions	2
2.	Featu	ıres	3
	2-1	Battery Charging Curve	3
	2-2	Electrical Characteristics	4
	2-3	Mechanical Drawing.	5
3.	Instru	uctions	6
	3-1	Front Panel Operation	6
	3-2	Rear Panel Operation	7
	3-3	Troubleshooting.	8
	3-4	Battery Type Selections	8



# 1. Important Safety Information



#### WARNING!

Before installing or using BP-\u2214\u2214 Battery Charger, you need to read following safety information carefully.

#### 1-1. General Safety Precautions

- 1-1-1. Do not expose BP- A Battery Charger to water, mist, snow, or dust. To reduce the risk of fire, do not cover or obstruct the ventilation shaft.
  Do not install BP- A Battery Charger in a zero-clearance Compartment. Overheating may occur.
  1-1-2. To avoid the risk of fire and electronic shock, make sure that existing
- 1-1-2.To avoid the risk of fire and electronic shock, make sure that existing wiring is in good electrical condition and not undersize.
  Do not operate BPA Battery Charger with damaged or substandard wiring.
- 1-1-3.Do not charge non-rechargeable batteries.
- 1-1-4.Do not charge batteries in a non-ventilated enclosures.
- 1-1-5. Only the wire with IEC socket is allowed to plug to the battery charger.
- 1-1-6.If the power supply cord is damaged, it must be replaced by the manufacturer, the service agent, or a related qualified person in case of a hazard.



#### 1-2. Battery Precautions


- 1-2-1.If battery acid contacts your skin or clothing, you shall wash it out with soap and water immediately. If battery acid contacts your eyes, you shall wash it out with cold running water for at 1 least 20 minutes and get medical attention immediately.
- 1-2-2. Never smoke or make a spark or flame in the vicinity of the battery or the engine.
- 1-2-3.Do not drop metals on the battery. The resulting spark or short-circuit on the battery or other electrical parts may cause an explosion.
- 1-2-4. Remove personal metal items such as rings, bracelets, necklaces, and watches when operating with lead-acid batteries. Doing so may cause short circuit and very high temperature, which can melt metal items and even burn you.



# 2. Features

- High-performance 3-stage charging effect
- 0.98 typical power factor
- Advanced 8 bit microprocessor control circuit
- Reverse polarity protected by fuse
- Ignition protection
- Output short circuit protection
- Over power protection
- Switch mode technology
- Statue of charge indication by LED
- Compact and lightweight design

## 2-1. Battery Charging Curve

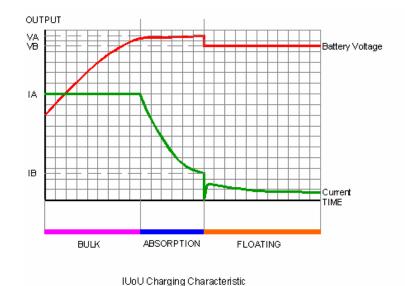

Model	12V / 5A	12V / 10A	24V / 5A	24V / 3A
VA	14.4V	14.4V	28.8V	28.8V
VB	13.6V	13.6V	27.2V	27.2V
IA	5A	10A	5A	2.5A
IB	0.75A	1.5A	0.75A	0.38A




## 2-2. Electrical Characteristics

Model		BP-1210A	BP-1205A	BP-2405A	BP-2403A
	DC Voltage Range	14.4V	14.4V	28.8V	28.8V
	Rated Current	10A	5A	5A	ЗА
Output	Current Range	0 ~ 10A	0 ~ 5A	0 ~ 5A	0 ~ 3A
Output	Rated Power (max.)	144W	72W	144W	86.4W
	Battery Charger Mode	3 - stage Battery Chargers ( Refer to Battery Charging Curve)			
	Indication LED	Refer to LED Status			
	Voltage Range	88 ~ 264VAC			
	Frequency Range	47Hz ~ 63Hz			
Innut	Efficiency ( Typ. ) at 230Vac	80% LEC	78%	83%	80%
Input	AC Current ( Max. )	1.9 A / 90VAC	0.95A / 180VAC		
	Inrush Current (Typ.)	Cold Start 30A / 230VAC			
	Leakage Current	< 0.75mA / 240VAC	1		
	0	102-110% rated output power			
	Over Load	Protection type: Constant current limiting, Hiccup mode, recovers automatically after fault condition is removed			
Protection		85°C ± 5°C (TH1) detect on heat sink			
	Over Temperature	Protection type: Shut down output voltage, recovers automatically after temperature goes down			
	Working Temp.				
	Working Humidity	20 ~ 90% RH non-condensing			
Environment	Storage Temp., Humidity	- 40 ~ +85°C			
	Temp.Coefficient	± 0.03% / °C ( 0 ~ 50°C )			
	Vibration	10 ~ 500Hz, 1G 0.5Oct/min, period for 60min. Each along X,Y,Z axes			
	Safety Standards	IEC 60950-1, 1st Edition ( 2001 ) ; EN 60950-1, 1st Edition ( 2001+A11 )			
	Withstand Voltage	I/P - O/P:3KVAC I/P - FG:1.5KVAC O/P-FG:0.5KVAC, 1 minute			
Safety	Isolation Resistance	I/P - O/P, I/P - FG, O/P - FG:100M Ohms/500VDC			
&	EMI Conduction & Radiation	EN 55022 : 2006 Class B			
EMC	Harmonic Current	EN 61000-3-2 : 2006 ; EN 61000-3-3 :1995+A1 : 2001+A2 : 2005 ; EN 55024 : 1998+A1:2001+A2 : 2003 ;			
	EMS Immunity	IEC 61000-4-2 Edition 1.2 : 2001-04 ; IEC 61000-4-4 : 2004 IEC 61000-4-5 Edition 1.1 : 2001-04 ; IEC 61000-4-6 Edition 2.1 : 2004-11 IEC 61000-4-8 Edition 1.1 : 2001-03 ; IEC 61000-4-11 Second Edition : 2004-03			
	MTBF Compliance: MIL-HDBK-217F	343.3HRS	343.1HRS	302.2HRS	265.5HRS
Others	Dimension (L*W*H) (mm)	210 (L) x 85 (W) x 50	) (H) mm / 8.26 (L) x	3.34 (W) x 1.96 (H) Ir	nch
	Packing	1 kgs. / 2.2 Lbs.			
Note	ambient temperature.  2. The power supply is consider	lly mentioned are measured at 230VAC input, rated load and 25°C of ered a component which will be installed into a final equipment. e re-confirmed that it still meets EMC directives.			

\*Note : The specifications are subject to change without notice.



## 2-3. Mechanical Drawing

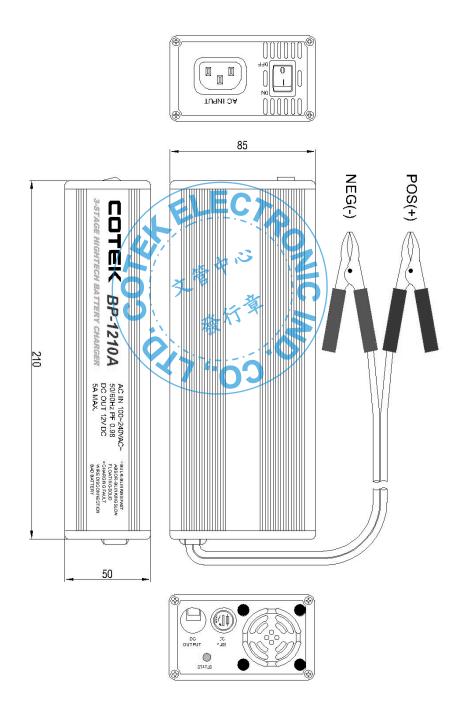





# 3. Instructions

BP- A series are high frequency switch-mode 3-stage battery chargers equipped with micro-controller and PFC circuit to manage battery intelligently and to provide highly reliable operations. Before using BP- A, read all instructions and precautions marking on this manual.

## 3-1. Front Panel Operation:

#### 3-1-1. Front view:

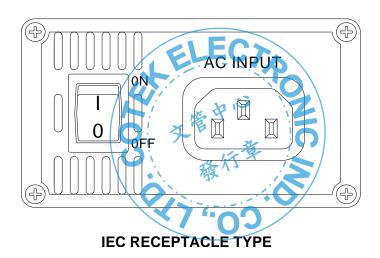

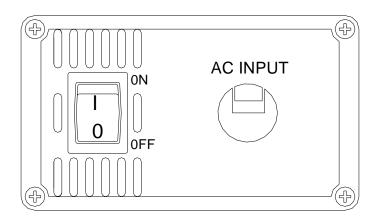

**POWER CORD TYPE** 




#### 3-1-2.ON / OFF switch:

Power ON / OFF switch, leave the status OFF during installation.

#### 3-1-3.LED Status

Charging Status	LED Signal	LED Indication
Bulk Charge		Fast Green Blink
Absorption Charge		Slow Green Blink
Floating Charge		Solid Green
Charging Failure or Wire Disconnection		Red Blink

### 3-2. Rear Panel Operation :

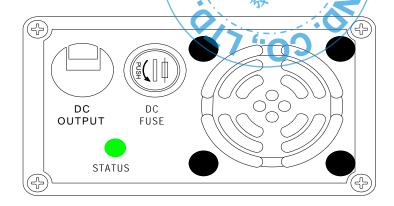

#### 3-2-1. Ventilation Shaft:

Be sure to keep it a distance (at least one inch) from surrounding things.

## 3-2-2.DC Output Terminals:

Connect it to 12V/24V batteries.

[+] indicates positive, [-] indicates negative. Reverse polarity connection will blow the internal fuse and may damage BP-\_\_\_\_A permanently.



## 3-3. Troubleshooting:

Problems and Symptoms	Possible Cause	Solutions	
"Red" LED blink	Battery is disconnected	Check the battery connection.	
	Polarity reverse	Place proper polarity. Check DC fuse. If broken, replace the same rating fuse.	
LE!	DC fuse broken	Check DC output fuse	
LED light off	No AC power delivering Thermal shutdown	Check input power connection.  Make sure the ventilation shaft is not obstructed.  Improve ventilation.  Lower the temperature Surrounding it.	

## 3-4. Battery Type Selections:

Sealed lead acid and open lead acid batteries are as follows:

Model No.	Battery Capacity (Min.)	Battery Capacity (Max.)	
BP-1205A	12V / 15Ah	12V / 50Ah	
BP-1210A	12V / 30Ah	12V / 100Ah	
BP-2403A	24V / 7.5Ah	24V / 25Ah	
BP-2405A	24V / 15Ah	24V / 50Ah	



# COTEK

No. 33, Rong Hsin Rd., Pa Teh City, Tao Yuan County, Taiwan

Phone: 886-3-3661581 FAX: 886-3-3676029

E-mail: sales@cotek.com.tw http://www.cotek.com.tw