

USER'S MANUAL  
Rev. 01/2008

# CD-KP

## REMOTE KEY PAD

3000M / 3200 Series

---



### CD Automation S.r.l.

Via Picasso 34/36 - 20025 - Legnano (MI) - ITALY

Tel +39 0331 577479 - Fax +39 0331 579479

E-Mail: [info@cdautomation.com](mailto:info@cdautomation.com) - WEB: [www.cdautomation.com](http://www.cdautomation.com)



## Important warning for safety



This unit is integral part of panel instruments used for equipments of industrial systems. When there is a possibility that the abnormality of this instrument may cause a major accident or damage to other instruments, externally install an adequate emergency stop circuit or a protection circuit to prevent accidents.

Don't use these unit in aerospace applications and / or nuclear.

### **Important warnings (Avvertenze importanti, attention)**

During the operations with units under tension, local regulations regarding electrical installation should be rigidly observed:

- Respect the internal safety rules.
- Don't bend components to maintain insulation distances.
- Protect the units from high temperature humidity and vibrations.
- Don't touch components to prevent electrostatic discharges on them.
- Verify that the order code is in line with real needs.
- Turn off the power before attaching/detaching the unit. Otherwise electric shock, malfunction or failure may result.

This listing does not represent a complete enumeration of all necessary safety cautions.

### **Protection (Protezione, Protection)**

The protection of the CD-KP is conforming to the specific international with IP30 protection rating.

### **Warranty condition (Garanzia, Conditions de garantie)**

CD Automation gives a 12 months warranty to its products.

The warranty is limited to repairing and parts substitution in our factory and does exclude products not properly used and fuses.

Warranty does not include products with serial numbers deleted. The faulty product should be shipped to CD Automation at customer's cost and our Service will evaluate if product is under warranty terms. Substituted parts remain of CD Automation property.


CD Automation reserves the right to modify the own products and this manual without any advise..



## Overview

The CD-KP is designed to be connected with all CD Automation's Thyristor units via RS485 communication. On front unit is possible to read the principal operational parameters of the unit like: power, voltage, current, set-point, alarms, etc.

One of these variables can be selected and re-transmitted via an isolated output (4÷20mA or 0÷10V) On front unit is also available a plug-in connector RS485 for connect a PC with the Thyristor units without open the cabinet and without stop the production process.

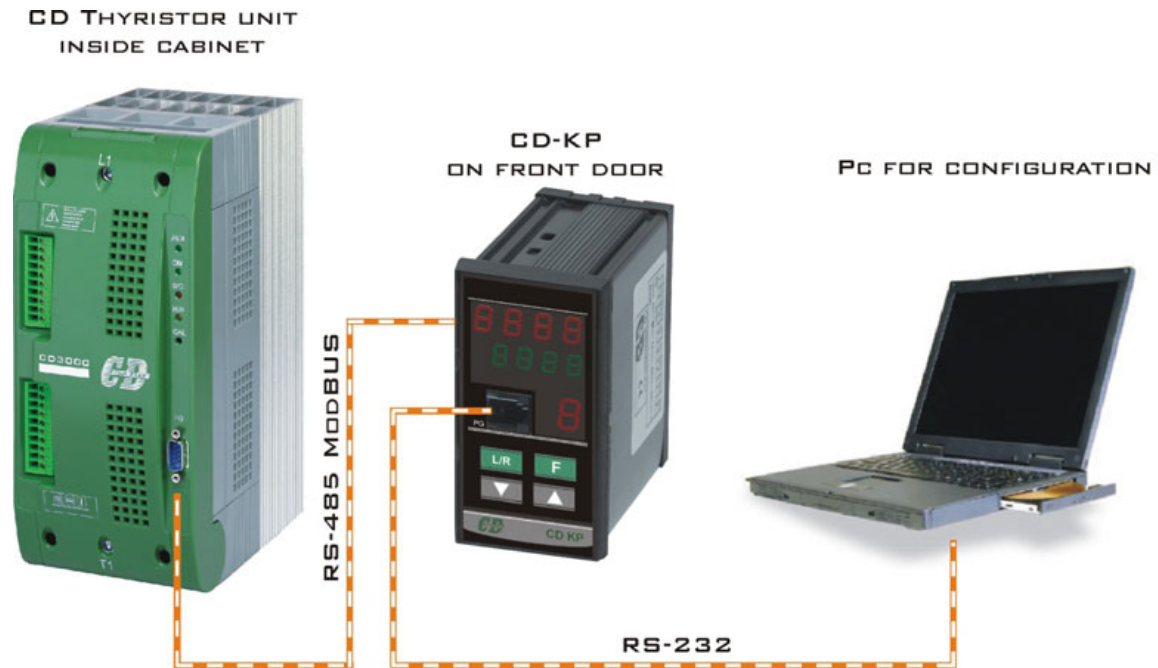

## Technical Specifications

General features:	
Material:	PPO self-extinguishing
Mounting:	on panel
Weight	0,3Kg
Voltage range:	From 100 to 130Vac or From 210 to 265Vac
Consumption Max:	3VA
Display Type	LED 7seg.
Height characters	13mm, 10mm
Digit	3
Local/Remote Function	Yes

Communication features:	
Interface	RS485
Protocol	Modbus
Max address	10

Re-transmission Output features:	
0÷10Vdc:	Isolated, Max 10mA
0÷20mA / 4÷20mA:	Isolated, Max 500Ω

## Installation

Before to install, make sure that the unit have not damages.


If the product has a fault, please contact the dealer from which you purchased the product.

Verify that the product is the same thing as ordered.

## Environmental installation conditions

Work temperature	0-45°C
Storage temperature	-25°C a 70°C
Installation	Don't install at direct sun light, where there are conductive dust, corrosive gas, vibration or water and also in salty environmental.
Altitude	Up to 1000 meter over sea level. For higher altitude reduce the nominal current of 2% for each 100m over 1000m.
Humidity	From 5 to 95% without condense and ice

## Dimensions and Fixing holes

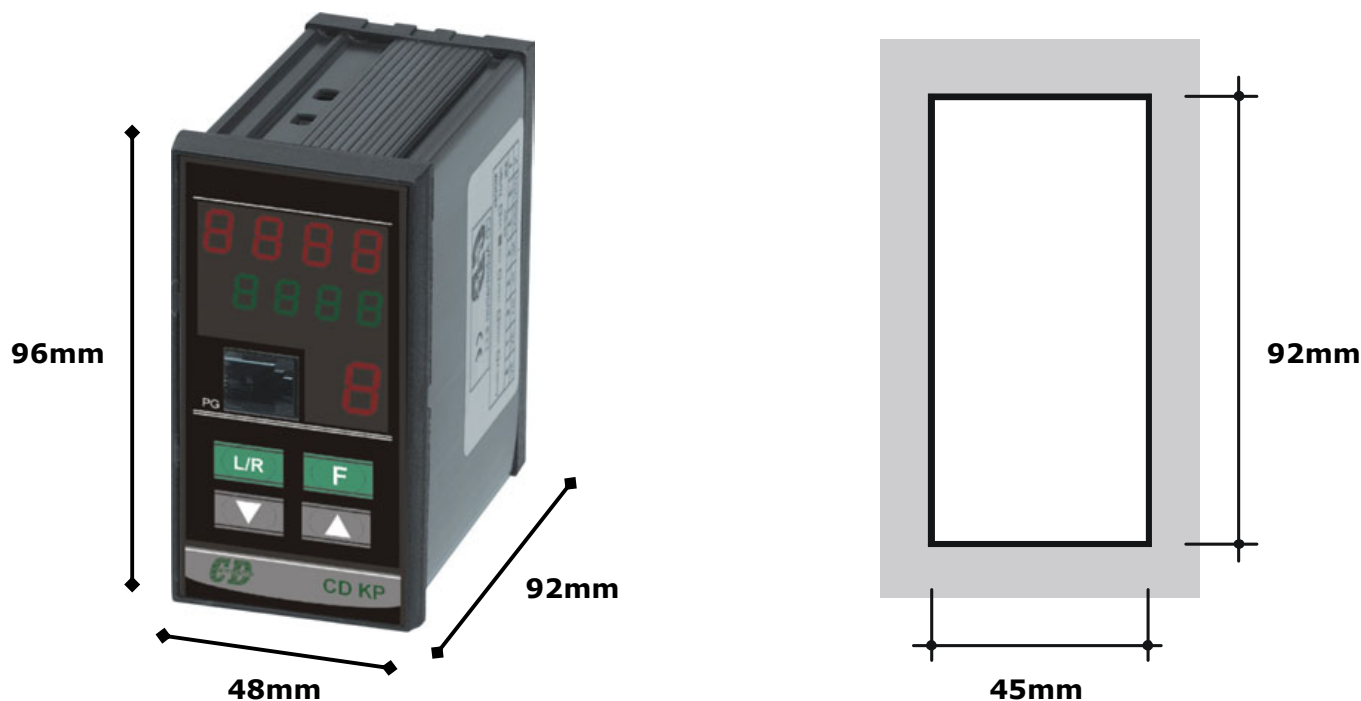

## Wiring instructions


The unit could be susceptible to interferences lost by near equipments or by the power supply, for this reason in accord to the fundamental practices rules is opportune take some precautions:

- The electronic circuit of the unit must be supplied from a dedicated voltage and not with inductive or capacitive loads. We recommend the use of a screened transformer.
- The coil contactor, the relays and other inductive loads must be equipped with opportune RC filter.
- Use shielded bipolar cables for all the input and output signals.
- The signal cables must not be near and parallel to the power cables.
- Local regulations regarding electrical installation should be rigidly observed.

### Cable dimensions

Max cable: 1.5 mm<sup>2</sup> (14 AWG)


## Connection Diagram

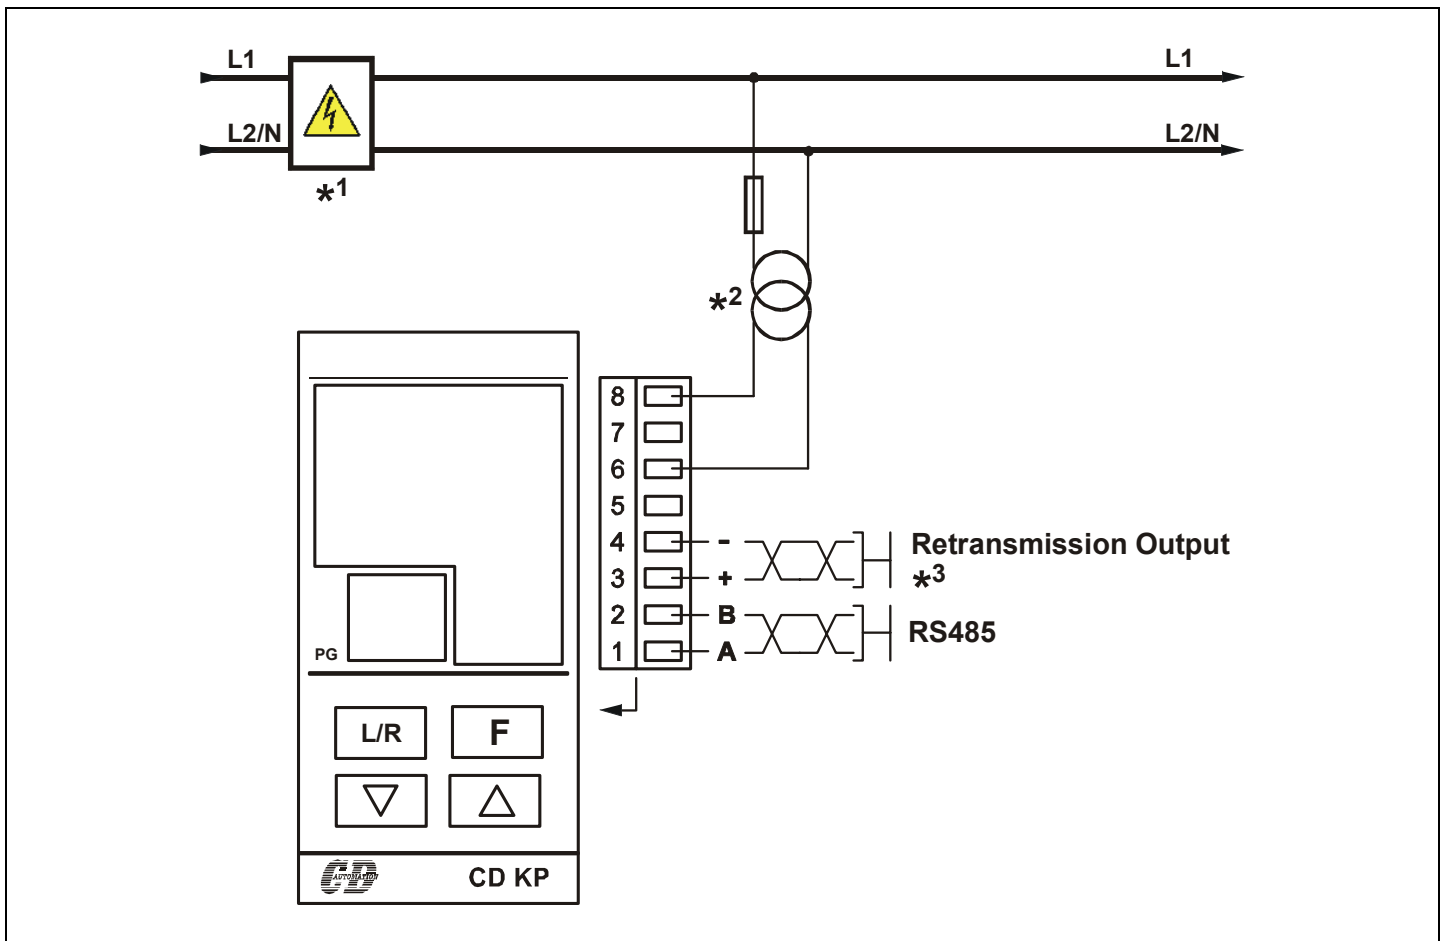

### Note:

- \*1 A suitable device must ensure that the unit can be electrically isolated from the supply, this allows the qualified people to work in safety.
- \*2 If the Auxiliary Voltage (written on the identification label) is different from Supply Voltage, use an external transformer as designated
- \*3 See par. "Analog output configuration"

## Part Names and Functions

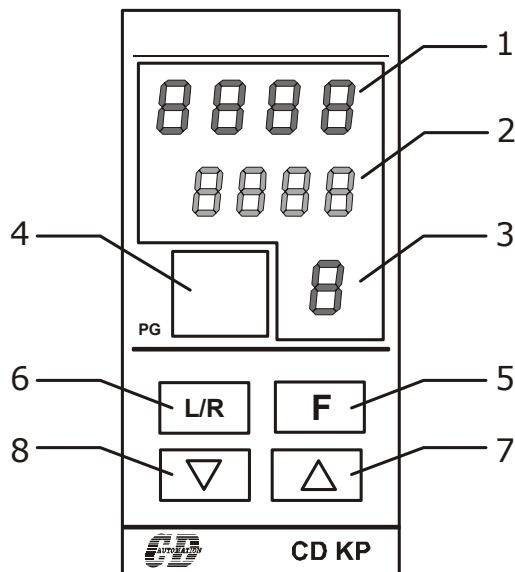

<b>1</b>	The Display1 shows the measured values or the name of the parameters. The Display1 blinks when an alarm is on.
<b>2</b>	The Display2 shows set-point value or the parameters' values. The Display2 blinks when you change the values
<b>3</b>	The Display3 shows the address of the connected unit. The Display3 blinks when the address is wrong or not connected.
<b>4</b>	The PG Connector is used to configure the thyristor unit with the configuration software and with the programming cable. When the programming cable is on the PG Connector, all the Displays blinks and the functions are disabled.
<b>5</b>	Key F (Function) is used for scroll the parameters and for saving the modified values.
<b>6</b>	Key L/R (Local / remote) is used for set-point change through the Increase and Decrease Keys. It is used also for saving the parameters in the configuration menu.
<b>7</b>	Key UP is used for increase the set-point value or the parameter's value.
<b>8</b>	Key DOWN is used for decrease the set-point value or the parameter's value.

## OPERATOR Menu

This menu is active when you turn ON and contains the state of the parameters on the connected unit. Press the F key for scroll through the parameters and the keys UP or DOWN for change the values of the R/W parameters.

Parameter: <b>U</b>	<b>Load Voltage (only for unit 3200)</b>	<b>V</b>	<b>R</b>
Function:	This parameter read-only shows on the display 1 the Load Voltage.		
Display1 Value:	For a correct value reading is necessary make the Full scale calibration (see SETUP menu).		
Display2 Value:	On the display 2 is visualized in percentage the actual value of the set-point.		
Note:	With the L/R key is possible activate the remote control (display 2 flashing) and the keys UP and DOWN change the set-point value.		

Parameter: <b>A</b>	<b>Load Current</b>	<b>A</b>	<b>R</b>
Function:	This parameter read-only shows on the display 1 the Load Current.		
Display1 Value:	For a correct value reading is necessary make the Full scale calibration (see SETUP menu).		
Display2 Value:	On the display 2 is visualized in percentage the actual value of the set-point.		
Note:	With the L/R key is possible activate the remote control (display 2 flashing) and the keys UP and DOWN change the set-point value.		

Parameter: <b>P</b>	<b>Load Power (only for unit 3200)</b>	<b>Kw</b>	<b>R</b>
Function:	This parameter read-only shows on the display 1 the Load Power.		
Display1 Value:	For a correct value reading is necessary make the Full scale calibration (see SETUP menu).		
Display2 Value:	On the display 2 is visualized in percentage the actual value of the set-point.		
Note:	With the L/R key is possible activate the remote control (display 2 flashing) and the keys UP and DOWN change the set-point value.		

Parameter: <b>noAL</b>	<b>Unit Status</b>		<b>R</b>
Function:	This parameter read-only give information about the Status of the thyristor unit connected.		
Display1 Value:	<b>noAL</b> = No Alarm <b>CAL</b> = Calibration active <b>CL</b> = Current Limit active <b>th</b> = Heat-sink over temperature <b>Hb</b> = Heater Break Alarm <b>Scr</b> = SCR short circuit		
Display2 Value:	The display2 shows the address of the associate unit.		
Note:	If the address on the display2 is the same of the address on the display3, it is possible to reset the alarms by pressing the keys UP and DOWN together.		

Parameter: <b>c</b>	<b>State of Conduction</b>		<b>R/W</b>
Function:	This parameter shows the State of Conduction of the connected unit.		
Display1 Value:	<b>cOFF</b> = OFF Condition (Load IS NOT Powered) <b>cOn</b> = ON Condition (Load IS Powered)		
Note:	The keys UP and DOWN change the conduction's value. If pressed at the same time, they activate the calibration procedure.		

Parameter: <b>Addr</b>	<b>Address of the connected unit</b>		<b>R/W</b>
Function:	This parameter shows the parameters of an other unit, the actual address is visualized on the display3		
Display3 Value:	Address range 1 ÷ 10 (1...9, R)		
Note:	The keys UP and DOWN change the address value, the display3 flashing if the address is wrong or not connected.		

## SETUP Menu

To see this menu, it is necessary visualize one of the parameters  $U$ ,  $I$ ,  $P$  on the operator menu, and press at the same time the F and UP keys for 2 seconds.

Then press the F key for scroll through the parameters and UP or DOWN keys for change the values of the R/W parameters.

To exit of the SETUP menu, press the keys F and UP again or turn OFF and then turn ON the unit.

Parameter: $U$	Voltage Full Scale (only for unit 3200)	V	R/W
Function:	This parameter is used to set the Load voltage full scale.		
Calibration:	<ul style="list-style-type: none"> <li>Give maximum output value at the Thyristor unit, the display1 will visualize the actual voltage value.</li> <li>With the UP or DOWN keys set the new value (display2 flashing).</li> <li>With the L/R key save the new value.</li> <li>The display2 will become fixed and the procedure is completed.</li> </ul>		
Note:	Press F key to stop the procedure without saving.		

Parameter: $I$	Current Full Scale	A	R/W
Function:	This parameter is used to set the Load current full scale.		
Calibration:	<ul style="list-style-type: none"> <li>Give maximum output value at the Thyristor unit, the display1 will visualize the actual current value.</li> <li>With the UP or DOWN keys set the new value (display2 flashing).</li> <li>With the L/R key save the new value.</li> <li>The display2 will become fixed and the procedure is completed</li> </ul>		
Note:	Press F key to stop the procedure without saving.		

Parameter: $I_dP$	Decimal point for Current value		R/W
Function:	This parameter is used to set the decimal point for Current value (on display 1).		
Value:	0 = no decimal point 1 = decimal point on the first digit 2 = decimal point on the second digit		
Note:	Press L/R key for save the new value, or Press F key to stop the procedure without saving.		

Parameter: $P$	Power Full Scale (only for unit 3200)	Kw	R/W
Function:	This parameter is used to set the Load power full scale.		
Calibration:	<ul style="list-style-type: none"> <li>Give maximum output value at the Thyristor unit, the display1 will visualize the actual power value.</li> <li>With the UP or DOWN keys set the new value (display2 flashing).</li> <li>With the L/R key save the new value.</li> <li>The display2 will become fixed and the procedure is completed.</li> </ul>		
Note:	Press F key to stop the procedure without saving.		

Parameter: $P_dP$	Decimal point for Power value		R/W
Function:	This parameter is used to set the decimal point for power value (on display 1).		
Value:	0 = no decimal point 1 = decimal point on the first digit 2 = decimal point on the second digit		
Note:	Press L/R key for save the new value, or Press F key to stop the procedure without saving.		



Parameter: <b>SoSt</b>	<b>Soft Start Time</b>	<b>cycles</b>	<b>R/W</b>
Function:	This parameter is used to set the Soft Start cycles of the connected unit.		
Min/Max:	0 ÷ 255 cycles		
Note:	Changes are set immediately, without confirmation.		

Parameter: <b>Fb</b>	<b>Feed-Back Type (only for unit 3200)</b>		<b>R/W</b>
Function:	This parameter is used to set the Feed-Back type of the connected unit.		
Value:	<i>U</i> = Voltage Feed-Back <i>A</i> = Current Feed-Back <i>P</i> = Power Feed-Back <i>U2</i> = Square Voltage Feed-Back		
Note:	Changes are set immediately, without confirmation.		

Parameter: <b>Addr</b>	<b>Address of the connected unit</b>		<b>R/W</b>
Function:	This parameter shows the parameters of an other unit, the actual address is visualized on the display3		
Display3 Value:	Address range 1 ÷ 10 (1...9, A)		
Note:	The keys UP and DOWN change the address value, the display3 flashing if the address is wrong or not connected.		

## CONFIGURATION Menu

To see this menu, it is necessary visualize the *Addr* parameter on the operator menu, and press at the same time the F and L/R keys for 2 seconds.

Then press the F key for scroll through the parameters and UP or DOWN keys for change the values of the R/W parameters.

To exit of the CONFIGURATION menu, press the keys F and L/R again or turn OFF and then turn ON the unit.

Parameter: <b><i>bAud</i></b>	<b>Baud Rate</b>		<b>R/W</b>
Function:	This parameter is used to set the Baud Rate.		
Value:	<i>2.4</i> = 2400 Baud <i>4.8</i> = 4800 Baud <i>9.6</i> = 9600 Baud <i>19.2</i> = 19200 Baud		
Note:	Press L/R key for save the new value, or Press F key to stop the procedure without saving.		

Parameter: <b><i>PonU</i></b>	<b>START-UP Address</b>		<b>R/W</b>
Function:	This parameter is used to set the start-up address when the unit is turn ON.		
Value:	Address range 1 ÷ 10 ( <i>1...9, A</i> )		
Note:	Press L/R key for save the new value, or Press F key to stop the procedure without saving.		

Parameter: <b><i>PU</i></b>	<b>START-UP Parameter</b>		<b>R/W</b>
Function:	This parameter is used to set the start-up parameter on the OPERATOR menu, when the unit is turn ON.		
Note:	Press L/R key for save the new value, or Press F key to stop the procedure without saving.		

Parameter: <b><i>Out</i></b>	<b>Output Type</b>		<b>R/W</b>
Function:	This parameter is used to set the re-transmission output type.		
Value:	<i>0-10</i> = 0 ÷ 10Vdc <i>0-20</i> = 0 ÷ 20mA <i>4-20</i> = 4 ÷ 20mA		
Note:	To pass from Vdc to mA or from mA to Vdc is necessary a Hardware modification. (See par. "Analog output configuration").		

Parameter: <b><i>rEPL</i></b>	<b>Re-transmission Type</b>		<b>R/W</b>
Function:	This parameter is used to change the variable on the re-transmission output.		
Value:	<i>oFF</i> = no re-transmission <i>Ur</i> = Voltage re-transmission (only for unit 3200) <i>Ar</i> = Current re-transmission <i>Pr</i> = Power re-transmission (only for unit 3200) <i>rr</i> = set-point re-transmission		
Note:	Press L/R key for save the new value, or Press F key to stop the procedure without saving.		

Parameter: <b><i>UnrP</i></b>	<b>Re-transmission Address</b>		<b>R/W</b>
Function:	This parameter is used to set the unit's address for the re-transmission output.		
Value:	Address range 0 ÷ 10 ( <i>0...9, A</i> )		
Note:	With 0 value the re-transmission output change with the parameter <i>Addr</i> .		


## Analog output configuration

The re-transmission output is already configured in line with customer requirements that are defined in the Order Code.

However, if you wish to change the re-transmission output type (ex. from 0÷10V to 4÷20mA) proceed as follows:



**Warning:** Before connecting or disconnecting the unit check that power are isolated from voltage sources.

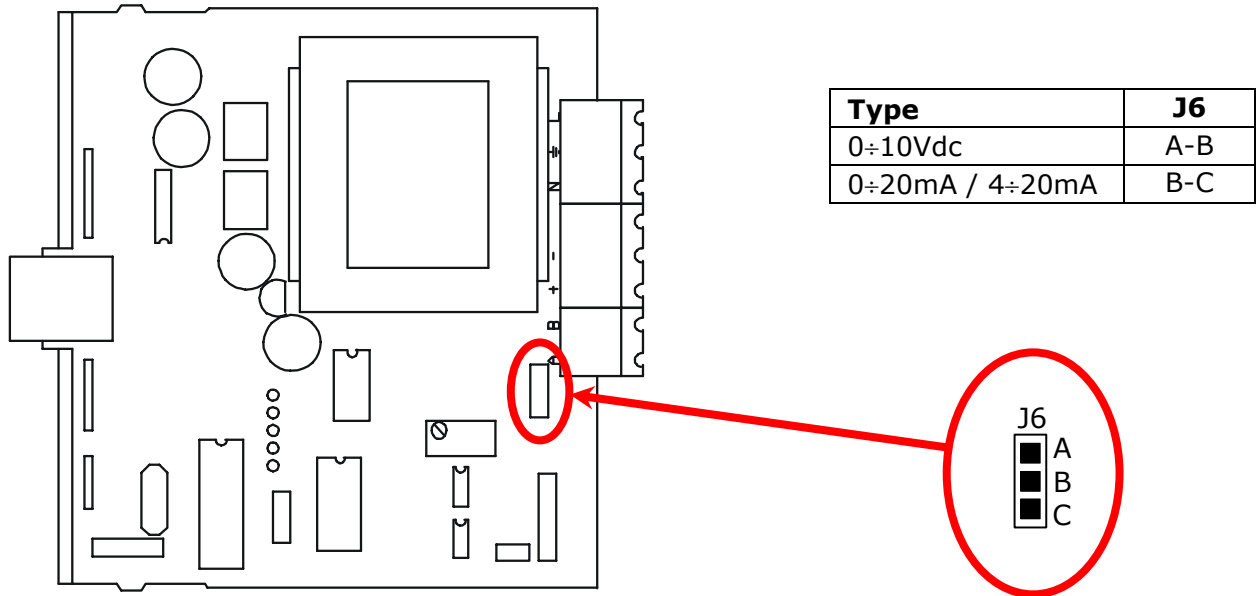

## Order Code

CODE	C	D	-	K	P	-	-	-	-	2
<b>SERIES</b>										
CD1000									1	
CD3000M									2	
CD3200									3	
<b>AUXILIARY VOLTAGE</b>										
From 100 to 130Vac									1	
From 210 to 265Vac									2	
<b>RE-TRANSMISSION</b>										
None									0	
0÷10Vdc									1	
0÷20mA									2	
4÷20mA									3	
<b>USER'S MANUAL</b>										
None									0	
Italian									1	
English									2	