

mitsubishi

Analog-Digital Converter Module

User's Manual
(Hardware)

AJ65SBT-64AD

Thank you for buying the Mitsubishi general-purpose programmable controller MELSEC Series

Prior to use, please read both this manual and detailed manual thoroughly and familiarize yourself with the product.



| | |
|---------------------------|-------------------|
| MODEL | AJ65S-64AD-U-H-JE |
| MODEL CODE | 13JT09 |
| IB(NA)-0800138-I(1112)MEE | |

● SAFETY PRECAUTIONS ●

(Read these precautions before using this product.)

Before using this product, please read this manual and the relevant manuals carefully and pay full attention to safety to handle the product correctly.

These precautions apply only to this equipment.

Refer to the user's manual of the CPU module to use for a description of the programmable controller system safety precautions.

In this manual, the safety precautions are classified into two levels:


"WARNING" and "CAUTION".

WARNING

Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.

CAUTION

Indicates that incorrect handling may cause hazardous conditions, resulting in minor or moderate injury or property damage.

Under some circumstances, failure to observe the precautions given under "CAUTION" may lead to serious consequences.

Observe the precautions of both levels because they are important for personal and system safety.

Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

[Design Precautions]

WARNING

- In the case of a communication failure in the network, data in the master module are held.
Check the communication status information (SB, SW) and configure an interlock circuit in the sequence program to ensure that the entire system will operate safely.

CAUTION

- Do not install the control lines or communication cables together with the main circuit lines or power cables.
Keep a distance of 100mm (3.94 inches) or more between them.
Failure to do so may result in malfunction due to noise.

[Installation Precautions]

CAUTION

- Use the programmable controller in an environment that meets the general specifications in this manual.
Failure to do so may result in electric shock, fire, malfunction, or damage to or deterioration of the product.
- For protection of the switches, do not remove the cushioning material before installation.
- Securely fix the module with a DIN rail or mounting screws.
Tighten the screws within the specified torque range.
Undertightening can cause drop of the screw, short circuit or malfunction.
Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
- Do not directly touch any conductive part of the module.
Doing so can cause malfunction or failure of the module.

[Wiring Precautions]

CAUTION

- Shut off the external power supply for the system in all phases before wiring.
Failure to do so may result in damage to the product.
- Ground the FG and FG1 terminals to the protective ground conductor dedicated to the programmable controller.
Failure to do so may result in malfunction.
- Tighten any unused terminal screws within the specified torque range (0.42 to 0.50N·m).
Failure to do so may cause a short circuit due to contact with a solderless terminal.
- Use applicable solderless terminals and tighten them within the specified torque range.
If any spade solderless terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- Check the rated voltage and terminal layout before wiring to the module, and connect the cables correctly.
Connecting a power supply with a different voltage rating or incorrect wiring may cause a fire or failure.
- Tighten the terminal screw within the specified torque range.
Undertightening can cause short circuit or malfunction.
Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
- Prevent foreign matter such as dust or wire chips from entering the module.
Such foreign matter can cause a fire, failure, or malfunction.

[Wiring Precautions]

CAUTION

- Place the cables in a duct or clamp them.
If not, dangling cable may swing or inadvertently be pulled, resulting in damage to the module or cables or malfunction due to poor contact.
- Do not install the control lines or communication cables together with the main circuit lines or power cables. Failure to do so may result in malfunction due to noise.
- When disconnecting the cable from the module, do not pull the cable by the cable part. Loosen the screws of connector before disconnecting the cable. Failure to do so may result in damage to the module or cable or malfunction due to poor contact.

[Startup and Maintenance Precautions]

CAUTION

- Do not touch any terminal while power is on. Doing so may cause malfunction.
- Shut off the external power supply for the system in all phases before cleaning the module or retightening the terminal screws.
Failure to do so may cause the module to fail or malfunction.
Undertightening the terminal screws can cause short circuit or malfunction.
Overtightening can damage the screw and/or module, resulting in drop, short circuit, or malfunction.
- Do not disassemble or modify the modules.
Doing so may cause failure, malfunction, injury, or a fire.
- Do not drop or apply strong shock to the module.
Doing so may damage the module.
- Shut off the external power supply for the system in all phases before mounting or removing the module to or from the panel.
Failure to do so may cause the module to fail or malfunction.
- After the first use of the product, do not mount/remove the terminal block to/from the module more than 50 times. (IEC 61131-2 compliant)
- Before handling the module, touch a grounded metal object to discharge the static electricity from the human body.
Failure to do so may cause the module to fail or malfunction.

[Disposal Precautions]

CAUTION

- When disposing of this product, treat it as industrial waste.

● CONDITIONS OF USE FOR THE PRODUCT ●

- (1) Mitsubishi programmable controller ("the PRODUCT") shall be used in conditions;
- i) where any problem, fault or failure occurring in the PRODUCT, if any, shall not lead to any major or serious accident; and
 - ii) where the backup and fail-safe function are systematically or automatically provided outside of the PRODUCT for the case of any problem, fault or failure occurring in the PRODUCT.

- (2) The PRODUCT has been designed and manufactured for the purpose of being used in general industries.

MITSUBISHI SHALL HAVE NO RESPONSIBILITY OR LIABILITY (INCLUDING, BUT NOT LIMITED TO ANY AND ALL RESPONSIBILITY OR LIABILITY BASED ON CONTRACT, WARRANTY, TORT, PRODUCT LIABILITY) FOR ANY INJURY OR DEATH TO PERSONS OR LOSS OR DAMAGE TO PROPERTY CAUSED BY the PRODUCT THAT ARE OPERATED OR USED IN APPLICATION NOT INTENDED OR EXCLUDED BY INSTRUCTIONS, PRECAUTIONS, OR WARNING CONTAINED IN MITSUBISHI'S USER, INSTRUCTION AND/OR SAFETY MANUALS, TECHNICAL BULLETINS AND GUIDELINES FOR the PRODUCT.

("Prohibited Application")

Prohibited Applications include, but not limited to, the use of the PRODUCT in;

- Nuclear Power Plants and any other power plants operated by Power companies, and/or any other cases in which the public could be affected if any problem or fault occurs in the PRODUCT.
- Railway companies or Public service purposes, and/or any other cases in which establishment of a special quality assurance system is required by the Purchaser or End User.
- Aircraft or Aerospace, Medical applications, Train equipment, transport equipment such as Elevator and Escalator, Incineration and Fuel devices, Vehicles, Manned transportation, Equipment for Recreation and Amusement, and Safety devices, handling of Nuclear or Hazardous Materials or Chemicals, Mining and Drilling, and/or other applications where there is a significant risk of injury to the public or property.

Notwithstanding the above, restrictions Mitsubishi may in its sole discretion, authorize use of the PRODUCT in one or more of the Prohibited Applications, provided that the usage of the PRODUCT is limited only for the specific applications agreed to by Mitsubishi and provided further that no special quality assurance or fail-safe, redundant or other safety features which exceed the general specifications of the PRODUCTS are required. For details, please contact the Mitsubishi representative in your region.

REVISIONS

*The manual number is given on the bottom right of the cover.

| Print Date | *Manual Number | Revision |
|------------|------------------|---|
| Sep., 2000 | IB(NA)-0800138-A | First printing |
| July, 2002 | IB(NA)-0800138-B | Partial correction Contact address (Back cover) |
| Mar., 2005 | IB(NA)-0800138-C | Addition Section 2.3 Correction SAFETY PRECAUTIONS, Conformation to the EMC Directive and Low Voltage Instruction, Chapter 1, Section 2.1, 2.2, 5.2, Chapter 7 |
| Mar., 2006 | IB(NA)-0800138-D | Partial correction Section 2.3 |
| Sep., 2006 | IB(NA)-0800138-E | Partial correction SAFETY PRECAUTIONS, Chapter 3, Chapter 7 |
| Dec., 2006 | IB(NA)-0800138-F | Partial correction Chapter 6 |
| Oct., 2008 | IB(NA)-0800138-G | Partial correction SAFETY PRECAUTIONS, Compliance with the EMC and Low Voltage Directives Section 2.1, 2.2, 4.1, 6.1 Deletion Section 5.1 |
| Sep., 2010 | IB(NA)-0800138-H | Addition CONDITIONS OF USE FOR THE PRODUCT Partial correction SAFETY PRECAUTIONS, Section 2.1, 2.2, 2.3, 4.1, 5.1, 6.2, Back cover |

| Print Date | *Manual Number | Revision |
|------------|------------------|--|
| Dec., 2011 | IB(NA)-0800138-I | <div data-bbox="804 147 960 197" style="border: 1px solid black; padding: 2px;">Addition</div> SAFETY PRECAUTIONS(Chinese) <div data-bbox="804 241 1104 291" style="border: 1px solid black; padding: 2px;">Partial correction</div> COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES, Section 2.1, 2.2 |
| | | |

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2000 MITSUBISHI ELECTRIC CORPORATION

CONTENTS

| | |
|--|---|
| 1. OVERVIEW | 1 |
| 2. SPECIFICATION | 1 |
| 2.1 General specifications | 1 |
| 2.2 Performance specifications | 2 |
| 2.3 Checking hardware versions | 3 |
| 3. NAME OF EACH PART | 4 |
| 4. LOADING AND INSTALLATION | 6 |
| 4.1 Precautions when handling | 6 |
| 4.2 Installation environment | 6 |
| 5. DATA LINK CABLE WIRING | 6 |
| 5.1 Connection of the CC-Link dedicated cables | 6 |
| 6. WIRING | 7 |
| 6.1 Wiring precautions | 7 |
| 6.2 Module connection example | 7 |
| 7. EXTERNAL DIMENSIONS | 8 |

ABOUT MANUALS

The following manuals are also related to this product.
In necessary, order them by quoting the details in the tables below.

Related Manual

| Manual name | Manual No. (Model code) |
|--|----------------------------|
| Analog-Digital Converter Module Type AJ65SBT-64AD User's Manual | SH-080106 (13JR18) |

COMPLIANCE WITH EMC AND LOW VOLTAGE DIRECTIVES

(1) Method of ensuring compliance

To ensure that Mitsubishi programmable controllers maintain EMC and Low Voltage Directives when incorporated into other machinery or equipment, certain measures may be necessary. Please refer to one of the following manuals.

- User's manual for the CPU module or head module used
- Safety Guidelines

(This manual is included with the CPU module, base unit, or head module)

The CE mark on the side of the programmable controller indicates compliance with EMC and Low Voltage Directives.

(2) Additional measures

To ensure that this product maintains EMC and Low Voltage Directives, please refer to one of the manuals listed under (1).

1. OVERVIEW

This user's manual explains the specifications, names and setting of parts, wiring and others of Type AJ65SBT-64AD analog-digital converter module (hereafter abbreviated to the "AJ65SBT-64AD") which is used as a remote device station of a CC-Link system.

2. SPECIFICATION

2.1 General specifications

The general specifications of the AJ65SBT-64AD are shown below.

| Item | Specification | | | | | |
|-------------------------------|---|------------------------------|--------------|-----------------------|----------------|-------------------------------------|
| Operating ambient temperature | 0 to 55°C | | | | | |
| Storage ambient temperature | -20 to 75°C | | | | | |
| Operating ambient humidity | 10 to 90%RH, non-condensing | | | | | |
| Storage ambient humidity | | | | | | |
| Vibration resistance | Compliant with JIS B 3502 and IEC 61131-2 | Under Intermittent vibration | Frequency | Constant acceleration | Half amplitude | Sweep count |
| | | | 5 to 8.4Hz | — | 3.5mm | 10 times each in X, Y, Z directions |
| | | Under continuous vibration | 8.4 to 150Hz | 9.8m/s ² | — | |
| | | | 5 to 8.4Hz | — | 1.75mm | — |
| Shock resistance | Compliant with JIS B 3502 and IEC 61131-2 (147 m/s ² , 3 times each in 3 directions X, Y, Z) | | | | | |
| Operating atmosphere | No corrosive gases | | | | | |
| Operating altitude*3 | 0 to 2000m | | | | | |
| Installation location | Inside a control panel | | | | | |
| Overvoltage category*1 | II or less | | | | | |
| Pollution degree*2 | 2 or less | | | | | |

*1 This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within premises.

Category II applies to equipment for which electrical power is supplied from fixed facilities. The surge voltage withstand level for up to the rated voltage of 300V is 2500V.

*2 This index indicates the degree to which conductive material is generated in terms of the environment in which the equipment is used.

Pollution level 2 is when only non-conductive pollution occurs. A temporary conductivity caused by condensing must be expected occasionally.

*3 Do not use or store the programmable controller under pressure higher than the atmospheric pressure of altitude 0m. Doing so may cause malfunction. When using the programmable controller under pressure, please consult your local Mitsubishi Electric representative.

2.2 Performance specifications

The performance specifications of the AJ65SBT-64AD are shown below.

| Item | | Specification | | | | | | | | | | | | | | | | | | | | | | | |
|--|---|--|---|----------------------------|----------------------------------|---------------------------------|----------------|-----------------|-------------------------------|----------------------------|---|---------------|-----------|----------------------------------|---------------------------------|-----------------|--------|-------|---|-----------|-----|---|-----------|-----|--|
| Analog input | Voltage | -10 to 10V DC (input resistance 1MΩ) | | | | | | | | | | | | | | | | | | | | | | | |
| | Current | 0 to 20mA DC (input resistance 250Ω) | | | | | | | | | | | | | | | | | | | | | | | |
| Digital output | | 16-bit signed binary (-4096 to +4095) | | | | | | | | | | | | | | | | | | | | | | | |
| I/O characteristics, maximum resolution, accuracy (accuracy relative to maximum value of digital output value) | Voltage | <table border="1"> <thead> <tr> <th rowspan="2"></th> <th rowspan="2">Analog input range</th> <th rowspan="2">Digital output</th> <th colspan="2">Accuracy</th> <th rowspan="2">Max. Resolution</th> </tr> <tr> <th>Ambient temperature 0 to 55°C</th> <th>Ambient temperature 25±5°C</th> </tr> </thead> <tbody> <tr> <td rowspan="3">-10 to 10V User range setting 1 (-10 to 10V)</td> <td rowspan="3">-4000 to 4000</td> <td rowspan="6">0 to 4000</td> <td rowspan="6">±0.4% (±16 digit*¹)</td> <td rowspan="6">±0.2% (±8 digit*¹)</td> <td>2.5mV</td> </tr> <tr> <td>1.25mV</td> </tr> <tr> <td>1.0mV</td> </tr> <tr> <td rowspan="3">0 to 5V User range setting 2 (0 to 5V)</td> <td rowspan="3">0 to 4000</td> <td>5μA</td> </tr> <tr> <td rowspan="2">4 to 20mA User range setting 3 (0 to 20mA)</td> <td rowspan="2">0 to 4000</td> <td>4μA</td> </tr> <tr> <td></td> </tr> </tbody> </table> | | Analog input range | Digital output | Accuracy | | Max. Resolution | Ambient temperature 0 to 55°C | Ambient temperature 25±5°C | -10 to 10V User range setting 1 (-10 to 10V) | -4000 to 4000 | 0 to 4000 | ±0.4% (±16 digit* ¹) | ±0.2% (±8 digit* ¹) | 2.5mV | 1.25mV | 1.0mV | 0 to 5V User range setting 2 (0 to 5V) | 0 to 4000 | 5μA | 4 to 20mA User range setting 3 (0 to 20mA) | 0 to 4000 | 4μA | |
| | | | | | | Analog input range | Digital output | | Accuracy | | | | | | | Max. Resolution | | | | | | | | | |
| | | | Ambient temperature 0 to 55°C | Ambient temperature 25±5°C | | | | | | | | | | | | | | | | | | | | | |
| | | -10 to 10V User range setting 1 (-10 to 10V) | -4000 to 4000 | 0 to 4000 | ±0.4% (±16 digit* ¹) | ±0.2% (±8 digit* ¹) | 2.5mV | | | | | | | | | | | | | | | | | | |
| | | | | | | | 1.25mV | | | | | | | | | | | | | | | | | | |
| | | | | | | | 1.0mV | | | | | | | | | | | | | | | | | | |
| | 0 to 5V User range setting 2 (0 to 5V) | 0 to 4000 | 5μA | | | | | | | | | | | | | | | | | | | | | | |
| | | | 4 to 20mA User range setting 3 (0 to 20mA) | | | | 0 to 4000 | 4μA | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Factory setting is -10 to 10V. | | | | | | | | | | | | | | | | | | | | | | | | |
| Maximum conversion speed | | 1ms/channel | | | | | | | | | | | | | | | | | | | | | | | |
| Absolute maximum input | | Voltage ±15 V, current ±30mA* ² | | | | | | | | | | | | | | | | | | | | | | | |
| Analog input points | | 4 channels/module | | | | | | | | | | | | | | | | | | | | | | | |
| CC-Link station type | | Remote device station | | | | | | | | | | | | | | | | | | | | | | | |
| Communication method | | Broadcast polling method | | | | | | | | | | | | | | | | | | | | | | | |
| Number of occupied stations | | 1 station | | | | | | | | | | | | | | | | | | | | | | | |
| Communication cable | | CC-Link dedicated cable | | | | | | | | | | | | | | | | | | | | | | | |
| Dielectric withstand voltage | | Between power supply/communication system batch and analog input batch: 500VAC, 1 minute | | | | | | | | | | | | | | | | | | | | | | | |
| Isolation system | | Across communication system terminals and all analog input terminals: Photocoupler isolated Across power supply system terminals and all analog input terminals: Photocoupler isolated Across channels: Non-isolated | | | | | | | | | | | | | | | | | | | | | | | |
| Noise immunity | | By noise simulator of 500Vp-p noise voltage, 1μs noise width and 25 to 60Hz noise frequency | | | | | | | | | | | | | | | | | | | | | | | |
| External connection | Communication area, module power supply | 7-point 2-piece terminal block [transmission circuit, module power supply, FG] M3 × 5.2 Tightening torque: 0.59 to 0.88N·m Applicable solderless terminals: 2 max. | | | | | | | | | | | | | | | | | | | | | | | |
| | I/O area | Direct-coupled, 18-point terminal block [analog output area] M3 × 5.2 Tightening torque: 0.59 to 0.88N·m Applicable solderless terminals: 2 max. | | | | | | | | | | | | | | | | | | | | | | | |
| Applicable wire size | | 0.3 to 0.75mm ² | | | | | | | | | | | | | | | | | | | | | | | |
| Applicable solderless terminals | | <ul style="list-style-type: none"> RAV1.25-3 (conforming to JIS C 2805) [Applicable wire size: 0.3 to 1.25mm²] V2-MS3, RAP2-3SL, TGV2-3N [Applicable wire size: 1.25 to 2.0mm²] | | | | | | | | | | | | | | | | | | | | | | | |
| Module mounting screw | | M4 screw × 0.7mm × 16mm or more (tightening torque range: 0.78 to 1.08N·m) Can also be mounted to DIN rail | | | | | | | | | | | | | | | | | | | | | | | |

| Item | Specification |
|-----------------------|--|
| Supported DIN rail | TH35-7.5Fe, TH35-7.5Al (conforming to IEC 60715) |
| External supply power | 24V DC (20.4 to 26.4V DC) |
| | Inrush current: 8.5A, within 2.3ms |
| | Current consumption: 0.090A (at 24VDC) |
| Weight | 0.20kg |


| Point |
|--|
| A/D conversion values are fluctuated by self-heating within approx. 30 minutes after power is turned ON. |

*1 Digit indicates digital value

*2 Current value indicates value of instant input current that does not break module inner electrical resistance.


2.3 Checking hardware versions

The hardware versions of the AJ65SBT-64AD can be checked on the DATE section on the rating plate, which is situated on the side of the module.


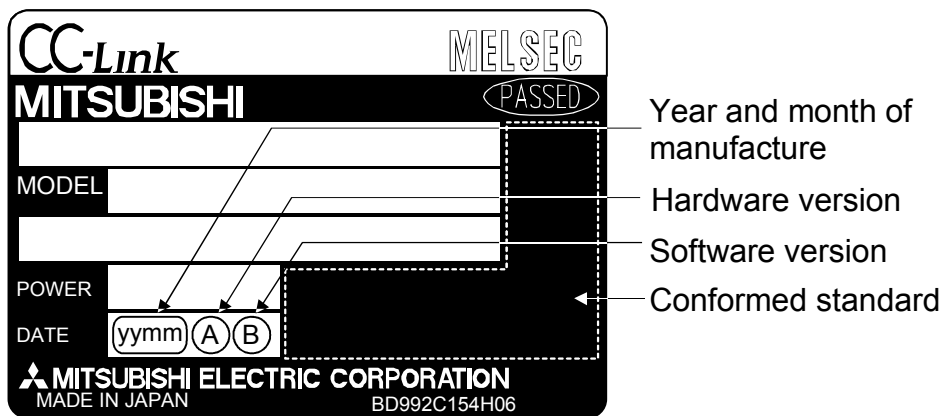


3. NAME OF EACH PART

The name of each part in the AJ65SBT-64AD is shown.

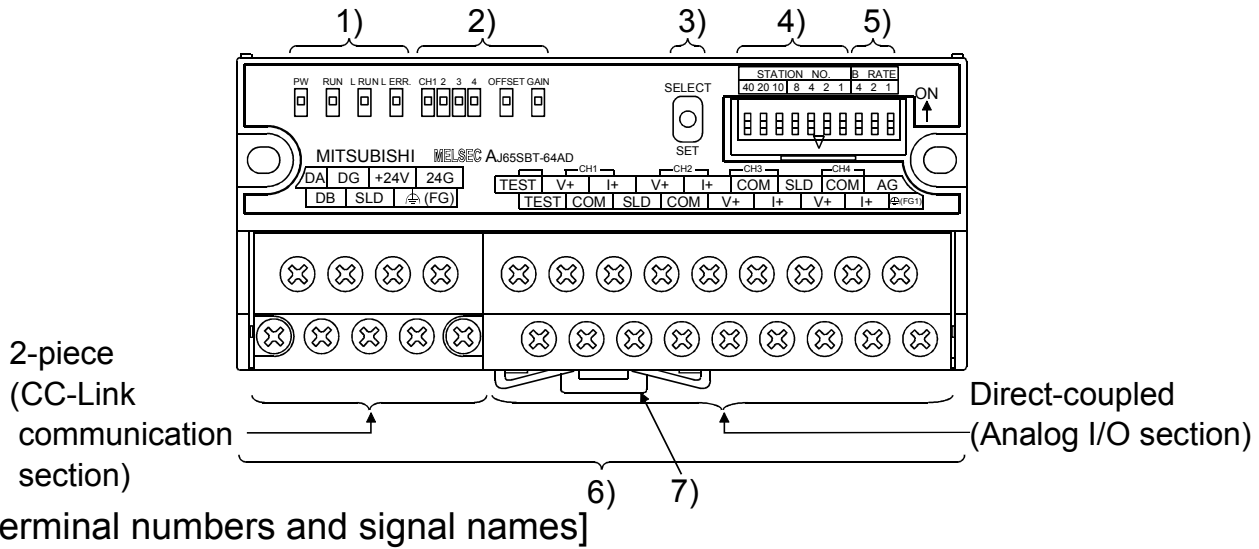

| Number | Name and appearance | Description |
|--------|---|--|
| 1) | Operation status display LED | PW LED ON : Power supply on OFF : Power supply off |
| | | RUN LED Normal mode On : Normal operation Flashing : 0.1s intervals indicate an input range error. Off : 24VDC power supply shutoff or watchdog timer error occurred. |
| | | RUN LED Test mode On : Indicates that the SELECT/SET switch is in the SET position. Flashing : 0.1s intervals indicate that the input range setting is not any of "user range settings 1 to 3". 0.5s intervals indicate that you attempted to make offset/gain setting outside the setting range. Off : Indicates that the SELECT/SET switch is in the SELECT or center position. |
| | | L RUN LED On : Normal communication Off : Communication cutoff (time expiration error) |
| | L ERR. LED On : Indicates that transmission speed setting or station number setting is outside the range. Flicker at fixed intervals : Indicates that transmission speed setting or station number setting was changed from that at power-on. Flicker at unfixed intervals : Indicates that you forgot fitting the termination resistor or the module or CC-Link dedicated cable is affected by noise. Off : Indicates normal communications. | |
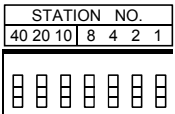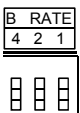
| Number | Name and appearance | Description | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|----------------|--|--|---|----------------|--------------------|-----|-----|--------------------|---|---|---|----|-----|-----|-----|---------|---|-----|-----|-----|---------|-----|-----|-----|-----|---------|---|-----|-----|-----|---------|-----|----|-----|-----|--------|-----|-----|-----|-----|----|----|---|-----|-----|-----|-----|----|-----|-----|---|---|---|---|---|---|---|---|----|-----|-----|----|-----|-----|-----|-----|----|-----|-----|----|-----|-----|-----|----|---|---|---|---|---|---|---|---|----|----|----|-----|-----|----|-----|-----|----------------|------|--|--|-------|--|--|--|----|----|----|---|---|---|---|----|-----|----|----|-----|-----|----|-----|
| 2) | Offset/gain adjusting LEDs | CH <input type="checkbox"/> OFFSET GAIN | Normal mode Test mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | Normally OFF. The LEDs lit change every time the SELECT/SET switch is moved to SELECT. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3) | SELECT/SET switch | Used to make offset/gain setting in the test mode. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4) | Station number setting switches  | <p>Use the switches in STATION NO. "10", "20" and "40" to set the tens of the station number. Use the switches in STATION NO. "1", "2", "4" and "8" to set the units of the station number. The switches are all factory-set to OFF. Always set the station number within the range 1 to 64. Setting any other number than 1 to 64 will result in an error, flickering the "L ERR." LED. You cannot set the same station number to two or more stations.</p> <table border="1"> <thead> <tr> <th rowspan="2">Station number</th> <th colspan="3">Tens</th> <th colspan="4">Units</th> </tr> <tr> <th>40</th> <th>20</th> <th>10</th> <th>8</th> <th>4</th> <th>2</th> <th>1</th> </tr> </thead> <tbody> <tr><td>1</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>ON</td></tr> <tr><td>2</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>ON</td><td>OFF</td></tr> <tr><td>3</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>ON</td><td>ON</td></tr> <tr><td>4</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>ON</td><td>OFF</td><td>OFF</td></tr> <tr><td>⋮</td><td>⋮</td><td>⋮</td><td>⋮</td><td>⋮</td><td>⋮</td><td>⋮</td><td>⋮</td></tr> <tr><td>10</td><td>OFF</td><td>OFF</td><td>ON</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td></tr> <tr><td>11</td><td>OFF</td><td>OFF</td><td>ON</td><td>OFF</td><td>OFF</td><td>OFF</td><td>ON</td></tr> <tr><td>⋮</td><td>⋮</td><td>⋮</td><td>⋮</td><td>⋮</td><td>⋮</td><td>⋮</td><td>⋮</td></tr> <tr><td>64</td><td>ON</td><td>ON</td><td>OFF</td><td>OFF</td><td>ON</td><td>OFF</td><td>OFF</td></tr> </tbody> </table> <p>(Example) To set the station number to "32", set the switches as indicated below.</p> <table border="1"> <thead> <tr> <th rowspan="2">Station number</th> <th colspan="3">Tens</th> <th colspan="4">Units</th> </tr> <tr> <th>40</th> <th>20</th> <th>10</th> <th>8</th> <th>4</th> <th>2</th> <th>1</th> </tr> </thead> <tbody> <tr> <td>32</td> <td>OFF</td> <td>ON</td> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>OFF</td> </tr> </tbody> </table> | | Station number | Tens | | | Units | | | | 40 | 20 | 10 | 8 | 4 | 2 | 1 | 1 | OFF | OFF | OFF | OFF | OFF | OFF | ON | 2 | OFF | OFF | OFF | OFF | OFF | ON | OFF | 3 | OFF | OFF | OFF | OFF | OFF | ON | ON | 4 | OFF | OFF | OFF | OFF | ON | OFF | OFF | ⋮ | ⋮ | ⋮ | ⋮ | ⋮ | ⋮ | ⋮ | ⋮ | 10 | OFF | OFF | ON | OFF | OFF | OFF | OFF | 11 | OFF | OFF | ON | OFF | OFF | OFF | ON | ⋮ | ⋮ | ⋮ | ⋮ | ⋮ | ⋮ | ⋮ | ⋮ | 64 | ON | ON | OFF | OFF | ON | OFF | OFF | Station number | Tens | | | Units | | | | 40 | 20 | 10 | 8 | 4 | 2 | 1 | 32 | OFF | ON | ON | OFF | OFF | ON | OFF |
| Station number | Tens | | | | Units | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 40 | 20 | 10 | 8 | 4 | 2 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | OFF | OFF | OFF | OFF | OFF | OFF | ON | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | OFF | OFF | OFF | OFF | OFF | ON | OFF | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | OFF | OFF | OFF | OFF | OFF | ON | ON | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | OFF | OFF | OFF | OFF | ON | OFF | OFF | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ⋮ | ⋮ | ⋮ | ⋮ | ⋮ | ⋮ | ⋮ | ⋮ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 10 | OFF | OFF | ON | OFF | OFF | OFF | OFF | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 | OFF | OFF | ON | OFF | OFF | OFF | ON | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ⋮ | ⋮ | ⋮ | ⋮ | ⋮ | ⋮ | ⋮ | ⋮ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 64 | ON | ON | OFF | OFF | ON | OFF | OFF | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Station number | Tens | | | Units | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 40 | 20 | 10 | 8 | 4 | 2 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 32 | OFF | ON | ON | OFF | OFF | ON | OFF | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5) | Transmission speed setting switches  | <table border="1"> <thead> <tr> <th rowspan="2">Set value</th> <th colspan="3">Setting switches</th> <th rowspan="2">Transmission speed</th> </tr> <tr> <th>4</th> <th>2</th> <th>1</th> </tr> </thead> <tbody> <tr><td>0</td><td>OFF</td><td>OFF</td><td>OFF</td><td>156kbps</td></tr> <tr><td>1</td><td>OFF</td><td>OFF</td><td>ON</td><td>625kbps</td></tr> <tr><td>2</td><td>OFF</td><td>ON</td><td>OFF</td><td>2.5Mbps</td></tr> <tr><td>3</td><td>OFF</td><td>ON</td><td>ON</td><td>5.0Mbps</td></tr> <tr><td>4</td><td>ON</td><td>OFF</td><td>OFF</td><td>10Mbps</td></tr> </tbody> </table> <p>Always set the transmission speed within the above range. The switches are all factory-set to OFF. Making any other setting than the above will result in an error flickering the "L ERR." LED.</p> | | Set value | Setting switches | | | Transmission speed | 4 | 2 | 1 | 0 | OFF | OFF | OFF | 156kbps | 1 | OFF | OFF | ON | 625kbps | 2 | OFF | ON | OFF | 2.5Mbps | 3 | OFF | ON | ON | 5.0Mbps | 4 | ON | OFF | OFF | 10Mbps | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Set value | Setting switches | | | | Transmission speed | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 4 | 2 | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | OFF | OFF | OFF | 156kbps | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | OFF | OFF | ON | 625kbps | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | OFF | ON | OFF | 2.5Mbps | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | OFF | ON | ON | 5.0Mbps | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | ON | OFF | OFF | 10Mbps | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6) | Terminal block | Used to connect the module power supply, transmission and I/O signals. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 7) | DIN rail hook | Used to mount the module to the DIN rail. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

4. LOADING AND INSTALLATION

4.1 Precautions when handling

The following is an explanation of handling precautions of the module.

- (1) Do not drop or apply any strong impact to the module.
- (2) Tighten the mounting screws of the module within the following ranges.

| Screw location | Tightening torque range |
|--|-------------------------|
| Module mounting screw (M4 screw) | 0.78 to 1.08N•m |
| Terminal block terminal screw (M3 screw) | 0.59 to 0.88N•m |
| Terminal block mounting screw (M3.5 screw) | 0.68 to 0.98N•m |

4.2 Installation environment


Never install the A series programmable controller in the following environments:

- (1) Locations where the ambient temperature is outside the range of 0 to 55°C.
- (2) Locations where the ambient humidity is outside the range of 10 to 90%RH.
- (3) Locations where dew condensation takes place due to sudden temperature changes.
- (4) Locations where there are corrosive and/or combustible gasses.
- (5) Locations where there is a high level of conductive power (such as dust and iron filings, oil mist, salt, and organic solvents).
- (6) Locations exposed to the direct rays of the sun.
- (7) Locations where strong power and magnetic fields are generated.
- (8) Locations where vibration and shock are directly transmitted to the main module.

5. DATA LINK CABLE WIRING

5.1 Connection of the CC-Link dedicated cables

Connect the CC-Link dedicated cable between the AJ65SBT-64AD and master module as shown below.

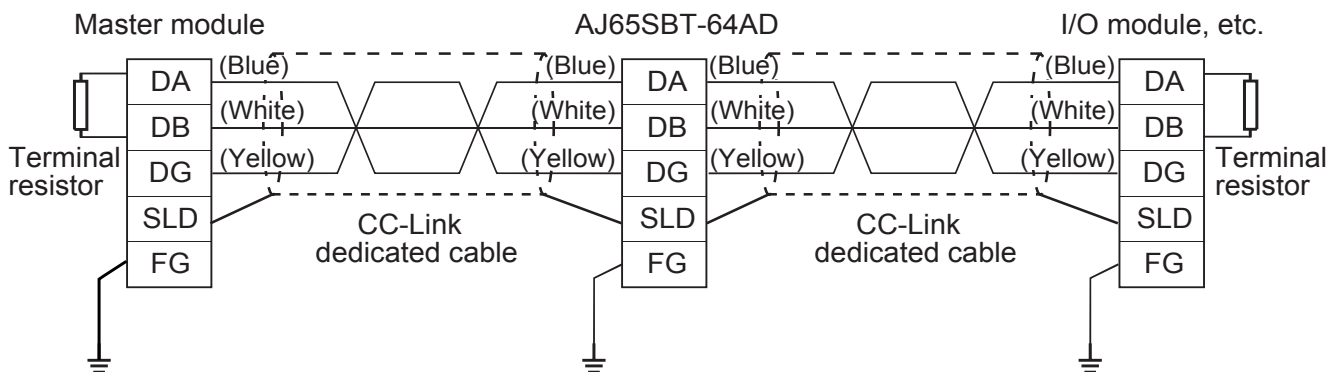

6. WIRING

6.1 Wiring precautions


To obtain maximum performance from the functions of AJ65SBT-64AD and improve the system reliability, an external wiring with high durability against noise is required.

The precautions when performing external wiring are as follows:


- (1) Use separate cables for the AC and AJ65SBT-64AD external input signals, in order not to be affected by the AC side surge or conductivity.
- (2) Do not bundle or place with load carrying wires other than the main circuit line, high voltage line or programmable controller. Noises, surges, or conductivity may affect the system.
- (3) Place a one-point grounding on the programmable controller side for the shielded line or shielded cable. However, depending on the external noise conditions, it may be better have a grounding externally.

6.2 Module connection example

(1) For voltage input

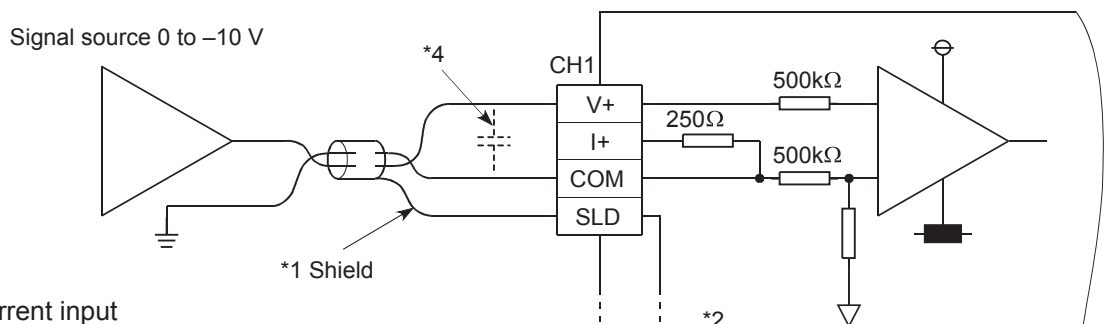

(2) For current input

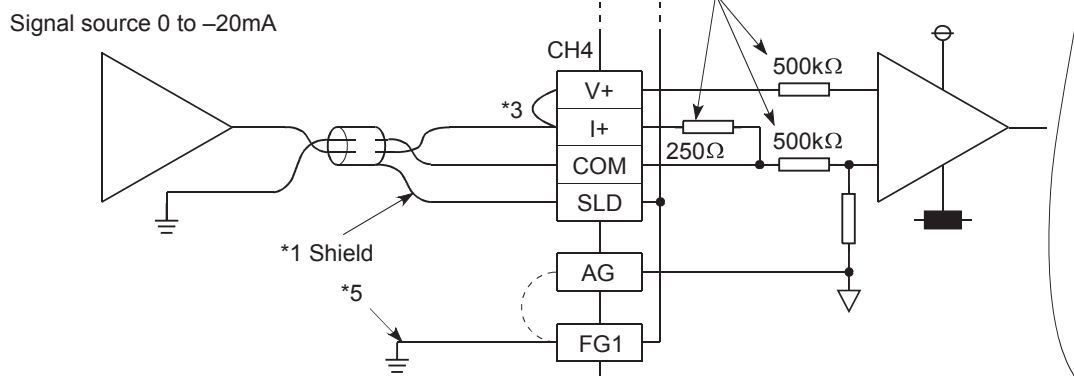

*1 Use a two-core twisted shield line for the power cable.

*2 Indicates the AJ65SBT-64AD input resistor.

*3 For the current input, be sure to connect the (V+) and (I+) terminals.

*4 When noise or ripple occurs with the external cable, connect a condenser with about 0.1 to 0.47μF (25V or higher voltage-resistant product) between the terminal V and COM.

*5 Always perform grounding for FG1. When there is a lot of noise, it may be better ground AG as well.

If the grounding wiring (grounding yes/no) is changed after the offset and gain are set, perform the setting of the offset/gain values again.


7. EXTERNAL DIMENSIONS

The external dimensions of the AJ65SBT-64AD are shown below.

The appearance of the AJ65SBT-64AD varies depending on the hardware version.


For checking method of the hardware version, refer to Section 2.3.

(1) Hardware version F or later

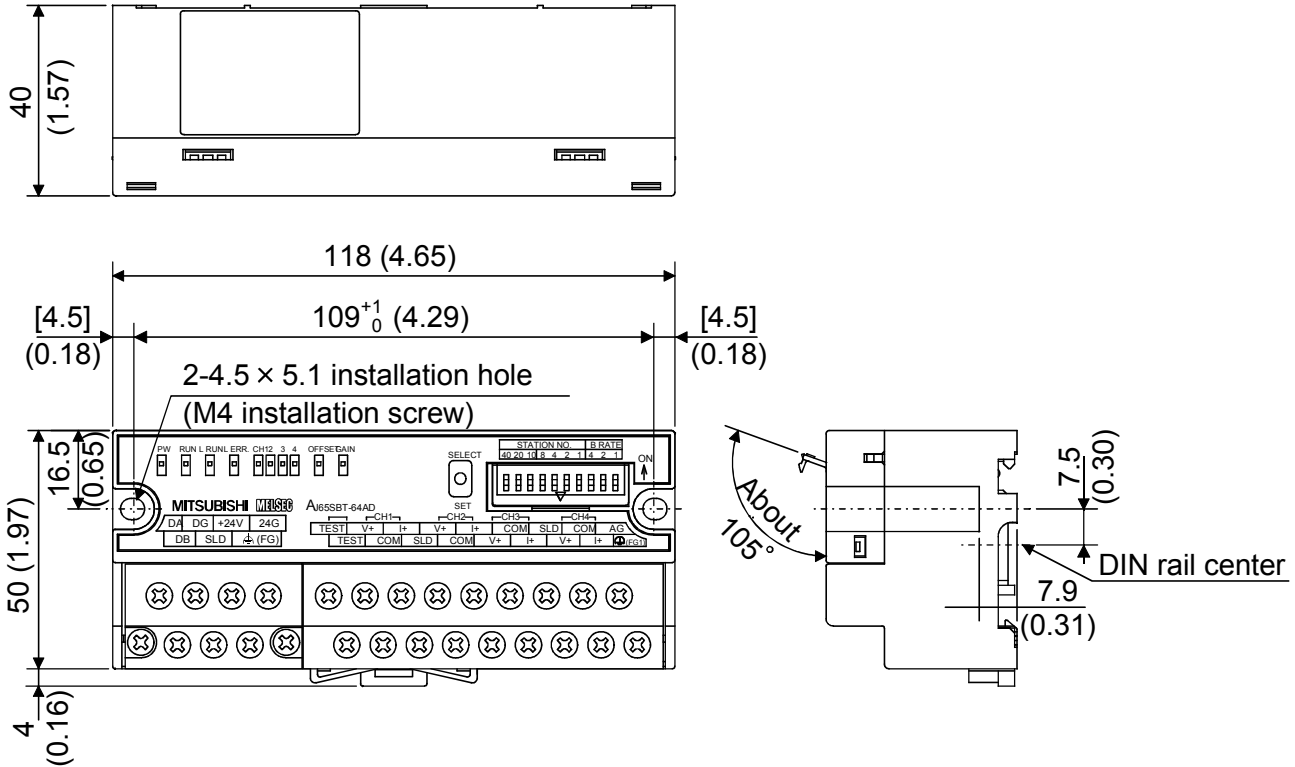

Unit: mm (inch)

(2) Hardware version E or earlier

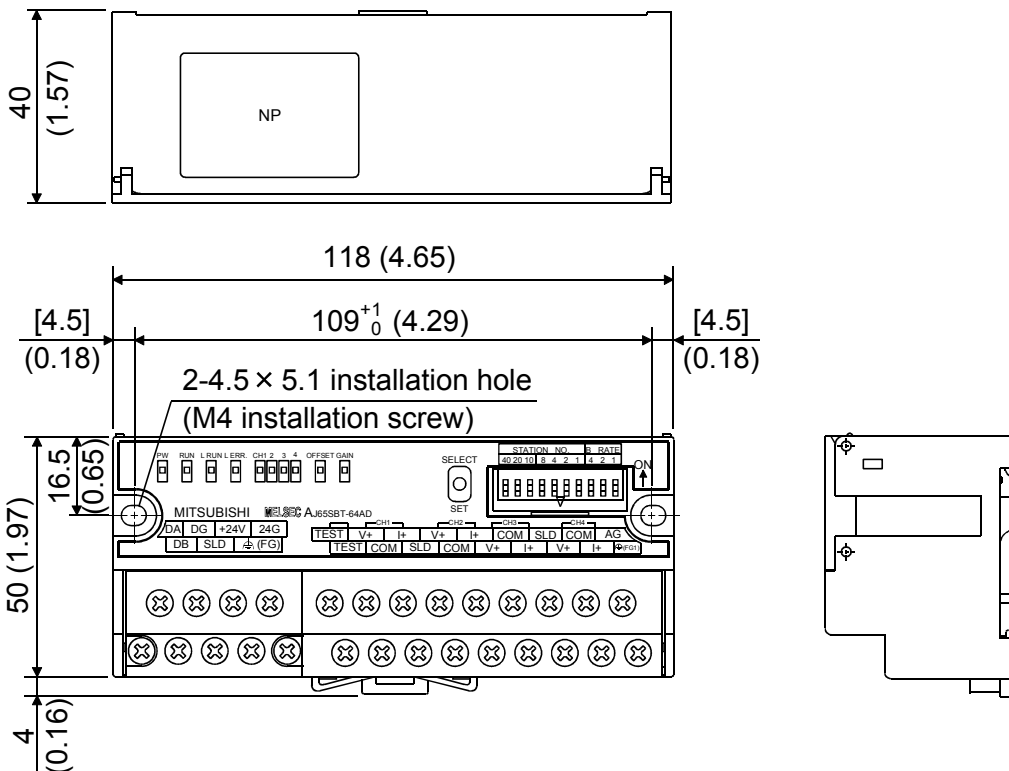

Unit: mm (inch)

WARRANTY

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

| Country/Region | Sales office/Tel | Country/Region | Sales office/Tel |
|----------------|---|----------------|---|
| U.S.A | Mitsubishi Electric Automation Inc. 500 Corporate Woods Parkway Vernon Hills, IL 60061, U.S.A. Tel : +1-847-478-2100 | China | Mitsubishi Electric Automation (China) Ltd. 4/F Zhi Fu Plazz, No.80 Xin Chang Road, Shanghai 200003, China Tel : +86-21-6120-0808 |
| Brazil | MELCO-TEC Rep. Com.e Assessoria Tecnica Ltda. Rua Correia Dias, 184, Edificio Paraiso Trade Center-8 andar Paraiso, Sao Paulo, SP Brazil Tel : +55-11-5908-8331 | Taiwan | Setsuyo Enterprise Co., Ltd. 6F No.105 Wu-Kung 3rd.Rd, Wu-Ku Hsiang, Taipei Hsine, Taiwan Tel : +886-2-2299-2499 |
| Germany | Mitsubishi Electric Europe B.V. German Branch Gothaer Strasse 8 D-40880 Ratingen, GERMANY Tel : +49-2102-486-0 | Korea | Mitsubishi Electric Automation Korea Co., Ltd. 1480-6, Gayang-dong, Gangseo-ku Seoul 157-200, Korea Tel : +82-2-3660-9552 |
| U.K | Mitsubishi Electric Europe B.V. UK Branch Travellers Lane, Hatfield, Hertfordshire., AL10 8XB, U.K. Tel : +44-1707-276100 | Singapore | Mitsubishi Electric Asia Pte, Ltd. 307 Alexandra Road #05-01/02, Mitsubishi Electric Building, Singapore 159943 Tel : +65-6470-2480 |
| Italy | Mitsubishi Electric Europe B.V. Italian Branch Centro Dir. Colleoni, Pal. Perseo-Ingr.2 Via Paracelso 12, I-20041 Agrate Brianza., Milano, Italy Tel : +39-039-60531 | Thailand | Mitsubishi Electric Automation (Thailand) Co., Ltd. Bang-Chan Industrial Estate No.111 Moo 4, Serithai Rd, T.Kannayao, A.Kannayao, Bangkok 10230 Thailand Tel : +66-2-517-1326 |
| Spain | Mitsubishi Electric Europe B.V. Spanish Branch Carretera de Rubi 76-80, E-08190 Sant Cugat del Valles, Barcelona, Spain Tel : +34-93-565-3131 | Indonesia | P.T. Autoteknindo Sumber Makmur Muara Karang Selatan, Block A/Utara No.1 Kav. No.11 Kawasan Industri Pergudangan Jakarta - Utara 14440, P.O.Box 5045 Jakarta, 11050 Indonesia Tel : +62-21-6630833 |
| France | Mitsubishi Electric Europe B.V. French Branch 25, Boulevard des Bouvets, F-92741 Nanterre Cedex, France Tel : +33-1-5568-5568 | India | Messung Systems Pvt, Ltd. Electronic Sadan NO:III Unit No15, M.I.D.C Bhosari, Pune-411026, India Tel : +91-20-2712-3130 |
| South Africa | Circuit Breaker Industries Ltd. Private Bag 2016, ZA-1600 Isando, South Africa Tel : +27-11-928-2000 | Australia | Mitsubishi Electric Australia Pty. Ltd. 348 Victoria Road, Rydalmere, N.S.W 2116, Australia Tel : +61-2-9684-7777 |

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.