

Powermonitor 1000 Unit



User Manual

(Catalog Numbers
1408-TR1A-485, 1408-TR2A-485, 1408-
EM1A-485, 1408-EM2A-485, 1408-
EM3A-485, 1408-TR1A-ENT, 1408-
TR2A-ENT, 1408-EM1A-ENT, 1408-
EM2A-ENT, 1408-EM3A-ENT)

Important User Information

Solid state equipment has operational characteristics differing from those of electromechanical equipment. Safety Guidelines for the Application, Installation and Maintenance of Solid State Controls (publication SGI-1.1 available from your local Rockwell Automation sales office or online at <http://literature.rockwellautomation.com>) describes some important differences between solid state equipment and hard-wired electromechanical devices. Because of this difference, and also because of the wide variety of uses for solid state equipment, all persons responsible for applying this equipment must satisfy themselves that each intended application of this equipment is acceptable.





In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited.

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.

WARNING 	Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.
IMPORTANT	Identifies information that is critical for successful application and understanding of the product.
ATTENTION 	Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequence
SHOCK HAZARD 	Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.
BURN HAZARD 	Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.

Allen-Bradley, Rockwell Automation, Powermonitor, ControlLogix, PLC5, SLC, RSLinx and TechConnect are trademarks of Rockwell Automation, Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

Introduction

This release of this document contains new and updated information. The information below summarizes the changes to this manual since the last publication.

Revision bars in the margin identify updated information. Changes for this version of the document include:

Change	Page
Added DH485 to the serial communication protocol table.	10
Added section with information about DH485.	11
Added that the Ethernet communication port supports 10 or 100 Mbps data rate, half-duplex, or full-duplex.	11
Added DH485 to the communication command summary.	15
Added information about explicit messaging instructions apply to Ethernet communication and serial communication.	17
Added instructions to configure RSLinx software driver configuration for DH485.	34
Added information for using the DH485 driver.	37
Added information for OPC tag browsing.	39
Added information about a user configured data table.	40
Added User Configured Table Results Parameters table.	45
Added User Configured Table Results table.	45
Added element 5 to Analog Input Configuration table	46
Updated elements 5 and 7 to Advanced Configuration table.	48
Updated Serial RS-485 Port Configuration table.	51
Updated Command table.	61
Added element 10 to the Log Request table.	64
Updated Wiring Diagnostics Results table.	68
Updated Unit Run Status Results table.	80

Change	Page
Added User Configurable Table Setup Parameters table.	92
Added User Configured Table Setup table.	92
Added Parameters for Configurable table.	93

	Preface	
	Before You Begin	7
	Who Should Use This Manual	7
	Additional Resources	7
	Chapter 1	
Powermonitor 1000 Overview	Safety	9
	Introduction	9
	Communication Overview	10
	Chapter 2	
Powermonitor 1000 Memory Organization	Data Table Addressing	13
	Data Table Access	13
	Data Table Data Format	14
	Chapter 3	
Communications Command Summary	Serial DF1 Full-duplex, DF1 Half-duplex Slave, DH485	15
	Optional EtherNet/IP	15
	Modbus RTU Serial and Optional Modbus/TCP Ethernet	16
	Chapter 4	
Explicit Messaging	Explicit Message Setup – Examples	17
	Reading Logs	29
	Chapter 5	
SCADA Applications	RSLinx Drivers Configuration	33
	RSLinx Software OPC Server Setup	35
	Appendix A	
Powermonitor 1000 Data Tables	Summary of Data Tables	43
	Data Tables	45
	Index	

Before You Begin

Use this document as a guide to set up communications with the 1408 Powermonitor 1000 unit using other applications and controllers. This document is intended for advanced users. You should already be familiar with data communications and programmable controller messaging.

For further information on installing, wiring, connecting, applying power, and configuring your 1408 power monitor, please refer to the Powermonitor 1000 Installation Instructions.

Who Should Use This Manual

You should have a basic understanding of electrical circuitry and familiarity with relay logic. If you do not, obtain the proper training before using this product.

Additional Resources

This table lists documents that contain additional information concerning Rockwell Automation Power and Energy Management Solutions products.

For additional information, refer to these publications, that you can download from <http://literature.rockwellautomation.com>.

Resource	Description
Powermonitor 1000 Unit Installation Instructions, publication 1408-IN001	This publication gives product description and functionality.

If you would like a manual, you can:

- download a free electronic version from the Internet at <http://literature.rockwellautomation.com>
- purchase a printed manual by contacting your local Allen-Bradley distributor or Rockwell Automation sales office.

Powermonitor 1000 Overview

Safety

Follow these advisories when using this product.

ATTENTION

Only qualified personnel, following accepted safety procedures, should install, wire, and service the power monitor and its associated components. Before beginning any work, disconnect all sources of power and verify that they are de-energized and locked out. Failure to follow these instructions may result in personal injury or death, property damage or economic loss.

ATTENTION

Never open a current transformer (CT) secondary circuit with primary current applied. Wiring between the CT's and the power monitor should include a shorting terminal block in the CT secondary circuit. Shorting the secondary with primary current present allows other connections to be removed if needed. An open CT secondary with primary current applied produces a hazardous voltage, which can lead to personal injury, death, property damage or economic loss.

IMPORTANT

The power monitor is neither designed for, nor intended for, use as a circuit protective device. Do not use this equipment in place of a motor overload relay or circuit protective relay.

Introduction

This manual covers advanced techniques for configuring setup parameters and retrieving data from the power monitor using its available communications. Typical applications include SCADA applications using RSLinx Classic or OPC software to gather data from the power monitor and applications using explicit messaging from PLC controllers to retrieve data for control and information.

Please refer to the Powermonitor 1000 Installation Instructions, publication [1408-IN001](#) for the following information:

- Product description and functionality
- Basic meter and communications setup using the LCD display, HyperTerminal or the web interface

What Can I Do Using Communication Networks?

When you use communication networks with the power monitor you can do the following things.

- Configure analog input parameters such as PT/CT ratios
- Configure communications parameters such as IP address
- Read real-time power and energy data
- Read energy logs

Communication Overview

All Powermonitor 1000 units come standard with an RS-485 serial communication port. Models with catalog numbers ending in -ENT are equipped with an Ethernet 10BaseT communication port. This section covers serial and Ethernet communication, the available protocols, and what protocols to use for your application.

Serial Communication

The RS-485 serial communication port allows serial communication to your power monitor. This port can be configured to communicate using the protocols listed the Serial Communication Protocols table.

Serial Communication Protocols

Protocol	Applications
DF1 Half-duplex Slave	The DF1 Half-duplex Slave protocol may be used for point-to-point or multi-drop communication using a DF1 Polling Master driver for RSLinx software, or when using explicit messages from Rockwell Automation controllers communicating via DF1 Half-duplex Master.
DF1 Full-duplex	The DF1 Full-duplex protocol may be used only for point-to-point communication using a RS-232 DF1 driver for RSLinx software, or when using explicit messages from Rockwell Automation controllers communicating via DF1 Full-duplex.
Modbus RTU Slave	The Modbus RTU Slave protocol may be used for point-to-point or multi-drop communication with a client using the Modbus RTU Master protocol for PLC controller communication.
Auto-sense	With auto-sense selected, the RS-485 port switches among the available serial protocols based on the format of the packets the port receives.
DH485	The DH485 protocol may be used for point-to-point or multi-drop communication using a 1747-PIC/AIC+ driver for RSLinx software, or when using explicit messages from Allen-Bradley controllers or HMI (PanelView) terminals communicating via DH485.

TIP

When configuring serial communication, users should verify that all serial devices wishing to communicate to the power monitor have the same communication rate, and the same data format.

DH485 Protocol

DH485 is a token-passing protocol that allows messaging by up to 32 nodes on a serial network. The master is the node that owns the token; only the master may transmit messages. When a node has completed transmitting messages, it passes the token to the next node.

The power monitor does not initiate DH485 data messages. When requested, it transmits reply messages to the initiator when it gets the token, and then passes the token to its successor.

TIP

Powermonitor 1000 units only support DH485 Local Link messages and do not support the Send and Receive Data (SRD) messages for DH485 non-token passing slave devices.

The DH485 protocol uses the same data table addressing as DF1 protocols. Please refer to the CSP file number column of Powermonitor 1000 data tables.

The following configuration factors have a significant effect on network performance and should be considered when you plan a DH485 network.

- Number of Nodes - unnecessary nodes will slow the data transfer rate. The maximum number of nodes on the network is 32. Fewer nodes are better.
- Node Addresses - best to start node addresses at 0 and assign in sequential order. Controllers may not be node 0. Initiators such as personal computers should be assigned the lowest numbered addresses.
- Communication Rate - Higher is better. All devices must be at the same communication rate.
- Maximum Node Address - should be set as low as possible to reduce the time it takes to initialize the network.

Ethernet Network Communication

The Ethernet network communication port allows communication with your power monitor using a local-area-network (LAN). The Ethernet port may also be used to view the power monitor's internal webpage. This Ethernet port uses a static IP address only, and can simultaneously communicate using the protocols listed below. The Ethernet communication port supports 10 or 100 Mbps data rate, half-duplex, or full-duplex.

EtherNet/IP Protocol

The power monitor supports the EtherNet/IP protocol for communicating via Ethernet or EtherNet/IP drivers in RSLinx Classic software, or when using explicit messages from Rockwell Automation controllers communicating via Ethernet or EtherNet/IP network.

Modbus TCP Protocol

Modbus TCP protocol is also supported for communicating via Modbus TCP for communication.

TIP

When configuring Ethernet communication, you should verify that IP addresses do not conflict with the existing infrastructure, and that subnet masks and gateways are properly set.

Powermonitor 1000 Memory Organization

The power monitor memory is organized similarly to that of a PLC-5 or SLC 500 programmable controller. Data tables organize individual data items of similar function. For example, the analog input setup parameters are grouped in one data table, and voltage, current, and frequency metering results in another.

[Appendix A](#) provides a detailed list of the power monitor data tables.

Data Table Addressing

Data tables may be addressed in several ways.

- CSP addressing. This is also known as PLC-5 style or PCCC addressing. Addresses are written in the form Axx:yy where A is a letter describing the function of the data table, xx is the table number, and yy is the element within, or offset into, the table. For example, F23:0 is the CSP address of the first element in the energy metering results table.
- CIP addressing. This is also known as DeviceNet addressing. Addresses are of the form Object:Instance:Attribute. CIP addressing allows addressing only a single element of an entire data table. In CIP addressing, the energy metering results table object 4 (Assembly object), instance 16 (energy results table) and attribute 3 (data).
- Modbus RTU addressing. The data tables may be addressed by a Modbus RTU master using Modbus register addressing. The Modbus protocol supports four types of data: Discrete Input, Coil, Input Register, and Holding Register. The power monitor supports Input Registers (read-only) with addresses in the 30000 range and Holding Registers (read-write or write only) with addresses in the 40000 range. Using the same example as above, the energy results table has a Modbus address range of 30401...30438

Data Table Access

Controllers and client applications may read or write single element, multiple elements or complete tables as permitted by the addressing selected.

Each data table's read/write access is listed in [Appendix A](#).

The power monitor requires a valid password before it accepts a write. There are two ways a password may be written.

- An entire table including a valid password may be written.
- A valid password may be written to the Single element password write table which then enables single element writes until 30 minutes without a single element write elapses.

Data Table Data Format

The power monitor stores data in two basic formats.

- Integer, in which the 16-bit word may be represented by a signed integer value or a bit field
- Floating-point, in the 32-bit IEEE 754 format

Modbus input registers and holding registers are 16 bits long. Floating point values in the data tables are represented as big-Endian two-register arrays in IEEE-754 floating point format. The Modbus client application must be able to reassemble the two-word array into a valid floating-point value.

An example Modbus address for a floating-point value is 40101-2. Register 40101 holds the most significant bytes of the number and 40102 holds the lowest significant bytes.

Communications Command Summary

Serial DF1 Full-duplex, DF1 Half-duplex Slave, DH485

- PCCC Protected Logical Read w/ 2 Address Fields (CMD = 0x0F, FUNC = 0xA1)
- PCCC Protected Logical Write w/ 2 Address Fields (CMD = 0x0F, FUNC = 0xA9)
- PCCC Protected Logical Read w/ 3 Address Fields (CMD = 0x0F, FUNC = 0xA2)
- PCCC Protected Logical Write w/ 3 Address Fields (CMD = 0x0F, FUNC = 0xAA)
- PCCC Protected Logical Write w/ 4 Address Fields (CMD = 0x0F, FUNC = 0xAB)
- PCCC Status Diagnostics (CMD = 0x06, FUNC = 0x03)

Optional EtherNet/IP

- CIP Generic Assembly Object (Class 04), Get & Set Attribute Single for Attribute 3 (data)
- CIP Generic Assembly Object (Class 04), Get Attribute Single for Attribute 4 (size)
- PCCC PLC5 Word Range Write Function (CMD = 0x0F, FUNC = 0x00)
- PCCC PLC5 Word Range Read Function (CMD = 0x0F, FUNC = 0x01)
- PCCC PLC5 Typed Write Function (CMD = 0x0F, FUNC = 0x67)
- PCCC PLC5 Typed Read Function (CMD = 0x0F, FUNC = 0x68)
- PCCC Protected Logical Read Function w/2 Address Fields (CMD = 0x0F, FUNC = 0xA1)
- PCCC Protected Logical Write Function w/2 Address Fields (CMD = 0x0F, FUNC = 0xA9)
- PCCC Protected Logical Read Function w/3 Address Fields (CMD = 0x0F, FUNC = 0xA2)
- PCCC Protected Logical Write Function w/3 Address Fields (CMD = 0x0F, FUNC = 0xAA)
- PCCC Status Diagnostics (CMD = 0x06, FUNC = 0x03)

Modbus RTU Serial and Optional Modbus/TCP Ethernet

The power monitor does not initiate Modbus commands but responds to commands sent by the Modbus master. These Modbus function codes are supported.

- 03 Read Holding Registers
- 04 Read Input Registers
- 16 Write Multiple Holding Registers
- 08 Diagnostics
 - 00 Echo Command Data
 - 02 Return Diagnostic Counters
 - 10 Clear Diagnostic Counters
- 06 Write Single Holding Register

Explicit Messaging

This section discusses data retrieval and parameter configuration using explicit messaging from Rockwell Automation controllers. Explicit messaging allows you to read and write from a controller to specific data tables within the power monitor. With explicit messages, users can read real-time power and energy values, configure analog input parameters, configure communications parameters, and also read energy logs.

In general, these instructions apply to Ethernet network communication (Ethernet/IP protocol) and Serial communication (DF1 half-duplex or full-duplex or DH485 protocols), provided that the protocol is supported by the controller. If using serial communication, the controller serial port must be correctly configured for protocol, communication rate, or parity. Refer to the appropriate controller user documentation for further details.

Please refer to [Appendix A](#), Powermonitor 1000 Data Tables for descriptions of the power monitor data tables and their data access privileges, and data types.

The power monitor allows PLC-5 Typed, SLC Typed, and CIP Generic message requests.

Explicit Message Setup – Examples

This section gives examples on how to set-up explicit messaging.

Read/Write Single or Multiple Elements

You can perform single or multiple element reads and writes to the power monitor. Below is a table documenting the message type to use for specific read/write type and communication scenarios.

IMPORTANT

When performing a write to the power monitor, you must write the password value to the password element of that specific data table that you are writing to. This must be done in the same message; therefore you must perform a multiple element write. If you wish to perform only a single element write, you must write the password value to the Single Element Password Write table. This allows you to perform writes to any write access data table for the next 30 minutes.

Message Type

Read/Write Type	Communication	Read/Write Message Type
Single Element	Serial	SLC Typed
Single Element	Ethernet	PLC5 Typed or SLC Typed
Multiple Element	Serial	SLC Typed
Multiple Element	Ethernet	PLC5 Typed or SLC Typed or CIP Generic ⁽¹⁾


⁽¹⁾ The CIP Generic message type is only available for RSLogix5000 software. All elements in the data table are written to or read back.

RSLogix5000 – Message Configuration using PLC5 or SLC Typed Read/Write

This is an example of how to set up a message instruction to read or write single or multiple elements from a power monitor using PLC5 or SLC Typed messages. This setup applies to ControlLogix and CompactLogix programmable logic controllers.

Follow these steps to configure a message.


1. Choose the appropriate parameters in the Message Configuration window.

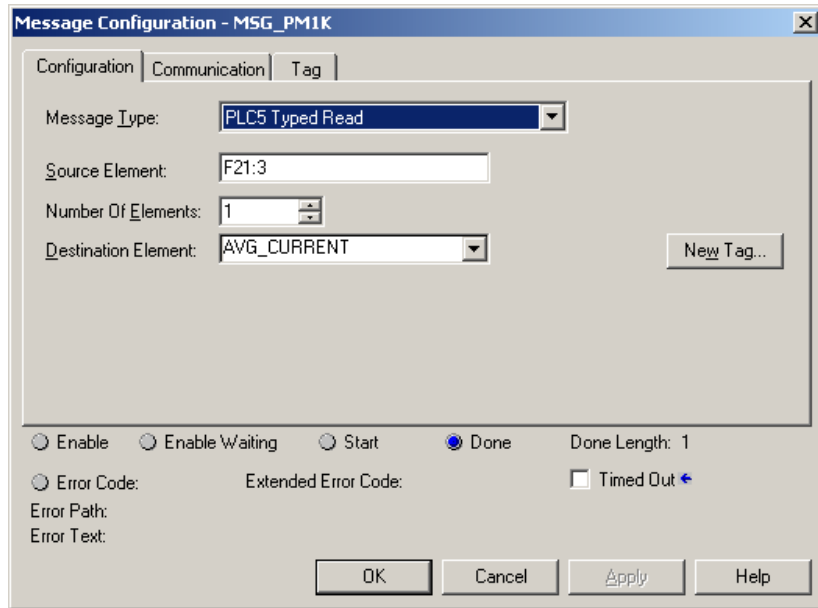

Parameter	Choice
Message type	Select the appropriate message type according to Message Type on page 18 .
Source Element	<p>Read: Refer to Appendix A – Powermonitor 1000 Data Tables for the address of the specific data table address you’re reading. If you are performing a multiple element read, this should be the first element in the array of elements you’re reading back.</p> <p>Write: This is the controller tag in which to store the data being written to the power monitor.</p>
Number of Elements	This is the number of elements being read or written to. If you are performing a single element read or write, then this value should be 1. If you are performing a multiple element read or write, then this should be the number of elements after the source element that you wish to read or write.
Destination Element	<p>Read: This is the controller tag in which to store the data being read.</p> <p>Write: Refer to Appendix A – Powermonitor 1000 Data Tables for the address of the specific data table address you’re writing to.</p>

2. Click the Communication tab to select the communication type, either Ethernet or Serial.

3. Choose the communication type and then set the path and communication method.

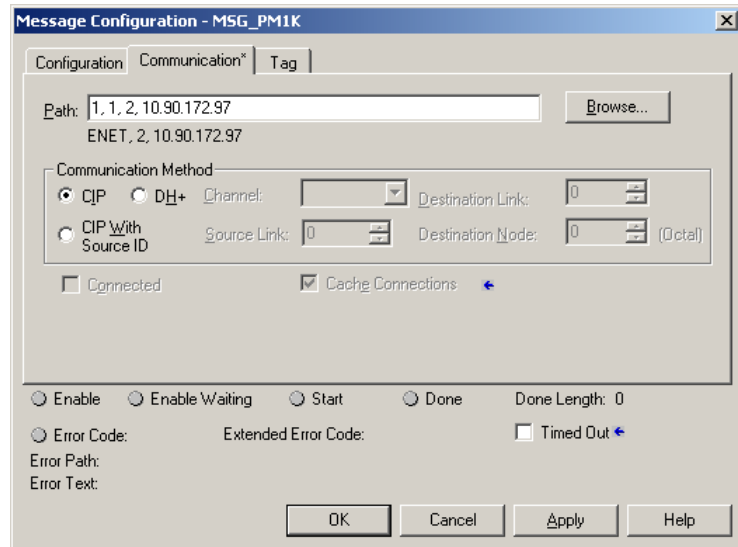

Communication Type	Path	Method
Ethernet	<Backplane (always 1), Slot of Ethernet Module, Port (always 2 for Ethernet), power monitor IP Address>	CIP
Serial Communications	<Port, Power Monitor Serial Node Address>	CIP

4. Click OK to complete the message setup.

RSLogix5000 Software – Message Setup Using CIP Generic


The following example shows how to set up your message instruction to read or write to a data table in the power monitor using a CIP Generic message type for RSLogix5000 software. This setup applies to ControlLogix and CompactLogix programmable logic controllers. The CIP Generic message type does not support single element reads or writes. In this example, we are reading the Voltage, Amps, and Frequency data table from the power monitor.

Follow these steps to configure a message.

1. Choose the appropriate parameters in the Message Configuration window.

Parameter	Choice
Message Type	Choose message type CIP Generic.
Service Type	Read: Select service type Get Attribute Single Write: Select service type Set Attribute Single
Instance	Refer to Appendix A for the CIP Instance of the data table you are requesting to read. In this example, the power monitor's Voltage, Amp, and Frequency data table is instance 14.
Class	4
Attribute	3
Destination	Get Attribute Single - This is the controller tag in which to store the data being read.
Source Element	Set Attribute Single - Refer to Appendix A for the address of the specific data table address you're writing to.
Source Length	Set Attribute Single - This is the number of elements of the source element, to be written to the power monitor.

- Click the Communication tab and enter the path and method.

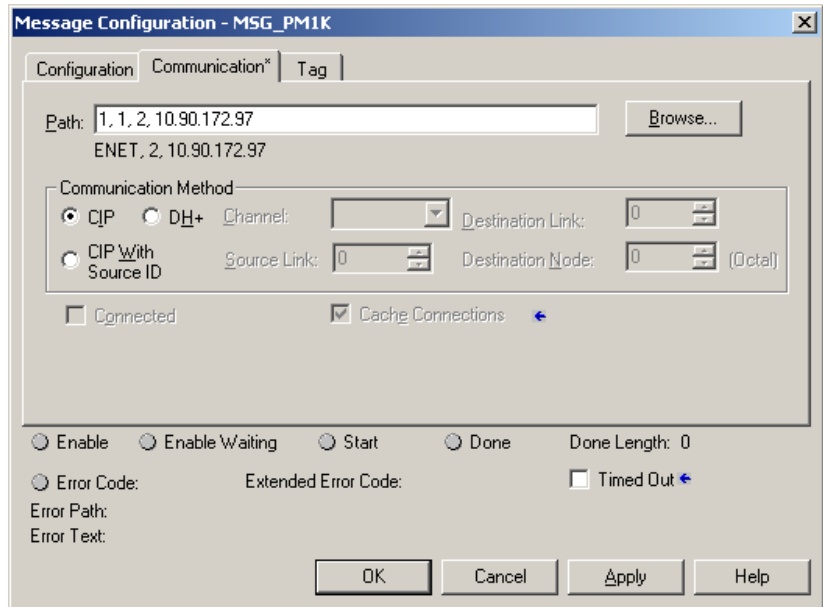

Path	Method
<Backplane (always 1), Slot of Ethernet Module, Port (always 2 for Ethernet), Power Monitor IP Address>	CIP


- Click OK to complete message setup.

RSLogix500 Software - Message Setup Using PLC5 or SLC Typed Read/Write

The following is an example of how to set up your message instruction to read or write single or multiple elements to a power monitor using Peer-To-Peer PLC5 or CPU 500 Typed messages in RSLogix500 software. This setup applies to SLC and MicroLogix programmable logic controllers.

Follow these steps to configure a message.

1. Set your MSG instruction.

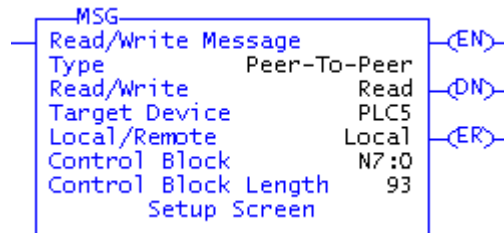


Parameter	Choice
Read/Write	Select Read or Write
Target Device	Select the appropriate message type according to Message Type on page 18 .
Local/Remote	Select Local
Control Block	Select an available Integer word. In this example, we used N7:0.

2. Click Setup Screen at the bottom of the message instruction.


The message configuration window for either Ethernet network or Serial communication appears.

3. Choose the appropriate parameters in the Message Configuration window.

Ethernet Network Communication

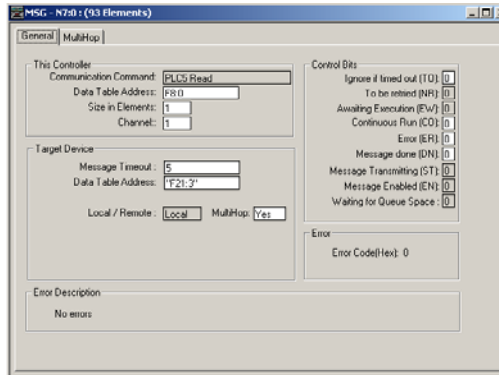

Serial Communication

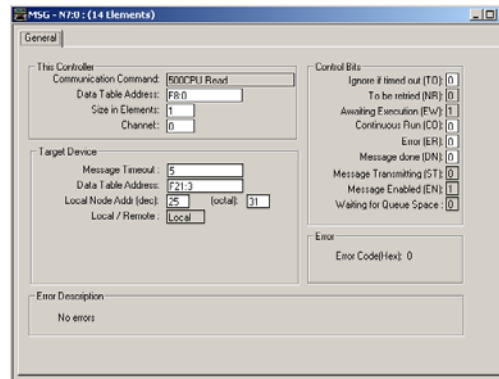


Communication Type	Parameter	Choice
Ethernet	Data Table Address (This Controller)	Read: This is the controller tag in which to store the data being read Write: This is the controller tag that stores the value to be written to the power monitor.
	Size in Elements	This is the number of elements being read or written to. If you are performing a single element read or write, then this value should be 1. If you are performing a multiple element read or write, then this should be the number of elements after the source element that you wish to read or write.
	Channel	1
	Data Table Address (Target Device)	Refer to Appendix A for the address of the specific data value you're reading or writing to.
	MultiHop	Yes

Communication Type	Parameter	Choice
Serial	Data Table Address (This Controller)	Read: This is the controller tag in which to store the data being read Write: This is the controller tag that stores the value to be written to the power monitor.
	Size in Elements	This is the number of elements being read or written to. If you are performing a single element read or write, then this value should be 1. If you are performing a multiple element read or write, then this should be the number of elements after the source element that you wish to read or write.
	Channel	0
	Data Table Address (Target Device)	Refer to Appendix A for the address of the specific data value you're reading or writing to.
	Local Node	This is the serial node address of your power monitor.

Message setup is complete for Serial communication.

4. Click the MultiHop tab if configuring Ethernet communications.
5. Enter the IP Address of the power monitor in the To Address box.

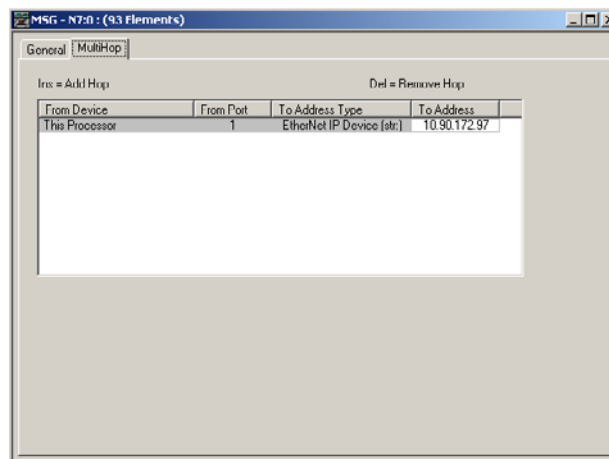

Message setup is complete.


RSLogix5 Software - Message Setup using PLC5 or SLC Typed Read/Write

The following is an example of how to set up your message instruction to read or write single or multiple elements to a power monitor using PLC5 or SLC Typed messages in RSLogix5. This setup applies to PLC5 programmable logic controllers.

Follow these steps to configure a message.

1. Choose an available message data block in your message instruction.

In this example, we used MG9:0.

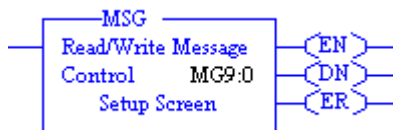

2. Click Setup Screen at the bottom of the message instruction.

The message configuration window for either Ethernet network or Serial communication appears.

3. Choose the appropriate parameters in the Message Configuration window.

Ethernet Network Communication


Serial Communication

Communication Type	Parameter	Choice
Ethernet	Communication Command	Select the appropriate message type according to Message Type on page 18 .
	Data Table Address (This Controller)	Read: This is the controller tag in which to store the data being read. Write: This is the controller tag that stores the value to be written to the power monitor.
	Size in Elements	This is the number of elements being read or written to. If you are performing a single element read or write, then this value should be 1. If you are performing a multiple element read or write, then this should be the number of elements after the source element that you wish to read or write.
	Port Number	2
	Data Table Address (Target Device)	Refer to Appendix A for the address of the specific data value you're reading or writing to.
	MultiHop	Yes

Communication Type	Parameter	Choice
Serial	Communication Command	Select the appropriate message type according to Message Type on page 18 .
	Data Table Address	Read: This is the controller tag in which to store the data being read. Write: This is the controller tag that stores the value to be written to the power monitor.
	Size in Elements	This is the number of elements being read or written to. If you are performing a single element read or write, then this value should be 1. If you are performing a multiple element read or write, then this should be the number of elements after the source element that you wish to read or write.
	Port Number	0
	Data Table Address (Target Device)	Refer to Appendix A for the address of the specific data value you're reading or writing to.
	Local Station Address	This is the serial node address of your power monitor.
	Local / Remote	Local

Message setup is complete for Serial communication.

4. Click the MultiHop tab if configuring Ethernet communication.
5. Enter the IP Address of the power monitor in the first row of the To Address column.

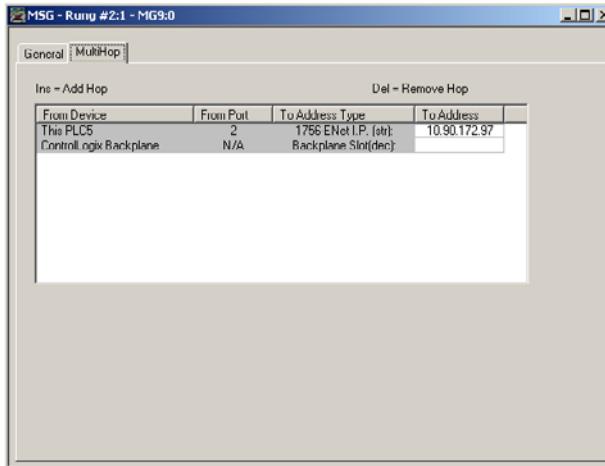

Message setup is complete.

Reading Logs

You can perform explicit messages to read data from log records in the power monitor.

For information on setting up explicit messages to the power monitor, please refer to [Explicit Message Setup – Examples](#) on [page 17](#).

The following logs can be read into a controller depending on the logs supported by your power monitor.

- Unit Status Log
- Min/Max Log
- Energy Log
- Load Factor Log
- Time of Use Log kWh
- Time of Use Log kVAR
- Time of Use Log kVA

Please refer to [Appendix A](#) for the data table address of the specific log you are requesting.

Log Data Table Methodology

The log data tables only hold one record instance for a specific log. Successive reads of the data table return a successive record instance for that log. By writing to specific configuration elements in the Log Request Table data table, you can configure the log to return in a forward or reverse direction. You can also configure the log to return a specific record for all logs except the Unit Status Log, and Energy Log.

[Refer to Log Request Table on page 64](#) for more information.

Example 1: Read the 5th Log Record in the Load Factor Log

This example explains how to configure the Log Request Table to read the 5th log record in the Load Factor Log.

1. Create a write message to write the following values to the Log Request Table.

Element	Item Name	Value
0	Selected Log	4
1	Chronology of Auto Return Data	0
2	Mix/Max Record to be Returned	0
3	Number of Unit Status Records	0
4	Number of Energy Log Records	0
5	Number of Time of Use Log Records	0
6	Number of Load Factor Log Records	0
7	Load Factor or TOU Record to be Returned	5

2. Create a read message to read the values in the Load Factor Log table.

Example 2: Read Min/Max Log for Average Current

This example explains how to configure the Log Request Table to read the Min/Max log for Average Current.

[Refer to Min/Max Parameter List on page 84](#) for the specific record to return.

In this example, Average Current is record 4.

1. Create a write message to write the following values to the Log Request Table.

Element	Item Name	Value
0	Selected Log	2
1	Chronology of Auto Return Data	0
2	Mix/Max Record to be Returned	4
3	Number of Unit Status Records	0
4	Number of Energy Log Records	0
5	Number of Time of Use Log Records	0
6	Number of Load Factor Log Records	0
7	Load Factor or TOU Record to be Returned	0

2. Create a read message to read the values in the Min/Max Log table.

SCADA Applications

This section covers RSLinx driver setup, and OPC setup using the RSLinx OPC Server.

RSLinx Classic Drivers Configuration

The Powermonitor 1000 unit EDS file should be installed on the computer running RSLinx software before configuring drivers. RSLinx software supports DF1 Half-duplex, DF1 Full-duplex, and EtherNet/IP network communication.

Configure DF1 Half-duplex Slave

You need to use a RS232 to RS485 converter like the 1761-NET-AIC or B&B Electronics Converter – Model 485SD9TB.

1. Create a DF1 Polling Master Driver in RSLinx software.
2. Verify that the communication rate in the Port Configuration tab is the same as the communication rate set for your power monitor.
3. Set the Error Checking Mode in the DF1 Protocol Settings tab to CRC.
4. Set the Destination Station Out-of-List Strategy in the Polling Strategies tab to Allow Msgs to Stns that are not in lists.
5. Perform an RSWho to verify that RSLinx software is communicating to the power monitor.

RSLinx software driver configuration is complete.

Configure DF1 Full-duplex

You need to use a RS232 to RS485 converter, like the 1761-NET-AIC or B&B Electronics Converter – Model 485SD9TB.

1. Create a RS232 DF1 devices driver in RSLinx software.
2. Perform an Auto-configure.
3. Verify connections if Auto-configure fails.
4. Perform an RSWho to verify that RSLinx software is communicating to the power monitor.

RSLinx software driver configuration is complete.

Configure RSLinx Software Driver Configuration for DH485

You need to use an RS232 to RS485 converter like the 1761-NET-AIC converter or B&B Electronics Converter - Model 485SD9TB.

1. Open the RSLinx Launch Control Panel.
2. Start RSLinx software to run as normal application, not as service.
3. Create a 1747-PIC/AIC+ Driver in RSLinx software.
4. Verify that the communication rate is the same as the communication rate set for your power monitor.
5. Set the node address and maximum node address of RSLinx Driver.
6. Perform an RSWho to verify that RSLinx software is communicating to the power monitor.
7. Restart RSLinx software to run as service.

Configure EtherNet/IP Network Using Ethernet Devices Driver

1. Create an Ethernet devices driver in RSLinx software.
2. Add the IP address of the power monitor to the driver station mapping.
3. Perform an RSWho to verify that RSLinx software is communicating to the power monitor.

RSLinx software driver configuration is complete.

Configure EtherNet/IP Network Using Ethernet/IP Driver

1. Create an Ethernet/IP driver in RSLinx software.
2. Make selections to browse the local or remote subnet as appropriate.
3. Perform an RSWho to verify that RSLinx software is communicating to the power monitor.

RSLinx software driver configuration is complete.

IMPORTANT

The power monitor makes a connection to either the RSLinx Ethernet Devices driver or the Ethernet/IP driver on a single computer but not both simultaneously.

RSLinx Classic Software OPC Server Setup

You can setup RSLinx software as an OPC Server to serve data from a power monitor to an OPC 2.0 compliant application. You must first setup an RSLinx driver to communicate to the power monitor. You can then create an OPC topic to serve data to your SCADA application.


Setup OPC Topic

Follow these steps to setup a DDE/OPC topic in RSLinx software for the power monitor.

1. Open RSLinx software.

2. From the DDE/OPC menu, choose Topic Configuration.

This configuration window appears.

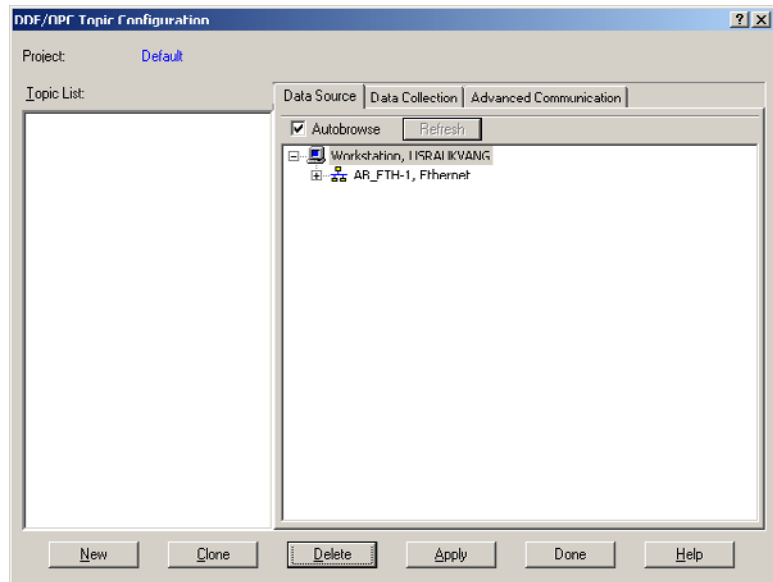

3. Click New.

This creates a topic in the left hand pane.


4. Name the topic pertinent to your application.

5. In the right hand pane, under the Data Source tab, browse to your power monitor.

You may use a serial or Ethernet network driver.


TIP

When using a DH485 driver, change the connection type to local addressing mode in the Advanced Communication tab. This is especially important when several topics use the DH485 driver.

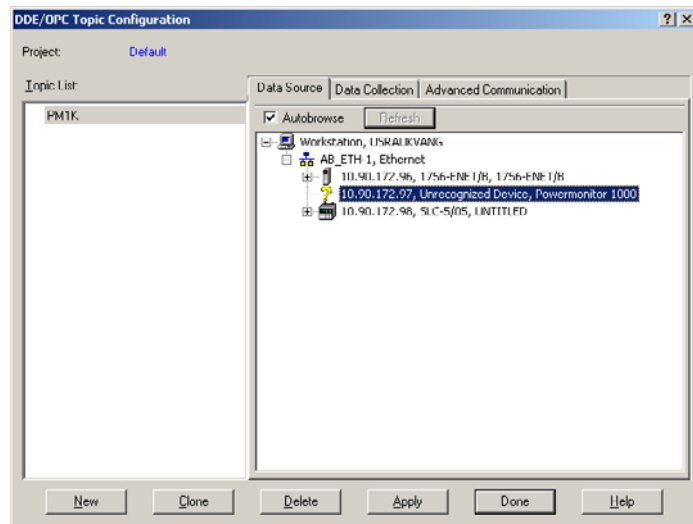

6. Make sure that the topic is highlighted in the left pane, and that the power monitor is also highlighted in the right pane, then click Apply.
7. Click the Data Collection tab.

8. From the Processor Type menu, choose SLC 500 or SLC 503+.

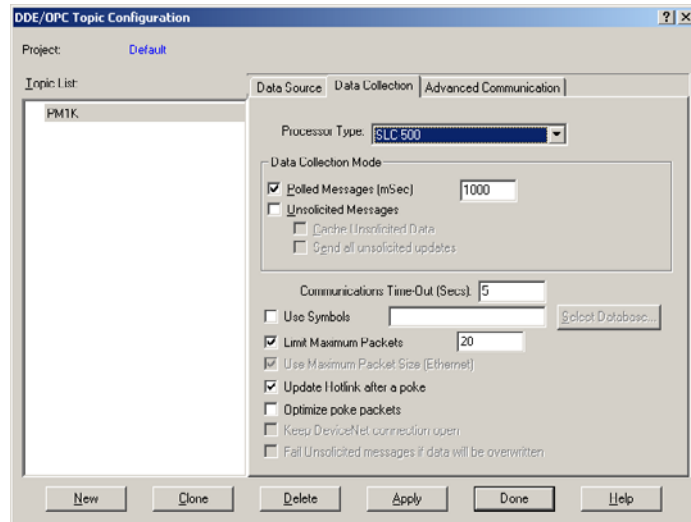

9. Click Done.

OPC Topic configuration is complete.


You can now use the RSLinx OPC Server, and the topic just created, to serve data to your application.

OPC item addresses are of the format [OPC Topic Name]Address,Ln,C1 where Address is the power monitor data address (example: F21:7). Optional argument Ln is the length of the array requested in elements. If the Ln argument is used, C1 (number of array columns) must also be specified.

Browse OPC Tags


The power monitor supports OPC tag browsing. The example uses the RSI OPC Test Client to illustrate tag browsing.

1. Open the RSI Test Client and connect to the RSLinx Classic OPC Server.

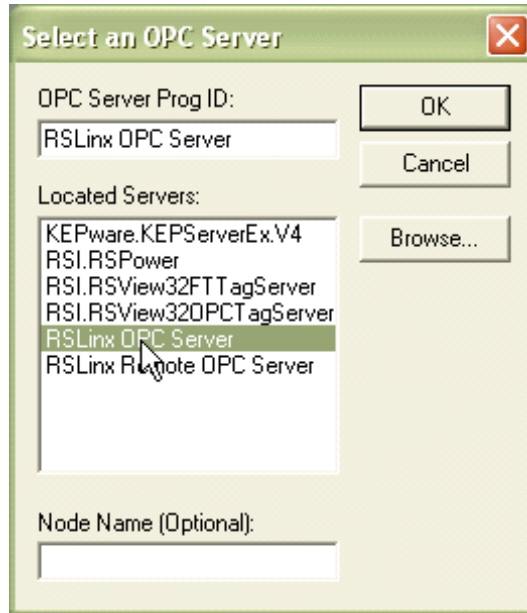

2. Add a group, then add an item. Browse to the OPC topic and then to the table and element in the Online tags.

In this example, the User Configured Read Instance F9, element 8, in the OPC topic EM3_LAB is selected.

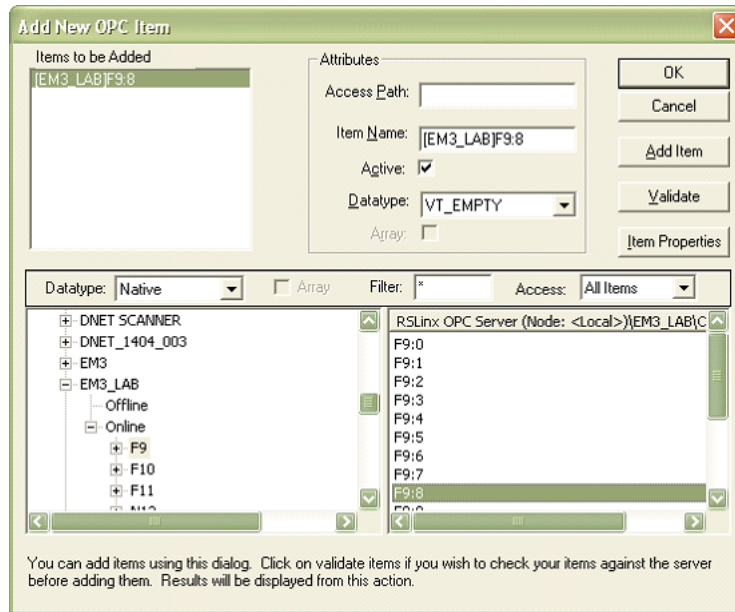

3. Click OK and start viewing data.

User-configured Data Table

The 1408-EM3 model provides a user configured data table. You may select the 16 floating-point parameters that comprise this table. Your application may read this table as connected input instance 1, or as CSP file F9 using explicit messaging.

Setup

You must use serial or Ethernet network communication to set up and read the user configured data table.

To set up the user configured table, using explicit messaging, write a new configuration to the User Configured Table Setup table.


See [page 92](#) for the content, default parameters and addressing details of the setup table. [Pages 93...96](#) list the available selections for the parameters.

Reading the User Configured Table as Connected Instance 1


The following example illustrates the steps required to set up an I/O connection between a Logix controller and the user configured Instance 1. The example uses a CompactLogix controller and RSLogix 5000 software.

Follow these steps to configure the connection.

1. Open an offline project in RSLogix 5000 software.
2. Open the Ethernet network interface and select the Ethernet network.
3. Add a new module and choose Generic Ethernet Module from the Communications group.

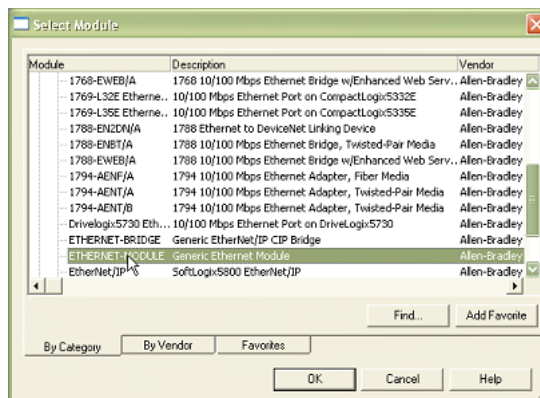


4. Configure the properties of the new module and click OK.

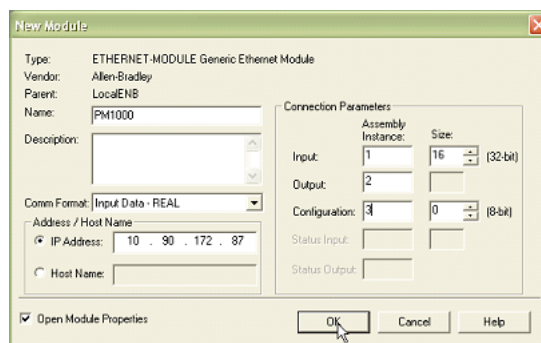

Parameter	Choice
Name	Your choice of name
Comm Format	Input Data - REAL
IP Address	The IP address of your power monitor
Input	Assembly Instance 1; Size 16 (32-bit)
Output	Assembly Instance 2
Configuration	Assembly Instance 3; Size 0
Open Module Properties	Leave checked

- On the connection tab, enter the desired Requested Packet Interval (RPI).

Do not enter an RPI less than 50 ms.

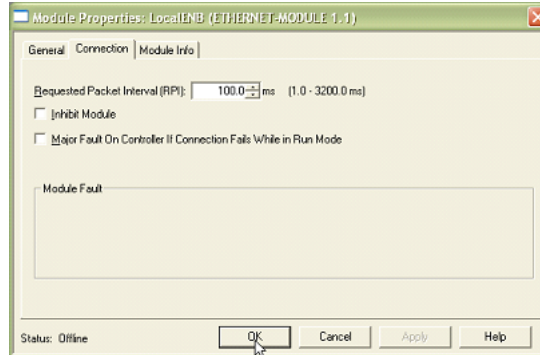

- Click OK, then Save and download the offline project into the controller.

The data from the user configured table is read into the controller tag [Module Name]:I.Data without any further logic programming, at the selected RPI rate.

Name	Value	Force Mask	Style	Data Type	Description
PM1000.C	(...)	(...)	(...)	AB-ETHERNET...	
PM10001	(...)	(...)	(...)	AB-ETHERNET...	
PM10001.Data	(...)	(...)	(...)	Float	REAL[16]
PM10001.Data[0]	97.25406			Float	REAL
PM10001.Data[1]	95.39508			Float	REAL
PM10001.Data[2]	95.908875			Float	REAL
PM10001.Data[3]	0.47477213			Float	REAL
PM10001.Data[4]	0.29451496			Float	REAL
PM10001.Data[5]	0.18023716			Float	REAL
PM10001.Data[6]	59.99429			Float	REAL
PM10001.Data[7]	695.76654			Float	REAL
PM10001.Data[8]	-183.7586			Float	REAL
PM10001.Data[9]	725.7487			Float	REAL
PM10001.Data[10]	95.8688			Float	REAL
PM10001.Data[11]	216375.16			Float	REAL
PM10001.Data[12]	346765.0			Float	REAL
PM10001.Data[13]	123.0			Float	REAL
PM10001.Data[14]	759.45984			Float	REAL
PM10001.Data[15]	0.0			Float	REAL

A power monitor connected instance may be owned by only one controller. An error results if you attempt to establish a connection with more than one controller. You may use explicit messaging to read the F9 table from any number of controllers.


Powermonitor 1000 Data Tables

Summary of Data Tables

The Summary of Powermonitor 1000 Data Tables for all Communication Protocols table summarizes all data tables available and their general attributes

The rest of the tables detail each specific data table and its associated elements, such as Modbus address, default value, ranges, and description.

IMPORTANT

The lock symbol  designates that the parameter that is marked will not be able to be written when the hardware lock terminals are connected together.

Summary of Powermonitor 1000 Data Tables for all Communication Protocols

Name of data table	Data Access	CSP File No.	CIP	Modbus Addressing	No of Elements	TR1	TR2	EM1	EM2	EM3	Refer to Page
User Configured Table Results	R	F9	1	31601...31632	16					•	45
Analog Input Configuration	RW	F10	3	40001...40014	7	•	•	•	•	•	46
Advanced Configuration	RW	F11	4	40101...40144	22	•	•	•	•	•	47
RS485 Configuration	RW	N12	5	40201...40209	9	•	•	•	•	•	51
Ethernet Configuration	RW	N13	6	40301...40323	23	•	•	•	•	•	52
Time Zone Information											54
Date and Time Configuration	RW	N14	7	40401...40408	8	•	•	•	•	•	57
Log Configuration	RW	N15	8	40501...40512	12			•	•	•	58
Command	W	F16	9	40601...40644	22	•	•	•	•	•	61
Log Request	RW	N17	10	40701...40711	11	•	•	•	•	•	64
Controller Interface	W	N18	11	40801...40808	8				•	•	66
Discrete Result	R	N19	12	30001...30006	6	•	•	•	•	•	67
Wiring Diagnostics Results	R	F20	13	30101...30142	21	•	•	•	•	•	68
Volts, Amps and Frequency Results	R	F21	14	30201...30232	16	•	•			•	70
Power Results	R	F22	15	30301...30334	17	•	•			•	71
Energy Results	R	F23	16	30401...30438	19			•	•	•	72

Summary of Powermonitor 1000 Data Tables for all Communication Protocols

Name of data table	Data Access	CSP File No.	CIP	Modbus Addressing	No of Elements	TR1	TR2	EM1	EM2	EM3	Refer to Page
Demand Results	R	F24	17	30501...30518	9				•	•	73
Unit Status Log Results	R	N25	18	30601...30613	13	•	•	•	•	•	74
Unit Status Log Code											76
Energy Log Results	R	F26	19	30701...30742	21			•	•	•	78
Write Error Status Results	R	N27	20	30801...30803	3	•	•	•	•	•	79
Unit Run Status Results	R	N28	21	30901...30925	25	•	•	•	•	•	80
Min/Max Log Results	R	F29	22	31001...31022	11	•	•			•	83
Min/Max Parameter List						•	•			•	84
Load Factor Log Results	R	F30	23	31101...31128	14				•	•	85
Time of Use Log Results- Real Energy and Demand	R	F31	24	31201...31224	12			•	•	•	87
Time of Use Log Results - Reactive Energy and Demand	R	F32	25	31301...31324	12				•	•	88
Time of Use Log Results - Apparent Energy and Demand	R	F33	26	31401...31424	12				•	•	89
Catalog Number and WIN	R	N34	27	31501...31519	19	•	•	•	•	•	90
Single Element Password Write	W	N35	28	40901	1	•	•	•	•	•	91
User Configurable Table Setup	R/W	N36	29	41001...41017	17					•	92
Parameters for Configurable Table											93

Data Tables

User Configured Table Results Parameters

CSP File No.	F9
CIP Instance	1
Applies to	EM3 only
No. of Elements	16
No. of Words	32
Data Type	Float
Data Access	Read Only

User Configured Table Results

Element No.	Modbus Address	Element Name	Description
0	31601-2	User selected Parameter #1	Parameters previously setup during a write to User Configured Table Setup table.
1	31603-4	User selected Parameter #2	
2	31605-6	User selected Parameter #3	
3	31607-8	User selected Parameter #4	
4	31609-10	User selected Parameter #5	
5	31611-12	User selected Parameter #6	
6	31613-14	User selected Parameter #7	
7	31615-16	User selected Parameter #8	
8	31617-18	User selected Parameter #9	
9	31619-20	User selected Parameter #10	
10	31621-22	User selected Parameter #11	
11	31623-24	User selected Parameter #12	
12	31625-26	User selected Parameter #13	
13	31627-28	User selected Parameter #14	
14	31629-30	User selected Parameter #15	
15	31631-32	User selected Parameter #16	

Analog Input Configuration Parameters

CSP File No.	F10
CIP Instance	3
Applies to	All models
No. of Elements	7
No. of Words	14
Data Type	Float
Data Access	Read/Write

Analog Input Configuration

Element No.	Modbus Address	Element Name	Default Value	Range	Description
0	40001-2	Password	0	0...9999	When writing the complete table this parameter allows the input data to be accepted. When writing a single parameter the separate password table should be used. Returns -1 on a read.
1	40003-4	Voltage Mode	2	0...4	Should match the external electrical system and how it is wired to the Powermonitor's voltage and current input terminals. Refer to the installation manual wiring diagrams. 0 = Direct Delta 1 = Open Delta 2 = Wye 3 = Single Phase 4 = Demo
2	40005-6	PT Primary	480	1.00... 50,000	The first value of the PT ratio (xxx:xxx) indicating the nominal voltage present at the high-end of the transformer. If no transformer is used (for direct connect of up to 347V L-N or 600V L-L), set the PT ratio to any valid 1:1 ratio (for example 480:480).
3	40007-8	PT Secondary	480	1.00... 600.00	The second value of the PT ratio (xxx:xxx) indicating the nominal voltage present at the low-end of the transformer.
4	40009-10	CT Primary	5	5.00... 50,000	The first value of the CT ratio (xxx:5) indicating the nominal current present at the high-end (primary side) of the transformer. Example: PRI = 1000. Setting = 1000:5. 5 A is the nominal secondary current of the CT.
5	40011-12	System PF Setting	2	0...2	0 = Leading -97...89 1 = High -85...98 2 = Low -52...-95
6	40013-14	Reserved	0	0	Reserved for future use.

Advanced Configuration Parameters

CSP File No.	F11
CIP Instance	4
No. of Elements	22
No. of Words	44
Data Type	Float
Data Access	Read/Write







Advanced Configuration

Element No.	Modbus Address Range	Element Name	Default Value	Range	TR1	TR2	EM1	EM2	EM3	Description
0	40101-2	Password	0	0...9999	•	•	•	•	•	When writing the complete table this parameter allows the input data to be accepted. When writing a single parameter the separate password table should be used. Returns -1 on a read.
1	40103-4	New Password	0	0...9999	•	•	•	•	•	This becomes the new password when the proper the configuration password entry has been made and this parameter is greater than (-1).
2	40105-5	Metering Result Averaging	1	0...1	•	•	•	•	•	The metering results for volts, amps, power and frequency is averaged over 8 cycles of data to provide a steady output reading. 0 = Off 1 = On
3	40107-8	Log Status Input Changes	0	0...1	•	•	•	•	•	0 = Disable recording of status input changes into the status log. 1 = Enable recording of status input changes into the status log.
4	40109-10	Use Daylight Savings Correction	0	0...1	•	•	•	•	•	0 = Disable Daylight Savings 1 = Enable Daylight Savings


Advanced Configuration

Element No.	Modbus Address Range	Element Name	Default Value	Range	TR1	TR2	EM1	EM2	EM3	Description
5	40111-12	Daylight Savings Month/Week /Day Start	030201 March, 2nd, Sunday	10101...120507	•	•	•	•	•	<p>This is the day that the power monitor will add an hour to the time. This feature also looks at Ethernet SNTP offset and corrects for Daylight Savings.</p> <p>Example: 040107 = April/1st week/Sunday</p> <p>Month Settings: 01 = January...12 = December</p> <p>Week Settings: 01 = 1st week...05 = Last Week</p> <p>Day of the Week Settings: 01 = Sunday...07 = Saturday</p>
6	40113-14	Hour of Day Start	2	0...23	•	•	•	•	•	The hour of day the daylight savings adjustment should be made to add an hour.
7	40115-16	Return from Daylight Savings Month/Week /Day	110101 November, 1st, Sunday	10101...120507	•	•	•	•	•	<p>This is the day that the power monitor will subtract an hour from the time. This feature also looks at Ethernet SNTP offset and corrects for the return from Daylight Savings.</p> <p>Month Settings: 01 = January...12 = December</p> <p>Week Settings: 01 = 1st week...05 = Last Week</p> <p>Day of the Week Settings: 01 = Sunday...07 = Saturday</p>
8	40117-18	Hour of Day End	2	0...23	•	•	•	•	•	The hour of day the daylight savings adjustment should be made to subtract an hour.
9	40119-20	KYZ Solid State Output Parameter	0	0...5			•	•	•	<p>The parameter selected will pulse the KYZ output at a rate that equals the parameter value divided by KYZ scale.</p> <p>0 = Disable 1 = Wh Fwd 2 = Wh Rev 3 = VARh Fwd (EM2 and EM3 Only) 4 = VARh Rev (EM2 and EM3 Only) 5 = Vah (EM2 and EM3 Only)</p>
10	40121-22	KYZ Solid State Output Scale	1,000	1...100,000			•	•	•	<p>The KYZ output parameter divided by the scale is the output pulse rate. Example: Wh is selected for the parameter and 1,000 is the scale value. The output is pulsed every kWh.</p>

Advanced Configuration

Element No.	Modbus Address Range	Element Name	Default Value	Range	TR1	TR2	EM1	EM2	EM3	Description
11 	40123-24	KYZ Pulse Duration Setting	250 ms	0 or 50...1000			•	•	•	Set as 50...1000 to indicate the duration of the pulse in milliseconds, or set to 0 for KYZ-style transition output. (Toggle) The value for delay is rounded off to the nearest 10ms internally during this function.
12 	40125-26	Status Input 1 Input Scale	1	1...1,000,000			•	•	•	When a status pulse is received the count is increased by the scale factor. Input pulse * input scale added to total status count.
13 	40127-28	Status Input 2 Input Scale	1	1...1,000,000			•	•	•	When a status pulse is received the count is increased by the scale factor. Input pulse * input scale added to total status count.
14 	40129-30	Demand Source	0	0...3				•	•	When item Demand Broadcast Master Select of the ethernet table is set to master a selection of 0 through 2 sets the type of master input. In this case item 3 is ignored. When the Demand Broadcast Master Select of the ethernet table is set to slave then any of these inputs can set the end of the demand period. Selections of 0 through 2 can be selected for RS485 units. 0 = Internal Timer 1 = Status Input 2 2 = Controller Command 3 = Ethernet Demand Broadcast Selection 3 can only be programmed when the Ethernet option is installed.
15 	40131-32	Demand Period Length	15 min	0...99				•	•	Specifies the desired period for demand calculations. When set to 0 there are no projected demand calculations. If the internal timer is selected a setting of 0 turns the demand function off.
16 	40133-34	Number of Demand Periods	1	1...15				•	•	Specifies the number of demand periods to average for demand measurement.

Advanced Configuration

Element No.	Modbus Address Range	Element Name	Default Value	Range	TR1	TR2	EM1	EM2	EM3	Description
17 	40135-36	Forced Demand Sync Delay	10 s	0...900 s				•	•	When the power monitor is configured for external demand control the unit delays for xxx seconds after the expected control pulse has not been received. The demand period starts over and a record is recorded in the status log. 0 = Wait forever 1...900 = Wait this many seconds before starting a new demand period. This setting becomes active when the demand interval is set from -1...-99 minutes.
18	40137-38	Unit Error Action	1	0...1	•	•	•	•	•	This parameter determines the action when a unit error occurs. 0 = Halt on error and make status LED solid red 1 = Reset power monitor hardware.
19	40139-40	Software Error Log Full Action	1	0...1	•	•	•	•	•	This parameter determines the action when a firmware failure is detected and the error log is full. 0 = Halt on error and wait for clear log command, also make status LED solid red 1 = Perform a firmware reset.
20	40141-42	Reserved	0	0	•	•	•	•	•	Reserved for future use.
21	40143-44	Reserved	0	0	•	•	•	•	•	Reserved for future use.

Serial RS-485 Port Configuration Parameters

CSP File No.	N12
CIP Instance	5
Applies to	All models
No. of Elements	9
No. of Words	9
Data Type	Integer
Data Access	Read/Write

Serial RS-485 Port Configuration

Element No.	Modbus Address	Element Name	Default Value	Range	Description
0	40201	Password	0	0...9999	When writing the complete table this parameter allows the input data to be accepted. When writing a single parameter the separate password table should be used. Returns -1 on a read.
1	40202	Protocol Setting	1	0...3	The protocol selection for communications. 0 = DF1 Half Duplex Slave 1 = DF1 Full Duplex 2 = Modbus RTU Slave 3 = Auto Sense 4 = DH485
2	40203	Serial Delay	2 (10 ms)	1...15	The setting times 5 = milliseconds that the unit waits before responding to a communication request. Useful for consistent communications and slow devices.
3	40204	Baud Rate	5	0...6	The serial communications baud rate. 0 = 1200 1 = 2400 2 = 4800 3 = 9600 4 = 19200 5 = 38,400 6 = 57,600
4	40205	DF1, DH485, Modbus Address	Device ID, 31 for DH485	1...247 (DF1, Modbus) 0...31 (DH485)	During production the Device ID is printed on the nameplate. This ID then becomes the default address for DF1 and Modbus.

Serial RS-485 Port Configuration

Element No.	Modbus Address	Element Name	Default Value	Range	Description
5	40206	Data Format	0	0...2 (2 for DH485)	Parity, number of data bits, number of stop bits 0 = No parity, 8 data bits, 1 stop bit 1 = Odd parity, 8 data bits, 1 stop bit 2 = Even parity, 8 data bits, 1 stop bit
6	40207	Inter Character Timeout	0	0...6553	Specifies the minimum delay between characters that indicates the end of a message packet for Modbus protocol. 0 = 3.5 character times in default. The unit is ms.
8	40208	Maximum Node Address	3	1...31	Specifies the maximum node address on a DH485 network.
9	40209	Reserved	0	0	Reserved for future use.

Ethernet Configuration Parameters

CSP File No.	N13
CIP Instance	6
No. of Elements	23
No. of Words	23
Data Type	Integer
Data Access	Read/Write

Ethernet Configuration

Element No.	Modbus Address	Element Name	Default Value	Range	TR1	TR2	EM1	EM2	EM3	Description
0	40301	Password	0	0...9999	•	•	•	•	•	When writing the complete table this parameter allows the input data to be accepted. When writing a single parameter the separate password table should be used. Returns -1 on a read.
1	40302	IP Address Byte a (aaa.xxx.xxx.xxx)	192	0...255	•	•	•	•	•	The 1st Octet of the Static IP Address.
2	40303	IP Address Byte b (xxx.bbb.xxx.xxx)	168	0...255	•	•	•	•	•	The 2nd Octet of the Static IP Address.
3	40304	IP Address Byte c (xxx.xxx.ccc.xxx)	254	0...255	•	•	•	•	•	The 3rd Octet of the Static IP Address.
4	40305	IP Address Byte d (xxx.xxx.ddd.xxx)	Unit ID	0...255	•	•	•	•	•	The 4th Octet of the Static IP Address.

Ethernet Configuration

Element No.	Modbus Address	Element Name	Default Value	Range	TR1	TR2	EM1	EM2	EM3	Description
5	40306	Subnet Mask Byte a	255	0...255	•	•	•	•	•	Specifies the subnet mask to apply to the IP address.
6	40307	Subnet Mask Byte b	255	0...255	•	•	•	•	•	Specifies the subnet mask to apply to the IP address.
7	40308	Subnet Mask Byte c	0	0...255	•	•	•	•	•	Specifies the subnet mask to apply to the IP address.
8	40309	Subnet Mask Byte d	0	0...255	•	•	•	•	•	Specifies the subnet mask to apply to the IP address.
9	40310	Gateway IP Address Byte a	128	0...255	•	•	•	•	•	IP address of the gateway to other subnets for wide area networking.
10	40311	Gateway IP Address Byte b	1	0...255	•	•	•	•	•	IP address of the gateway to other subnets for wide area networking.
11	40312	Gateway IP Address Byte c	1	0...255	•	•	•	•	•	IP address of the gateway to other subnets for wide area networking.
12	40313	Gateway IP Address Byte d	1	0...255	•	•	•	•	•	IP address of the gateway to other subnets for wide area networking.
13	40314	SNTP Mode Select	0	0...2	•	•	•	•	•	This mode selects the mode of the SNTP function or to disable the SNTP function. 0 = Disable 1 = Unicast - The SNTP address points to a unicast server. 2 = Anycast Mode - The SNTP address is a broadcast address of an anycast group.
14	40315	SNTP Update Interval	300	1...32766	•	•	•	•	•	Indicates how often the time is updated from the SNTP Server. The unit is minute.
15	40316	Time Zone Select	7	0...32	•	•	•	•	•	The time zone table has detailed time zone information.
16	40317	Time Server IP Address Byte a	0	0...255	•	•	•	•	•	The internal clock is set after each Time set interval has expired. The Time server IP address is the SNTP time server where the request is handled.
17	40318	Time Server IP Address Byte b	0	0...255	•	•	•	•	•	The internal clock is set after each Time set interval has expired. The Time server IP address is the SNTP time server where the request is handled.
18	40319	Time Server IP Address Byte c	0	0...255	•	•	•	•	•	The internal clock is set after each Time set interval has expired. The Time server IP address is the SNTP time server where the request is handled.

Ethernet Configuration

Element No.	Modbus Address	Element Name	Default Value	Range	TR1	TR2	EM1	EM2	EM3	Description
19	40320	Time Server IP Address Byte d	0	0...255	•	•	•	•	•	The internal clock is set after each Time set interval has expired. The Time server IP address is the SNTP time server where the request is handled.
20	40321	Demand Broadcast Master Select	0	0...1				•	•	When configured as a Master the power monitor broadcasts an end of demand interval broadcast to the UDP port number configured. 0 = Slave 1 = Master control
21	40322	Broadcast Port Number	300	300...400				•	•	When configured as a Master and External Demand Source or Ethernet Demand Broadcast the port number is the listening or broadcast port for the UDP message.
22	40323	Reserved	0	0	•	•	•	•	•	Reserved for future use.

Time Zone Information

Value	Offset from GMT	Time Zone Name	Areas in Time Zone
0	GMT-12:00	Dateline Standard Time	Eniwetok, Kwajalein
1	GMT-11:00	Samoa Standard Time	Midway Island, Samoa
2	GMT-10:00	Hawaiian Standard Time	Hawaii
3	GMT-09:00	Alaskan Standard Time	Alaska
4	GMT-08:00	Pacific Standard Time	Pacific Time (US & Canada,; Tijuana)
5	GMT-07:00	Mountain Standard Time	Mountain Time (US & Canada)
		US Mountain Standard Time	Arizona
6	GMT-06:00	Canada Central Standard Time	Saskatchewan
		Central America Standard Time	Central America
		Central Standard Time	Central Time (US & Canada)
		Mexico Standard Time	Mexico City
7	GMT-05:00	Eastern Standard Time	Eastern Time (US & Canada)
		SA Pacific Standard Time	Bogota, Lima, Quito
		US Eastern Standard Time	Indiana (East)
8	GMT-04:00	Atlantic Standard Time	Atlantic Time (Canada)
		Pacific SA Standard Time	Santiago
		SA Western Standard Time	Caracas, La Paz
9	GMT-03:30	Newfoundland Standard Time	Newfoundland

Time Zone Information

Value	Offset from GMT	Time Zone Name	Areas in Time Zone
10	GMT-03:00	E. South America Standard Time	Brasilia
		Greenland Standard Time	Greenland
		SA Eastern Standard Time	Buenos Aires, Georgetown
11	GMT-02:00	Mid-Atlantic Standard Time	Mid-Atlantic
12	GMT-01:00	Azores Standard Time	Azores
		Cape Verde Standard Time	Cape Verde Is.
13	GMT	Standard Time	Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London
		Greenwich Standard Time	Casablanca, Monrovia
14	GMT+01:00	Central Europe Standard Time	Belgrade, Bratislava, Budapest, Ljubljana, Prague
		Central European Standard Time	Sarajevo, Skopje, Sofija, Vilnius, Warsaw, Zagreb
		Romance Standard Time	Brussels, Copenhagen, Madrid, Paris
		W. Central Africa Standard Time	West Central Africa
		W. Europe Standard Time	Amsterdam, Berlin, Bern, Rome, Stockholm, Vienna
15	GMT+02:00	E. Europe Standard Time	Bucharest
		Egypt Standard Time	Cairo
		FLE Standard Time	Helsinki, Riga, Tallinn
		GTB Standard Time	Athens, Istanbul, Minsk
		Israel Standard Time	Jerusalem
		South Africa Standard Time	Harare, Pretoria
16	GMT+03:00	Arab Standard Time	Kuwait, Riyadh
		Arabic Standard Time	Baghdad
		E. Africa Standard Time	Nairobi
		Russian Standard Time	Moscow, St. Petersburg, Volgograd
17	GMT+03:30	Iran Standard Time	Tehran
18	GMT+04:00	Arabian Standard Time	Abu Dhabi, Muscat
		Caucasus Standard Time	Baku, Tbilisi, Yerevan
19	GMT+04:30	Afghanistan Standard Time	Kabul
20	GMT+05:00	Ekaterinburg Standard Time	Ekaterinburg
		West Asia Standard Time	Islamabad, Karachi, Tashkent
21	GMT+05:30	India Standard Time	Calcutta, Chennai, Mumbai, New Delhi
22	GMT+05:45	Nepal Standard Time	Kathmandu
23	GMT+06:00	Central Asia Standard Time	Astana, Dhaka
		N. Central Asia Standard Time	Almaty, Novosibirsk
		Sri Lanka Standard Time	Sri Jayawardenepura
24	GMT+06:30	Myanmar Standard Time	Rangoon

Time Zone Information

Value	Offset from GMT	Time Zone Name	Areas in Time Zone
25	GMT+07:00	North Asia Standard Time	Krasnoyarsk
		SE Asia Standard Time	Bangkok, Hanoi, Jakarta
26	GMT+08:00	China Standard Time	Beijing, Chongqing, Hong Kong, Urumqi
		North Asia East Standard Time	Irkutsk, Ulaan Bataar
		Singapore Standard Time	Kuala Lumpur, Singapore
		Taipei Standard Time	Taipei
		W. Australia Standard Time	Perth
27	GMT+09:00	Korea Standard Time	Seoul
		Tokyo Standard Time	Osaka, Sapporo, Tokyo
		Yakutsk Standard Time	Yakutsk
28	GMT+09:30	AUS Central Standard Time	Darwin
		Cen. Australia Standard Time	Adelaide
29	GMT+10:00	AUS Eastern Standard Time	Canberra, Melbourne, Sydney
		E. Australia Standard Time	Brisbane
		Tasmania Standard Time	Hobart
		Vladivostok Standard Time	Vladivostok
		West Pacific Standard Time	Guam, Port Moresby
30	GMT+11:00	Central Pacific Standard Time	Magadan, Solomon Is., New Caledonia
31	GMT+12:00	Fiji Standard Time	Fiji, Kamchatka, Marshall Is.
		New Zealand Standard Time	Auckland, Wellington
32	GMT+13:00	Tonga Standard Time	Nuku'alofa

Date and Time Configuration Parameters

CSP File No.	N14
CIP Instance	7
Applies to	All models
No. of Elements	8
No. of Words	8
Data Type	Integer
Data Access	Read/Write

Date and Time Configuration

Element No.	Modbus Address	Element Name	Default Value	Range	Description
0	40401	Password	0	0...9999	When writing the complete table this parameter allows the input data to be accepted. When writing a single parameter the separate password table should be used. Returns -1 on a read.
1	40402	Date: Year	2005	2001... 2100	The range is from 2001... 2100. A write sets the current year.
2	40403	Date: Month	1	1...12	A write sets the current month. A read returns current month. 1=January, 2=February,...12=December
3	40404	Date: Day	1	1...31	A write sets the current day of the month. A reads returns the current day of the month. The internal real-time clock adjusts the date for leap-year.
4	40405	Time: Hour	0	0...23	A write sets the current hour. A read returns the current hour. 0=12am, 1=1am,...23=11pm The internal real-time clock does not adjust for daylight savings time.
5	40406	Time: Minute	0	0...59	A write sets the current minutes. A read returns the current minutes.
6	40407	Time: Seconds	0	0...59	A write sets the current seconds. A read returns the current seconds.
7	40408	Time: Hundredths	0	0...99	Set this element to 0 for writes. Returns hundredths of a second on read.

Log Configuration Parameters

CSP File No.	N15
CIP Instance	8
No. of Elements	12
No. of Words	12
Data Type	Integer
Data Access	Read/Write

Log Configuration

Element No.	Modbus Address	Element Name	Default Value	Range	TR1	TR2	EM1	EM2	EM3	Description
0	40501	Password	0	0...9999			•	•	•	When writing the complete table this parameter allows the input data to be accepted. When writing a single parameter the separate password table should be used. Returns -1 on a read.
1	40502	Energy Log Interval	15 min	-1...60			•	•	•	Selects how often a record is logged (minutes). A value of 0 disables periodic logging of records. A value of -1 causes logging of records to be synchronized to the end of the demand interval.
2	40503	Energy Log Mode	1	0...1			•	•	•	This parameter set the action of the log once is has filled to capacity. Setting the option to 0 allows the log to fill but stops at the end. Option 1 lets the log fill and then oldest records are deleted and replaced with new records. 0 = Fill and Stop 1 = Overwrite, When the log is filled new records replace the oldest records.
3	40504	Time of Use Log Auto Log Setting	31	0...31			•	•	•	Automatically stores the current record for the month replacing the oldest record if the log is full. The log holds 12 months plus the current record. 0 = Disables the auto clear feature. 1 = Store and clear the table on the 1st day of each month. 2 = 2nd Day 3 = 3rd day ... 29...31 = Store and clear table at the last day of the month.

Log Configuration

Element No.	Modbus Address	Element Name	Default Value	Range	TR1	TR2	EM1	EM2	EM3	Description
4	40505	Off Peak Days	65	0...127			•	•	•	<p>This bit map field selects the off peak days. OFF-PEAK days have only one rate for billing.</p> <p>Bit0= Sunday Bit1= Monday Bit2= Tuesday Bit3= Wednesday Bit4= Thursday Bit5= Friday Bit6= Saturday Saturday and Sunday are default Off Peak days.</p>
5	40506	MID Peak AM Hours	1792	0...4095			•	•	•	<p>This bit map selects any AM hours that are designated as MID Peak. Example: The hours from 8 AM to 11AM is designated as bit 8 through bit 10 = 1792d.</p> <p>Bit0= 12 AM...1 AM Bit1= 1 AM...2 AM Bit2= 2 AM...3 AM Bit11= 11AM...12 AM Default is 8 AM...11 AM</p>
6	40507	MID Peak PM Hours	120	0...4095			•	•	•	<p>This bit map selects any PM hours that are designated as MID Peak. Example: The hours from 3 PM to 7 PM is designated as bit 3 through bit 6 = 120d.</p> <p>Bit0= 12 PM...1 PM Bit1= 1 PM...2 PM Bit2= 2 PM...3 PM Bit11= 11PM...12 PM Default is 3 PM...7 PM</p>
7	40508	ON Peak AM Hours	2048	0...4095			•	•	•	<p>This bit map selects any AM hours that are designated as ON Peak. Example: The hours from 11AM to 12 PM is designated as bit 11 = 2048d.</p> <p>Bit0= 12 AM...1 AM Bit1= 1 AM...2 AM Bit2= 2 AM...3 AM Bit11= 11AM...12 AM Default is 11AM</p>

Log Configuration

Element No.	Modbus Address	Element Name	Default Value	Range	TR1	TR2	EM1	EM2	EM3	Description
8	40509	ON Peak PM hours	7	0...4095			•	•	•	<p>This bit map selects any PM hours that are designated as ON Peak. Example: The hours from 12 PM to 3 PM is designated as bit 0 through bit 2 = 7d</p> <p>Bit0= 12 PM...1 PM Bit1= 1 PM...2 PM Bit2= 2 PM...3 PM ... Bit11= 11PM...12 PM Default is 12 PM...3 PM</p>
9	40510	Load Factor log Auto Log Setting	31	0...31			•	•	•	<p>Automatically stores the current peak, average, and load factor results as a record in the non-volatile load factor log and resets the log at the specified day of the month.</p> <p>0 = Disables the auto clear feature. 1 = Store and clear the table on the 1st day of each month. 2 = 2nd Day 3 = 3rd day ... 29...31 = Store and clear table at the last day of the month.</p>
10	40511	Reserved	0	0	•	•	•	•	•	Reserved for future use.
11	40512	Reserved	0	0	•	•	•	•	•	Reserved for future use.

Command Table Parameters

CSP File No.	F16
CIP Instance	9
No. of Elements	22
No. of Words	44
Data Type	Float
Data Access	Write

Command Table

Element No.	Modbus Address	Element Name	Default Value	Range	TR1	TR2	EM1	EM2	EM3	Description
0	40601-2	Password	0	0...9999	•	•	•	•	•	When writing the complete table this parameter allows the input data to be accepted. When writing a single parameter the separate password table should be used. Returns -1 on a read.
1	40603-4	Command Word 1	0	0...32	•	•	•	•	•	<p>These commands can be sent to the power monitor. When using the optional elements the command table must be sent complete with all elements present. If the single password table is used to gain access to configuration items then the command can be sent alone without optional settings. The command options are:</p> <p>0 = No Action 1 = Set kWh Register 2 = Set kVARh Register 3 = Set kVAh Register 4 = Clear All Energy Registers 5 = Set Status 1 Count 6 = Set Status 2 Count 7 = Clear Energy Log 8 = Force KYZ Output On 9 = Force KYZ Output Off 10 = Remove Force from KYZ 11 = Restore Factory Defaults 12 = Perform Wiring Diagnostics 13 = Reset power monitor System 14...32 = Reserved</p> <p>If a command is received that is not supported by your catalog number the command will be ignored.</p>
2	40605-6	Command Word 2	0	0...32	•	•	•	•	•	<p>0 = No Action 1 = Clear Min/Max Records 2 = Store and clear current Load Factor Record 3 = Clear Load Factor Log 4 = Store and clear current TOU Record 5 = Clear TOU Log 6 = Clear Error Log command 7 = Troubleshooting Mode Enable 8...32 = Reserved.</p> <p>If a command is received that is not supported by your catalog number the command will be ignored.</p>

Command Table

Element No.	Modbus Address	Element Name	Default Value	Range	TR1	TR2	EM1	EM2	EM3	Description
3	40607-8	Clear Single Min/Max Records	0	0...35 0...31 0...19	•	•			•	When setting the Min/Max Clear bit this value can be sent to specify a single parameter. If clearing all values this is not required. EM3 = 0...35 TR2 = 0...31 TR1 = 0...19 0=Clear All Parameters 1= Clear the 1st Min/Max Record 2= Clear the 2nd Min/Max Record ... 35=Clear the 35th Min/Max Record
4	40609-10	Status 1 Count x M Register Set Value	0	0...9,999,999			•	•	•	Status 1 Count Register Start Value x 1,000,000
5	40611-12	Status 1 Count X 1 Register Set Value	0	0...999,999			•	•	•	Status 1 Count Register Start Value x 1
6	40613-14	Status 2 Count x M Register Set Value	0	0...9,999,999			•	•	•	Status 2 Count Register Start Value x 1,000,000
7	40615-16	Status 2 Count X 1 Register Set Value	0	0...999,999			•	•	•	Status 2 Count Register Start Value x 1
8	40617-18	GWh Fwd Register Set Value	0	0...9,999,999			•	•	•	Sets the GWh Fwd Register to the desired Value
9	40619-20	kWh Fwd Register Set Value	0	0...999,999			•	•	•	Sets the kWh Fwd Register to the desired Value
10	40621-22	GWh Rev Register Set Value	0	0...9,999,999			•	•	•	Sets the GWh Rev Register to the desired Value
11	40623-24	kWh Rev Register Set Value	0	0...999,999					•	Sets the kWh Rev Register to the desired Value
12	40625-26	GVARh Fwd Register Set Value	0	0...9,999,999				•	•	Sets the GVARh Fwd Register to the desired Value
13	40627-28	kVARh Fwd Register Set Value	0	0...999,999				•	•	Sets the kVARh Fwd Register to the desired Value
14	40629-30	GVARh Rev Register Set Value	0	0...9,999,999				•	•	Sets the GVARh Rev Register to the desired Value

Command Table

Element No.	Modbus Address	Element Name	Default Value	Range	TR1	TR2	EM1	EM2	EM3	Description
15	40631-32	kVARh Rev Register Set Value	0	0...999,999				•	•	Sets the kVARh Rev Register to the desired Value
16	40633-34	GVAh Register Set Value	0	0...9,999,999				•	•	Sets the GVAh Register to the desired Value
17	40635-36	kVAh Register Set Value	0	0...999,999				•	•	Sets the kVAh Register to the desired Value
18	40637-38	Troubleshooting Password	0	0	•	•	•	•		Password for Troubleshooting Mode provided by the password generator program.
19	40639-40	Reserved	0	0	•	•	•	•	•	Reserved for future use.
20	40641-42	Reserved	0	0	•	•	•	•	•	Reserved for future use.
21	40643-44	Reserved	0	0	•	•	•	•	•	Reserved for future use.

Log Request Table Parameters

CSP File No.	N17
CIP Instance	10
No. of Elements	11
No. of Words	11
Data Type	Integer
Data Access	Read/Write

Log Request Table

Element No.	Modbus Address	Element Name	Default Value	Range	TR1	TR2	EM1	EM2	EM3	Description
0	40701	Selected Log	0	0...5	•	•	•	•	•	Selects the log that information is returned from. Once a single request has been made the auto return feature will bring back successive records each time the log is read. Some logs support individual record requests. 1 = Unit Status Log 2 = Min/Max Log 3 = Energy Log 4 = Load Factor Log 5 = Time of Use Log kWh 6 = Time of Use Log kVAR 7 = Time of Use Log kVA If your catalog number does not support the requested log item the power monitor will ignore the request.
1	40702	Chronology of Auto Return Data	1	0...1	•	•	•	•	•	The date chronology of the returned records. 0 = Reverse direction 1 = Forward direction
2	40703	The Min/Max record to be returned	0	0...35 0...31 0...15	•	•			•	Selects the Min/Max record number to be returned. See the table for Min/Max record list. 0 = Use incremental return and the chronology selected. EM3 = 1...35 TR2 = 1...31 TR1 = 1...15
3	40704	Number of Unit Status Records	-	1...50	•	•	•	•	•	On a read of this table the value of this parameter is the number of Unit Status Records available. This log is only returned using the incremental return method.

Log Request Table

Element No.	Modbus Address	Element Name	Default Value	Range	TR1	TR2	EM1	EM2	EM3	Description
4	40705	Number of Energy Log Records	-	0...17,280			•	•	•	On a read of this table the value of this parameter is the number of Energy Log Records available.
5	40706	Number of Time of Use Log Records	-	1...13			•	•	•	On a read of this table the value of this parameter is the number of Time of Use Log Records available. One is the current record being updated before logging.
6	40707	Number of Load Factor Log Records	-	1...13				•	•	On a read of this table the value of this parameter is the number of Load Factor Log Records available. One is the current record being updated before logging.
7	40708	Load Factor or TOU Record to be Returned.	-	0...13	•	•	•	•	•	Selects the Load Factor or TOU record number to be returned. 0 = Use incremental return and the chronology selected 1 through 13 selects an individual record.
8	40709	Reserved	-	0	•	•	•	•	•	Reserved for future use.
9	40710	Reserved	-	0	•	•	•	•	•	Reserved for future use.
10	40711	Reserved	-	0	•	•	•	•	•	Reserved for future use.

Controller Interface Table Parameters

CSP File No.	N18
CIP Instance	11
Applies to	EM2, EM3 only
No. of Elements	8
No. of Words	8
Data Type	Integer
Data Access	Write

Controller Interface Table

Element No.	Modbus Address	Element Name	Default Value	Range	Description
0	40801	Password	0	0...9999	When writing the complete table this parameter allows the input data to be accepted. When writing a single parameter the separate password table should be used. Returns -1 on a read.
1	40802	Controller Command Word	0	0...1	Bit 0 = When this bit is written to the power monitor it signals the end of the demand period. The power monitor resets the bit to 0 and sends the end of demand broadcast to all of the slaves configured for the master/slave demand system. The power monitor must be configured as a Master for external demand pulse input. Bit 1...15 = Reserved
2	40803	Reserved	0	0	Reserved for future use.
3	40804	Reserved	0	0	Reserved for future use.
4	40805	Reserved	0	0	Reserved for future use.
5	40806	Reserved	0	0	Reserved for future use.
6	40807	Reserved	0	0	Reserved for future use.
7	40808	Reserved	0	0	Reserved for future use.

Discrete Results Parameters

CSP File No.	N19
CIP Instance	12
Applies to	All models
No. of Elements	6
No. of Words	6
Data Type	Integer
Data Access	Read

Discrete Results

Element No.	Modbus Address	Element Name	Range	Description
0	30001	Status Input States	0...3	Indicates the current states of the status input. Bit 0 = Status 1 activated Bit 1 = Status 2 activated Bit 2...15 = Reserved
1	30002	Output Word	0...15	Bit 0 = KYZ relay actuated Bit 1 = KYZ output forced on Bit 2 = KYZ output forced off Bit 3 = External demand pulse timeout Bit 4 = Terminal Locked Bit 5...15 = Reserved
2	30003	Reserved	0	Reserved for future use.
3	30004	Reserved	0	Reserved for future use.
4	30005	Reserved	0	Reserved for future use.
5	30006	Reserved	0	Reserved for future use.

Wiring Diagnostics Results Parameters

CSP File No.	F20
CIP Instance	13
No. of Elements	21
No. of Words	42
Data Type	Float
Data Access	Read

Wiring Diagnostics Results

Element No.	Modbus Address	Element Name	Units	Range	TR1	TR2	EM1	EM2	EM3	Description
0	30101-2	Wiring Status		0...5	•	•	•	•	•	This is the overall status of the wiring diagnostic test. 0 = Pass 1 = Failed 2 = Input Level Low 3 = Disabled 4 = Waiting Command 5 = Out of range
1	30103-4	Voltage Input Missing		-1...123	•	•	•	•	•	Reports on all three phases. -1 = Test not run. 0 = Test passed. 1 = Phase 1 missing 2 = Phase 2 missing 3 = Phase 3 missing 12 = Phase 1 and 2 missing 13 = Phase 1 and 3 missing 23 = Phase 2 and 3 missing 123 = All phases missing
2	30105-6	Voltage Input Inverted		-1...123	•	•	•	•	•	Reports on all three phases. -1 = Test not run. 0 = Test passed. 1 = Phase 1 inverted 2 = Phase 2 inverted 3 = Phase 3 inverted 12 = Phase 1 and 2 inverted 13 = Phase 1 and 3 inverted 23 = Phase 2 and 3 inverted 123 = All phases inverted

Wiring Diagnostics Results

Element No.	Modbus Address	Element Name	Units	Range	TR1	TR2	EM1	EM2	EM3	Description
3	30107-8	Current Input Missing		-1...123	•	•	•	•	•	Reports on all three phases. -1 = Test not run. 0 = Test passed. 1 = Phase 1 missing 2 = Phase 2 missing 3 = Phase 3 missing 12 = Phase 1 and 2 missing 13 = Phase 1 and 3 missing 23 = Phase 2 and 3 missing 123 = All phases missing
4	30109-10	Current Input Inverted		-1...123	•	•	•	•	•	Reports on all three phases. -1 = Test not run. 0 = Test passed. 1 = Phase 1 inverted 2 = Phase 2 inverted 3 = Phase 3 inverted 12 = Phase 1 and 2 inverted 13 = Phase 1 and 3 inverted 23 = Phase 2 and 3 inverted 123 = All phases inverted
5	30111-12	Voltage Rotation		-1...132	•	•	•	•	•	Reports on all three phases. The reported sequence represents each phase. Example: 123 = Phase 1 then phase 2 then phase 3 -1 = Test not run 4 = Invalid rotation 1...132 designating phase and rotation.
6	30113-14	Current Rotation		-1...321	•	•	•	•	•	Reports on all three phases. The reported sequence represents each phase. Example: 123 = Phase 1 then phase 2 then phase 3 -1 = Test not run 4 = Invalid rotation 1...321 designating phase and rotation.
7	30115-16	Voltage Phase 1 Angle	Degrees	0...359.99	•	•			•	Shows the present phase angle of this channel. Should always be 0 degrees for voltage phase 1.
8	30117-18	Voltage Phase 1 Magnitude	Volts	0...9,999,999	•	•			•	Shows the present magnitude of this phase.
9	30119-20	Voltage Phase 2 Angle	Degrees	0...359.99	•	•			•	Shows the present phase angle of this channel.
10	30121-22	Voltage Phase 2 Magnitude	Volts	0...9,999,999	•	•			•	Shows the present magnitude of this phase.
11	30123-24	Voltage Phase 3 Angle	Degrees	0...359.99	•	•			•	Shows the present phase angle of this channel.

Wiring Diagnostics Results

Element No.	Modbus Address	Element Name	Units	Range	TR1	TR2	EM1	EM2	EM3	Description
12	30125-26	Voltage Phase 3 Magnitude	Volts	0...9,999,999	•	•			•	Shows the present magnitude of this phase.
13	30127-28	Current Phase 1 Angle	Degrees	0...359.99	•	•			•	Shows the present phase angle of this channel.
14	30129-30	Current Phase 1 Magnitude	Amperes	0...9,999,999	•	•			•	Shows the present magnitude of this phase.
15	30131-32	Current Phase 2 Angle	Degrees	0...359.99	•	•			•	Shows the present phase angle of this channel.
16	30133-34	Current Phase 2 Magnitude	Amperes	0...9,999,999	•	•			•	Shows the present magnitude of this phase.
17	30135-36	Current Phase 3 Angle	Degrees	0...359.99	•	•			•	Shows the present phase angle of this channel.
18	30137-38	Current Phase 3 Magnitude	Amperes	0...9,999,999	•	•			•	Shows the present magnitude of this phase.
19	30139-40	Degrees out of range		0...360	•	•	•	•	•	When Status = 5, how many degrees out of range.
20	30141-42	Reserved		0	•	•	•	•	•	Reserved for future use

Volts, Amps, Frequency Results Parameters

CSP File No.	F21
CIP Instance	14
No. of Elements	16
No. of Words	32
Data Type	Float
Data Access	Read

Volts, Amps, Frequency Results

Element No.	Modbus Address	Element Name	Range	TR1	TR2	EM1	EM2	EM3	Description
0	30201-2	L1 Current	0.000...9,999,999	•	•			•	Phase 1 scaled RMS Current
1	30203-4	L2 Current	0.000...9,999,999	•	•			•	Phase 2 scaled RMS Current
2	30205-6	L3 Current	0.000...9,999,999	•	•			•	Phase 3 scaled RMS Current
3	30207-8	Average Current	0.000...9,999,999	•	•			•	Average RMS Current
4	30209-10	L1-N Volts	0.000...9,999,999	•	•			•	Phase 1 scaled RMS Voltage
5	30211-12	L2-N Volts	0.000...9,999,999	•	•			•	Phase 2 scaled RMS Voltage

Volts, Amps, Frequency Results

Element No.	Modbus Address	Element Name	Range	TR1	TR2	EM1	EM2	EM3	Description
6	30213-14	L3-N Volts	0.000...9,999,999	•	•			•	Phase 3 scaled RMS Voltage
7	30215-16	Average L-N Volts	0.000...9,999,999	•	•			•	Averaged RMS Voltage
8	30217-18	L1-L2 Volts	0.000...9,999,999	•	•			•	Line 1 to Line 2 Volts
9	30219-20	L2-L3 Volts	0.000...9,999,999	•	•			•	Line 2 to Line 3 Volts
10	30221-22	L3-L1 Volts	0.000...9,999,999	•	•			•	Line 3 to Line 1 Volts
11	30223-24	Average L-L Volts	0.000...9,999,999	•	•			•	Average Line to Line Volts
12	30225-26	Frequency	40.0 Hz...70.0 Hz	•	•			•	Last frequency reading.
13	30227-28	Percent Current Unbalance	0.0...100.0	•	•			•	Percent maximum deviation from Ave. / Ave.
14	30229-30	Percent Voltage Unbalance	0.0...100.0	•	•			•	Percent Maximum deviation from Ave. / Ave.
15	30231-32	Metering Iteration	0...9,999,999	•	•			•	Increments by 1 for each new metering calculation.

Power Results Parameters

CSP File No.	F22
CIP Instance	15
No. of Elements	17
No. of Words	34
Data Type	Float
Data Access	Read

Power Results

Element No.	Modbus Address	Element Name	Range	TR1	TR2	EM1	EM2	EM3	Description
0	30301-2	L1 True Power Factor	-100.0...+100.0		•			•	Percent ratio between power and apparent power. The value is signed to (+) leading and (-) lagging.
1	30303-4	L2 True Power Factor	-100.0...+100.0		•			•	
2	30305-6	L3 True Power Factor	-100.0...+100.0		•			•	
3	30307-8	3 Phase True Power Factor	-100.0...+100.0		•			•	
4	30309-10	L1 kWatts	+/- 0.000...9,999,999		•			•	Line 1 kWatts
5	30311-12	L2 kWatts	+/- 0.000...9,999,999		•			•	Line 2 kWatts

Power Results

Element No.	Modbus Address	Element Name	Range	TR1	TR2	EM1	EM2	EM3	Description
6	30313-14	L3 kWatts	+/- 0.000...9,999,999		•			•	Line 3 kWatts
7	30315-16	Total kWatts	+/- 0.000...9,999,999		•			•	Total kWatts
8	30317-18	L1 kVAR	+/- 0.000...9,999,999		•			•	Line 1 kVAR
9	30319-20	L2 kVAR	+/- 0.000...9,999,999		•			•	Line 2 kVAR
10	30321-22	L3 kVAR	+/- 0.000...9,999,999		•			•	Line 3 kVAR
11	30323-24	Total kVAR	+/- 0.000...9,999,999		•			•	Total kVAR
12	30325-26	L1 kVA	0.000...9,999,999		•			•	Line 1 kVA
13	30327-28	L2 kVA	0.000...9,999,999		•			•	Line 2 kVA
14	30329-30	L3 kVA	0.000...9,999,999		•			•	Line 3 kVA
15	30331-32	Total kVA	0.000...9,999,999		•			•	Total kVA
16	30333-34	Metering Iteration	0...9,999,999		•			•	Increments by 1 for each new metering calculation.

IMPORTANT

Only total power values are returned in delta wiring modes. Zeroes are returned for individual phase values.

Energy Results Parameters

CSP File No.	F23
CIP Instance	16
No. of Elements	19
No. of Words	38
Data Type	Float
Data Access	Read

Energy Results

Element No.	Modbus Address	Element Name	Range	TR1	TR2	EM1	EM2	EM3	Description
0	30401-2	Status 1 Count xM	0...9,999,999			•	•	•	Status 1 Count times 1,000,000
1	30403-4	Status 1 Count x1	0...999,999			•	•	•	Status 1 count times 1
2	30405-6	Status 2 Count xM	0...9,999,999			•	•	•	Status 2 Count times 1,000,000
3	30407-8	Status 2 Count x1	0...999,999			•	•	•	Status 2 count times 1

Energy Results

Element No.	Modbus Address	Element Name	Range	TR1	TR2	EM1	EM2	EM3	Description
4	30409-10	GWh Fwd	0...9,999,999			•	•	•	Forward gigawatt hours
5	30411-12	kWatt Fwd	0.000...999,999			•	•	•	Forward kilowatt hours
6	30413-14	GWh Rev.	0...9,999,999			•	•	•	Reverse gigawatt hours
7	30415-16	kWatt Rev.	0.000...999,999			•	•	•	Reverse kilowatt hours
8	30417-18	GWh Net	+/- 0...9,999,999			•	•	•	Net gigawatt hours
9	30419-20	kWatt Net	+/- 0.000...999,999			•	•	•	Net kilowatt hours
10	30421-22	GVARH Fwd	0...9,999,999				•	•	Forward gigaVAR hours
11	30423-24	kVARh Fwd	0.000...999,999				•	•	Forward kiloVAR hours
12	30425-26	GVARH Rev.	0...9,999,999				•	•	Reverse gigaVAR hours
13	30427-28	kVARh Rev.	0.000...999,999				•	•	Reverse kiloVAR hours
14	30429-30	GVARH Net	+/- 0...9,999,999				•	•	Net gigaVAR hours
15	30431-32	kVARh Net	+/- 0.000...999,999				•	•	Net kiloVAR hours
16	30433-34	GVAh Net	0...9,999,999				•	•	Net gigaVA hours
17	30435-36	kVAh	0.000...999,999				•	•	Net kiloVA hours
18	30437-38	Metering Iteration	0...9,999,999			•	•	•	Increments by 1 for each new metering calculation.

Demand Results Parameters

CSP File No.	F24
CIP Instance	17
No. of Elements	9
No. of Words	18
Data Type	Float
Data Access	Read

Demand Results

Element No.	Modbus Address	Element Name	Range	TR1	TR2	EM1	EM2	EM3	Description
0	30501-2	kWatt Demand	+/- 0.000...9,999,999				•	•	The average real power during the last demand period.
1	30503-4	kVAR Demand	+/- 0.000...9,999,999				•	•	The average reactive power during the last demand period.
2	30505-6	kVA Demand	0.000...9,999,999				•	•	The average apparent power during the last demand period.

Demand Results

Element No.	Modbus Address	Element Name	Range	TR1	TR2	EM1	EM2	EM3	Description
3	30507-8	Demand PF	-100.0...+100.0				•	•	The average demand for PF during the last demand period.
4	30509-10	Projected kWatt Demand	+/- 0.000...9,999,999				•	•	The projected total real power for the current period.
5	30511-12	Projected kVAR Demand	+/- 0.000...9,999,999				•	•	The projected total reactive power for the current period.
6	30513-14	Projected kVA Demand	0.000...9,999,999				•	•	The projected total apparent power for the current period.
7	30515-16	Elapsed Demand Period Time	0.00...99.99				•	•	The amount of time that has elapsed during the current period.
8	30517-18	Metering Iteration	0...9,999,999				•	•	Increments by 1 for each new metering calculation.

Unit Status Log Results Parameters

CSP File No.	N25
CIP Instance	18
Applies to	All models
No. of Elements	13
No. of Words	13
Data Type	Integer
Data Access	Read

Unit Status Log Results

Element No.	Modbus Address	Element Name	Range	Description
0	30601	Status Record Internal Identifier	1...50	Used to verify record sequence when returning multiple records.
1	30602	Timestamp Year of record	-	The year when the record was recorded.
2	30603	Timestamp Month/Day	-	The month and day when the record was recorded.
3	30604	Timestamp Hour/Minute	-	The hour and minute when the record was recorded.
4	30605	Timestamp Seconds/Hundredths	-	The seconds and hundredths when the record was recorded.
5	30606	Status Event Type	0...512	Indicates the type of status event that has occurred.
6	30607	General Code	0...4096	Indicates general information about the status event.
7	30608	Information Code	0...256	Indicates specific information about the status event.

Unit Status Log Results

Element No.	Modbus Address	Element Name	Range	Description
8	30609	Reserved	0	Reserved for future use.
9	30610	Reserved	0	Reserved for future use.
10	30611	Reserved	0	Reserved for future use.
11	30612	Reserved	0	Reserved for future use.
12	30613	Reserved	0	Reserved for future use.

Unit Status Log Codes

Status Event Type (Decimal)	Event #	General Code (Decimal)	Code #	Information Code (Decimal)	Code #
Self Test Status	1	Pass	0		
		Flash Memory	1	Overall Status	1
				Boot Code Checksum	2
				Application Code Checksum	4
				Calibration Data CRC	8
				No Calibration Data	16
				Wrong Application FRN	32
				Invalid Model Type	64
				WIN Mismatch	128
				Missing Upgrade Block	256
		SRAM	2	Failed Read/Write Test	1
		NVRAM	4	Failed Read/Write Test	1
		SPI Interface	8	SPI Device Not Responding	1
				SPI Interface Failed	2
		Real Time Clock	16	Real Time Clock Failed	1
				Real Time Clock not Set	2
		Watchdog Timer	32	Watchdog Time Out	1
		Metering	64	Metering Status Failed	1
		LCD Interface	128	LCD Interface Failure	1
		Serial Communications	256	Serial Communication Port Failed	1
		Ethernet Communications	512	Ethernet Communications Port Failed	1
				Modbus Stack Initialization Failed	2
				Demand Broadcast Thread Init Failed	4
				SNTP Thread Init Failed	8
		Input Over Range	1024	Input Over Range Voltage	1
				Input Over Range Current	2
		Voltage Phase Loss	2048	Voltage Channel 1 Loss	1
				Voltage Channel 2 Loss	2
				Voltage Channel 3 Loss	4
		Process Error	4096		

Unit Status Log Codes

Status Event Type (Decimal)	Event #	General Code (Decimal)	Code #	Information Code (Decimal)	Code #
Configuration Changed	2	Clock Set	1		
		Status Input Counter Set	2	Status Input 1	1
				Status Input 2	2
				All Status Input	4
		Factory Defaults Restored	4		
		Energy Register Set	8	Wh Register	1
				VARh Register	2
				VAh Register	4
				All Energy Registers Cleared	8
		Terminal Locked	16		
Terminal Unlocked	32				
Log Cleared or Set	4	Min/Max Log Cleared	1		
		Energy Log Cleared	2		
		LoadFactor Log Cleared	4		
		TOU Log Cleared	8		
KYZ Forced	8	KYZ Forced On	1		
		KYZ Forced Off	2		
Status Input Activated	16	Status Input 1	1		
		Status Input 2	2		
Status Input Deactivated	32	Status Input 1	1		
		Status Input 2	2		
Energy Register Rollover	64	Wh Register	1		
		VARh Register	2		
		VAh Register	4		
		Status Input 1 Register	8		
		Status Input 2 Register	16		
Device Power Up	128				
Device Power Down	256				
Missed External Demand Sync	512				

Energy Log Results Parameters

CSP File No.	F26
CIP Instance	19
No. of Elements	21
No. of Words	42
Data Type	Float
Data Access	Read

Energy Log Results

Element No.	Modbus Address	Element Name	Range	TR1	TR2	EM1	EM2	EM3	Description
0	30701-2	Internal Record Identifier.				•	•	•	
1	30703-4	Timestamp Year of record	-			•	•	•	The date and time when the record was recorded.
2	30705-6	Timestamp Month/Day	-			•	•	•	
3	30707-8	Timestamp Hour/Minute	-			•	•	•	
4	30709-10	Timestamp Seconds/ Hundredths	-			•	•	•	
5	30711-12	Status 1 Count xM	0...9,999,999			•	•	•	Status 1 Count times 1,000,000
6	30713-14	Status 1 Count x1	0...999,999			•	•	•	Status 1 count times 1
7	30715-16	Status 2 Count xM	0...9,999,999			•	•	•	Status 2 Count times 1,000,000
8	30717-18	Status 2 Count x1	0...999,999			•	•	•	Status 2 count times 1
9	30719-20	GWh Net	+/- 0...9,999,999			•	•	•	Net gigawatt hours
10	30721-22	kWatth Net	+/- 0.000...999,999			•	•	•	Net kilowatt hours
11	30723-24	GVARH Net	+/- 0...9,999,999				•	•	Net gigaVAR hours
12	30725-26	kVARh Net	+/- 0.000...999,999				•	•	Net kiloVAR hours
13	30727-28	GVAh Net	0...9,999,999				•	•	Net gigaVA hours
14	30729-30	kVAh Net	0.000...999,999				•	•	Net kiloVA hours
15	30731-32	kWatt Demand	+/- 0.000...9,999,999				•	•	The average real power during the last demand period.
16	30733-34	kVAR Demand	+/- 0.000...9,999,999				•	•	The average reactive power during the last demand period.

Energy Log Results

Element No.	Modbus Address	Element Name	Range	TR1	TR2	EM1	EM2	EM3	Description
17	30735-36	kVA Demand	0.000...9,999,999				•	•	The average apparent power during the last demand period.
18	30737-38	Demand PF	-100.0...+100.0				•	•	The average demand for PF during the last demand period.
19	30739-40	Reserved	0				•	•	Reserved for future use.
20	30741-42	Reserved	0				•	•	Reserved for future use.

Write Error Status Results Parameters

CSP File No.	N27
CIP Instance	20
Applies to	All Models
No. of Elements	3
No. of Words	3
Data Type	Integer
Data Access	Read

Write Error Status Results

Element No.	Modbus Address	Element Name	Range	Description
0	30801	Table Number or Instance	All Write Enabled Tables	Indicates the last table that was written.
1	30802	Offending Element	Length of current table - 1	If the most recent write was successful this returns a (-1). If the write was unsuccessful this is the first rejected element in the table write.
2	30803	Terminal Lock On	0...1	If a write was made to a table that has elements that are locked this value is 1.

Unit Run Status Results Parameters

CSP File No.	N28
CIP Instance	21
Applies to	All models
No. of Elements	25
No. of Words	25
Data Type	Integer
Data Access	Read

Unit Run Status Results

Element No.	Modbus Address	Element Name	Range	Description
0	30901	Bulletin Number	1408	Always returns 1408
1	30902	Series Letter	0...8	Indicates the unit hardware series letter, for example. 0 = A 1 = B . . 8 = H
2	30903	Catalog Device Type	0...4	The catalog number type of this device. 0 = TR1 1 = TR2 2 = EM1 3 = EM2 4 = EM3
3	30904	Communication Type	0...1	The communication type of this device 0 = Serial only 1 = both serial and Ethernet
4	30905	Application FRN	-	The current firmware revision
5	30906	Boot Code FRN	-	The current boot code revision
6	30907	Default Device ID	1...247	A semi-unique number assigned to a device at the time it is manufactured. Used for out of the box communications over DF1 and Ethernet.
7	30908	Accuracy Class	0...3	Indicates the revenue metering accuracy class of the power monitor as it is shipped from the factory. 0 = No Class Designation 1 = Class 1 2 = Class 0.5 3 = Class 0.2

Unit Run Status Results

Element No.	Modbus Address	Element Name	Range	Description
8	30909	Overall Status	0...16383	0 indicates normal operation. Each bit indicates a different fault condition. Bit 0 = Flash Memory Bit 1 = SRAM Bit 2 = NVRAM Bit 3 = SPI Interface Bit 4 = Real Time Clock Bit 5 = Watchdog Timer Bit 6 = Metering Bit 7 = LCD Interface Bit 8 = Serial Communications Bit 9 = Ethernet Communications Bit 10 = Error Log Full
9	30910	Flash Memory	0...511	0 indicates normal operation. Status bits are Bit 0 = Overall status Bit 1 = Boot code checksum Bit 2 = Application code checksum Bit 3 = Calibration data CRC Bit 4 = No calibration data Bit 5 = Wrong application FRN Bit 6 = Invalid model type Bit 7 = WIN mismatch Bit 8 = missing upgrade block
10	30911	SRAM	0...1	0 indicates normal operation. Bit 0 = Read/write test
11	30912	NVRAM	0...1	0 indicates normal operation. Bit 0 = Read/write test
12	30913	SPI Interface	0...1	0 indicates normal operation. Bit 0 = SPI device not responding
13	30914	Real Time Clock	0...3	0 indicates normal operation. Bit 0 = RTC status Bit 1 = Time Zone Set Failed
14	30915	Watchdog Timer	0...1	0 indicates normal operation. Bit 0 = Watchdog time out
15	30916	Metering	0...1	0 indicates normal operation. Bit 0 = Metering status
16	30917	LCD Interface	0...1	0 indicates normal operation. Bit 0 = LCD Interface status
17	30918	Serial Communications	0...1	0 indicates normal operation. Bit 0 = Serial Interface status

Unit Run Status Results

Element No.	Modbus Address	Element Name	Range	Description
18	30919	Ethernet Communications	0...511	0 indicates normal operation. Bit 0 = Ethernet Communications status Bit 1 = SNTP Server timeout status Bit 2 = Duplicate IP Address status Bit 3 = Invalid IP/Netmask address Bit 4 = Invalid gateway address Bit 5 = Invalid SNTP time server address Bit 6 = Modbus stack run status Bit 7 = Demand broadcast thread run status Bit 8 = SNTP thread run status
19	30920	Input Over Range	0...3	0 indicates normal operation. Bit 0 = Voltage Input over range Bit 1 = Current Input over range
20	30921	Phase Loss Detection	0...7	0 Indicates normal running condition. Bit 0 = Loss of phase A Bit 1 = Loss of phase B Bit 2 = Loss of phase C
21	30922	Configuration Locked	0...1	Reports 1 if configuration lock is applied.
22	30923	Password Accepted	0...1	1 indicates the password is verified and active
23	30924	Error Recorded	0	Is incremented by 1 when an internal error happens
24	30925	Troubleshooting Times Remaining	0...30	Remaining times for troubleshooting mode.

Min/Max Log Results Parameters

CSP File No.	F29
CIP Instance	22
No. of Elements	11
No. of Words	22
Data Type	Float
Data Access	Read

Min/Max Log Results

Element No.	Modbus Address	Element Name	Range	TR1	TR2	EM1	EM2	EM3	Description
0	31001-2	Parameter Being Returned	1...35	•	•			•	Indicates the Parameter Number (See Min/Max Parameter List).
1	31003-4	MIN Value	+/- 0.000...9,999 ,999	•	•			•	The minimum value recorded for parameter being returned since the last clear command.
2	31005-6	MAX Value	+/- 0.000...9,999 ,999	•	•			•	The maximum value recorded for parameter being returned since the last clear command.
3	31007-8	Timestamp Year of MIN		•	•			•	The year when the MIN value was recorded.
4	31009-10	Timestamp Month/Day of MIN		•	•			•	The month and day when the MIN value was recorded.
5	31011-12	Timestamp Hour/Minute of MIN		•	•			•	The hour and minute when the MIN value was recorded.
6	31013-14	Timestamp Seconds/Hundredths of MIN		•	•			•	The seconds and hundredths when the MIN value was recorded.
7	31015-16	Timestamp Year of MAX		•	•			•	The year when the MAX value was recorded.
8	31017-18	Timestamp Month/Day of MAX		•	•			•	The month and day when the MAX value was recorded.
9	31019-20	Timestamp Hour/Minute of MAX		•	•			•	The hour and minute when the MAX value was recorded.
10	31021-22	Timestamp Seconds/Hundredths of MAX		•	•			•	The seconds and hundredths when the MAX value was recorded.

Min/Max Parameter List

No.	Parameter	TR1	TR2	EM3
1	L1 Current	•	•	•
2	L2 Current	•	•	•
3	L3 Current	•	•	•
4	Average Current	•	•	•
5	L1-N Volts	•	•	•
6	L2-N Volts	•	•	•
7	L3-N Volts	•	•	•
8	Average L-N Volts	•	•	•
9	L1-L2 Volts	•	•	•
10	L2-L3 Volts	•	•	•
11	L3-L1 Volts	•	•	•
12	Average L-L Volts	•	•	•
13	Frequency	•	•	•
14	Percent Current Unbalance	•	•	•
15	Percent Voltage Unbalance	•	•	•
16	L1 True Power Factor		•	•
17	L2 True Power Factor		•	•
18	L3 True Power Factor		•	•
19	3 Phase True Power Factor		•	•
20	L1 kWatts		•	•
21	L2 kWatts		•	•
22	L3 kWatts		•	•
23	Total kWatts		•	•
24	L1 kVAR		•	•
25	L2 kVAR		•	•
26	L3 kVAR		•	•
27	Total kVAR		•	•
28	L1 kVA		•	•
29	L2 kVA		•	•
30	L3 kVA		•	•
31	Total kVA		•	•
32	kWatt Demand			•

Min/Max Parameter List

No.	Parameter	TR1	TR2	EM3
33	kVAR Demand			•
34	kVA Demand			•
35	PF Demand			•

Load Factor Log Results Parameters

CSP File No.	F30
CIP Instance	23
No. of Elements	14
No. of Words	28
Data Type	Float
Data Access	Read

Load Factor Log Results

Element No.	Modbus Address	Element Name	Range	TR1	TR2	EM1	EM2	EM3	Description
0	31101-2	Record Number	1...13				•	•	The record number of this data.
1	31103-4	End Date yy/mm/dd	-				•	•	The date that this record was stored.
2	31105-6	Elapsed Time	0.000... 9,999,999				•	•	Amount of time (in hours) that has elapsed since the last clear of the peak and average values. Updated at the end of each demand interval.
3	31107-8	Peak Demand kWatts	+/- 0.000...9,999, 999				•	•	The largest magnitude demand for kwatts that occurred over all of the demand intervals since the last clear command or auto-clear day.
4	31109-10	Average Demand kWatts	+/- 0.000...9,999, 999				•	•	A running average of demand for kwatts from the end of each demand period since the last clear command or auto-clear day.
5	31111-12	Load Factor kWatts	0...100%				•	•	Average Demand kW / Peak Demand kW. This is a demand management metric that indicates how 'spiky' (or 'level') a load is over a period of time (usually 1 month). A value approaching 100% indicates a constant load.

Load Factor Log Results

Element No.	Modbus Address	Element Name	Range	TR1	TR2	EM1	EM2	EM3	Description
6	31113-14	Peak Demand kVAR	+/- 0.000... 9,999,999				•	•	The largest magnitude demand for kVAR that occurred over all of the demand intervals since the last clear command or auto-clear day.
7	31115-16	Average Demand kVAR	+/- 0.000... 9,999,999				•	•	A running average of demand for kVAR from the end of each demand period since the last clear command or auto-clear day.
8	31117-18	Load Factor kVAR	0...100%				•	•	Average Demand kVAR / Peak Demand kVAR. This is a demand management metric that indicates how 'spiky' (or 'level') a load is over a period of time (usually 1 month). A value approaching 100% indicates a constant load.
9	31119-20	Peak Demand kVA	0.000... 9,999,999				•	•	The largest magnitude demand for kVA that occurred over all of the demand intervals since the last clear command or auto-clear day.
10	31121-22	Average Demand kVA	0.000... 9,999,999				•	•	A running average of demand for kVA from the end of each demand period since the last clear command or auto-clear day.
11	31123-24	Load Factor kVA	0...100%				•	•	Average Demand kVA / Peak Demand kVA. This is a demand management metric that indicates how 'spiky' (or 'level') a load is over a period of time (usually 1 month). A value approaching 100% indicates a constant load.
12	31125-26	Reserved	0				•	•	Reserved for Future Use
13	31127-28	Reserved	0				•	•	Reserved for Future Use

Time of Use Log Results - Real Energy and Demand Parameters

CSP File No.	F31
CIP Instance	24
No. of Elements	12
No. of Words	24
Data Type	Float
Data Access	Read

Time of Use Log Results - Real Energy and Demand

Element No.	Modbus Address	Element Name	Range	TR1	TR2	EM1	EM2	EM3	Description
0	31201-2	Record Number	1...13			•	•	•	The record number of the log. Record 0 is always the current record before being logged.
1	31203-4	Time Stamp Start Date (yy/mm/dd)	-			•	•	•	The Date this record was started.
2	31205-6	Time Stamp End Date (yy/mm/dd)	-			•	•	•	The Date this record was ended.
3	31207-8	Off Peak GWh Net	+/- 0... 9,999,999			•	•	•	Net Off Peak giga watt hours
4	31209-10	Off Peak kWh Net	+/- 0.000... 999,999			•	•	•	Net Off Peak kilo watt hours
5	31211-12	Off Peak kW Demand	+/- 0.000... 9,999,999			•	•	•	Off Peak Demand for kilo watts
6	31213-14	Mid Peak GWh Net	+/- 0... 9,999,999			•	•	•	Net Mid Peak giga watt hours
7	31215-16	Mid Peak kWh Net	+/- 0.000... 999,999			•	•	•	Net Mid Peak kilowatt hours
8	31217-18	Mid Peak kW Demand	+/- 0.000... 9,999,999			•	•	•	Mid Peak Demand for kilo watts
9	31219-20	On Peak GWh Net	+/- 0.000... 9,999,999			•	•	•	Net On Peak giga watt hours
10	31221-22	On Peak kWh Net	+/- 0... 999,999			•	•	•	Net On Peak kilo watt hours
11	31223-24	On Peak kW Demand	+/- 0.000... 9,999,999			•	•	•	On Peak Demand for kilo watts

Time of Use Log Results - Reactive Energy and Demand Parameters

CSP File No.	F32
CIP Instance	25
No. of Elements	12
No. of Words	24
Data Type	Float
Data Access	Read

Time of Use Log Results - Reactive Energy and Demand

Element No.	Modbus Address	Element Name	Range	TR1	TR2	EM1	EM2	EM3	Description
0	31301-2	Record Number	1...13			•	•	•	The record number of the log. Record 0 is always the current record before being logged.
1	31303-4	Time Stamp Start Date (yy/mm/dd)	-			•	•	•	The Date this record was started.
2	31305-6	Time Stamp End Date (yy/mm/dd)	-			•	•	•	The Date this record was ended.
3	31307-8	Off Peak GVARH Net	+/- 0...9,999,999			•	•	•	Net Off peak giga VAR hours
4	31309-10	Off Peak kVARh Net	+/- 0.000...999,999			•	•	•	Net Off Peak kilo VAR hours
5	31311-12	Off Peak kVAR Demand	+/- 0.000...9,999,999			•	•	•	Off Peak Demand for kilo VAR
6	31313-14	Mid Peak GVARH Net	+/- 0...9,999,999			•	•	•	Net Mid Peak giga VAR hours
7	31315-16	Mid Peak kVARh Net	+/- 0.000...999,999			•	•	•	Net Mid Peak kilo VAR hours
8	31317-18	Mid Peak kVAR Demand	+/- 0.000...9,999,999			•	•	•	Mid Peak Demand for kilo VAR
9	31319-20	On Peak GVARH Net	+/- 0.000...9,999,999			•	•	•	Net On Peak giga VAR hours
10	31321-22	On Peak kVARh Net	+/- 0...999,999			•	•	•	Net On Peak kilo VAR hours
11	31323-24	On Peak kVAR Demand	+/- 0.000...9,999,999				•	•	On Peak Demand for kilo VAR

Time of Use Log Results - Apparent Energy and Demand Parameters

CSP File No.	F33
CIP Instance	26
No. of Elements	12
No. of Words	24
Data Type	Float
Data Access	Read

Time of Use Log Results - Apparent Energy and Demand

Element No.	Modbus Address	Element Name	Range							Description
				TR1	TR2	EM1	EM2	EM3		
0	31401-2	Record Number	1...13			•	•	•	The record number of the log. Record 0 is always the current record before being logged.	
1	31403-4	Time Stamp Start Date (yy/mm/dd)	-			•	•	•	The Date this record was started.	
2	31405-6	Time Stamp End Date (yy/mm/dd)	-			•	•	•	The Date this record was ended.	
3	31407-8	Off Peak GVAh Net	+/- 0... 9,999,999			•	•	•	Net Off peak giga VA hours	
4	31409-10	Off Peak kVAh Net	+/- 0.000... 999,999			•	•	•	Net Off Peak kilo VA hours	
5	31411-12	Off Peak kVA Demand	+/- 0.000... 9,999,999			•	•	•	Off Peak Demand for kilo VA	
6	31413-14	Mid Peak GVAh Net	+/- 0... 9,999,999			•	•	•	Net Mid Peak giga VA hours	
7	31415-16	Mid Peak kVAh Net	+/- 0.000... 999,999			•	•	•	Net Mid Peak kilo VA hours	
8	31417-18	Mid Peak kVA Demand	+/- 0.000... 9,999,999			•	•	•	Mid Peak Demand for kilo VA	
9	31419-20	On Peak GVAh Net	+/- 0.000... 9,999,999			•	•	•	Net On Peak giga VA hours	
10	31421-22	On Peak kVAh Net	+/- 0... 999,999			•	•	•	Net On Peak kilo VA hours	
11	31423-24	On Peak kVA Demand	+/- 0.000... 9,999,999				•	•	On Peak Demand for kilo VA	

Catalog Number and WIN Parameters

CSP File No.	N34
CIP Instance	27
Applies to	All models
No. of Elements	19
No. of Words	19
Data Type	Integer
Data Access	Read

Catalog Number and WIN

Element No.	Modbus Address	Element Name	Range	Description
0	31501	Catalog # text char pair #1	0...32767	Contains the product number (example: 1408-EM3A-485A, but with out the dashes). A read of this table returns the catalog # as 4 integers: each integer contains a character pair. For each character pair, character 1=integer/256 and character 2 = remainder of integer/256.
1	31502	Catalog # text char pair #2		
2	31503	Catalog # text char pair #3		
3	31504	Catalog # text char pair #4		
4	31505	Catalog # text char pair #4		
5	31506	Catalog # text char pair #4		
6	31507	Reserved	0	Reserved for future use.
7	31508	Hardware Series	0...25	Indicates the product series letter. For example, 0=A, 1=B,
8	31509	WIN # text char pair #1	0...32767	Contains the product WIN(Warranty Identification Number). This is the same alpha-numeric string that can be found on the master module label (example: 21AW0AT5H0). 5 integers each contains two characters as displayed by the Catalog parameter method.
9	31510	WIN # text char pair #2		
10	31511	WIN# text char pair #3		
11	31512	WIN# text char pair #4		
12	31513	WIN# text char pair #5		
13	31514	Reserved	0	Reserved for future use.
14	31515	Reserved	0	Reserved for future use.
15	31516	Original Model	0...10	This number represents the catalog number type. 0 = TR1 1 = TR2 2 = EM1 3 = EM2 4 = EM3 5 through 10 = Reserved

Catalog Number and WIN

Element No.	Modbus Address	Element Name	Range	Description
16	31517	Current Model	0...10	The current model of the product. This can be the same as the original model (if no upgrades have been performed).
17	31518	Reserved	0	Reserved for future use.
18	31519	Reserved	0	Reserved for future use.

Single Element Password Write Parameters

CSP File No.	N35
CIP Instance	28
Applies to	All models
No. of Elements	1
No. of Words	1
Data Type	Integer
Data Access	Write

Single Element Password Write

Element No.	Modbus Address	Element Name	Range	Description
0	40901	Password	0...9999	A write of this table allows any configuration parameter to be written as a single element or poke. The password stays active for 30 minutes and resets to another 30 minutes when a single element is configured.

User Configurable Table Setup Parameters

CSP File No.	N36
CIP Instance	29
Applies to	EM3 only
No. of Elements	17
No. of Words	17
Data Type	Integer
Data Access	Read/Write

User Configured Table Setup

Element No.	Modbus Address	Element Name	Default Value	Range	Description
0	41001	Password	0	0...9999	Required for configuration, returns -1.
1	41002	Selection for Parameter #1	29 (L1 Current)	0...110	
2	41003	Selection for Parameter #2	30 (L2 Current)		
3	41004	Selection for Parameter #3	31 (L3 Current)		
4	41005	Selection for Parameter #4	37 (L1-L2 Voltage)		
5	41006	Selection for Parameter #5	38 (L2-L3 Voltage)		
6	41007	Selection for Parameter #6	39 (L3-L1 Voltage)		
7	41008	Selection for Parameter #7	41 (Frequency)		
8	41009	Selection for Parameter #8	52 (Total Real Power)		
9	41010	Selection for Parameter #9	56 (Total Reactive Power)		
10	41011	Selection for Parameter #10	60 (Total Apparent Power)		
11	41012	Selection for Parameter #11	48 (3 Phase True Power Factor)		
12	41013	Selection for Parameter #12	70 (Real Energy Net (kWh))		
13	41014	Selection for Parameter #13	62 (Status 1 Count x1)		
14	41015	Selection for Parameter #14	64 (Status 2 Count x1)		
15	41016	Selection for Parameter #15	79 (Real Power Demand)		
16	41017	Selection for Parameter #16	8 (Status Input States)		

Parameters for Configurable Table

Parameter No.	Parameter Name	Description
0	None	No Parameter.
1	Date: Year	Refer to Date and Time Configuration table.
2	Date: Month	
3	Date: Day	
4	Time: Hour	
5	Time: Minute	
6	Time: Seconds	
7	Time: Hundredths	
8	Status Input States	Refer to Discrete Results table.
9	Output Word	
10	Wiring Status	Refer to Wiring Diagnostics Results table.
11	Voltage Input Missing	
12	Voltage Input Inverted	
13	Current Input Missing	
14	Current Input Inverted	
15	Voltage Rotation	
16	Current Rotation	
17	Voltage Phase 1 Angle	
18	Voltage Phase 1 Magnitude	
19	Voltage Phase 2 Angle	
20	Voltage Phase 2 Magnitude	
21	Voltage Phase 3 Angle	
22	Voltage Phase 3 Magnitude	
23	Current Phase 1 Angle	
24	Current Phase 1 Magnitude	
25	Current Phase 2 Angle	
26	Current Phase 2 Magnitude	
27	Current Phase 3 Angle	
28	Current Phase 3 Magnitude	
29	L1 Current	Refer to Volts, Amps, Frequency Results table.
30	L2 Current	
31	L3 Current	
32	Average Current	
33	L1-N Volts	

Parameters for Configurable Table

Parameter No.	Parameter Name	Description	
34	L2-N Volts	Refer to Volts, Amps, Frequency Results table.	
35	L3-N Volts		
36	Average L-N Volts		
37	L1-L2 Volts		
38	L2-L3 Volts		
39	L3-L1 Volts		
40	Average L-L Volts		
41	Frequency		
42	Percent Current Unbalance		
43	Percent Voltage Unbalance		
44	Metering Iteration		
45	L1 True Power Factor		Refer to Power Results table.
46	L2 True Power Factor		
47	L3 True Power Factor		
48	3 Phase True Power Factor		
49	L1 kWatts		
50	L2 kWatts		
51	L3 kWatts		
52	Total kWatts		
53	L1 kVAR		
54	L2 kVAR		
55	L3 kVAR		
56	Total kVAR		
57	L1 kVA		
58	L2 kVA		
59	L3 kVA		
60	Total kVA		
61	Status 1 Count xM	Refer to Energy Results table.	
62	Status 1 Count x1		
63	Status 2 Count xM		
64	Status 2 Count x1		
65	GWh Fwd		
66	kWatth Fwd		
67	GWh Rev.		
68	kWatth Rev.		
69	GWh Net		

Parameters for Configurable Table

Parameter No.	Parameter Name	Description
70	kWatt Net	Refer to Energy Results table.
71	GVARH Fwd	
72	kVARh Fwd	
73	GVARH Rev.	
74	kVARh Rev.	
75	GVARH Net	
76	kVARh Net	
77	GVAh Net	
78	kVAh	
79	kWatt Demand	
80	kVAR Demand	
81	kVA Demand	
82	Demand PF	
83	Projected kWatt Demand	
84	Projected kVAR Demand	
85	Projected kVA Demand	
86	Elapsed Demand Period Time	
87	Bulletin Number	Refer to Unit Run Status Results table.
88	Series Letter	
89	Catalog Device Type	
90	Communication Type	
91	Application FRN	
92	Boot Code FRN	
93	Default Device ID	
94	Accuracy Class	
95	Overall Status	
96	Flash Memory	
97	SRAM	
98	NVRAM	
99	SPI Interface	
100	Real Time Clock	
101	Watchdog Timer	
102	Metering	
103	LCD Interface	
104	Serial Communications	
105	Ethernet Communications	

Parameters for Configurable Table

Parameter No.	Parameter Name	Description
■ 106	Input Over Range	Refer to Unit Run Status Results table.
■ 107	Phase Loss Detection	
■ 108	Terminal Locked	
■ 109	Password Accepted	
■ 110	Error Recorded	

A

- additional resources** 7
- advanced configuration** 47
- analog input configuration** 45, 46, 92

B

- before you begin** 7

C

- catalog number and WIN** 90
- command table** 61
- communications command summary**
 - 15
 - DH485 15
 - Modbus RTU serial 16
 - optional EtherNet/IP 15
 - optional Modbus/TCP Ethernet 16
 - serial DF1 full-duplex slave 15
 - serial DF1 half-duplex slave 15
- communications overview**
 - 10
 - ethernet 11
 - serial 10
- controller interface table** 66

D

- data and time configuration** 57
- data table**
 - access 13
 - addressing 13
 - data format 14
- data tables** 43
 - advanced configuration 47
 - analog input configuration 45, 46, 92
 - catalog number and WIN 90
 - command table 61
 - controller interface table 66
 - data and time configuration 57
 - demand results 73
 - discrete results 67
 - energy log results 78
 - energy results 72
 - ethernet configuration 52
 - load factor log results 85
 - log configuration 58
 - log request table 64
 - min/max log results 83
 - min/max parameter list 84
 - power results 71
 - serial RS-485 configuration 51

- single element password write 91
- time of use log results apparent energy and demand 89
- time of use log results reactive energy and demand 88
- time of use log results real energy and demand 87
- unit run status results 80
- unit status log results 74
- volts, amps, frequency results 70
- wiring diagnostics results 68
- write error status results 79

demand results 73

discrete results 67

E

- energy log results** 78
- energy results** 72
- ethernet communications** 11
 - EtherNet/IP protocol 12
 - Modbus TCP Protocol 12
- ethernet configuration** 52
- explicit messaging** 17
 - read write single or multiple elements 17
 - RSLogix5 message setup PLC5 or SLC typed read write 26
 - RSLogix500 message setup PLC5 or SLC typed read write 23
 - RSLogix5000 message configuration PLC5 or SLC typed read write 18
 - RSLogix5000 message setup CIP generic 20
 - setup 17

L

- load factor log results** 85
- log configuration** 58
- log request table** 64

M

- memory organization** 13
- min/max log results** 83
- min/max parameter list** 84

O

- overview** 9

P

- power results** 71

R

- reading logs** 29
 - log data table methodology 29
- RSLinx drivers configuration** 33
 - DF1 full-duplex 34
 - DF1 half-duplex slave 33
 - EtherNet/IP devices driver 35
 - EtherNet/IP EtherNet/IP drivers 35
- RSLinx OPC server setup** 35
 - OPC topic 35

S

- safety** 9
- SCADA applications** 33
- serial communications** 10
- serial RS-485 port configuration** 51
- single element password write** 91

T

- time of use log results apparent energy and demand** 89
- time of use log results reactive energy and demand** 88
- time of use log results real energy and demand** 87
- time zone information** 54

U

- unit run status results** 80
- unit status log results** 74
- using communications** 10

V

- volts, amps, frequency results** 70

W

- wiring diagnostics results** 68
- write error status results** 79

Rockwell Automation Support

Rockwell Automation provides technical information on the Web to assist you in using its products. At <http://support.rockwellautomation.com>, you can find technical manuals, a knowledge base of FAQs, technical and application notes, sample code and links to software service packs, and a MySupport feature that you can customize to make the best use of these tools.

For an additional level of technical phone support for installation, configuration, and troubleshooting, we offer TechConnect support programs. For more information, contact your local distributor or Rockwell Automation representative, or visit <http://support.rockwellautomation.com>.

Installation Assistance

If you experience a problem within the first 24 hours of installation, please review the information that's contained in this manual. You can also contact a special Customer Support number for initial help in getting your product up and running.

United States	1.440.646.3434 Monday – Friday, 8am – 5pm EST
Outside United States	Please contact your local Rockwell Automation representative for any technical support issues.

New Product Satisfaction Return

Rockwell Automation tests all of its products to ensure that they are fully operational when shipped from the manufacturing facility. However, if your product is not functioning and needs to be returned, follow these procedures.

United States	Contact your distributor. You must provide a Customer Support case number (call the phone number above to obtain one) to your distributor in order to complete the return process.
Outside United States	Please contact your local Rockwell Automation representative for the return procedure.

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846