

**DLA-DNA1982-85-90**

**PTZ Domes**



## Installation and Operations Manual

Model Number: DLA1982 and DLA1985 Analog PTZ Domes

DNA1982, DNA1985 DNA1990 IP PTZ Domes

Description: Analog D1 PTZ Domes

IP D1 and MP PTZ Domes

18x, 20, 28x, 36x Optical Zoom

---

# Table of Contents

|            |                                        |          |
|------------|----------------------------------------|----------|
| <b>1</b>   | <b>FEATURES AND FUNCTIONS .....</b>    | <b>1</b> |
| <b>1.1</b> | <b>General Introduction .....</b>      | <b>1</b> |
| <b>1.2</b> | <b>Features.....</b>                   | <b>1</b> |
| 1.2.1      | On-Screen Menu .....                   | 1        |
| 1.2.2      | Support multiple protocols .....       | 1        |
| 1.2.3      | Proportional Pan and Tilt.....         | 1        |
| 1.2.4      | On-screen Tips .....                   | 1        |
| 1.2.5      | Preset Setup and Call .....            | 1        |
| 1.2.6      | Auto Scan.....                         | 1        |
| 1.2.7      | Auto Touring.....                      | 1        |
| 1.2.8      | Auto Pattern .....                     | 1        |
| 1.2.9      | Privacy Masking.....                   | 1        |
| 1.2.10     | Action on Alarm .....                  | 2        |
| 1.2.11     | Auto Flip.....                         | 2        |
| 1.2.12     | Self-diagnosis.....                    | 2        |
| 1.2.13     | Day/Night Mode (B/W & Color Mode)..... | 2        |
| 1.2.14     | Auto Focus.....                        | 2        |
| 1.2.15     | Backlight Compensation.....            | 2        |
| 1.2.16     | Pan Tilt and Zoom.....                 | 2        |
| 1.2.17     | 3D Intelligent Location .....          | 2        |
| 1.2.18     | Idle Status.....                       | 2        |
| 1.2.19     | Image Stabilizer/Flip .....            | 2        |
| <b>1.3</b> | <b>Specifications .....</b>            | <b>3</b> |
| 1.3.1      | Performance Specifications .....       | 3        |
| 1.3.2      | Technical Specifications.....          | 3        |
| <b>2</b>   | <b>QUICK CONFIGURATION TOOL .....</b>  | <b>5</b> |
| <b>2.1</b> | <b>Overview.....</b>                   | <b>5</b> |
| <b>2.2</b> | <b>Operation .....</b>                 | <b>5</b> |

---

|          |                                                                 |           |
|----------|-----------------------------------------------------------------|-----------|
| <b>3</b> | <b>WEB OPERATION .....</b>                                      | <b>8</b>  |
| 3.1      | Network Connection.....                                         | 8         |
| 3.2      | Login and Logout.....                                           | 8         |
| <b>4</b> | <b>MENU .....</b>                                               | <b>11</b> |
| 4.1      | Screen Menu Index .....                                         | 11        |
| 4.2      | Self-diagnosis System Information .....                         | 12        |
| 4.3      | Main Menu .....                                                 | 12        |
| 4.4      | Menu Operation .....                                            | 12        |
| 4.4.1    | System Information.....                                         | 13        |
| 4.4.2    | Display Setting.....                                            | 14        |
| 4.4.3    | Camera Setting.....                                             | 14        |
| 4.4.4    | Function Setting.....                                           | 19        |
| 4.5      | Dome Abnormal Phenomenon Operation.....                         | 26        |
| 4.5.1    | Restore to Factory Default Setup .....                          | 26        |
| 4.5.2    | PTZ Movement is not smooth.....                                 | 27        |
| <b>5</b> | <b>CABLE CONNECTION.....</b>                                    | <b>28</b> |
| 5.1      | System Layout.....                                              | 28        |
| 5.1.1    | System Connection .....                                         | 28        |
| 5.1.2    | Alarm Connection .....                                          | 29        |
| 6.1      | Daily Maintenance.....                                          | 30        |
| 6.2      | Problems and Solutions .....                                    | 30        |
| <b>7</b> | <b>APPENDIX I LIGHTNING PROOF AND SURGE PROTECTION.....</b>     | <b>31</b> |
| <b>8</b> | <b>APPENDIX 2 TOXIC OR HAZARDOUS MATERIALS OR ELEMENTS.....</b> | <b>32</b> |

---

---

## Welcome

Thank you for purchasing our product!

This user's manual is designed to be a reference tool for the operation of your system.

Here you can find information about this speed dome features and functions, as well as a detailed menu tree.

Please keep it well for future reference!

**Before installation and operation, please read the following safeguards and warnings carefully!**

---

# Important Safeguards and Warnings

## 1 . Electrical safety

- All installation and operation here should conform to your local electrical safety codes.
- The power shall conform to the requirement in the SELV (Safety Extra Low Voltage) and the Limited power source is rated 24V AC in the IEC60950-1.
- We assume no liability or responsibility for all the fires or electrical shock caused by improper handling or installation.
- We are not liable for any problems caused by unauthorized modification or attempted repair.

## 2 . Transportation Security

- No heavy stress, violent vibration or water splash are allowed during transportation, storage and installation.
- Please use the original packing material (or the material of the same quality) when you ship it back to the manufacturer.

## 3 . Installation

- Do not apply power to the product before completing installation.
- Do not put object on the product.

## 4 . Environment

- This series product should be installed in a cool, dry place away from direct sunlight, inflammable, explosive substances and etc.
- Please keep it away from the electromagnetic radiation object and environment.
- Please keep the sound ventilation.
- Do not allow the water and other liquid falling into the device.
- Please make sure the CCD (CMOS) component is out of the radiation of the laser beam device. Otherwise it may result in CCD (CMOS) optical component damage.

## 5. Daily Maintenance

- Current series product has no power button. Please unplug all corresponding power cables before your begin installation or daily maintenance work.
- Please keep the dustproof cap back to protect the CCD or CMOS part if the device does not work for a long time.
- Do not touch CCD (CMOS) component. You can use the blower to clean the dust on the surface of the device. You can use the dry cloth with some alcohol or mild detergent to clear if necessary.
- Do not use the volatility solvent such as the benzene or thinner, or detergent with strong abrasion. It may result in lens damage or it may adversely affect the device performance.
- If there is too much dust, please use the water to dilute the mild detergent first and then use it to clean the device. Finally use the dry cloth to clean the device

---

## **6. About Accessories**

Always use all the accessories recommended by manufacturer.

Before installation, please open the package and check that all the components are included in the package:

Contact you local retailer ASAP if something is missing in your package.

---

# 1 Features and Functions

## 1.1 General Introduction

The six-inch megapixel high speed smart network dome camera integrates the functions of network-based remote surveillance and integrated high-speed smart dome, which makes it convenient to install and easy to use. This product enjoys a megapixel resolution, which meets the customers' needs for surveillance at HD level. This product is also qualified with intelligent identification ability, privacy masking settings, alarm activation, WDR and some other functions. In addition, one can transmit audio/video and control data via internet in a safe way. Thus, the surveillance is free from the restriction caused by the changes of time and places to realize a real-time surveillance. With the built-in high-speed PTZ, this product can realize a fast, accurate fixed-positioning surveillance in a convenient way.

## 1.2 Features

This series speed dome has the following features:

### 1.2.1 On-Screen Menu

This series product menu supports multiple languages.

It is easy for you to view dome information and configure dome, camera parameters.

### 1.2.2 Support multiple protocols

You can use various devices (such as matrix, control keyboard and DVR) and protocols to operate speed dome.

### 1.2.3 Proportional Pan and Tilt

This function keeps the image from moving too fast when there is a large amount of zoom.

The quick-installed high definition speed dome continually decreases or increases pan and tilt speeds in proportion to depth of zoom. When zooms speed is increasing, the camera moving speed becomes slow. When zooms speed is decreasing, the camera moving speed becomes fast.

### 1.2.4 On-screen Tips

Here you can view:

- Dome title and system version (Software and hardware)
- Dome system temperature. (Optional. You can disable this function)
- Dome pan/tilt coordinates, preset ID.

### 1.2.5 Preset Setup and Call

Preset function is to save the address information (such as PTZ pan/tilt, focus and etc) to the memory so that you can quickly adjust the dome and PTZ to the correct position. This series quick-installed high definition speed dome supports 255 presets.

### 1.2.6 Auto Scan

Camera scans back and forth regularly in a horizontal field. Here you need to set left and right limit and scan speed. You can set 5 scanning paths.

### 1.2.7 Auto Touring

Add addresses into a routine in a desired order and then set time and stop duration for each address. The dome will begin an auto touring between these addresses. You can set 8 touring paths. Each touring path can contain max 32 presets.

### 1.2.8 Auto Pattern

Memorize dome operation such as pan, tilt, and zoom to repeat. Focus and iris are in auto mode during auto pattern. For each pattern, the time should be less than 60 seconds.

### 1.2.9 Privacy Masking



---

Privacy masking is a user-defined, four-sided area that can not be viewed by you. The masking area will move with pan and tilt functions and automatically adjust in size as the lens zooms.

#### **1.2.10 Action on Alarm**

Alarms can be individually programmed to initiated pattern, or go to an associated preset, scanning, touring when received. Dome will return to a previously programmed state after alarm acknowledgement or to its previous position before alarm.

#### **1.2.11 Auto Flip**

As long as you continue to hold the keyboard joystick in the down position, the dome rotates 180 degrees and repositions itself for uninterrupted viewing of any subjects that passes directly beneath the dome.

#### **1.2.12 Self-diagnosis**

There is a self diagnosis procedure when dome boots up.

- Tilt and vertical engine check
- Camera diagnostics
- Display dome information and diagnosis information such as address, protocol, baud rate, type.

#### **1.2.13 Day/Night Mode (B/W & Color Mode)**

Auto/manual switches in low illumination.

- Auto: camera will automatically adjust CCD light level.
- Manual: use menu or function keys to select day/night mode.

This function needs the speed dome driver (camera) supported.

#### **1.2.14 Auto Focus**

Auto focus allows the lens to remain in focus during zoom-in, zoom-out and motion functions to get vivid image. You can use FAR or NEAR button to adjust focus manually.

#### **1.2.15 Backlight Compensation**

Balance the brightest and darkest sections of a scene to produce a more vivid picture.

#### **1.2.16 Pan Tilt and Zoom**

Supports zoom in and zoom out during tilt and pan movement.

In this period focus and iris are both in auto mode to get vivid image.

#### **1.2.17 3D Intelligent Location**

Working with DVR, just click part of the current scene will be displayed in the central window and automatically zooms. All of these allow you to trace precisely.

#### **1.2.18 Idle Status**

When there is no available order, you can use menu to set dome idle status after specified duration. The idle status includes turn to specified preset or go to scan, tour or pattern function.

#### **1.2.19 Image Stabilizer/Flip**

You can enable image stabilizer function and flip in the menu.

When there is vibration, this IS function can guarantee video stability and when flip, you can view video more clearly.

This function needs speed dome driver (camera) supported.

---

## 1.3 Specifications

### 1.3.1 Performance Specifications

|                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Built-in Receiver-Driver</b>                                                                     | <p>All digital design. All data are in the connection board. No data loss when power off occurs.</p> <ul style="list-style-type: none"><li>• Integrated design, high stability.</li><li>• Quick-installed high definition speed dome max support 255 presets. Support 8 auto touring. Each touring max has 32 presets.</li><li>• Low and medium speed dome max support 80 presets.</li><li>• 5 auto scan.</li><li>• 5 auto pattern. Each pattern can max support 400 commands and the interval shall be less than 60s.</li><li>• Built-in direction indicator.</li><li>• Support max 24 privacy mask zones(Depends on the camera type)</li></ul> |
| <b>Built-in PTZ</b>                                                                                 | <ul style="list-style-type: none"><li>• Fine stepper driver, stable performance, react quickly, precisely positioning.</li><li>• Integrated design, tight structure.</li><li>• Elegant mechanical driver device. Support 360 degrees continuous rotation, no monitor blind spot.</li><li>• 0.1 %/s rotation speed while maintain stable image.</li><li>• 180 degrees tilt continuous monitor.</li></ul>                                                                                                                                                                                                                                          |
| <b>Built-in zoom lens, high sensitive, high resolution integrated digital process color camera.</b> | <ul style="list-style-type: none"><li>• Auto focus</li><li>• Auto BLC</li><li>• Auto brightness control</li><li>• Auto white balance</li><li>• Auto day/night switch (Auto B/W &amp; color switch)</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>OSD</b>                                                                                          | <ul style="list-style-type: none"><li>• Preset title display</li><li>• View dome initial setup information</li><li>• Modify camera parameter</li><li>• Set preset</li><li>• Set auto scan</li><li>• Set auto patter</li><li>• Set auto day/night switch (Auto B/W &amp; color switch)</li><li>• Set privacy mask zones</li></ul>                                                                                                                                                                                                                                                                                                                 |

### 1.3.2 Technical Specifications

|                                  |                                                                                                                               |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| <b>Power</b>                     | 24VAC (±10%)                                                                                                                  |
| <b>Camera Driver Consumption</b> | 12W                                                                                                                           |
| <b>Decoder</b>                   | Built-in                                                                                                                      |
| <b>Engine</b>                    | Step motor                                                                                                                    |
| <b>Preset</b>                    | 255(In PELCOD, PELCOP protocol).<br>80 (In industrial protocol)<br>Please note the value may vary due to different protocols. |
| <b>Auto Tour</b>                 | 8                                                                                                                             |
| <b>Auto Pattern</b>              | 5                                                                                                                             |
| <b>Auto Scan</b>                 | 5                                                                                                                             |
| <b>Privacy Mask</b>              | 8 zones in one-window.<br>The different series products support different amount. It depends on the camera type.              |
| <b>Information</b>               | Time, address, dome title, dome coordinates, temperature, alarm and etc.                                                      |
| <b>Lens</b>                      | Adjust speed in accordance with lens                                                                                          |
| <b>Auto Rotation</b>             | Tilt 92° auto rotates to pan 180 °                                                                                            |
| <b>Auto Pan</b>                  | 0 ° -360° continuously                                                                                                        |
| <b>Manual Pan Motion Speed</b>   | 0.1°—300°/S                                                                                                                   |
| <b>Preset Maximum Speed</b>      | 400°                                                                                                                          |
| <b>Manual Tilt Motion</b>        | 0.1°—120°/S                                                                                                                   |
| <b>Manual Tilt Scan Section</b>  | 0°—180°                                                                                                                       |
| <b>PTZ Scan Accuracy</b>         | 0.06 ± 0.015°                                                                                                                 |
| <b>Signal Format</b>             | PAL/NTSC (Camera mode)                                                                                                        |
| <b>S/N Ratio</b>                 | > 50dB                                                                                                                        |
| <b>Humidity</b>                  | <90%                                                                                                                          |
| <b>Environment</b>               | -40 —60 (outdoor)                                                                                                             |



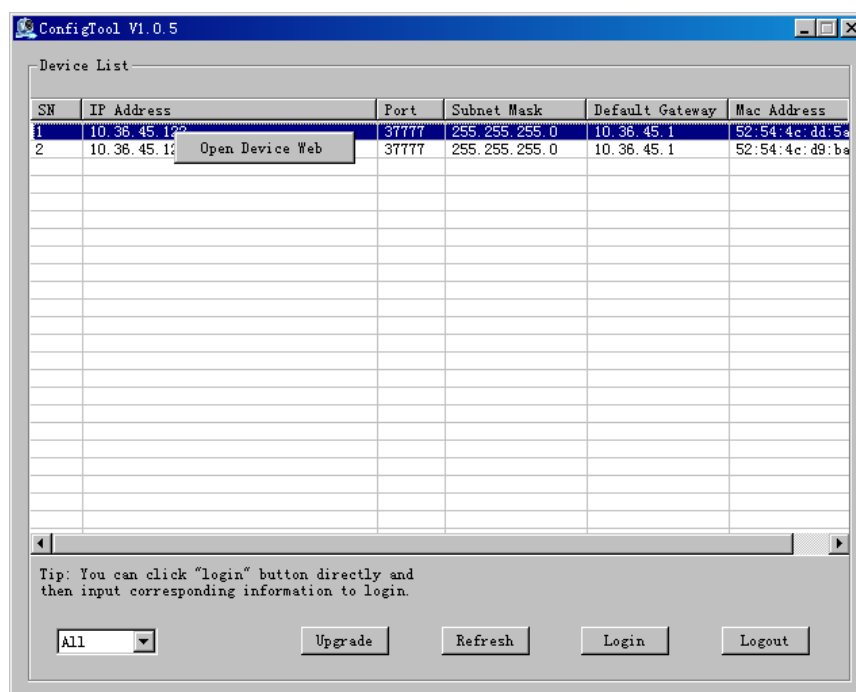


Figure 2-2

Select the “Open Device Web” item; you can go to the corresponding web login interface. See Figure 2-3.

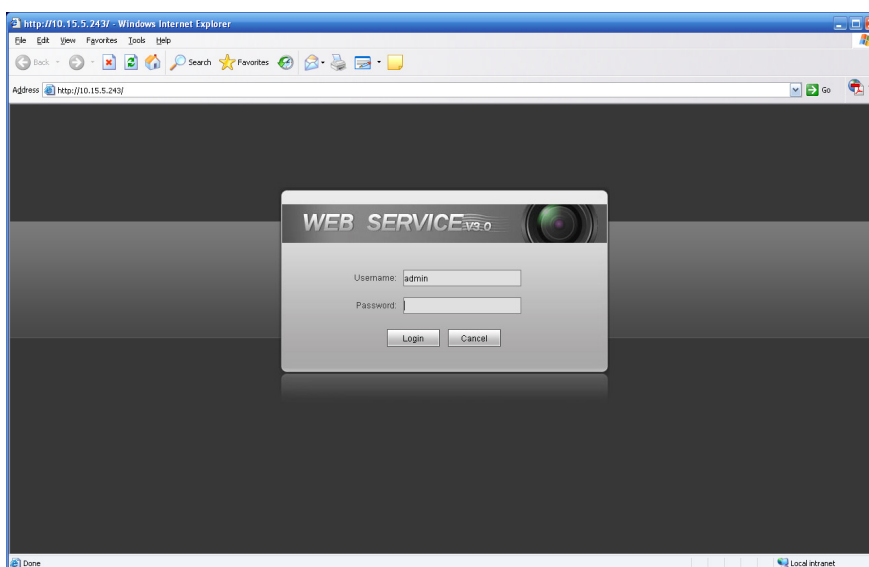


Figure 2-3

If you want to modify the device IP address without logging in the device web interface, you can go to the configuration tool main interface to set.

In the configuration tool search interface (Figure 2-1), please select a device IP address and then double click it to open the login interface. Or you can select an IP address and then click the Login button to go to the login interface. See Figure 2-4.

In Figure 2-4, you can view device IP address, user name, password and port. Please modify the corresponding information to login.

Please note the port information here shall be identical with the port value you set in TCP port in Web Network interface. Otherwise, you can not login the device.

If you are use device background upgrade port 3800 to login, other setups are all invalid.

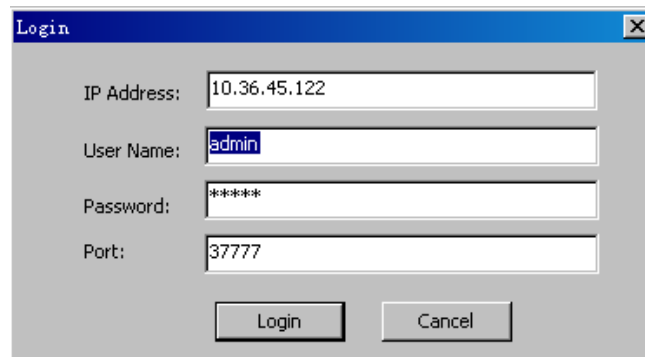
A login dialog box titled "Login" with a close button (X) in the top right corner. It contains four input fields: "IP Address:" with the value "10.36.45.122", "User Name:" with the value "admin", "Password:" with the value "\*\*\*\*\*", and "Port:" with the value "37777". At the bottom, there are two buttons: "Login" and "Cancel".

Figure 2-4

After you logged in, the configuration tool main interface is shown as below. See Figure 2-5.

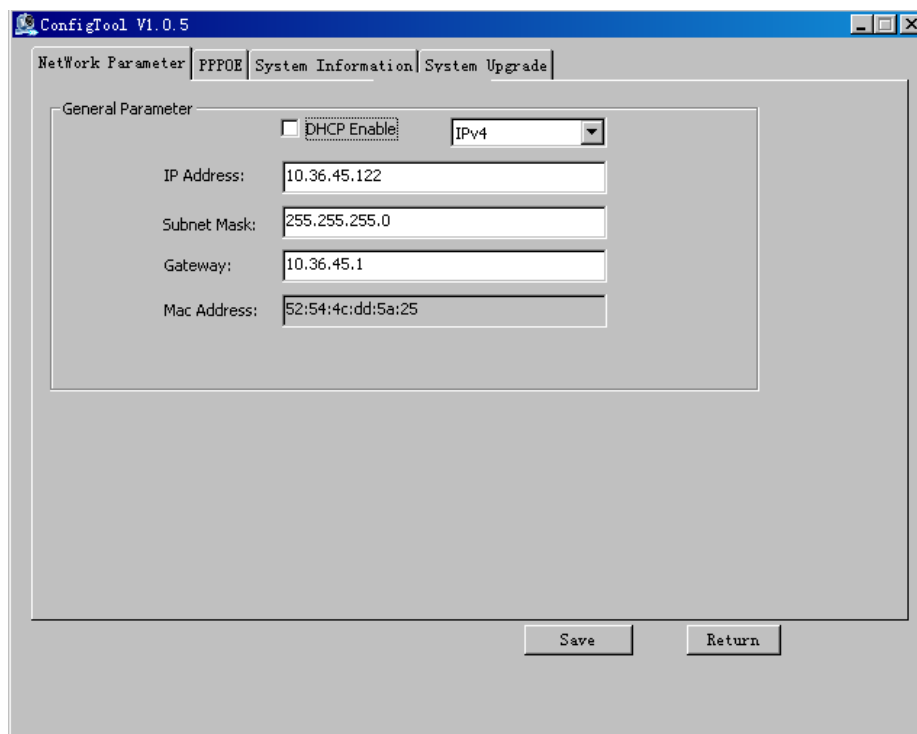
The main interface of the "ConfigTool V1.0.5" application. It has a title bar with the application name and standard window controls. Below the title bar is a tabbed interface with four tabs: "NetWork Parameter", "PPPOE", "System Information", and "System Upgrade". The "NetWork Parameter" tab is currently selected. Inside this tab, there is a "General Parameter" section. It contains a checkbox labeled "DHCP Enable" which is unchecked, and a dropdown menu set to "IPv4". Below these are five input fields: "IP Address:" (10.36.45.122), "Subnet Mask:" (255.255.255.0), "Gateway:" (10.36.45.1), and "Mac Address:" (52:54:4c:dd:5a:25). At the bottom of the window, there are two buttons: "Save" and "Return".

Figure 2-5

**For detailed information and operation instruction of the quick configuration tool, please refer to the *Quick Configuration Tool User's Manual* included in the resources CD.**

### 3 Web Operation

This series product supports the Web access and management via PC.

Web includes several modules: monitor channel list, record search, alarm setup, system configuration, PTZ control, monitor window and etc.

IP camera factory default setup:

- IP address: 192.168.1.108.
- User name: admin
- Password: admin

#### 3.1 Network Connection

Please follow the steps listed below for network connection.

- Make sure the IPC has connected to the network properly.
- IPC IP address and PC IP address shall be in the same network segment. IPC default IP address is 192.168.1.108. If there is router, please set the corresponding gateway and subnet mask.
- Use order ping `***.***.***.***(* IP camera address)` to check connection is OK or not.

#### 3.2 Login and Logout

Open IE and input IP camera address in the address bar.

For example, if your camera IP is 192.168.1.108, then please input `http:// 192.168.1.108` in IE address bar.

See Figure 3-1.

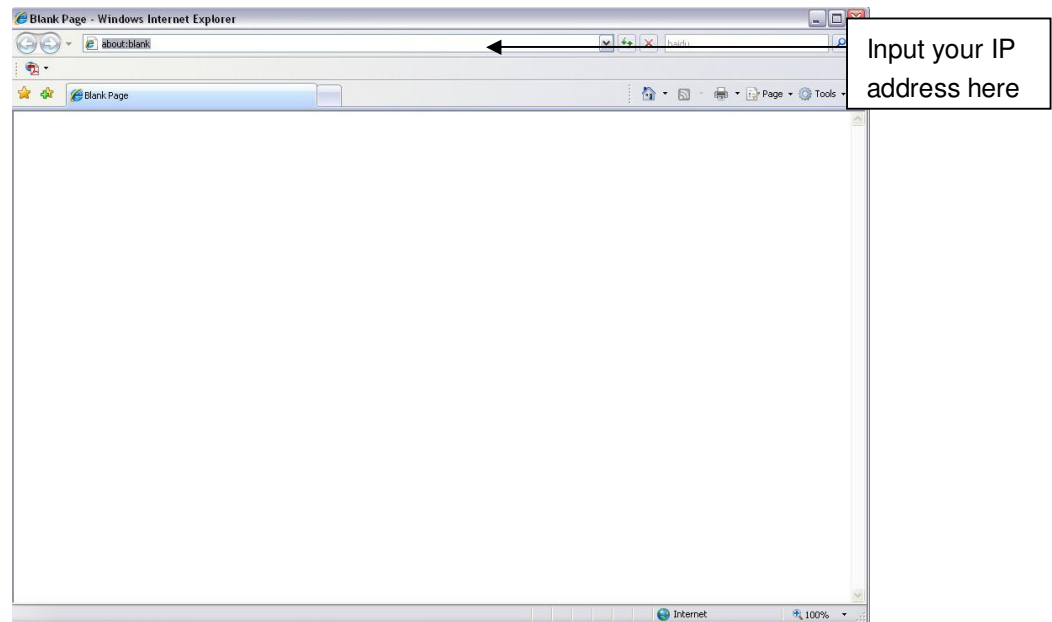


Figure 3-1

System pops up warning information to ask you whether install control webrec.cab or not. Please click OK button, system can automatically install the control. When system is upgrading, it can overwrite the previous Web too.

If you can't download the ActiveX file, please check whether you have installed the plug-in to disable the control download. Or you can lower the IE security level. See Figure 3-2.

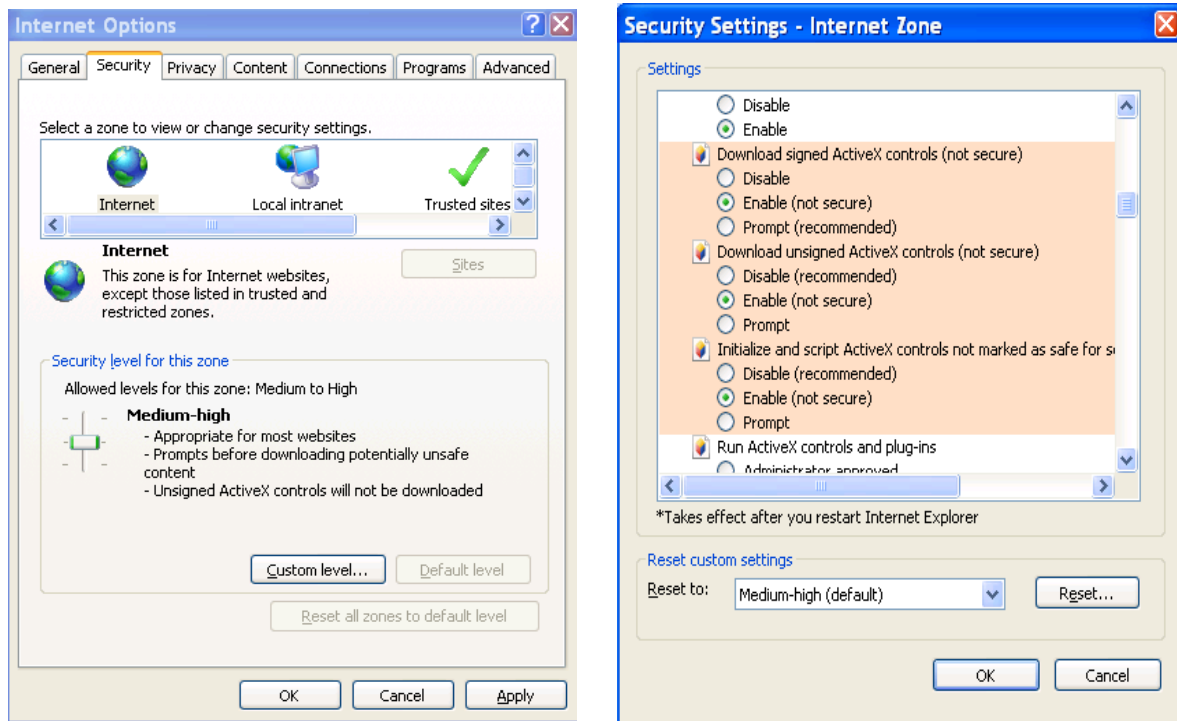


Figure 3-2

After installation, the interface is shown as below. See Figure 3-3.

Please input your user name and password.

Default factory name is admin and password is admin.

Select the network connection type.

The login type includes: TCP/UDP/Multicast.

**Note: For security reasons, please modify your password after you first login.**

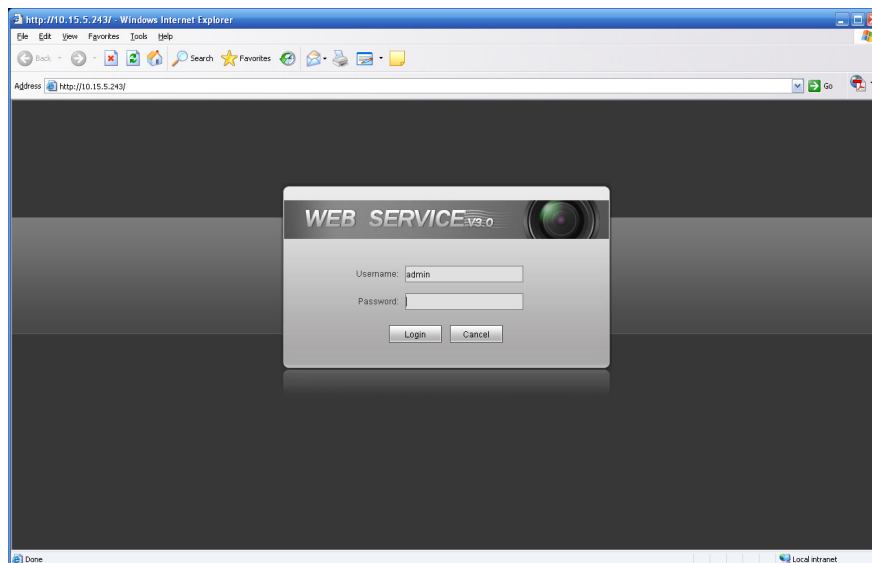


Figure 3-3

After you logged in, you can see the main window. See Figure 3-4.



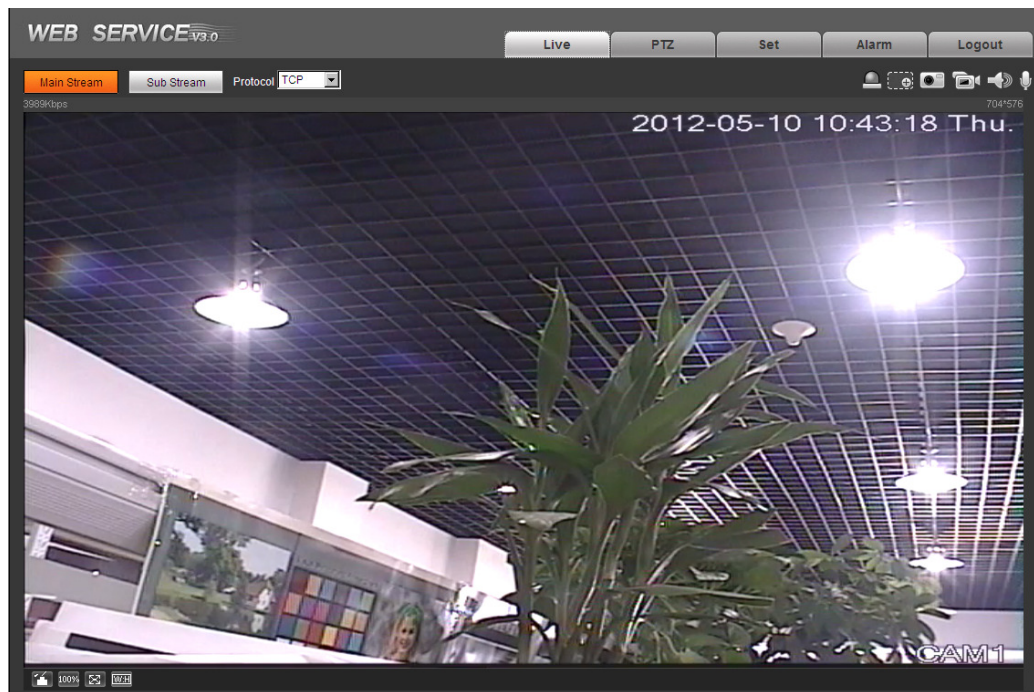


Figure 3-4

Please refer to the *Web Operation Manual* included in the resource CD for detailed operation instruction.

---


## 4 Menu

### 4.1 Screen Menu Index

**Note:**

ERR means current setup is invalid.

... means there is submenu.

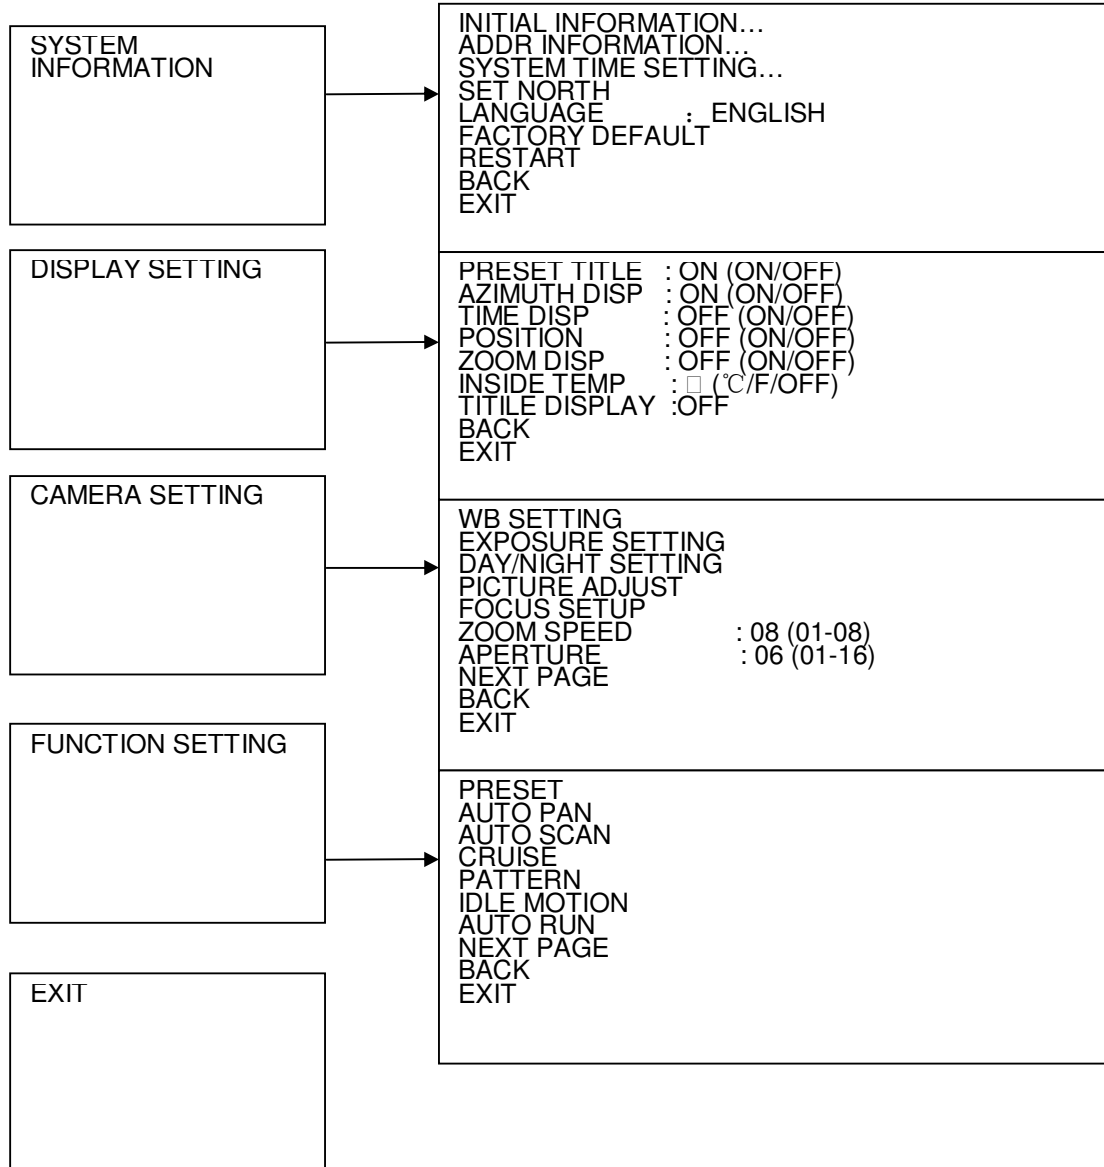

---

The above diagram illustrates the overall structure of the speed dome setup menu.

**Note:**

- ERR means current setup is invalid.
- Please make sure all the cable connections are right.

## 4.2 Self-diagnosis System Information

|           |   |         |
|-----------|---|---------|
| ADDR      | : |         |
| BAUD RATE | : |         |
| PARITY    | : |         |
| SOFTWARE  | : | V1.04.3 |
| BACK      |   |         |
| EXIT      |   |         |

After installation, please connect speed dome to power. The system goes on a self-diagnosis, and then it pops up the above interface to show the system information.

If there is anything wrong during the self-diagnosis, system pops up error code.

The above interface disappears after speed dome received the first command (or the display time lasts for 4 minutes.)

- ADDR: Here you can view dome address information. For example, 001-H, 1 is the address number, -H is hard address mode. -S is software address mode.
- Baud rate: Dome communication baud rate.
- Parity: Communication parity bit format.
- Software: Dome software version of the control firmware.

## 4.3 Main Menu

You can open the IP dome menu via monitor platform, Web, control keyboard, matrix, or speed dome control terminal.

|                    |
|--------------------|
| SYSTEM INFORMATION |
| DISPLAY SETTING    |
| CAMERA SETTING     |
| FUNCTION SETTING   |
| IR LIGHT SETTING   |
| EXIT               |

- SYSTEM INFORMATION: Dome self-diagnosis information, address information, system time setup, set north direction, language, factory default setup, reboot and so on.
- DISPLAY INFORMATION: Display dome preset title, azimuth display, time, direction, dome internal temperature and etc information.
- CAMERA PARAMETERS : Display dome white balance setup, camera function setup, day/night setup, shutter setup and etc.
- FUNCTION SETTING: Set preset, pan, scan, auto cruise, pattern, idle motion, time task and privacy mask function.
- EXIT: Log out the system menu.

## 4.4 Menu Operation

---

In the speed dome main menu, you can use the left/right button on the keyboard or in the speed dome terminal menu to configure the system menu. Before setup, please move the cursor to the current item you want to configure.

- In main menu, please click confirm button to go to the sub menu or use left/right key to configure setup.
- Use up/down button to select back option and then click confirm button to go back to the previous menu.
- Use up/down button to select exit option and then click confirm button to log out system menu.
- All setup here will not lose when encounter power failure.

#### 4.4.1 System Information

```
INITIAL INFORMATION
ADDR INFORMATION
SET NORTH
LANGUAGE           : ENGLISH
FACTORY DEFAULT
RESTART
BACK
EXIT
```

- INITIAL INFORMATION: Move the cursor to INITIAL INFORMATION and then click confirm button to go to the third submenu.
- ADDR INFORMATION: Move the cursor to SITE INFORMATION and then click confirm button to go to the third submenu.
- SET NORTH DIRECTION: Set dome benchmark direction so that you can know the angel between the benchmark and then current location. Please move the cursor to the option and then click confirm button until you see O.K. Now you have set north direction.
- LANGUAGE: The dome menu language. There are several languages for you to select. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- FACTORY DEFAULT: Restore dome factory default setup. Please move the cursor to the option and then click confirm button until you see O.K. Now you can see the IP dome begin rebooting to restore factory default setup.
- RESTART: Reboot the speed dome.
- BACK: Go back to the previous menu.
- EXIT: Log out system menu.

##### 4.4.1.1 Initialization information

```
ADDR           : 001-H
BAUD RATE      : 9600
PARITY         : NONE
SOFTWARE       : vX.XX.XX
BACK
EXIT
```

Move the cursor to INITIAL INFORMATION and then click confirm button, you can see the above interface. Here you can view dome basic information.

##### 4.4.1.2 Address Information

```
ADDR TYPE      : HARD
ADDR-HARD      : 001
ADDR-SOFT      : 001
BACK
EXIT
```

---

Move the cursor to SITE INFORMATION and then click confirm button.

- ADDR TYPE: There are two options: soft and hard. Please use the left/right button on the keyboard or in the speed dome terminal menu to set. Please click the OK button to confirm
- ADDR-HARD: It is an address you set in the dial switch. You can not modify it through software.
- ADDR-SOFT: You can set address via software. It is to say, you can use menu to modify dome address. The value ranges from 1 to 255.
- BACK: Go back to the previous menu.
- EXIT: Log out system menu.

#### 4.4.2 Display Setting

|              |       |
|--------------|-------|
| PRESET TITLE | : ON  |
| AZIMUTH DISP | : ON  |
| TIME DISP    | : OFF |
| POSITION     | : OFF |
| ZOOM DISP    | : OFF |
| INSIDE TEMP  | : °C  |
| TITLE DISP   | : OFF |
| BACK         |       |
| EXIT         |       |

Move the cursor to DISPLAY SETUP and then click confirm button, you can go to the third submenu. Please use the left/right button on the keyboard or in the speed dome terminal menu to set. After completed setup, please click save button to save current setup.

- PRESET TITLE: Display dome preset title or not. Please use the left/right button on the keyboard or in the speed dome terminal menu to set. You can go to Function Setup->Preset section to set corresponding preset value and preset title.
- AZIMUTH DISP: Display dome current coordinates or not. Please use the left/right button on the keyboard or in the speed dome terminal menu to set
- TIME DISP: Display dome system time or not. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- POSITION: Display the angel between the benchmark and then current location. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- ZOOM DISP: Display speed dome zoom speed or not. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- INSIDE TEMPERATURE: Display dome internal temperature or not. There are three options: °C/F/Off.  
Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- TITLE DISPLAY: Here you can set to display speed dome position information and etc. You can use the speed dome control terminal to set the detailed title information. Please use the left/right button to set.
- BACK: Go back to the previous menu.
- EXIT: Log out system menu.

#### 4.4.3 Camera Setting

---

|                   |      |
|-------------------|------|
| WB SETTING        |      |
| EXPOSURE SETTING  |      |
| DAY/NIGHT SETTING |      |
| FOCUS SETUP       |      |
| PICTURE ADJUST    |      |
| ZOOM SPEED        | : 08 |
| APERTURE          | : 09 |
| NEXT PAGE         |      |
| BACK              |      |
| EXIT              |      |

Move the cursor to CAMERA SETTING and then click confirm button, you can go to the submenu.

- WHITE BALANCE SETUP: Move the cursor to current option and then click confirm button, you can go to the third menu.
- EXPOSURE SETTING: Move the cursor to current option and then click confirm button, you can go to the third menu.
- DAY/NIGHT: Set day/night mode. Move the cursor to current option and then click confirm button, you can go to the third menu. There are three options: auto/manual/off. Please use the left/right button on the keyboard or in the speed dome terminal menu to set. Please make sure your product supports this function.
- FOCUS SETUP: It is to set camera focus mode, focus limit and etc. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- PICTURE ADJUSTMENT: It is to set the camera hue, saturation, color control, gama, contrast, brightness. There is the third menu. Please move the light to highlight current item and then click the OK button to go to the next level menu.
- FOCUS LIMIT: It is to set the distance between the camera and the object. It can prevent the focus distance is too small which may result in focusing on the enclosure. At the same time, you can change the distance to change the focus speed.
- ZOOM SPEED: The bigger the value, the faster the speed. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- APERTURE: It is to adjust the lens to achieve clear video. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- NEXT PAGE: It includes the following options: APERTURE RESTRAIN. DIGITAL ZOOM, PICTURE FLIP, FREEZE FUNCTION, AF SENSITIVITY, CAMERA FACTORY DEFAULT SETUP, CAMERA RESTART. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- BACK: Go back to previous menu.
- EXIT: Log out system menu.

#### 4.4.3.1 White Balance Setup

|         |        |
|---------|--------|
| WB MODE | : AUTO |
| R GAIN  | : 001  |
| B GAIN  | : 001  |
| BACK    |        |
| EXIT    |        |

Move the cursor to WHITE BALANCE MODE and then click confirm button, you can go to the submenu.

- WHITE BALANCE MODE: Set white balance adjustment mode. There are two modes: auto/manual. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- R GAIN: Before you set R GAIN option, please note the mode shall not be auto. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.

- B GAIN: Before you set B GAIN option, please note the mode shall not be auto. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- BACK: Go back to previous menu.
- EXIT: Log out system menu.

#### 4.4.3.2 Exposure Setting

|               |        |                    |        |
|---------------|--------|--------------------|--------|
| AE MODE       | : AUTO | AGC GAIN LIMIT     | : 03   |
| GAIN SETTING  | : 02   | SLOW SHUTTER LIMIT | : 1/25 |
| SHUTTER       | : 1/50 | NOISE REDUCTION    | : 03   |
| IRIS SETTING  | : 11   | BLC                | : ON   |
| EXPOSURE COMP | : 08   | WDR ENABLE         | : ON   |
| SLOW AE       | : 01   | BACK               |        |
| SLOW SHUTTER  | ON     | EXIT               |        |
| NEXT PAGE     |        |                    |        |
| BACK          |        |                    |        |
| EXIT          |        |                    |        |

- AE MODE: Here you can set the camera exposure mode. It includes: auto/manual/AV (iris priority)/TV (shutter priority). Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
  - Auto: It becomes valid after you set the exposure compensation, backlight compensation (BLC), slow shutter, wide dynamic region (WDR).
  - Manual: It becomes valid after you set the gain setting, shutter, iris setting, wide dynamic region (WDR).
  - AV: It becomes valid after you set the exposure setting, iris setting, wide dynamic region (WDR).
  - TV: It becomes valid after you set the shutter setting, exposure compensation, wide dynamic region (WDR).
- GAIN SETTING: Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- SHUTTER: Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- IRIS SETTING: Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- EXPOSURE COM: Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- SLOW AE: In the strong light environment, you can lower the camera exposure speed to capture the image and enhance the definition. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- SLOW SHUTTER: In lower illumination environment, you can lower the cameras auto exposure time to capture the image and enhance the definition. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- NEXT PAGE: It includes: AUTO GAIN LIMIT, AUTO SLOW SHUTTER LOW LIMIT, NOISE CONTROL, 3D NOISE REDUCTION, BLC, WDR, BACK, and EXIT. Move the cursor to the item and then click the left/right button to set.
  - AUTO GAIN LIMIT: Please click the left/right button to set.
  - SLOW SHUTTER LOW LIMIT: Please click the left/right button to set.
  - NOISE REDUCTION: There may noise when the camera is monitoring the low illumination environments. You can use the digital filter to process the noise to guarantee the clear video.
  - 3D NOISE REDUCTION

- BLC: It is an abbreviation for back light compensation. System can compensate the object in the dark light to achieve a clear video. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- WDR ENBALE: It is an abbreviation for wide dynamic region. Please make sure your camera supports current function. This function can adjust the video brightness when the contrast between the strong light and the dark light is too high. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- BACK: Go back to previous menu.
- EXIT: Log out system menu.

#### 4.4.3.3 Day/Night Setting

Move the cursor to DAY/NIGHT SETTING and then click confirm button, you can go to the submenu.

|            |           |
|------------|-----------|
| DAY/NIGHT  | : AUTO    |
| DAY TIME   | : 07H 00M |
| NIGHT TIME | : 19H 00M |
| THRESHOD   | : 4       |
| SAVE       |           |
| BACK       |           |
| EXIT       |           |

- DAY/NIGHT: Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- DAY TIME: Current setup becomes valid when day/night mode is Time. Move the cursor to DAY TIME item and then click confirm button to go to setup. Please user up/down button to set the value. After completed setup, please click confirm button to exit and move the cursor to Save button to save current setup.
- NIGHT TIME: Current setup becomes valid when day/night mode is Time. Move the cursor to DAY TIME item and then click confirm button to go to setup. Please user up/down button to set the value. After completed setup, please click confirm button to exit and move the cursor to save button to save current setup.
- THRESHOLD: The speed dome can switch the day/night mode when it reached the threshold you set here.
- SAVE: This button is for DAY TIME and NIGHT TIME setup. After you set the day time (or night time), you need to move the cursor here and then click confirm button to save current time setup. For other setups, you do not need to use this button.
- BACK: Go back to previous menu.
- EXIT: Log out system menu.

#### 4.4.3.4 Picture Adjustment

|                |   |
|----------------|---|
| HUE            | : |
| SATURATION     | : |
| COLOR CONTROL: |   |
| GAMA:          |   |
| CONTRAST       | : |
| HIGH LIGHT:    |   |
| BACK           |   |
| EXIT           |   |

- HUE: It is to set the video hue. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- SATURATION: It is to set the video saturation. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- COLOR CONTROL: It is to set the video color control. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.



- GAMA: It is to set the video gama. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- CONTRAST: It is to set the video contrast. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- HIGH LIGHT: It is to set the video high light. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- BACK: Go back to previous menu.
- EXIT: Log out system menu.

#### 4.4.3.5 Focus Setup

```

FOCUS MODE      :
FOCUS LIMIT:
FOCUS SENSITIVITY :
IR LIGHT FOCUS CORRECTION:
BACK
EXIT

```

- FOCUS MODE: It is to set the camera focus mode. It includes several modes such as auto, manual, semiautomatic.
- FOCUS LIMIT: It is to set the camera focus limit. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- FOCUS SENSITIVITY: It is to set the camera focus sensitivity. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- IR LIGHT FOCUS CORRECTION: It is to set the camera IR light focus correction. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- BACK: Go back to previous menu.
- EXIT: Log out system menu.

#### 4.4.3.6 Next Page

Move the cursor to NEXT PAGE and then click confirm button, you can go to the submenu.

```

APERTURE RESTRAIN      16 :
DIGITAL ZOOM           : OFF
PICTURE FLIP           : OFF
FREEZE FUNC            : OFF
AF SENSITIVITY:        : NORMAL
CAMERA FACTORY DEFAULT
CAMERA RESTATRT
BACK
EXIT

```

- APERTURE RESTRAIN: It can automatically control the aperture in the low illumination environments. It can reduce the noise.
- DIGITAL ZOOM: You can use the left/right button to enable/disable the digital zoom function.
- PICTURE FLIP: This function allows you to turn the image rotation 180 degrees. There are two options: on/off. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- FREEZE FUNCTION: This function allows the system from one preset to another preset, without showing the video during the PTZ movement. There are two options: on/off. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- AF SENSITIVITY: You can set the auto focus threshold value here.
- CAMERA FACTORY DEFAULT SETTING: Move the cursor to current item and then click confirm button to restore factory default setup.

- CAMERE RESTART: Move the cursor to current item and then click confirm button to reboot the camera.
- BACK: Go back to previous menu.
- EXIT: Log out system menu.

#### 4.4.4 Function Setting

```

PRESET
PAN
AUTO SCAN
AUTO CRUISE
AUTO PATTERN
IDLE MOTION
TIME TASK
NEXT PAGE
BACK
EXIT

```

Please go back to main menu and move the cursor to FUNCTION SETTING, click confirm button. You can see the above interface.

- PRESET: Move the cursor to PRESET and then click confirm button to go to the third submenu.
- PAN: Move the cursor to PAN and then click confirm button to go to the third submenu.
- AUTO SCAN: Move the cursor to SCAN and then click confirm button to go to the third submenu.
- AUTO CRUISE: Move the cursor to AUTO CRUISE and then click confirm button to go to the third submenu.
- AUTO PATTERN: Move the cursor to PATTERN and then click confirm button to go to the third submenu.
- IDLE MOTION: Move the cursor to IDLE MOTION and then click confirm button to go to the third submenu.
- TIME TASK: Move the cursor to TIME TASK and then click confirm button to go to the third submenu.
- NEXT PAGE: It includes: PRIVACY MASKING, PTZ SPEED, SET ZERO, POWER UP, MENU PASSWORD, MENU IDEL, PTZ AUTO STOP, and HEATER. Move the cursor to the item and then click the confirm button to set. .
- BACK: Go back to previous menu.
- EXIT: Log out system menu.

##### 4.4.4.1 Preset Setup

```

PRESET NO : 001
TITLE   : PRESET001
SETTING
CALL
BACK

```

Move the cursor to PRESET button and then click confirm button to go to set interface.

- PRESET NO: Please use left/right key to modify preset number. The different protocols support different preset values. The PELCOD and PELCOP support 1 to 255. For the industrial protocol, the value ranges from 1 to 80.

- **TITLE** : Title text is the label used for you to identify the camera. System will automatically name a title for the camera.
- **SETTING**: Please input preset number first and then select the monitor zone. Please move the cursor to setting and click confirm button. The system will pop up a message: PRESET: \*\*\*. Here \*\*\* means preset number. And the SETTING column pops up an OK. Now you successfully added a preset. Please note, you need to enable display preset title function first (Main menu->display setting->preset title). Repeat the above procedures to set more presets. Once you want to modify a preset, you can input the preset number you want to modify and then follow the above steps to set the preset. You can successfully modify a preset content.
- **CALL**: Here is to recall preset. Move the cursor to PRESET NO and then input corresponding preset value. Then move the cursor to CALL and then click confirm button to go to a preset.
- **BACK**: Go back to previous menu.
- **EXIT**: Log out system menu.

**For PELCO protocol user, please refer to the following special functions:**

- **Call preset**: Call preset 28 or preset 95 to go to dome menu. Call preset 29 or preset 99 to go to scan. Call preset 24 or preset 81 to go to pattern. Call preset 25 or preset 82 to go to cruise (tour). Call preset 30 or preset 96 to stop scan or pattern. Call preset 31 or preset 83 to begin rotation. Call preset 33 to enable PTZ 180 degrees rotation. Call preset 34 to set dome position as 0.
- **Set preset**: Set preset 26 or 92 to set scan left limit. Set preset 27 or 93 to set scan right limit. Set preset 22 or 79 to begin record. Set preset 23 or 80 to stop record.

#### 4.4.4.2 Pan

PAN SPEED : 160  
 RUN  
 STOP  
 BACK  
 EXIT

Move the cursor to PAN button and then click confirm button to go to setup interface.

- **PAN SPEED**: Set dome rotation speed. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- **RUN**: Move the cursor to call item and then click confirm button. The dome begins 360 degrees continuous rotation.
- **STOP**: Highlight stop item and then click confirm button. The dome stops rotation.
- **BACK**: Go back to previous menu.
- **EXIT**: Log out system menu.

#### 4.4.4.3 Scan

SCAN NO : 001  
 SET LEFT LIMIT  
 SET RIGHT LIMIT  
 SCAN SPEED : 160  
 RUN  
 STOP  
 BACK  
 EXIT

Move the cursor to SCAN button and then click confirm button.

- SCAN NO : Here is to set auto scan number. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- SET LEFT LIMIT : Here is to set camera left address. Click confirm button to save current setup.
- SET RIGHT LIMIT : Here is to set camera right address. Click confirm button to save current setup.
- SCAN SPEED: Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- RUN: Please input auto scan number first, and then please move the cursor to RUN and click confirm button to activate auto scan function.
- STOP: Here is to terminate auto scan function.
- BACK: Go back to previous menu.
- EXIT: Log out system menu.

#### 4.4.4.4 Cruise (Touring)

```

CRUISE NO:      : 001
CRUISE SETTING
DELETE CRUISE
RUN
STOP
BACK
EXIT

```

Move the cursor to highlight CRUISE item and then click confirm button to go to set interface.

- CRUISE NO : Here is to set tour number. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- CRUISE SETTING: Move the cursor to cruise setting item and then click confirm button. You can see the following interface. Here you can add or remove the preset, and set the corresponding dwell time and call speed.

| NO  | PRESET | DWELL | SPEED |
|-----|--------|-------|-------|
| 01  | 000    | 005   | 013   |
| 02  | 000    | 005   | 013   |
| 03  | 000    | 005   | 013   |
| ... | ...    | ...   | ...   |
| 32  | 000    | 005   | 013   |

- DWELL: Here is to set dwell time. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- SPEED: Here you can set the speed value.

When you move the cursor to one cruise number, you can use left/right button to turn the page.

When you move the cursor to one cruise number, please click confirm button to set the cruise. Please use up/down button to set preset number, dwell time and speed. Use the left/right button to go to the next cruise. Click confirm button you can exit the setup. After you completed the setup, move the cursor to back button to go to the previous interface.

- DELETE CRUISE : Here is to delete a cruise. Input cruise number in CRUISE NO and then move the cursor to DELETE cruise, click confirm button to delete.
- CALL: Here is to activate cruise. Input touring number in touring NO and highlight CALL, click confirm button to activate touring.

- STOP: Here is to terminate touring.
- BACK: Go back to previous menu.
- EXIT: Log out system menu.

#### 4.4.4.5 Pattern

PATTERN NO: 001  
 PROGRAM START  
 PROGRAM STOP  
 RUN  
 STOP  
 BACK  
 EXIT

Pattern function can memory PTZ operation and camera focus zoom in and zoom out.

From the start position, dome begins auto movement repeatedly.

This series IP dome supports maximum 5 patterns and one pattern can max support 400 commands.

Move the cursor to PATTERN and click confirm button.

- PATTERN NO : Here is to set pattern number. The value ranges from 1 to 5. Please click left/right key to configure.
- PROGRAM START: Here is to memorize pattern starting point. An icon OK pops up in screen to prompt you system begins memory pattern.
- PROGRAM STOP : Here is to set pattern stop point. After all the movement, move the cursor to PROGRAM STOP and then click confirm button. Now you have set one pattern. System pops up an icon OK to prompt you system has memories one pattern.
- RUN : Here is to activate pattern. Input pattern number, move the cursor to RUN and click confirm button, system begins running pattern.
- STOP: Here is to stop current pattern. Input pattern number, move the cursor to STOP and click confirm button. System stops current pattern.
- BACK: Go back to previous menu.
- EXIT: Log out system menu.

#### **Note:**

- The dwell time between two orders should be less than one minute, otherwise system will set to default value as one minute.
- After click PROGRAM STOP, do not click CALL button before icon “●” disappears completely.
- Any manual operation during the pattern procedure will terminate current dome pattern operation.

#### 4.4.4.6 Idle Motion

IDLE FUNC : OFF  
 IDLE TIME : 010MIN  
 IDLE ACTION : PRESET  
 SN:  
 SAVE  
 BACK  
 EXIT

---

When there is no available command for specified time, dome automatically goes on the previous set functions.

- IDLE FUNCTION : There are two modes ON/OFF. Please use left/right key to set.
- IDLE TIME: System idle period. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- IDLE ACTION: There are several functions you can select:  
NONE/PRESET/SCAN/TOURING/PATTERN. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- SN: It is the serial number of the None/preset/scan/tour/pattern when the system is idle.
- SAVE: Move the cursor to SAVE and click confirm button to save current setup.
- BACK: Go back to previous menu.
- EXIT: Log out system menu.

#### 4.4.4.7 Auto Run (Schedule task)

|                  |       |
|------------------|-------|
| TASK NO          | : 1   |
| TIME TASK        | : OFF |
| TASK SETTING     |       |
| TASK INFORMATION |       |
| DELETE TASK      |       |
| BACK             |       |
| EXIT             |       |

- TASK NO: Here you can set task number. Please use the left'/right button to set.
- TIME TASK: The schedule task allows the speed dome to implement corresponding setup during the specified time. There are two options: on/off. Please use the left/right button on the keyboard or in the speed dome terminal menu to set.
- TASK SETTING: Here you can set task time, operation, operation SN and etc. Please click the confirm button to go to the fourth menu to set.
- TASK INFORMATION: Here you can view the corresponding task information. Please click the confirm button to go to the fourth menu to set.
- DELETE TASK: Please input the task number to be deleted in the TASK NO, and then move the cursor to the current item. Click the confirm button, you can remove all the setups in the current schedule task. Now current task is null.
- BACK: Go back to the previous menu.
- EXIT: Log out the system menu.

#### Task Setting

Move the cursor to the TASK SETTING and then click the confirm button, you can set the task begin time, end time, action and etc.

|            |       |
|------------|-------|
| WEEK       | : 1   |
| START TIME | : OFF |
| END TIME   |       |
| RUN ACTION |       |
| PRESET NO  |       |
| SAVE       |       |
| BACK       |       |
| EXIT       |       |

- WEEK: Here you can set the week information. Please use the left/right button to set. You can set for one day, or you can set for the whole week.
- START TIME: Here you can set the task begin time. Move the cursor to current item and then click confirm button to set the time. Please use the up/down button to set the detailed value and then use

---

left/right button to go to the next setup item. After you completed the setup, please click confirm button to exit start time setup and then move the cursor to the SAVE button to save current setup.

- END TIME: Here you can set the task end time. Move the cursor to current item and then click confirm button to set the time. Please use the up/down button to set the detail value and then use left/right button to go to the next setup item. After you completed the setup, please click confirm button to exit end time setup and then move the cursor to the SAVE button to save current setup.
- TASK ACTION: The option here includes: none/tour/scan/preset/patter and etc. Please use left/right button to set.
- OPERATION NO: It is the corresponding serial number of the schedule task. The number here may vary due to different action types.
- BACK: Go back to the previous menu.
- EXIT: Log out the system menu.

### Task Information

Move the cursor to the TASK INFORMATION and then click the confirm button to go to the following interface. Here you can see the corresponding task information. Click the confirm button again, you can exit current interface.

| NO | TIME              | ACTION    |
|----|-------------------|-----------|
| 1  | ALL 00: 00—00: 00 | SC001 OFF |
| 2  | ALL 00: 00—00: 00 | SC001 OFF |
| 3  | ALL 00: 00—00: 00 | SC001 OFF |
| 4  | ALL 00: 00—00: 00 | SC001 OFF |
| 5  | ALL 00: 00—00: 00 | SC001 OFF |
| 6  | ALL 00: 00—00: 00 | SC001 OFF |
| 7  | ALL 00: 00—00: 00 | SC001 OFF |

#### 4.4.4.8 Next Page

Move the cursor to the NEXT PAGE and then click the confirm button, you can go to the third menu to set the PTZ SPEED, SET ZERO, POWER UP and etc.

|               |       |
|---------------|-------|
| PRIVACY MASK  | : 1   |
| PTZ SPEED     | : OFF |
| SET ZERO      |       |
| POWER UP      |       |
| MENU PASSWORD |       |
| MENU IDLE     |       |
| PTZ AUTO STOP |       |
| SAVE          |       |
| BACK          |       |
| EXIT          |       |

- PRIVACY MASK: Here you can set the privacy mask number and etc. It includes the third menu. Please move the cursor to the current item and then click the confirm button to go to the next interface.
- PTZ SPEED: It is to set PTZ speed. Please use the left/right button to set.
- SET ZERO: It is to set the PTZ initial position. Please move the PTZ to the corresponding position and then click the confirm button to complete the setup.

- **POWER UP:** It is to set the PTZ action when the speed dome boots up. Click the confirm button to go to the next interface. To set
- **MENU PASSWORD:** It is to set the password to go to the PTZ menu. Click the confirm button to go to the next interface. To set
- **MENU IDLE:** If current setup is ON, once you open the menu and leave it idle for specified period, the menu may automatically disappear. If current setup is OFF, the menu is always there and will not disappear. Please use the left/right button to set.
- **PTZ AUTO STOP:** The speed dome will stop all the PTZ operations when there is no command for the specified time. It includes various setups. Please use the left/right button to set.
- **BACK:** Go back to the previous menu.
- **EXIT:** Log out the system menu.

### Privacy Mask

Move the cursor to PRIVACY MASK and click confirm button, system goes to privacy mask setup interface.

|          |    |       |
|----------|----|-------|
| PRIVACY  | NO | : 001 |
| ACTIVATE |    | : OFF |
| RESIZE   |    | : ↑   |
| DELETE   |    |       |
| SAVE     |    |       |
| BACK     |    |       |
| EXIT     |    |       |

### Note:

- For security reasons, please set privacy zone a little bit larger than the privacy object size.
- Each time, after modifications you need to move the cursor to SAVE button and then click confirm button to get all setup activated. Otherwise, privacy zone may not move correspondingly with the object.

Please enter privacy mask menu, now all the privacy zones are closed.

Move the cursor to PRIVACY NO, please use left/right key to set different privacy zones.

For example, shift to 001 section and then move the cursor to ACTIVATE.

Secondly, use left/right key to select ON mode. Now there is a privacy zone in the screen centre.

Thirdly, use PTZ to move camera so that privacy object fit well with screen centre.

Fourthly, move the cursor to RESIZE and then click left and right key to adjust privacy zone direction and size.

Fifthly, move the cursor to SAVE and then click confirm button to exit.

- **PRIVACY NO :** Here is to set privacy mask zones. Please use the left/right button on the keyboard or in the speed dome terminal menu to set. The value ranges from 1 to 24.**Please note the value here may vary due to different protocols.**
- **ACTIVATE:** There are two settings: on and off. When activate function is on, the privacy mask function will be activated and displays in the screen. When activate function is off, the privacy mask function will be closed and the blank will not displayed in the screen.



- **RESIZE** : It is to adjust the privacy zone size. Please continue pressing direction button to widen or narrow zone size. ← is to narrow the horizontal width and → is to widen the horizontal width. ↑ is to widen vertical height and ↓ is to narrow the vertical height.
- **SAVE** : Here is to save user setup.
- **DELETE**: Here is to delete setup and restore default setting.
- **BACK**: Go back to previous menu.
- **EXIT**: Log out system menu.

### Power Up

Move the cursor to the POWER UP item and then click the confirm button, you can go to the fourth menu.

|          |       |
|----------|-------|
| POWER UP | : 1   |
| PARAMTER | : OFF |
| BACK     |       |
| EXIT     |       |

- **POWER UP**: It is to set the PTZ operation when the speed dome boots up. The option includes: NONE/AUTO/SCAN/PRESET/PATTERN/TOUR and etc. Please use the left/right button to set.
- **PARAMTER**: Here you can set the serial number of the corresponding operation such as the scan, preset, pattern, tour. Please use the left/right button to set.
- **BACK**: Go back to the previous menu.
- **EXIT**: Log out the system menu.

### Menu Password

Move the cursor to the MENU PASSWORD and the click the confirm button to go to the fourth menu.

|             |            |
|-------------|------------|
| PASSWORD:   | PASSWORD : |
| 1 2 3 4 5   | SETTING :  |
| 6 7 8 9 0   | BACK       |
| → SAVE BACK | EXIT       |

- **PASSWORD**: It is to set the speed dome menu password. Please use the left/right button to set.
- **SETTING**: Click the confirm button to go to the password setup interface. Please use the left/right button to set the value and then click the confirm button to confirm current option. Move the cursor to the SAVE button and then click the confirm button to save current setup. Click the BACK button to go to the previous menu.
- **BACK**: Go back to the previous menu.
- **EXIT**: Log out the system menu.

**If you have forgot your password. After three times of login failure, system may pop up an 8-digit internal code. Please contact our technical engineer for help.**

## 4.5 Dome Abnormal Operation

### 4.5.1 Restore to Factory Default Setup

From main menu-> SYSTEM INFORMATION, move cursor to FACTORY DEFAULT and click confirm button.

---

Dome will reboot and all the setups restore to factory default setup.

#### **4.5.2 PTZ Movement is not smooth**

From menu to SYSTEM INFORMATION, move cursor to RESTART and click confirm button. This reboot will not modify all activated setup (such as preset, tour and pattern)

## 5 Cable Connection

Multiple-function combination cable consists of network cable, audio/video terminal, and relay in/out terminal. Please refer to the following instruction labels for further reference.

Audio/video interface, power port and network port information is shown below:

| Name  |     | Function                                                                                 |
|-------|-----|------------------------------------------------------------------------------------------|
| VIDEO | GND | Ground.                                                                                  |
|       | OUT | Video output port. You can connect this port if you want to use the analog video output. |
| 24VAC |     | 24V power port. Connect to the power cable.                                              |
| EARTH |     | Ground port.                                                                             |
| LAN   |     | Network port. Connect to the network cable.                                              |

- Please refer to the label instruction for the alarm connection information of the multiple-function combination cable.

2. Relay in/out interfaces is shown below:

| Name      | Function                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Alarm out | <ul style="list-style-type: none"><li>a) When there is an alarm from current channel, system activates relay or not.</li><li>b) Alarm output relay default setup is NO. You can use the jump-cap near the power board relay to set.</li><li>c) NO: Normal open alarm output.</li><li>d) NC: Normal close alarm output.</li></ul>                                                                                                                                                                                                                                                                                                                             |
| GND       | Alarm input ground end.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Alarm in  | <ul style="list-style-type: none"><li>e) It is to receive relay signal from the external alarm source. You can go to dome menu to activate specified preset or patter.</li><li>f) When the activation mode is NO (normal open), dome alarms when there is low voltage. High voltage will not activate the alarm.</li><li>g) When the activation mode is NC (normal close), dome alarms when there is high voltage. Low voltage will not activate the alarm.</li></ul> <p>Note:</p> <ul style="list-style-type: none"><li>● Dome alarm input message is ground mode.</li><li>● Dome alarm input signal are two modes: normal open and normal close.</li></ul> |

### 5.1 System Layout

#### 5.1.1 System Connection

Please refer to Figure 5-1 for system connection information.

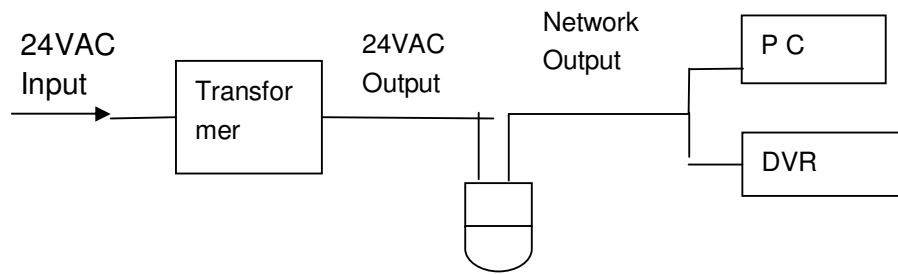


Figure 5-1

### 5.1.2 Alarm Connection

Please refer to Figure 5-2 for alarm connection information.

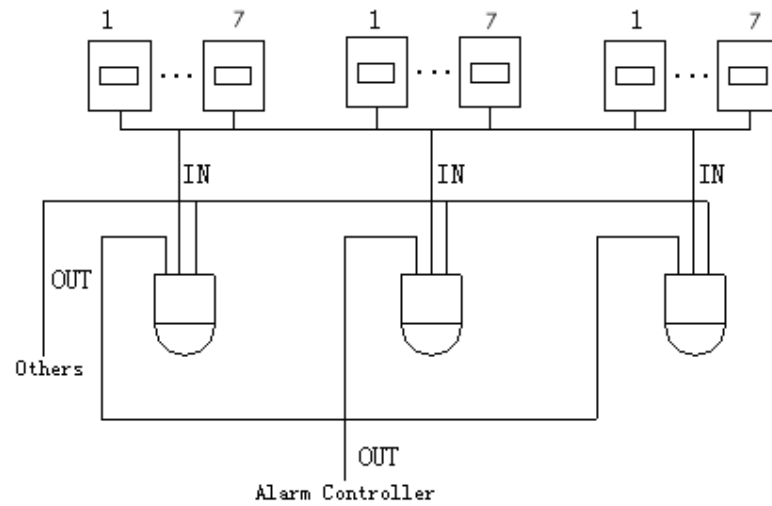


Figure 5-2

---

## 6 FAQ

### 6.1 Daily Maintenance

Please clean dome cover regularly to get vivid image.

Handle the cover with care. Use water to wash. Don't use cloth to clean.

Use mild detergent to clean if there is too much dust.

**Note:**

The sweat from your hand may erode plating surface, your nail may scrape dome cover result in blur image.

### 6.2 Problems and Solutions

| SYMPTOM                                                                   | CAUSE                                                                                                                                                                            | SOLUTION                                                                                                                                                                |
|---------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No self-diagnosis,<br>no video signal<br>when I connect<br>dome to power. | Red LED is not on. <ul style="list-style-type: none"><li>● 24V AC does not apply to the power. Or connection is too loose.</li><li>● Power off or Transformer problem.</li></ul> | <ul style="list-style-type: none"><li>● Check 24V AC power is connected or properly earthed.</li><li>● Check power supply condition or check 24V transformer.</li></ul> |
|                                                                           | Red LED light is on <ul style="list-style-type: none"><li>● 24V AC power is low</li><li>● Something wrong with power socket.</li></ul>                                           | <ul style="list-style-type: none"><li>● Use multimeter to check dome load.</li><li>● Please contact retailer to replace power socket.</li></ul>                         |
| No self diagnosis.                                                        | Power supply is inadequate.                                                                                                                                                      | Replace power socket.                                                                                                                                                   |
| There is a noise                                                          | Mechanical malfunction.                                                                                                                                                          | Need electrical engineer help.                                                                                                                                          |
| Video signal loss<br>occurs in high speed<br>rotation.                    | Power supply is not sufficient                                                                                                                                                   | Replace power socket.                                                                                                                                                   |
| Video signal is not<br>successive                                         | Circuit connection is too loose.                                                                                                                                                 | Connect tightly.                                                                                                                                                        |
|                                                                           | Video switch or power problem                                                                                                                                                    | Need electrical engineer help.                                                                                                                                          |
| Video is not clear.                                                       | Focus is in manual mode.                                                                                                                                                         | Control manually.                                                                                                                                                       |
|                                                                           | Dome cover is dirty.                                                                                                                                                             | Wash dome cover                                                                                                                                                         |
| During camera<br>switch, there is a tilt<br>movement in the<br>monitor.   | Camera power is not in the same<br>Phase.                                                                                                                                        | When several domes are<br>connected to one transformer,<br>please connect the transformer<br>output cable to the domes' same<br>side.                                   |

## 7 Appendix I Lightning Proof and Surge Protection

This series speed dome adopts TVS lightning protection technology. It can effectively prevent damages from various pulse signals below 4000V, such as sudden lightning and surge. While maintaining your local electrical safety code, you still need to take necessary precaution measures when installing the speed dome in the outdoor environment.

- The distance between the signal transmission cable and high-voltage device (or high-voltage cable) shall be at least 50 meters.
- Outdoor cable layout shall go under the penthouse if possible.
- For vast land, please use sealing steel tube under the land to implement cable layout and connects one point to the earth. Open floor cable layout is forbidden.
- In area of strong Lightning storm hit or near high sensitive voltage (such as near high-voltage transformer substation), you need to install additional high-power Lightning protection device or lightning rod.
- The Lightning protection and earth of the outdoor device and cable shall be considered in the building whole Lightning protection and conform to your local national or industry standard.
- System shall adopt equal-potential wiring. The earth device shall meet anti-jamming and at the same time conforms to your local electrical safety code. The earth device shall not short circuit to N (neutral) line of high voltage power grid or mixed with other wires. When connect the system to the earth alone, the earth resistance shall not be more than  $4\Omega$  and earth cable cross-sectional area shall below 25 mm<sup>2</sup>. See Figure 7-1.

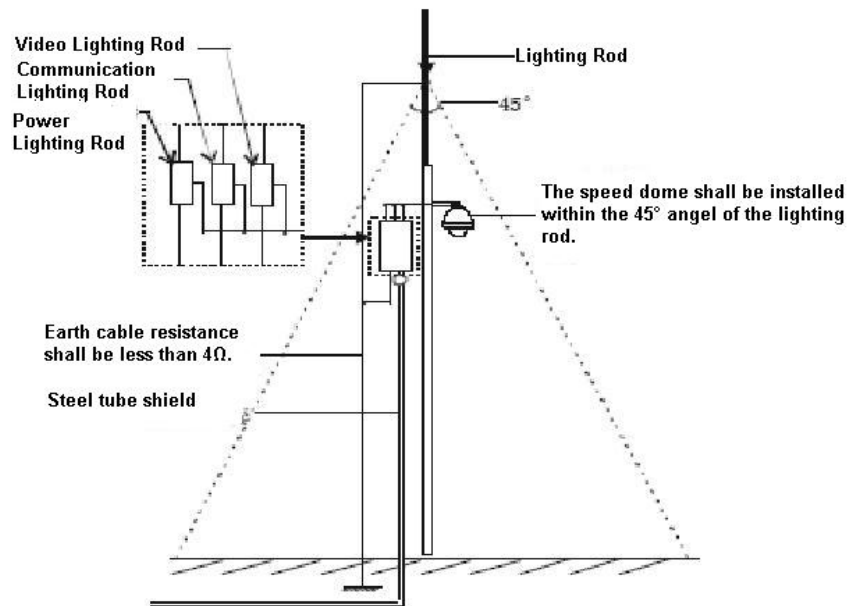


Figure 7-1

## 8 Appendix 2 Toxic or Hazardous Materials or Elements

| Component Name           | Toxic or Hazardous Materials or Elements |    |    |       |     |      |
|--------------------------|------------------------------------------|----|----|-------|-----|------|
|                          | Pb                                       | Hg | Cd | Cr VI | PBB | PBDE |
| Sheet Metal              | ○                                        | ○  | ○  | ○     | ○   | ○    |
| Plastic Parts            | ○                                        | ○  | ○  | ○     | ○   | ○    |
| PCB                      | ○                                        | ○  | ○  | ○     | ○   | ○    |
| Housing                  | ○                                        | ○  | ○  | ○     | ○   | ○    |
| Camera Driver            | ○                                        | ○  | ○  | ○     | ○   | ○    |
| Bearing                  | ○                                        | ○  | ○  | ○     | ○   | ○    |
| Connection Cable         | ○                                        | ○  | ○  | ○     | ○   | ○    |
| Motor<br>(If possible)   | ○                                        | ○  | ○  | ○     | ○   | ○    |
| Power<br>(If possible)   | ○                                        | ○  | ○  | ○     | ○   | ○    |
| Bracket<br>(If possible) | ○                                        | ○  | ○  | ○     | ○   | ○    |
| Accessories              | ○                                        | ○  | ○  | ○     | ○   | ○    |

### Note

O: Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the SJ/T11363-2006 standard.

X: Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant threshold of the SJ/T11363-2006 standard. During the environmental-friendly use period (EFUP) period, the toxic or hazardous substance or elements contained in products will not leak or mutate so that the use of these (substances or elements) will not result in any severe environmental pollution, any bodily injury or damage to any assets. The consumer is not authorized to process such kind of substances or elements, please return to the corresponding local authorities to process according to your local government statutes.

---

**Note**

- **This manual is for reference only. Slight difference may be found in the user interface.**
- **All the designs and software here are subject to change without prior written notice.**
- **All trademarks and registered trademarks mentioned are the properties of their respective owners.**
- **If there is any uncertainty or controversy, please refer to the final explanation of us.**
- **Please visit our website or contact your local service engineer for more information.**