

LIST OF PRODUCTS

- * Digital Multimeter
- * Digital AC & AC/DC Clampmeter
- * AC Clamp Adaptor
- * AC/DC Current Adaptor
- * Transistorised Electronic Analog & Digital Insulation Resistance Testers
- * Digital Sound Level Meter & Sound Level Calibrator
- * Digital contact & Non-contact Type Tachometer
- * Digital Non-contact (infrared) Thermometer
- * Thermo Hygrometer
- * Thermo Anemometer
- * Wood Moisture Meter
- * Distance Meter
- * Digital Hand Held Temperature Indicators
- * Digital Lux Meter
- * Network Cable Tester
- * Power Factor Regulator
- * Maximum Demand Controller/Digital Power Meter

KUSAM-MECO

17, Bharat Industrial Estate, T. J. Road, Sewree (W),
Mumbai-400015. INDIA

Sales Direct: 24156638 Tel.:(022)2412 4540, 2418 1649 Fax:(022)2414 9659

E-mail : kusam_meco@vsnl.net, Website : www.kusamelectrical.com

www.kusam-meco.co.in

KUSAM-MECO

**CLAMP-ON
MULTIMETER
2754A
2754A-T(TRUE RMS)**

**OPERATION
MANUAL**

KUSAM-MECO

CLAMP-ON MULTIMETER 2754A 2754A-T(TRUE RMS)



KUSAM-MECO

TAKE MEASUREMENT CAREFULLY AND YOU'LL SPARE YOUR METER AND YOURSELF, SOME PAIN

Nearly every electrical engineer has a hand held digital clamp meter (Tongtester). We sometimes take them for granted, until we damage them or "burn them out". If you incorrectly connect your clamp meter to a circuit, or if you have the clamp meter on wrong setting, you damage the meter and possibly hurt yourself. You can also get into trouble if you try to measure the voltage across a charged capacitor.

Clamp meter users frequently burn their meters by trying to measure current the same way as they measure voltage. Remember, you measure voltage **across** a circuit, and current **through** a circuit. When you use the current input, your clamp meter becomes a low impedance circuit element.

Even if you correctly insert your clamp meter in to the circuit, you can still damage your meter. Don't try to measure current in excess of your meter's capacity. Check the current capacity of the Clamp meter first.

If you are measuring current in industrial environment, to prevent excess current from flowing through your meter, always disconnect your test leads from the circuit under test whenever you change Clamp meter functions. Set your meter to the correct function, say current, and its highest range for the setting. If the reading is small, change the range to the next lower range till the reading can be read with the best possible accuracy. When measuring voltage, connect the test leads before your apply power to your circuit. To be safe, start by setting your meter to its highest range first.

TABLE OF CONTENTS

TITLE	PAGE
Safety.....	1
Electrical Symbols.....	3
SPECIFICATIONS	
General Specifications.....	4
Electrical Specifications.....	6
AC Voltage	6
DC Voltage.....	6
Ohms.....	7
Diode Tester.....	8
Capacitance.....	8
DCA Current.....	8
ACA Current.....	9
Product Description.....	10
Operation.....	11
Maintenance.....	17
Replacing the Battery.....	18
Test Certificate.....	19
Warranty.....	20

1) SAFETY

This manual contains information and warnings that must be followed for operating the instrument safely and maintaining the instrument in a safe operating condition. If the instrument is used in a manner not specified by the manufacturer, the protection provided by the instrument may be impaired.

The meter meets the requirements for double insulation to IEC61010-2-032(2002), EN61010-2-032(2002), UL61010B-2-032(2003); Category III 600 Volts AC and DC.

PER IEC61010 OVERVOLTAGE INSTALLATION CATEGORY***OVERVOLTAGE CATEGORY II***

Equipment of OVERVOLTAGE CATEGORY II is energy-consuming equipment to be supplied from the fixed installation.

Note-Examples include household, office, and laboratory appliances.

OVERVOLTAGE CATEGORY III


Equipment of OVERVOLTAGE CATEGORY III is equipment in fixed installations.


Note - Examples include switches in the fixed installation and some equipment for industrial use with permanent connection to the fixed installation.


OVERVOLTAGE CATEGORY IV

Equipment of OVERVOLTAGE CATEGORY IV is for use at the origin of the installation. Note - Examples include electricity meters and primary over-current protection equipment.

TERMS IN THIS MANUAL

 **Warning :** Identifies conditions and actions that could result in serious injury or even death to the user.


 **Caution :** Identifies conditions and actions that could cause damage or malfunction in the instrument

 **WARNING:**
To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The meter is intended only for indoor use.









To avoid electrical shock hazard, observe the proper safety precautions when working with voltages above 60 VDC or 30 VAC rms. These voltage levels pose a potential shock hazard to the user.

Keep your hands/ fingers behind the hand/finger barriers (of the meter and the test leads) that indicate the limits of safe access of the hand-held part during measurement. Inspect test leads, connectors, and probes for damaged insulation or exposed metal before using the instrument. If any defects are found, replace them immediately.

This Clamp-on meter is designed to apply around or remove from uninsulated hazardous live conductors. But still, individual protective equipment must be used if hazardous live parts in the installation where measurement is to be carried out could be accessible.

 **CAUTION :**
Disconnect the test leads from the test points before changing meter functions.

INTERNATIONAL ELECTRICAL SYMBOLS

	Caution ! Refer to the explanation in this Manual
	Caution ! Risk of electric shock
	Earth (Ground)
	Double Insulation or Reinforced insulation
	Fuse
	AC--Alternating Current.
	DC--Direct Current
	Application around and removal from hazardous live conductors is permitted

2) CENELEC Directives

The instruments conform to CENELEC Low-voltage directive 73/23/EEC and Electro magnetic compatibility directive 89/336/EEC

SPECIFICATIONS

GENERAL SPECIFICATIONS:

Display : 3¾ digits 4000 counts LCD display(s)

Update Rate : 3 per second nominal

Polarity : Automatic

Low Battery : Below approx. 2.4V

Operating Temperature : 0°C to 40°C

Relative Humidity : Maximum relative humidity 80% for temperature up to 31°C decreasing linearly to 50% relative humidity at 40°C

Altitude : Operating below 2000m

Storage Temperature : -20°C to 60°C, < 80% R.H.
(With battery removed)

Temperature Coefficient : Nominal 0.15 X
(specified accuracy)/°C @ (0°C-18°C or 28°C -40°C),
or otherwise specified

Sensing : Average sensing for Model 2754A; True
RMS for Model 2754A-T

Safety : Meets IEC61010-2-032(2002), EN61010-
2-032(2002), UL61010B-2-032(2003)

Category III 600 Volts AC & DC.

Transient protection : 6.5kV (1.2/50 S surge)

Pollution degree : 2

E.M.C. : Meets EN61326(1997, 1998/A1),
EN61000-4-2(1995), and EN61000-4-3(1996)

In an RF field of 3V/m:

Capacitance function is not specified

Other function ranges :

Total Accuracy = Specified Accuracy + 45 digits

Performance above 3V/m is not specified

Overload Protections:

Clamp-on jaws : DC 1000A or AC 800A rms
continuous + & COM terminals (all functions):
600VDC/VAC rms

Power Supply : Standard 1.5V AAA size battery X
2; or 1.5V AAA size alkaline battery X 2

Power Consumption : typical 11mA for ACA/DCA
and 2.9mA for other functions

APO Timing : Idle for 30 minutes

APO Consumption : typical 10 A for Model 2754A
& 190 A for Model 2754A-T

Dimension : 227(L) X 78(W) X 40(H)mm

Weight : 290gm approx

Jaw opening & Conductor diameter : 50mm max

Accessories : Test lead pair, batteries installed,
manual & soft carrying case.

ELECTRICAL SPECIFICATIONS

Accuracy is ± (% reading digits + number of digits) or otherwise specified, at 23°C ± 5°C and less than 75% R.H

True RMS Model 2754A-T ACV & ACA clamp-on accuracies are specified from 5% to 100% of range or otherwise specified. Maximum Crest Factor are as specified below, and with frequency spectrums, besides fundamentals, fall within the meter specified AC bandwidth for non-sinusoidal waveofrms.

DC VOLTAGE

Range	Accuracy	Resolution
400.0 mV	0.3% + 3d	0.1 mV
4.000 V	0.5% + 3d	0.001 V
40.00 V		0.01 V
400.0 V		0.1 V
600 V	1.0% + 4d	1 V

NMRR : >50dB @ 50/60Hz

CMRR : >120dB @ DC 50/60Hz, Rs =1k

Input Impedance : 10M , 30pF nominal (1000M for 400.0mV range)

AC VOLTAGE

Range	Accuracy	Resolution
50Hz ~ 500Hz		
400.0mV ¹⁾	4.0% + 4d	0.1 mV
50Hz ~ 60Hz		
4.000V	1.0% + 4d	0.001 V
40.00V		0.01 V
400.0V		0.1 V

AC VOLTAGE

Range	Accuracy	Resolution
60Hz ~ 500Hz		
4.000V	1.5% + 4d	0.001 V
40.00V		0.01 V
400.0V		0.1 V
50Hz ~ 500Hz		
600V	2.0% + 4d	1 V

CMRR : >60dB @DC to 60Hz, Rs =1k

Input Impedance : 10M , 30pF nominal

True RMS Model 2754A-T Crest factor :

<1.6:1 at full scale & <3.2:1 at half scale

¹⁾Selection by RANGE button manually, and is specified from AC 40mV (AC 60mV for True RMS) and up.

OHMS

Range	Accuracy	Resolution
400.0	0.8% + 6d	0.1
4.000 K	0.6% + 4d	1
40.00 K		10
400.0 K		100
4.000 M	1.0% + 4d	1 K
40.00 M	2.0% + 4d	10 K

Open Circuit Voltage : 0.4VDC typical

Audible Continuity Tester

Open Circuit Voltage : 0.4VDC typical

Range : 400.0 ; Accuracy : 1.5% + 6d

Audible threshold : between 10 and 120

DIODE TESTER

Open Circuit Voltage	Test Current (Typical)
< 1.6 VDC	0.4mA

CAPITANCE

Range ¹⁾	Accuracy ²⁾³⁾	Resolution
500.0nF	3.5% + 6d	0.1 nF
5.000 F		0.001 F
50.00 F		0.01 F
500.0 F		0.1 F
3000 F		1 F

¹⁾Additional 50.00nF range accuracy is not specified

²⁾Accuracies with film capacitor or better

³⁾Specified with battery voltage above 2.8V (approximately half full battery). Accuracy decreases gradually to 12% at low battery warning voltage of approximately 2.4V

DCA CURRENT (Clamp-on)

Range	Accuracy ¹⁾²⁾	Resolution
400.0A		
0A ~ 400.0A	1.5% + 4d	0.1 A
1000A		
400A ~ 800A	1.5% + 4d	1 A
800A ~ 900A	2.0% + 4d	
900A ~ 1000A	5.0% + 30d	

¹⁾Induced error from adjacent current-carrying conductor : <0.01A/A

²⁾Relative Zero Δ mode is applied to offset the non-zero residual readings, if any

ACA CURRENT (Clamp-on)

Range	Accuracy ¹⁾²⁾	Resolution
400.0A		
15Hz~40Hz	2.0% + 5d ³⁾	1 A
40Hz~200Hz	1.5% + 5d	
200Hz~400Hz @<50A ⁴⁾	1.5% + 5d	
400Hz~1kHz @<50A ⁴⁾	2.0% + 5d	
1000A		
15Hz~40Hz @400A~600A	2.0% + 5d ³⁾	1 A
40Hz~100Hz @400A~600A	1.5% + 4d	
15Hz~60Hz @600A~1000A	5.0% + 30d	

¹⁾Induced error from adjacent current-carrying conductor : <0.01A/A


²⁾True RMS Model 2754A-T Crest Factor : < 1.6:1 at full scale & < 3.2:1 at half scale

³⁾4.0% + 5d for True RMS Model 2754A-T

⁴⁾Accuracy is specified at <50A in this frequency bandwidth due to limited calibrator output capability for testing.

PRODUCT DESCRIPTION

This user's manual uses only representative model(S) for illustrations. Please refer specification details for function availability to each model.

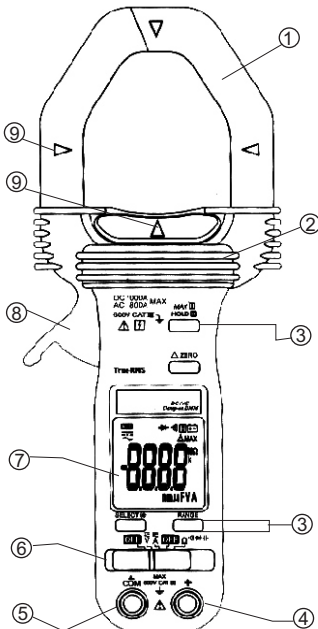

1) Hall-effect Clamp Jaw for AC & DC current electric field pick up.

2) Hand/Finger Barrier to indicate the limits of safe access of the meter during measurement.

3) Push-buttons for special functions & features.

4) Input Jack for all functions EXCEPT non-invasive ACA & DCA current functions

5) Common (Ground reference) Input Jack for all functions EXCEPT non-invasive ACA & DCA current functions


6) Slide-switch Selector to turn the power ON/OFF And Select a function

7) 3½ digits 4000 counts LCD display

8) Jaw trigger for opening the clamp jaw

9) Jaw center Indicators, at where best ACA & DCA accuracy is specified.

OPERATION

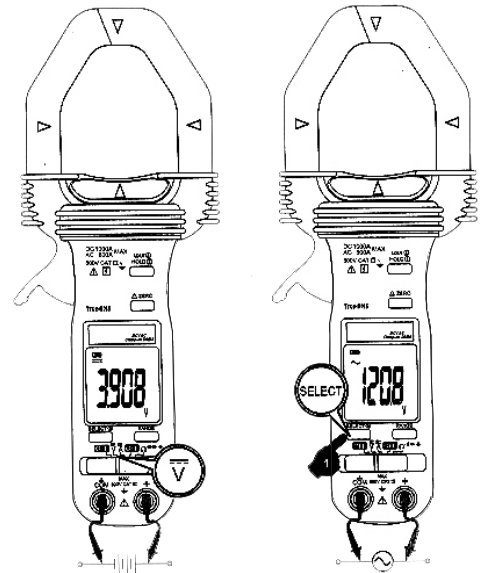

DC Voltage and AC Voltage functions

Inputs are made through the test lead terminals.


Note : DC 400mV range is designed with 1000M high input impedance for least current drain in measuring small signals, and can cope better with most commercially available voltage output transducers/adapters. The non-zero display reading is normal when the meter inputs are open circuit, which will not affect actual measurement accuracy.

The meter will show a close to zero reading when the inputs are shorted. Open input is actually a floating condition, which is not a zero-volt-input condition.

Note : AC 400.0mV range selection is by RANGE button manually, and is specified from AC 40mV & up for Model 2754A and from AC 60mV & up for TrueRMS Model 2754A-T.

ACA & DCA CURRENT CLAMP-ON FUNCTION

Inputs are made through the clamp jaws for non-invasive ACA & DCA current measurements.

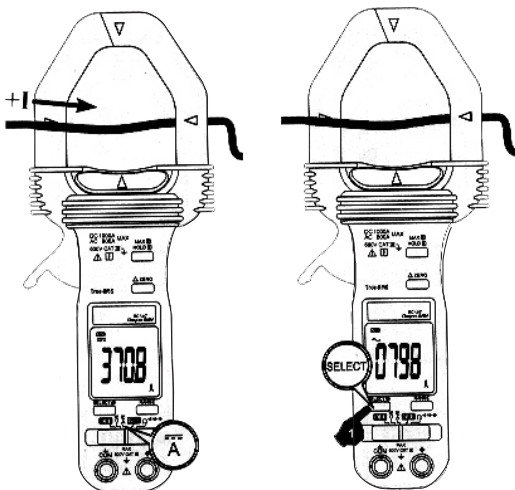


CAUTION

(Application and removal of the Clamp-on meter)

Press the jaw trigger and clamp the jaws around only one single conductor of a circuit for load current measurement. Make sure the jaws are completely closed, or else it will introduce measurement errors. Enclosing more than one conductor of a circuit will result in differential current (like identifying leakage current) measurement. Locate the conductor(s) at the jaws center as much as possible to get the best measuring accuracy. The jaw arrow-mark indicates current flow direction on DCA positive readings. For removal, press the jaw trigger and remove the jaws from the conductor(s).

Note : In DCA measurements, hysteresis of the jaws (after measuring high DC currents) may introduce non-zero residual readings. Relative Zero Δ mode should be used to offset the residual readings, if any, so as to get more accurate measurements. Adjacent current-carrying devices such as transformers, motors and conductor wires will affect measurement accuracy. Keep the jaws away from them as much as possible to minimize influence.

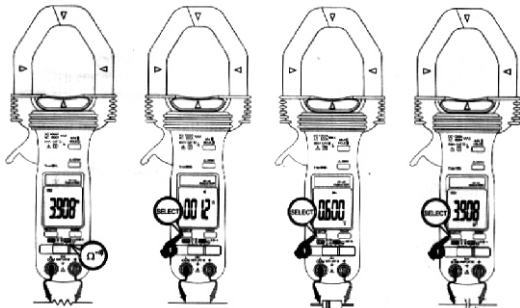

CAUTION

Using Resistance, Continuity or Diode function in a live circuit will produce false results and may damage the instrument. In many cases the suspected component must be disconnected from the circuit to obtain an accurate measurement reading.

RESISTANCE AND))) CONTINUITY FUNCTIONS

Inputs are made through the test leads terminals. Slide-switch on defaults at . Press **SELECT** button momentarily to select))) Continuity function which is convenient for checking wiring connections and operation of switches. A continuous beep tone indicates a complete wire.

→ DIODE TEST FUNCTION

Inputs are made through the test leads terminals. Slide-switch on defaults at . Press **SELECT** button momentarily 2 times to select → Diode test function. Normal forward voltage drop (forward biased) for a good silicon diode is between 0.400V to 0.900V. A reading higher than that indicates a leaky diode (defective). A zero reading indicates a shorted diode

(Defective). An OL indicates an open diode (defective). Reverse the test leads connections (reverse biased) across the diode. The digital display shows OL if the diode is good. Any other readings indicate the diode is resistive or shorted (defective).

—| CAPACITANCE FUNCTION

Inputs are made through the test leads terminals. Slide-switch on defaults at . Press **SELECT** button momentarily 3 times to select —| Capacitance function. Relative zero Δ mode can be used to zero out the parasitic capacitance of the leads and the internal protection circuitry of the meter when measuring low capacitance in the order of Pico Farad (pF).

CAUTION

Discharge capacitors before making any measurement. Large value capacitors should be discharged through an appropriate resistance load.

HOLD

The Hold feature freezes the display for later viewing. Press the **HOLD** button momentarily to toggle to the Hold feature. The annunciator “H” turns on.

MAX

The max feature compares and displays the measured maximum value as fast as 30ms with auto-ranging capability. It allows the meter to capture in-rush currents in current functions. Press and hold the **MAX** button for 1 second or more to toggle to the max feature. The annunciators “MAX” and “H” turn on.

RELATIVE ZERO Δ MODE

Relative Zero Δ mode allows the user to offset the meter consecutive measurements with the displaying reading as the reference value. The display will now show readings relative to the stored reference value. That is, display= reading - stored value. Press the Δ button momentarily to toggle to the relative zero mode. The annunciator " Δ " turns on. The meter also enters manual ranging mode where available. The annunciator "**AUTO**" turns off.

MANUAL OR AUTO-RANGING

Press the RANGE button momentarily to select manual -ranging mode, and the meter will remain in the range it was in, the LCD annunciator "**AUTO**" turns off. Press the button momentarily again to step through the ranges. Press and hold the button for 1 second or more to resume auto-ranging mode.

Display Backlight (available in 2754A-T only)

Press the **SELECT** button for 1 second or more to toggle the display backlight on and off.

AUTO POWER OFF (APO)

When the meter is on, the Auto Power Off (APO) feature will switch the meter to sleep mode automatically after approximately 30 minutes of no slide-switch nor push button operations to extend battery life. To wake up the meter from APO, press any push-buttons momentarily or set the slide-switch to the OFF position and then slide back on again. Always set the slide-switch to the OFF position manually when the meter is not in use.

MAINTENANCE



WARNING

To avoid electrical shock, disconnect the meter from any circuit, remove the test leads from the input jacks and turn OFF the meter before opening the case. Do not operate with open case.

Trouble Shooting

If the instrument fails to operate, check batteries and test leads etc., and replace as necessary. Double check operating procedure as described in this user's manual.

If the instrument voltage-resistance input terminal has subjected to high voltage transient (caused by lighting or switching surge to the system) by accident or abnormal conditions of operation, the series fusible resistors will be blown off (become high impedance) like fuses to protect the user and the instrument. Most measuring functions through this terminal will then be open circuit. The series fusible resistors and the spark gaps should then be replaced by qualified technician. Refer to the Warranty section for obtaining warranty and repairing service.


Cleaning and storage

Periodically wipe the case with a damp cloth and mild detergent; do not use abrasives or solvents. If the meter is not to be used for periods of longer than 60 days, remove the batteries and store it separately.

BATTERY REPLACEMENT

The meter uses standard 1.5V AAA Size battery X 2,
or 1.5V AAA size alkaline battery X 2.

Loosen the 2 captive screws from the battery cover case. Lift the battery cover case. Replace the batteries. Replace battery cover case. Re-fasten the screws.

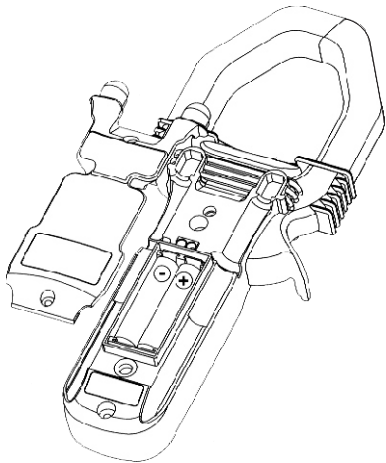

MUMBAI

TEST CERTIFICATE

CLAMP-ON MULTIMETER

This Test Certificate warrants that the product has been inspected and tested in accordance with the published specifications.

The instrument has been calibrated by using equipment which has already been calibrated to standards traceable to national standards.

MODEL NO. 2754A / 2754A - T

SERIAL NO. _____

DATE: _____

ISO 9001
REGISTERED



WARRANTY

Each "KUSAM-MECO" product is warranted to be free from defects in material and workmanship under normal use & service. The warranty period is one year (12 months) and begins from the date of despatch of goods. In case any defect occurs in functioning of the instrument, under proper use, within the warranty period, the same will be rectified by us free of charges, provided the to and fro freight charges are borne by you.

This warranty extends only to the original buyer or end-user customer of a "KUSAM-MECO" authorized dealer.

This warranty does not apply for damaged Ic's, fuses, burnt PCB's, disposable batteries, carrying case, test leads, or to any product which in "KUSAM-MECO's" opinion, has been misused, altered, neglected, contaminated or damaged by accident or abnormal conditions of operation or handling.

"KUSAM-MECO" authorized dealer shall extend this warranty on new and unused products to end-user customers only but have no authority to extend a greater or different warranty on behalf of "KUSAM-MECO".

"KUSAM-MECO's" warranty obligation is limited, at option, free of charge repair, or replacement of a defective product which is returned to a "KUSAM-MECO" authorized service center within the warranty period.

THIS WARRANTY IS BUYER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. "KUSAM-MECO" SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, INCLUDING LOSS OF DATA, ARISING FROM ANY CAUSE WHATSOEVER.

All transactions are subject to Mumbai Jurisdiction.

KUSAM-MECO

G-17, Bharat Industrial Estate,
T.J.Road, Sewree (W),
Mumbai - 400015. (INDIA)

Sales Direct : 24156638

Tel : 91-22-2412 4540, 2418 1649

Fax : 91-22-2414 9659

Email : kusam_meco@vsnl.net

Website : www.kusamelectrical.com

www.kusam-meco.co.in