



user guide

User Guide for the Kyocera Slider™ Remix KX5 Phone

This manual is based on the production version of the Kyocera KX5 phone. Software changes may have occurred after this printing. Kyocera reserves the right to make changes in technical and product specifications without prior notice. The products and equipment described in this documentation are manufactured under license from QUALCOMM Incorporated under one or more of the following U.S. patents:

4,901,307 5,109,390 5,267,262 5,416,797 5,506,865
 5,544,196 5,657,420 5,101,501 5,267,261 5,414,796
 5,504,773 5,535,239 5,600,754 5,778,338 5,228,054
 5,337,338 5,710,784 5,056,109 5,568,483 5,659,569
 5,490,165 5,511,073
 Other patents pending.

The Kyocera Wireless Corp. ("KWC") products described in this manual may include copyrighted KWC and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for KWC and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the KWC products may not be modified, reverse engineered, distributed or reproduced in any manner not permitted by law. Furthermore, the purchase of the KWC products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of KWC or any third party software provider, except for the normal, non-exclusive royalty-free license to use that arises by operation of law in the sale of a product.

Kyocera is a registered trademark and Slider is a trademark of Kyocera Corporation. QUALCOMM is a registered trademark of QUALCOMM Incorporated. Openwave is a trademark of Openwave Systems Incorporated.

eZiText is a registered trademark of Zi Corporation. TransFlash is a trademark of SanDisk Corporation. All other trademarks are the property of their respective owners.

Copyright © 2005 Kyocera Wireless Corp.
 All rights reserved. Ringer Tones Copyright © 2000-2002 Kyocera Wireless Corp.

82-N8734-1, Rev. 001

FCC/IC Notice

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Kyocera Wireless Corp. (KWC) supplied and approved case CV90-G2573-02 and holsters CV90-G2958-01 and CV90-G2989-02.

Other accessories used with this device for body-worn operations must not contain any metallic components and must provide at least 25 mm separation distance including the antenna and the user's body.

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.* Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value.

This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

Body-worn measurements differ among phone models, depending upon availability of accessories and FCC requirements. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section <http://www.fcc.gov/oet/fccid> after searching on the FCC ID: OVFKWC-KX5-5X0.

Additional information on SAR can be found on the Cellular Telecommunications and Internet Association (CTIA) web-site at <http://www.wow-com.com>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Caution

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the warranty and user's authority to operate the equipment.

Optimize your phone's performance

Use the guidelines on page 2 to learn how to optimize the performance and life of your phone and battery.

Air bags

If your vehicle has an air bag, DO NOT place installed or portable phone equipment or other objects over the air bag or in the air bag deployment area. If equipment is not properly installed, you and your passengers risk serious injury.

Medical devices

Pacemakers—Warning to pacemaker wearers: Wireless phones, when in the 'on' position, have been shown to interfere with pacemakers. The phone should be kept at least six (6) inches away from the pacemaker to reduce risk.

The Health Industry Manufacturers Association and the wireless technology research community recommend that you follow these guidelines to minimize the potential for interference.

- Always keep the phone at least six inches (15 centimeters) away from your pacemaker when the phone is turned on.
- Do not carry your phone near your heart.
- Use the ear opposite the pacemaker.
- If you have any reason to suspect that interference is taking place, turn off your phone immediately.

Hearing aids—Some digital wireless phones may interfere with hearing aids. In the event of such interference, you may want to consult your service provider or call the customer service line to discuss alternatives.

Other medical devices—If you use any other personal medical device, consult the manufacturer of the device to determine if it is adequately shielded from external RF energy. Your physician may be able to help you obtain this information.

In health care facilities—Turn your phone off in health care facilities when instructed. Hospitals and health care facilities may be using equipment that is sensitive to external RF energy.

Potentially unsafe areas

Posted facilities—Turn your phone off in any facility when posted notices require you to do so.

Aircraft—FCC regulations prohibit using your phone on a plane that is in the air. Turn your phone off or switch it to Airplane Mode before boarding aircraft.

Vehicles—RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer of the device to determine if it is adequately shielded from external RF energy.

Blasting areas—Turn off your phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres—Turn off your phone when you are in any area with a potentially explosive atmosphere. Obey all signs and instructions. Sparks in such areas could cause an explosion or fire, resulting in bodily injury or death. Areas with a potentially explosive atmosphere are often, but not always, clearly marked.

They include:

- fueling areas such as gas stations
- below deck on boats
- transfer or storage facilities for fuel or chemicals
- vehicles using liquefied petroleum gas, such as propane or butane
- areas where the air contains chemicals or particles such as grain, dust, or metal powders
- any other area where you would normally be advised to turn off your vehicle engine

Use with care

Use only in normal position (to ear). Avoid dropping, hitting, bending, or sitting on the phone.

Keep phone dry

If the phone gets wet, turn the power off immediately and contact your dealer. Water damage may not be covered under warranty.

Resetting the phone

If the screen seems frozen and the keypad does not respond to keypresses, reset the phone by completing the following steps:

1. Remove the battery door.
2. Remove and replace the battery.

If the problem persists, return the phone to the dealer for service.

Accessories

Use only Kyocera-approved accessories with Kyocera phones. Use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

Radio Frequency (RF) energy

Your telephone is a radio transmitter and receiver. When it is on, it receives and sends out RF energy. Your service provider's network controls the power of the RF signal. This power level can range from 0.006 to 0.6 watts.

In August 1996, the U.S. Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. These guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies in the following reports:

- ANSI C95.1 (American National Standards Institute, 1992)
- NCRP Report 86 (National Council on Radiation Protection and Measurements, 1986)
- ICNIRP (International Commission on Non-ionizing Radiation Protection, 1996)

Your phone complies with the standards set by these reports and the FCC guidelines.

E911 mandates

Where service is available, this handset complies with the Phase I and Phase II E911 Mandates issued by the FCC.

Battery and charger specifications

Charger	Input	Output	Where Used
CV90-G2968-01	120VAC 60Hz 7W	5.2VDC 400mA	US
CV90-G2588-01	100-240VAC 50/60Hz 0.2A	4.2VDC 0.6A	US
CV90-G2589-01	100-240VAC 50/60Hz 0.3A	4.5VDC 1.2A	US
CV90-K0267-01	100-240VAC 50/60Hz 0.2A	4.2VDC 0.6A	Argentina
CV90-K0268-01	100-240VAC 50/60Hz 0.2A	4.2VDC 0.6A	Brazil
CV90-K0269-01	100-240VAC 50/60Hz 0.2A	4.2VDC 0.6A	Australia
CV90-G2998-01	100-240VAC 50/60Hz 0.2A	4.2VDC 500mA	US
Standard Battery:			
CV90-N1020-06: 3.7 V / 900 mAh			
Extended Battery:			
CV90-N1070-05: 3.7 V / 1550 mAh			



093 453 037

Kyocera Wireless Corp.





10300 Campus Point Drive, San Diego, CA 92121
U.S.A.

Visit us at www.kyocera-wireless.com

CONTENTS

1 Getting Started	1	Viewing details about a song file	34
Installing the battery	1	Viewing details about the playlist	35
Getting to know your phone	3	Erasing a song	35
2 Making and Answering Calls	10	Troubleshooting	35
Making a call	10	7 Using Media Gallery	36
Silencing an incoming call	11	Accessing files	36
Using the speakerphone	11	8 Customizing Your Phone	39
Speed dialing	13	Silencing all sounds	40
Setting up voicemail	14	Choosing ringers	40
Understanding roaming	15	Setting sounds for your phone	41
Using your phone in an airplane	17	Using shortcuts	43
3 Entering Letters, Numbers, and Symbols	18	Personalizing the screen	43
4 Storing Contacts	21	Creating a secure environment	45
Creating a new contact	21	Setting position location	48
Adding a code or extension	21	9 Sending and Receiving Text Messages	49
Customizing your contacts	21	Sending text messages	49
Editing a contact	23	Retrieving text messages	53
Erasing a contact	23	Customizing message settings	55
Sending a vCard	23	10 Sending and Receiving Multimedia Messages	56
Customizing a phone number	24	Sending multimedia messages	56
Finding contact information	24	Receiving multimedia messages	57
5 Using the Camera	26	Viewing multimedia messages	58
Taking a picture	28	11 Using Tools	60
Camera key map	28	Voice Memo	60
Recording a video	29	Scheduler	60
6 Using the Music Player	31	Alarm Clock	62
Removable memory card	31	Tip Calculator	62
Formatting the memory card	31	Calculator	63
Putting music files onto the memory card	32	Timer	63
Playing music	33	Stopwatch	63
Music Player controls	34		
Playback options	34		

12 Using Bluetooth® Wireless Technology	64
13 Using Voice Recognition	67
Setting up voice dialing	67
Making a call using voice tags	67
Making a call using digit dialing	68
Training voice recognition	70
14 Connecting to the Internet	71
Using the Web Browser	71
15 Getting Help	73
Index	75



1 GETTING STARTED

Installing the battery

Your Kyocera KX5 phone comes with a removable lithium ion (LI Ion) battery. **Fully charge the battery before using the phone.**

To install the battery:

1. Hold the phone face down.
2. Slide the tab at the bottom of the door up and remove the battery door.
3. Place the battery in the phone casing with the metal contacts facing the right side of the phone.
4. Replace the battery door by sliding the notches into the openings near the top of the phone.
5. Lower the battery door and slide the tab at the bottom of the door up and then down to secure the cover into place.




Charging the battery

You must have at least a partial charge in the battery to make or receive calls.

To charge the battery:

1. Connect the AC adapter to the jack on the bottom of the phone.
2. Plug the adapter into a wall outlet.

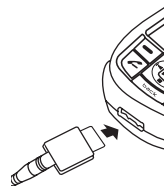

The battery icon in the upper-right corner of the screen tells you whether the phone is:

- Charging (the icon is animated)
- Partially charged
- Fully charged

Note: The battery will not charge if you use the phone while it is connected to an AC adapter.

Recharging the battery

You can safely recharge the battery at any time, even if it has a partial charge.

Note: To remove the battery, make sure the phone is powered off.

Caring for the battery

General safety guidelines

- Do not take apart, puncture, or short-circuit the battery.
- If you have not used the battery for more than a month, recharge it before using your phone.
- Avoid exposing the battery to extreme temperatures, direct sunlight, or high humidity.
- Never dispose of any battery in or near a fire. It could explode.

Common causes of battery drain

- Playing games or using the Web.
- Playing music files.
- Taking pictures and videos with the flash on.
- Keeping backlighting on.
- Operating in analog (**A**) mode. Your phone switches between modes to find the best signal. To set your phone to operate in a single mode, select **Menu** → **Settings** → **Network** → **Digital/Analog**.
- Operating in digital mode when far away from a base station or cell site.
- Using data cables or accessories.
- Operating when no service is available, or service is available intermittently.
- High earpiece and ringer volume settings.
- Repeating sound, vibration, or lighted alerts.



Accessing keypad shortcuts

Navigation key shortcuts

From the home screen, press the navigation key in one of four directions to access three shortcuts and one custom menu (see page 43 for instructions on setting up your custom menu).




Music player shortcuts

With the slide open or closed, from the home screen, press and hold . With the slide open, press . The Music Player screen appears.


Getting to know your phone

The phone is shown here in open position. You must slide your phone open to use the keys on the lower portion of the phone. When the phone is closed, the keys are locked to prevent accidental key presses.

- ① **Home screen.**
- ② **Left softkey** accesses menus and functions.
- ③ **Send/Talk key** starts or answers a call. Press once to activate voice dialing, twice to display the Recent Calls list, and three times to redial the last number dialed.
- ④ **Speakerphone key** activates the speakerphone and answers incoming calls.
- ⑤ **Keypad** for entering numbers, letters, or symbols.
- ⑥ **Shift * key** changes the text mode in text entry.
- ⑦ **Jack for AC adapter** (included) and data cable.
- ⑧ **External camera key** activates Camera mode. To activate Camera mode, press and hold until you hear two beeps. Press and hold again for Video mode.
- ⑨ **Navigation key** scrolls through lists and text entry fields and accesses shortcuts from the home screen.
- ⑩ **OK key** selects a menu item or option. Press and hold to launch Music Player.
- ⑪ **Right softkey** accesses the Messages menu.
- ⑫ **End/Power key** turns the phone on and off, ends a call, Music Player, or browser session, and returns you to the home screen.
- ⑬ **Back key** erases characters in text entry and returns you to the previous screen.
- ⑭ **Music key** launches the Music Player.
- ⑮ **Space # key** enters a space during text entry. Press and hold to activate or deactivate Silent mode.
- ⑯ **0 Next key** cycles through word choices during eZi Text entry.

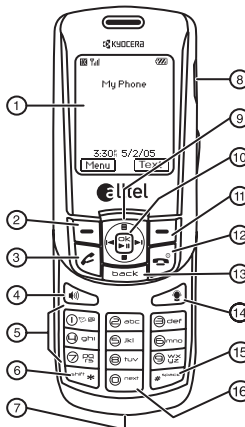

- ⑪ **Antenna** does not extend.
- ⑫ **External camera key** activates Camera mode. To activate Camera mode, press and hold until you hear two beeps. Press and hold again for Video mode.
- ⑬ **TransFlash slot** for external memory card.
- ⑭ **Camera flash.**
- ⑮ **Jack** for hands-free headset (sold separately).
- ⑯ **Mirror** when taking your own picture.
- ⑰ **Volume key** to raise or lower speaker volume. Press and hold up or down to activate/deactivate Silent Mode.
- ⑱ **Camera lens.**
- ⑲ **Speaker** for ringers, speakerphone, and music.
- ⑳ **Service Indicator Light.**

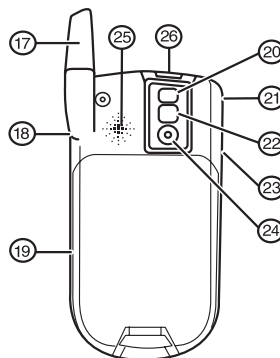

Using menus

The contents of the main menu are as follows:

Messaging

New Text Msg
New Pic Msg
Voicemail
InBox
Browser Alerts
Sent
OutBox
Saved
Drafts
Msg Settings
Group Lists
Erase Messages

Access Apps

Access Shop
Settings
Help

Camera

Launches the camera

Mobile Web

Connects to Internet

Contacts

View All
Add New
Find Name
Speed Dial List
Voice Dial List
Messaging Groups
Business List
Personal List
Information

Recent Calls

All Calls
Incoming Calls
Outgoing Calls
Missed Calls
Erase Call Lists
Recent Calls Timer
All Calls Timer

Media Gallery

Camera Pictures
Images
Sounds
Videos

Music Player

Displays your music library (if music files are saved on an inserted memory card)

Bluetooth®

On/Off
My Devices
Settings







Tools

Voice Memo
Scheduler
Alarm Clock
Tip Calculator
Calculator
Timer
Stopwatch

Settings

Silent Mode
Keyguard
Sounds
Display
Convenience
Memory Card
Voice Features
Messaging
Security
Network
Accessories
USB Storage
Phone Info

Accessing menu items (slide open)

- From the home screen, press the left softkey  to select **Menu**.
- Press and hold  up to select **Contacts**.
- Press  left, right, up, or down to see menus and options.
- Press  to select a menu item.
- Press  to back up a menu level.
- Press  to return to the home screen.

In this guide, an arrow → tells you to select an option from a menu.














For example, **Menu → Settings** means select **Menu**, then select the **Settings** option.

Note: To change the way the menus appear, see “Choosing a menu view” on page 43 for details.

















Performing basic functions

Slide closed

Note: The phone must be powered ON to perform the following functions.

To...	From the home screen...
Make a call	Press  to initiate voice dialing. Contact must have voice tag assigned (see page 67).
End a call	Press  .
Adjust volume during a call	Press  up or down.
Acknowledge an alert	Press  when you see OK .
Access menus	Press the left softkey  once.
Scroll menus	Press  up and down.
Select menus	Highlight a menu or option and press  once.
Access Recent Calls List	Press and hold  down.
Activate Camera mode	Press and hold the side camera key  .
Take a picture	Activate Camera mode and press the left softkey  .
Switch from Camera to Video mode	From Camera mode, press and hold the side camera key  .
Record a video	Activate Video mode and press the left softkey  .
Access Music Player	Press and hold  .

Slide open

To...	From the home screen...
Turn the phone on	Press  and wait until the phone beeps.
Turn the phone off	Press and hold  until the phone beeps.
Make a call	Enter the number and press  .
End a call	Press  .
Answer a call	Press  .
Access voicemail	Press and hold  and follow the system prompts.
Verify your phone number	Select Menu → Settings → Phone Info .
Silence the ringer on an incoming call	Press  or the left softkey  then  to answer.
Activate voice dialing	Press  once and follow the prompts (see page 67).
Choose ringers	Press and hold  left.
Launch Axxess Apps	Press and hold  right.
Launch Axxess Mobile Web	Press and hold  down.
Access Contacts list	Press and hold  up.
Access Music Player	Press and hold  or press the music key  .

Understanding screen icons

These icons may appear on your phone's screen.



The phone is operating in IS2000 (1X) digital mode.



The phone is operating in IS95 digital mode.



The phone is operating in Analog (FM) mode.



The phone is receiving a signal. You can make and receive calls. Fewer bars indicate a weaker signal.



A call is in progress.



The phone is not receiving a signal. You cannot make or receive calls.



The phone is roaming outside of its home service area.



You have a text message.
(indicates the message is urgent.)



You have a voice message.



You have a voice/text message.



The phone is in camera mode.



Camera flash mode is ready.



Camera timer mode is ready.



Camera zoom mode is ready.



The phone is in video mode.



The battery is fully charged. The more green bars, the greater the charge.



The alarm clock is set.



The phone is in privacy mode or is accessing a secure Web site.



High-speed (3G) data service is available and active on your phone.



Check with your service provider for availability.



(blinking) The phone is sending high-speed data.



(blinking) The phone is receiving high-speed data.



High-speed data service is available, but the phone is dormant.



The phone is at the home screen.

To access **Menu**, press the left softkey .



The phone is at the home screen. To

access **Messages**, press the right softkey .



The phone is set to light up instead of ring.



The phone is set to vibrate or to vibrate and then ring.



Position location is set to your service provider and to emergency services.




Position location is set to emergency services only.



Bluetooth® wireless technology is enabled (On).



2 MAKING AND ANSWERING CALLS

Making a call

Make sure you are in an area where a signal can be received. Look for the  symbol on the home screen. The more bars you see in this symbol, the stronger the signal. If there are no bars, move to where the signal strength is better.



When the phone has been idle for a time, it changes to power save mode. When you see "Power Save" on your phone's screen, press any key to return to normal operating mode.

Slide open

1. Open the slide.
2. Enter the phone number and press .
3. To end the call, press  or close the slide (if "Close to End" is enabled, see "Ending calls using the slide" on this page).

Slide closed

You can only use the voice dialing feature when calling with the slide closed. Voice dialing requires that a contact be saved with a voice tag. See page 67.

1. Press and hold  to initiate voice dialing.
2. Say the name of the contact when prompted. The phone places the call.
3. Press  once.

Ending calls using the slide



You can set the phone to end calls immediately when you close the slide.

- Select **Menu** → **Settings** → **Convenience** → **Close to End** → **Enabled**.
 - Select **Disabled** to have the phone call continue when you close the slide.


Answering a call

When a call comes in, the phone rings, vibrates, or lights up, and animated musical notes appears. The phone number of the caller also appears if it is not restricted. If the number is stored in your Contacts directory, the contact name appears.

Slide open

- Press  to answer the incoming call.
- or –
- Press  to answer the incoming call and turn on the speakerphone.

Slide closed



- Press  to select **Answer Call**.

Answering calls using the slide




You can set the phone to answer immediately when you open the slide. This feature does not apply to incoming data or fax calls.

- Select **Menu** → **Settings** → **Convenience** → **Open to Answer** → **Enabled**.
 - Select **Disabled** to have the phone continue ringing when you open the slide.



Adjusting the volume during a call

- To adjust the earpiece volume during a call, press   up or down.

Silencing an incoming call




- Press  or the left softkey .
- Press the right softkey  to select **Ignore**.

Note: In the absence of voicemail, this feature drops the call.

- or -
- Press  then press  to answer the call.



This action silences the current call only. The next call will ring as normal.

Redialing a number

- To redial a recent call, press  twice to open your Recent Calls list. Highlight a phone number or name and press .
- Tip:** To redial the last number called, received, or missed, press  three times.



Calling a saved number



If you have already saved a phone number, you can use the Contacts list to find it quickly.

1. From the home screen, press and hold  up to select **Contacts**.
2. Scroll down the list to find the contact you want to call.
3. Highlight the name and press  to dial the number.

Using the speakerphone

Your Kyocera KX5 phone has a built-in speakerphone.

- To turn on the speaker, open the slide and press . If you press  during an incoming call alert, you answer the call.

The  icon at the top of the phone screen indicates that the speakerphone is on.
- To turn off the speakerphone, open the slide and press .

Setting the phone to hold calls

The Hold Call feature allows you to place incoming calls on hold until you are ready to answer them.

Note: This feature will not work if “Open to Answer” is enabled. See “Answering calls using the slide” on page 11.

1. Select **Menu** → **Settings** → **Convenience** → **Hold Call** → **Enabled**.


- If you have not recorded a hold message, you will be prompted to record one, such as “Please hold. I’ll answer in a minute.”
2. Record the message twice, as prompted.
 3. Select **Save** or **Options (Play, Re-Record, or Exit)**.

The next time a call comes in, you will have the option of placing it on hold.

Placing a call on hold

You can place a call on hold once you have enabled this feature.

Note: If you are already on a call and you receive another call, you cannot place the incoming call on hold. It will go to voicemail.






1. When a call comes in, press the right softkey  to select **Options**.
2. Choose from **Ignore** or **Hold Call**.
 - If you select **Hold Call**, the caller will be placed on hold and will hear your recorded hold message.
 - If you select **Ignore**, the call will go directly to voicemail.
3. To speak to the caller, select **Answer Call**.
 - or –
 - To hang up without speaking to the caller, select **End Call**.

Changing the hold message

1. Select **Menu** → **Settings** → **Convenience** → **Hold Call** → **Re-Record Msg** and follow the prompts.
2. Record the message twice.
3. Select **Save** or **Options (Play, Re-Record, or Exit)**.


Dealing with missed calls

When you have missed a call, “Missed Call” appears on your screen unless the caller leaves a voicemail.

- To clear the screen, press the left softkey  to select **OK**.
- To view details of the call, press the right softkey  to select **Calls** then press .
- To return the call, press the right softkey  to select **Calls** then press .



Setting missed call alerts


You can set an alert to beep every five minutes after you have missed a call.

1. Select **Menu** → **Settings** → **Sounds** → **Alerts** → **Missed Call Alert**.
2. Select an option and press .


Viewing recent call details

Details on the last 60 calls you made, received, or missed are stored in the Recent Calls list and are identified by the following icons:

 Outgoing call  Incoming call




 Missed call (flashing)

Viewing recent calls


1. Select **Menu** → **Recent Calls**.
2. Select a list: **All Calls**, **Incoming Calls**, **Outgoing Calls**, or **Missed Calls**.
3. Select a recent call item and press the right softkey  to select **Options**:
 - **Save** adds the phone number to the Contacts list.
 - **Send Msg** sends a text message to the contact.
 - **Send Pict Msg** sends a picture message to the contact.
 - **Erase** erases the selected call record.

Note: If the phone number has been classified as “secret,” you must enter your four-digit lock code to view or edit it. For information on the lock code, see “Changing your lock code” on page 45. To classify a phone number as secret, see “Creating a new contact” on page 21.

Calling recent calls

1. Press and hold  up.
2. Highlight the number you want to call and press .
- or -
1. Select **Menu** → **Recent Calls** → **Outgoing Calls**.
2. Highlight the number you want to call and press .

Erasing recent calls

1. Select **Menu** → **Recent Calls** → **Erase Call Lists**.
2. Select an option: **All Calls**, **Incoming Calls**, **Outgoing Calls**, or **Missed Calls**.
3. Press  to select **Yes**.


Speed dialing

Before you can use speed dialing, you must save a phone number as a contact and assign a speed dial location to it.

- To add a speed dial location to a saved or new contact, see “Customizing a phone number” on page 24.

Using speed dialing

To call a contact that has a speed dial location:

- From the home screen, enter the one- or two-digit speed dialing location and press .

1-Touch dialing

1-Touch dialing is the fastest way to speed dial a contact that has a speed dial location.




Note: You must (1) enable 1-Touch dialing on your phone and (2) have a speed dial location assigned to a contact.

Enabling 1-Touch dialing

- Select **Menu** → **Settings** → **Convenience** → **1-Touch Dialing** → **Enabled**.




Using 1-Touch dialing

To call a contact that has a speed dial location:

- From the home screen, press and hold the speed dialing number. If it is a two-digit number, press the first digit briefly, then press and hold the second digit. For example, if the speed dialing location is 15, press   briefly, then press and hold .

Setting up voicemail


Before your phone can receive voicemail messages, you must set up a password and record a personal greeting with your service provider. When you have set up your voicemail, all unanswered calls to your phone are automatically transferred to voicemail, even if your phone is in use or turned off.

1. From the home screen, press and hold  .
2. Press  at the message.


3. Follow the system prompts to create a password and record a greeting.

Note: If you are having trouble accessing your voicemail, contact your service provider.

Checking voicemail messages

When a voice message is received, your screen displays “New Messages” along with the  symbol at the top of your screen. The symbol flashes if the message is urgent.

If you see “New Messages”



1. Press the left softkey  to select **Call**, which initiates a call to your voicemail number.
2. Follow the prompts to retrieve the message.

To clear the screen without checking messages:

- Press the right softkey , then  to select **Ignore**.


If you see only the symbol

Slide open

1. Press and hold   to initiate a call to your voicemail number.
 2. Follow the prompts to retrieve the message.
- You can set the phone to beep or vibrate every five minutes to remind you that you have voicemail. See “Setting message alerts” on page 42.

Calling emergency services



Note: Regardless of your 3-digit emergency code (911, 111, 999, 000, etc.), your phone operates as described below.

- Dial your 3-digit emergency code and press .

You can call the code even if your phone is locked or your account is restricted. When you call, your phone enters **Emergency mode**. This enables the emergency service exclusive access to your phone to call you back, if necessary. To make or receive regular calls after dialing the code, you must exit this mode.

To exit Emergency mode

When you have completed the emergency call:

1. Press  to select **Exit**.
2. Press  again to confirm your choice.


Note: To determine who has access to your location, see “Setting position location” on page 48.

Tracking calls

You can track the number and duration of calls made and received on your phone.

1. Select **Menu** → **Recent Calls**.

2. Select a timer:

- **Recent Calls Timer** tracks all calls you have made and received since you last reset this timer. To reset this timer to zero, press the right softkey  to select **Reset**.
- **All Calls Timer** tracks all calls you have made and received. This timer cannot be reset.

Timing your calls

You can set your phone to beep 10 seconds before each minute passes when you are on a call.

- Select **Menu** → **Settings** → **Sounds** → **Minute Alert** → **Enabled**.


Receiving data or faxes

Your phone may be able to receive certain data or faxes, depending on the system sending the information. For more information, see page 47.

Understanding roaming


Controlling network roaming

Depending on services available from your service provider, you may set the phone to either digital or analog mode. This is useful if you are in an area that borders on digital service and the automatic feature is causing the phone to keep switching between modes.

1. Select **Menu** → **Settings** → **Network** → **Digital/Analog**.
2. Select an option and press .
 - **Automatic** automatically switches the phone between digital and analog.
 - **Analog only** sets the phone to work in analog mode only.
 - **Analog call** forces a call into analog mode for the duration of the next call.
 - **Digital only** sets the phone to work in digital mode only.

Setting an alert for roaming

You may use this setting if you want the phone to alert you when you roam outside of your home service area.

1. Select **Menu** → **Settings** → **Network** → **Roam/Svc Alert**.
2. Select an option and press .
 - **When no svc** alerts you with three tones decreasing in pitch when service is lost and three tones increasing in pitch when service is acquired again.
 - **On roam change** alerts you with two decreasing tones when roaming service is acquired and three increasing tones when home area service is acquired again.

- **On any change** alerts you with three increasing tones if there is a change in roaming service or three decreasing tones if the phone loses service.


Setting the roam ringer

You can set a ringer to indicate when an incoming call will be subject to roaming charges.

- Select **Menu** → **Settings** → **Sounds** → **Roam Ringer** → **Enabled**.

Setting Call Guard

You can set the phone to warn you before you answer or place a call while roaming.

- Select **Menu** → **Settings** → **Convenience** → **Call Guard** → **Call Prompt**.
 - The phone now emits a distinctive roam ring to indicate when you are roaming during calls.
 - To accept or place a call while roaming, you must press .

Note: **Call Prompt** is disabled when the phone is in Emergency Mode.

Using your phone in an airplane

While in an airplane, it is normally required that you turn off your mobile phone because it emits RF signals that interfere with air traffic control.

In Airplane mode, however, your phone will not emit RF signals. You cannot make or receive calls, send text messages, or use the Web, but you can play games, use the Scheduler, set the clock, and make emergency calls to designated emergency numbers.

Note: Please check with uniformed personnel before operating your phone in Airplane mode.

Setting Airplane mode


1. Select **Menu** → **Settings** → **Convenience** → **Airplane Mode**.
2. Select **OK** after reading the message.
3. Select **Disabled** or **Enabled**.

3 ENTERING LETTERS, NUMBERS, AND SYMBOLS

You can enter letters, numbers, and symbols in contacts, text messages, and your banner.

Understanding text entry screens

The current text entry mode (and capitalization setting, when applicable) are indicated by icons.

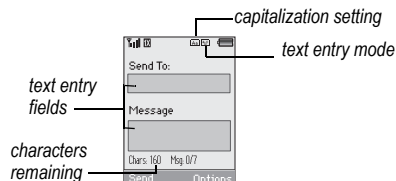

Text entry modes

There are six text entry modes:

aZ Case change	123 Numbers only
aBc Normal alpha	eZi Rapid Entry
&? Add Symbol	😊 Add Smiley

Note: The mode you start in depends on the task you are doing. For example, when entering a phone number, you're in number mode. When entering a name for a contact, you're in normal text mode. See "Changing modes" on page 19.

123 Entering numbers

- To enter a number while in **123** mode, press a number key once.
- To enter a number while in **aBc** or **eZi** mode, press and hold a number key until the number appears on the screen.

aBc Entering words letter by letter

- Press a key once for the first letter, twice for the second letter, and so on. If your phone is set to Spanish, French, or Portuguese, accented letters are available.
- Wait for the cursor to move right and enter the next letter.


Note: To enter a space, press .

eZi Entering words quickly

When you press a series of keys using **eZi** mode, **eZi** checks its dictionary of common words and guesses at the word you are trying to spell.


- For each letter of the word you want, press the key once. For example, to enter the word "any" press → → .
- If the word doesn't match what you want, press to look at other word matches.
- When you see the word you want, press .

&?! Entering symbols


While entering text, you can enter symbols by pressing  until you see the symbol you want. Using this method, you have access to the following symbols:

. @ ? ! - , & : ' 1

To access the full set of symbols:

1. From the text entry screen, select **Options**.
2. Select &?! **Add Symbol**.
3. Press  down to view the list of symbols.
4. Press the number key corresponding to the symbol you want.

😊 Entering smileys

1. From the text entry screen, select **Options**.
2. Select 😊 **Add Smiley**.
3. Press  down to view the list of smileys.
4. Press the number key corresponding to the smiley you want.

Switching default text entry modes


You can change the default text entry mode when creating a text message. This setting applies only to the message body screen, not the "To" screen.

1. Select **Menu** → **Messages** → **Msg Settings** → **Default Text**.
2. Select **Normal Alpha** or **Rapid Mode**.


Changing modes

Sometimes you need to change modes. For example, to enter numbers in an email address while in a_{bc} mode, you must change to 123 mode, enter the numbers, and then change back to a_{bc} mode to complete the address.

To change text entry modes:




















- Press and hold  until the icon for the mode you want appears at the top of the screen.
-or-
- Select **Options** then select a different mode.

Capitalization settings

You can change capitalization at any time while entering text. Simply press  to choose upper or lower case while in a_{bc} Normal Alpha mode.

Quick reference to text entry





This table gives general instructions for entering letters, numbers, and symbols.


To...	Do this...
Enter a letter	Use  mode and press a key until you see the letter you want. For more information, see page 18.
Enter a number	Use  mode and press a key once to enter its number. For more options, see page 18.
Enter a symbol	Press  until you find the symbol you want. See page 19.
Enter a smiley	Use  mode and press a key once to enter its number. For more options, see page 19.
Enter a space	Press  .
Erase a character	Press  .
Erase all characters	Press and hold  .
Move the cursor right or left	Press  right or left.
Move the cursor up or down	Press  up or down.
Change text entry modes	Press and hold  .
Capitalize any letter	In  mode, press  . Choose A .
Lowercase any letter	In  mode, press  . Choose a .
Title Case	In  mode, press  . Choose Ää .
Select soft options on the screen	Press the appropriate key, the left softkey  or the right softkey  .
Highlight an option at the bottom of the screen	Press  right or left.

4 STORING CONTACTS

Use your phone's Contacts directory to store information about a person or company. Each contact entry can have up to six phone numbers, two email addresses, two Web addresses, two street addresses, and a space for notes.





Creating a new contact

1. From the home screen, enter the phone number you want to save, including the area code.
2. Press the left softkey  to select **Save**.
3. Press  to select **Save New Contact**.
4. Enter a name for the contact.
 - If you need to learn how to enter letters, see “Understanding text entry screens” on page 18.
 - To add a symbol or smiley to the contact name, or to change the text entry mode, press the right softkey  to select **Options**.
5. Either save now or add more contact information.
 - To save now, press the left softkey  to select **Save**.

- To enter additional phone numbers, email and Web addresses, street addresses, or a note, press  down repeatedly. For help switching between numbers and letters for email or Web addresses, see “Changing modes” on page 19.

Adding a code or extension





When you save the phone number of an automated service, you may include a pause to stop dialing, for example, where you would wait to dial an extension.

1. From the home screen, enter the first portion of the phone number.
2. Press the right softkey  to select **Options**.
3. Select a type of pause:
 -  **Time Pause**
 -  **Hard Pause**
4. Enter the remaining numbers.
5. Press  to select **Save**.





Customizing your contacts

You can customize each contact in your Contacts directory by assigning ringers, pictures, and number types, or by classifying your contacts as Personal or Business.


Assigning ringers

1. Press and hold  up to select **Contacts**.
2. Highlight a contact and press .
3. Highlight the contact name and press the right softkey  to select **Options**.
4. Select **Ringer** → **Assign Ringer**.
5. Scroll down the list to hear the different ringers and press  to select one.





Assigning pictures

1. Press and hold  up to select **Contacts**.
2. Highlight a contact and press .
3. Highlight the contact name and press the right softkey  to select **Options**.
4. Select **Picture** → **Assign Picture** → **Images** and press .
5. Select **Saved Images, Wallpapers, or Caller IDs**.

Note: With mobile PhoneTools for Kyocera, you can transfer digital pictures to your phone. To purchase MPT or other accessories, visit www.kyocera-wireless.com/store.

6. Scroll through the list to view your options and press the left softkey  to assign it to your contact.






Classifying contacts as Personal or Business

1. Press and hold  up to select **Contacts**.
2. Highlight a contact and press .
3. Highlight the contact name and press the right softkey  to select **Options**.
4. Select **Classify**.
5. Select **Personal** or **Business** and press .

Note: To assign Personal or Business ringers, see “Assigning business and personal ringers” on page 40.

Assigning number types

When you assign a number type, an icon is placed in front of a contact number to specify the type of number, such as work, home, or mobile.

1. Press and hold  up to select **Contacts**.
2. Highlight a contact and press .
3. Highlight the contact number and press the left softkey  to select **Edit**.
4. Press  down once and press the right softkey  to select **Options**.

- Highlight an option to designate the number as **General**, **Work**, **Home**, **Mobile**, **Pager**, or **Fax** and press . You can also add email addresses, street addresses, Web page URLs, and a note. The associated icon will appear next to the entry in your Contacts directory and Recent Calls list.

	general		fax
	work		email address
	home		street address
	mobile		Web page URL
	pager		note

Editing a contact

- Press and hold up to select **Contacts**.
- Highlight a contact and press .
- Highlight the contact name or number and press the left softkey to select **Edit**.
- Enter your changes and press the left softkey to select **Save**.

Erasing a contact

- Press and hold up to select **Contacts**.
- Highlight the contact to erase and press .
- Select **Options**.
- Highlight **Erase Contact** and press .
- Press the left softkey to confirm.






Sending a vCard

You can send contact information as a text message or via a Bluetooth® wireless connection.

- Press and hold up to select **Contacts**.
- Highlight the contact to send as a vCard and press .
- Press the right softkey to select **Options**.
- Highlight **Send as vCard** and press .
- Select **via Text Msg** or **via Bluetooth®**.
 - If you select **via Text Msg**: Enter a recipient's phone number and press the left softkey to select **Send**.
 - If you select **via Bluetooth®**, the phone displays all available Bluetooth® wireless technology enabled devices that can receive the vCard. If none are detected, you have the option to **Find New**. Refer to "Connecting to a Bluetooth® wireless technology device" on page 65 for instructions.

Note: When **Bluetooth®** is set to **Off** or **On Invisible**, it will be temporarily turned on to enable the connection. When the transmission is complete, the message **Bluetooth OFF** displays.

Customizing a phone number


1. Press and hold  up to select **Contacts**.
2. Highlight the contact to edit and press .
3. Press  down to highlight the contact number.
4. Press the right softkey  to select **Options**.
5. Highlight an option and press :
 - **Call** to call the contact.
 - **Send Text Msg** takes you to the text messaging screen.
 - **Send Pict Msg** takes you to the picture messaging screen.
 - **Add Speed Dial** assigns or removes the speed dial location.
 - **View Number** to see the selected phone number.
 - **Erase Number** erases the number from the contact.
 - **Secret** makes the number secret so that it will not appear on the screen until the lock code is entered. Secret numbers cannot be called without a lock code. (For more information, see “Limiting calls” on page 46.)
 - **Primary Number** makes this number the first one that shows up when you open the contact.

- **Add Voice Dial** to record a voice tag so you can call a contact using voice recognition (VR). For more information, see page 67.
 - **Erase Voice Dial** erases the voice tag associated with the number.
 - **Edit Voice Dial** records a new voice tag.
6. Enter the new information and follow the prompts.
 7. Select **Save**, if necessary.

Finding contact information

To find a phone number or contact, you can (1) check the Frequent list, (2) search the Contacts directory, or (3) use Fast Find.




Checking the Frequent List

From the home screen, press and hold  up to select **Contacts**. The last 15 of your most frequently called contacts appear when the Frequent List is enabled. Scroll past the double line to view the All Contacts list.

To enable the Frequent List setting

- Select **Menu** → **Settings** → **Convenience** → **Frequent List** → **Enabled**.

Searching the Contacts directory



1. Press and hold  up to select **Contacts** for a list of all contacts.
To quickly get down the list, enter the first letter of the contact. The menu skips to that letter of the alphabet.
- or -
Select **Menu** → **Contacts**.
2. Select a search method:
 - **View All** lists all saved contacts.
 - **Find Name** locates a specific name. Enter part of the contact name then select **Find**.
 - **Speed Dial List, Voice Dial List, Messaging Groups, Business List, or Personal List** selects a contact from the specified list.
3. Highlight a contact and press .
 - To call the contact, highlight the number and press .

Setting Fast Find

With Fast Find, you press one or two keys to view close matches of the number you are looking for.

- Select **Menu** → **Settings** → **Convenience** → **Fast Find** → **Enabled**.

Using Fast Find

1. From the home screen, press the keys corresponding to the letters of the name you want to find. A matching contact or speed dial entry appears.
2. Press  down to scroll through matching entries.
3. Highlight the name you want then press  to call the number.

5 USING THE CAMERA



Tips before operating your camera

- You cannot activate the camera while on an active call or while browsing files in the media gallery.
- Once the camera is active, the home screen acts as the viewfinder.
- If you get a “Low memory” error, check your resolution and quality compression settings. See “Setting up the camera for photos” on this page.
- If there is no activity within 45 seconds after you turn your camera on, the camera quits and returns to the previous launch point.
- Menu settings and options can only be accessed when the camera is active.




Accessing camera and video modes

The camera can be used with the slide open or closed.

Slide open or closed

- Press  until you hear two beeps to activate camera mode.
- Press  again to activate video mode.

Setting up the camera for photos

1. With the camera activated, press the right softkey  to select **Options**.
2. Press  to select **Settings**.
3. Highlight an option and press :
 - **Flash** options are On, Off, or Automatic.
 - **Resolution** options are 1280 x 1024 (best for printing), 640 x 480, 320 x 240 (best for sending to email), and 160 x 120.
 - **Low Light Mode** brightens the picture for low light environments.
 - **Self Timer** options are Off (default) or 3, 5, or 10 second pauses. When set, the camera beeps from 3 seconds down to the time the shutter snaps the picture automatically. Self Timer is not available when **Multishot** mode is activated.
 - **Multishot** allows you to take up to six multiple pictures while the camera key is pressed and held. A tone will play each time a picture is taken. A second tone will play when the final picture is taken.
 - **Shutter Sound** sets the sound used when the camera takes a picture.

- **White Balance** allows the camera to adjust for different lighting. Options are Automatic, Fluorescent, Incandescent, or Daylight.
- **Quality** sets the picture compression. The higher the compression, the better the detail of the picture (higher pixel rate). Options are Low, Medium, or High (default). When set to High, the picture file size is larger, using more memory.
- **LED** flashes a light to indicate a picture has been taken. Options are On (default) and Off.
- **Viewfinder** options are Fullscreen and Actual.
- **Save Location** options are Save to Card and Save to Phone.

Restoring camera menu settings



The following settings **revert** to the default setting each time you enter and exit the camera application:

- Low Light Mode, Self Timer, MultiShot, Viewfinder.

The following settings **remain** at the setting you selected each time you enter and exit the camera application:

- Flash, Resolution, Shutter Sound, White Balance, Quality, LED, and Save Location.







Menu options for camera mode

1. Press and hold  to activate camera mode.
2. Select **Options**.
3. Press  up or down to scroll through the options on the vertical menu bar:
 - **Settings** displays available camera settings you may set up prior to taking a picture.
 - **Video Mode** toggles between video and camera modes.
 - **Brightness** allows you to adjust the brightness of the image in the home screen LCD.
 - **Camera Pictures** displays all pictures taken and stored.
 - **Last Picture** displays the most recently taken picture.
 - **Frames** allows you to add a frame or a stamp to your picture. A frame or stamp cannot be removed once it has been used in a picture.

Note: The picture resolution changes to 160 x 120 while taking pictures with frames. The resolution returns to the original setting once Frames is disabled.


Camera mode indicators and icons



The camera mode displays the following onscreen indicators and icons:




Icon	Description
	Flash on
	Camera mode
	Video mode
Top right corner numbers	Number of snapshots remaining
	Zoom level
Bottom left corner numbers	Resolution setting
	Multishot
	Self Timer

Taking a picture






1. Select **Menu** → **Camera**.
2. Focus on the image using the phone's display as the viewfinder.

Tip: Press  up or down to zoom in or zoom out.

3. Take the picture using one of two methods:
 - Press  or the left softkey .




4. Press  to select **OK** or the right softkey  to select **Erase**.
5. Press  when finished taking pictures.

Camera key map




Key	Camera	Menu Screen
Left softkey 	Select Capture to take picture	Select OK
Right softkey 	Select Options	Cancel, dismisses menu
 Up	Zoom in	Scrolls menu options right
 Down	Zoom out	Scrolls menu options left
	Takes picture	Select menu option

Setting up the video camera

Menu settings can only be accessed when the camera mode is activated.

1. Select **Menu** → **Camera**.
2. Press the right softkey  to select **Options**.
3. Press  up or down to scroll through the vertical menu bar.
4. Highlight **Video Mode** and press .










Menu options for video mode

1. With the slide open, select **Menu** → **Camera**.
2. Press the right softkey  to select **Options**.
3. Press  up or down to scroll through the vertical menu bar.
4. Highlight and select **Video Mode**.
5. Select **Options**.
6. Press  up or down to scroll through the vertical menu bar and choose an option:
 - **Settings** allows you to change your camera settings. See “Setting up the camera for photos” on page 26.
 - **Camera** toggles between video and camera modes.
 - **Brightness** allows you to adjust the brightness of the image in the home screen LCD.
 - **Video Album** displays all the videos recorded and stored.
 - **Last Video** plays the most recently recorded video.





Recording a video

When you begin recording, a tone sounds, the video record icon blinks, and a “Recording” indicator with a timer progress bar displays. A tone sounds when the video stops recording.

Slide open or closed

1. Select **Menu** → **Camera**.
2. Press the right softkey  to select **Options**.
3. Scroll up or down on the vertical menu bar using  to select the **Video Mode** option.
4. Focus on the image and press the left softkey  to select **Record**.
Tip: Press  up or down to zoom in or zoom out.
5. If you want to pause the recording, press the right softkey  to select **Pause**. To continue recording, press the left softkey  to select **Resume**.
6. When finished recording, press the left softkey  to select **Stop**.
7. The recorded video is immediately saved to **Media Gallery** → **Videos** → **Video Album**.
8. Press  or  when finished taking videos. This will take you back to the main menu screen.

Video key map

Key	Video Camera Function	Menu Function
Left softkey 	"Record" – starts recording toggle (plays a tone) "Stop" – stops recording toggle (plays a tone)	"OK" – selects option
Right softkey 	"Options" – while not recording "Pause/Resume" – pauses and resumes recording toggle	"Cancel" – dismisses menu
	When not recording, goes back to the last function. While recording, stops recording	Dismisses menu options
	Exit to idle when not recording	Exit to idle

6 USING THE MUSIC PLAYER

Use your phone's Music Player to listen to your favorite songs. Store music files directly on an external storage card for your own portable music library.

Removable memory card

Your Kyocera KX5 phone uses a removable memory card that, when inserted into the phone, increases storage capacity. You can drag and drop files stored on your computer directly onto the card. The removable memory card supports .mp3, .aac, .mp4, .3gp, .3g2, .m4a, and .m4b file types, up to 512 MB.

Protected files may be copied to the card, but will not play properly if not supported.

Formatting the memory card

Before you can listen to music through your KX5 phone, you will need to initialize the TransFlash memory card (optional accessory). The memory card can be formatted automatically or manually.

Automatic


Note: Formatting or reformatting a memory card erases all data and music files that were previously saved on the TransFlash memory card.

1. Lift the TransFlash cover up. (See item 18 in the picture on page 4).

2. Hold the card with the metal contacts facing up and push the card in the slot until it clicks into place.
3. Close the cover.
4. The phone will automatically begin to format the card and "Card now ready for use." appears after completion.
5. Once the TransFlash card has been formatted, you can place (drag and drop) your music files onto the card.

Manual

Note: Formatting or reformatting a card erases all data and music files that were previously saved on the TransFlash card.

1. Lift the TransFlash cover up. (See item 18 in the picture on page 4).
2. Hold the card with the metal contacts facing up and push the card in the slot until it clicks into place.
3. Close the cover.
4. Select **Menu** → **Settings** → **Memory Card** → **Format Card**.
5. Press the left softkey  to select **Yes** and format the card.
6. The message "Card now ready for use." appears after completion.


Putting music files onto the memory card

Music files can be put onto the memory card by either using an optional memory card reader for your computer or by using a KX5 USB cable and placing the KX5 into **Mass Storage Mode**.

Note: Use only a previously formatted memory card when loading music files.

Using a Memory Card Reader


1. Connect the memory card reader to your computer.
2. Insert the memory card into the memory card reader. Locate the Removable Disk drive on your computer.

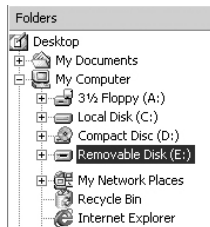

3. Locate the music files to be placed onto the memory card and “drag and drop” them to the Removable Disk drive.

Note: The KX5 supports the following music file types: .mp3, .aac, .mp4, .3gp, .3g2, .m4a and .m4b.

4. Place music files into the “MUSIC” folder located on the memory card.

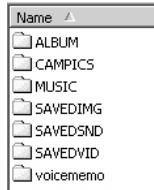


Note: Music files must be placed in the MUSIC folder in order to work properly.


Using a KX5 USB cable


1. Load the USB Drivers CD onto your computer and follow the on-screen prompts. (This is only required during the initial set-up).
2. Plug the USB cable into bottom of the KX5.
3. Plug the USB cable into a USB port on your computer.
4. On the phone select **Menu → Settings → USB Storage → Enabled**.
5. Your KX5 phone will now be “viewed” by your computer as a “Mass Storage Device.”
6. On your computer double click on “My Computer.”
7. You will see the Transflash Card inserted in the KX5 as a Removable Disk drive.
8. Double click on the appropriate Removable Disk drive.
9. Double click on the **MUSIC** folder.

10. Drag and Drop your music files into the **MUSIC** folder.

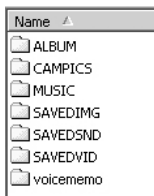


11. To properly disconnect the KX5 from your computer you need to double click on the **Safely Remove Hardware** icon in the System Tray on your computer. Follow the prompts to **Stop or remove a Mass Storage Device**.



12. When you are done placing music onto the memory card, press .

Playing music

You must have a Transflash memory card (optional) with music stored on it to use the Music Player.


1. From the home screen, press and hold .

- or -

Select **Menu** → **Music Player**. The Music Player screen appears.

Note: The Music Player cannot be accessed until songs have been loaded onto your phone by your service provider or an external

memory card has been inserted into the TransFlash™ slot.


2. Highlight a song and press  or select **Play**.

Notes:

- When the card is in your phone, the songs on the card appear in the Media Gallery menu. However, songs are not stored in the Media Gallery unless they have been preloaded onto your phone by your service provider.
- Incoming calls, Scheduler events, and the alarm clock will interrupt the Music Player. An interrupted song will begin again at the point it left off with the press of a softkey.
- Text messages will not interrupt the player; however, an icon will appear to notify you of new messages.
- There are more volume settings in the Music Player to allow for finer volume adjustments when listening to music through a Kyocera headset.

Note: For memory cards and other accessories, visit www.kyocera-wireless.com/store.

Music Player controls


While you are listening to a song, you can use the Navigation key  as follows:

Up - View the playlist.

Down - Restart the song.

Left - Play the previous song in the playlist.



Right - Play the next song in the playlist.

Press  to pause or resume a selected song.



Playback options

Shuffle

Note: Shuffle is inactive if there are fewer than three songs.



1. Select **Menu** → **Music Player**.
2. Press the right softkey  to select **Options**.
3. Select **Settings** → **Shuffle On**.  appears.
 - This option changes to **Shuffle Off** if **Shuffle On** has already been selected.

Repeat

1. Select **Menu** → **Music Player**.
2. Press the right softkey  to select **Options**.
3. Select **Settings** → **Repeat On**.  appears.
 - This option changes to **Repeat Off** if **Repeat On** has already been selected.


Auto Off

The phone exits the Music Player after it has been paused or stopped for a selected amount of time if the **Auto Off** feature is enabled.

1. Select **Menu** → **Music Player**.
2. Press the right softkey  to select **Options**.
3. Select **Auto Off**.
4. Select an option and click : **10 minutes**, **20 minutes**, or **Off**.


Viewing details about a song file

To see the file type and size of a file:

1. From the home screen, press and hold  or select **Menu** → **Music Player**. The playlist appears.
2. Highlight a song and select **Options** → **Now Playing**.


Viewing details about the playlist

To view the total number of songs and the amount of memory available on the phone and the card:

1. Press and hold  or select **Menu** → **Music Player**. The playlist appears.
2. Select **Options** → **Playlist Details**.

Erasing a song

You can erase a song from the card using the phone.

1. From the home screen, press and hold  or select **Menu** → **Music Player**.
2. Highlight the song.
3. Select **Options** → **Erase Song** → **Yes**.

Troubleshooting

Scenario: Song is not playing

Try renaming the file on your PC, removing any special characters, spaces, and limiting the length to 30 characters long.

If the file still does not play:

- The file type may not be supported.
- The file may be DRM (digital rights management) protected.
- The file may be corrupted.



7 USING MEDIA GALLERY

The Media Gallery stores camera pictures, images, sounds, and videos in the phone and displays those files on the phone's screen.

Accessing files


1. Select **Menu** → **Media Gallery**.
2. Select an option:
 - **Camera Pictures** displays thumbnails of the photos you have taken in chronological order.
 - **Images** displays a list of categories that contain preloaded, downloaded, saved, or created files such as wallpaper, screen savers, or caller IDs.
 - **Sounds** displays a list of categories that contain saved or downloaded sounds such as ringtones and voice memos.
 - **Videos** displays a list view of the file names of videos that you recorded.

Browsing pictures

1. Select **Menu** → **Media Gallery** → **Camera Pictures**.
2. Highlight a picture and press the left softkey  to select **View**.
3. Press the left softkey  to select **Send** and launch the multimedia messaging application.





- or -


Press the right softkey  to select **Options**:

- **Erase** the image.
- **Assign** picture as a Caller ID or as wallpaper.
- **Modify** allows you to rotate, resize, change the brightness, sharpness, saturation or hue, auto adjust or change the color or tone of the picture.
- **Zoom** allows you to zoom in or out on the picture by pressing  up or down.
- **Send to Online** to save your picture to the Online Album.
- **Take Picture** to snap another photo.
- **Lock** to prevent accidentally erasing the photo.
- **Rename** the photo.
- **Details** of the file.



Browsing images

The images menu allows you to assign your files to various applications.







1. Select **Menu** → **Media Gallery** → **Images**.
2. Highlight an option and press :
 - **Saved Images** displays available images.
 - **Wallpapers** displays wallpaper selections.
 - **Screen Savers** displays available screensavers.
 - **Caller IDs** displays pictures and images saved and the text IDs you assigned them.
3. Press the left softkey  to select **View**.
4. Press the left softkey  to select **Send** and launch the multimedia messaging application.
 - or –
 - Press the right softkey  to select **Options** (options vary according to selection):
 - **Send** launches the messaging application so you can share the image.
 - **Set Default** to assign the image as a wallpaper or screen saver.
 - **Send to Online** to save your picture to the Online Album.
 - **Assign** to assign the image to a contact.
 - **Erase** the image (image must not be locked).
 - **Details** gives you the file size of the image.
 - **Erase All** erases all images stored (images must not be locked).

5. Select **Close** or press  when done.

Browsing sounds

1. Select **Menu** → **Media Gallery** → **Sounds**.
2. Highlight an option and press :
 - **Saved Sounds** contains sounds saved on your phone.
 - **Music** contains preloaded songs (not available on all phones, check with your service provider).
 - **Ringers** contains ringers saved on your phone.
 - **Voice Memos** contains voice memos you made to yourself.
3. Highlight an option and press  (options vary according to selection):
 - **Play** to review the sound.
 - **Record New** allows you to record new sounds.
 - **Erase** the sound.
 - **Lock** to prevent accidentally erasing the sound.
 - **Rename** allows you to rename the sound file.
 - **Details** gives you the file size of the sound.
 - **Erase All** erases all sounds stored.
4. Select **Close** when done.

Browsing videos

1. Select **Menu** → **Media Gallery** → **Videos**.
2. Highlight an option and press :
 - **Video Album** contains videos taken with your camera.
 - **Saved Videos** contains videos that were downloaded.
3. Select **Play** to review a video. Press  left or right to highlight **Play** , **Stop** , **Rotate Left** , or **Rotate Right** .
- or -
Select **Options** and choose from the following options:
 - **Send** launches the messaging application so you can share the videos.
 - **Record New** allows you to record new videos.
 - **Erase** the videos.
 - **Lock** to prevent accidentally erasing the video.
 - **Rename** allows you to rename the video file.
 - **Details** gives you the file size of the video.
 - **Erase All** erases all videos stored.
4. Select **Close** when done.

8 CUSTOMIZING YOUR PHONE

The contents of the **Settings** menu are as follows.

Silent Mode

Vibrate Only
Vibe then Ring
Lights Only
Normal Sounds

Keyguard

Guard on Close
Disabled

Sounds

Ringer Volume
Ringer Type
Business Ringer
Personal Ringer
Roam Ringer
Alerts
Slide Open
Slide Closed
Pwr On/Off Sound
Key Volume
Key Length
Smart Sound
Minute Alert
Earpiece Volume
Spkrphone Volume

Display

My Banner
Main Menu View
Color Themes
Wallpaper
Screensaver
Backlighting
Auto-Hyphen
Language
Time/Date
Contrast
Brightness

Convenience

Airplane Mode
Open to Answer
Close to End
Fast Find
Frequent List
Hold Call
1-Touch Dialing
Web Prompt
Call Guard

Memory Card

Items to Save
Format Card

Voice Features

Add Voice Dial
Erase Voice Dial
Voice Training
Voice Wake-Up
Voice Answer
Expert Mode

Messaging

Alerts
Signature
Edit QuickText
Auto Retrieve
Callback Number
Text Msg Receipt
Save to Sent
Auto-Erase
Default Text
Voicemail Number

Security

Lock Phone
Limit Calls
New Lock Code
Erase Contacts
Emergency Numbers

Network

Data/Fax Calls
Privacy Alert*

Network (continued)

Data Setup
User Name/Set Phone
Line*
Roam/Svc Alert
Roam Option
Digital/Analog
Location

Accessories

Pwr Backlighting
Headset Ringing
Auto-Answer
Com Port Speed
TTY Device

USB Storage

Enable
Disable

Phone Info

Platform
Your Number
SW Version
PRL Version
Factory Config
ESN
SID
Browser Info
Icon Key





*Not available on all phones. Check with your service provider.

Silencing all sounds

Your phone is set to make sounds when you receive calls, press keys, navigate through menus, and receive alerts (such as new messages).


You can silence all sounds and set the phone to vibrate or light up when you receive calls and alerts.

Setting the phone to vibrate or light up


1. Select **Menu** → **Settings** → **Silent Mode**.
2. Choose an option and press :
 - **Vibrate Only**: The phone vibrates for the duration of the incoming call or other alerts.  appears.
 - **Vibe then Ring**: The phone vibrates for the first 10 seconds and then rings for the remainder of the incoming call alert.  appears.
 - **Lights Only**: The phone lights up for the duration of the incoming call or other alerts.  appears.
 - **Normal Sounds**: The phone rings for the incoming call or alert (in effect, returns phone to a non-silent mode).

Note: The phone will ring when it is attached to an external power source (such as a charger), even if all sounds have been silenced.

Shortcut to Vibrate Only mode


- With slide open, from the main screen, press and hold .

Turning sounds back on

- With slide open, from the main screen, press and hold .

Choosing ringers

Your Kyocera KX5 phone has multiple ringers you can choose to use for incoming calls.



1. Select **Menu** → **Settings** → **Sounds** → **Ringer Type**.
2. Scroll down the list to hear the different rings and press  to select one.

Note: Downloaded ringers are added to the end of the standard list of ringers.

Assigning business and personal ringers

You can assign ringers to contacts classified as Business or Personal in your Contacts directory.


Note: To classify a contact as Business or Personal, see page 21.

1. Select **Menu** → **Settings** → **Sounds**.
2. Highlight **Business Ringer** or **Personal Ringer** and press .
3. Select a ringer and press .


Setting sounds for your phone

You can set your phone to sound tones when you open and close the slide and when you turn the phone on and off. Sounds will not occur during an incoming call, if you are in a call, or if a headset or hands-free car kit is attached to your phone.

Set sound when slide opens

1. Select **Menu** → **Settings** → **Sounds** → **Slide Open**.
2. Scroll through the list to hear the sounds and press  to select one.

Set sound when slide closes

1. Select **Menu** → **Settings** → **Sounds** → **Slide Closed**.
2. Scroll through the list to hear the sounds and press  to select one.



Set sound when phone powers on or off

- Select **Menu** → **Settings** → **Sounds** → **Pwr On/Off Sound** → **Enabled**.
 - To deselect this sound, select **Disabled**.



Adjusting volume

You can adjust the earpiece, speakerphone, and ringer volume as well as key tones.

Adjusting the earpiece volume

To adjust the earpiece volume manually during a call, press  or  up or down.

To set the earpiece volume:



1. Select **Menu** → **Settings** → **Sounds** → **Earpiece Volume**.
2. Press  right to increase the volume, or left to decrease the volume.
3. Press the left softkey  to select **Save**.

Using smart sound



You can set a baseline volume that the phone uses to automatically adjust the earpiece volume when there is a change in the amount of noise around you or the caller's voice.

- Select **Menu** → **Settings** → **Sounds** → **Smart Sound** → **Enabled**.

Adjusting the ringer volume



1. Select **Menu** → **Settings** → **Sounds** → **Ringer Volume**.
2. Press  right to increase the volume, or left to decrease the volume.
3. Press the left softkey  to select **Save**.

Adjusting speakerphone volume

1. Select **Menu** → **Settings** → **Sounds** → **Spkrphone Volume**.
2. Press  right to increase the volume, or left to decrease the volume.
3. Press the left softkey  to select **Save**.


Adjusting key tone volume

You can change the volume of the tones the phone makes when you press the keys.

1. Select **Menu** → **Settings** → **Sounds** → **Key Volume**.
2. Press  right to increase the volume, or left to decrease the volume.
3. Press  to select **Save**.



Setting key length

You can change the duration of the tones the phone makes when you press the keys.


1. Select **Menu** → **Settings** → **Sounds** → **Key Length**.
2. Choose **Normal** or **Long** and press .

Setting message alerts

You can choose how you want be alerted of incoming voicemail, pages, or text messages.

1. Select **Menu** → **Settings** → **Messaging** → **Alerts**.
2. Select the type of alert: **Message Alert**, **Page Alert**, **Voicemail Alert** or **Missed Call Alert**.
3. Press  to select an option:
 - **Vibrate, Beep, Freeway, Game, Bloop, Winner, Zilofon** sets the phone to alert you once when a new message is received.
 - **Vibrate & Remind, Beep & Remind, FWY & Remind, Game! & Remind, Bloop & Remind, Winner & Remind, Zilofon & Remind** sets the phone to notify you once when a new message is received and then notify you again every five minutes. To stop a reminder alert, press  to select **Ignore**.
 - **Disabled** turns off message alerts.

Using shortcuts

From the home screen, press and hold  in one of four directions to access the shortcuts.

Up: Access Contacts List


Down: Launch Axxess Mobile Web

Left: Access Ringers

Right: Launch Access Apps.

Choosing a different language




Your phone may display alternative languages.

1. Select **Menu** → **Settings** → **Display** → **Language**.
2. Select a language and press .

Personalizing the screen



Changing your banner

The banner is the personal label for your phone. It appears on the home screen above the time and date. The banner can be up to 14 characters long.

1. Select **Menu** → **Settings** → **Display** → **My Banner**.
2. Press the right softkey  to select **Edit**.
3. Press  to clear the screen.
4. Enter your new text.
5. Press the left softkey  to select **Save**.


Choosing a menu view

Three menu views are available: Wheel, Graphic, and List.

1. Select **Menu** → **Settings** → **Display** → **Main Menu View**.
2. Select an option and press .
 - **Graphic** displays icons of each menu item, with its name at the bottom of the screen.
 - **List** displays a list of each menu item.
 - **Wheel** displays a rotating graphic image of the menu items.
3. Press  to return to the home screen. The next time you select **Menu**, you will see the menu view you selected.

Adjusting the backlighting

Your screen lights up while you are in a call or when you press a key on the keypad. However, you can set the length of time that bright backlighting remains on.

1. Select **Menu** → **Settings** → **Display** → **Backlighting** → **Duration**.
2. Select an option and press :
 - **7 seconds, 15 seconds, or 30 seconds**—(Default) Turn backlighting on for 7, 15, or 30 seconds after your last keypress.
 - **7 sec. & in call, 15 sec. & in call, or 30 sec. & in call**—Turn backlighting on for the duration of a call, and for 7, 15, or 30 seconds after your last keypress.

Note: The “in call” settings drain the battery more quickly.

Using Power Save Mode

You can conserve battery life by activating Power Save mode to dim the backlight set in the procedure above. The backlighting appears for the selected duration but is less bright than with Power Save off.

- Select **Menu** → **Settings** → **Display** → **Backlighting** → **Pwr Save Mode** → **On**.

Setting power backlighting

You can set backlighting to remain on when an external power source, such as the AC adapter, is used with the phone.


Note: Power backlighting may not be available with the optional desktop charger or other accessories.

Tip: Use the power backlighting as a night light when traveling.

1. Select **Menu** → **Settings** → **Accessories** → **Pwr Backlighting**.
2. Select **Always On** to keep backlighting on.

Note: The battery charges more slowly when power backlighting is on.

Changing the display contrast

1. Select **Menu** → **Settings** → **Display** → **Contrast**.
2. Press  left or right to adjust the contrast and select **Save**.

Setting numbers to auto-hyphenate




Auto-hyphenation, when enabled, automatically inserts hyphens into your phone numbers to be consistent with the U.S. dialing plan.

For example, 1-222-333-4444.

- Select **Menu** → **Settings** → **Display** → **Auto-Hyphen** → **Enabled**.

Selecting a screen saver



Screen savers appear on the home screen when the slide is open or closed and are activated 10 seconds after the last keypress. Incoming calls and alerts override screen savers.

1. Select **Menu** → **Settings** → **Display** → **Screen Saver**.
2. Highlight a screen saver and press . The image displays.
3. Press the left softkey  to assign the screen saver.
4. Press  to return to the home screen and wait 10 seconds to view the screen saver you chose.

Note: Downloaded screen savers are added to the end of the list.


Selecting wallpaper

Wallpaper appears on the home screen.


1. Select **Menu** → **Settings** → **Display** → **Wallpaper**.
2. Highlight a wallpaper design and press .
3. Select **Assign** to save your selection.
4. Press  to return to the home screen.

Selecting a color theme

You can select a color theme for the display background of your phone.

1. Select **Menu** → **Settings** → **Display** → **Color Themes**.
2. Scroll through the options to view the color themes and press  to select one.

Choosing a different time/date format


1. Select **Menu** → **Settings** → **Display** → **Time/Date**.
2. Highlight an option and press .

Creating a secure environment

This section describes all the features involved in securing your phone and preventing access to personal information. All security features are shielded by a four-digit lock code.


Changing your lock code

The lock code is typically 0000 or the last 4 digits of your phone number.


1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **New Lock Code**. A message appears: "Change Code?"
4. Press the left softkey  to select **Yes** and enter a new four-digit code.
5. Enter your new lock code again.

Locking your phone

When your phone is locked, you can call only emergency numbers or your service provider's number. You can still receive incoming calls.


1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **Lock Phone**.
4. Highlight an option:
 - **Never** does not lock the phone.
 - **On power up** locks the phone every time you turn it on.
 - **Now** locks the phone immediately.
5. Press .

Unlocking the phone

1. From the home screen, press the left softkey  to select **Unlock**.
2. Enter your four-digit lock code.

Designating emergency numbers

The emergency numbers feature allows you to specify three personal phone numbers that can be called when the phone is locked.


1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **Emergency Numbers**.
4. Select an **Unassigned** slot.
5. Enter the phone number, including the area code. Do not enter 1 before the area code.
6. Press the left softkey  to select **Done**.

Notes:

- You can view these numbers only when they're being entered for the first time.
- You cannot edit these numbers.
- To make a call to an emergency number from a locked phone, you must dial the number (including area code) exactly as it was stored in Emergency Numbers.


Limiting calls

You can limit the calls that can be made from your phone to emergency numbers, your contacts, and your service provider's numbers.

1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **Limit Calls**.
4. Choose an option and press :
 - **No Limit** limits no calls.
 - **Limit Outgoing** calls only. Incoming calls can still be received and answered.
 - **Limit All** calls, both incoming and outgoing.

Erasing all contacts

You can erase all entries from your Contacts directory.

1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **Erase Contacts**.
4. Select **Yes** to erase all contacts. A message appears: "Erase ALL Contacts?"
5. Press the left softkey  to select **Yes** to erase all contacts.


Network settings

Switching between phone lines

Your phone can have two service accounts, or phone lines, associated with it. Each phone line has its own phone number.

When you are using one line, you cannot receive calls from the other. It would be as if the phone were “off” for that number. Your voicemail, however, will still take messages. All contacts and settings are shared for both lines.

Note: You must first establish a second phone line with your service provider. Once established, a second phone number becomes available in the menu for selection:

1. Select **Menu** → **Settings** → **Network** → **Set Phone Line**.
2. Select one of the two lines and press .

Data Settings

Setting Com port speed

The Com Speed sets the data rate at which your phone connects to a laptop or PC, or at which it sends and receives over-the-air text messages.

1. Select **Menu** → **Settings** → **Accessories** → **Com Port Speed**.
2. Select the speed. The options are: **19.2 kbps**, **115.2 kbps** (default), **230.4 kbps**, and **Other**.


Note: There may be a higher charge for making calls using high-speed data in areas where 1X service is available. Check with your service provider for details.

Setting the phone to receive data or faxes

Your phone may be able to receive certain data or faxes, depending on the system sending the information. You cannot receive voice calls while the phone is in data/fax mode.

To receive data or faxes, you must connect the phone to a laptop or PC and switch the phone from voice mode to data/fax mode.

Note: To purchase a cable, call 800-349-4188 (U.S.A. only), 858-882-1410, or visit www.kyocera-wireless.com/store.

1. Connect the phone to the laptop or PC.
2. Set the Com speed.
3. Select **Menu** → **Settings** → **Network** → **Data/Fax Calls**.
4. Press  to select an option:
 - **Voice only** allows only voice calls.
 - **Fax, next call** or **Data, next call** sets the phone to fax mode or data mode for the next incoming call or the next 10 minutes.
 - **Fax, until off** or **Data, until off** forces the phone into fax mode or data mode until the phone is turned off.

Note: You cannot receive voice calls while the phone is in data/fax mode.

Connecting to a TTY/TDD device

You can connect the phone to a TTY device for the hearing impaired. **Note:** Enable TTY only when using the phone with a TTY device.

1. Connect the TTY device to the phone.
2. Enter from your keypad.
3. Press the left softkey to select the **TTY** option.
4. Close the **Information** window by pressing the left softkey to select **OK**.
5. Highlight **TTY On** and press .

Setting position location

This setting allows you to share your location information with network services other than emergency services (For example: 911, 111, 999, and 000) in markets where service has been implemented.

Note: This feature works only when your phone is in digital mode. You do not have the option of turning off the locator to emergency services.

1. Select **Menu** → **Settings** → **Network** → **Location**.
2. Select **911 Only** or **Location On**.
 - **911 Only** (default) shares your position information only with emergency services when you call your 3-digit emergency code (911, 000, 111, etc.).
 - **Location On** shares your position information with your service provider's network, in addition to emergency services.

9 SENDING AND RECEIVING TEXT MESSAGES





This chapter describes how to send, receive, and erase text messages from your phone. For information on voicemail messages, see “Setting up voicemail” on page 14.

Important: The features and menus described in this chapter may vary depending on services available in your area. Check with your service provider for details and possible usage charges.

Sending text messages


You can only send text messages to phones that are capable of receiving them or to email addresses.

Creating a text message


- From the home screen, press the right softkey  to select **Text** → **New Text Msg.**
- or -
Select **Menu** → **Messages** → **New Text Msg.**
- Enter a recipient's phone number or email address:
 - Select **Options** to access your **Recent List**, **Contacts**, or **Group Lists** and press . Select a contact and press . Highlight the number field and press . For more about group lists, see “Creating group lists” on page 55.
 - or -

- Enter a **New Address** manually. (To learn how to enter text, see “Understanding text entry screens” on page 18.)


3. Add another recipient if desired:

- Press the right softkey  to select **Options** then select **Recent List**, **Contacts**, or **Group Lists**.
- or -
- Enter a space or comma after the first number then enter another recipient manually.

Note: You can send a message to up to 10 recipients at once. The messages will be sent one at a time, once to each addressee.



- When you are done entering addresses, press  twice.
- Enter the message. To learn how to enter text, see “Understanding text entry screens” on page 18.
- or -

Add QuickText, symbols, or smileys to your message. See “Including prewritten text and symbols” on page 50 for information.

- Press the left softkey  to select **Send**. See “Setting sending options” on page 50 for information about how and when you want the message to be received.


Including prewritten text and symbols



During text entry, you can insert QuickText, symbols, or smileys into your message.




1. From the text entry screen, select **Options**.
2. Select an option and press :
 - **Insert QuickText**: Scroll through the list of options and press  to select one.
 - **Add Symbol**: Scroll through the list and press the corresponding number key to select it.
 - **Add Smiley**: Scroll through the list and press the corresponding number key to select it.
3. When you have finished your message, select **Send**. See “Setting sending options” for information about how and when you want the message to be received.

Setting sending options

When you are ready to send a message, you have several options for how and when you want the message to be received.

1. Once you have completed the message, select **Options**:
 - **Add Address** returns to the “Send To” screen to add another recipient without losing the message. Select **Options** to access your **Recent List**, **Contacts**, or **Group Lists** and press .

Select a contact and press . Highlight the number field and press .

- **Save Message** saves the message in your **Drafts** folder. This prevents the message from being deleted if you have activated AutoErase and enables you to send the message to others.
- **Save QuickText** saves the message you have just entered as a prewritten message then returns to the message entry screen so you can send the message.
- **Settings** allows you to choose from the following after pressing :
 - **Msg Receipt** to request notification when the message has been received.
 - **Set Priority** labels the message as “Urgent.”
 - **Callback Number** includes a callback number with the message to let recipients know at what number they can call you back. Select **OK** to include your own number or **Edit** to enter a different callback number.
 - **Send Later** schedules a time to send the message.
- 2. When you have finished setting options, press  to return to the message window.
- 3. Press the left softkey  to select **Send**.

Adding a signature

The signature you create is included at the end of all outgoing messages and is counted as characters in your messages; however, it does not appear in the message creation screen.

To create a signature:

1. Select **Menu** → **Settings** → **Messaging** → **Signature**.

2. Enter your signature in the text field.


3. Select **OK** to save the setting.

Note: The characters in the signature are included in the total character count of the message.

If you cannot send messages

You may not be able to send or receive messages if your phone's memory is nearly full, or if digital service is not available at the time. To free up memory, erase old messages. See "Erasing messages" on page 54.

Understanding appended messages.

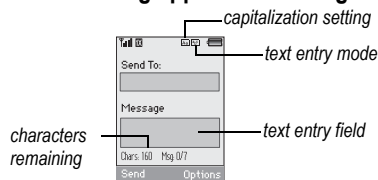



If you go over the character limit for a single message, the phone may automatically append an empty segment to your message to make space.

Important: Your service provider will charge you for each message segment.


When you start a message, the maximum character limit appears once you are in the message entry field. This number counts down as you enter characters, until it reaches 0. If you continue to enter text after this counter reaches 0, a message segment may be appended. When you reach the message size limit, you are prompted to edit the message or alerted that the message is being appended.

Receiving incoming calls while creating messages

- If you don't wish to answer the call, press the right softkey  to select **Ignore**. The phone returns to the message screen.
- To answer the call, press . Your message is saved to the Drafts folder. To return to the message, select **Menu** → **Messages** → **Drafts** → **Resume**.


Viewing your sent messages


To save your outgoing messages, you must first enable **Save to Sent**.

1. Select **Menu** → **Messages** → **Msg Settings** → **Save to Sent**.
2. Select an option and press .
 - **Enabled** automatically saves all successfully sent messages in the **Sent** folder.
 - **Prompt** allows you to choose whether or not to save your message when you send it.

To view successfully sent messages:

1. Select **Menu** → **Messages** → **Sent**.


2. Press  up or down to scroll through the list of messages. One of the following symbols appears next to each message:

 The scheduled message will be sent at the scheduled time. You cannot cancel delivery of the message.

☒ The scheduled message has been sent and will be delivered as scheduled. You cannot cancel delivery of the message.

☒ The message has been received.

☒ The message has been received and opened. (This symbol may not be available. Check with your service provider.)

 The message has been sent to more than one recipient.


☐ The message has never been sent or has not been sent since it was last modified. You can cancel delivery of the message.


Viewing failed or pending messages


Failed or pending messages are stored in your OutBox.

To view your OutBox:


1. Select **Menu** → **Messages** → **OutBox**. A list of all failed or pending messages appears.

2. Scroll through the list of messages and press  to read one. One of the following symbols appears next to each message:




 The message is pending and will be sent when possible. You can cancel delivery of the message.

 The message cannot be sent because service is not available. In this case, an alert appears on your phone.

Retrieving text messages

When a text message is received, your screen displays “New Messages” with the  symbol at the top of your screen. The symbol flashes if the message is urgent.



If you see the “New Messages” note

- To view the message, press the left softkey  to select **InBox**, highlight the message, and press the left softkey  to select **View**.
- To **Ignore** the message, press the right softkey .

Note: If you receive a new message while you are reading a message, the one you are reading will be replaced by the new one. You can find the older message in the InBox:

- Select **Menu** → **Messages** → **InBox**.


If you see the symbol

1. Select **Menu** → **Messages** → **InBox**. A list of all your received messages appears.
 -  indicates an “Urgent” message.
2. Scroll through the list of messages and press  to read one.

Reading the message


The options available to you may vary. Check with your service provider.

Note: Sounds embedded in text messages will not play if the phone is set to Silence All mode.

1. If the text message is long, press  down to view the entire message.
2. When you are finished, you can **Reply** to the sender, **Play** the sound embedded in the message, **Erase** the message, **Save** the message to your Saved folder, or set additional **Options** for the message:
 - **Erase** the message.
 - **Lock Msg** to protect the message from being accidentally deleted.
 - **Forward** the message.
 - **Reply with Copy** to reply to the message with a copy of the original attached.
 - **Save Message** to save the message.

- **Save as QuickText** to save the text from the message as QuickText, which you can insert into other messages. Graphics and sound are not saved as part of QuickText. (For more about QuickText, see page 55.)
- View **Sender** information.

3. Select **Done**.

Note: The  symbol indicates that a graphic did not come through. It may be too large or incorrectly formatted.

Setting message alerts


You can set your phone to alert you of incoming text messages or pages. For more information, see “Setting message alerts” on page 42.


Erasing messages

It is a good idea to erase old messages to free up memory in your phone.

You have the option of erasing text messages and pages as you send or read them, erasing them one at a time from the list in the OutBox or InBox, or erasing them all at once.

Erasing single messages

1. Select **Menu** → **Messages**.
2. Select the type of text message you want to erase and press : **InBox**, **OutBox**, **Sent**, or **Saved**.

3. Highlight the message to erase and press .
4. Select **Options**.
5. Select **Erase** to erase the message. A message appears: “Erase this message?”
6. Select **Yes** to erase the message.

Note: You can erase a scheduled message from the **OutBox**, but you cannot cancel delivery of the message.

Erasing all messages

1. Select **Menu** → **Messages** → **Erase Messages**.
2. Select a folder from which to erase all messages: **InBox**, **OutBox**, **Sent**, **Saved Folder**, **Drafts Folder**, or **All Messages**. To erase messages from all folders, select **All Messages**.
3. A message appears: “Erase all messages?” Select **Yes** to erase messages or **No** to cancel.

Erasing messages automatically

Use this setting to have old messages automatically erased from the **InBox** when memory is low.



- Select **Menu** → **Messages** → **Msg Settings** → **Auto-Erase** → **Old InBox Msgs**.
Older messages will be erased as new messages are received.

Customizing message settings

To make messaging easier, you can customize settings for sending and receiving messages.


Creating group lists

You can create and save a list of multiple recipients. Your Kyocera KX5 phone stores five group lists with up to 10 recipients per list.

1. Select **Menu** → **Messages** → **Group Lists** → **Create New**.
2. Enter a name for the list. For help entering text, see “Understanding text entry screens” on page 18.
3. Select **Next**.
4. To enter the first phone number or email address, select an option:
 - **Recent List** to select numbers from your Recent List.
 - **New Address** to enter the phone number or email address manually.
 - **Contacts List** to select numbers from your phone book.
5. Locate the contact number and press .
6. Select **Options** → **Recent List** or **Contacts**.
7. Locate the contact number and press .
8. When finished, select **Done**.
9. To send a message to your new group, see “Sending text messages” on page 49.

Creating and editing prewritten messages (QuickText)

Your phone comes with prewritten (QuickText) messages, such as “Please call me,” which you can insert into the body of a text message. You can edit these messages and create new ones. Your phone will store up to 40 QuickText messages, with up to 100 characters per message.

1. Select **Menu** → **Messages** → **Msg Settings** → **Edit QuickText**.
2. To create a new pre-written message, select **New Msg**.
-or-
To edit an existing pre-written message, highlight the message and select **Edit**.
3. Enter or edit the text and press the left softkey  to select **Done**. For help entering text, see “Understanding text entry screens” on page 18.

Note: You can also save a message you have written or received as QuickText. See “Setting sending options” on page 50 or “Reading the message” on page 53.

10 SENDING AND RECEIVING MULTIMEDIA MESSAGES


Sending multimedia messages

You can only send multimedia messages to phones that are capable of receiving them or to email addresses. For details, check with your service provider.





Multimedia messages have a predetermined character and file size limit. When you reach the character and file size limit for a single multimedia message, you must edit the message to meet the size limitation.



Note: Multimedia message file size limits may apply. For details, check with your service provider.





Creating a multimedia message

1. Select **Menu** → **Messages** → **New Pic Msg.**
2. Enter the recipient's phone number or email address in the **To** field.
3. To add additional recipients:
 - Enter a space or comma after the first phone number or email address, then enter another recipient manually, or
 - Press the right softkey  to select **Options**. Then select **Contacts** or **Group Lists**.


Note: You can send one multimedia message to a maximum of 10 recipients.

4. Press  down once to enter a message in the **Subject** field. Choose a method:
 - Enter the subject text manually, or
 - Press the right softkey  to select **Options**.
5. Press  down once or select **Next** to enter a brief text message in the **Text** field.
6. Press  down once to enter the **Image** field.

Note: You may add only one picture per multimedia message.
7. Press the right softkey  to select **Options**. Select an option:
 - **Take Picture** to instantly take a new photo and attach it to your message.
 - **Media Gallery** to access all picture and video files in the phone:
 - **Camera Pictures** displays your photos taken in a table/thumbnail view.
 - Highlight a photo to add to the multimedia message. Press the left softkey  to choose **Select**.
 - **Images** displays stored images on the phone.
 - **Videos** displays stored videos on the phone.

8. Press  down once to enter the **Sound** field and press the right softkey  to select **Options**.
 - **Record Sound** to instantly record a new sound and attach it to your message.
 - **Media Gallery** to display a list of categories that contain saved or downloaded sounds and voice memos.
 - Highlight **Saved Sounds**. Press the left softkey  to select **OK**.
 - Highlight a sound to add to the multimedia message. Press the left softkey  to choose **Select**.

Note: You may add only one new or stored sound per multimedia message sent.

9. Before sending your message, press the right softkey  to select additional **Options**. Choose:
 - **Preview Message** plays your multimedia message prior to sending.
 - **Save Message** allows you to save your multimedia message to the Drafts Folder and send it later.
 - **Add Address** allows you to add additional addresses to your multimedia message prior to sending it.
 - **Message Priority** allows you to send your multimedia message with Normal or Urgent priority.

10. Press the left softkey  to select **Send**. This will send your multimedia message.



Receiving multimedia messages

There are two settings for receiving a multimedia message on your KX5 phone: **Auto receive** (default) and **Prompt**.

Auto receive mode

When a multimedia message is received, it is automatically downloaded onto your phone.



The alert “New Message(s)” appears along with the text “Message Received. View now?”

- **To View** the multimedia message, press the left softkey .
- To view **Later**, press the right softkey .

Note: If a multimedia message is received during a call, then the phone downloads the message approximately one minute after the last key is pressed.





Prompt mode

When a multimedia message is received, your screen displays the alert “New Message(s)” along with the question “Retrieve Now?”


- To **View** the multimedia message, press the left softkey .
- Select **Erase** to never download the multimedia message.
- To view **Later**, press the right softkey .





Note: If a multimedia message is received during a call, then the phone screen displays the alert “New Message(s)” after the call ends.

To activate **Prompt mode**:

1. Select **Menu** → **Messages** → **Msg Settings**.
2. Press  up or down to scroll through the list.
3. Highlight **Auto Retrieve** and press .
4. Press  up or down through the list and highlight **Disabled**. Press .


Viewing multimedia messages

When you receive a multimedia message, a  appears on your phone's screen and remains until all messages are viewed. The message is stored in the InBox until the full message has been received, regardless of the auto receive or prompt setting.

1. Press the left softkey  to **View** the multimedia message. If the message is long, press  down to view the entire multimedia message.
2. Press the right softkey  to select **Options**. Press  down to highlight additional options for the multimedia message (options vary according to selection):

Note: The options available to you may vary. Check with your service provider.

- **Mute** to silence the message.
- **Erase Msg** allows you to delete the currently displayed multimedia message.
- **Forward** launches the message creation screen, allowing you to forward the multimedia message. The original address will not be shown, nor will the graphic, sound, and text fields.
- **Lock Msg** to avoid accidentally erasing it.
- **Message Info** displays multimedia message information (priority, sender, subject, time sent and received, and message size).
- **Play Video** plays the video in the multimedia message.
- **Replay** plays the multimedia message again from the beginning.
- **Done** exits the multimedia message.
- **Call** initiates call to sender of multimedia message.



- **Save Picture** saves the currently viewed picture embedded in the multimedia message.
 - **Save Video** saves the video embedded in the multimedia message.
 - **Save Sound** saves the current sound embedded in the multimedia message.
 - **Save Address** extracts email addresses, phone numbers, and/or URLs from the sender information and multimedia message body.
 - **Save as QuickText** saves the text in the multimedia message to the QuickText list.
 - **Save Message** saves the multimedia message to the Saved Folder on the phone.
3. When you are finished viewing the multimedia message, select **Reply** or press .

11 USING TOOLS

Voice Memo

The Voice Memo tool allows you to record and play back audio memos.

Recording a voice memo

1. Select **Menu** → **Tools** → **Voice Memo** → **Record New**.
-or-
Press and hold  right.
2. Say your memo and press the left softkey  to select **Stop**.
3. Select **Save** to save your memo.


Note: If an incoming call is received while you're recording a memo, the memo is saved and the incoming call screen appears.

Playing or reviewing a voice memo

1. Select **Menu** → **Tools** → **Voice Memo** → **Recorded Memos**.
2. Scroll to the voice memo you would like to review. It will begin playing automatically.

Naming a saved voice memo

1. Select **Menu** → **Tools** → **Voice Memo** → **Recorded Memos**.
2. Highlight the memo and select **Options**.
3. Select **Rename**.

4. Press and hold  to clear the default name.
5. Use the keypad to enter a name for the memo.
6. Select **Save**.



Erasing a saved voice memo

1. Select **Menu** → **Tools** → **Voice Memo** → **Recorded Memos**.
2. Highlight the memo and select **Options**.
3. Select **Erase**. The prompt "Erase file?" appears.
4. Select **Yes** or **No**.

Scheduler

The Scheduler allows you to schedule events and set reminder alerts.

Creating an event

1. Select **Menu** → **Tools** → **Scheduler** → **Add New Event**.
2. Enter a name for the event and press  down. For help entering text, see page 18.
3. Select **Options** and classify the type of event and press : **Meeting**, **Phone Call**, **Birthday**, **Anniversary**, **Vacation**, **Medical**, or **Other**.

4. Press to change the date of the event (the current date is the default date of the event).
 - Press left or right to move between the month, day, and year fields.
 - Press up or down to change the month, day, or year.
 - Press to save your changes.
5. Press to set the time of the event.
 - Press left or right to move between the hour, minute, and AM/PM fields.
 - Press up or down to change the hour, minute, or AM/PM.
 - Press to save your changes.
6. Press to set the duration of the event.
 - Press left or right to move between the hour and minute fields.
 - Press up or down to change the hour and minute.
 - Press to save your changes.
7. Press to set a reminder of the event.
 - Select an option and press .
8. Press to set the reminder sound.
 - Select an option and press .
9. Press to select a **Silent Mode** setting.
 - Select **No** or **During Event** and press .
10. Press to select whether or not this is a recurring event.

- Select an option and press : **No**, **Daily**, **Weekly**, **Monthly**, or **Annually**.

11. Select **Save**.

Editing, erasing, or sending an event









1. Select **Menu** → **Tools** → **Scheduler** → **View Month**.
2. Press up, down, left or right to highlight the day with the event to view, edit, or erase and press .
3. Press up or down to highlight the event and press .
4. Press the right softkey to select **Options**.
5. Select **Edit**, **Erase**, or **Send** and press .
 - For more information about editing the event, see “Scheduler” on page 60.
 - To erase the event, highlight **Erase** and press . Press the left softkey to confirm.
 - For more information about sending the event, see “Sending and Receiving Text Messages” on page 49.

Alarm Clock

You can set up to four alerts with your phone's three alarm clocks and one quick alarm.


Note: The alert occurs only if the phone is on.

Setting an alarm clock

1. Select **Menu** → **Tools** → **Alarm Clock**.
2. Highlight one of the alarms and select **Set**.
3. Use the phone keypad to enter numbers and  to switch between AM and PM.
 - Press  left or right to move between hours, minutes, and AM/PM fields.
 - Press  up or down to change the hours, minutes, and AM/PM options.
4. Press  to set the time of the alarm.
5. Select **Options** to set the alarm sound.
6. Highlight an option and press .
7. Select **Options** to set the recurring time.
8. Highlight an option and press .
9. Enter a note for the alarm and press .
10. Press the left softkey  to select **Save** and set the alarm(s).
11. When the alarm rings, select **Off** to turn off the alarm or **Snooze** to silence the alarm for 10 minutes.





Note: Opening the slider turns off the alarm.

Setting the QuickAlarm

1. Select **Menu** → **Tools** → **Alarm Clock**.
2. Highlight **QuickAlarm** and select **Set**.
3. Select an option and press : **5 minutes**, **15 minutes** (default), **30 minutes**, or **60 minutes**.
A message appears telling you the QuickAlarm is On.
4. When the alarm rings, select **Off** to turn off the alarm or **Reset** to set the QuickAlarm again.


Tip Calculator

The Tip Calculator helps you calculate how much tip to include with a bill.

1. Select **Menu** → **Tools** → **Tip Calculator**.
2. Enter the amount of your bill.
3. Select **Next**.
4. Select the amount you want to include as a tip (10%, 15%, 18%, 20%, Other) and press . Your total bill appears, including tip.
5. To split the bill, press the right softkey  to select **Split**.
6. Press  to clear the default of 2 guests.
7. Enter the number of guests and press the left softkey  to select **Next**. The amount each guest pays is calculated.
8. Select **Done**.





Calculator

Use the calculator for basic mathematical equations.


1. Select **Menu** → **Tools** → **Calculator**.
2. Use the keypad to enter numbers.
3. Use  to select mathematical operations:

Left \times (multiply) **Up** $+$ (add)

Right \div (divide) **Down** $-$ (subtract)

4. Press  to calculate the result.
Example: Enter 5, press  left to select **X**, enter 2, then press  to obtain the result of 10.
5. Press  to return to the home screen.

- or -






Press  to clear the screen.

Options

- M+** Adds displayed digit to the value stored in memory.
- MR** Displays currently stored value on screen.
- MC** Clears value currently stored in memory.

Timer

This timer counts down for a specified amount of time. It beeps when that amount of time has elapsed.


1. Select **Menu** → **Tools** → **Timer**.
2. Select **Set**.
 - Press  to move the cursor left or right.
 - Press  up or down to set the hours, minutes, and seconds.
3. Select **Start** to begin the countdown. Select **Stop** to pause the countdown. Select **Reset** to clear the timer.
4. Select **Sound** to set the alarm sound and press .
5. Press  or the right softkey  to silence the alarm.

Stopwatch

1. Select **Menu** → **Tools** → **Stopwatch**.
2. Select **Start** to begin counting. Select **Stop** to stop counting. Select **Reset** to clear the counter.

12 USING BLUETOOTH® WIRELESS TECHNOLOGY

The Bluetooth® wireless technology on your Kyocera KX5 phone enables wireless connectivity with accessories such as portable or installed hands-free car kits, headsets, handsets, computers, PC cards and adapters, PDAs, and speakers.

Note: You must use a Bluetooth® wireless technology device (compatible with Class 2 Bluetooth® wireless technology, version 1.2) in order to use this phone wirelessly. Bluetooth® wireless technology accessories have the  symbol.



Pairing

You must first “pair” your phone with the Bluetooth® wireless technology enabled device to allow your phone to communicate with it. Refer to the instructions for setting up Bluetooth® wireless technology (below) in conjunction with the device’s user guide provided with your Bluetooth® wireless technology device.


Setting up Bluetooth® wireless technology on your Kyocera phone


When you turn Bluetooth® **On** the first time, you will be prompted to do a device search. Follow the same procedure as for **Find New**, described below.

1. Select **Menu** → **Bluetooth** → **ON/OFF**.
 2. Select one of the following:
 - **On Invisible** hides your phone for all devices except those listed in **My Devices** (recommended setting).
 - **On Visible** allows other devices to find your phone.
- Note:** Setting **Bluetooth®** to **Off** prohibits your phone from being used with any Bluetooth wireless technology device. To prolong battery life, it is recommended to set **Bluetooth®** to **Off** when you are not using it.
3. Prepare the Bluetooth® wireless technology device (Bluetooth® accessory) for pairing as described in the device’s user guide.
 4. Select **Menu** → **Bluetooth** → **My Devices**.
 5. Select **Find New**.
 6. Your phone will search and detect visible Bluetooth® wireless technology enabled devices in the vicinity.

7. Press the left softkey  to select **Add**.
8. Select the device with which you wish to pair from the menu and press the left softkey  to select **Add**.

Note: When pairing is initiated from another Bluetooth® wireless technology device, you will see the prompt “Device <device name> requests to connect using Bluetooth®. Accept/Reject?”.

9. Enter the password provided in the device’s user guide, if necessary and press the left softkey  to select **OK**.

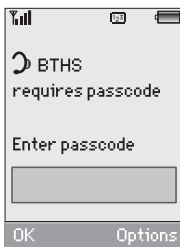


10. The phone waits for the Bluetooth® wireless technology device to respond.
11. The Bluetooth® wireless technology device is added to **My Devices**.

Connecting and disconnecting to a Bluetooth® wireless technology device


Before you can use the Bluetooth® wireless technology functions of your phone, you must set your phone to be ready to communicate with a device. This is called “connecting.”

Connecting to a Bluetooth® wireless technology device

To connect your phone to an audio Bluetooth® wireless technology device:


1. Select **Menu** → **Bluetooth** → **My Devices**.
2. Scroll to the device and press the left softkey  to select **Connect**.
3. A message on the phone tells you that your device is connected. A headset icon will appear on the top row when a headset or hands-free car kit is connected.
4. You are now ready to use the device with your phone.

Disconnecting from the Bluetooth® wireless technology device

1. Select **Menu** → **Bluetooth** → **My Devices**.
2. Scroll to the device and press the left softkey  to select **Disconnect**.


Bluetooth® wireless technology settings

You can change/review the information about each device you have set up on your phone.

1. Select **Menu** → **Bluetooth** → **My Devices**.
2. Scroll to the device and press the right softkey  to select **Options**:
 - **Rename** the device
 - **Delete** the device from your phone if you are no longer going to use it
 - **Services** view a description of the device (such as Headset, HandsFree, Object Push, and Serial Port)

Renaming the device

You can change the name of the Bluetooth® wireless technology device in your KX5 phone as follows:

1. Select **Menu** → **Bluetooth** → **Settings** → **My Name**.
2. Enter the new name in the text field and press the left softkey  to **Save**.

Visible Duration


You can set the time that your KX5 remains “visible” to other Bluetooth® wireless technology devices.

1. Select **Menu** → **Bluetooth** → **Settings** → **Visible Duration**.

2. Select one of the following:
 - **1 minute**: Bluetooth® wireless technology will remain **On Visible** for 1 minute before returning to **On Invisible**.
 - **3 minutes**: Bluetooth® wireless technology will remain **On Visible** for 3 minutes before returning to **On Invisible**.
 - **Always**: The **On/Off** setting remains on or off until you change it yourself.


Services

You can view a list of the available Bluetooth® wireless technology service protocols supported by your Kyocera KX5 phone:

1. Select **Menu** → **Bluetooth** → **Settings** → **Services**.
2. A list of supported service protocols is listed.
3. Press  to return to the **BT settings** menu.

13 USING VOICE RECOGNITION






Voice recognition allows you to make and answer calls by speaking commands into the phone's microphone.

Note: You cannot use voice recognition to end a call; you must press .

Setting up voice dialing

To make or receive calls using voice dialing, contacts must be saved with associated voice tags.

Creating a voice tag for a contact


1. Press and hold  up to select **Contacts**.
2. Highlight the contact and press .
3. Press  down to highlight the number.
4. Press the right softkey  to select **Options**.
5. Highlight **Add Voice Dial** and press .
6. Follow the voice prompts. You will need to say the name twice.

Viewing entries with voice tags


- Select **Menu** → **Contacts** → **Voice Dial List**.

A list of all contacts with assigned voice tags appears.


Editing a voice tag

1. Select **Menu** → **Contacts** → **Voice Dial List**.
2. Highlight the contact to edit, and press .
3. Highlight the phone number and select **Options**.
4. Select **Add Voice Dial**, **Edit Voice Dial**, or **Erase Voice Dial**.
5. Follow the prompts.

Making a call using voice tags

1. If you haven't already done so, record a voice tag for the person you wish to call.
2. From the home screen, press . The phone responds: "Say a name."
3. Say the name of the person you want to call.
4. If the name you said matches a contact in the Voice Dial List, the phone responds: "Calling (Name)." Remain silent to make the call, or say **No** to cancel.

Note: If the phone finds multiple voice tags that sound like the name you said, you will be asked to verify which name you want to call. Say **Yes** when you hear the correct name. Say **No** when you hear an incorrect name.

5. When you are finished with the call, press .

Erasing voice tags


To erase all voice name dial recordings in your phone:

1. **Menu** → **Settings** → **Voice Features** → **Erase Voice Dial**.
2. Select **Yes**.

Making a call using digit dialing

When using digit dialing, you speak digits to dial a phone number.

Note: You cannot speak a string of digits. You must speak one digit at a time and wait for the prompt.

1. From the home screen, press . The phone responds: "Say a name or say Dial."
2. Say "**Dial**". The phone responds: "Speak a digit."
3. Speak the first digit of the phone number you want to call. Once the phone repeats the digit, you can speak the next digit.

If you pause, the phone will prompt you with the following five options. After the prompt, speak an option.

- Say "**Clear**" to erase the last digit entered. The phone responds: "Digit cleared." To clear the entire phone number, say "**Clear**" again. When the phone prompts you with "Clear entire phone number?", say "**Yes**" to clear or "**No**" to cancel.
- Say "**Call**" to dial the number.

- Say "**Verify**" to cause phone to repeat the set of digits that you input.
- Say "**Cancel**" to exit voice recognizer and return to the home screen.
- Speak a digit to enter the next digit. Once the phone repeats the digit, you can speak the next digit or pause to hear the prompt.

Using voice features with hands-free car kits

You can use voice commands to make a phone call or to answer the phone only if your phone is connected to a professionally installed Kyocera hands-free car kit (sold separately).

Note: The following features apply only to installed hands-free car kits unless noted.


To shop for hands-free car kits, visit www.kyocera-wireless.com/store or call 800-349-4188 (U.S.A. only) or 858-882-1410.

Waking up the phone

If your phone is connected to a Kyocera installed hands-free car kit, you can use the voice command to activate the phone to make a phone call.

Note: Voice Wake-up does not work with Keyguard active.

To activate the Voice Wake-up setting:

1. Select **Menu** → **Settings** → **Voice Features** → **Voice Wake-Up** → **With accessory**.
2. Select **Menu** → **Settings** → **Keyguard** → **Disabled**, then press .

To wake up the phone:

1. Say “**Wake Up**” and listen for a tone.
2. Say “**Wake Up**” again until you hear two tones.

If the phone does not recognize your “Wake up” command, see “Training voice recognition” on page 70.

Answering the phone

You can set your hands-free car kit to (1) answer automatically or (2) answer using a voice command.

Answering automatically

You can set your phone to answer automatically.

Note: This setting also works with the portable hands-free car kit.



- Select **Menu** → **Settings** → **Accessories** → **Auto-Answer** → **After 5 secs**.

Answering using voice commands

If Auto-Answer is turned off, you can use a voice command to answer an incoming call using the installed hands-free car kit.


- Select **Menu** → **Settings** → **Accessories** → **Auto-Answer** → **Disabled**.

To activate the Voice Answer setting:

1. Select **Menu** → **Settings** → **Voice Features** → **Voice Answer**.
2. Highlight **Enabled** and press .
3. Select **Menu** → **Settings** → **Silent Mode** → **Normal Sounds**, then press .


To answer a call:

When you receive an incoming call, the phone responds: “Incoming call, answer?” or “Incoming roam call, answer?” If the caller is recognized as a contact entry in your phone, then the phone will say “Incoming call from (Name), answer?”

- Say “**Yes**” or press any key except .


Ignoring an incoming call

To ignore an incoming call, do one of the following:

- Say “**No**” and press  to silence the alert.
- Remain silent. The voice alert repeats twice and the phone rings once, then returns to the home screen.

Training voice recognition

If your phone is having trouble recognizing your voice, you can train it with the commands **Yes**, **No**, and **Wake up**.

1. Select **Menu** → **Settings** → **Voice Features**.
2. Select **Voice Training**.
3. Read the message and press the left softkey  to select **OK** and continue. **Cancel** returns you to the previous screen.
4. Select **Train All** or the item you want to train.
5. Follow the prompts for each word until training is complete.

14 CONNECTING TO THE INTERNET

Using the Web Browser

You can use your phone to browse the Internet if you have obtained phone Internet services from your service provider and if over-the-air Internet access is available in your area.

Note: You cannot receive incoming calls while you are using Web Browser.

Launching the Web Browser


1. Select **Menu** → **Web Browser**.

A message about airtime fees appears every time you start the browser.


For more information about how airtime is charged, contact your service provider.




2. Press the left softkey  to continue.


If this is the first time you have connected to the Internet, a message informs you that security is not yet enabled for your Web Browser.

3. Press  to select **Yes** to enable security.

When you are connected, a browser home page appears. It has a list of bookmarks and some Web menu options at the bottom of the screen.

- A  appears in a secure session.

- An underline and an arrow indicate that there is more text. Press  down to view more text. Press  to return to the previous screen.
- To choose a site, highlight it and press  to select **Go**.

4. When you have finished using the Internet, press  to exit the Web Browser.

Using the Web menu options

The following options may appear on your screen:



- **Home** returns you to the main Web Browser window, or home page.
- **Mark Site** saves the current location as a bookmark for easy access.
- **Bookmarks** displays a list of your saved Web sites.
- **Setup** gives you options for changing how information is displayed.
 - **Show URL** displays the entire URL.
 - **About Openwave** displays information about your Web Browser version.
 - **Encryption** should not be used unless you are instructed to do so by your service provider.

- **UP.Link** selects a different browser server.
You can use this option if you have more than one Web Browser account.
- **Restart** restarts the Web Browser.

Searching for a Web site


How you search for a Web site depends on your service provider. For more information, contact your service provider.

Going to a bookmarked site

1. Select **Menu** → **Web Browser**. If you see a message prompt, press  to continue.
2. From your Web home page, select **Bookmarks**. A list of bookmarks appears.
3. Enter the number corresponding to the bookmark you want and press .

Checking Net alerts

Alerts received from a Web site are sent to your **Browser Alerts** inbox.

1. Select **Menu** → **Messages** → **Browser Alerts**.
This action launches the browser inbox.
2. Press  to accept browser fees.
3. Select an alert and follow the prompts.

15 GETTING HELP

Customer support

Your service provider's customer support department may be accessible directly from your phone when you dial a number, such as *611 (check with your service provider). They can answer questions about your phone, phone bill, call coverage area, and specific features available to you, such as call forwarding or voicemail.

For questions about the phone features, refer to the materials provided with your phone, or visit **www.kyocera-wireless.com**.

For additional questions, you may contact the Kyocera Wireless Corp. Customer Care Center in any of the following ways:

- Web site: **www.kyocera-wireless.com**
- Email: phone-help@kyocera-wireless.com
- Phone: 1-800-349-4478 (U.S. and Canada) or 1-858-882-1401.
- Customer support phone numbers are also available in the following countries:

Argentina:	0-800-666-0052
Australia:	1-800-507-000
Brazil:	0-800-55-2362
Chile:	800-43-1212
Colombia:	01-800-700-1546

India:	Toll free#: 1-600-121214 Toll#: 0124-284-5000
Mexico:	001-866-650-5103
New Zealand:	0-800-990-100
Panama:	001-800-201-1984
Peru:	0-800-51-934
Puerto Rico:	1-866-664-6443
Venezuela:	0-800-100-2640

Before requesting support, please try to reproduce and isolate the problem. When you contact the Customer Care Center, be ready to provide the following information:

- The name of your service provider.
- The actual error message or problem you are experiencing.
- The steps you took to reproduce the problem.
- The phone's electronic serial number (ESN).
 - To locate the ESN select **Menu** → **Phone Info** and scroll down to **ESN** for the 11-digit number.

Qualified service

If the problem with your phone persists, return the phone with all accessories and packaging to the dealer for qualified service.

Phone accessories

To shop for KX5 phone accessories, visit **www.kyocera-wireless.com/store**. You may also call us at 800-349-4188 (U.S.A. only) or 858-882-1410.

Become a product evaluator

To participate in the testing and evaluation of Kyocera Wireless Corp. products, including cellular or PCS phones, visit **beta.kyocera-wireless.com**.

INDEX

Numerics

1-Touch dialing, 14

A

Alarm Clock, 8

alarm clock, 62

alerts

 for messages, 42

 for missed calls, 12

analog mode, 8

auto-hyphenation, 44

B

banner, 43

battery, 1

blocking outgoing calls, 46

Bluetooth enabled wireless device, 65

 connecting and disconnecting, 65

 deleting an accessory from your phone, 66

 determine duration of visibility, 66

 find new device, 64

 invisible, 64

 pairing, 64

 renaming an accessory, 66

 services available, 66

 setting up, 64

 turning on and off, 64

 visible, 64

C

calculator, 63

call counters, 15

callback number, 50

calls

 answering, 10

 missed, 12

 redialing, 11

camera

 menu options, 27

 recording video, 29

 sending a picture, 27

 setting up, 28

 taking a picture, 28

color themes, 45

Com Port speed, 47

connect a Bluetooth wireless enabled accessory,

 65

contacts directory, 21

contrast, 44

countdown timer, 63

D

data/fax setup, 15, 47

deleting a Bluetooth wireless enabled accessory

 from your phone, 66

digital mode, 8

display contrast, 44

E

emergency

 calls, 15

 emergency mode, 15

 exit emergency mode, 15

 position location, 9, 48

erasing

 contact entries, 23, 46

 phone numbers, 24

 text messages, 54

F

fast find, 25

fax mode, 47

finding contact information, 24
 finding new bluetooth wireless enabled
 accessories, 64
 frequent contacts, 24

H

hands-free car kit
 answering using voice, 69
 purchasing, 74
 hands-free headset
 purchasing, 74
 hard pause, 21

I

icons, 8
 contacts, 23
 messages, 53

InBox, 53

L

language, 43
 lights
 lights-only mode, 9, 40
 limiting calls out, 46
 list of compatible Bluetooth wireless enabled
 accessories, 66
 lock code, 45
 locking phone, 45

M

memory
 saving, 54
 memory card, 31
 menu view, 43
 Music Player, 2, 31

N

number mode, 18

O

OutBox, 52

P

Pairing phone with Bluetooth enabled
 wirelessdevice, 64
 phone numbers
 erasing, 24
 verifying your own, 7
 phone, unlocking, 46
 position location, 9, 48
 power save mode, 10

Q

QuickAlarm, 62
 QuickText, 50, 55

R

recent call icons, 13
 renaming a Bluetooth enabled wireless
 accessory, 66
 resetting the phone, iv
 ringers
 choosing types, 40
 for contacts, 22
 for roaming calls, 16
 silencing, 7
 volume, 41
 roaming, 8
 alerts, 16
 controlling, 15
 ringer, 16

S

scheduler, 60
 screen contrast, 44
 screen icons, 8, 18, 40, 52, 53
 screen savers, 44
 secret contacts, 13, 24
 security, 45
 sent messages, 52
 setting up Bluetooth wireless connectivity, 64

silent mode, 9, 40
smart sound, 41
smiley mode, 19
songs, 31
speed dialing, 24
stopwatch, 63
symbol mode, 19

T
technical support, 73
text entry, 18
 quick reference, 20
text messages, 49
time format, 45
timer, 63
timing calls, 15
tip calculator, 62
TTY/TDD, 48

U
unlocking the phone, 46

V
vCard, 23
vibrate, 9, 40
visible duration period for Bluetooth wireless
 technology, 66
Voice Answer, 69
voice dialing, 67
voice memo
 erasing, 60
 naming, 60
 recording, 60
voicemail, 14
 setting up, 7
volume
 earpiece, 11, 41
 key beep, 42
 ringer, 41

W
wallpaper, 45
Web Browser, 71



Kyocera Wireless Corp.
10300 Campus Point Drive
San Diego, California 92121 USA
www.kyocera-wireless.com

82-N8734-1, Rev. 001