


DISHWASHER >

User Manual

Model Number:

DC4752LEDW

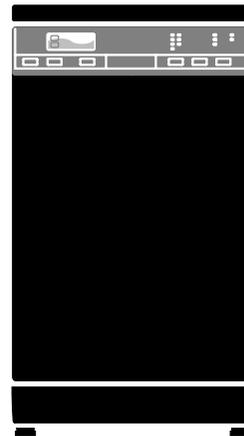



Contents ›

- 01 Welcome
- 02 Safety Instructions
- 07 Your Dishwasher
- 11 Technical Specification
- 12 Installation
- 19 Setting Up Your Dishwasher
- 23 Using Your Dishwasher
- 35 Maintenance
- 41 Troubleshooting
- 48 Product Fiche
- 49 Guarantee
- 51 Index

WELCOME >

Thank you for choosing this Servis Dishwasher, which has been designed and manufactured to give you many years of trouble-free service.

You may already be familiar with using a similar product but please take time to read these instructions, which have been written to ensure you get the very best from your purchase.


WARRANTY >

Servis provides you with a guarantee which will protect you should your Dishwasher develop an electrical or mechanical fault during the guarantee period. To ensure that you get a prompt and efficient service, please register your Dishwasher immediately.

You will find a warranty card included within the packaging. To register, complete the form, or:

- » Visit us at www.servis.co.uk
- » Call us on 0800 0124 382.

ITEMS INCLUDED >

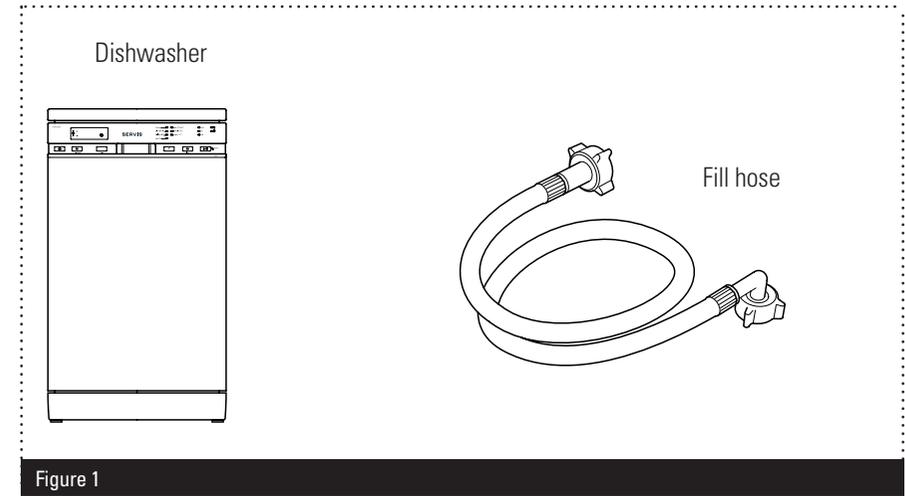

SAFETY INSTRUCTIONS >

To ensure your safety and the safety of others, please read the following safety precautions before you operate your Dishwasher.

- » Your Dishwasher conforms to current safety requirements. Inappropriate use can, however, lead to personal injury and damage to property. To avoid the risk of accidents and damage to your Dishwasher, read this user guide carefully before using it for the first time. It contains important information on the installation, safety, use and maintenance of your Dishwasher. Retain this user guide for future use and pass it on to any new owners. Read this user guide before using or installing your Dishwasher.

SAFETY INSTRUCTIONS >


- » Your Dishwasher is for domestic use only and is only intended to wash and dry items which are specified by the manufacturer to be dishwasher-safe. Do not use your Dishwasher for any purpose not expressly specified in this user guide.
- » Before setting up your Dishwasher, check for any external visible damage. Do not install or use your Dishwasher if it is damaged. Prolonged intensive use of your Dishwasher may call for additional ventilation.
- » Before connecting your Dishwasher, ensure that the voltage and connected load information in this guide matches that of the mains electricity supply. If in doubt, consult a qualified electrician.
- » Before connecting your Dishwasher, ensure that all electrical connections match the values on the rating plate. Servis cannot be held responsible for any damage that may occur due to improper connections. If in doubt, consult a qualified electrician.
- » Do not connect your Dishwasher to the mains electricity supply using an extension lead or multi socket. These types of connection can cause overheating.
- » Make sure that the power supply cable is positioned where you can reach it if required.
- » A damaged power cord/plug can cause fire or give you an electric shock. When damaged it must be replaced. This should only be done by qualified personnel.
- » Never remove the plug from the socket by pulling the cord. Always hold the plug.
- » Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock.
- » Do not touch your Dishwasher if your hands or feet are wet.
- » Your Dishwasher can reach high temperatures in use. Do not place it next to a refrigerator or freezer.
- » Do not put your Dishwasher in any location where the room temperature is likely to fall below 0 °C.
- » Do not mount heat sources such as ovens near or on the Dishwasher. Heat from these devices may damage your Dishwasher.
- » This Dishwasher is designed to be used in houses and similar places. (IEC 60335-2-5/A2)
- » Faulty components must only be replaced by a suitably qualified Service Agent using genuine spare parts.
- » Unauthorised repairs could result in unforeseen dangers for the user. Repairs should only be undertaken by an approved service agent.
- » In the event of a fault or for cleaning purposes, your Dishwasher is only completely isolated from the electricity supply when it is unplugged from the mains.
- » Your Dishwasher must only be connected to your water supply using the supplied new fill hose. Old hoses must not be reused.
- » Make sure that the drain hose is not kinked or compressed or the water may not drain away from the Dishwasher properly.

SAFETY INSTRUCTIONS >

- » Do not make any alterations to your Dishwasher, unless authorised to do so by Servis.
- » The packaging of the Dishwasher could be hazardous to children. Please refer to the disposal instructions on the rear cover.
- » Please ensure that you have removed all of the packaging materials and protective tape from inside and outside your Dishwasher before using.
- » Keep the document bag that contained this user manual out of reach of children and babies to prevent the risk of suffocation.
- » Keep the small items found in the document bag out of reach of small children and babies.
- » Only use detergents and rinse aids which are designed specifically for use with dishwashers.
- » Use soft grain or powder softener salt. Do not use table salt or sea salt in your Dishwasher.
- » Never use your Dishwasher without a filter.
- » Do not overload the drawers or place items where they can block the rotary spray arms.
- » Never force the door open when your Dishwasher is running.
- » For energy and water saving, remove coarse residues and food waste from your dishes before placing your dishes in the Dishwasher.
- » Place hollow items, such as bowls, glasses and pots into the Dishwasher face-down wherever possible. However, do not place tall glasses so that their stems can block the rotary spray arm.
- » Place cutlery point down in the cutlery basket, or flat in the top basket.
- » Check whether plastic items are heat-resistant before washing them in the Dishwasher.
- » Do not touch the drain hose or any discharged water while your Dishwasher is running. The high temperatures involved pose a burn risk.
- » Clean the rotary spray arms and the filter at least once a week.
- » Check the rinse aid indicator regularly and top up with rinse aid when required.
- » Your Dishwasher is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of your Dishwasher by a person responsible for their safety.
- » To avoid risk of injury do not allow children to play on or near your Dishwasher or to play with its controls.
- » Do not sit or stand on the open door of your Dishwasher as it may fall over.

YOUR DISHWASHER >


FRONT VIEW >

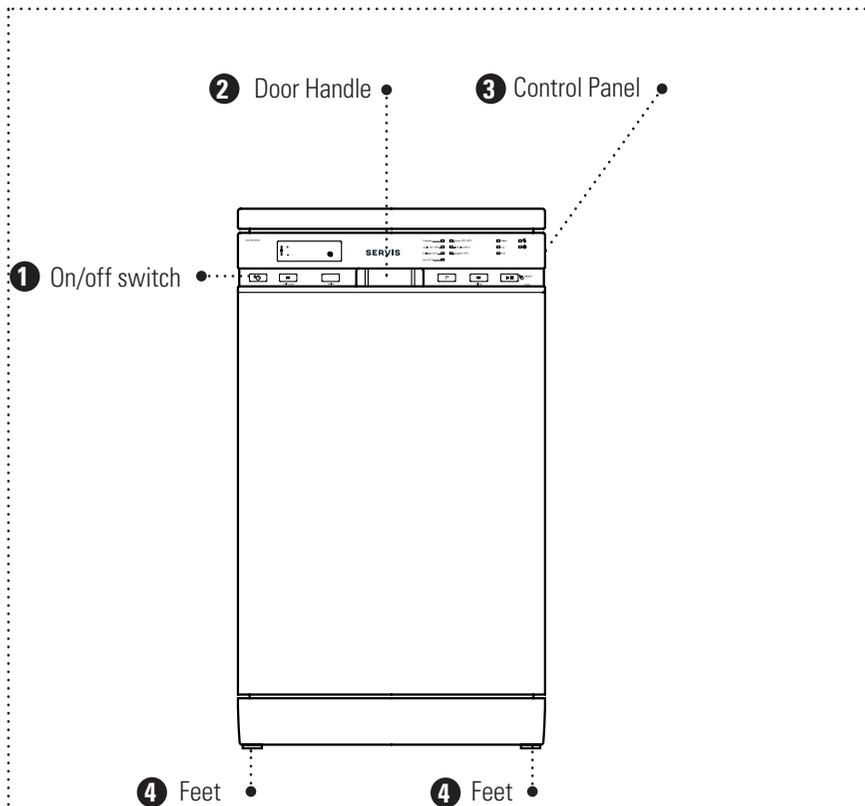

- 1 On/off switch.
- 2 Door handle.
- 3 Control panel.
- 4 Feet.

Figure 2

REAR VIEW >

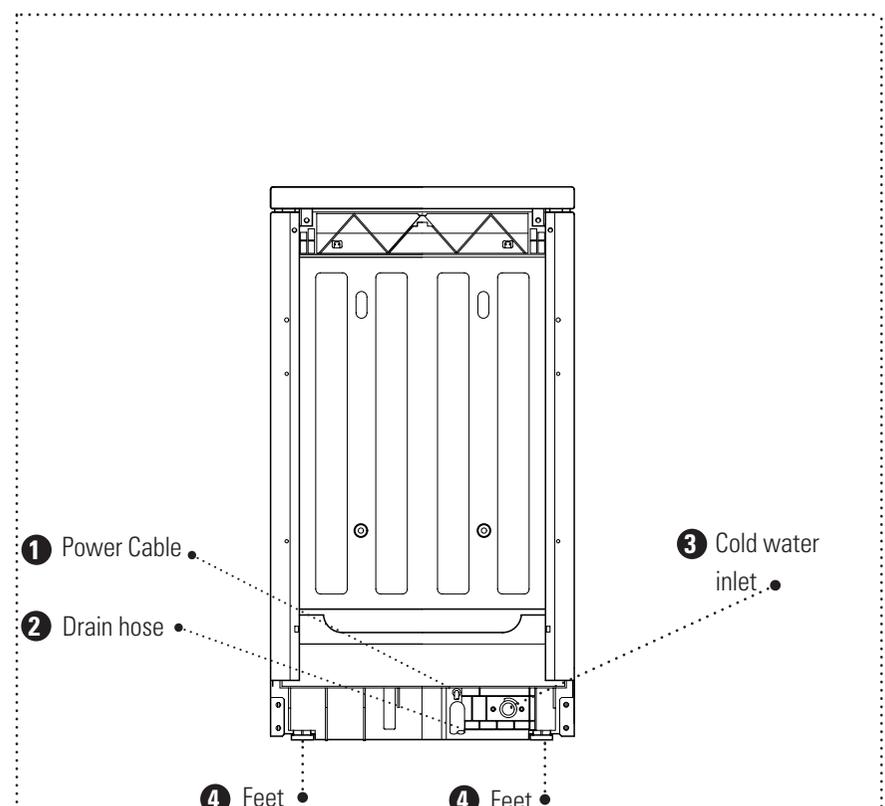


- 1 Power cable.
- 2 Drain hose; provides an outlet for the dirty water from your Dishwasher.
- 3 Cold water inlet; connects your Dishwasher to your cold water supply.
- 4 Feet.

Figure 3

YOUR DISHWASHER >


INSIDE VIEW (WITH DRAWERS) >

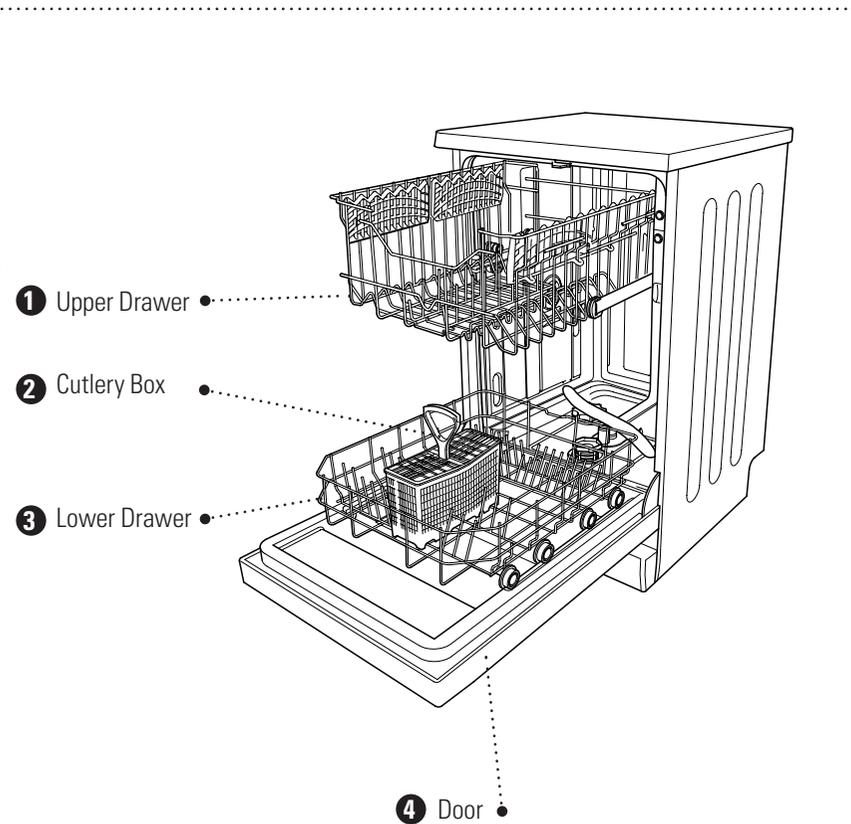

- 1 Upper basket.
- 2 Cutlery box.
- 3 Lower basket.
- 4 Door.

Figure 4

INSIDE VIEW (WITHOUT DRAWERS) >

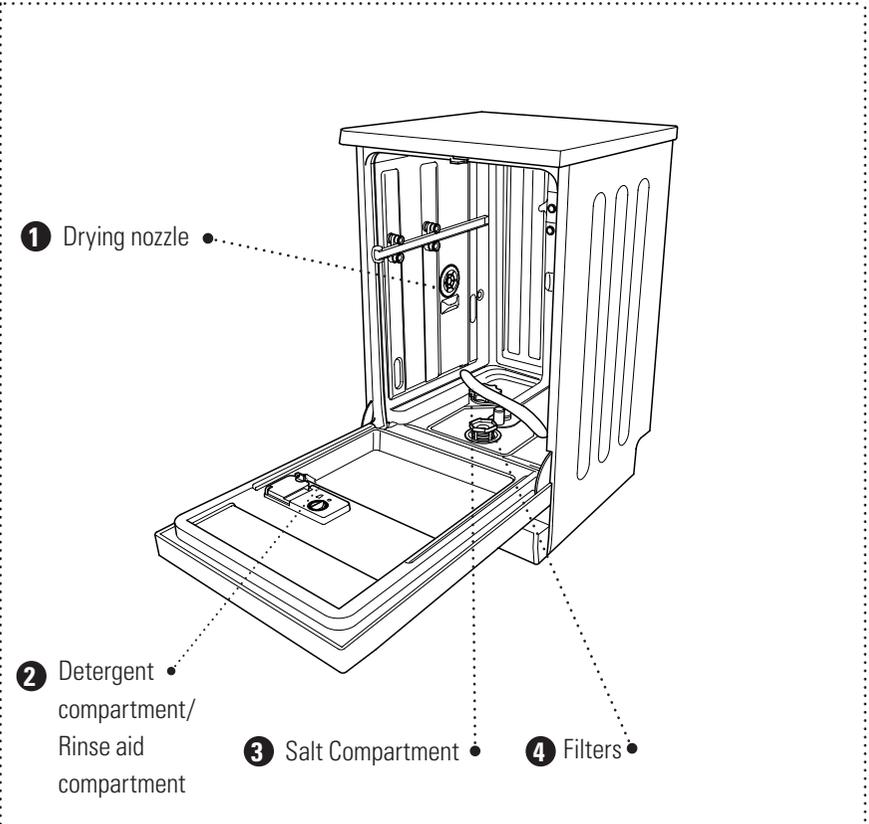

- 1 Drying nozzle (one each side).
- 2 Detergent compartment/Rinse aid compartment.
- 3 Salt compartment.
- 4 Filters.
- 5 Light (Not shown)

Figure 5

TECHNICAL SPECIFICATION >

INSTALLATION >

TECHNICAL SPECIFICATION >

Capacity	10 place settings
Height	845 mm
Height (without worktop)	815 mm
Width	450 mm
Depth	598 mm
Net Weight	40 kg
Electricity Input	220-240 V, 50 Hz
Total Power	1900 W
Heating Power	1800 W
Pump Power	100 W
Drain Pump Power	30 W
Water Supply Pressure	0.03 MPa (0.3 bar) - 1 MPa (10 bar)
Current	10 A

INSTALLATION REQUIREMENTS >

To avoid risk of injury, please take care when moving your Dishwasher. It is heavy and we recommend that a minimum of two people move your Dishwasher.

To unpack your Dishwasher and manoeuvre it to the installation area, one person should hold it by the front feet and the other person at the edge of the lid at the rear.

Your Dishwasher measures 84.5 x 45.0 x 59.8cm and will require an installation area with the space to allow the door to fully open and provide easy access to the plumbing and electrical connections.

The most suitable installation surface for your Dishwasher is a concrete floor as it is less prone to vibration. Soft floor surfaces such as carpets and rugs are not suitable.

If possible, install your Dishwasher in the corner of the room as it is often the most stable part of the floor.

Do not install your Dishwasher in rooms where temperatures below freezing may occur as frozen hoses may burst or split.

INSTALLATION >

ADJUSTING THE FEET >

For safe operation, it is important that your Dishwasher is level and securely positioned on all four feet. Incorrect installation may cause the Dishwasher to vibrate and increase your water and electricity consumption. Never place cardboard, wood or similar materials under your Dishwasher to increase stability.

The four adjustable feet are used to level the Dishwasher. To adjust the feet (fig 6):

To increase the height of the Dishwasher, turn the feet anti-clockwise.

To decrease the height of the Dishwasher, turn the feet clockwise.

After making adjustments, use a spirit level to check that the Dishwasher is level.

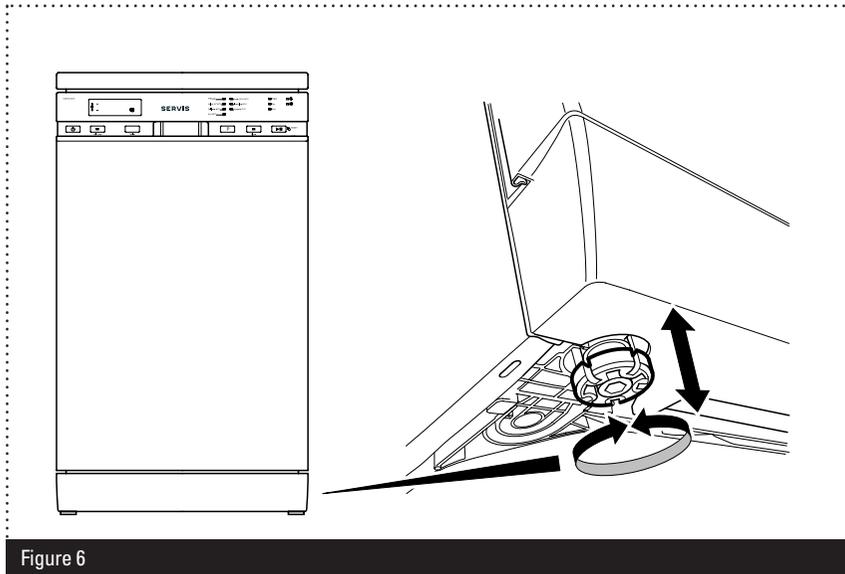


Figure 6

WATER SUPPLY CONNECTION >

Your Dishwasher uses an energy efficient cold fill system, which means that the Dishwasher is filled with cold water which is then heated to wash the dishes. As a result, no heat is lost in the pipeline from the hot water supply.

Connect your Dishwasher to your cold water supply only. If your previous Dishwasher had a hot and cold fill, check that the hot tap on your water supply is closed to avoid leakage. Only use the fill hose supplied and not one from your old Dishwasher. Only one hose is required to install your Dishwasher to the cold water supply. The inlet hose provided with your Dishwasher connects the rear of your Dishwasher and the cold water supply. To connect your Dishwasher to the cold water supply:

- 1 Connect the angled end of the fill hose to the cold water inlet on the rear of your Dishwasher by screwing the threaded connector clockwise (fig 7). Take care not to overtighten the connection. Hand tight is sufficient.

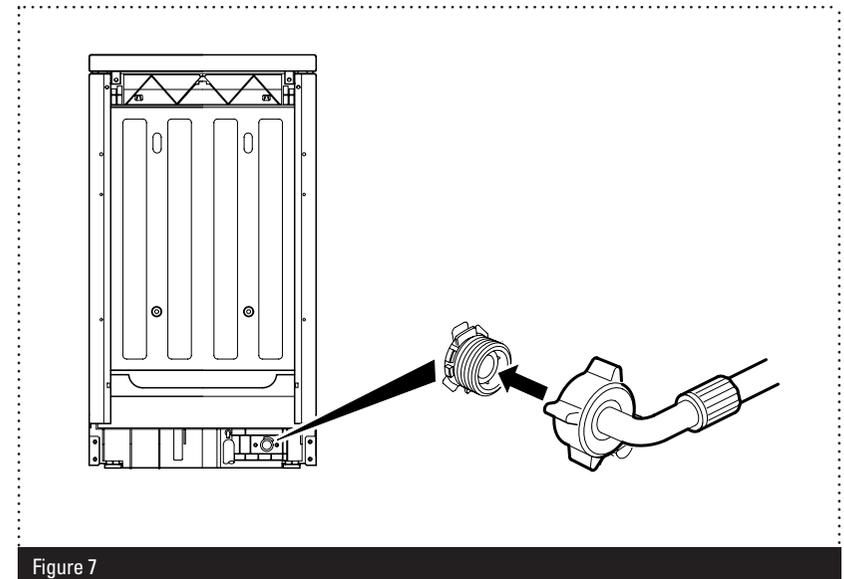


Figure 7

INSTALLATION >

WATER SUPPLY CONNECTION >

- 2 Screw the straight end of the hose clockwise to a 19mm (3/4") cold water tap until hand tight (fig 8). Take care not to trap or kink the hose.

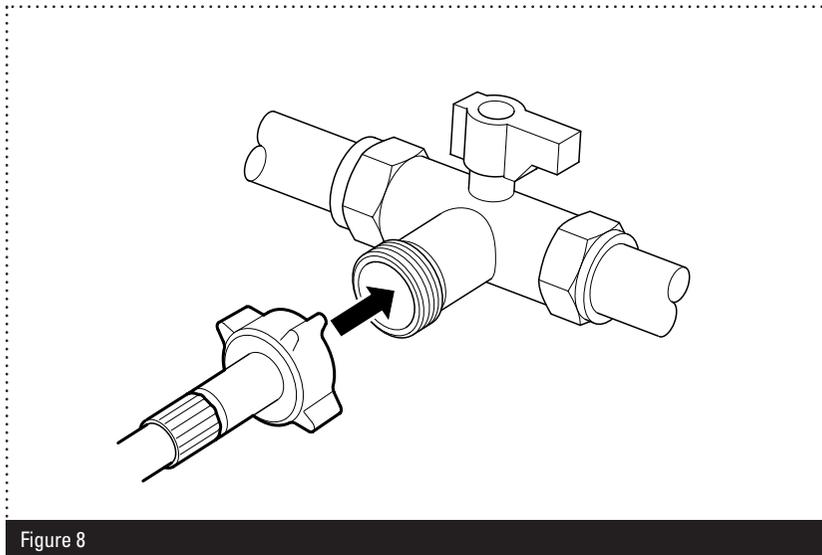


Figure 8


DRAIN HOSE CONNECTION >

Do not connect your Dishwasher to a surface water drain.

Connect your Dishwasher to your household drainage system (fig 9).

For your Dishwasher to function properly the outlet end of the drain hose must be at a minimum of 50cm and a maximum of 110cm from the ground.

CAUTION: Check to ensure that the hose is not trapped, kinked, twisted, folded or crushed. Do not attempt to extend the drain hose by adding extra sections.

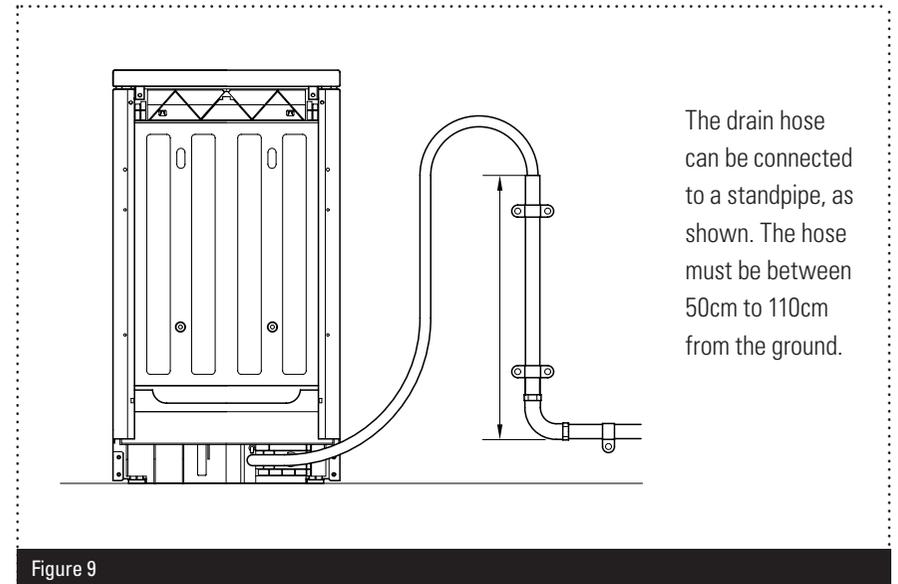

The drain hose can be connected to a standpipe, as shown. The hose must be between 50cm to 110cm from the ground.

Figure 9

The cold water pressure for a normal household system ranges from between 0.1 to 1 Mpa. Your Dishwasher will run at optimum efficiency in this range.

Once you have made all of the connections, carefully turn your cold water supply on and check for leaks.

INSTALLATION >

ELECTRICAL CONNECTION >

- » Your Dishwasher requires a 220-240V, 50Hz mains supply. Do not use any other supply.
- » Your Dishwasher may be fitted with a moulded plug, which cannot be rewired.
- » If the fuse cover becomes damaged, you must not use the plug.
- » If your plug requires changing because it is not suitable for your socket, or it is damaged, you should consult a qualified electrician.

Fuse:

- » Replacement fuses should be ASTA-approved to BS1362 and have the correct 13 Amp rating.
- » Replacement fuses can be purchased from an electrical supplier.

PREPARING YOUR DISHWASHER FOR FIRST USE >

- » Remove all packaging from the Dishwasher.
- » Set the water softener level (see page 20).
- » Add 1 kg of salt to the salt compartment and fill with water until it is almost overflowing (see page 21).
- » Fill the rinse aid compartment (see page 22).
- » Run the Dishwasher unloaded (see page 29).

SETTING UP YOUR DISHWASHER >

CONTROL PANEL OVERVIEW >

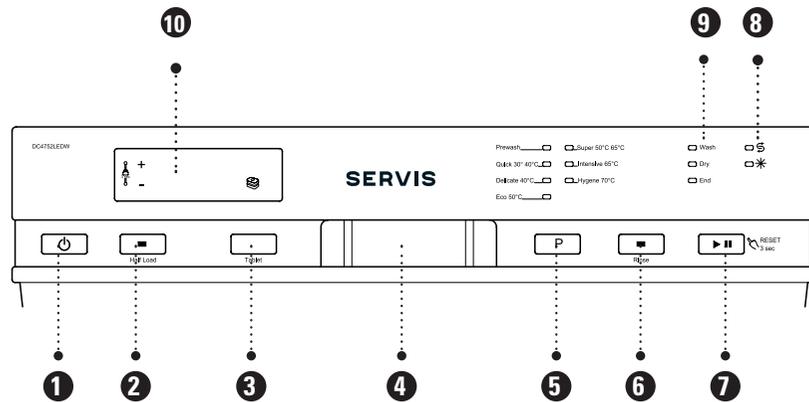


Figure 10

- 1 On/Off Button.
- 2 Half Load Button. Select if you have a half load to reduce the duration of the programme and decrease your power and water consumption.
- 3 Tablet Detergent Button. Select if you are using combined detergent which contains salt, rinse aid and extra functions.
- 4 Door Handle.
- 5 Programme Selection Button.
- 6 Extra Rinse Button. Select to add an extra rinse to the selected programme to make your dishes cleaner and glossier.
- 7 Start/Pause Button: Start or pause the selected programme.
- 8 Salt Level Warning. If shown, refill the salt compartment (see page 21).
Rinse Aid Warning. If shown, refill the rinse aid compartment (see page 22).
- 9 Washing Cycle Progress Indicators. Shows the progress of the washing cycle.
- 10 Remaining Time Indicator. The amount of time the programme has left to run.
Delay Time. The amount of time the programme is delayed.

SETTING THE WATER SOFTENER LEVEL >

The effectiveness of your Dishwasher depends on the softness of the water supply. For this reason, your Dishwasher is equipped with a system to reduce the hardness in the mains water. To find out the water hardness level in your area, contact your water company.

To set your Dishwasher to compensate for the water hardness level:

- 1 On the control panel hold down the Programme Selection Button.
- 2 Switch on your Dishwasher using the On/Off Button.
- 3 Continue holding down the Programme Selection Button until the letters SL stop being displayed.
- 4 Release the Programme Selection Button. The current water hardness setting is displayed.
- 5 Use the + or - buttons to select the required hardness level.
- 6 Press the On/Off Button to save the setting.

Hardness Levels

Hardness	British Hardness (dE)	French Hardness (dF)	German Hardness (dH)
L1	0-6	0-9	0-5
L2	7-14	10-20	6-11
L3	15-21	21-30	12-17
L4	22-28	31-40	18-22
L5	29-42	41-60	23-34
L6	43-63	61-90	35-50

SETTING UP YOUR DISHWASHER >

Filling With Salt >

To fill the salt compartment (fig 11):

- 1 Open the Dishwasher.
- 2 Remove the lower basket.
- 3 Open the salt compartment cap by turning it counter clockwise.
- 4 Fill the compartment with 1 kg of dishwasher salt.
- 5 Top up the salt compartment with water until it is almost overflowing (**the first time you fill the salt compartment only**).
- 6 Replace the cap, turning it clockwise.
- 7 Replace the lower basket.

When the Salt Level Warning indicator is displayed on the control panel, repeat the above steps to refill the salt compartment.

CAUTION: Use soft grain or powder softener salt. Do not use table salt or sea salt in your Dishwasher.

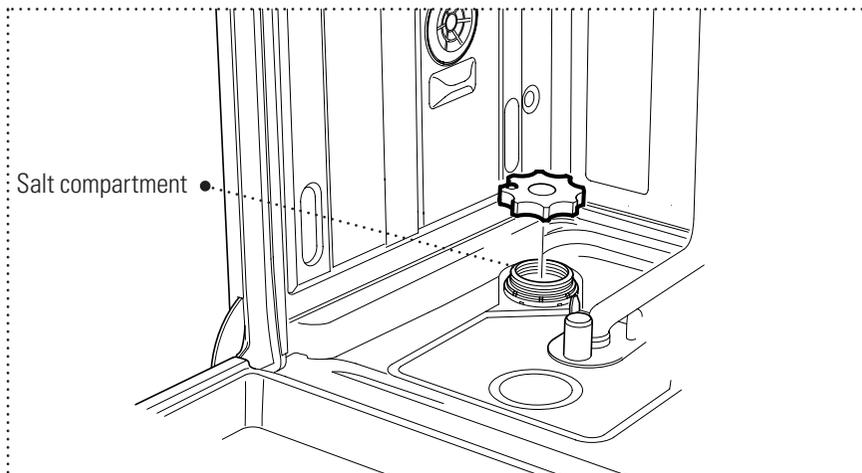


Figure 11

Filling With Rinse Aid >

To fill the rinse aid compartment (fig 12):

- 1 Open the Dishwasher.
- 2 Remove the rinse aid compartment cap by turning it counter clockwise.
- 3 Fill the compartment with rinse aid until the rinse aid level indicator goes dark.
- 4 Replace the cap, turning it clockwise.

When the Rinse Aid Warning is displayed on the control panel, repeat the above steps to refill the rinse aid compartment.

The rinse aid compartment includes a level adjuster, numbered 1 to 6, which controls how much rinse aid is used in each wash. It can be adjusted using a screwdriver. If:

- >> water stains form on your dishes, increase the adjuster setting towards 6.
- >> blue stains form on your dishes, decrease the adjuster setting towards 1.

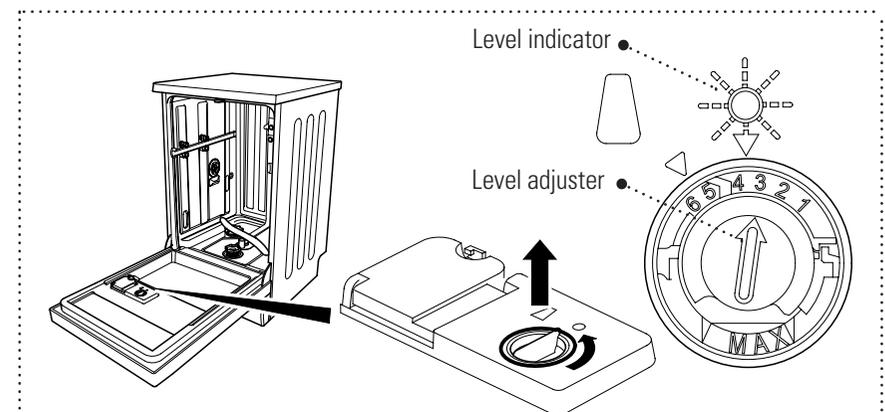


Figure 12

USING YOUR DISHWASHER >

Loading Your Dishwasher >

Your Dishwasher has two main baskets for your dishes and a cutlery box for cutlery and other small items.

The upper basket is designed for tea plates, dessert plates, salad bowls, cups and glasses.

The lower basket is designed for larger or deeper items, such as pots with long handles, pot lids and large plates.

Tips:

- » If placing long-stemmed glasses or goblets, place them against the basket edge, rack or glass support wire. Do not place them against each other or other dishes as they may move about and be damaged.
- » Place long-handled and sharp-pointed items (e.g. bread knife, carving knife) point downwards or flat on the baskets to avoid any potential injury.
- » Do not block the free movement of the spinning arms. Place tall items flat or close to the edges of the baskets.
- » Leave space between dishes for the water to spray freely. For example, do not stack plates against each other.
- » Place hollow items, such as bowls, glasses and pots into the Dishwasher face-down wherever possible.
- » Place spoons amongst other cutlery to prevent them sticking together and not being washed properly.

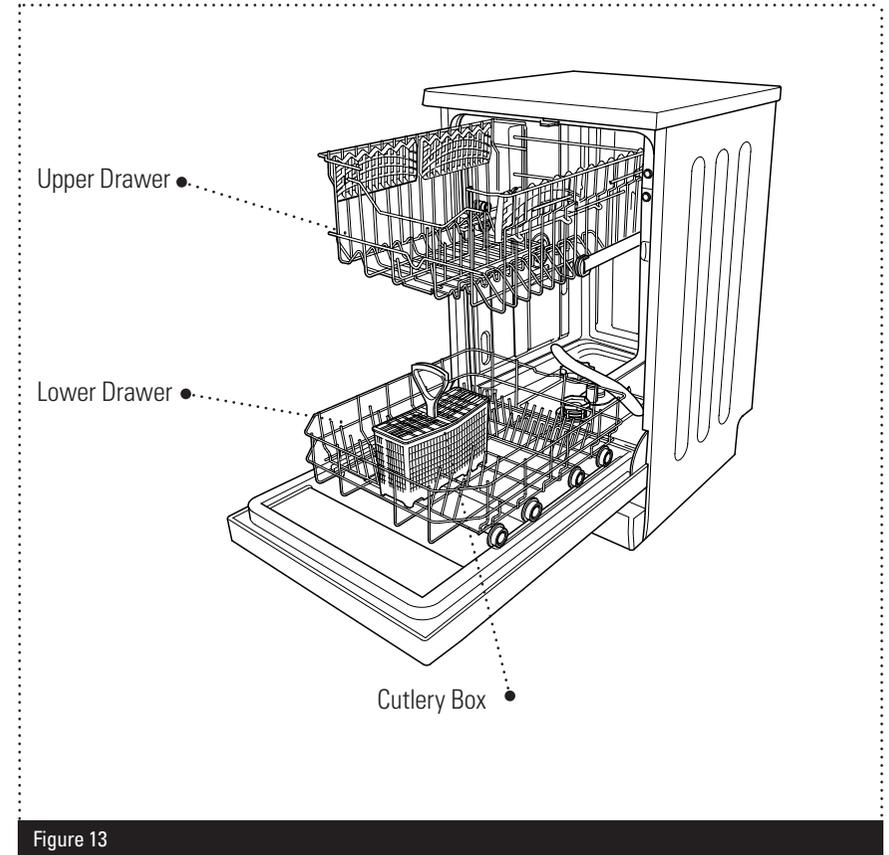


Figure 13

USING YOUR DISHWASHER >

Do Not Block The Upper Spray Arm

Do not overload the drawers or place items where they can block the rotary spray arms (fig 14). If necessary, the upper basket can be raised to create a larger space in the lower basket.

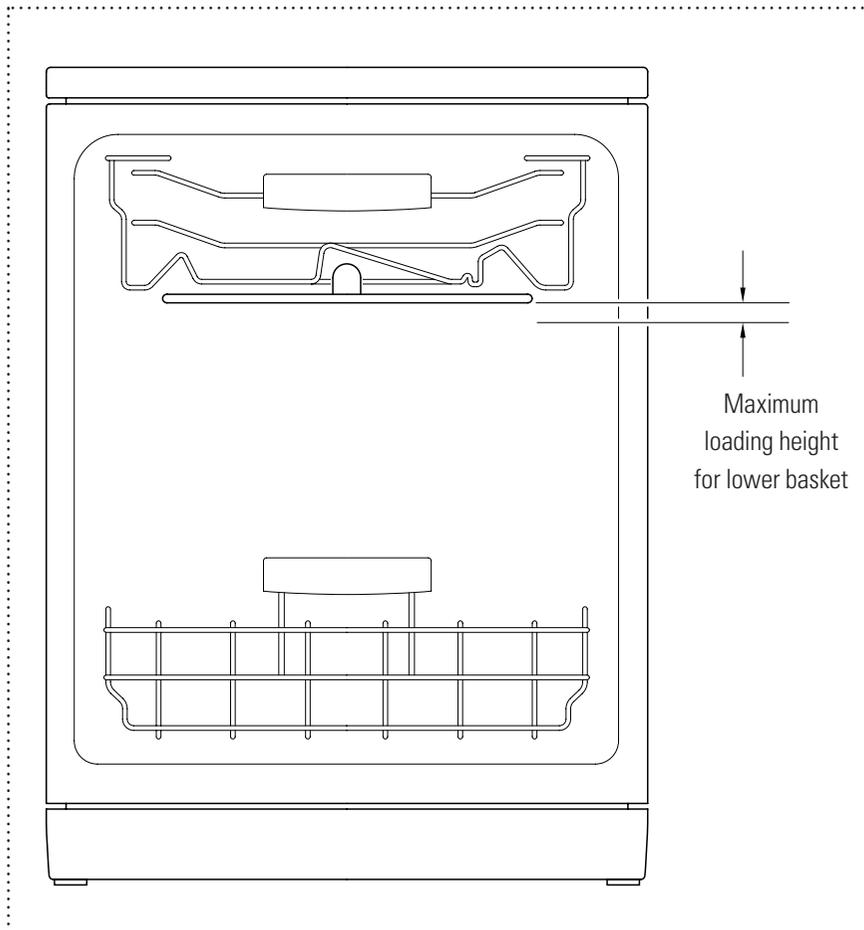


Figure 14

Adjusting The Upper Basket:

The upper basket can be raised to create a larger space in the lower basket (fig 15). This is especially useful if you have tall items and need to keep the upper spray arm free.

The upper basket has two sets of wheels. To raise or lower the upper basket, pull the clip at the end of the retaining arms to the side, slide out the drawer and re-insert it using the other set of wheels.

CAUTION: Make sure the basket is level (i.e. both sides in the same position) before you load it.

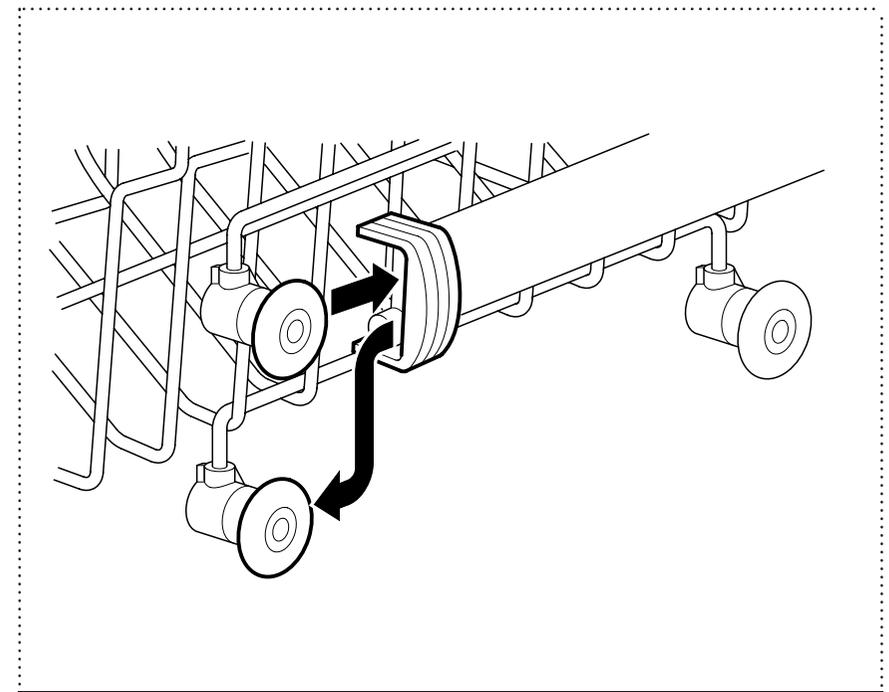


Figure 15

USING YOUR DISHWASHER >

Filling With Detergent >

Once you have loaded the Dishwasher, you must put in detergent. To fill the detergent compartment (fig 16):

- 1 Push the latch to open the detergent compartment.
- 2 Use the fill markings in the compartment to put the correct amount of detergent into the compartment:
 - 25 cm³ if your dishes are heavily soiled
 - 15 cm³ if your dishes are lightly soiled
- 3 (Optional) If there is dried food waste on your dishes, put 5 cm³ of detergent into the prewash part of the compartment.
- 4 Close the detergent compartment.

If your detergent comes in tablet form, put the tablet in the detergent compartment. Do not put the tablet in any other part of the Dishwasher.

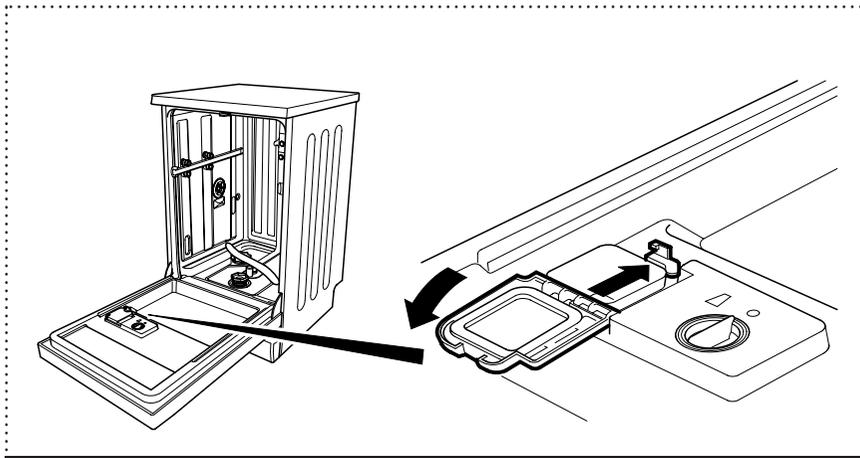


Figure 16

Combined Detergents

Some manufacturers produced combined detergents. These contain a mixture of detergent, salt and/or rinse aid. Check the labelling on the detergent product you are using and adjust the amount of salt or rinse aid you use separately in your Dishwasher.

If You Stop Using Combined Detergents

If you stop using combined detergents after a long period of using them, do the following before you next use your Dishwasher:

- » Fill the salt and rinse aid compartments.
- » Adjust the water hardness setting to the highest position and run an empty wash.
- » Set the water hardness setting to match your water hardness level.
- » Set the rinse aid setting if required.

USING YOUR DISHWASHER >

Running Your Dishwasher >

Once you have loaded your Dishwasher:

- 1 Close the Dishwasher door.
- 2 Switch on your Dishwasher. The last programme used is automatically selected.
- 3 **(Optional)** Use the Programme Select Button to select a different wash programme.
- 4 **(Optional)** Press one of the option buttons (Half Load, Extra Rinse or Tablet Detergent) to select an additional option.
- 5 **(Optional)** Press the Delay button and use the + and - buttons to set a delay before the programme will start.
- 6 Press the Start/Pause button. The programme will start immediately, unless you have set a delay when it will start after the delay.

If you have set a delay, you can cancel it at any time before it runs out by holding the Start/Pause button for 3 seconds.

When the selected programme starts you can monitor the progress of the wash cycle using the wash cycle indicators on the control panel. When the wash programme has stopped, switch off the Dishwasher before opening the door and emptying it.

Do not open the door while the Dishwasher is running.

Child Lock >

After you have started a programme (or a delay) you can lock the control panel to prevent the settings being changed while the Dishwasher is running.

To lock the control panel, hold down the + and - buttons for 3 seconds. The display will read 'CL'.

To unlock the control panel, hold down the + and - buttons for 3 seconds.

Changing The Programme While It Is Running >

To change programmes while the Dishwasher is running:

- 1 Press the Start/Pause button to pause the programme.
- 2 Use the Programme Select Button to select a different wash programme.
- 3 Press the Start/Pause button to restart the wash using the new programme.

Cancelling The Programme While It Is Running >

To cancel the running Dishwasher programme:

- 1 Press and hold the Start/Pause button for 3 seconds until the finish light blinks.
- 2 Wait 30 seconds while the Dishwasher discharges any water inside the machine. The finish light will blink while this takes place.
- 3 Press the On/Off button before opening the door.

CAUTION: The interior of the Dishwasher may be hot, depending on the programme selected and the stage it had reached when you cancelled it. Be careful of escaping steam when you open the Dishwasher door.

USING YOUR DISHWASHER >

DISHWASHER PROGRAMMES >

Programmes	Wash Temp. (°C)	Types of food fragments	Contamination Level	Amount of Detergent Required*	Full Load			Half Load		
					Prog. Duration (minutes)	Power Used (Kw/hour)	Water Used (Litres)	Prog. Duration (minutes)	Power Used (Kw/hour)	Water Used (Litres)
Prewash	-	Pre-wash to rinse and loosen residue prior to a full wash programme	Small	-	15	0.02	3.6	15	0.02	3.6
Quick Wash	40	Coffee, tea, milk, cold meat, vegetables, not kept for long	Small	A	30	0.72	10.2	30	0.72	10.2
Delicate	40	Coffee, tea, milk, cold meat, vegetables, not kept for long	Medium	A+B	74	0.80	14.1	64	0.78	10.3
Eco	50	Cold meat, vegetables, not kept for long	Medium	A+B	170	0.93	13.6	148	0.89	9.7
Super Wash 50 minutes	65	Soups, sauces, pasta, eggs, pilaf, potatoes, oven dishes, fried food	Medium High	A+B	50	1.14	10.5	47	1.01	10.5
Intensive	65	Soups, sauces, pasta, eggs, pilaf, potatoes, oven dishes, fried food	High	A+B	114	1.49	17.8	100	1.14	14.0
Hygiene	70	Dishes with dense dirt waiting for a long time or requiring hygienic washing	High	A+B	124	1.42	14.8	101	1.26	11.0

* Amount of detergent required: A - 25 cm³/15 cm³. B - 5cm³.

Note: Values above have been tested according to related standards in lab conditions. These values may vary due to environment conditions (mains voltage, water pressure, water inlet temperature and the ambient temperature).

USING YOUR DISHWASHER >

DISHWASHER PROGRAMMES - WASH STEPS >

Programmes	Steps							
Prewash	Prewash	End						
Quick Wash	40°C wash	Cold rinse	Hot rinse	End				
Delicate	Prewash	40°C wash	Cold rinse	Hot rinse	Dry	End		
Eco	Prewash	50°C wash	Cold rinse	Hot rinse	Dry	End		
Super Wash 50 minutes	65°C wash	Intermediate rinse	Hot rinse	End				
Intensive	45°C wash	65°C wash	Cold rinse	Intermediate rinse	Hot rinse	Dry	End	
Hygiene	Prewash	70°C wash	Cold rinse	Hot rinse	Dry	End		

Note: The Prewash, Quick Wash and Super Wash 50 minute programmes have no drying step.

STANDARD LOADS AND TEST DATA >

Capacity

Upper and lower baskets: 10 place settings. The upper basket should be adjusted to the lower position (see page 26 for further information).


Detergent/Rinse Aid

5+ 20 cm³, in accordance with EN50242-DIN 44990 IEC 436 (international norms).

Rinse aid dosage adjustment: 4.

Programme Test

Eco 50°C, in accordance with EN 50242 (international norms).

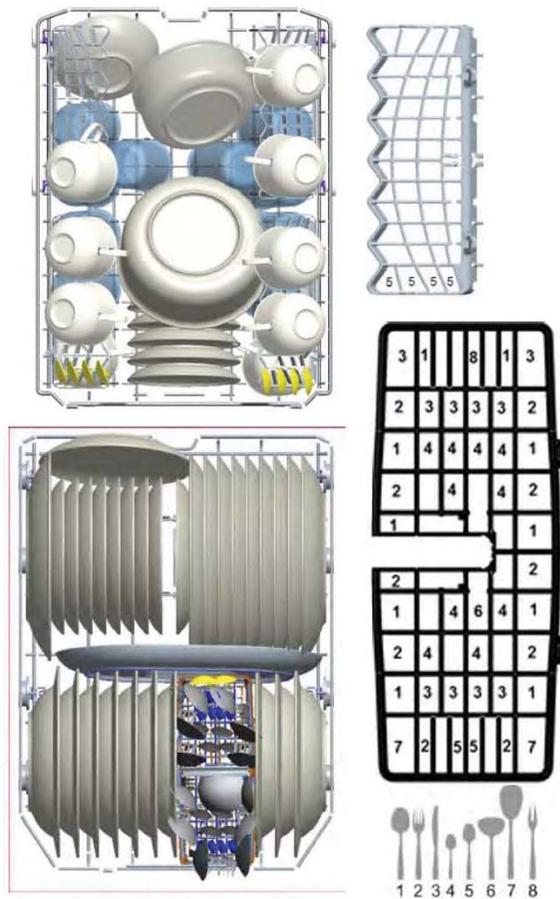

MAINTENANCE >

GENERAL MAINTENANCE >

From time to time it may be necessary to carry out some routine maintenance of your Dishwasher to ensure that it operates as intended. Before cleaning your Dishwasher:

- 1 Turn your mains power supply off and remove the plug from the socket.
- 2 Turn off the cold water supply.

CAUTION: Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaning agents to clean your Dishwasher. They may damage the plastic surfaces and other components with the chemicals they contain.

External Casing:

- » Use a mild, non-abrasive cleaning agent, or soap and water, to clean the external casing. Wipe dry with a soft cloth.

Inside:

- » Use a suitable stainless steel cleaning agent to clean inside the Dishwasher. Follow the manufacturer's advice on the cleaning agent's packaging.
- » Wipe the door seals regularly with a damp cloth to remove any accumulated residue.
- » Clean the filters and spray arms at least once a week.

Extra Cleaning:

- » Oil and lime may build up in your Dishwasher over time. If this occurs, fill the detergent compartment with a cleaning agent designed for use with dishwashers, select a programme which runs at high temperature and run the Dishwasher empty.

Filters:

If any food waste remains on the coarse and fine filters, remove them and clean them thoroughly. To clean the filters:

- 1 Turn the filter assembly counter clockwise and lift it out (fig 17).
- 2 Lift the metal/plastic filter out.
- 3 Separate the coarse and micro filters by pulling them apart.
- 4 Rinse the filters under the tap until free of residue.
- 5 Replace the metal/plastic filter.
- 6 Line up the arrows on the coarse and micro filters and clip them together, then replace the filter assembly in the Dishwasher, turning it clockwise until it locks in position.

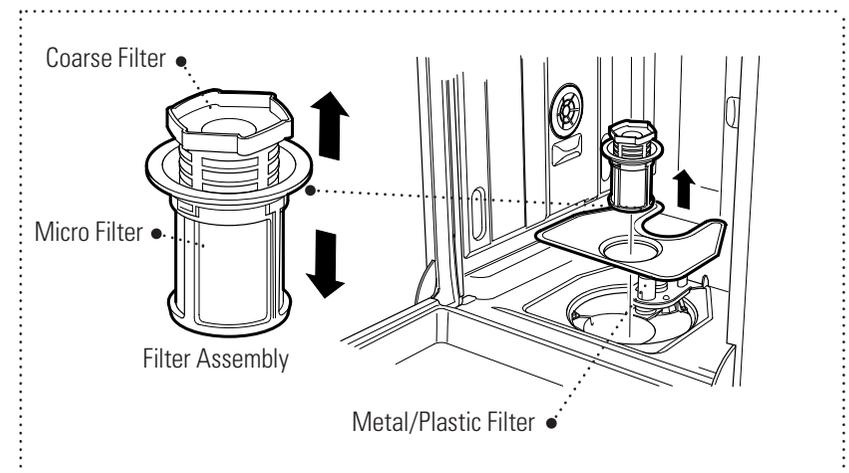


Figure 17

MAINTENANCE >

Spray Arms:

Your Dishwasher contains two spray arms (fig 18). One at the bottom of the Dishwasher and one on the underside of the upper basket.

Make sure that the spray holes are not clogged and that no food waste is stuck to the spray arms. If you need to clean the spray arms, remove them from the Dishwasher and clean them under water.

To remove the lower spray arm, pull it upwards. To replace it, push it firmly until it clicks into place.

To remove the upper spray arm, undo the nut holding it in position by turning it clockwise and pulling it downwards. To replace it, push it upwards into the mounting, then turn it counter clockwise until it clicks into position.

CAUTION: Make sure that the nut holding the upper spray arm in position is tight before operating the Dishwasher otherwise the spray arm could detach in use and damage any dishes in the lower basket.

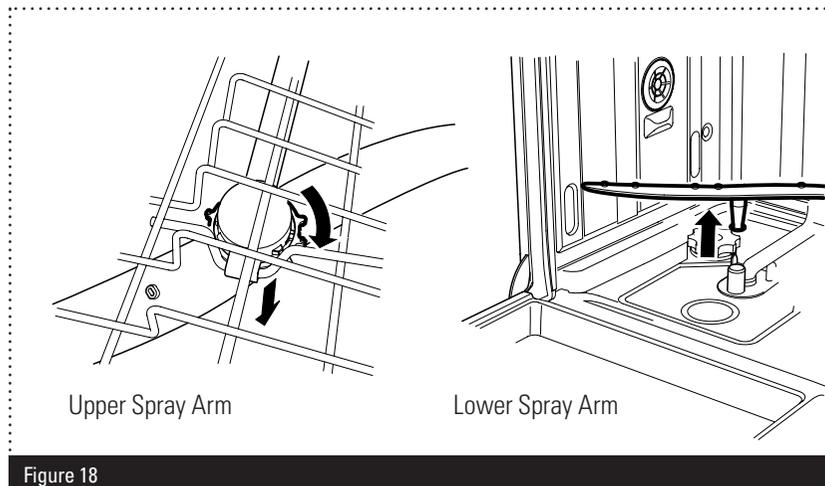


Figure 18

Water Inlet Filters:

Water inlet filters prevent dirt and foreign materials from entering your Dishwasher. It is recommended that these filters are cleaned when your Dishwasher is unable to receive sufficient water, although your water supply is on and the tap is open.

To clean the water inlet filters (fig 19):

- 1 Unscrew the water inlet hose from the Dishwasher by turning the hose anti-clockwise and gently pulling.
- 2 To remove the water inlet filter from the water inlet valve, use a pair of long-nosed pliers to gently pull on the plastic bar in the filter.

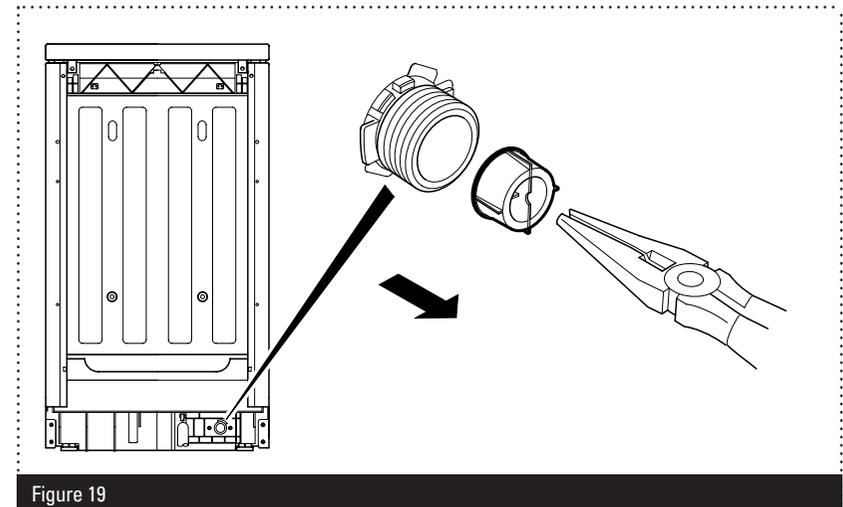


Figure 19

MAINTENANCE >

3 Clean the filter thoroughly with a soft brush, wash with soapy water and rinse thoroughly.

4 Re-insert the filter by gently pushing it back into place.

A second water inlet filter is located in the tap end of the water inlet hose.

To remove the second water inlet filter:

1 Use a pair of long-nosed pliers to gently pull on the plastic bar in the filter.

2 Clean the filter thoroughly with a soft brush and wash with soapy water and rinse thoroughly.

3 Re-insert the filter by gently pushing it back into place.

TROUBLESHOOTING >

TROUBLESHOOTING INFORMATION >

If your Dishwasher is not operating as expected, you may find a simple solution listed in the table below.

If your Dishwasher has developed a fault not covered in this manual, please contact the Servis helpdesk.

Fault	Possible Cause	Solution
Your Dishwasher does not operate.	It is switched off at the mains.	Check that your Dishwasher is plugged in and turned on at the mains. If problem persists check your indoor fuses.
	The on/off switch is in the off position.	Press the on/off switch and select the desired programme.
	The door is not shut properly.	Check that the door 'clicks' shut.
Your Dishwasher does not receive water.	The cold water supply tap is off.	Check that the cold water supply tap is fully turned on.
	The water fill hose is bent, twisted, kinked or trapped.	Check that there are no bends, twists or kinks and that the fill hose is not trapped.

Fault	Possible Cause	Solution
Your Dishwasher does not receive water.	The door is not closed properly.	Close the door.
	The water inlet filters are blocked.	Clean the water inlet filters (see page 38 for detailed instructions).
Your Dishwasher is not draining water.	The drain hose is bent, twisted, kinked or trapped.	Check the drain hose and straighten out any kinks, twists or bends.
	The filters are blocked.	Clean the filters (see page 36 for detailed instructions).
	The programme is not finished.	Leave the Dishwasher until the programme is finished.
Your Dishwasher stops during a wash operation.	The programme delay is set.	Wait for the delay to finish, or reset the delay period (see page 29 for detailed instructions).
	The water fill hose is bent, twisted, kinked or trapped.	Check that there are no bends, twists or kinks and that the fill hose is not trapped.
	There is a power failure.	Wait for the power to come back on. If necessary, re-run the programme.

TROUBLESHOOTING >

Fault	Possible Cause	Solution
Your Dishwasher is vibrating.	The feet of your Dishwasher are not correctly adjusted.	Adjust the feet (see page 13 for further information).
Knocking noises are coming from inside your Dishwasher during a wash programme.	Dishes are placed incorrectly or are loose in the Dishwasher.	Press the Start/Pause button to pause the programme. Open the Dishwasher (CAUTION: the interior will be hot and steam may come out) and rearrange the dishes.
	The spray arm is hitting the dishes in the lower basket.	Pause Dishwasher, as described above, and move or remove items blocking the spray arm.
White stains left on dishes after washing.	Not enough detergent used.	Use more detergent.
	Rinse aid dosage set too low.	Increase rinse aid dosage setting (see page 22 for further information).
	No special salt is being used, despite high water hardness level.	Use Dishwasher salt recommended for the water hardness level in your area.
	Water softener setting set too low.	Set the water softener level to a higher setting (see page 20 for further information).

Fault	Possible Cause	Solution
White stains left on dishes after washing.	Salt compartment cap not closed properly.	Close salt compartment cap properly.
Food waste left on dishes after washing.	Too much food waste left on dishes when they are placed in the Dishwasher.	Remove coarse residues and food waste from your dishes before placing your dishes in the Dishwasher.
	Not enough detergent used.	Use more detergent.
	Wrong wash programme selected.	Use a more powerful wash programme.
	Spray arms clogged with food waste.	Clean spray arms (see page 37 for further information).
	Filters clogged.	Clean filters (see page 36 for further information).
	Filters incorrectly fitted.	Check filters are correctly fitted.
	Water drain pump clogged.	Remove filters and clear water drain.
Basket overloaded.	Do not overload baskets.	

TROUBLESHOOTING >

Fault	Possible Cause	Solution
Food waste left on dishes after washing.	Dishes placed incorrectly, sprayed water not reaching affected dishes.	Do not overload baskets.
	Dishes leaning against one another.	Do not overload baskets.
Detergent residue left in detergent compartment.	Detergent was added when detergent compartment was wet.	Make sure detergent compartment is dry before use.
Dishes aren't dry.	Programme without a dry operation selected.	Select another programme.
	Rinse aid dosage set too low.	Increase rinse aid dosage setting (see page 22 for further information).
	Dishes unloaded too fast.	Allow dishes to stand before unloading the Dishwasher.
Rust stains on dishes.	Salt compartment cap not closed properly.	Close salt compartment cap properly.
	Too much salt spilled in the Dishwasher while filling it with salt.	Clean excess salt from the Dishwasher.
	High level of salt in wash water.	Contact your water company.

Fault	Possible Cause	Solution
Rust stains on dishes.	Satinless-steel quality of dishes is insufficient.	Contact the manufacturer of the dishes. Alternatively, do not wash the affected dishes in your Dishwasher.
	Unhealthy mains grounding.	Consult a qualified electrician immediately.
Scratched glasses.	Too much detergent used.	Use less detergent.
	Salt compartment cap not closed properly.	Close salt compartment cap properly.

If problems persist or you experience any malfunctions not described here, contact an authorised Servis engineer.

TROUBLESHOOTING >

Error Code	Error Description	Solution
F1	Alarm is active against water overflow	Switch off the Dishwasher and the tap, then contact an authorised Servis engineer.
F2	Waste water in the machine cannot be discharged	Check that the water discharge hose is not clogged or pinched. Check the filters are not clogged. Cancel the programme and switch off your Dishwasher.
F3	Error of continuous water input	Switch off the tap, then contact an authorised Servis engineer.
F5	Inadequate water supply	Check that the water input tap is fully open. Check that your mains water supply has not been cut off. Close the water input tap, remove the water input hose and clean the filter at the connection end of the hose.
F6	Faulty heater sensor	Contact an authorised Servis engineer.
F7	Overheating error (the temperature in the Dishwasher is too high)	Contact an authorised Servis engineer.
F8	Heater error	Contact an authorised Servis engineer.
F9	Divisor position error	Contact an authorised Servis engineer.
FE	Faulty electronic card	Contact an authorised Servis engineer.

If problems persist contact an authorised Servis engineer.

PRODUCT FICHE >

Supplier's trade mark	SERVIS
Supplier's model	DC4752LEDW
Capacity of dishwasher (place settings)	10
Energy efficiency class	A
Annual energy consumption in kWh per year (AEc) (280 Cycle)*	264
Energy consumption (E_c) (kWh per cycle)	0.93
Off mode power consumption (W) (P_o)	0.05
Left on mode power consumption (W) (P₁)	1.0
Annual water consumption in litres per year (AW_c) (280 Cycle)**	3640
Drying efficiency class***	A
Standard programme name****	Eco 50°C
Programme time for standard cycle (min)	170
Noise dB(A)	52

Notes

* Energy consumption 264 kwh per year, based on 280 standard cleaning cycles using cold water fill and the consumption of low power modes. Actual energy consumption will depend on how the appliance is used.

** Water consumption 3460 litres per year based on 280 standard cleaning cycles. Actual water consumption will depend on how the appliance is used.

*** Drying efficiency class A on a scale from G (least efficient) to A (most efficient).

**** The Eco 50°C is the standard cleaning cycle to which the information in the label and fiche relates. It is the most efficient program in terms of combined energy and water consumption.

GUARANTEE >

DISPOSAL OF YOUR OLD DISHWASHER >

All packaging and materials used are environmentally friendly and recyclable. Please dispose of any packaging in an environmentally friendly manner. Consult your local council for further details.

To ensure safety when disposing of an old Dishwasher, cut off the main power supply cable and break the door hinges or lock.



Please refer to the rear cover for disposal instructions.

GUARANTEE >

The Servis guarantee covers the cost of parts/labour/call out charges to repair an appliance should any covered component fail in its normal functions necessitating a repair or replacement to resume those functions.

The Servis guarantee **does not** cover:

- » Accidental damage.
- » Use in a commercial environment.
- » Incorrect or faulty installation.
- » Deliberate damage or neglect.
- » Repairs to cosmetic parts.
- » Damage caused by foreign objects or substances.
- » Claims in respect to routine inspection or maintenance.

The Servis guarantee is not transferable.

For your Servis guarantee to be valid, you will need to retain your original purchase receipt and be able to provide it when you make a claim.

The above summary does not include all of the terms and conditions and exclusions which can be found on our website www.servis.co.uk.

KNOW YOUR RIGHTS >

Household contents insurance

Your household insurance may cover you for accidental damage, fire or theft of your product.

Data Protection Act (1988)

Please note that any information provided will be processed by us or our agents in compliance with the provisions of the Data Protection Act 1988, for the purpose of providing cover and handling claims, if any, which may necessitate providing such information to third parties.

INDEX >

A

Adding detergent	27
Adding rinse aid	22
Adding salt.....	21
Adjusting the feet.....	13
Adjusting the upper basket	26

C

Cancelling the programme	30
Changing the programme	30
Child lock.....	29
Cleaning.....	35
Combined detergents	28
Connection, drain hose	15
Connection, electrical	17
Connection, water supply.....	14
Control panel	19

D

Delay time function.....	29
Detergent drawer.....	27
Disposal	49
Drain hose connection	15

E

Electrical connection.....	17
----------------------------	----

F

Feet, adjusting.....	13
Filling with detergent.....	27
Filling with rinse aid.....	22
Filling with salt.....	21
Filters, cleaning	36
Front view	07

G

General maintenance.....	35
Guarantee.....	53

H

Half load	19
Hardness levels	20

I

Installation requirements.....	12
Items included	02

L

Loading your dishwasher	25
-------------------------------	----

P

Pausing a programme	19
Preparing your dishwasher for first use.....	18
Product Fiche	48
Programmes	31

R

Rear view.....	08
Rinse aid, filling with.....	22
Running your dishwasher	29

S

Safety instructions.....	02
Salt, filling with.....	21
Selecting a programme	29
Setting up your dishwasher.....	19
Spray arms, cleaning.....	37
Stain removal information.....	43
Starting your dishwasher	29

T

Tablet detergent button.....	19
Technical specification	11
Troubleshooting information	41

W

Warranty.....	01
Water inlet filter.....	38
Water softener level.....	20
Water supply connection.....	14

T: 0800 0124 382
E: info@servis.co.uk

 Visit
servis.co.uk

SERVIS
EFFICIENCY BY DESIGN



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

000000000