

Release Notes
Schroff firmware part number 63998-08165
Based on Pigeon Point Systems (PPS) firmware release 2.7.4 for ShMM-500

Release Date: July 01, 2011

Release History:

Release date	Schroff FW P/N	PPS version
December 14, 2006	63998-04652	V2.3.2
April 26, 2007	63998-04660	V2.4.2
January 18, 2008	63998-04664	V2.5.1
July 28, 2008	63998-08152	V2.5.3
January 29, 2010	63998-08160	V2.6.4.4
September 14, 2010	63998-08161P4	V2.7.0.4
October 7, 2010	63998-08165	V2.7.1
July 1, 2011	63998-08165	V2.7.4

Introduction:

The firmware package “63998-08165.zip” contains Firmware release 2.7.4 for the **ShMM-500**. The PPS supplied RFS image has been modified by Schroff to adapt the firmware to Schroff ATCA shelves. The kernel image has not been modified and is identical to the PPS kernel image. The U-boot environment has been modified to reflect the necessary non-volatile system settings for this firmware running on Schroff shelf managers. The Schroff part number for this firmware release is 63998-08165.

Important Notice:



Prior to V2.5.3 the interaction between the shelf manager and the shelf FRUs was hard coded into the shelf manager firmware. Starting with Version V2.5.3, the Schroff shelf manager firmware supports Pigeon Point Systems HPDL (Hardware Platform Description Language). See Pigeon Point Systems document “ShelfManagerUG_2_7_4_20110422.pdf”. HPDL records are stored in the shelf manager’s FRU data and in the shelf FRU data. The HPDL records contain the structure, device population, and definitions of the shelf hardware and behavior of the Schroff ATCA shelf. Therefore, as part of the upgrade process of the firmware, the FRU files of the shelf manager and the shelf must be upgraded at the same time. This requires a complete reboot of both shelf manager(s) **at the same time or a power cycle of the shelf**. The correct assignment of the FRU files to the corresponding shelf part number is given in the table ‘FRU ID Files’ below. The FRU files are shipped with this release and are stored on the ShMM-500 in the /var/nvdata directory.

Note: It is possible to run the existing shelf managers and shelf in non-HPDL mode with V2.7.4 firmware. Because new shelf manager and shelf designs will only be supported in HPDL mode we recommend that the existing shelf managers and shelf be upgraded to HPDL mode.

CONTENT:

1	Schroff shelf manager versions	3
2	Preparations	6
3	Upgrading the Shelf Manager to release 2.7.4	8
3.1	Reliable Upgrade Procedure.....	10
3.2	TFTP Upgrade Procedure.....	15
3.3	Updating FRU data files.....	18
3.4	Setting the environmental variable rc2.....	20
3.5	Restart the system	20
4	Special tests for HPDL upgrade:	21
5	Resetting the Shelf Manager configuration to the default values.....	23
6	Configuring Ethernet Port Bonding on the Shelf Manager.....	26
7	Firmware part number 63998-08165 configuration files	27
8	Revision History	29

1 Schroff shelf manager versions

The table below shows the Schroff shelf manager versions, please identify your shelf manager type. You will need the corresponding RC2-variable later in the upgrade process.

Photo	Type	RC2-variable
 The part number of the ACB-V shelf manager is on the label at the rear side of the shelf manager, see photo below: - Radial IPMB version: p/n = 21596-292 - Bused IPMB version: p/n = 21596-291 	ACB-V	rc.acb-HPDL
 Note: If you have this shelf manager in your Zephyr or Ventus shelf please follow the special upgrade instructions. The part number of the ACB-IV shelf manager is on the label at the rear side of the shelf manager, see photo below: - Radial IPMB version: p/n = 21594-347 - Bused IPMB version: p/n = 21594-346 	ACB-IV	rc.acb-HPDL
 The part number of the ACB-III shelf manager is on the label at the rear side of the shelf manager, see photo below: - Radial IPMB version: p/n = 21593-251 - Bused IPMB version: p/n = 21593-250 	ACB-III	rc.acb3



The following Shelf Manager types originally shipped with ShMM-300 modules but might have been upgraded to ShMM-500 modules by the customer

For upgrade instructions, please contact your Schroff service partner.

	ACB-III	rc.acb3e
	ACB-II ACB-II with ShMM-500	rc.acb2 rc.acb2-HPDL
	SMC-1	rc.acb-es

2 Preparations

Firmware files

Unzip the file 63998-08165.zip. This file contains the following Pre-Built images:

TFTP Upgrade files:

63998-08165.kernel

Upgrade kernel image for TFTP upgrade

63998-08165.rfs

Upgrade RFS image for TFTP upgrade

Reliable Upgrade files:

63998-08165.shmm500.kernel Upgrade kernel for reliable upgrade

63998-08165.shmm500.rfs

Upgrade RFS for reliable upgrade

63998-08165.u-boot

Upgrade u-boot for reliable upgrade

Terminal Program

Connect a serial console cable to a terminal or PC running a terminal emulator (Hypercom, Minicom, HyperTerminal etc) to the serial interface of the Shelf Manager (RJ45 connector "SERIAL" or "ShMgr" on the SAP). Set the terminal or emulator to 115200, N, 8, 1 (115200 baud, no parity, 8 bits per character, 1 stop bit).

Login user is "root" with no password.

FRU ID files

The Shelf Manager firmware images contain FRU ID files for the Shelf for most production chassis.

Important Note: This firmware release also contains updated shelf FRU data files. These FRU data files are stored in the /var/nvdata directory of the ShMM-500. The installation procedure of the FRU data files is described below. Please make sure to install these FRU data files after installing the new firmware image.



Note: The FRU ID file name is comprised if the top assembly part number without the "-", two letters representing the major and minor revision level, and "BIN.bin" indicating that the contents are binary. Shelf and shelf manager FRU ID files that are revision HA and higher support running the shelf managers in HPDL mode. The FRU ID files for the fan tray, PEM, or SAP do not contain HPDL and may have a revision level lower than HA.

Note: If the FRU ID files that are already installed in your shelf or shelf manager are the same revision as those in the table below, they do not need to be upgraded. You can use the shelf manager command "cli fruinfo" to find the existing FRU ID file revision level in the "FRU Programmer File ID" field.

FRU ID files included in firmware version 63998-08165:

Chassis P/N	FRU File name	Chassis description
11592-400	11592400HBBIN.bin	14slot, push-cooling, bused IPMB, Dual-Star, DC
11592-401	11592401HBBIN.bin	14slot, push-cooling, rad. IPMB, Dual-Star, DC
11592-402	11592402HBBIN.bin	14slot, push-cooling, bused IPMB, Full-Mesh, DC
11592-403	11592403HBBIN.bin	14slot, push-cooling, rad. IPMB, Full-Mesh, DC
11592-500	11592500HBBIN.bin	16slot, pull-cooling, bused IPMB, Dual-Star, DC
11592-501	11592501HBBIN.bin	16slot, pull-cooling, rad. IPMB, Dual-Star, DC
11592-502	11592502HBBIN.bin	16slot, pull-cooling, bused IPMB, Full-Mesh, DC

11592-503	11592503HBBIN.bin	16slot, pull-cooling, rad. IPMB, Full-Mesh, DC
11596-007	11596007HBBIN.bin	2slot, push-pull-cooling, bused-IPMB, node-node, AC
11596-010	11596010HBBIN.bin	5slot, push-cooling, bused IPMB, Triple Repl. Mesh, DC
11596-012	11596012HBBIN.bin	5slot, push-cooling, bused IPMB, Triple Repl. Mesh, DC
11596-090	11596090HDBIN.bin	2slot, push-pull-cooling, bused-IPMB, Hub-Hub, DC
11596-100	11596100HBBIN.bin	14slot, pull-cooling, bused IPMB, Dual-Star, DC
11596-101	11596101HBBIN.bin	14slot, pull-cooling, rad. IPMB, Dual-Star, DC
11596-102	11596102HBBIN.bin	14slot, pull-cooling, bused IPMB, Full-Mesh, DC
11596-103	11596103HBBIN.bin	14slot, pull-cooling, rad. IPMB, Full-Mesh, DC
11596-107	11596107HABIN.bin	2slot, push-pull-cooling, bused-IPMB, node-node, DC
11596-150	11596150HDBIN.bin	14slot, pull-cooling, bused IPMB, Dual-Star, DC
11596-151	11596151HDBIN.bin	14slot, pull-cooling, rad. IPMB, Dual-Star, DC
11596-152	11596152HDBIN.bin	14slot, pull-cooling, bused IPMB, Full-Mesh, DC
11596-153	11596153HDBIN.bin	14slot, pull-cooling, rad. IPMB, Full-Mesh, DC
11596-160	11596160HCBIN.bin	6slot, push-pull-cooling, bused IPMB, Triple Repl. Mesh, DC
11596-161	11596161HCBIN.bin	6slot, push-pull-cooling, rad. IPMB, Triple Repl. Mesh, DC
11596-300	11596300HCBIN.bin	14slot, push-cooling, bused IPMB, Dual-Star, DC
11596-301	11596301HBBIN.bin	14slot, push-cooling, rad. IPMB, Dual-Star, DC
11596-302	11596302HBBIN.bin	14slot, push-cooling, bused IPMB, Full-Mesh, DC
11596-302	11596303HBBIN.bin	14slot, push-cooling, rad. IPMB, Full-Mesh, DC
ZR5ATC6TMDPEM2NHBBIN.bin		Zephyr ATCA Chassis 6-slot bused IPMB

3 Upgrading the Shelf Manager to release 2.7.4

There are two ways of upgrading the Shelf Manager firmware:

1) TFTP Upgrade Procedure

You can use the TFTP Upgrade Procedure which is started from the U-Boot environment of the Shelf Manager and retrieves the files from a TFTP server on your network.

2) Reliable Upgrade Procedure

You can also use the Reliable Upgrade Procedure. This procedure will copy the new firmware flash images from an FTP server on your network to RAM on the ShMM-500, and then copy the new firmware images to flash memory.

Note:

We strongly recommend that you use the Reliable Upgrade Procedure instead of the TFTP Upgrade Procedure because it will leave the shelf manager in operating condition if the firmware upgrade fails. The firmware upgrade procedure must be executed for **both shelf managers in a redundant system**. Please make sure that both shelf managers are updated to the same firmware revision and configuration.

Below are four examples of the required steps to upgrade your shelf:



The first two examples shown below are for Schroff shelf with managed FRUs. The second two examples are for Schroff shelf with IPMC based FRUs. These procedures work on the factory default shelf configuration when a shelf is shipped from Schroff manufacturing. Before updating deployment shelf in the field we recommend to test the procedure in your laboratory and to adapt the procedure to your specific environment if necessary. For further information regarding the firmware upgrade process please see the Pigeon Point Systems user guide "ShelfManagerUG_2_7_4_20110422.pdf"

Example 1:

Shelf with one shelf manager and serial-connection or SSH-connection to the console interface:

1. Install the firmware → **Chapter 3.1**
2. Install the FRU files → **Chapter 3.3**
3. set the rc2 variable to /etc/rc.acb-HPDL → **Chapter 3.4**
4. reboot the shelf manager → **Chapter 3.5**

Example 2

Shelf with two shelf managers and serial-connection or SSH-connection to the console interface of the active shelf manager in 0x10

1. Programming the firmware and the shelf manager FRU file on the shelf manager in slot 0x10:
 - a. Connect to the active shelf manager in slot 0x10 and install the firmware → **Chapter 3.1**
 - b. Do a "cli switchover" to switch back to 0x10
 - c. Install the shelf manager FRU file on 0x10 → **Chapter 3.3**
 - d. Reboot the shelf manager using the "reboot" command
2. Programming the firmware and the shelf manager FRU file on the shelf manager in slot 0x12:
 - a. Connect to the active shelf manager in slot 0x12 and install the firmware → **Chapter 3.1**
 - b. Do a "cli switchover" to switch back to 0x12
 - c. Install the shelf manager FRU file on 0x12 → **Chapter 3.3**
 - d. Reboot the shelf manager using the "reboot" command
3. Install the FRU files in the shelf and set the correct rc2 variable

- a. Connect to the shelf manager in slot 0x10 and install the FRU files for the shelf, fan trays, PEMs and SAP → **Chapter 3.3**
- b. SSH into the backup shelf manager, IP 192.168.1.3 (user=root, no password)
- c. Set the rc2 variable to /etc/rc.acb-HPDL → **Chapter 3.4**
- d. Terminate the ssh connection with "exit"
- e. On the shelf manager in slot 0x10 set the rc2 variable to /etc/rc.acb-HPDL → **Chapter 3.4**
- f. Reboot both shelf managers simultaneously → **Chapter 3.5**

Example 3:

Zephyr or Ventus shelf with one shelf manager and serial-connection or SSH-connection to the console interface:

1. Set the rc2 variable to /etc/rc.acb4 → **Chapter 3.4**
 2. Install the firmware → **Chapter 3.1**
 3. Install the FRU files in the shelf manager and shelf and DSAP. → **Chapter 3.3**
- Note: Do not install FRU files in the fan trays, ISAP or PEMs!**
4. set the rc2 variable to /etc/rc.acb-HPDL → **Chapter 3.4**
 5. reboot the shelf manager → **Chapter 3.5**

Example 4

Zephyr or Ventus shelf with two shelf managers and serial-connection or SSH-connection to the console interface of the active shelf manager in 0x10

1. Programming the firmware and the shelf manager FRU file on the shelf manager in slot 0x10:
 - a. Set the rc2 variable to /etc/rc.acb4 → **Chapter 3.4**
 - b. Connect to the active shelf manager in slot 0x10 and install the firmware → **Chapter 3.1**
 - c. Do a "cli switchover" to switch back to 0x10
 - d. Install the shelf manager FRU file on 0x10 → **Chapter 3.3**
 - e. Reboot the shelf manager using the "reboot" command
2. Programming the firmware and the shelf manager FRU file on the shelf manager in slot 0x12:
 - a. Set the rc2 variable to /etc/rc.acb4 → **Chapter 3.4**
 - b. Connect to the active shelf manager in slot 0x12 and install the firmware → **Chapter 3.1**
 - c. Do a "cli switchover" to switch back to 0x12
 - d. Install the shelf manager FRU file on 0x12 → **Chapter 3.3**
 - e. Reboot the shelf manager using the "reboot" command
3. Install the FRU files in the shelf and set the correct rc2 variable
 - a. Connect to the shelf manager in slot 0x10 and install the FRU files for the shelf and DSAP
Note: Do not install FRU files in the fan trays, ISAP or PEMs! → **Chapter 3.3**
 - b. SSH into the backup shelf manager, IP 192.168.1.3 (user=root, no password)
 - c. Set the rc2 variable to /etc/rc.acb-HPDL → **Chapter 3.4**
 - d. Terminate the ssh connection with "exit"
 - e. On the shelf manager in slot 0x10 set the rc2 variable to /etc/rc.acb-HPDL → **Chapter 3.4**
 - f. Reboot both shelf managers simultaneously → **Chapter 3.5**

3.1 Reliable Upgrade Procedure

The Reliable Upgrade procedure will copy the new firmware flash images from an FTP server on your network to RAM on the ShMM-500 and then copy the images to flash memory.

STEP 1

Network settings:

In order to retrieve the new firmware images the Shelf Manager needs a network connection to your FTP server. If this already exists through the Base Interface hub then no further network configuration is required. If your Base Interface hubs are not connected to a network, you can use the RJ-45 connector on the front panel of the Shelf Manager to connect to the FTP server on your network.

If you need to use the front panel Ethernet connector you need to set the jumpers on the Shelf Manager to route the primary Ethernet port to the front panel. When the jumpers are on the pins towards the front panel the Ethernet is connected to the front panel connector. See the Shelf User Manual for details of the jumper setting.

You need to configure the IP Address that the Shelf Manager will use on the network to access the FTP server. The command "cli setlanconfig 1 ip 192.168.0.2" will set the IP Address of the **active** Shelf Manager to "192.168.0.2". The active Shelf Manager is the one with the green LED illuminated and not blinking. You need to substitute "192.168.0.2" in the example for your desired IP Address.

If your Shelf Manager is on a different network than your FTP server, then you need to configure the Default Gateway. The command "cli setlanconfig 1 dft_gw_ip 192.168.0.1" will set the IP Address of the Default Gateway to "192.168.0.1". You need to substitute "192.168.0.1" in the example for the IP Address of the Default Gateway on your network.

If you use subnets on your network then you need to change the Subnet Mask from the default value of "255.255.255.0". The command "cli setlanconfig 1 subnet_mask 255.255.255.128" will set Subnet Mask of the Subnet Mask to "255.255.255.128". You need to substitute "255.255.255.128" in the example for the Subnet Mask of your network.

You can use the command "ping 192.168.0.6" to test the network connection to the FTP server. You need to substitute "192.168.0.6" in the command for the IP address of the FTP server on your network. The example below shows a successful ping test.

```
# ping -c 2 192.168.0.6
PING 192.168.0.6 (192.168.0.6): 56 data bytes
64 bytes from 192.168.0.6: icmp_seq=0 ttl=64 time=1.5 ms
64 bytes from 192.168.0.6: icmp_seq=1 ttl=64 time=1.9 ms
--- 192.168.0.6 ping statistics ---
2 packets transmitted, 2 packets received, 0% packet loss
round-trip min/avg/max = 1.5/1.7/1.9 ms
```

Connect a serial console cable to from a terminal or PC running a terminal emulator (Hypercom, Minicom, Hyperterminal etc) to the console port of the Shelf Manager. Set the terminal or emulator to 115200, N 8, 1 (115200 baud, no parity, 8 bits per character, 1 stop bit).

STEP 2

Upgrade Process:

Put the three Reliable Upgrade FLASH images (63998-08165.shmm500.kernel, 63998-08165.shmm500.rfs, 63998-08165.u-boot) on a FTP server that is on the same network as the Shelf Managers.



For this example the Reliable Upgrade FLASH images were put in the /tmp directory on the FTP server. A single command is executed on the **active** Shelf Manager to upgrade the FLASH images. This command will download the FLASH images using FTP, copy them into the alternate FLASH memory, configure the Shelf Manager for a provisional boot, and reboot the Shelf Manager.

If all goes well the reliable upgrade watchdog timer will be reset after Linux boots and the provisional FLASH memory will be configured as the current FLASH memory. If the upgrade fails the original FLASH memory will be configured as the current FLASH memory and the Shelf Manager will reboot.

In the example below "192.168.0.7" is the TCP/IP address of the FTP server. You will need to substitute the TCP/IP address of your FTP server. In the example "/tmp" is the directory on the FTP server that contains the new FLASH images. You will need to substitute the directory name on your FTP server that contains the FLASH images. In the example "ftp" is a valid userid on the FTP server and "ftppw" is the password for the userid. You will need to substitute both "ftp" and "ftppw" for a valid userid and password on your FTP server.

This is an example of the Reliable Upgrade command:

```
rupgrade_tool -s -v -d --k=63998-08165.shmm500.kernel --r=63998-08165.shmm500.rfs --u=63998-08165.u-boot --proto=ftp:192.168.0.7:/tmp:ftp:ftppw --hook=erase
```

Note: This command is on a single line.

This is an example of the Reliable Upgrade command and the response of the Shelf Manager:

```
# rupgrade_tool -s -v --k=63998-08165.shmm500.kernel --r=63998-08165.shmm500.rfs
--u=63998-08165.u-boot --proto=ftp:10.183.7.176:/tmp:ftp:ftp --hook=erase
rupgrade_tool: PLB is 6
rupgrade_tool: EEPROM page saved
rupgrade_tool: persistent flash is 0
rupgrade_tool: provisional flash is 1
rupgrade_tool: copying image(s)
rupgrade_tool: copying 63998-08165.u-boot from 10.183.7.176:/tmp to /tmp using 'ftp' protocol
220-FileZilla Server version 0.9.36 beta
220-written by Tim Kosse (Tim.Kosse@gmx.de)
220 Please visit http://sourceforge.net/projects/filezilla/
USER ftp
331 Password required for ftp
PASS *****
230 Logged on
TYPE I
200 Type set to I
PASV
227 Entering Passive Mode (10,183,7,176,11,0)
RETR /tmp/63998-08165.u-boot
150 Connection accepted
226 Transfer OK
QUIT
221 Goodbye
rupgrade_tool: copying 63998-08165.shmm500.kernel from 10.183.7.176:/tmp to /tmp using 'ftp'
protocol
220-FileZilla Server version 0.9.36 beta
220-written by Tim Kosse (Tim.Kosse@gmx.de)
220 Please visit http://sourceforge.net/projects/filezilla/
USER ftp
331 Password required for ftp
PASS *****
230 Logged on
TYPE I
200 Type set to I
PASV
227 Entering Passive Mode (10,183,7,176,11,1)
RETR /tmp/63998-08165.shmm500.kernel
150 Connection accepted
226 Transfer OK
```



```
QUIT
221 Goodbye
rupgrade_tool: copying 63998-08165.shmm500.rfs from 10.183.7.176:/tmp to /tmp using 'ftp'
protocol
220-FileZilla Server version 0.9.36 beta
220-written by Tim Kosse (Tim.Kosse@gmx.de)
220 Please visit http://sourceforge.net/projects/filezilla/
USER ftp
331 Password required for ftp
PASS *****
230 Logged on
TYPE I
200 Type set to I
PASV
227 Entering Passive Mode (10,183,7,176,11,2)
RETR /tmp/63998-08165.shmm500.rfs
150 Connection accepted
226 Transfer OK
QUIT
221 Goodbye
rupgrade_tool: invoking scripts (step4v*) [--u=63998-08165.u-boot --k=63998-08165.shmm500.kernel
--r=63998-08165.shmm500.rfs --proto=ftp:10.183.7.176:/tmp:ftp:ftp --hook=erase]
rupgrade_tool: copying 63998-08165.u-boot from /tmp to /dev/mtdchar8 using 'cp' protocol
rupgrade_tool: copying 63998-08165.shmm500.kernel from /tmp to /dev/mtdchar7 using 'cp' protocol
rupgrade_tool: copying 63998-08165.shmm500.rfs from /tmp to /dev/mtdchar9 using 'cp' protocol
rupgrade_tool: invoking scripts (step4h*) [erase]
4: /etc/upgrade/step4hshm: Stopping Shelf Manager.... Done
4: /etc/upgrade/step4hshm: Cleaning new /var partition.... Done
4: /etc/upgrade/step4hshm: Cleaning new /etc partition.... Done
4: /etc/upgrade/step4hshm: Copying /etc/ssh keys..... Done
4: /etc/upgrade/step4hshm: Upgrade complete.
rupgrade_tool: image(s) copy OK
rupgrade_tool: watchdog started
rupgrade_tool: selected provisional flash
rupgrade_tool: reboot
Restarting system.
```

U-Boot 1.1.4 (Jun 22 2011 - 09:59:09)

```
CPU: Au1550 324 MHz, id: 0x02, rev: 0x00
Board: ShMM-500
S/N: 08031572
DRAM: (ISSI IS42S32800D) 64 MB
Flash: 32 MB
In: serial
Out: serial
Err: serial
ADM1060: configuration version 1.5
Net: Au1X00 ETHERNET
Hit any key to stop autoboot: 0
## Booting image at bf080000 ...
Image Name: 63998-08165 Linux-2.4.26
Created: 2011-06-22 13:59:47 UTC
Image Type: MIPS Linux Kernel Image (gzip compressed)
Data Size: 883998 Bytes = 863.3 kB
Load Address: 80100000
Entry Point: 802d6040
Verifying Checksum ... OK
Uncompressing Kernel Image ... OK
## Loading Ramdisk Image at bf440000 ...
Image Name: 63998-08165 RFS 2.7.4
Created: 2011-06-22 13:59:46 UTC
Image Type: MIPS Linux RAMDisk Image (gzip compressed)
Data Size: 3913508 Bytes = 3.7 MB
Load Address: 00000000
Entry Point: 00000000
Verifying Checksum ... OK
```

Starting kernel ...

init started: BusyBox v1.16.2 (2011-05-26 10:42:45 PDT)

```

/etc/rc: Mounting filesystems...
/etc/rc: Mounted /proc
/etc/rc: Mounted /dev/pts
/etc/rc: Mounted /dev/mtdblock10 to /var/upgrade
/etc/rc: Checking the reliable upgrade watchdog timer...activated
/etc/rc: Mounted /dev/mtdblock0 to /var
/etc/rc: Placed /var/tmp to ram disk
/etc/rc: Setting hostname shmm500
/etc/rc: Started syslogd and klogd
/etc/rc: Strobing the reliable upgrade WDT
/etc/rc: /dev/mtdblock1 appears to be empty ... restoring from factory /etc...
/etc/rc: Preserved ssh_host_dsa_key in /etc/ssh
/etc/rc: Preserved ssh_host_rsa_key in /etc/ssh
/etc/rc: Mounted /dev/mtdblock1 to /etc
/etc/rc: Calling /etc/rc.acb-HPDL
/etc/readhwaddr: Board Hardware Address: 0x12
/etc/netconfig: /etc/hosts updated with shmm500 192.168.0.23 entry
/etc/netconfig: Updating /etc/profile.sentry with IP settings
/etc/netconfig: Starting /bin/inetd...
/etc/netconfig: Starting time synchronization script
/etc/rc.acb-HPDL: Image Name: 63998-08165 RFS 2.7.4
/etc/rc.acb-HPDL: Updating /etc/profile.sentry with specific settings
/etc/rc.acb-HPDL: Starting snmpd...
/etc/rc.acb-HPDL: Starting httpd...
/etc/rc.acb-HPDL: Starting Shelf Manager ... for carrier type ACB
/etc/rc.acb-HPDL: Command line: shelfman -sf
/etc/rc.acb-HPDL: Strobing the reliable upgrade WDT

<*> 00:31:31.826 [145] Pigeon Point Shelf Manager ver. 2.7.4. Built on May 26 2011 10:37:23
<*> 00:31:31.890 [145] *** Lock log print buffer at 0x1006ce10 ***
<*> 00:31:31.891 [145] *** Pthread lock log print buffer at 0x10071660 ***
<I> 00:31:31.901 [145] Reading configuration file: /etc/shelfman.conf

shmm500 login: root
Password:

```

Step 3

Verification of the upgrade:

After bootup of the system log in as root with empty password.

```

shmm500 login: root
Password:
#

```

To verify the successful upgrade, you can verify the version that you are running with the “version” command:

version

```

Current Boot
Image Name: 63998-08165 U-Boot 1.1.4
Created: Wed Jun 22 13:59:47 2011
Image Type: MIPS Linux Firmware (uncompressed)
Data Size: 185336 Bytes = 180.99 kB = 0.18 MB
Load Address: 0x9FC00000
Entry Point: 0x00000000

Current Kernel
Image Name: 63998-08165 Linux-2.4.26
Created: Wed Jun 22 13:59:47 2011
Image Type: MIPS Linux Kernel Image (gzip compressed)
Data Size: 883998 Bytes = 863.28 kB = 0.84 MB
Load Address: 0x80100000
Entry Point: 0x802D6040

Current RFS
Image Name: 63998-08165 RFS 2.7.4

```

Created: Wed Jun 22 13:59:46 2011
Image Type: MIPS Linux RAMDisk Image (gzip compressed)
Data Size: 3913508 Bytes = 3821.79 kB = 3.73 MB
Load Address: 0x00000000
Entry Point: 0x00000000

Alternate Boot

Image Name: 63998-08165 U-Boot 1.1.4
Created: Wed Jun 22 13:59:47 2011
Image Type: MIPS Linux Firmware (uncompressed)
Data Size: 185336 Bytes = 180.99 kB = 0.18 MB
Load Address: 0x9FC00000
Entry Point: 0x00000000

Alternate Kernel

Image Name: 63998-08165 Linux-2.4.26
Created: Wed Jun 22 13:59:47 2011
Image Type: MIPS Linux Kernel Image (gzip compressed)
Data Size: 883998 Bytes = 863.28 kB = 0.84 MB
Load Address: 0x80100000
Entry Point: 0x802D6040

Alternate RFS

Image Name: 63998-08165 RFS 2.7.4
Created: Wed Jun 22 13:59:46 2011
Image Type: MIPS Linux RAMDisk Image (gzip compressed)
Data Size: 3913508 Bytes = 3821.79 kB = 3.73 MB
Load Address: 0x00000000
Entry Point: 0x00000000

Pigeon Point Shelf Manager Command Line Interpreter

Pigeon Point Shelf Manager ver. 2.7.4
Pigeon Point and the stylized lighthouse logo are trademarks of Pigeon Point Systems.
Copyright (c) 2002-2011 Pigeon Point Systems
All rights reserved
Build date/time: May 26 2011 10:37:23
Carrier: HPDL/ACB
Carrier subtype: 0; subversion: 0
Cooling Management Library: libcooling_acb.so; Version: 2.7.4
Carrier Product ID: 21596291
Chassis Product ID: 11596160
#

In case the new firmware version appears in the 'alternate' section, and the old version in the 'current' section, the watchdog timer has expired and reset the firmware version to the version before the upgrade. You can use the command 'rupgrade_tool -sR' to flip the firmware version the shelf manager will boot.

For the necessary FRU-File update and additional settings, please proceed to the chapter '**Updating FRU data files**'.

3.2 TFTP Upgrade Procedure

An overview of the procedure is as follows:

** Download the 63998-08165.rfs and 63998-08165.kernel images and place them on your network reachable TFTP server. The 63998-08165.rfs image includes the u-boot.bin, sentry.shmm500.kernel and sentry.shmm500.rfs images *inside* this special boot image.

** TFTP boot the upgrade kernel and RFS images on your ShMM-500. Once booted, the upgrade script will automatically update your ShMM-500 using the `rupgrade_tool` utility and the new 2.7.4 kernel and RFS and u-boot images stored in the upgrade RFS image. It will then reboot.

** For customers with early production F64M128 (large capacity ShMM-500+ modules) an additional step may be performed to reprogram the ADM1060 to enable the larger flash memory.

Step 1

Rename the kernel and RFS files:

- Rename 63998-08165.kernel to sentry.kernel
- Rename 63998-08165.rfs to sentry.rfs

These images need to be placed on a TFTP server machine that is network reachable from the ShMM-500 module.

Step 2

Power on your ShMM-500 based hardware and interrupt the boot-up process by pressing the space-bar on the serial port console of the ShMM-500:

U-Boot 1.1.4...

...

Shmm500

Step 3

Verify the correct name of the download images.

Make sure that the renamed files of Step 1 correspond to the required file names in u-boot.

Shmm500 **printenv**

...

bootfile=sentry.kernel

ramdisk=sentry.rfs

.....

Step 4

Make sure that the network settings for your ShMM-500 are such that it can see the TFTP server on your network:

shmm500 **printenv serverip ipaddr netmask gatewayip**

serverip=192.168.0.7

ipaddr=192.168.0.2

netmask=255.255.0.0

gatewayip=192.168.0.1

If any of these need to be changed, do it as follows:

shmm500 **setenv serverip 192.168.0.88**

shmm500 **saveenv**

Saving Environment to EEPROM...

shmm500

IMPORTANT: As part of the upgrade process, the ENV VAR settings will be restored to factory default. Please make sure to take note on the ENV VAR settings so they can be restored at the end of the upgrade. To display the current settings, type:

```
shmm500 printenv
```

The default settings are listed in the chapter 'Configuration Settings'.

Step 5

If your ShMM-500 module has the net command defined, you can use this command to boot the upgrade kernel and RFS as follows:

```
shmm500 run net
```

If it does not, you can set the system variables step-by-step and start the upgrade process:

```
setenv bootargs $(bootargs) root=/dev/ram rw console=ttyS0,115200 <enter>
setenv reliable_upgrade=y <enter>
tftp 80400000 sentry.kernel <enter>
tftp 81200000 sentry.rfs <enter>
bootm 80400000 81200000 <enter>
```

The upgrade kernel and RFS will boot and automatically start the upgrade process.

This procedure may take several minutes.

The ShMM will reboot automatically after the upgrade is complete.

Step 6

Verification of the upgrade:

After bootup of the system log in as root with empty password.

```
shmm500 login: root
```

```
Password:
```

```
#
```

To verify the successful upgrade, you can verify the version that you are running with the "version" command:

```
# version
```

```
Current Boot
```

```
Image Name: 63998-08165 U-Boot 1.1.4
Created: Wed Jun 22 13:59:47 2011
Image Type: MIPS Linux Firmware (uncompressed)
Data Size: 185336 Bytes = 180.99 kB = 0.18 MB
Load Address: 0x9FC00000
Entry Point: 0x00000000
```

```
Current Kernel
```

```
Image Name: 63998-08165 Linux-2.4.26
Created: Wed Jun 22 13:59:47 2011
Image Type: MIPS Linux Kernel Image (gzip compressed)
Data Size: 883998 Bytes = 863.28 kB = 0.84 MB
Load Address: 0x80100000
Entry Point: 0x802D6040
```

```
Current RFS
```

```
Image Name: 63998-08165 RFS 2.7.4
Created: Wed Jun 22 13:59:46 2011
Image Type: MIPS Linux RAMDisk Image (gzip compressed)
Data Size: 3913508 Bytes = 3821.79 kB = 3.73 MB
```



Load Address: 0x00000000
Entry Point: 0x00000000

Alternate Boot

Image Name: 63998-08165 U-Boot 1.1.4
Created: Wed Jun 22 13:59:47 2011
Image Type: MIPS Linux Firmware (uncompressed)
Data Size: 185336 Bytes = 180.99 kB = 0.18 MB
Load Address: 0x9FC00000
Entry Point: 0x00000000

Alternate Kernel

Image Name: 63998-08165 Linux-2.4.26
Created: Wed Jun 22 13:59:47 2011
Image Type: MIPS Linux Kernel Image (gzip compressed)
Data Size: 883998 Bytes = 863.28 kB = 0.84 MB
Load Address: 0x80100000
Entry Point: 0x802D6040

Alternate RFS

Image Name: 63998-08165 RFS 2.7.4
Created: Wed Jun 22 13:59:46 2011
Image Type: MIPS Linux RAMDisk Image (gzip compressed)
Data Size: 3913508 Bytes = 3821.79 kB = 3.73 MB
Load Address: 0x00000000
Entry Point: 0x00000000

Pigeon Point Shelf Manager Command Line Interpreter

Pigeon Point Shelf Manager ver. 2.7.4
Pigeon Point and the stylized lighthouse logo are trademarks of Pigeon Point Systems.
Copyright (c) 2002-2011 Pigeon Point Systems
All rights reserved
Build date/time: May 26 2011 10:37:23
Carrier: HPDL/ACB
Carrier subtype: 0; subversion: 0
Cooling Management Library: libcooling_acb.so; Version: 2.7.4
Carrier Product ID: 21596291
Chassis Product ID: 11596160
#

In case the new firmware version appears in the 'alternate' section, and the old version in the 'current' section, the watchdog timer has expired and reset the firmware version to the version before the upgrade. You can try the command 'upgrade_tool -sR' to flip the firmware version the shelf manager will boot up.

For the necessary FRU-File update and additional settings, please proceed to the chapter '**Updating FRU data files**'.

3.3 Updating FRU data files



Do not use the CLI command “clia frudataw” to update the FRU ID files. Instead, use the script /var/nvdata/fru_update to update FRU ID files. This script saves shelf specific data like serial numbers and manufacturing date. A complete list of saved data is listed in table below

Saved variables

Variable Name	Area	Info
Serial number	[Board Info Area]	
Serial number	[Chassis Info Area]	
Serial number	[Product Info Area]	
Mfg. Date/Time	[Board Info Area]	
Product Version	[Product Info Area]	
Asset Tag	[Product Info Area]	
IP address	OEM record [Shelf Manager IP Connection]	
Gateway	OEM record [Shelf Manager IP Connection]	
Netmask	OEM record [Shelf Manager IP Connection]	
	Internal Use Area	Complete

FRU ID file update:

Syntax:

sh /<path>/fru_update <IPMC> <FRU ID> <path>/<filename>

<path>: Location of the FRU files, default: /var/nvdata

<filename>: Name of the FRU file.

Example: 11596401HABIN.bin

11596401: Shelf or FRU part number

HA: Revision of the FRU data file

BIN: Identification for a FRU data file

.bin Format of FRU data file

The table below lists valid values for <IPMC> and <FRU ID> for a 14 or 16 slot Schroff shelf with managed FRUs. In order to get a list of supported FRU numbers and associated FRU types for your specific shelf type use the commands “clia fru”

<IPMC>	<FRU ID>	Description
10	0	Shelf Manager in slot 0x10
12	0	Shelf Manager in slot 0x12
20	1	Shelf SEEPROM 1
20	2	Shelf SEEPROM 2
20	3	Fan Tray 0
20	4	Fan Tray 1
20	5	Fan Tray 2
20	6	PEM 0
20	7	PEM 1
20	8	SAP

The table below lists valid values for <IPMC> and <FRU ID> for a 6, 14 or 16 slot Schroff shelf with IPMC based FRUs. In order to get a list of supported FRU numbers and associated FRU types for your specific shelf type use the commands “clia fru”

<IPMC>	<FRU ID>	Description
10	0	Shelf Manager in slot 0x10
12	0	Shelf Manager in slot 0x12
20	1	Shelf SEEPROM 1
20	2	Shelf SEEPROM 2
20	3	SAP

Examples:

```
sh /var/nvdata/fru_update 20 1 /var/nvdata/11596101HABIN.bin
```

Writes Shelf FRU-data of the shelf with part number 11596-101 into FRU_data SEEPROM 1 and restores the variables listed in Table 1.

```
sh /var/nvdata/fru_update 20 3 /var/nvdata/21596132ABBIN.bin
```

Writes Fan Tray FRU-data into the FRU_data SEEPROM of the left Fan Tray (Fan Tray 0) and restores the variables listed in Table 1.

Complete update:

The example below shows the complete update of the FRU files in the shelf and on the shelf managers in a 14 or 16 slot Schroff ATCA shelf. In order to get a list of supported FRU numbers and associated FRU types for your specific shelf type use the command “clia fru”

Change to the /var/nvdata/directory

```
# cd /var/nvdata
```

Shelf FRU file update:

Download of FRU data to shelf SEEPROM 1:

```
# sh fru_update 20 1 <Shelf FRU file name>
```

Download of FRU data to shelf SEEPROM 2:

```
# sh fru_update 20 2 <Shelf FRU file name>
```

Download of FRU data to Fan Tray 0:

```
# sh fru_update 20 3 <Fan Tray FRU file name>
```

Download of FRU data to Fan Tray 1:

```
# sh fru_update 20 4 <Fan Tray FRU file name>
```

Download of FRU data to Fan Tray 2:

```
# sh fru_update 20 5 <Fan Tray FRU file name>
```

Download of FRU data to PEM A:

```
# sh fru_update 20 6 <PEM FRU file name>
```

Download of FRU data to PEM B:

```
# sh fru_update 20 7 <PEM FRU file name>
```

Download of FRU data to the SAP:

```
# sh fru_update 20 8 <SAP FRU file name>
```

Shelf Manager FRU file update:

In a system with only one Shelf Manager, please consult the user manual of the shelf to determine the shelf manager address locations 10 and 12.

Download of FRU data to the Shelf Manager in 0x10:

```
# sh fru_update 10 0 <Shelf Manager FRU file name>
```

Download of FRU data to the Shelf Manager in 0x12:

```
# sh fru_update 12 0 <Shelf Manager FRU file name>
```

Note: The upgrade process of the shelf manager may take several minutes.

3.4 Setting the environmental variable rc2

After successful upgrade, set the RC2 environment variable and reboot the system.

```
# setenv rc2 /etc/rc.acb-HPDL
```



Please make sure that the rc2 variable is set correctly. A common problem that causes the Shelf Manager to not work properly is to set the rc2 variable incorrectly. You must set the rc2 variable on both shelf managers to the same value, e.g. /etc/rc.acb-HPDL. You can check the setting with 'getenv rc2'. After setting the variable, reboot the shelf manager. If one of the shelf managers is set to a different variable, it will constantly reboot, signaling that it is not working properly.

3.5 Restart the system

If you use redundant shelf managers you need to reboot both shelf managers at the same time.

There are several ways of doing this:

- 1) Power cycle the complete shelf.
- 2) Remove both shelf managers from their slots. Wait minimum 5 sec. Re-insert the shelf managers.
- 3) Push the reset-buttons on the front panel of both shelf managers (use a ball-pen tip or similar) **within a maximum delay of 3 sec.**
- 4) Use the script fru_data_refresh in /var/nvdata:

```
# cd /var/nvdata
# sh fru_data_refresh
```

4 Special tests for HPDL upgrade:

With the new HPDL scheme, some tests should be done after the upgrade to verify the correct installation of the firmware and the FRU files.

These tests should be done on both shelf managers in a redundant system.

1) Correct version installed and configured:

use the version command to check for the correct firmware version numbers under 'current boot', 'current kernel' and 'current rfs'.

All should be **63998-08165**.

The Pigeon Point Shelf manager version should be **2.7.4**.

The carrier setting should be **HPDL/ACB**.

version

Current Boot

Image Name: 63998-08165 U-Boot 1.1.4
Created: Wed Jun 22 13:59:47 2011
Image Type: MIPS Linux Firmware (uncompressed)
Data Size: 185336 Bytes = 180.99 kB = 0.18 MB
Load Address: 0x9FC00000
Entry Point: 0x00000000

Current Kernel

Image Name: 63998-08165 Linux-2.4.26
Created: Wed Jun 22 13:59:47 2011
Image Type: MIPS Linux Kernel Image (gzip compressed)
Data Size: 883998 Bytes = 863.28 kB = 0.84 MB
Load Address: 0x80100000
Entry Point: 0x802D6040

Current RFS

Image Name: 63998-08165 RFS 2.7.4
Created: Wed Jun 22 13:59:46 2011
Image Type: MIPS Linux RAMDisk Image (gzip compressed)
Data Size: 3913508 Bytes = 3821.79 kB = 3.73 MB
Load Address: 0x00000000
Entry Point: 0x00000000

[Alternate section] (not printed)

Pigeon Point Shelf Manager Command Line Interpreter

Pigeon Point Shelf Manager ver. 2.7.4

Pigeon Point and the stylized lighthouse logo are trademarks of Pigeon Point Systems.

Copyright (c) 2002-2011 Pigeon Point Systems

All rights reserved

Build date/time: May 26 2011 10:37:23

Carrier: HPDL/ACB

Carrier subtype: 0; subversion: 0

Cooling Management Library: libcooling_acb.so; Version: 2.7.4

Carrier Product ID: 21596291

Chassis Product ID: 11596160

2) Correct RC2 file

```
# cat /var/log/messages | grep "Calling /etc/rc.acb-HPDL"
```

```
Jan 22 17:22:13 shmm500 user.info /etc/rc: Calling /etc/rc.acb-HPDL
```

Check with the appropriate setting for your shelf manager from the table "Schroff shelf manager versions" at the top of this document.

3) Correct HPDL data in carrier FRU

```
# cat /var/log/messages | grep "HPDL data in the FRU"
```

```
Jan 22 17:22:21 shmm500 daemon.info shelfman[248]: HPDL data in the FRU 886 bytes
```

4) Correct SDR data in carrier FRU

```
# cat /var/log/messages | grep "HPDL SDRs in the FRU"
```

```
Jan 22 17:22:21 shmm500 daemon.info shelfman[248]: HPDL SDRs in the FRU 318 bytes
```

5) Correct HPDL data in shelf FRU

```
# cat /var/log/messages | grep "HPDL Chassis data in the Shelf FRU"
```

```
Jan 22 17:24:26 shmm500 daemon.info shelfman[248]: HPDL Chassis data in the Shelf FRU  
593 bytes
```

6) Correct SDR data in shelf FRU

```
# cat /var/log/messages | grep "HPDL Chassis SDRs in the Shelf FRU"
```

```
Jan 22 17:24:26 shmm500 daemon.info shelfman[248]: HPDL Chassis SDRs in the Shelf FRU  
190 bytes
```

In case of errors or different output from the commands above, please check the following:

- The correct FRU files have been installed.
- The correct shelf manager type is set in the RC2 variable

5 Resetting the Shelf Manager configuration to the default values

The U-boot bootloader stores its environment variables in a SEEPR0M. You can modify these variables with either the U-boot or Linux “setenv” command. If you set the environment values incorrectly you can use this procedure to set the U-boot environment variables back to their default values.

1. Reboot the shelf manager with the “reboot” command.
2. Stop the shelf manager from booting Linux by entering a character on the serial console when “Hit any key to stop autoboot” is displayed.
3. Enter the U-boot commands “eeprom write 80400000 0 1800” and “reset”.
4. Stop the shelf manager from booting Linux by entering a character on the serial console when the U-boot banner is displayed.
5. Enter the U-boot commands “save”, “save”, and “reset”.



Note: If you set the U-boot environment to the factory default values the rc2 variable may not be set to the correct value for your shelf manager carrier board. You must set the rc2 variable on both shelf managers to the same value, e.g. /etc/rc.acb-HPDL. (See section 1 for the correct RC2 value) You can check the setting with ‘getenv rc2’. After setting the variable, reboot the shelf manager. If one of the shelf managers is set to a different variable, it will constantly reboot, signaling that it is not configured properly.

U-Boot 1.1.4 (Jun 22 2011 - 09:59:09)

```
CPU: Au1550 324 MHz, id: 0x02, rev: 0x00
Board: ShMM-500
S/N: 08031572
DRAM: (ISSI IS42S32800D) 64 MB
Flash: 32 MB
In: serial
Out: serial
Err: serial
ADM1060: configuration version 1.5
Net: Au1X00 ETHERNET
Hit any key to stop autoboot: 0
shmm500 eeprom write 80400000 0 1800
```

```
EEPROM @0x50 write: addr 80400000 off 0000 count 6144 ... done
shmm500 reset
```

U-Boot 1.1.4 (Jun 22 2011 - 09:59:09)

```
CPU: Au1550 324 MHz, id: 0x02, rev: 0x00
Board: ShMM-500
S/N: 08031572
DRAM: (ISSI IS42S32800D) 64 MB
Flash: 32 MB
*** Warning - bad CRC, using default environment
```

```
In: serial
Out: serial
Err: serial
ADM1060: configuration version 1.5
Net: Au1X00 ETHERNET
Hit any key to stop autoboot: 0
shmm500 save
Saving Environment to EEPROM...
shmm500 save
Saving Environment to EEPROM...
shmm500 reset
```

Use the Linux “getenv” command to display the U-boot rc2 environment variable setting.

```
# getenv rc2
rc2=/etc/rc.acb-HPDL
```

The shelf manager application stores its configuration files in the /etc and /var directories. You can modify these settings by editing the configuration files. If you modify the configuration files incorrectly you can use this procedure to set the configuration files back to their default values.

1. Use the setenv command to change the U-boot environment variable "flash_reset" to "y".
2. Reboot the shelf manager with the "reboot" command.

```
# setenv flash_reset y
```

```
# reboot
```

```
The system is going down NOW !!  
Sending SIGTERM to all processes.
```

```
Please stand by while rebooting the system.
```

```
U-Boot 1.1.4 (Jun 22 2011 - 09:59:09)
```

```
CPU: Au1550 324 MHz, id: 0x02, rev: 0x00
```

```
Board: ShMM-500
```

```
S/N: 08031572
```

```
DRAM: (ISSI IS42S32800D) 64 MB
```

```
Flash: 32 MB
```

```
In: serial
```

```
Out: serial
```

```
Err: serial
```

```
ADM1060: configuration version 1.5
```

```
Net: Au1X00 ETHERNET
```

```
Hit any key to stop autoboot: 0
```

```
## Booting image at bf080000 ...
```

```
Image Name: 63998-08165 Linux-2.4.26
```

```
Created: 2011-06-22 13:59:47 UTC
```

```
Image Type: MIPS Linux Kernel Image (gzip compressed)
```

```
Data Size: 883998 Bytes = 863.3 kB
```

```
Load Address: 80100000
```

```
Entry Point: 802d6040
```

```
Verifying Checksum ... OK
```

```
Uncompressing Kernel Image ... OK
```

```
## Loading Ramdisk Image at bf440000 ...
```

```
Image Name: 63998-08165 RFS 2.7.4
```

```
Created: 2011-06-22 13:59:46 UTC
```

```
Image Type: MIPS Linux RAMDisk Image (gzip compressed)
```

```
Data Size: 3913508 Bytes = 3.7 MB
```

```
Load Address: 00000000
```

```
Entry Point: 00000000
```

```
Verifying Checksum ... OK
```

```
Starting kernel ...
```

```
init started: BusyBox v1.16.2 (2011-05-26 10:42:45 PDT)
```

```
/etc/rc: Mounting filesystems...
```

```
/etc/rc: Mounted /proc
```

```
/etc/rc: Mounted /dev/pts
```

```
/etc/rc: Mounted /dev/mtdblock10 to /var/upgrade
```

```
/etc/rc: Checking the reliable upgrade watchdog timer...inactive
```

```
/etc/rc: Flash erase requested via U-Boot variable
```

```
/etc/rc: erasing mtdchar1 -> /etc
```

```
Erasing 128 Kibyte @ e00000 -- 87 % complete. Cleanmarker written at e00000.
```

```
/etc/rc: erasing mtdchar0 -> /var
```

```
Erasing 128 Kibyte @ 160000 -- 91 % complete. Cleanmarker written at 160000.
```

```
/etc/rc: Mounted /dev/mtdblock0 to /var
```

```
/etc/rc: Placed /var/tmp to ram disk
```

```
/etc/rc: Setting hostname shmm500
```

```
/etc/rc: Started syslogd and klogd
```

```
/etc/rc: /dev/mtdblock1 appears to be empty ... restoring from factory /etc...
```

```
/etc/rc: Preserved ssh_host_dsa_key in /etc/ssh
```

```
/etc/rc: Preserved ssh_host_rsa_key in /etc/ssh
```

```
/etc/rc: Mounted /dev/mtdblock1 to /etc
```

```
/etc/rc: Calling /etc/rc.acb-HPDL
```

```
/etc/readhwaddr: Board Hardware Address: 0x12
```

```
/etc/netconfig: /etc/hosts updated with shmm500 192.168.0.23 entry
```




```
/etc/netconfig: Updating /etc/profile.sentry with IP settings
/etc/netconfig: Starting /bin/inetd...
/etc/netconfig: Starting time synchronization script
/etc/rc.acb-HPDL: Image Name: 63998-08165 RFS 2.7.4
/etc/rc.acb-HPDL: Updating /etc/profile.sentry with specific settings
/etc/rc.acb-HPDL: Starting snmpd...
/etc/rc.acb-HPDL: Starting httpd...
/etc/rc.acb-HPDL: Starting Shelf Manager ... for carrier type ACB
/etc/rc.acb-HPDL: Command line: shelfman -sf
/etc/rc.acb-HPDL: Strobing the reliable upgrade WDT

<*> 00:31:31.826 [145] Pigeon Point Shelf Manager ver. 2.7.4. Built on May 26 2011 10:37:23
<*> 00:31:31.890 [145] *** Lock log print buffer at 0x1006ce10 ***
<*> 00:31:31.891 [145] *** Pthread lock log print buffer at 0x10071660 ***
<I> 00:31:31.901 [145] Reading configuration file: /etc/shelfman.conf
```

```
shmm500 login: root
Password:
```

6 Configuring Ethernet Port Bonding on the Shelf Manager

In the default configuration the shelf manager will assign the RMCP IP address from the shelf FRU data to port #1 (eth0) on the active shelf manager. If the active shelf manager fails, or the Ethernet link to port #1 fails, a switchover will occur and the RMCP address will be assigned to the port #1 on what was the backup shelf manager and is now the new active shelf manager. Ethernet port #2 (eth1) is not used in the default configuration.

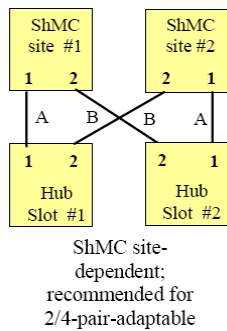

The shelf manager Ethernet ports in a Schroff shelf are wired according to the ATCA site-dependent diagram at the left. If only a single switch blade is installed in slot #1, and a shelf manager switchover occurs, shelf manager #2 will not have network connectivity because its port #1 is wired to Hub slot #2 and port #2 is not used in the default configuration.

With V2.7.1 shelf manager firmware it is now possible for the shelf manager to switch from port #1 to port #2 if the Ethernet link on port #1 fails. If the shelf manager is using port #2 it will switch from port #2 to port #1 if the Ethernet link on port #2 fails.

The Ethernet bonding driver “enslaves” shelf manager ports #1 and #2, and monitors the presence of the Ethernet link. The shelf manager will move the RMCP address between port #1 and port #2 if only one port has a link. To enable Ethernet port bonding, execute the Linux command “setenv ipdevice bond0” and reboot the shelf manager. To disable Ethernet port bonding, execute the Linux command “setenv ipdevice eth0” and reboot the shelf manager. The Linux command “ifconfig bond0” will show the IP address assigned to either port #1 or port #2 when Ethernet bonding is enabled.



If Ethernet bonding is enabled on the shelf manager the Base Interface switch on both switch blades needs to have the same subnet.



The shelf manager commands “cli setlanconfig” and “cli getlanconfig” are used to configure and display the RMCP IP address for the shelf manager.

For more information on this and other possible Ethernet configurations see section 3.4 in the PPS Shelf Manager Users Guide.

7 Firmware part number 63998-08165 configuration files

The configuration file /etc/shelfman.conf contains all PPS default configuration variables for the Shelf Manager. Variables that have been modified for Firmware version 63998-08165 are stored in the additional configuration files /etc/shelfman.conf.ACB-HPDL
The content of the custom specific configuration file is listed below.

```
# cat /etc/shelfman.conf.ACB-HPDL
# /etc/shelfman.conf.ACB-HPDL
# Created by MGT 4 February 2008
# Modified by MGT 3 December 2008, added static IP assignment for USB
COOLING_MANAGEMENT = acb          # Schroff cooling algorithm
#CARRIER_OPTIONS="NEBS;TACH_MASK=0x0F"  Enables NEBS cooling strategy
#                                     Uses fan tach mask byte, default is 0xFF
#CARRIER_OPTIONS="CARRIER_FRU_LOCATION=ADM1026:0:0x2e,2080;USE_TELCO=1"
#CARRIER_OPTIONS="IN_EX_SWITCHOFF=0; FRU_IN_ADM1026=1;"
#CARRIER_OPTIONS="CARRIER_FRU_LOCATION=ADM1026:0:0x2e,2110;IN_EX_SWITCHOFF=0"
CARRIER_OPTIONS = "CARRIER_FRU_LOCATION=ADM1026:0:0x2e,2200; MAX_INTAKE=2; MAX_E
XHAUST=2; USE_TELCO=1;"
COOLING_FAN_INCREASE_TIMEOUT = 60
COOLING_FAN_DECREASE_TIMEOUT = 60
FAN_LEVEL_STEP_UP = 2
FAN_LEVEL_STEP_DOWN = 1
NORMAL_STABLE_TIME = 1800
INITIAL_FAN_LEVEL = 8
MIN_FAN_LEVEL = 3
FAN_FULL_SPEED_DELAY=30
IPMB_LINK_ISOLATION_TIMEOUT = 60
REDUNDANCY_NET_ADAPTER = "usb0"
REDUNDANCY_NET_ADAPTER2 = "usb1"
REDUNDANT_IP_ADDRESS = 192.168.1.2
REDUNDANCY_NETMASK = 255.255.255.128
REDUNDANCY_ENABLED = TRUE
USE_SECOND_CHANNEL = TRUE
RMCP_NET_ADAPTER2 = "eth1"
SWITCHOVER_ON_HANDLE_OPEN = TRUE
SWITCHOVER_TIMEOUT_ON_BROKEN_LINK = -1
ALLOW_CLEARING_CRITICAL_ALARM = TRUE
#VERBOSITY = 0xF
HPDL = $HPDL
```

The u-boot configuration data 'environment variables' is stored in a system EEPROM.
The default content is listed below:

```
# getenv
baudrate=115200
ipaddr=192.168.0.22
serverip=192.168.0.7
netmask=255.255.255.0
bootfile=sentry.kernel
ramdisk=sentry.rfs
rootpath=/rootfs
ramargs=setenv bootargs root=/dev/ram rw
net=tftpboot 80400000 $(bootfile); tftpboot 81200000 $(ramdisk); run ramargs add
misc; bootm 80400000 81200000
nfsargs=setenv bootargs root=/dev/nfs rw nfsroot=$(serverip):$(rootpath)
addip=setenv bootargs $(bootargs) ip=$(ipaddr):$(serverip):$(gatewayip):$(netmas
k):$(hostname):$(ipdevice)
addmisc=setenv bootargs $(bootargs) $(quiet) console=$(console),$(baudrate) reli
able_upgrade=$(reliable_upgrade)
```

```
nfs=tftpboot 80800000 $(bootfile); run nfsargs addip addmisc; bootm
bootcmd=run ramargs addmisc; bootm $(kernel_start) $(rfs_start)
console=ttyS0
quiet=quiet
ipdevice=eth0
ip1device=eth1
ip1addr=192.168.1.2
gatewayip=192.168.0.1
rmcpaddr=192.168.0.2
hostname=shmm500
flash_reset=n
password_reset=n
logging=ram
timezone=UTC
rc_ifconfig=n
start_rc2_daemons=y
reliable_upgrade=y
rc2=/etc/rc.acb-HPDL
stdin=serial
stdout=serial
stderr=serial
ethaddr=00:50:c2:4a:17:e4
eth1addr=00:50:c2:4a:17:e5
serial#=08005937
kernel_start=0xbfb00000
rfs_start=0xbfc40000
ethact=Au1X00 ETHERNET
bootdelay_old=3
post_normal=
bootdelay=3
Environment size: 1201/3067 bytes
```

8 Revision History

2.7.4

New and Changed Features for This Release

1. This release is based on an update of Monterey Linux that includes the following specific changes:
 - [ShMM-500]: A sanity check was added in the Linux kernel USBNET driver for the packet length to prevent a kernel crash when sending a network packet to a USB interface.
 - [ShMM-1500]: U-Boot was enhanced so that detection of an incorrect PCIHOST setting during initialization results in a ShMM reset. Previously, when U-Boot detected an incorrect PCIHOST setting, it “hung” until the ShMM was manually reset or power cycled.
2. In HPDL, support has been added for several areas of new functionality:
 - HPDL functions. The following functions are currently supported: VECTOR(), QUEUE(), STACK(), GET(), SET(), POP(), PUSH(), COUNT(), SUM(), AVG().
 - A conditional operator: IF(<condition>, <true-part>, <false-part>).
 - INITIAL_UPDATE expressions for sensors. The condition “Initial Update in progress” is reported for a sensor if this expression yields TRUE.
3. A new HPDL driver has been developed for Texas Instruments INA220 power monitor devices.
4. In HPDL, the default alarm location (i.e. if no ALARM_LOCATION statement is specified and no alarm signals are defined) has been changed to be an external PICMG 3.0R3 compliant alarm provider.
5. Configurable compression support has been implemented for the software redundancy interface.
6. On insertion of a new fan tray, the fan level on the new fan tray is now set to the current fan level for the zone to which the new fan tray belongs.
7. Up to three Network Element Identifiers are now supported. (Only one was supported previously.) Network Element Identifier support is available only for selected carriers.
8. A new configuration parameter for the generic HPDL PMBus driver was added to allow specifying the PMBus command to be used in device presence detection on the master-only I²C bus.

Bug Fixes

1. If an IPMI command was issued via CLI to an IPMC and the IPMC repeatedly responded to that command with the completion code NODE BUSY, the Shelf Manager watchdog timer could trigger and the Shelf Manager could reboot.
2. With IPMCs in the shelf misbehaving in a certain way, the Get Device ID requests used by the Shelf Manager to poll IPMCs for presence in the shelf could accumulate in the outgoing message queue and performance of the Shelf Manager could noticeably deteriorate.
3. SDRs for the cooling state sensors incorrectly defined assertion event masks and message control support capabilities.
4. There were typos in numerous debug messages (e.g. missing or misplaced characters).
5. Sensors for generic PMBus devices, and the fan voltage sensor of the UFE2000 PSU with firmware version 6300305-0000, could provide incorrect values and remain in the initial update state after a switchover.

2.7.3

New and Changed Features for This Release

1. This release is based on an update of Monterey Linux that includes the following specific changes:
 - [ShMM-500], [ShMM-1500]: Enabled several previously disabled busybox applets (Linux shell commands): arping, chroot, free, halt, ifenslave, mkfifo, mktemp, pidof, resize, stat, sum, tr.
 - [ShMM-500], [ShMM-1500]: For the case of unrecoverable errors detected during U-Boot initialization, U-Boot displays an error message and then initiates a ShMM reset. This process is repeated until the error condition is corrected. Previously, when U-boot detected an unrecoverable error, it displayed an error message and “hung” until the ShMM was manually reset or power cycled.
2. Support has been added for a special Shelf Manager operation mode (controlled by the configuration variable COOLING_NO_POWER_DOWN_IN_CRITICAL_ALERT) in which FRUs in critical thermal alert state are not powered down. This mode is not compliant with the PICMG 3.0 (ATCA) specification and should be used with extreme caution.
3. In the HPDL driver for PMBus-compliant power supplies, support has been added for conversion of PMBus inventory data into IPMI format to represent it as an IPMI-compliant FRU data inventory. Also, for generic PMBus-compliant

power supplies, support for BlockRead commands has been added to facilitate extracting byte or word data from a custom/manufacture-specific long command.

4. Support for management of the second LAN IPMI channel via the SNMP interface has been added.
5. On an experimental basis (that is, not necessarily committed for the long term), a new U-Boot environment variable rc3 has been added; the value of this variable is a path to a customer script that runs at the very end of ShMM initialization (in the case of a reliable upgrade in progress, this script runs only after the reliable upgrade successfully completes). This addition is intended to allow customers to experiment with this concept. If the experiments are successful, this feature will likely become permanent; if not, the feature will likely be withdrawn or modified.
6. In the HPDL ADM1026 driver, support has been added for block reads and writes to the ADM1026 EEPROM; a special configuration option in the HPDL device description is required to enable this functionality.

Bug Fixes

1. On the 497th day of uninterrupted Shelf Manager operation, the Shelf Manager could reset due to a wraparound of the 32-bit system clock value. The fix for this issue includes changes both in the Shelf Manager application and in the Linux kernel (to avoid wraparound of the system jiffies count on 497th day of uninterrupted operation); the fix affects both ShMM-500 and ShMM-1500.
2. The new busybox behaved incorrectly (job control was working incorrectly and signals sent to busybox could affect Shelf Manager processes).
3. The IPMI command Get Command Sub-function Support could incorrectly return information about the supported specification type.
4. Not all event-only sensors were shown by the CLI command sensor and in the SNMP table sensors.
5. Switchover on broken link did not take place without RMCP address propagation.
6. The CLI could hang and a switchover could take place if, in response to an IPMI command initiated by a CLI request, the completion code Node Busy was returned multiple times.
7. A CPUERR warning message could appear in kernel logs; this warning was caused by an unaligned memory access in the code that accesses an ADM1026 device in non-HPDL configurations.
8. The Message Control Support field in the SDR for the Reboot Reason sensor was incorrect.
9. In a CompactPCI environment, the command clia board using slot numbers could show information about an incorrect board if a non-standard IPMB address assignment was used in the shelf.
10. A fault was possible in the CLI when the command clia frudataw was used to write HPDL data into a FRU information storage device.
11. In ShMM startup scripts, a U-Boot environment variable post_normal that inhibits running POST tests was set before a reliable upgrade but was not reset after the upgrade.
12. A Shelf Manager termination request issued to the backup Shelf Manager could fail, with the possible result that the backup Shelf Manager is never terminated.
13. On the ShMM-1500, the HPDL ALARM() statement could return an incorrect current alarm mask.

2.7.2

New and Changed Features for This Release

1. This release is based on an update of Monterey Linux that includes the following specific changes:
 - [ShMM-1500]: The error message issued during an I/O transaction error on the master-only I2C bus now shows the target address and the index of the byte on which the transaction failed.
 - [ShMM-500], [ShMM-1500]: A bug in the genext2fs tool, which caused filesystem permission problems for non-root users, has been fixed
 - [ShMM-1500]: JFFS2 changes made in the 2.7.0 release have been rolled back because they resulted in serious performance problems with mount operations on large MTD partitions.
2. Support for event-only sensors (which were introduced in version 2.0 of the IPMI specification) has been added to the CLI command sensor and SNMP table sensors. This support enables access to information from the corresponding SDRs.
3. In HPDL mode, support for sharing tachometer inputs on a single pin of an ADM1026 device has been added; this support is targeted to early ShMM-based ATCA shelf architectures and is not intended to be used for new shelf designs.
4. Support for transactions protected by Packet Error Correction (PEC, as defined in the SMBus specifications) has been added to the i2ca utility.

5. In the reliable upgrade utility `rupgrade_tool`, support for the option `-u` has been removed. The special hook option `flip` has been implemented as a replacement. To undo an upgrade, it is now necessary to use the options `-sR --hook=flip` or `-sR`.
6. In the generic HPDL driver for PMBus power supplies, a new configuration parameter has been implemented. This parameter enables proper clearing of latched signals on power supplies.

Bug Fixes

1. After issuing the CLI command `setextracted` for a FRU actually present in the shelf in the state M2, the event M1->M2 from this FRU could be lost during subsequent rediscovery of that FRU.
2. In very rare cases, the Shelf Manager could crash during initialization (when initializing the SEL).
3. The CLI command `fruinfo` incorrectly asserted an error in OEM FRU multirecords having lengths of 8 or 9 bytes. Those record lengths are legal.
4. In release 2.7.1, the Shelf Manager could incorrectly synchronize the SEL data between Active and Backup Shelf Managers during a reliable upgrade from release 2.7.0.3 or 2.7.0.4.

2.7.1

New and Changed Features for This Release

1. This release is based on an update of Monterey Linux that includes the following specific changes:
 - [ShMM-500R/ShMM-1500R] The busybox utility has been upgraded to a new version (1.16.2).
2. E-Keying for AXIe ports has been implemented in accordance with the AXIe Base Architecture Specification 1.0. Support for parsing AXIe Backplane and Board Point-to-Point Connectivity Records has been added to the FRU Compiler. CLI commands `ipmc` and `fruinfo` have been enhanced to show information about AXIe links and FRU Information records.
3. Two new tables of SNMP variables `xtca-pem` and `xtca-ps` have been added, to report information about PEMs and power supplies, respectively, in ATCA and MicroTCA shelves. The existing table `powersupply` (which corresponds to PEMs in the ATCA context) is still preserved for compatibility but is now obsolete.
4. A new configuration variable `ALLOW_POWER_UNRELATED_FRU_IN_CRITICAL_STATE` has been added. When set to `TRUE`, this variable allows a FRU to be powered on when the shelf thermal state is Critical but where that state is caused by thermal sensors unrelated to this FRU.
5. A new configuration variable `REAPPLY_POWER_MAX_COOLING_STATE` has been added. For FRUs powered down due to a critical thermal alert, this variable specifies the thermal state in which these FRUs can be powered back on (by default the value of this variable is "NORMAL").
6. Support for a dynamic increase of the maximum number of SEL entries without a restart of the whole shelf (a switchover after changing the value of the configuration variable `MAX_SEL_ENTRIES` on the backup Shelf Manager is sufficient) has been implemented.
7. The `power_supply` or `ps` symbolic extension in CLI commands is now available for non-PICMG-2.x systems and designates AC power supplies.
8. New CLI commands `hpi session`, `hpi fru`, `hpi resource` have been implemented; they report information about the current state of the IntegralHPI implementation of the HPI interface in the Shelf Manager. These commands are functional only if IntegralHPI functionality is enabled.
9. Messages issued by the Shelf Manager into the system log have been modified to improve readability.
10. The IntegralHPI implementation of the Hardware Platform Interface in the Shelf Manager has been updated to better conform to the recent versions of the HPI base and the HPI-ATCA mapping specifications (B.03.02). See the IntegralHPI release notes for details.
11. Obsolete carrier-specific modules for ShMM carriers that do not exist anymore have been removed from the Shelf Manager.
12. For the Reboot Reason sensor, a new reboot reason "Cold Reset" has been added; event generation is now supported and Discrete Reading Mask in the SDR has been updated. A textual description for the reboot reason "SDRAM Error" has been added.
13. A new HPDL sensor type has been implemented for a sensor that reports the number of days remaining till the date of the change of an air filter.
14. Support has been added for known link type extensions in the output of CLI commands.
15. Information about HPM.1 components has been added into the verbose output of the CLI command `ipmc`.
16. Support for dynamic loading of HPDL drivers has been implemented.
17. In HPDL, support has been added for specifying an expression for "Initial Update" state of a sensor.
18. A generic HPDL driver has been implemented for PMBus power supplies that allows configuration for a specific model via configuration parameters.

19. Several enhancements were made to the `ipmb_traced` utility, which receives IPMB trace information from IPM controllers over the LAN interface.

Bug Fixes

The following bugs have been fixed in this release of the Shelf Manager:

1. In non-HPDL systems, when a BMC-controlled FRU (PEM, Power Supply, Fan Tray) was removed while the shelf was powered off, it could be still considered present after shelf power on if queried via the SNMP interface.
2. The CLI FRU Info parser did not detect the error when an ATCA multi-record was too small.
3. When setting alarms via the IPMI command Set Alarm State, an incorrect mask bit was used for the Alarm Cutoff function.
4. The Pigeon Point OEM commands Get Cached Device SDR Info, Get Cached Device SDR, Reserve Cached Device SDR Repository were defined incorrectly without the Pigeon Point IANA as the first 3 bytes. As a consequence, previous versions of Pigeon Point OpenHPI (before 2.14.1.0) won't be able to use SDR caching with this and all subsequent versions of the Shelf Manager. They will still work correctly, but will have to retrieve SDRs directly from IPMCs. New versions of Pigeon Point OpenHPI (2.14.1.0 and above) will be able to use SDR caching with both previous and new versions of the Shelf Manager.
5. The CLI command **sensor** could output incorrect data if the only threshold defined for a sensor was the Lower Non Recoverable threshold.
6. Incorrect error messages could be shown in the case of a failure of the CLI commands **getbootdev** and **setbootdev**.
7. The Discrete Reading Mask in the SDR of the HPI System Event sensor was incorrect.
8. The handling of channel 14 (self) in the IPMI commands GetAuthCode, GetUserAccess and SetUserAccess was incorrect.
9. Two responses could be returned for one request in password validation mode of the IPMI command SetUserPassword.
10. The Shelf Manager System Event Log could work incorrectly when the maximum number of SEL entries (MAX_SEL_ENTRIES) was larger than 2048 entries.
11. The key **Kg** could be handled incorrectly by the IPMI 2.0 specific Get Channel Authentication Capabilities command.
12. The mode set by COOLING_KEEP_POWERED_OFF_FRUS_IN_M1 = TRUE (in which FRUs are kept in state M1 after a critical thermal alert), did not work in the case of a shelf-wide thermal alert.
13. When generating PETs, the sender IP address of channel #1 was always used even if PET was sent over channel #2.
14. Error diagnostics for the CLI command **frudata** could be incorrect.
15. The CLI command **user** could, in some circumstances, print garbage information after user deletion.

2.7.0.4

Bug Fixes

The following bugs have been fixed in this release of the Shelf Manager:

1. Unnecessary error messages were added to the log for nonexistent or previously extracted PMBus power supplies that were described in HPDL for the shelf.
2. The Shelf Manager could not detect the presence of reinserted UFE2000 power supplies that were configured with PEC enabled.

2.7.0.3

New and changed features:

1. This release is based on an update of Monterey Linux that includes the following specific changes:
 - [ShMM-1500R] Support for dual star radial topology in the IPMB driver has been reworked in the IPMB driver.
 - [ShMM-500R/ShMM-1500R] net-snmp was updated to implement the ifNumber MIB object.
2. Support for dual star radial topology mode in the Shelf Manager has been augmented to align with the driver changes.
3. Preliminary functionality in the `ipmb_traced` utility that allows collecting IPMB trace information via a LAN connection to appropriately configured board level management controllers has been disabled in this release. This functionality is being released for certain Pigeon Point Board Management Reference (BMR) controller solutions based on Actel's SmartFusion intelligent mixed signal Field Programmable Gate Array (FPGA). SmartFusion BMR customers are being notified separately about this functionality; the corresponding `ipmb_traced` utility will be provided to those customers as well. This overall area is being actively worked by a new PICMG subcommittee chaired by Pigeon Point. Support for this functionality will be added to the standard Shelf Manager `ipmb_traced` utility after the definition is stable within PICMG.
4. In the PMBus HPDL driver, the following enhancements were added:

- Support for the Unipower TBSR7000 PSU (Bluestreak series).
- Support for linear mode on a voltage output control.
- Support for a Tach2 signal.

2.7.0.2

New and changed features:

1. This release is based on an update of Monterey Linux that includes the following specific changes:
 - [ShMM-1500R] The DDR SDRAM Controller configuration was updated per the recommended changes in the latest release (Rev 9) of the Freescale MPC834x Design Checklist Application Note (AN2931). The recommended changes help reduce the overall system noise that is generated by the DDR SDRAM interface.
 - ShMM-500R/ShMM-1500R] Fixes were applied to busybox to prevent the command `help | grep ...` from causing busybox to crash.
2. The `ipmb_traced` utility has been updated and contains preliminary support for collecting an IPMB trace over the LAN interface from IPM controllers based on Pigeon Point's Board Management Reference (BMR) solution using Actel's SmartFusion intelligent mixed signal FPGA.. The following syntax should be used to start collecting an IPMB trace from an IPM controller with the IP address `<ipaddr>`, if the IPMB trace facility is associated with the SOL payload instance number `<payload>`: `ipmb_traced -w -c -b <ipaddr> -i <payload>` A special patch must be applied to the SmartFusion BMR firmware to enable this IPMB trace functionality. SmartFusion BMR customers will be notified separately when that BMR firmware patch is available.

Bug Fixes

The following bugs are fixed in this release of the Shelf Manager:

1. E-Keying of cross-connect links worked incorrectly with certain hub boards that do not distinguish between cross-connect links and regular Base Interface links with the same channel number when enabling and disabling them via Set Port State.
2. In single-channel or active-standby configuration (i.e. when the second RMCP channel is not used) the command Get Channel Authentication Capabilities returned incorrect data about the unused channel.
3. The AMC Point-to-Point Connectivity Record could be shown incorrectly by the CLI command `fruinfo`.
4. The RMCP+ commands Set Channel Security Keys and Get Channel Cipher Suites could work incorrectly when channel number 14 (a reference to the current channel) was specified and when incorrect parameters were specified.
5. After a surprise removal of the backup Shelf Manager, the active Shelf Manager could in some cases delay response to activation or deactivation requests from FRUs in the shelf for up to 120 seconds.
6. Even if the configuration parameter `EXIT_IF_HEALTHY_LOST_IN_STANDALONE_MODE` was set to FALSE, a standalone Shelf Manager could still exit when the HEALTHY bit was externally cleared.
7. If a Shelf Manager switchover was initiated by opening a handle on the active Shelf Manager (but not extracting it), that Shelf Manager could stay indefinitely in state M3 after reinitializing as the backup.
8. In some cases, after a termination of a standalone Shelf Manager, not all SEL records were saved in a persistent flash file.
9. LM75 sensors associated with PEMs and fan trays in some shelves did not support definition and assignment of lower thresholds when configured via the file `user_sdr`.
10. ShMM-1500R, only: The `ipmitool` utility had a problem establishing an RMCP+ session to the Shelf Manager due to key exchange code mismatch during a session authorization procedure.
11. ShMM-1500R, only: LAN Configuration Parameters obtained by the DHCP client running on the ShMM and distributed by the Shelf Manager were set in incorrect byte order (LSB first, instead of MSB first).
12. When obtaining network parameters for the Shelf Manager from a DHCP server, two Shelf Managers running in two different shelves could be incorrectly assigned the same parameters (i.e. the same IP address, same subnet mask, etc.).

2.7.0.1

Bug Fixes

The following bugs are fixed in this release of the Shelf Manager:

1. The cold-sensitive FRU support could work incorrectly if the corresponding thermal sensor did not have the lower critical threshold defined (only lower non-recoverable).

2. The CLI command sensor could incorrectly print the initial values of lower thresholds if the corresponding upper thresholds were not defined.

2.7.0

New and changed features:

1. This release is based on an update of Monterey Linux that includes the following specific changes:
 - Ensure that busybox enforces password constraints of 5-200 chars.
 - The usage statement for the rupgrade utility was modified to better protect against the -u option, and suggest use of the alternative and safer -sR option.
 - [ShMM-500] New sysctl parameters were added to the IPMB driver to allow the following functions to be disabled: 1) the IPMB periodic bus check and 2) the mechanism that was added to release 2.6.2 (and 2.5.5) to recover from an IPMB error condition caused by external IPM controllers during bus arbitration.
 - [shmm500]: The IPMB driver was further updated to return an error (errno set to ENOBUFS) when, during the periodic bus check, the LTC4300A "Ready" signal is detected as asserted after "disabling" the buffer. The error is returned once, the IPMB attachment state does not change.
 - [shmm500]: The /proc/rtc interface for raw RTC information retrieval was enabled. The RTC driver was modified to start time at Jan 1, 1970 in the case of a stopped oscillator.
 - [shmm1500]: JFFS2 fixes for the ShMM-1500 were synchronized with fixes that had been previously implemented in the ShMM-500 kernel. Now both the ShMM-500 and ShMM-1500 have similar JFFS2 implementations.
 - [shmm1500]: The ATCA WDT is now disabled before initiating a software hard reset. This prevents the WDT from expiring during the U-Boot POST.
 - [shmm1500]: The ShMM-1500R double-bit SDRAM error handling procedure has been updated. The SDRAM POST is executed with ECC enabled and can detect and respond to single and double bit errors. A new value was also added to the reboot reason sensor to distinguish a reboot caused by an SDRAM error from reboots due to other reasons (watchdog, software, or Power-On).
2. Support for cold-sensitive FRUs has been added; such FRUs are not powered on (during the initial shelf startup or after a hot insertion) if any of the temperature sensors on them report crossing the lower non-recoverable temperature threshold. These sensors must be able to generate events. FRUs can be designated cold-sensitive in a special PPS-specific multi-record located in the Shelf FRU Information.
3. If the Shelf Manager deactivates a FRU due to a critical thermal alert, it can now optionally prevent it from automatic reactivation by keeping it in the state M1. Manual intervention from an operator or an explicit programmatic request is needed then to reactivate the FRU. This optional behavior is turned on by setting the configuration variable COOLING_KEEP_POWERED_OFF_FRUS_IN_M1 to TRUE (it is FALSE by default).
4. To allow reliable upgrades to happen from non-HPDL-based versions of the Shelf Manager to HPDL-based versions, it is now allowed for a backup HPDL-based Shelf Manager to coexist with an active non-HPDL-based Shelf Manager when a reliable upgrade is in progress. (In previous releases, the backup Shelf Manager could not initialize as a backup Shelf Manager in this case and constantly rebooted.)
5. In an HPDL-based Shelf Manager, a subsidiary Shelf Manager FRU that carries alarm functionality on it can now be designated as the alarm location FRU in a response to the PICMG 3.0 R3 command "Get Telco Alarm Location".
6. For an RMCP network interface propagated to the backup Shelf Manager, switchover between the two physical interfaces (on the backup) due to a broken link is now supported.
7. In an HPDL-based Shelf Manager, support has been added for describing communication links that can be E-keyed, via the new HPDL PORTS clause.
8. The E-Keying algorithm in the active Shelf Manager has been modified to avoid disabling existing communication links on boards that are powered on when a Shelf Manager is inserted into a previously unmanaged shelf.
9. In an HPDL-based Shelf Manager, support has been added for isolating master-only I2C buses via GPIO_E8. (This functionality must still be turned on by setting the configuration variable ISOLATE_MUX_ON_GPIO8 to TRUE.)
10. Support in the Shelf Manager has been added to obtain LAN configuration parameters for boards and modules in the shelf via DHCP and propagate them to boards and modules via the IPMI command "Set LAN Configuration Parameters".
11. The output of the CLI command threshold includes an indication that the direction of thresholds in processed values is different from the direction in raw values (that is, if the sensor linearization function is a monotonically decreasing one). For example, for an upper threshold that applies to the raw context, the corresponding lower threshold name is shown before the processed value.
12. In the output of CLI commands there is now support for the new Link Type 6 (for Serial Rapid I/O links).
13. A SEL journaling facility is now supported by default, decreasing the flash wear on the ShMM due to SEL writes in default configurations.

14. Support has been added for specifying the target LUN in CLI commands `sendcmd` and `sendamc`.
15. For the CLI commands `shelf MaxCurrent`, `shelf MinVoltage`, and `shelf PwrCapability`, if the total power budget of the shelf is reduced as a result of execution of one of these commands and the new budget exceeds power allocated to the current FRU population, some FRUs may be powered down by the Shelf Manager to keep power consumption within the new budget.
16. To prevent a possible confusion, a processed sensor value is now not shown in the output of the CLI command `sensordata` if the sensor is in the state "Initial Update in Progress/Sensor Reading Unavailable".
17. The IPMB link sensor implementation on the Shelf Manager has been enhanced to report the state of failure for an IPMB if the IPMB driver is able to successfully reattach the bus after a failure but writes still cannot go through the faulty bus; this situation is typical for IPMB failures happening in configurations where LTC buffers on the Shelf Managers are bypassed in hardware.
18. In HPDL drivers for some GPIO devices (PCA9555 and related) configuration parameters have been added to allow additional consistency checks of the received data and repeating of read/write requests in configurations where additional robustness is needed.
19. The CLI commands `sendcmd` and `sendamc` now accept a `<lun>` parameter.

Bug Fixes

The following bugs are fixed in this release of the Shelf Manager:

1. In HPDL-based systems, the presence detection method for the UFE2000 power supply could work incorrectly in the PEC mode.
2. Pre-session RMCP commands in IPMI 2.0 (RMCP+) format were not accepted by the Shelf Manager.
3. RMCP+ role-based privilege control algorithm could work incorrectly in some cases.
4. Long (20 bytes) RMCP+ passwords could be treated incorrectly in some cases.
5. When LAN configuration parameters were updated via SNMP, they were not always propagated to the Shelf FRU Information and were not always immediately applied.
6. The Shelf Manager could crash when processing more than 31 PEF entries.
7. In the stream of SEL events sent to event subscribers, several events could be lost immediately after a switchover.
8. The CLI command `shelfaddress -x` could work incorrectly.
9. A memory leak could happen in the Shelf Manager in the case of reading FRU information from a Shelf Manager's subsidiary FRU on systems with unstable access to the FRU information storage.
10. In the output of the CLI command `ipmc -v`, the OEM GUID Link Type was incorrectly shown as "reserved".
11. The IPMI 2.0-specific mode of the IPMI command "Close Session" using session handles could work incorrectly.
12. During a reliable upgrade from release 2.6.4.1 to higher releases in some configurations, the new backup Shelf Manager could lose a DHCP-assigned IP address; version 2.7.0 fixes this issue, allowing smooth reliable upgrades both from release 2.6.4.1 and other releases to 2.7.0.
13. The Shelf FRU Information may not be found if the first of the two redundant Shelf FRU EEPROMs is absent or not available on the master-only I2C bus while the second one is present.

2.6.4.4

New and changed features:

The new configuration parameter `SWITCHOVER_ON_BROKEN_LINK_BACKUP_DELAY` has been defined. Setting this parameter to a non-zero value can prevent an undesirable switchover in the special situation when a hub board is inserted into a shelf with no hub boards and cross-connect Shelf Manager links, and the link to the backup Shelf Manager on the hub board comes up earlier than the link to the active Shelf Manager.

Bug Fixes

The HPDL UFE2000 power supply driver worked incorrectly with settable sensors in PEC mode.

2.6.4.3

Bug Fixes

For multi-slot boards with subsidiary FRUs, a power cycle could take place for some of the subsidiary FRUs during a Shelf Manager switchover. This problem could only arise only when special power management extensions for multi-slot boards were enabled. These extensions allow a multi-slot board to draw more power from its Zone 1 connector than allowed by the normal single-slot power management records in Shelf FRU Info.

2.6.4.2

New and changed features:

1. This release is based on an update of Monterey Linux that includes the following specific change:
 - [ShMM-500] Changed an error message in the I2C bus driver to be more user-friendly and to include the target address and the byte number on which the error occurred.
2. A new CLI command **dhcp** allows the user to restart the DHCP client in the Shelf Manager and also to query the current status of the DHCP client. This command can be useful in updating Shelf Manager IP addresses when the DHCP server configuration changes.
3. For the benefit of other applications that may run on the ShMM in parallel with the Shelf Manager, the Shelf Manager now stores in a flash file the DHCP option strings "TFTP server name" and "Boot file name", if they are sent by the DHCP server and the DHCP client in the Shelf Manager is enabled.
4. The HPDL driver of the UFE2000 PMBus power supply now supports Packet Error Code (PEC) mode, which is activated when the device type name UFE2000_PEC is used in the HPDL platform definition.
5. A Radial IPMB-0 Link Mapping Record is now included in the default Shelf FRU Information for ShMM-1500s. (The default Shelf FRU Information can be used when there is no actual Shelf FRU Information storage in a shelf.)

Bug Fixes

Several bugs have been fixed in this release of the Shelf Manager; they include:

1. The CLI command **fru** with the syntax `type=<site type>` could incorrectly show FRUs with some site type(s) if those FRUs were in state M1.
2. A deadlock was possible on the active Shelf Manager if the physical Shelf Manager was deactivated, due to a critical thermal alert on the physical Shelf Manager FRU, itself.
3. A redundant hot swap transition from M2 to M1 and then back to M2 could happen on an HPDL-based backup Shelf Manager, when the backup Shelf Manager was activated while the active Shelf Manager was already operational.
4. The CLI command interpreter utility **clia** could exit abnormally when executing the CLI command **getpefconfig** if the command line was too long.
5. In very rare cases, a newly active Shelf Manager could crash soon after a switchover.
6. The IPMI command "Get Device SDR Info" was not accepted by the Shelf Manager on non-zero LUNs; this is a non-compliant behavior if any sensors are defined on non-zero LUNs via HPDL.
7. The Shelf Manager reported a syntax error in the configuration file if an empty string in quotes was specified as the value of a configuration variable. For instance, instead of `RMCP_NET_ADAPTER = ""`, the Shelf Manager required `RMCP_NET_ADAPTER =`. Now the notation with quotes is also recognized.

Known Issues

1. The correct power consumption for an AMC module installed on a two-slot blade is not preserved across a shelf manager switchover.

2.6.4.1

New and changed features:

None.

Bug Fixes

1. The following bug fix has been implemented in the update of Monterey Linux on which the current release is based:
 - [ShMM-500] The USB host driver was updated to fix a race condition when modifying an internal driver variable; this update may prevent rare kernel crashes during configuration of the USB interface on the backup ShMM.

- [ShMM-500] The kernel logging verbosity for **vlan.h** was reduced so that startup comments are not echoed to the console at bootup.
- 2. Several bugs have been fixed in this release of the Shelf Manager; they include:
 - Propagation of RMCP IP addresses did not work during a reliable upgrade to release 2.6.4, when the backup ShMM was updated first.
 - The CLI command **getconfigparam** did not work on the backup ShMM.
 - RMCP sessions that timed out could reappear up to 60 seconds after a switchover on the backup ShMM.
 - For better backwards compatibility, propagation of Shelf Manager configuration parameters from the active Shelf Manager to the backup should be enabled only when the retrieval of configuration parameters from the Shelf FRU Information is enabled (**SHELF_MANAGER_CONFIGURATION_IN_SHELF_FRU_INFO = TRUE**) on the active Shelf Manager.
 - The help text for the CLI command **getpelfconfig** showed incorrect option names; the option names in the release 2.6.4 *User Guide* document are correct.

2.6.4

New and changed features:

1. This release is based on an update of Monterey Linux that includes the following specific changes:
 - [ShMM-500] The IPMB driver was updated to improve the detection of IPMB error conditions caused by external IPMB controllers during bus arbitration.
 - [ShMM-500] Support was added for the Numonyx M29W128GH and PC28F[512,256]M29EWH Flash devices as an optional implementation of the ShMM-500R Flash storage. Any plan to ship ShMM-500Rs with Numonyx devices will be preceded by a formal change notice.
 - [ShMM-500] For the Ethernet driver, the queue for received packets was increased from 32 to 128 packets to better absorb traffic bursts without dropping packets. This change is only active if the **CONFIG_MIPS_AU1X00_NAPI** option is set to "y" (this is the default setting) in the Linux configuration.
 - [ShMM-500] The Linux Ethernet bonding driver was added to the kernel to support a hardware based active-standby relationship between the two Ethernet adapters in cross-connect configurations. In the current configuration, the bonding driver checks the physical link state every 100 milliseconds and sends a gratuitous ARP notification after a new active interface selection.
 - To ensure detection and recovery from a failure in the kernel during the boot process and before the Shelf Manager starts, the initial interval for strobing the watchdog was changed from 30 to 2 seconds.
 - **SO_KEEPLIVE** was added to the busybox **telnetd** to ensure that the telnetd daemon closes broken connections after a timeout (which is specified via **sysctl**).
 - The Net-SNMP implementation was updated. Support for new Shelf Manager SNMP variables was added, which caused certain tables in the Net-SNMP to overflow; these tables were each split into two, which increased their capacity, their contents were rearranged and the code accessing them was updated.
2. Selected Shelf Manager configuration parameters can now be retrieved from the Shelf FRU Information via a set of special PPS-specific records. The Shelf Manager now tries to retrieve these records when it finds the Shelf FRU Information; if it succeeds, it applies the configuration parameters that it finds there, overriding the values that were specified in the configuration files or the defaults. Only selected configuration parameters can be overridden with this mechanism.
3. A new CLI command **getconfigparam** shows the current values of the Shelf Manager configuration parameters. This command can be useful in verifying that the configuration parameter definitions from the Shelf FRU Information were applied properly.
4. The System Event Log (SEL) can now be compressed when writing it to a flash file. Also, the period between subsequent SEL writes can be limited to no less than a specified number of seconds. These enhancements enable increasing the usable lifetime of the flash device on the ShMM.
5. The implementation of threshold-based sensors in IPMF and HPDL now supports the IPMI command "Get Sensor Event Status". Based on this change, the cooling management code was modified to handle hysteresis-enabled thermal sensors in the shelf that support this command, in a more optimal way.
6. Enhancements were made to the handling of sensors that belong to non-intelligent FRUs managed directly by the Shelf Manager in HPDL mode. Such sensors are now reinitialized when the corresponding FRU is hot-inserted and maintained in the "initial update in progress" state if the corresponding FRU is absent. Tachometer sensors belonging to fan tray FRUs are kept in the "initial update in progress" state for a configurable time after the fan tray FRU is hot-inserted, so the fans can spin up.

7. Support has been added for the new PICMG command "Set Channel Signaling Class", as defined in the PICMG 3.1 Revision 2 specification (which is currently in a draft state). The Shelf Manager sends this command to ATCA boards, if necessary, during the E-Keying procedure.
8. FRU LED management is now supported in the Shelf Manager SNMP interface.
9. The output of the CLI command **getfruLEDstate** (in verbose mode) now includes information from LED Description records.
10. In HPDL mode, output of the CLI command **version** now contains Product IDs from the current carrier and shelf HPDL modules.
11. The Shelf Manager now supports a fourth level of release numbering and it is reported in the output of the CLI command **version**.
12. The Shelf Manager now reports the ShMM model on which it is executing, in the "Get Device ID" response for the logical Shelf Manager (field DeviceID, with values defined as follows: ShMM-300 = 3, ShMM-500 = 5, ShMM-500EL = 6, ShMM-1500 = 15h).
13. Distribution of LAN configuration parameters to boards and AMCs as been added, including support for storing these parameters in the Shelf FRU Information as a set of special PPS-specific records.
14. Extensions to power management have been implemented for multi-slot boards, using PPS-specific records in the Shelf FRU Information that specify relaxed power requirements for multi-slot boards.
15. Encryption-oriented code in the Shelf Manager has been moved to a separate library, to make it possible to create encryption-free RFS images for ShMM-1500.
16. In the HPDL driver for the ADM1024, support has been added for digital input signals.
17. OEM-specific commands have been added to get and set the minimal fan level.
18. New options for the CLI command **frudataw** have been added that allow writing and rewriting PPS specific records that represent Shelf Manager configuration parameters and board/AMC LAN configuration parameters.
19. New subcommands **shm_cfg_params** and **board_lan_cfg_params** have been added to the CLI command **shelf** that display Shelf Manager configuration parameters and board/AMC LAN configuration parameters stored in the Shelf FRU Information in a human-readable format.
20. Preliminary support for bonding of the Ethernet interfaces on the ShMM has been implemented, along with a corresponding third usage model for the two network interfaces, the bonding model.
21. A verbose mode for the CLI command **session** has been added, in which much more information about the corresponding RMCP/RMCP+ session is shown.
22. A new method of managing telco alarms raised via PEF as OEM actions has been introduced. Each event condition that causes a telco alarm is now counted separately, so that if a specific alarm is raised due to multiple event conditions, the alarm stays raised while any of those conditions stay asserted.
23. A new keyword **NO_INITIAL_ASSIGNMENT** was added to HPDL. This keyword indicates that the Shelf Manager should not initialize the fan level on the corresponding fan tray by sending the command "Set Fan Level" after a hot insertion of a fan tray FRU.
24. The Shelf Manager now implements protection against reusing an IPMB sequence number in a new outgoing request if this sequence number was used in a previous request for which no reply has been received yet. Also, the Shelf Manager is now using IPMB sequence numbers from separate sequences when sending requests to distinct IPM controllers in order to increase the lifetime of any used IPMB sequence number.
25. The default IPMB retry timeout value was changed from 4 seconds to 500 milliseconds. The **IPMB_RETRY_TIMEOUT** and **IPMB_RETRY_TIMEOUT_MSEC** parameters can be adjusted in shelves that have problems with the new timing.

Bug Fixes

Several bugs have been fixed in this release of the Shelf Manager; they include:

1. In ShMM-1500-based radial shelves, link state was not passed over the redundancy interface.
2. Output of the CLI command **getfruLEDstate** in verbose mode could incorrectly show the "hardware restricted" state of an LED.
3. In shelves with bussed IPMB, the IPMB programmatic state was not passed over the redundancy interface.
4. The IPMB handler for the command "Set Sensor Event Enable" did not check message control type, assertion mask and deassertion mask parameters for consistency with respect to the sensor attributes from the SDR.
5. Validation of a cipher suite requested for an RMCP+ session was done incorrectly because of incorrect comparison of maximum privilege levels.
6. The CLI **setpefconfig** command allowed setting an alert string that is not null-terminated, which could cause the Shelf Manager to crash when this alert string was retrieved via the **getpefconfig** operation.
7. The "Get Channel Cipher Suites" IPMI command was not processed outside of the context of an open RMCP session, even though the IPMI specification allows that.

8. The "Get Channel Cipher Suites" IPMI command always returned the full last block of data in the response, filling unused bytes with zeros.
9. The Shelf Manager could crash if the debug level was set to 0xff.
10. Sensor SDRs of the Compact type (02h) with sensor sharing were handled incorrectly when received from IPM controllers. (The Shelf Manager did not take into account the derived SDRs.)
11. The Shelf Manager could crash (with low probability) if the format of the Platform Event Traps was changed dynamically (e.g. via CLI) while the Shelf Manager was already running.
12. The Shelf Manager could power boards in an incorrect sequence if a multi-slot board was present in the shelf.
13. For the cooling state sensor, the event message control capability in the SDR was incorrect ("Entire Sensor Only"); this field was changed to "No Events From Sensor".
14. The HPDL driver for PM Bus power supplies incorrectly handled the situation when power supplies of different types were present in the same shelf.
15. With zoned cooling in use, the Shelf Manager did not raise the speed for a Fan Tray when another Fan Tray from the same cooling zone was extracted, if the FRU device ID for the remaining Fan Tray was specified as 0xFE in the corresponding Fan-to-FRU entry in the Fan Geography record.
16. Information about closed sessions was not sent to standby shelf manager immediately. As a result, sessions closed within 60 seconds before switchover could appear in the active session list after a switchover.

2.6.3

New and changed features:

1. This release is based on an update of Monterey Linux that includes the following specific changes:
 - [ShMM-500] Added a new sysctl option `/proc/sys/dev/ipmb_debug_mode` to monitor lost attachment errors detected by the IPMB driver.
 - [ShMM-500] The IPMB driver message approach was changed. A lost attachment error is no longer reported when the Au1550 slave busy workaround is invoked. Instead in this situation, the IPMB driver only reports "IPMB Slave Busy Workaround invoked". (This change will be included in release 2.6.3.) Note that the Au1550 slave busy workaround, which was included in the initial release of the ShMM-500 Linux kernel, is required to overcome a deficiency in the Au1550 SMBus controller. The update in this release only affects the reported messages; there are no functional changes to the workaround.
 - [ShMM-1500] Updated FPGA-based support for radial IPMB-0 to address potential corruptions during periods of high traffic.
 - [ShMM-1500] Added clock phase change functionality (support for the SPMODE_CP bit).
2. In releases 2.6.0, 2.6.1 and 2.6.2, the reliable upgrade scripts preserved the Shelf Manager configuration files (`/etc/shelfman.conf*`) during upgrade if they were run in default mode, that is without the `--hook` option. Starting with release 2.6.3, this feature is disabled in a default upgrade. Instead, a new experimental option `--hook=conf` has been added to the `upgrade_tool` utility; it allows copying Shelf Manager configuration files from the previous installation during the upgrade in addition to the default behavior.

Bug Fixes

Several bugs have been fixed in this release of the Shelf Manager; they include:

1. A deadlock could happen in the Shelf Manager during intensive RMCP-based network traffic between the Shelf Manager and network clients.
2. A memory leak resulted when thread descriptors in the Shelf Manager were not deallocated during the retrieval of SDRs from newly inserted boards.
3. In HPDL-based shelves, FRUs defined without a HOT_SWAP clause in the FRU statement could stay in state M1 indefinitely after extraction and reinsertion because the position of the hot swap handle could be reported incorrectly in that state.
4. In non-HPDL ShMM-1500-based radial shelves, the state of the redundancy link was not passed over the redundancy interface.
5. The command `clia getfruLEDstate` with the option `-v` could incorrectly output "LED is hardware restricted" when the LED, in fact, was not hardware restricted.
6. The power alarm could be set via a special form of the `clia alarm` command (with a numeric argument) on platforms where it in fact was not supported; thereafter the alarm would stay set forever and could not be cleared.

7. In shelves with a Fan Geography record in the Shelf FRU Info, the Shelf Manager could crash on startup.

2.6.2

New and changed features:

1. This release is based on an update of Monterey Linux that includes the following specific changes:
 - Security patches have been applied to **wu-ftpd** for the following Common Vulnerabilities and Exposures (CVEs):
 - Multiple Vendor C Library realpath() Off-By-One Buffer Overflow (CVE-2003-0466).
 - WU-FTPD File Globbing Denial of Service Vulnerability (CVE-2005-0256)
 - WU-FTPD S/Key Remote Buffer Overrun Vulnerability (CVE-2004-0185)
 - There is now an interface to control an appropriate register in the ShMM's DS1339 real-time clock (RTC) so that, on appropriately designed ShMM carrier boards, a super capacitor can be trickle-charged during operation and serve as a backup source of power for the RTC when the ShMM is not otherwise powered. Previously, the only supported source of backup power was a battery on the carrier. Customers interested in using this new interface should contact PPS for usage details.
 - The **prg1060** utility was modified to zero out the content of all ADM1060 EEPROM user pages (pages 8 to 15) when a ShMM is initialized during manufacturing.
 - [ShMM-500] The IPMB driver was updated to detect and recover from IPMB error conditions caused by external IPM controllers during bus arbitration.
 - [ShMM-500] U-Boot was modified to treat unused bits of the **core_config** word as **0** if they are all **1**. This change allows new fields to be allocated in the word and reliably interpreted, even for words in which all unused bits are **1** (as they would be if the entire word were only erased during initialization and not set to **0**). An HPDL driver has been added for the multiplexer device PCA9542.
2. An HPDL driver has been added for the multiplexer device PCA9542.

Bug Fixes

Several bugs have been fixed in this release of the Shelf Manager; they include:

1. In HPDL-based shelves, nested master-only I2C multiplexed buses (that is, configurations in which there are at least two cascaded levels of multiplexers) were not supported correctly.
2. For certain fan trays and PEMs, controlled directly by the Shelf Manager, the state of the hot-swap handle could be reported incorrectly when the corresponding FRU was quickly inserted into or extracted from the shelf.
3. In HPDL-based shelves, if an initial fan level was not assigned for a fan tray, an incorrect fan level could be assigned to the fan tray after a switchover.
4. After a switchover, the Shelf FRU Information could be corrupted if it had been previously rewritten with a larger size image.
5. The command **cli sensorread** always showed the sensor LUN as **0**.
6. The HPDL driver for EEPROM devices AT24C01, AT24C02, AT24C04, AT24C08 and AT24C16 incorrectly processed the write operation (the number of actually written bytes was returned incorrectly).

2.6.1

New and changed features:

1. This release is based on an update of Monterey Linux that includes the following specific changes:
 - The operation of the **rupgrade_tool** was improved in situations where the invoking process is terminated.
 - Key generation for RSA was fixed in **ssh**.
 - A missing **close()** call was added in the watchdog strobe function within **rupgrade_tool**.
 - An error that could potentially lead to a kernel panic was fixed in JFFS2 code.
 - The **mkimage** utility was updated to allow reading **mkimage** headers on U-Boot images from the host Linux environment.
 - Several changes were made the SNMP subsystem (**net-snmp**):
 - Fixes to eliminate duplicate SNMP traps sent the HPI subagent;

- Support for dynamic loading of carrier-specific SNMP extensions;
 - Addition of several SNMP variables for the Shelf Manager.
2. [ShMM-500]: The prg1060 utility's reporting of the MAC address for the second Ethernet was fixed.
 3. [ShMM-500]: The df utility was fixed so that it no longer reports incorrect free space for a JFFS2 partition.
 4. [ShMM-500]: An error was fixed in the Ethernet driver, in which immediately after coming up, it could corrupt the first several transmitted packets.
 5. [ShMM-500]: ifconfig's status reporting was fixed for the case where no link is available; previously, it could return a RUNNING status.
 6. Provisions for an optional native implementation of the Service Availability Forum Hardware Platform Interface (HPI) called IntegralHPI™ have been added within the Shelf Manager. IntegralHPI is licensed separately from PPS.
 7. Performance optimizations in the HPDL-based Shelf Manager have been done to reduce the time needed for polling local sensors.
 8. Parallel reading of SDRs from IPM controllers during Shelf Manager initialization has been implemented to reduce initialization time.
 9. Support for variables has been added in HPDL.
 10. When reading HPDL data and SDRs from local files, the Shelf Manager can now learn the location of the files via Linux environment variables CARRIER_DATA, CARRIER_SDRS, CHASSIS_DATA, and CHASSIS_SDRS.
 11. The completion code for the IPMI command "Exit SDR Repository Update Mode" has been changed ("Command Not Supported In Present State" instead of "Invalid Command") for formal compliance with the PICMG 3.0 specification.
 12. A configuration parameter TACHOMETER_THRESHOLD_UPDATE_DELAY has been added to control the delay between setting the fan level and updating the fan tachometer thresholds in shelves where dynamic fan tachometer thresholds are supported.
 13. The Shelf Manager now implements special log messages for tracking FRU activation and deactivation commands sent by System Manager applications.
 14. The configuration variables FAN_LEVEL_STEP_UP, FAN_LEVEL_STEP_DOWN are now used when changing the dynamic minimum fan level in the cooling algorithm (previously step value 1 was always used).
 15. The following utilities, which are parts of the RFS image, have been enhanced:
 - There is a new option in the ipmb_traced utility to allow limiting trace file size.
 - There is a new mode in the patch_fru_info utility to handle network parameters in IP Connection record.
 - There is a new mode in the snmptc utility to dump traps in all supported formats into the local syslog in a user friendly format.
 16. The SNMP subsystem implements a new SNMP branch "sel-info" and the "events" branch has been updated to simplify event handling via the SNMP interface.
 17. A new configuration variable UNCONDITIONAL_SDR_REREAD_ON_VERSION_CHANGE has been introduced. If its value is TRUE, the Shelf Manager unconditionally re-reads SDRs from an IPM controller when it receives a Version Change event from that controller, even if the Sensor Population Change Indicator in the "Get Device SDR Info" response does not change. This is done for the benefit of ATCA boards that are not fully IPMI-compliant in this respect. The default value of this variable is FALSE.
 18. In HPDL, support was added for specifying a non-zero offset from the beginning of a FRU Information storage device to the actual location of the FRU Information (the FRU_INFORMATION statement).
 19. Also in HPDL, a provision was added to skip setting a newly inserted fan tray to the normal PWM level (which can be useful for shelves in which several fan trays share a common PWM output).
 20. For TELCO alarms triggered via PEF, the CLI command alarm info now displays information about the corresponding PEF filter and the event that triggered the alarm.

Bug Fixes

Several bugs have been fixed in this release of the Shelf Manager; they include:

1. CLI and RMCP commands "Set LAN Configuration Parameters" did not update the Shelf Manager IP Connection Record in the Shelf FRU Info when the DHCP client functionality was enabled.
2. If the subnet mask in the Shelf Manager IP Connection Record in the Shelf FRU Info had an invalid format, the RMCP interface did not start; now in this case, the RMCP interface is started with the default subnet mask for the given IP address.
3. Setting the subnet mask and default gateway via the CLI and RMCP variants of "Set LAN Configuration Parameters" did not work if the Shelf FRU Info contained a version 00h instance of the Shelf Manager IP Connection Record. Support for both that version and version 01h are mandatory under PICMG 3.0.

4. The CLI command busres worked incorrectly if the target IPM controller was specified by a board number.
5. The CLI command frudataw could work incorrectly if the target FRU was specified by an AMC symbolic extension.
6. The CLI command minfanlevel did not report an error if the destination parameter value did not fit in one byte, but silently used the least significant byte of that value.
7. The event M1->M0 was incorrectly generated after a Shelf Manager switchover initiated by deactivation of the active Shelf Manager if the IPMB address of the physical controller for the active Shelf Manager was 0x80 or higher.
8. Cooling management could work incorrectly if more than one Address Table Record was present in the Shelf FRU Info, even though multiple Address Table Record configurations of Shelf FRU Info are not addressed by the PICMG 3.0 specification and very unlikely to be needed in practice.
9. An HPDL-based Shelf Manager could crash during termination (which did not cause a reboot but might cause a crash dump file to appear in the file system).
10. The Shelf Manager termination function could potentially be called several times simultaneously; protection against that possibility has been added.
11. In very rare cases, the backup Shelf Manager could get stuck in the recv() function on the software redundancy interface during a switchover.
12. The event deassertion mask and event data bytes could be incorrectly populated for the Shelf Manager CPLD state sensor.
13. SNMP trap delivery in OEM formats could cause a crash of the Shelf Manager in the case of large payload data; also, the TimeTicks field in the IPMI trap format contained an incorrect value.
14. In the sensors associated with PMBus-compatible power supplies, the flags "sensor enabled" and "sensor events enabled" could be handled incorrectly.
15. On ShMM-1500R radial shelves, an IPMB-0 link state that was modified programmatically (either enabled or disabled) was not properly propagated to the backup Shelf Manager via the software redundancy interface.
16. An unsuccessful completion of a Master-Only I2C Write-Read request was handled incorrectly.
17. The HPDL driver for the MAX6633 temperature sensor returned the temperature value incorrectly.
18. When shelf Telco Alarm mechanism #3 (the PICMG 3.0 R3.0 alarm mechanism implemented on a separate FRU from the Shelf Manager) was configured via HPDL, unnecessary warning messages were placed in the system log; also, the extraction of the alarm FRU could be handled incorrectly in that case.
19. An HPDL-based Shelf Manager did not disable radial IPMB links on the active ShMM when terminated via the clia terminate command.
20. In the case of an Active-Standby network interface configuration, DHCP did not set the RMCP address if it was received via DHCP from the second interface.
21. A potential memory corruption error existed in the FRU registration function in the HPDL-based Shelf Manager.

2.6.0

New and changed features:

1. This release is based on an update of Monterey Linux that includes the following specific changes:
 - Logging via wtmp was added for ssh and ftp. The wtmp record rotation scheme was changed to keep the last 180-200 logins.
 - The rdate usage message was changed to show -p as the default instead of -s.
 - The master-only I2C driver was changed so that it only attempts to retransmit a failed message one time instead of three times.
 - A bug in the watchdog timer driver was fixed: after the Shelf Manager was terminated via clia terminate and then restarted, the watchdog timer did not start and IPMB could become inaccessible.
 - [shmm1500] The RTC driver was changed so that the default date is January 1, 1970; this matches ShMM-500 behavior.
 - [shmm1500] The 32 Mbyte Flash map was changed to add an app_jffs file system.
 - [shmm500] A specific area of memory reserved by the kernel during startup and not freed is now freed and becomes available for general use.

Support for version 2.0 of the IPMI specification has been implemented in this release. The newly implemented features include the following:

2. Support for the RMCP+ protocol. The Shelf Manager implements an RMCP+ server in accordance with the IPMI 2.0 specification. The implementation has the following characteristics:

- Full support for the RAKP authentication protocol
 - Full support for encrypted/unencrypted, authenticated/unauthenticated messages on a single connection
 - Authentication: all mandatory and optional algorithms are supported
 - Integrity: all mandatory and optional algorithms are supported
 - Confidentiality (encryption): all mandatory and optional algorithms are supported
 - Payloads: only the IPMI message payload is supported
 - User password length extended to 20 bytes
 - Setting channel security key Kg is supported, including persistency
 - "Suspend/Resume Payload Encryption" command is supported, including xRC4 state machine reset
 - "Get Channel Auth Capabilities" command extension for IPMI 2.0 has been implemented
 - "Get Auth Code" command extension for IPMI 2.0 has been implemented
 - Support for Cipher Suites has been implemented; all IPMI 2.0 cipher suites are supported.
 - The CLI command session marks RMCP+ enabled sessions with a special flag on output.
3. Firmware firewall commands. The Shelf Manager implements the full set of firmware firewall commands in accordance with the IPMI 2.0 specification. In addition, several firmware firewall-oriented CLI commands have been added (firewall, setcommandpolicy, setfunctionpolicy).
 4. Virtual LAN support. The Shelf Manager now supports RMCP and RMCP+ traffic between the Shelf Manager and the System Manager over virtual LANs. Configuration commands defined in the IPMI 2.0 specification for this purpose ("Get/Set LAN Configuration Parameters") are supported; new Shelf Manager configuration parameters have been defined for configuring default values.
 5. Support for the IPMI 2.0 extensions to the LAN configuration parameters has been implemented on the IPMI command level and also in the CLI, WEB and SNMP interfaces.
 6. The Shelf Manager now reports IPMI version 2.0 in its response to the "Get Device ID" command, and accepts other IPM controllers that report IPMI version 2.0 as well as IPMI version 1.5.
 7. The new field "sensor direction" in SDRs is now recognized in the SDR compiler and displayed by the CLI sensor command in verbose format.

Support for revision 3.0 of the PICMG 3.0 (AdvancedTCA Base) specification has been implemented in this release. The newly implemented features include the following:

8. Support for the new TELCO Alarm commands: "Get Telco Alarm Capability", "Get/Set Telco Alarm State", "Get Telco Alarm Location", and also for the Telco Alarm Input sensor type and events. The Shelf Manager both implements these commands and sensor as a provider, and can utilize these commands to look for and communicate with the actual alarm provider on IPMB-0, if configured to do so via HPDL. In non-HPDL shelves, the location of the Telco Alarm provider is determined by the carrier-specific module.
9. Support for the new command "Set FRU Extracted" has been implemented in the Shelf Manager.
10. Support for the new LED Descriptor and PICMG Form Factor FRU Information records has been implemented in the Shelf Manager. Both records are parsed and shown by the CLI command fruinfo. In addition, support for these records has been added to the FRU Info Compiler.
11. Support for the new LED flags "payload powered" and "hardware restricted" has been implemented in the Shelf Manager, both in the low-level LED implementation framework, and in CLI commands related to LED management. Also, these flags are supported in HPDL syntax for LED definitions.
12. Support for 15 W of management power per ATCA backplane slot has been implemented; the power management framework and the implementation of the "Get Shelf Power Allocation" command have been modified accordingly.
13. Support for Intelligent Subsidiary FRUs has been implemented; the Shelf Manager now supports the new format of the "Get Address Info" response. CLI commands that normally apply to AMCs can now be applied to Intelligent Subsidiary FRUs, as well.
14. The PICMG extensions version that the Shelf Manager now reports in the "Get PICMG Properties" response is 2.3, as specified in PICMG 3.0 R3.0.

Other new Shelf Manager features include:

15. The Shelf Manager now supports a new PPS-defined IPMI command "Set FRU Activation Parameters" that allows dynamic changes to the Shelf Manager Controlled Activation and Shelf Manager Controlled Deactivation flags in the Shelf FRU Information.

16. For HPDL-based shelves, there is now support for specifying the number of tachometers that need to be in the failed state to cause the remaining fans to run full speed (the configuration variable `TURBO_MODE_MIN_FAN_FAILURES`).
17. Support for POWER ALARMS has been added to HPDL expressions.
18. For HPDL-based shelves, accidental errors on the master-only I2C bus are addressed by repeating the transaction in the case of an error; for LM75 devices, protection against spurious errors of the sensor has been implemented.
19. HPDL now has support for two more vendor-specific Telco Alarm implementations.
20. HPDL-based shelves now support the CLI `airfilterreplaced` command.
21. A new configuration variable (`DHCP_FOR_RMCP_ONLY`) causes the DHCP client in the Shelf Manager to assign DHCP address only to the RMCP interface.
22. A new configuration variable (`ACTIVATE_LOCAL_WITHOUT_SHELF_FRU`) allows activation of local Shelf Manager IPMCs (both for the logical and physical Shelf Managers) even if the Shelf FRU Info is not found.
23. Re-reading SDRs from external IPM controllers in the case of an SDR population change is now done more gracefully, avoiding a window in time when no available sensors could be reported via the CLI for that IPM controller.
24. If Shelf FRU Information is obtained from external IPMCs, and the configuration variables `SHELF_FRU_IPMB_SOURCE1` and `SHELF_FRU_IPMB_SOURCE2` are set, no other IPM controllers are now considered as potential sources for the Shelf FRU Information.
25. A new option `-d` for the CLI command `sensordata` shows only discrete sensors having a specific state set in the state mask.
26. The default file `/var/nvdata/pef` file is now created with PEF control disabled to match the `/etc/nvdata.orig/pef` file that is placed into `/var/nvdata` at first RFS startup.
27. The default value of the configuration variable `IGNORE_FAILED_DIRECTED_POWER_DOWN` is now `TRUE`, so that failure to power down a FRU in the critical thermal alert state does not by default cause the whole shelf to be powered down.
28. In the zoned cooling management support, processing sensor events and querying sensor values has been optimized.
29. The CLI command `frudataw` now performs synchronous writes to non-local FRU information sources and does not return until the write is complete. Previously, an asynchronous write took place.
30. The Shelf Manager termination procedure has been reworked to speed up termination and remove erroneous messages shown during termination.
31. The utility `patch_fru_info` now uses the locking mechanism defined in the PICMG 3.0 specification to access the Shelf FRU Information.
32. In HPDL-based shelves, the Shelf Manager now recognizes a thermal sensor located on a separate IPM controller as a shelf-wide sensor (i.e. a sensor that can trigger a shutdown of the whole shelf in the case of a critical alert), if the entity ID / entity instance pair for that sensor matches the entity ID / entity instance of the active Shelf Manager (IPM controller 20h, FRU ID 0), and thus designates the active Shelf Manager as the owner of the sensor.
33. Also in HPDL-based shelves, a versioning mechanism for external cooling management libraries has been added; the CLI command `version` has been extended to report the name and the version of the cooling management library currently in use.

Bug Fixes

Several bugs have been fixed in this release of the Shelf Manager; they include:

1. If an RMCP client was running a Shelf FRU Info update transaction and a Shelf Manager switchover happened very close in time to the final commit request for that transaction, the commit operation could be rejected with an error code asserting inconsistency of the update, even though the update was, in fact, consistent.
2. In HPDL-based shelves, the cooling management code could power down all FRUs in the shelf when a FRU, previously powered down due to a thermal critical alert, recovered from the critical alert but still stayed in the major alert. (The workaround for this problem in 2.5.x releases was to set the configuration variable `IGNORE_FAILED_DIRECTED_POWER_DOWN` to `TRUE`.)
3. In HPDL-based shelves, a fan level could be set incorrectly if fan levels in the HPDL definition module were defined out of order.
4. In HPDL-based shelves, FRU LEDs defined via HPDL could work incorrectly in some cases.
5. When a FRU supporting multiple power levels generated a thermal Major Alert condition and then transitioned into state M7, the Shelf Manager, when decreasing power level for that FRU, could incorrectly assume success of that operation and incorrectly update the power budget.
6. The status message for the CLI command `boardreset` was not clear enough.

7. User ID 1 could be deleted via the CLI; now, in accordance with the IPMI specification, the CLI command user does not allow deleting the user with ID=1.
8. When obtaining Shelf FRU Information from a trusted source (e.g. a Shelf FRU Info EEPROM), a FRU Information could be considered a valid Shelf FRU Info source even if it did not contain the Chassis section (but was valid otherwise).
9. In the case of a switchover initiated by deactivating the active Shelf Manager (e.g. by opening the handle), E-keying information could be lost for the links between the formerly active Shelf Manager and hub boards.
10. The Shelf Manager tried to send unnecessary ASF Ping requests for reserved but not active sessions (these send attempts always failed).
11. In some conditions, the active Shelf Manager could be partially out of service for up to 120 seconds awaiting an acknowledgement from the backup Shelf Manager on the software redundancy interface.
12. In HPDL-based shelves, the Shelf Manager could send the first "Set Fan Level" command to a Fan Tray FRU before obtaining the Fan Speed Properties for that FRU.
13. In HPDL-based shelves, cooling management could, in some cases, incorrectly determine the subsidiary FRU (e.g. AMC) that should be deactivated in the case of a critical thermal alert reported by an IPM controller.
14. In HPDL-based shelves, cooling management could assign a fan level to a fan tray that was lower than the minimum level specified by the configuration variable MIN_FAN_LEVEL, if that fan tray originally reported a fan level lower than the minimum level.
15. Using PPS-specific PET formats (formats 1 and 2) in acknowledged mode could cause a failure of the Shelf Manager application with a subsequent reboot caused by the watchdog.
16. The value of the LAN configuration parameter IP Address Source was incorrectly reported as "static" if the RMCP address was obtained via DHCP.
17. Due to an error in the zoned cooling management implementation, the COOLING_FAN_DECREASE_TIMEOUT and COOLING_FAN_INCREASE_TIMEOUT Shelf Manager configuration variables did not operate as documented in shelves with zoned cooling.
18. Platform Event Traps (PETs) generated by the Shelf Manager contained an invalid time stamp (TimeTicks) value in the header.
19. Propagation of RMCP session information over the software redundancy interface could work incorrectly when the active and backup Shelf Managers were executing different releases (e.g. after an inter-release upgrade). This could make the RMCP sessions facility in the Shelf Manager unstable after such an upgrade, so that existing and newly established sessions could incorrectly break during operation.

For previous releases, please see the Pigeon Point firmware release notes.