


PCAN-MiniDisplay

Visualization and Recording of
Vehicle Data

User Manual

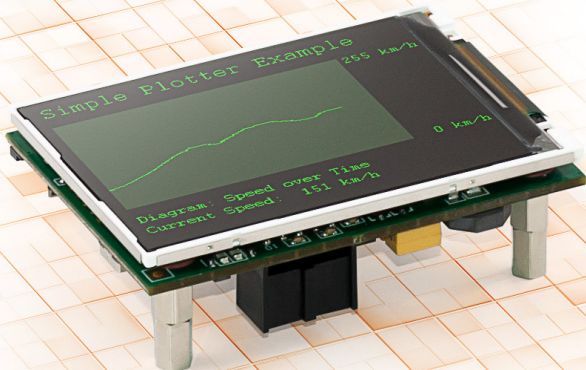

Document version 1.2.2 (2015-08-19)

PEAK
System

Products taken into account

Product name	Model	Firmware	Part number
PCAN-MiniDisplay	Display with three mounting pegs	V1.1.x	IPEH-002262
PCAN-MiniDisplay Case	Display in casing with push buttons		IPEH-002262-KSM01

The front page shows the PCAN-MiniDisplay with three mounting pegs.

microSD™ is a trademark or registered trademark of SD-3C, LLC in the United States of America, other countries, or both.

All other product names mentioned in this document may be the trademarks or registered trademarks of their respective companies. They are not explicitly marked by “™” and “®”.

Copyright © 2015 PEAK-System Technik GmbH

Duplication (copying, printing, or other forms) and the electronic distribution of this document is only allowed with explicit permission of PEAK-System Technik GmbH. PEAK-System Technik GmbH reserves the right to change technical data without prior announcement. The general business conditions and the regulations of the license agreement apply. All rights are reserved.

PEAK-System Technik GmbH
Otto-Roehm-Strasse 69
64293 Darmstadt
Germany

Phone: +49 (0)6151 8173-20
Fax: +49 (0)6151 8173-29

www.peak-system.com
info@peak-system.com

Document version 1.2.2 (2015-08-19)

Contents

1	Introduction	5
1.1	Properties at a Glance	5
1.2	Scope of Supply	6
2	Connectors	7
2.1	J1 External Buttons	7
2.2	J2 System	8
2.3	J3 USB	8
2.4	J4 JTAG	10
2.5	J5 microSD	10
2.6	J6 Serial	11
3	Scene Definition	12
3.1	General Description of an *.ins File	12
3.2	Example of an *.ins File	13
3.3	Using Several Scenes	15
4	Steps to Operation	16
4.1	Prerequisites	16
4.2	Preparing the Memory Card	16
4.3	Powering On the Device	18
4.4	Menus	19
4.5	Setting the Startup Options	20
5	CAN Tracing	22
5.1	Recording CAN Traffic	22
5.2	Playing Back Recorded CAN Traffic	23
5.3	Using the Recorded CAN Traffic on the PC	24
6	Filtering the CAN Traffic	27

7	Menu Reference for Settings and Maintenance	28
7.1	Device Settings	28
7.2	Internal Statistics	31
7.3	Memory Card	32
8	Technical Specifications	33
Appendix A	CE Certificate	34
Appendix B	Dimension Drawing	35
Appendix C	Structure on the Memory Card	36
Appendix D	Definition Files Reference	38
D.1	Scene Definition (*.ins)	38
D.2	Scenes Project File (*.inp)	56
D.3	CAN ID Filters (*.flt)	57
Appendix E	Model with Casing	60
E.1	Scope of Supply	60
E.2	Push Buttons	61
E.3	Connectors	61
E.4	miniSD Card Slot	62

1 Introduction

The PCAN-MiniDisplay is used as human-machine interface for the visualization of CAN data. For the connection to the CAN bus, it has a High-speed and a Single-wire CAN connector. The graphic representation of incoming CAN data is configured before using the unit and then is performed on a TFT display.

Besides the display of CAN data, the PCAN-MiniDisplay can also be used for data logging. The data traffic is recorded to a memory card and can be played back onto the CAN bus as well as analyzed on a PC later on.

In addition to the PCAN-MiniDisplay board to be used for mounting, there is a version in plastic casing with push buttons available. This can be used to create and evaluate application-specific configurations. Furthermore, the user can switch between different configurations during operation.

This user manual refers to the PCAN-MiniDisplay board to be used for mounting. The specific features of the **model with casing** (IPEH-002262-KSM01) are described in Appendix E on page 60.



Note: This manual refers to devices that are operated with firmware version 1.1.x.

1.1 Properties at a Glance

- CAN connections via a High-speed CAN channel (ISO 11898-2) and a Single-wire CAN channel (SAE J2411)
- TFT display with 320 x 240 pixel resolution
- Slot for microSD memory card (max. 32 GByte), 512 MByte card enclosed

- └ High-speed USB 2.0 port for access to the memory card using a PC
- └ Freely configurable visualization of CAN data via text files
- └ Run configurations from the memory card
- └ Switch between multiple display configurations via push buttons (optional)
- └ Optional autostart of a configuration using a default name
- └ Recording of incoming CAN messages to the memory card
- └ Conversion of trace data to various output formats using Windows software
- └ Playback of trace files
- └ Filtering of CAN IDs per CAN channel
- └ Wake-up via CAN
- └ Dimensions: 70 x 50 mm
- └ Supply voltage from 7 to 30 V DC
- └ Operating temperature range from -20 to 70 °C (-4 to 158 °F)

1.2 scope of supply

- └ PCAN-MiniDisplay
- └ Connection cable assembly (50 cm length) with open wire ends for peripherals (power supply, field busses, digital inputs)
- └ microSD memory card (512 MByte)
- └ This user manual in PDF format

The specific features of the model with casing and buttons (IPEH-002262-KSM01) are described in Appendix E on page 60.

2 Connectors

The connectors on the circuit board are:

- └ J1 External Buttons (2.1 below)
- └ J2 System (2.2 on page 8)
- └ J3 USB (2.3 on page 8)
- └ J4 JTAG (2.4 on page 10)
- └ J5 microSD (2.5 on page 10)
- └ J6 Serial (2.6 on page 11)

For basic use, at least the power supply (J2), a CAN connection (J2), and a microSD memory card (J5) are needed.

2.1 J1 External Buttons

3 push buttons can be connected and used to navigate through the menus of the PCAN-MiniDisplay user interface. This is for maintenance and debugging purposes. For example a user of the PCAN-MiniDisplay can be enabled to do communication configuration changes or CAN tracing.




Pin assignment External Buttons

Pin	Function
1	Din1: Down ↓
2	Din2: Up ↑
3	Din3: Enter ↵
4	GND

The 3 push buttons connect each function pin (1 to 3) to GND.

2.2 J2 System

- └ Power supply
- └ 1 High-speed CAN channel (CAN1), 1 Single-wire CAN channel (CAN2), alternative use of an external transceiver with CAN2
- └ 1 digital output, 1 digital input, 2 analog inputs

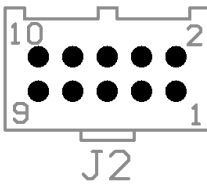


Pin assignment System

Pin	Function
1	Vb (7 - 30 V DC)
2	GND
3	Dout1
4	Din4
5	Ain1
6	Ain2
7	not connected or CAN2-RxD ¹
8	CAN2_SW or CAN2-TxD ¹
9	CAN1_L
10	CAN1_H

2.3 J3 USB

Access the memory card in the PCAN-MiniDisplay from a PC via USB connection. The memory card can also be accessed if the PCAN-MiniDisplay is switched off. At startup of the device, the USB connection is briefly interrupted.

¹ TTL signal for optional external CAN transceiver



Pin assignment USB

Pin	Function
1	5 V USB
2	D-
3	D+
4	GND
5	GND

2.3.1 Unplugging the USB Connection

Before unplugging the USB cable from the PC or the PCAN-MiniDisplay, the device should be logged out of the operating system. This procedure ensures that the operating system has correctly finished a write process to the memory card of the PCAN-MiniDisplay.



Windows: **Safely remove hardware** icon in the taskbar notification area


2.3.2 Restriction for PCAN-MiniDisplay Functions

During a USB connection to a PC some functions of the PCAN-MiniDisplay are limited, because the device cannot access the memory card at the same time as the connected PC:

- └ Scene definitions (instruments) cannot be loaded.
- └ The recording and playback of CAN traffic (trace) do not work.
- └ The commands in the **Memory Card** menu do not work.

2.4 J4 JTAG

Access the microcontroller for debugging purposes.

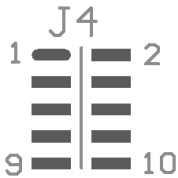


Pin assignment JTAG

Pin	Function
1	GND
2	GND
3	Reset#
4	3.3 V
5	TCK
6	TMS
7	TDO
8	TDI
9	RTCK
10	TRST

2.5 J5 microSD


Slot for a microSD memory card (max. 32 GByte).

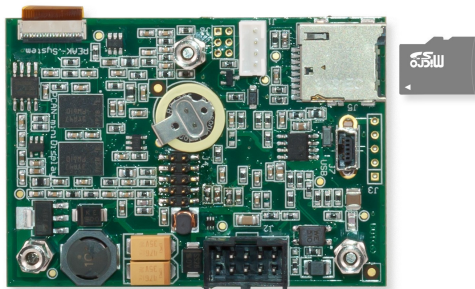

Location of the microSD card slot
on the circuit board of the PCAN-MiniDisplay (bottom view)

2.6 J6 Serial

Provides serial signals for customer-specific extensions.



Pin assignment Serial

Pin	Function
1	GND
2	5 V
3	TxD RS-232
4	RxD RS-232
5	SCL (Software I ² C)
6	SDA (Software I ² C)

3 Scene Definition

The PCAN-MiniDisplay uses a so called scene for display of CAN data in graphical form.

3.1 General Description of an *.ins File

A scene is a collection of instruments, labels, fonts, etc. defined in a text file with the *.ins extension. Scenes furthermore include bitmap graphic files (*.bmp) and font files (*.fon).

The content of a scene definition file is divided in different sections each containing definition entries:

- └ [global]: common definitions for the scene
- └ [instrumentX]: used bitmaps
- └ [labelX]: text-based labels
- └ [variableX]: CAN variables that are used by labels, the plotter, and instruments
- └ [fontX]: fonts that are used by labels
- └ [plotterX]: line writer diagram

A reference to the keywords to be used in those sections is located in appendix section D.1 on page 38. An example file is shown below.

A definition file can contain **comments** that are lead in by double slashes (//). All characters in the line after a double slash are ignored as the *.ins file is interpreted by the PCAN-MiniDisplay.

During **load time**, the PCAN-MiniDisplay generates a binary version of a definition (*.inb). That one is loaded much faster on future

use, because all conversions for panel-internal use are already incorporated. This is the default behavior, but can be configured in the Global section.

Altering the definition of a scene can only be done in the text-based file.



Note: If the definition of a scene is altered, the previously generated binary file (*.inb) must be manually deleted on the memory card of the PCAN-MiniDisplay, so the loader sees that a new binary must be created from the text file. If you do not delete the binary file, your changes in the definition file will not have any effect.

3.2 Example of an *.ins File



Note: The text file (*.ins) must have an empty line at its end.

```
[global]
format=1
instruments=2
variables=1
labels=1
flashing_time=300
compress=0

[instrument1]
pictures=1
name="Background"
no_restore=1
0="Background_320_240.bmp", "", 0, 0, 0, 0

[instrument2]
pictures=2
name="turn_left"
no_restore=0
offset=0,0
var_name="clig"
0="empty_28_20.bmp", "", 0, 0, 0, 0
1="turn_l_28_20.bmp", "", 0, 0, 1, 1
```

```
[variable1]
name="oiltemperature"
canid=779           // ID in decimal notation
position=8,8
frametype=0
byteorder=0
scale=0.62745
offset=-10
vartype=0
datatype=1

[labell1]
name="Oil Temperature"
position=0,106
font_idx=3         // lucida_13_18
length=5
fmt_string="% 4d°" // Special treatment for degree character
                  // "°" (ASCII 127)
initval="----°"
fontcolor=200,200,0 // green
bgcolor=0,0,0      // black

sector=1
range=-10,124
fontcolor=200,200,0
bgcolor=0,0,0
flashing=0

sector=1
range=125,150
fontcolor=255,0,0
offcolor=127,0,0
bgcolor=0,0,0
flashing=1
```

3.3 Using Several Scenes

It is possible to use more than one scene on the PCAN-MiniDisplay. Scenes can be switched by using the digital inputs (e.g. with push buttons).

To achieve this, a list of scene definition files must be created in a scenes project file (*.inp). This list also defines which scene is used on startup.

A reference to the keywords to be used in those sections is located in appendix section D.2 on page 56. An example file is shown below.



Note: The text file (*.inp) must have an empty line at its end.

```
[general]
version=1

[scenes]
scenes=4
startscene=2
1="speedo0.ins"
2="speedo1.ins"
3="picture1.ins"
4="picture2.ins"
```

4 Steps to Operation

On power-on the PCAN-MiniDisplay looks for the internally saved startup options. A scene for display or the tracer for CAN recording can be started automatically.



Tip: At delivery, the PCAN-MiniDisplay is configured to start a scene called `Default.inp`. Therefore, the device can be deployed without the need of initial user interaction via push buttons.

This chapter describes the steps to put the PCAN-MiniDisplay to operation. Please go through each of the following sections.

4.1 Prerequisites

- └─ microSD memory card, max. 32 GByte
(512 MByte card is enclosed)
- └─ PC with SD card reader (including adapter for microSD card)
or
USB connection PC to PCAN-MiniDisplay (connected to J3)
- └─ Power supply 7 to 30 V DC (connected to J2)

4.2 Preparing the Memory Card

So that the device starts up properly, the memory card must contain a specific directory structure. This is present on delivery. You can add your own scenes to the directory structure.

▶ Do the following to prepare the memory card with your scenes:

1. Establish a USB connection between the PCAN-MiniDisplay and a PC in order to access the microSD memory card from the PC.
As an alternative, remove the card from the PCAN-MiniDisplay and insert it into a slot of a card reader attached to a PC.

The memory card appears as a separate mass storage device in your PC's operating system.

2. Copy one or several scenes that you have created previously (see 3 *Scene Definition* on page 12) into the following directory of the memory card: `/MiniDisplay/Scenes/`
Each scene must have its own subdirectory.

At delivery, the PCAN-MiniDisplay is configured to automatically show the following scene at power-on:
`/MiniDisplay/Scenes/Default/Default.inp`

3. Sign off the USB connection in the PC's operating system and disconnect the USB cable.
If prepared in a PC, remove the microSD memory card from it and insert it into the slot of the PCAN-MiniDisplay.

▶ If needed (e.g. on implementing a new card or if the directory structure is messed up), do the following to restore the directory structure on the card:

1. Establish a USB connection between the PCAN-MiniDisplay and a PC in order to access the microSD memory card from the PC.
As an alternative, remove the card from the PCAN-MiniDisplay and insert it into a slot of a card reader attached to a PC.

The memory card appears as a separate mass storage device in your PC's operating system.

2. With the operating system, format the memory card with the FAT32 file system.
3. From the provided DVD, copy the `MiniDisplay` directory including all subdirectories and files to the root directory of the memory card. On the DVD, the `MiniDisplay` directory is located under the following directory:
`/Tools/PCAN-MiniDisplay/`

For supplementary information, see Appendix C *Structure on the Memory Card* on page 36.

4. Sign off the USB connection in the PC's operating system and disconnect the USB cable.
If prepared in a PC, remove the microSD memory card from it and insert it into the slot of the PCAN-MiniDisplay.


4.3 Powering On the Device

The PCAN-MiniDisplay is powered on by applying a supply voltage in the range of 7 to 30 V DC to connector J2. The device starts up automatically. If not altered after delivery, the PCAN-MiniDisplay shows the scene with the name `Default.inp`.

If the supply voltage has been applied before and the device is off by using the corresponding menu entry, it can be started again by activating the Down ↓ input on connector J1.

For details about the connectors see chapter 2 on page 7.

4.4 Menus

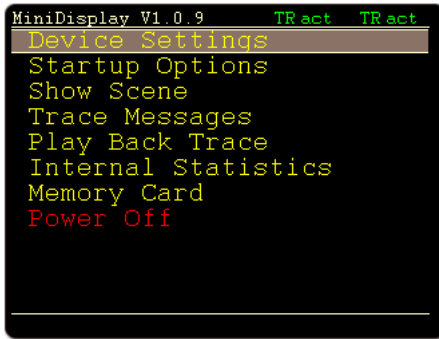

The PCAN-MiniDisplay provides a user interface with menus in order to change the setup of functions. The navigation is done via the digital inputs of connector J1 that can be equipped with push buttons, for example. See section 2.1 on page 7 for details about the connection.



Tip: The PCAN-MiniDisplay Case has the mentioned buttons built in. See Appendix E on page 60 for more information about this model.

Browsing through the menus and functions is done with the Up ↑ and Down ↓ buttons, a selected item is activated with the Enter ↵ button.




While displaying a scene, pressing the Enter ↵ button brings you back to the main menu.



Tip: The use of the menus is not needed for pure display of a scene, because basic settings can be defined in the definition file `Default.inp` which is automatically loaded with delivery settings. Thus, buttons can be omitted in that case.

4.4.1 Status Indication

While using the menus, icons on the upper right of the screen indicate the status of the CAN bus communication for the CAN channels 1 (High-speed CAN) and 2 (Single-wire CAN).

Icon	Meaning
	CAN traffic: T = Transmit, R = Receive Blinking: Outgoing/incoming CAN messages Green: Regular traffic Yellow, red: Faulty traffic
	Informs about the CAN controller status (active , passive , bus off). When entering bus-off state, due to high (transmission) error rate, no further CAN messages are transmitted or received. In this case, after fixing the bus problem (e.g. a wrong CAN bitrate), a power cycle (off and on) must be performed to reset the CAN controller.
	The CAN channel operates in listen-only mode. This is enabled in the device settings (see section 7.1.3 on page 29).

4.5 Setting the Startup Options



The main menu entry **Startup Options** offers the possibility to set up the behavior on power-on.


➡ Do the following to **display a scene** at startup:






 **Note:** At delivery, the PCAN-MiniDisplay is configured to start a scene called `Default.inp`.

1. Click **Show Scene**.
2. From the displayed directory structure, select a scene (`*.ins`) or a project (`*.inp`) that is to be shown at startup.

In the Startup menu, the selected file is indicated in the bottom status line.

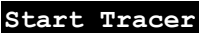3. Select the checkbox on the right and set the marker .
4. Click .

 Do the following to **start tracing** at startup:


1. To the right of , select the checkbox and set the marker .
2. At , enter the period of time for stopping the tracer if no CAN message is received. The  entry leaves the tracer running.
3. Click .

5 CAN Tracing


5.1 Recording CAN Traffic

➤ Menu item **Trace Messages**

With this function, the whole incoming CAN traffic including RTR frames and error frames is recorded to a trace file on the memory card of the PCAN-MiniDisplay. Also the timing is regarded.

 **Note:** CAN tracing is only applicable to CAN channel 1 (High-speed CAN).

Later, a trace file (file name: `trc00000.btr` with consecutive numbers) can be used for playback of the recorded CAN messages on the CAN bus (see following section 5.2 on page 23). As alternative, it is possible to convert the recording on a PC to another format for further use and for evaluation (see section 5.3 on page 24).

 **Note:** A filter may be applied to incoming CAN traffic only letting through CAN messages with specific IDs. See chapter 6 on page 27 for details about filtering.

➤ Do the following to record:

1. Make sure that no USB connection is present between the PCAN-MiniDisplay and a PC.
2. Click on **Start**.

The recording is done to the indicated **File**.


3. End the recording with **Stop tracing**.


Indication	Meaning
File	Name of the trace file for the current recording. The file name (<code>trc00000.btr</code>) is automatically put together with a consecutive number.
CAN queue level in %	Current and maximum fill level of the receive queue (latter in parentheses). If the queue has reached a fill level of 100 percent, most likely some incoming CAN messages were not recorded.
CAN messages total	Number of CAN messages that are already recorded to the trace file
File size	Current size of the trace file in kByte and already used storage space in percent of the maximum possible file size. During recording, the trace file grows in 512-byte blocks, each containing 25 CAN messages. Thus, 1 MByte can hold 51200 CAN messages.

5.2 Playing Back Recorded CAN Traffic

➤ Menu item **Play Back Trace**

The PCAN-MiniDisplay can play back CAN messages from a binary trace file (*.btr) onto the connected CAN bus. The timing of the CAN messages, as it occurred originally during recording of the trace file, is maintained.

 **Note:** CAN tracing is only applicable to CAN channel 1 (High-speed CAN).

 Do the following to play back a trace:

1. Make sure that no USB connection is present between the PCAN-MiniDisplay and a PC.
2. In the main menu, select **Play Back Trace**.
3. Use **Select file** and select the trace file (*.btr) for playback from the list.

4. If you don't want the trace to be played back repeatedly, modify the **Loop mode** from **Infinite** to the desired number of cycles (**1** to **9**).
5. If you use a trace file that contains CAN messages from several CAN channels (e.g. an imported file from another device), select the **Channel** number to be played back from the trace.
6. Click on **Play** to start the playback.
7. You can **Pause playback**. Now you have the following options:


Function	Executed action
Exit	Ends the playback.
Restart	Restarts the playback from the beginning of the trace file.
Reset	Resets the CAN controller. Useful after fault maintenance on the CAN bus.
Continue	Continues the playback from the point where the interruption occurred before.

5.3 Using the Recorded CAN Traffic on the PC

The recorded CAN traffic can be read by a PC via a USB connection from the memory card of the PCAN-MiniDisplay. It is stored in binary-coded trace files `trc00000.btr` (file name with consecutive numbers) in the following directory:

`/MiniDisplay/Traces/`

For further use you must convert the data in an appropriate format. The Windows program PEAK-Converter is supplied on the DVD and on the memory card of PCAN-MiniDisplay for this purpose.

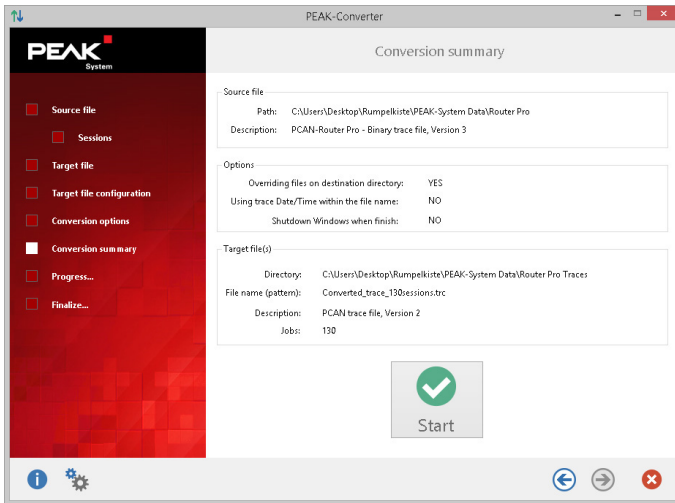

User interface of the PEAK-Converter

Possible conversion targets:

Target format	File extension	Explanation/usage
PCAN-Trace	.trc	Text-based trace format by PEAK-System; viewing of the data in the PCAN-Explorer or playback of the CAN messages with the PCAN-Trace program. Tip: In connection with the trace files of the PCAN-MiniDisplay, we recommend using the format version 1.1., because the recordings of the PCAN-MiniDisplay only have one channel and because this format version is usable in all programs of PEAK-System.
Vector ASC Trace	.asc	Text-based trace format by the Vector company that also can be used by some third-party programs.
Character Separated Values (CSV)	.csv	Common, text-based format for import into a spreadsheet (semicolon as separator).

- ▶ For further use of the trace data proceed as follows:
1. Connect the PCAN-MiniDisplay to the PC with the provided USB cable. The PCAN-MiniDisplay does not need to be powered on.
 2. Under Windows, start the `PEAK-Converter.exe` program from the memory card of the PCAN-MiniDisplay which resides in the `/MiniDisplay/Tools` directory.
 3. Select a trace file (file name: `trc00000.btr` with consecutive numbers) as source. You can find the trace files in the following directory:
`/MiniDisplay/Traces/`
 4. Specify a destination file and select the desired target format (see above).

6 Filtering the CAN Traffic

Usually all incoming CAN messages are used for a scene or a trace. However, the CAN traffic can be filtered by a list of CAN IDs. This function is primarily intended for use with tracing.

A filter list is defined in a text file with the `.flt` extension. All mentioned IDs pass the filter, others don't. The filter file is saved on the memory card and loaded in the device settings of the PCAN-MiniDisplay.

▶ Do the following to apply a CAN ID filter:

1. With a text editor, create a filter file (`*.flt`) listing the IDs that can pass the filter. The format of the file is described in the appendix section D.3 on page 57.



Tip: On delivery, the PCAN-MiniDisplay is set to use a filter file named `Default.flt`.

2. Copy the filter file to the memory card of the PCAN-MiniDisplay into the `MiniDisplay/Filters/` directory. Use either a USB connection from your PC to the device (don't forget to disconnect after copying) or use a card reader of your PC.
3. If you have named your filter file `Default.flt` and use the device settings from delivery, no further steps are needed. Else, go on with the next step.
4. On the PCAN-MiniDisplay, navigate to **Device Settings** and there select either **Ch.1 Filter** (filter for High-speed CAN channel) or **Ch.2 Filter** (filter for Single-wire CAN channel).
5. Select the previously created filter file (`*.flt`).
6. Use **OK** or **Save&OK** to apply the changed settings.

7 Menu Reference for Settings and Maintenance

7.1 Device Settings

Here you specify the settings for the connection to a CAN bus and those for the use of the device.

When you have changed settings, save them permanently with **Save&OK**. If you want to use the changed settings only temporarily (during the current session), click **OK**. A subsequent session (after an off-on cycle) uses the initial settings again.

7.1.1 Ch.1/2 Detect CAN bitrate

If the bitrate of the CAN bus connected to the PCAN-MiniDisplay is unknown, the device can automatically detect it. This requires data traffic on the CAN bus.

Bitrates from the following series are recognized (kbit/s): 1000; 800; 500; 250; 200; 125; 100; 95.2; 83.3; 50.0; 47.6; 33.3; 20.0; 10.0

7.1.2 Ch.1/2 CAN bitrate

Selection from a series of CAN bitrates, in order to correspond to the one on the connected CAN bus.

Besides the fixed bitrate values, the list contains eight user-defined bitrates. They are managed in the **User CAN bitrates** setting.

If using Single-wire CAN channel (**Ch.2**), higher bitrates as the CAN standard provides (max. 100 kbit/s) can be selected. However, this leads to a warning and a non-working CAN communication.

7.1.3 Ch.1/2 Listen-only mode

If you want the device to not affect the traffic on the CAN bus, i.e. use it as pure monitoring tool, the Listen-only mode must be activated (**On**). The device will neither acknowledge nor transmit CAN (error) frames.

7.1.4 Ch.1/2 Filter

CAN ID filtering can be applied independently to each CAN channel by selecting a filter file (*.flt) from the memory card. The selected file is shown beside the menu entry and applied to the corresponding CAN channel.

To **disable** CAN ID filtering, go on **Exit** in the file selection screen. **None** is then shown beside the menu entry.

For more information about filtering, see chapter 6 on page 27.

7.1.5 Ch.2 Transceiver mode

The Single-wire CAN transceiver of CAN channel 2 can be run in one of three modes:

- **Normal:** up to 33.3 kbit/s, with waveshaping.
- **Wake-up:** like normal mode, but transmitting with increased signal levels, results in activation of all sleeping bus nodes. The PCAN-MiniDisplay itself is not capable of the sleep mode.
- **High-speed:** up to 83.3 kbit/s, without waveshaping, used in special cases (e.g. transfer of software or diagnostic data), not suitable for regular operation.

7.1.6 User CAN bitrates

To adapt to specific conditions, experts may directly access the bus timing registers (BTR) of the integrated CAN controller. The register

settings are analog to those of a SJA1000 CAN controller operating at 16 MHz clock frequency.

Eight user-defined entries can be edited. Each entry contains a 2-byte value (4 hexadecimal digits) for the bus timing registers and an arbitrary name. User-defined bitrates appear later with their name in the **CAN bitrate** list below the fixed bitrate values.



Tip: For easier determination of the register values, the provided DVD contains a Windows program (`/Tools/BRCAN.exe`).

For each entry the table for editing shows the parameters that result from the given register values: the bitrate, the sample point (SP), and the synchronization jump width (SJW).

To reset an entry (Name = UserX, Bitrate = undef), set the BTR value to 0000.

7.1.7 Beeper

The PCAN-MiniDisplay can give acoustic feedback to several events. Among other, a change of the CAN bus status is signaled. The **Off** setting disables the acoustic signal function of the device.

7.1.8 Show startscreen

After power-on the PCAN-MiniDisplay shows a bitmap file for a few seconds as startscreen. You can switch off this behavior here.

It is possible to replace the bitmap file with an own one.

Properties of the startscreen

File name	Intro.bmp
Storage path on the memory card	/MiniDisplay/
Format	Windows bitmap
Resolution	320 x 240 pixels
Color depth	24 bits

7.1.9 Date & time

With **Set** the device date and time are adjusted. Date and time are used when saving files to the memory card.


7.1.10 Reset file index

File names of traces to be saved get a number coming from a counter. The current count is indicated in parentheses and can be set to 0 by clicking **Reset**.

7.2 Internal statistics

The page gives an overview about the device's internals. The specifications are usually used for support purposes.

Furthermore, hardware functions are available for maintenance of the device. They are described briefly in the following.

 **Important note:** Misapplication of these functions can lead to the unavailability of the device. Use the functions only on request of PEAK-System's technical support.

Update Firmware

Firmware updates (*.bin) can be placed in the /MiniDisplay/Firmware/ directory on the memory card. With the update function a file is selected. Thereupon the update procedure is starting.

Factory Defaults

All settings are reset to their default states defined by the current firmware.

Bootloader

Starts the boot loader for a firmware update via CAN. The screen also shows the serial number of the PCAN-MiniDisplay.

7.3 Memory Card

The PCAN-MiniDisplay has functions to show directories and bitmaps from the memory card.



Note: The PCAN-MiniDisplay cannot access the memory card as long as a USB connection to a PC is established.

Show Directory

Shows the directories on the memory card in order to see which files exist.

View Bitmap

Only bitmap files (*.bmp) are shown in the directories (e.g. from instruments).

Click on a bitmap to view it; click again to leave the bitmap view.

8 Technical specifications

Power supply

Supply voltage	7 - 30 V DC
Current consumption	135 mA (at 12 V) typical

Display

Type	a-Si TFT active matrix
Resolution	320 x 240 pixels
Active area	57.6 x 43.2 mm (W x L)

Memory card

Type	microSD
Max. capacity	32 GByte
File system	FAT; FAT32 if capacity > 2 GByte
Name of the USB device	PCAN-MiniDisplay

CAN busses

CAN 1	High-speed CAN (ISO 11898-2), not terminated
CAN 2	Single-wire CAN (SAE J2411)

Measures

Size	69.5 x 49.5 mm (W x L) See also dimension drawings Appendix B on page 35
Weight	50 g

Environment

Operating temperature	-20 - +70 °C (-4 - +158 °F)
Temperature for storage and transport	-30 - +80 °C (-22 - +176 °F)
Relative humidity	15 - 90 %, not condensing
EMC	EN 55024:2003-10 EN 55022:2007-04 EC directive 2004/108/EG

Appendix A CE Certificate

PCAN-MiniDisplay IPEH-002262 – EC Declaration of Conformity
PEAK-System Technik GmbH



Notes on the CE Symbol

The following applies to the "PCAN-MiniDisplay" product with the item number(s) IPEH-002262.

EC Directive This product fulfills the requirements of EU EMC Directive 2004/108/EC (Electromagnetic Compatibility) and is designed for the following fields of application as for the CE marking:

Electromagnetic Immunity/Emission
DIN EN 61326-1, publication date 2013-07
Electrical equipment for measurement, control and laboratory use – EMC requirements – Part 1: General requirements (IEC 61326-1:2012);
German version EN 61326-1:2013

Declarations of Conformity In accordance with the above mentioned EU directives, the EC declarations of conformity and the associated documentation are held at the disposal of the competent authorities at the address below:


PEAK-System Technik GmbH
Mr. Wilhelm
Otto-Roehm-Strasse 69
64293 Darmstadt
Germany

Phone: +49 (0)6151 8173-20
Fax: +49 (0)6151 8173-29
E-mail: info@peak-system.com

A handwritten signature in black ink, appearing to read "Uwe W. St.", written in a cursive style.

Signed this 26th day of January 2015

Appendix B Dimension Drawing

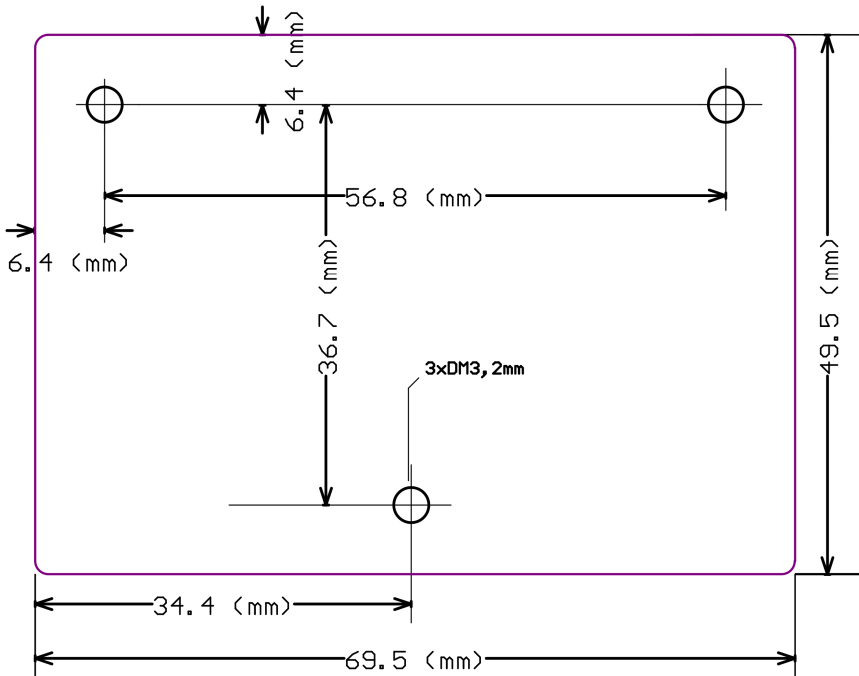

The figure does not show the original size.

Appendix C Structure on the Memory Card

The following table shows the structure of the MiniDisplay directory on the memory card and explains the functions.

Directory - file	Function
/MiniDisplay/	Fixed storage branch for files that are accessed by the PCAN-MiniDisplay or that are related to the device.
Intro.bmp	Screen at startup of the device (320 x 240 pixels).
Documentation/	Documentation about the PCAN-MiniDisplay, e.g. this manual.
Filters/	A possible place to keep all filter files (*.flt) together.
Firmware/*.bin	File(s) for updating the firmware.
Help/*.dhp	Files with the device help
Resources	Some bitmaps and fonts as basis for creating own scenes. Furthermore, if you own the PCAN-Explorer for Windows, you can use the provided example project to generate some data for the PCAN-MiniDisplay scene examples.
Scenes/<scene name>/	A subdirectory with the scene name for each scene. At delivery of the device, the Default scene is set to automatically be shown at startup.
*.ins	Scene definition file (see 3 <i>Scene Definition</i> on page 12).
.inb	Binary counterpart to a scene (.ins) for faster loading (see 3 <i>Scene Definition</i> on page 12).
*.inp	List of scenes for use of several scenes that are switched by digital inputs.
*.fon	Bitmap font to be used in a scene.
*.bmp	Bitmap to be used in an instrument.

Directory - file	Function
Tools/	Software tools to be used with the PCAN-MiniDisplay (the following only lists the executables).
PEAK-Converter.exe	Windows program PEAK-Converter for converting of a recorded binary trace file (*.btr) to another format.
Traces/	Fixed subdirectory for traces that are recorded by the PCAN-MiniDisplay.
trc00000.btr	Binary-coded trace data from the recording function, usable for playback or otherwise after conversion on the PC; consecutive numbering by the internal counter.

Appendix D Definition Files Reference

The keywords of the following definition files are described in this appendix:

- ↳ D.1 *Scene Definition (*.ins)* below
- ↳ D.2 *Scenes Project File (*.inp)* on page 56
- ↳ D.3 *CAN ID Filters (*.flt)* on page 57

D.1 Scene Definition (*.ins)

The following describe all available keywords for a scene definition. They are written into a *.ins file and structured in sections. Section names are indicated by square brackets, e.g. [global]. Entries each are put into a line containing a keyword with an equal character (no spaces!) and the assigned value.



Note: The text file (*.ins) must have an empty line at its end.

D.1.1 [global] Section

format

Determines the file format version. At this time, only version 1 is existing and valid.

```
format=1
```

bitrate0 bitrate1

Determines the bitrate of the High-speed CAN channel (bitrate0) and the Single-wire CAN channel (bitrate1). If these keywords are

omitted, the bitrates defined in the **Device Settings** menu are valid (**BusOff** at delivery). If a scene with a defined bitrate is closed, that bitrate stays active.



Note: During the device's startup, the bitrate defined in the **Device Settings** menu is active for a short time before the bitrate for the scene is enabled.

Possible bitrates (in kbit/s): 1000, 800, 500, 250, 200, 100, 95, 83, 50, 47, 33, 20, 10

```
bitrate0=250  
bitrate1=20
```

instruments

Count of instruments in this scene, range: 1 ... 32

```
instruments=4
```

labels

Count of used labels, range: 1 ... 64

```
labels=5
```

variables

Count of used variables, range: 1 ... 96

```
variables=7
```

plotter

Count of used plotters, range: 1 ... 4

```
plotter=1
```

fonts

Count of additional fonts that are specified for this project, range: 1 ... 27

There are 3 internal fonts available. To use the internal fonts, use `font_idx` instead of a font name. For more information, see D.1.3 *[fontX] Section* on page 44.

```
fonts=2
```

flashing_time

Flashing frequency for instruments with the “flashing” keyword, range 50 ... 2500, default 500. The value is the time in milliseconds for the “on-time” and the “off-time”.

```
flashing_time=250 // 250 ms on, 250 ms off, resulting in 2 Hz
```

compress

Determines if the compression function is called while the scene is loading.

Value	Description
0	When the text-based configuration file is loaded (*.ins), a compressed version is not generated.
1	When the text-based configuration file is loaded, a binary version is generated (*.inb). If an inb file for this scene already exists, this is loaded instead of the text-based configuration.



Note: If the definition of a scene is altered, the previously generated binary file (*.inb) must be deleted on the memory card of the PCAN-MiniDisplay, so the loader sees that a new binary must be created from the text file. If you do not delete the binary file, your changes in the definition file will not have any effect.

D.1.2 [instrumentX] Section

Each instrument is indicated by the [instrumentX] section delimiter, where X is a consecutive number, starting at 1. The number of instruments is defined by the "instruments" keyword in the [global] section.

```
[instrument1]
```

pictures

Count of pictures per instrument, range: 1 ... 99

```
pictures=4
```

name

Name of the instrument (max. 23 characters). Only for documentation. The string must be written with quotation marks.

```
name="turn_left"
```

var_name

Name of the variable that controls the instrument. The string must be written with quotation marks.

```
var_name="speed"
```

initval

Determines the initial value of the instrument until the first real CAN data for this instrument is received.

```
initval=267
```

no_restore

Determines the handling of the background while drawing.

Value	Description
0 (default)	Before the instrument sequence will be drawn, the background is saved. Then the background could be restored before a new instrument sequence is drawn. This can be useful if the sequences have different sizes.
1	The picture sequence will be drawn without saving the background – makes only sense if all pictures of the instrument have the same size and are drawn at the same position. Used for optimization of CPU load.

```
no_restore=1
```

restore

Same as no_restore above, but with inverted logic.

transparency

Defines whether transparency areas must be considered while drawing.

Value	Description
0	A sequence will be drawn not regarding the background. This is used when the background is part of the sequence.
1	<p>While loading the *.ins file, every single picture is recalculated with the background. Therefore, instrument0 must be defined with a global background picture as the one and only item with the keyword "no_restore=1".</p> <p>There are 2 options available for the recalculation:</p> <ul style="list-style-type: none"> a) The picture has a transparency color (RGB value 255,0,255). b) The picture has an alpha channel. The alpha channel is defined by a separate grayscale bitmap. The grayscale values define the transparency of the foreground picture. <ul style="list-style-type: none"> RGB value 255,255,255: foreground picture is available to 100 %, no part of the background can be seen. RGB value 127,127,127: foreground is available to 50 % and 50 % of the background can be seen. RGB value 0,0,0: no foreground picture is available, 100 % of the background picture can be seen.

```
transparency=1
```

offset

All pictures from the picture list of this instrument will be moved in x and y direction (offset).

1st parameter: x offset (range: 0 ... 319)

2nd parameter: y offset (range: 0 ... 239)

```
offset=100,50
```

background

Defines an individual background picture for this instrument.

Value	Description
0	No background for this instrument.
1	The instrument has an individual background picture which will be used if transparency=1. While loading the *.ins file, the pictures is calculated in the background. By default (background=0) the instrument0 is the global background picture. Nevertheless, for each instrument an individual background picture may be defined. The individual background picture <u>must</u> be the last picture of the picture list. The background picture does not have an alpha channel, so it replaces the global background picture from instrument0. Typically, an individual background pictures has the same size as the single pictures of the instrument.

```
background=1
```

update_rate

Update rate of this instrument in milliseconds. If not defined, the default update rate of 50 ms is used. An instrument may be updated with each new incoming CAN message. However, it could happen that the current value is not read because of a too high update rate. This keyword limits the update rate to ensure that the update of the instrument stays reliable.

```
update_rate=500 // Redraws the instrument
                // two times a second at most
```

Picture List

The “var_name” keyword defines a CAN signal. If this is received, the value will be decoded. The picture will be shown which is assigned to the decoded CAN signal.

Format of a picture list entry:

```
<index>=<pic-name>,<transparency-name>,<xpos>,<ypos>,<low-val>,<high-val>
```

Part of picture list entry	Description
<index>	Number of the picture. Must be in the range {0 ... pictures - 1}.
<pic-name>	File name of the picture without path. The picture must be stored in the same directory where the *.ins file is stored.
<transparency-name>	File name of the grayscale picture (alpha channel). If this picture does not exist, an empty string "" must be provided. File name without path (like <pic-name>).
<xpos>	x position {0 ... 319}. Will be added to the parameter x-Offset.
<ypos>	y position {0 ... 239}. Will be added to the parameter y-Offset.
<low-val>	Lowest value of data range.
<high-val>	Highest value of data range.

```
0="arrow_left_off.bmp", "", 20, 100, 0, 3
  // Show picture "arrow_left_off.bmp"
  // at position x=20, y=100
  // if the variable is in the range of 0 to 3
1="arrow_left_on.bmp", "", 20, 100, 4, 7
  // Show picture "arrow_left_on.bmp"
  // at position x=20, y=100
  // if the variable is in the range of 4 to 7
```

D.1.3 [fontX] Section

Each used font is indicated by the [fontX] section delimiter, where X is a consecutive number, starting at 1. The number of fonts is defined by the “fonts” keyword in the [global] section.

```
[font1]
```

font

Filename of the bitmap font. The string must be written with quotation marks. Extension of a font file name is *.fon.

```
font="arial_20.fon"
```

Currently the following fonts are available on the PCAN-MiniDisplay:

- └─ lucida_13_18.fon
- └─ century_13_16.fon
- └─ century_16_18_numbers.fon
(only numbers from 0 to 9)
- └─ Palatino_Linotype_12_14.fon
- └─ Palatino_Linotype_16_20.fon
- └─ Palatino_Linotype_24_28.fon
- └─ Palatino_Linotype_24_32_numbers.fon
(only numbers from 0 to 9)
- └─ Palatino_Linotype_24_32_numbers_bold.fon
(only numbers from 0 to 9)
- └─ Courier_13_18_bold.fon
(bold characters)
- └─ gear_40_49.fon
(numbers from 0 to 7 are displayed as N, 1, 2, 3, 4, 5, 6, R in a size of 40 x 49 pixels)

name

Name of the font, as a reference for an element that uses this font.

```
name="arial_20"
```

type

Type of the font. Currently only single-colored fonts with fixed size are available (type 0).

```
type=0
```

D.1.4 [variableX] Section

Each variable is indicated by the [variableX] section delimiter, where X is a consecutive number, starting at 1. The number of variables is defined by the “variables” keyword in the [global] section.

```
[variable1]
```

name

Name of the variable as a reference to be used with an instrument or a label (max. 23 characters).

```
name="Speed"
```

channel

The channel to be used (count starts at 0). The number of supported channels depends on source type (see “source” keyword below).

Source type	Value	Description
CAN	0	High-speed CAN
	1	Single-wire CAN
AIN	0	Internal NTC
	1	External input
	2	External input
DIN	0	External input (e.g. switch)

```
channel=0 // Use first CAN channel
```

source

Type of source.

Available source types: CAN, AIN, DIN

```
source=CAN
```

canid

11-bit or 29-bit integer value (decimal or hex).

```
canid=256
canid=0x100
```

position

1st parameter: start bit position of the signal, range: 0 ... 63

Note: The bits are counted differently in Intel and Motorola format.

2nd parameter: bit length of the signal, range: 1 ... 32

```
position=0,8 // First byte of the CAN data field
position=8,16 // Bytes 2 and 3 of the CAN data field
```

frametype

Defines the CAN frame type as Standard Frame or Extended Frame.

Value	Description
0	Standard Frame (11-bit CAN ID)
1	Extended Frame (29-bit CAN ID)

```
frametype=0 // Standard Frame with 11-bit ID
```

byteorder

Defines the byte order of the CAN data.

Value	Description
0	Intel ("Little Endian")
1	Motorola ("Big Endian")

```
byteorder=0 // Intel format
```

muxtype

(Not yet supported)

muxval

(Not yet supported)

scale

Scale for an incoming signal value. The value will be stored as a float (32-bit).

```
scale=2.5
```

offset

Offset for an incoming signal value. The value will be stored as a float (32-bit).

```
offset=5.2
```

maxraw

Maximum raw value (value from CAN bus before scale/offset calculation) with internal data type float 32-bit. Any larger value than this is limited to this value. Use either maxraw OR maxval.

maxval

Maximum physical value (value from CAN bus after scale/offset calculation) with internal data type float 32-bit. Any larger value is limited to this value. Use either maxval OR maxraw.

minraw

Minimum raw value (value from CAN bus before scale/offset calculation) with internal data type float 32-bit. Any smaller value than this is raised to this value. Use either minraw OR minval.

minval

Minimum physical value (value from CAN bus after scale/offset calculation) with internal data type float 32-bit. Any smaller value is raised to this value. Use either minval OR minraw.

vartype

Datatype of variable as extracted from the raw CAN data.

Value	Description
0	unsigned, integer
1	signed, integer
2	float (32 bits)

```
vartype=1
```

A signed integer variable with an assumed bit length of 8 has a value range from -128 to +127.

datatype

After reading a value from the raw CAN data and further calculation with scale/offset, the resulting value is stored according to this keyword.

Value	Description
0	unsigned, integer
1	signed, integer
2	float (32 bits)

```
datatype=2
```

The value is internally stored as a float value. This is useful if the value is to be displayed as a fractional number (see labels).

Example of a variable

```
[variable1]
name="odometer"
canid=0x250    // CAN ID
```

```

position=8,16 // Start bit and bit length
frametype=0 // 0: 11-bit, 1: 29-bit
byteorder=1 // 0: Intel, 1: Motorola
scale=1.5 // Value=raw * scale + offset
offset=0 // Always float type
vartype=0 // Representation of CAN data:
// 0: unsigned, 1: signed, 2: float
minval=3 // Lower limit is 3
maxval=99999 // Any value > 99999 is set to 99999
datatype=1 // Representation of result:
// 0: unsigned, 1: signed, 2: float

```

D.1.1.5 [labelX] Section

Each text label is indicated by the [labelX] section delimiter, where X is a consecutive number, starting at 1. The number of labels is defined by the "labels" keyword in the [global] section.

```
[label1]
```

name

Name of label (max. 15 characters), for documentation.

```
name="odometer"
```

position

X and Y position of label.

1st parameter: X position (horizontal), range: 0 - 31

2nd parameter: Y position (vertical), range: 0 - 239

```
position=10,30
```

font_name

Name of font (max. 63 characters), reference to a font from section fonts.

```
font_name="Palatino_Linotype_12_14.fon"
```

This selects a font with a width of 12 pixels and height of 14 pixels. See list of available fonts.

font_idx

Index of an embedded font.

Value	Description
0	"Courier_8_12", width=8, height=12
1	"Courier_10_14", width=10, height=14
2	"Courier_12_18", width=12, height=18

```
font_idx=2
```

length

Length of the output string. Number of characters, max. 39 characters.

```
length=5
```

fmt_string

Format string to convert a value from a variable into the output string. Format usage like printf function known from various programming languages.

```
fmt_string="%02d km"
```

var_name

Reference to a variable from section variables (max. 23 characters).

```
var_name="speed"
```

initval

Initial value that is output after startup before a relevant variable is received (max. 39 characters).

```
initval="-----"
```

fontcolor

Defines the color of the font in red, green, blue.

```
fontcolor=255,255,255 // white
```

bgcolor

Defines the color of the background in red, green, blue.

```
bgcolor=255,0,0 // red
```

update_rate

Defines the update rate of a label in milliseconds. Label is not redrawn earlier than this, independent of the reception of a relevant variable.

```
update_rate=100 // Redraw label not faster than every 100 ms
update_rate=0 // Updates label as fast as possible
// (each time the variable is received)
```

sector

The numeric range of a variable can be divided up to 5 sectors. For each sector a different font color and background color can be defined. Each sector can have the “flashing” keyword set to 1 or 0. A sector can be enabled (1) or disabled (0).

```
sector=1 // sector enabled
range=0,10
fontcolor=255,0,0 // bright red
offcolor=127,0,0 // light red
bgcolor=0,0,0 // black
flashing=1

sector=1 // sector enabled
range=1,244
fontcolor=0,255,0 // bright green
bgcolor=0,0,0 // black
flashing=0 // no flashing

sector=1 // sector enabled
fontcolor=255,0,0 // bright red
offcolor=127,0,0 // light red
```

```
bgcolor=0,0,0    // black
flashing=1
```

An 8-bit unsigned variable has a value range of 0 to 255. When the value is within 0 to 10, the displayed value is shown in red and flashing. In the range of 11 to 245 is displayed in green. In the range of 245 to 255 it is displayed in red and flashing.

range

A sector is defined for a certain range.

```
range=20,50
```

This sector is valid if the variable is in the range of 20 to 50 (20 and 50 included!).

offcolor

Each sector can have the “flashing” keyword. In case the sector is active and the label is flashing, the color toggles between “fontcolor” and “offcolor”.

```
offcolor=127,0,0 // middle red
```

Example of a Label

```
[labell]
name="odometer"    // Name of label for reference
position=10,30     // x-pos,y-pos in pixels
                  // 0,0 is top left corner
//font_name=""    // Use either font_name OR font_idx
font_idx=2        // Use integrated font 2
length=8         // Number of characters of the label
fmt_string="%05d km" // Format string according to printf()
var_name="odomtr" // Reference to variable
startval="---- km" // Initial value that will be displayed
fontcolor=0,255,0 // RGB value (bright green)
bgcolor=127,0,0   // RGB value (mid red)

sector=1         // New sector, 1: enabled
range=0,10      // Applicable for values within 0 to 10
fontcolor=0,255,0 // Font color if value in this range
bgcolor=0,0,0   // Background color for this range
flashing=0
```

```
sector=1
range=1,20
fontcolor=255,0,0
offcolor=127,0,0
bgcolor=0,0,0
flashing=1
```

Once the keyword “sector” is used, the parameters for “fontcolor” and “bgcolor” are assigned to this sector.

D.1.6 [plotterX] Section

Each plotter is indicated by the [plotterX] section delimiter, where X is a consecutive number, starting at 1. The number of plotters is defined by the “plotter” keyword in the [global] section.

name

Name of the plotter (max. 15 characters), for reference only.

```
name="Vehicle Speed"
```

position

X and Y position of plotter.

```
position=100,50
```

size

Dimension of the plotter in pixels.

1st parameter: width

2nd parameter: height

```
size=100,50
```

plotcolor

Color of plot line in RGB.

```
plotcolor=255,0,0 // Color is 100 % red
```

```
plotcolor=127,127,127 // Color is mid gray
```

bgcolor

Background color for the area of the plotter in RGB.

```
bgcolor=255,255,255 // white background
```

enable

Enables or disables this plotter.

```
enable=1
```

channels

Number of channels for this plotter diagram. Up to 4 channels can be displayed in a plotter. The channel indexes are used to specify name, variable, etc.

```
channels=2
```

timespan

Time in milliseconds that the x-axis should represent.

```
timespan=5000 // 5 s to draw the complete diagram
```

var_nameX

Name of the data source (max. 23 characters). X can be 1, 2, 3 or 4 for up to 4 variables in a plotter diagram. See "channels" keyword.

```
var_name1=speed  
var_name2=acceleration
```

yminX

Minimum value of the vertical axis. A value smaller than this is limited to this minimum.

```
ymin1=10
```

ymaxX

Maximum value of the vertical axis. A value greater than this is limited to this maximum.

```
ymax2=250
```

D.2 Scenes Project File (*.inp)



Note: The text file (*.inp) must have an empty line at its end.

D.2.1 [global] Section

version

Version format. Currently only 1.

```
version=1
```

D.2.2 [scenes] Section

scenes

Count of used scenes.

```
scenes=4
```

startscene

This scene will be used after startup as the default scene, default: 1.

```
startscene=2
```

List of Scenes

Format of a scenes list entry:

<index>=<filename>

The scenes are numbered consecutively, starting with 1. As parameter, the file name of the scene must be indicated. If a scene is defined with the keyword parameter "compress=1" and was already loaded before, the compressed version will be used. This helps to decrease the loading time.

```
[scenes]
scenes=4
startscene=2
1="speedo0.ins"
2="speedo1.ins"
3="picture1.ins"
4="picture2.ins"
```

D.3 CAN ID Filters (*.flt)

The use of a CAN ID filter (*.flt file) is determined in the **Device Settings** menu of the PCAN-MiniDisplay. CAN IDs and ID ranges that are listed in a filter file can pass the filter, others don't.

D.3.1 Format Description Filter File

- A .flt text file has several sections that are each introduced by the section name in square brackets.
- Depending on the section, it can contain keywords, CAN IDs, or CAN ID ranges.
- A CAN ID is indicated by a decimal or a hexadecimal value (latter with prefix 0x).
- For performance reasons, it is recommended to list CAN IDs in rising order.
- A comment can be inserted starting with a double slash.

Section/Keyword	Description	Example entries
[global]	This section is obligatory and must contain the following two keywords.	
version	Version format. Currently only 1 is valid.	version=1
enable	Enables the filter. Currently only 1 is valid.	enable=1
[single_11bit]	Defines 11-bit CAN IDs that can pass the filter.	0x100 1023
[range_11bit]	Defines 11-bit CAN ID ranges that can pass the filter.	4-13 0x200-0x340 // Full 11-bit range: 0x000-0x7ff
[single_29bit]	Defines 29-bit CAN IDs that can pass the filter.	0x123 0x11111 125000
[range_29bit]	Defines 29-bit CAN ID ranges that can pass the filter.	500-550 0x9000-0x10000 0x1F80000-0x1FA0000 // Full 29-bit range: 0x0000000-0x1FFFFFFF

D.3.2 Example Filter File

```
[global]
version=1
enable=1

// This is a comment
[single_11bit]
0x100
1023 // = 0x3FF - Another comment
0x5AB

[range_11bit]
4-13
0x200-0x340
0x7f0-0x7fe

[single_29bit]
0x123
0x11111
```

```
125000 // = 0x1E848
```

```
[range_29bit]
```

```
500-550
```

```
0x9000-0x10000
```

```
0x1F80000-0x1FA0000
```

Appendix E Model with Casing

This section describes the specific features of the model with casing and push buttons (IPEH-002262-KSM01).

This product model provides an environment to facilitate the development of configurations for the PCAN-MiniDisplay.



Model with casing and push buttons

E.1 Scope of Supply

- PCAN-MiniDisplay in plastic casing with three push buttons
- 2 spring terminal blocks (10-pole, 4-pole)
- microSD memory card (512 MByte)
- This user manual in PDF format

E.2 Push Buttons

The three push buttons Up ↑, Down ↓, and Enter ↵ are device-internally connected to J1 of the PCAN-MiniDisplay (see 2.1 on page 7 for details). The use depends on the current mode of the device.

Current Mode	Up ↑	Down ↓	Enter ↵
Scene display	Switch to the next scene if multiple scenes are defined		Leave the scene display and show the main menu
Menus	Skip to previous or next entry of a menu or of a list		Activate the selected entry
Off (supply voltage applied)	No function	Start device	No function

Note that the digital inputs of J1 are also available on the 4-pole outlet.

E.3 Connectors

The model with casing provides three connectors on its back side:

- Mini USB socket
- 4-pole connector for mating spring terminal block (J1 internally)

Pin	Function
1	Din1: Down
2	Din2: Up
3	Din3: Enter
4	GND



- 10-pole connector for mating spring terminal block (J2 internally)

Pin	Function
1	Vb (7 - 30 V DC)
2	GND
3	Dout1
4	Din4
5	Ain1
6	Ain2
7	not connected or CAN2-RxD ²
8	CAN2_SW or CAN2-TxD ²
9	CAN1_L
10	CAN1_H



E.4 miniSD Card Slot


The miniSD card slot is accessible by opening the casing.

▶ Do the following to access the miniSD card slot:

1. From the bottom of the casing, cautiously remove the four plastic caps.
2. Remove the four screws from the wholes that were covered by the caps.
3. Remove the top of the plastic casing (containing the window).

The miniSD card slot is positioned below the display circuit board, near the single button.

² TTL signal for optional external CAN transceiver

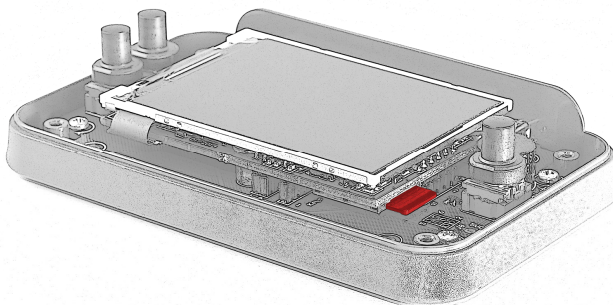

Position of the microSD card slot

4. To remove a microSD card, slightly push it in until the spring mechanism is released (click sound).
5. When inserting a microSD card, push it in until the spring mechanism locks (click sound).
6. Follow the first three steps in reversed order to reassemble the casing.