



**SD DVB-T  
MPEG-4 RECEIVER  
ReDi 50A**




**Quick User Manual**  
**to begin immediately watching digital television**

**Contains:**

System Connections,  
Getting started for the first time & Channel Scanning,  
Device Features  
EPG, TIME SHIFT, PVR


## SYSTEM CONNECTIONS

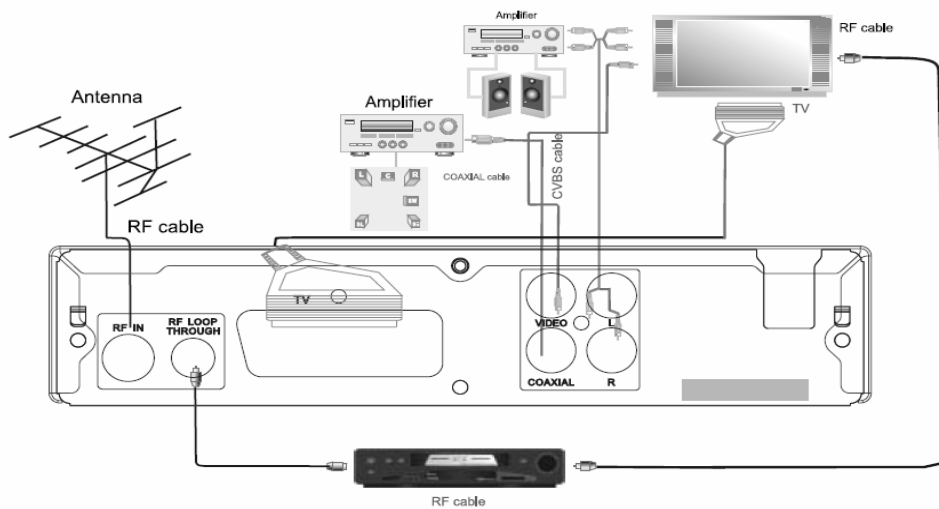

## GETTING STARTED FOR THE FIRST TIME

The very first time that the device is going to be used the “welcome” menu will appear. Press the cursors buttons to adjust the region, language, Display Mode, Aspect Mode (according to your TV type you can adjust between 16:9 or 4:3 or auto to let the device to pick one automatically according to the TV type that you have).

When you are done just select ok and press ok button on your remote to start the channel search.

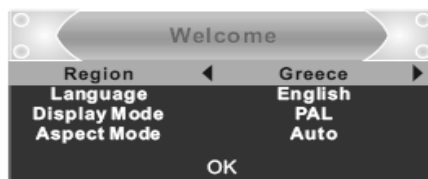

### Channel Scan

To be able to scan for channels after you start the device for the first time do the following.

### Auto Scan

1. Select the "Auto Scan" and press "OK" button to enter the Auto Scan menu.
2. Press the cursor button to set "FTA Only", then highlight "Search" and press the "OK" button to start the auto scan.




### Detailed Scanning

1. Select "Channel Scan", and press the "OK" button to enter the Channel Scan menu.
2. Press cursor button to set Scan mode, Scan Band, Channel No., Frequency and Bandwidth, then highlight "Search" and press "OK" button to start channel scan .

#### Channel Scan mode:

- By channel
- By frequency

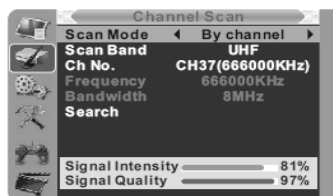

## DEVICE FEATURES

### Electronic Program Guide (EPG)

With the DVB-T you can have access to program information any time you want. That feature is displayed on-screen with functions allowing a viewer to navigate, select, and discover content by time, title, channel etc. Also you can have access to TV guide of any digital channel. To use this function simply follow the following:

1. Press "EPG" button to enter EPG menu.
2. Press cursor button to switch between channel list, events schedule of the selected channel and now/next events.
3. Press "Green" button to start Timer settings.

With this option you can set the device to open or close whenever you want, set a channel as wake up channel and schedule to record any future broadcast.

4. Press "Red" button to enter the "Step time" menu.

With this option you can find information about a program of each channel, based on hours or days. Eg you can see the the program guide of a channel 2 or 3 days later, etc.

5. If you want to go back to the channel press the "EPG" button again.



## Time Shift

The digital receiver ReDi 50A gives you the ability to record and watch one program interfacing with the viewing time. All you have to do is to connect an external hard drive or a USB stick in the usb port of the device.

With this function you can:

Pause the program and continue to see if another time.

NOTE: For proper operation of TIME SHIFT it is recommend using a storage device that supports USB 2.0 and has high speed read /write. Also if it is possible it is recommended to use a USB stick or HDD with high storage space. The product can support up to 2TB disks

The TIME SHIFT is a feature where you can simultaneously track, pause or to go back and forth when you are watching a program. For example, while watching your favorite show someone rings the door bell. No problem. Just press "Pause" button freeze the image. when you return you can resume viewing from where you left by pressing "Play"

### • Enable TIME SHIFT

- To use TIME SHIFT press <PAUSE> and a bar with the time when the recording is started (right) will appear. From this moment and forth the channel program will be recorded.

Each time you wish to pause or rewind the program a new bar will appear.

Notice that now the bar has 2 times. The right is the normal time showing the on going time from the beginning when started Time Shift and the left is the play backed time according to the time you choose to watch of the recorded program.



During TIME SHIFT, it is possible to do the following.

- Press "PAUSE" to pause the program and <PLAY> to continue watching later.
- Press "STEP FORWARD" or "FORWARD" to fast forward the recorded program at specified time steps according to "Jump" settings (30 Mon - 30 minutes) or at 2x, 4x, speed etc respectively.
- Press "STEP BACKWARD" or "BACKWARD" to quickly rewind the recording at specified time steps according to "Jump" settings (30 Mon - 30 minutes) or at 2x, 4X, speed etc, respectively.

This choices affect only the recorded program, and not the function of TIME SHIFT.

To return to the normal playing time press the "STOP" and then the <EXIT>. The TIME SHIFT will continue to record but you will watch the normal time of the program

#### • Stop TIME SHIFT

The TIME SHIFT is switch off when you change the channel or if you enter the main menu

#### NOTE:

- The TIME SHIFT is disabled when you activate it for a specific channel and you have scheduled a recording (PVR) to another channel. When that recording starts the device will take you to that channel automatically and it will deactivate Time Shift to the other
- The TIME SHIFT can be activated while recording a program, but only for that channel you are recording.

#### Examples:

- Suppose you want to see a show but because you're busy you can not watch the first 20 minutes. All you need to do is to activate TIME SHIFT at the start of the show and after 20 minutes you will be able to view it from the beginning by pressing the "BACKWARD" button rewinding the recorded program.
- With the activation of TIME SHIFT, you can also see a movie without having to wait the annoying ads. What you must do is: Start TIME SHIFT and allow the device to record for 10 to 20 minutes. Then turn backwards the recording by pressing the "BACKWARD" button and start to see it from the beginning. When it's time for the ads just make the program run fast forward by pressing the "FORWARD" button and press the <play> when the ads are finished. With this little trick you can skip the ads while the normal time of the movie is continued to be recorded.

## Personal Video Recording (PVR)

- Instant Recording

With this feature, with a touch of a button you can write a program you are watching.

- Press <RECORD> button on your remote to immediately start recording the program you are watching
- Pressing the button again <RECORD>, you can adjust the duration of the recording.
- Press <STOP> button to stop recording. A window will appear.
- Select YES to stop recording. Select NO to resume recording.

- Scheduled Recording

Apart from the operation of direct recording, the device can be scheduled to write a program in the future.

-Press and the <Menu> button and select <settings>, <Timer Settings>

This menu lets you set the timer for a recording.

Time Mode: Off/Once/Daily

Time service: Record

Wakeup Channel: Set the channel you want to record.

Wakeup Date: Press OK and then the numbers to enter the date of recording.

Wakeup Time: Press OK and then the numbers to enter time you want the device to start writing.

Duration: Press OK and then the numbers to enter the duration of the recording

To see all the programs you have recorded press :

1. Menu <Rec&Media> select "Record Manager" press OK or press "PVR" button
2. Press the Up and Down arrow keys to select the desired entry and press the OK to play the file.
3. Press <EXIT> on the remote to exit the menu.




The screenshot shows a 'Record Manager' menu with a list of recorded programs. At the top, it says 'BBC FOUR (DVR)' and '16:53-16:56(00:03:22)98M'. Below this is a table with columns: No., Date, Step Time, and Channel. The table contains four entries. At the bottom of the menu, there are three options: Lock, Delete, and Rename.

No.	Date	Step Time	Channel
1	19/03	01:01-01:02	BBC FOUR
2	12/07	15:39-15:40	The HITS
3	12/07	17:41-17:42	Ideal World
4	19/03	16:53-16:56	BBC FOUR

**Note :**

- When you write a program in a particular channel you can watch another of the same group of four digital channels, at the same time you make the record.
- When you have programmed a recording for a channel and you are watching another with the time shift activated when the recording will start the device automatically deactivate Time Shift and takes you to the channel that is programmed to be recorded.
- During the time that a recording takes place the Time Shift function can be activated in parallel with the recording only for that specific channel and not for anyone else.

**Front panel**

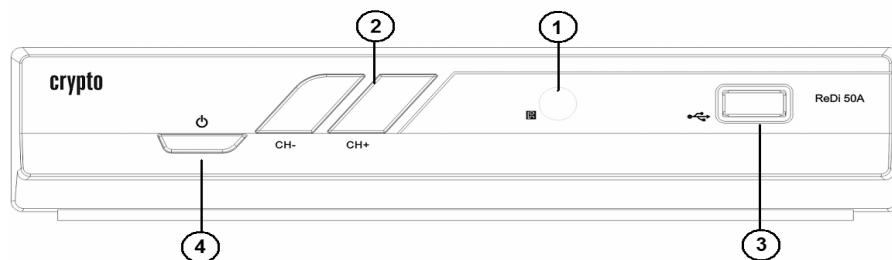

1. Remote sensor
2. Channel up/ Down
3. USB slot
4. Standby button

**Rear panel**

