


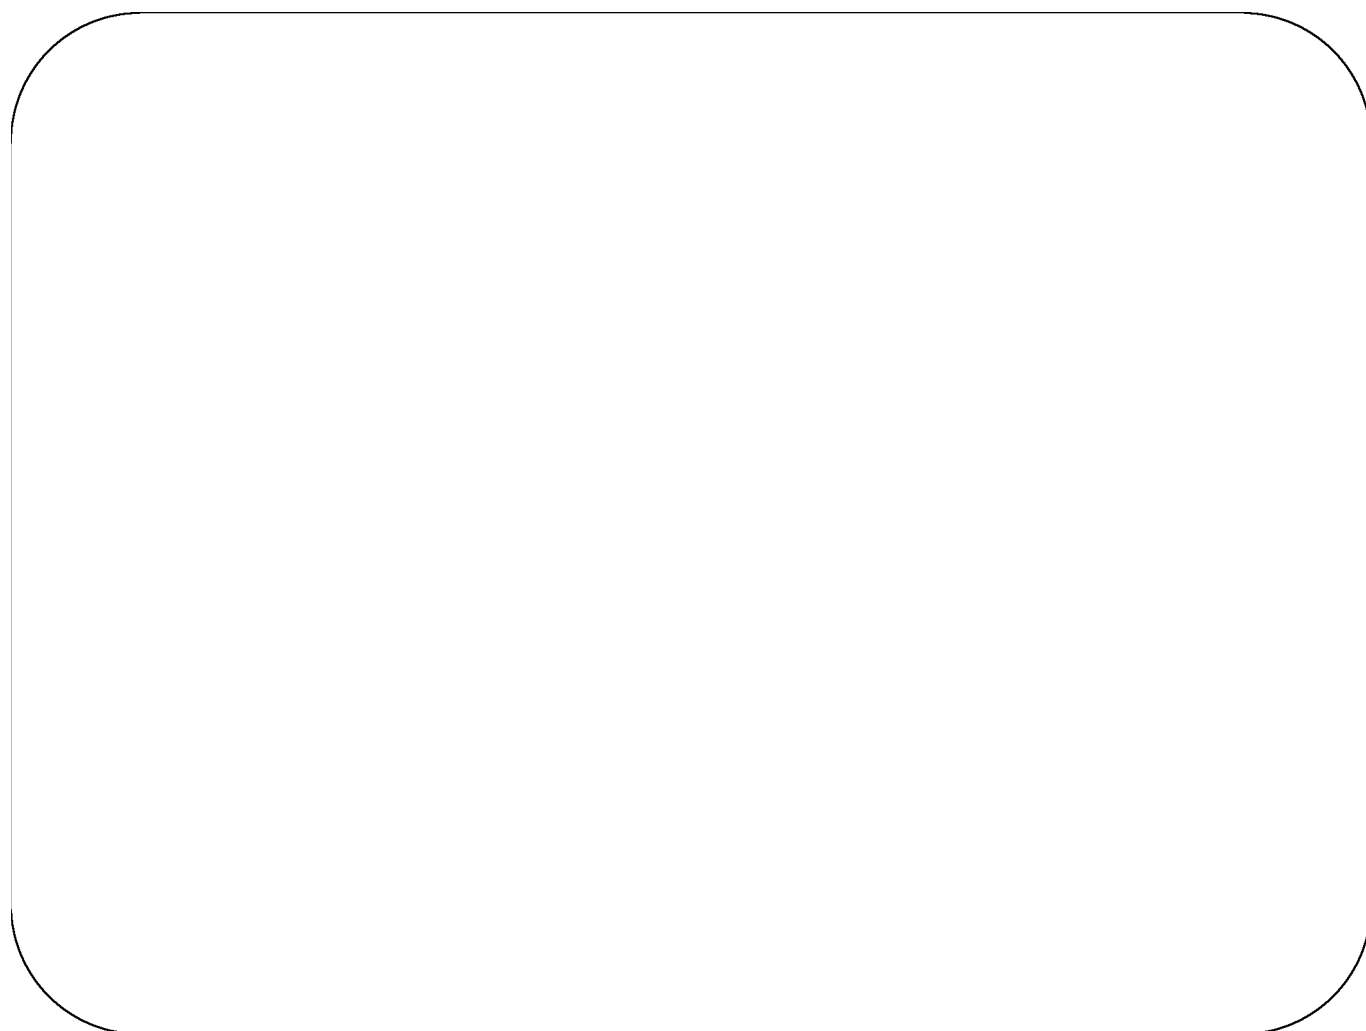

FH451V, FH500V, FH531V

FH541V, FH580V, FH601V

FH641V, FH680V, FH721V



4-stroke air-cooled v-twin gasoline engine

Service Manual

Quick Reference Guide

General Information	1
Fuel System	2
Cooling System	3
Engine Top End	4
Lubrication System	5
Camshaft/Crankshaft	6
Electrical System	7
Troubleshooting	8

This quick reference guide will assist you in locating a desired topic or procedure.

- Bend the pages back to match the black tab of the desired chapter number with the black tab on the edge at each table of contents page.
- Refer to the sectional table of contents for the exact pages to locate the specific topic required.



**FH451V, FH500V, FH531V
FH541V, FH580V, FH601V
FH641V, FH680V, FH721V**

4-stroke air cooled v-twin gasoline engine

Service Manual

All rights reserved. No parts of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic mechanical photocopying, recording or otherwise, without the prior written permission of Quality Assurance Department/Consumer Products & Machinery Company/Kawasaki Heavy Industries, Ltd., Japan.

No liability can be accepted for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible.

The right is reserved to make changes at any time without prior notice and without incurring an obligation to make such changes to products manufactured previously.

All information contained in this publication is based on the latest product information available at the time of publication. Illustrations and photographs in this publication are intended for reference use only and may not depict actual model component parts.

LIST OF ABBREVIATIONS

A	ampere(s)	lb	pound(s)
ABDC	after bottom dead center	m	meter(s)
AC	alternating current	min	minute(s)
ATDC	after top dead center	N	newton(s)
BBDC	before bottom dead center	Pa	pascal(s)
BDC	bottom dead center	PS	horsepower
BTDC	before top dead center	psi	pound(s) per square inch
°C	degree(s) Celsius	r	revolution
DC	direct current	rpm	revolution(s) per minute
F	farad(s)	TDC	top dead center
°F	degree(s) Fahrenheit	TIR	total indicator reading
ft	foot, feet	V	volt(s)
g	gram(s)	W	watt(s)
h	hour(s)	Ω	ohm(s)
L	liter(s)		

Read OWNER'S MANUAL before operating.

EMISSION CONTROL INFORMATION

To protect the environment in which we all live, Kawasaki has incorporated crankcase emission (1) and exhaust emission (2) control systems (EM) in compliance with applicable regulations of the United States Environmental Protection Agency and California Air Resources Board.

1. **Crankcase Emission Control System**

A sealed-type crankcase emission control system is used to eliminate blow-by gases. The blow-by gases are led to the breather chamber through the crankcase. Then, it is led to the air cleaner.

Oil is separated from the gases while passing through the inside of the breather chamber from the crankcase, and then returned back to the bottom of crankcase.

2. **Exhaust Emission Control System**

The exhaust emission control system applied to this engine consists of a carburetor and an ignition system having optimum ignition timing characteristics.

The carburetor has been calibrated to provide lean air/fuel mixture characteristics and optimum fuel economy with a suitable air cleaner and exhaust system.

TAMPERING WITH EMISSION CONTROL SYSTEM PROHIBITED

Federal law and California State law prohibits the following acts or the causing thereof: (1) the removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new engine for the purpose of emission control prior to its sale or delivery to the ultimate purchaser or while it is in use, or (2) the use of the engine after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

Do not tamper with the original emission related part:

- Carburetor and internal parts
- Spark plugs
- Magneto or electronic ignition system
- Fuel filter element
- Air cleaner elements
- Crankcase
- Cylinder heads
- Breather chamber and internal parts
- Intake pipe and tube

Foreword

This manual is designed primarily for use by trained mechanics in a properly equipped shop. However, it contains enough detail and basic information to make it useful to the owner who desires to perform his own basic maintenance and repair work. A basic knowledge of mechanics, the proper use of tools, and workshop procedures must be understood in order to carry out maintenance and repair satisfactorily. Whenever the owner has insufficient experience or doubts as to his ability to do the work, all adjustments, maintenance, and repair should be carried out only by qualified mechanics.

In order to perform the work efficiently and to avoid costly mistakes, read the text, thoroughly familiarize yourself with the procedures before starting work, and then do the work carefully in a clean area. Whenever special tools or equipment are specified, do not use makeshift tools or equipment. Precision measurements can only be made if the proper instruments are used, and the use of substitute tools may adversely affect safe operation.

To get the longest life out of your engine:

- Follow the Periodic Maintenance Chart in the Service Manual.
- Be alert for problems and non-scheduled maintenance.
- Use proper tools and genuine Kawasaki engine parts. Genuine parts provided as spare parts are listed in the Parts Catalog.
- Follow the procedures in this manual carefully. Don't take shortcuts.
- Remember to keep complete records of maintenance and repair with dates and any new parts installed.

How to Use This Manual

In preparing this manual, we divided the product into its major systems. These systems became the manual's chapters. All information for a particular system from adjustment through disassembly and inspection is located in a single chapter.

The Quick Reference Guide shows you all of the product's system and assists in locating their chapters. Each chapter in turn has its own comprehensive Table of Contents.

The Periodic Maintenance Chart is located in the General Information chapter. The chart gives a time schedule for required maintenance

operations.

If you want spark plug information, for example, go to the Periodic Maintenance Chart first. The chart tells you how frequently to clean and gap the plug. Next, use the Quick Reference Guide to locate the Electrical System chapter. Then, use the Table of Contents on the first page of the chapter to find the Spark Plug section.

Whenever you see these WARNING and CAUTION symbols, heed their instructions! Always follow safe operating and maintenance practices.

WARNING

This warning symbol identifies special instructions or procedures which, if not correctly followed, could result in personal injury, or loss of life.

CAUTION

This caution symbol identifies special instructions or procedures which, if not strictly observed, could result in damage to or destruction of equipment.

This manual contains four more symbols (in addition to WARNING and CAUTION) which will help you distinguish different types of information.

NOTE

○ *This note symbol indicates points of particular interest for more efficient and convenient operation.*

- Indicates a procedural step or work to be done.
- Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a WARNING, CAUTION, or NOTE.
- ★ Indicates a conditional step or what action to take based on the results of the test or inspection in the procedural step or sub-step it follows.

In most chapters an exploded view illustration of the system components follows the Table of Contents. In these illustrations you will find the instructions indicating which parts require specified tightening torque, oil, grease or a locking agent during assembly.

General Information

1

Table of Contents

Before Servicing	1-2
Model Identification.....	1-4
General Specifications.....	1-6
Periodic Maintenance Chart	1-7
Torque and Locking Agent.....	1-9
Special Tools	1-13

1-2 GENERAL INFORMATION

Before Servicing

Before starting to service the engine, carefully read the applicable section to eliminate unnecessary work. Photographs, diagrams, notes, cautions, warnings, and detailed descriptions have been included wherever necessary. Nevertheless, even a detailed account has limitations, a certain amount of basic knowledge is required for successful work.

Especially note the following:

(1) Dirt

Before removal and disassembly, clean the engine. Any dirt entering the engine, carburetor, or other parts, will work as an abrasive and shorten the life of engine. For the same reason, before installing a new part, clean off any dust or metal filings.

(2) Battery Ground

Remove the ground (–) lead from the battery before performing any disassembly operations on the equipment. This prevents:

(a) the possibility of accidentally turning the engine over while partially disassembled.

(b) sparks at electrical connections which will occur when they are disconnected.

(c) damage to electrical parts.

(3) Tightening Sequence

Generally, when installing a part with several bolts, nuts, or screws, start them all in their holes and tighten them to a snug fit. Then tighten them evenly, in a staggered sequence. This is to avoid distortion of the part and/or causing gas or oil leakage. Conversely when loosening the bolts, nuts, or screws, first loosen all of them by about a quarter of a turn and then remove them. Where there is a tightening sequence indication in this Service Manual, the bolts, nuts, or screws must be tightened in the order and method indicated.

(4) Torque

When torque values are given in this Service Manual, use them. Either too little or too much torque may lead to serious damage. Use a good quality, reliable torque wrench.

(5) Force

Common sense should dictate how much force is necessary in assembly and disassembly. If a part seems especially difficult to remove or install, stop and examine what may be causing the problem. Whenever tapping is necessary, tap lightly using a wooden or plastic-faced mallet. Use an impact driver for screws (particularly for the removal of screws held by a locking agent) in order to avoid damaging the heads.

(6) Edges

Watch for sharp edges, especially during major engine disassembly and assembly. Protect your hands with gloves or a piece of thick cloth when lifting the engine or turning it over.

(7) High-Flash Point Solvent

A high-flash point solvent is recommended to reduce fire danger. A commercial solvent commonly available in North America is Standard solvent (generic name). Always follow manufacturer and container directions regarding the use of any solvent.

(8) Gasket, O-Ring

Do not reuse a gasket or O-ring once it has been in service. The mating surfaces around the gasket should be free of foreign matter and perfectly smooth to avoid oil or compression leaks.

(9) Liquid Gasket, Non-Permanent Locking Agent

Follow manufacturer's directions for cleaning and preparing surfaces where these compounds will be used. Apply sparingly. Excessive amounts may block engine oil passages and cause serious damage. An example of a non-permanent locking agent commonly available in North America is Loctite Lock'n Seal (Blue).

(10) Press

A part installed using a press or driver, such as a journal, should first be coated with oil on its outer or inner circumference so that it will go into place smoothly.

(11) Ball Bearing

When installing a ball bearing, the bearing race which is affected by friction should be pushed by a suitable driver. This prevents severe stress on the balls and races, and prevents races and balls from being dented. Press a ball bearing until it stops at the stop in the hole or on the shaft.

(12) Oil Seal and Grease Seal

Replace any oil or grease seals that were removed with new ones, as removal generally damages seals.

Before Servicing

When pressing in a seal which has manufacturer's marks, press it in with the marks facing out. Seals should be pressed into place using a suitable driver, which contacts evenly with the side of seal, until the face of the seal is even with the end of the hole.

(13) Seal Guide

A seal guide is required for certain oil or grease seals during installation to avoid damage to the seal lips. Before a shaft passes through a seal, apply a little oil, preferably high temperature grease on the lips to reduce rubber to metal friction.

(14) Circlip, Retaining Ring

Replace any circlips and retaining rings that were removed with new ones, as removal weakens and deforms them. When installing circlips and retaining rings, take care to compress or expand them only enough to install them and no more.

(15) Cotter Pin

Replace any cotter pins that were removed with new ones, as removal deforms and breaks them.



(16) Lubrication

Engine wear is generally at its maximum while the engine is warming up and before all the rubbing surfaces have an adequate lubricative film. During assembly, oil or grease (whichever is more suitable) should be applied to any rubbing surface which has lost its lubricative film. Old grease and dirty oil should be cleaned off. Deteriorated grease has lost its lubricative quality and may contain abrasive foreign particles.

Don't use just any oil or grease. Some oils and greases in particular should be used only in certain applications and may be harmful if used in an application for which they are not intended. This manual makes reference to molybdenum disulfide grease (MoS₂) in the assembly of certain engine parts. Always check manufacturer recommendations before using such special lubricants.

(17) Electrical Wires

All the electrical wires are either single-color or two-color and, with only a few exceptions, must be connected to wires of the same color. On any of the two-color wires there is a greater amount of one color and a lesser amount of a second color, so a two-color wire is identified by first the primary color and then the secondary color. For example, a yellow wire with thin red stripes is referred to as a "yellow/red" wire; it would be a "red/yellow" wire if the colors were reversed to make red the main color.

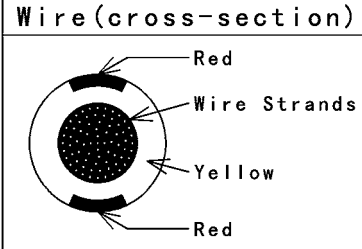Wire (cross-section)	Color Indicated on the Wire	Color Indicated on the Wiring Diagram
	Yellow/Red	

GB020601W1 C

(18) Replacement Parts

When there is a replacement instruction, replace these parts with new ones every time they are removed. These replacement parts will be damaged or lose their original function once removed.

(19) Inspection

When parts have been disassembled, visually inspect these parts for the following conditions or other damage. If there is any doubt as to the condition of them, replace them with new ones.

Abrasion	Crack	Hardening	Warp
Bent	Dent	Scratch	Wear
Color change	Deterioration	Seizure	

(20) Specifications

Specification terms are defined as follows:


"Standards" show dimensions or performances which brand-new parts or systems have.

"Service Limits" indicate the usable limits. If the measurement shows excessive wear or deteriorated performance, replace the damaged parts.


1-4 GENERAL INFORMATION

Model Identification

Electric starter Model-FH500V

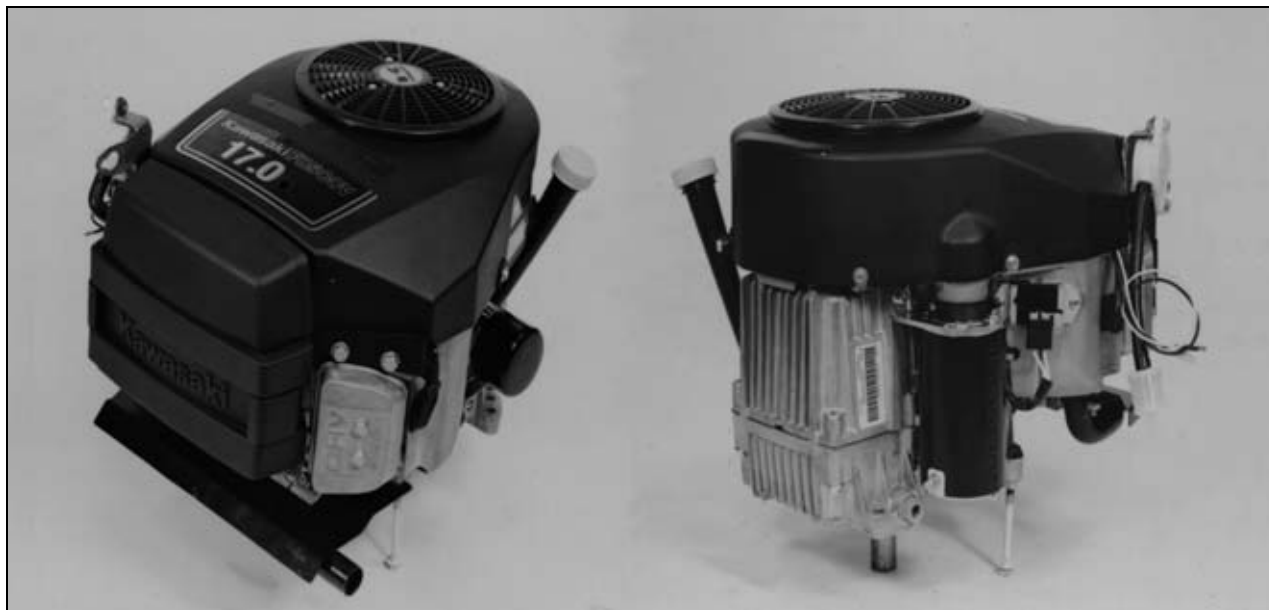

Recoil starter Model-FH500V

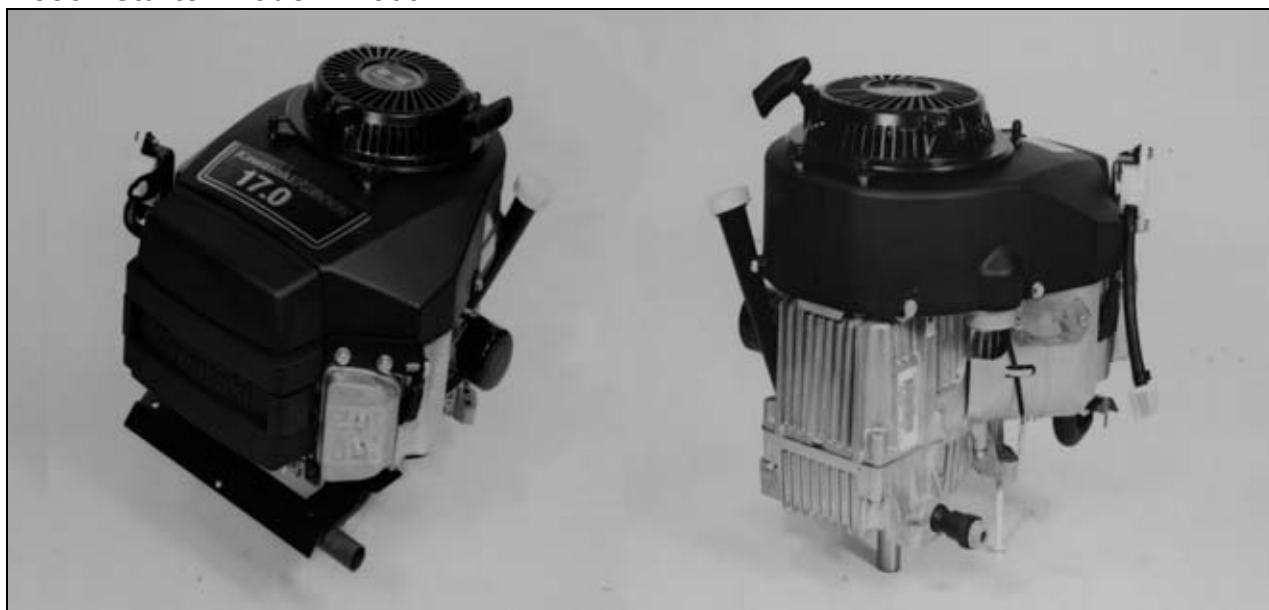

Cylinder Number Designation:


No.1 Cylinder is the left-hand cylinder viewed from the air cleaner.
No.2 Cylinder is the right-hand cylinder viewed from the air cleaner.

Model Identification

Electric starter Model-FH580V



Electric starter Model-FH680V

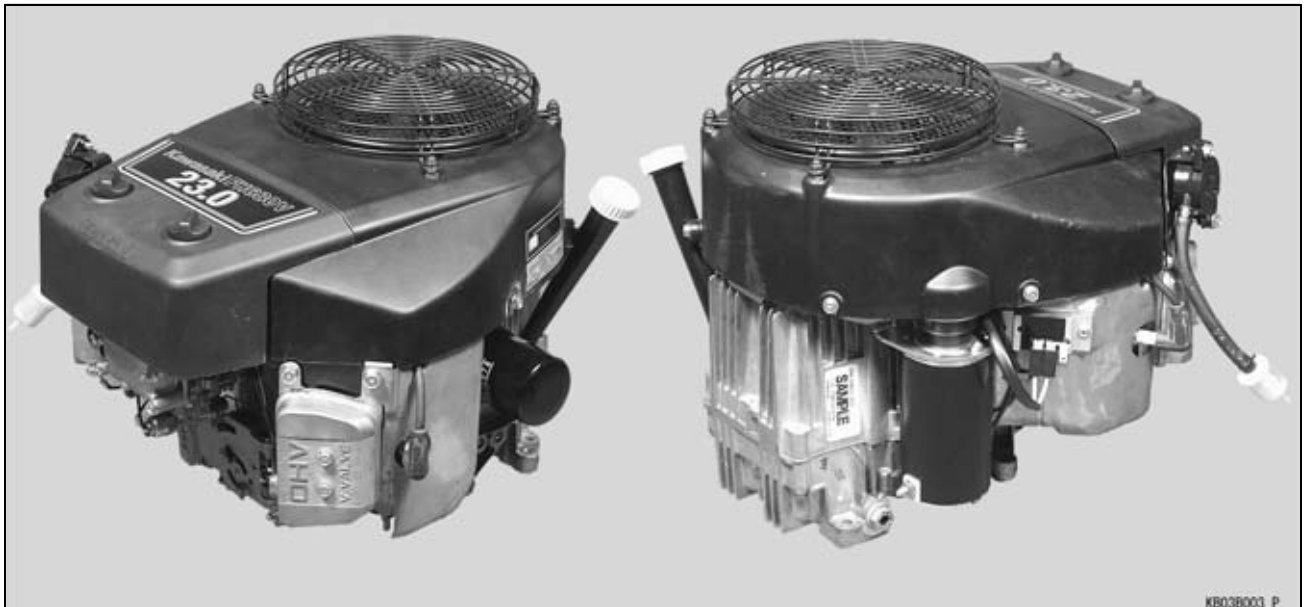

1-6 GENERAL INFORMATION

General Specifications

Items	FH451V, FH500V, FH531V	FH541V, FH580V	FH601V, FH641V, FH680V	FH721V
Type of engine	Forced air-cooled, vertical shaft, OHV, 4-stroke gasoline engine.			
Cylinder layout	90 V-Twin			
Bore × Stroke	68 mm × 68 mm (2.68 in. × 2.68 in.)	74 mm × 68 mm (2.91 in. × 2.68 in.)	75.2 mm × 76 mm (2.96 in. × 2.99 in.)	
Piston displacement	494 mL (30.1 cu. in.)	585 mL (35.6 cu. in.)	675 mL (41.19 cu. in.)	
Direction of rotation	Counterclockwise facing the PTO shaft			
Compression release	Automatic compression release			
Low idle speed	1550 rpm			
Fast idle speed	3600 rpm			
Ignition system	Transistorized-fly wheel magneto			
RFI	Per Canada and U.S.A. requirements			
starting system	Electric starter and/or recoil starter			
Charging system	12 V - 13 amps with regulator			
Spark plug	CHAMPION RCJ8Y		NGK BPR4ES	
Carburetor	Float type, fixed main jet		Float type, fixed main jet, two barrel	
Fuel pump	Diaphragm type pulse pump			
Air cleaner	Dual stage element, dry type			
Governor	Flyweight all speed governor			
Lubrication system	Pressure feed by positive displacement pump			
Oil filter	Cartridge type full flow filter			
Oil pressure switch	ON-OFF switch (Option)			
Oil capacity (when engine is completely dry)	1.8 L (1.9 US-qt)			1.9 L (2.0 US-qt)
Cooling system	Forced air cooling by fan			
Dimensions (L × W × H)	425 mm × 359 mm × 324 mm	425 mm × 359 mm × 425 mm	458 mm × 430 mm × 381 mm	
Electric starter model	(16.7 in. × 14.1 in. × 12.8 in.)	(16.7 in. × 14.1 in. × 16.7 in.)	(18.0 in. × 16.9 in. × 15.0 in.)	
Recoil starter model	425 mm × 359 mm × 361 mm (16.7 in. × 14.1 in. × 14.2 in.)	—		
Dry weight				
Electric starter model	34 kg (75 lbs)	32 Kg (71 lbs)	40.5 kg (89.3 lbs)	41.2 kg
Recoil starter model	32 kg (71 lbs)	—	—	(90.8 lbs)

Specifications are subject to change without notice.

Periodic Maintenance Chart

To ensure satisfactory operation over an extended period of time, any engine requires normal maintenance regular intervals. The Periodic Maintenance Chart below shows periodic inspection and maintenance items and suitable intervals. The bullet mark (●) designates that the corresponding item should be performed at that interval.

Some adjustments require the use of special tools or other equipment. An electronic tachometer will facilitate setting idle and running speeds.

FH451V, FH500V, FH531V, FH541V, FH580V

OPERATION	INTERVAL						
	Daily	First 8 hr.	Every 25 hr.	Every 50 hr.	Every 100 hr.	Every 200 hr.	Every 300 hr.
Check or clean air intake screen	●						
Check and add engine oil	●						
Check for fuel and oil leakage	●						
Check for loose or lost nut and screw	●						
Check battery electrolyte level	●						
Clean air cleaner foam element (1)			●				
Clean air cleaner paper element (1)				●			
Clean dust and dirt from cylinder and cylinder head fins (1)					●		
Tighten nut and screws					●		
Change engine oil		●			●		
Clean and re-gap spark plugs					●		
Change Oil filter						●	
Change air cleaner paper element (1)						●	
★Check and adjust valve clearance							●
★Clean and lap valve seating surface							●
★Clean combustion chamber							●

(1): Service more frequently under dusty conditions.

★: These items must be performed with the proper tools. See your authorized Kawasaki Engine Dealer for service, unless you have the proper equipment and mechanical proficiency.

1-8 GENERAL INFORMATION

Periodic Maintenance Chart

FH601V, FH641V, FH680V, FH721V

OPERATION	INTERVAL						
	Daily	First 8 hr.	Every 25 hr.	Every 50 hr.	Every 100 hr.	Every 200 hr.	Every 300 hr.
Check or clean air intake screen	●						
Check and add engine oil	●						
Check for fuel and oil leakage	●						
Check for loose or lost nut and screw	●						
Check battery electrolyte level	●						
Clean air cleaner foam element (1)			●				
Clean air cleaner paper element (1)					●		
Clean dust and dirt from cylinder and cylinder head fins (1)					●		
Tighten nut and screws					●		
Change engine oil		●			●		
Clean and re-gap spark plugs					●		
Check and clean oil cooler fins (FH721V model).					●		
Change Oil filter						●	
Change air cleaner paper element (1)						●	
★Check and adjust valve clearance							●
★Clean and lap valve seating surface							●
★Clean combustion chamber							●

(1): Service more frequently under dusty conditions.

★: These items must be performed with the proper tools. See your authorized Kawasaki Engine Dealer for service, unless you have the proper equipment and mechanical proficiency.

Torque and Locking Agent

The following tables lists the tightening torque for the major fasteners, and the parts requiring use of a non-permanent locking agent or liquid gasket.

Letters used in the "Remarks" column mean:

L : Apply a non-permanent locking agent to the threads.

M : Apply a molybdenum disulfide lubricant (grease or oil) to the threads, seated surface, or washer.

O : Apply oil to the threads, seated surface, or washer.

S : Tighten the fasteners following the specified sequence.

SS : Apply silicone sealant.

FH451V, FH500V, FH531V, FH541V, FH580V

Fastener	FH451V, FH500V, FH531V, FH541V, FH580V			Remarks
	Torque			
	N·m	kgf·m	ft·lb	
Fuel System:				
Carburetor (FH451V, FH500V, FH531V)				
Choke Valve Screw	0.7	0.07	6 in·lb	
Throttle Valve Screws	1.0	0.1	9 in·lb	
Pilot Jet	1.7	0.17	15 in·lb	
Main Jet	0.7	0.07	6 in·lb	
Main Air Jet	0.7	0.07	6 in·lb	
Main Nozzle	2.0	0.2	17 in·lb	
Pilot Air Jet	0.7	0.07	6 in·lb	
Drain Screw	1.3	0.13	11 in·lb	
Earth Lead Screw (Carburetor Side)	3.4	0.35	30 in·lb	
Fuel Shut Off Solenoid Valve	6.9	0.7	61 in·lb	
Float Bowl Mounting Bolt	8.8	0.9	78 in·lb	
Carburetor (FH541V, FH580V)				
Throttle Valve Screws	0.7	0.07	6 in·lb	L
Main Jet	2.3	0.23	20 in·lb	
Fuel Shaft off Solenoid Valve	4.5	0.46	40 in·lb	
Float Chamber Mounting Screw	4.5	0.46	40 in·lb	
Governor Arm Clamp Nut	7.8	0.8	69 in·lb	
Governor Shaft Plate Screws	2.0	0.2	18 in·lb	
Holder Plate Nuts (Air Cleaner, Carburetor Mounting)	5.9	0.6	52 in·lb	
Intake Manifold Mounting Bolts	5.9	0.6	52 in·lb	
Cleaner Body Mounting Screws	3.4	0.35	30 in·lb	
Control Panel Mounting Bolts	5.9	0.6	52 in·lb	
Cooling System:				
Engine-shoroud Bolt (M8)	15	1.5	11	
Engine-shoroud Bolts (M6)	5.9	0.6	52 in·lb	
Plug Bolt (Engine-shroud)	5.9	0.6	52 in·lb	
Plug Screw (Engine-shroud)	3.4	0.35	30 in·lb	
Engine Top End				
Cylinder Head Bolts	25	2.6	19.0	S
Valve Clearance Lock Screws	6.9	0.7	61 in·lb	
Connecting Rod Big End Cap Bolts	5.9	0.6	52 in·lb	O
(FH541V, FH580V)	9.8	1.0	87 in·lb	O
Rocker Arm Bolts	28	2.8	20	

1-10 GENERAL INFORMATION

Torque and Locking Agent

Fastener	FH451V, FH500V, FH531V, FH541V, FH580V			Remarks
	Torque			
	N·m	kgf·m	ft·lb	
Rocker Cover Mounting Bolts	5.9	0.6	52 in·lb	SS
Exhaust Pipe Flange Nuts	15	1.5	11	
Spark Plugs	22	2.2	16	
Lubrication System:				
Engine Drain Plugs (Plastic)	6.9	0.7	61 in·lb	
Engine Drain Plug (Metal)	20	2.0	14.5	
Engine Drain Plug Joint (Plastic)	17	1.7	12.0	
Engine Drain Plug Joint (Metal)	39	4.0	29	
Oil Pressure Switch	9.8	1.0	87 in·lb	
Oil Passage Plug	3.9	0.40	35 in·lb	
Oil Pump Cover Plate Mounting Bolts	5.9	0.6	52 in·lb	S
Oil Filter	in the text	←	←	
Camshaft/Crankshaft:				
Crankcase Cover Bolts	25	2.6	19.0	
Breather Chamber Cover Bolts	5.9	0.6	52 in·lb	
Electrical System:				
Stator Coil Screws	3.4	0.35	30 in·lb	
Flywheel Bolt	56	5.7	41	
Fan Housing Bolts	5.9	0.6	52 in·lb	
Screen Bolts	5.9	0.6	52 in·lb	
Regulator Screws	3.4	0.35	30 in·lb	
Ignition Coil Bolts (Studs)	7.8	0.8	69 in·lb	
Ignition Coil Bolts (Bolts)	5.9	0.6	52 in·lb	
Starter Motor Mounting Bolts	15	1.5	11	
Recoil Starter Mounting Nuts	5.9	0.6	52 in·lb	
Recoil Starter Retainer Screw	7.8	0.8	69 in·lb	
Spark Plugs	22	2.2	16	

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

Basic Torque for General Fasteners

Threads dia (mm)	Torque		
	N·m	kgf·m	ft·lb
4	2.0	0.2	17 in·lb
5	3.4	0.35	30 in·lb
6	5.9	0.6	52 in·lb
8	15	1.5	11

Torque and Locking Agent

The following tables lists the tightening torque for the major fasteners, and the parts requiring use of a non-permanent locking agent or liquid gasket.

Letters used in the "Remarks" column mean:

L : Apply a non-permanent locking agent to the threads.

M : Apply a molybdenum disulfide lubricant (grease or oil) to the threads, seated surface, or washer.

O : Apply oil to the threads, seated surface, or washer.

S : Tighten the fasteners following the specified sequence.

SS : Apply silicone sealant.

FH601V, FH641V, FH680V, FH721V

Fasteners	FH601V, FH641V, FH680V, FH721V			Remarks
	Torque			
	N·m	kgf·m	ft·lb	
Fuel System:				
Choke Valve Screw	1.0	0.10	8.9 in·lb	L
Throttle Valve Screws	1.0	0.10	8.9 in·lb	L
Pilot Jet	—	—	—	
Main Jet	—	—	—	
Main Jet, Plug	19	1.9	14	
Main Nozzle	—	—	—	
Main Air Jet	—	—	—	
Pilot Air Jet	—	—	—	
Drain Screw (Carburetor)	2.0	0.2	18 in·lb	
Earth lead screw (Carburetor Side)	—	—	—	
Fuel Shut Off Solenoid Valve (Carburetor)	20	2.0	15	
Float Bowl Mounting Screw (Carburetor)	3.9	0.4	35 in·lb	
Governor Arm Clamp Nut	7.8	0.8	69 in·lb	
Governor Shaft Plate Screws	2.0	0.2	18 in·lb	
Intake Pipe Mounting Bolts and Nuts	5.9	0.6	52 in·lb	
Intake Manifold Mounting Bolts	5.9	0.6	52 in·lb	
Cleaner Body Mounting Screws	—	—	—	
Control Panel Mounting Bolts	5.9	0.6	52 in·lb	
Cooling System:				
Engine-shroud Bolt (M8)	15	1.5	11	
Engine-shroud Bolts (M6)	5.9	0.6	52 in·lb	
Plug Bolt (Engine-shroud)	—	—	—	
Plug Screw (Engine-shroud)	3.4	0.35	30 in·lb	
Engine Top End:				
Cylinder Head Bolts	25	2.6	19	S
Valve Clearance Lock Screws	6.9	0.7	61 in·lb	
Connecting Rod Big End Cap Bolts	21	2.1	15	O
Rocker Arm Bolts	28	2.8	20	
Rocker Cover Mounting Bolts	5.9	0.6	52 in·lb	
Exhaust Pipe Flange Nuts	15	1.5	11	
Spark Plugs	22	2.2	16	
Lubrication System:				
Engine Drain Plugs (Plastic)	6.9	0.7	61 in·lb	
Engine Drain Plug (Metal)	20	2.0	14.5	
Engine Drain Plug Joint (Plastic)	17	1.7	12	
Engine Drain Plug Joint (Metal)	39	4.0	29	

1-12 GENERAL INFORMATION

Torque and Locking Agent

Fasteners	FH601V, FH641V, FH680V, FH721V			Remarks
	Torque			
	N·m	kgf·m	ft·lb	
Oil Pressure Switch	9.8	1.0	87 in·lb	SS
Oil Passage Plug	3.9	0.40	35 in·lb	
Oil Pump Cover Plate Mounting Bolts	5.9	0.6	52 in·lb	
Oil Filter	in the text	←	←	
Oil Cooler Mounting Joint (FH721V)	44	4.5	33	
Camshaft/Crankshaft:				
Crankcase Cover Bolts	25	2.6	19.0	S
Breather Chamber Cover Bolts	5.9	0.6	52 in·lb	
Electrical System:				
Stator Coil Screws	3.4	0.35	30 in·lb	
Flywheel Bolt	56	5.7	41	
Fan Housing Bolts	5.9	0.6	52 in·lb	
Screen Bolts	5.9	0.6	52 in·lb	
Regulator Screws	3.4	0.35	30 in·lb	
Ignition Coil Bolts (Studs)	7.8	0.8	69 in·lb	
Ignition Coil Bolts (Bolts)	5.9	0.6	52 in·lb	
Starter Motor Mounting Bolts	15	1.5	11	
Recoil Starter Mounting Nuts	—	—	—	
Recoil Starter Retainer Screw	—	—	—	
Spark Plugs	22	2.2	16	


The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

Basic Torque for General Fasteners


Threads dia (mm)	Torque		
	N·m	kgf·m	ft·lb
4	2.0	0.2	17 in·lb
5	3.4	0.35	30 in·lb
6	5.9	0.6	52 in·lb
8	15	1.5	11

Special Tools


Compression Gauge :
57001-221

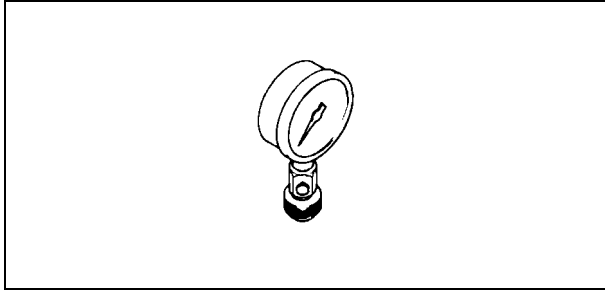


Valve Seat Cutter Holder, $\phi 6$:
57001-1360

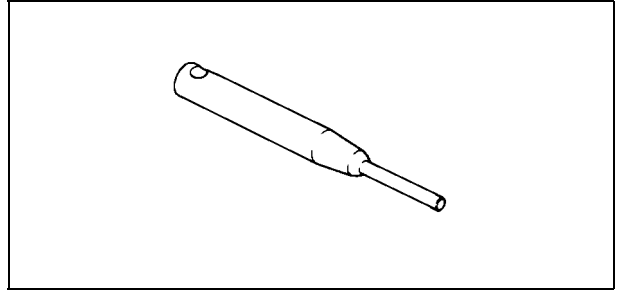


Piston Ring Pliers :
57001-115

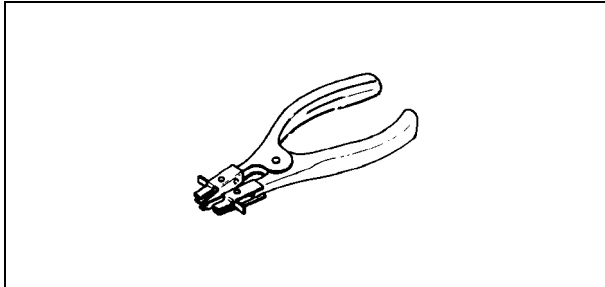


Valve Seat Cutter, $45^\circ - \phi 35$:
57001-1116

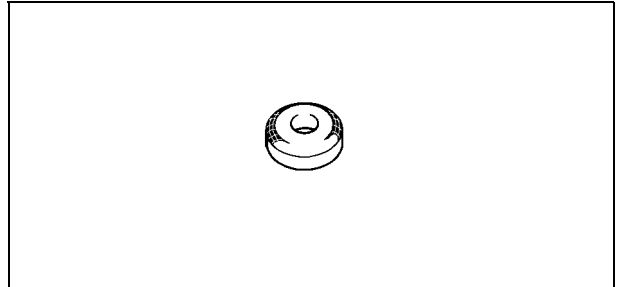


Piston Ring Compressor Grip :
57001-1095

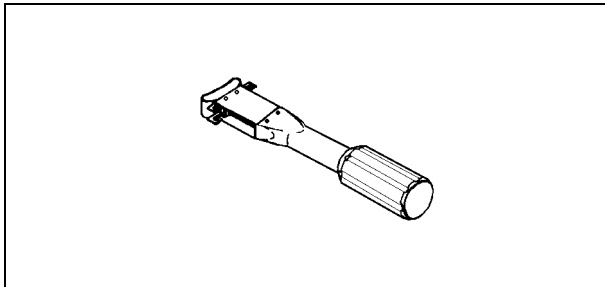


Valve Seat Cutter, $32^\circ - \phi 33$:
57001-1199

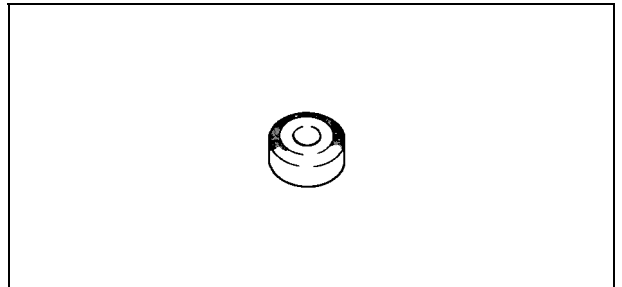


Piston Ring Compressor Belt, $\phi 67 \sim \phi 79$:
57001-1097

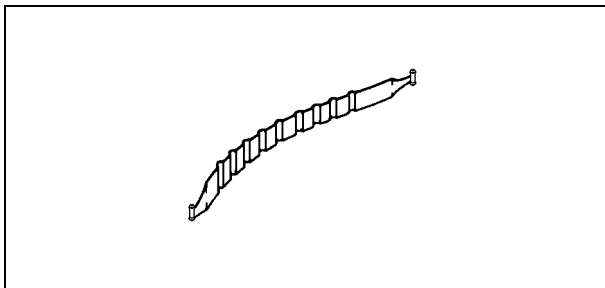


Compression Gauge Adapter, M14 \times 1.25 :
57001-1159

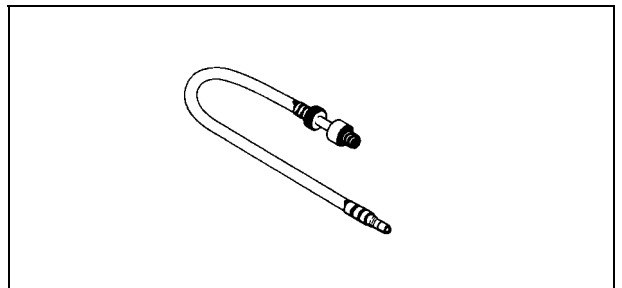

Valve Seat Cutter Holder Bar :
57001-1128

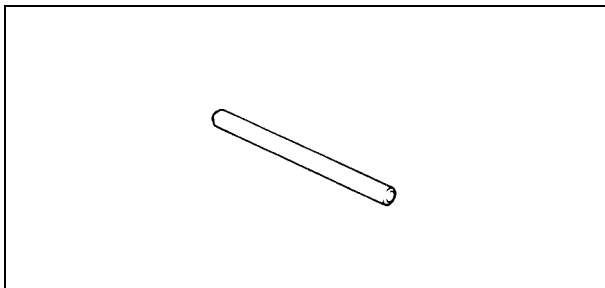


Valve Seat Cutter, $30^\circ - \phi 30$:
57001-1120

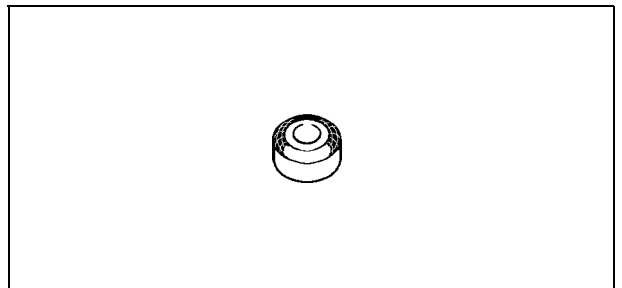


1-14 GENERAL INFORMATION

Special Tools


Oil Filter Wrench :
57001-1249

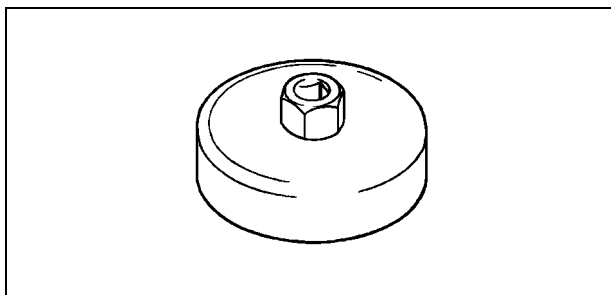

Kawasaki Bond (Silicone Sealant) :
56019-120

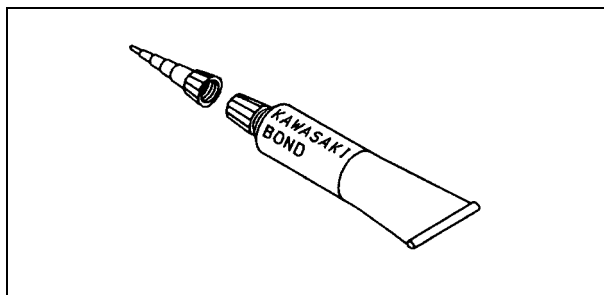

Hand Tester :
57001-1394

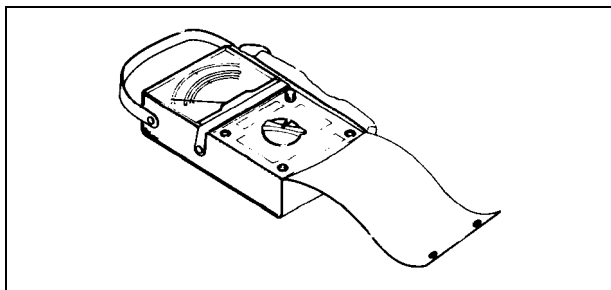

Fuel System


Table of Contents

Exploded View	2-2	Carburetor Cleaning.....	2-24
Specifications	2-10	Carburetor Inspection	2-25
Governor Link Mechanism.....	2-11	Fuel Shut-Off Solenoid Valve Test (Electric Starter Model)	2-26
Control Panel Assembly Removal	2-11	Intake Manifold	2-27
Control Panel Assembly Installation	2-11	Intake Manifold Removal	2-27
Governor Arm Removal	2-11	Intake Manifold Installation	2-27
Governor Arm Installation	2-12	Intake Manifold Inspection	2-28
Governor Assembly Removal	2-12	Fuel Pump, Fuel Filter	2-29
Governor Assembly Installation ...	2-13	Fuel Pump Inspection	2-29
Governor Assembly Inspection	2-13	Fuel Filter Inspection.....	2-29
Governor Shaft Removal	2-13	Air Cleaner.....	2-30
Governor Shaft Installation	2-13	Element Removal - FH451V, 500V, 531V, 541V, 580V.....	2-30
Carburetor	2-14	Element Removal - FH601V, 641V, 680V, 721V	2-30
Fuel and Air Flow	2-14	Element Installation.....	2-30
Fuel Shut Off Solenoid Valve (Electric Starter Model)	2-15	Element Cleaning and Inspection - FH451V, 500V, 531V, 541V, 580V.....	2-30
Low Idle Speed Adjustment	2-15	Element Cleaning and Inspection - FH601V, 641V, 680V, 721V	2-31
High Idle Speed Adjustment	2-15	Cleaner Body Removal - FH451V, 500V, 531V, 541V, 580V.....	2-31
High Altitude Operation.....	2-16	Cleaner Body Removal - FH601V, FH641V, FH680V, FH721V	2-31
Main Jet Replacement	2-17	Cleaner Body Installation - FH451V, 500V, 531V, 541V, 580V.....	2-32
Fuel system Cleanliness Inspection.....	2-18	Cleaner Body Installation - FH601V, 641V, 680V, 721V	2-32
Carburetor Removal.....	2-18	Housing (Case and Body) Inspection.....	2-32
Carburetor Installation.....	2-19		
Carburetor Disassembly/Assembly - FH451V, 500V, 531V.....	2-20		
Carburetor Disassembly/Assembly-FH541V, FH580V	2-21		
Carburetor Disassembly/Assembly-FH601V, 641V, 680V, 721V.....	2-22		

2-2 FUEL SYSTEM

Exploded View

[FH451V, FH500V, FH531V]

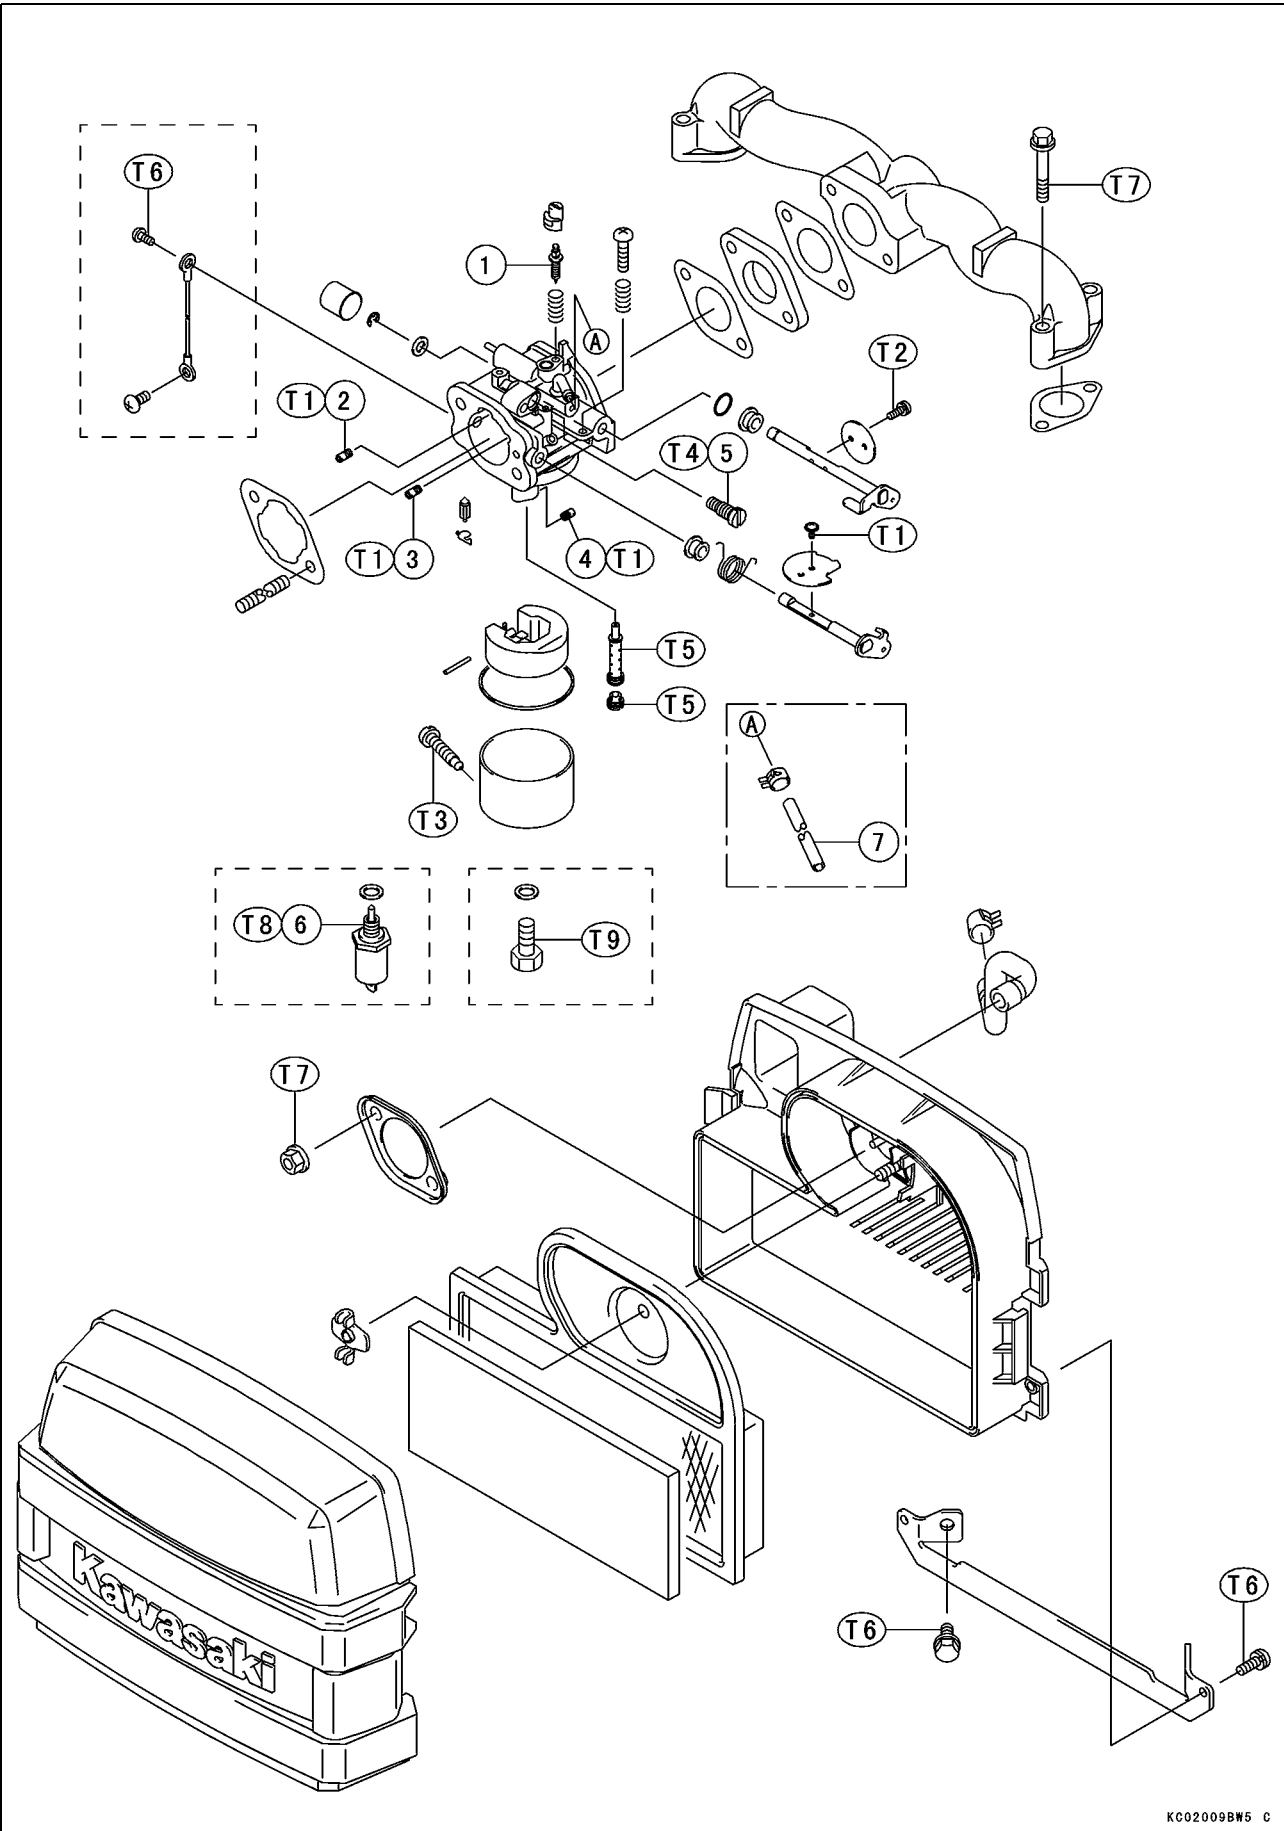

Exploded View


[FH451V, FH500V, FH531V]

1. Pilot Screw
2. Pilot Air Jet
3. Main Air Jet
4. Main Jet
5. Pilot Jet
6. Solenoid Valve
7. Out Vent Tube (Before 2003/5 Product model)

T1: 0.7 N·m (0.07 kgf·m, 6 in·lb)
T2: 1.0 N·m (0.10 kgf·m, 9 in·lb)
T3: 1.3 N·m (0.13 kgf·m, 11 in·lb)
T4: 1.7 N·m (0.17 kgf·m, 15 in·lb)
T5: 2.0 N·m (0.20 kgf·m, 17 in·lb)
T6: 3.4 N·m (0.35 kgf·m, 30 in·lb)
T7: 5.9 N·m (0.6 kgf·m, 52 in·lb)
T8: 6.9 N·m (0.70 kgf·m, 61 in·lb)
T9: 8.8 N·m (0.90 kgf·m, 78 in·lb)

Exploded View

[FH541V, FH580V]

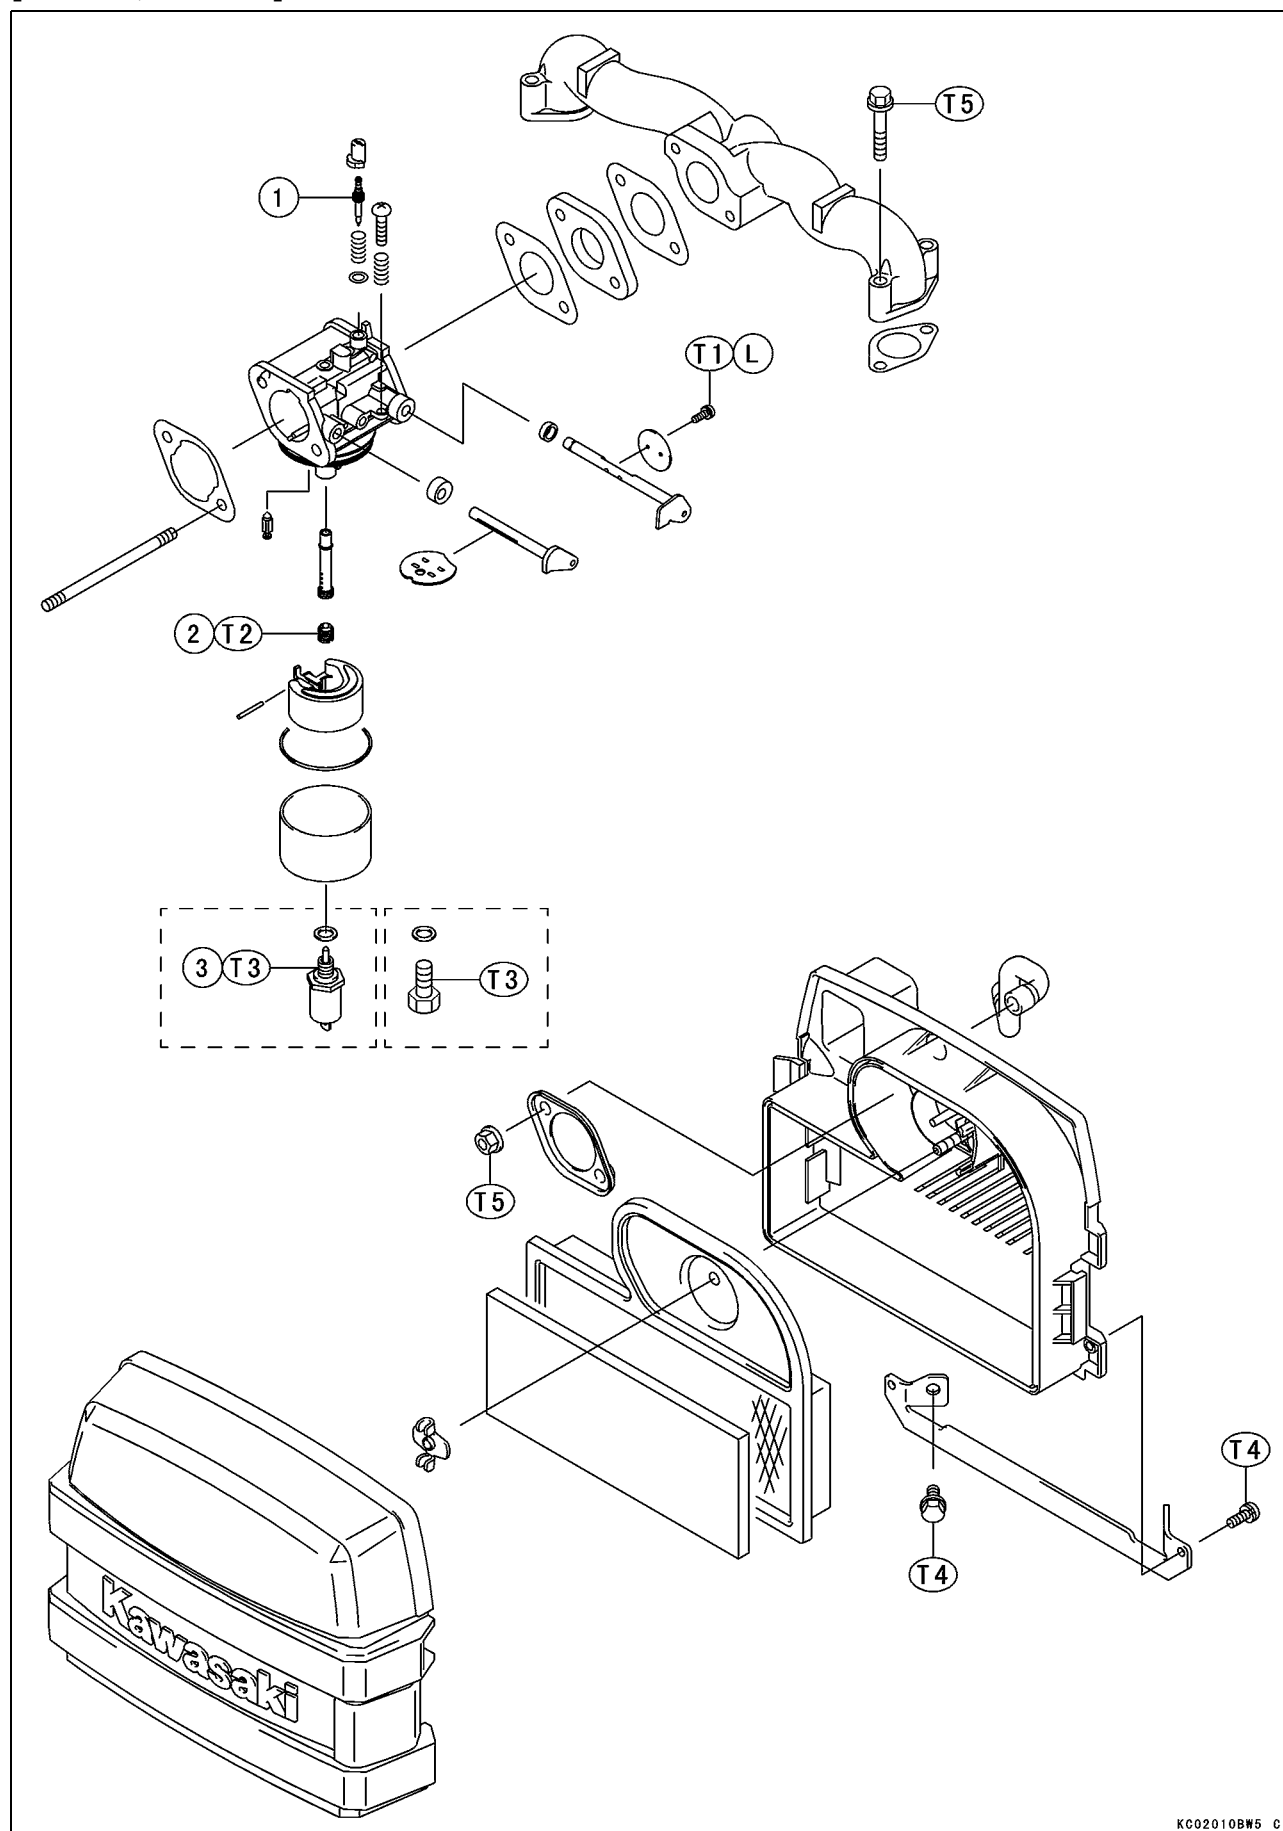

KC02010BW5 C

Exploded View

[FH541V, FH580V]

1. Pilot Screw
2. Main Jet
3. Solenoid Valve

T1: 0.7 N·m (0.07 kgf·m, 6 in·lb)

T2: 2.3 N·m (0.23 kgf·m, 20 in·lb)

T3: 4.5 N·m (0.46 kgf·m, 40 in·lb)

T4: 3.4 N·m (0.35 kgf·m, 30 in·lb)


T5: 5.9 N·m (0.6 kgf·m, 52 in·lb)

L: Apply non-permanent locking agent.

2-6 FUEL SYSTEM

Exploded View

[FH601V, FH641V, FH680V, FH721V]

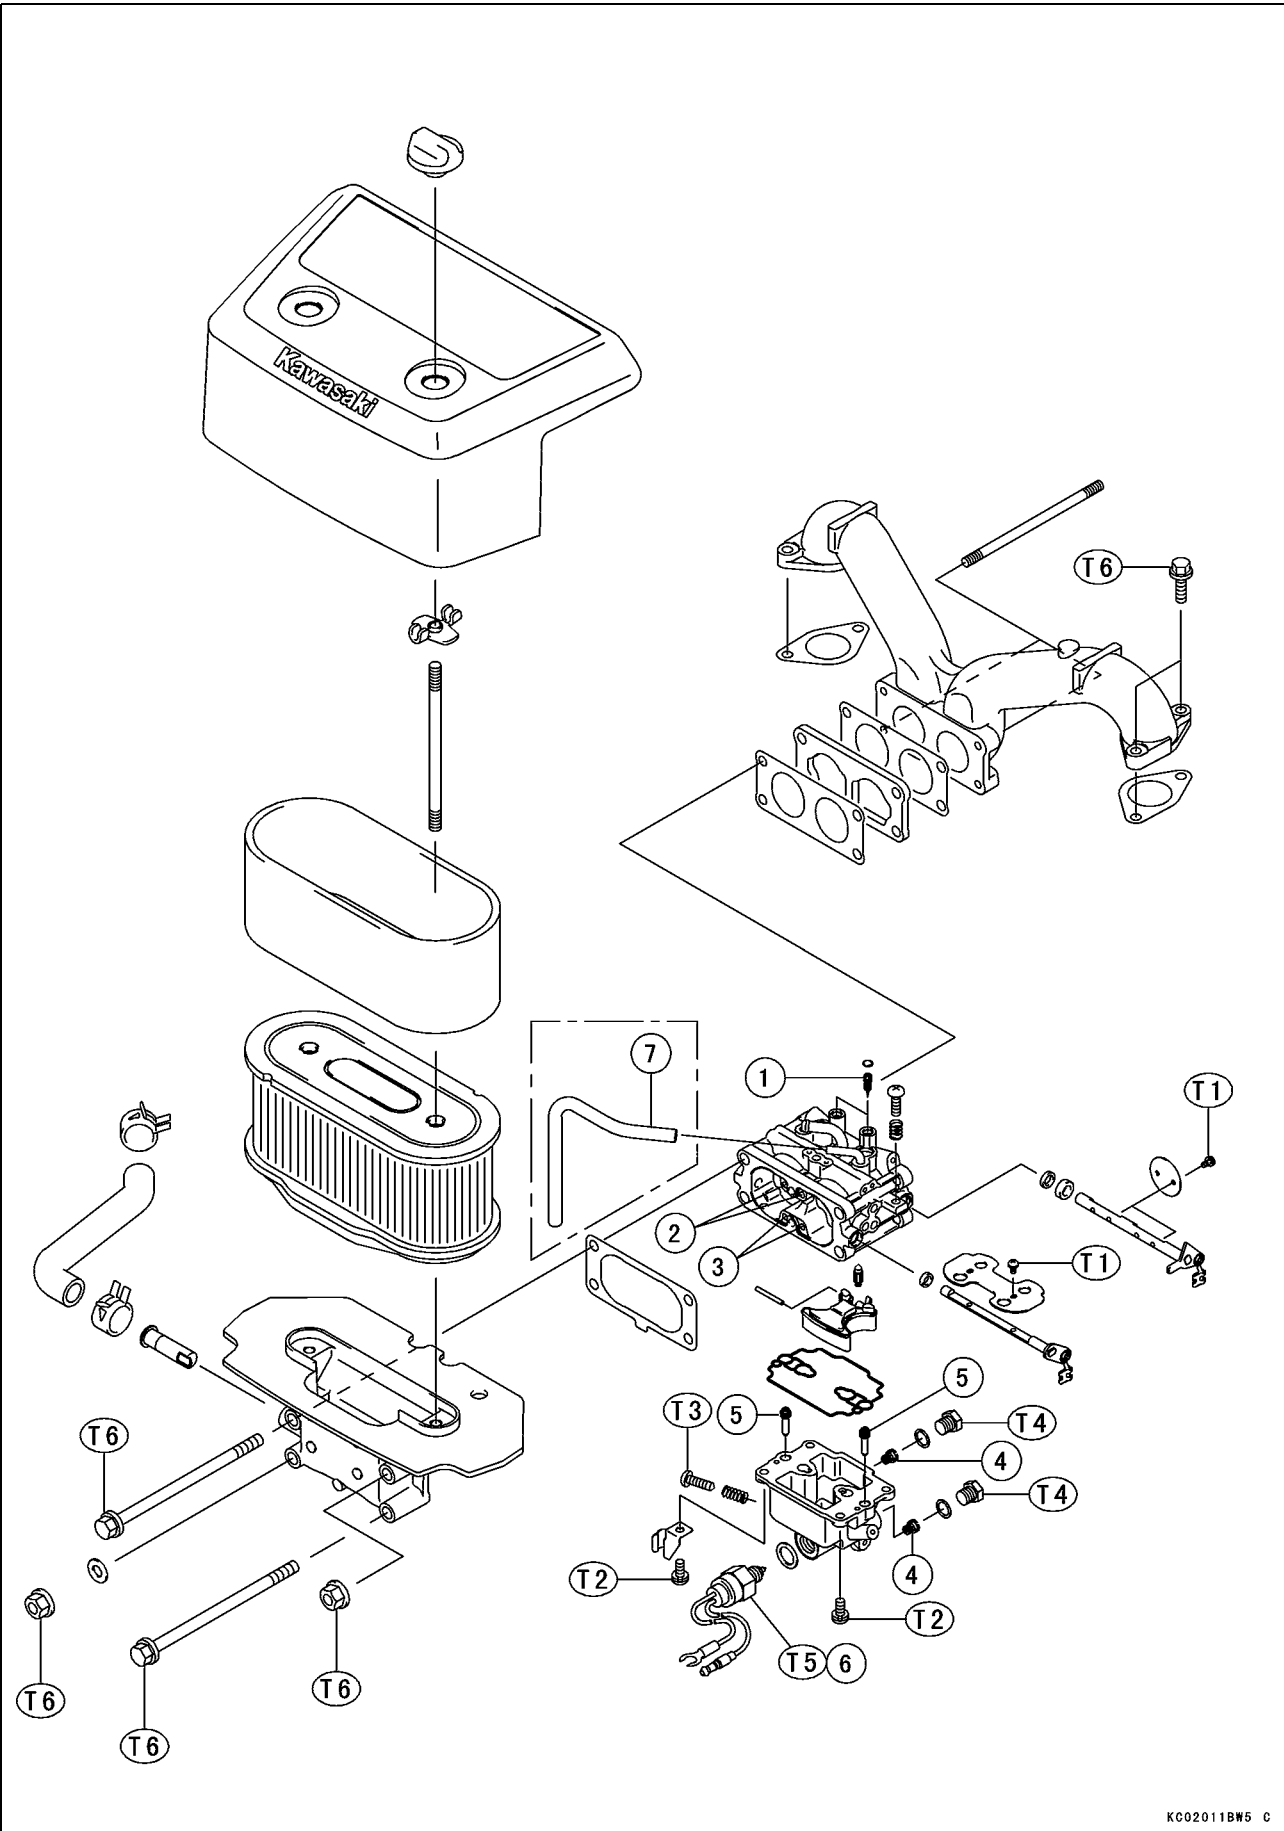

Exploded View


[FH601V, FH641V, FH680V, FH721V]

1. Pilot Screw
2. Pilot Air Jet
3. Main Air Jet
4. Main Jet
5. Pilot Jet
6. Solenoid Valve
7. Out Vent Tube (Before 2003/5 Product model)

T1: 1.0 N·m (0.10 kgf·m, 9 in·lb)
T2: 3.9 N·m (0.40 kgf·m, 35 in·lb)
T3: 2.0 N·m (0.20 kgf·m, 18 in·lb)
T4: 19 N·m (1.9 kgf·m, 14 ft·lb)
T5: 20 N·m (2.0 kgf·m, 15 ft·lb)
T6: 5.9 N·m (0.60 kgf·m, 52 in·lb)

2-8 FUEL SYSTEM

Exploded View

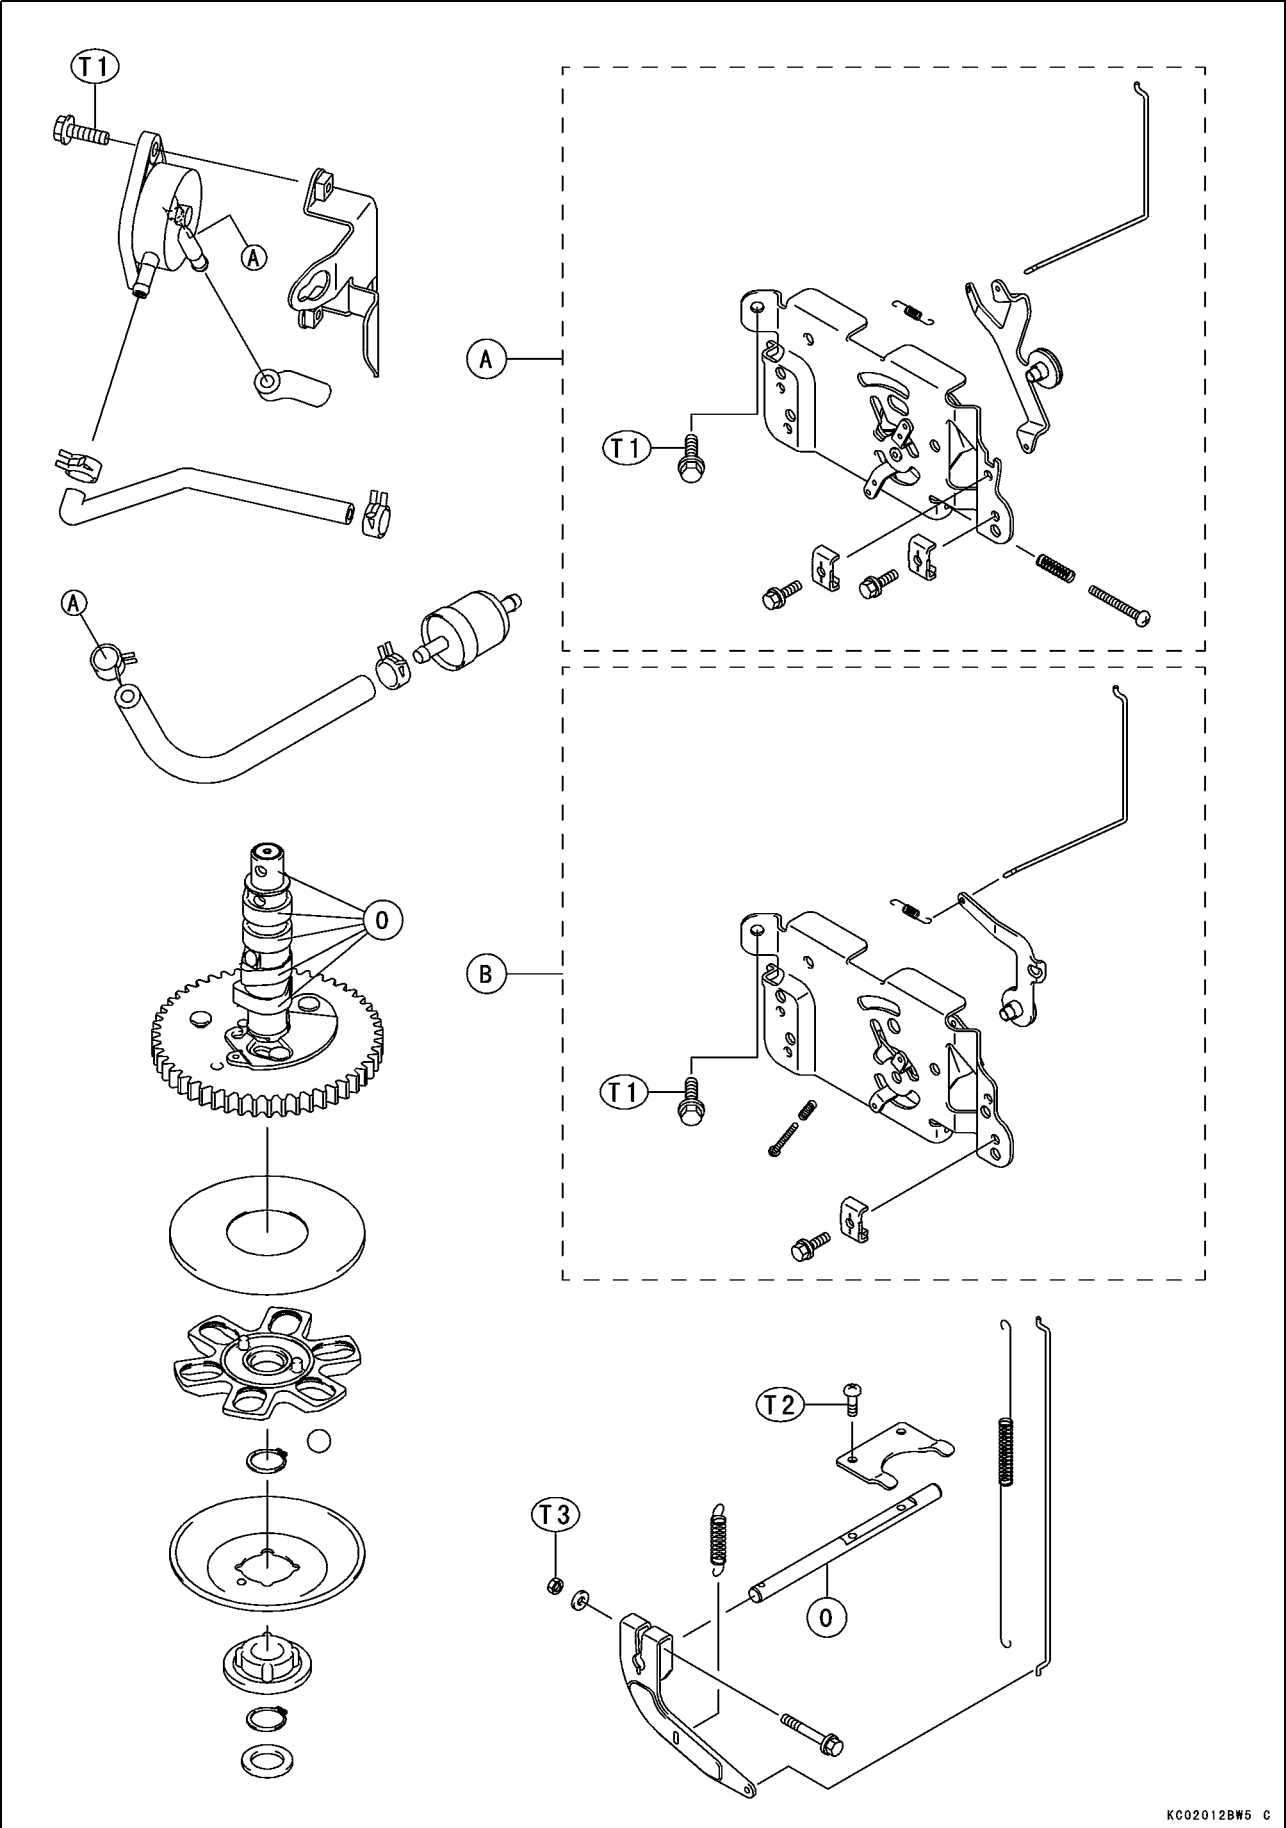

Exploded View

[FH451V, FH500V, FH531V]

T1: 5.9 N·m (0.60 kgf·m , 52 in·lb)

T2: 2.0 N·m (0.20 kgf·m , 17 in·lb)

T3: 7.8 N·m (0.80 kgf·m , 69 in·lb)

[FH541V, FH580V]

T1: 5.9 N·m (0.60 kgf·m , 52 in·lb)

T2: 2.0 N·m (0.20 kgf·m , 17 in·lb)

T3: 7.8 N·m (0.80 kgf·m , 69 in·lb)

[FH601V, FH641V, FH680V, FH721V]

T1: 5.9 N·m (0.60 kgf·m , 52 in·lb)

T2: 2.0 N·m (0.20 kgf·m , 17 in·lb)

T3: 7.8 N·m (0.80 kgf·m , 69 in·lb)

O: Apply engine oil.

A: Separate Choke Type

B: Associate Choke Type

2-10 FUEL SYSTEM

Specifications


Item	Standard				
	FH451V, FH500V	FH531V	FH541V	FH580V	FH601V, FH641V, FH680V, FH721V
Carburetor Specifications:					
Make/type	MIKUNI B24T1	←	Walbro LMF	←	Nikki 621266
Throttle bore diameter	24 mm (0.94 in.)	←	←	←	26 mm (1.02 in.)
Venturi diameter	16 mm (0.63 in.)	18 mm (0.71 in.)	16 mm (0.63 in.)	18 mm (0.71 in.)	21 mm (0.83 in.)
Main Jet (MJ)	#125	#116.3	#100	#105	L: #136, R: #140
Pilot jet (PJ)	#48.8	#43.8	#48	#50	L: #46, R: #44
Main air jet (MAJ)	φ1.7	φ1.4	#150	#110	φ1.7
Pilot air jet (PAJ)	φ1.2	φ0.8	#170	#140	φ1.1
Pilot air screw turns out (PS) (Idle mixture screw turns out)	2 1/4	1 3/8	2 1/2	1 7/8	L: 2 1/4, R: 1 1/4
Float level	Float parallel to carburetor body				
Idle Speed: (1)					
Low idle speed	1550 r/min (rpm)				
High idle speed	3600 r/min (rpm)				
Air Cleaner:					
Type	Dual stage filtration system				
Pre-cleaner	Foam element				
Second-stage cleaner	Paper element				
Fuel:					
Fuel requirement	Unleaded regular grade gasoline				
Fuel Pump:					
Type	Pulse-diaphragm pump				
Governor:					
Type	Flyweight all speed governor				

(1) Idle speeds may vary depending on each equipment. Refer to the equipment specification.


Governor Link Mechanism

Control Panel Assembly Removal

- Remove:
- Air Cleaner (see Cleaner Body Removal)
- Air Cleaner Mount Bracket Bolts [A]
- Air Cleaner Mount Bracket [B]
- Earth Lead (Starter Model)
- Control Panel Mounting Bolts [C]

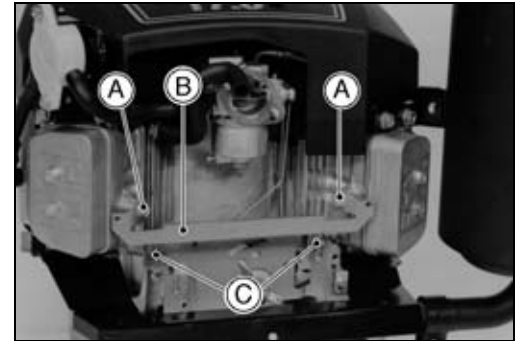


- Remove the control panel assembly [A] while unhooking the governor spring [B] end loop at the panel bracket.
- Clear the choke link rod lower end [C] from the choke lever.

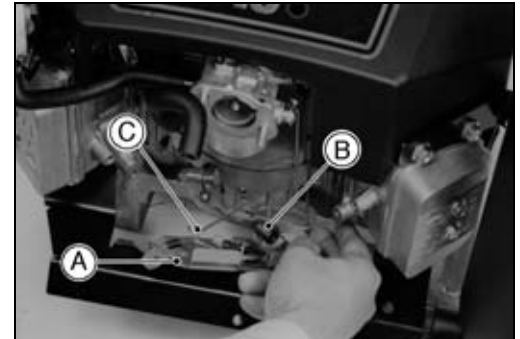


Control Panel Assembly Installation

- Before installing the control panel assembly, check to see that the choke lever [A] and engine speed control lever [B] move smoothly in all directions.
- ★ If any part is worn or damaged, replace the control panel assembly.
- After installation, adjust the low idle speeds and high idle speeds to the specifications (see Low Idle Speed and High Idle Speed adjustment).

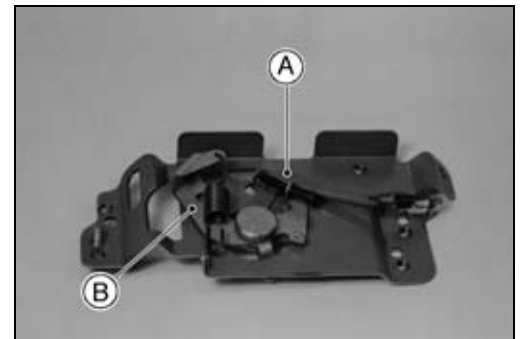


- For separate choke type; as shown in the figure.

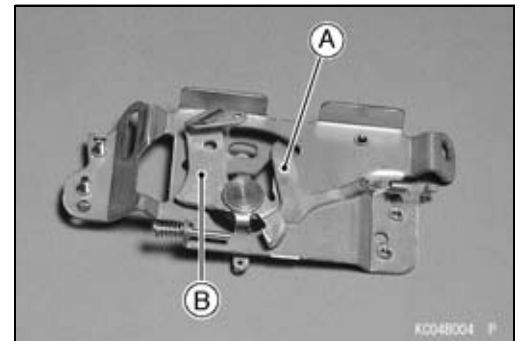

Governor Arm Removal


- Remove:
- Control Panel Assembly
- Loosen the clamp nut [A] and take off the governor arm [B].
- Unhooking the throttle link rod spring [C] end loop and clear the throttle link rod lower end [D].

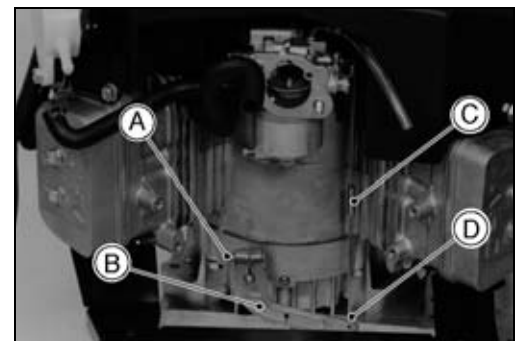

2-12 FUEL SYSTEM

Governor Link Mechanism

- For FH541V, FH580V model; as shown in the figure.

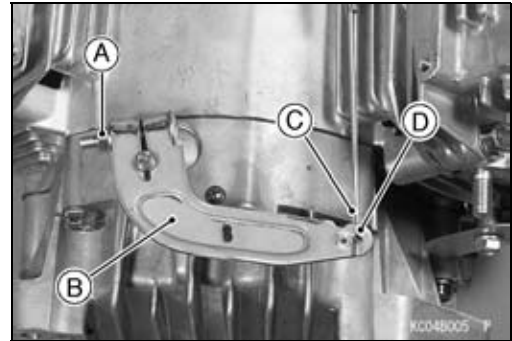


Governor Arm Installation

- Install the governor arm [A] onto the governor shaft [B] temporarily.
- Be sure the link spring [C] around the throttle link rod [D] is in place and that it pulls the governor arm and throttle lever [E] each other.
- Loosen the clamp nut [F] on the governor arm enough to move the governor shaft.
- Turn the top end of the governor arm counterclockwise to fully open the carburetor [G] throttle valve and hold it there.
- Turn the governor shaft counterclockwise, fully turn the shaft to end of its travel.
- Tighten the clamp nut.


Torque - Governor Arm Clamp Nut: 7.8 N·m (0.80 kgf·m, 69 in·lb)

- Be sure the governor shaft extend from the governor arm is approximately 7 mm (0.3 in) [H] as shown.
- Install the control panel assembly, and connect the governor arm with the governor spring.

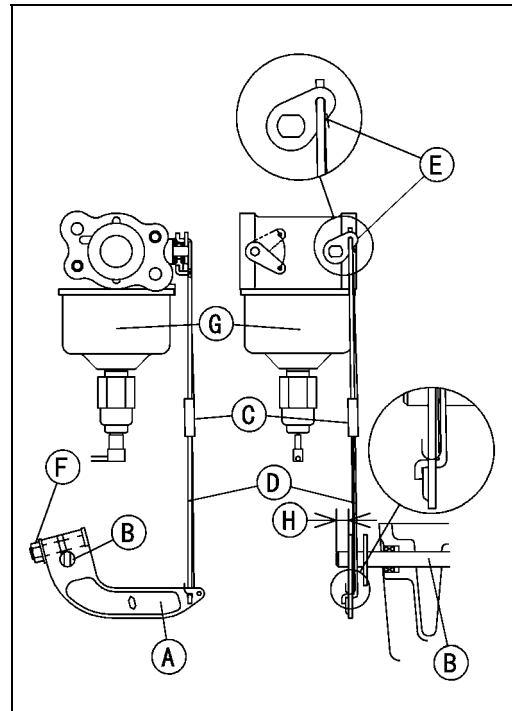


Governor Assembly Removal

- Remove the crankcase cover (see Camshaft/Crankshaft chapter).
- Remove the push rod. (see Engine Top End chapter)
- Upside down the engine.
- Remove the camshaft [A].

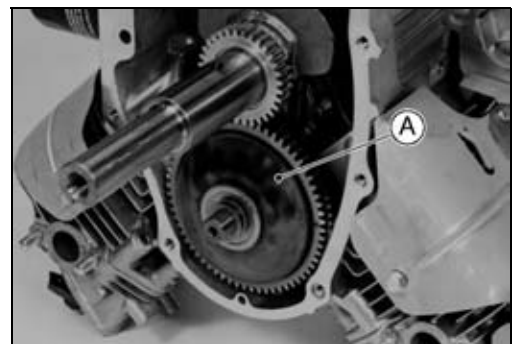


- Remove:
 - Washer [A]
 - Snap Ring [B]
 - Sleeve [C]
 - Governor Plate [D]
 - Snap Ring [B]
 - Steel balls [E]
 - Ball Guide [F]
 - Ball Plate [G]

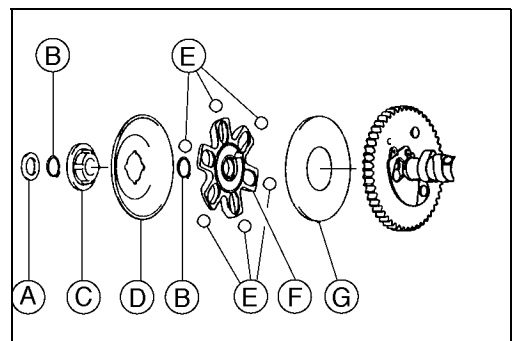

Governor Link Mechanism

Governor Assembly Installation

- Fit the snap rings [A] into the grooves securely.
- Spin the governor plate by hand and check that the steel balls and governor plate operate freely.

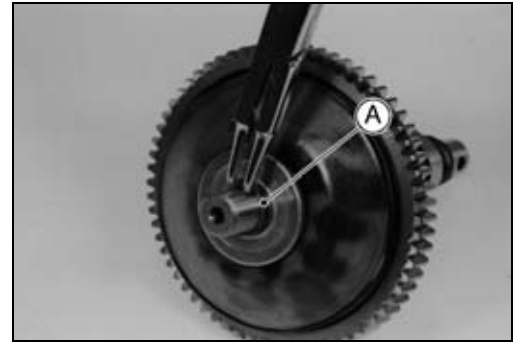

Governor Assembly Inspection

- Visually check all governor parts for wear and damage.
- ★ If any parts are worn or damaged, replace them.



Governor Shaft Removal

- Split the crankcase (see Camshaft/Crankcase chapter).
- Unscrew the governor shaft plate screws [A], and pull out the governor shaft [B] outside.

NOTE

○ It is not necessary to remove the governor shaft unless it is being replaced.

- Replace the oil seal only if the lip shows signs of leakage or it has been damaged.
- The oil seal [A] must be assembled with seal lip towards inside of the engine.
- Press in the oil seal 0 ~ 1.0 mm (0.04 in.) [B] flush or below the crankcase cover surface [C].

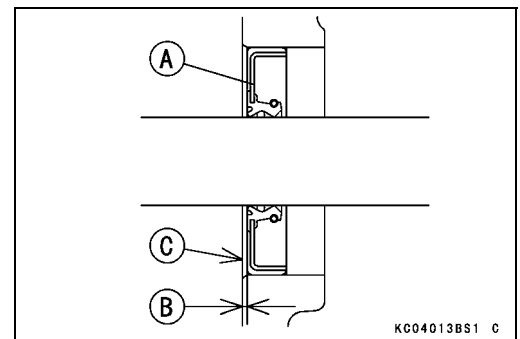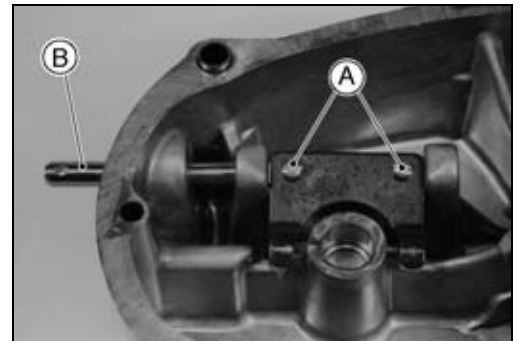

Governor Shaft Installation


- Apply engine oil to the governor shaft.
- Insert the governor shaft into the crankcase.
- Install the governor shaft plate [A] to the shaft [B] as shown.

Torque - Governor Shaft Plate Screws: 2.0 N·m (0.20 kgf·m, 17 in·lb)

- Check that the governor shaft moves freely in its operating range.

NOTE

○ If the oil seal is removed, oil seal is put on after shaft is installed.

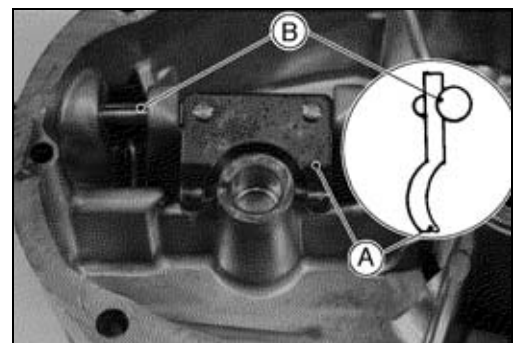


2-14 FUEL SYSTEM

Carburetor

Fuel and Air Flow

The main system of the carburetor consists of the main jet [A], valve seat [B] main nozzle [C], and the main air passage [D] (main air jet [E]). The main system meters fuel to the engine during moderate to heavy load conditions. Fuel flows through the main jet and into the main nozzle, where it is joined by air from the main air passage (main air jet). The resulting mixture flows out the end of the main nozzle into the carburetor bore, where it is atomized by the high speed air flow, and carried into the engine.

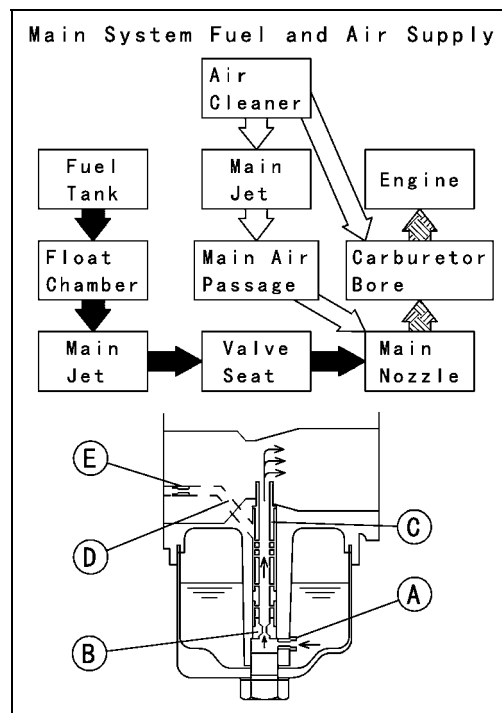


The pilot system includes the pilot jet [F], pilot screw [G] (Idle mixture screw), pilot air jet [H], pilot outlet [I], and the bypass holes [J]. The pilot system meters the fuel/air mixture while the engine is idling and running under a light load. Under these conditions there is very little air flow through the carburetor bore; so little that it is not enough to draw fuel through the main system of the carburetor and atomize it. Instead, the fuel is drawn through the pilot system, since the nearly closed throttle valve [K] causes high speed air flow past the pilot outlet and bypass holes (even at low engine speed).

Fuel flow in the pilot system is metered by the pilot jet. Air for better atomization is admitted via the pilot air jet in the mouth of the carburetor. The fuel/air mixture passes into the bore of the carburetor side stream of the throttle valve through the bypass holes and pilot outlet. While the throttle valve is almost closed, it covers the small bypass holes opening into the bore from the pilot system. As the throttle valve begins to open, it uncovers the bypass holes, allowing more fuel/air mixture to flow. The extra flow is needed because the engine starts to run faster as the throttle is opened. The pilot screw controls the amount of fuel/air mixture allowed through the pilot outlet, but does not meter the bypass holes. A moderate amount of air comes in around the throttle valve at an idle, so adjusting the pilot screw changes the fuel/air ratio. Turning the pilot screw (Idle mixture screw) out (Counterclockwise) enrichens the mixture; turning it in (clockwise) leans the mixture.

Main Fuel Flow →

Pilot Fuel Flow ⇒

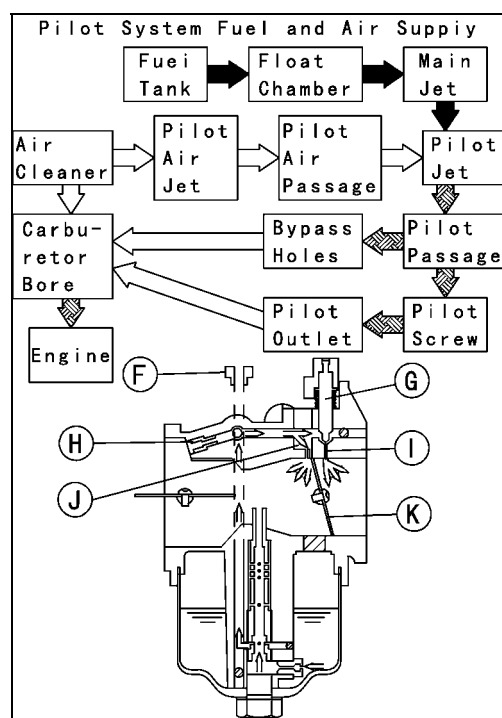


Carburetor

Fuel Shut Off Solenoid Valve (Electric Starter Model)

To avoid after firing when stopping the engine, a solenoid actuated fuel shut off solenoid valve [A] is installed in the carburetor bowl. The valve shuts off the fuel supply to the valve seat [B] simultaneously when the switch key turned to the "OFF" position.

The valve opens automatically when the switch key is turned to the "Run" position.

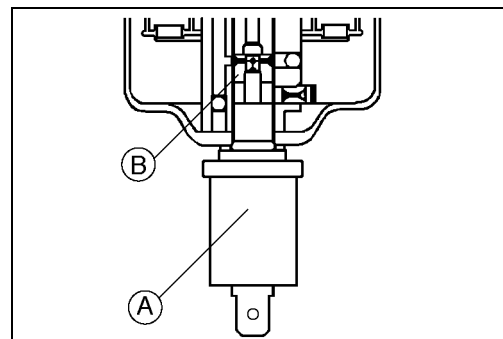

Low Idle Speed Adjustment

- Disconnect all possible external loads from the engine.
- Start the engine and warm it up thoroughly.

⚠ WARNING



Always keep your hands clear of the moving parts.

- Move the throttle lever on dash to the idle position, and hold the throttle lever on the carburetor in closed position (turn the governor arm clockwise all the way) and adjust the low idle speed screw [A] until the engine idles at specified speed.
- For FH601V, 641V, 680V, 721V model; adjust the low idle speed screw [C] with Phillips Screwdriver [D] until the engine idles at specified speed.

Low Idle Speed (Carburetor idle rpm)
1450 rpm

- Release the throttle lever and adjust the low idle speed set screw [A] on the control plate to obtain the specified governed low idle speed.

Low Idle Speed (Governed idle rpm)
1550 rpm

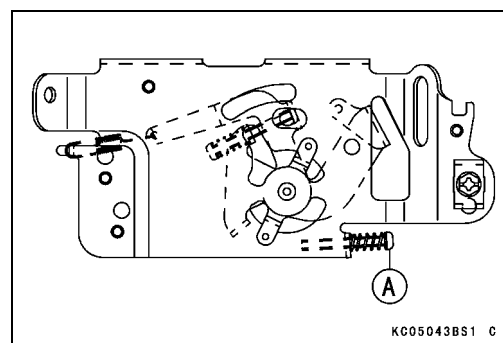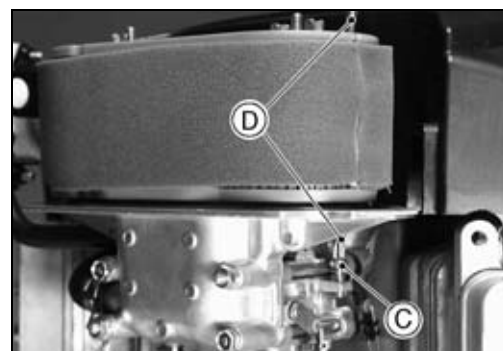

High Idle Speed Adjustment

NOTE

○High idle speed adjustment should be made after the low idle speed adjustment is performed.

CAUTION

Do not adjust high idle speed with the air cleaner removed.

- start and warm up the engine thoroughly.


2-16 FUEL SYSTEM

Carburetor

WARNING

Always keep your hands clear of the moving parts.

- Move the throttle lever at a dash to the high idle position and match the lever hole position with the panel hole by inserting 6 mm dia., pin or bolt [A].
- Loosen two M6 control panel mounting bolts [B] enough to move the control panel assembly.
- Carefully move the control panel assembly right side [C] up or down to obtain the specified high idle speed.

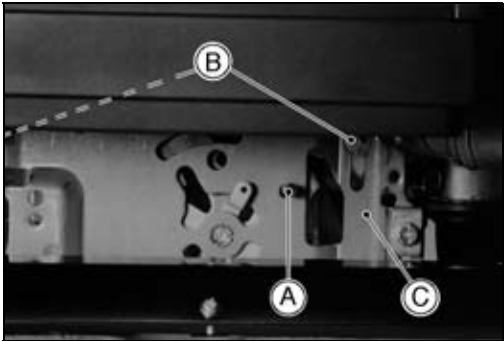

High Idle Speed
3600 rpm

- Tighten the M6 Mounting bolts.
Torque - Control Panel Mounting Bolts: 5.9 N·m (0.60 kgf·m, 52 in·lb)
- Remove the 6 mm dia., pin or bolt.
- Check the idle speed, and readjust the idle speed if necessary.

CAUTION

Be sure to make the idle and high idle speeds respectively correspond to those of the equipment.

High Altitude Operation

At high altitude, the standard carburetor air-fuel mixture will be excessively rich. Performance will decrease, and fuel consumption will increase. High altitude performance can be improved by installing a smaller diameter main-jet in the carburetor and correct idle speed.

NOTE

○The main jet high altitude kits are available if the equipment is to be used in the high altitudes. The main jet numbers are stamped on ends of the main jets.


High Altitude Main Jet

Altitude	Main Jet No					
	FH451V, FH500V	FH531V	FH541V	FH580V	FH601V, FH641V, FH680V, FH721V	
0 ~ 1 000 m (0 ~ 3 000 ft)	#125	#116.3	#100	#105	L: #136	R: #140
1 000 ~ 2 000 m (3 000 ~ 6 000 ft)	#122.5	#113.8	#98	#100	L: #133	R: #139
2 000 m (6 000 ft) and higher	#120	#111.3	#96	#98	L: #130	R: #134


Carburetor

Main Jet Replacement


- Place the engine (equipment) on a level surface.
- Close the fuel shut off valve in the equipment.
- Drain the fuel in the carburetor completely by unscrewing the drain screw at the bottom of the float chamber.
- Remove the carburetor (see Carburetor Removal).
- Unscrew the float chamber bolt [A] and take off the float bowl [B].
- For Electric Starter model, unscrew the solenoid valve, and take off the valve and gasket.

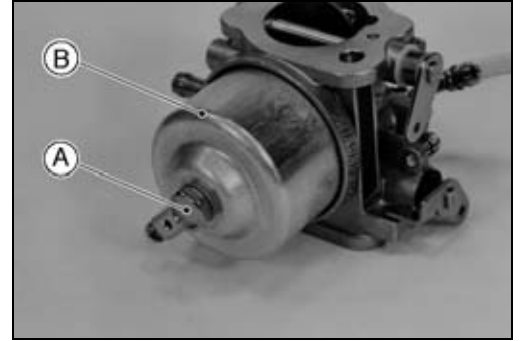


- Using a proper blade screw driver, carefully replace the main jet (A) with a new one for altitude expected.
- Tighten the main jet to the specification (see Carburetor Disassembly Assembly Notes).
- Install the float chamber, gasket and float bowl bolt.
- For Electric Starter model, install the float chamber, gasket and solenoid valve.

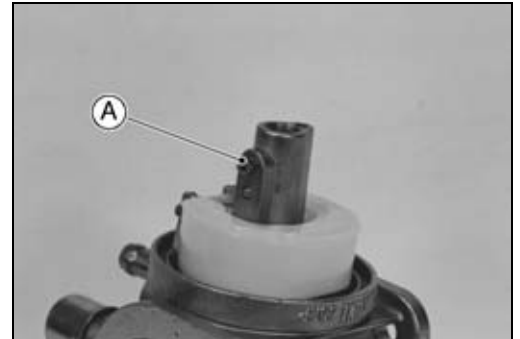

- For FH601V, 641V, 680V, 721V model; note the following.
 - Remove the carburetor (see Carburetor Removal).
 - Unscrew the main jet plugs [C] and take off the main jet plugs and gaskets.
 - Make sure that "L"[L] or "R"[R] mark on the float bowl is shown the main jet position.
 - Using a proper blade screw driver, carefully replace the main jet [D] with a new one for altitude expected.
 - Tighten the main jet to the specification (see Carburetor Disassembly/Assembly).
 - Install the gasket and the main jet plug.

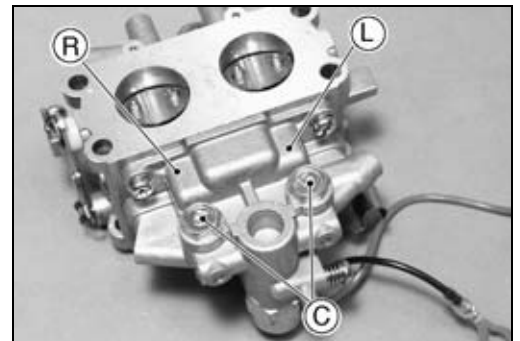

Torque - Main Jet Plug: 19 N·m (1.9 kgf·m, 14 ft·lb)

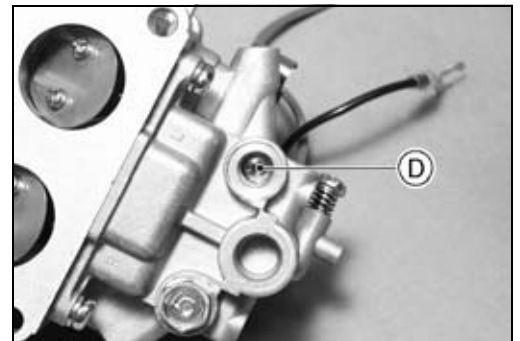

2-18 FUEL SYSTEM

Carburetor

Fuel system Cleanliness Inspection

WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Remove the air cleaner. (see Cleaner Body Removal)
- Place a suitable container [A] under the drain screw (B) on the carburetor.
- Turn out the drain screw a few turns to drain the carburetor and check to see if water or dirt has accumulated in the carburetor.
- For FH541V, FH580V model; remove the float bowl to drain the carburetor and check to see if water or dirt has accumulated in the carburetor.
- Tighten the drain screw.

Torque - [FH451V, 500V, 531V]

Drain Screw: 1.3 N·m (0.13 kgf·m, 11 in·lb)

[FH601V, 641V, 680V, 721V]


Drain Screw: 2.0 N·m (0.2 kgf·m, 18 in·lb)

- For FH541V, FH580V model; tighten the solenoid valve or float bowl mounting screw.

Torque - Solenoid Valve: 4.5 N·m (0.46 kgf·m, 40 in·lb)

Float Bowl Mounting Screw: 4.5 N·m (0.46 kgf·m, 40 in·lb)

- If any water or dirt is found, clean the carburetor (see Carburetor Cleaning), and fuel tank, and check the fuel filter.

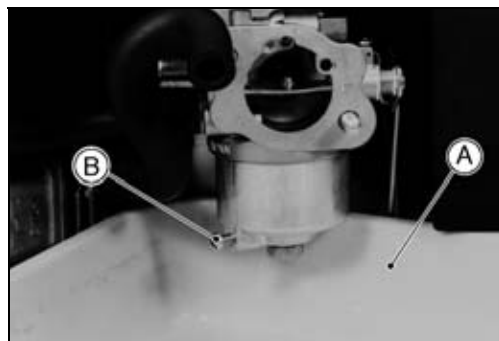


Carburetor Removal

WARNING


Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Remove:
 - Air Cleaner and Related Parts (see Cleaner Body).
- Turn the fuel shut off valve to the OFF position.
- Drain the carburetor.
- Disconnect the fuel tube at the fuel inlet joint [A] of the carburetor.
- For Electric Stator model, disconnect the solenoid valve lead terminal and remove the earth terminal.
- Unhook the throttle link spring [B] at the throttle shaft lever [C] top end with a long nose plier.
- Unhook the throttle [D] and choke link rods [E] at the top ends of their arms while pull off the carburetor.

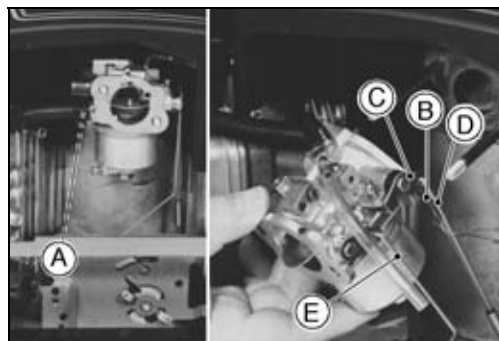


Carburetor

- For FH541V, FH580V model; as shown in the figure.

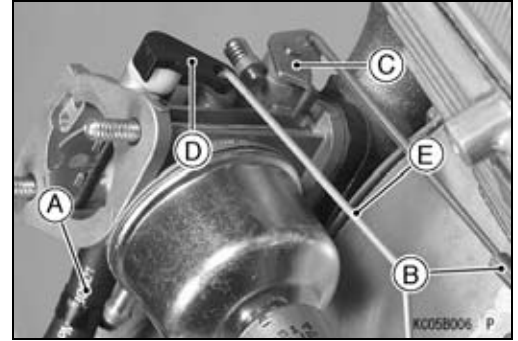

- For FH601V, 641V, 680V, 721V model; note the following.
 - Unhook the throttle link spring [B] at the link clip [F] with a long nose plier.
 - Unhook the link clip [F] and remove the throttle [D] and choke link rods [E] at the ends of their arms while pull off the carburetor.

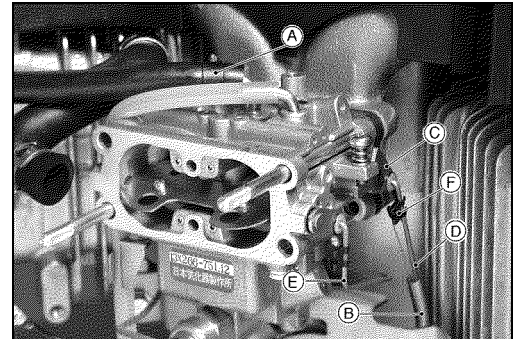


Carburetor Installation

- Clean the mating surfaces of the carburetor and intake manifold, and fit the new gaskets.
- Take care not to bend the throttle and choke link rods during installation. Make sure the link spring around the throttle link rod is in place and that it pulls the governor arm and carburetor throttle shaft lever toward each other.
- Be sure the fuel tube clip ends [A] face horizontal direction.

⚠ WARNING

Improper installation of the fuel intake hose clamp can result in gasoline leakage and potential fire hazard.

Be sure the clip ends of the hose clamp face in a horizontal direction. In a vertical position (see illustration), the clip ends [A] can come into contact with the intake pipe and become loose.

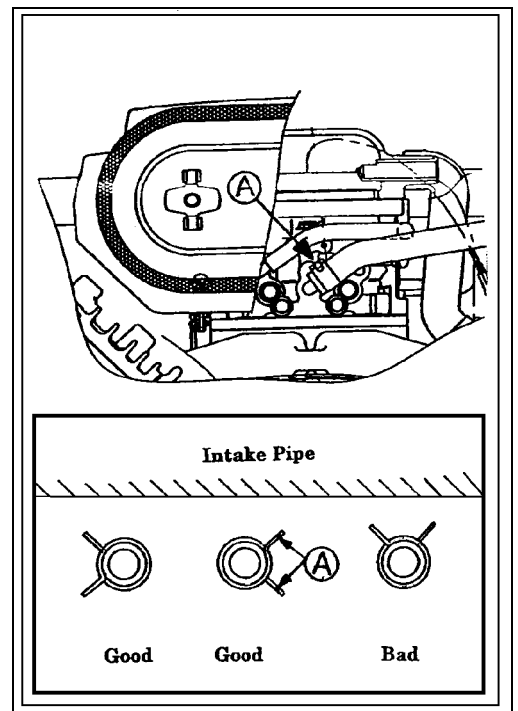

- Adjust:
 - Carburetor Pilot Screw
 - Idle Speed


2-20 FUEL SYSTEM

Carburetor

Carburetor Disassembly/Assembly - FH451V, 500V, 531V

- Refer to the illustration shown for disassembly and assembly.
- There are several passage plugs (Ball plugs) in the carburetor body. Do not remove.
- Before disassembly, mark the out side of choke valve and throttle valves for assembling them.
- Replace the pilot screw in accordance with the following procedure if necessary.
 - Carefully mark the position of the pilot screw limiter on the carburetor body so that it can be installed and set to its original position later.
 - Remove the limiter. Be careful not to turn pilot screw at this point.
 - Turn the pilot screw clockwise and count the number of turns until screw is gently seated in the pilot passage. Record the number of turns needed to closed the screw.
 - Turn out the pilot screw to replace it with anew one.
 - Install the new pilot screw until the screw is gently seated. Then open the screw the same number of turns as recorded prior to removal.
 - Align the limiter with the mark on the carburetor body to install, taking care not to turn the pilot screw.
- Install the choke valve and throttle valve on the shaft as the out side mark of them facing out side.
- Drive the float pin so that it's big diameter side faces the engine flange side.
- The fuel inlet valve seat is pressed into the carburetor body and is not replaceable.
- Assemble carburetor parts which recommended tightening torque. (see Exploded View)


- | | |
|-------------------------|---|
| 1. Limiter | 21. Float Bowl |
| 2. Pilot Screw | 22. Gasket |
| 3. Spring | 23. Bolt (Other than Solenoid Valve Type) |
| 4. Low Idle Speed Screw | 24. Gasket |
| 5. Spring | 25. Solenoid Valve (Electric Starter Model) |
| 6. Seal | 26. Drain Screw |
| 7. Ring | 27. Gasket |
| 8. Throttle Shaft | 28. Pin |
| 9. Throttle Valve | 29. Snap Ring |
| 10. Screws | 30. Float Valve |
| 11. Pilot Jet | 31. Main Air Jet |
| 12. Screw | 32. Air Jet |
| 13. Choke Valve | 33. Washer |
| 14. Choke Shaft | 34. E Type Circlip |
| 15. Spring | 35. Cap |
| 16. Coller | 36. Earth Lead (Electric Starter Model) |
| 17. Main jet | |
| 18. Float | |
| 19. Main Nozzle | |
| 20. Valve Seat | |

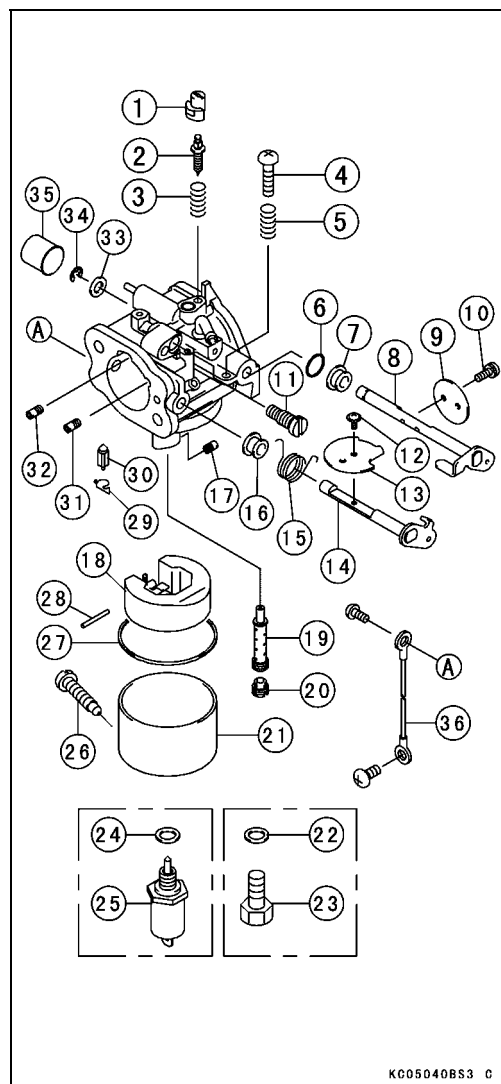

Carburetor

Carburetor Disassembly/Assembly-FH541V, FH580V

- Refer to the illustration shown for disassembly and assembly.
- There are several passage plugs (Ball plugs) in the carburetor body. Do not remove.
- Before disassembly, mark the out side of choke valve and throttle valves for assembling them.
- Replace the pilot screw in accordance with the following procedure if necessary.
 - Carefully mark the position of the pilot screw limiter on the carburetor body so that it can be installed and set to its original position later.
 - Remove the limiter. Be careful not to turn pilot screw at this point.
 - Turn the pilot screw clockwise and count the number of turns until screw is gently seated in the pilot passage. Record the number of turns needed to close the screw.
 - Turn out the pilot screw to replace it with a new one.
 - Install the new pilot screw until the screw is gently seated. Then open the screw the same number of turns as recorded prior to removal.
 - Align the limiter with the mark on the carburetor body to install, taking care not to turn the pilot screw.
- Install the choke valve and throttle valve on the shaft as the out side mark of them facing out side.
- Drive the float pin into the carburetor body from the choke valve side.
- Assemble carburetor parts with recommended tightening torque (see Exploded View).
 1. Limiter
 2. Pilot Screw
 3. Spring
 4. Spacer
 5. Low Idle Speed Screw
 6. Spring
 7. Screws
 8. Throttle Valve
 9. Throttle Shaft
 10. Dust Seal
 11. Choke Valve
 12. Choke Shaft
 13. Dust Seal
 14. Solenoid Valve (Electric Starter Model)
 15. Gasket
 16. Float Bowl
 17. Gasket
 18. Float Pin
 19. Float
 20. Main Jet
 21. Main Nozzle
 22. Float Valve
 23. Gasket
 24. Screw (Other than Solenoid Valve Type)

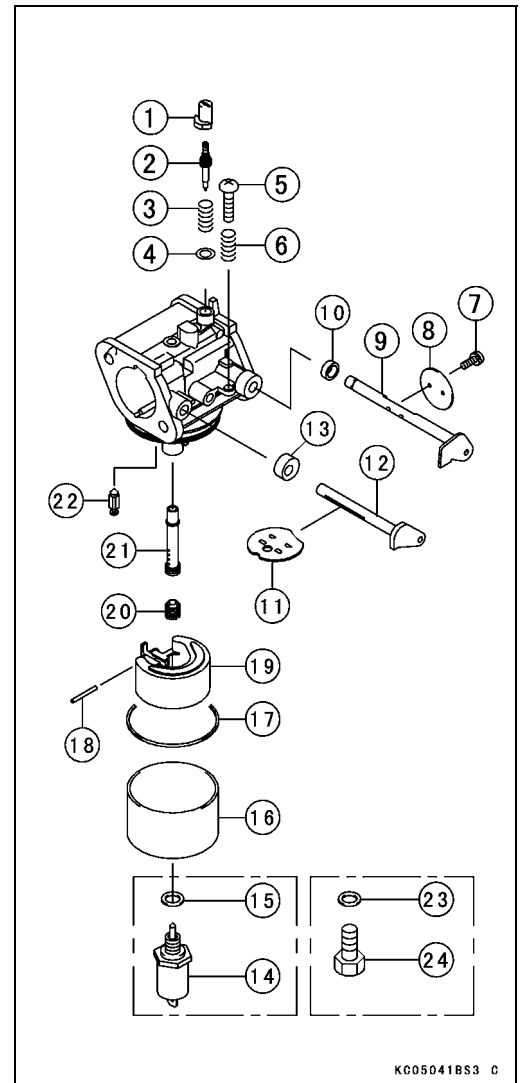


2-22 FUEL SYSTEM

Carburetor

Carburetor Disassembly/Assembly-FH601V, 641V, 680V, 721V.

- Refer to the illustration shown for disassembly and assembly.
- There are several passage plugs (Ball plugs) in the carburetor body. Do not remove.
- Before disassembly, mark the out side of choke valve and throttle valves for assembling them.

- | | |
|-------------------------|--------------------|
| 1. Plug Pilot Screw | 15. Float |
| 2. Pilot Screw | 16. Gasket |
| 3. Low Idle Speed Screw | 17. Float Bowl |
| 4. Spring | 18. Screw |
| 5. Seal | 19. Clamp |
| 6. Collar | 20. Plug Main Jet |
| 7. Throttle Valve | 21. Gasket |
| 8. Screws | 22. Main Jet: L |
| 9. Throttle Shaft | 23. Main Jet: R |
| 10. Choke Valve | 24. Slow Jet |
| 11. Choke Shaft | 25. Drain Screw |
| 12. Seal | 26. Spring |
| 13. Float Valve | 27. Gasket |
| 14. Pin | 28. Solenoid Valve |

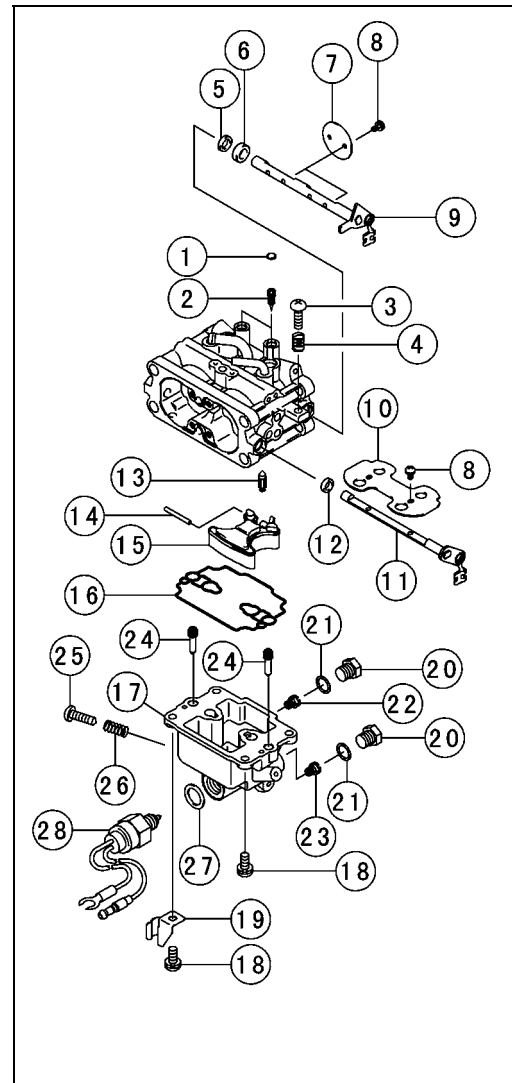


Carburetor

- Replace the pilot screw [A] in accordance with the following procedure if necessary.
- Remove the pilot screw plug [B] (material: Stainless steel) as follows: Punch a hole in the plug and pry it out with an awl or other suitable tool.
- Turn in the pilot screw and count the number of turns until it seats fully but not tightly, and then remove the screw. This is to set the screw to its original position when assembling.
- Turn in the new pilot screw [A] fully but not tightly, and then back it out the same number of turns counted during disassembly.
- Install a new pilot screw plug [B] in the pilot screw hole by pressing with the rod [C], and apply a small amount of a bonding agent [D] to the circumference of the plug to fix the plug.
- Install the choke valve and throttle valve on the shaft as the out side mark of them facing out side, and apply a small amount of a bonding agent to the valve screw threads.

CAUTION

Do not apply too much bonding agent to the valve screws itself may be fixed.

- Drive the float pin so that it's big diameter side faces the throttle shaft lever side.
- The fuel inlet valve seat is pressed into the carburetor body and is not replacable.
- Assemble carburetor parts which recommended tightening torque. (see Exploded View)

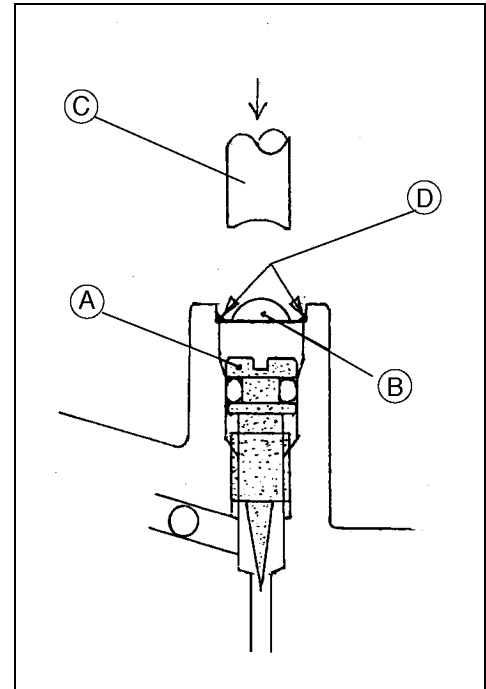

2-24 FUEL SYSTEM

Carburetor

Carburetor Cleaning

WARNING

Clean the carburetor in a well-ventilated area, and take care that there is no sparks or flame anywhere near the working area; this includes any appliance with a pilot light. Because of the danger of highly flammable liquids, do not use gasoline or low flash-point solvents to clean the carburetors.

CAUTION

Do not use compressed air on an assembled carburetor, or the floats may be crushed by the pressure. Remove as many rubber or plastic parts from the carburetor as possible before cleaning the carburetor with a cleaning solution. This will prevent to damage or deterioration of the parts.

The carburetor body has plastic parts that cannot be removed. Do not use a strong carburetor cleaning solution which could attack these parts; instead, use a mild high flash-point cleaning solution safe for plastic parts.

Do not use wire or any other hard instrument to clean carburetor parts, especially jets, as they may be damaged.

- Disassemble the carburetor.
- Immerse all the carburetor metal parts in a carburetor cleaning solution and clean them.
- Rinse the parts in water and dry them with compressed air.
- Do not use rags or paper to dry parts. Lint may plug the holes or passages.
- Blow air through the holes and fuel passages with the compressed air. All holes must be open.
- Assemble the carburetor.

Carburetor

Carburetor Inspection

⚠ WARNING



Gasoline is extremely flammable and can be explosive under certain. Turn the ignition switch OFF. Do not smoke. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Inspect the carburetor body for damage. Flange sealing surfaces should be smooth and free of burns and nicks. Replace the gasket if necessary.
- Turn the throttle and choke shafts to check that the throttle and choke butterfly valves move smoothly.
- ★ If the valves do not move smoothly, replace the carburetor body and/or throttle shaft and choke shaft assembly.
- Check the gasket on the carburetor body.
- ★ If the gasket is not in good condition, replace it.
- Check the other parts of the carburetor for wear or damage. Replace the part if necessary.
- Clean and check the float level as follows.

CAUTION

Do not push down on the float during float level checking.


- With the float [A] assembly installed onto the carburetor body [B], hold the carburetor upside down at eye level. Gently support the float with a finger and bring it down slowly so that the float arm tab [C] just touches the float valve [D]. The float lower surface [E] should be parallel with the carburetor body mating surfaces [F].
- ★ If the float position is not correct, replace the float with a new one.
- Inspect the float valve for excessive wear or damage. The tip should be smooth, without any grooves, scratches, or tears. The rod at the other end of the needle should move smoothly when push in and released.
- ★ If either the needle or the seat is worn or damaged, replace the float assembly and carburetor body as a set.

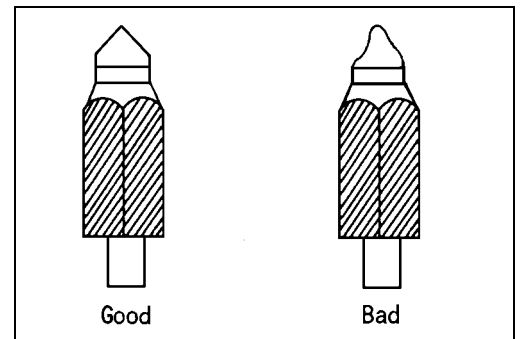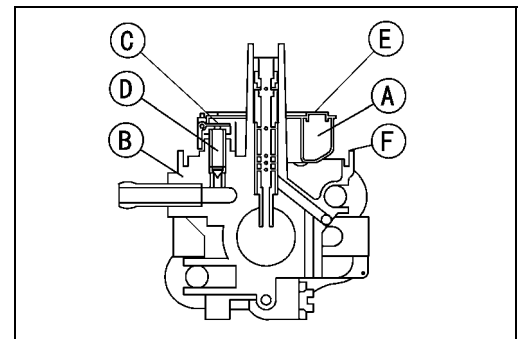


2-26 FUEL SYSTEM

Carburetor

- Inspect the tapered portion [A] of the pilot screw [B] for wear or damage.
- ★ If the pilot screw is worn or damaged on the taper portion, replace it.
- Check the spring for weakened condition, replace it, if necessary.

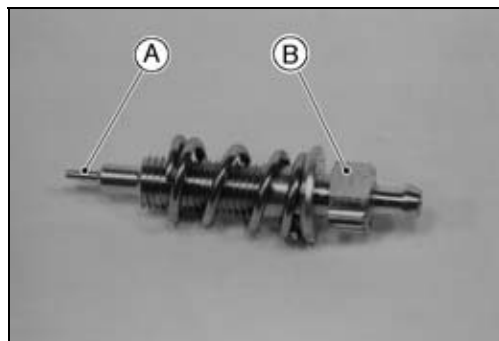

- For FH601V, 641V, 680V, 721V model; as shown in the figure.

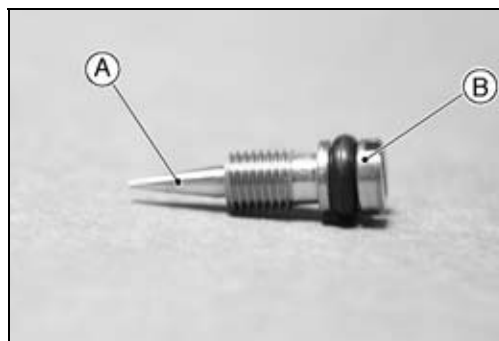


Fuel Shut-Off Solenoid Valve Test (Electric Starter Model)

- Unscrew the fuel shut off valve and remove the valve.
- Connect a 12 VDC source to the solenoid as shown.
- ★ If the actuate solenoid plunger (Needle Valve) does not pop in when the Test Voltage is applied, replace it.

NOTE



○ If may be necessary to push the plunger slightly for the plunger to withdraw.

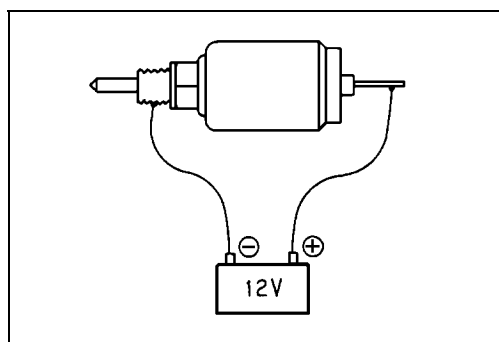

Intake Manifold


Intake Manifold Removal

- Remove:
 - Air Cleaner (see Cleaner Body Removal)
 - Engine Upper Cover
 - Cut off the band [A] and harness and/or wire lead are released from intake manifold.
 - Unscrew the manifold mounting bolts [B].
- Then lifting up the intake manifold middle [A] pull out the intake manifold from the carburetor [B] as shown.

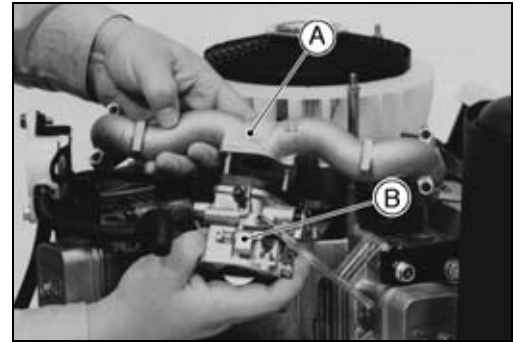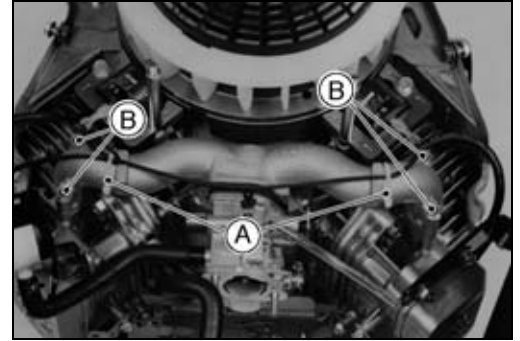


Intake Manifold Installation

- Replace the intake manifold gasket with new ones.
- Clean the mating surfaces of the cylinders and intake manifolds and fit a new gaskets [A] direction as shown.
 - [B] Distance (FH451V, 500V, 531V): 6 mm (0.24 in.)
 - [B] Distance (FH541V, 580V): 0 mm (0 in.)
 - [B] Distance (FH601V, 641V, 680V, 721V): 12 mm (0.47 in.)

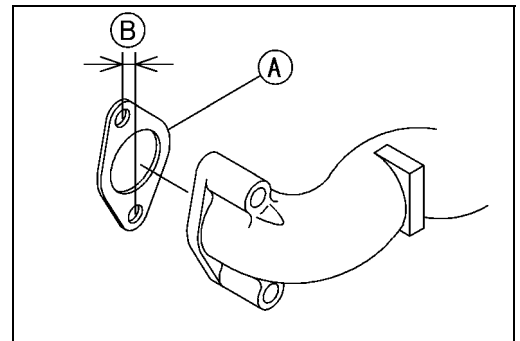


- Clean the mating surfaces of the carburetor and intake manifold and install the new gaskets [A] and insulator [B] sequence as shown.
- Install the intake manifold.
- Tighten the mounting bolts.

Torque - Intake Manifold Mounting Bolts: 5.9 N·m (0.6 kgf·m, 52 in·lb)

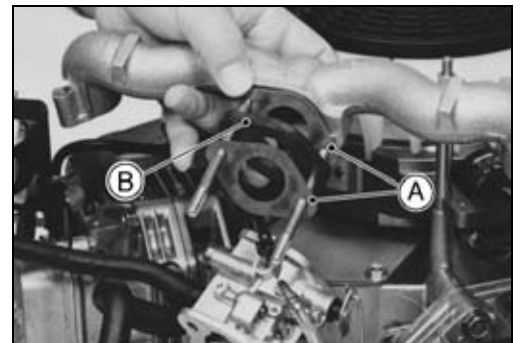

- Install and tighten the band [A] around the manifold [B] and wire lead [C] and/or harness [D].
- Position the wire and/or harness on top of the manifold as shown.
- Cut excess the band off.
- Install the other removed parts.

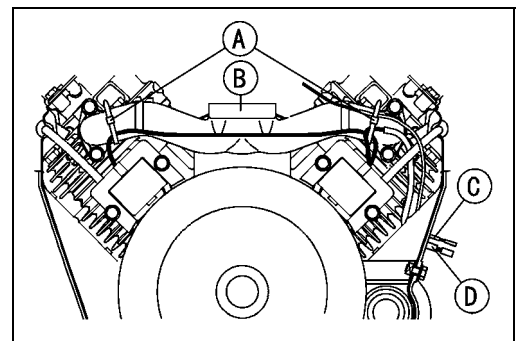

2-28 FUEL SYSTEM

Intake Manifold

Intake Manifold Inspection


- Inspect the intake manifold for cracks or porous casting.
- Cracks not visible to the eye may be detected by using a metal crack detection system. (Visual color check: commonly found at automotive parts store.)
- ★ If a crack is present in the intake manifold, replace it.
- Inspect the gasket surfaces for burns and nicks.

Fuel Pump, Fuel Filter

The fuel pump cannot be disassembled, if any damage for the pump is noticed replace it with a new one.

Fuel Pump Inspection

- Check the vent hole [A] and filter [B] for plugging or clogging.
- ★ If vent hole and filter are plugged or clogged, remove the foreign matter from them.

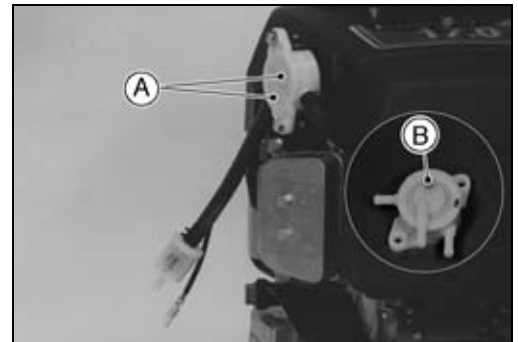

Fuel Flow Test:

⚠ WARNING


Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Disconnect the fuel pump outlet nozzle from the tube.
- Connect a suitable hose [A] to the outlet nozzle.
- Run the lower end of the hose into a container.
- Start the engine, Check the fuel flow.
- ★ If fuel flow is none or little, replace the fuel pump.
- ★ Check for clogged or damaged tubes and fuel filter. Replace the faulty parts.



Fuel Filter Inspection

- Visually inspect the fuel filter [A].
 - ★ If the filter is clear with no signs of dirt or other contamination, it is OK and need not be replaced.
 - ★ If the filter is dark or looks dirty, replace with a new one.
- Also check the rest of the fuel system for contamination.

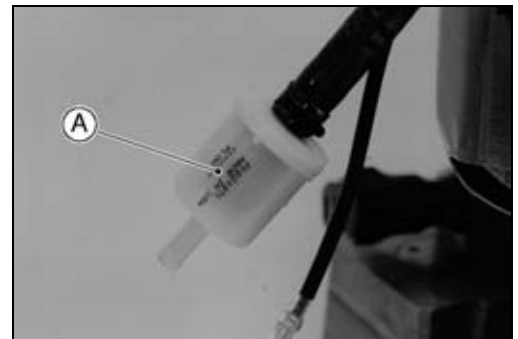


2-30 FUEL SYSTEM


Air Cleaner

Element Removal - FH451V, 500V, 531V, 541V, 580V

- Pull the hooks [A] to outside and remove the air cleaner cover [B].

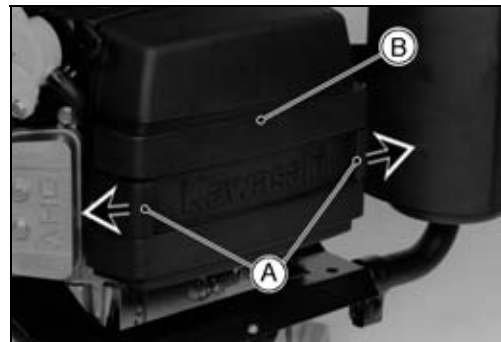


- Remove:
 - Wing Bolt [A]
 - Foam Element [B]
 - Paper Element [C]

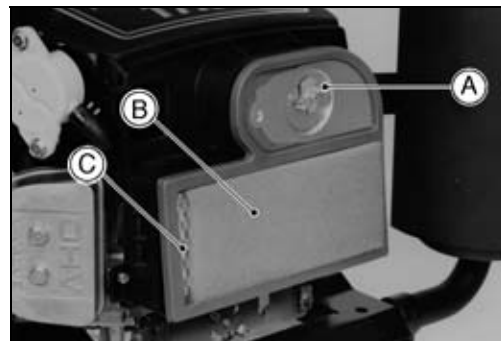

Element Removal - FH601V, 641V, 680V, 721V

- Remove
 - Air Cleaner Case Nut
 - Air Cleaner Case
 - Wing Nut [A]
 - Foam Element [B]
 - Paper Element [C]

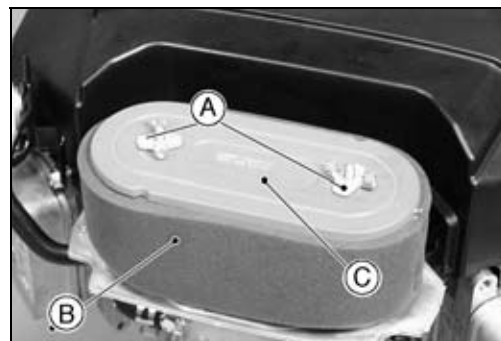

Element Installation

- Install the element correctly on the air cleaner body.
- Be sure the paper element is in-place in the air cleaner body.
- Be sure the foam element is in-place on the paper element body.

Element Cleaning and Inspection - FH451V, 500V, 531V, 541V, 580V


NOTE

○In dusty areas, the elements should be cleaned more frequently than the recommended intervals.

⚠ WARNING

Because of the danger of highly flammable liquids, do not use gasoline or a low flash-point solvent to clean the element.

- Remove the foam element and the paper element.
- Clean the foam element [A] in a bath of detergent and water, and let the element air-dry thoroughly before install it.

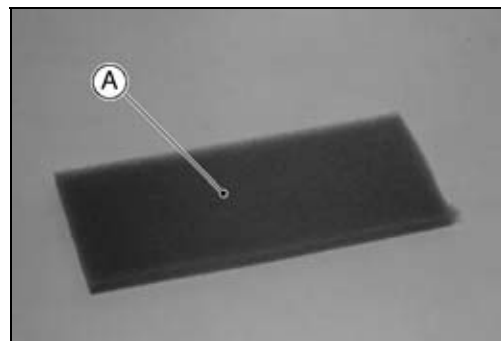


Air Cleaner

- Clean the paper element [A] by tapping it gently on a flat surface to remove dust. If the element is very dirty, replace it with a new one.


CAUTION

Do not use compressed air to clean the paper element. Do not oil the paper or foam element.

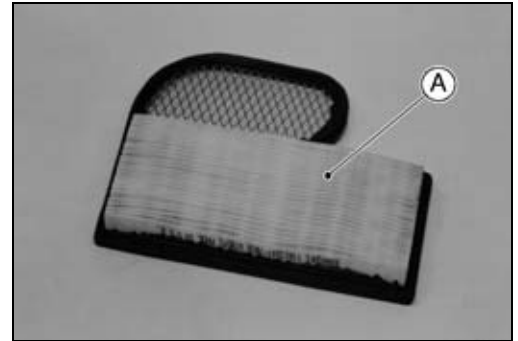


Element Cleaning and Inspection - FH601V, 641V, 680V, 721V

- See Element Cleaning and Inspection - FH451V, 500V, 531V
Foam Element [A]
Paper Element [B]

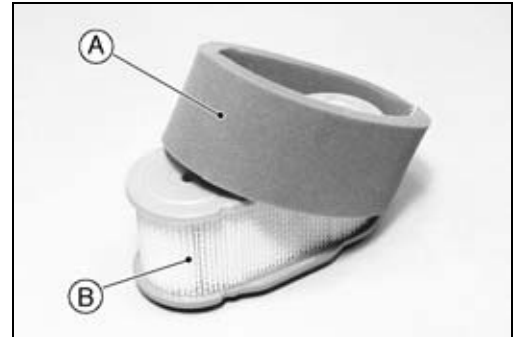


Cleaner Body Removal - FH451V, 500V, 531V, 541V, 580V

- Remove the elements. (see Element Removal)
- Remove the cleaner body mounting screws [A], holder plate nuts [B] and holder plate [C].

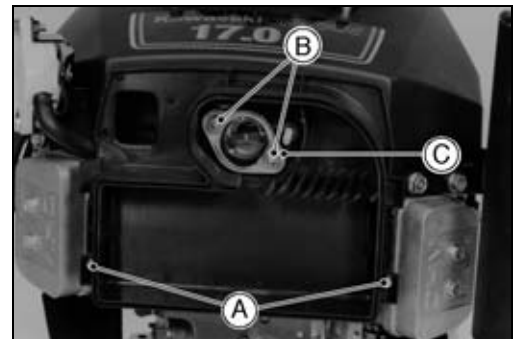


- Pull the breather tube [A] off the pipe at the back of the body, and remove the cleaner body [B].

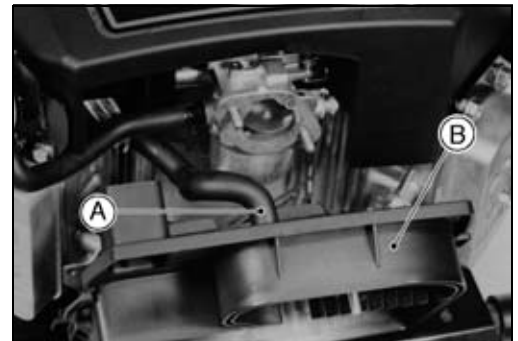

Cleaner Body Removal - FH601V, FH641V, FH680V, FH721V

- Remove the element. (see Element Removal).
- Remove the clamp [A], and take off the breather tube [B].
- Loosen nuts [C] and remove the solenoid valve wire [D].
- Unscrew the bolts [E] and remove the intake pipe [F].

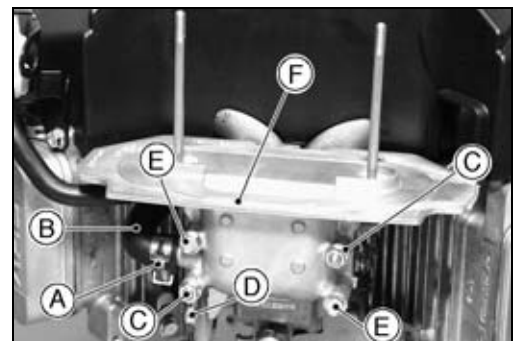

2-32 FUEL SYSTEM

Air Cleaner

Cleaner Body Installation - FH451V, 500V, 531V, 541V, 580V

- Connect the breather tube from the crankcase to the pipe at the back of the cleaner body.
- Tighten the holder plate nuts and cleaner body mounting screws.

Torque - Holder Plate Nuts: 5.9 N·m (0.6 kgf·m, 52 in·lb)


Cleaner Body Mounting Screws 3.4 N·m (0.35 kgf·m, 30 in·lb)

Cleaner Body Installation - FH601V, 641V, 680V, 721V

- Replace the intake pipe gasket with new ones.
- Clean the mating surfaces of the carburetor and intake pipe.
- Install the intake pipe and solenoid valve wire.
- Tighten the mounting bolts and nuts.

Torque - Intake Pipe Mounting Bolts and Nuts: 5.9 N·m (0.6 kgf·m, 52 in·lb)

- Install the sleeve on the intake pipe.
- Press-in the sleeve [A] to the intake pipe [B] fixing the groove [C] to the projection [D] as following.
- Connect the breather tube to the pipe at the intake pipe and clip it with a clamp.

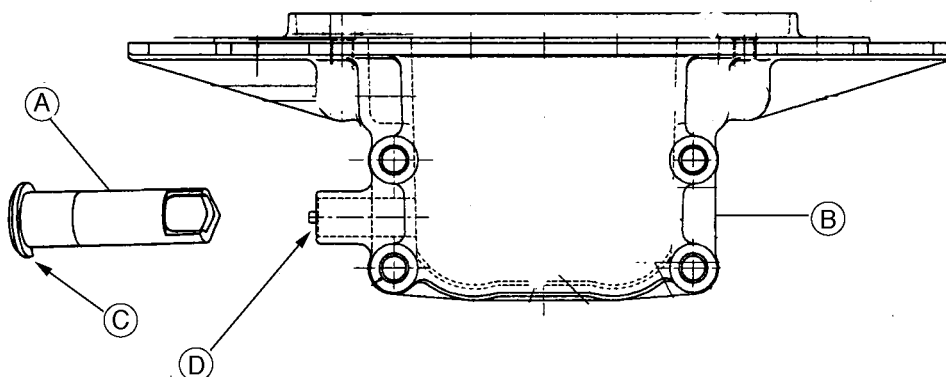

Housing (Case and Body) Inspection

- Clean the housing with detergent and water and dry thoroughly.
- Check the housing for deformation or other damage. The housing must seal well and permit only filtered air to reach the carburetor.
- ★ If the housing is damaged, it must be replaced.
- Check that no foreign material is obstructing the air passage.


Cooling System

Table of Contents

Exploded View	3-2
Cooling Fan	3-4
Cooling Fan Removal	3-4
Cooling Fan Installation	3-4
Cooling Fan Inspection	3-4
Screen Clearance Adjustment	3-4

3-2 COOLING SYSTEM

Exploded View

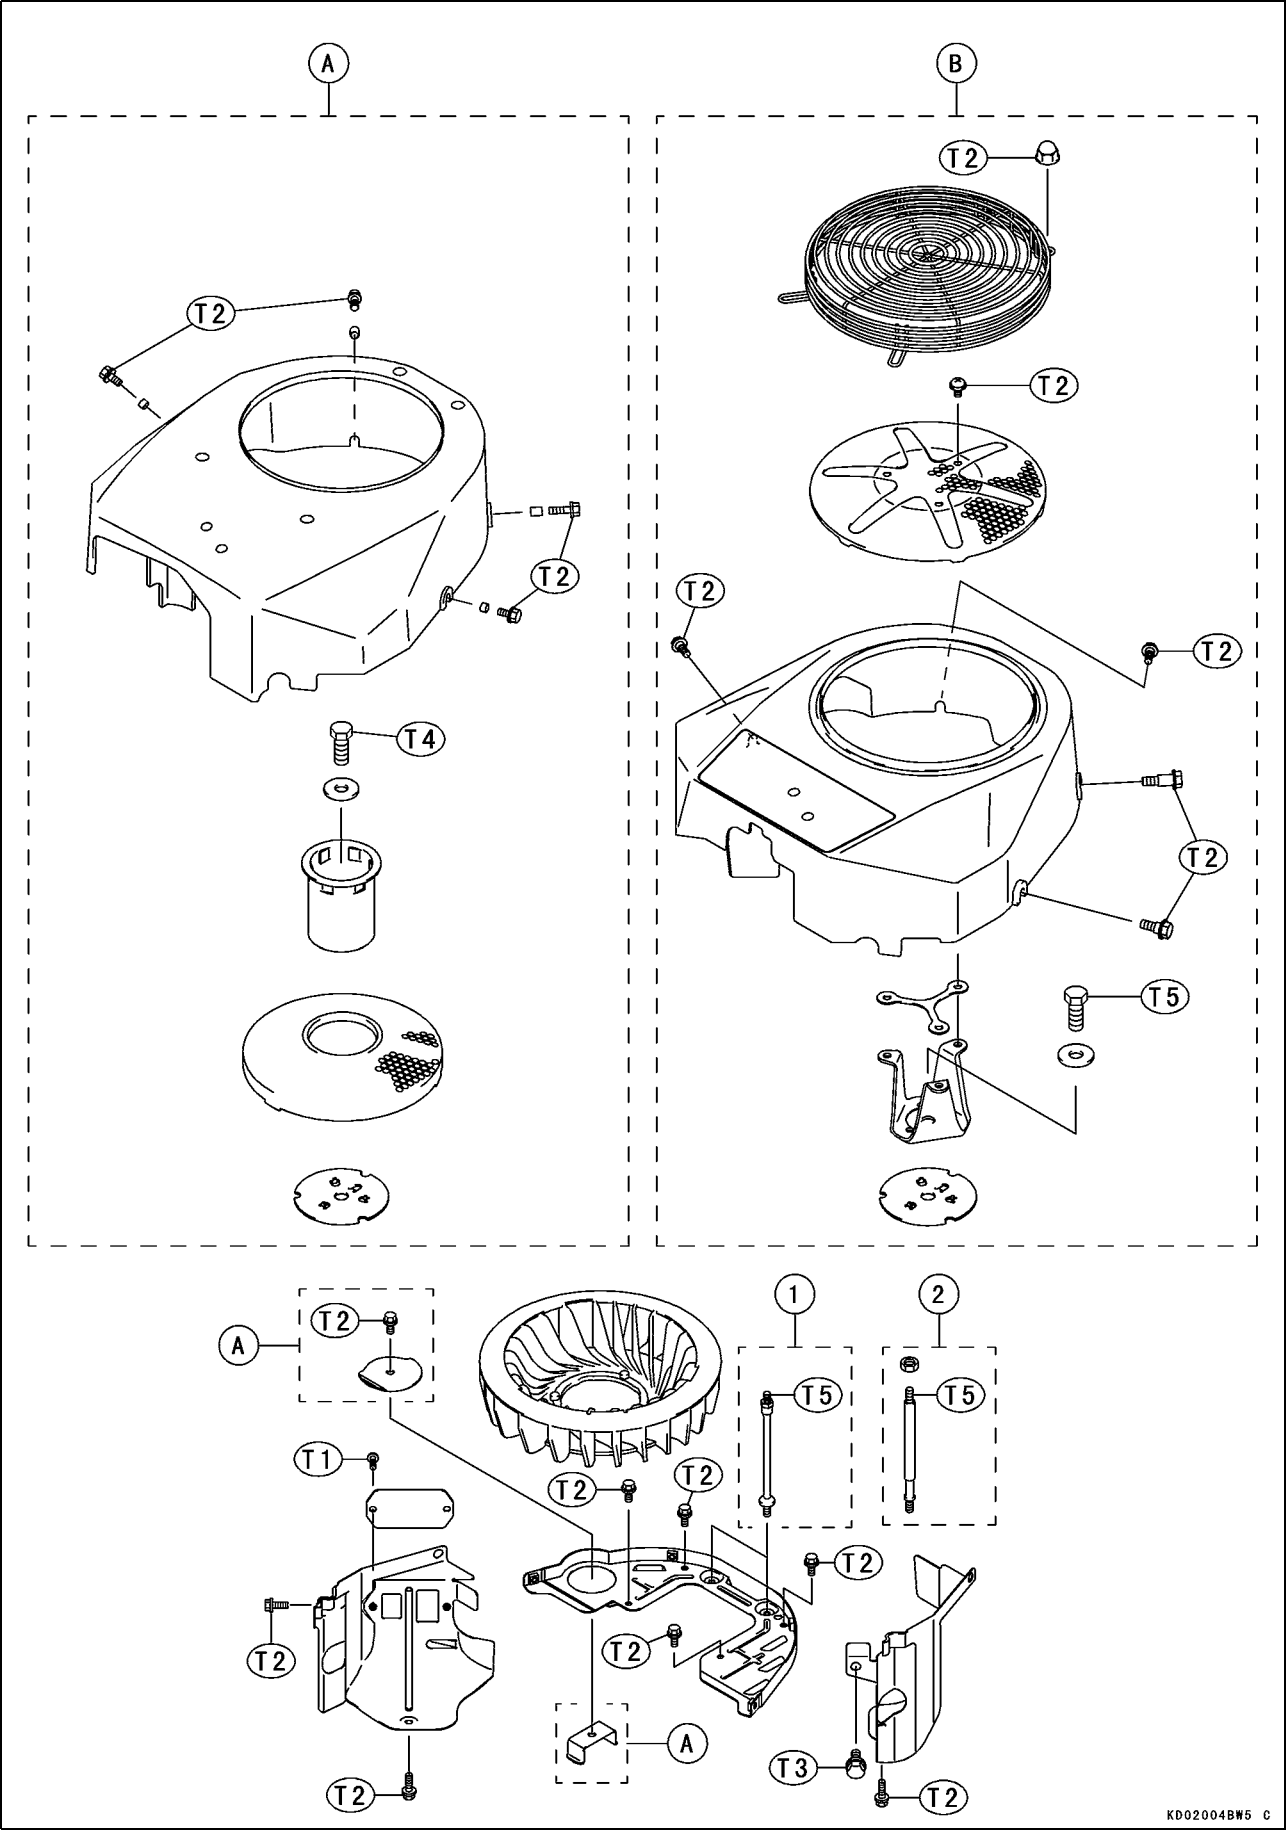

Exploded View

[FH451V, FH500V, FH531V]

T1: 3.9 N·m (0.40 kgf·m, 35 in·lb)
T2: 5.9 N·m (0.60 kgf·m, 52 in·lb)
T3: 17 N·m (1.7 kgf·m, 12.0 ft·lb)
T4: 56 N·m (5.7 kgf·m, 41 ft·lb)
T5: 7.8 N·m (0.8 kgf·m, 69 in·lb)

[FH541V, FH580V]

T1: 3.9 N·m (0.40 kgf·m, 35 in·lb)
T2: 5.9 N·m (0.60 kgf·m, 52 in·lb)
T3: 17 N·m (1.7 kgf·m, 12.0 ft·lb)
T4: 56 N·m (5.7 kgf·m, 41 ft·lb)
T5: 7.8 N·m (0.8 kgf·m, 69 in·lb)

[FH601V, FH641V, FH680V, FH721V]

T1: 3.9 N·m (0.40 kgf·m, 35 in·lb)
T2: 5.9 N·m (0.60 kgf·m, 52 in·lb)
T3: 17 N·m (1.7 kgf·m, 12.0 ft·lb)
T4: 56 N·m (5.7 kgf·m, 41 ft·lb)
T5: 7.8 N·m (0.8 kgf·m, 69 in·lb)

1. Stud (Before 2002/4 Product Model)
 2. Stud (On and after 2002/5 Product Model)
- A: Recoil Starter Model
B: Electric Starter Model

3-4 COOLING SYSTEM

Cooling Fan

Cooling Fan Removal


- Refer to Flywheel Removal in Electrical System chapter.

Cooling Fan Installation

- Refer to Flywheel Installation in Electrical System chapter.

Cooling Fan Inspection

- Visually inspect the blades [A] in the cooling fan [B].
- ★ If they are any cracks, warps or damaged, replace the cooling fan.
- ★ If any mud or dust have stuck to the cooling fan, clean it.
- Cooling fan is cleaned by washing in detergent and water.


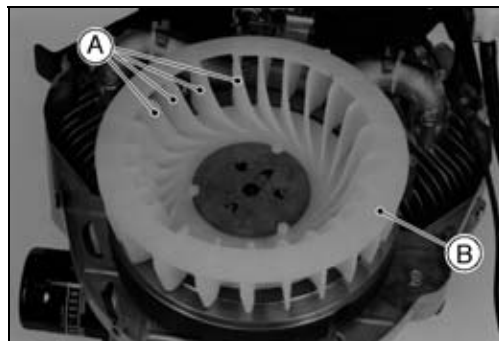


CAUTION

Do not clean the cooling fan in oil solvent. It may be damage by oil solvent.

Screen Clearance Adjustment

- Check clearance between screen [A] and fan housing [B]. If clearance is less than 1 mm (0.04 in.), add proper number of spacer [C] between screen and bracket comp [D] to adjust clearance [G] 1 ~ 3 mm (0.04 ~ 0.12 in.).
- F: Screws
G: Clearance 1 ~ 3 mm (0.04 ~ 0.12 in.)

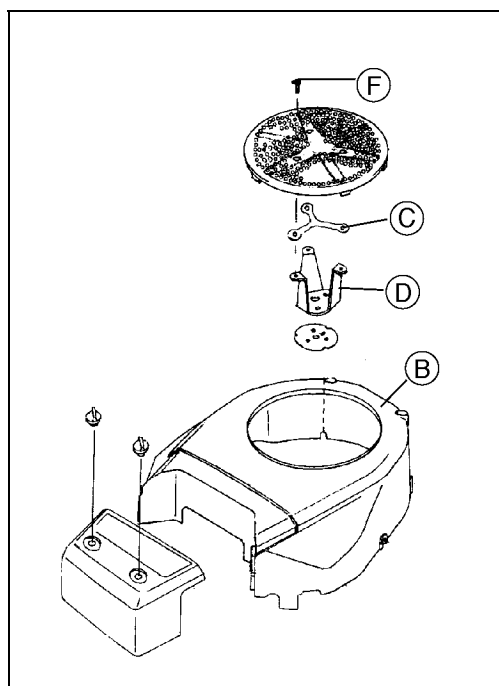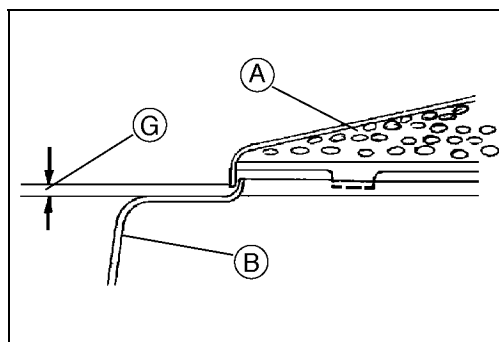


Engine Top End

Table of Contents

Exploded View	4-2
Specifications	4-6
Cylinder Head	4-9
Compression Measurement	4-9
Cylinder Head Assembly Removal	4-10
Cylinder Head Assembly Installation	4-10
Push Rod Removal	4-11
Push Rod Installation	4-11
Push Rod Inspection	4-12
Valve Mechanism Removal/Installation	4-12
Cleaning and Inspection	4-13
Valves	4-14
Valve Clearance Inspection	4-14
Valve Clearance Adjustment	4-14
Valve Seat Inspection	4-15
Valve Seat Repair	4-15
Valve Head Thickness	4-18
Valve Stem Runout	4-18
Valve Stem Diameter	4-18
Valve Guide Inside Diameter	4-18
Valve Spring Inspection	4-19
Cylinder, Piston	4-20
Piston Removal	4-20
Piston Installation	4-21
Piston/Cylinder Seizure	4-23
Piston Cleaning	4-23
Piston Ring and Ring Groove Wear	4-23
Piston Ring End Gap	4-24
Piston Pin, Piston Pin Hole, and Connecting Rod Wear	4-24
Piston Diameter	4-25
Cylinder Inside Diameter	4-25
Cylinder Boring and Honing	4-26
Muffler/Exhaust Pipe Installation	4-28
Muffler/Exhaust Pipe Removal	4-28
Muffler/Exhaust Pipe Installation	4-28
Inspection	4-28

4-2 ENGINE TOP END

Exploded View

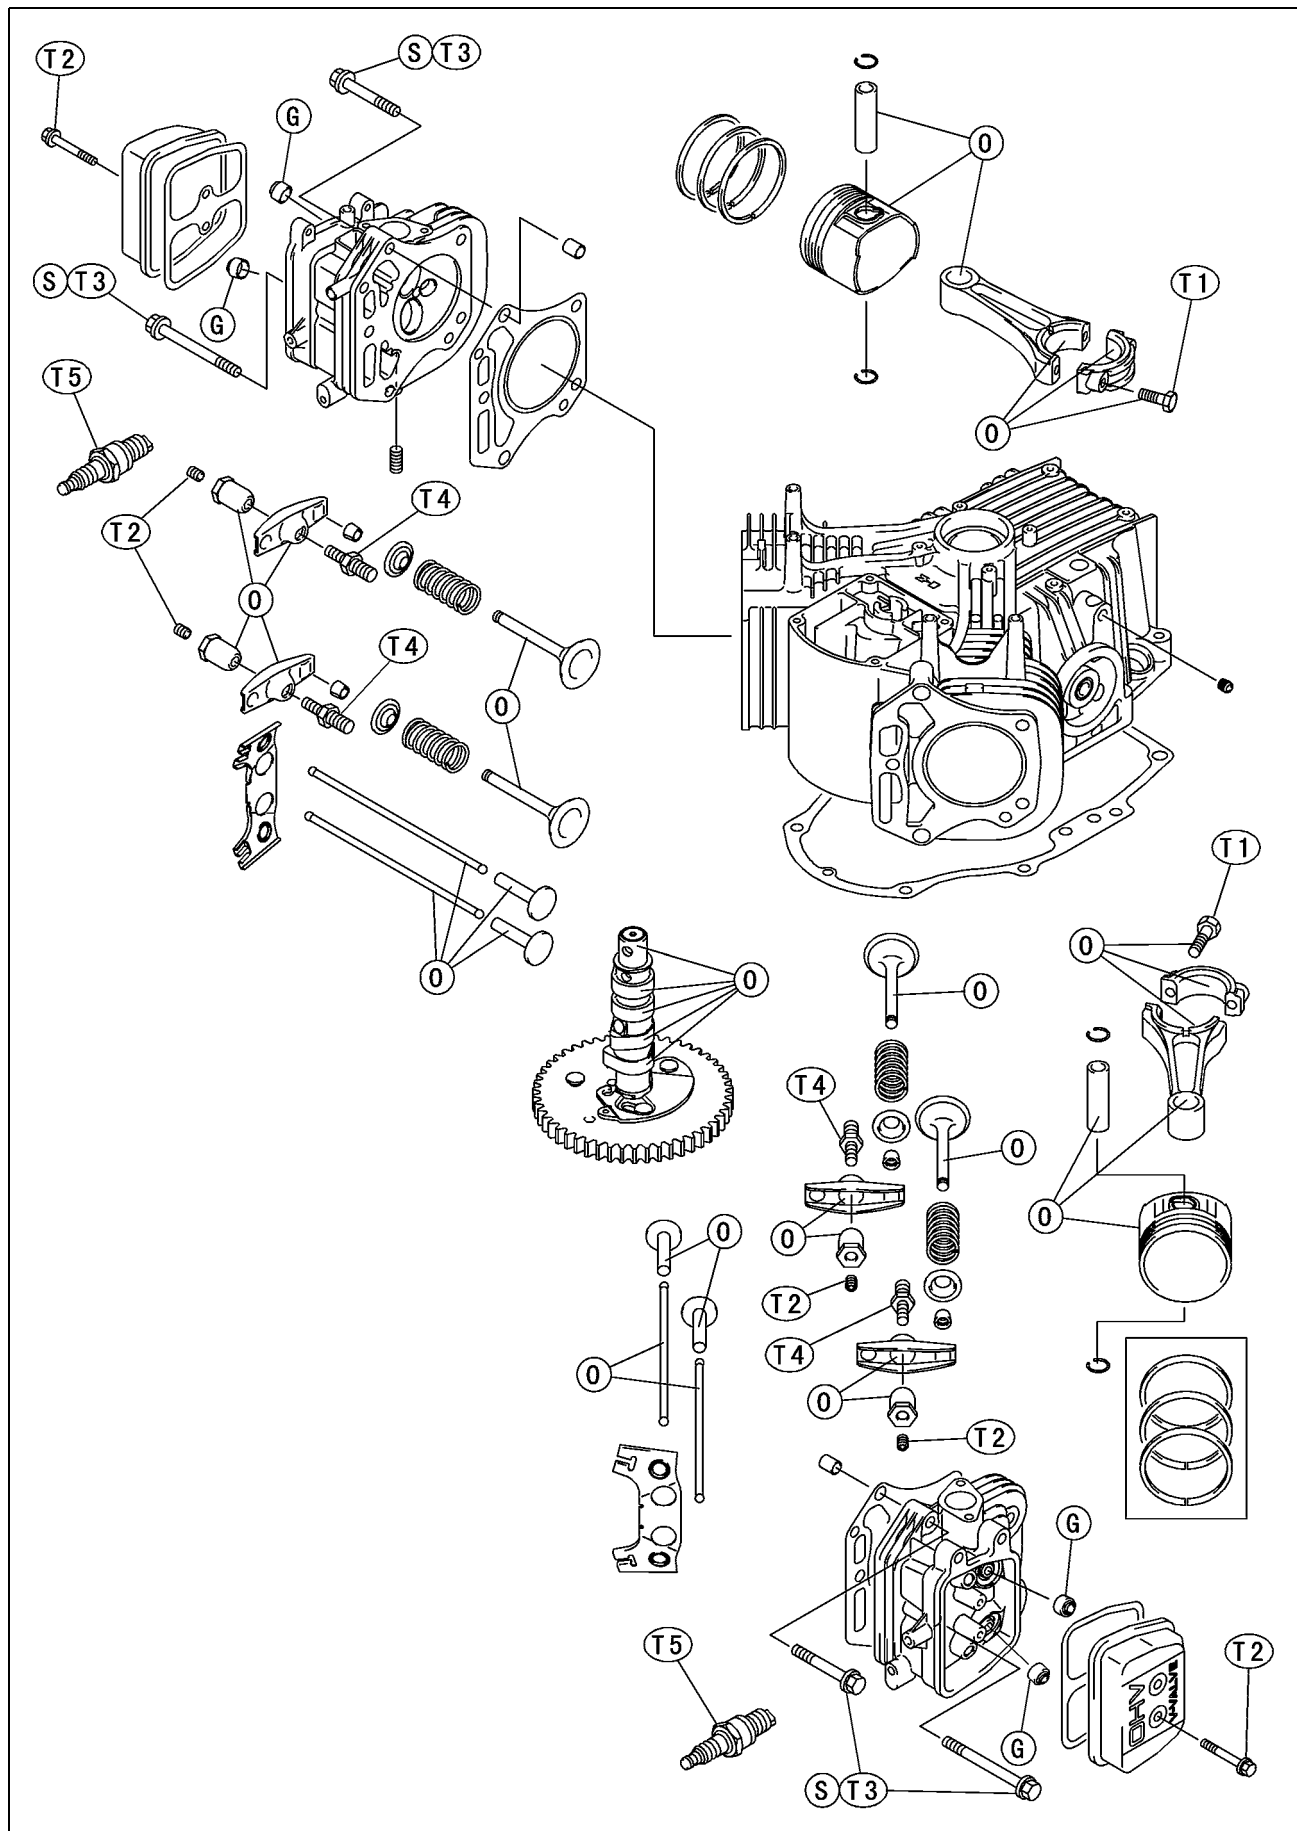

Exploded View

[FH451V, FH500V, FH531V]

T1: 5.9 N·m (0.60 kgf·m, 52 in·lb)
T2: 5.9 N·m (0.60 kgf·m, 52 in·lb)
T3: 25 N·m (2.6 kgf·m, 19.5 ft·lb)
T4: 28 N·m (2.8 kgf·m, 20 ft·lb)
T5: 22 N·m (2.2 kgf·m, 16 ft·lb)

[FH541V, FH580V]

T1: 9.8 N·m (1.0 kgf·m, 87 in·lb)
T2: 5.9 N·m (0.60 kgf·m, 52 in·lb)
T3: 25 N·m (2.6 kgf·m, 19.5 ft·lb)
T4: 28 N·m (2.8 kgf·m, 20 ft·lb)
T5: 22 N·m (2.2 kgf·m, 16 ft·lb)

[FH601V, FH641V, FH680V, FH721V]

T1: 21 N·m (2.1 kgf·m, 15 ft·lb)
T2: 5.9 N·m (0.60 kgf·m, 52 in·lb)
T3: 25 N·m (2.6 kgf·m, 19.5 ft·lb)
T4: 28 N·m (2.8 kgf·m, 20 ft·lb)
T5: 22 N·m (2.25 kgf·m, 16 ft·lb)


O: Apply engine oil.

G: Apply grease.

S: Follow the specific tightening sequence.

4-4 ENGINE TOP END

Exploded View

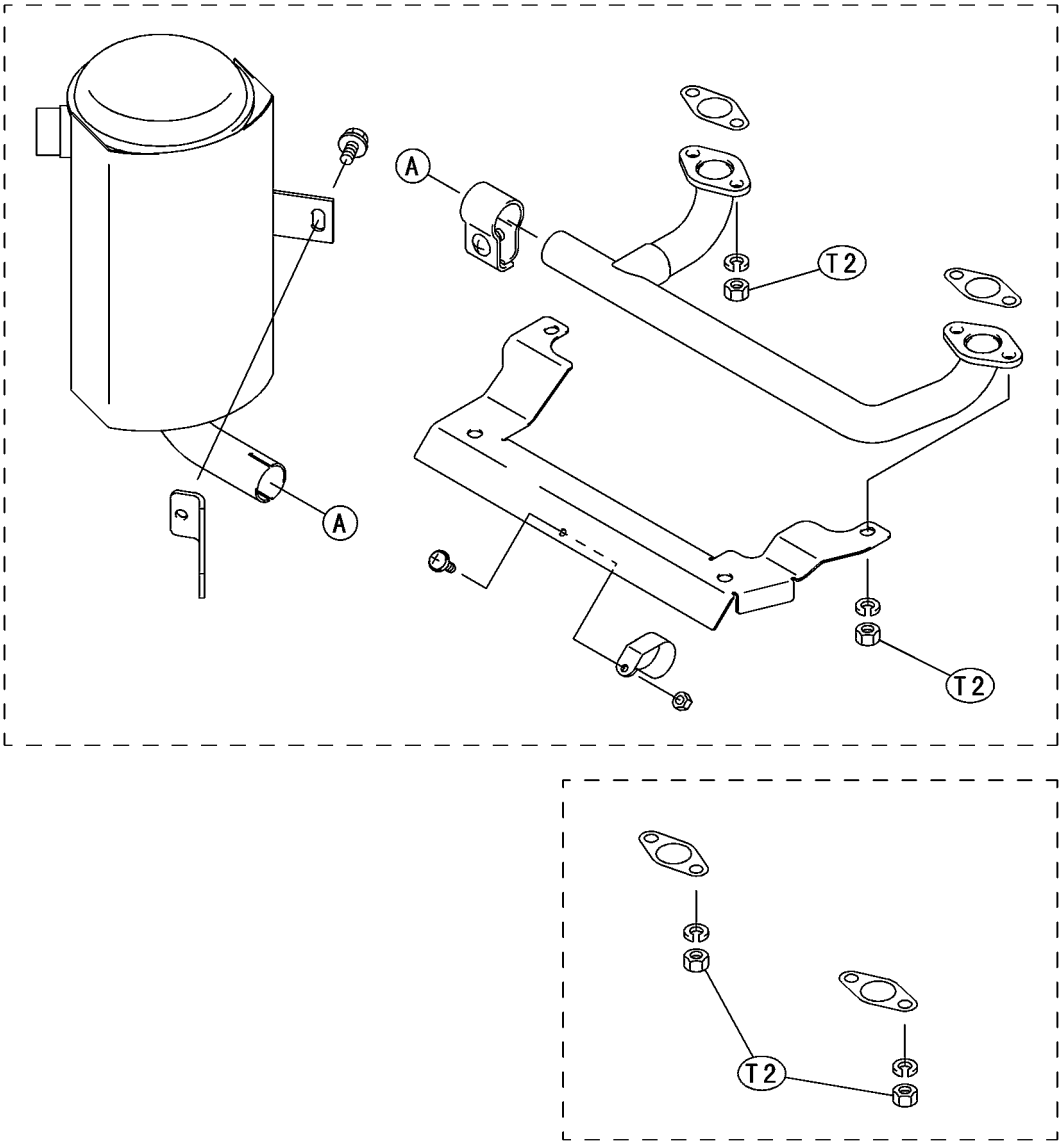

Exploded View

[FH451V, FH500V, FH531V]

T2: 15 N·m (1.5 kgf·m, 11.0 ft·lb)

[FH541V, FH580V]

T2: 15 N·m (1.5 kgf·m, 11.0 ft·lb)

[FH601V, FH641V, FH680V, FH721V]

T2: 15 N·m (1.5 kgf·m, 11.0 ft·lb)

4-6 ENGINE TOP END

Specifications

Item	Service Limit	
	FH451V, FH500V, FH531V	FH541V, FH580V
Cylinder Head:		
Cylinder compression (MIN)	[390 kPa (57 psi)] (MIN)	←
Cylinder head warp	0.05 mm (0.002 in.)	←
Valves:		
Valve head thickness Intake, Exhaust	0.35 mm (0.014 in.)	←
Valve stem runout Intake, Exhaust	0.05 mm (0.002 in.)	←
Valve stem diameter Intake	5.95 mm (0.0234 in.)	←
Exhaust	5.93 mm (0.0233 in.)	←
	(Standard)	
Valve clearance Intake, Exhaust	0.10 ~ 0.15 mm (0.004 ~ 0.006 in.)	←
Valve seating surface angle	(Standard)	
Intake, Exhaust	45°	←
Valve seating surface width	(Standard)	
Intake, Exhaust	0.6 ~ 0.9 mm (0.024 ~ 0.035 in.)	←
Valve guide inside diameter		
Intake, Exhaust	6.08 mm (0.239 in.)	←
Valve spring free length		
Intake, Exhaust	31.0 mm (1.22 in.)	←
Rocker arm push rod runout		
Intake, Exhaust	0.5 mm (0.02 in.)	←
Cylinder, Piston		
Piston diameter	67.79 mm (2.669 in.)	73.79 mm (2.905 in.)
Piston ring/groove Top	0.15 mm (0.006 in.)	←
clearance Second	0.12 mm (0.005 in.)	←
Piston ring thickness Top, Second	1.40 mm (0.055 in.)	←
Piston ring end gap Top	0.70 mm (0.028 in.)	←
Second	0.78 mm (0.031 in.)	←
Oil	1.05 mm (0.041 in.)	←
Piston pin outside diameter	15.96 mm (0.628 in.)	←
Piston pin hole inside diameter	16.08 mm (0.633 in.)	←
Connecting rod small end inside diameter	16.05 mm (0.632 in.)	←
Cylinder inside diameter:		
Standard Cylinder	68.10 mm (2.681 in.)	74.10 mm (2.917 in.)
0.50 mm Oversize	68.60 mm (2.701 in.)	74.60 mm (2.937 in.)
Cylinder inside diameter out round	0.056 mm (0.0022 in.)	←

Specifications

Item		Service Limit
		FH601V, FH641V, FH680V, FH721V
Cylinder Head:		
Cylinder compression (MIN)		[390 kPa (57 psi)] (MIN)
Cylinder head warp		0.05 mm (0.002 in.)
Valves:		
Valve head thickness	Intake, Exhaust	0.35 mm (0.014 in.)
Valve stem runout	Intake, Exhaust	0.05 mm (0.002 in.)
Valve stem diameter	Intake	5.95 mm (0.0234 in.)
	Exhaust	5.93 mm (0.0233 in.)
Valve clearance		(Standard)
Valve seating surface angle	Intake, Exhaust	0.10 ~ 0.15 mm (0.004 ~ 0.006 in.)
		(Standard)
Valve seating surface width	Intake, Exhaust	45°
		(Standard)
	Intake	0.8 ~ 1.4 mm (0.03 ~ 0.06 in.)
	Exhaust	1.1 ~ 1.6 mm (0.04 ~ 0.06 in.)
Valve guide inside diameter	Intake, Exhaust	6.08 mm (0.239 in.)
Valve spring free length	Intake, Exhaust	31.0 mm (1.22 in.)
Rocker arm push rod runout	Intake, Exhaust	0.5 mm (0.02 in.)
Cylinder, Piston		
Piston diameter		74.99 mm (2.952 in.)
Piston ring/groove clearance	Top	0.18 mm (0.007 in.)
	Second	0.16 mm (0.006 in.)
Piston ring thickness	Top, Second	1.40 mm (0.055 in.)
Piston ring end gap	Top	0.65 mm (0.026 in.)
	Second	0.78 mm (0.031 in.)
	Oil	1.05 mm (0.041 in.)
Piston pin outside diameter		15.96 mm (0.628 in.)
Piston pin hole inside diameter		16.08 mm (0.633 in.)
Connecting rod small end inside diameter		16.05 mm (0.632 in.)
Cylinder inside diameter:	Standard Cylinder	75.28 mm (2.964 in.)
	0.50 mm Oversize	75.78 mm (2.983 in.)
Cylinder inside diameter out round		0.056 mm (0.0022 in.)

4-8 ENGINE TOP END

Specifications

Special Tools - Compression Gauge : 57001 - 221

Compression Gauge Adapter M14 × 1.25: 57001–1159

Piston Ring Pliers: 57001 - 115

Piston Ring Compression Grip: 57001 - 1095

Piston Ring Compression Belt, $\phi 67$ - $\phi 79$: 57001–1097

Valve Seat Cutter Holder Bar: 57001–1128

Valve Seat Cutter Holder, $\phi 6$: 57001–1360

Valve Seat Cutter, 45° - $\phi 35.0$: 57001-1116

Valve Seat Cutter, 32° - $\phi 33.0$: 57001-1199

Valve Seat Cutter, 45° - $\phi 30.0$: 57001-1187

Valve Seat Cutter, 32° - $\phi 30.0$: 57001-1120

Cylinder Head

Compression Measurement

- Before measuring compression, do the following.
 - Be sure the battery is fully charged.
 - Thoroughly warm up the engine so that engine oil between the piston and cylinder wall will help seal compression as it does during normal running.
 - Stop the engine.
- Disconnect the spark plug caps of each cylinder and remove the spark plugs.
- Attach the compression gauge assembly firmly into one plug hole.

Special Tool - Compression Gauge: 57001-221 [A]

Compression Gauge Adapter: 57001-1159 [B]

- Ground the spark plugs to the engine.

⚠ WARNING

To avoid fire, do not ground the spark plugs in proximity to the plug holes. Keep the plugs as far away as possible from the plug holes.

- With the throttle fully open, turn engine over sharply with the recoil starter several times until the compression gauge stops rising; the compression is the highest reading obtainable. (Recoil Model)

Cylinder Compression (MIN) 390 kPa (57 psi)

- Using the starter motor, turn the engine over with the throttle fully open until the compression gauge stops rising; (Electric starter Model).

Cylinder Compression (MIN) 390 kPa (57 psi)

- Repeat the measurement to the other cylinder.
- ★ If the compression is higher than the specified value, the piston rings, cylinder and valves are probably in good condition.
- ★ If the compression is too high, check the following.
 1. Carbon build-up on the piston crown and cylinder head - clean off any carbon on the piston crown and cylinder head.
 2. Cylinder head gasket - use only the proper gasket. The use of a gasket of incorrect thickness will change the compression.
 3. Valve guides and piston rings - rapid carbon accumulation in the combustion chamber may be caused by worn valve guides and/or worn piston oil rings. This may be indicated by white exhaust smoke.
- ★ If cylinder compression is lower than the (MIN), check the following:
 1. Gas leakage around the cylinder head - replace the damaged gasket and check and check the cylinder head warp.
 2. Condition of the valve seating.
 3. Valve clearance.
 4. Piston/cylinder wear, piston seizure.
 5. Piston ring, piston ring groove.




4-10 ENGINE TOP END


Cylinder Head

Cylinder Head Assembly Removal

- Remove:
 - Air Cleaner and Carburetor (see Fuel System chapter)
 - Muffler (see Muffler Exhaust Pipe Removal)
 - Intake Manifold (see Fuel System chapter)
 - Spark Plug
- Unscrew the rocker cover mounting bolts [A], and remove the cover [B] and gasket.

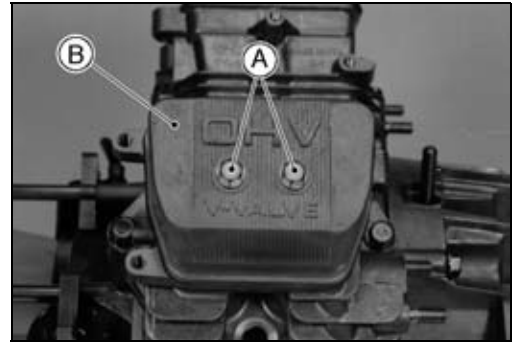

- When removing the #1, #2 cylinder head, set each piston at top dead center (T.D.C) [A] of compression stroke.

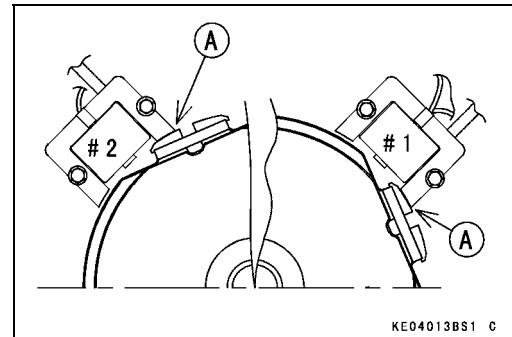

- Loosen the cylinder head bolts 1/4 turn in the sequence shown.


CAUTION

If the above procedure is not followed, the cylinder head may be warped during removal.

- Repeat the sequence until all bolts are removed and lift off the cylinder head assembly.


NOTE

○Mark the push-rods so they can be installed in their original position during assembly.

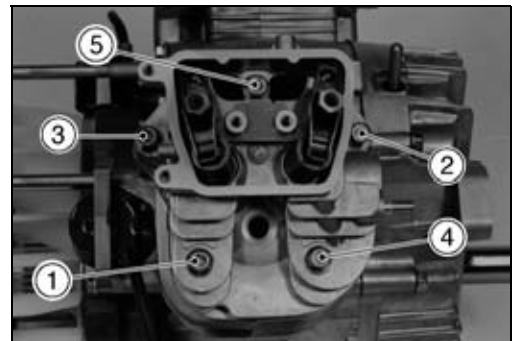

Cylinder Head Assembly Installation

- Clean the mating surfaces of the cylinder heads and cylinder.
- Install the push rods in their original positions on each cylinder. (see Push Rod Installation).
- Install the knock pins.
- Set each piston at T.D.C [A] of compression stroke.
- Put a new gaskets and the cylinder head assemblies on each cylinder, then let the cylinder heads with push rods aligned under the rocker arms.

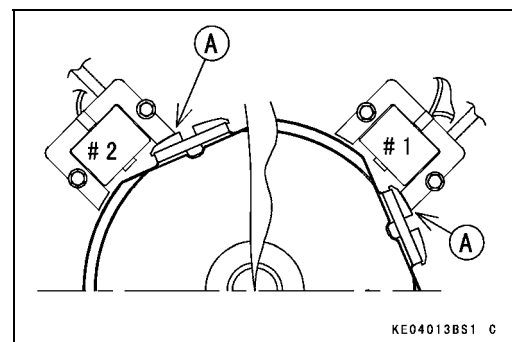

NOTE

○As the head gaskets are coated with sealing agents, be careful not to damage the surfaces.

Cylinder Head

- Tighten the cylinder head bolts following the tightening sequence.

Torque - Cylinder Head Bolts: 25 N·m (2.6 kgf·m, 19.0 ft·lb)

CAUTION

A torque wrench must be used to assure proper torque. Improper tightening of the head bolts can result in warping of the cylinder head.

- Check and adjust the valve clearance.
- Install the gasket and rocker cover.

Torque - Rocker Cover Mounting Bolts: 5.9 N·m (0.6 kgf·m, 52 in·lb)

- Install the other removed parts.

Push Rod Removal




- Set each piston at T.D.C of compression stroke.
- Remove the rocker covers. (see Cylinder Head Assembly Removal)
- Loosen the valve clearance adjusting nuts [A].
- Move the rocker arms [B] to clear the push rod upper ends.
- Pull out the push rods.

NOTE

○Mark the push rods so they can be installed in their original position during assembly.

Push Rod Installation

- Set each piston at T.D.C of compression stroke.
- Install the push rods [A] in their original positions on each cylinder.
- To Install the push rod in a correct position on the tappet [B], insert the push rod so end of the push rod is sliding down [C] along inside wall [D] of the crankcase and position the push rod end on to the tappet.
- Check that both intake and exhaust push rods on each cylinder are at lowest position on the cam lobes [E], if not turn the flywheel clockwise one turn (360°) and reset each piston at T.D.C of compression stroke.
- Be sure the end of the push rods are correctly seated on the tappets.
- Tighten the valve clearance adjusting nuts.
- Check and adjust the valve clearance.

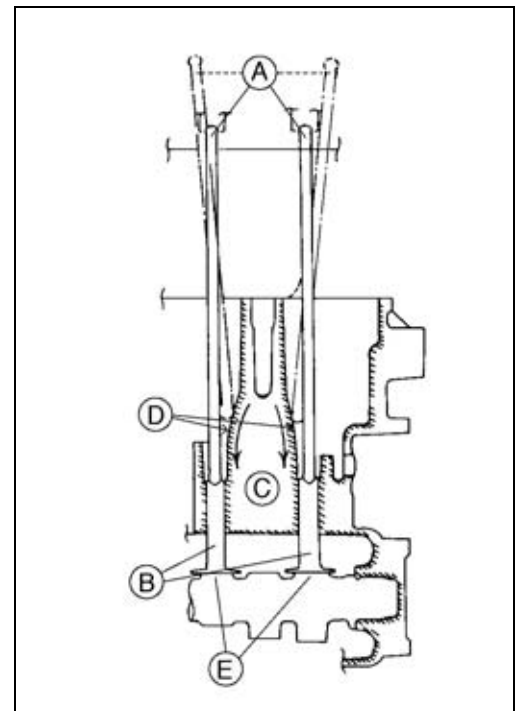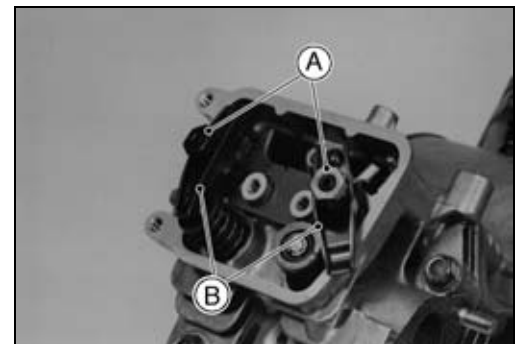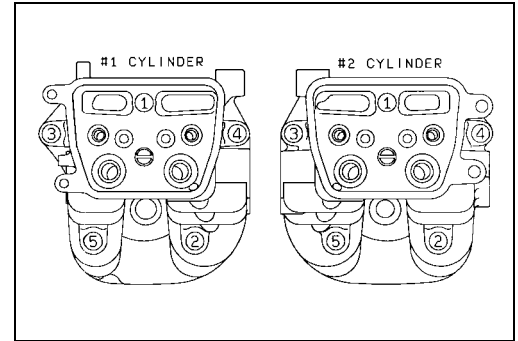

4-12 ENGINE TOP END

Cylinder Head


Push Rod Inspection

- Place the push rod in V blocks that are as far apart as possible, and set a dial gauge on the rod at a point halfway between the blocks. Turn the rod to measure the runout. The difference between highest and the lowest dial readings is the amount of runout.

★ If the runout exceeds the service limit, replace the rod.

Rocker Arm Push Rod Runout

Service Limit: 0.5 mm (0.02 in.)

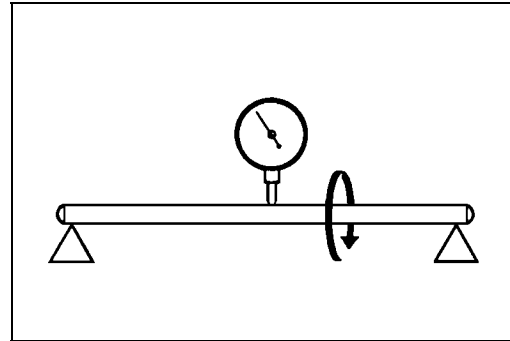



Valve Mechanism Removal/Installation

- Remove the cylinder head assembly. (see Cylinder Head Assembly Removal)

NOTE

○ When removing the valve mechanism parts, note their position so that they may be reinstalled in their original position during assembly.

- Remove:
 - Valve Clearance Adjusting Nuts [A]
 - Rocker Arms [B]
- Support the valve head in the combustion chamber with a suitable block.
- To remove the collets [A], push down the valve retainer [B] with thumbs and remove the Collets.
- Remove the spring [C] and valve [D].

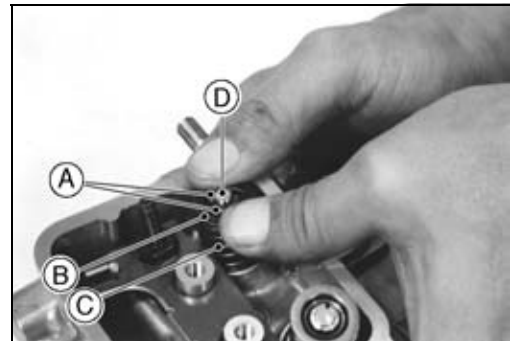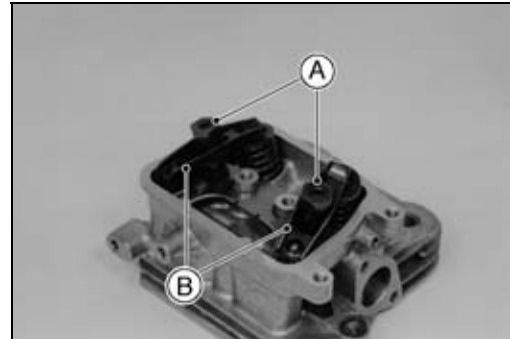


- Remove the stem seals [A].


NOTE

○ It is not necessary to remove the stem seal unless it is being replaced.

○ Valve guide [B] is not replaceable, do not remove it.

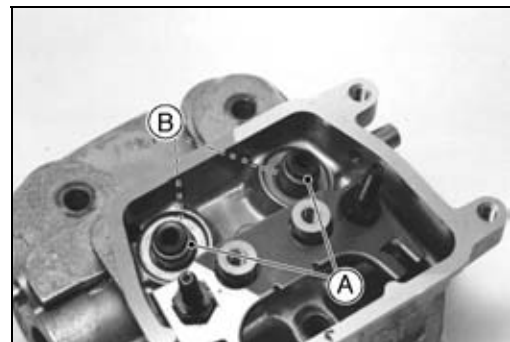

- Valve Installation.
 - Apply engine oil to the valve stem to avoid damaging the stem seal.
 - Check to see that the valve moves smoothly up and down in the guide.
 - Check the valve seating surface [A] between the valve [B] and valve seat [C].
- Rocker Arm Installation
 - Soak the valve clearance adjusting nuts and rocker arm in the engine oil.
 - Install the rocker arm.

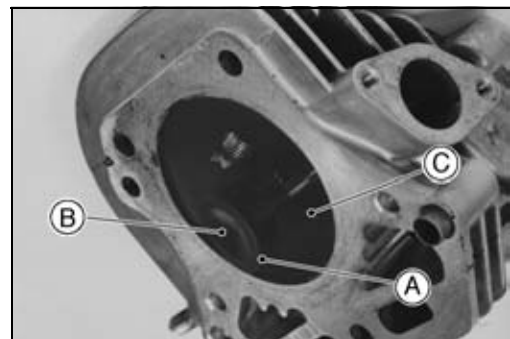

Cylinder Head

Cleaning and Inspection

- Scrape the carbon deposits from the head and exhaust port with a suitable tool [A].
- To avoid gouging, use scrapers that are made of a material that will not cause damage.
- Clean the head in a bath of high flash-point solvent and dry it with compressed air.

⚠ WARNING




Clean the cylinder head in a well-ventilated area, and take care that there are no sparks or flame anywhere near the working area; this includes any appliance with a pilot light. Do not use gasoline or a low flash-point solvent to clean the cylinder head. A fire or explosion could result.

- Lay a straightedge [A] across the mating surface of the head at several different points, and measure warp by inserting a thickness gauge [B] between the straightedge and head.
- ★ If warp exceeds the service limit, repair the mating surface. Replace the cylinder head if the mating surface is badly damaged.

Cylinder Head Warp

Service Limit: 0.05 mm (0.002 in.)

- Check the cylinder head for cracks or other damage.
- Cracks not visible to the eye may be detected by coating the suspected area with mixture of 25% kerosene and 75% light engine oil.
- Wipe the area dry and immediately apply a coating of zinc oxide dissolved in wood alcohol. If a crack is present, the coating will become discolored at the defective area.
- If a crack is present in the cylinder head, replace it.
- Inspect the mating surface for burrs and nicks.
- Clean and inspect the rocker arm where it touches the push rod and valve stem.
- ★ If the contact points [A] are worn or damaged, replace the rocker arm.

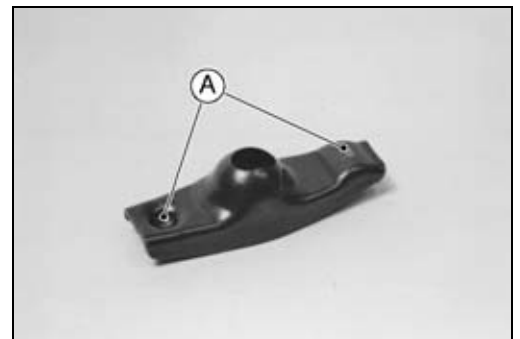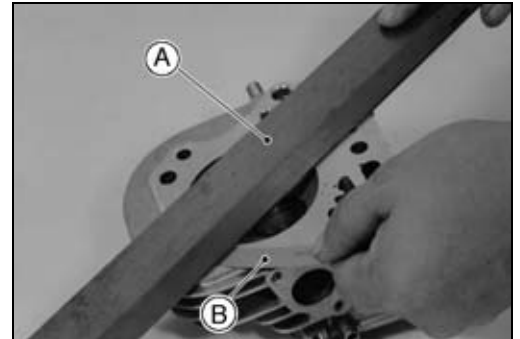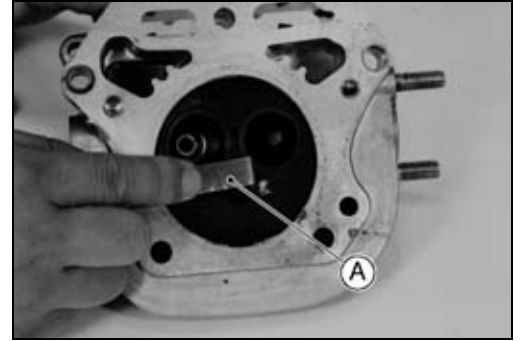

4-14 ENGINE TOP END

Valves

Valve Clearance Inspection

NOTE

○ Valve clearance must be checked when the engine is cold (at room temperature).



- Remove the rocker cover (see Cylinder Head Removal).
- Place the piston at top dead center (TDC) of the compression stroke turning the crankshaft clockwise facing the flywheel.

No.1 Cylinder:

- The left projection [A] on the flywheel is faced with the right leg [B] on the #1 ignition coil [C] as shown.
- Check the intake and exhaust valves are closed completely, if not turn the flywheel one turn (360°) clockwise and face the left projection with the right leg again.

No.2 Cylinder:


- The left projection [A] on the flywheel is faced with the right leg [B] on the #2 ignition coil [C] as shown. Follow No.1 Cylinder alignment.

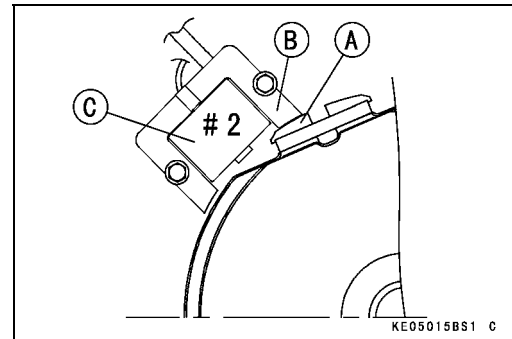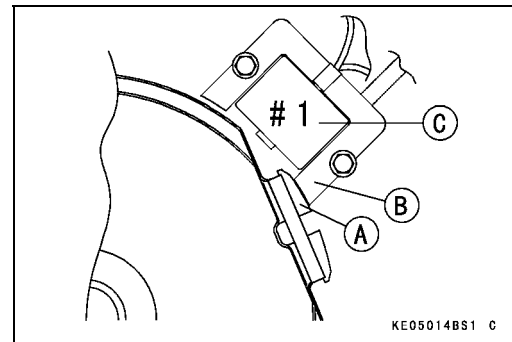

- Then check the valve clearance.
- Using a thickness gauge [A], measure the valve clearance between the rocker arm [B] and the valve stem end.
- ★ If the valve clearance is incorrect, adjust it.

Valve Clearance (when cold)

Intake, Exhaust 0.10 ~ 0.15 mm (0.004 ~ 0.006 in.)

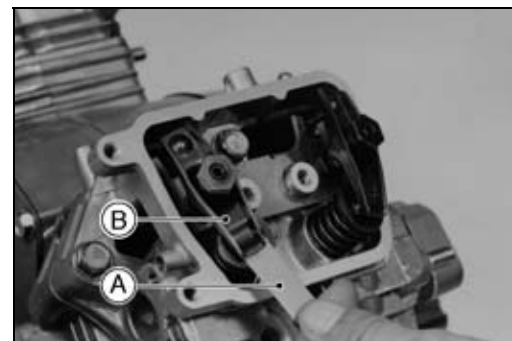

Valve Clearance Adjustment

- Since valve repairs change the valve clearance, adjust the valve clearance to the specification.
- Assemble the cylinder head and install the cylinder head assembly on the block (see Cylinder Head Installation).
- Turn the crankshaft proper direction until the piston is at TDC of the compression stroke (described above).
- Loosen the lock screws [A] and valve clearance adjusting nuts [B].
- Insert a 0.10 mm (0.04 in.) thickness gauge [C] between the rocker arm and valve stem, and tighten the adjusting nut until the thickness gauge begin to bind between the rocker arm and valve stem end. Use a sweeping motion with the thickness gauge while making this adjustment.


Valve Clearance (when cold)

Intake, Exhaust: 0.10 ~ 0.15 mm (0.004 ~ 0.006 in.)

- Holding the adjusting Nut with a spanner, tighten the lock screw to the specified torque.

Torque - Valve Clearance Lock screws: 6.9 N·m (0.70 kgf·m, 61 in·lb)

- Do not overtighten.
- Remeasure any clearance that was adjusted. Readjust if necessary.

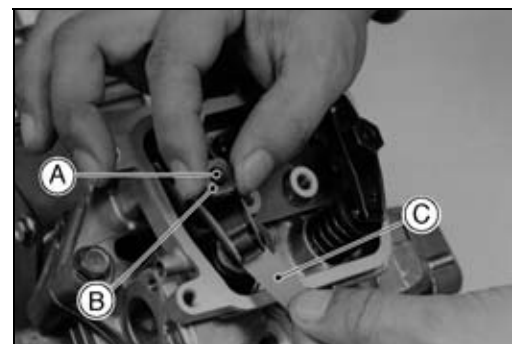

Valves

Valve Seat Inspection

- Remove the valve. (see Valve Mechanism Removal/Installation)
- Inspect the valve seats for damage.
- ★ If the seats are warped or distorted beyond reconditioning, replace the cylinder head.
- Pitted or worn valve seats can be refaced. Lap the valves to the seats after refacing.
- Coat the valve seat with machinist's dye.
- Push the valve into the guide.
- Rotate the valve against the seat with a lapping tool.
- Pull the valve out, and check the seating pattern on the valve head. It must be the correct width [A] and even all the way around.

NOTE

○ The valve stem and guide must be in good condition or this check will not be valid.

- ★ If the valve seating pattern is not correct, repair the seat.

Valve Seating Surface Width (STD)

[FH451V, FH500V, FH531V, FH541V, FH580V]

Inlet, Exhaust 0.6 ~ 0.9 mm (0.024 ~ 0.035 in.)

[FH601V, FH641V, FH680V, FH721V]

Inlet 0.8 ~ 1.4 mm (0.03 ~ 0.05 in.)

Exhaust 1.1 ~ 1.6 mm (0.04 ~ 0.06 in.)

Valve Seat Repair

- Follow the manufacture's instructions for use of valve seat cutters

Special Tools

Intake Valve:

Seat Cutter 45° - ϕ 35.0 57001-1116

Outside Cutter 32° - ϕ 33.0 57001-1199

Exhaust Valve:



Seat Cutter 45° - ϕ 30.0 57001-1187

Outside Cutter 32° - ϕ 30.0 57001-1120

Valve Seat Cutter Holder- ϕ 6.0: 57001-1360

Valve Seat Cutter Holder Bar: 57001-1128

- ★ If the manufacture's instructions are not available, use the following procedure.

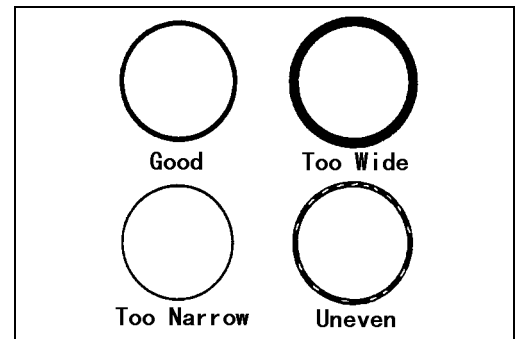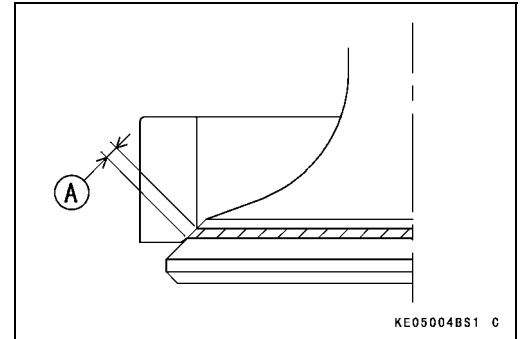

4-16 ENGINE TOP END

Valves

Seat Cutter Operating Cares:

1. This valve seat cutter is designed only for valve seat repair. Therefore the cutter must not be used for other purposes.
2. Do not drop or hit the valve seat cutter, or the diamond particles may fall off.
3. Do not fail to apply engine oil to the valve seat cutter before grinding the seat surface. Also wash off ground particles sticking to the cutter with washing oil.

NOTE

○Do not use a wire brush to remove the metal particles from the cutter. It will take off the diamond particles.

4. Setting the valve seat cutter holder [A] in position, operate the cutter [B] with one hand [C]. Do not apply too much force to the diamond portion.

NOTE



○Prior to grinding, apply oil to the cutter, and during the operation wash off any ground particles sticking to the cutter with washing oil.

5. After use wash the cutter with washing oil and apply a thin layer of engine oil before storing.

Marks Stamped on the Cutter:


The marks stamped on the back of the cutter represent the following.

1	Cutter number, selected from 1 to 12
32°	Cutter angle [A]
37.5	Cutter diameter of cutter [B]
KS8B	Manufactured lot number

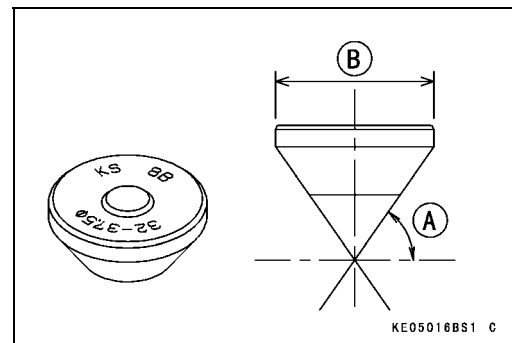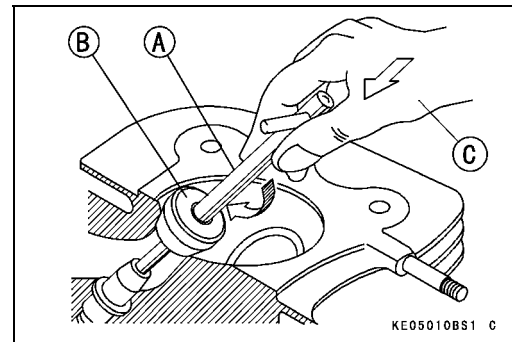

Operating Procedures:

- Clean the seat area carefully.
- Recondition the valve seats with the valve seat cutters (45°, 32°) and lap the valves.
- Check the seats for good contact all the way around with machinist's dye.
- Measure the seat width [A]. If it is more than the STD width, the seating surface should be refaced.
- If the valve seating pattern is not correct, repair the seat.

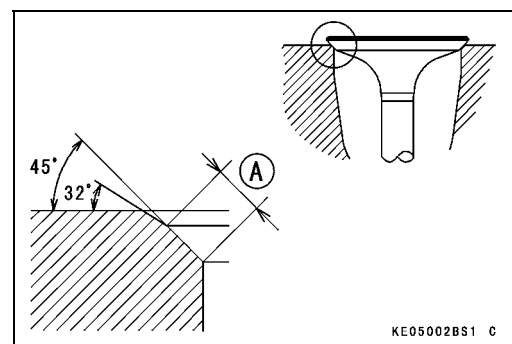

Valves

- Coat the seat with machinist's dye.
- Fit a 45° cutter [A] to the holder and slide it into the valve guide.
- Resurface the valve seat with a 45° cutter, removing only enough material to produce a smooth and concentric seat.

CAUTION

Do not grind the seat too much. Overgrinding will reduce valve clearance by sinking the valve into the head. If the valve sinks too far into the head, it will be impossible to adjust the clearance, and the cylinder head must be replaced. Do not turn the cutter counterclockwise or drop it against the seat, or it will be dulled.




- Use a 32° seat cutter [A] to narrow the seat width to the STD width.
- Turn the seat cutter one turn at a time while pressing down very lightly. Check the seat width after each turn.

CAUTION

The 32° cutter removes material very quickly. Check the seat width frequently to prevent over grinding.

NOTE

- *Keep the seat width as closely as possible to the STD width.*
- Make a light pass with the 45° cutter to remove any possible burrs at the edge of the seat.
- After resurfacing the seat, inspect for even valve seating.
- Apply a machinist's dye to the valve face, insert the valve, and snap it closed against the seat several times. The valve surface should show good contact all the way around. Be sure the valve seat is centered on the valve face. The position of the valve in the seat is evident after lapping the valve.
- ★ If the seat does not make proper contact, lap the valve into seat with a vacuum cap tool.
- Coat the face of valve sparingly with a fine lapping compound.
- Use the vacuum cup tool [A], to grip top of the valve [B]. Rotate the valve in a circular motion to lap the valve to the seat.
- Lift the valve slightly from the seat every 8 to 10 strokes, continue lapping operation until a uniform ring appears around entire surface of the valve face.

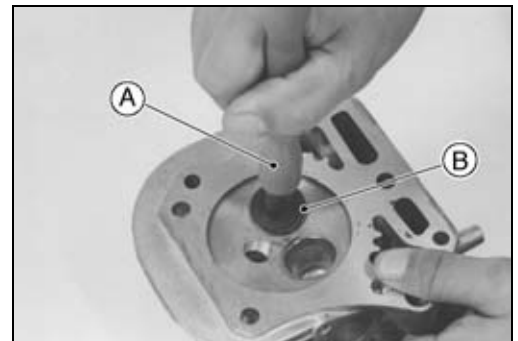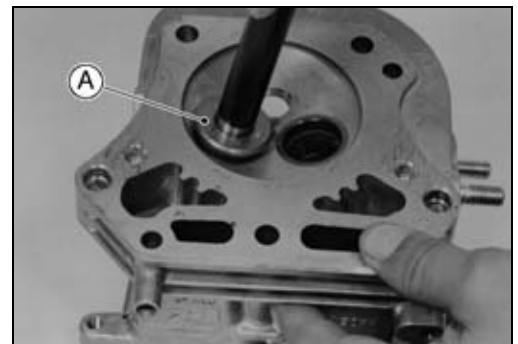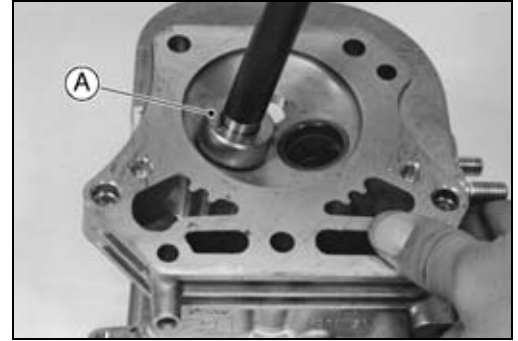

4-18 ENGINE TOP END

Valves


- When lapping is completed, wash all parts in solvent to remove lapping compound. Dry the parts thoroughly.
- Note the position of the lapping mark on the valve face. The lapping mark should appear on or near the center of the valve face.
- When the engine is assembled, be sure to adjust the valve clearances. (see Valve Clearance Adjustment)

Valve Head Thickness

- Remove the valve (see Valve Mechanism Removal/Installation).
- Measure the thickness of the valve head.
- ★ If the valve head thickness (valve margin) [A] is less than the service limit, replace the valve.

Valve Head Thickness

Service Limit (IN, EX): 0.35 mm (0.014 in)

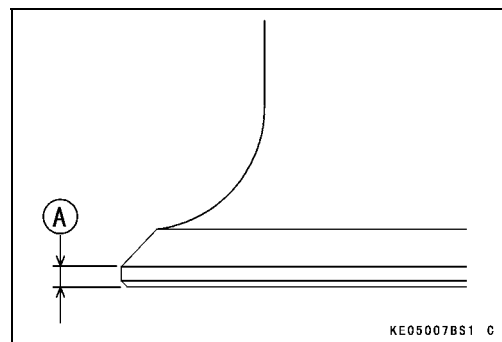


Valve Stem Runout

- Support the valve in V blocks at each end of the stem.
- Position a dial gauge perpendicular to the stem.
- Turn the valve and read the variation on the dial gauge.
- ★ If the stem runout is greater than service limit, replace the valve.

Valve Stem Runout

Service Limit (IN, EX): 0.05 mm (0.002 in.)

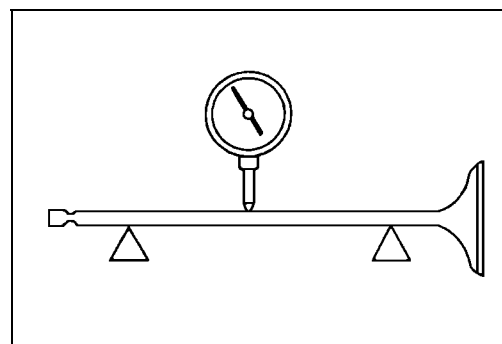

Valve Stem Diameter


- Measure the diameter of the valve stem [A] in two directions at right angles, at four different positions on the stem.
- ★ If any single measurement is less than the service limit, replace the valve.

Valve Stem Diameter

Service Limit:

Intake: 5.95 mm (0.234 in.)

Exhaust: 5.93 mm (0.233 in.)

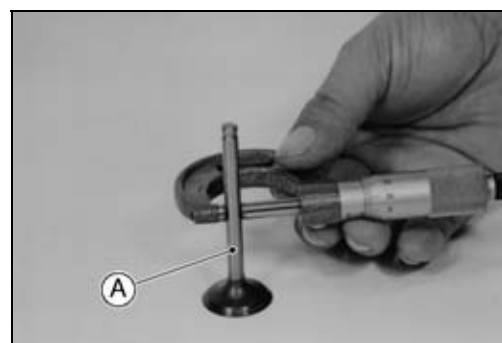


Valve Guide Inside Diameter

- Use a small bore gauge or a micrometer to measure the inside diameter [A] of the valve guide [B] a three places down the length of the guide.
- ★ If the measurement is more than the service limit, replace the cylinder head with a new one.

Valve Guide Inside Diameter

Service Limit:

Intake, Exhaust 6.08 mm (0.239 in.)

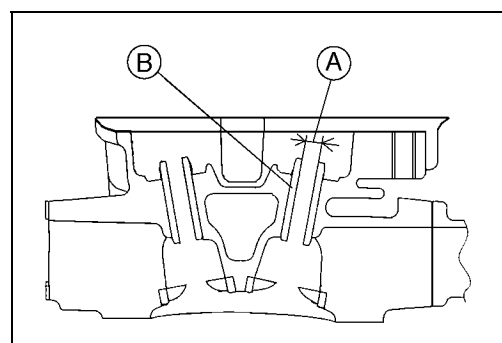


Valves

Valve Spring Inspection

- Inspect the valve spring for pitting, cracks, rusting, and burns. Replace the spring if necessary.
 - Measure the free length [A] of the spring.
- ★ If the measurement is less than the service limit, replace the spring.

Valve Spring Free Length

Service Limit: 31.0 mm (1.22 in.)

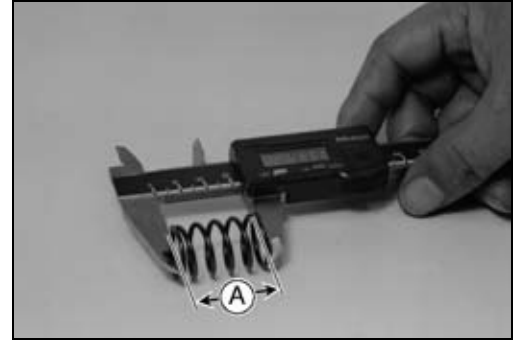

4-20 ENGINE TOP END

Cylinder, Piston

Piston Removal

- Split the crankcase (see Camshaft/Crankshaft chapter).
- Remove the camshaft (see Camshaft/Crankshaft chapter).
- Turn the crankshaft to expose the connecting rod cap bolts [A].
- Remove the bolts and take off the connecting rod caps [B].

NOTE

○Note the position of the connecting rod caps for re-installing the caps.

- Push the connecting rod end into the cylinder, and pull the piston and connecting rod out of the cylinder.





CAUTION

Note a location of the arrow match mark [A] on the piston head in relation to K Mark [B] on the connecting rod.

**No.1 cyl. K Mark on the connecting rod is face to face with No.2 cyl. K Mark on the connecting rod.
Keep parts together as a set.**

- Remove one of the piston pin snap rings [A] with needle nose pliers [B].

- Remove the piston by pushing the piston pin [A] out the side from which the snap ring was removed.

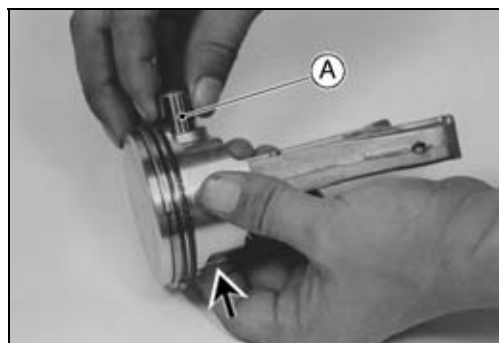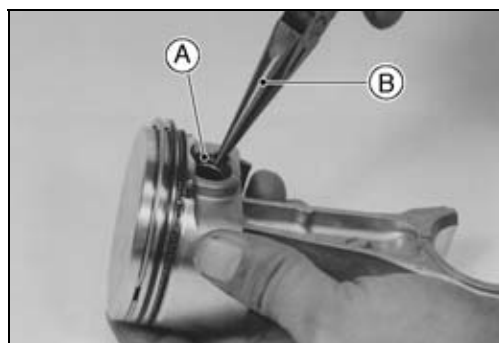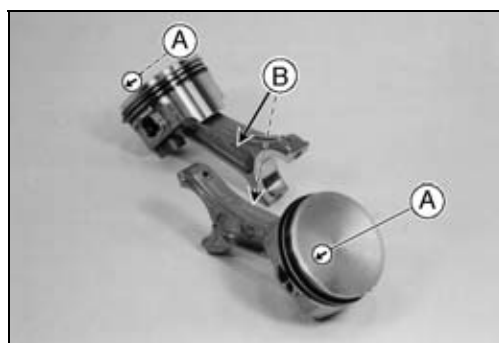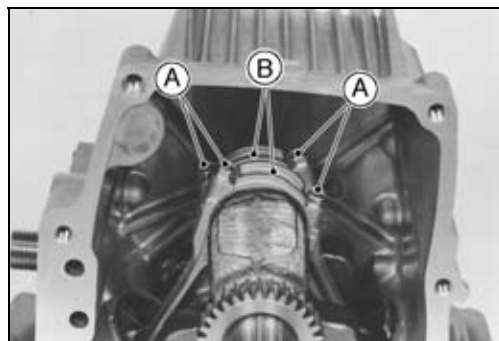


Cylinder, Piston

- Remove the top and second rings with piston ring pliers.


Special Tool - Piston Ring Pliers: 57001-115

- If the special tool is not available, carefully spread the ring opening with your thumbs and then push up on the opposite side of the ring [A] to remove it.
- Remove the 3-piece oil ring with your thumbs in the same manner.

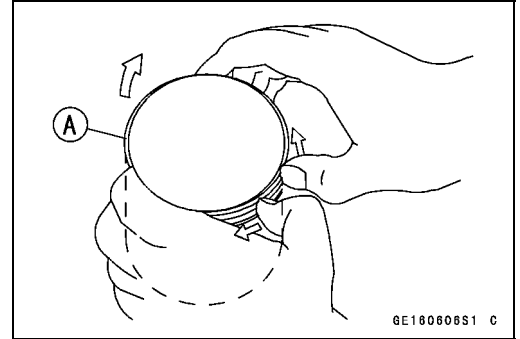

Piston Installation

- Install the expander [A] in the piston oil ring groove so that the expander ends [B] touch together, never overlap.
- Install the upper and lower steel rails. There is no UP or Down to the rails. They can be installed either way.

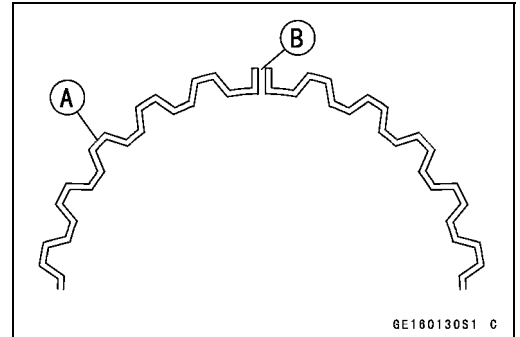

- Do not mix up the top and second rings.
- Install the second and top rings as shown. The rings should turn freely in the grooves.


[A] Piston Head

[B] Top Ring for FH451V, 500V, 531V, 541V, 580V

[C] Second Ring for FH451V, 500V, 531V, 541V, 580V

[D] Top Ring for , FH601V, 641V, 680V, 721V

[E] Second Ring for FH601V, 641V, 680V, 721V

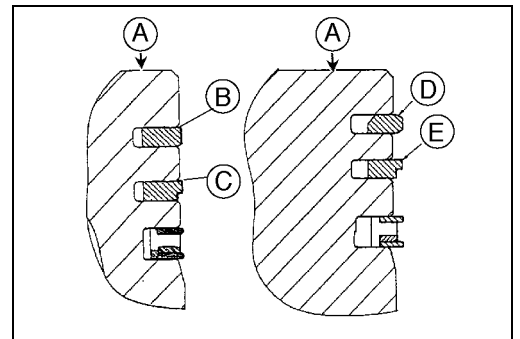


- Align the piston and rings with the piston ring end gap as shown.

[A]. Arrow Match Marks

[B]. Top ring End Gap, Upper Steel Rail End Gap

[C]. 30° ~ 45°

[D]. Second Ring End Gap, Lower Steel Rail End Gap

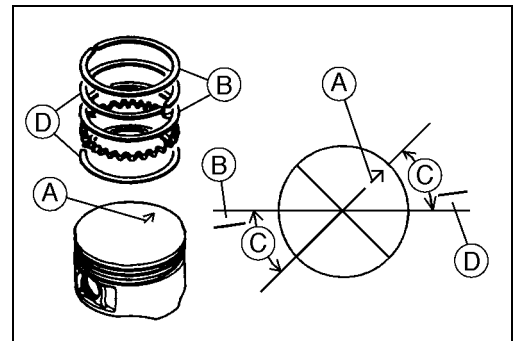

- Apply engine oil to the piston pins.

Assemble the pistons onto the connecting rods as follow:

No.1 cyl. Piston, align the arrow match mark on the piston head with opposite the raised letters (K Mark) on the connecting rod.

No.2 cyl. piston, align the arrow match mark on the piston head with K Mark on the connecting rod.


[A]. No.1 Cyl. Piston

[B]. No.2 Cyl. Piston

[C]. Arrow Match Marks

[D]. K Mark

[E]. Opposite K Mark

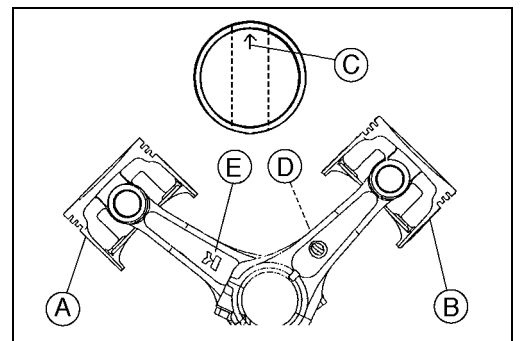

4-22 ENGINE TOP END

Cylinder, Piston

- When installing a piston pin snap ring, compress it only enough to install it and no more.

Fit a new piston pin snap ring into the side of the piston so that the ring opening [A] does not coincide with the notch [B] in the edge of the piston pin hole.




CAUTION

Do not reuse the snap rings, as removal weakens and deforms them. They could fall out and score the cylinder wall.

- Apply engine oil to the piston skirt and the cylinder bore.
- ★ Using the piston ring compressor grip [A] and the belt [B], lightly tap the top of the piston with a plastic mallet [C] to insert the piston and connecting rod into the cylinder.

**Special Tool - Piston Ring Compressor Grip: 57001-1095
Piston Ring Compressor Belt: 57001-1097**

- Insert the piston and connecting rod so that the arrow match mark [A] on the top of the piston is facing the fly-wheel side [B].

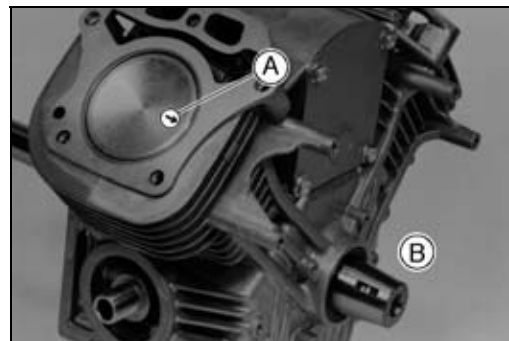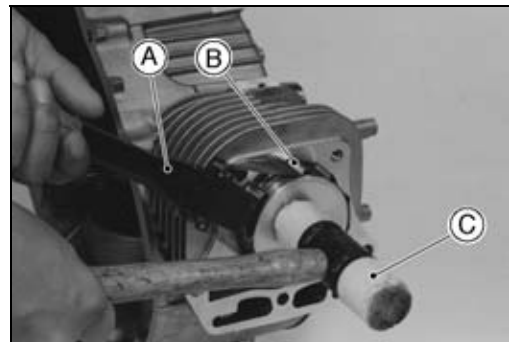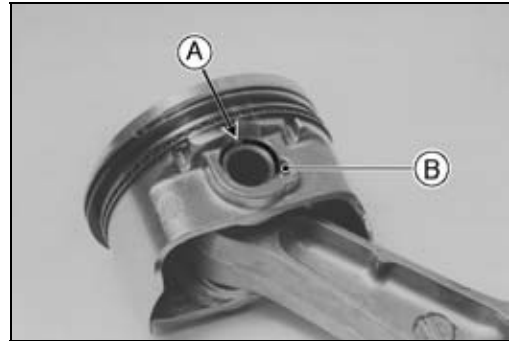

CAUTION

The connecting rod and the connecting rod big end cap are machined at the factory in the assembled state, so they must be replaced together as a set.

- Apply engine oil to the inner surface [A] of the connecting rod big end [B] and caps [C].
- Install the connecting rod big end caps on their original position on each connecting rod big ends.
- Apply a small amount of engine oil to the thread [D] and seating surface [E] of the cap bolts.
- Tighten the cap bolts.

Torque - [FH451V, 500V, 531V]

Connecting Rod Big End Cap Bolts: 5.9 N·m (0.60 kgf·m, 52 in·lb)


[FH541V, FH580V]

Connecting Rod Big End Cap Bolts: 9.8 N·m (1.0 kgf·m, 87 in·lb)

[FH601V, 641V, 680V, 721V]

Connecting Rod Big End Cap Bolts: 21 N·m (2.1 kgf·m, 15 ft·lb)

- Install:
- Camshaft (see Camshaft/Crankshaft chapter)
- Crankcase Cover (see Camshaft/Crankshaft chapter)

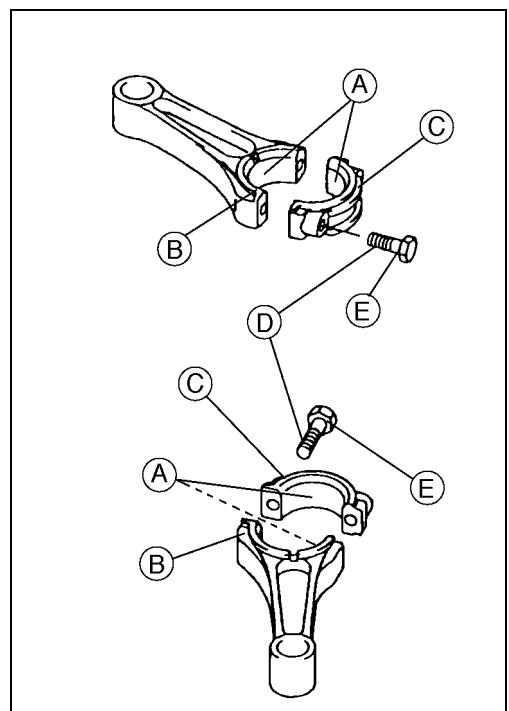

Cylinder, Piston

Piston/Cylinder Seizure

- In case of seizure, remove the piston.
- Visually inspect the cylinder and piston damage.
- ★ If there is only light damage, smooth the position with #400 emery cloth. Remove the small aluminum deposits from the cylinder with #400 emery cloth or light honing.
- ★ If the damage is severe, the both cylinders must be bored oversize and oversized pistons installed.

Piston Cleaning

- Remove the piston and piston rings (see Piston Removal).


CAUTION

Never clean the piston head with the engine assembled. Carbon particles will fall between the piston and cylinder, and damage the crankshaft bearings.

- Scrape the carbon off [A] the piston head.
- Use the scraping tools carefully. Do not gouge the piston head. To avoid gouging, use scrapers that are made of a material that will not cause damage.
- Clean the piston ring grooves [A] with a broken piston ring or other suitable tools.


CAUTION

Be careful not to widen the ring grooves. Damaged ring grooves will require piston replacement.

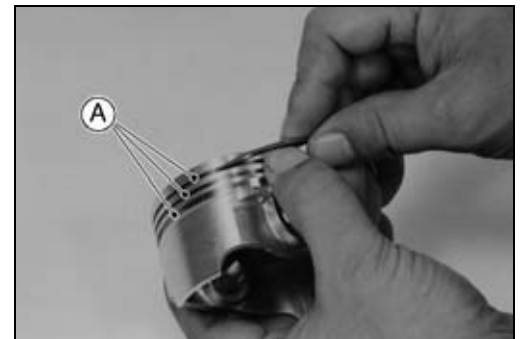

Piston Ring and Ring Groove Wear

- Clean the piston (see Piston Cleaning).
- Visually inspect the piston rings and ring grooves.
- ★ If the piston rings are worn unevenly or damaged, replace them.
- ★ If the ring grooves are worn unevenly or damaged, replace both the piston and piston rings.
- Check ring grooves for wear by inserting a new ring in the proper groove at several points around the piston.
- Measure the clearance between the top and second rings and their grooves using a thickness gauge [A].
- ★ If the piston ring/groove clearance is greater than the specified value, replace the piston.

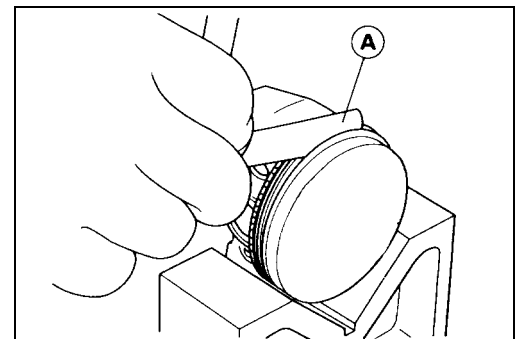

Piston Ring/Groove Clearance

	Service Limit		
	FH451V, FH500V, FH531V	FH541V, FH580V	FH601V, FH641V, FH680V, FH721V
Top	0.15 mm (0.006 in.)	←	0.18 mm (0.007 in.)
Second	0.12 mm (0.005 in.)	←	0.16 mm (0.006 in.)

NOTE

- The oil ring is a three piece assembled ring. Difficult to measure the ring groove clearance and thickness, visually inspect only.

4-24 ENGINE TOP END

Cylinder, Piston

- Measure the piston ring thickness [A].
- Use a micrometer to measure at several points around the rings.
- ★ If any of the measurement are less than the service limit, replace the entire set of rings.

Piston Ring Thickness

	Service Limit
Top, Second	1.40 mm (0.055 in.)

NOTE

○ When using new rings in a used piston, check for uneven groove wear. The rings should fit perfectly parallel to the groove sides. If not, replace the piston.

Piston Ring End Gap

- Remove the piston rings.
- Push each ring (one at a time) in the cylinder bore to a point close to the bottom of the cylinder bore.
- Use the piston to push it in to be sure it is square.
- Measure the gap [A] between the ends of the ring [B] with a thickness gauge.
- ★ If the end gap of any ring is greater than the service limit, replace the entire set of rings.

Piston Ring End Gap

	Service Limit		
	FH451V, FH500V, FH531V	FH541V, FH580V	FH601V, FH641V, FH680V, FH721V
Top	0.70 mm (0.028 in.)	←	0.65 mm (0.026 in.)
Second	0.78 mm (0.031 in.)	←	←
Oil	1.05 mm (0.041 in.)	←	←

Piston Pin, Piston Pin Hole, and Connecting Rod Wear

- Remove the piston pin.
- Measure the diameter of the piston pin with a micrometer at several points.
- ★ If the outside diameter is less than service limit, replace the piston pin.




Piston Pin Outside Diameter

Service Limit: 15.96 mm (0.628 in.)

- Measure the inside diameter [A] of the piston pin hole at several points on both side. Use a dial bore gauge.
- ★ If the inside diameter is more than the service limit, replace the piston.

Piston Pin Hole Inside Diameter


Service Limit: 16.08 mm (0.633 in.)

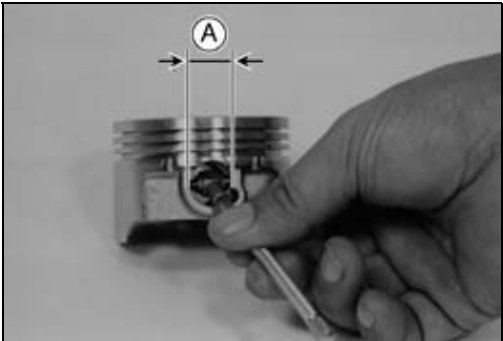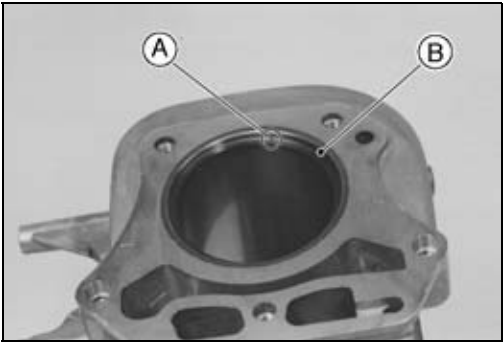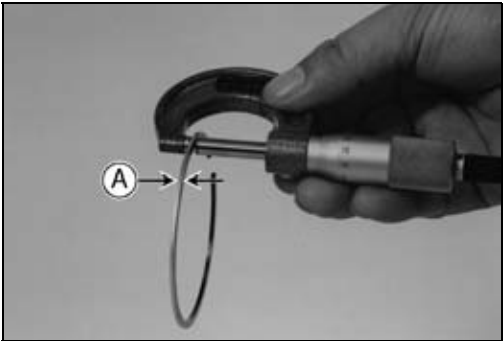

Cylinder, Piston

- Measure the inside diameter [A] of the small end of the connecting rod at several points. Use a dial bore gauge.
- ★ If the inside diameter is more than the service limit, replace the connecting rod.

Connecting Rod Small End Inside Diameter
Service Limit: 16.05 mm (0.632 in.)

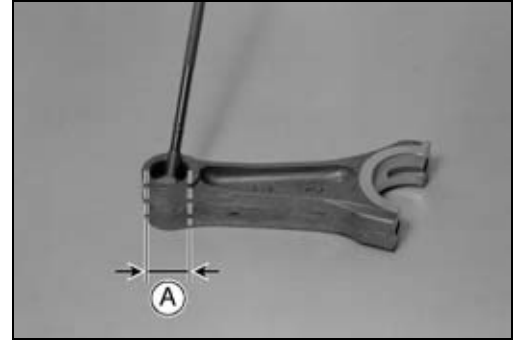


Piston Diameter

- Measure the outside diameter [A] of the piston 12.5 mm (0.9 in.) [B] up from the bottom of the piston at a right angle to the direction of the piston pin hole.
- ★ If the measurement is less than the service limit, replace the piston.


Piston Diameter

Model	Service Limit
FH451V, FH500V, FH531V	67.79 mm (2.669 in.)
FH541V, FH580V	73.79 mm (2.905 in.)
FH601V, FH641V, FH680V, FH721V	74.99 mm (2.952 in.)

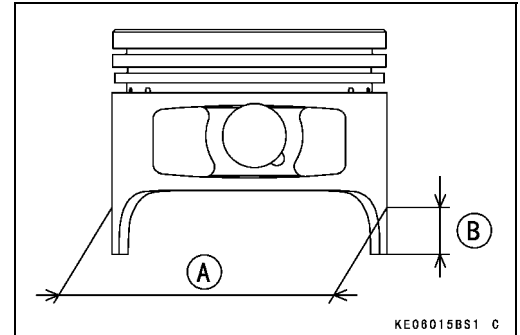

Cylinder Inside Diameter

- Clean and measure the cylinder inside diameter.
- Use a cylinder gauge to measure front-to-back and side-to-side at the points shown figure.
- ★ If any of the cylinder inside diameter measurements is greater than the service limit, the cylinder must be bored to the next oversize and then honed (see Cylinder Boring and Honing).

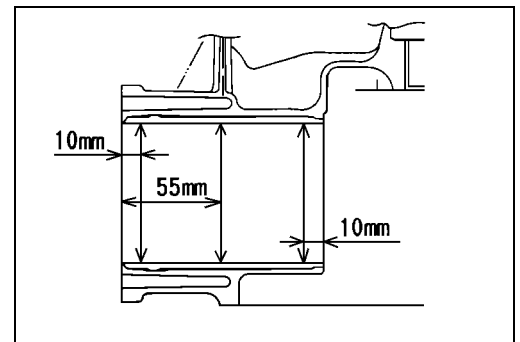

Cylinder Inside Diameter

Model	Item	Standard	Service Limit
FH451V, FH500V, FH531V	Standard Cylinder	67.98 ~ 68.00 mm (2.676 ~ 2.677 in.)	68.10 mm (2.681 in.)
	0.5 mm Oversize Cylinder	68.48 ~ 68.50 mm (2.696 ~ 2.697 in.)	68.60 mm (2.701 in.)
FH541V, FH580V	Standard Cylinder	73.98 ~ 74.00 mm (2.912 ~ 2.913 in.)	74.10 mm (2.917 in.)
	0.5 mm Oversize Cylinder	74.48 ~ 74.50 mm (2.932 ~ 2.933 in.)	74.60 mm (2.937 in.)
FH601V, FH641V, FH680V, FH721V	Standard Cylinder	75.18 ~ 75.20 mm (2.960 ~ 2.961 in.)	75.28 mm (2.964 in.)
	0.5 mm Oversize Cylinder	75.68 ~ 75.70 mm (2.979 ~ 2.980 in.)	75.78 mm (2.983 in.)
	0.5 mm Oversize Cylinder	75.68 ~ 75.70 mm (2.979 ~ 2.980 in.)	75.78 mm (2.983 in.)

Cylinder Inside Diameter Out Round

Standard: 0.01 mm (0.004 in.)
Service Limit: 0.056 mm (0.0022 in.)

4-26 ENGINE TOP END

Cylinder, Piston

Cylinder Boring and Honing

Always resize to exactly 0.5 mm (0.02 in.) over the standard bore size.

If this is done accurately, the stock oversize rings and piston will fit perfectly and proper clearance will be maintained.

Resizing the cylinder bore can be done by reliable repair shop or by using a drill press and honing tool.

Use the stone recommended by the hone manufactures to produce correct cylinder wall finish.

Machine-bore first, the inside diameters should be shown in the table.

Final Boring Inside Diameter

Oversize	Fine Boring Inside Diameter		
	FH451V, 500V, 531V	FH541V, FH580V	FH601V, 641V, 680V, 721V
0.50 mm	68.46 ~ 68.48 mm (2.695 ~ 2.696 in.)	74.46 ~ 74.48 mm (2.931 ~ 2.932 in.)	75.65 ~ 75.68 mm (2.978 ~ 2.979 in.)

Final Inside Diameter

Oversize	Final Inside Diameter		
	FH451V, 500V, 531V	FH541V, FH580V	FH601V, 641V, 680V, 721V
0.50 mm	68.48 ~ 68.50 mm (2.696 ~ 2.697 in.)	74.48 ~ 74.50 mm (2.932 ~ 2.933 in.)	75.68 ~ 75.70 mm (2.979 ~ 2.980 in.)

Change to a honing stone for finishing, the final inside diameter should be as shown in the table.

Be sure the correct stone is used and the stone is not worn.

- Clean the cylinder at the top and bottom of the cylinder to remove burns and pieces of the base and head gasket.
- Anchor the cylinder (block) on the drill press table before honing.
- Align the center of the cylinder bore to the press center. Set the press to operate from 200 to 250 rpm.
- Connect the drive shaft to the hone and set the stop on the drill press so the hone can only extend 20 to 25 mm (3/4 to 1.0 in.) above the top or below the bottom of the cylinder liner.
- Rotate the adjusting nut (knob) on the hone until the stones contact snugly against the cylinder wall at the narrowest point. "Do not Force".
- Turn the stone by hand. If you cannot turn it, the stone is too tight. Loosen the hone until it can be turned by hand.
- Be sure that the cylinder and hone are centered and aligned with the drive shaft and drill spindle.
- Pour honing oil inside of the cylinder during the honing operation. start the drill press. Move the hone up and down in the cylinder approximately 20 cycles-per-minute.
- Check the diameter of the cylinder bore regularly during honing, using an inside micrometer.

Cylinder, Piston**CAUTION**

Stop the drill press before measuring and remove the hone from the cylinder.

NOTE


- *The finish should not be smooth, but have a 40 to 60 degree crosshatch pattern.*
- Hone the cylinder until it is about 0.007 to 0.009 mm (0.0003 to 0.0004 in) large to allow for shrinkage when the cylinder cools.

NOTE

- *Do not use gasoline, kerosene, or commercial solvent to clean the cylinder bore. These fluids only wash all the oil from the cylinder wall. They do not remove the metal particles produced during honing.*
- Clean the cylinder thoroughly. Using soap warm water and clean rags, clean the cylinder wall. A clean white rag should not show soil from the cylinder wall.
- Dry the cylinder and coat with engine oil.

CAUTION

The cylinder must be thoroughly cleaned after honing to eliminate all grit.

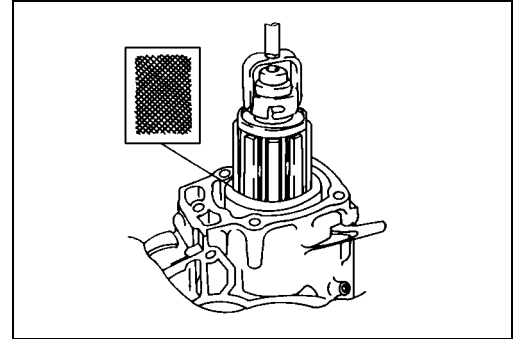


4-28 ENGINE TOP END


Muffler/Exhaust Pipe Installation

Muffler/Exhaust Pipe Removal

- Loosen the clamp nut [A].
- Remove the bolt [B] on the muffler bracket and take off the muffler.

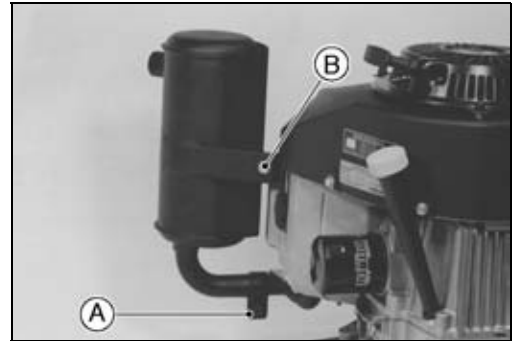

- Unscrew the exhaust pipe flange nuts [A], and remove the exhaust pipe [B] with pipe cover [C]. Use a penetrating oil if necessary to break threads loose.
- Remove the gaskets.
- Unscrew the hook nut [D], separate the exhaust pipe and pipe cover.
- Do not use unnecessary force on the exhaust pipes when removing the muffler assembly, or they could become damaged or destroyed.

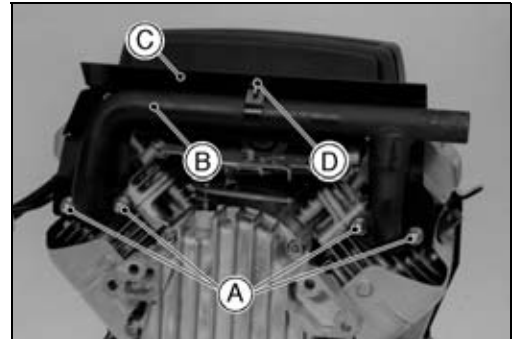

Muffler/Exhaust Pipe Installation

- Clean the exhaust pipe flanges to the exhaust port gasket surfaces and install a new gaskets each time the muffler installed.
- Install the gasket.
- To prevent mis-threading, finger tight the flange nuts first. Next tighten the hook nut.
- Tighten the nuts.

Torque - Exhaust Pipe Flange Nuts: 15 N·m (1.5 kgf·m, 11 ft·lb)

- Install the muffler.
- After installation, thoroughly warm up the engine, wait until the engine cools down and retighten the bolts and nuts.

Inspection

- Inspect the exhaust pipe or muffler for dents, cracks, rust and holes.
- ★ If the exhaust pipe or muffler is damaged, it should be replaced for best performance and least noise.
- Check the muffler for distortion and/or loose internal components. Loss of power could develop if the muffler loose the internal components restricting the exhaust flow.
- Check for breaks in the seams and check weld at the junction of the exhaust pipes and muffler.
- Tap the muffler with a plastic hammer to decarbonize.


Lubrication System

Table of Contents

Exploded View	5-2
Engine Oil Flow Chart.....	5-4
Engine Oil Flow Chart.....	5-5
Specifications	5-6
Engine Oil, Oil Filter, and Oil Cooler.....	5-7
Oil Level Inspection.....	5-7
Oil Change	5-8
Oil Filter Removal	5-9
Oil Filter Installation	5-9
Oil Cooler Removal (FH721V)	5-9
Oil Cooler Installation (FH721V)	5-9
Pressurized Lubrication System	5-10
Oil Pressure Measurement	5-10
Oil Pressure Switch Inspection	5-10
Oil Pump, Relief Valve	5-11
Oil Pump, Relief Valve Removal	5-11
Oil Pump, Relief Valve Installation	5-11
Oil Pump, Relief Valve Inspection	5-11
Oil Screen.....	5-14
Oil Screen Removal	5-14
Oil Screen Installation	5-14
Cleaning and Inspection	5-15

5-2 LUBRICATION SYSTEM

Exploded View

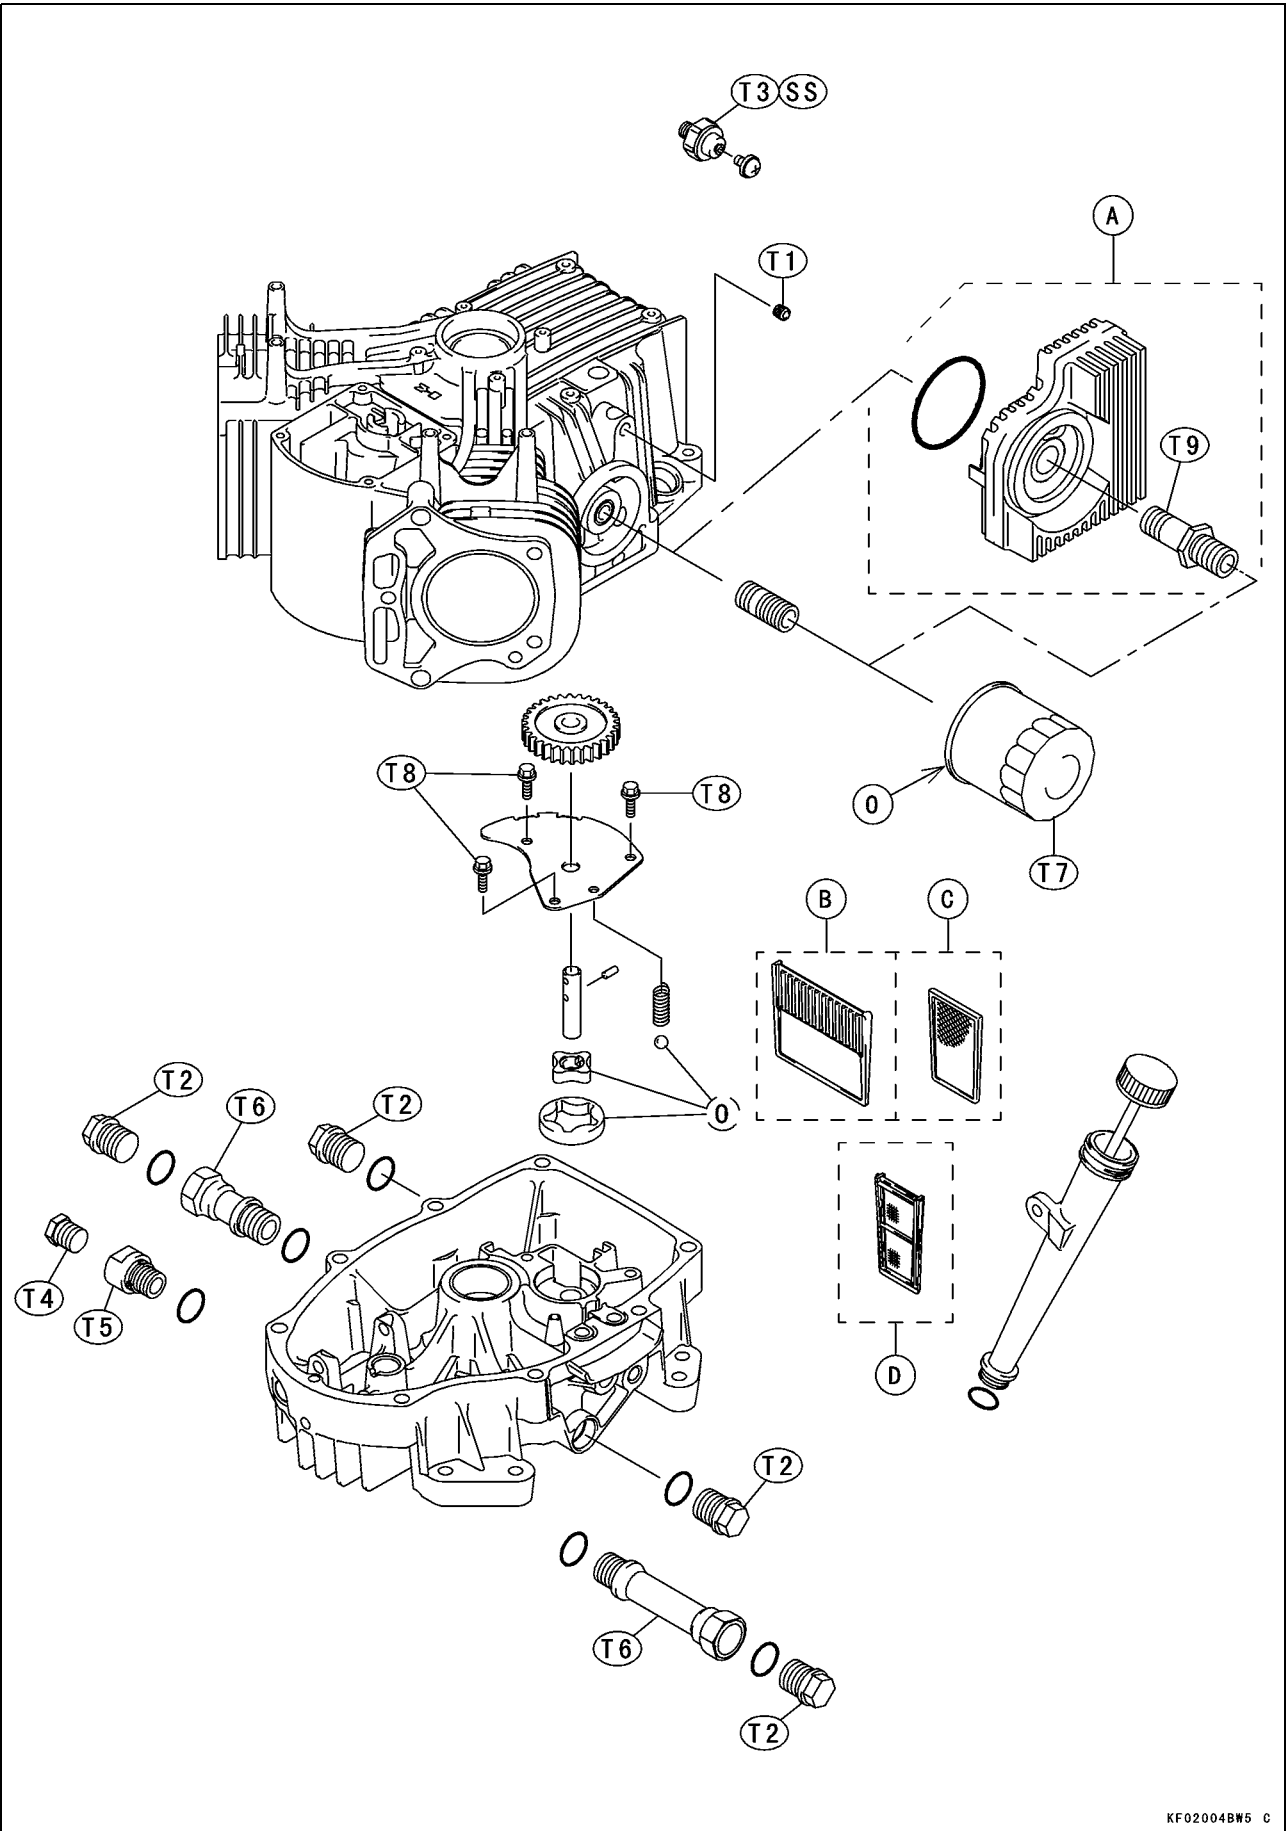

Exploded View

[FH451V, FH500V, FH531V]

- T1: 3.9 N·m (0.40 kgf·m, 35 in·lb)
- T2: 6.9 N·m (0.7 kgf·m, 61 in·lb) (Plastic)
- T3: 9.8 N·m (1.0 kgf·m, 87 in·lb)
- T4: 20 N·m (2.0 kgf·m, 14.5 ft·lb) (Metal)
- T5: 39 N·m (4.0 kgf·m, 29 ft·lb) (Metal)
- T6: 17 N·m (1.7 kgf·m, 12.0 ft·lb) (Plastic)
- T7: See the text
- T8: 5.9 N·m (0.6 kgf·m, 52 in·lb)

[FH541V, FH580V]

- T1: 3.9 N·m (0.40 kgf·m, 35 in·lb)
- T2: 6.9 N·m (0.7 kgf·m, 61 in·lb) (Plastic)
- T3: 9.8 N·m (1.0 kgf·m, 87 in·lb)
- T4: 20 N·m (2.0 kgf·m, 14.5 ft·lb) (Metal)
- T5: 39 N·m (4.0 kgf·m, 29 ft·lb) (Metal)
- T6: 17 N·m (1.7 kgf·m, 12.0 ft·lb) (Plastic)
- T7: See the text
- T8: 5.9 N·m (0.6 kgf·m, 52 in·lb)

[FH601V, FH641V, FH680V, FH721V]

- T1: 3.9 N·m (0.40 kgf·m, 35 in·lb)
- T2: 6.9 N·m (0.7 kgf·m, 61 in·lb) (Plastic)
- T3: 9.8 N·m (1.0 kgf·m, 87 in·lb)
- T4: 20 N·m (2.0 kgf·m, 14.5 ft·lb) (Metal)
- T5: 39 N·m (4.0 kgf·m, 29 ft·lb) (Metal)
- T6: 17 N·m (1.7 kgf·m, 12.0 ft·lb) (Plastic)
- T7: See the text
- T8: 5.9 N·m (0.6 kgf·m, 52 in·lb)
- T9: 44 N·m (4.5 kgf·m, 33 ft·lb)

A: FH721V

B: Before FH500-A50316, FH531-A07510 Model

C: FH451V, FH500V, FH531v, FH451V, FH580V Model

D: FH601V, FH641V, FH680V, FH721V Model


O: Apply engine oil.

SS: Apply silicone sealant.

5-4 LUBRICATION SYSTEM

Engine Oil Flow Chart


FH451V, FH500V, FH531V, FH601V, FH641V, FH680V, FH721V

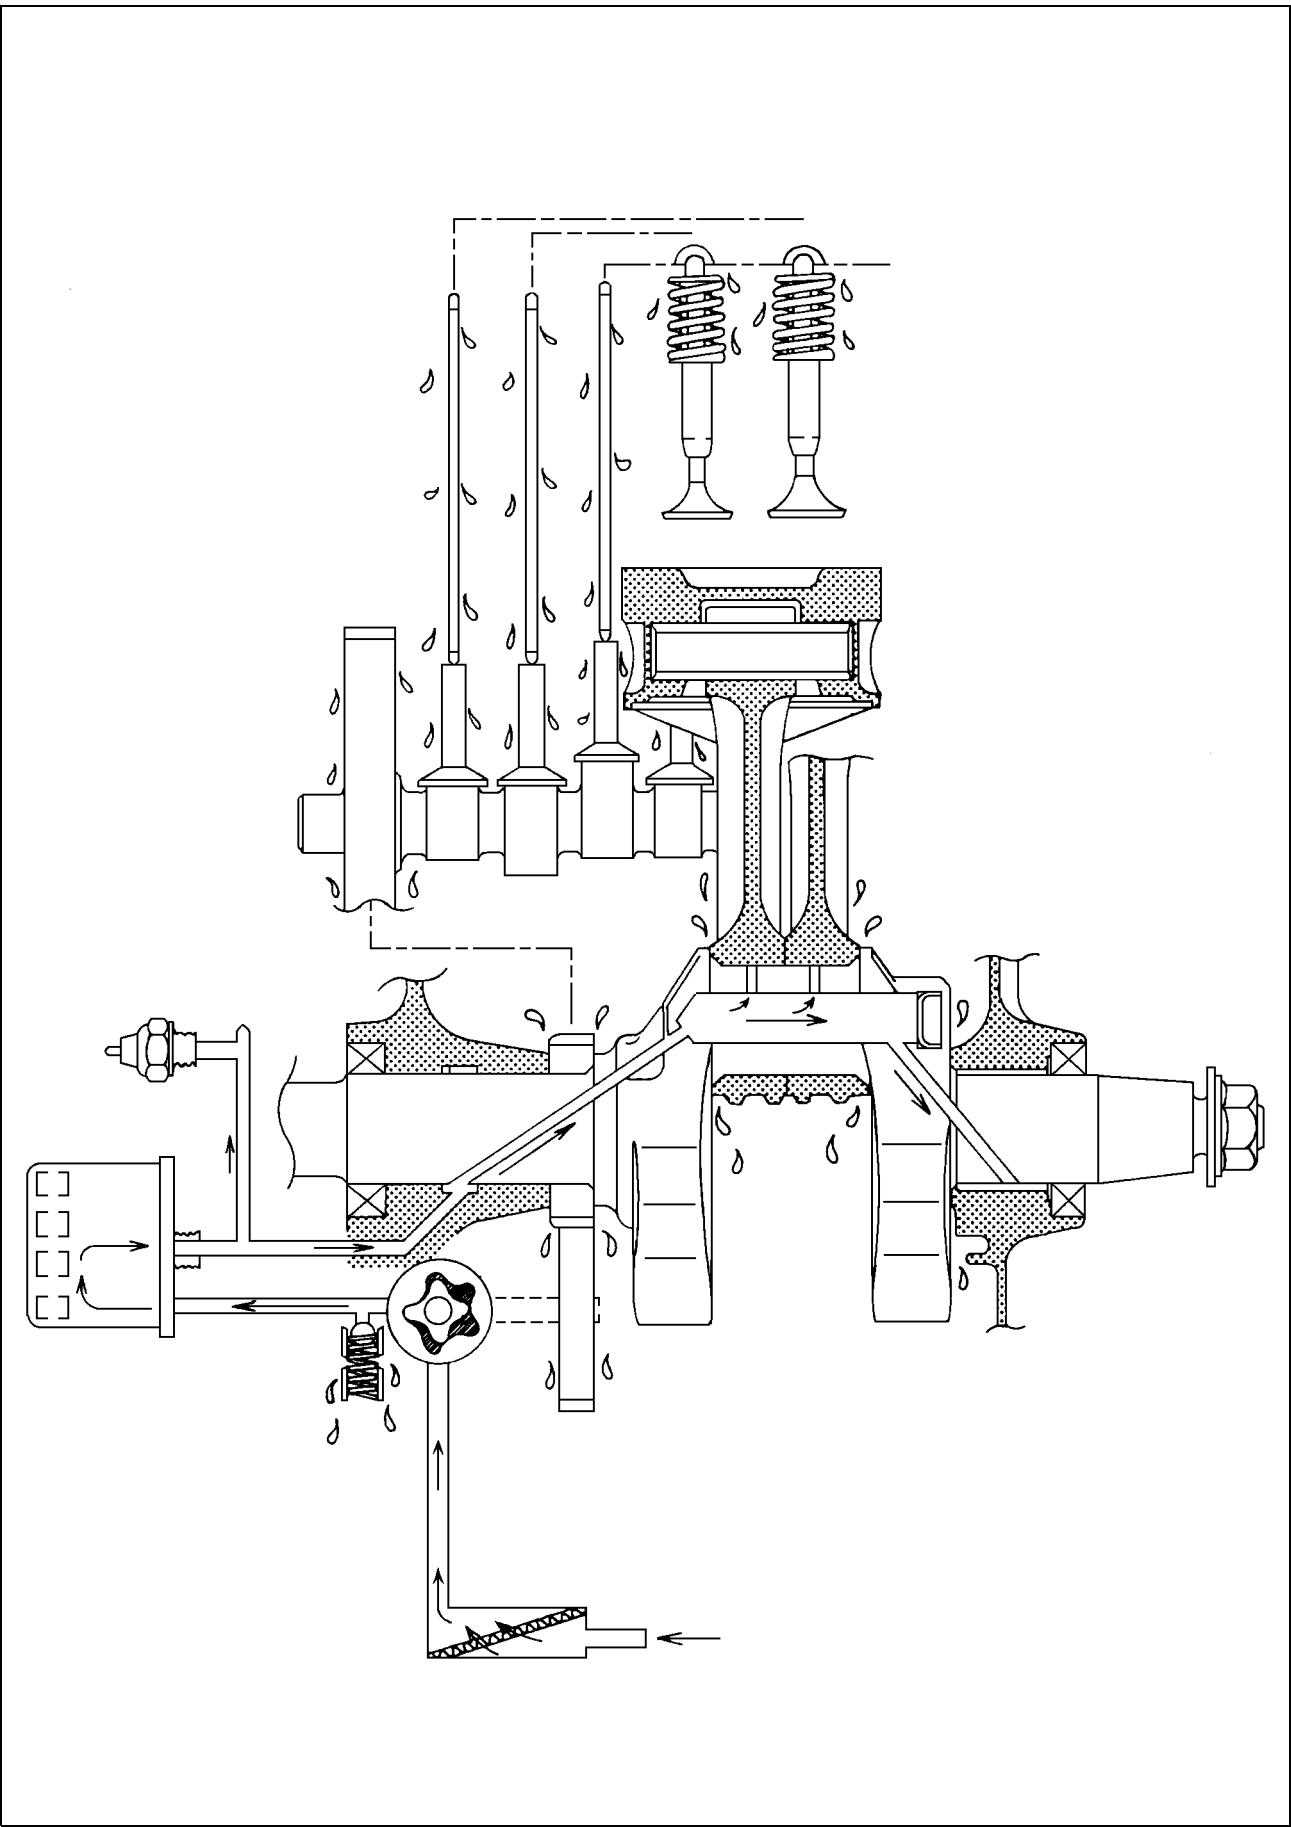

Engine Oil Flow Chart

FH541V FH580V

FH601V, FH641V, FH680V, FH721V (On and after 2003/5 product model)

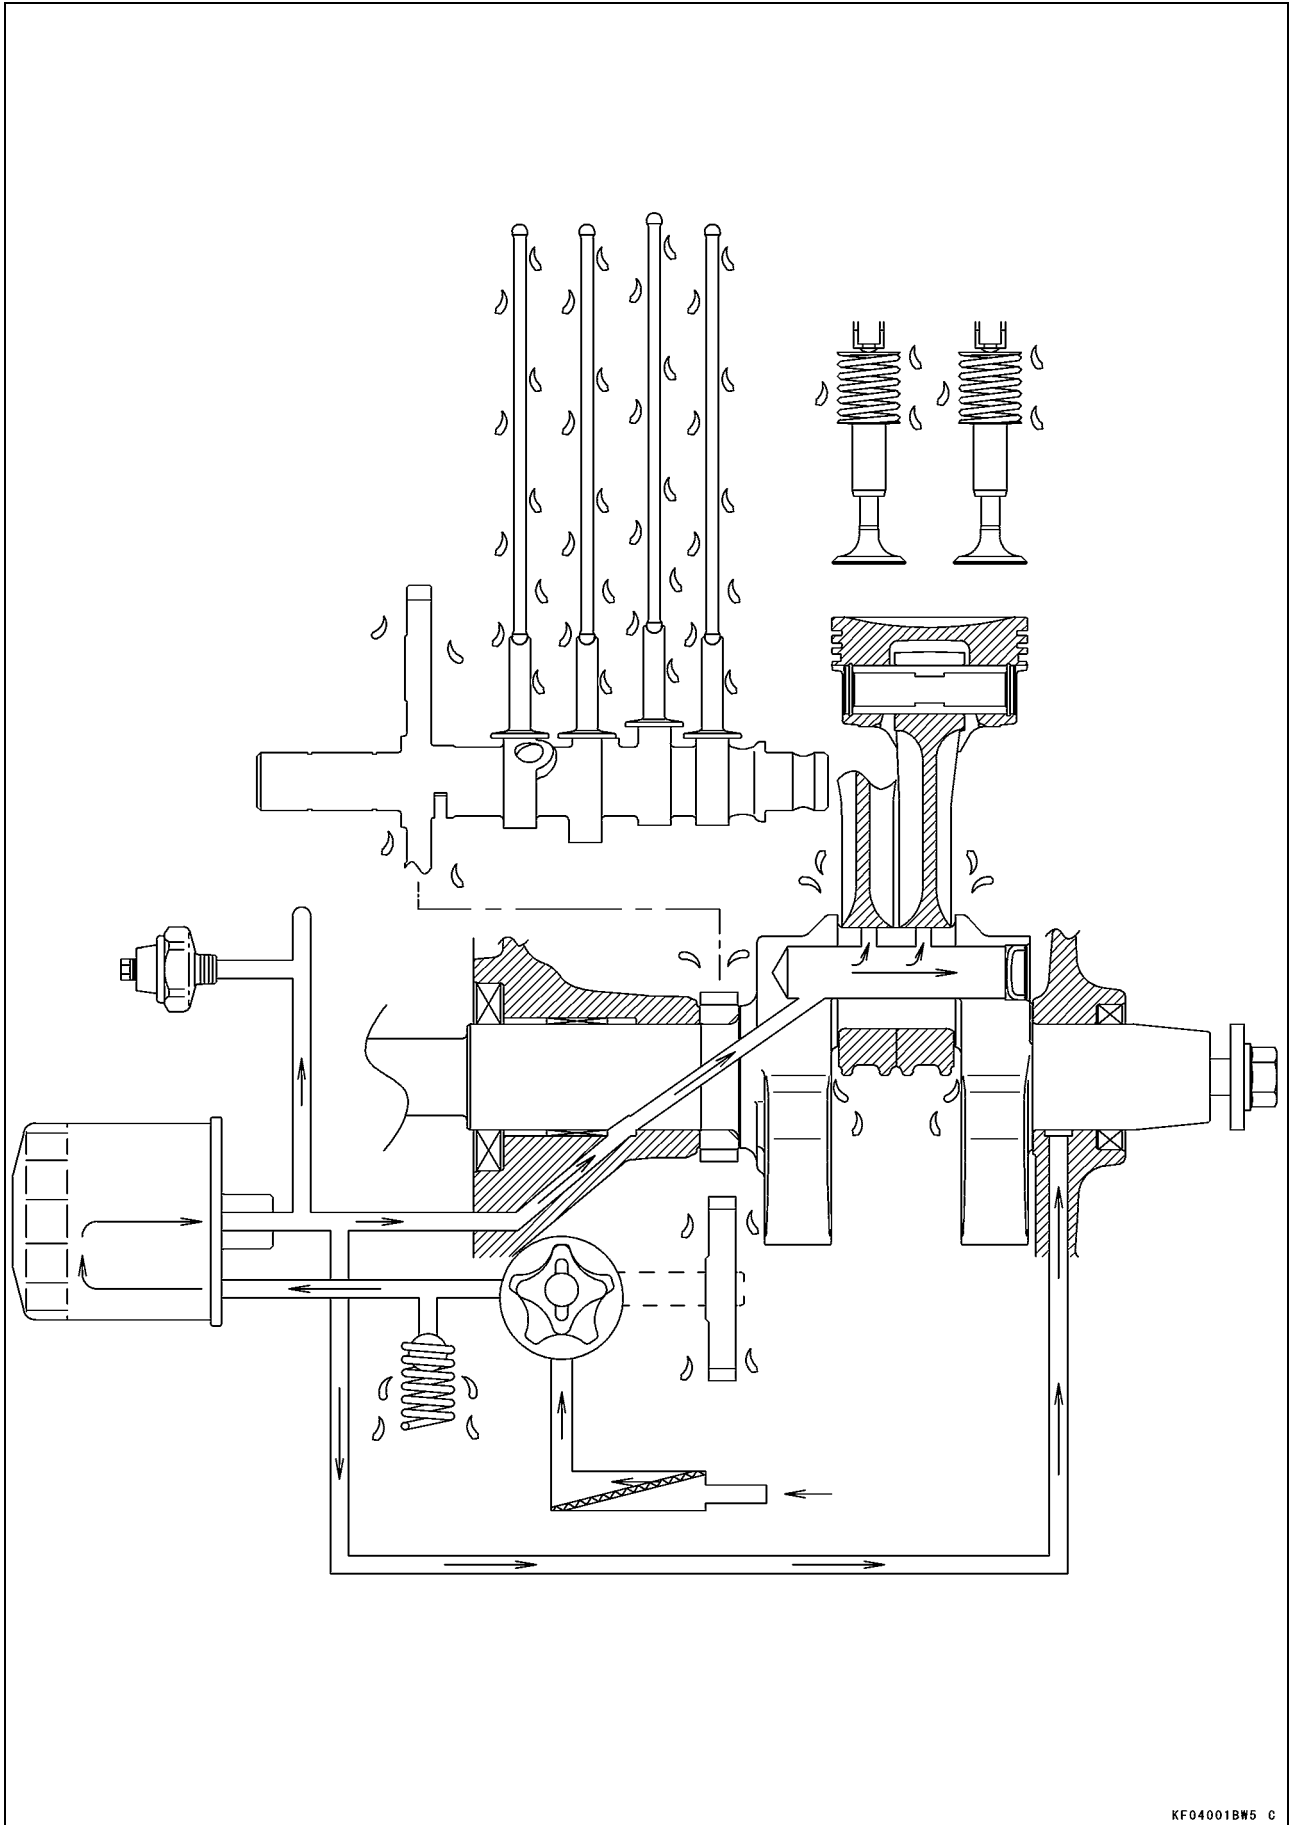

5-6 LUBRICATION SYSTEM

Specifications

Item	Standard
Engine Oil:	
Grade	SF, SG, SH or SJ class
Viscosity	SAE40, SAE30, SAE10W-30/SAE10W-40, or SAE5W-20
Capacity	When filter is not removed 1.5 L (1.6 US qt)
	When filter is removed 1.7 L (1.8 US qt) ... except FH721V
	1.8 L (1.9 Us-qt) ... FH721V
Level	Operating range (grid area) on dipstick
Oil Pressure	241 to 310 kPa (35 to 45 psi)
Oil Pressure Switch:	
Detect pressure	98 kPa (14.2 psi)
Screw	PT 1/8 pipe thread
Oil Filter By-pass Valve Opening Pressure	78.5 ~ 117.5 kPa (11.4 ~ 17.1 psi)

Item	Service Limit
Oil Pump:	
Inner and outer rotor clearance	0.2 mm (0.008 in.)
Outer rotor outside diameter	40.470 mm (1.5933 in.)
Outer rotor thickness	9.830 mm (0.3870 in.)
Pump housing inside diameter	40.801 mm (1.6063 in.)
Pump housing depth	10.230 mm (0.4028 in.)
Pump shaft outside diameter	10.923 mm (0.4300 in.)
Pump shaft bearing inside diameter	11.072 mm (0.4359 in.)
Relief valve spring free length	19.50 mm (0.77 in.)

Special Tool - Oil Filter Wrench : 57001-1249

Sealant - Kawasaki Bond (Silicone Sealant) : 56019-120

Engine Oil, Oil Filter, and Oil Cooler


CAUTION

Engine operation with insufficient, deteriorated, or contaminated engine oil will cause accelerated wear and may result in engine seizure and accident. Before starting the engine for the first time, add oil: The engine is shipped dry. Preoil the engine to force all air from the internal oil passages and the oil filter.

- Fill fresh engine oil to the specified level (see Oil Level Inspection).
- Run the engine at slow speed 2 minutes.
- Stop the engine and check the oil level.

Oil Level Inspection

- Place the engine on a level surface.
- Remove the oil filler cap [A] and wipe its dipstick [B] with a clean cloth.
- Insert the dipstick into tube [C] without screwing it in, then check the oil level.
- The oil level should be the operating range [D] (grid area) on the dipstick.
- ★ If the oil level is "ADD" range [E], add enough engine oil to bring oil level to the operating range.

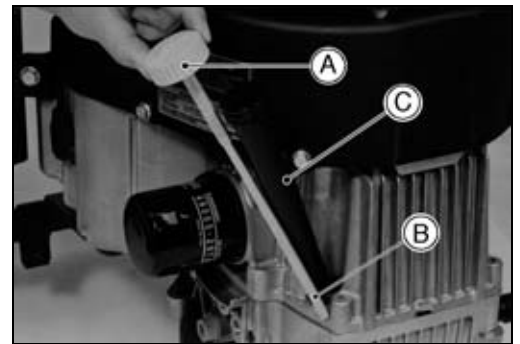



CAUTION

Do not add more oil above the operating range. Excess oil will cause a smoking condition.

- Use the same type and make of oil that is already in the engine.

NOTE

- If the engine oil type and make are unknown, use any brand of the specified oil to top up the level in preference to running the engine with the oil level low. Then at your earliest convenience, change the oil completely.
- ★ If the oil level is "FULL" range [F], drain the excess oil by loosening the drain plug.
- On and after 2002/2 ~ product model, as shown in the figure.

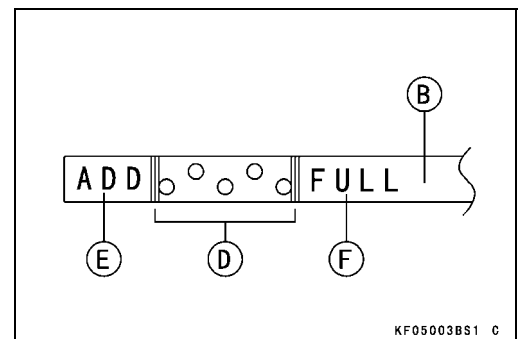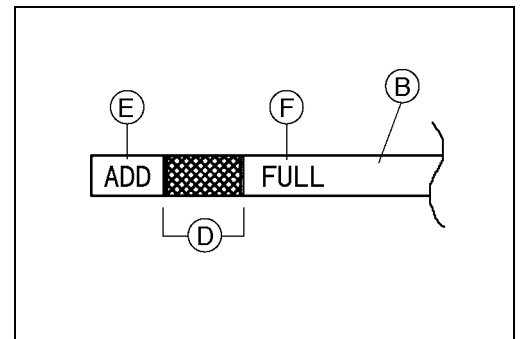

5-8 LUBRICATION SYSTEM

Engine Oil, Oil Filter, and Oil Cooler

Oil Change

- Change the oil after first 8 hours of operation. Thereafter change oil every 100 hours.
- start and warm up the engine so the oil will drain easily. Stop the engine.
- Place the engine on a level surface.
- Place a suitable container under the engine.
- Remove the drain plug [A] and drain the oil.

⚠ WARNING

Be careful of hot oil when drained. It may be hot enough to burn you severely.

- Check the O-ring [B] at the drain plug for damage. Replace the O-ring with a new one if it is damaged.
- ★ If the oil drain plug joint is removed, tighten it.

Torque - Oil Drain Plug Joint (Plastic) : 17 N·m (1.7 kgf·m, 12.0 ft·lb)

Oil Drain Plug Joint (Metal) : 39 N·m (4.0 kgf·m, 29 ft·lb)

- Install the drain plug with the O-ring and tighten it.

Torque - Oil Drain Plug (Plastic) : 6.9 N·m (0.7 kgf·m, 61 in·lb)

Oil Drain Plug (Metal) : 20 N·m (2.0 kgf·m, 14.5 ft·lb)

- Remove the oil filler cap and pour in the specified type and amount of oil.

Engine Oil :

Grade: SF, SG, SH or SJ Class




Viscosity: SAE40, SAE30, SAE10W-30/SAE10W-40, or SAE5W-20

Capacity: [When filter is not removed]
1.5 L (1.6 US qt)
[When filter is removed]
1.7 L (1.8 US qt) ... except FH721V.
1.8 L (1.9 US qt) ... FH721V.

- Check the O-ring [A] on the oil filler cap for damage. Replace the O-ring with a new one if it is damaged.
- ★ When checking oil level, do not turn oil filler cap on threads.

NOTE

○ Some increase in oil consumption may be expected when a multi grade engine oil (10W-30/10W-40, 5W-20) is used. Check the oil level frequently.

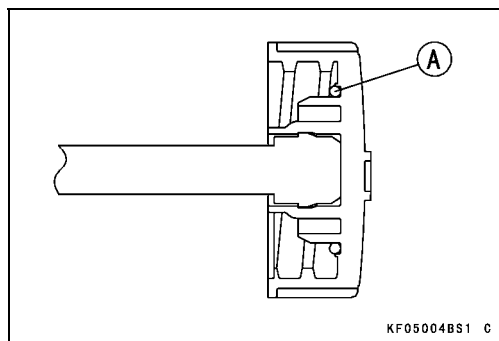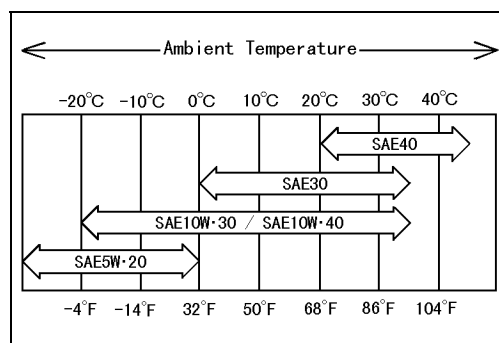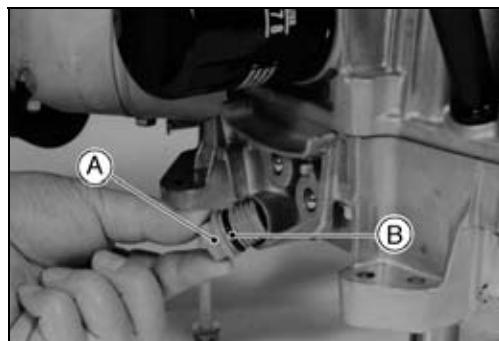

KF05004BS1 C


Engine Oil, Oil Filter, and Oil Cooler

Oil Filter Removal

- Using a strap wrench or oil filter wrench [A], remove the oil filter [B].

Special Tool - Oil Filter Wrench : 57001-1249

- When unscrewing the oil filter, place a suitable container beneath the oil drip tray to receive oil from the oil filter and oil passages in the engine. Turn the filter counter-clockwise to remove it

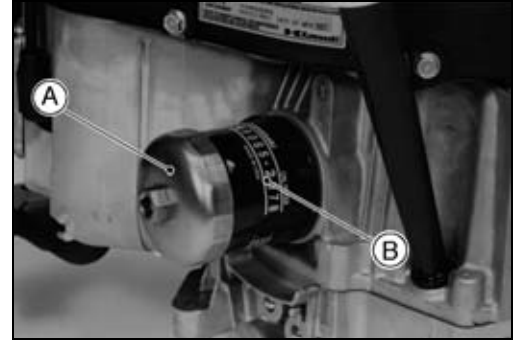


Oil Filter Installation

- Apply light film of engine oil to the seal [A].
- Install new filter.
- Turn the filter until the seal contacts mounting surface [B] of the engine. Then turn the filter BY HAND (S) 3/4 turn more.
 - Run the engine at slow idle speed 2 minutes. Check for leaks around the engine.
 - Stop the engine. Check the oil level (see Oil Level Inspection).



Oil Cooler Removal (FH721V)

- Remove the oil filter (see Oil Filter Removal).
- Unscrew the mounting joint [A] and remove the oil cooler [B].
- Check the O-ring [C] in groove of the oil cooler for damage. Replace the O-ring with a new one, if necessary.

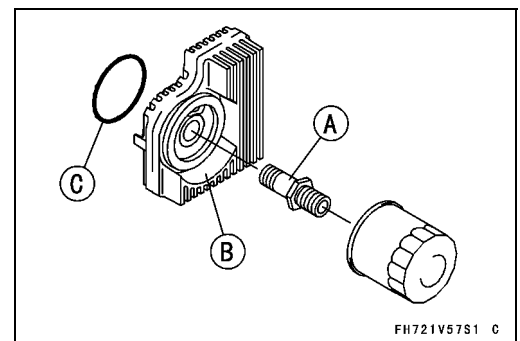

Oil Cooler Installation (FH721V)

- Install the oil cooler with the mounting joint and tighten it.
- Torque - Oil Cooler Mounting Joint: 44 N·m (4.5 kgf·m, 33 ft·lb)**
- Install the oil filter (see Oil Filter Installation).

5-10 LUBRICATION SYSTEM

Pressurized Lubrication System

The engine lubrication circuit is a pressurized system consisting of a positive displacement pump which picks up oil through a filter screen from the crankcase. The oil is pumped to a replaceable oil filter cartridge, through the engine's oil passages to lubricate internal components, and return to the crankcase. A pressure relief valve is used between the oil pump and oil filter to relieve excessive oil pressure by returning excess oil to the crankcase (see Oil Flow Chart).

Oil Pressure Measurement

- Remove the oil pressure switch or oil passage plug from the crankcase.
- Install an appropriately sized oil pressure gauge adapter [A] and oil pressure gauge [B].
- Run the engine and allow warm up completely.
- Run the engine at fast idle speed and read the oil pressure gauge.
- Stop the engine.
- Remove the oil pressure gauge and adapter.
- Apply silicone sealant to the threads of the pressure switch and tighten it, or tighten the plug.

Sealant - Kawasaki Bond (Silicone Sealant) : 56019-120

Torque - Oil Pressure Switch : 9.8 N·m (1.0 kgf·m, 87 in·lb)

Oil Passage Plug : 3.9 N·m (0.40 kgf·m, 35 in·lb)

- ★ If the oil pressure is below the specification, inspect the oil pump and relief valve.
- ★ If the oil pump and relief valve are not at fault, inspect the rest of the lubrication system.

Oil Pressure

241 to 310 kPa (35 to 45 psi)

Oil Pressure Switch

PT 1/8 (Taper Pipe Threads)

Oil Pressure Switch Inspection

When the oil pressure falls below 98 kPa (14.2 psi), the oil pressure switch activates the oil warning lamp to alert the operator or lubricating problem.

- To check the oil warning system, insert the switch key into the "OFF" position of the engine switch, then turn it to the "RUN" position. The warning light must be illuminated.
- When the engine is running be sure the warning light is "OFF".
- ★ If the warning light comes on, stop the engine immediately and check the oil level.
- When starting the engine, note the warning light on dash carefully.
- ★ If the warning light is on in the started engine in spite of adequate oil level, check the lead from the pressure switch to the warning light for short circuit and/or check the pressure switch and replace damaged part.
- ★ If the light is not on at the moment of the engine switch operation, check all leads of the warning light circuit or bulb and replace damaged parts.




Oil Pump, Relief Valve

Oil Pump, Relief Valve Removal

- Remove the crankcase cover (see Camshaft/Crankshaft chapter).
- Unscrew the mounting bolts and remove the oil pump parts assembly (pump gear, pump cover plate, pump shaft, pins and rotors).
- Take off the relief valve spring and ball.
- Disassemble the pump parts assembly.

- [A] Pin
- [B] Pump Gear
- [C] Mounting Bolts
- [D] Outer Rotor
- [E] Inner Rotor
- [F] Pump Shaft
- [G] Relief Valve Ball
- [H] Spring
- [I] Pump Cover Plate
- [J] 6 mm DIA Hole

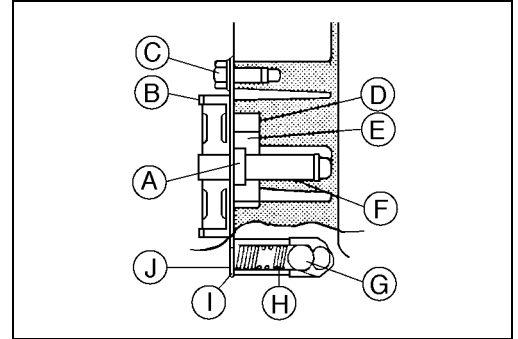

Oil Pump, Relief Valve Installation

- Fill the rotor housing with engine oil for initial lubrication.
- Install the relief valve ball and spring in position, then install the pump parts assembly in the crankcase cover.



NOTE

○When Installing the pump parts assembly, align the 6 mm DIA hole [A] on the cover plate with center of the relief valve.

- Install the mounting bolts and tighten them.


**Torque - Oil Pump Cover Plate Mounting Bolts : 5.9 N·m
(0.6 kgf·m, 52 in·lb)**

- Before FH500-A50316, FH531-A07510 model, as shown in the figure.

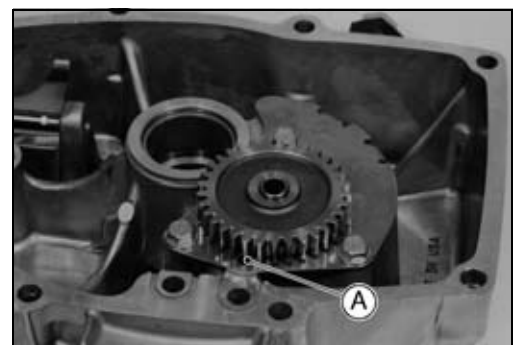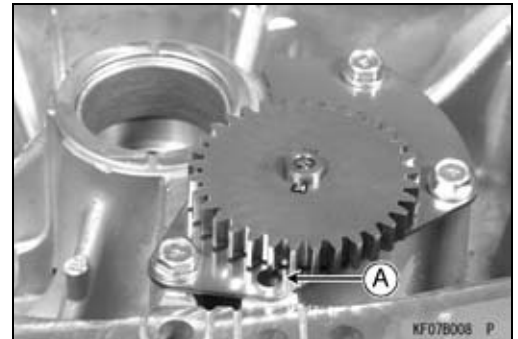

Oil Pump, Relief Valve Inspection

- Remove the oil pump (see Oil Pump, Relief Valve Removal).
- Visually inspect the pump gear, outer and inner rotor, and cover plate.
- ★If there is any damage or uneven wear, replace them.
- Check the clearance [A] between the inner and outer rotor with a feeler gauge. Measure the clearance between the high point of the inner rotor and the high point of the outer rotor.
- ★If the measurement exceed the service limit, replace the rotors as a set.

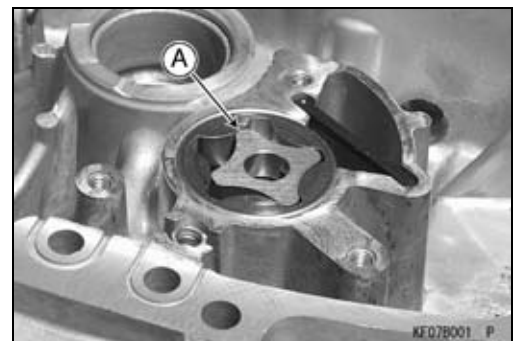


Inner and Outer Rotor Clearance

Service Limit: 0.2 mm (0.008 in.)

5-12 LUBRICATION SYSTEM

Oil Pump, Relief Valve

- Before FH500-A50136, FH531-A07510 model, as shown in the figure.

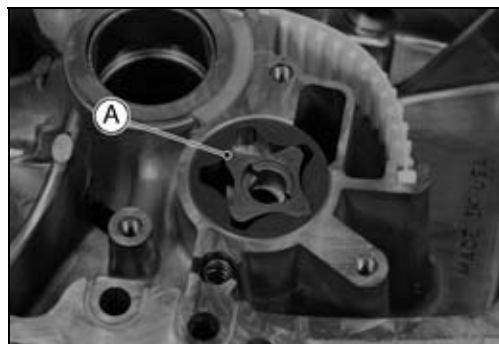


- Measure the outside diameter [A] of the outer rotor with a micrometer at several points.
- ★ If the rotor diameter is less than the service limit, replace both the inner and outer rotor.

Outer Rotor Outside Diameter

Service Limit: 40.470 mm (1.5933 in.)

- Measure the thickness [B] of the outer rotor with a micrometer at several points
- ★ If the rotor thickness is less than the service limit, replace both the inner and outer rotor.

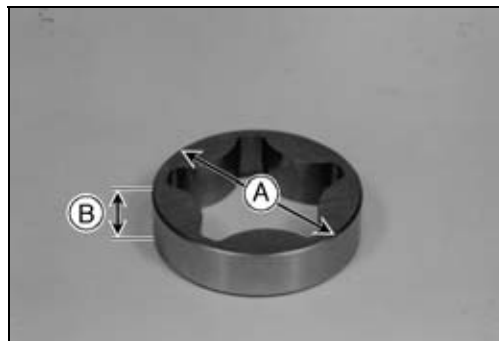

Outer Rotor Thickness


Service Limit: 9.830 mm (0.3870 in.)

- Measure the inside diameter [A] of the pump housing with an inside micrometer at several points.
- ★ If the inside diameter is more than the service limit, replace the crankcase cover.

Pump Housing Inside Diameter

Service Limit: 40.801 mm (1.6063 in.)


- Measure the depth [B] of the pump housing with a depth micrometer at several points.
- ★ If any of measurement is more than the service limit, replace the crankcase cover.

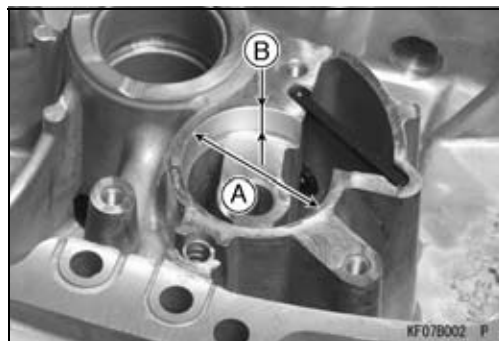

Pump Housing Depth

Service Limit: 10.230 mm (0.4028 in.)

- Before FH500-A50136, FH531-A07510 model, as shown in the figure.

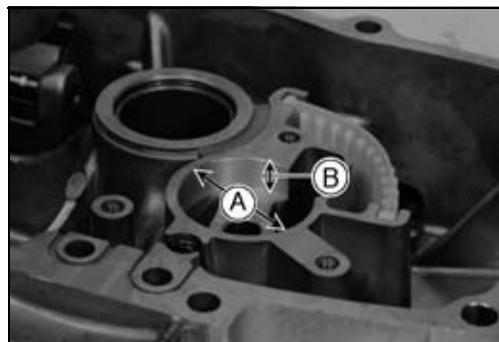


Oil Pump, Relief Valve

- Measure the outside [A] diameter of the pump shaft with a micrometer at several points.
- ★ If the diameter is less than the service limit, replace the pump shaft.

Pump Shaft Outside Diameter

Service Limit: 10.923 mm (0.4300 in.)

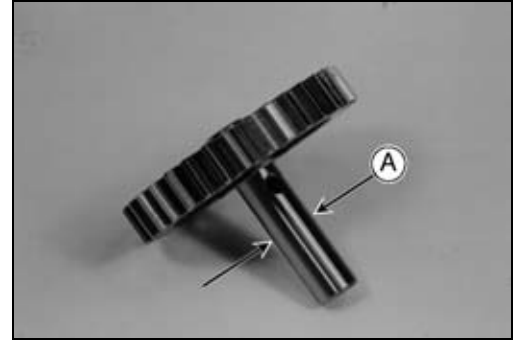


- Measure the inside diameter [A] of the pump shaft bearing in the crankcase cover with an inside micrometer at several points.
- ★ If the inside diameter is more than the service limit, replace the crankcase cover.

Pump Shaft Bearing Inside Diameter

Service Limit: 11.072 mm (0.4359 in.)



- Before FH500-A50136, FH531-A07510 model, as shown in the figure.

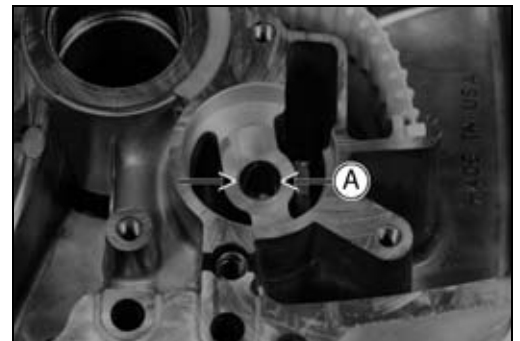

- Visually inspect the relief valve spring, steel ball and valve seat in the crankcase cover.
- ★ If any rough spots are found during above inspection, wash the valve clean with a high flash-point solvent and blow out any foreign particles that may be in the valve with compressed air.


⚠ WARNING

Clean the parts in a well ventilated area, and take care that there is no spark or flame anywhere near the working areas. Because of the danger of highly flammable liquids, do not use gasoline or low flash-point solvents.

- ★ If cleaning does not solve the problem, replace the relief valve parts.
- ★ If necessary, put the ball in position and lightly tap the ball with a suitable tool to form a perfect seat.
- Measure free length [A] of the spring with a vernier caliper.
- ★ If the free length of the spring is less than the service limit, replace the spring.

Relief Valve Spring Free Length

Service Limit: 19.50 mm (0.77 in.)

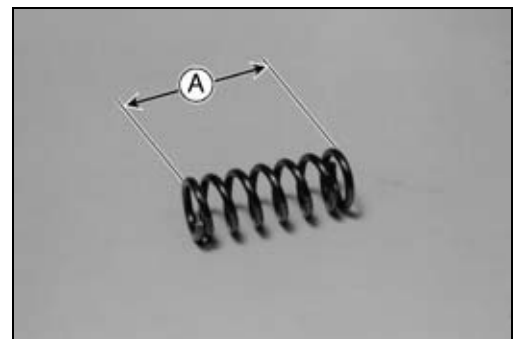


5-14 LUBRICATION SYSTEM


Oil Screen

Oil Screen Removal


- Remove the crankcase cover (see Camshaft/Crankcase chapter).
- Unscrew the mounting bolts [A] and remove the oil pump parts assembly.

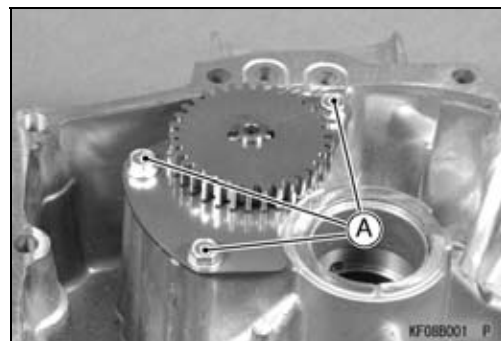

- Remove the oil screen [B].

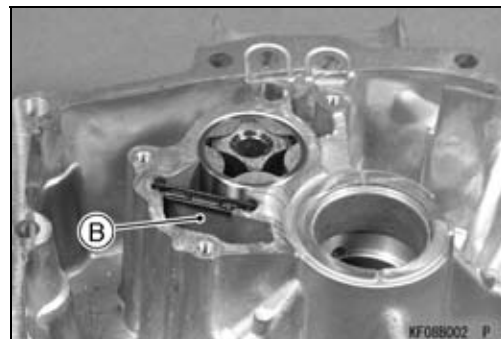

- Before FH500-A50136, FH531-A07510 model, as shown in the figure.

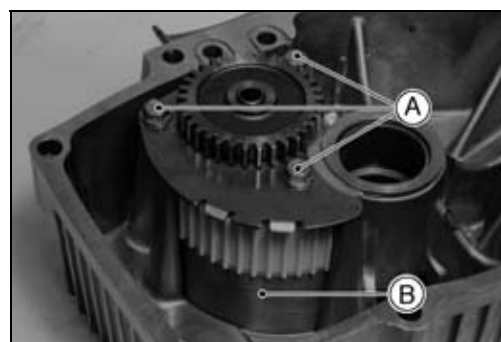


Oil Screen Installation

- Clean the oil screen thoroughly whenever it is removed for any reason.
- Insert the oil screen [A] in position and install the oil pump parts assembly (see Oil Pump, Relief Valve Installation).



- Before FH500-A50136, FH531-A07510 model, as shown in the figure.

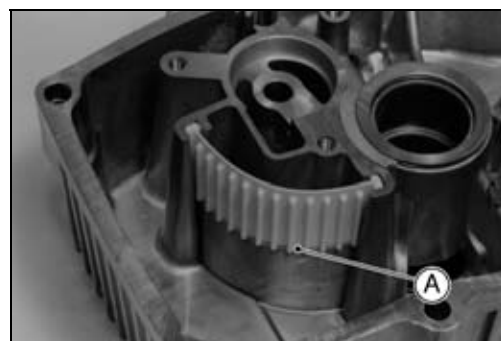

Oil Screen

Cleaning and Inspection

- Clean the oil screen with high flash-point solvent and remove any particles stuck to it.

WARNING

Clean the screen in a well-ventilated area, and take care that there is no spark or flame anywhere near the working area. Because of the danger of highly flammable liquids, do not use gasoline or low flash-point solvents.

NOTE


- *While cleaning the screen, check for any metal particles that might indicate internal engine damage.*
- Check the screen carefully for any damage: holes and broken wire.
- ★ If the screen is damaged, replace it.

Camshaft/Crankshaft

Table of Contents

Exploded View	6-2
Specifications	6-4
Crankcase	6-5
Crankcase Cover Removal	6-5
Crankcase Cover Installation	6-5
Inspection	6-6
Cleaning	6-7
Breather	6-8
Breather Element Removal - FH451V, 500V, 531V, 541V, 580V	6-9
Breather Element Installation - FH451V, 500V, 531V, 541V, 580V	6-9
Breather Valve Inspection - FH601V, 641V, 680V, 721V	6-9
Camshaft, Tappet	6-10
Camshaft, Tappet Removal	6-10
Camshaft, Tappet Installation	6-10
Camshaft Disassembly	6-11
Camshaft Assembly	6-11
Camshaft Inspection	6-11
Camshaft Bearing/Journal Wear	6-11
Crankshaft, Connecting Rod	6-13
Connecting Rod Removal	6-13
Connecting Rod Installation	6-13
Crankshaft Removal	6-13
Crankshaft Installation	6-13
Cleaning/Inspection	6-13
Connecting Rod Bend/Twist	6-14
Connecting Rod Big End/Crankpin Width Wear	6-14
Connecting Rod Big End Bearing/Crankpin Wear	6-15
Crankshaft Runout	6-15
Crankshaft Main Journal/Wear	6-16
Crankpin Resizing	6-16

Exploded View



Exploded View

[FH451V, FH500V, FH531V]

T1: 5.9 N·m (0.6 kgf·m, 52 in·lb)
T2: 25 N·m (2.6 kgf·m, 19.0 ft·lb)
T3: See Engine Top End chapter.

[FH541V, FH580]

T1: 5.9 N·m (0.6 kgf·m, 52 in·lb)
T2: 25 N·m (2.6 kgf·m, 19.0 ft·lb)
T3: See Engine Top End chapter.

[FH601V, FH641V, FH680V, FH721V]

T1: 5.9 N·m (0.6 kgf·m, 52 in·lb)
T2: 25 N·m (2.6 kgf·m, 19.0 ft·lb)
T3: See Engine Top End chapter.

O: Apply engine oil.

G: Apply grease.

SS: Apply silicone sealant.

S: Follow the specific tightening sequence.

A: FH451V, FH500V, FH531V, FH541V, FH580V Model

B: FH601V, FH641V, FH680V, FH721V Model

1. Screw
2. Plate
3. Breather Valve

6-4 CAMSHAFT/CRANKSHAFT

Specifications


Item		Service Limit		
		FH451V, 500V, 531V,	FH541V, 580V	FH601V, 641V, 680V, 721V
Camshaft, Tappet:				
Cam lobe height	Intake	29.131 mm (1.1469 in.)	←	29.621 mm (1.166 in.)
	Exhaust	29.131 mm (1.1469 in.)	←	29.621 mm (1.166 in.)
Camshaft journal diameter				
	PTO side	15.985 mm (0.6293 in.)	←	←
	Flywheel side	15.985 mm (0.6293 in.)	←	←
Camshaft bearing inside diameter				
	Crankcase	16.136 mm (0.6352 in.)	←	←
	Crankcase cover	16.136 mm (0.6352 in.)	←	←
Crankshaft, Connecting Rod:				
Connecting rod bend		0.15/100 mm (0.006/3.94 in.)	←	←
Connecting rod twist		0.15/100 mm (0.006/3.94 in.)	←	←
Connecting rod big end width		18.80 mm (0.74 in.)	←	19.90 mm (0.783 in.)
Crankpin width		39.50 mm (1.56 in.)	←	43.1 mm (1.697 in.)
Connecting rod big end inside diameter		35.055 mm (1.3801 in.)	38.055 mm (1.498 in.)	←
Crankpin Outside diameter		34.94 mm	37.94 mm	←
Crankshaft runout		0.05 mm (0.002 in.) TIR	(1.494 in.)	←
Crankshaft journal diameter				
	PTO side	34.90 mm (1.374 in.)	←	39.896 mm (1.571 in.)
	Flywheel side	34.93 mm (1.375 in.)	←	39.896 mm (1.571 in.)
Crankcase:				
PTO shaft bearing inside diameter		35.15 mm	←	40.15 mm
Crankcase Cover		(1.384 in.)		(1.581 in.)
Crankshaft journal bearing inside diameter		35.15 mm	←	40.15 mm
Crankcase		(1.384 in.)		(1.581 in.)

Sealant - Kawasaki Bond (Silicone Sealant): 56019-120

Crankcase

Crankcase Cover Removal

- Set the engine on a clean surface while parts are being removed.
- Drain the oil (see Lubrication System chapter).
- Remove:
 - Exhaust Pipe and Muffler (see Engine Top End chapter)
 - Control Panel (see Fuel System chapter)
 - Governor Arm (see Fuel System chapter)
- Unscrew the mounting bolts [A] and remove the crankcase cover [B] from the crankcase.
- There are two knock pins on the crankcase mating surface. A wooden or plastic mallet may be used to gently tap loose the crankcase cover.

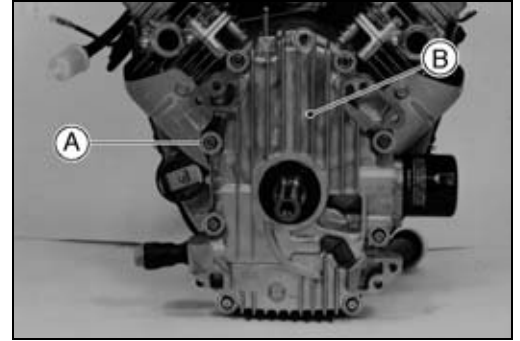


Crankcase Cover Installation

- Chip off the old gasket from the mating surfaces of the crankcase and cover.
- Using compressed air, blow out the oil passage in the crankcase cover.
- With a high flash-point solvent, clean off the mating surfaces of the crankcase and cover, and wipe dry.


⚠ WARNING

Clean the crankcase and cover in a well-ventilated area, and take care that there are no sparks or flame anywhere near the working area; this includes any appliance with a pilot light. Do not use gasoline or a low flash-point solvent to clean parts. A fire or explosion could result.

- Be sure to replace any oil seal removed with a new one.
- Install the oil seal so that the marks [A] face out.
- Pack some amount of a high temperature grease [B] into the space between the seal lip [C] and dust lip [D].
- Press in the new oil seal using a press or suitable tools until it is flush or below the flange surface [E].
- Do not damage the seal lips.
- [F]: PTO Side 1 ~ 2 mm (0.04 ~ 0.08 in.)
Flywheel Side 0 ~ 1 mm (0 ~ 0.04 in.)

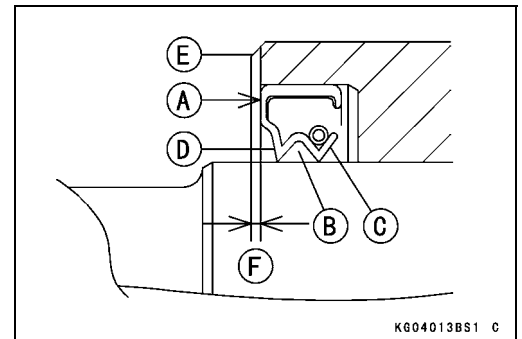


- When replacing the oil seal [A] of the governor shaft, note the following.
- Install the oil seal into the crankcase cover [B] after the governor shaft is inserted in the cover, and so that the marks [C] face out.
- The depth is 0 ~ 1 mm (0 ~ 0.04 in.) [D].
- When installing the governor shaft and plate in the crankcase cover, see Fuel System chapter.

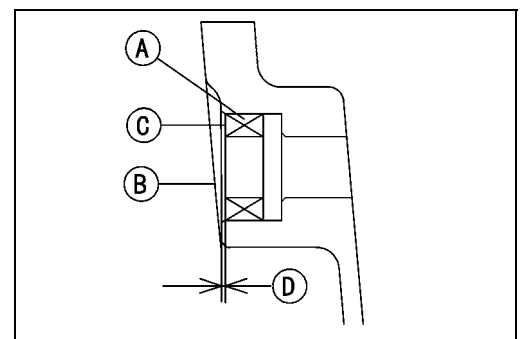

6-6 CAMSHAFT/CRANKSHAFT

Crankcase


- Check to see that the crankcase dowel pins [A] are in place on the crankcase.
- Install the gasket on the crankcase.

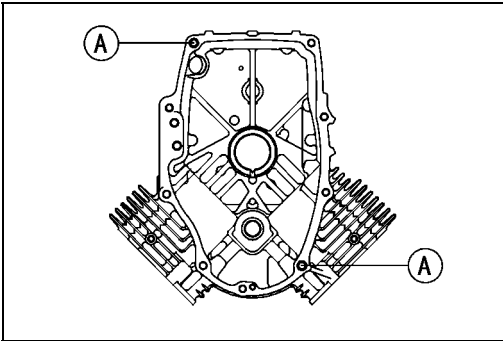

- Install the crankcase cover and tighten the crankcase cover bolts following the tightening sequence shown.


Torque - Crankcase Cover Bolts: 25 N·m (2.6 kgf·m, 19.0 ft·lb)

- Do not turn one screw down completely before the others, as it may cause the crankcase cover to warp.

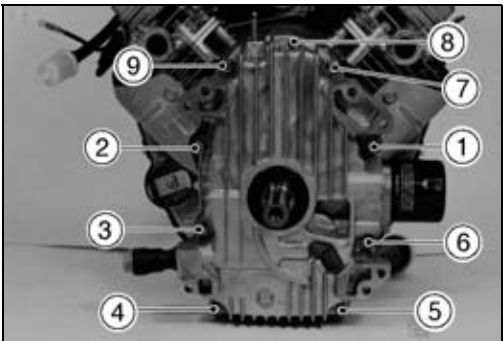

- For FH601V, 641V, 680V, 721V model, tightening sequence as shown.

Torque - Crankcase Cover Bolts: 25 N·m (2.6 kgf·m, 19.0 ft·lb)

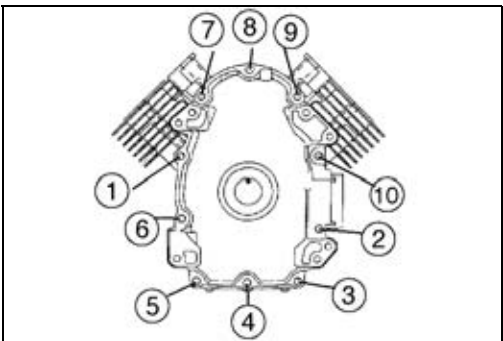

Inspection

- Measure the inside diameter [A] of the PTO shaft bearing on the crankcase cover at several points. This bearing is not replaceable. Replace the crankcase cover if the inside diameter is more than the service limit.

PTO Shaft Bearing Inside Diameter

Model	Service Limit
FH451V, 500V, 531V	35.15 mm (1.384 in.)
FH541V, 580V	35.15 mm (1.384 in.)
FH601V, 641V, 680V, 721V	40.15 mm (1.581 in.)



- Measure the inside diameter [A] of the crankshaft journal bearing on the crankcase at several points. This bearing is not replaceable. Replace the crankcase if the inside diameter is more than the service limit.

Crankshaft Journal Bearing Inside Diameter

Model	Service Limit
FH451V, 500V, 531V	35.15 mm (1.384 in.)
FH541V, FH580V	35.15 mm (1.384 in.)
FH601V, 641V, 680V, 721V	40.15 mm (1.581 in.)



Crankcase

Cleaning

- Remove:
 - Camshaft and Tappets (see Camshaft, Tappet Removal)
 - Crankshaft (see Crankshaft Removal)
- Clean up the crankcase and cover with a high flash-point solvent, and blow out any foreign particles that may be in the pockets inside of the crankcase with compressed air.

WARNING


Clean the crankcase and cover in a well-ventilated area, and take care that there is no spark or flame anywhere near the working area. Because of the danger of highly flammable liquids, do not use gasoline or low flash-point solvents.

6-8 CAMSHAFT/CRANKSHAFT

Breather

The function of the breather is to create a vacuum in the crankcase which prevents oil from being forced out of the engine through the piston rings, oil seals or gaskets. A sealed-type crankcase emission control system is used to eliminate blow-by gases. The blow-by gases are led to the breather chamber through the crankcase and the camshaft. Then, it is drawn into the clean side of the air cleaner through the cylinder head and the hose and mixed with the clean air flow, and subsequently coming into the combustion chamber through the carburetor and the intake manifold.


Oil is primarily separated from the gases while passing through the inside of the rocker chamber from the crankcase, and secondly separated from the gases in the breather chamber, and then returned back to the crankcase cover.

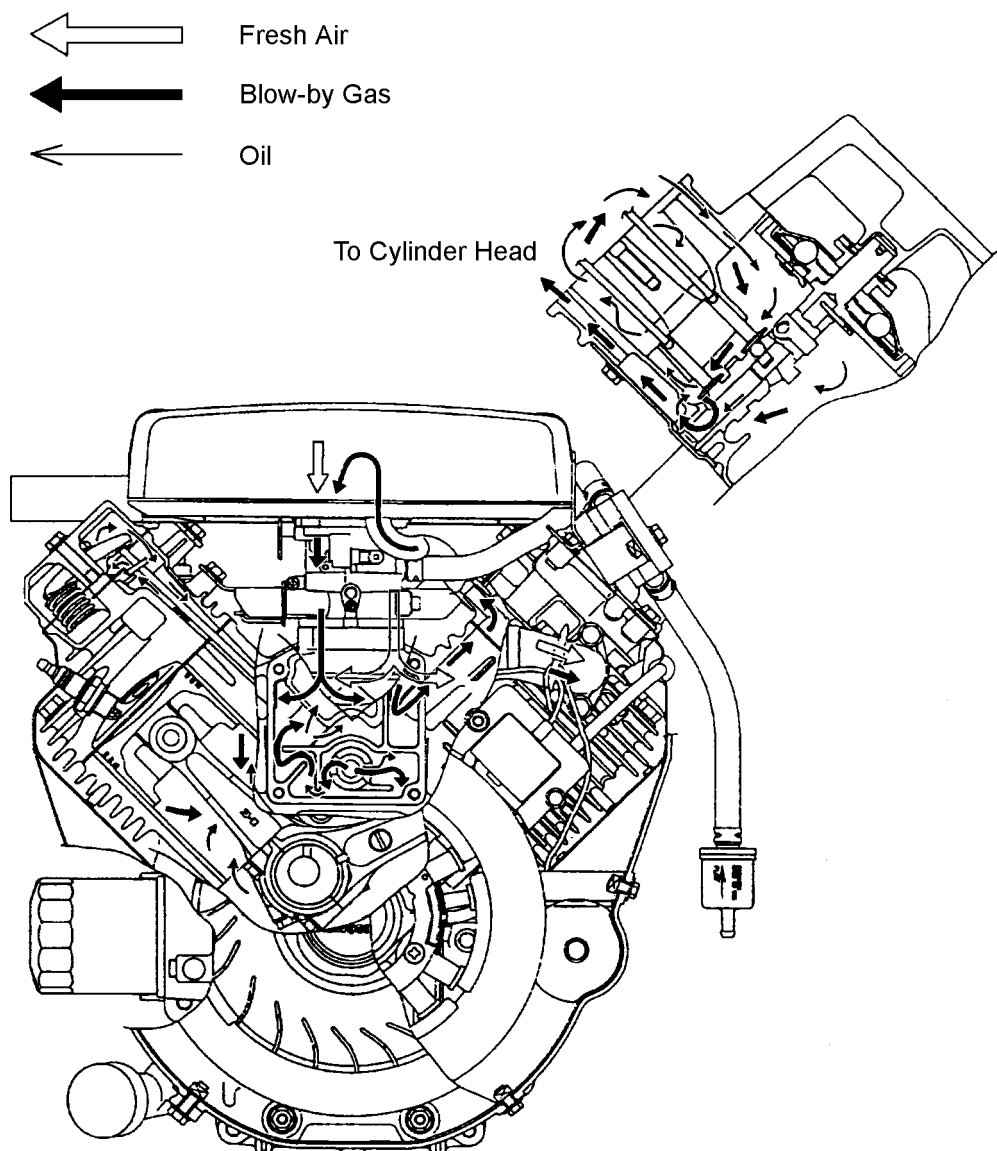


Breather

Breather Element Removal - FH451V, 500V, 531V, 541V, 580V

- Remove the bolts [A] and breather chamber cover [B].

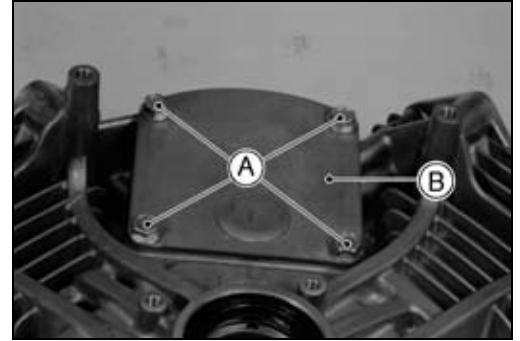

- Remove the element [A].
- Check to see that the plate [B] is in place under the element [A].

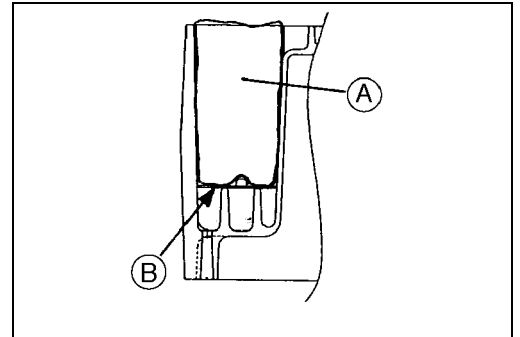


Breather Element Installation - FH451V, 500V, 531V, 541V, 580V

- Apply sealant [A] to the mating surface of the crankcase.

Sealant - Kawasaki Bond (Silicone Sealant) : 56019-120


- Install a new gasket and the breather chamber cover, and tighten the bolts.

Torque - Breather Chamber Cover Bolts: 5.9 N·m (0.6 kgf·m, 52 in·lb)

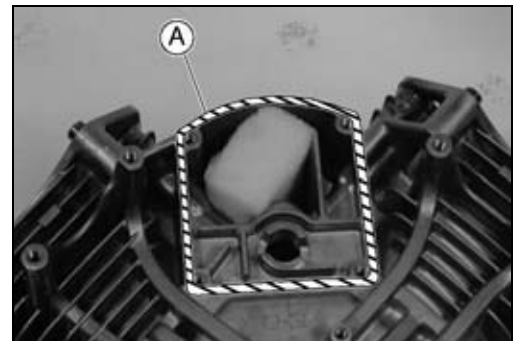

Breather Valve Inspection - FH601V, 641V, 680V, 721V

- Unscrew the mounting screw (A), and remove the plate (B) and the breather valve (C).
- Inspect the breather valve (C) for breakage, hair crack or distortion, replace it if necessary.
- Inspect the plate (B) for damage or rough contact surface, replace it if necessary.
- Inspect the valve seating surface. The surface should be free of nicks or burrs.
- Be sure the drain hole on the breather chamber does not accumulate with slugs before installing the breather valve.
- Align center of the valve seat with center of the breather valve and the plate, then tighten the mounting screw.

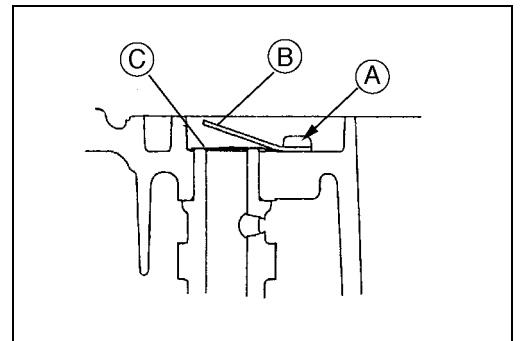

NOTE




- The mounting screw is a self-tapping one. Be aware that misthreading or overtightening screw will strip the female threads and ruin the hole.

6-10 CAMSHAFT/CRANKSHAFT


Camshaft, Tappet

Camshaft, Tappet Removal

- Set the engine on a clean surface while parts are being removed.
- Drain the oil (see Lubrication System chapter).
- Remove:
 - Muffler (see Engine Top End chapter)
 - Throttle Control Panel (see Fuel System chapter)
 - Carburetor (see Fuel System chapter)
 - Intake Manifold (see Fuel System chapter)
 - Crankcase Cover (see Crankcase Cover Removal)
 - Rocker Covers [A]
- Position the piston TDC at the end of the compression stroke.
- Push down [A] the spring side of the rocker arm [B] and move it to clear the push rod [C].
- Remove the push rods and mark them so they can be installed in their original positions during assembly.
- Turn the crankcase up side down so that the tappets will fall away from the cam lobes.
- Pull the camshaft [A] out of the crankcase.

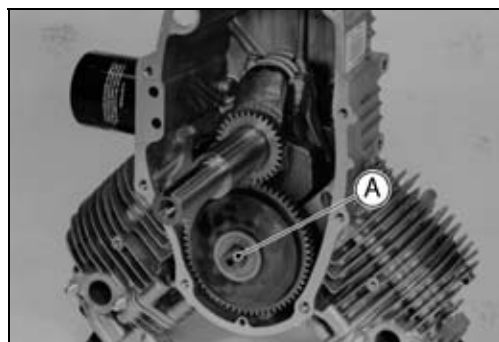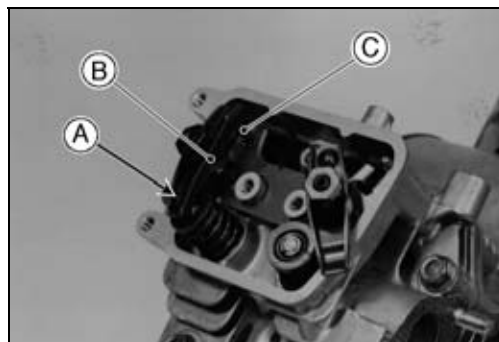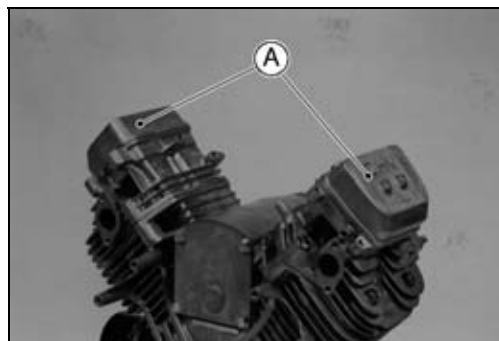


- Remove the tappets [A] and mark them so they can be installed in their original positions during assembly.

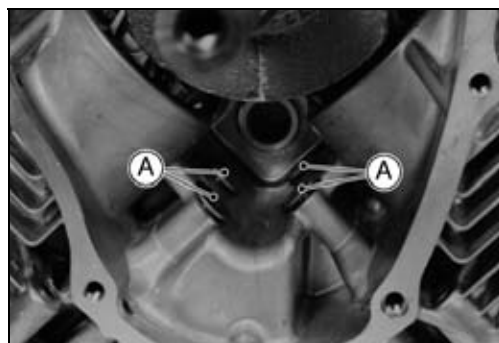

Camshaft, Tappet Installation


- Apply engine oil to the following.
 - Tappet Journal
 - Camshaft Journal
 - Cam Lobe Surface
 - Camshaft Gear
- Align the punch marks [A] on the crankshaft gear and camshaft gear.
- Install the shim [B] on the camshaft.

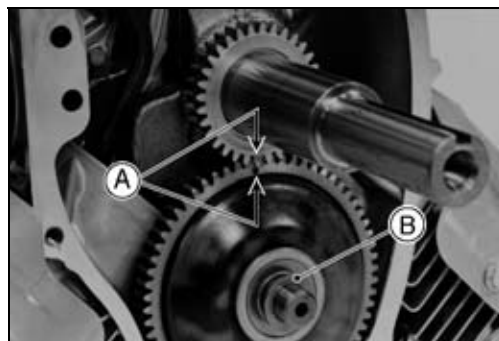

Camshaft, Tappet


Camshaft Disassembly

- Remove the governor assembly (see Fuel System chapter).
- Remove:
 - Spring [A]
- Do not remove the ACR (automatic compression release) weight [B].

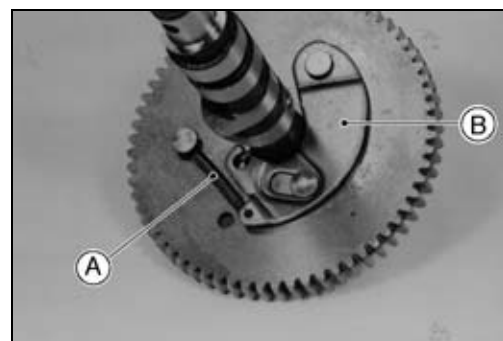


Camshaft Assembly

- Install the governor assembly (see Fuel System chapter).
- After assembling the camshaft, check the following items.
 - The governor plate [A] must move freely.
 - While shaking the camshaft, ACR weight [B] swings smoothly.

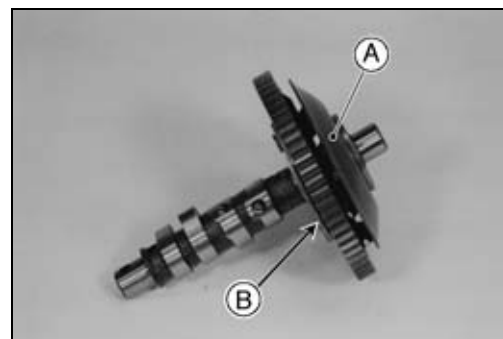

Camshaft Inspection

- Check the camshaft gear [A] for pitting, fatigue cracks, burrs or an evidence of improper tooth contact.
- ★ Replace the shaft if necessary.
- Check the top of the cam lobes [B] for wear, burrs or uneven contact.
- ★ Replace the shaft if necessary.

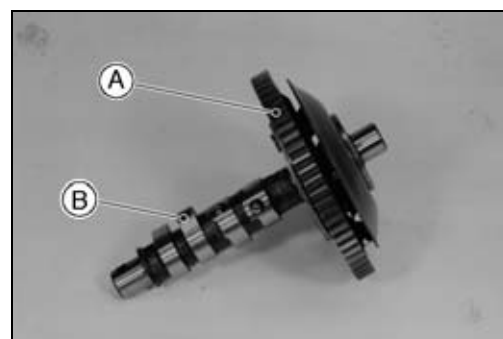

Camshaft Bearing/Journal Wear

- Measure the height of each cam lobe.
- ★ If the cam height is less than the service limit for either lobe, replace the camshaft.

Cam Lobe Height

Model	Service Limit
FH451V, 500V, 531V	IN. 29.131 mm (1.1469 in.) EX. 29.131 mm (1.1469 in.)
FH541V, FH580V	IN. 29.131 mm (1.1469 in.) EX. 29.131 mm (1.1469 in.)
FH601V, 641V, 680V, 721V	IN. 29.621 mm (1.166 in.) EX. 29.621 mm (1.166 in.)



6-12 CAMSHAFT/CRANKSHAFT

Camshaft, Tappet


- Measure both camshaft journals at several points around the journal circumference.
- ★ If the journal diameter is less than the service limit, replace the camshaft.

PTO Side Camshaft Journal Diameter

Service Limit: 15.985 mm (0.6293 in.)

Flywheel Side Camshaft Journal Diameter


Service Limit: 15.985 mm (0.6293 in.)

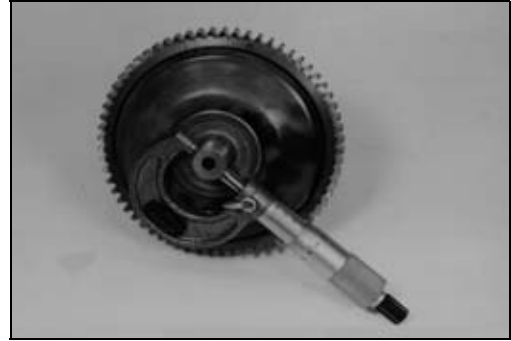

- Measure the inside diameter [A] of the camshaft bearing on the crankcase at several points. This bearing is not replaceable.
- ★ Replace the crankcase if the inside diameter is more than the service limit.

Camshaft Bearing Inside Diameter (Crankcase)

Service Limit: 16.136 mm (0.6352 in.)

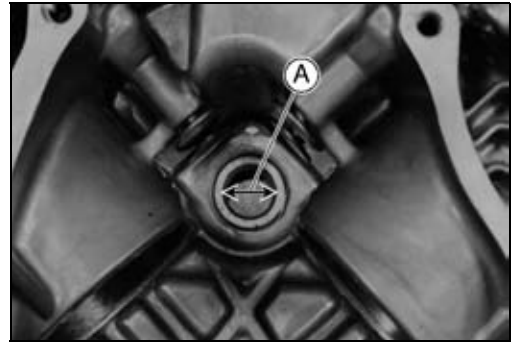

- Measure the inside diameter [A] of the camshaft bearing on the crankcase cover at several points. This bearing is not replaceable.
- ★ Replace the crankcase cover if the inside diameter is more than the service limit.

Camshaft Bearing Inside Diameter (Crankcase Cover)

Service Limit: 16.136 mm (0.6352 in.)



Crankshaft, Connecting Rod

Connecting Rod Removal


- Remove:
Piston (see Engine Top End Chapter)

Connecting Rod Installation

- Install:
Piston (see Engine Top End chapter)

Crankshaft Removal

- Set the engine on a clean surface while parts are being removed.
- Drain the oil (see Lubrication System chapter).
- Remove:
Flywheel (see Electrical System chapter)
Camshaft (see Camshaft, Tappet Removal)
Connecting Rod and Piston Assembly (see Engine Top End chapter)
- Pull the crankshaft [A] out of the crankcase. Tap gently with a wooden or plastic mallet if necessary to loosen the crankshaft.

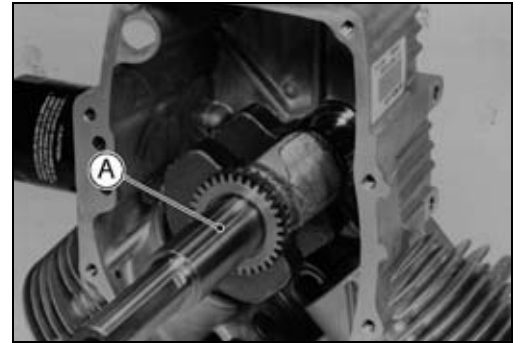*Crankshaft Installation*

- Clean up the crankshaft and crankcase thoroughly, especially at the bearing contact surfaces.
- Pack some amount of high temperature grease into the oil seal on the crankcase.
- Apply engine oil to the journal and bearing.
- Carefully insert the crankshaft flywheel end into the main bearing and oil seal in the crankcase.

Cleaning/Inspection

- After removing, clean the crankshaft and connecting rods with a high flash-point solvent and dry them with compressed air.
- Inspect the teeth of the crankshaft gear for pitting, fatigue cracks, burrs and evidence of improper tooth contact.
- ★ Replace the gear if necessary.
- Inspect the crankshaft and connecting rods especially at the bearing surfaces for wear, scratches, evidence of improper contact or other damages.
- ★ Replace them if necessary.

6-14 CAMSHAFT/CRANKSHAFT

Crankshaft, Connecting Rod

Connecting Rod Bend/Twist

- Measure connecting rod bend.
- Select an arbor of the same diameter as the connecting rod big end, and insert the arbor through the connecting rod big end.
- Select an arbor of the same diameter as the piston pin and at least 100 mm (3.94 in.) long, and insert the arbor through the connecting rod small end.
- On a surface plate, set the big-end arbor on V blocks.
- With the connecting rod held vertically, use a height gauge to measure the difference in the height of the small end arbor above the surface plate over a 100 mm (3.94 in.) length to determine the amount of connecting rod bend.
- ★ If connecting rod bend exceeds the service limit, the connecting rod must be replaced.

Connecting Rod Bend

Service Limit: 0.15/100 mm (0.006/3.94 in.)

- Measure connection rod twist.
- With the big-end arbor still on the V blocks, hold the connection rod horizontally and measure the amount that the small end arbor varies from being parallel with the surface plate over a 100 mm (3.94 in.) length of the arbor to determine the amount of connecting rod twist.
- ★ If connection rod twist exceeds the service limit, the connecting rod must be replaced.

Connecting Rod Twist

Service Limit: 0.15/100 mm (0.006/3.94 in.)

Connecting Rod Big End/Crankpin Width Wear

- Measure the connecting rod big end width [A] with a micrometer or dial caliper.
- ★ If the measurement is less than the service limit, replace the connecting rod.




Connecting Rod Big End Width

Model	Service Limit
FH451V, 500V, 531V	18.80 mm (0.74 in.)
FH541V, FH580V	18.80 mm (0.74 in.)
FH601V, 641V, 680V, 721V	19.90 mm (0.783 in.)

- Measure the crankpin width [A] with a dial caliper.
- ★ If the crankpin width is more than the service limit, replace the crankshaft.

Crankpin Width


Model	Service Limit
FH451V, 500V, 531V	39.50 mm (1.56 in.)
FH541V, FH580V	39.50 mm (1.56 in.)
FH601V, 641V, 680V, 721V	43.1 mm (1.697 in.)

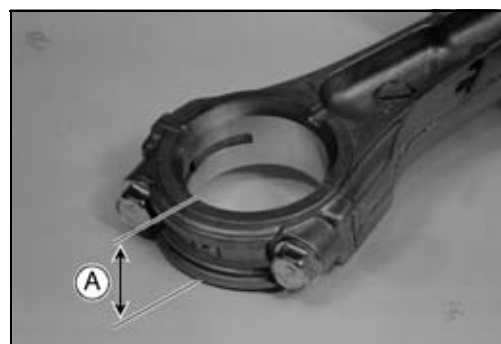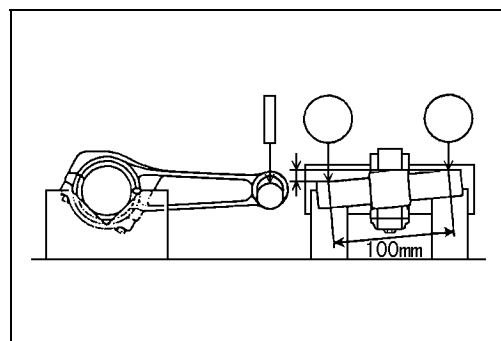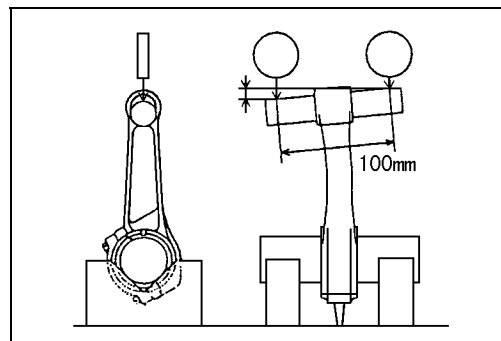

Crankshaft, Connecting Rod

Connecting Rod Big End Bearing/Crankpin Wear


- Apply a light film of oil on the thread of the cap bolts.
- Install the cap bolts and tighten the bolts to the specified torque (see Piston Installation in Engine Top End chapter).
- Measure the inside diameter [A] of big end at several points with a telescoping gauge or inside micrometer.
- ★ If the inside diameter is more than the service limit, replace the connecting rod with a new one.

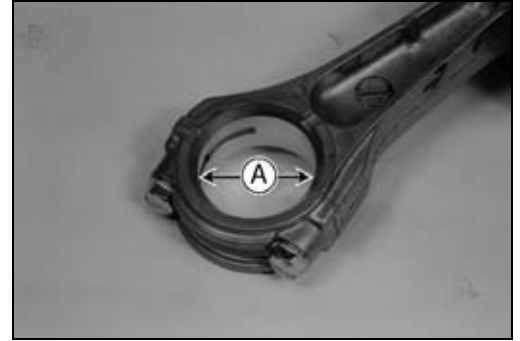

Connecting Rod Big End Inside Diameter

Model	Service Limit
FH451V, 500V, 531V	35.055 mm (1.380 in.)
FH541V, FH580V	38.055 mm (1.498 in.)
FH601V, 641V, 680V, 721V	38.055 mm (1.498 in.)

- Measure the crankpin outside diameter [A].
- Use a micrometer to measure several points around the crankpin circumference.
- ★ If the crankpin diameter is less than the service limit, replace the crankshaft with a new one.

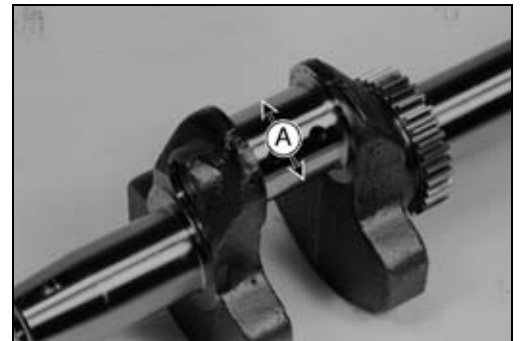


Crankpin Outside Diameter

Model	Service Limit
FH451V, 500V, 531V	34.94 mm (1.3756 in.)
FH541V, FH580V	37.94 mm (1.494 in.)
FH601V, 641V, 680V, 721V	37.94 mm (1.494 in.)

Crankshaft Runout

- Measure the crankshaft runout.
- Set the crankshaft in a flywheel alignment jig or on V blocks gauge.
- Set a dial gauge against both bearing journals.
- Turn the crankshaft slowly to measure the runout. The difference between the highest and lowest dial gauge readings (TIR) is the amount of runout.
- ★ If the measurement exceeds the service limit, replace the crankshaft.

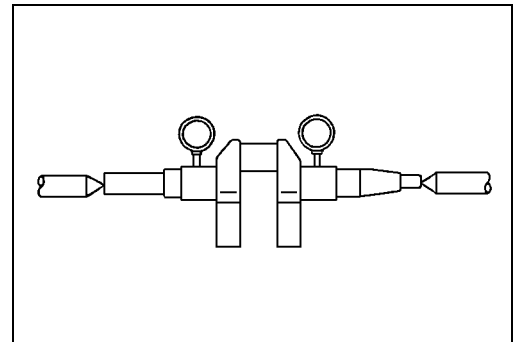

Crankshaft Runout

Service Limit: 0.05 mm (0.002 in.) TIR

6-16 CAMSHAFT/CRANKSHAFT

Crankshaft, Connecting Rod

Crankshaft Main Journal/Wear

- Measure both main journals at several points around the journal circumference.
- ★ If the journal diameter is less than the service limit, replace the crankshaft with a new one.

PTO Side Crankshaft Journal Diameter [A]

Model	Service Limit
FH451V, 500V, 531V	34.90 mm (1.374 in.)
FH541V, FH580V	34.90 mm (1.374 in.)
FH601V, 641V, 680V, 721V	39.896 mm (1.571 in.)

Flywheel Side Crankshaft Journal Diameter [B]

Model	Service Limit
FH451V, 500V, 531V	34.93 mm (1.375 in.)
FH541V, FH580V	34.93 mm (1.375 in.)
FH601V, 641V, 680V, 721V	39.896 mm (1.571 in.)

Crankpin Resizing

Crankpin can be resized to accept 34.5 mm (1.3583 in.) dia under size connecting rod. The crankpin should be re-ground if the crankpin is so much undersize and so much scored that a lapping operation will prove unsatisfactory. Reground can be done by a reliable repair shop.

- Before sending the crankshaft, inspect the crankpin for cracks.
- ★ If any cracks, no matter how small, are found, the crankshaft must be rejected.
- The final finishing dimensions should be shown in the table.

Finishing Dimensional Specifications

[FH451V, FH500V, FH531V]

[A]	34.457 ~ 34.470 mm (1.356 ~ 1.357 in.)
[B]	R 2.0 ~ 2.4 mm (R 0.0787 ~ 0.0945 in.)
[C]	39.50 mm MAX (1.555 in. MAX)
[D]	33.950 ~ 34.050 mm (1.337 ~ 1.340 in.)

Finishing Dimensional Specifications

[FH541V, FH580V]



[A]	37.457 ~ 37.470 mm (1.4747 ~ 1.4752 in.)
[B]	R 2.0 ~ 2.4 mm (R 0.0787 ~ 0.0945 in.)
[C]	39.50 mm MAX (1.555 in. MAX)
[D]	33.950 ~ 34.050 mm (1.337 ~ 1.340 in.)

Finishing Dimensional Specifications

[FH601V, FH641V, FH680V, FH721V]

[A]	37.457 ~ 37.470 mm (1.4747 ~ 1.4752 in.)
[B]	R 2.0 ~ 2.4 mm (R 0.0787 ~ 0.0945 in.)
[C]	43.0 mm MAX (1.693 in. MAX)
[D]	37.95 ~ 38.05 mm (1.4941 ~ 1.4980 in.)

- The crankpin surface should be concentric and parallel to each other within 0.006 mm (0.0002 in.) full indicator reading.
- Finish the crankpin surface with a super finishing stone.

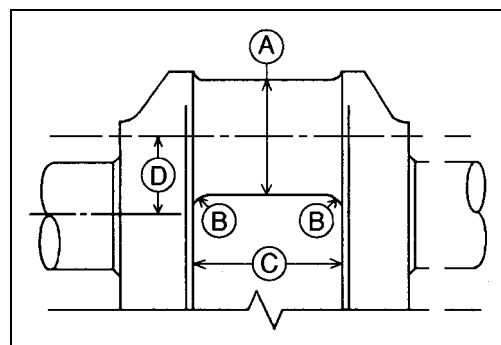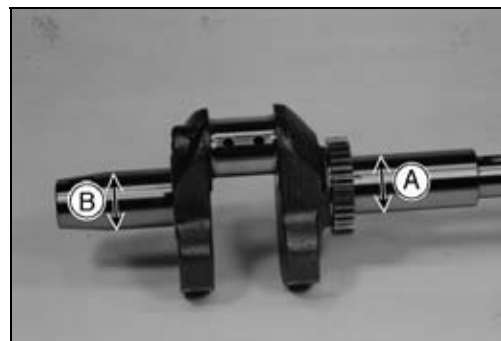


Electrical System

Table of Contents

Exploded View	7-2
Specifications	7-6
Wiring Diagram [FH451V, FH500V, FH531V, FH541V, FH580V]	7-7
Wiring Diagram [FH451V, FH500V, FH531V]	7-8
Wiring Diagram [FH601V, FH641V, FH680V, FH721V]	7-10
Precautions	7-11
Charging System	7-12
Flywheel, Stator Coil Removal	7-12
Flywheel, Stator Coil Installation	7-13
Charging System Operational Inspection	7-15
Stator Coil Resistance	7-16
Unregulated Stator Output	7-16
Regulator Removal	7-16
Regulator Installation	7-16
Regulator Resistance	7-17
Ignition System	7-18
Ignition Coil Removal	7-19
Ignition Coil Installation	7-19
Ignition Coil Inspection	7-20
Spark Plug Cleaning and Inspection	7-20
Spark Plug Gap Inspection	7-20
Starter System	7-21
Starter Motor Removal	7-21
Starter Motor Installation	7-21
Starter Motor Disassembly	7-21
Starter Motor Assembly	7-22
Starter Motor Brush Inspection	7-22
Brush Spring Inspection	7-22
Armature Inspection	7-22
Yoke Assembly Inspection	7-24
Pinion Clutch Inspection	7-24
Recoil Starter Removal	7-24
Recoil Starter Installation	7-24
Recoil Starter Disassembly	7-25
Recoil Starter Assembly	7-26

7-2 ELECTRICAL SYSTEM

Exploded View

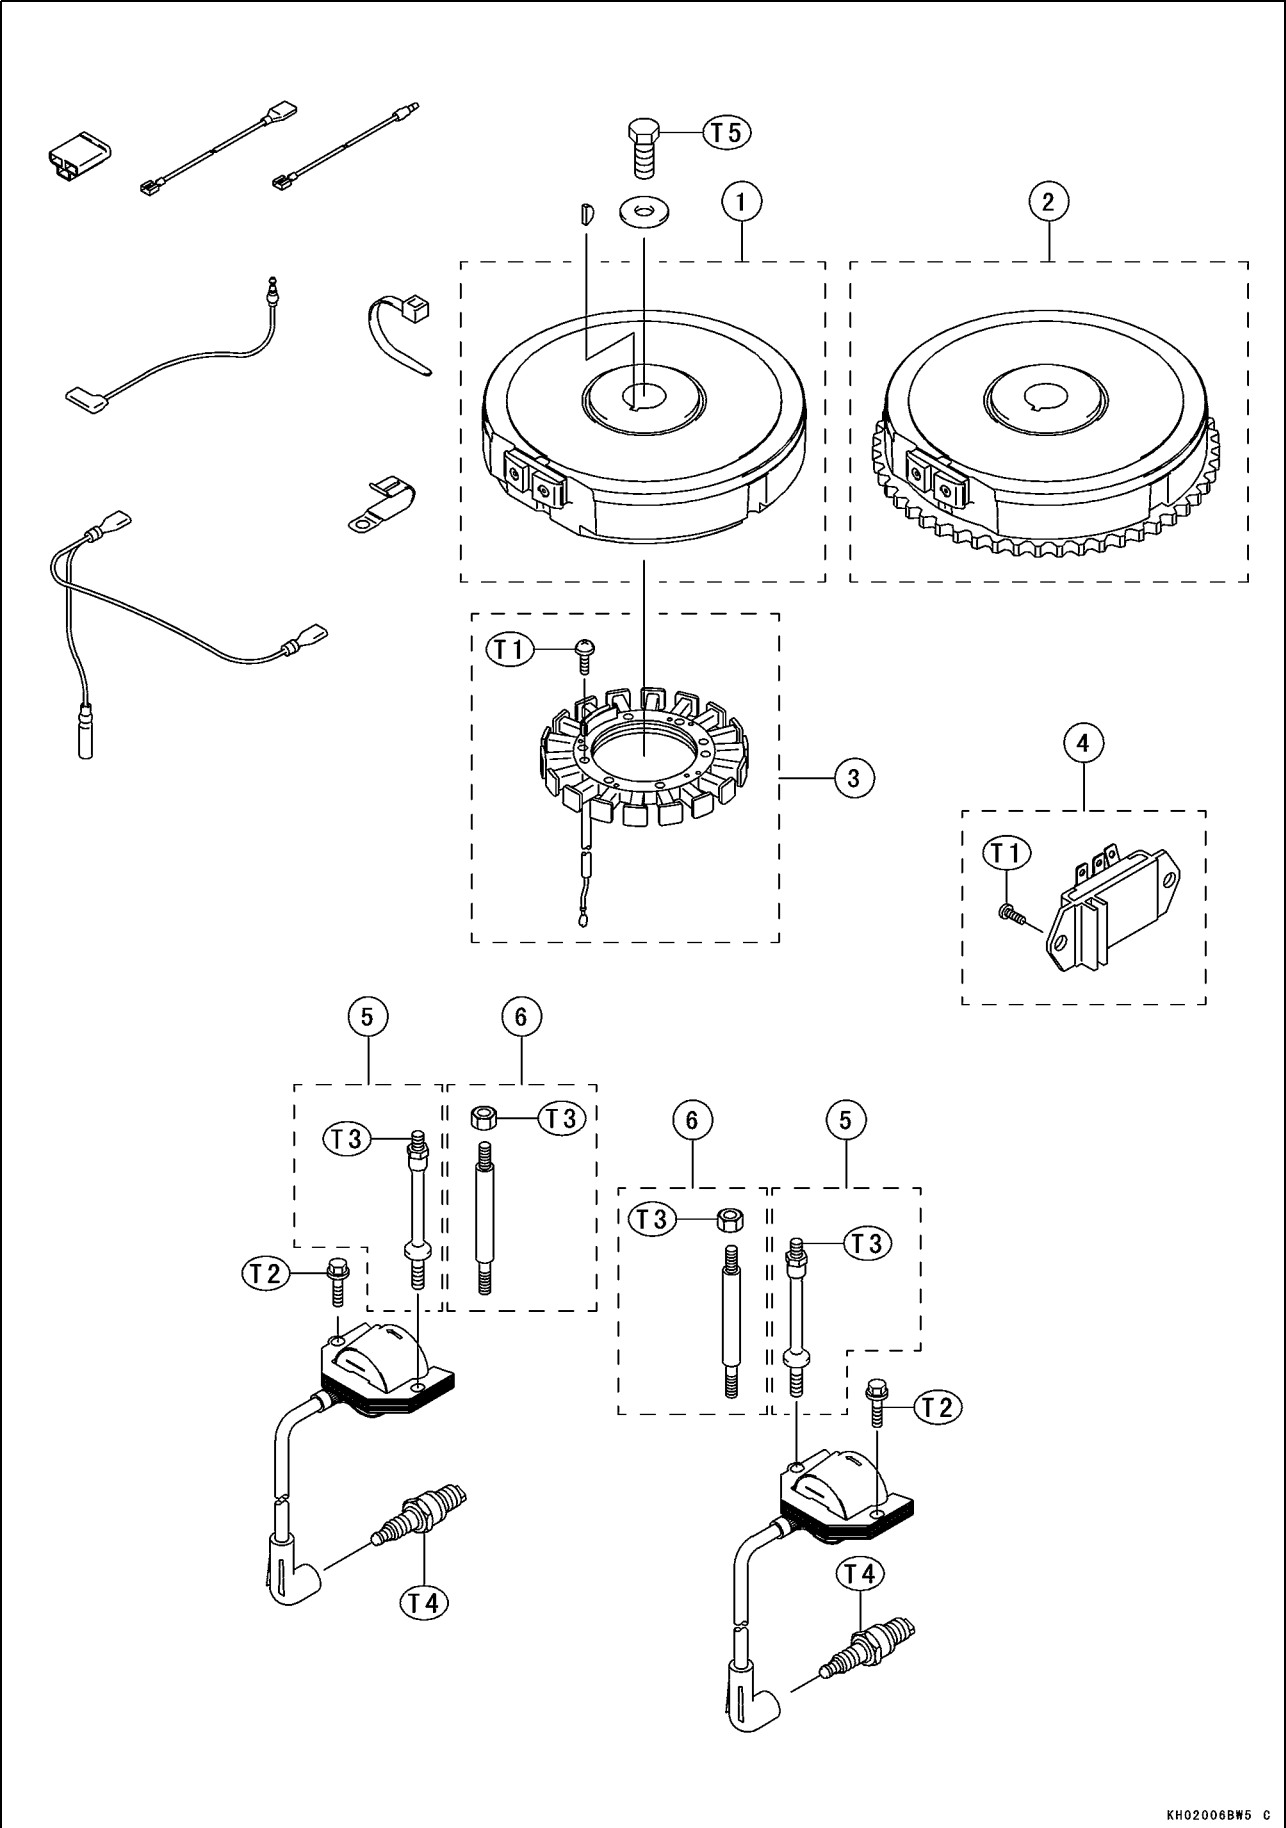

Exploded View

[FH451V, FH500V, FH531V]

T1: 3.9 N·m (0.40 kgf·m, 35 in·lb)
T2: 5.9 N·m (0.60 kgf·m, 52 in·lb)
T3: 7.8 N·m (0.80 kgf·m, 69 in·lb)
T4: 22 N·m (2.2 kgf·m, 16 ft·lb)
T5: 56 N·m (5.7 kgf·m, 41 ft·lb)

[FH541V, FH580V]

T1: 3.9 N·m (0.40 kgf·m, 35 in·lb)
T2: 5.9 N·m (0.60 kgf·m, 52 in·lb)
T3: 7.8 N·m (0.80 kgf·m, 69 in·lb)
T4: 22 N·m (2.2 kgf·m, 16 ft·lb)
T5: 56 N·m (5.7 kgf·m, 41 ft·lb)


[FH601V, FH641V, FH680V, FH721V]

T1: 3.9 N·m (0.40 kgf·m, 35 in·lb)
T2: 5.9 N·m (0.60 kgf·m, 52 in·lb)
T3: 7.8 N·m (0.80 kgf·m, 69 in·lb)
T4: 22 N·m (2.2 kgf·m, 16 ft·lb)
T5: 56 N·m (5.7 kgf·m, 41 ft·lb)

1. Flywheel (Recoil Starter Model)
2. Flywheel (Electric Starter Model)
3. Charging Coil
4. Voltage Regulator
5. Stud (Before 2002/4 Product Model)
6. Stud (On and after 2002/5 Product Model)

7-4 ELECTRICAL SYSTEM

Exploded View

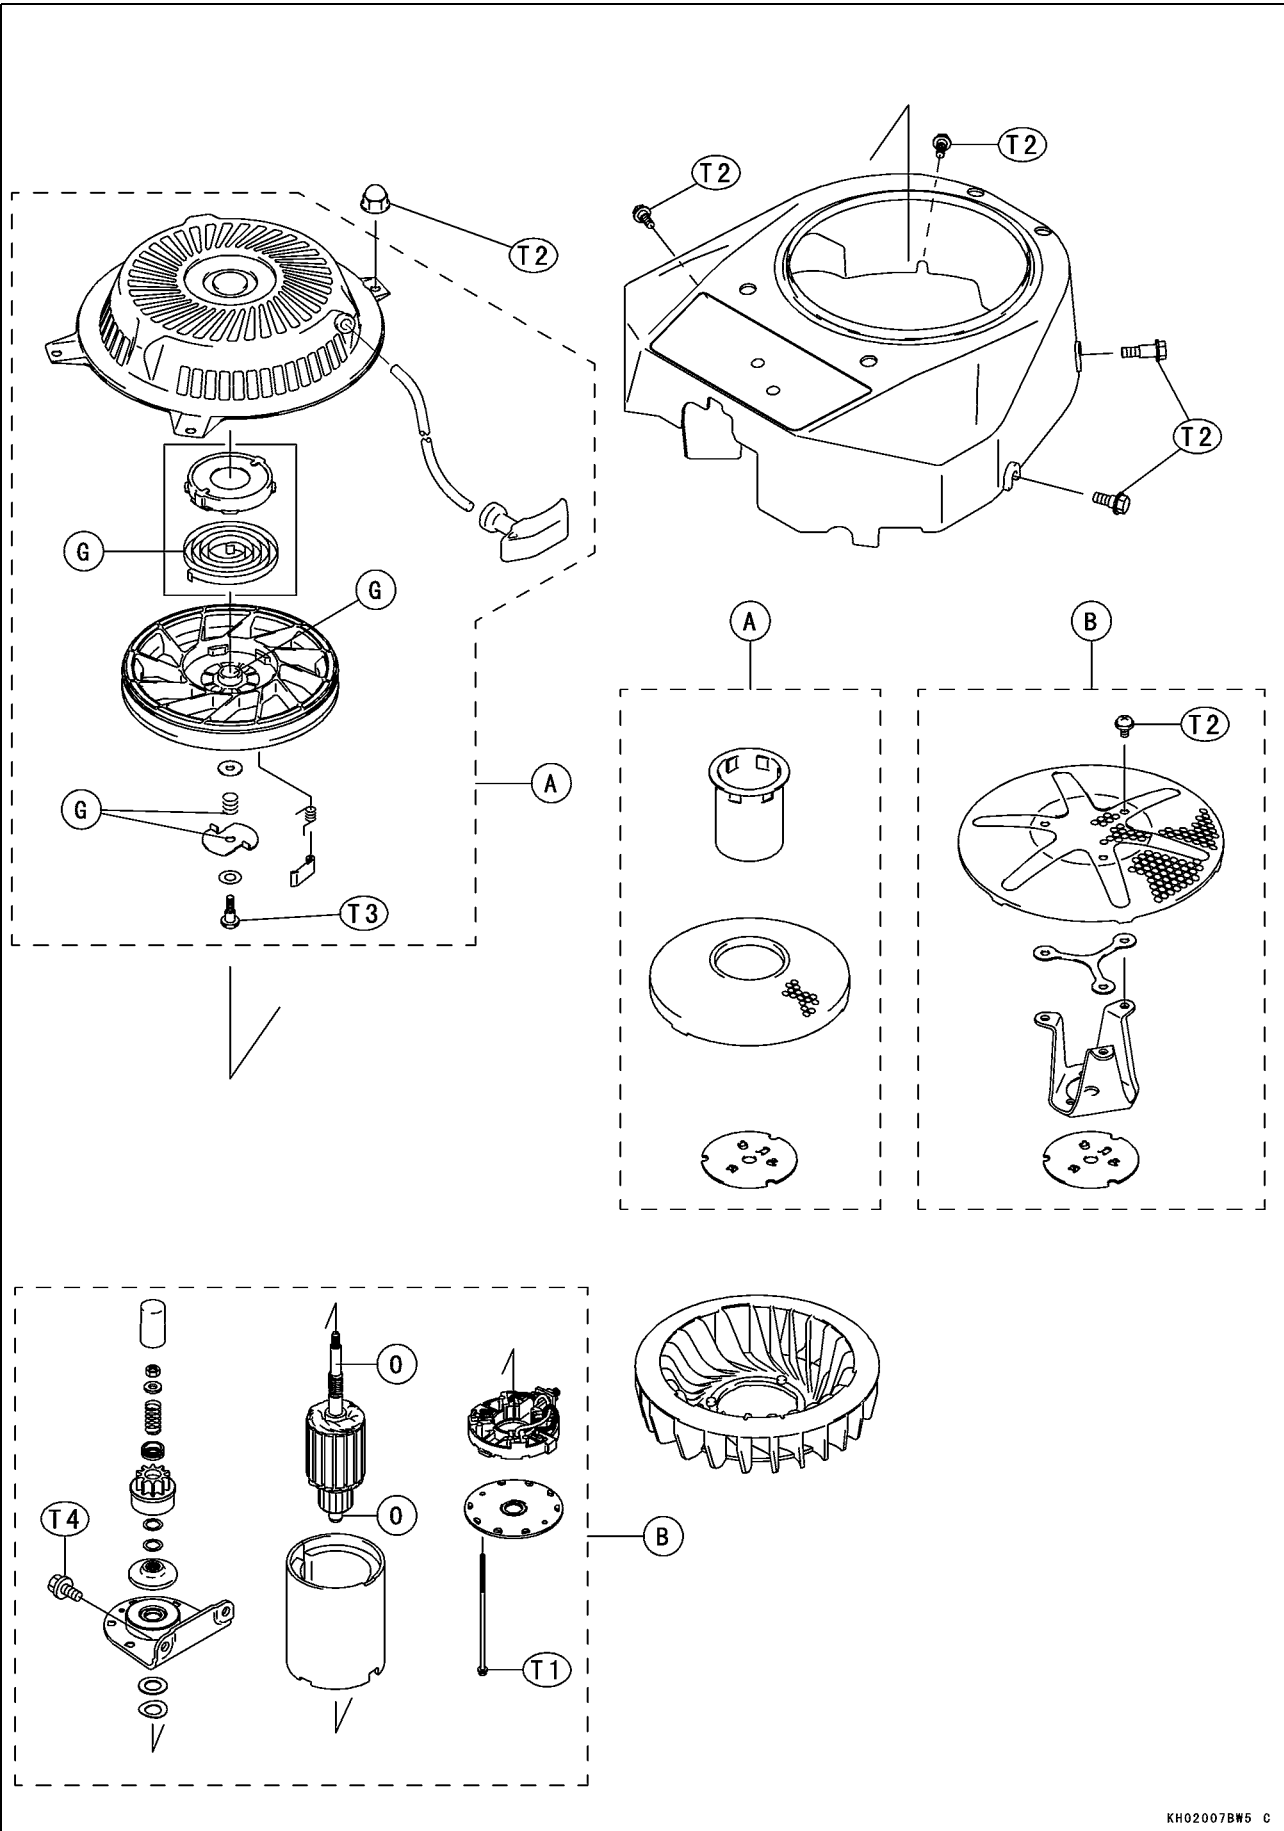

Exploded View

[FH451V, FH500V, FH531V]

T1: 3.9 N·m (0.40 kgf·m, 35 in·lb)

T2: 5.9 N·m (0.60 kgf·m, 52 in·lb)

T3: 7.8 N·m (0.80 kgf·m, 69 in·lb)

T4: 17 N·m (1.7 kgf·m, 12 ft·lb)

[FH541V, FH580V]

T1: 3.9 N·m (0.40 kgf·m, 35 in·lb)

T2: 5.9 N·m (0.60 kgf·m, 52 in·lb)

T3: 7.8 N·m (0.80 kgf·m, 69 in·lb)

T4: 17 N·m (1.7 kgf·m, 12 ft·lb)

[FH601V, FH641V, FH680V, FH721V]

T1: 3.9 N·m (0.40 kgf·m, 35 in·lb)

T2: 5.9 N·m (0.60 kgf·m, 52 in·lb)

T3: 7.8 N·m (0.80 kgf·m, 69 in·lb)

T4: 17 N·m (1.7 kgf·m, 12 ft·lb)

A: Recoil Starter Model

B: Electric Starter Model

G: Apply grease.

O: Apply engine oil.

7-6 ELECTRICAL SYSTEM


Specifications

Item	Standard		Service Limit
	FH451V, 500V, 531V, 541V, 580V	FH601V, 641V, 680V, 721V	
Charging System: Regulated output voltage Alternator stator coil resistance Unregulated stator output Regulator resistance	14.1 V DC in the text 28.4 V AC/3000 rpm in the text		15 V DC — — — 26V AC/3000 rpm
Ignition System: Ignition coil: Primary winding resistance Secondary winding resistance Spark Plug Plug gap	in the text 8 to 11 kΩ CHAMPION RCJ8Y 0.75 mm (0.030 in.)		— — — — — — — — — — — —
	NGK BPR4ES 0.75 mm (0.030 in.)		
Electric starter System: starter motor: Carbon brush length (with spring boss) Commutator groove depth (approx) Commutator diameter Commutator runout	12.7 mm (0.500 in.) 2.0 mm (0.078 in.) 31.7 mm (1.250 in.) — — —		6.4 mm (0.250 in.) 0.9 mm (0.035 in.) 31.1 mm (1.225 in.) 0.4 mm (0.016 in.)

Special Tool - Hand Tester: 57001-1394

Wiring Diagram [FH451V, FH500V, FH531V, FH541V, FH580V]


Electric Starter Model

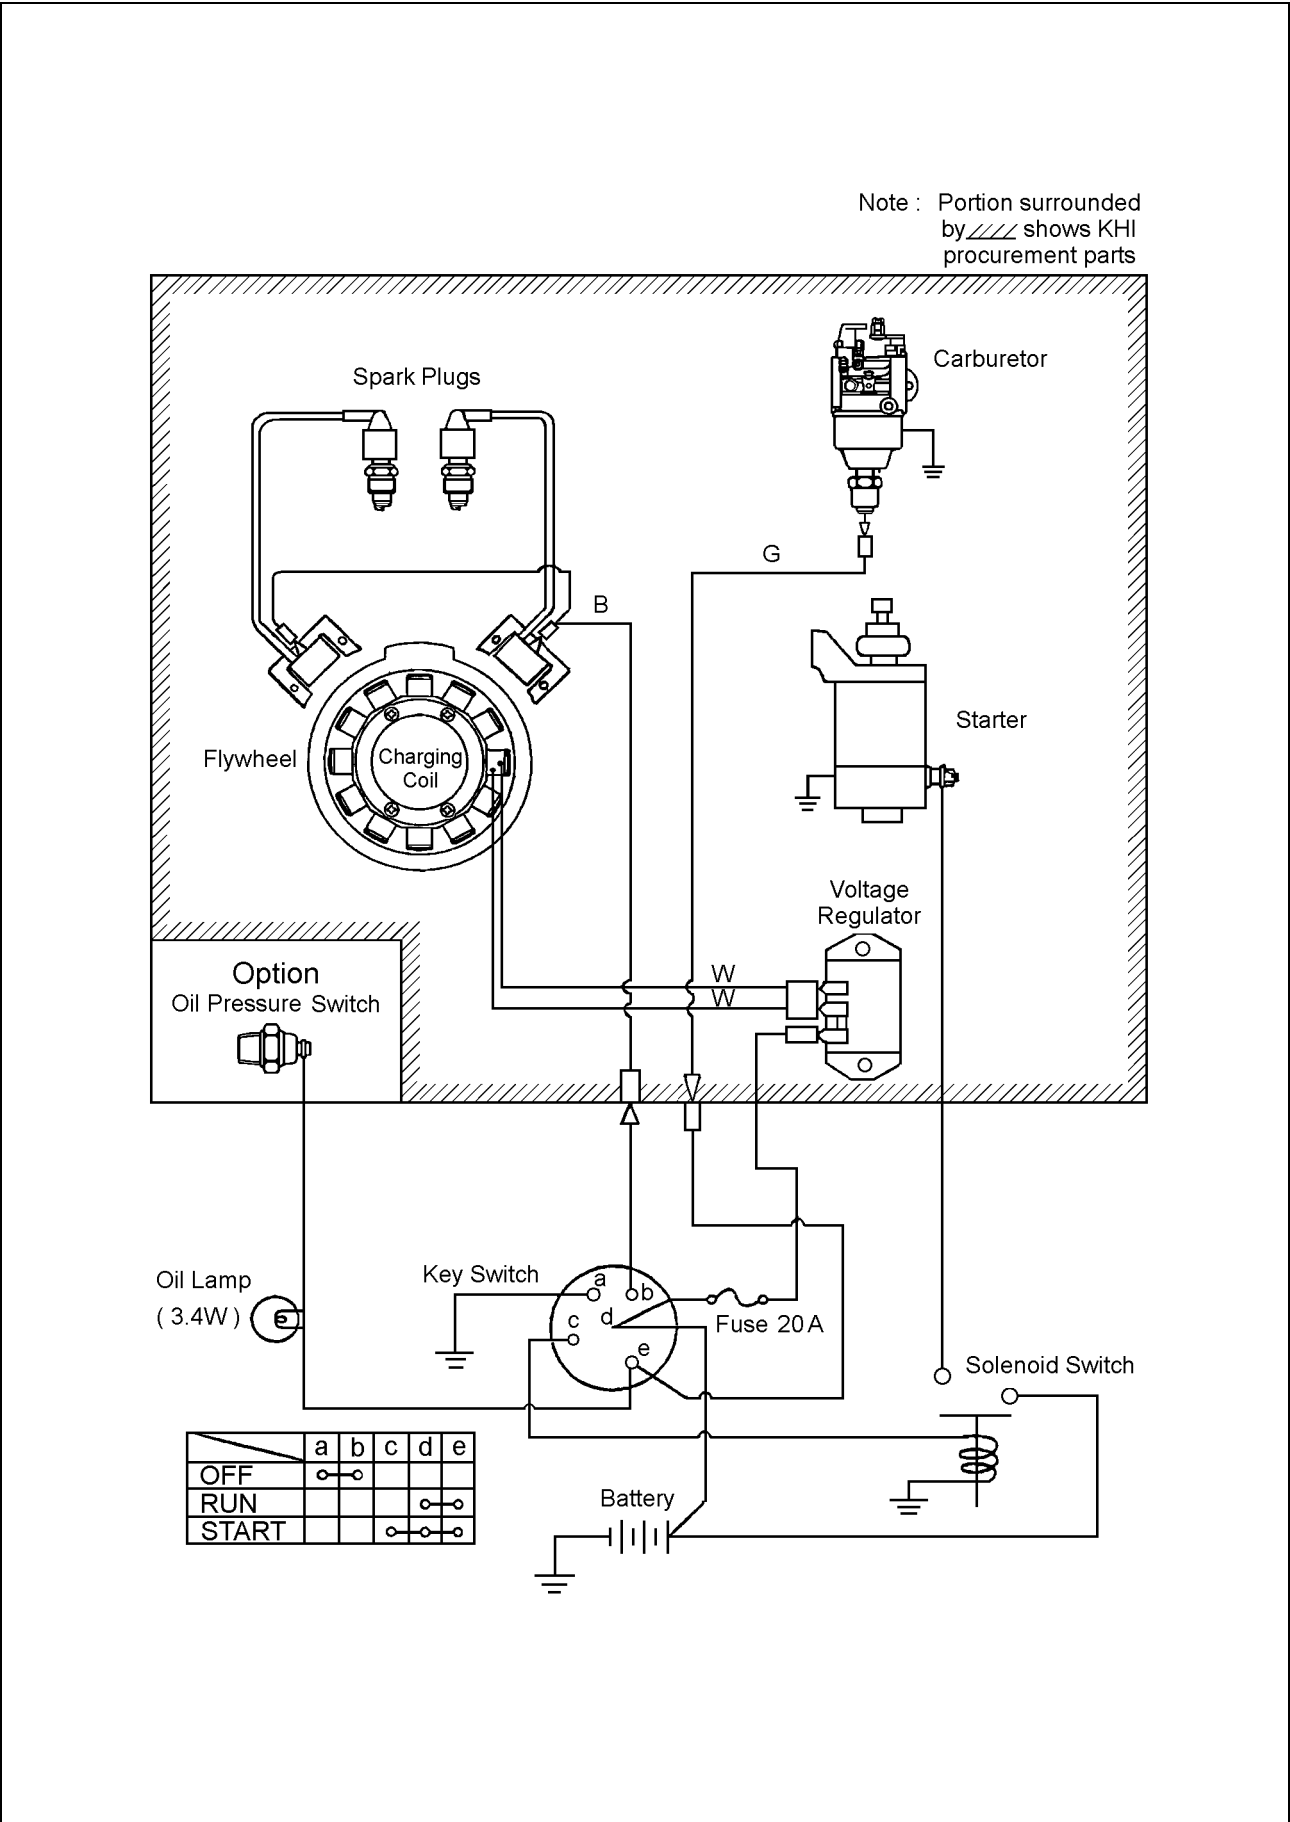

7-8 ELECTRICAL SYSTEM


Wiring Diagram [FH451V, FH500V, FH531V]

Recoil Starter (with Charging Coil) Model

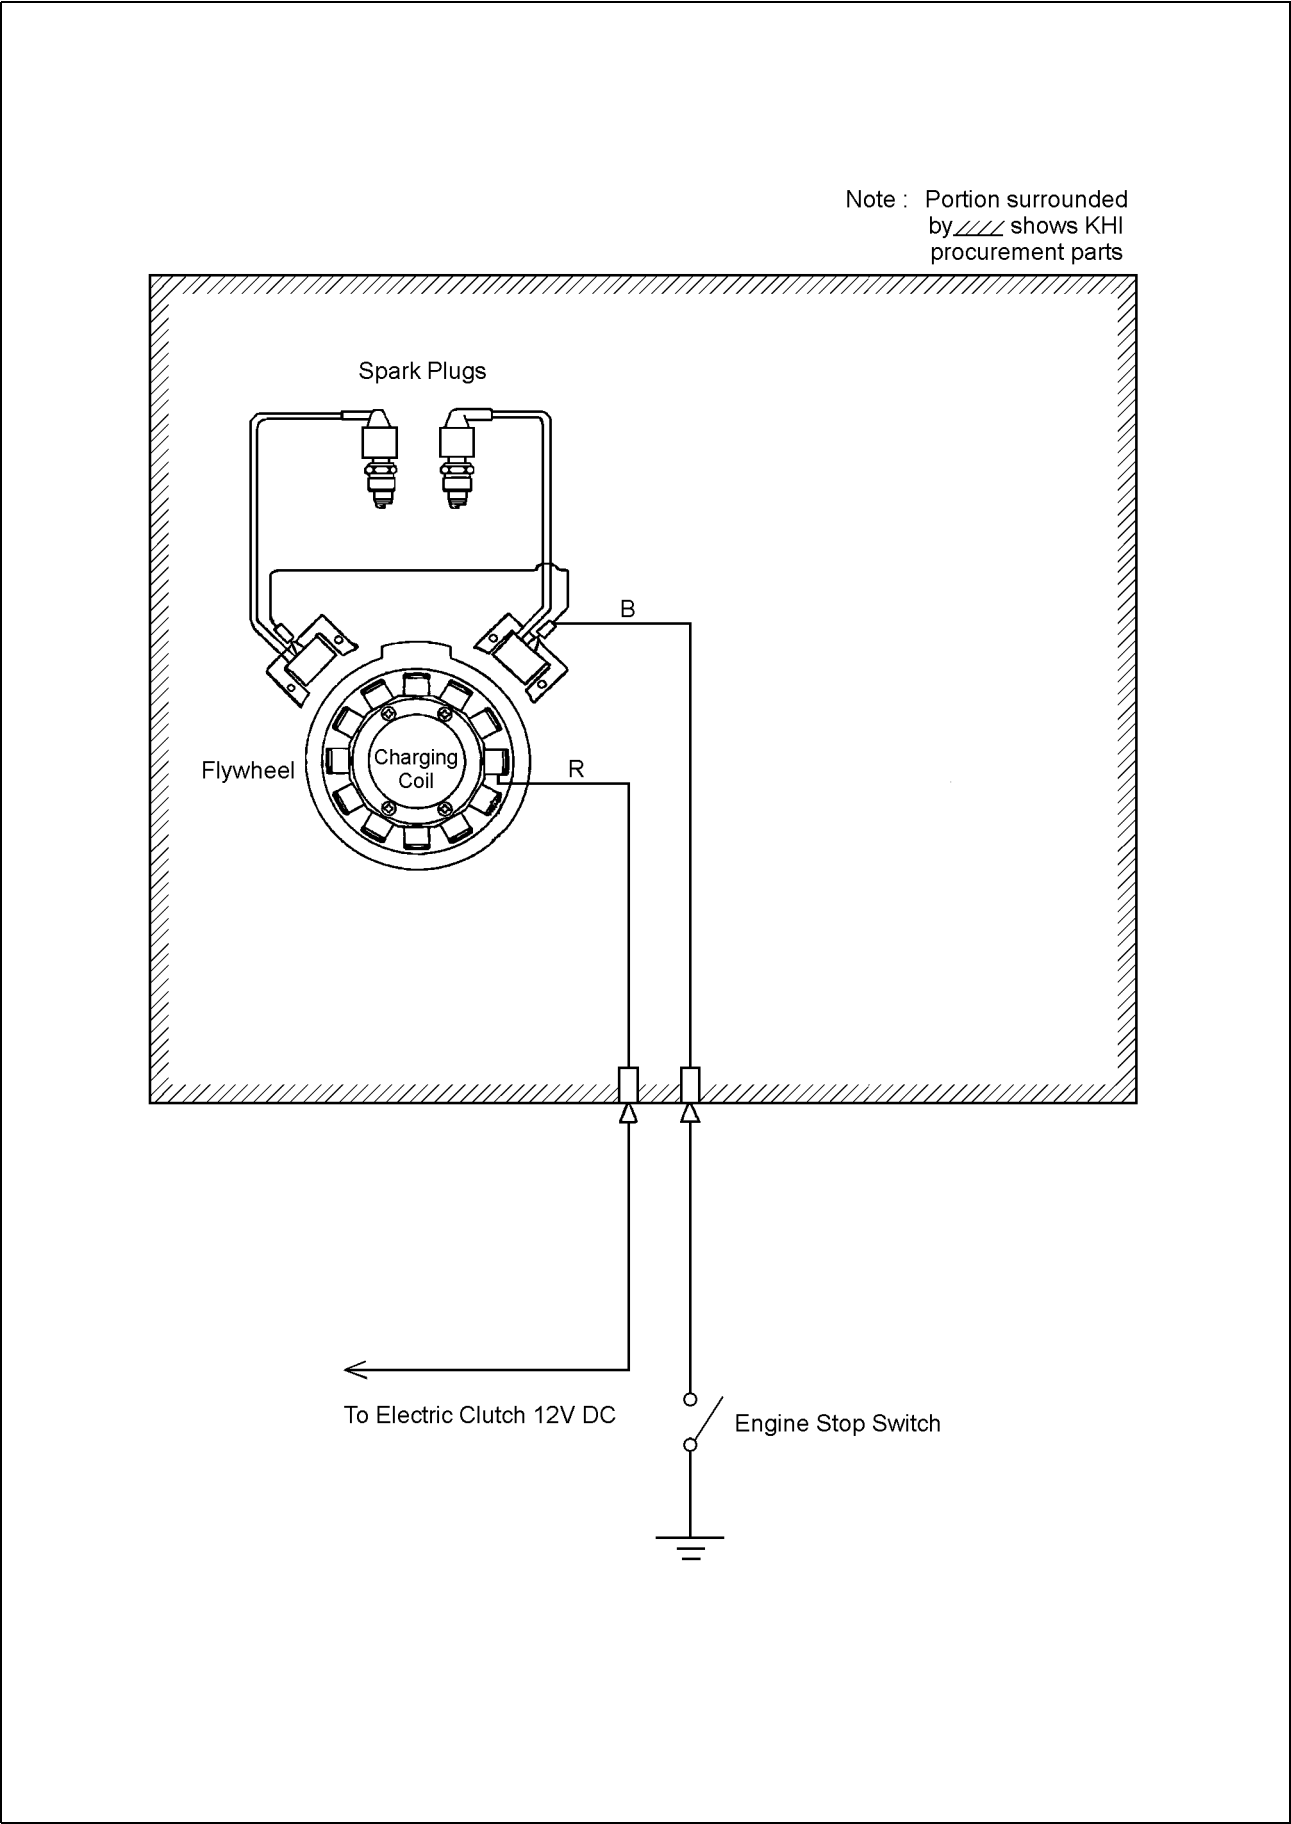

Wiring Diagram [FH451V, FH500V, FH531V]


Recoil Starter Model

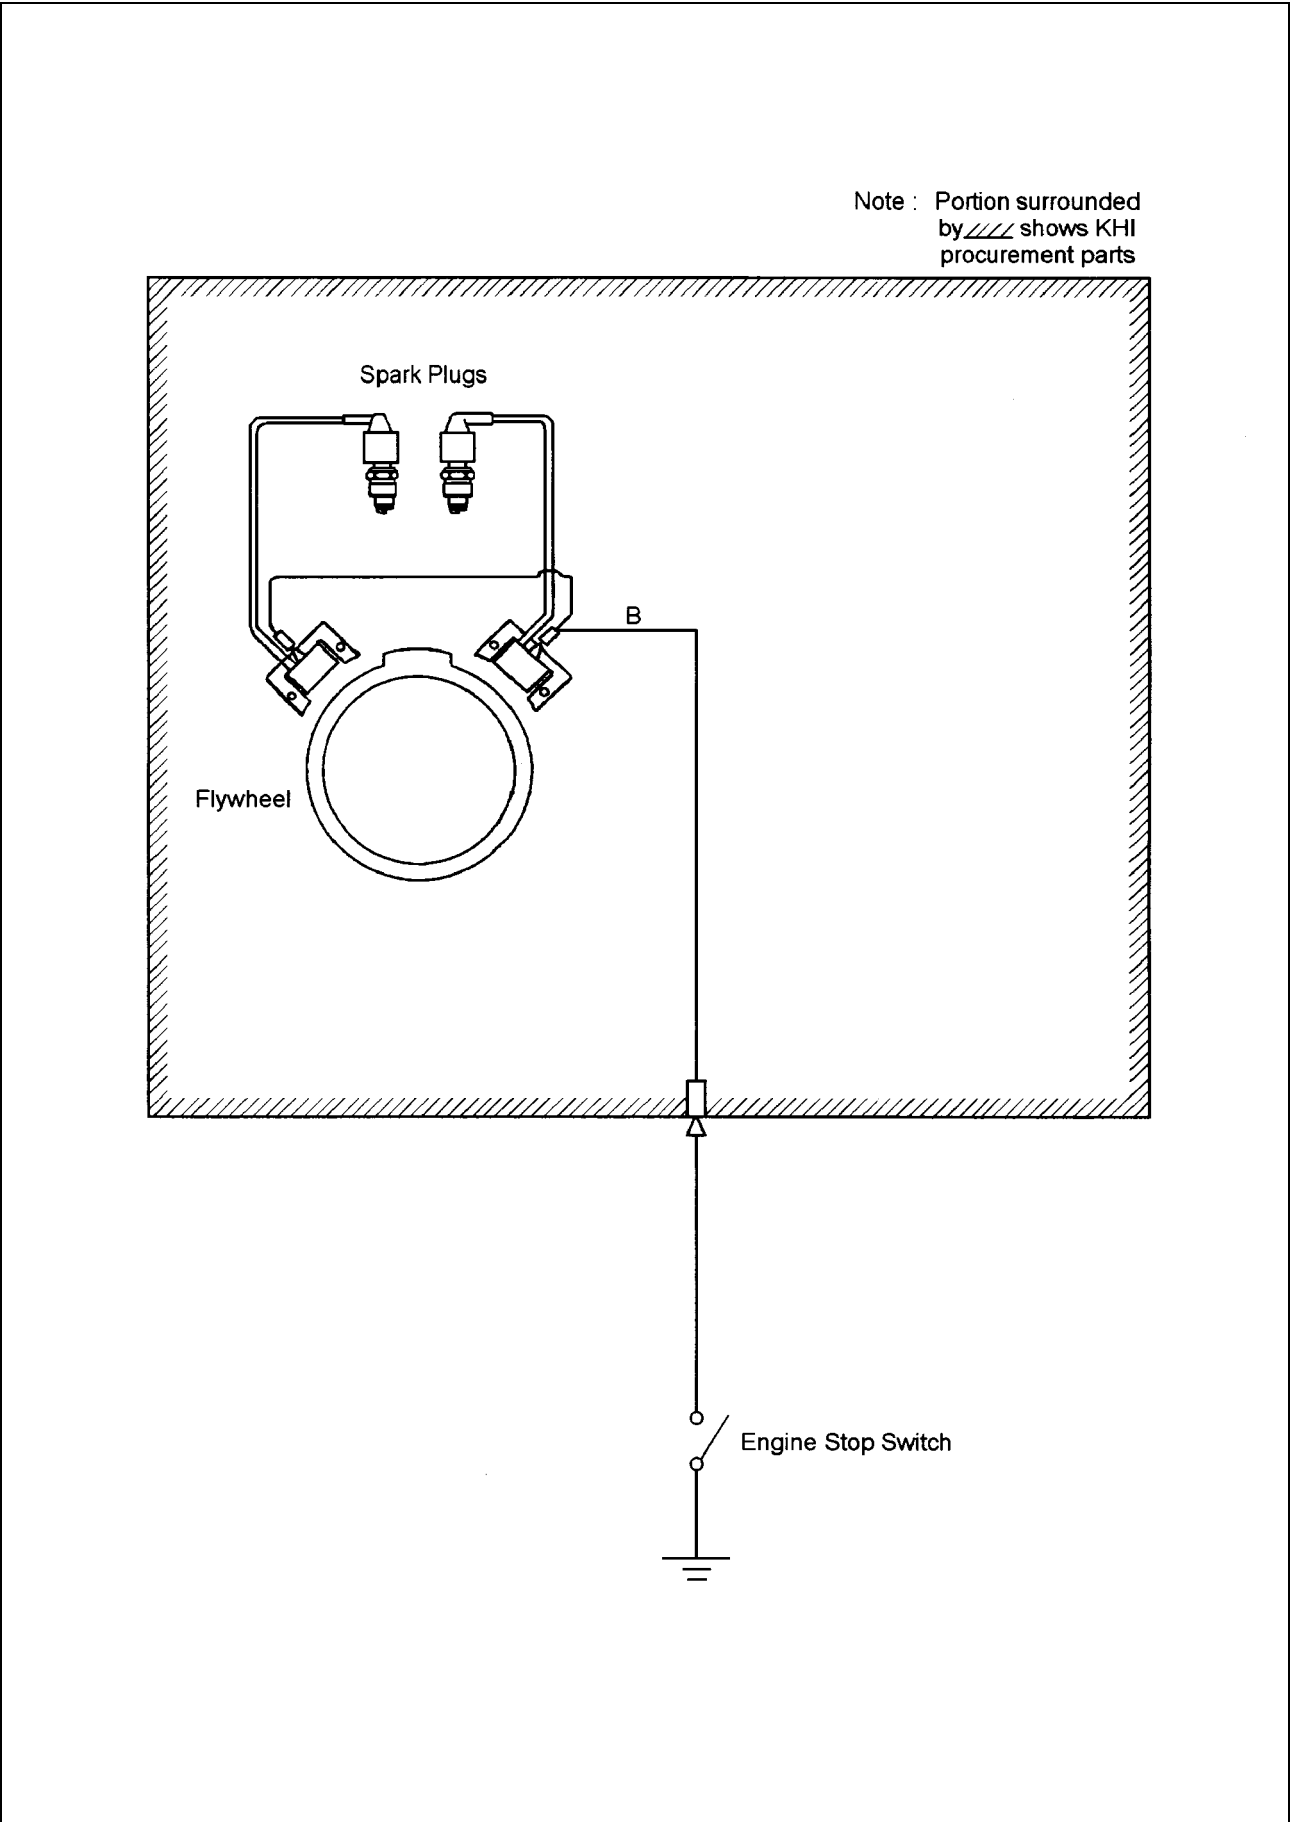

7-10 ELECTRICAL SYSTEM

Wiring Diagram [FH601V, FH641V, FH680V, FH721V]

Electric Starter Model

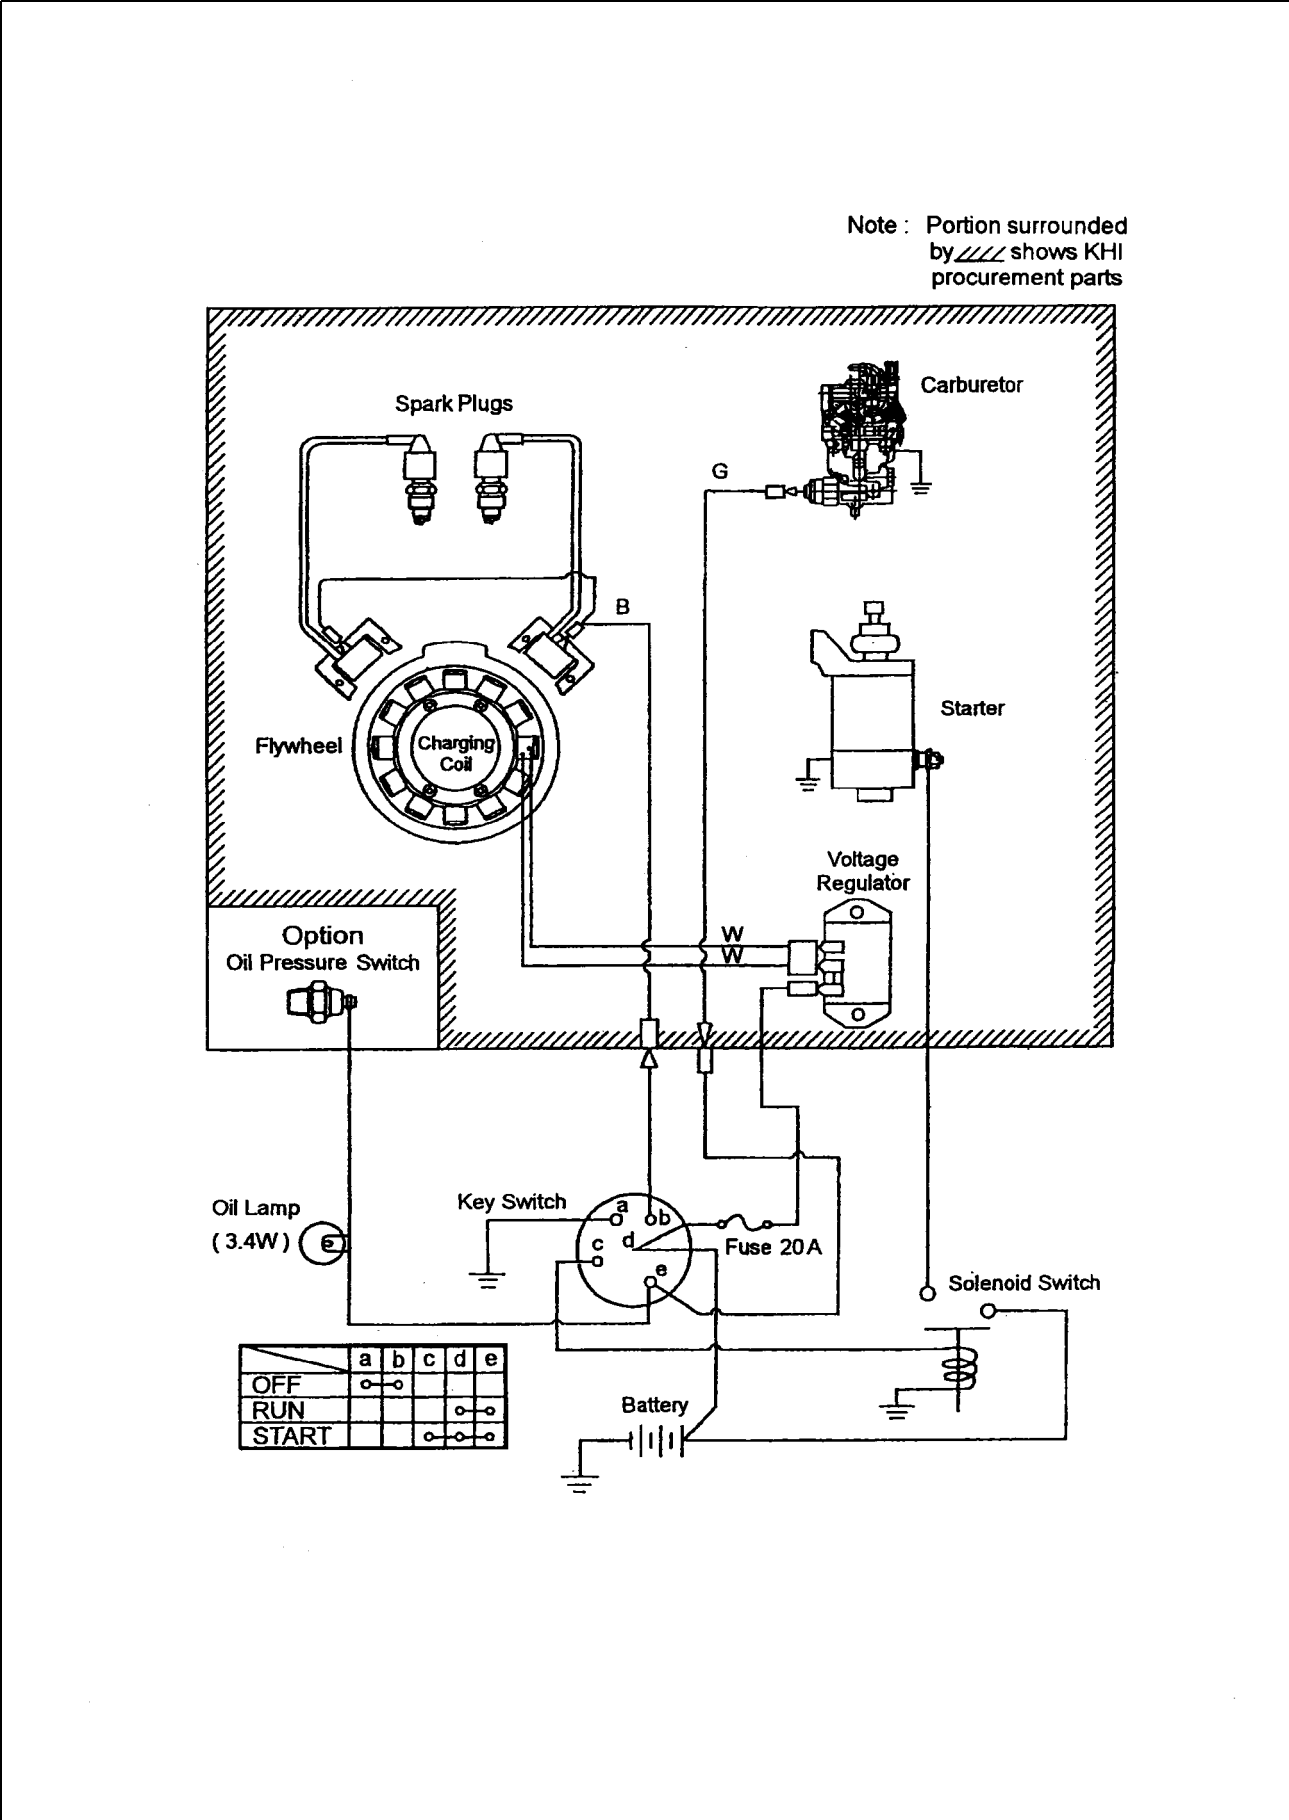


Precautions


There are a number of important precautions that are musts when servicing electrical systems. Learn and observe all the rules below.

- Do not reverse the battery lead connections. This will burn out the diodes in the electrical parts.
- Always check battery condition before condemning other parts of an electrical system. A fully charged battery is a must for conducting accurate electrical system tests.
- The electrical parts should never be struck sharply, as with a hammer, or allowed to fall on a hard surface. Such a shock to the parts can damage them.
- To prevent damage to electrical parts, do not disconnect the battery leads or any other electrical connections when the engine switch is on, or while the engine is running.
- Because of the large amount of current, never keep the engine switch turned to the start position when the starter motor will not turn over, or the current may burn out the starter motor windings.
- Take care not to short the leads that are directly connected to the battery positive (+) terminal to the chassis ground.
- Troubles may involve one or in some cases all items. Never replace a defective part without determining what CAUSED the failure. If the failure was brought on by some other item or items, they too must be repaired or replaced, or the replacement part will soon fail again.
- Make sure all connectors in the circuit are clean and tight, and examine wires for signs of burning, fraying, etc. Poor wires and bad connections will affect electrical system operation.
- Measure coil and winding resistance when the part is cold (at room temperature).
- Electrical Connectors:

Female Connectors [A]

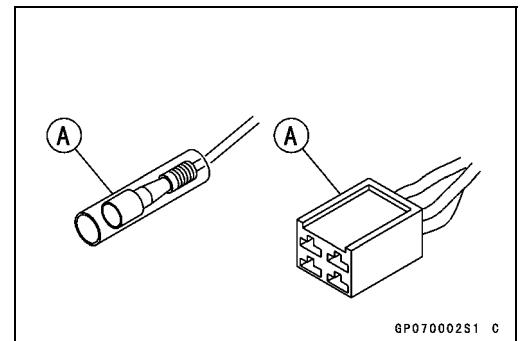

Male Connectors [B]

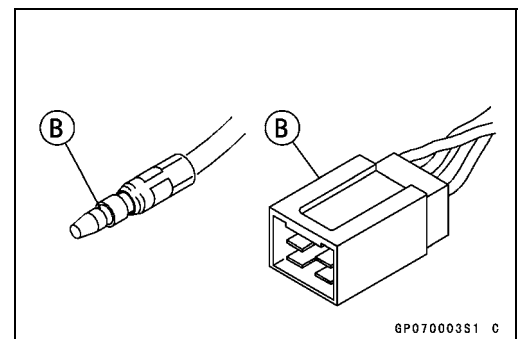


7-12 ELECTRICAL SYSTEM


Charging System

Flywheel, Stator Coil Removal

- Remove:
Recoil Starter (see Recoil Starter Removal)
- Loosen the fan housing bolts [A] and remove the fan housing [B].

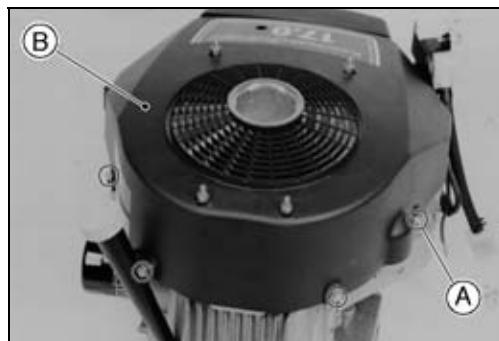

- Remove:
Ignition Coils (see Ignition Coil Removal)
Stud Bolts [A]

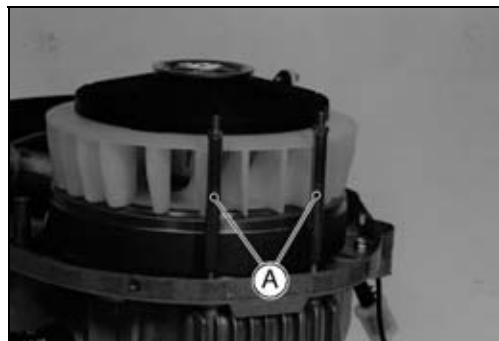


- Hold the flywheel with a suitable tool, remove the flywheel bolt and washer.




- For Electric Starter model, note the following procedure.

- Remove:
Nuts [A] and Guard [B]
Bolt [C] and Screen [D]
Spacer [E]

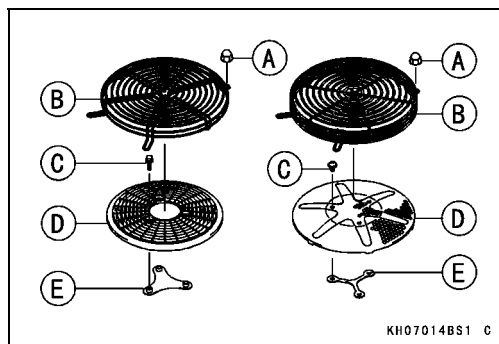


- Loosen the fan housing bolts [A] and remove the fan housing [B].

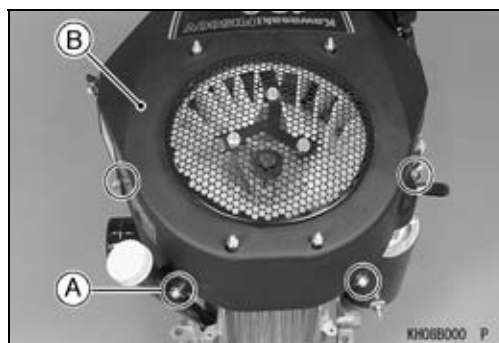


Charging System

○Remove:

- Ignition Coil (see Ignition Coil Removal)
- Stud Bolts [A]

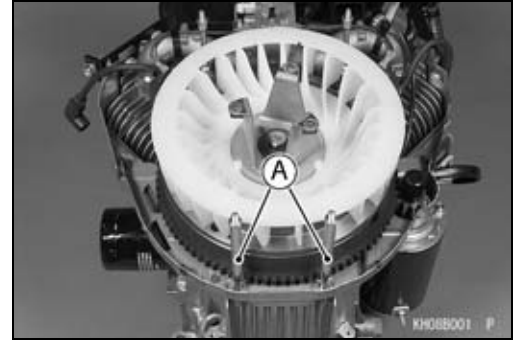


- Hold the flywheel with a suitable tool, remove the flywheel bolt and washer.

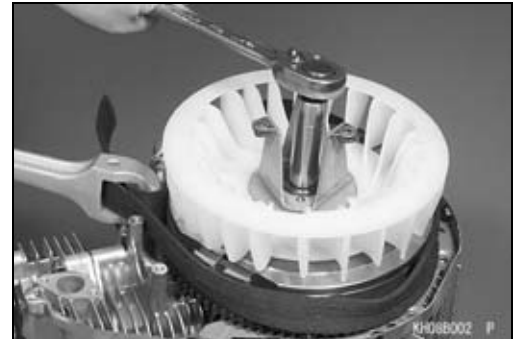


- Using a suitable flywheel puller [A], remove the flywheel [B].

CAUTION
Always use flywheel puller.

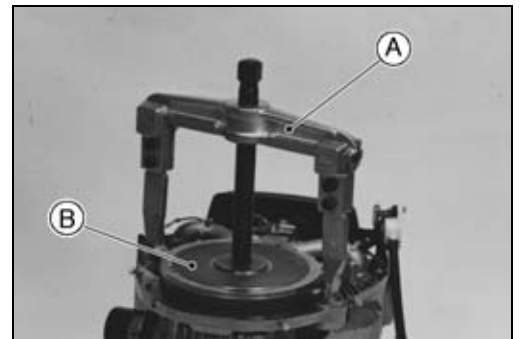


● Remove:

- Woodruff Key [A]
- Stator Coil Lead Connector [B]
- Stator Coil Screw [C]
- Stator Coil [D]

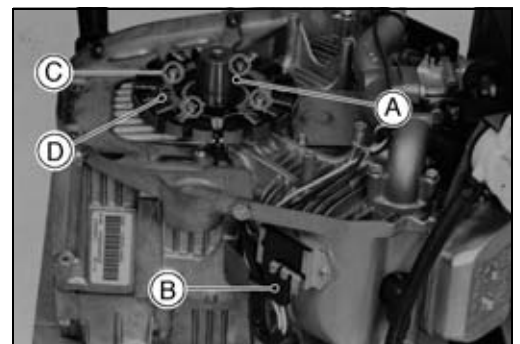

Flywheel, Stator Coil Installation


- Install the stator coil and tighten the screws.
Torque - Stator Coil Screws: 3.4 N·m (0.35 kgf·m, 30 in·lb)
- Using a cleaning fluid, clean off any oil or dirt on the following portions and dry them with a clean cloth.
 - [A] Crankshaft Tapered Portion
 - [B] Flywheel Tapered Portion
- Fit the Woodruff key [C] securely in the slot in the crankshaft before installing the flywheel.

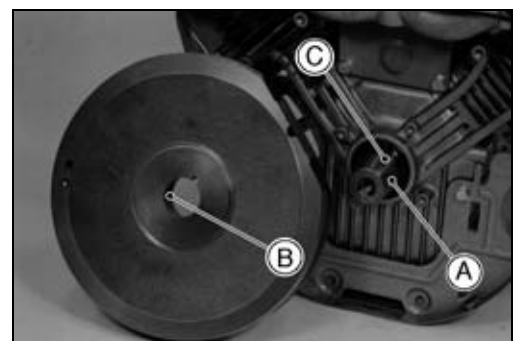


7-14 ELECTRICAL SYSTEM

Charging System

- Install the fan [A] so that two positioning bosses [B] fit around flywheel ignition magnet [C].
- Install the plate [D] so that the notch [E] inserts into the slot in the flywheel.

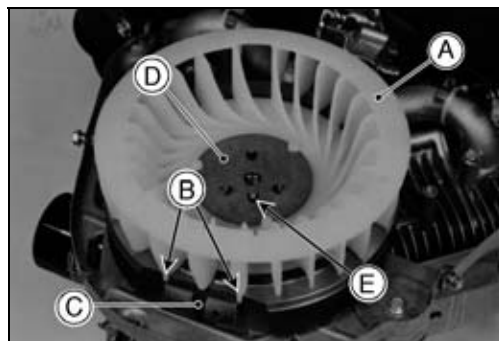

- Install the screen [A] so that the projections [B] fit into the recess [C] of the fan.

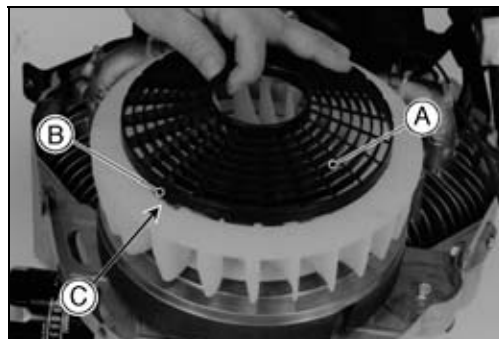

- Install the pulley [A] so that the tabs of the plate fit into holes [B] in the pulley.
- Put the washer [C] as shown.
- Tighten the flywheel bolt [D].


Torque - Flywheel Bolt: 56 N·m (5.7 kgf·m, 41 ft·lb)

- Install the fan housing and tighten the bolts.

Torque - Fan Housing Bolts: 5.9 N·m (0.6 kgf·m, 52 in·lb)

- Install:

Recoil Starter (see Recoil Starter Installation)

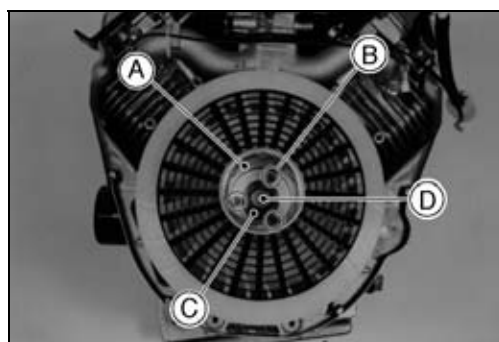


- For Electric Starter model, note the following procedure.
- Install the bracket [A] so that the notch [B] inserts into the slot in the flywheel.
- Put the washer [C].
- Tighten the flywheel bolt [D].

Torque - Flywheel Bolt: 56 N·m (5.7 kgf·m, 41 ft·lb)


- Install the fan housing and tighten the bolts.

Torque - Fan Housing Bolts: 5.9 N·m (0.6 kgf·m, 52 in·lb)

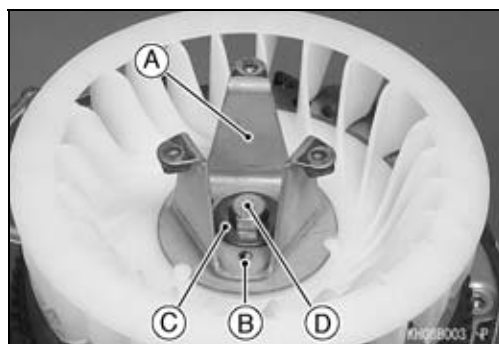

Charging System

- Install:
 - Spacer [A]
 - Screen [B]
 - Position three sets [C] of screen notches around the fan blades.
 - Tighten the screen bolts [D]
- Torque - Screen Bolts: 5.9 N·m (0.6 kgf·m, 52 in·lb)**

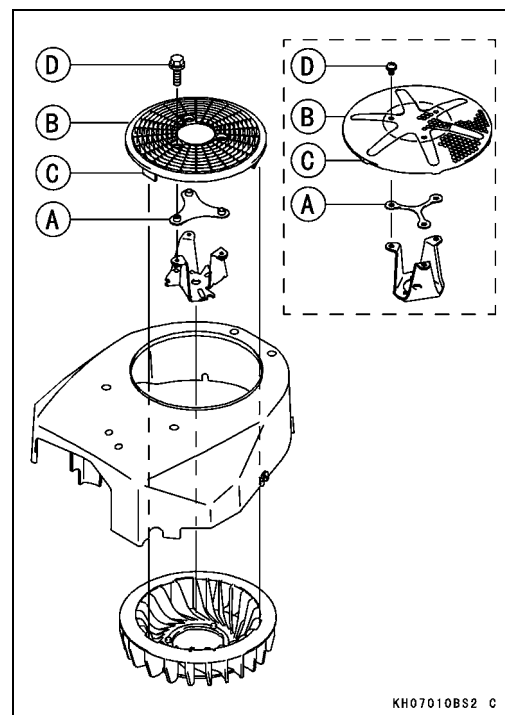

Charging System Operational Inspection

- Check battery condition.

NOTE

- Always check battery condition before condemning other parts of the charging system. The battery must be fully charged in order to conduct accurate charging system tests.
- Warm up the engine to bring the components up to their normal operating temperatures.
- Measure regulated output voltage at various engine speeds.
- Connect a voltmeter across the battery terminals.
- ★ The readings should show nearly battery voltage when the engine speed is low, and as the engine speed rises, the readings should also rise. But they must stay within the specified range.
- ★ If the output voltage is much higher than the specification, the regulator is defective, or the regulator leads are loose or open.
- ★ If the output voltage does not rise as the engine speed increases, the regulator is defective or the alternator output is insufficient for the loads.

Regulated Output Voltage
Battery Voltage to 15 VDC

7-16 ELECTRICAL SYSTEM

Charging System

Stator Coil Resistance

- Disconnect the connector [A].
- Measure the stator coil resistance.

(Electric starter Model)

- Connect an ohmmeter between stator pins [B].

Stator Coil Resistance (Electric starter Model)

0.01 to 0.1 Ω

(Recoil starter Model with Electric Clutch)

- Connect an ohmmeter between stator pin and engine-body.

Stator Coil Resistance (Recoil starter Model with Electric Clutch)

4.4 to 15 Ω

- ★ If the meter does not read as specified, replace the stator coil.
- ★ If the coil has normal resistance, but the voltage inspection showed the alternator to be defective; the flywheel magnets have probably weakened, and the flywheel must be replaced.
- Check for continuity between each stator pin and ground. There should be no continuity (infinite ohm).
- ★ If the stator coil fails any of these tests, replace the coil with a new one.

Unregulated Stator Output

- Disconnect the connector [A].
- Connect AC voltmeter to the stator pins [B].
- Start the engine. Run the engine at the 3 000 rpm speed.
- Voltage reading should be minimum 26 VAC/3 000 rpm.
- ★ If the AC voltage reading is less than the specification, replace the stator.

Unregulated Stator Output (MIN)




26 VAC/3 000 rpm

Regulator Removal

- Remove:
 - Stator Coil Lead Connector [A]
 - Regulator Screws [B]
 - Regulator [C]

Regulator Installation

- Install the regulator and tighten the screws.
Torque - Regulator Screws: 3.4 N·m (0.35 kgf·m, 30 in·lb)

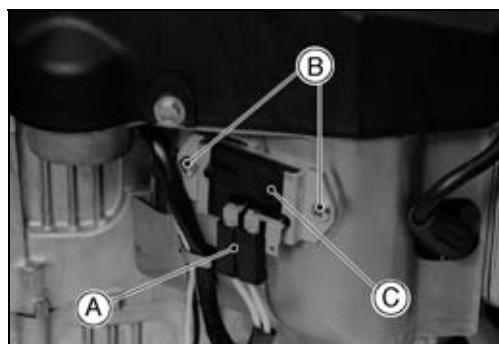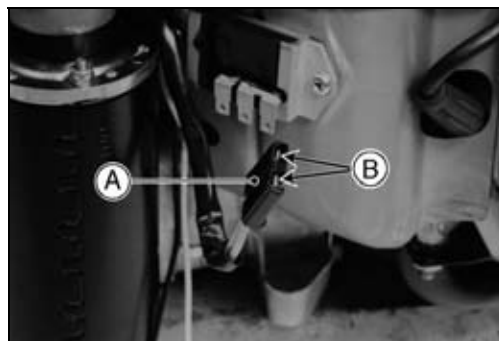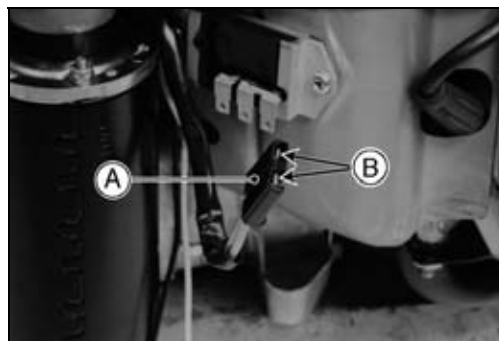


Charging System

Regulator Resistance

- Set the KAWASAKI Hand Tester selector switch to the $R \times 100 \Omega$ position.
 - Connect the test leads to the points shown on the chart and read the resistance.
- There are two(2) types of Regulator on FH engines as follows:

(with out Charging Monitor Type ...3 Blades)

+	A	B	C	D
—	A	B	C	D
A		∞	∞	∞
B	∞		0	$500 \Omega \sim \infty$
C	∞	0		$500 \Omega \sim \infty$
D	$7.8 k \Omega \sim \infty$	$800 \Omega \sim \infty$	$800 \Omega \sim \infty$	

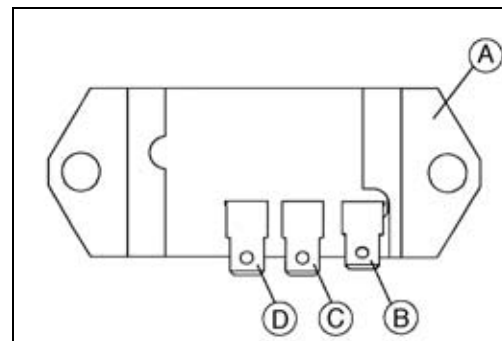


NOTE

○ Resistance value may vary with individual meters.

(With Charging Monitor type ... 5 Blades)

+	A	B	C	D	E	F
—	A	B	C	D	E	F
A		∞	∞	∞	$19 \Omega \sim 3 K \Omega$	$3 K \Omega \sim \infty$
B	∞		0	$500 \Omega \sim \infty$	∞	∞
C	∞	0		$500 \Omega \sim \infty$	∞	∞
D	$7.5 K \Omega \sim \infty$	$925 \Omega \sim \infty$	$925 \Omega \sim \infty$		$10 K \Omega \sim \infty$	$10 K \Omega \sim \infty$
E	$330 \Omega \sim 14 K \Omega$	∞	∞	∞		$1.2 K \Omega \sim \infty$
F	$14 k \Omega \sim \infty$	∞	∞	∞	$110 \Omega \sim \infty$	

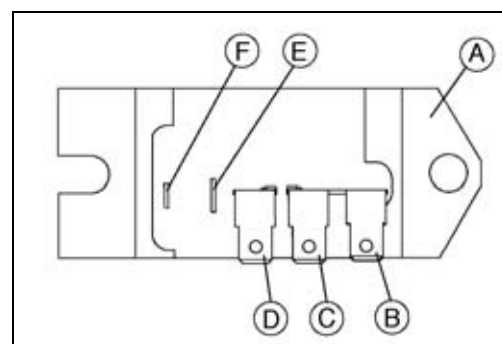

★ If the resistance is not as specified replace the regulator.

7-18 ELECTRICAL SYSTEM

Ignition System

This engine ignition is controlled by a solid state ignition assembly and requires no periodic maintenance except for the spark plugs.


The system consists of the following:

Inductive Ignition Assemblies

Permanent Magnet Flywheel

Spark Plugs

Stop Switch

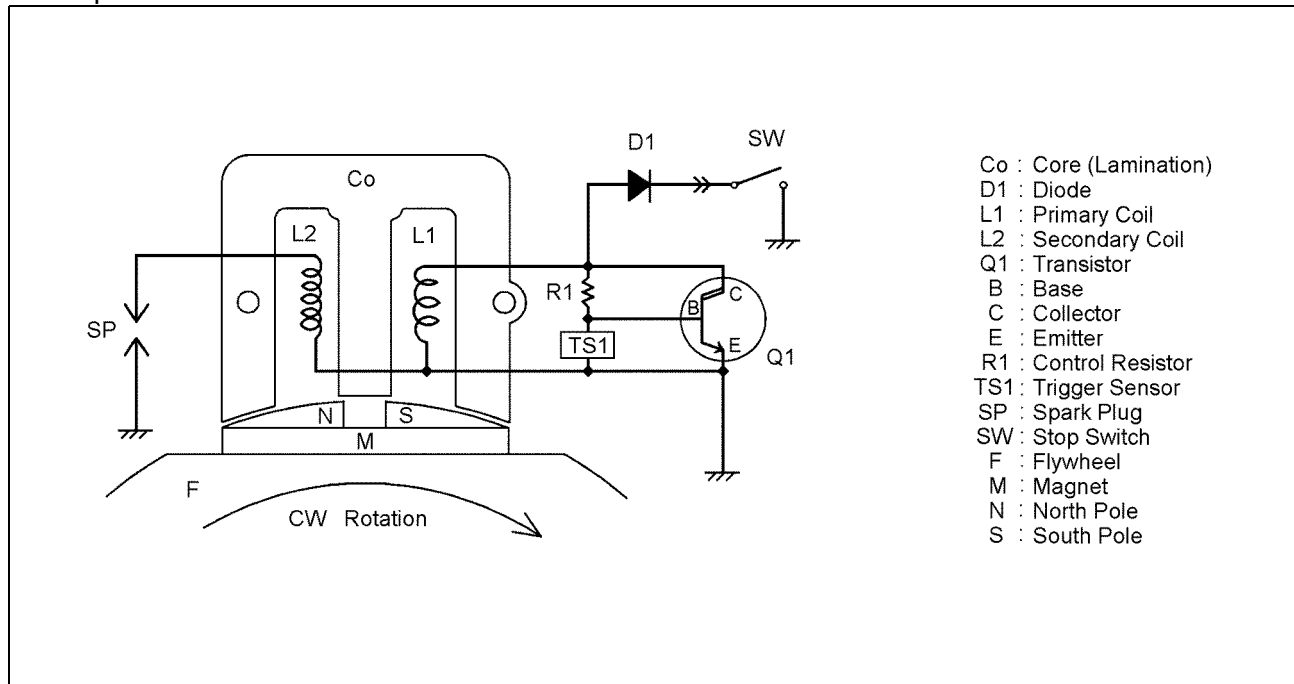

Ignition Theory of Operation

Mounted to the periphery of a flywheel are a pair of magnetic poles (south leading in clockwise rotation), generated by a permanent magnet.

By rotating the flywheel (magnetic poles) clockwise past the ignition module on a laminated core group, a voltage is generated in the primary winding (L1).

This generates a small bias current to flow through the control resistor (R1) to the base of (Q1). This base drive causes the transistor to conduct (turns on) completing the primary circuit. Current flows from the high side of the primary winding through the transistor (collector to emitter) to ground.


The trigger sensor (TS1) senses the optimum time (peak current) to remove the base drive from the transistor (Q1). This abrupt "turning off" of the transistor causes an interruption in current flow which allows its associated flux collapse, and several hundred volts is induced through the primary winding (L1) inducing a very large voltage in the secondary winding (L2). When the secondary voltage reaches several thousand volts the spark plug (SP) gap is ionized and ignition occurs. The placement of the trigger sensor internal to the ignition insures constant timing over speed and temperature and prevents counterclockwise operation.

The diode (D1) in the ignition shut off circuit blocks inadvertent application of battery voltage, protecting the internal components of the ignition. With the stop switch (SW) in the closed position primary voltage is routed to ground, preventing ignition operation.

Ignition System

Ignition Coil Removal

- Remove:
 - Fan Housing (see Flywheel, Stator Coil Removal)
 - Spark Plug Cap [A]
 - Stop Switch Lead Connector [B]
 - Bolts [C]
 - Ignition Coil [D]

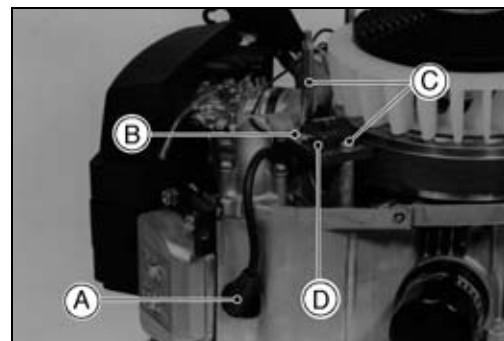

Ignition Coil Installation

- Install ignition coil on crankcase so that the stop switch lead connector [B] face the screen, and tighten bolt (1) first, then tighten bolt (2). While tightening bolts, adjust the air gap [A] between the three legs of ignition coil and the two pole-plates of magnet to the specified gap value as shown.

Ignition Coil Air Gap

Standard: 0.2 ~ 0.4 mm (0.008 ~ 0.016 in.)

Torque - Ignition Coil Bolts (Stud Bolt)



7.8 N·m (0.80 kgf·m, 69 in·lb)

Ignition Coil Bolts (Flanged Bolt)

5.9 N·m (0.6 kgf·m, 52 in·lb)

NOTE

- Above procedure must be used to insure proper coil air gap is not too large.

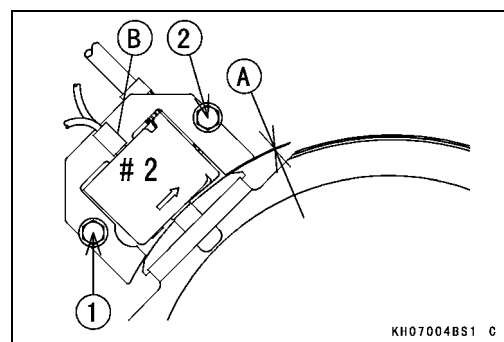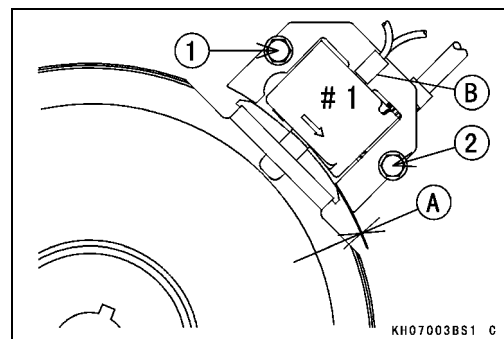

7-20 ELECTRICAL SYSTEM

Ignition System

Ignition Coil Inspection

- Remove the ignition coils (see Ignition Coil Removal).
- Measure the winding resistance as follows:
 - Set the hand tester to the $R \times 1 \text{ k}\Omega$ range.

Special Tool - Hand Tester: 57001-1394

- Make the measurements shown in the table.

Ignition Coil Winding Resistance

	+	A	B	C
-				
A			2 ~ 18 k Ω	2 ~ 18 k Ω
B		∞		∞
C		2 ~ 18 k Ω	10 ~ 30 k Ω	

CAUTION

Use only Tester 57001-1394 with new battery at room temperature for this test. A tester other than the Kawasaki Hand Tester should show different readings.

If a megger or a meter with a large-capacity battery is used, the ignition coil will be damaged.

- ★ If the tester does not read as specified, replace the coil.

Spark Plug Cleaning and Inspection

- Carefully pull the plug cap from the spark plug, and remove the spark plug.
- ★ If the plug is oily or has carbon built up on it, clean the plug using a high flash-point solvent and a wire brush or other suitable tool.
- ★ If the spark plug electrodes are corroded or damaged, or if the insulator is cracked replace the plug. Use the standard spark plug or its equivalent.




- [A] Insulator
- [B] Center Electrode
- [C] Plug Gap
- [D] Side Electrode

Spark Plug Gap Inspection

- Measure the gap with a wire-type thickness gauge.
- ★ If the gap is incorrect, carefully bend the side electrode with a suitable tool to obtain the correct gap.

Spark Plug Gap


Model	Plug Gap (Standard)
FH451V, 500V, 531V, 541V, 580V	0.75 mm (0.030 in.)
FH601V, 641V, 680V, 721V	0.75 mm (0.030 in.)

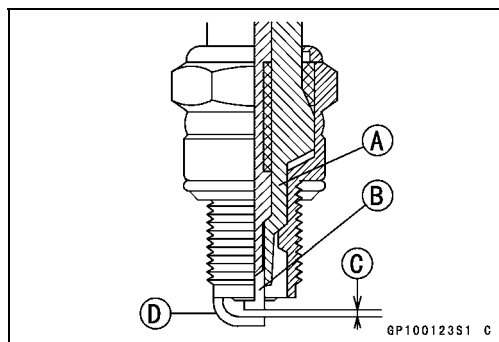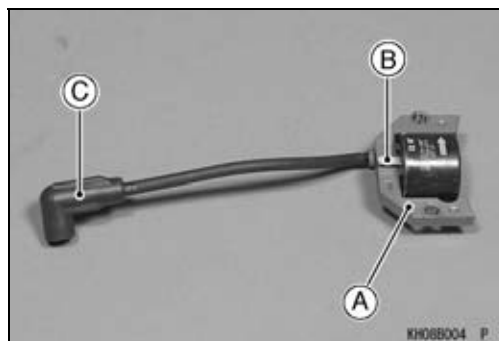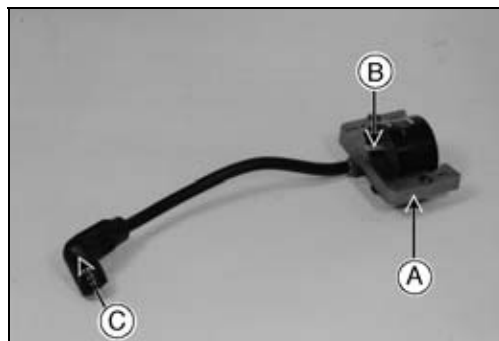

Starter System

Starter Motor Removal

- Remove the mounting bolts [A] and pull the starter motor [B] from the engine.

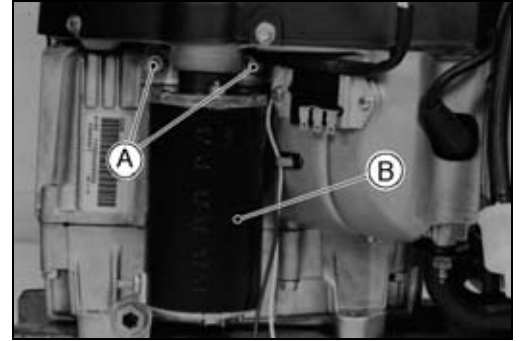


Starter Motor Installation

- Clean the starter motor and engine mounting flanges to ensure good electrical contact and tighten the mounting bolts.


Torque - starter Motor Mounting Bolts: 15 N·m (1.5 kgf·m, 11.0 ft·lb)

Starter Motor Disassembly


- Remove:
Through Bolts and Nuts [A]
Brush Plate [B]
York [C]
Cap [D]

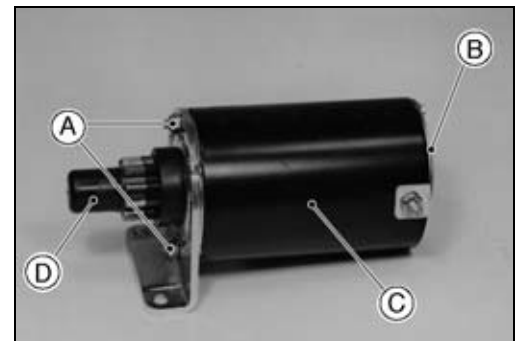

- While the collar [A] is pushing, remove the snap ring [B].

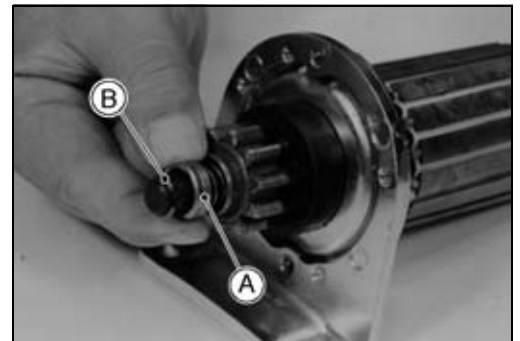

- Remove:
Spring [A]
Pinion Assembly [B]
Washer [C]
Bracket [D]
Armature [E]

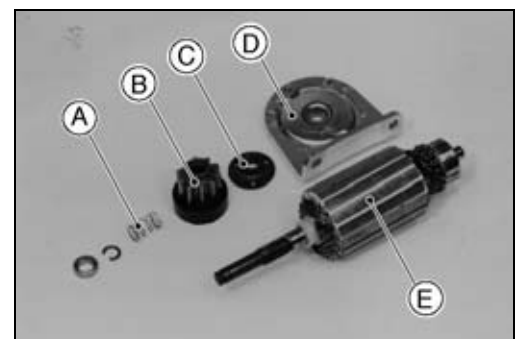


7-22 ELECTRICAL SYSTEM


Starter System

Starter Motor Assembly

- Assembly is the reverse of disassembly.
- Apply a small amount of grease [A] to the armature shaft.
- Do not reuse the snap ring [B]. Replace it with a new one.
- Check the cap and replace it with a new one if damaged.

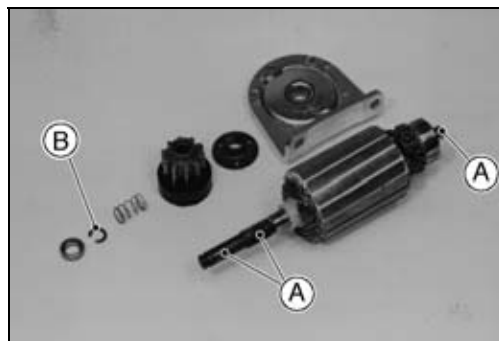


- Fit the projection [A] on the bracket into the notch [B] in the yoke.
- Press the springs and holding the brush leads with suitable clips.
- Put the washer [C] among the brushes.
- Fit the projection [D] on the brush plate into the notch [E] in the yoke.

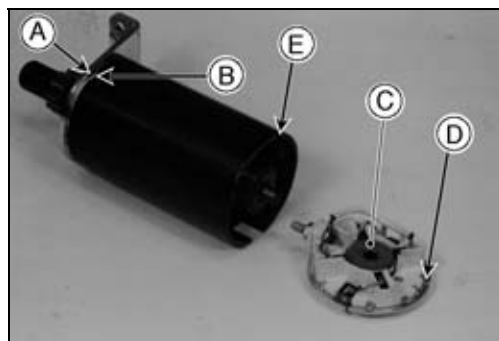

Starter Motor Brush Inspection

- Measure the overall length of each brush [A].
- ★ If the brushes are shorter than the service limit, replace them.

Brush Length	
Service Limit	6.4 mm (0.25 in.)

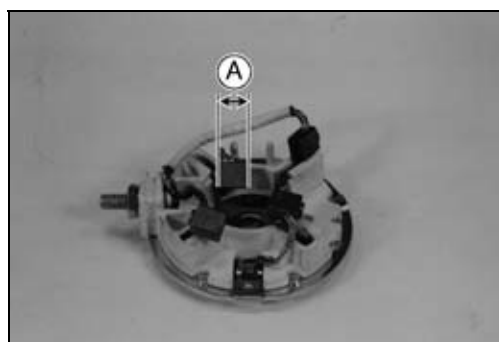


Brush Spring Inspection

- Inspect the brush springs for pitting, cracks, rusting and burrs.
- ★ Replace the spring if necessary.
- Inspect the springs for weakened conditions and distortion.
- ★ Replace the springs if necessary.
- ★ If the brush springs are able to press the brushes firmly into place, they may be considered serviceable. If they cannot, replace them.

Armature Inspection

- Inspect the surface of the commutator [A].
- ★ If it is scratched or dirty, polish it with a piece of very fine emery cloth [B], and clean out the grooves.

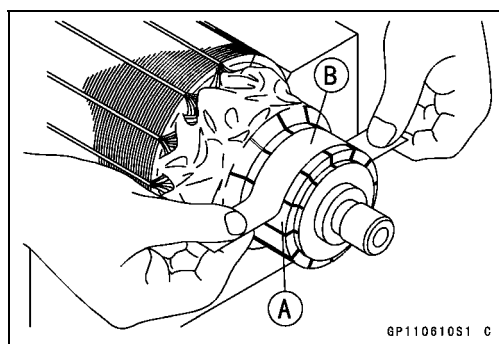


Starter System

- Measure the depth of the grooves between the commutator segments.
- ★ If the grooves are shallower than the specified limit, replace the armature with a new one.
- ★ If the grooves are only dirty, clean them carefully.


Commutator Groove Depth Limit Less than 0.9 mm (0.035 in.)

- [A] Bad
- [B] Segment
- [C] Good
- [D] 0.9 mm (0.035 in.) limit
- [E] Mica

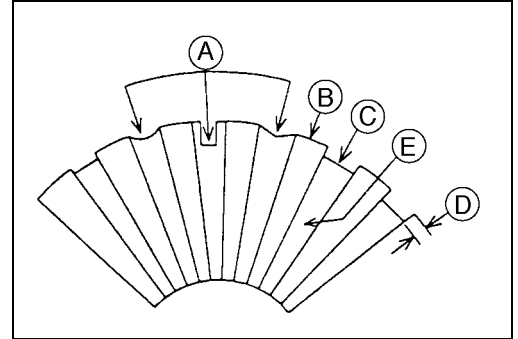


- Measure the diameter [A] of the commutator [B] at several points.
- ★ If the diameter is less than the service limit, replace the armature with a new one.

Commutator Outside Diameter Service Limit: 31.1 mm (1.225 in.)

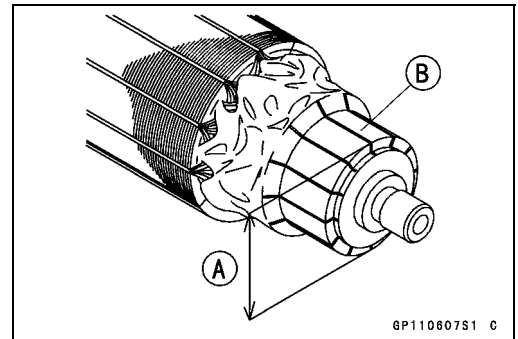

- Support the armature in an alignment jig at each end of the shaft as shown. Position a dial indicator perpendicular to the commutator.
- Rotate the armature slowly and read the commutator runout.
- ★ If runout is more than the service limit, turn down the commutator or replace the armature with a new one.

Commutator Runout Service Limit: 0.4 mm (0.016 in.)

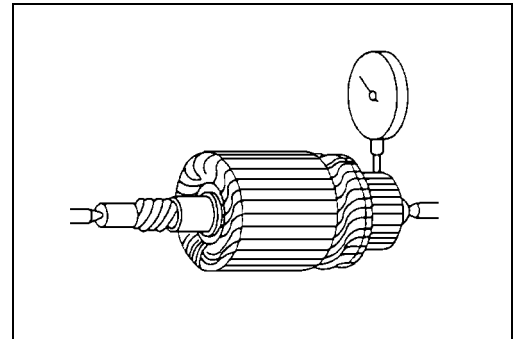


- Measure the armature winding resistance.
- Set the hand tester to the $R \times 1 \Omega$ range and measure the resistance between each segment [A] and all the others.
- ★ If the resistance is too high or even infinite, the armature winding has an open circuit. Replace the starter motor.

Armature Winding Resistance Close to 0 Ω

- Set the hand tester to the $R \times 1 \text{ k}\Omega$ range and measure the resistance between the commutator and the armature shaft [B].
- ★ If the resistance is less than infinite, the armature is shorted. Replace the starter motor.


Commutator to Shaft Resistance (∞)

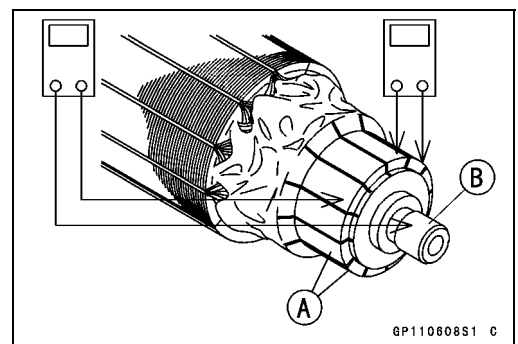

7-24 ELECTRICAL SYSTEM

Starter System


- Test the armature winding for shorts.
- Place the armature on a growler [A].
- Hold a thin metal strip (e.g., hack saw blade) on top of the armature.
- Turn on the growler and rotate the armature one complete turn.
- ★ If the metal strip vibrates, the windings are internally shorted to each other and the starter motor must be replaced.

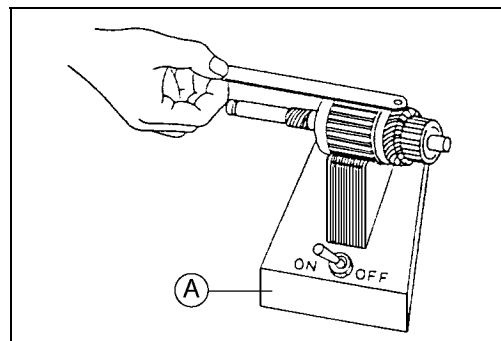

Yoke Assembly Inspection


- Set the hand tester to the $R \times 1 \text{ k}\Omega$ range and measure the resistance between the positive brush (es) [A] and brush plate [B].
- ★ If the resistance is less than infinite, the positive brush is shorted to ground. Replace the brush plate assembly.

Positive Brush to Ground Resistance
(∞)

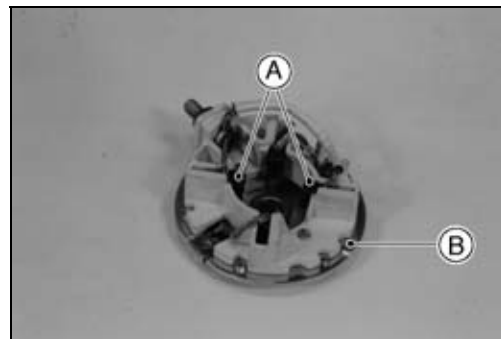

- Set the hand tester to the $R \times 1 \Omega$ range and measure the resistance between the negative brush (es) [A] and brush plate [B].
- ★ If the meter does not read close to 0Ω , the brush plate is faulty. Replace the brush plate assembly.

Negative Brush to Ground Resistance
Close to 0Ω

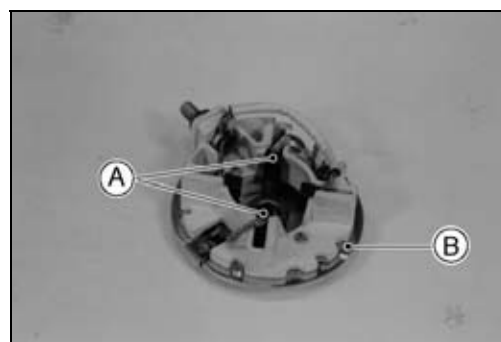


Pinion Clutch Inspection

- Turn the pinion gear by hand. The pinion gear should turn clockwise freely.
- ★ If the pinion clutch does not operate as it should, or if it makes noise, replace the pinion clutch.



Recoil Starter Removal

- Remove:
 - Recoil Starter Mounting Nuts [A]
 - Recoil Starter [B]

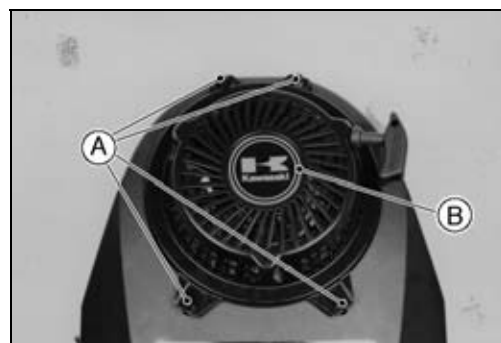

Recoil Starter Installation

- Install the recoil starter and tighten the mounting nuts.
Torque - Recoil Starter Mounting Nuts: 5.9 N·m (0.6 kgf·m, 52 in·lb)

Starter System

Recoil Starter Disassembly

- Remove the recoil starter (see Recoil Starter Removal).
- Pull the handle [A] out 30 cm (1 ft), and clamp the rope [B] with the clip [C] so it can not wind back onto the reel [D].
- Pry the knot [E] out of the handle and untie it.
- Remove the handle from the rope.

⚠ WARNING



Wear gloves to avoid injury for the remaining steps.

- While carefully holding the reel [A] and case [B], remove the clip.
- Unwind the spring tension slowly.

NOTE

○Do not wedge the rope between the reel and case.

- Remove:
 - Screw [A]
 - Washer [B]
 - Retainer [C]
 - Center Spring [D]
 - Washer [E]
 - Pawls [F]
 - Return Springs [G]

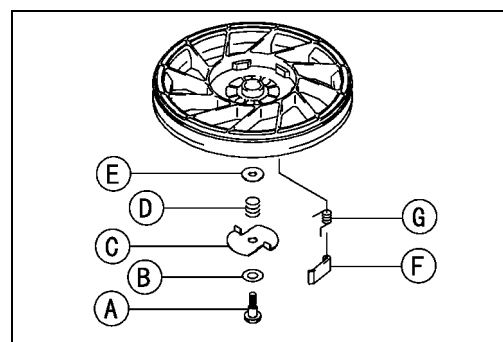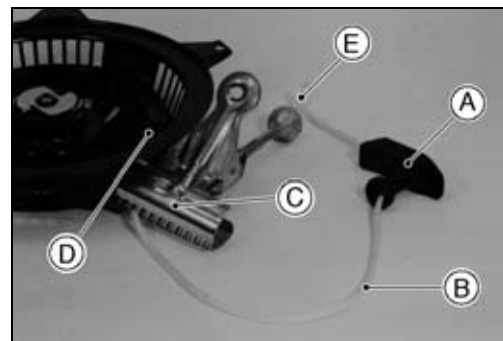

⚠ WARNING

When removing the reel [A], be careful that the recoil spring [B] under the reel does not fly loose and cause injury. The spring is under great pressure.

NOTE


○There should be no spring tension on the reel when removing it. If tension is felt, push the reel back into place and gently "wiggle" it until the reel can be easily removed.

- Slowly lift the reel straight up out of the case [C].

⚠ WARNING

If the recoil spring cassette is sticking with the reel, be careful that the cassette does not drop. Be careful that the recoil spring does not fly loose from the cassette and cause injury. The spring is under great pressure.


- Slowly lift the recoil spring cassette, straight up out of the case or reel.

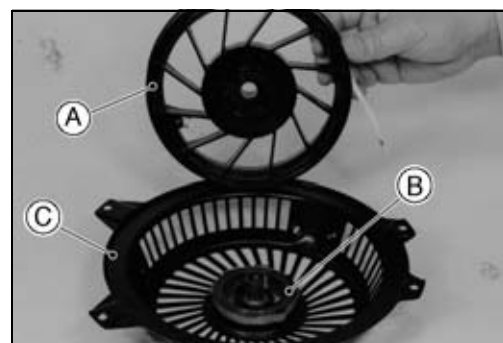

7-26 ELECTRICAL SYSTEM

Starter System

★ If the recoil spring [A] must be removed from the cassette [B], hold the cassette with the opening side facing downward in a suitable container and tap the cassette to remove the recoil spring.

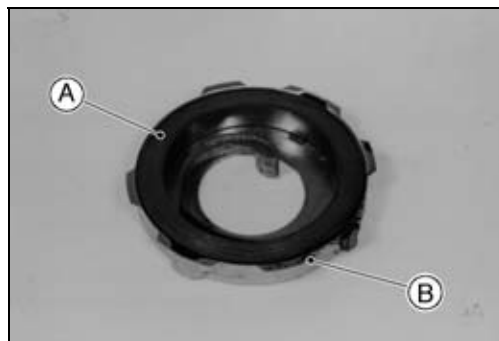


Recoil Starter Assembly


WARNING

Wear gloves during the recoil spring installation to avoid injury. The recoil spring must be assembled with great pressure.

- Lightly grease the recoil spring.
- Set the recoil spring into the spring cassette.
- Wind the rope clockwise [A] on the reel, and hold the rope end [B] with tape.
- Install the spring cassette [C] on the reel so that the tongues [D] on the cassette fit in the openings in the reel.

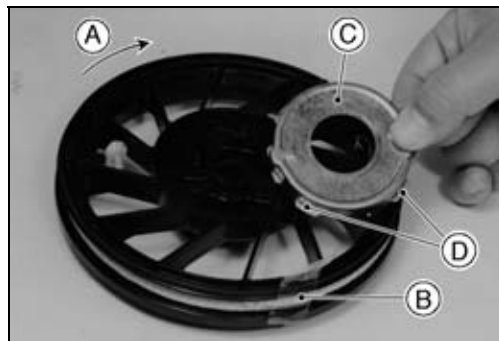

- Lightly grease the shaft [A].
- Put the reel into the case, with the round peg [B] aligned with the spring inner tongue [C].
- Turn the reel clockwise until you feel the hang hook on the catch.

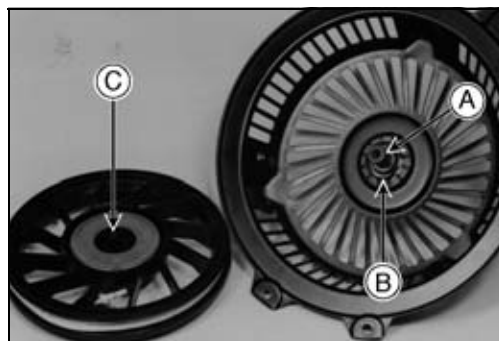

- Install:
 - Return Springs [A] and Pawls [B]
 - Washer [C] and Center Spring [D]
- Lightly grease the center spring.





Starter System

- Install:
 - Retainer [A]
 - Washer [B]
 - Screw [C]

Torque - Recoil Starter Retainer Screw: 7.8 N·m (0.80 kgf·m, 69 in·lb)

- Turn the reel two turns counterclockwise to preload the recoil spring.
- While holding the reel to keep it from unwinding, feed the end of the rope through the hole in the case.
- Clip the rope as shown to hold it.
- Install the handle [A], and secure it with a knot [B].
- Remove the clip [C] to release the rope.

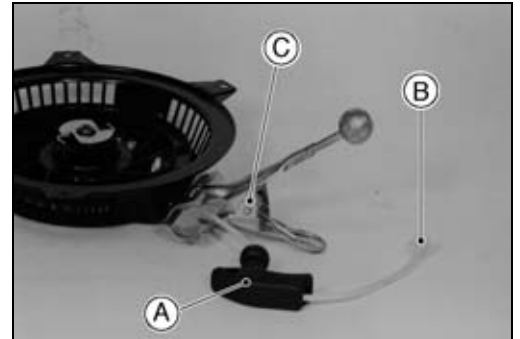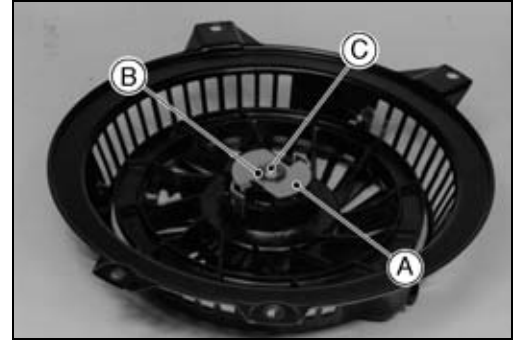

Troubleshooting

Table of Contents

Engine Troubleshooting Guide	8-2
Starter Motor Troubleshooting Guide	8-6


8-2 TROUBLESHOOTING

Engine Troubleshooting Guide

If the engine malfunctions, check if the way the engine is used is correct. If engine malfunctions even if engine is used correctly, systematically carry out troubleshooting starting with simple points.


This chart describes typical troubleshooting procedures.

Do not unnecessarily disassemble carburetor, magneto or engine unless it has been found to be the cause of malfunctioning.

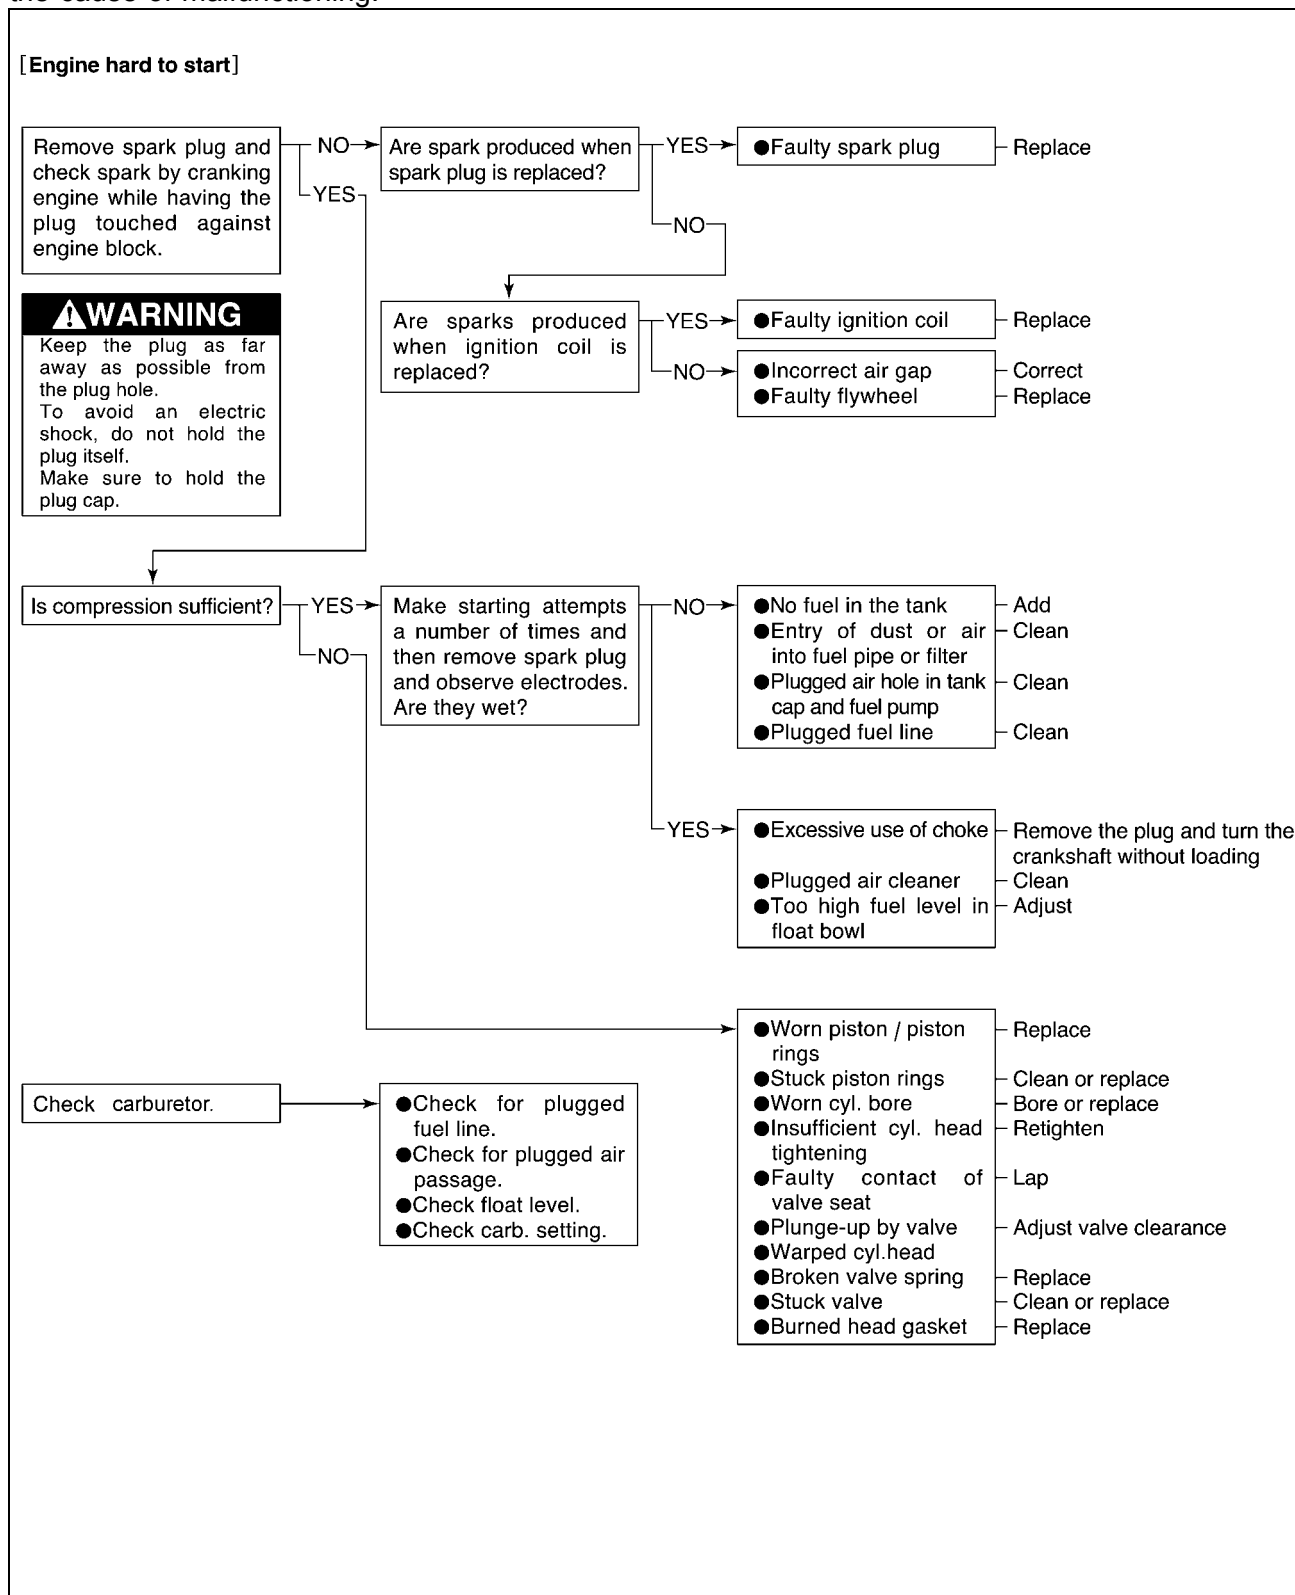

Engine Troubleshooting Guide

[Engine loss power]

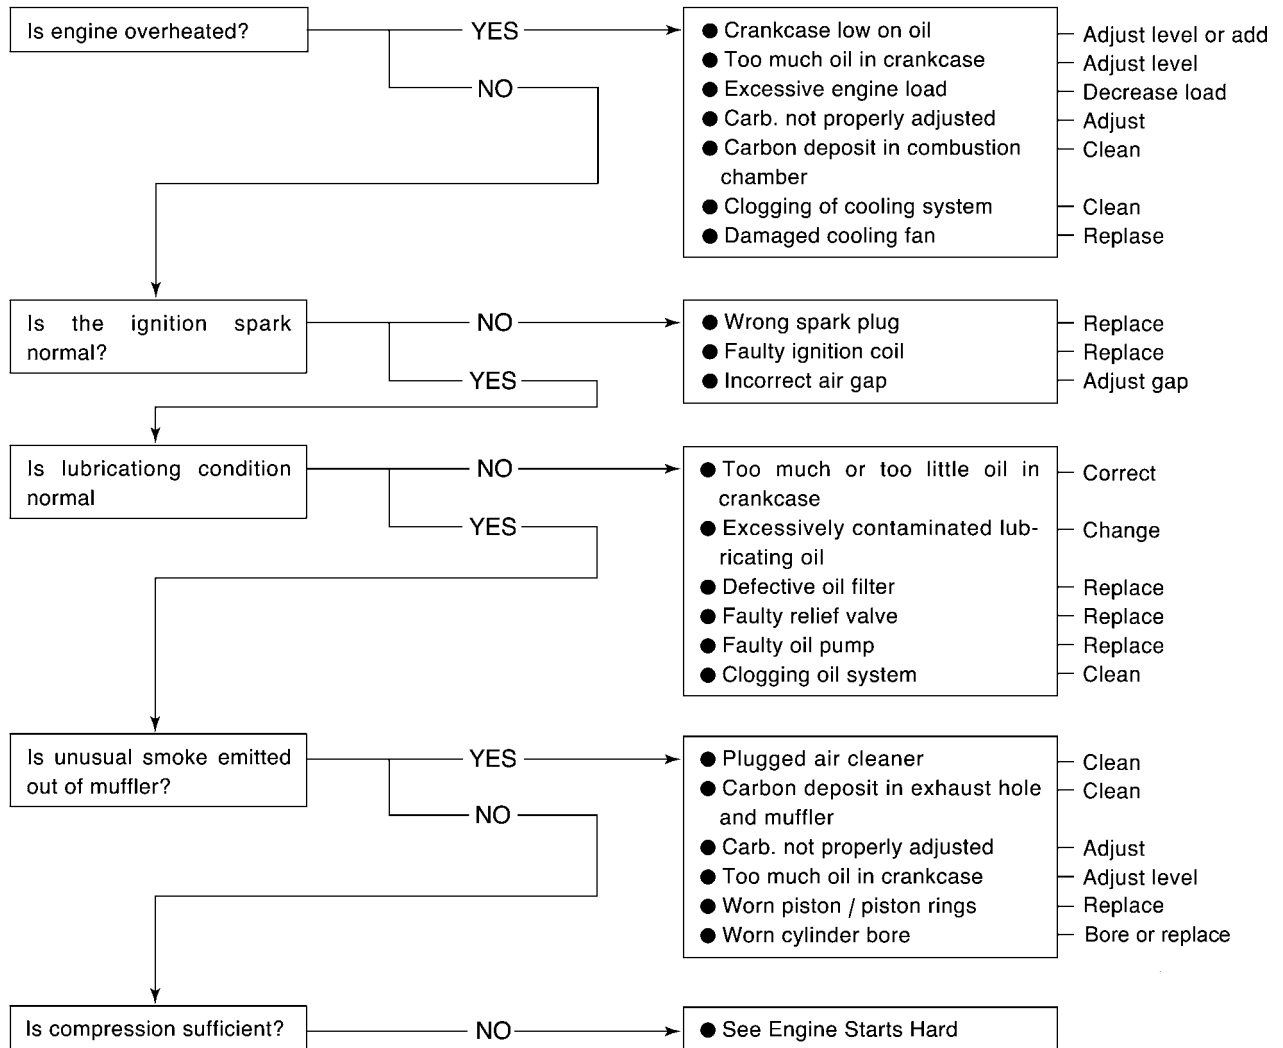

[Engine runs erratically]

Problem in the fuel system (lack of fuel)

- Spark plug fouled, pitted, or gapped incorrectly


Replace or adjust

- Entry of dust or water into fuel pipe or fuel filter
- Air or vapour lock in fuel line
- Plugged air vent of fuel tank cap
- Plugged air / fuel passes in carb.
- Too little opening of carb. pilot screw
- Carb. not properly adjusted
- Carb. flange leaking at gasket
- Worn carb. body and throttle shaft


Clean
Clean
Clean
Clean
Correct
Adjust
Tighten or replace
Replace

8-4 TROUBLESHOOTING

Engine Troubleshooting Guide

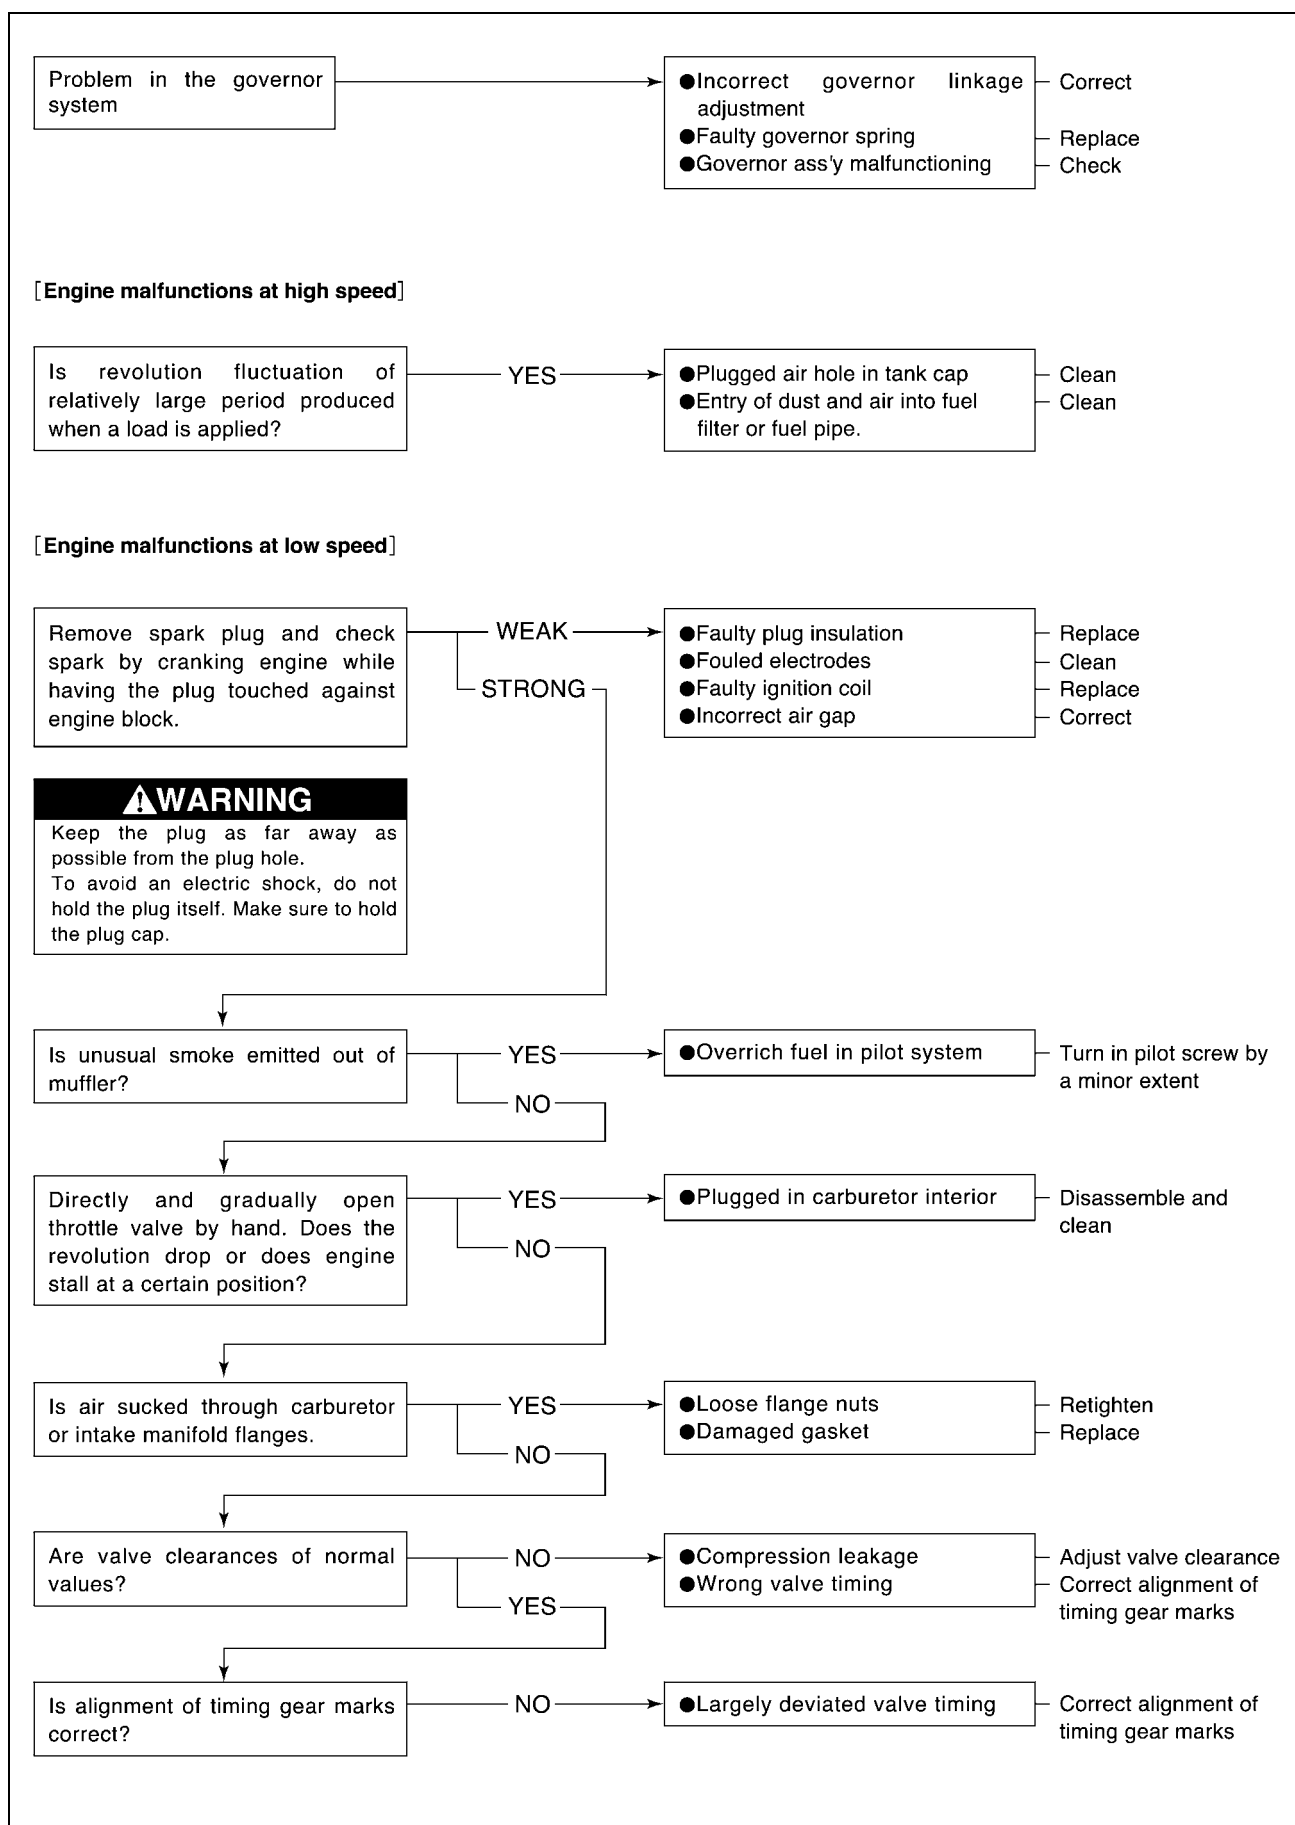

Engine Troubleshooting Guide

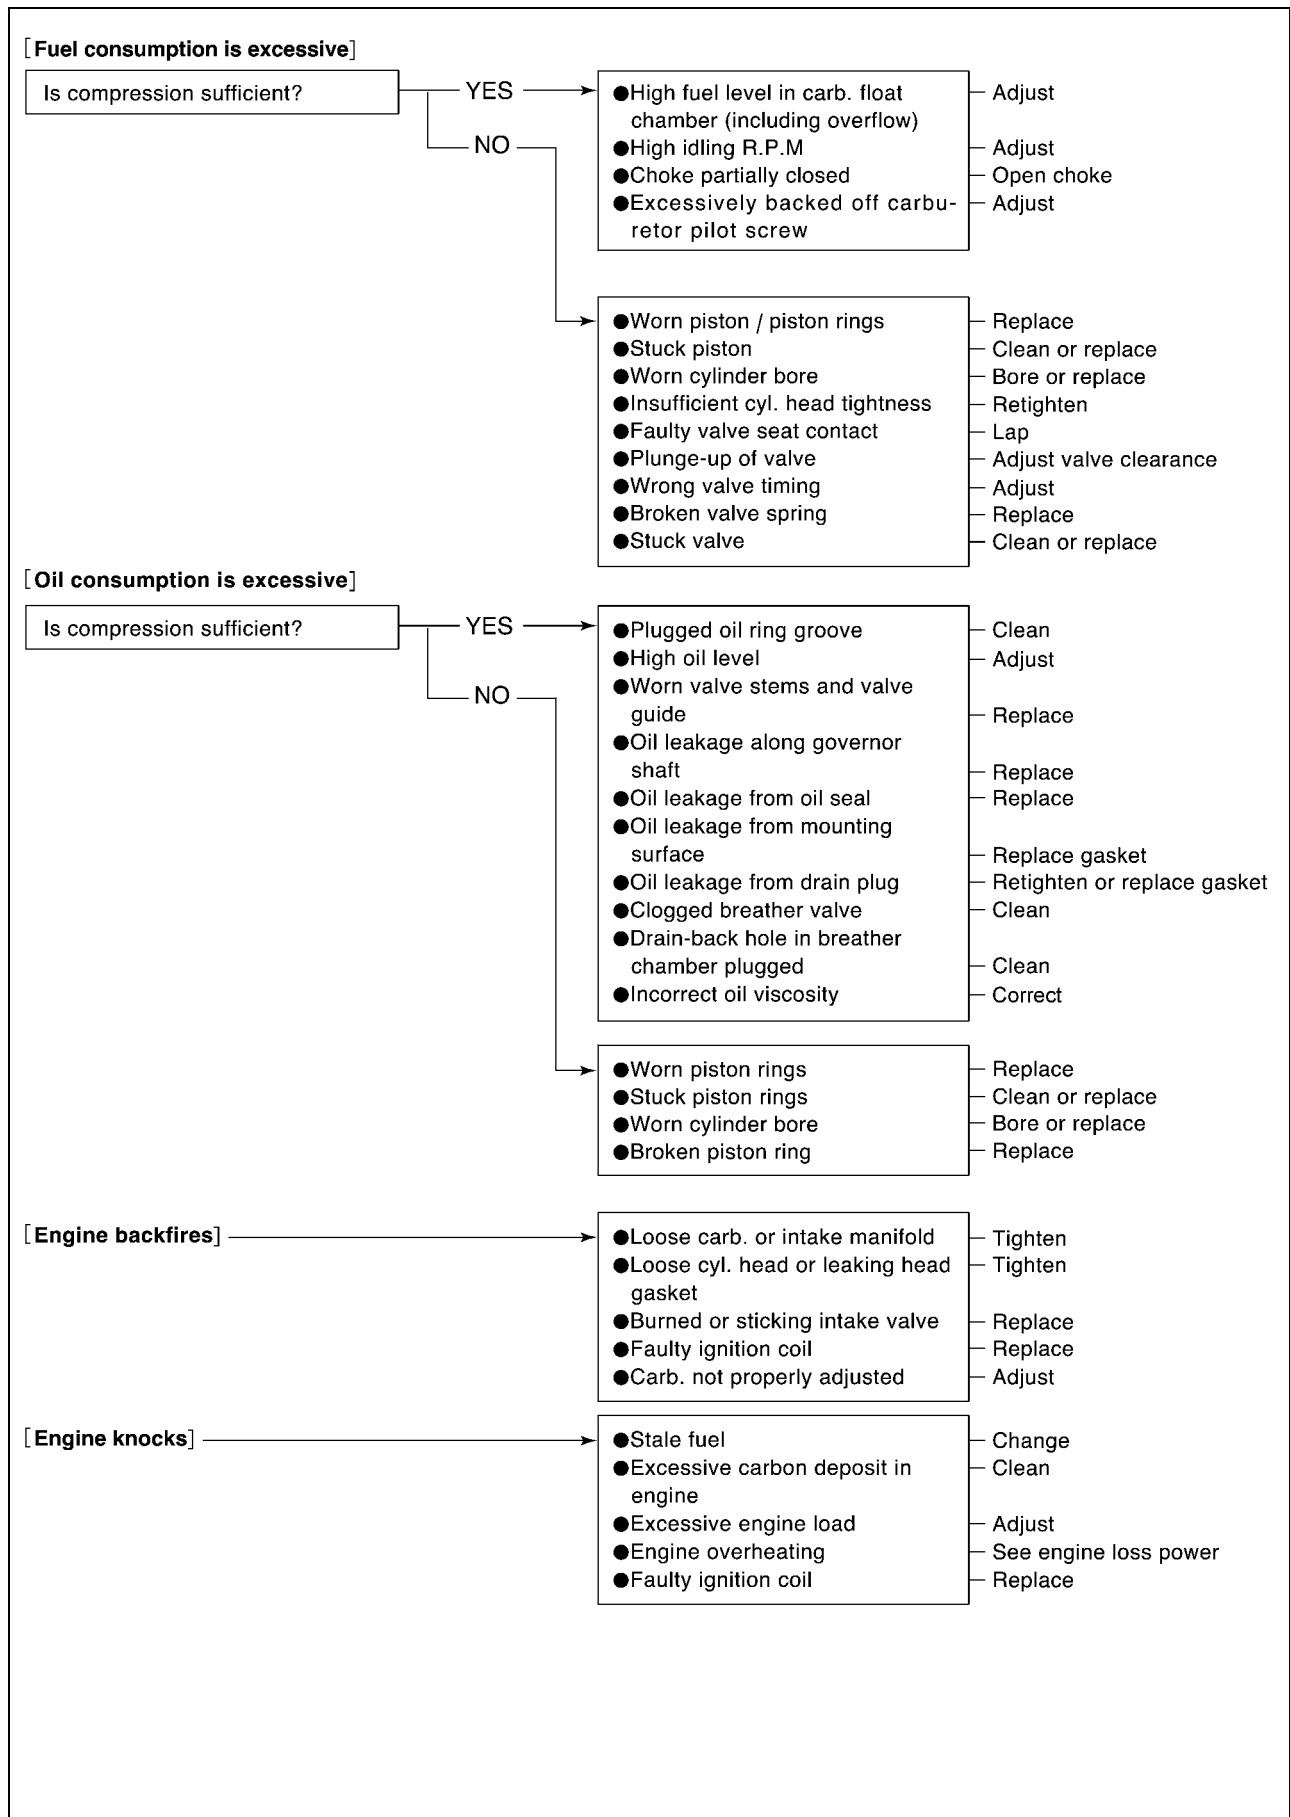

8-6 TROUBLESHOOTING

Starter Motor Troubleshooting Guide


- 1. Disconnect spark plug caps from the spark plugs.
- 2. Turn engine switch to “start” position and check condition.

⚠ WARNING

Engine may be cranked in this test. Do not touch any rotating parts of engine and equipment during test.

CAUTION

If starter does not stop by engine switch “OFF”, disconnect negative (-) lead from battery as soon as possible.

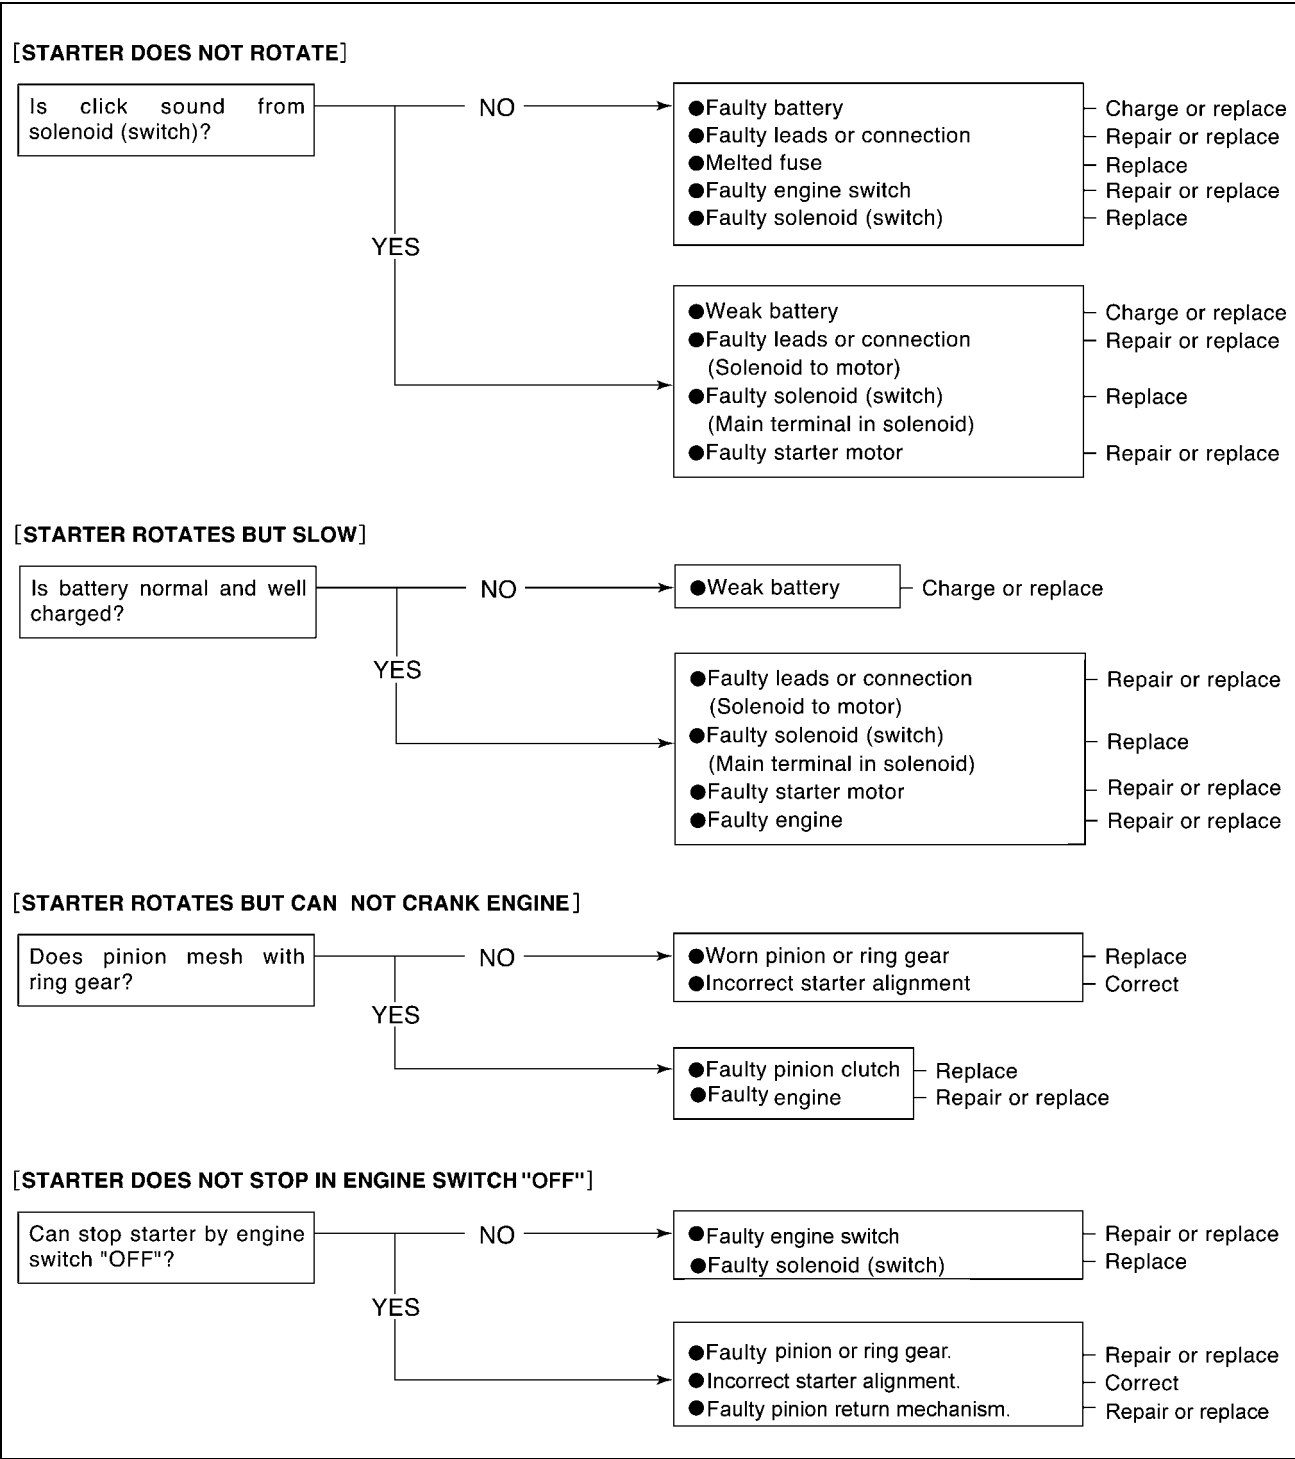



KAWASAKI HEAVY INDUSTRIES, LTD.
Consumer Products & Machinery Company

Part No.99924-2045-05

Printed in Japan