

# Breville

## Breville Customer Service Centre

### Australian Customers

**Mail:** PO Box 22  
Botany NSW 2019  
AUSTRALIA

**Phone:** 1300 139 798

**Fax:** (02) 9384 9601

**Email:** Customer Service:  
askus@breville.com.au

### New Zealand Customers

**Mail:** Private Bag 94411  
Botany Manukau 2163  
Auckland NEW ZEALAND

**Phone:** 0800 273 845

**Fax:** 0800 288 513

**Email:** Customer Service:  
askus@breville.com.au

[www.breville.com.au](http://www.breville.com.au)

Breville is a registered trademark of Breville Pty. Ltd. A.B.N. 98 000 092 928.  
Copyright Breville Pty. Ltd. 2013.

Due to continued product improvement, the products illustrated/photographed  
in this brochure may vary slightly from the actual product.

# Breville

*the Quick Fry™ Digital*  
Instruction Booklet



BDF450

# CONGRATULATIONS

on the purchase of your new  
Breville product

## CONTENTS

- 4** Breville recommends safety first
- 6** Know your Breville product
- 8** How to assemble/disassemble your Breville product
- 11** Operating your Breville product
- 16** Cooking guide
- 19** Care & cleaning
- 22** Recipes

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

## **IMPORTANT SAFEGUARDS**

### **READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE**

- Carefully read all instructions before operating the deep fryer for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the deep fryer for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- Do not place the deep fryer near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water and other substances.
- Do not use the deep fryer on a sink drain board.
- Do not place the deep fryer on or near a hot gas or electric burner, or where it could touch a heated oven.
- Do not place unit under shelving or flammable materials when in use.
- Always follow the maximum and minimum quantities of oil stated in the instructions and recipes.
- Position the deep fryer at a minimum distance of 20cm away from walls, curtains, cloths and other heat sensitive materials
- Always operate the deep fryer on a stable and heat resistant surface. Do not use on a cloth-covered surface, near curtains or other flammable materials.
- Always ensure the deep fryer is properly assembled before use. Follow the instructions provided in this book.
- The deep fryer is not intended to be operated by means of an external timer or separate remote control system.
- Avoid the use of extension cords. Serious hot oil burns may result from a deep fryer being pulled off a table or bench top. Do not allow the power cord to hang off the edge of a bench top where it may be grabbed by children, or become entangled by the user. Never leave the deep fryer unattended while in use.
- Ensure the deep fryer is completely dry and free of water before adding any oil. When deep frying, ensure water does not come in contact with hot oil as this will cause the oil to bubble and splatter.
- Always add the required amount of oil to the deep fryer before switching the power on at the power outlet.
- Water and oil do not mix - never add any water or other liquid to hot oil. Even small amounts of water will cause the oil to splatter.
- Solid oil products, such as butter, margarine or animal fats of any kind should not be used in the deep fryer as they increase the chance of fire hazard.
- The lid and the outer surface will be hot when the appliance is operating and for some time after use.
- The temperature of accessible surfaces will be high when the appliance is operating and for some time after use.
- Steam vents are very hot during deep frying. Do not place anything on top of the lid.

- Do not cover the steam vents when the deep fryer is in use.
- Do not leave the appliance where children can touch hot surfaces, power cord or any other part of the deep fryer.
- Extreme caution must be used when the deep fryer is filled with hot oil or other liquid. Do not move the deep fryer during cooking and allow it to cool before removing oil.
- At no time should the deep fryer be left unattended when in use.
- Never lean over the deep fryer when lifting the lid. Excess trapped steam created during the cooking process will be released when the lid is opened.
- Do not exceed the maximum fill level. Never overfill the bowl with oil.
- Never pour oil out of the deep fryer when either the unit or oil is hot. Allow both the unit and contents to cool completely before removing oil.
- Do not place anything on top of the deep fryer when the lid is on, when in use and when stored.
- Always switch the On/Off switch to the off position, switch the deep fryer off at the power outlet, then unplug the power cord and cool completely, if appliance is not in use, before cleaning, before attempting to move the appliance, disassembling, assembling and when storing the appliance.
- Keep the deep fryer clean. Follow the cleaning instructions provided in this book.

## IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES





- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock do not immerse the power cord, power plug or appliance in water or any other liquid.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- The appliance is not intended to be operated by means of an external timer or a separate remote control system.

# SAVE THESE INSTRUCTIONS

**KNOW**

your Breville product

## KNOW YOUR BREVILLE PRODUCT

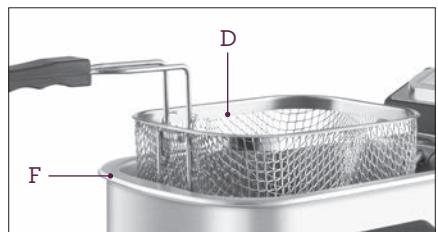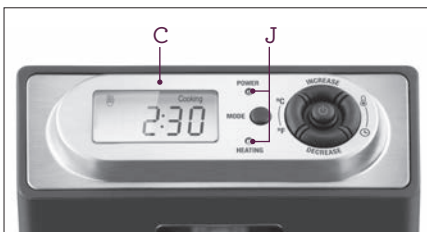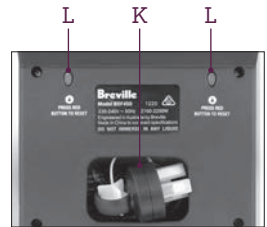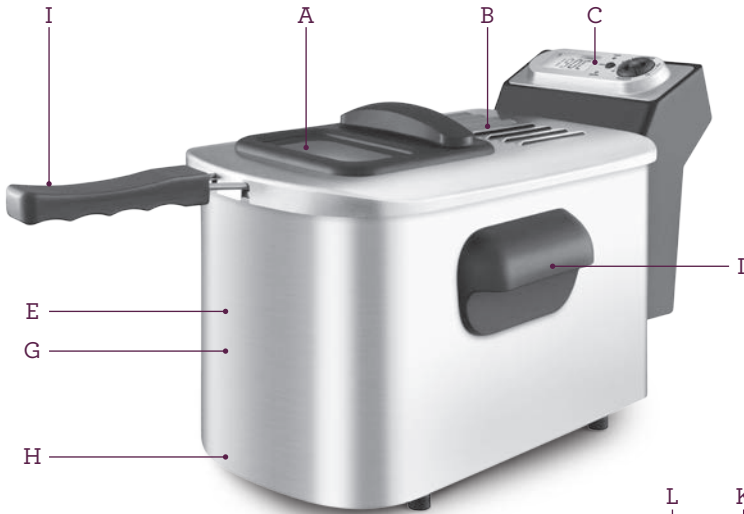

- A. Large Viewing Window
- B. Stainless Steel Lid with Mesh Filter
- C. Digital Control Panel
- D. Frying Basket  
1.6kg food capacity. Handle folds down for convenient storage.
- E. 2200W Heating Element

- F. Removable Stainless Steel Frying Bowl  
4 Litre Oil Capacity.
- G. Stainless Steel Exterior
- H. Cool Zone Area
- I. Cool Touch Handle
- J. POWER and HEATING Lights
- K. Cord Storage
- L. Safety Reset Buttons



# HOW TO ASSEMBLE/ DISASSEMBLE

your Breville product


## HOW TO ASSEMBLE/DISASSEMBLE YOUR BREVILLE PRODUCT

### STEP 1

Remove lid from the deep fryer by grasping the handle on top and lift off.


### STEP 2

The wire frying basket has a hinged handle for compact storage. Remove the basket from the deep fryer. Extend and lock the basket handle into position by squeezing the two handle prongs together, pull back and lock behind the two wire supports extending from edge of basket

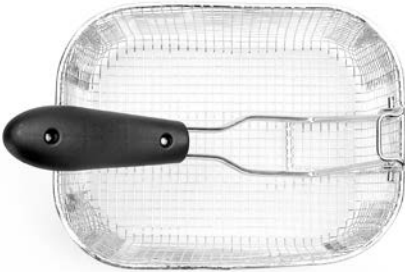

### STEP 3

Lift the control panel with attached element upwards and away from the deep fryer.

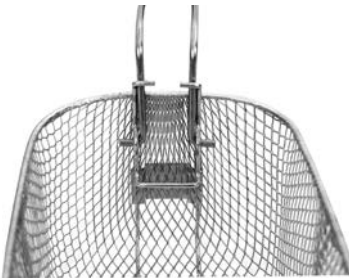

### STEP 4

Remove the stainless frying bowl by grasping the rim and lifting upwards.



### STEP 5


To reassemble the deep fryer, reverse steps 1-4.

#### NOTE

The lid, stainless frying bowl and element are shaped so that they can only be inserted in the correct position.

**!** **IMPORTANT**

*When assembling your deep fryer for use, please ensure the **NARROW TONGUES** in the control panel are inserted into the corresponding **GROOVES** of the deep fryer body. The deep fryer will not operate unless correctly assembled.*

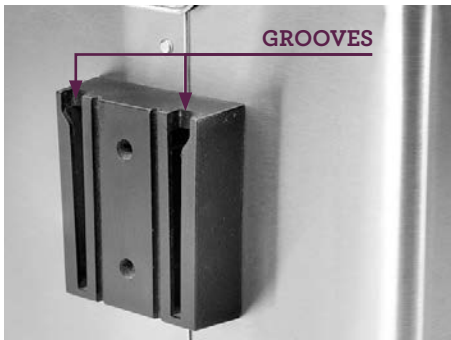

# OPERATING

your Breville product

## BEFORE FIRST USE

Remove all packaging materials and any promotional labels from your deep fryer.

Wash the lid, removable enamel bowl, stainless steel outer body and wire frying basket in hot soapy water, rinse and dry thoroughly. Wipe the element with a soft, damp cloth and dry thoroughly. Reassemble and ensure the bowl is completely free of water before adding any oil.

## STEP 1

Place the deep fryer on a dry, level surface. Ensure the deep fryer is not too close to the edge of the bench top, and that the power cord or basket handle does not extend over the edge.

## STEP 2

Remove the frying basket from the deep fryer and add oil to the bowl. Do not add less than the minimum level mark (2½ litres) or exceed the maximum level mark (4 litres).

### NOTE

**Important: NEVER exceed the maximum level mark with oil (maximum is 4 litres). This product must be filled with oil to the exact marked level. The product will be severely damaged if heated without oil in the frying bowl.**

## STEP 3

Replace the lid.

## STEP 4

Plug the power cord into a 230/240 volt power outlet. Ensure cord is fully extended. Switch on at power outlet and the deep fryer will beep once; the red POWER light will illuminate on the display panel and a Celsius temperature will be displayed on the LCD (liquid crystal display) screen. The °C will show the last temperature selection.

## STEP 5

To choose a cooking temperature, use (A) the mode button to select a cooking mode option or (B) a cooking temperature selection:

### A. Cooking Mode Options

The MODE button allows you to select a cooking mode with the temperature of the oil predetermined:

Press once	190°C	Chips
Press twice	175°C	Fish
Press 3 times	175°C	Chicken pieces
Press 4 times	175°C	Prawn cutlets
Press 5 times	Display will return to the last °C temperature selected when using (B) cooking temperature selection.	

If a Fahrenheit cooking temperature display is required, press the C°-F° button on the left-hand side of the Control Selector. The cooking mode temperatures will display as follows:

Press once	375°F	Chips
Press twice	350°F	Fish
Press 3 times	350°F	Chicken pieces
Press 4 times	350°F	Prawn cutlets
Press 5 times	Display will return to the last °F temperature selected when using (B) cooking temperature selection.	

### NOTE

When the deep fryer is switched off at the power outlet and then switched back on, the cooking temperature display will default to the Celsius temperature scale.

### B. Cooking Temperature Selection

If you wish to select a Celsius temperature (other than those predetermined in the Cooking Mode Options), change the initial display temperature by pressing the TIME-TEMP button, then the '+' button to increase the temperature up to 190°C or the '-' button down to 100°C.

If you wish to select a Fahrenheit temperature (other than those predetermined in the Cooking Mode Options), change the initial display temperature by pressing the C°-F° button, then the TIME-TEMP button, then the '+' button to increase the temperature up to 375°F or the '-' button down to 210°F.

### STEP 6

After selecting a cooking mode option or a cooking temperature, press the (symbol) button in the centre of the Control Selector. This starts the preheating and the orange HEATING light will illuminate on the control panel. The word HEATING will flash and the actual temperature of the oil will display on the LCD screen and increase in 5° increments until the oil has heated to the selected temperature (the blue backlight will go out after 30 seconds). The orange HEATING light will go out and the word HEATING will stop flashing. The word READY will flash on the LCD screen and the deep fryer will sound 3 quick beeps 5 times.

### STEP 7

Add food to the frying basket. Do not over fill the basket, it should not exceed two-thirds full. (refer to the MAX FILL LINE under handle).

### STEP 8

Remove the lid and place the frying basket (with the basket handle locked into the extended horizontal position) into the holding position above the frying bowl (slip the slot on the frying basket onto the corresponding tongue in the frying bowl).

### STEP 9

Holding the frying basket handle, lift from the holding position and gently lower the basket into the oil.

### STEP 10

The default cooking time is 19 minutes. If a longer or shorter cooking time is required, press the TEMP -TIME button on the right-hand side of the control selector, then press the '+' button to increase the cooking time up to 60:58 (60 minutes 58 seconds) or the '-' button to decrease the cooking time down to 00:58 (58 seconds).


### STEP 11

Press the (symbol) button in the centre of the control selector. This starts the cooking and the word COOKING will flash and the cooking time will display on the LCD screen. The time 19:00 will count down in 1-minute increments; when 1 minute remains on the screen the time will count down in 1-second increments.

### STEP 12

At the end of the cooking time, the time and the word COOKING on the LCD screen go out, the temperature selected is displayed and the deep fryer sounds 5 beeps.

### NOTE

The functions can be cancelled at any time by pressing the  button.

Care should be taken when lowering food in the frying basket into the hot oil. Some splattering may occur.

When cooking foods coated with batter, lower the frying basket into the hot oil then carefully add coated food directly into the oil using metal tongs – cook a few pieces at a time – and follow steps 10–16.

### STEP 13

When the food is cooked, raise the frying basket out of the oil, place in the holding position to drain, then switch the power off at the power outlet and remove the power plug.

### STEP 14

Keep the frying basket in the holding position for a few minutes to drain any excess oil from the food.

### STEP 15

Lift the frying basket upwards to remove. Place the food on a heat resistant plate or tray lined with kitchen paper to absorb any excess oil.


### STEP 16

Allow the deep fryer to cool completely before emptying the oil or cleaning.

### NOTE

Do not overfill the basket with food, too many items lower the oil temperature causing food to absorb oil and not cook properly.

## COOL ZONE TECHNOLOGY

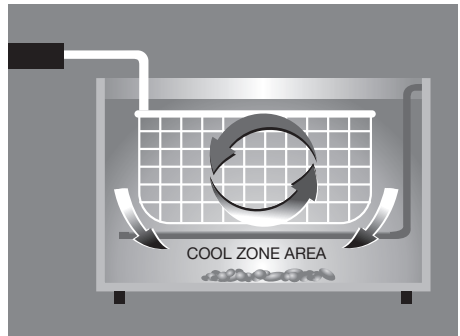

The submerged heating element system on the deep fryer allows oil to be heated more effectively, and respond quickly to oil temperature changes.

Oil below the heating element is cooler and allows cooked foods including crumbs to sink to the bottom of the enamel bowl and not cook any further, tainting the oil taste.

This allows further cooking to take place without food particles interfering or tainting the cooked result.

The Cool Zone Technology results in less need to change the cooking oil. Used oil can be re-used more times than in standard deep fryers.

## AUTO CUT-OUT RESET BUTTON

Always add the required amount of oil BEFORE switching the power on at the power outlet. An Auto Cut Out safety switch will be activated if the unit is turned on without oil in the bowl.

To re-activate the unit, let the unit cool completely and then reset by pushing the red button on the back of the controller assembly above the cord storage.



### **WARNING**

*During and immediately after cooking, steam may rise through the filter vent openings in the lid. This is normal, however avoid touching this area during cooking to prevent steam burns as the steam generated is at a high temperature.*

*As the basket gets very hot, only use the handle to hold or carry the basket for serving. Ensure the basket handle is locked into position.*

*Solid oil products, such as butter, margarine or animal fats of any kind should not be used in the deep fryer as they may overheat and cause a fire hazard.*

*Water and oil do not mix – never add any water or other liquid to hot oil. Even small amounts of water will cause the oil to splatter.*

*Avoid the use of extension cords. Serious hot oil burns may result from a deep fryer being pulled off a bench top. Do not allow the cord to hang off the edge of a bench top where it may be grabbed by children, or become entangled by the user. Never leave the deep fryer unattended while in use.*

*The deep fryer will generate a lot of heat and steam during and after the cooking process. To prevent the risk of burns, do not touch or block the steam ventilation area on the lid.*

*Take care when opening the lid. This product generates heat and steam at high temperatures, which will escape immediately when the lid is opened. Avoid touching hot surfaces.*

*Extreme caution must be used when the deep fryer is filled with hot oil or other liquid. Do not move the deep fryer during cooking and allow it to cool before removing oil.*



# COOKING GUIDE

## COOKING GUIDE

The cooking times given in this chart are a guide only and should be adjusted to suit the quantity of food being deep fried.

FOOD	TEMPERATURE	APPROX. COOKING TIME
Mushrooms	160°C	3–4 minutes
Chicken pieces (crumbed)	175°C	12–15 minutes
Chicken strips	180°C	3–4 minutes
Prawn cutlets (raw, crumbed)	175°C	3–4 minutes
Fish cakes or pieces	190°C	4–6 minutes
Fish fillets (in batter)	175°C	5–7 minutes
Onion rings	190°C	2–4 minutes
Chips (thick) 500g	190°C	5–6 minutes
Chips (thin) 500g	190°C	2–4 minutes
Potato wedges	170°C	7–10 minutes
Spring rolls, small	180°C	4–6 minutes
Fruit fritters	180°C	4–5 minutes

### HANDY HINTS

Food should be crisp when deep fried. If results are soggy, it's because the oil isn't hot enough. This can be attributed to one or more of the following:

- Not enough preheating time.
- Temperature setting is too low.
- Too much food in the basket (do not fill basket more than two thirds full).
- Do not use solid frying oil, only use liquid oils.
- Use a good quality liquid oil. For best results we recommend oils listed.
- We do not recommend fats that deteriorate quickly such as lard or dripping.
- Deep frying in butter or margarine is also not recommended because of the low smoke-point temperatures.
- Olive oil is not recommended for deep frying due to its low smoke-point temperature.

### NOTE

Oil can be re-used several times before it starts to break down (low smoke-point decreases (i.e. the oil will burn at a lower temperature and fried food will be less crisp). Filter the cooled oil through a fine sieve then store in an airtight container in a dark place. A fine sieve can be made by lining a funnel with an unused Chux brand cloth, paper coffee filter or clean cotton material. Oil will absorb food flavours, so it's a good idea to label the oil storage container with the type of food the oil was last used to cook. For example, don't fry a dessert in oil previously used for cooking fish.

### RECOMMENDED OILS

#### Vegetable oil

A general term that refers to a blend of oils extracted from various seeds and fruits. Vegetable oil has a very mild flavour and aroma. It is low in cholesterol and saturated fats.

#### Sunflower oil

The oil is extracted from the seeds of the sunflower plant. It is pale yellow in colour with virtually no flavour. Sunflower oil is high in polyunsaturated fats and low in saturated fats.

#### Canola oil

Made from seeds of the canola plant. It is relatively low in saturated fats, contains Omega 3 fatty acids and has a bland neutral flavour.

#### Safflower oil

Safflower oil is derived from the seeds from the safflower. It is strong in flavour, rich in colour and has a high smoke-point. Safflower oil is high in polyunsaturated fats and vitamin E.

#### Peanut oil

Peanut oil is obtained from the kernels of the groundnut or peanut. It has a delicate flavour, nutty odour and has a high smoke-point. Peanut oil is high in mono-unsaturated oil and vitamin E.



### WARNING

*Do not use solid frying oils, only use liquid oils as per the recommendations.*

# CARE & CLEANING

for your Breville product

## CARE & CLEANING

- Before cleaning, always ensure the deep fryer is turned off and disconnected from the power outlet.
- Ensure the deep fryer and oil are completely cool. Oil will retain its temperature for a long time after use. Do not attempt to move or carry the deep fryer, element or control panel while they are hot.
- Wash the frying basket in hot soapy water. Rinse and dry thoroughly.
- Remove the control panel/element of the deep fryer by lifting upwards. Place the element onto kitchen paper to absorb excess oil. Wipe element with a soft, damp cloth and dry thoroughly.



- Grasp each side of the removable frying bowl and lift upwards.



- Empty the cooled oil from the frying bowl. Oil can be re-used several times, depending on the type of food cooked. Filter the oil through a fine sieve.

### NOTE

**Oil should be filtered after each use and stored in a clean, air-tight container in a cool area.**

**Good quality oil can be used several times. Do not store the oil in the deep fryer. Discard used oil in a sealed container with household waste.**

**Do not pour down a sink or drain.**

- Wash the lid, removable enamel frying bowl, stainless steel outer body and wire frying basket in hot soapy water, rinse and dry thoroughly. The removable enamel bowl frying allows for easy cleaning. Wipe the bowl with absorbent paper, then a damp cloth and a little mild detergent. Finish off with a clean damp cloth followed by a clean dry cloth.
- The removable enamel frying bowl, frying basket and stainless steel outer body are dishwasher safe.

### NOTE

**Do not use any abrasive cleaners, such as steel wool to clean the surface of your deep fryer as this will scratch the coating.**

- Wipe over the control panel with a soft, damp cloth and a little mild detergent. Finish off with a clean damp cloth and dry thoroughly with a clean dry cloth.
- Reassemble the deep fryer for storage. Do not place anything on top of the deep fryer during storage.



### **IMPORTANT**

*Never immerse the deep fryer control panel, element or cord in water or any other liquid.*

*Always turn the appliance off at the power outlet and then unplug cord before attempting to move the appliance and before cleaning.*

*Do not, under any circumstances, immerse the control panel/element, the power cord or plug in water or any other liquid.*

# RECIPES

### CRUMBED BRIE WITH STRAWBERRY SAUCE

Serves 4

#### INGREDIENTS

4 x 125g Brie cheese  
1 egg, beaten  
1 tablespoon milk  
1 cup dried breadcrumb  
4 litres oil for deep frying

#### METHOD

1. Coat cheese in combined beaten egg and milk, then breadcrumbs. Once coated, repeat coating in egg then breadcrumbs to give a thick coating. Chill for 30 minutes.
2. Fill deep fryer with oil to maximum level. Preheat to 180°C with lid closed.
3. Deep fry cheese in two batches until cooked and golden, approximately 2 minutes allowing oil to reheat between each batch. Drain.

*Serve as an entrée with Strawberry Sauce and a salad garnish.*

#### Strawberry sauce

#### INGREDIENTS

1 punnet strawberries, washed and hulled  
1 tablespoon sugar

#### METHOD

1. Puree strawberries and sugar.

*Serve chilled as an accompaniment to Crumbed Brie.*

### SALT AND PEPPER CALAMARI

Serves 4

#### INGREDIENTS

4 litres oil for deep frying  
½ cup corn flour  
1 teaspoon salt  
1 teaspoon finely ground pepper  
500g calamari rings  
1 egg white  
2 tablespoons water  
Sweet Thai Chilli Sauce

#### METHOD

1. Fill deep fryer with 4 litres of oil. Preheat to 190°C.
2. Combine flour, salt, pepper, egg white and water. Add to calamari in a large plastic bag. Shake bag to coat calamari evenly with flour mixture.
3. Deep fry in two batches for approximately 3–4 minutes allowing oil to reheat between each batch. Drain.

*Serve with chilli sauce and salad as an entrée or light meal.*



## CRUMBED PRAWN CUTLETS WITH GARLIC CHIVE MAYONNAISE

Serves 4

### INGREDIENTS

750g (approx 36) green king prawns, peeled and deveined, tails intact.

250g plain flour

1 egg, beaten

1 tablespoon milk

1 cup dried breadcrumbs

Grated zest 1 lemon

4 litres oil for deep frying

### METHOD

1. Coat prawns in flour, then the combined beaten egg and milk, then breadcrumbs mixed with lemon zest. Once coated, repeat coating in egg then breadcrumbs to give a thick coating. Chill for 30 minutes.
2. Fill deep fryer with oil to maximum level. Preheat to 180°C.
3. Deep fry prawns in four batches until cooked and golden, approximately 2-3 minutes allowing oil to reheat between each batch. Drain.

### Garlic chive mayonnaise

#### INGREDIENTS

½ cup mayonnaise

¼ cup sour cream

1 clove garlic, crushed

Zest 1 lemon, finely grated

2 tablespoons snipped chives

Salt and pepper to taste

#### METHOD

1. Combine mayonnaise, sour cream, garlic, lemon zest and chives. Season to taste.

*Serve chilled as an accompaniment to Crumbed Prawn Cutlets.*

## SALMON CROQUETTES

Serves 4

### INGREDIENTS

2 large potatoes, peeled and diced

415g can pink salmon, well drained

1 small onion, finely chipped

Grated zest and juice 1 lime or lemon

2 tablespoon chopped coriander or parsley

1 egg, beaten

1 cup grated tasty cheese

Salt and pepper to taste

Plain flour

2 eggs, beaten

3 cups plain flour

4 litres oil for deep frying

### METHOD

1. Boil potatoes until tender. Drain and mash (yield approximately 2 cups). Combine mashed potato, salmon, onion, lime zest, juice, coriander, beaten egg and grated cheese. Season to taste.
2. Divide and shape mixture into 12 sausage-shaped croquettes. Coat croquettes in flour. Chill for 30 minutes.
3. Crumb the croquettes by placing hem in the egg mix, then breadcrumb. Chill again for 30 minutes.
4. Fill deep fryer with 4 litres of oil. Preheat to 180°C.
5. Deep fry croquettes in two batches until cooked and golden, about 4-5 minutes allowing oil to reheat between each batch. Drain.

*Serve as a light meal with salad.*

## SPRING ROLLS

Serves 8

### INGREDIENTS

- 4 litres oil for deep frying
- 350g pork mince
- 200g green prawn meat diced
- 1 tablespoon soy sauce
- ½ cup finely diced water chestnuts
- 4 green shallots, finely sliced

### METHOD

1. Combine all the filling ingredients and mix well.
2. Place ¼ cup of mixture onto each wrapper and roll; secure the last rolled edge with a drizzle of water.
3. Place the finished rolls onto a flat tray, the rolls can be frozen and cooked at a later date. These need to be defrosted before cooking.
4. Fill the deep fryer with 4 litres of oil and preheat to 180°C.
5. Place up to 4 spring rolls into the basket and carefully lower them into the oil. Cook for 4–6 minutes or until golden brown, allowing the oil to reheat between each batch.

## SAMOSAS

Serves 16

### INGREDIENTS

- 1 tablespoon oil
- 1 small onion, finely chopped
- 1 teaspoon crushed garlic
- 1 teaspoon curry powder or paste
- 150g potato, finely chopped
- 100g carrot, finely chopped
- 1 tablespoon frozen peas
- 4 sheets ready rolled shortcrust pastry
- 1 tablespoon milk
- 4 litres oil for deep frying

### METHOD

1. To prepare filling, heat oil in a saucepan. Fry onion, garlic and curry powder until onion is soft. Add potato and carrot.
2. Cover and cook on a low heat until tender, approximately 10 minutes, stirring occasionally. Add peas.
3. Cool, then divide mixture into 16 portions.
4. Cut out 16 x 12 rounds from pastry. Top each with potato mixture and brush edges of pastry with milk. Fold pastries in half, pressing edges together.
5. Fill deep fryer with 4 litres of oil. Preheat to 190°C.
6. Deep fry samosas, 4 at a time until golden, approximately 4–5 minutes allowing oil to reheat between each batch. Drain.

*Serve as a starter to a curry meal or as a light meal.*

### TEMPURA

Tempura is a style of deep frying that originated in Japan. It uses a very light batter to coat seafood (particularly prawns) and vegetables. Tempura is then traditionally served with a light dipping sauce. Food suitable for Tempura are:

- Prawns
- Whole button mushrooms
- Sliced sweet potato
- Fresh asparagus
- Whole beans
- Whole baby corn
- Cauliflower or broccoli florets Honey

### TEMPURA BATTER

#### INGREDIENTS

- 4 litres oil for deep frying
- 2 cups plain flour
- 2 egg yolks
- 2 cups iced water
- Selection of food from above list

#### METHOD

1. Fill deep fryer with 4 litres of oil. Preheat to 190°C.
2. To prepare batter, sift flour into a bowl. Make a well in the centre. Add egg yolks and iced water stirring until just combined. The batter should be rough and only half mixed. As batter will thicken on standing, use immediately.
3. Coat food of choice in batter allowing excess batter to drain off.
4. With basket in lowered position, deep fry in small batches until pale golden, approximately 4-5 minutes allowing oil to reheat between each batch. Drain.

*Serve with Tempura Dipping Sauce or teriyaki sauce.*

#### TIP

**If batter becomes too thick, thin down with extra iced water.**

**When the basket is in the lowered position always use tongs and gently lower the battered food into the oil.**

### TEMPURA DIPPING SAUCE

Makes 250ml

#### INGREDIENTS

- ½ cup soy sauce
- ½ cup mirin or sherry
- ½ cup strained chicken stock

#### METHOD

1. Combine soy sauce, mirin and stock.

*Serve as dipping sauce for Tempura.*

*Tempura Batter can also be used in recipes other than the traditional Tempura.*

### HONEY PRAWNS

Serves 4

#### INGREDIENTS

4 litres oil for deep frying  
 16 green king prawns, peeled and deveined  
 ½ quantity Tempura Batter  
 ½ cup honey, warmed  
 ⅓ cup toasted sesame seeds  
 100g packet vermicelli noodles

#### METHOD

1. Fill deep fryer with 4 litres of oil. Preheat to 190°C.
2. Coat prawns in batter allowing excess batter to drain off.
3. With basket in lowered position, deep fry in two batches until golden, approximately 3–4 minutes allowing oil to reheat between each batch.
4. Drain and drizzle with the warmed honey, then toss in sesame seeds.
5. Deep fry noodles a bundle at a time until the noodles rise to the surface, approximately 2–3 seconds. Drain.

*Serve prawns with crispy noodles.*

#### NOTE

**When the basket is in the lowered position always use tongs and gently lower the battered food into the oil.**

### FISH AND CHIPS

Serves 4

#### INGREDIENTS

1¼ cups plain flour  
 Pinch salt  
 2 eggs, separated  
 250ml beer  
 1 tablespoon oil  
 4 litres oil for deep frying  
 4 boneless fish fillets (150g each)  
 4 potatoes, peeled and cut in 1cm cubed chips  
 Lemon wedges

#### METHOD

1. To prepare batter, sift flour and salt into a bowl. Make a well in the centre. Add egg yolks, beer and oil. Beat until smooth then stand for 30 minutes. Beat egg whites until soft peaks form, fold through batter.
2. Fill deep fryer with 4 litres of oil and preheat to 180°C. Preheat an oven to 150c to keep fish warm when cooked.
3. Coat the fish in batter allowing excess batter to drain off.
4. Deep fry fish in two batches until cooked and golden, approximately 3–4 minutes allowing oil to reheat between each batch. Drain and keep warm.
5. Increase deep fryer temperature to 190°C. When heated, deep fry chips in two batches until golden, approximately 12–15 minutes allowing oil to reheat between each batch. Drain.

*Serve fish and chips with lemon wedges and Tartare sauce.*

#### TIP

**If fish fillets have skin on, remove the skin otherwise the fish curls up while frying.**

### TARTARE SAUCE

#### INGREDIENTS

- ½ cup mayonnaise
- ¼ cup sour cream
- 2 tablespoons chopped capers
- 2 tablespoons chopped gherkin
- 1 tablespoon chopped parsley
- Salt and pepper to taste

#### METHOD

1. Combine mayonnaise, sour cream, capers and gherkin. Season to taste.

*Serve as an accompaniment to Fish and Chips.*

### CRUMBED LAMB CUTLETS WITH GREEN TOMATO SALSA

Serves 4

#### INGREDIENTS

- 12 frenched lamb cutlets
- Plain flour
- 2 eggs, beaten
- 2 tablespoons milk
- 1 cup dried breadcrumbs
- 4 litres oil for deep frying

#### METHOD

1. Coat cutlet in flour, shaking off any excess then coat in combined egg and milk, then breadcrumbs. Repeat coating in egg mixture and breadcrumbs to give a thick coating. Chill for 30 minutes.
2. Fill deep fryer with 4 litres of oil. Preheat to 180°C.
3. Deep fry cutlets in three batches until crisp and golden, approximately 5–6 minutes allowing oil to reheat between each batch. Drain.

*Serve with Green Tomato Salsa. Accompany with mashed potato.*

**GREEN TOMATO SALSA**

Serves 4

**INGREDIENTS**

- 1 cup parsley sprigs
- ½ cup mint leaves
- 1 clove garlic, peeled
- 1 Spanish onion, quartered
- 2 green tomatoes, quartered
- 2 tablespoons olive oil
- 2 tablespoons lemon juice

**METHOD**

1. Place parsley and mint into a food processor and process using pulse button until roughly chopped.
2. Add garlic, onion, tomatoes, olive oil and lemon juice. Process using pulse button until just combined but still chunky in texture.

*Serve chilled with lamb cutlets.*

**ITALIAN MEATBALLS**

Serves 4

**INGREDIENTS**

- 400g beef mince
- 1 egg, beaten
- 1 cup fresh breadcrumbs
- 2 teaspoons crushed garlic
- ½ teaspoon dried Italian herbs
- Plain flour
- 4 litres of oil for deep frying

**METHOD**

1. Combine mince, egg, breadcrumbs, garlic and herbs. Form into 16 round meatballs then coat in flour.
2. Fill deep fryer with 4 litres of oil. Preheat to 160°C.
3. Deep fry meatballs in two batches until cooked and golden, approximately 10 minutes allowing oil to reheat between each batch. Drain.

*Serve with your favourite pasta sauce and spaghetti.*

## SOUTHERN STYLE CHICKEN

Serves 4

### INGREDIENTS

- 4 litres oil for deep frying
- 1 cup flour
- ½ teaspoon salt
- ½ teaspoon ground black pepper
- 1 teaspoon paprika
- 8 chicken pieces (drumsticks, wings)
- 2 eggs, beaten
- 2 tablespoons milk

### METHOD

1. Fill deep fryer with 4 litres of oil. Preheat to 170°C.
2. Sift flour, pepper and paprika into a bowl. Coat chicken pieces in combined beaten egg and milk then flour mixture.
3. Deep fry in two batches until cooked and golden, approximately 15 minutes allowing oil to reheat between each batch. Drain.

*Serve with corn and salad.*

### NOTE

To quicken cooking time, boil the chicken pieces first before crumbing.

## SHOESTRING FRIES

Serves 4

### INGREDIENTS

- 4 litres oil for deep frying
- 4 potatoes

### METHOD

1. Fill deep fryer with oil to maximum level and preheat to 160°C.
2. While waiting for oil to heat, peel and cut potatoes into thin straws and soak in water to prevent discolouration. When ready to cook, drain potatoes well and pat dry with paper towel.
3. Deep fry potato straws in two batches for 3-4 minutes, drain and place on a tray with absorbent paper.
4. Increase the temperature to 190°C and cook the fries for 3-4 minutes to finish.

### NOTE

Allow oil to thoroughly reheat and potato straws to drain thoroughly in between frying. Frying twice will give a crisper result.

### TIP

Use “baking” potatoes for deep frying (ie Desiree and Pontiac potatoes).  
New potatoes are not recommended due to their high water content.

## DEEP FRIED MUSHROOMS

Serves 4

### INGREDIENTS

4 litres oil for deep frying  
 24 button mushrooms (approx 200g), stalks trimmed  
 1 egg, beaten  
 1 tablespoon milk  
 Cup fresh breadcrumbs

### METHOD

1. Fill deep fryer with 4 litres of oil and preheat to 150°C.
2. Coat mushrooms in combined egg and milk then breadcrumbs.
3. Deep fry mushrooms until golden, approximately 5 minutes allowing oil to reheat between each batch. Drain.

*Serve as an accompaniment to chicken, or as a fingerfood idea served with a dipping sauce of sour cream and chopped chives..*

## SHREDDED VEGETABLES

### INGREDIENTS

4 litres oil for deep frying  
 Grated vegetables such as potato, carrot or zucchini

### METHOD

1. Fill deep fryer with 4 litres of oil and preheat to 180°C.
2. Squeeze any excess moisture from vegetables and pat dry thoroughly with paper towel.
3. Mix some tempura batter through the vegetables.
4. Deep fry about ½ cup at a time until crisp and golden, approximately 2-3 minutes allowing oil to reheat between each batch. Drain.

*Serve as a garnish.*

## CRISPY PARSLEY

### INGREDIENTS

4 litres of oil for deep frying  
 Parsley sprigs

### METHOD

1. Fill deep fryer with 4 litres of oil and preheat to 190°C.
2. Wash parsley and pat dry thoroughly with paper towel.
3. Deep fry about ½ cup at a time until crisp and golden, approximately 2-3 minutes allowing oil to reheat between each batch. Drain.

*Serve as a garnish to seafood dishes.*

## CROUTONS

### INGREDIENTS

4 litres of oil for deep frying  
 Slices of day old bread, crusts removed

### METHOD

1. Fill deep fryer with oil and preheat to 190°C.
2. Cut bread into small cubes. Deep fry about 1 cup at a time until crisp and golden, approximately 1-2 minutes allowing oil to reheat between each batch. Drain.

*Serve as a garnish for soup or Caesar Salad.*



### DEEP FRIED ICE CREAM WITH CARAMEL SAUCE

Serves 4

#### INGREDIENTS

Full cream vanilla ice cream  
500g 2 day old commercial Madeira cake,  
processed into crumbs  
3 eggs, beaten  
¼ teaspoon milk  
4 litres oil for deep frying

#### METHOD

1. Place a scone tray into the freezer for 10 minutes to get really cold. Scoop ice cream onto cold tray to make 8 balls. Return to freezer immediately until ice cream is very hard.
2. Meanwhile, break cake into small pieces and process in a food processor or crumble with fingers to yield 4 cups cake crumbs.
3. To coat ice cream, remove one ball at a time from freezer. Using two spoons, roll ice cream in combined egg and milk then cake crumbs. Return to freezer and repeat with remaining ice cream.

#### NOTE

**Working one at a time ensures ice cream doesn't melt.**

4. Leave in freezer for a minimum 1 hour then repeat coating in egg mixture then cake crumbs to ensure a thick, firm coating. Return to freezer for 15 minutes.
5. Fill deep fryer with 4 litres of oil and preheat to 190°C.
6. Deep fry ice cream in two batches until golden, approximately 30 seconds allowing oil to reheat between each batch. Drain.

*Serve immediately with Caramel Sauce.*

### CARAMEL SAUCE

#### INGREDIENTS

60g butter  
¾ cup brown sugar  
1 tablespoon cornflour  
½ cup water  
½ cup cream  
Pinch salt

#### METHOD

1. Melt butter in saucepan or microwave. Add brown sugar stirring until smooth.
2. Add cornflour blended with water; bring to boil stirring until thickened.
3. Stir through cream and salt.

### BANANA FRITTERS

Serves 4

#### INGREDIENTS

- 1 cup self raising flour
- 1 teaspoon sugar
- 1 egg, beaten
- $\frac{2}{3}$  cup milk
- 1 tablespoon butter, melted
- 4 bananas, peeled and cut in three
- 4 litres oil for deep frying

#### METHOD

1. Sift flour into a bowl and make a well in the centre. Add sugar, combined egg, milk and melted butter.
2. Mix to a smooth batter and allow to stand for 15 minutes before using.
3. Coat bananas in batter allowing excess batter to drain off.
4. Fill deep fryer with 4 litres of oil and preheat to 180°C.
5. With basket in lowered position, deep fry bananas in two batches until golden, approximately 4-5 minutes allowing oil to reheat between each batch. Drain.

*Serve with ice cream.*

#### NOTE

When the basket is in the lowered position always use tongs and gently lower the battered food into the oil.



