



WEBSITE <http://lgservice.com>

# Room Air Conditioner

## **SERVICE MANUAL**

### **CAUTION**

- BEFORE SERVICING THE UNIT, READ THE SAFETY PRECAUTIONS IN THIS MANUAL.
- ONLY FOR AUTHORIZED SERVICE PERSONNEL.

**MODEL: LS-135GB/GM/GR  
LS-1351GB/GM/GR  
LS-1352GB/GC/GD/GM/GR/GW  
LS-1202GB/GC/GD/GM/GR/GW  
LS-1262GB/GC/GD/GR/GW  
C142CM/CR**

# Contents

---

<b>LG Model Name .....</b>	<b>3</b>
<b>Functions .....</b>	<b>4</b>
<b>Product References .....</b>	<b>7</b>
<b>Dimensions .....</b>	<b>8</b>
<b>Refrigeration Cycle Diagram .....</b>	<b>10</b>
<b>Wiring Diagram.....</b>	<b>11</b>
<b>Operation Details .....</b>	<b>12</b>
<b>Display Function .....</b>	<b>19</b>
<b>Installation .....</b>	<b>20</b>
<b>Operation .....</b>	<b>33</b>
<b>Disassembly of the parts (Indoor Unit) .....</b>	<b>34</b>
<b>2-way, 3-way Valve.....</b>	<b>37</b>
<b>Cycle Troubleshooting Guide.....</b>	<b>45</b>
<b>Electronic Parts Troubleshooting Guide.....</b>	<b>46</b>
<b>Electronic Control Device.....</b>	<b>55</b>
<b>Schematic Diagram .....</b>	<b>59</b>
<b>Exploded View and Replacement Parts List.....</b>	<b>60</b>

# LG Model Name

2003~

1	2	-	3	4	5	6	7	8	9	10
---	---	---	---	---	---	---	---	---	---	----

Code	Type	Code of Model	Meaning																																								
1	Producing Center, Refrigerant	A~Z	L: Chang-won R22 A: Chang-won R410A C: Chang-won R407C T: China K: Turkey R22 E: Turkey R410A H: Thailand N: India Z: Brazil D: Indonesia M: Mexico V: Vietnam S: Out Sourcing																																								
2	Product Type	A~Z	S: Split Type Air Conditioner																																								
3	Cooling/Heating/Inverter	A~Z	C: Cooling only H: Heat pump X: C/O + E/Heater Z: H/P + E/Heater V: AC Inverter C/O N: AC Inverter H/P Q: DC Inverter C/O W: DC Inverter H/P																																								
4, 5	Capacity	0~9	Cooling/Heating Capacity Ex. "09" → 9,000 Btu/h																																								
6	Electric Range	1~9 A~Z	1: 115V/60Hz, 2: 220V/60Hz 3: 208-230V/60Hz 5: 200-220V/50Hz 6: 220-240V/50Hz 7: 110V, 50/60Hz 8: 380-415V/50Hz 9: 380-415V/60Hz A: 220V, 50Hz, 3Phase B: 208~230V, 60Hz, 3Phase C: 575V, 50Hz, 3Phase D: 440~460, 60Hz, 3Phase E: 265V, 60Hz F: 200V, 50/60Hz																																								
7	Chassis	A~Z	Name of Chassis of Unit Ex. LSP → SP Chassis																																								
8	Look	A~Z	Look, Color (Artcool Model)																																								
9	Function	A~Z	<table><tr><td>Basic</td><td>A</td></tr><tr><td>Basic+4Way</td><td>B</td></tr><tr><td>Plasma Filter</td><td>C</td></tr><tr><td>Plasma Filter+4 Way</td><td>D</td></tr><tr><td>Tele+LCD</td><td>E</td></tr><tr><td>Tele+LCD+Nano plasma+4Way</td><td>F</td></tr><tr><td>Nano Plasma F+(A/changeove)+A/clean+Low A</td><td>G</td></tr><tr><td>Nano Plasma F+(A/changeove)+A/clean+4way+Low A</td><td>H</td></tr><tr><td>Tele+LED+4way</td><td>I</td></tr><tr><td>Internet</td><td>J</td></tr><tr><td>Plasma F+4Way+Oxy generator</td><td>K</td></tr><tr><td>Nano Plasma F+(A/changeove)+A/clean</td><td>L</td></tr><tr><td>Nano Plasma F+(A/changeove)+A/clean+4way</td><td>M</td></tr><tr><td>Nano Plasma F+(A/changeove)+A/clean+PTC</td><td>N</td></tr><tr><td>Nano Plasma F+(A/changeove)+Autoclean+4way+PTC</td><td>P</td></tr><tr><td>Nano Plasma F+(A/changeove)+A/clean+4way+Low A+PTC</td><td>Q</td></tr><tr><td>Negative ION+A/Clean</td><td>R</td></tr><tr><td>(Nano)Plasma+Negative ION+A/Clean</td><td>S</td></tr><tr><td>4way+(Nano)Plasma F+Negative ION+Healthy dehumidification+A/Clean</td><td>T</td></tr><tr><td>Nano Plasma F+4Way+(A/changeove)+A/clean+</td><td>U</td></tr></table>	Basic	A	Basic+4Way	B	Plasma Filter	C	Plasma Filter+4 Way	D	Tele+LCD	E	Tele+LCD+Nano plasma+4Way	F	Nano Plasma F+(A/changeove)+A/clean+Low A	G	Nano Plasma F+(A/changeove)+A/clean+4way+Low A	H	Tele+LED+4way	I	Internet	J	Plasma F+4Way+Oxy generator	K	Nano Plasma F+(A/changeove)+A/clean	L	Nano Plasma F+(A/changeove)+A/clean+4way	M	Nano Plasma F+(A/changeove)+A/clean+PTC	N	Nano Plasma F+(A/changeove)+Autoclean+4way+PTC	P	Nano Plasma F+(A/changeove)+A/clean+4way+Low A+PTC	Q	Negative ION+A/Clean	R	(Nano)Plasma+Negative ION+A/Clean	S	4way+(Nano)Plasma F+Negative ION+Healthy dehumidification+A/Clean	T	Nano Plasma F+4Way+(A/changeove)+A/clean+	U
Basic	A																																										
Basic+4Way	B																																										
Plasma Filter	C																																										
Plasma Filter+4 Way	D																																										
Tele+LCD	E																																										
Tele+LCD+Nano plasma+4Way	F																																										
Nano Plasma F+(A/changeove)+A/clean+Low A	G																																										
Nano Plasma F+(A/changeove)+A/clean+4way+Low A	H																																										
Tele+LED+4way	I																																										
Internet	J																																										
Plasma F+4Way+Oxy generator	K																																										
Nano Plasma F+(A/changeove)+A/clean	L																																										
Nano Plasma F+(A/changeove)+A/clean+4way	M																																										
Nano Plasma F+(A/changeove)+A/clean+PTC	N																																										
Nano Plasma F+(A/changeove)+Autoclean+4way+PTC	P																																										
Nano Plasma F+(A/changeove)+A/clean+4way+Low A+PTC	Q																																										
Negative ION+A/Clean	R																																										
(Nano)Plasma+Negative ION+A/Clean	S																																										
4way+(Nano)Plasma F+Negative ION+Healthy dehumidification+A/Clean	T																																										
Nano Plasma F+4Way+(A/changeove)+A/clean+	U																																										
10	Serial No.	1~9	LG Model Development Serial No.  * ARTCOOL COLOR <table><tr><td>R</td><td>Mirror</td></tr><tr><td>W</td><td>White</td></tr><tr><td>B</td><td>Blue</td></tr><tr><td>D</td><td>Wood</td></tr><tr><td>M</td><td>Metal</td></tr><tr><td>C</td><td>Cherry</td></tr></table>	R	Mirror	W	White	B	Blue	D	Wood	M	Metal	C	Cherry																												
R	Mirror																																										
W	White																																										
B	Blue																																										
D	Wood																																										
M	Metal																																										
C	Cherry																																										

# Functions

---

## Indoor Unit

### Operation ON/OFF by Remote controller

### Sensing the Room Temperature

- Room temperature sensor. (THERMISTOR)

### Room temperature control

- Maintains the room temperature in accordance with the Setting Temp.

### Starting Current Control

- Indoor fan is delayed for 5 sec at the starting.

### Time Delay Safety Control

- Restarting is inhibited for approx. 3 minutes.

### Indoor Fan Speed Control

- High, Med, Low, CHAOS, JET COOL

### Soft Dry Operation Mode

- Intermittent operation of fan at low speed.

### Sleep Mode Auto Control

- The fan is switched to low(Cooling), med(Heating) speed.
- The unit will be stopped after 1, 2, 3, 4, 5, 6, 7 hours.

### Natural Air Control by CHAOS Logic

- The fan is switched to intermittent or irregular operation
- The fan speed is automatically switched from high to low speed.

### Airflow Direction Control

- The louver can be set at the desired position or swing up and down automatically.

## PLASMA

- The function will be operated while in any operation mode with selecting the function.
- The function is to be stopped while it is operating with selecting the function.

## Defrost(Deice) control (Heating)


- Both the indoor and outdoor fan stops during defrosting.

## Hot-start Control (Heating)

- The indoor fan stops until the evaporator pipe temperature will be reached at 28°C.

## Signal Receptor

Each Icon turns on when the unit is operated, then the only Icon outline to be operated is bright.

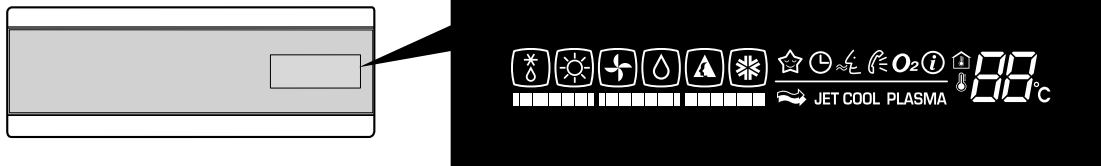

	<b>Cooling Mode</b>	Lights up during Cooling operation. (Outline)
	<b>Auto Operation Mode</b>	Lights up during Auto operation. (Outline)
	<b>Healthy Dehumidification Mode</b>	Lights up during Healthy Dehumidification operation. (Outline)
	<b>Heating Mode</b>	Lights up during Heating operation. (Heat Pump model only) (Outline)
	<b>Defrost Mode</b>	Lights up during Defrost control or Hot Start in Heating operation. (Outline)
	<b>Air circulation Mode</b>	Lights up during Air Circulation operation. (Outline)
	<b>Sleep Mode</b>	Lights up during Sleep Mode operation.
	<b>Timer Mode</b>	Lights up during Timer operation.
	<b>Auto Cleaning Mode</b>	Lights up during Auto Cleaning reservation.

**JET COOL** **Jet Cool Mode** Lights up during Jet Cool Operation.

**PLASMA** **Plasma** Lights up during Plasma operation.

**Fan Speed (Low)** Lights up when Fan speed is low.

**Fan Speed (Medium)** Lights up when Fan speed is Medium.

**Fan Speed (High)** Lights up when Fan speed is High.

**Fan Speed (Chaos)** Lights up when Fan speed is Chaos.

**Desire temperature indicator** For cooling,dehumidification,heating modes it display Desired temperature

• Cooling : 18~30°C	• AI : Auto Operation
• Dehumidification : 18~30°C	• Po : Jet Cool
• Heating : 16~30°C	• Lo : Test Mode
	• C1 : Indoor pipe sensor error

**Desire temperature Icon**


**Indoor temperature Icon**

## Remote Control

### Operation ON/OFF



### Operation Mode Selection





Cooling Operation Mode.( \* )

Auto Operation Mode.( ▲ )

Healthy Dehumidification Operation Mode.( ◇ )

Heating Operation Mode.( ☼ )

### Fan Speed Selection




### Room, Temperature Checking



: (High:39°C ↔ Low:11°C)

### Temperature Setting



Cooling — Down to 18°C  
Up to 30°C

Heating — Down to 16°C  
Up to 30°C

### JET COOL



### PLASMA(Optional)



### Setting the Time or Timer



### Timer Selection



: OFF, ON, OFF ↔ ON

### Timer Setting



### Timer Cancel



: Cancel Sleep Mode, Timer ON or Timer OFF

### Sleep Operation



: 1, 2, 3, 4, 5, 6, 7, Off Timer

### Airflow Direction Control



### Air Circulation



: Fan Operates without cooling or heating.

### Horizontal Airflow Direction Control Button(Optional)



### 2nd F



### Reset

● RESET

### AUTO CLEAN



### LED LUMINOSITY




# Product References

Model Name			LS-135GB/GM/GR LS-1351GB/GM/GR
Item	Unit		
Cooling Capacity		Btu/h	14,000
Heating Capacity			-
Moisture Removal		l/h	1.5
Power Source		Ø, V, Hz	1Ø, 220-240V, 50Hz
Air Circulation	Indoor	m³/min	9.5
	Outdoor		26
Noise Level	Indoor	dB (A)±3	36
	Outdoor		48
Input	Cooling	W	1,140
	Heating		-
Running Current	Cooling	A	5.3
	Heating		-
E.E.R.	Cooling	Btu/hW	12.28
C.O.P	Heating		-
Motor Output	Indoor	W	10.8
	Outdoor		30
Dimensions (W x H x D)	Indoor	mm	1,030 x 290 x 153
	Outdoor		770 x 540 x 245
Net. Weight	Indoor	kg	9.5
	Outdoor		34
Refrigerant		g	R-410A, 730
Airflow Direction Control (Up & Down)			O
Remocon Type			L.C.D Wireless
Service Valve	Liquid	inch(mm)	1/4" (6.35)
	Gas		1/2"(12.7)
Sleeping Operation			O
Drain Hose			O
Connecting Cable			1.0mm²
Power Cord			1.0mm²

NOTE: Please refer to Label Quality on the product since this specification may be changed for improving performance

# Dimensions


## (1) Indoor Unit

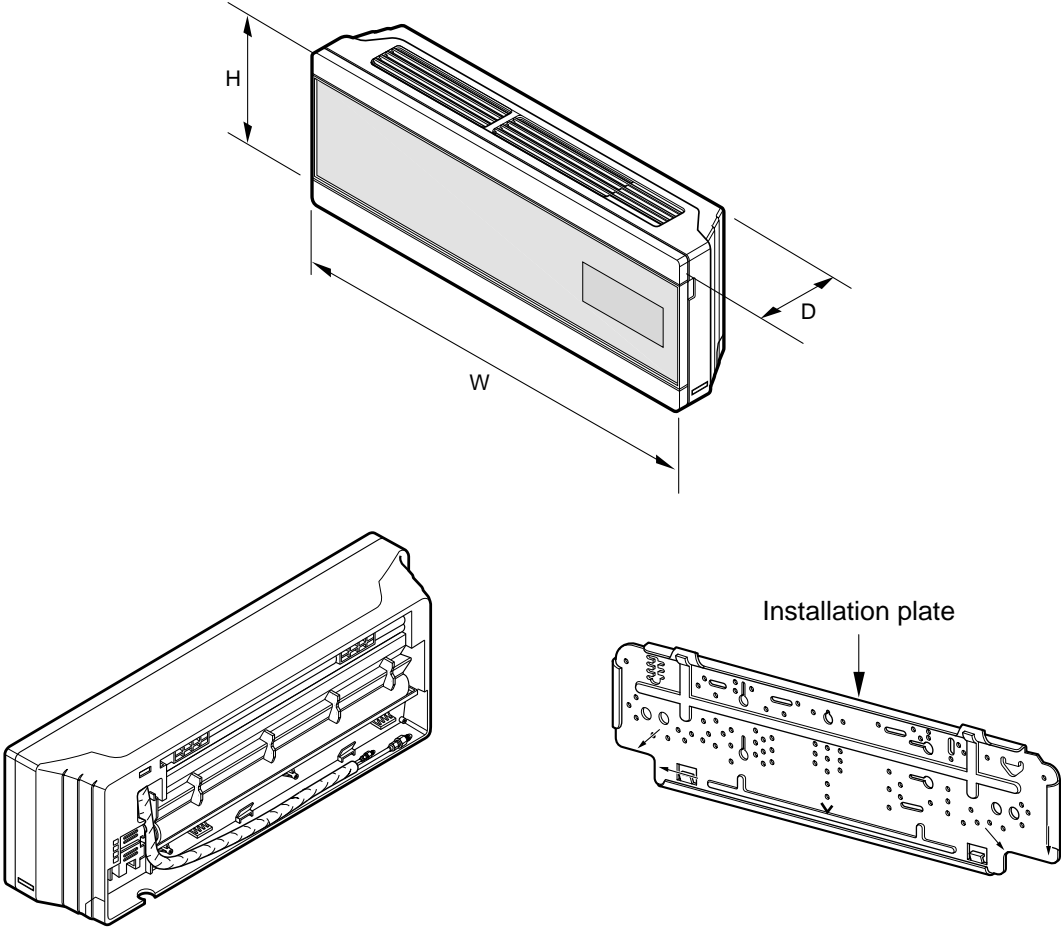

MODEL		14K Btu Series
DIM	Unit	
W	mm	1030
H	mm	290
D	mm	153




## (2) Outdoor Unit

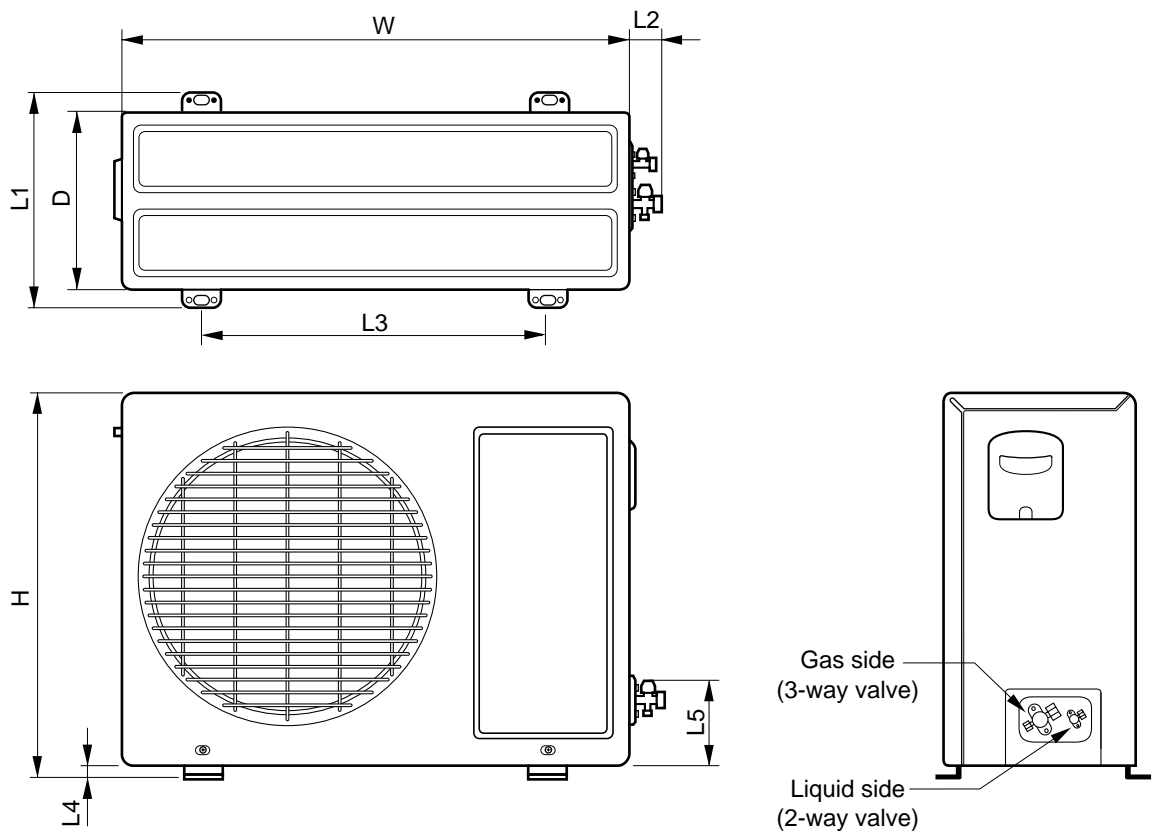


MODEL		14K Btu Series
DIM	unit	
W	mm	770
H	mm	540
D	mm	245
L1	mm	287
L2	mm	64
L3	mm	518
L4	mm	10
L5	mm	100

# Refrigeration Cycle Diagram

## (1) Cooling Only Models

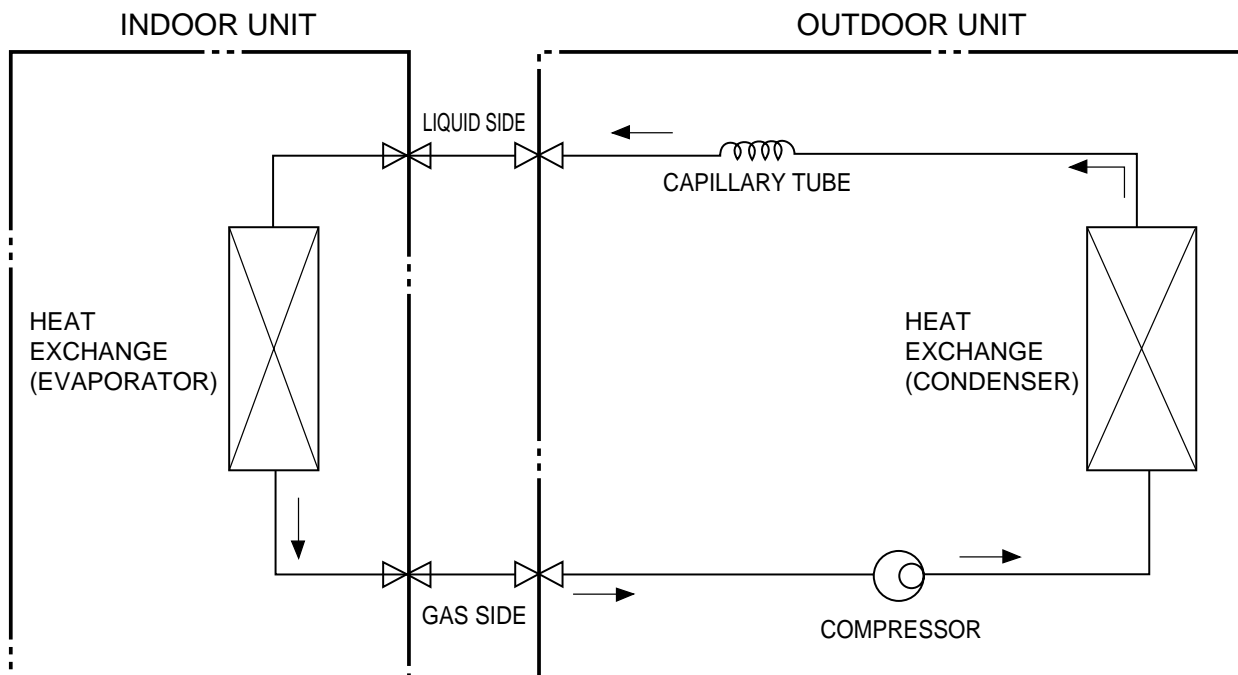


## (2) Cooling & Heating Models

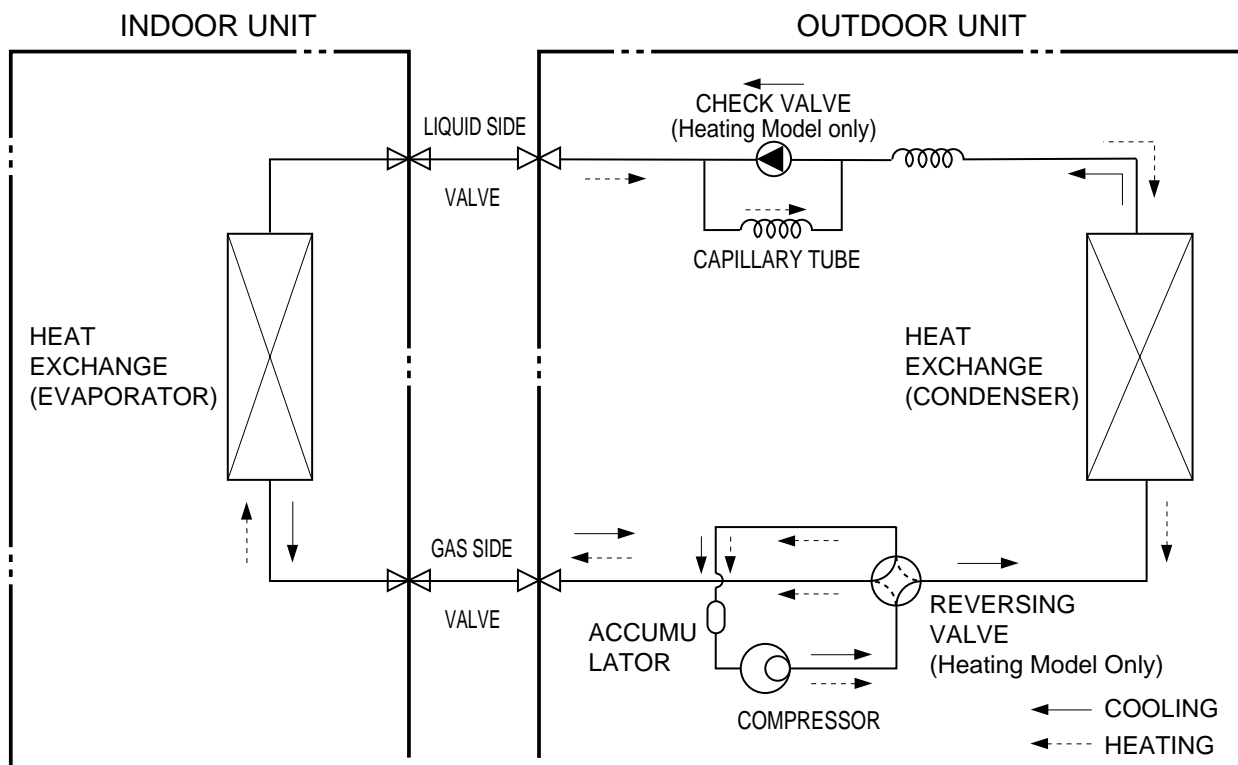


# Wiring Diagram

## (1) Indoor Unit


LS-135GB/GM/GR/LS-1351GB/GM/GR

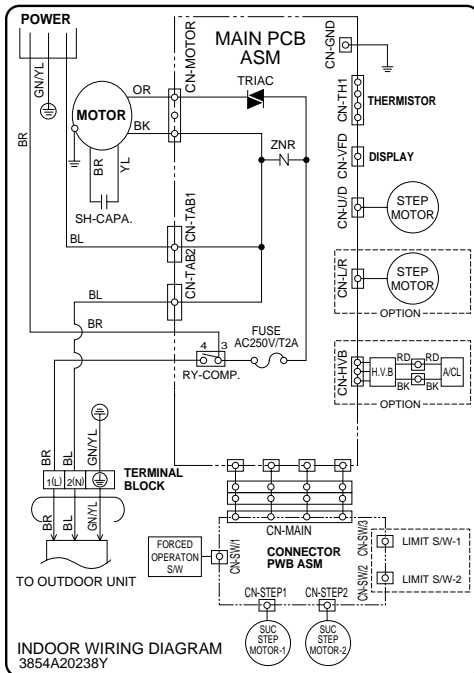

LS-1352GB/GC/GD/GM/GR/GW  
LS-1202GB/GC/GD/GM/GR/GW  
LS-1262GB/GC/GD/GR/GW  
C142CM/CR

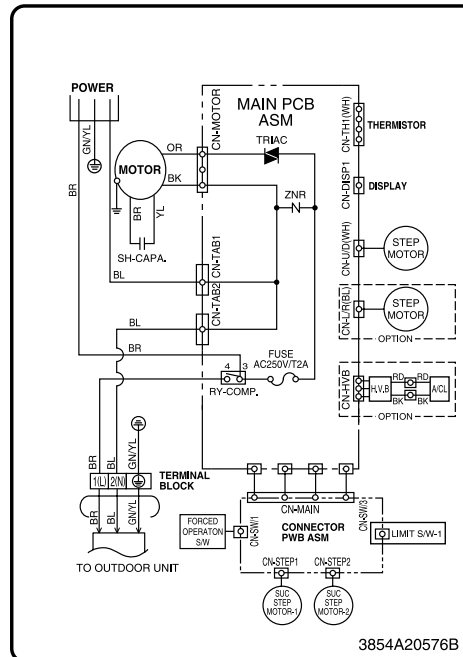

## (2) Outdoor Unit

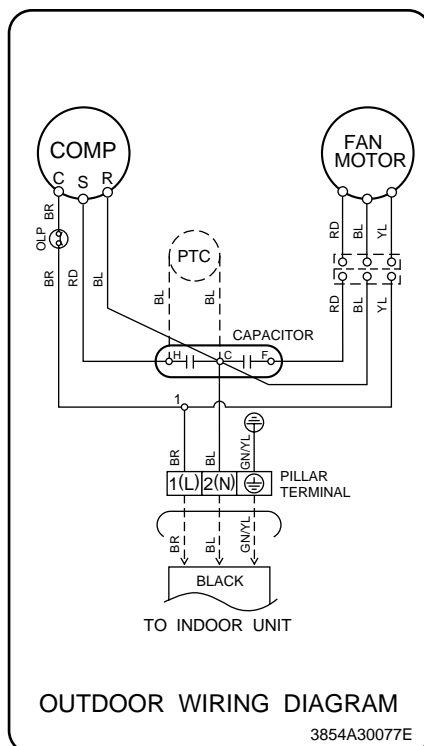

# Operation Details

---

## 1. MAIN UNIT FUNCTION

### • DISPLAY

#### 1) C/O Model

##### Operation Indicator

- ON while in appliance operation, OFF while in appliance pause.
- Flashing while in disconnection or short in Thermistor. (3 sec off / 0.5 sec on)

##### Sleep Timer Indicator

- ON while in sleep timer mode, OFF when sleep timer cancel or appliance operation pause.

##### Timer Indicator

- ON while in timer mode (on/off), OFF when timer mode is completed or canceled.

##### Comp. Running Indicator

- While in appliance operation, ON while in outdoor unit compressor running, OFF while in compressor off.

#### 2) H/P Model

##### Operation Indicator

- ON while in appliance operation, OFF while in appliance pause.
- Flashing while in disconnection or short in Thermistor. (3 sec off / 0.5 sec on)

##### Sleep Timer Indicator

- ON while in sleep timer mode, OFF when sleep timer cancel or appliance operation pause.

##### Timer Indicator

- ON while in timer mode (on/off), OFF when timer mode is completed or canceled.

##### Defrost Indicator

- OFF except when hot start during heating mode operation or while in defrost control.

### ■ Cooling Mode Operation

- When the intake air temperature reaches 0.5°C below the setting temp, the compressor and the outdoor fan stop.
- When it reaches 0.5°C above the setting temp, they start to operate again.
  - Compressor ON Temp                      ➤ Setting Temp+0.5°C
  - Compressor OFF Temp                      ➤ Setting Temp-0.5°C
- While in compressor running, operating with the airflow speed set by the remote control. While in compressor not running, operating with the low airflow speed regardless of the setting.

### ■ Healthy Dehumidification Mode

- When the dehumidification operation input by the remote control is received, the intake air temperature is detected and the setting temp is automatically set according to the intake air temperature.
  - 26°C ≤ Intake Air Temp                      ➤ 25°C
  - 24°C ≤ Intake Intake Air Temp < 26°C                      ➤ Intake Air Temp-1°C
  - 18°C ≤ Intake Intake Air Temp < 24°C                      ➤ Intake Air Temp-0.5°C
  - Intake Air Temp < 18°C                      ➤ 18°C

- While in compressor off, the indoor fan repeats low airflow speed and pause.
- While the intake air temp is between compressor on temp. and compressor off temp., 10-min dehumidification operation and 4-min compressor off repeat.  
Compressor ON Temp.    ▶ Setting Temp+0.5°C  
Compressor OFF Temp.   ▶ Setting Temp-0.5°C
- In 10-min dehumidification operation, the indoor fan operates with the low airflow speed.

## ■ Heating Mode Operation

- When the intake air temp reaches +3°...above the setting temp, the compressor is turned off. When below the setting temp, the compressor is turned on.  
Compressor ON Temp.    ▶ Setting Temp.  
Compressor OFF Temp.   ▶ Setting Temp.+3°C
- While in compressor on, the indoor fan is off when the indoor pipe temp. is below 20°C, when above 28°C , it operates with the low or setting airflow speed. When the indoor pipe temp is between 20°C and 28°C, it operates with Super-Low(while in sleep mode, with the medium airflow speed).
- While in compressor off, the indoor fan is off when the indoor pipe temp is below 33°C, when above 35°C , it operates with the low airflow speed.
- If overloaded while in heating mode operation, in order to prevent the compressor from OLP operation, the outdoor fan is turned on/off according to the indoor pipe temp.
- While in defrost control, both of the indoor and outdoor fans are turned off.

## ■ Defrost Control

- While in heating mode operation in order to protect the evaporator pipe of the outdoor unit from freezing, reversed to cooling cycle to defrost the evaporator pipe of the outdoor unit.
- After 40 min heating mode operation, at 4 min interval, whether to carry out defrost control or not and the time of defrost control are determined according to the following conditions.
  - 1) While in heating mode operation, the maximum of the indoor pipe temperature is measured and it is compared with the present indoor pipe temperature to get the difference of the indoor pipe temperatures (=the maximum temperature of indoor pipe ? the present temperature of indoor pipe), according to which, whether to carry out defrost control or not is determined.
  - 2) According to the need of defrost control shown above and the elapsed time of heating mode operation at that moment, the defrost control time is determined.
  - 3) When the determined time of defrost control is below 7 min, heating mode operation continues without carrying out defrost control. According to the procedure stated above, the determination is made again. When the defrost control time is 7 min or longer, defrost control is then carried out.
- While in defrost control, the minimum temp of the indoor pipe is measured and it is compared with the present temp of the indoor pipe to get the difference of the indoor pipe temperatures (=the present temperature of the indoor pipe ? the minimum temperature of the indoor pipe). When the difference is 5°C or higher, defrost control is completed and heating mode operation is carried out.
- While in defrost control, if the defrost time determined before the start of defrost control is completed, defrost control stops and heating mode operation is carried out regardless of the above condition.
- When the indoor pipe temp is 42°C or above, defrost control is not carried out even if the condition is one of the defrost conditions above.
- While in defrost control, the compressor is on and the indoor fan, the outdoor fan, and the 4 way valve are off.

## ■ Fuzzy Operation (C/O Model)

- According to the temperature set by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.  
Compressor ON Temp                      ➤ Setting Temp + 0.5°C  
Compressor OFF Temp                    ➤ Setting Temp + 0.5°C
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.  
26°C ≤ Intake Air Temp                    ➤ 25°C  
24°C ≤ Intake Air Temp < 26°C           ➤ Intake Air Temp + 1°C  
22°C ≤ Intake Air Temp < 24°C           ➤ Intake Air Temp + 0.5°C  
18°C ≤ Intake Air Temp < 22°C           ➤ Intake Air Temp  
Intake Air Temp < 18°C                    ➤ 18°C
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is automatically selected according to the temperature.

## ■ Fuzzy Operation (H/P Model)

- When any of operation mode is not selected like the moment of the power on or when 3 hrs has passed since the operation off, the operation mode is selected.
- When determining the operation mode, the compressor, the outdoor fan, and the 4 way valve are off and only the indoor fan is operated for 15 seconds. Then an operation mode is selected according to the intake air temp at that moment as follows.  
24°C ≤ Intake Air Temp                    ➤ Fuzzy Operation for Cooling  
21°C ≤ Intake Air Temp < 24°C           ➤ Fuzzy Operation for Dehumidification  
Intake Air Temp < 21°C                    ➤ Fuzzy Operation for Heating
- If any of the operation modes among cooling / dehumidification / heating mode operations is carried out for 10 sec or longer before Fuzzy operation, the mode before Fuzzy operation is operated.

### 1) Fuzzy Operation for Cooling

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.  
Compressor ON Temp                      ➤ Setting Temp + 0.5°C  
Compressor OFF Temp                    ➤ Setting Temp + 0.5°C
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.  
26°C ≤ Intake Air Temp                    ➤ 25°C  
24°C ≤ Intake Air Temp < 26°C           ➤ Intake Air Temp + 1°C  
22°C ≤ Intake Air Temp < 24°C           ➤ Intake Air Temp + 0.5°C  
18°C ≤ Intake Air Temp < 22°C           ➤ Intake Air Temp  
Intake Air Temp < 18°C                    ➤ 18°C
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is automatically selected according to the temperature.

## 2) Fuzzy Operation for Dehumidification

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.

Compressor ON Temp	▷ Setting Temp + 0.5°C
Compressor OFF Temp	▷ Setting Temp+0.5°C
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.

26°C ≤ Intake Air Temp	▷ 25°C
24°C ≤ Intake Air Temp < 26°C	▷ Intake Air Temp+1°C
22°C ≤ Intake Air Temp < 24°C	▷ Intake Air Temp+0.5°C
18°C ≤ Intake Air Temp < 22°C	▷ Intake Air Temp
Intake Air Temp < 18°C	▷ 18°C
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan repeats the low airflow speed or pause as in dehumidification operation.

## 3) Fuzzy Operation for Heating

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 3°C or more above the setting temp, the compressor is turned off. When below the setting temp, the compressor is turned on.

Compressor ON Temp	▷ Setting Temp
Compressor OFF Temp	▷ Setting Temp + 3°C
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.

20°C ≤ Intake Air Temp	▷ Intake Air Temp + 0.5°C
Intake Air Temp < 20°C	▷ 20°C
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is set to the high or the medium according to the intake air temperature and the setting temperature.

## ■ Airflow Speed Selection

- The airflow speed of the indoor fan is set to high, medium, low, or chaos (auto) by the input of the airflow speed selection key on the remote control.

## ■ On-Timer Operation

- When the set time is reached after the time is input by the remote control, the appliance starts to operate.
- The timer LED is on when the on-timer is input. It is off when the time set by the timer is reached.
- If the appliance is operating at the time set by the timer, the operation continues.

## ■ Off-Timer Operation

- When the set time is reached after the time is input by the remote control, the appliance stops operating.
- The timer LED is on when the off-timer is input. It is off when the time set by the timer is reached.
- If the appliance is on pause at the time set by the timer, the pause continues.

## ■ Off-Timer ↔ On-Timer Operation


- When the set time is reached after the on/off time is input by the remote control, the on/off-timer operation is carried out according to the set time.

## ■ Sleep Timer Operation

- When the sleep time is reached after <1,2,3,4,5,6,7,0(cancel) hr> is input by the remote control while in appliance operation, the operation of the appliance stops.
- While the appliance is on pause, the sleep timer mode cannot be input.
- While in cooling mode operation, 30 min later since the start of the sleep timer, the setting temperature increases by 1°C. After another 30 min elapse, it increases by 1°C again.
- When the sleep timer mode is input while in cooling cycle mode, the airflow speed of the indoor fan is set to the low.
- When the sleep timer mode is input while in heating cycle mode, the airflow speed of the indoor fan is set to the medium.

## ■ Chaos Swing Mode

- By the Chaos Swing key input, the upper/lower vane automatically operates with the Chaos Swing or they are fixed to the desired direction.
- While in Chaos Swing mode, the angles of cooling and heating cycle operations are different.

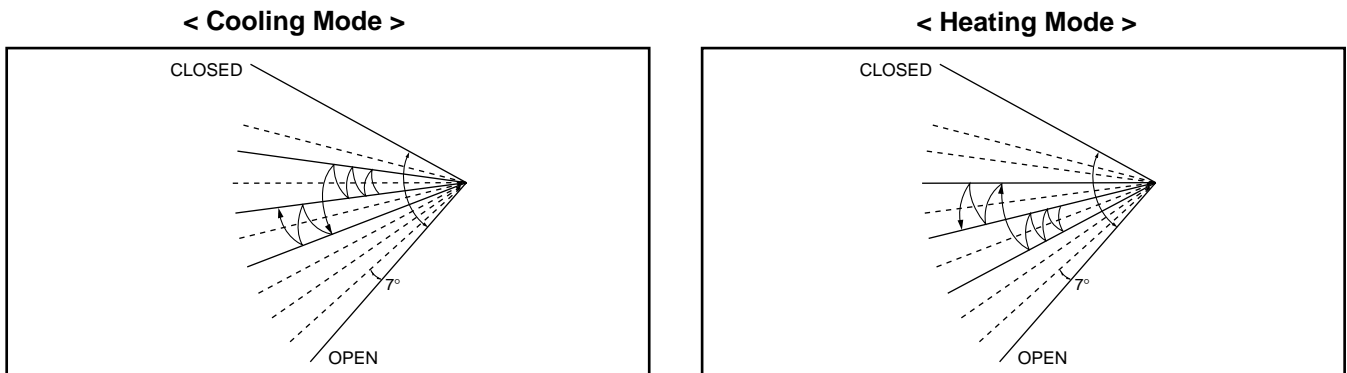

## ■ Chaos Natural Wind Mode

- When the Chaos Natural Wind mode is selected and then operated, the high, medium, or low speed of the airflow mode is operated for 2~15 sec. randomly by the Chaos Simulation.



## ■ Jet Cool Mode Operation (C/O Model)

- If the Jet Cool key is input at any operation mode while in appliance operation, the Jet Cool mode operates.
- In the Jet Cool mode, the indoor fan is operated at super-high speed for 30 min at cooling mode operation.
- In the Jet Cool mode operation, the room temperature is controlled to the setting temperature, 18°C
- When the sleep timer mode is input while in the Jet Cool mode operation, the Jet Cool mode has the priority.
- When the Jet Cool key is input, the upper/lower vanes are reset to those of the initial cooling mode and then operated in order that the air outflow could reach further.

## ■ Jet Cool Mode Operation (H/P Model)

- While in heating mode or Fuzzy operation, the Jet Cool key cannot be input. When it is input while in the other mode operation (cooling, dehumidification, ventilation), the Jet Cool mode is operated.
- In the Jet Cool mode, the indoor fan is operated at super-high speed for 30 min at cooling mode operation.
- In the Jet Cool mode operation, the room temperature is controlled to the setting temperature, 18°C.
- When the sleep timer mode is input while in the Jet Cool mode operation, the Jet Cool mode has the priority.
- When the Jet Cool key is input, the upper/lower vanes are reset to those of the initial cooling mode and then operated in order that the air outflow could reach further.

## ■ Forced Operation

- Operation procedures when the remote control can't be used.
- The operation will be started if the power button is pressed.
- If you want to stop operation, re-press the button.

	Cooling Model	Heat pump Model		
		Room Temp. $\geq 24^{\circ}\text{C}$	$21^{\circ}\text{C} \leq \text{Room Temp.} < 24^{\circ}\text{C}$	Room Temp. $< 21^{\circ}\text{C}$
Operating mode	Cooling	Cooling	Healthy Dehumidification	Heating
Indoor FAN Speed	High	High	High	High
Setting Temperature	22°C	22°C	23°C	24°C

- While in forced operation, the key input by the remote control has no effect and the buzzer sounds 10 times to indicate the forced operation.

## ■ Test operation

- During the TEST OPERATION, the unit operates in cooling mode at high speed fan, regardless of room temperature and resets in  $18 \pm 1$  minutes.
- During test operation, if remote controller signal is received, the unit operates as remote controller sets.  
If you want to use this operation, open the front panel upward and Press the power button let it be pressed for about 3 seconds.
- If you want to stop the operation, re-press the button.

## ■ Auto restart

- In case the power comes on again after a power failure, Auto Restarting Operation is the function to operate procedures automatically to the previous operating conditions.

## ■ Air Cleaner Operation

- When an air cleaner function is selected during Air Conditioner operation
  - Plasma air cleaner function will be operated while in any operation mode with selecting the function.
  - The function is to be stopped while it is operating with selecting the function.
- When an air cleaner function is selected during operation off
  - The function will be only operated.
- When inlet grille of air conditioner is opened during plasma operation, High Voltage Generator(H.V.B) is to be stopped. When inlet grille of air conditioner is closed during plasma operation, High Voltage Generator(H.V.B) will be operated again.

## ■ Remote Control Operation Mode

- When the remote control is selected by the slide switch on the main unit, the appliance operates according to the input by the remote control.

## ■ Protection of the evaporator pipe from frosting

- If the indoor pipe temp is below 0°C in 7 min. after the compressor operates without any pause while in cooling cycle operation mode, the compressor and the outdoor fan are turned off in order to protect the indoor evaporator pipe from frosting.
- When the indoor pipe temp is 7°C or higher after 3 min. pause of the compressor, the compressor and the outdoor fan is turned on according to the condition of the room temperature.

## ■ Auto Clean

- Open the door on the remote control. Press the Auto Clean Button.  
Close the door on the remote control. Now each time that you press the start/stop button, the Air conditioner operates clean function automatically.

## ■ Display Luminosity

- The Display Luminosity can be adjusted by using the remote control.  
Press the start/stop button to start the unit. Open the door on the remote control, press the 2ndF button and, press display luminosity button. Display will be dark. Press the button again to set bright display.


## ■ Buzzer Sounding Operation

- When the appliance-operation key is input by the remote control, the short "beep" sounds.
- When the appliance-pause key is input by the remote control, the long "beep—" sounds.
- When an except operation and pause key is input by the remote control, the short "beep" sounds.

# Display Function

## Signal Receptor

Each Icon turns on when the unit is operated, then the only Icon outline to be operated is bright.

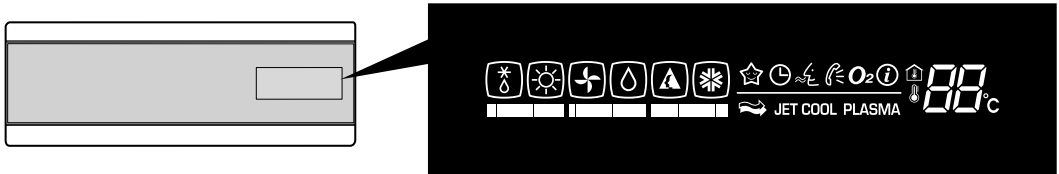

**Cooling Mode**

Lights up during Cooling operation. (Outline)



**Auto Operation Mode**

Lights up during Auto operation. (Outline)



**Healthy Dehumidification Mode**

Lights up during Healthy Dehumidification operation. (Outline)



**Heating Mode**

Lights up during Heating operation.  
(Heat Pump model only) (Outline)



**Defrost Mode**

Lights up during Defrost control or  
Hot Start in Heating operation. (Outline)



**Air circulation Mode**

Lights up during Air Circulation operation. (Outline)



**Sleep Mode**

Lights up during Sleep Mode operation.



**Timer Mode**

Lights up during Timer operation.



**Auto Cleaning Mode**

Lights up during Auto Cleaning reservation.

**JET COOL**

**Jet Cool Mode**

Lights up during Jet Cool Operation.

**PLASMA**

**Plasma**

Lights up during Plasma operation.



**Fan Speed (Low)**

Lights up when Fan speed is low.



**Fan Speed (Medium)**

Lights up when Fan speed is Medium.



**Fan Speed (High)**

Lights up when Fan speed is High.



**Fan Speed (Chaos)**

Lights up when Fan speed is Chaos.



**Desire temperature indicator**

For cooling,dehumidification,heating modes it display Desired temperature

- Cooling : 18~30°C
- Dehumidification : 18~30°C
- Heating : 16~30°C

• AI : Auto Operation

• Po : Jet Cool

• Lo : Test Mode

• C1 : Indoor pipe sensor error



**Desire temperature Icon**



**Indoor temperature Icon**


# Installation

## 1. Installation of indoor, Outdoor unit

### 1) Selection of the best location

#### 1. Indoor unit

- Do not have any heat or steam near the unit.
- Select a place where there are no obstacles in front of the unit.
- Make sure that condensation drainage can be conveniently routed away.  
Do not install near a doorway.
- Ensure that the space around the left and right of the unit is more than "A". The unit should be installed as high on the wall as possible, allowing a minimum of "B" from ceiling.
- Use a stud finder to locate studs to prevent unnecessary damage to the wall.

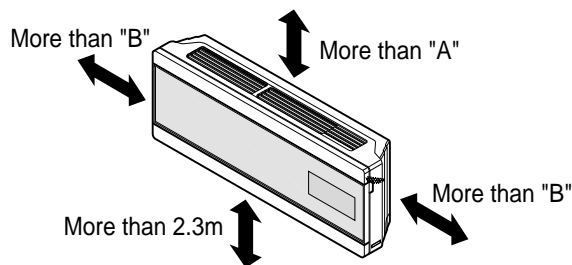

#### **CAUTION**


Install the indoor unit on the wall where the height from the floors more than 2.3 meters.

Grade	Clearance(cm)	
	A	B
7K~14K	10	5

#### 2. Outdoor unit




- If an awning is built over the unit to prevent direct sunlight or rain exposure, make sure that heat radiation from the condenser is not restricted.
- Ensure that the space around the back and sides is more than 10cm. The front of the unit should have more than 70cm of space.
- Do not place animals and plants in the path of the warm air.
- Take the air conditioner weight into account and select a place where noise and vibration are minimum.

- Select a place so that the warm air and noise from the air conditioner do not disturb neighbors.

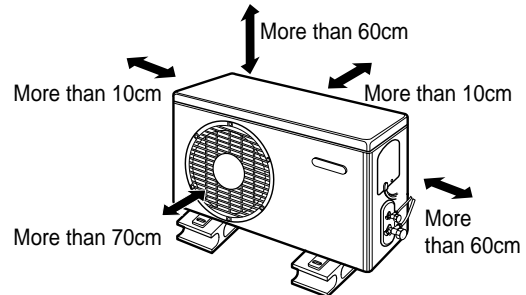

### 2) Piping length and elevation

Capacity (Btu/h)	Pipe Size		Standard Length (m)	Max. Elevation B (m)	Max. Length A (m)	Additional Refrigerant (g/m)
	GAS	LIQUID				
7k~14k	3/8"(Ø9.52)	1/4"(Ø6.35)	4 or 7.5	7	15	20
	1/2"(Ø12.7)	1/4"(Ø6.35)	4 or 7.5	7	15	20

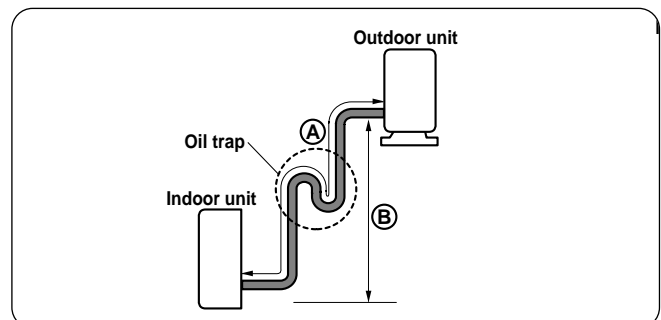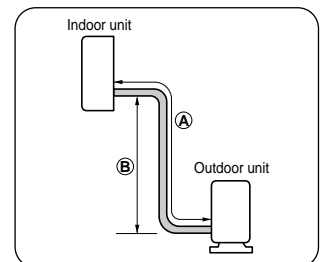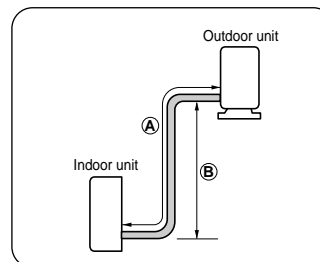

If case more than 5m

#### **CAUTION**


- Capacity is based on standard length and maximum allowance length is on the basis of reliability.
- Oil trap should be installed every 5~7 meters.

### 3) How to fix installation plate



The wall you select should be strong and solid enough to prevent vibration

#### 1. Mount the installation plate on the wall with four type A screws. If mounting the unit on a concrete wall, use anchor bolts.

- Mount the installation plate horizontally by aligning the centerline using a level.

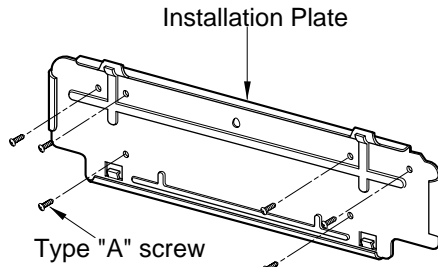


#### 2. Measure the wall and mark the centerline. It is also important to use caution concerning the location of the installation plate-routing of the wiring to power outlets is through the walls typically. Drilling the hole through the wall for piping connections must be done safely.

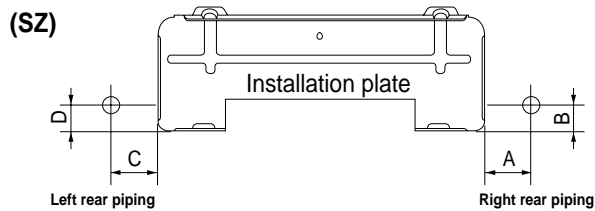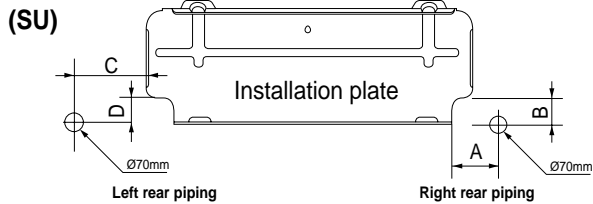

CHASSIS (Grade)	Distance (mm)			
	A	B	C	D
SU (11k~14k)	92	44	67	44
SZ (7k~9k)	35	33	156	33

### 4) Drill a hole in the wall

- Drill the piping hole with a  $\varnothing 70\text{mm}$  hole core drill. Drill the piping hole at either the right or the left with the hole slightly slanted to the outdoor side.

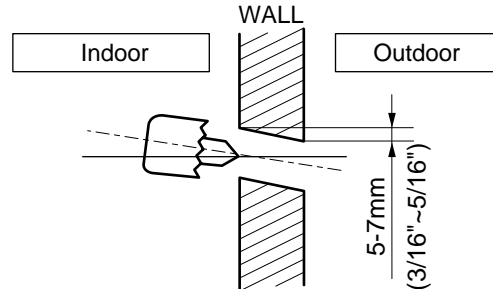


## 2. Flaring Work and Connection of Piping

### 1) Flaring work

Main cause for refrigerant leakage is due to defect in the flaring work. Carry out correct flaring work using the following procedure.


#### 1. Cut the pipes and the cable.

- Use the piping kit accessory or pipes purchased locally.
- Measure the distance between the indoor and the outdoor unit.
- Cut the pipes a little longer than the measured distance.
- Cut the cable 1.5m longer than the pipe length.

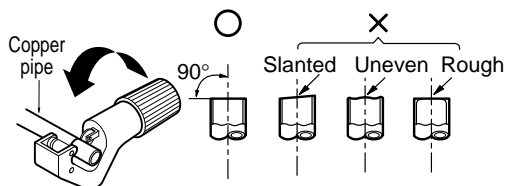


#### 2. Burr removal

- Completely remove all burrs from the cut cross section of pipe/tube.
- Put the end of the copper tube/pipe in a downward direction as you remove burrs in order to avoid dropping burrs into the tubing.

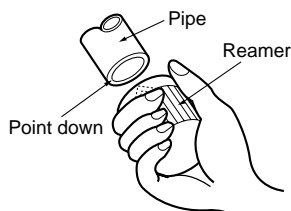


#### 3. Putting nut on

- Remove flare nuts attached to indoor and outdoor unit, then put them on pipe/tube having completed burr removal. (not possible to put them on after flaring work)

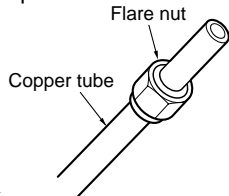

#### 4. Flaring work

- Firmly hold copper pipe in a die in the dimension shown in the table above.

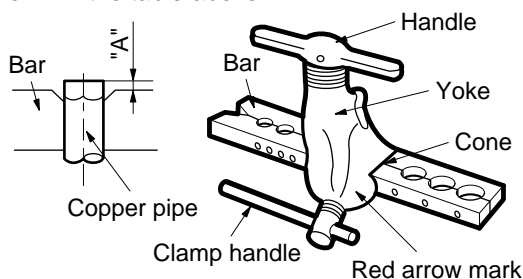


- Carry out flaring work using flaring tool as shown below.

Outside diameter		A
mm	inch	mm
Ø6.35	1/4	0~0.5
Ø9.52	3/8	0~0.5
Ø12.7	1/2	0~0.5
Ø15.88	5/8	0~1.0
Ø19.05	3/4	1.0~1.3


#### 5. Check

- Compare the flared work with figure below.
- If flare is noted to be defective, cut off the flared section and re-flare it.

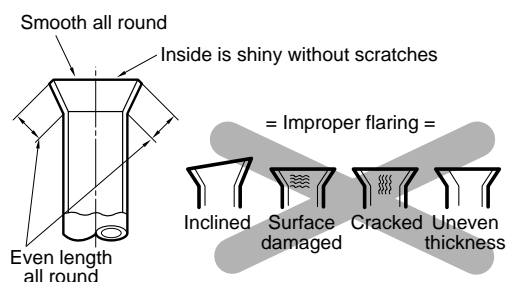


### 2) Connection of piping Indoor

- Preparing the indoor unit's piping and drain hose for installation through the wall.
- Remove the plastic tubing retainer(see illustration below) and pull the tubing and drain hose away from chassis.
- Replace the plastic tubing holder in the original position. (Optional)

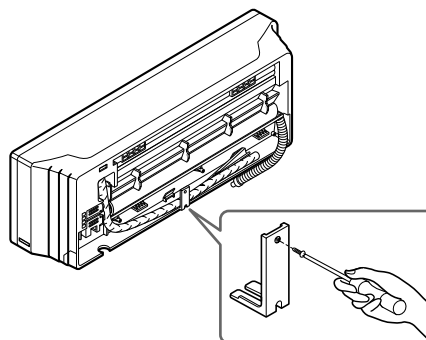

## For right rear piping


1. Route the indoor tubing and the drain hose in the direction of rear right.

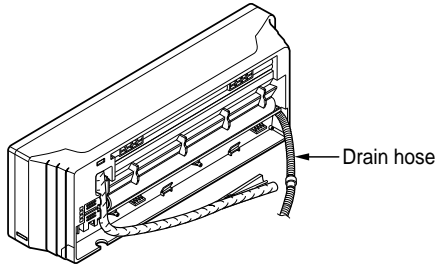

2. Insert the connecting cable into the indoor unit from the outdoor unit through the piping hole.

- Do not connect the cable to the indoor unit.
- Make a small loop with the cable for easy connection later.

3. Tape the tubing, drain hose, and the connecting cable. Be sure that the drain hose is located at the lowest side of the bundle. Locating at the upper side can cause drain pan to overflow inside the unit.

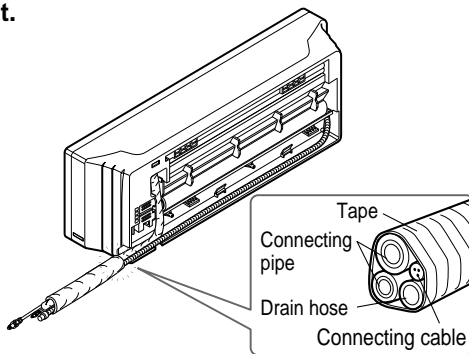


**NOTE:** If the drain hose is routed inside the room, insulate the hose with an insulation material\* so that dripping from "sweating"(condensation) will not damage furniture or floors.

\*Foamed polyethylene or equivalent is recommended.

## 4. Indoor unit installation


- Hook the indoor unit onto the upper portion of the installation plate.(Engage the two hooks of the rear top of the indoor unit with the upper edge of the installation plate.) Ensure that the hooks are properly seated on the installation plate by moving it left and right.

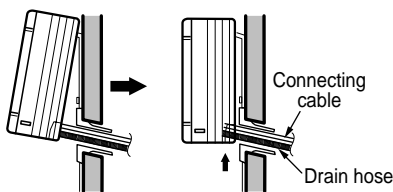


Press the lower left and right sides of the unit against the installation plate until the hooks engage into their slots(clicking sound).

4. Connecting the pipings to the indoor unit and drain hose to drain pipe.

- Align the center of the pipes and sufficiently tighten the flare nut by hand.




- Tighten the flare nut with a wrench.

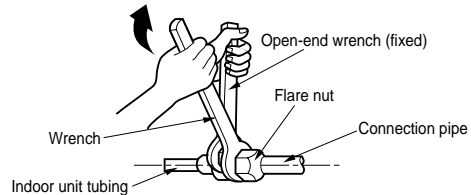


Outside diameter		Torque
mm	inch	kg-m
Ø6.35	1/4	1.8
Ø9.52	3/8	4.2
Ø12.7	1/2	5.5

- When extending the drain hose at the indoor unit, install the drain pipe.

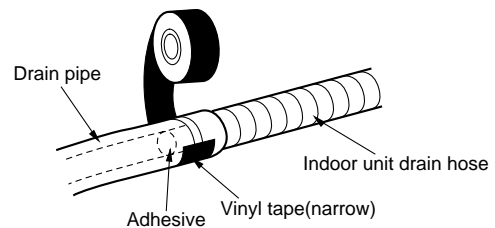


5. Wrap the insulation material around the connecting portion.


- Overlap the connection pipe insulation material and the indoor unit pipe insulation material. Bind them together with vinyl tape so that there is no gap.

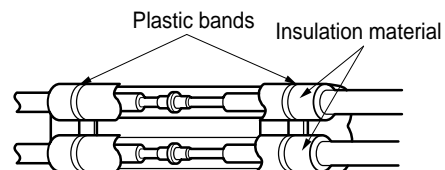

- Wrap the area which accommodates the rear piping housing section with vinyl tape.

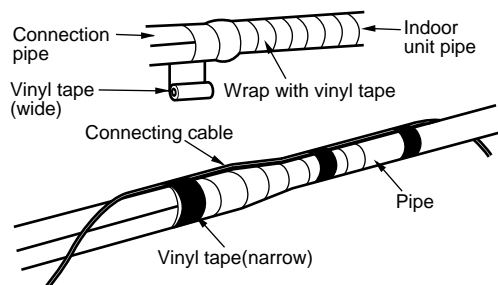


- Bundle the piping and drain hose together by wrapping them with vinyl tape for enough to cover where they fit into the rear piping housing section.

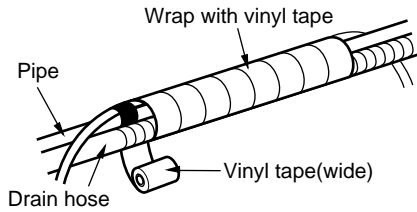


### For left rear piping

1. Route the indoor tubing and the drain hose to the required piping hole position.

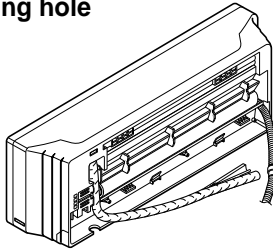

2. Insert the piping, drain hose, and the connecting cable into the piping hole.

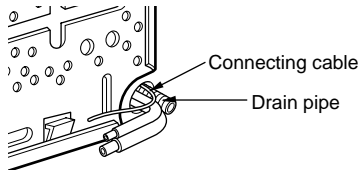


3. Insert the connecting cable into the indoor unit.

- Don't connect the cable to the indoor unit.
- Make a small loop with the cable for easy connection later.


4. Tape the drain hose and the connecting cable.

- Connecting cable

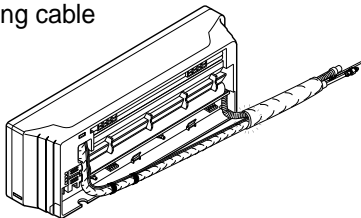


### 5. Indoor unit installation

- Hang the indoor unit from the hooks at the top of the installation plate.
- Insert the spacer etc. between the indoor unit and the installation plate and separate the bottom of the indoor unit from the wall.

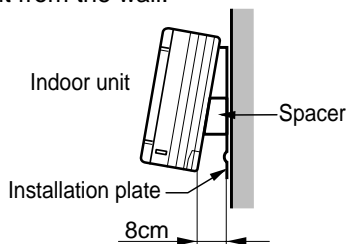


### 6. Connecting the pipings to the indoor unit and the drain hose to drain pipe.

- Align the center of the pipes and sufficiently tighten the flare nut by hand.

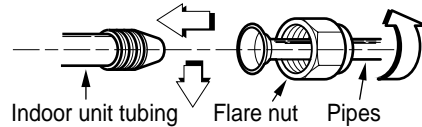


- Tighten the flare nut with a wrench.

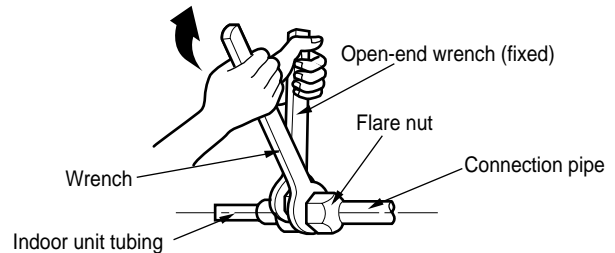


Outside diameter		Torque
mm	inch	kg-m
Ø6.35	1/4	1.8
Ø9.52	3/8	4.2
Ø12.7	1/2	5.5

- When extending the drain hose at the indoor unit, install the drain pipe.

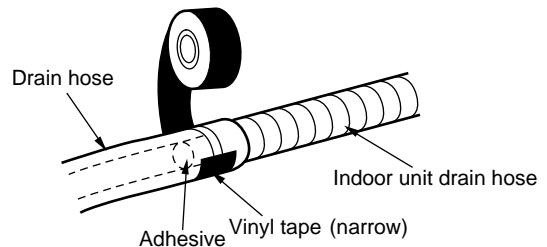


### 7. Wrap the insulation material around the connecting portion.

- Overlap the connection pipe heat insulation and the indoor unit pipe heat insulation material. Bind them together with vinyl tape so that there is no gap.

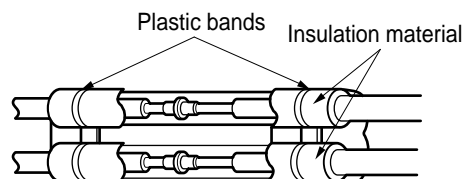





- Wrap the area which accommodates the rear piping housing section with vinyl tape.

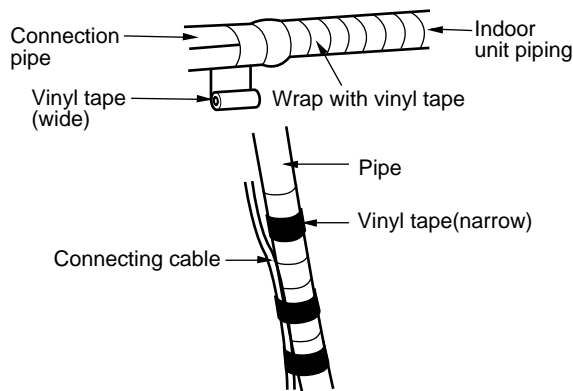

- Bundle the piping and drain hose together by wrapping them with cloth tape over the range within which they fit into the rear piping housing section.

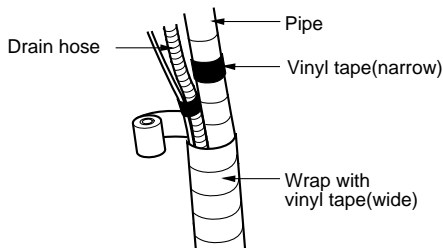


## 8. Reroute the pipings and the drain hose across the back of the chassis.

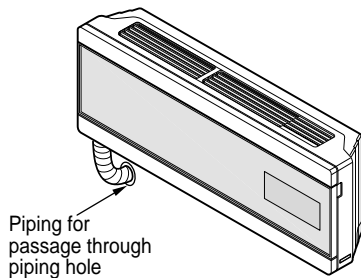


## 9. Set the pipings and the drain hose to the back of the chassis with the tubing holder.

- Hook the edge of tubing holder to tap on chassis and push the bottom of tubing holder to be engaged at the bottom of chassis.

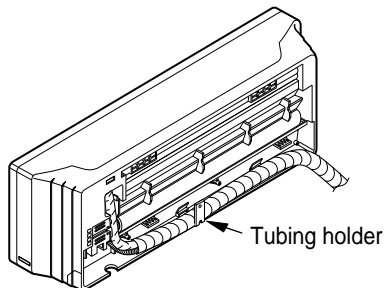

## 10. Indoor unit installation

- Remove the spacer.
- Ensure that the hooks are properly seated on the installation plate by moving it left and right.

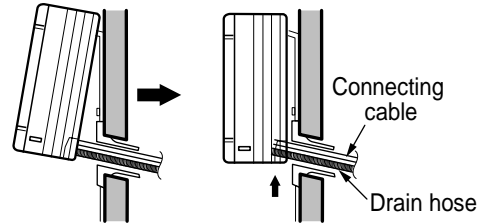

Press the lower left and right sides of the unit against the installation plate until the hooks engage into their slots (clicking sound).


### ⚠ CAUTION

#### Installation Information (For left piping)


##### • Good case

For left piping. Follow the instruction below.


- Press on the upper side of clamp. (A)

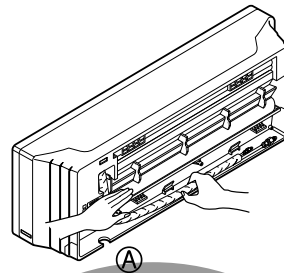

- Bend the tubing to the left side of chassis.

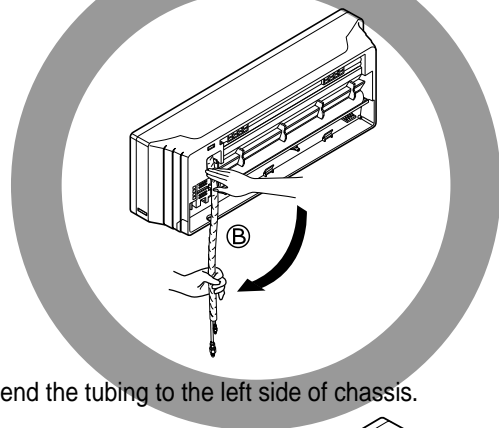




- Bend the tubing to the left side of chassis.

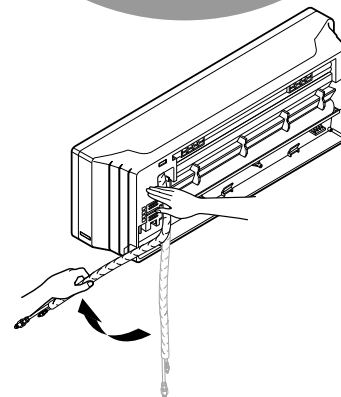

**CAUTION**


• **Bad case**

- Following bending type from right to left could cause problem of pipe damage.

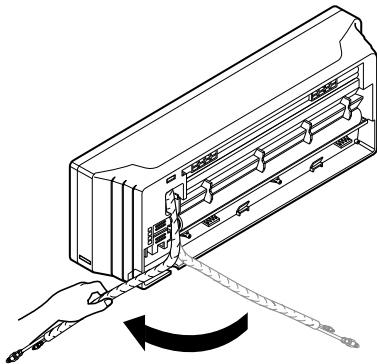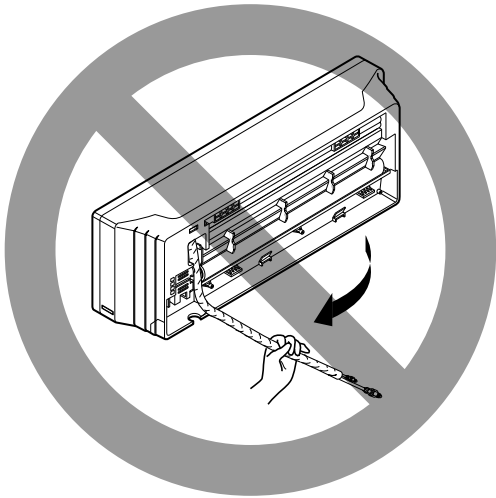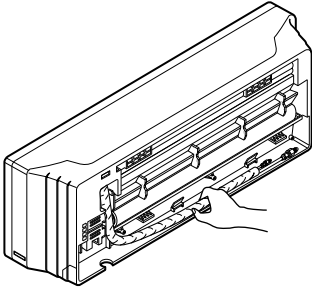

### 3) Connection of the pipes-Outdoor

1. Align the center of the pipings and sufficiently tighten the flare nut by hand.

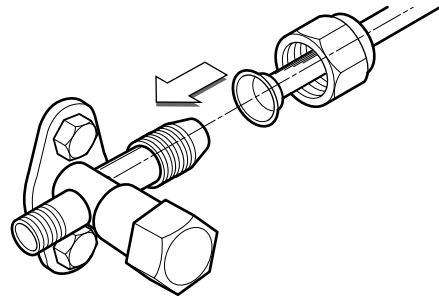


2. Finally, tighten the flare nut with torque wrench until the wrench clicks.

- When tightening the flare nut with torque wrench, ensure the direction for tightening follows the arrow on the wrench.

Outside diameter		Torque
mm	inch	kg-m
Ø6.35	1/4	1.8
Ø9.52	3/8	4.2
Ø12.7	1/2	5.5
Ø15.88	5/8	6.6
Ø19.05	3/4	6.6

#### Outdoor unit

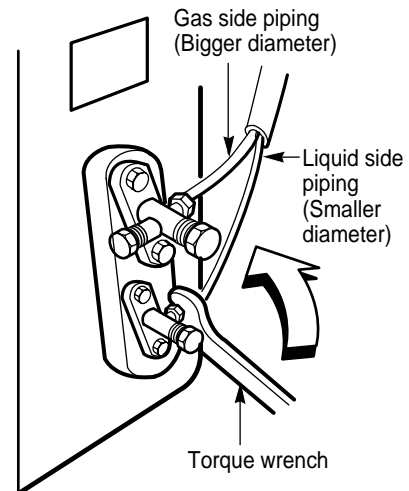

### 3. Connecting The Cable Between Indoor Unit and Outdoor Unit

#### 1) Connect the cable to the Indoor unit.

- Connect the cable to the indoor unit by connecting the wires to the terminals on the control board in **dividually according to the outdoor unit connection**. (Ensure that the color of the wires of the outdoor unit and the terminal No. are the same as those of the indoor unit.)

**The earth wire should be longer than the common wires.**

- When installing, refer to the circuit diagram on the Control Box of Indoor Unit.
- When installing, refer to the wiring diagram on the Control Cover Inside Outdoor Unit.

#### **CAUTION**

- The above circuit diagram is subject to change without notice.
- Be sure to connect wires according to the wiring diagram.
- Connect the wires firmly, so that not to be pulled out easily.
- Connect the wires according to color codes by referring the wiring diagram.

#### **CAUTION**

If a power plug is not to be used, provide a circuit breaker between power source and the unit as shown below.


Main power source

Air  
Conditioner

**Circuit Breaker**  
Use a circuit  
breaker or time  
delay fuse.

#### **CAUTION**

The power cord connected to the "A" unit should be complied with the following specifications (Type "B" approved by HAR or SAA).

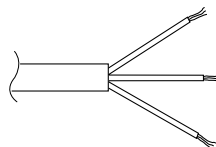


(mm<sup>2</sup>)

NORMAL CROSS -SECTIONAL AREA	Grade	
	5k~9k	12k~14K
	0.75	1.0
Unit(A)	Indoor	Indoor
Cable Type(B)	H05VV-F	H05VV-F


The power connecting cable connected to the indoor and outdoor unit should be complied with the following specifications

(Type "B" approved by HAR or SAA).

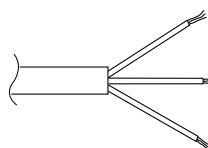

(mm<sup>2</sup>)

NORMAL CROSS -SECTIONAL AREA	Grade	
	7k~14k	1.0
	1.0	
Cable Type(B)	H07RN-F	




NORMAL  
CROSS-SECTIONAL  
AREA 0.75mm<sup>2</sup>

## 2) Connect the cable to the outdoor unit

1. Remove the control cover from the unit by loosening the screw.  
Connect the wires to the terminals on the control board individually.
2. Secure the cable onto the control board with the cord clamp.
3. Refix the control cover to the original position with the screw.
4. Use a recognized circuit breaker "A" between the power source and the unit.  
A disconnecting device to adequately disconnect all supply lines must be fitted.

Circuit Breaker (A)	Grade				
	7k~14k	18k	24k~28k	30k, 32k	36k, 38k
	15	20	30	30	40

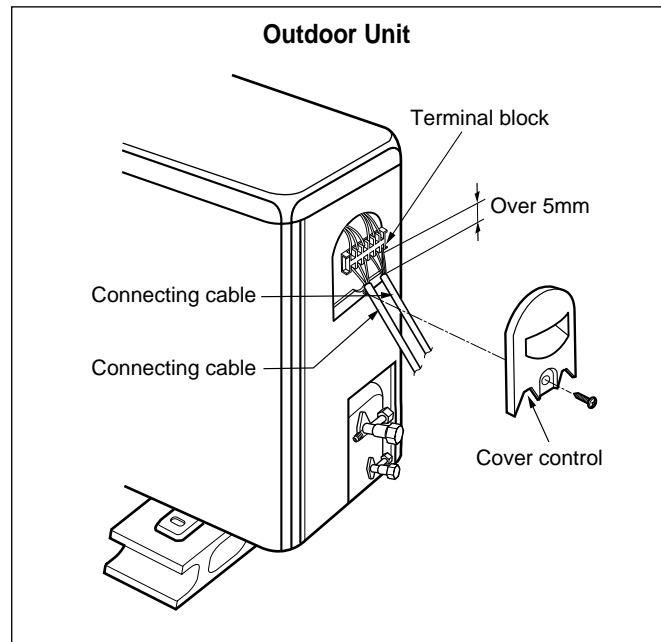

### CAUTION

After the confirmation of the above conditions, prepare the wiring as follows:


- 1) **Never fail to have an individual power circuit specifically for the air conditioner. As for the method of wiring, be guided by the circuit diagram posted on the inside of control cover.**
- 2) **The screw which fasten the wiring in the casing of electrical fittings are liable to come loose from vibrations to which the unit is subjected during the course of transportation. Check them and make sure that they are all tightly fastened. (If they are loose, it could cause burn-out of the wires.)**
- 3) **Specification of power source.**
- 4) **Confirm that electrical capacity is sufficient.**
- 5) **See to that the starting voltage is maintained at more than 90 percent of the rated voltage marked on the name plate.**
- 6) **Confirm that the cable thickness is as specified in the power source specification. (Particularly note the relation between cable length and thickness. (Refer to page 27))**
- 7) **Always install an earth leakage circuit breaker in a wet or moist area.**
- 8) **The following would be caused by voltage drop.**
  - Vibration of a magnetic switch, which will damage the contact point, fuse breaking, disturbance of the normal function of the overload.
- 9) **The means for disconnection from a power supply shall be incorporated in the fixed wiring and have an air gap contact separation of at least 3mm in each active(phase) conductors.**

## 4. Checking the Drainage and Forming the Pippings

### 1) Checking the drainage


#### 1. To remove the front panel from the indoor unit.

- Set the air direction louvers up-and-down to the position(horizontally) by hand.
- Remove the securing screws that retain the front panel. Pull the lower left and right sides of the grille toward you and lift it off.

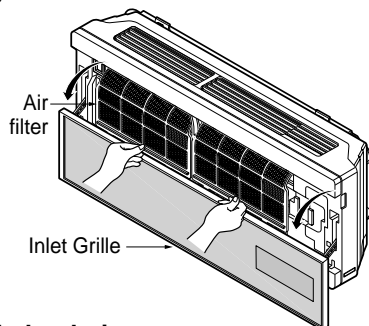


#### 2. To check the drainage.

- Pour a glass of water on the evaporator.
- Ensure the water flows through the drain hose of the indoor unit without any leakage and goes out the drain exit.

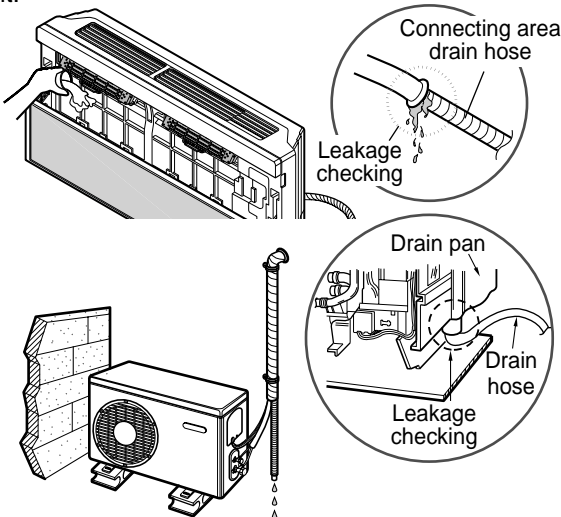


### 3. Drain piping

- The drain hose should point downward for easy drain flow.

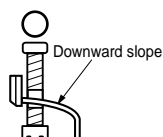

- Do not make drain piping.

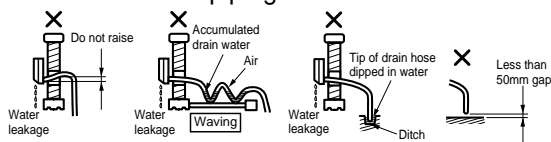


### 2) Form the piping

#### 1. Form the piping by wrapping the connecting portion of the indoor unit with insulation material and secure it with two kinds of vinyl tapes.

- If you want to connect an additional drain hose, the end of the drain outlet should be routed above the ground. Secure the drain hose appropriately.


#### 2. In cases where the outdoor unit is installed below the indoor unit perform the following.

- Tape the piping, drain hose and connecting cable from down to up.
- Secure the tapped piping along the exterior wall using saddle or equivalent.

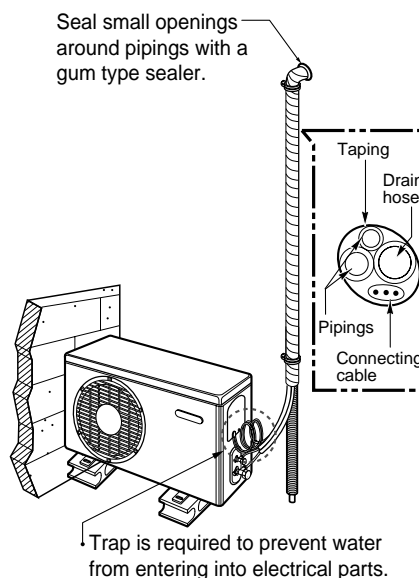

#### 3. In cases where the Outdoor unit is installed above the Indoor unit perform the following.

- Tape the piping and connecting cable from down to up.
- Secure the taped piping along the exterior wall. Form a trap to prevent water entering the room.
- Fix the piping onto the wall by saddle or equivalent.

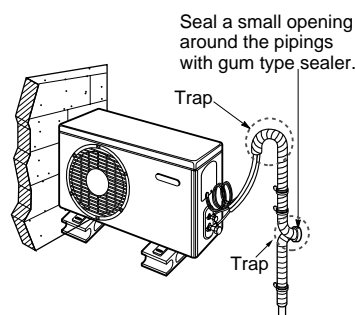

## 5. Air Purging

### 1) Air purging

Air and moisture remaining in the refrigerant system have undesirable effects as indicated below.

- Pressure in the system rises.
- Operating current rises.
- Cooling(or heating) efficiency drops.
- Moisture in the refrigerant circuit may freeze and block capillary tubing.
- Water may lead to corrosion of parts in the refrigeration system.

Therefore, the indoor unit and tubing between the indoor and outdoor unit must be leak tested and evacuated to remove any noncondensables and moisture from the system.

### 2) Air purging with vacuum pump

#### 1. Preparation

- Check that each tube(both liquid and gas side tubes) between the indoor and outdoor units have been properly connected and all wiring for the test run has been completed. Remove the service valve caps from both the gas and the liquid side on the outdoor unit. Note that both the liquid and the gas side service valves on the outdoor unit are kept closed at this stage.

#### 2. Leak test

- Connect the manifold valve(with pressure gauges) and dry nitrogen gas cylinder to this service port with charge hoses.

#### ⚠ CAUTION


Be sure to use a manifold valve for air purging. If it is not available, use a stop valve for this purpose. The "Hi" knob of the manifold valve must always be kept close.

- Pressurize the system to no more than 150 P.S.I.G. with dry nitrogen gas and close the cylinder valve when the gauge reading reached 150 P.S.I.G. Next, test for leaks with liquid soap.

#### ⚠ CAUTION

To avoid nitrogen entering the refrigerant system in a liquid state, the top of the cylinder must be higher than its bottom when you pressurize the system. Usually, the cylinder is used in a vertical standing position.

- Do a leak test of all joints of the tubing(both indoor and outdoor) and both gas and liquid side service valves.  
Bubbles indicate a leak. Be sure to wipe off the soap with a clean cloth.
- After the system is found to be free of leaks, relieve the nitrogen pressure by loosening the charge hose connector at the nitrogen cylinder. When the system pressure is reduced to normal, disconnect the hose from the cylinder.

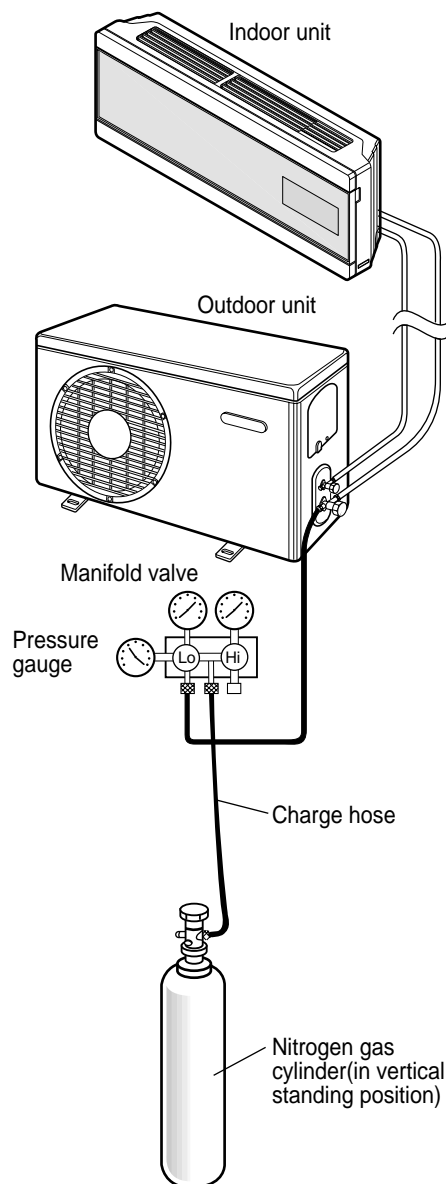

### Soap water method

- (1) Remove the caps from the 2-way and 3-way valves.
- (2) Remove the service-port cap from the 3-way valve.
- (3) To open the 2-way valve turn the valve stem counterclockwise approximately 90°, wait for about 2~3 sec, and close it.
- (4) Apply a soap water or a liquid neutral detergent on the indoor unit connection or outdoor unit connections by a soft brush to check for leakage of the connecting points of the piping.
- (5) If bubbles come out, the pipes have leakage.

### 3. Evacuation



- Connect the charge hose end described in the preceding steps to the vacuum pump to evacuate the tubing and indoor unit.
- Confirm the "Lo" knob of the manifold valve is open.
- Then, run the vacuum pump.
- The operation time for evacuation varies with tubing length and capacity of the pump. The following table shows the time required for evacuation.

Required time for evacuation when 30 gal/h vacuum pump is used	
If tubing length is less than 10m (33 ft)	if tubing length is longer than 10m (33 ft)
10 min. or more	15 min. or more

- When the desired vacuum is reached, close the "Lo" knob of the manifold valve and stop the vacuum pump.

### 4. Finishing the job

- With a service valve wrench, turn the valve stem of liquid side valve counter-clockwise to fully open the valve.
  - Turn the valve stem of gas side valve counter-clockwise to fully open the valve.
  - Loosen the charge hose connected to the gas side service port slightly to release the pressure, then remove the hose.
  - Replace the flare nut and its bonnet on the gas side service port and fasten the flare nut securely with an adjustable wrench. This process is very important to prevent leakage from the system.
  - Replace the valve caps at both gas and liquid side service valves and fasten them tight.
- This completes air purging with a vacuum pump.
- The air conditioner is now ready to test run.

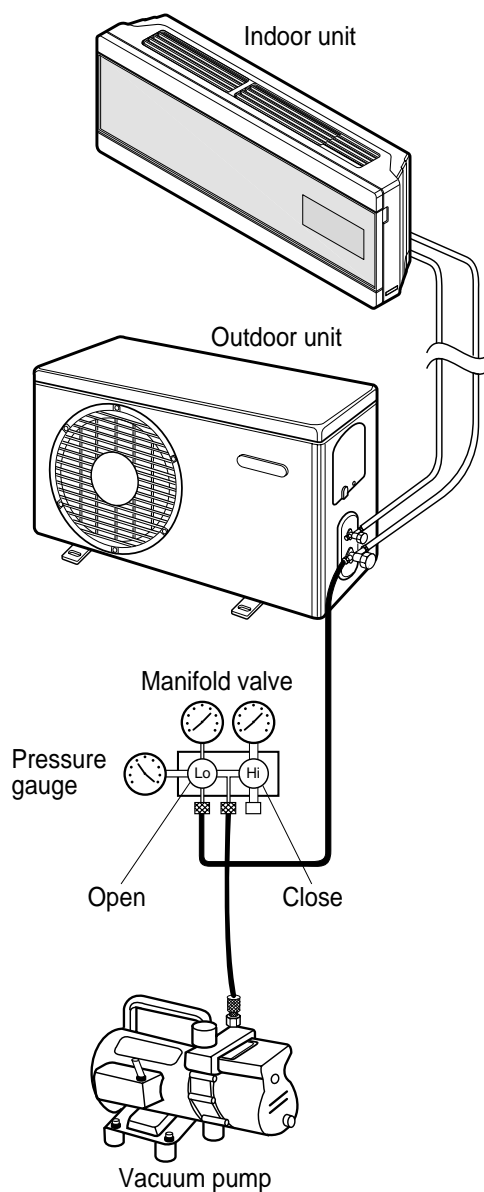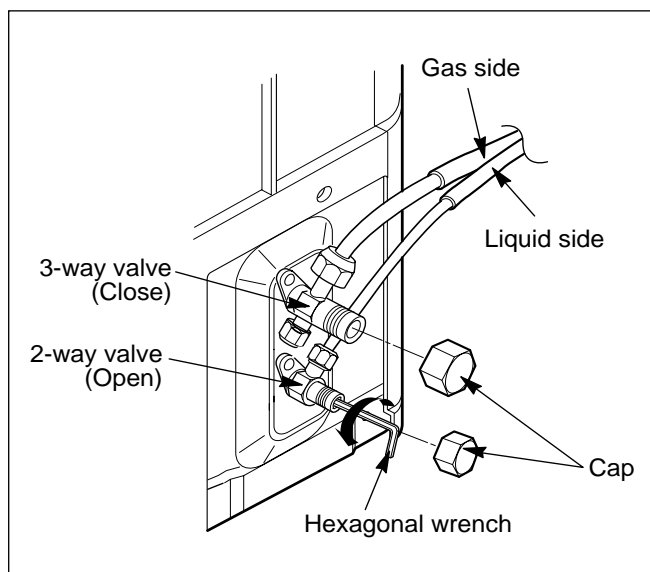


## 6. Test Running

1. Check that all tubing and wiring have been properly connected.
2. Check that the gas and liquid side service valves are fully open.

### 1. Prepare remote control

1. Remove the battery cover by pulling it according to the arrow direction.
2. Insert new batteries making sure that the (+) and (–) of battery are installed correctly.
3. Reattach the cover by pushing it back into position.

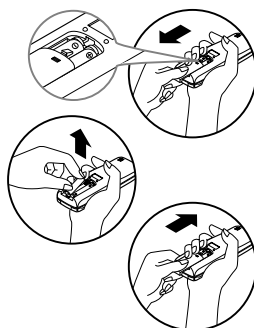


#### NOTE:

- Use 2 AAA(1.5volt) batteries. Do not use rechargeable batteries.
- Remove the batteries from the remote control if the system is not going to be used for a long time.

### 2. Settlement of outdoor unit


- Anchor the outdoor unit with a bolt and nut(ø10mm) tightly and horizontally on a concrete or rigid mount.
- When installing on the wall, roof or rooftop, anchor the mounting base securely with a nail or wire assuming the influence of wind and earthquake.
- In the case when the vibration of the unit is conveyed to the hose, secure the unit with an anti-vibration bushing.

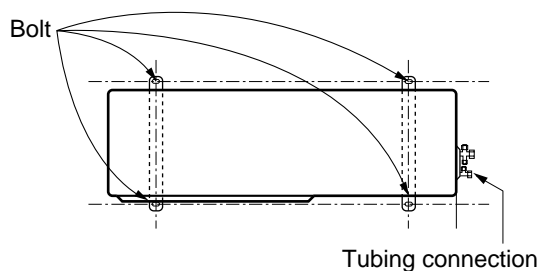

### 3. Evaluation of the performance

Operate unit for 15~20 minutes, then check the system refrigerant charge:

1. Measure the pressure of the gas side service valve.
2. Measure the temperature of the intake and discharge of air.
3. Ensure the difference between the intake temperature and the discharge is more than 8°C(46°F) (Cooling) or (Heating).

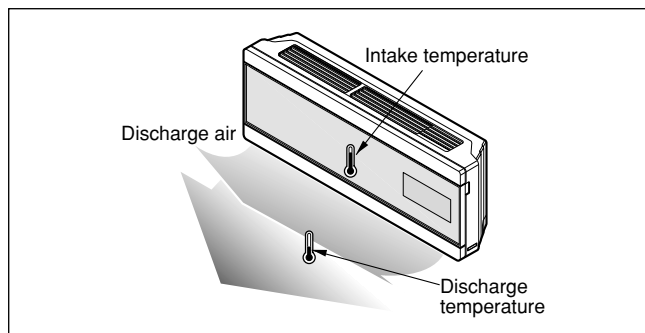

4. For reference; the gas side pressure of optimum condition is as below.(Cooling)

Refrigerant	Outside ambient TEMP.	The pressure of the gas side service valve.
R-22	35°C (95°F)	4~5kg/cm <sup>2</sup> G(56.8~71.0 P.S.I.G.)
R-410A	35°C (95°F)	8.5~9.5kg/cm <sup>2</sup> G(120~135 P.S.I.G.)

**NOTE:** If the actual pressure is higher than shown, the system is most likely over-charged, and charge should be removed. If the actual pressure are lower than shown, the system is most likely undercharged, and charge should be added.

The air conditioner is now ready for use.

### PUMP DOWN

**This is performed when the unit is to be relocated or the refrigerant circuit is serviced.**

Pump Down means collecting all refrigerant in the outdoor unit without loss in refrigerant gas.

#### CAUTION:

Be sure to perform Pump Down procedure with the unit cooling mode.

#### Pump Down Procedure



1. Connect a low-pressure gauge manifold hose to the charge port on the gas side service valve.
2. Open the gas side service valve halfway and purge the air from the manifold hose using the refrigerant gas.
3. Close the liquid side service valve(all the way in).
4. Turn on the unit's operating switch and start the cooling operation.
5. When the low-pressure gauge reading becomes 1 to 0.5kg/cm<sup>2</sup> G(14.2 to 7.1 P.S.I.G.), fully close the gas side valve stem and then quickly turn off the unit. At that time, Pump Down has been completed and all refrigerant gas will have been collected in the outdoor unit.



# Operation

## Name and Function-Remote Control

The remote control transmits the signals to the system.

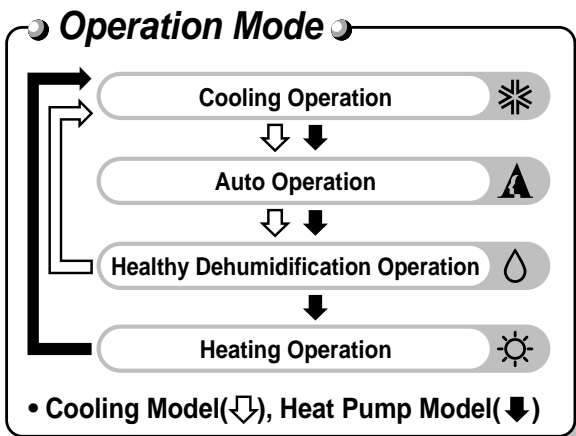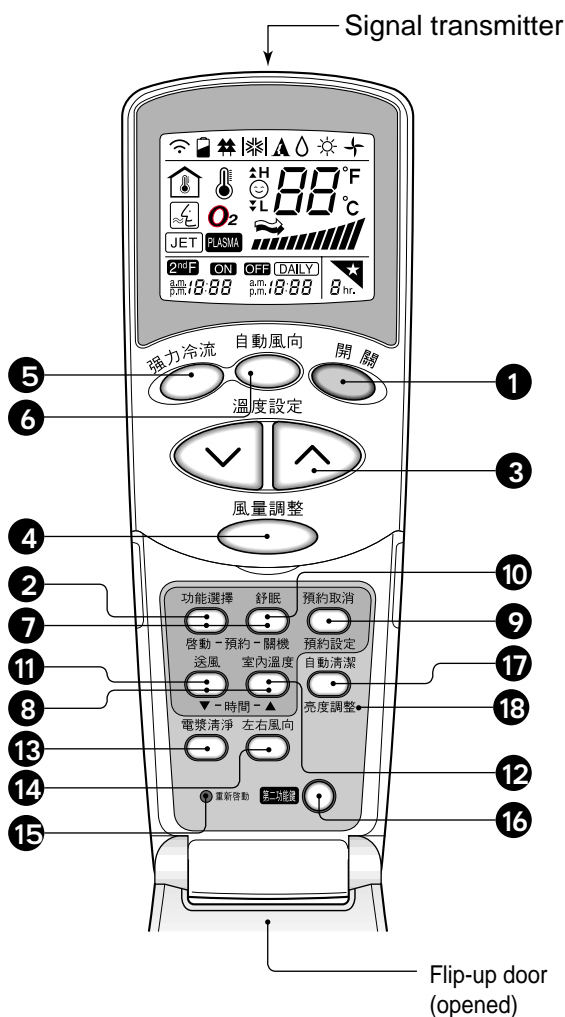

- 1 START/STOP BUTTON**  
Operation starts when this button is pressed and stops when the button is pressed again.
- 2 OPERATION MODE SELECTION BUTTON**  
Used to select the operation mode.
- 3 ROOM TEMPERATURE SETTING BUTTONS**  
Used to select the room temperature.
- 4 INDOOR FAN SPEED SELECTOR**  
Used to select fan speed in four steps low, medium, high and CHAOS.
- 5 JET COOL**  
Used to start or stop the speed cooling. (Speed cooling operates super high fan speed in cooling mode.)
- 6 CHAOS SWING BUTTON**  
Used to stop or start louver movement and set the desired up/down airflow direction.
- 7 ON/OFF TIMER BUTTONS**  
Used to set the time of starting and stopping operation.
- 8 TIME SETTING BUTTONS**  
Used to adjust the time.
- 9 TIMER SET/CANCEL BUTTON**  
Used to set the timer when the desired time is obtained and to cancel the Timer operation.
- 10 SLEEP MODE AUTO BUTTON**  
Used to set Sleep Mode Auto operation.
- 11 AIR CIRCULATION BUTTON**  
Used to circulate the room air without cooling or heating.
- 12 ROOM TEMPERATURE CHECKING BUTTON**  
Used to check the room temperature.
- 13 PLASMA(OPTIONAL)**  
Used to start or stop the plasma-purification function.
- 14 HORIZONTAL AIRFLOW DIRECTION CONTROL BUTTON (NOT ON ALL MODELS)**  
Used to set the desired horizontal airflow direction.
- 15 RESET BUTTON**  
Used prior to resetting time or after replacing batteries.
- 16 2nd F Button**  
Used prior to using modes printed in blue at the bottom of buttons.
- 17 AUTO CLEAN**  
Used to set Auto Clean mode.
- 18 LED LUMINOSITY**  
Used to adjust LED luminosity.



# Disassembly of the parts (Indoor unit)


## Warning :

Disconnect the unit from power supply before making any checks.


Be sure the power switch is set to "OFF".

## To remove the Grille from the Chassis.

- Hold up Inlet Grille Horizontally.
- To remove the Grille, pull the lower left and right side of the grille toward you (slightly tilted) and lift it straight upward.
- To separate connector assembly and then to remove Inlet Grille assembly.

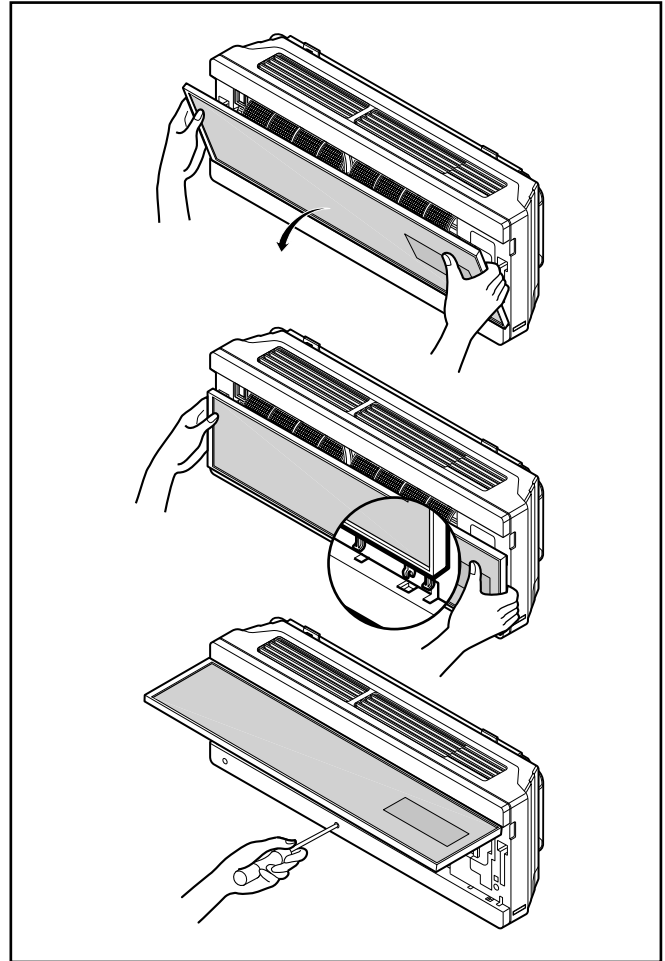


1. Before removing the control box, be sure to take out the wire screwed at the other end.

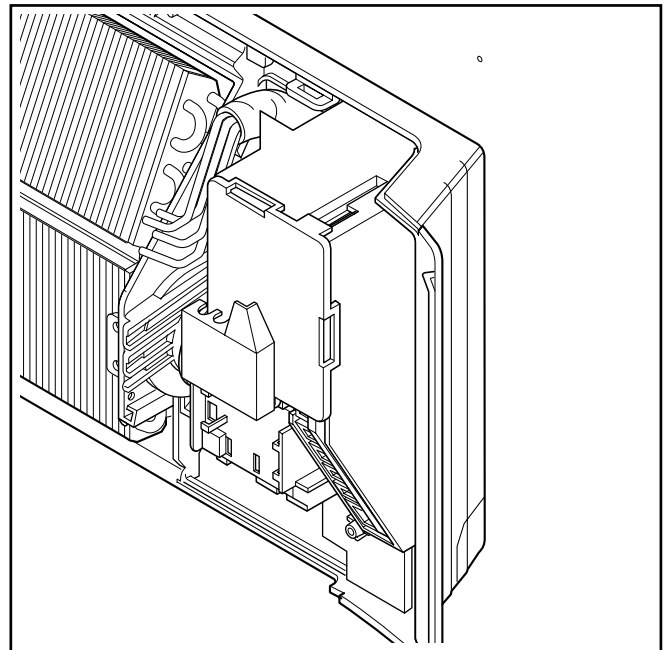

---


**2. To remove the Control Box.**

- Remove securing screws.
- Pull the control box out from the chassis carefully.

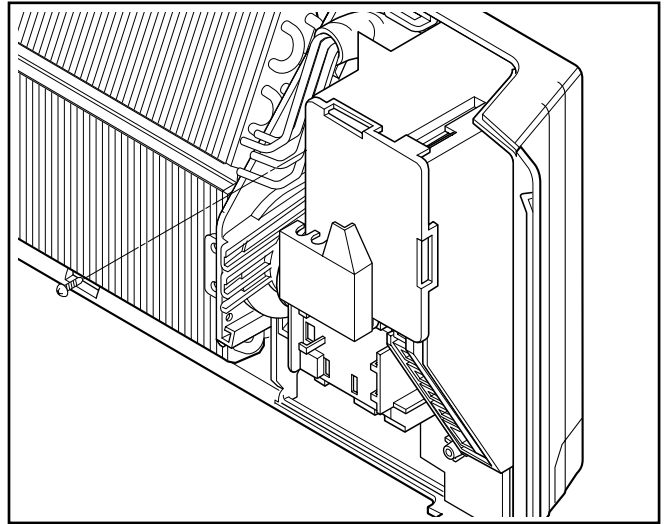


**3. To remove the Discharge Grille.**

- Unhook the discharge grille and pull the discharge grille out from the chassis carefully.

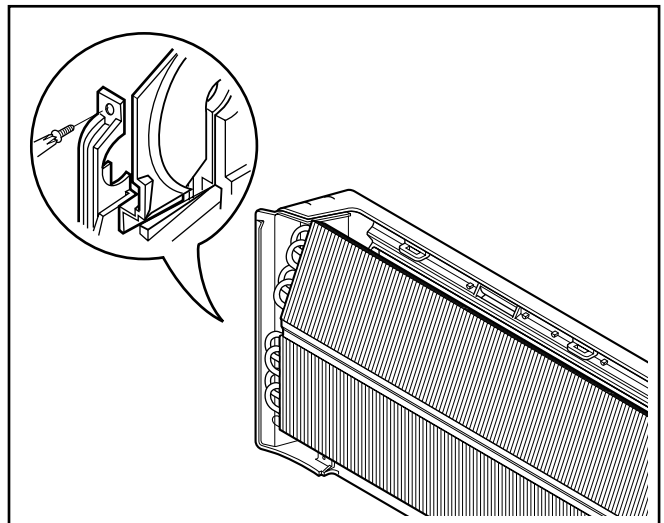


**4. To remove the Evaporator.**

- Remove 3 screws securing the evaporator(at the left 2EA in the Eva Holder, at the right 1EA).

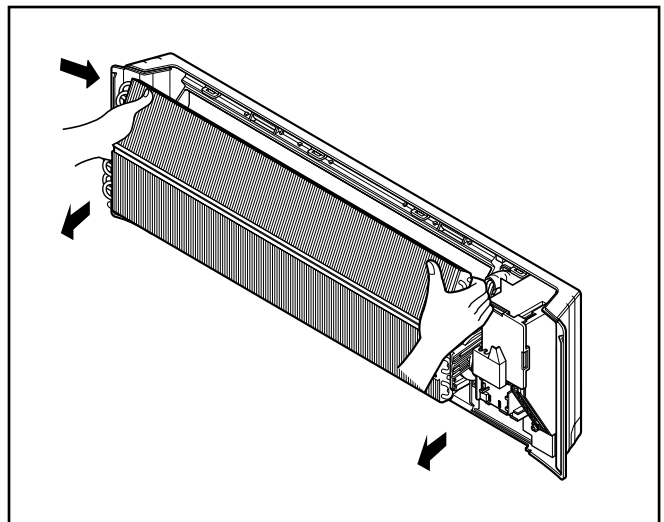


- Unhook the tab on the right inside of the chassis at the same time, slightly pull the evaporator toward you until the tab is clear of the slot.

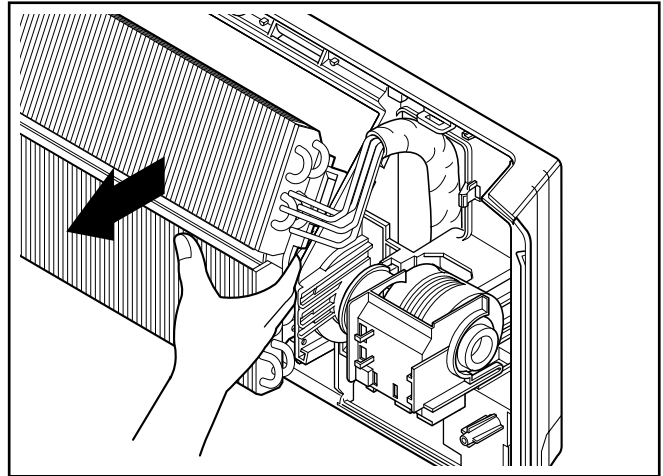


#### 5. To remove the Motor Cover

- Remove 2 securing screw.
- Pull the motor cover out from the chassis carefully.


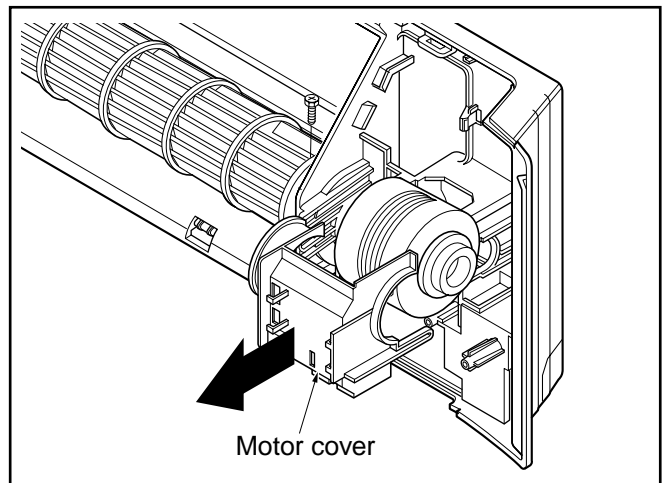


#### 6. To remove the Cross-Flow Fan

- Loosen the screw securing the cross-flow fan to the fan motor (do not remove).
  - Lift up the right side of the cross-flow fan and the fan motor, separate the fan motor from the cross-flow fan.
- 
- Remove the left end of the cross-flow fan from the self-aligning bearing.

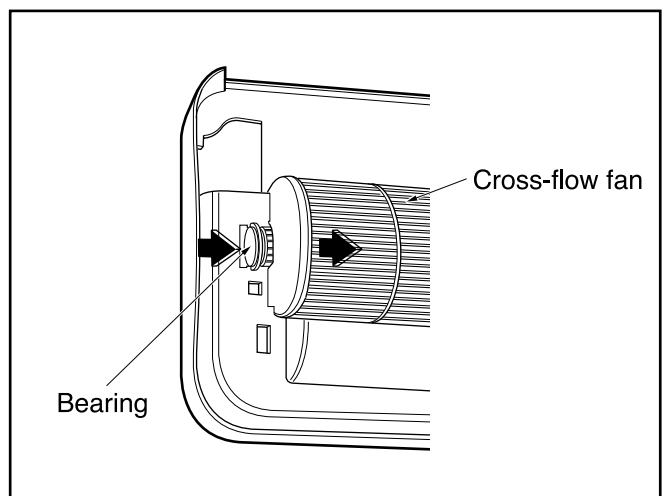

## 2-way, 3-way Valve

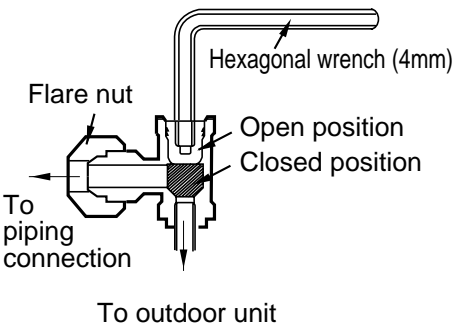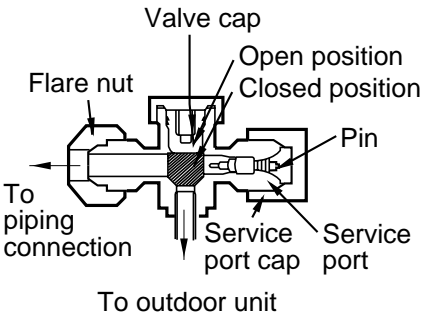		2-way Valve (Liquid Side)	3-way Valve (Gas Side)	
				
Works		Shaft position	Shaft position	Service port
Shipping		Closed (with valve cap)	Closed (with valve cap)	Closed (with cap)
1.	Air purging (Installation)	Open (counter-clockwise)	Closed (clockwise)	Open (push-pin or with vacuum pump)
Operation		Open (with valve cap)	Open (with valve cap)	Closed (with cap)
2.	Pumping down (Transferring)	Closed (clockwise)	Open (counter-clockwise)	Open (connected manifold gauge)
3.	Evacuation (Servicing)	Open	Open	Open (with charging cylinder)
4.	Gas charging (Servicing)	Open	Open	Open (with charging cylinder)
5.	Pressure check (Servicing)	Open	Open	Open (with charging cylinder)
6.	Gas releasing (Servicing)	Open	Open	Open (with charging cylinder)


## 1. Air purging (Only R-22 Model)

Required tools : hexagonal wrench, adjustable wrench, torque wrenches, wrench to hold the joints, and gas leak detector.

The additional gas for air purging has been charged in the outdoor unit.

However, if the flare connections have not be done correctly and there gas leaks, a gas cylinder and the charge set will be needed.

The air in the indoor unit and in the piping must be purged. If air remains in the refrigeration pipes, it will affect the compressor, reduce to cooling capacity, and could lead to a malfunction.

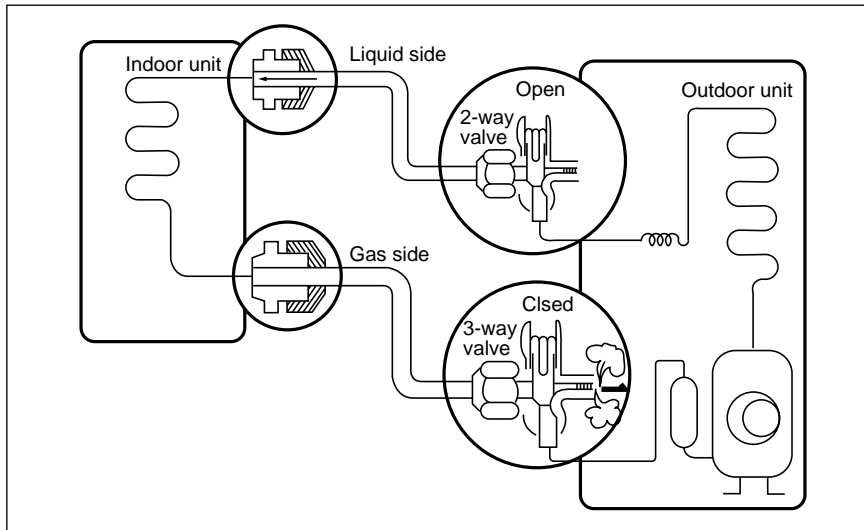

Service port nut:

Be sure, using a torque wrench to tighten the service port nut (after using the service port), so that it prevents the gas leakage from the refrigeration cycle.

\* ⚠ **CAUTION : Do not leak the gas in the air during Air purging.**

### • Procedure


- (1) Recheck the piping connections.
- (2) Open the valve stem of the 2-way valve counterclockwise approximately 90°, wait 10 seconds, and then set it to closed position.
  - Be sure to use a hexagonal wrench to operate the valve stem.
- (3) Check for gas leakage.
  - Check the flare connections for gas leakage.
- (4) Purge the air from the system.
  - Set the 2-way valve to the open position and remove the cap from the 3-way valve's service port.
  - Using the hexagonal wrench to press the valve core pin, discharge for three seconds and then wait for one minute. Repeat this three times.
- (5) Use torque wrench to tighten the service port nut to a torque of 1.8kg.cm.
- (6) Set the 3-way valve to the back seat.
- (7) Mount the valve stem nuts to the 2-way and 3-way valves.
- (8) Check for gas leakage.
  - At this time, especially check for gas leakage from the 2-way and 3-way valve's stem nuts, and from the service port nut.

### ⚠ Caution

If gas leakage are discovered in step (3) above, take the following mesures :

If the gas leaks stop when the piping connections are tightened further, continue working from step (4). If the gas leaks do not stop when the connections are retightened, repair the location of the leak, discharge all of the gas through the service port, and then recharge with the specified amount of gas from a gas cylinder.

## 2. Pumping down

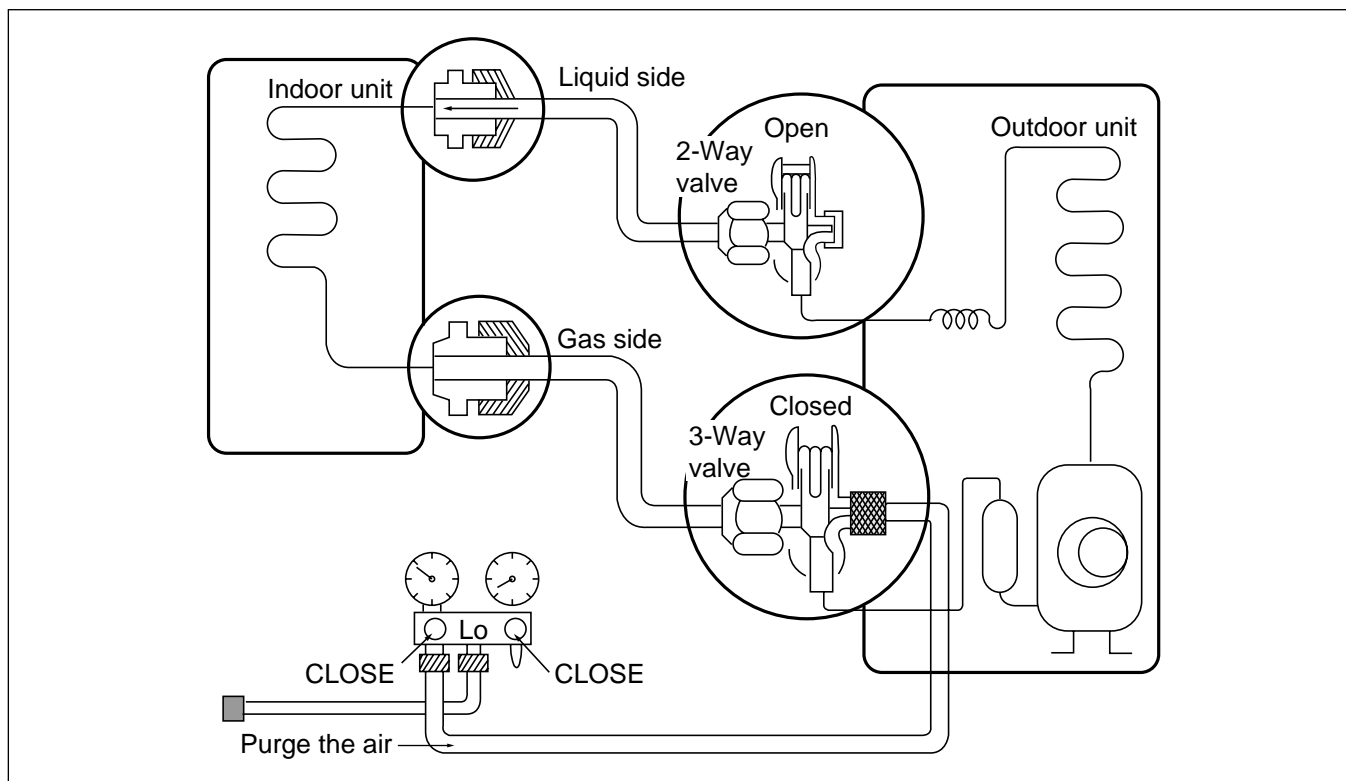

### • Procedure

**(1) Confirm that both the 2-way and 3-way valves are set to the open position.**

- Remove the valve stem caps and confirm that the valve stems are in the raised position.
- Be sure to use a hexagonal wrench to operate the valve stems.

**(2) Operate the unit for 10 to 15 minutes.**

**(3) Stop operation and wait for 3 minutes, then connect the charge set to the service port of the 3-way valve.**

- Connect the charge hose with the push pin to the service port.

**(4) Air purging of the charge hose.**

- Open the low-pressure valve on the charge set slightly to air purge from the charge hose.
- Refrigerant must be recovered.  
Don't vent the Refrigerant in the atmosphere.

**(5) Set the 2-way valve to the closed position.**

**(6) Operate the air conditioner at the cooling cycle and stop it when the gauge indicates 1kg/cm<sup>2</sup>g.**

**(7) Immediately set the 3-way valve to the closed position.**

- Do this quickly so that the gauge ends up indicating 3 to 5kg/cm<sup>2</sup>g.


**(8) Disconnect the charge set, and mount the 2-way and 3-way valve's stem nuts and the service port nut.**

- Use torque wrench to tighten the service port nut to a torque of 1.8 kg.m.
- Be sure to check for gas leakage.

### **CAUTION**

Do not use the existing charge set for R-22. It is necessary to use new charge set for R-410A. The pressure of R-410A is 1.6 times higher than that of R-22. Thus, the high pressure side gauge of charge set should be used higher pressure gauge of 50kg/cm<sup>2</sup> range.

### 3. Re-air purging (Re-installation)

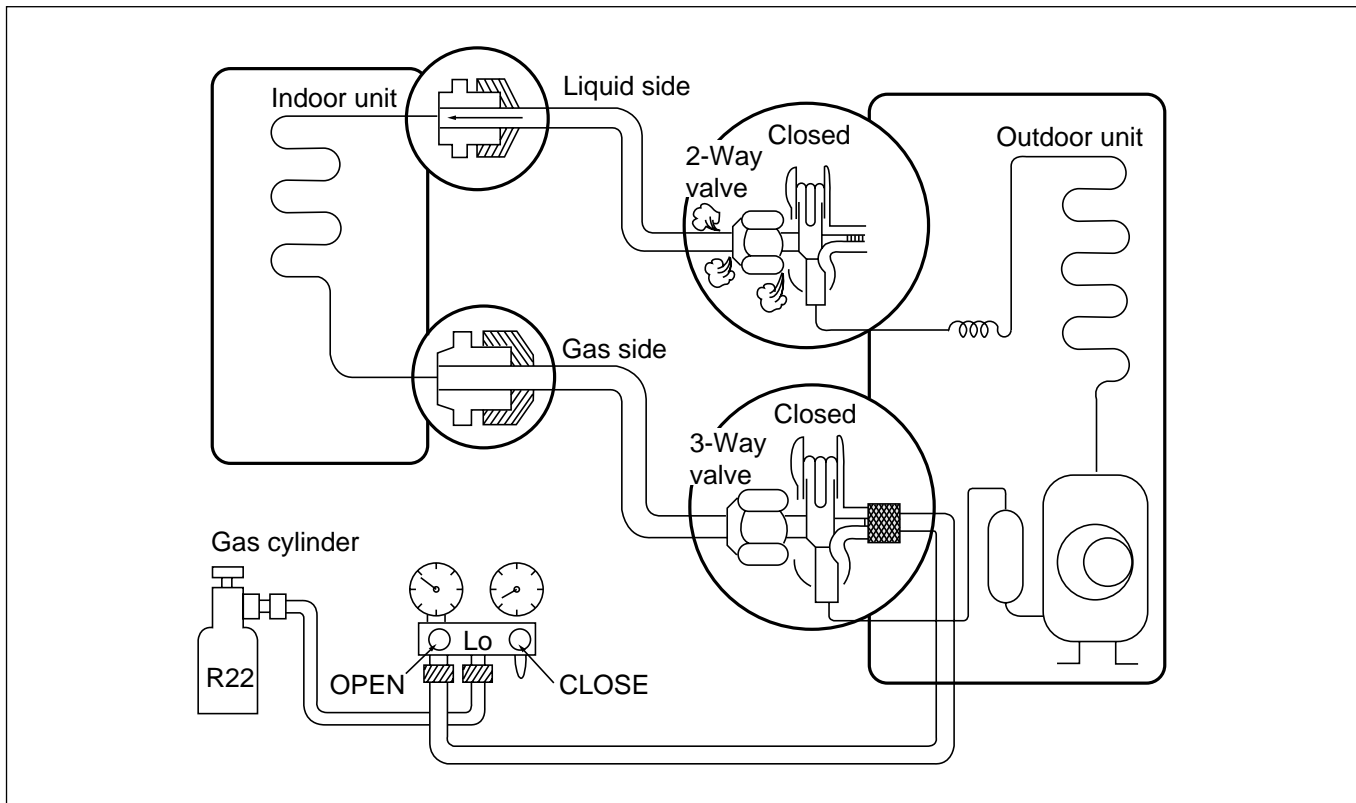

#### • Procedure


- (1) Confirm that both the 2-way valve and the 3-way valve are set to the closed position.
- (2) Connect the charge set and a gas cylinder to the service port of the 3-way valve.
  - Leave the valve on the gas cylinder closed.
- (3) Air purging.
  - Open the valves on the gas cylinder and the charge set. Purge the air by loosening the flare nut on the 2-way valve approximately 45° for 3 seconds then closing it for 1 minute; repeat 3 times.
  - After purging the air, use a torque wrench to tighten the flare nut on the 2-way valve.
- (4) Check for gas leakage.
  - Check the flare connections for gas leakage.
- (5) Discharge the refrigerant.
  - Close the valve on the gas cylinder and discharge the refrigerant until the gauge indicates 3 to 5 kg/cm<sup>2</sup>g.
- (6) Disconnect the charge set and the gas cylinder, and set the 2-way and 3-way valves to the open position.
  - Be sure to use a hexagonal wrench to operate the valve stems.
- (7) Mount the valve stem nuts and the service port nut.
  - Use torque wrench to tighten the service port nut to a torque of 1.8 kg.m.
  - Be sure to check for gas leakage.

\* **⚠ CAUTION:**  
Do not leak the gas in the air during Air Purging.



## 4. Balance refrigerant of the 2-way, 3-way valves

(Gas leakage)

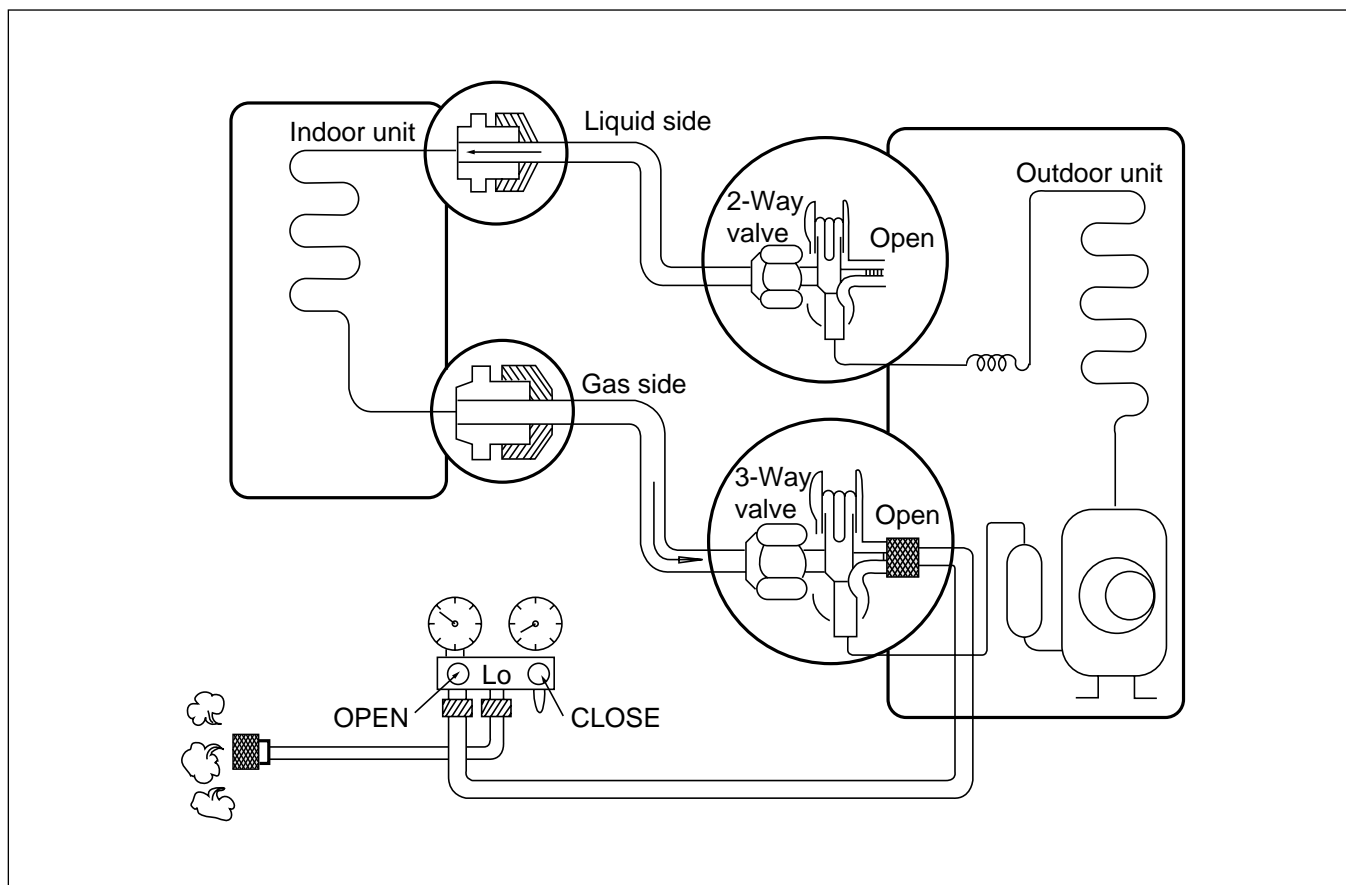

### • Procedure

(1) Confirm that both the 2-way and 3-way valves are set to the back seat.


(2) Connect the charge set to the 3-way valve's port.

- Leave the valve on the charge set closed.
- Connect the charge hose with the push pin to the service port.

(3) Open the valve (Lo side) on the charge set and discharge the refrigerant until the gauge indicates 0 kg/cm<sup>2</sup>G.

- If there is no air in the refrigerant cycle (the pressure when the air conditioner is not running is higher than 1 kg/cm<sup>2</sup>G), discharge the refrigerant until the gauge indicates 0.5 to 1 kg/cm<sup>2</sup>G. If this is the case, it will not be necessary to apply a vacuum.
- Discharge the refrigerant gradually; if it is discharged too suddenly, the refrigeration oil will also be discharged.

## 5. Evacuation

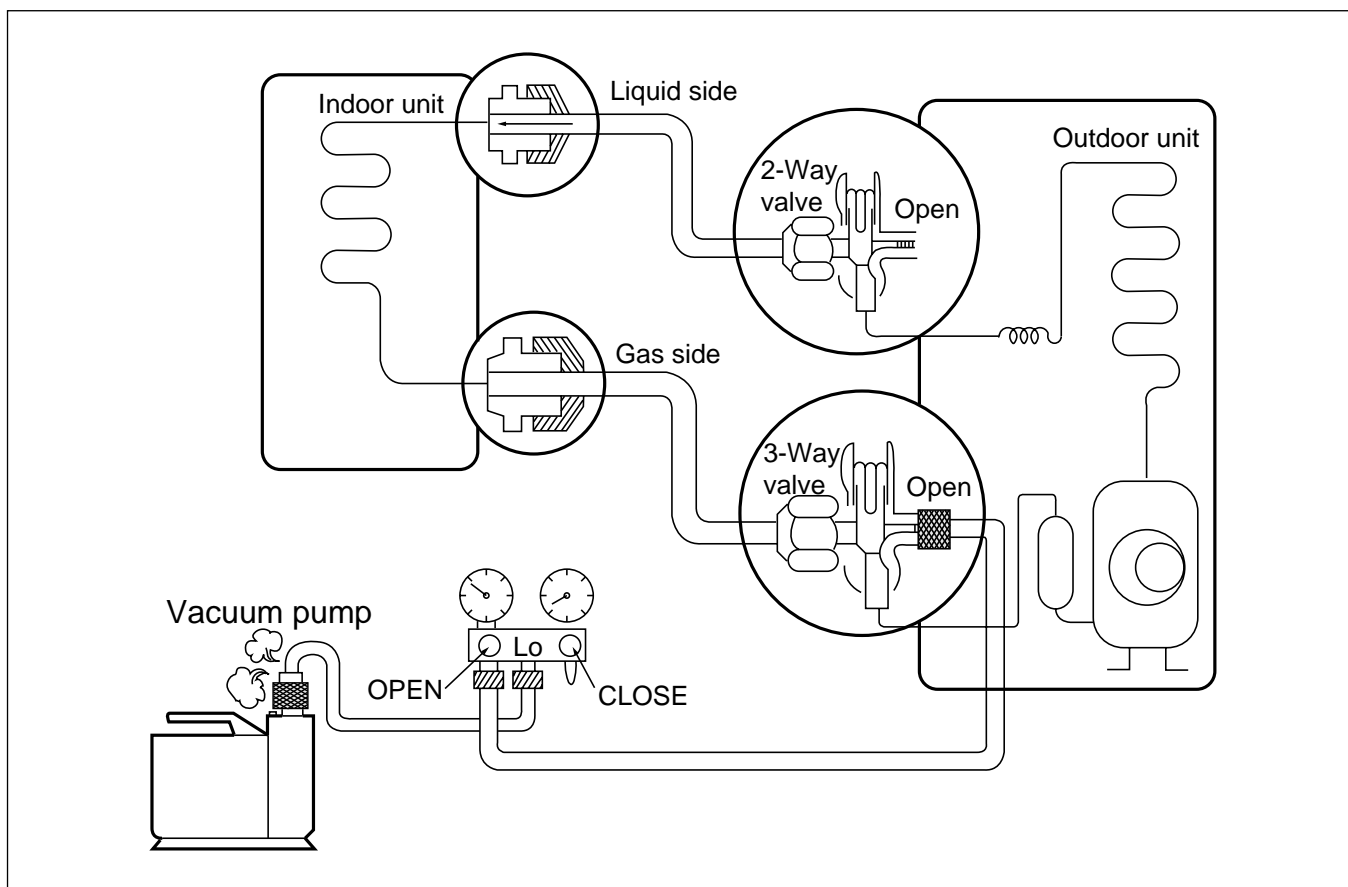

### • Procedure


- (1) Connect the vacuum pump to the charge set's center hose
- (2) Evacuation for approximately one hour.
  - Confirm that the gauge needle has moved toward -76 cmHg (vacuum of 4 mmHg or less).
- (3) Close the valve (Lo side) on the charge set, turn off the vacuum pump, and confirm that the gauge needle does not move (approximately 5 minutes after turning off the vacuum pump).
- (4) Disconnect the charge hose from the vacuum pump.
  - Vacuum pump oil.
  - If the vacuum pump oil becomes dirty or depleted, replenish as needed.

### ⚠ CAUTION

Use vacuum pump equipped with check valve applied to be prevented from flowing backward.

## 6. Gas Charging

(After Evacuation)

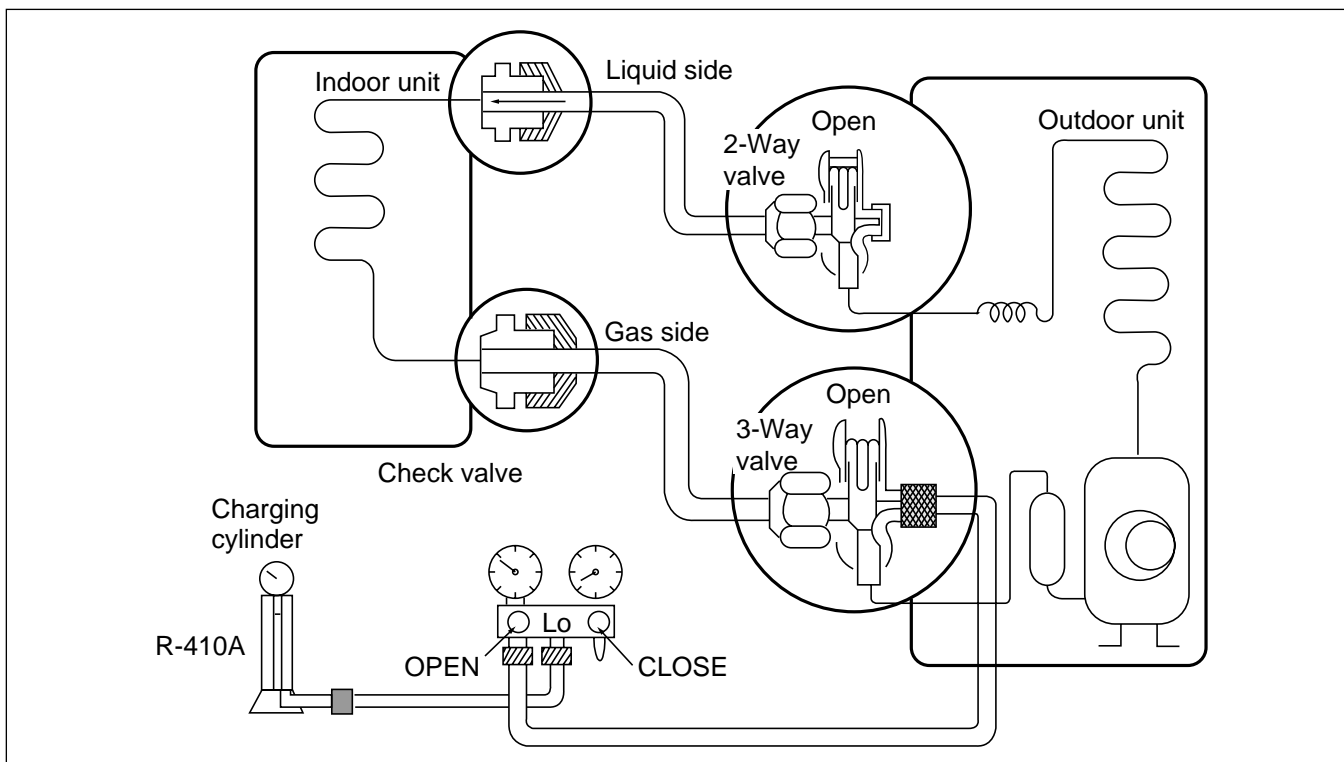

### • Procedure

#### (1) Connect the charge hose to the charging cylinder.

- Connect the charge hose which you disconnected from the vacuum pump to the valve at the bottom of the cylinder.
- If you are using a gas cylinder, also use a scale and reverse the cylinder so that the system can be charged with liquid.

#### (2) Purge the air from the charge hose.

- Open the valve at the bottom of the cylinder and press the check valve on the charge set to purge the air. (Be careful of the liquid refrigerant). The procedure is the same if using a gas cylinder.

#### (3) Open the valve (Lo side on the charge set and charge the system with liquid refrigerant.

- If the system can not be charged with the specified amount of refrigerant, it can be charged with a little at a time (approximately 150g each time) while operating the air conditioner in the cooling cycle; however, one time is not sufficient, wait approximately 1 minute and then repeat the procedure (pumping down-pin).

### ⚠ CAUTION

This is different from previous procedures. Because you are charging with liquid refrigerant from the gas side, absolutely do not attempt to charge with larger amounts of liquid refrigerant while operating the air conditioner.

#### (4) Immediately disconnect the charge hose from the 3-way valve's service port.

- Stopping partway will allow the gas to be discharged.
- If the system has been charged with liquid refrigerant while operating the air conditioner turn off the air conditioner before disconnecting the hose.

#### (5) Mount the valve stem nuts and the service port nut.

- Use torque wrench to tighten the service port nut to a torque of 1.8 kg.m.
- Be sure to check for gas leakage.

### ⚠ CAUTION

This unit is charged with R-410A. Pay attention not to charge R-22.

## 7. Additional gas charging

### (Gas leakage)

- When refrigerant is insufficient by leakage, recharge the unit with the refrigerant up to normal operating suction pressure.
- Use the graph or the equation below to get operating suction pressure according to indoor and outdoor temperature.


Suction pressure was measured at 3-way valve service port after operating the unit for 10 minutes.

### The method of using graph

- Find outdoor temperature.
- Find indoor temperature onto the curve of outdoor temperature.
- Read suction pressure at the axis of ordinates.

### The method of using equation

- . Calculate suction pressure after putting indoor and outdoor temperature into the equation.

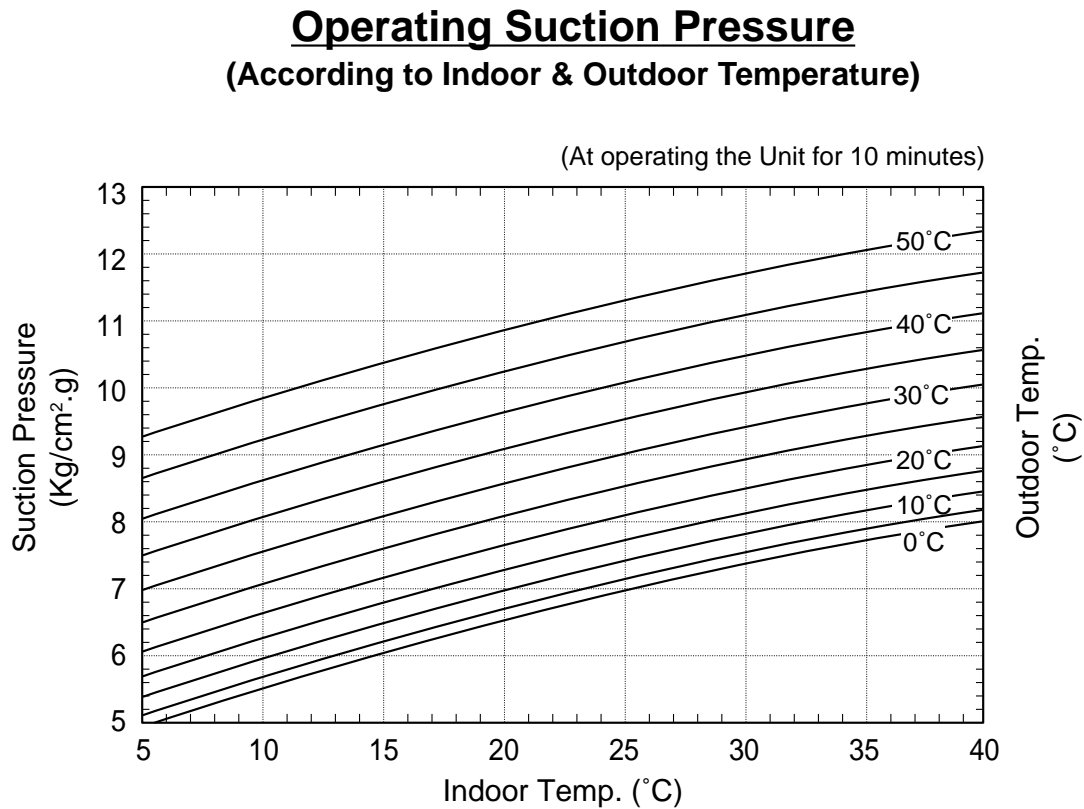


$$P = 3 + 0.0123 \times T_{out}^{1.5} + 0.8 \times T_{in}^{0.5}$$

Where, P : Suction Pressure(kg/cm<sup>2</sup>.g)  
T<sub>out</sub> : Outdoor Temperature(°C)  
T<sub>in</sub> : Indoor Temperature(°C)

# Cycle Troubleshooting Guide

## Trouble analysis

1. Check temperature difference between intake and discharge air and operating current.

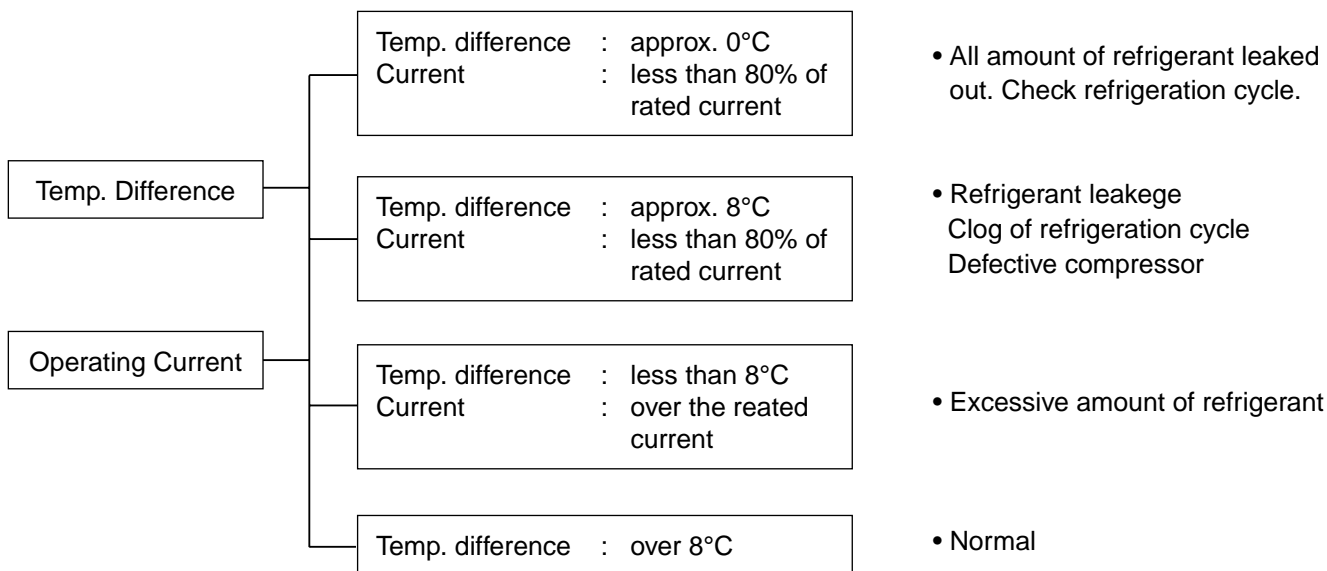

### Notice :

Temperature difference between intake and discharge air depends on room air humidity. When the room air humidity is relatively higher, temperature difference is smaller. When the room air humidity is relatively lower temperature difference is larger.

2. Check temperature and pressure of refrigeration cycle.

Suction pressure (Compared with the normal value)	Temperature (Compared with the normal value)	Cause of Trouble	Description
Higher	High	Defective compressor Defective 4-way reverse valve	Current is low.
	Normal	Excessive amount of refrigerant	High pressure does not quickly rise at the beginning of operation.
Lower	Higher	Insufficient amount of refrigerant (Leakage) Clogging	Current is low. Current is low.


### Notice :

- The suction pressure is usually R-22: 4.5~6.0 kg/cm<sup>2</sup>G(Cooling) at normal condition.  
R-410a: 7.2~9.6 kg/cm<sup>2</sup>G(Cooling) at normal condition.
- The temperature can be measured by attaching the thermometer to the low pressure tubing and wrap it with putty.

# Electronic Parts Troubleshooting Guide


## 1. Product does not operate at all.

(\* Refer to Electronic Control Device drawing and Schematic diagram.)

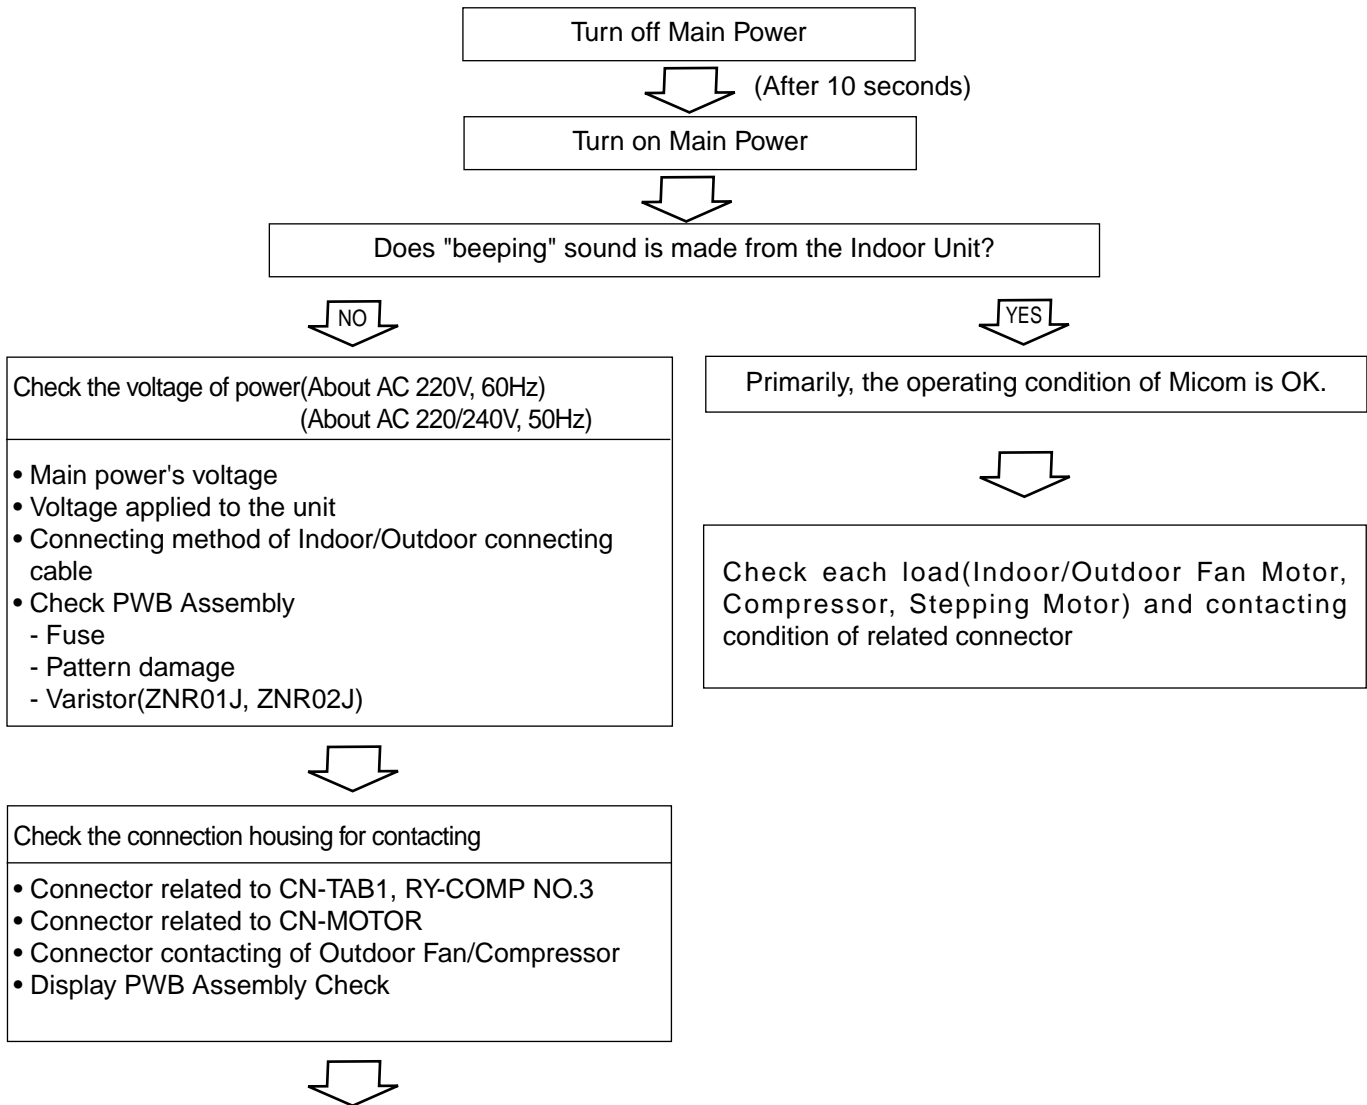


Main PCB Board Operation Check		
Items	Content	Remedy
<ul style="list-style-type: none"> <li>• SMPS Transformer (Indoor unit)               <ul style="list-style-type: none"> <li>- Input Voltage</li> <li>- Output Voltage(ZD02D)</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li>- About AC220V/240V±10% - Check the power voltage</li> <li>- About DC12V</li> </ul>	<ul style="list-style-type: none"> <li>• Replace Trans</li> </ul>
↓ <ul style="list-style-type: none"> <li>• IC04D(7805) Output (Indoor/Outdoor unit)</li> </ul>	<ul style="list-style-type: none"> <li>• DC +5V</li> </ul>	<ul style="list-style-type: none"> <li>• Replace IC04D</li> </ul>
↓ <ul style="list-style-type: none"> <li>• IC01A[S7136(KIA7036), Reset IC] OSC01B</li> </ul>	<ul style="list-style-type: none"> <li>• Voltage of Micom No. 36, (DC +4.5V over) and Soldering condition.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace faulty parts</li> </ul>

## 2. The product is not operate with the remote control.

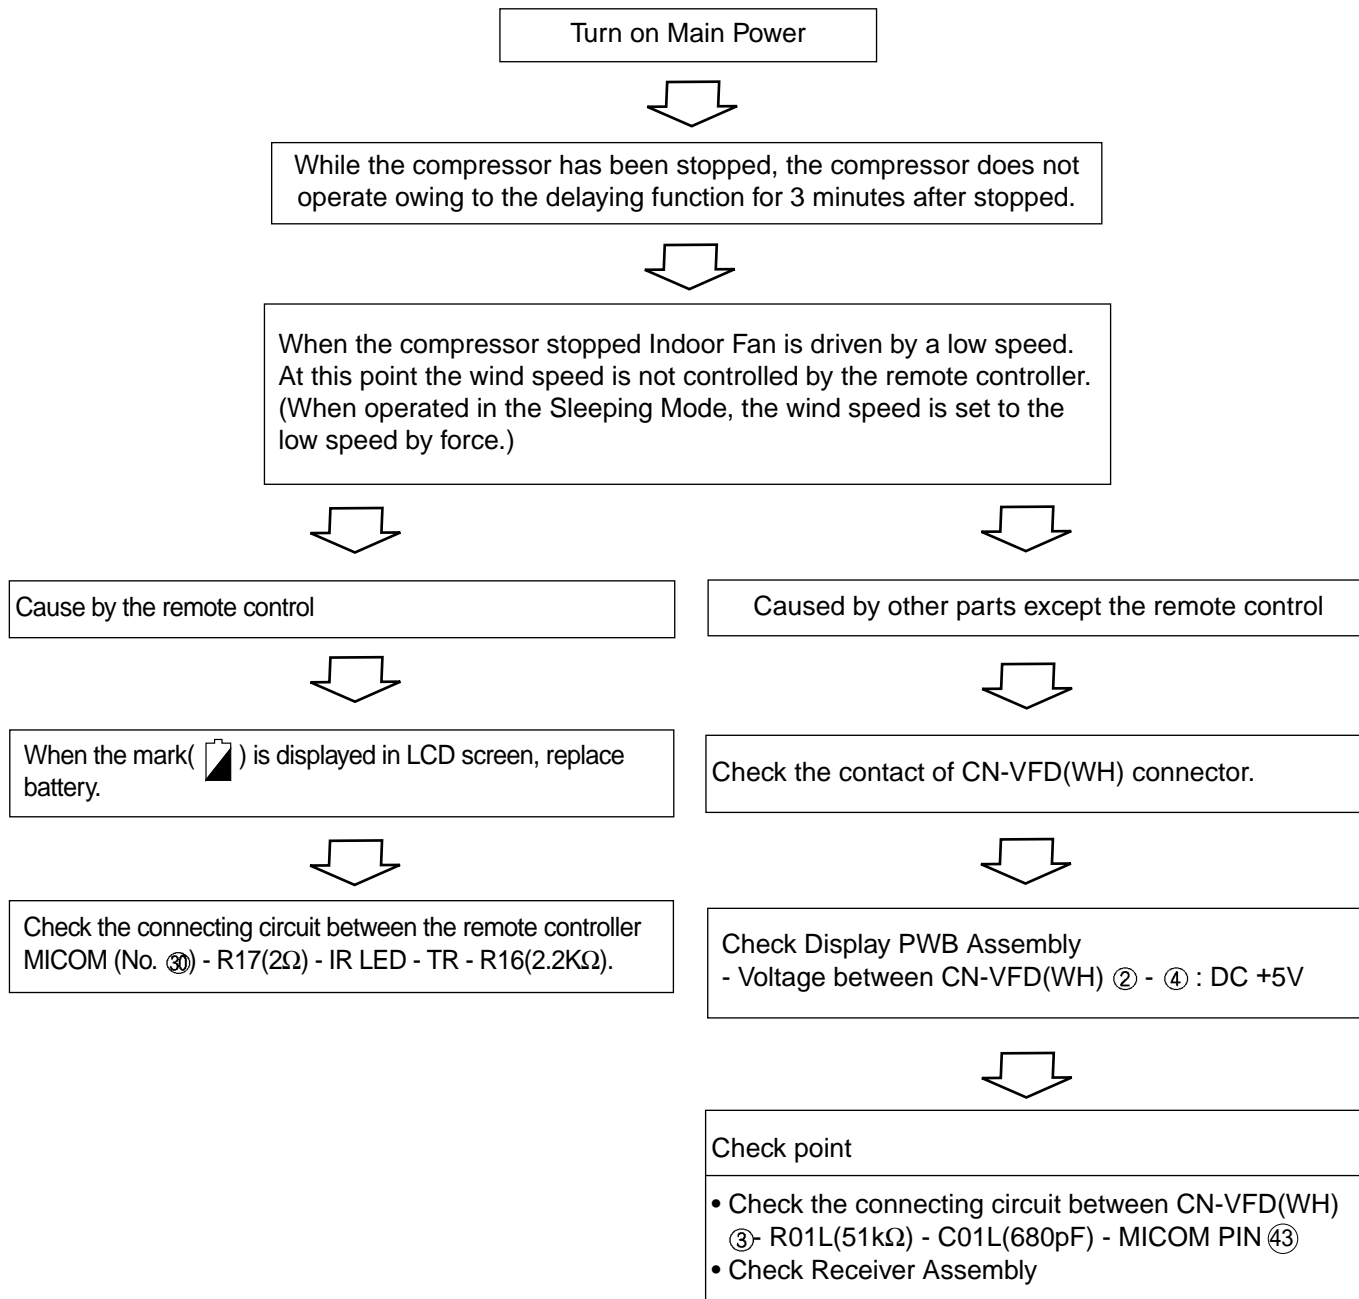


### 3. Compressor/Outdoor Fan are unable to drive.

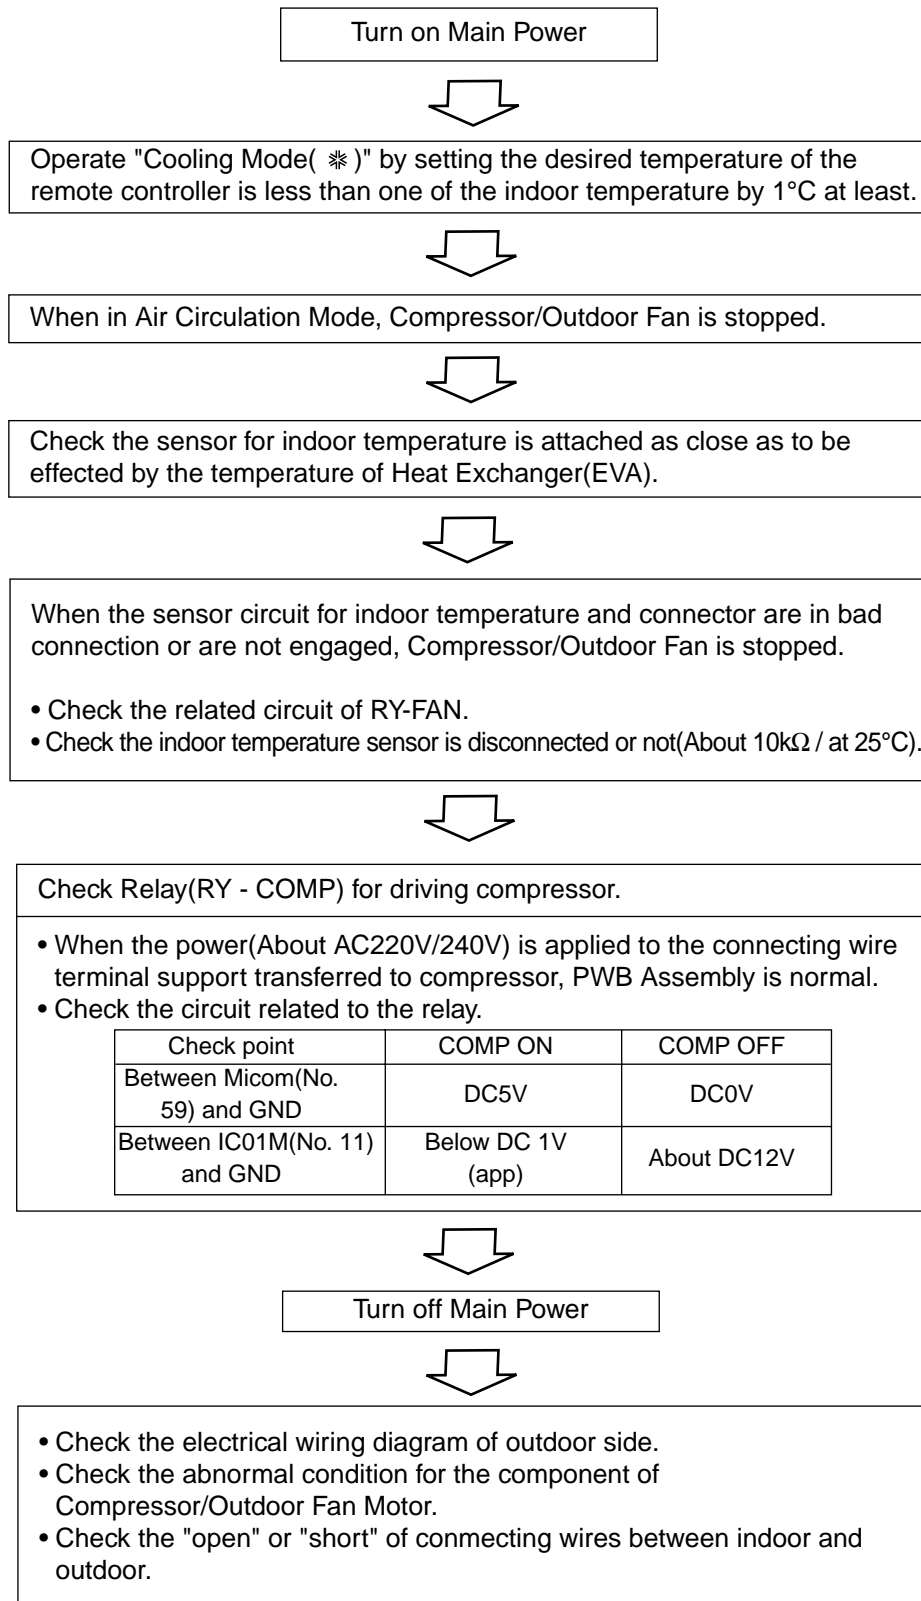



#### 4. When indoor Fan does not operate.

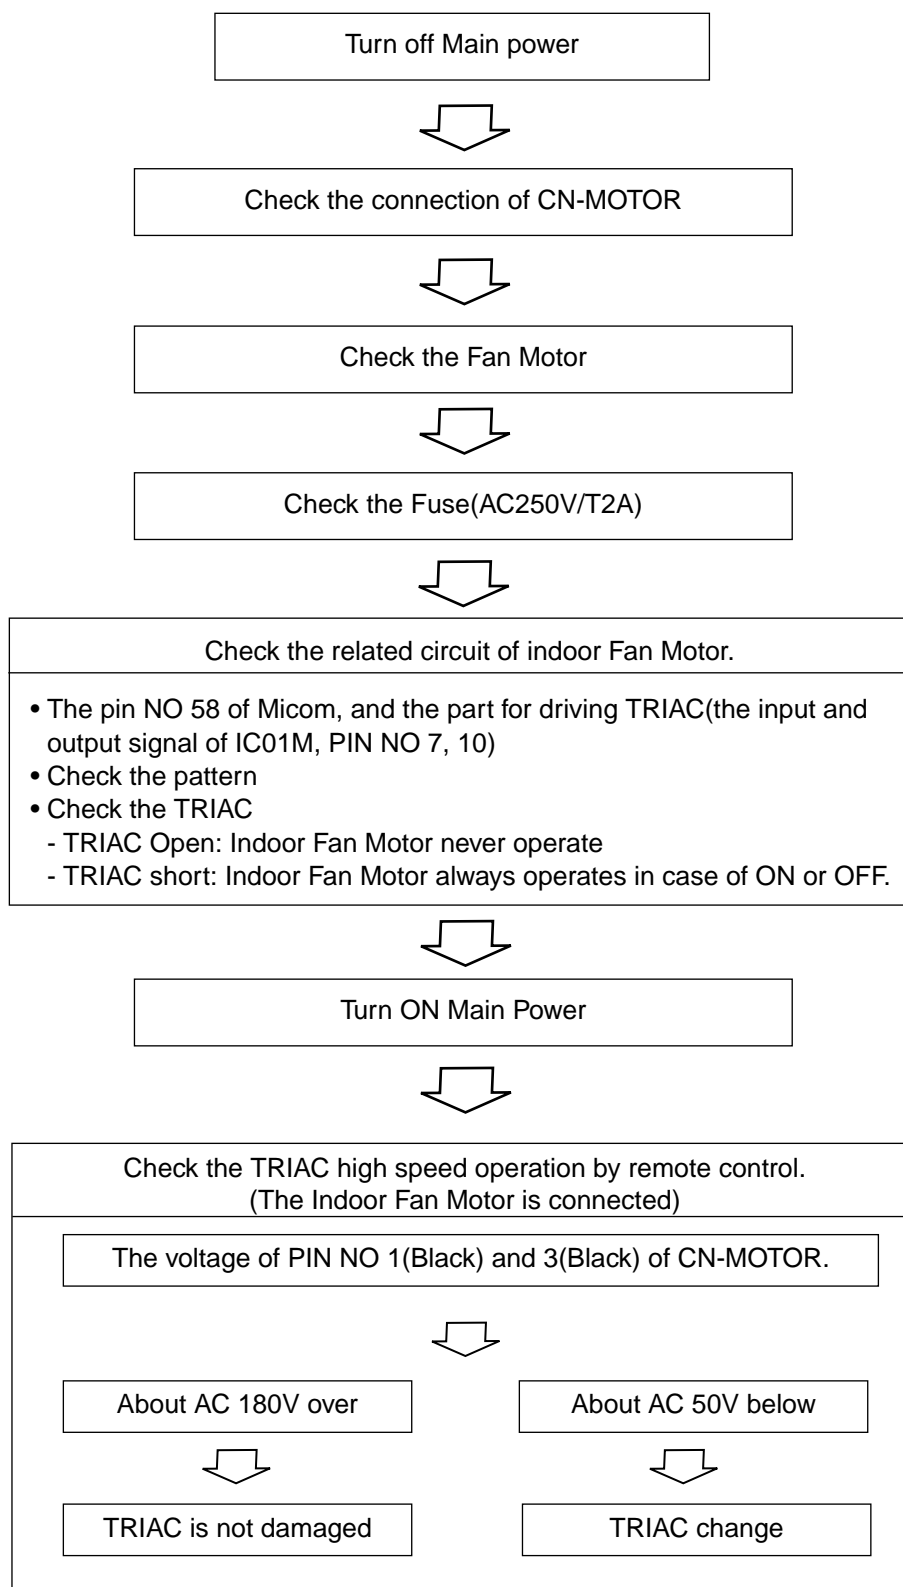

## 5. When up/down Vertical Louver does not operate.

- Confirm that the up/down Vertical Louver is normally geared with the shaft of Stepping Motor.
- If the regular torque is detected when rotating the up/down Vertical Louver with hands ⇒ Normal



- Check the connecting condition of CN-U/D Connector
- Check the soldering condition(on PWB) of CN-U/D Connector



Check the up/down operating circuit of the Vertical Louver

- Confirm that there is DC +12V between pin ①(Gray) of CN-U/D and GND.
- Confirm that there is a soldering short at following terminals.
  - Between ⑥①, ⑥② and ⑥③ of MICOM
  - Between ②, ③, ④ and ⑤ of IC01M
  - Between ①⑤, ①④, ①③ and ①② of IC01M



If there are no problems after above checks

- Confirm the assembly conditions that are catching and interfering parts in the rotation radial of the up/down Vertical Louver

## 6. When left/right Vertical Louver does not operate.

- Confirm that the left/right Vertical Louver is normally geared with the shaft of Stepping Motor.
- If the regular torque is detected when rotating the left/right Vertical Louver with hands ⇒ Normal



- Check the connecting condition of CN-L/R Connector
- Check the soldering condition(on PWB) of CN-L/R Connector



Check the left/right operating circuit of the Vertical Louver

- Confirm that there is DC +12V between pin①(Gray) of CN-L/R and GND.
- Confirm that there is a soldering short at following terminals.
  - Between ⑤4, ⑤5, ⑤6 and ⑤7 of MICOM
  - Between ①, ②, ③ and ④ of IC02M
  - Between ⑬3, ⑬4, ⑬5 and ⑬6 of IC02M



If there are no problems after above checks

- Confirm the assembly conditions that are catching and interfering parts in the rotation radial of the left/right Vertical Louver

## 7. When Inlet Grille does not operate.

- Confirm that the Inlet Grille is normally geared with the shaft of Stepping Motor.
- If the regular torque is detected when moving the Inlet Grille with hands  
⇒ Normal



- Check the connecting condition of CN-SUC Connector
- Check the soldering condition(on PWB) of CN-SUC Connector



### Check the operating circuit of the Inlet Grille

- Confirm that there is DC +12V between pin ①(RED) of CN-U/D and GND.
- Confirm that there is a soldering short at following terminals.
  - Between ①, ②, ③ and ④ of MICOM
  - Between ④, ⑤, ⑥ and ⑦ of IC01G
  - Between ⑬, ⑫, ⑪ and ⑩ of IC01G



### If there are no problems after above checks

- Confirm the assembly conditions that are catching and interfering parts in the rotation radial of the Inlet Grille

## 8. When Heating does not operate

Turn ON Main Power



Operate "Heating Mode(☀)" by setting the desired temperature of the remote control is higher than one of the indoor temperature by 2°C at least.



In heating Mode, the indoor fan operates in case the pipe temperature is higher than 28°C.



Check the connector of intake and pipe sensor(thermistors)

- Check the related circuit of RY-4WAY
- Check the indoor room temperature is disconnected or not (about 10K $\Omega$ /at 25°C).
- Check the indoor pipe temperature is disconnected or not (about 5K $\Omega$ /at 25°C).



Check the DC voltage on the PWB ASSEMBLY

- The details of check are as followings

- Comp Relay.

Check point	Comp ON	Comp OFF
Between Micom (NO.59) and GND	DC 5V	DC 0V
Between IC01M (NO.11) and GND	Below DC 1V	About DC 12V

- Outdoor fan Relay

Check point	Fan ON	Fan OFF
Between Micom (NO.53) and GND	DC 5V	DC 0V
Between IC02M (NO.12) and GND	Below DC 1V	About DC 12V

- 4 way Relay

Check point	4 way ON	4 way OFF
Between Micom (NO.52) and GND	DC 5V	DC 0V
Between IC02M (NO.11) and GND	Below DC 1V	About DC 12V



Turn off Main Power



- Check the electrical wiring diagram of outdoor side.
- Check the abnormal condition for the component of Compressor/Outdoor Fan Motor, 4 way.
- Check the "open" or "short" of connecting wires between indoor and outdoor.

**(1) MAIN P.W.B ASSEMBLY (AC PART)**  
**LS-135GB/GM/GR, LS-1351GB/GM/GR**


**LS-1262GB/GC/GD/GR/GW, C142CM/CR**




## (2) DISPLAY ASSEMBLY

– 6302A90003A


• TOP VIEW

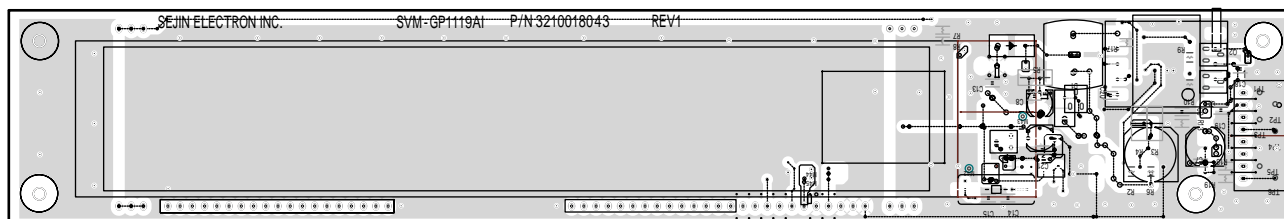

• BOTTOM VIEW

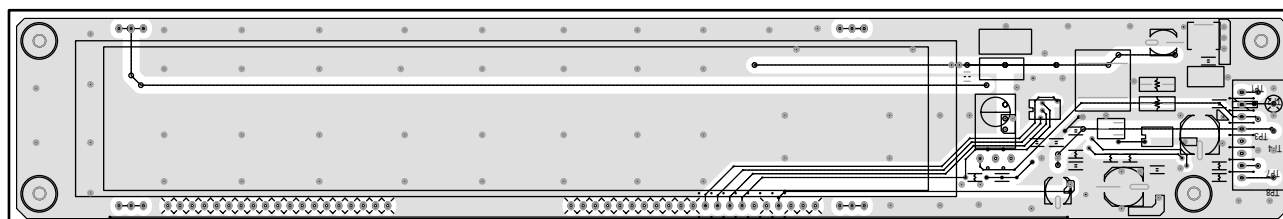


– 6871A20463

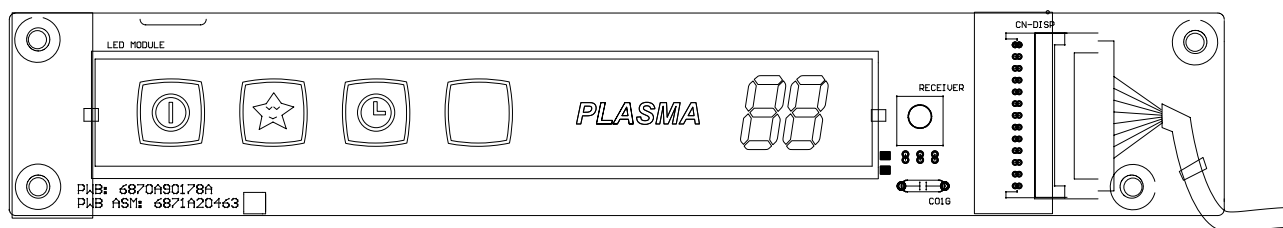


### (3) SUB P.W.B ASSEMBLY

– 6871A20259

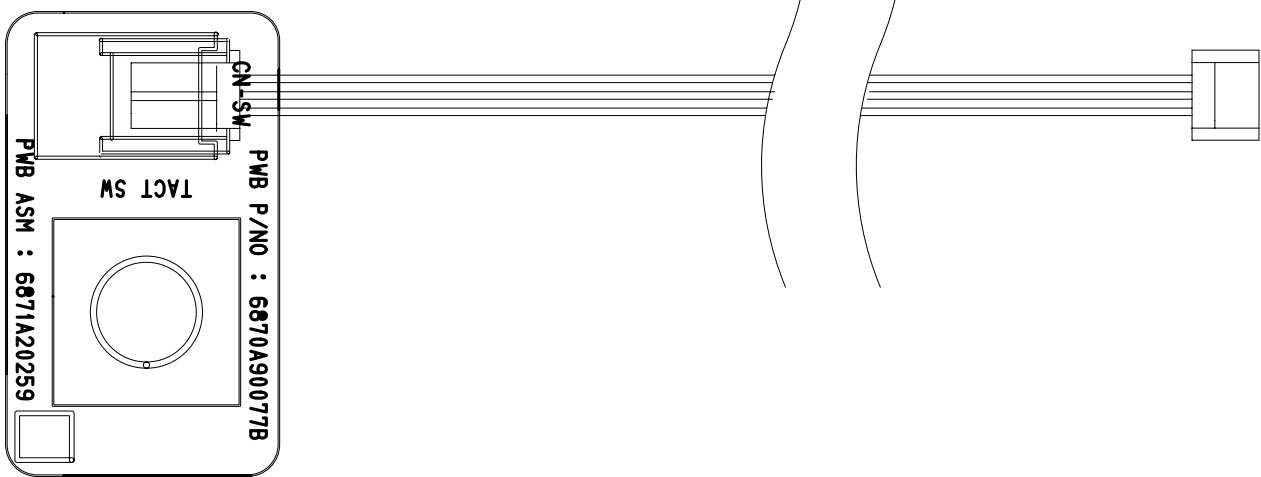


– 6871A20258


• TOP VIEW

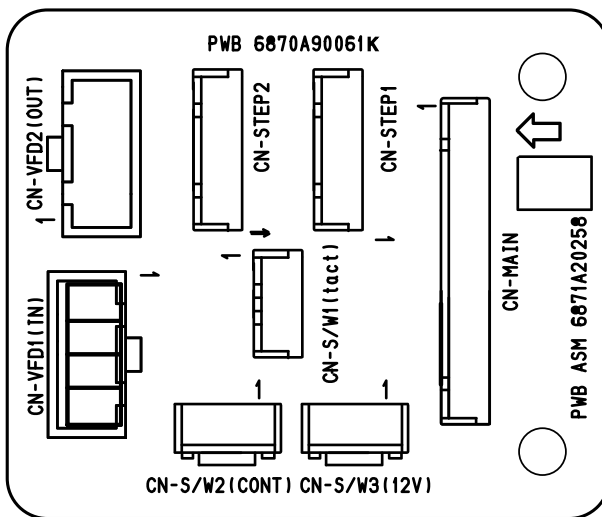

• BOTTOM VIEW

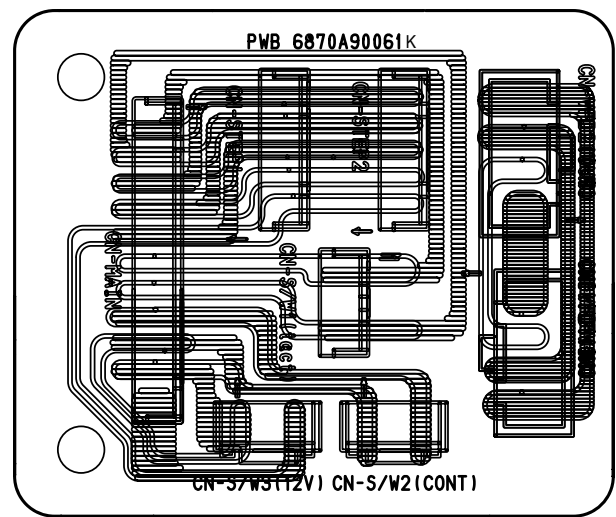


# Schematic Diagram

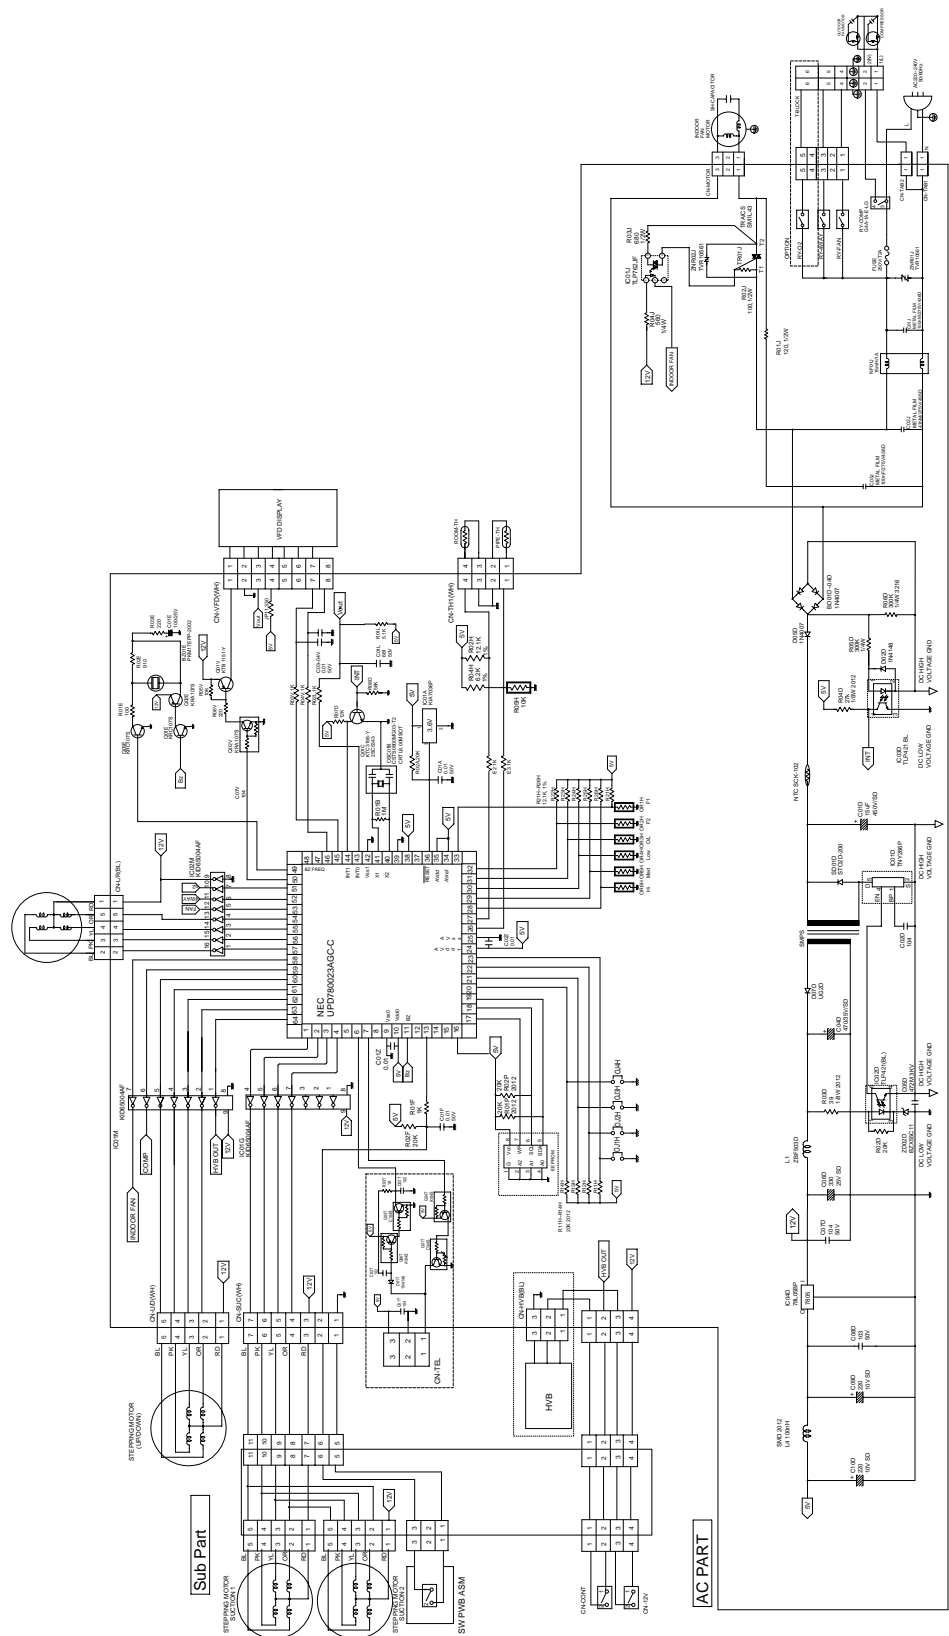

# Exploded View and Replacement Parts List

## 1. Indoor Unit

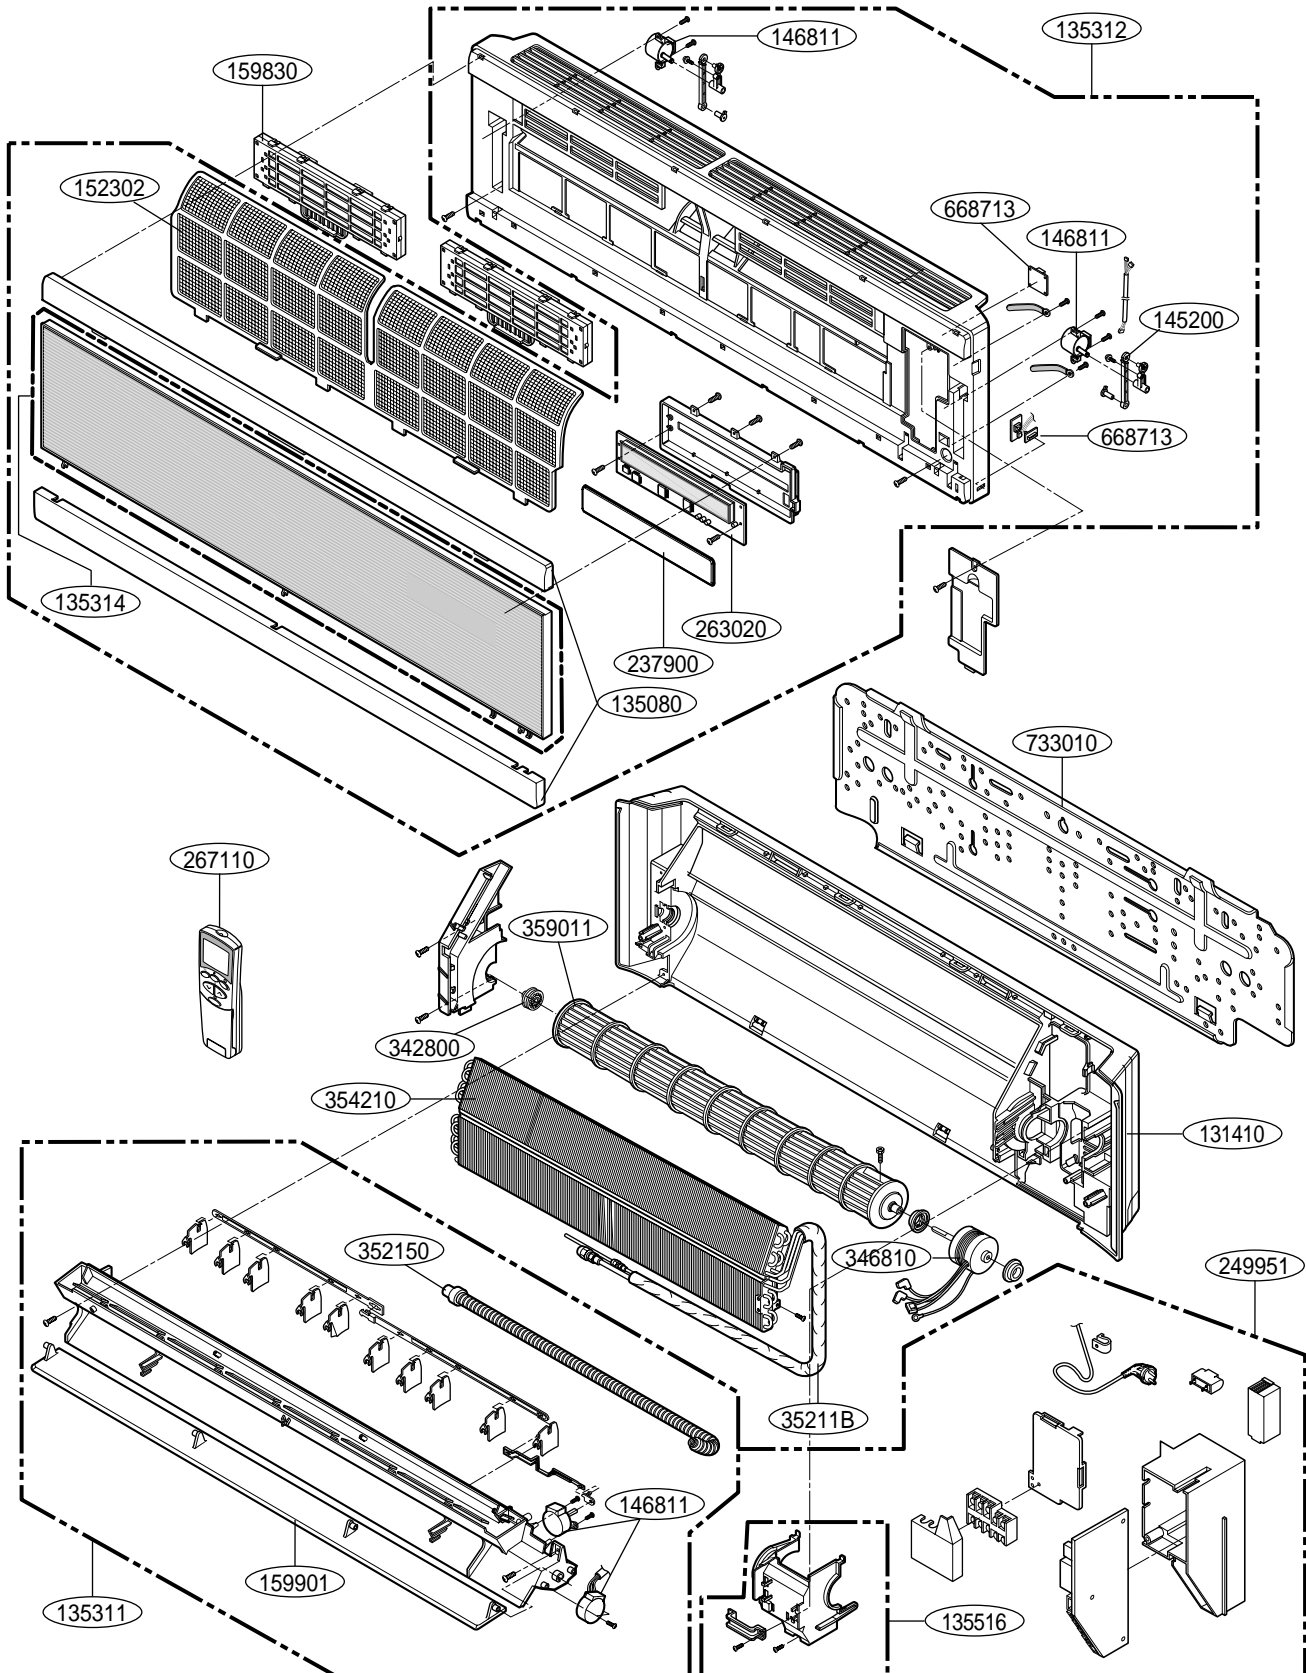

## Parts List(Indoor)

LOCATION No.	DESCRIPTION		PART No.		REMARKS
			LSN135G*	LSN1351G*	
131410	CHASSIS ASSEMBLY		3141A20007B	3141A20007B	R
135080	DECORATION (TOP)		3508A20034A	3508A20034E	R
135080	DECORATION (BOTTOM)		3508A20034B	3508A20034F	R
135311	GRILLE ASSEMBLY, DISCHARGE		3531A10137B	3531A10137E	R
135314	GRILLE ASSEMBLY, INLET	MIRROR	3531A20118E	3531A20118E	R
		BLUE	3531A20138X	3531A21010B	R
		METAL	3531A20138Y	3531A21010A	R
135312	GRILLE ASSEMBLY, FRONT	MIRROR	3531A10147J	3531A10147X	R
		BLUE	3531A10158T	3531A21004X	R
		METAL	3531A10158U	3531A21029A	R
145200	LINK		4520A20008A	4520A20008A	R
146811	MOTOR ASSEMBLY, STEP		4681A20055A	4681A20055A	R
146811	MOTOR ASSEMBLY, STEP		4681A20055B	4681A20055B	R
152302	FILTER (MECH), A/C		5230A20022A	5230A20022A	R
159830	AIR CLEANER ASSEMBLY		5983A10006A	5983A10010A	R
159901	VANE HORIZONTAL		5990A20015B	5990A20015B	R
237900	WINDOW, DISPLAY		3790A20037F	3790A20083A	R
249951	CONTROL BOX ASSEMBLY		4995A20287F	4995A20287R	R
263230	DIGITRON		6302A90003A	6302A90003A	R
263230	THERMISTOR ASSEMBLY		6323A20004H	6323A20004H	R
264110	POWER CORD ASSEMBLY		3H03671M	3H03671M	R
266090	H.V ASSEMBLY		6609A10005A	6609A10005A	R
267110	REMOTE CONTROLLER ASSEMBLY		6711A20073H	6711A20073H	R
268714	PWB(PCB) ASSEMBLY, MAIN		6871A10099C	6871A10099C	R
342800	BEARING		4280A20004A	4280A20004A	R
346810	MOTOR ASSEMBLY, INDOOR		4681A20048E	4681A20048E	R
35211B	TUBE ASSEMBLY, TUBING		5211AR7066N	5211AR7066N	R
352150	HOSE ASSEMBLY, DRAIN		5251AR1222R	5251AR1222R	R
354210	EVAPORATOR ASSEMBLY, FINAL		5421A20086D	5421A20086D	R
359011	FAN ASSEMBLY, CROSS FLOW		5901A20016A	5901A20016A	R
668713	PWB ASSEMBLY, SUB		6871A20258B	6871A20258B	R
668713	PWB ASSEMBLY, SUB		6871A20259A	6871A20259A	R
73310	PLATE		1H00843A	1H00843A	R
W0CZZ	CAPACITOR,DRAWING		3H01487A	3H01487A	R

NOTE) \*Please ensure GCSC since these parts may be changed depending upon the buyer's request.  
(GCSC WEBSITE <http://biz.LGservice.com>)


LOCATION No.	DESCRIPTION		PART No.			REMARKS
			LSN1352G*	LSN1202G*	LSN1262G*	
131410	CHASSIS ASSEMBLY		3141A20007B	3141A20009B	3141A20007B	R
135311	GRILLE ASSEMBLY,DISCHARGE(INDOOR)		3531A10137E	3531A20184B	3531A10137E	R
135312	GRILLE ASSEMBLY,FRONT(INDOOR)	MIRRIOR	3531A20284V	3531A20287V	3531A20284V	R
		BLUE	3531A20284T	3531A20287T	3531A20284T	R
		WHITE	3531A20284X	3531A20287X	3531A20284X	R
		WOOD	3531A20284U	3531A20287U	3531A20284U	R
		METAL	3531A20284W	3531A20287W	-	R
		CHERRY	3531A20284Y	3531A20287Y	3531A20284Y	R
135314	GRILLE ASSEMBLY,INLET	MIRRIOR	3531A20285E	3531A20286A	3531A20285E	R
		BLUE	3531A20285B	3531A20286B	3531A20285B	R
		WHITE	3531A20285D	3531A20286E	3531A20285D	R
		WOOD	3531A20285C	3531A20286D	3531A20285C	R
		METAL	3531A20285A	3531A20286C	-	R
		CHERRY	3531A20285F	3531A20286F	3531A20285F	R
145200	LINK		4520A20008A	4520A20008A	4520A20008A	R
146811	MOTOR ASSEMBLY,STEP		4681A20055A	4681A20055A	4681A20055A	R
146811	MOTOR ASSEMBLY,STEP		4681A20055B	4681A20055B	4681A20055B	R
152302	FILTER(MECH),A/C		5230A20022A	5230A20033A	5230A20022A	R
159830	AIR CLEANER ASSEMBLY		5983A20010K	5983A10014F	5983A20010K	R
159901	VANE,HORIZONTAL		5990A20015B	5990A20022B	5990A20015B	R
249951	CONTROL BOX ASSEMBLY,INDOOR		4995A20486J	4995A20375R	4995A20486J	R
263230	THERMISTOR ASSEMBLY		6323A20004H	6323A20004A	6323A20004H	R
264110	POWER CORD ASSEMBLY		3H03671M	3H03671F	3H03671M	R
266090	H.V ASSEMBLY		6609A10005D	6609A10005E	6609A10005D	R
267110	REMOTE CONTROLLER ASSEMBLY		6711A20091J	6711A20091K	6711A20091J	R
268712	PWB(PCB) ASSEMBLY,DISPLAY		6871A20463D	6871A20463B	6871A20463D	R
268714	PWB(PCB) ASSEMBLY,MAIN		6871A10056G	6871A10056N	6871A10056G	R
342800	BEARING		4280A20004A	4280A20004A	4280A20004A	R
346810	MOTOR ASSEMBLY,INDOOR		4681A20048E	4681A20103A	4681A20048E	R
35211B	TUBE ASSEMBLY,TUBING		5211AR7066N	5211A30596A	5211AR7066N	R
352150	HOSE ASSEMBLY,DRAIN		5251AR1222R	5251AR1222R	5251AR1222R	R
354210	EVAPORATOR ASSEMBLY,FIRST		5421A20086D	5421A20086H	5421A20086D	R
359011	FAN ASSEMBLY,CROSS FLOW		5901A20016J	5901A20016H	5901A20016J	R
668713	PWB(PCB) ASSEMBLY,SUB		6871A20259A	6871A20259A	6871A20259A	R
668713	PWB(PCB) ASSEMBLY,SUB		6871A20258E	6871A20258E	6871A20258E	R
733010	PLATE		1H00843A	3301A10005A	1H00843A	R
W0CZZ	CAPACITOR,DRAWING		3H01487K	3H01487A	3H01487K	R

NOTE) \*Please ensure GCSC since these parts may be changed depending upon the buyer's request.  
(GCSC WEBSITE <http://biz.LGservice.com>)

LOCATION No.	DESCRIPTION		PART No.		REMARKS
			C142CR. NU1	C142CM.NU1	
131410	CHASSIS ASSEMBLY		3141A20007B	3141A20007B	R
135311	GRILLE ASSEMBLY,DISCHARGE(INDOOR)		3531A10137B	3531A10137B	R
135312	GRILLE ASSEMBLY,FRONT(INDOOR)	MIRRIOR	3531A20284Q	3531A20284R	R
		METAL	-	-	R
135314	GRILLE ASSEMBLY,INLET	MIRRIOR	-	-	R
		METAL	3531A20285E	3531A20285A	R
145200	LINK		4520A20008A	4520A20008A	R
146811	MOTOR ASSEMBLY,STEP		4681A20055A	4681A20055A	R
146811	MOTOR ASSEMBLY,STEP		4681A20055B	4681A20055B	R
152302	FILTER(MECH),A/C		5230A20022A	5230A20022A	R
159830	AIR CLEANER ASSEMBLY		5983A20010G	5983A20010G	R
159901	VANE,HORIZONTAL		5990A20015B	5990A20015B	R
249951	CONTROL BOX ASSEMBLY,INDOOR		4995A20486G	4995A20486G	R
263230	THERMISTOR ASSEMBLY		6323A20004H	6323A20004H	R
264110	POWER CORD ASSEMBLY		6411A20015J	6411A20015J	R
266090	H.V ASSEMBLY		6609A10005D	6609A10005D	R
267110	REMOTE CONTROLLER ASSEMBLY		6711A20077U	6711A20077U	R
268712	PWB(PCB) ASSEMBLY,DISPLAY		6871A20463D	6871A20463D	R
268714	PWB(PCB) ASSEMBLY,MAIN		6871A10056G	6871A10056G	R
342800	BEARING		4280A20004A	4280A20004A	R
346810	MOTOR ASSEMBLY,INDOOR		4681A20048E	4681A20048E	R
35211B	TUBE ASSEMBLY,TUBING		5211AR7066N	5211AR7066N	R
352150	HOSE ASSEMBLY,DRAIN		5251AR1222R	5251AR1222R	R
354210	EVAPORATOR ASSEMBLY,FIRST		5421A20086D	5421A20086D	R
359011	FAN ASSEMBLY,CROSS FLOW		5901A20016J	5901A20016J	R
668713	PWB(PCB) ASSEMBLY,SUB		6871A20259A	6871A20259A	R
668713	PWB(PCB) ASSEMBLY,SUB		6871A20258E	6871A20258E	R
733010	PLATE		1H00843A	1H00843A	R
W0CZZ	CAPACITOR,DRAWING		3H01487K	3H01487K	R

NOTE) \*Please ensure GCSC since these parts may be changed depending upon the buyer's request.  
(GCSC WEBSITE <http://biz.LGservice.com>)

## 2. Outdoor unit

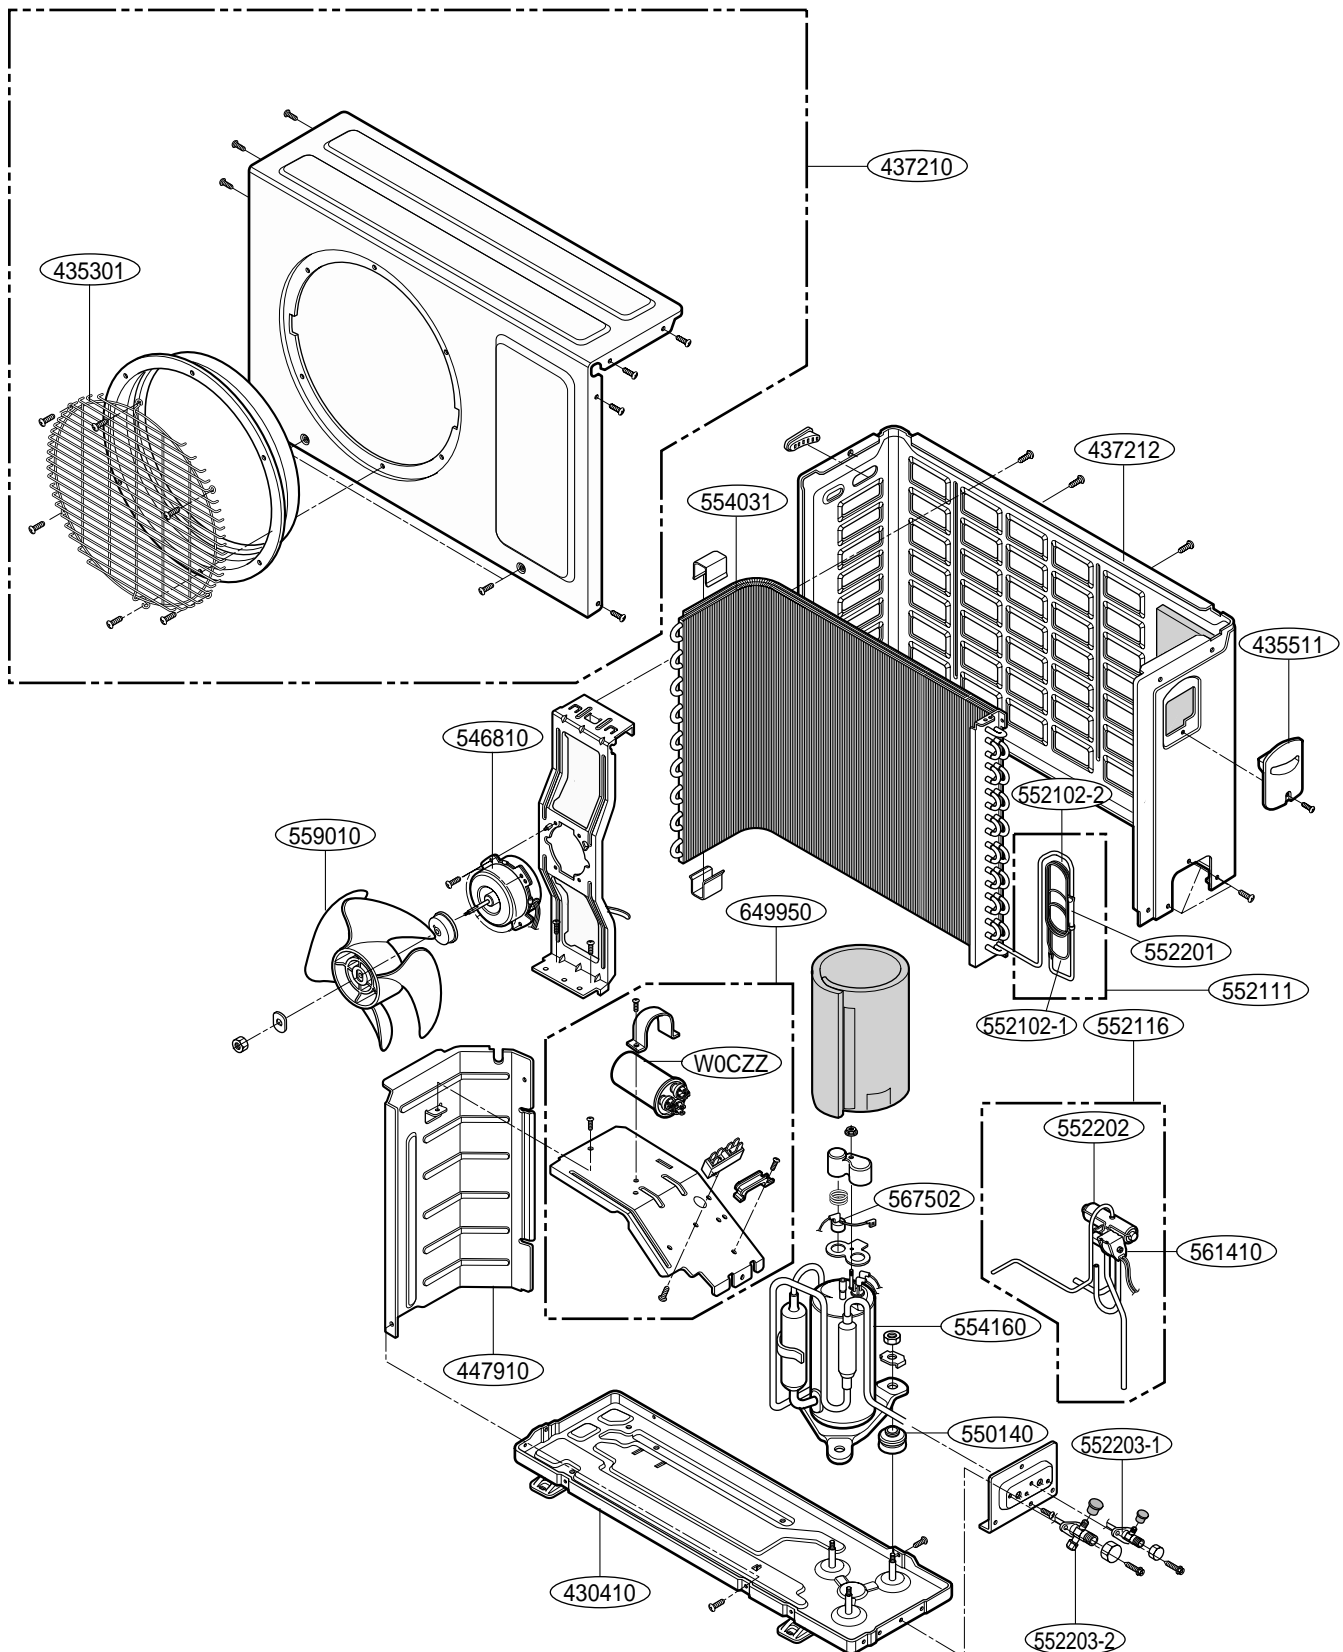



## Parts List(Outdoor)

LOCATION No.	DESCRIPTION	PART No.		REMARKS
		LSU135G*	LSU1351G*	
430410	BASE ASSEMBLY, OUTDOOR	3041AR2205C	3041AR2205C	R
435511	COVER ASSEMBLY, CONTROL	3550AR2620P	3550AR2620P	R
437210	PANEL ASSEMBLY, FRONT	3721AR2658E	3721AR2658E	R
437212	PANEL ASSEMBLY REAR	3721AR2734B	3721AR2734B	R
447910	BARRIER ASSEMBLY, OUTDOOR	-	-	R
546810	MOTOR ASSEMBLY, OUTDOOR	4681AR1392H	4681AR1392H	R
550140	ISOLATOR, COMP.	4H00982E	4H00982E	R
552102-1	TUBE, CAPILLARY BENT	5210A20595X	5210A20595X	R
552102-2	TUBE, CAPILLARY BENT	-	-	R
552111	TUBE ASSEMBLY, CAPILLARY	-	-	R
552116	TUBE ASSEMBLY, REVERSING	-	-	R
552201	VALVE, CHECK	-	-	R
552202	VALVE, REVERSING			R
552203-1	VALVE, SERVICE	2H01890P	2H01890P	R
552203-2	VALVE, SERVICE	2H02479J	2H02479J	R
554031	CONDENSER ASSEMBLY, BENT	5403A20061D	5403A20061D	R
554160	COMPRESSOR	2520UKRK1BA	2520UKRK1BA	R
559010	FAN ASSEMBLY, PROPELLER	5900AR1119B	5900AR1119B	R
W0CZZ	CAPACITOR, DRAWING	2H01451P	2H01451P	R
561410	O.L.P	6750U-L033A	6750U-L033A	R
649950	CONTROL BOX ASSEMBLY, OUTDOOR	4995A20445A	4995A20445B	R

NOTE) \*Please ensure GCSC since these parts may be changed depending upon the buyer's request.  
(GCSC WEBSITE <http://biz.LGservice.com>)

LOCATION No.	DESCRIPTION	PART No.			REMARKS
		LSU1352G*	LSU1202G*	LSU1262G*	
430410	BASE ASSY,OUTDOOR	3041AR2205C	3041AR2205C	3041AR2205C	R
435511	COVER ASSEMBLY,CONTROL(OUTDOOR)	3550AR2620P	3550AR2620P	3550AR2620P	R
437210	PANEL ASSEMBLY,FRONT SUB	3721AR2658E	3721AR2658E	3721AR2658E	R
437212	PANEL ASSEMBLY,REAR(OUTDOOR)	3721AR2734B	3721AR2734B	3721AR2734B	R
546810	MOTOR ASSEMBLY,OUTDOOR	4681AR1392H	4681AR1392H	4681AR1392H	R
550140	ISOLATOR,COMP	4H00982E	4H00982E	4H00982E	R
552102	TUBE,CAPILLARY BEND	5210A20595X	5210A20204G	5210A20595X	R
554031	CONDENSER ASSEMBLY,BENT	5403A20061D	5403A20061D	5403A20061D	R
554160	COMPRESSOR SET	2520UKRK1BA	2520UKBK1AA	2520UKRK1BA	R
559010	FAN ASSEMBLY,PROPELLER	5900AR1119B	5900AR1119B	5900AR1119B	R
561410	O.L.P	6750U-L033A	6750U-L008A	6750U-L033A	R
649950	CONTROL BOX ASSEMBLY,OUTDOOR	4995A20445B	4995A20445D	4995A20445B	R
552203-1	VALVE,SERVICE	2H01890P	2A00393K	2H01890P	R
552203-2	VALVE,SERVICE	2H02479J	2H02479J	2H02479J	R
W0CZZ	CAPACITOR,DRAWING	2H01451P	6120AR2194G	2H01451P	R

NOTE) \*Please ensure GCSC since these parts may be changed depending upon the buyer's request.  
(GCSC WEBSITE <http://biz.LGservice.com>)

LOCATION No.	DESCRIPTION	PART No.		REMARKS
		C142CR. UU1	C142CM. UU1	
430410	BASE ASSY,OUTDOOR	3041AR2205C	3041AR2205C	R
435511	COVER ASSEMBLY,CONTROL(OUTDOOR)	3550AR2620P	3550AR2620P	R
437210	PANEL ASSEMBLY,FRONT SUB	3721AR2658E	3721AR2658E	R
437212	PANEL ASSEMBLY,REAR(OUTDOOR)	3721AR2734B	3721AR2734B	R
546810	MOTOR ASSEMBLY,OUTDOOR	4681AR1392H	4681AR1392H	R
550140	ISOLATOR,COMP	4H00982E	4H00982E	R
552102	TUBE,CAPILLARY BEND	5210A20595X	5210A20595X	R
554031	CONDENSER ASSEMBLY,BENT	5403A20061D	5403A20061D	R
554160	COMPRESSOR SET	2520UKRK1BA	2520UKRK1BA	R
559010	FAN ASSEMBLY,PROPELLER	5900AR1119B	5900AR1119B	R
561410	O.L.P	6750U-L033A	6750U-L033A	R
649950	CONTROL BOX ASSEMBLY,OUTDOOR	4995A20445A	4995A20445A	R
552203-1	VALVE,SERVICE	2H01890P	2H01890P	R
552203-2	VALVE,SERVICE	2H02479J	2H02479J	R
W0CZZ	CAPACITOR,DRAWING	2H01451P	2H01451P	R

NOTE) \*Please ensure GCSC since these parts may be changed depending upon the buyer's request.  
(GCSC WEBSITE <http://biz.LGservice.com>)

