


Service Manual

Digital Camera

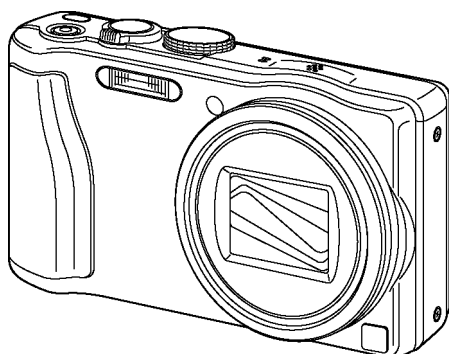

Model No. **DMC-TZ35EB**
DMC-TZ35EE
DMC-TZ35EF
DMC-TZ35EG
DMC-TZ35EP
DMC-TZ35GA
DMC-TZ35GC
DMC-TZ35GN
DMC-TZ35SG
DMC-TZ36EG
DMC-ZS25P
DMC-ZS25PC
DMC-ZS25PU
DMC-ZS25GK

Colours

(S).....Silver Type (except DMC-TZ35GN)
(K).....Black Type

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic®

© Panasonic Corporation 2013.
Unauthorized copying and distribution is a violation
of law.

TABLE OF CONTENTS

	PAGE
1 Safety Precautions	3
1.1. General Guidelines	3
1.2. Leakage Current Cold Check	3
1.3. Leakage Current Hot Check (See Figure 1)	3
1.4. How to Discharge the Capacitor on Flash P.C.B.	4
2 Warning	5
2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatic Sensitive (ES) Devices	5
2.2. How to Recycle the Lithium Ion Battery (U.S. Only)	5
2.3. How to Replace the Lithium Battery	6
3 Service Navigation	7
3.1. Introduction	7
3.2. Service Navigation	7
3.3. General Description About Lead Free Solder (PbF)	8
3.4. How to Define the Model Suffix (NTSC or PAL model)	9
4 Specifications	13
5 Location of Controls and Components	14
6 Service Mode	15
6.1. Error Code Memory Function	15
7 Service Fixture & Tools	19
7.1. Service Fixture and Tools	19
7.2. When Replacing the Main P.C.B.	19
7.3. Service Position	20
8 Disassembly and Assembly Instructions	21
8.1. Disassembly Flow Chart	21
8.2. P.C.B. Location	21
8.3. Disassembly Procedure	22
8.4. Lens Disassembly Procedure	30
8.5. Assembly Procedure for Lens (Revised Version)	34
8.6. Removal of the MOS Unit	40
9 Measurements and Adjustments	41
9.1. Introduction	41
9.2. Before Disassembling the unit	41
9.3. Details of Electrical Adjustment	43
9.4. After Adjustment	47
10 Maintenance	48
10.1. Cleaning Lens, Viewfinder and LCD Panel	48
11 Block Diagram	49
11.1. Overall Block Diagram	49
11.2. System Control Block Diagram	50
11.3. Audio/Video Process/ HDMI Block Diagram	51
11.4. Lens Drive Block Diagram	52
11.5. Power Block Diagram	53
12 Wiring Connection Diagram	54
12.1. Interconnection Schematic Diagram	54

PAGE

1 Safety Precautions

1.1. General Guidelines

1. IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagrams, Circuit Board Layout, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent X-RADIATION, shock fire, or other hazards. Do not modify the original design without permission of manufacturer.

2. An Isolation Transformer should always be used during the servicing of AC Adaptor whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks. It will also protect AC Adaptor from being damaged by accidental shorting that may occur during servicing.
3. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
4. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
5. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.

1.2. Leakage Current Cold Check

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be between $1M\Omega$ and $5.2M\Omega$. When the exposed metal does not have a return path to the chassis, the reading must be infinity.

1.3. Leakage Current Hot Check (See Figure 1)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a $1.5k\Omega$, 10 W resistor, in parallel with a $0.15\mu F$ capacitor, between each exposed metallic part on the set and a good earth ground, as shown in Figure 1.
3. Use an AC voltmeter, with $1k\Omega/V$ or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 V RMS. A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed $1/2$ mA. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

Hot-Check Circuit

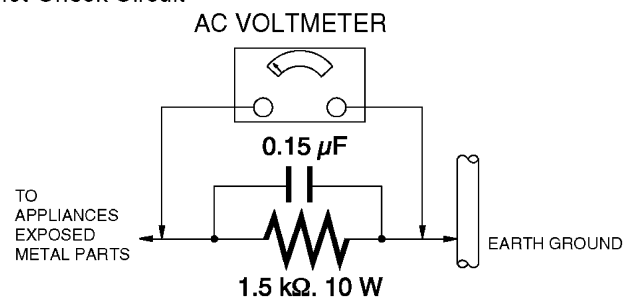


Figure 1

1.4. How to Discharge the Capacitor on Flash P.C.B.

CAUTION:

1. Be sure to discharge the capacitor on Flash P.C.B.
2. Be careful of the high voltage circuit on Flash P.C.B. when servicing.

[Discharging Procedure]

1. Refer to the disassemble procedure and remove the necessary parts/unit.
2. Install the insulation tube onto the lead part of Resistor (ERG5SJ102:1k Ω /5W).
(an equivalent type of resistor may be used.)
3. Place a resistor between both terminals of capacitor on the Flash P.C.B. for approx. 5 seconds.
4. After discharging, confirm that the capacitor voltage is lower than 10V using a voltmeter.

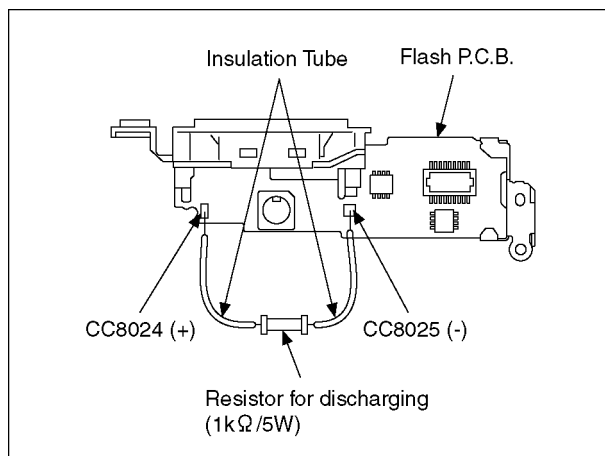


Fig. F1

2 Warning

2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatic Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices.

Examples of typical ES devices are MOS image sensor, IC (integrated circuits) and some field-effect transistors and semiconductor "chip" components.

The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an antistatic solder removal device. Some solder removal devices not classified as **antistatic (ESD protected)** can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION:

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

2.2. How to Recycle the Lithium Ion Battery (U.S. Only)

ENGLISH



A lithium ion/polymer battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

FRANÇAIS




L'appareil que vous vous êtes procuré est alimenté par une batterie au lithium-ion/polymère recyclable. Pour des renseignements sur le recyclage de la batterie, veuillez composer le 1-800-8-BATTERY.

2.3. How to Replace the Lithium Battery

2.3.1. Replacement Procedure

1. Remove the Top P.C.B. (Refer to Disassembly Procedures.)
2. Unsolder the Lithium battery (Ref. No. **B9901** at foil side of Top P.C.B.) and then replace it into new one.

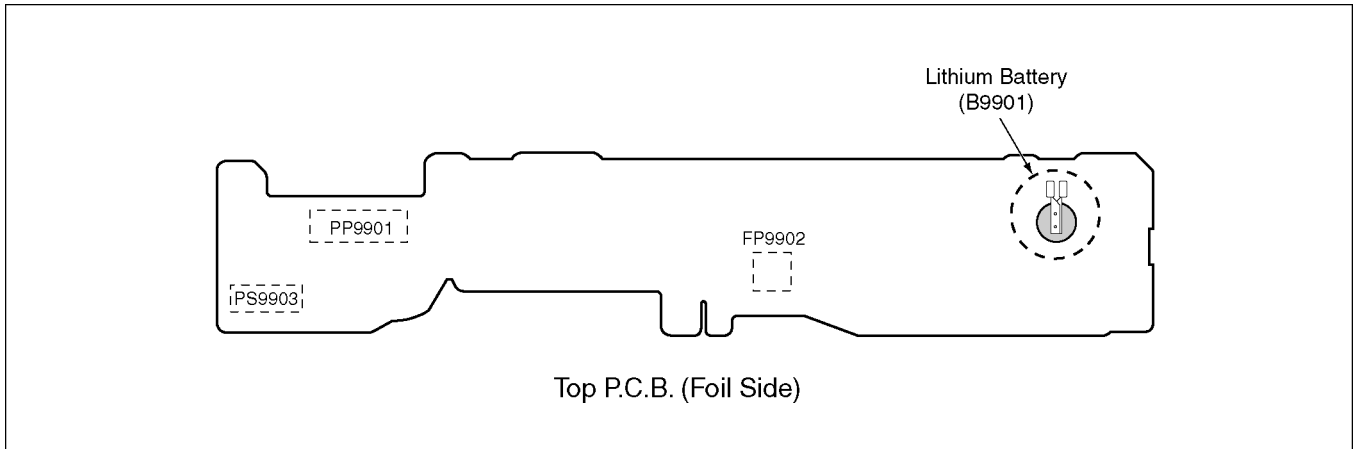

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

CAUTION

The battery used in this device may present a risk of fire or chemical burn if mistreated.
Do not recharge, disassemble, heat above 100°C (212°F), or incinerate.
Replace battery with Panasonic part number ML-421S/DK only.
Use of another battery may present a risk of fire or explosion.
Dispose of used battery promptly.
Keep away from children.
Do not disassemble and do not dispose of in fire.

Note:

The lithium battery is a critical component.
(Type No.: ML-421S/DK **Manufactured by Energy Company, Panasonic Corporation.**)
It must never be subjected to excessive heat or discharge.
It must therefore only be fitted in equipment designed specifically for its use.
Replacement batteries must be of the same type and manufacture.
They must be fitted in the same manner and location as the original battery, with the correct polarity contacts observed.
Do not attempt to re-charge the old battery or re-use it for any other purpose.
It should be disposed of in waste products destined for burial rather than incineration.

(For English)

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type recommended by the manufacturer.
Dispose of used batteries according to the manufacturer's instructions.

(For German)

ACHTUNG

Explosionsgefahr bei falschem Anbringen der Batterie. Ersetzen Sie nur mit einem äquivalentem vom Hersteller empfohlenem Typ.
Behandeln Sie gebrauchte Batterien nach den Anweisungen des Herstellers.

(For French)

MISE EN GARDE

Une batterie de remplacement inappropriée peut exploser. Ne remplacez qu'avec une batterie identique ou d'un type recommandé par le fabricant. L'élimination des batteries usées doit être faite conformément aux instructions du fabricant.

Note:

Above caution is applicable for a battery pack which is for DMC-TZ35/TZ36/ZS25 series, as well.

3 Service Navigation

3.1. Introduction

This service manual contains technical information, which will allow service personnel's to understand and service this model.

Please place orders using the parts list and not the drawing reference numbers.

If the circuit is changed or modified, the information will be followed by service manual to be controlled with original service manual.

3.2. Service Navigation


3.2.1. About lens block

The image sensor (MOS) unit which are connected to the lens unit with 3 screws. 2 of these 3 screws are locked, after performing the Optical tilt adjustment. During servicing, if one of MOS fixing screws are loosened, the Optical tilt adjustment must be performed. (About the Optical tilt adjustment, refer to the "9.3.2 Adjustment Specifications" for details.)

NOTE:

It is necessary to use the "DSC_Tilt" software to allow the "Optical tilt adjustment".

The Adjustment software "DSC_Tilt" is available at "TSN Website".

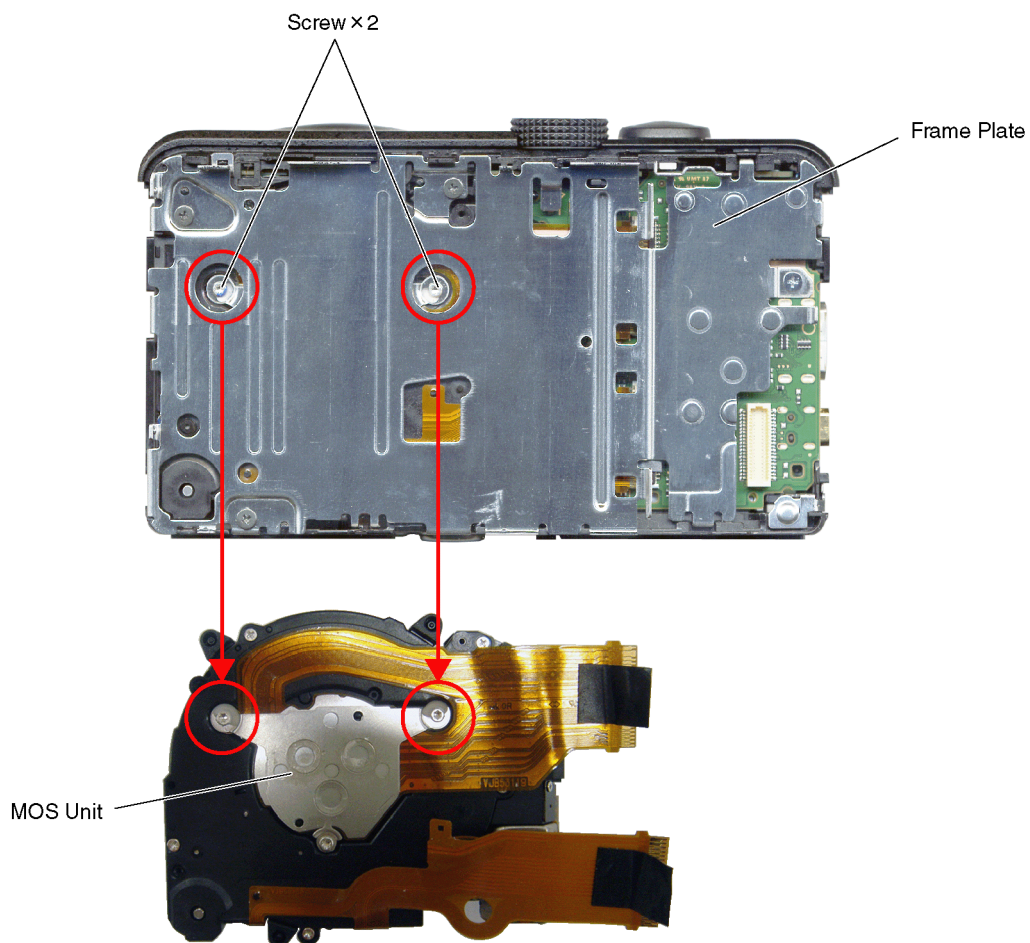

The Optical tilt adjustment can be performed with the Frame Plate attached.

3.2.2. About protection sheet

The hardening gel has been applied to the rear case and LCD during factory process.

If the hardening gel is damaged when removing the rear case unit during servicing, remove the hardening gel completely and attach the protection sheet.

3.3. General Description About Lead Free Solder (PbF)

The lead free solder has been used in the mounting process of all electrical components on the printed circuit boards used for this equipment in considering the globally environmental conservation.

The normal solder is the alloy of tin (Sn) and lead (Pb). On the other hand, the lead free solder is the alloy mainly consists of tin (Sn), silver (Ag) and Copper (Cu), and the melting point of the lead free solder is higher approx.30 °C (86 °F) more than that of the normal solder.

Definition of PCB Lead Free Solder being used

The letter of PbF is printed either foil side or components side on the P.C.B. using the lead free solder. (See right figure)	PbF
---	------------

Service caution for repair work using Lead Free Solder (PbF)

- The lead free solder has to be used when repairing the equipment for which the lead free solder is used.
- (Definition: The letter of **PbF** is printed on the P.C.B. using the lead free solder.)
- To put lead free solder, it should be well molten and mixed with the original lead free solder.
- Remove the remaining lead free solder on the P.C.B. cleanly for soldering of the new IC.
- Since the melting point of the lead free solder is higher than that of the normal lead solder, it takes the longer time to melt the lead free solder.
- Use the soldering iron (more than 70W) equipped with the temperature control after setting the temperature at 350±30 degrees C (662±86 °F).

Recommended Lead Free Solder (Service Parts Route.)

- The following 3 types of lead free solder are available through the service parts route.
 - RFKZ03D01KS----- (0.3mm 100g Reel)
 - RFKZ06D01KS----- (0.6mm 100g Reel)
 - RFKZ10D01KS----- (1.0mm 100g Reel)

Note:

- * Ingredient: tin (Sn) 96.5%, silver (Ag) 3.0%, Copper (Cu) 0.5%, Cobalt (Co) / Germanium (Ge) 0.1 to 0.3%

3.4. How to Define the Model Suffix (NTSC or PAL model)

There are seven kinds of DMC-TZ35/TZ36/ZS25, regardless of the colours.

- a) DMC-TZ35 (Japan domestic model.) /SG
- b) DMC-ZS25P/PC
- c) DMC-TZ35EB/EF/EG/EP, TZ36EG
- d) DMC-TZ35EE
- e) DMC-TZ35GN
- f) DMC-ZS25GK
- g) DMC-TZ35GA/GC, ZS25PU

What is the difference is that the "INITIAL SETTINGS" data which is stored in Flash ROM mounted on Main P.C.B.

3.4.1. Defining methods

To define the model suffix to be serviced, refer to the nameplate which is putted on the bottom side of the Unit.

a) DMC-TZ35 (Japan domestic model) /SG The nameplate for this model shows the following Safety registration mark. 	 Safety registration mark
b) DMC-ZS25P/PC The nameplate for these models show the following Safety registration mark. 	
c) DMC-TZ35EB/EF/EG/EP, TZ36EG The nameplate for these models show the following Safety registration mark. 	
d) DMC-TZ35EE The nameplate for this model show the following Safety registration mark. 	f) DMC-ZS25GK The nameplate for these models show the following Safety registration mark. 
e) DMC-TZ35GN The nameplate for this model show the following Safety registration mark. 	g) DMC-TZ35GA/GC, DMC-ZS25PU The nameplate for these models do not show any above safety registration mark.

Note:

After replacing the Main P.C.B., be sure to achieve adjustment.

3.4.2. INITIAL SETTINGS:

After replacing the Main P.C.B., make sure to perform the initial settings after achieving the adjustment by ordering the following procedure in accordance with model suffix of the unit.

1. IMPORTANT NOTICE:

Before proceeding Initial settings, be sure to read the following CAUTIONS.

CAUTION 1:(INITIAL SETTINGS)

--- AFTER REPLACING THE MAIN P.C.B. and/or FLASH ROM ---

[Except "DMC-TZ35EG/EF/EB/EP and DMC-TZ36EG" models]

*.The model suffix can be chosen JUST ONE TIME.

(Effective model suffix : DMC-TZ35 "EE/GA/GC/SG and GN",
DMC-ZS25 "P/PC/PU and GK")

*.Once one of the model suffix has been chosen, the model suffix lists will not be displayed, thus, it can not be changed.

CAUTION 2:(Stored picture image data in the unit)

This unit employs "Built-in Memory" for picture image data recording.(Approx.90MB)

After proceeding "INITIAL SETTINGS", the picture image data stored in the unit is erased.

2. PROCEDURES:

- Precautions: Read the above "CAUTION 1" and "CAUTION 2", carefully.

- Preparation:

1. Attach the Battery to the unit.

2. Set the mode dial to the PROGRAM AE mode.

Note: If the mode dial position is other than PROGRAM AE mode, it does not display the initial settings menu.

- **Step 1. The temporary cancellation of "INITIAL SETTINGS":**

While keep pressing "UP of Cursor button" and MOTION PICTURE button simultaneously, turn the Power on.

- **Step 2. The cancellation of "INITIAL SETTINGS":**

Press the PLAYBACK button.

Press "UP of Cursor button" and MOTION PICTURE button simultaneously, then turn the Power off.

- **Step 3. Turn the Power on:**

Turn the Power on.

• **Step 4. Display the "INITIAL SETTINGS" menu:**

Note: If the unit is other than PROGRAM AE mode, it does not display the initial settings menu.
While keep pressing MENU/SET and "RIGHT" of Cursor button" simultaneously, turn the Power off.
The "INITIAL SETTINGS" menu is displayed.


There are two kinds of "INITIAL SETTINGS" menu form as follows:

[CASE 1. After replacing MAIN P.C.B.]

There are four kinds of menu from as follows:


[Except for "DMC-TZ35EG, EF, EB, EP, GA and TZ36EG" models : (VEK0U02 is used as a Main P.C.B.)]

When Main P.C.B. has just been replaced, all of the model suffix are displayed as follows. (Four pages in total)

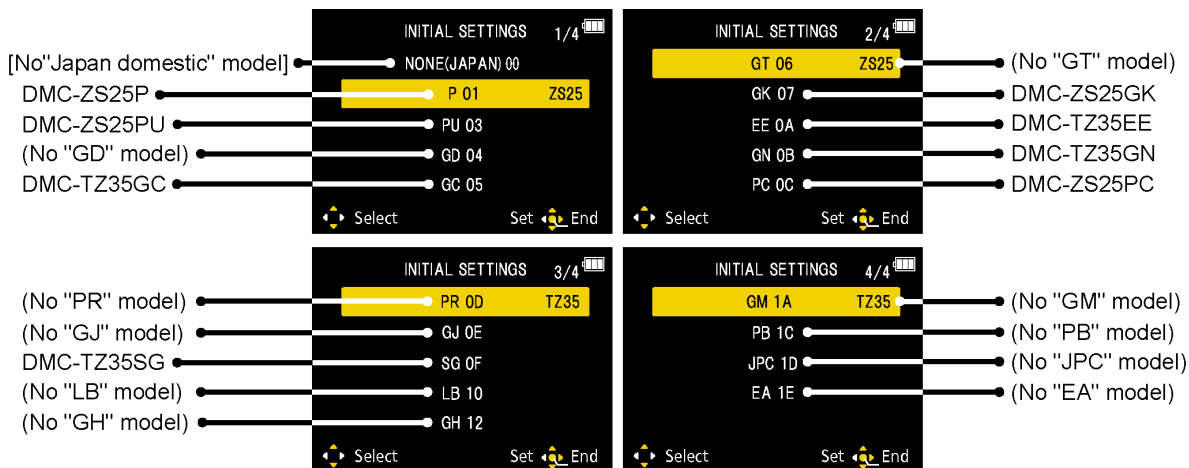

[Only for "DMC-TZ35EG, EF, EB, EP, GA and TZ36EG" models : (VEK0U03 is used as a Main P.C.B.)]


When Main P.C.B. has just been replaced, only 8 model suffix are displayed as follows. (Two pages in total)

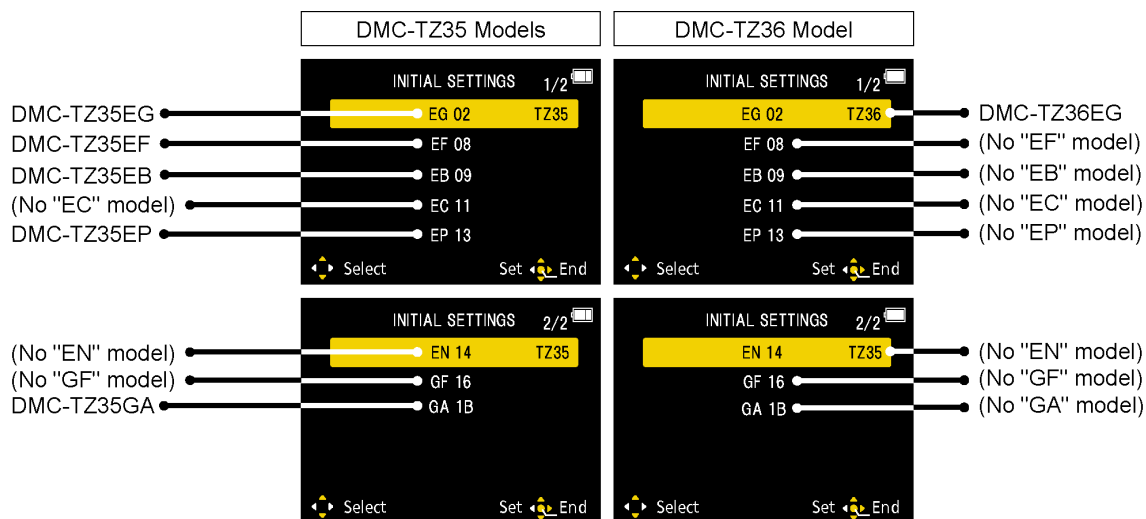

To display the "TZ36" model suffix, choose the "EG" area and press the DELETE button.

[CASE 2. Other than "After replacing Main P.C.B."]



< Other than "EG/EF/EB/EC/EP" models >

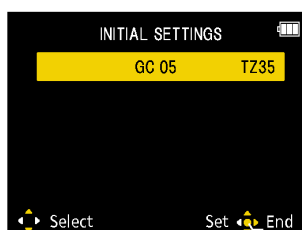

(No "EC" model)


< Only "EG/EF/EB/EC/EP" models >

DMC-TZ35 Models

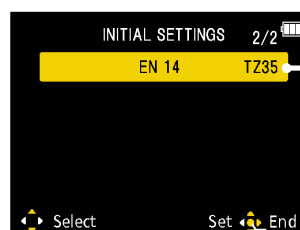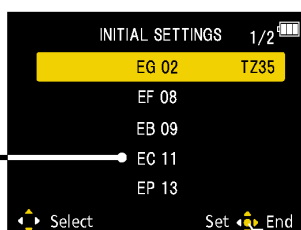


(No "EN" model)

DMC-TZ36 Model

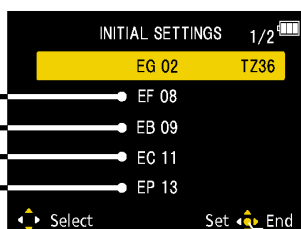

(No "EF/EB/EC/EP" model)

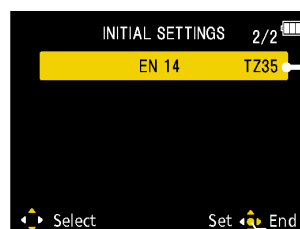

(No "EN" model)

• Step 5. Chose the model suffix in "INITIAL SETTINGS": (Refer to "CAUTION 1")

[Caution: After replacing Main P.C.B.]

(Especially, other than "DMC-TZ35EG/EF/EB/EP and DMC-TZ36EG" models)

The model suffix can be chosen, JUST ONE TIME.

Once one of the model suffix have been chosen, the model suffix lists will not be displayed, thus, it can not be changed.

Therefore, select the area carefully.


Select the area with pressing "UP / DOWN" of Cursor buttons".

• Step 6. Set the model suffix at "INITIAL SETTINGS":

Press the "RIGHT" of Cursor buttons".

The only set area is displayed. Press the "RIGHT" of Cursor buttons" after confirmation.

(The unit is powered off automatically.)

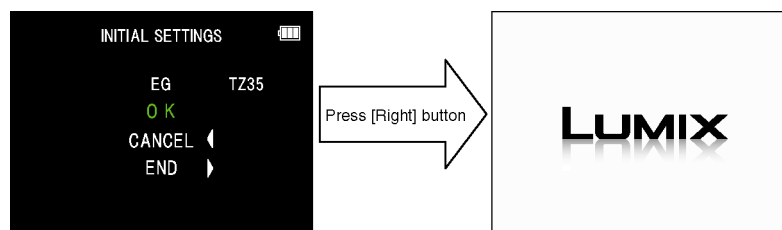

• Step 7. CONFIRMATION:

Confirm the display of "PLEASE SET THE CLOCK" in concerned language when the unit is turned on again.

When the unit is connected to PC with USB cable, it is detected as removable media.

1) As for your reference, major default setting condition is as shown in the following table.

• Default setting (After "INITIAL SETTINGS")

	MODEL	VIDEO OUTPUT	LANGUAGE	DATE	REMARKS
a)	DMC-TZ35 (Japan domestic model)	NTSC	Japanese	Year/Month/Date	
b)	DMC-TZ35EB	PAL	English	Date/Month/Year	
c)	DMC-TZ35EE	PAL	Russian	Date/Month/Year	
d)	DMC-TZ35EF	PAL	French	Date/Month/Year	
e)	DMC-TZ35EG	PAL	English	Date/Month/Year	
f)	DMC-TZ35EP	PAL	English	Date/Month/Year	
g)	DMC-TZ35GA	PAL	English	Date/Month/Year	
h)	DMC-TZ35GC	PAL	English	Date/Month/Year	
i)	DMC-TZ35GN	PAL	English	Date/Month/Year	
j)	DMC-TZ35SG	PAL	English	Date/Month/Year	
k)	DMC-TZ36EG	PAL	English	Date/Month/Year	
l)	DMC-ZS25P	NTSC	English	Month/Date/Year	
m)	DMC-ZS25PC	NTSC	English	Month/Date/Year	
n)	DMC-ZS25PU	NTSC	Spanish	Month/Date/Year	
o)	DMC-ZS25GK	PAL	Chinese (simplified)	Year/Month/Date	No Underwater mode.

4 Specifications

The following specification is for DMC-ZS25PC.
Some specifications may differ depending on model suffix.

Digital Camera: Information for Your Safety

Power Source	DC 5.1 V
Power Consumption	When recording: 1.4 W When playing back: 1.0 W
Camera effective pixels	16,100,000 pixels
Image sensor	1/2.33" MOS sensor, total pixel number 17,500,000 pixels Primary color filter
Lens [NANO SURFACE COATING]	Optical 20 x zoom f=4.3 mm to 86.0 mm (35 mm film camera equivalent: 24 mm to 480 mm) / F3.3 (Max. Wide) to F6.4 (Max. Tele)
Image Stabilizer	Optical method
Focus range	
P / A / S / M	50 cm (1.6 feet) (Max. Wide) / 2 m (6.6 feet) (Max. Tele) to ∞
Macro / Intelligent Auto / Motion picture	3 cm (0.098 feet) (Max. Wide) / 1 m (3.3 feet) (Max. Tele) to ∞ (5 × to 7 × is 2 m (6.6 feet) to ∞)
Scene Mode	The focus ranges listed above may vary depending on the selected Scene Mode.
Shutter system	Electronic shutter + Mechanical shutter
Minimum Illumination	Approx. 10 lx (when i-Low light is used, the shutter speed is 1/30th of a second)
Shutter speed	4 seconds to 1/2000th of a second [Starry Sky] Mode: 15 seconds, 30 seconds
Exposure (AE)	Program AE (P) / Aperture-priority AE (A) / Shutter-priority AE (S) / Manual exposure (M)
Metering Mode	[Multi Metering] / [Center Weighted] / [Spot]

AC adaptor

(Panasonic VSK0768): Information for Your Safety

Input	~ 110 V to 240 V, 50/60 Hz, 0.2 A
Output	== 5 V, 800 mA

Battery pack (lithium-ion)

(Panasonic DMW-BCG10PP): Information for Your Safety


Voltage / capacity	3.6 V / 895 mAh
---------------------------	-----------------

LCD monitor	3.0" TFT LCD (4:3) (Approx. 460,800 dots) (field of view ratio about 100%)
Microphone / Speaker	Monaural
Recording media	Built-in Memory (Approx. 90 MB) / SD Memory Card / SDHC Memory Card / SDXC Memory Card
Recording file format	
Still picture	JPEG (based on Design rule for Camera File system, based on Exif 2.3 standard / DPOF corresponding) / MPO
Motion pictures	AVCHD / MP4
Audio compression format	AVCHD: Dolby® Digital MP4: AAC
Interface	
Digital	USB 2.0 (High Speed)
Analog video	NTSC Composite
Audio	Audio line output (Monaural)
Terminal	HDMI: MiniHDMI TypeC AV OUT/DIGITAL: Dedicated jack (8 pin)
Dimensions	Approx. 104.9 mm (W) x 58.9 mm (H) x 28.7 mm (D) [4.13" (W) x 2.32" (H) x 1.13" (D)] (excluding the projection part)
Mass (Weight)	With card and battery: Approx. 193 g (0.426 lb) Excluding card and battery: Approx. 171 g (0.377 lb)
Operating temperature	0 °C to 40 °C (32 °F to 104 °F)
Operating humidity	10%RH to 80%RH

5 Location of Controls and Components

The following description is for DMC-ZS25PC.


Some description may differ depending on model suffix.

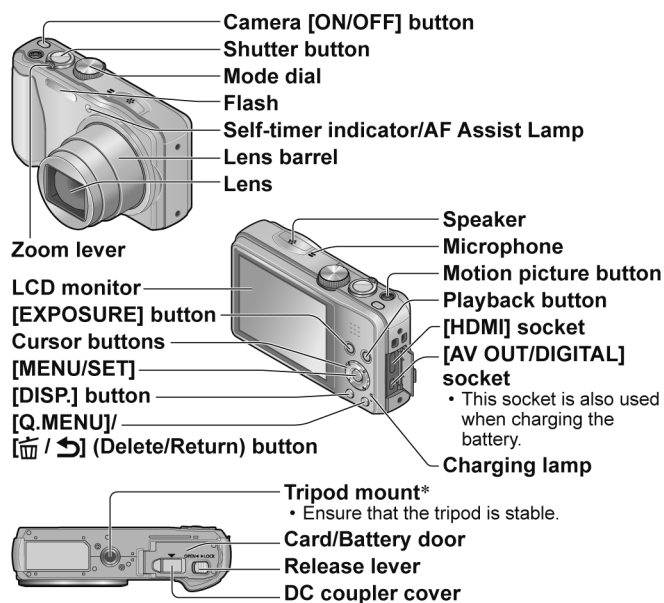

* Do not attach to a tripod with a 5.5 mm (0.22 inch) or longer screw. Doing so may damage this unit.

Hand strap eyelet

We recommend using the supplied hand strap to avoid dropping the camera.



6 Service Mode

6.1. Error Code Memory Function

1. General description

This unit is equipped with history of error code memory function, and can be memorized 16 error codes in sequence from the latest. When the error is occurred more than 16, the oldest error is overwritten in sequence.

The error code is not memorized when the power supply is shut down forcibly (i.e., when the unit is powered on by the battery, the battery is pulled out) The error code is memorized to Flash ROM when the unit has just before powered off.

2. How to display

The error code can be displayed by ordering the following procedure:

• Preparation:

1. Attach the Battery to the unit.
2. Set the mode dial to the PROGRAM AE mode.

Note:

*Since this unit has built-in memory, it can be performed without inserting Memory Card.

• Step 1. The temporary cancellation of "INITIAL SETTINGS":

While keep pressing "UP of Cursor button" and MOTION PICTURE button simultaneously, turn the Power on.


• Step 2. Execute the error code display mode:

Press the "LEFT of Cursor button", MENU/SET button and MOTION PICTURE button simultaneously.

The display is changed as shown below when the above buttons are pressed simultaneously.

Normal display → Error code display → CAMERA INFO → Normal display →

Example of Error Code Display

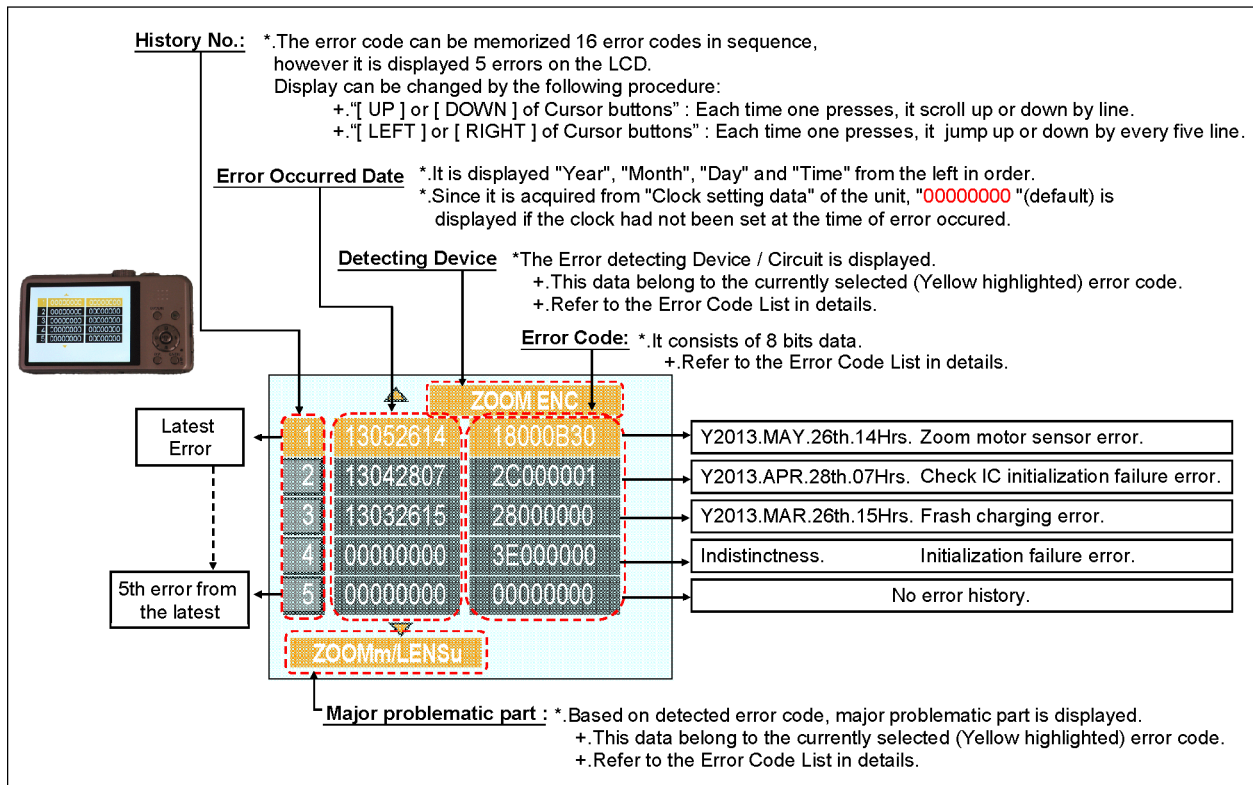

3. Error Code List

The error code consists of 8 bits data and it shows the following information.

Attribute	Main item	Sub item	Error code		Contents (Upper)	Error Indication		
			High 4bits	Low 4 bits	Check point (Lower)	Detecting device	Part/Circuit	
LENS	Lens drive	OIS	18*0	1000	PSD (X) error. Hall element (X axis) position detect error in OIS unit.	OIS X	LENSu NG	
					OIS Unit			
				2000	PSD (Y) error. Hall element (Y axis) position detect error in OIS unit.	OIS Y		
					OIS Unit			
				3000	GYRO (X) error. Gyro (IC7101) detect error on Main P.C.B. IC7101 (Gyro element) or IC6001 (VENUS ENGINE)	GYRO X	GYRO NG	
					4000			GYRO (Y) error. Gyro (IC7101) detect error on Main P.C.B. IC7101 (Gyro element) or IC6001 (VENUS ENGINE)
				5000		GYRO (R) error, Gyro (IC7101) detect error on Main P.C.B. IC7101 (Gyro element) or IC6001 (VENUS ENGINE)		GYRO R
					6000	Drive voltage (X) error.	OISX REF	
				LENS Unit, LENS flex breaks, IC6001(VENUS ENGINE) AD value error, etc.				
				7000	Drive voltage (Y) error.	OISY REF		
					LENS Unit, LENS flex breaks, IC6001(VENUS ENGINE) AD value error, etc.			
				8000	OIS GYRO - Digital communication error.	(No indication)	(No indication)	
					IC7101 (Gyro element) or IC6001 (VENUS ENGINE)			
				Zoom (C.B.)	0?10	Collapsible barrel Low detect error	ZOOM L	ZOOMm/LENSu
						(Collapsible barrel encoder always detects High.)		
		Mechanical lock, FP9005-(11) signal line or IC6001 (VENUS ENGINE)						
		0?20	Collapsible barrel High detect error			ZOOM H		
			(Collapsible barrel encoder always detects Low.)					
			Mechanical lock, FP9005-(11) signal line or IC6001 (VENUS ENGINE)					
		0?30	Zoom motor sensor error.			ZOOM ENC		
			Mechanical lock, FP9005-(6), (9) signal line or IC6001 (VENUS ENGINE)					
			0?40				Zoom motor sensor error. (During monitor mode.)	
		0?50	Mechanical lock, FP9005-(6), (9) signal line or IC6001 (VENUS ENGINE)					
			0?60			Phase error or operation failure of zoom Lens/motor/ encoder. (IMPACT)		
			Mechanical lock, zoom encoder.					
		Focus	0?01			HP High detect error	FOCUS L	LENS FPC/DSP
						(Focus encoder always detects High, and not becomes Low)		
						Mechanical lock, FP9005-(11) signal line or IC6001 (VENUS ENGINE)		
				0?02	HP Low detect error	FOCUS H		
		(Focus encoder always detects Low, and not becomes High)						
Mechanical lock, FP9005-(11) signal line or IC6001 (VENUS ENGINE)								
Lens	18*1	0000	Power ON time out error.	LENS DRV	LENSu			
		LENS drive system						
	18*2	0000	Power OFF time out error.					
		LENS drive system						

Attribute	Main item	Sub item	Error code		Contents (Upper)	Error Indication	
			High 4bits	Low 4 bits	Check point (Lower)	Detecting device	Part/Circuit
HARD	Adj.History	OIS	19*0	2000	OIS adj. Yaw direction amplitude error (small)	OIS ADJ	OIS ADJ
				3000	OIS adj. Pitch direction amplitude error (small)		
				4000	OIS adj. Yaw direction amplitude error (large)		
				5000	OIS adj. Pitch direction amplitude error (large)		
				8000	OIS adj. Yaw direction off set error		
				9000	OIS adj. Pitch direction off set error		
				A000	OIS adj. Yaw direction gain error		
				B000	OIS adj. Pitch direction gain error		
				C000	OIS adj. Yaw direction position sensor error		
				D000	OIS adj. Pitch direction position sensor error		
				E000	OIS adj. other error		
HARD	VENUS A/D	Flash	28*0	0000	Flash charging error. IC6001-(AC18) signal line or Flash charging circuit	STRB CHG	FLASH P.C.B./ FPC
	FLASH ROM (EEPROM Area)	FLASH ROM (EEPROM Area)	2B*0	0001	EEPROM read error IC6002 (Flash ROM)	FROM RE	FROM
				0002	EEPROM write error IC6002 (Flash ROM)	FROM WR	FROM
				0005	Firmware version up error Replace the firmware file in the Memory Card.	(No indication)	(No indication)
SOFT	CPU	Reset	30*0	0001 0007	NMI reset Non Mask-able Interrupt (30000001-30000007 are caused by factors)	NMI RST	MAIN P.C.B.
	CPU, ASIC hard	Stop	38*0	0001	Camera task finish process time out. Communication between Lens system and IC6001 (VENUS ENGINE)	LENS COM	LENSu/DSP
				0002	Camera task invalid code error. IC6001 (VENUS ENGINE)	DSP	DSP
				0100	File time out error in recording motion image IC6001 (VENUS ENGINE)		
				0200	File data cue send error in recording motion image IC6001 (VENUS ENGINE)		
				0300	Single or burst recording brake time out.		
	Operation	Power on	3B*0	0000	Flash ROM processing early period of camera during movement.	INIT	(No indication)
	Zoom	Zoom	3C*0	0000	Imperfect zoom lens processing Zoom lens	ZOOM	ZOOMm/ LENSu
			35*0	0000	Software error (0-7bit : command, 8-15bit : status)	DSP	DSP
			35*1	0000	Though record preprocessing is necessary, it is not called.		
			35*2	0000	Though record preprocessing is necessary, it is not completed.	(No indication)	(No indication)

Important notice about "Error Code List"

1) About "*" indication:

The third digit from the left is different as follows.

+ In case of 0 (example: 18 0 01000)

When the third digit from the left shows "0", this error occurred under the condition of INITIAL SETTINGS has been completed.
It means that this error is occurred basically at user side.

+ In case of 8 (example: 18 8 01000)

When the third digit from the left shows "8", this error occurred under the condition of INITIAL SETTINGS has been released.
(Example; Factory assembling-line before unit shipment, Service mode etc.)
It means that this error is occurred at service side.

2) About "?" indication: ("18*0 0?01" to "18*0 0?50"):

The third digit from the right shows one of the hexadecimal ("0" to "F") character.

4. How to exit from Error Code display mode:

Simply, turn the power off. (Since Error code display mode is executed under the condition of temporary cancellation of "INITIAL SETTINGS", it wake up with normal condition when turn off the power.)









Note:

The error code can not be initialized.

7 Service Fixture & Tools

7.1. Service Fixture and Tools

The following Service Fixture and tools are used for checking and servicing this unit.

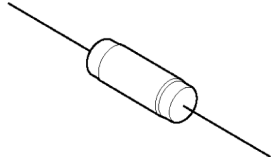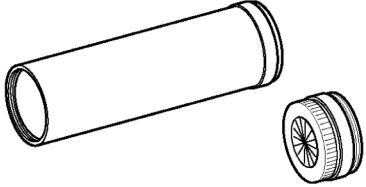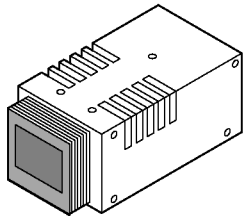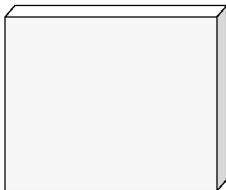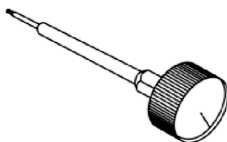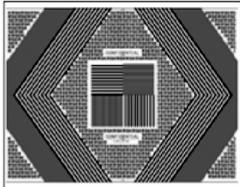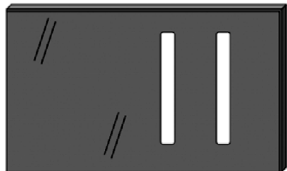Resistor for Discharging ERG5SJ102	COLLIMATOR (with Focus Chart) RFKZ0422	LIGHT BOX (with DC Cable) RFKZ0523
 An equivalent type of Resistor may be used.		 ※ VFK1164TDVLB may be used.
ND Filter RFKZ0513(ND0.3)	Lens Cleaning Kit (BK) VFK1900BK	Grease (for Lens) RFKZ0472
	 * Only supplied as 10 set/box.	
Diffuser RFKZ0591	Driver (for optical axis adjustment) RFKZ0609	Optical axis adjustment chart RFKZ0570
	 *T3 Torx type	
Camera stand RFKZ0333J	Torque Driver RFKZ0542	
		

7.2. When Replacing the Main P.C.B.


After replacing the Main P.C.B., be sure to achieve adjustment.

7.3. Service Position

This Service Position is used for checking and replacing parts. Use the following Extension cables for servicing.

No.	Parts No.	Connection	Form
1	VFK1895	PP9006 (MAIN P.C.B.) - PS9201 (OPERATION P.C.B.)	40PIN B to B
2	RFKZ0545	PP9901 (TOP P.C.B.) - PS9904 (Main P.C.B.)	34PIN B to B
3	VFK1906	PP8001 (FLASH P.C.B.) - PS9903 (TOP P.C.B.)	20PIN B to B

7.3.1. Extension Cable Connections

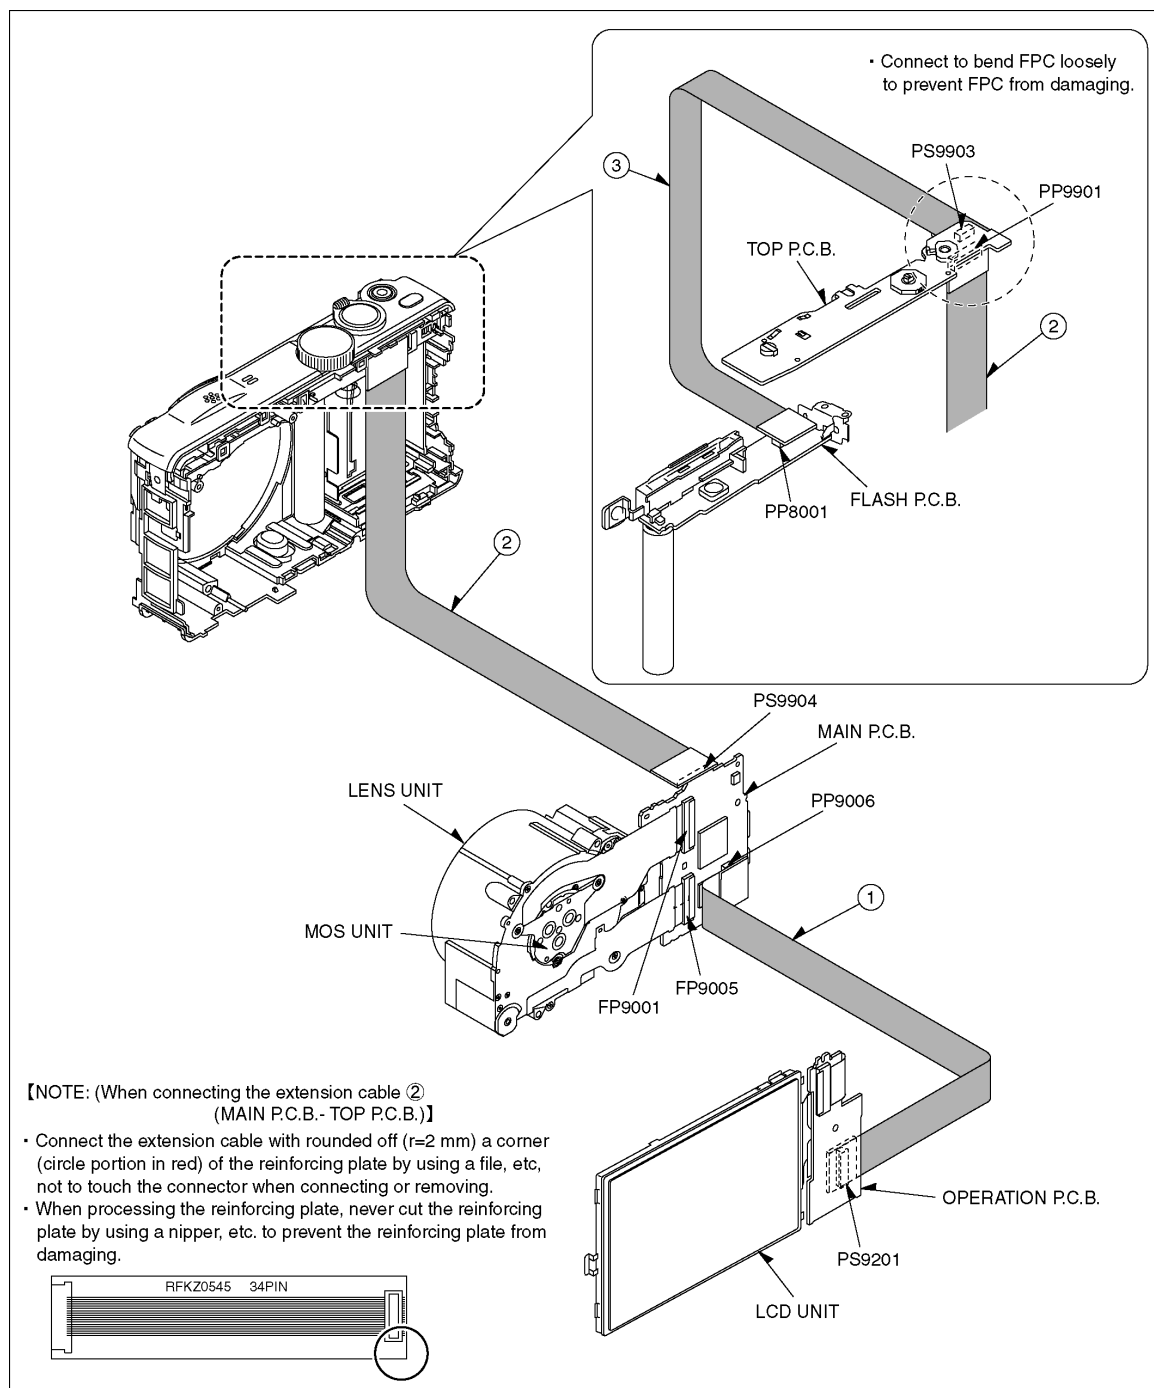


CAUTION-1. (When servicing Flash P.C.B.)


1. Be sure to discharge the capacitor on Flash P.C.B.
Refer to "HOW TO DISCHARGE THE CAPACITOR ON Flash P.C.B.". The capacitor voltage is not lowered soon even if the AC Cord is unplugged or the battery is removed.
2. Be careful of the high voltage circuit on Flash P.C.B.
3. DO NOT allow other parts to touch the high voltage circuit on Flash P.C.B.

8 Disassembly and Assembly Instructions

8.1. Disassembly Flow Chart

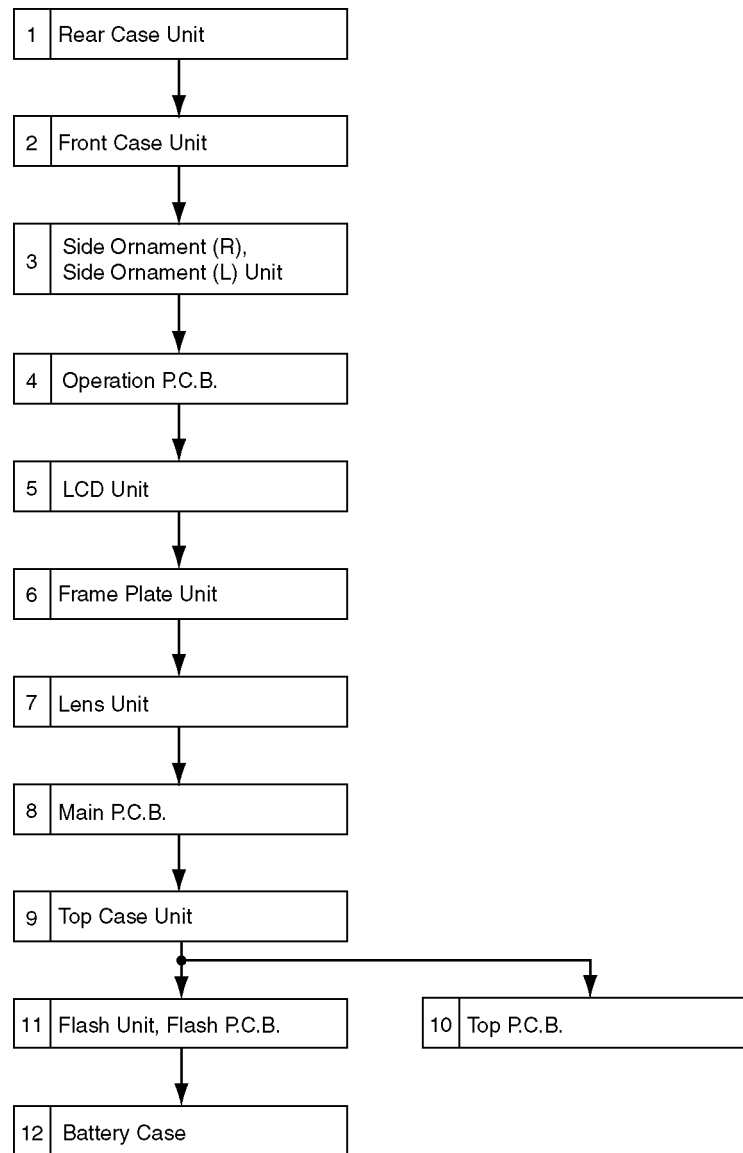

8.2. P.C.B. Location

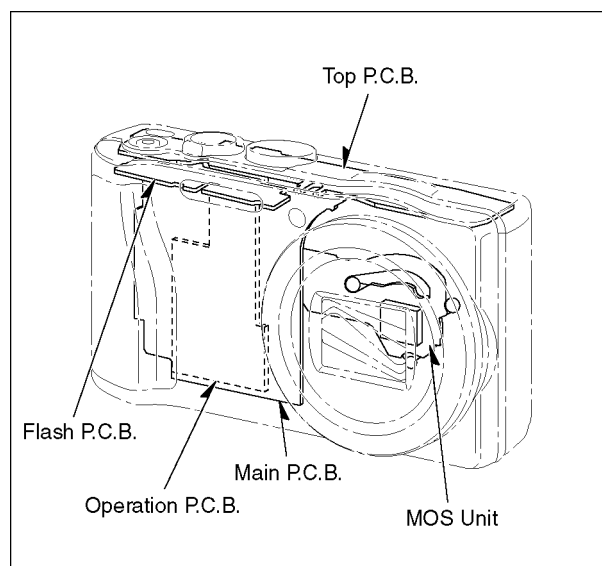


8.3. Disassembly Procedure

No.	Item	Fig.	Removal
1	Rear Case Unit	Fig. D1-1	4 screws (A) 1 screw (B) Rear Case Unit
2	Front Case Unit	Fig. D2	1 screw (C) 1 Locking tab Front Case Unit
3	Side Ornament (R), Side Ornament (L) Unit	Fig. D3	3 Locking tabs Side Ornament (R), Side Ornament (L) Unit
4	Operation P.C.B.	Fig. D4	FP9202 (Flex) PP9006 (Connector) Operation P.C.B. Note: (When replacing Operation P.C.B.) Operation Sheet
5	LCD Unit	Fig. D5	1 Locking tab LCD Unit
6	Frame Plate Unit	Fig. D6	3 screws (D) 1 screw (E) 2 Locking tabs Frame Plate Unit
7	Lens Unit	Fig. D7	PCB Spacer 2 FPC Tapes FP9003 (Flex) FP9005 (Flex) Lens Unit
8	Main P.C.B.	Fig. D8	1 Locking tab PP9901 (Connector) Main P.C.B. Note: (When replacing DPR Sheet) DPR Sheet
9	Top Case Unit	Fig. D9	4 Locking tabs Top Case Unit
10	Top P.C.B.	Fig. D10	1 screw (F) 2 Locking tabs (A) 4 Locking tab (B) FP9902 (Flex) Earth Plate (R) Top P.C.B.
11	Flash Unit, Flash P.C.B.	Fig. D11	3 Locking tabs Flash Unit, Flash P.C.B.
12	Battery Case	Fig. D12	3 Locking tabs (A) 1 Locking tab (B) Battery Case

- Memory Card
- Battery

Note:

When servicing and reassembling, remove the Memory Card and Battery from the unit.

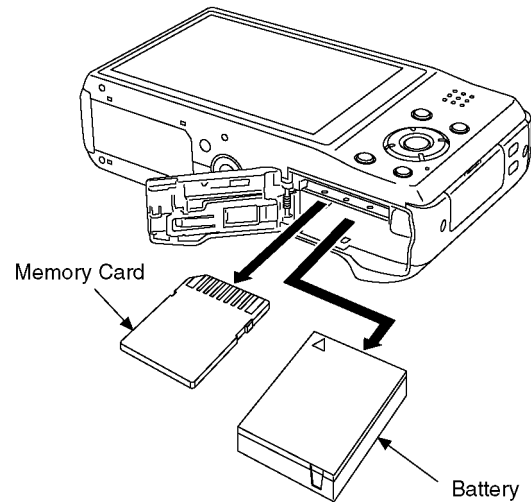

8.3.1. Removal of the Rear Case Unit

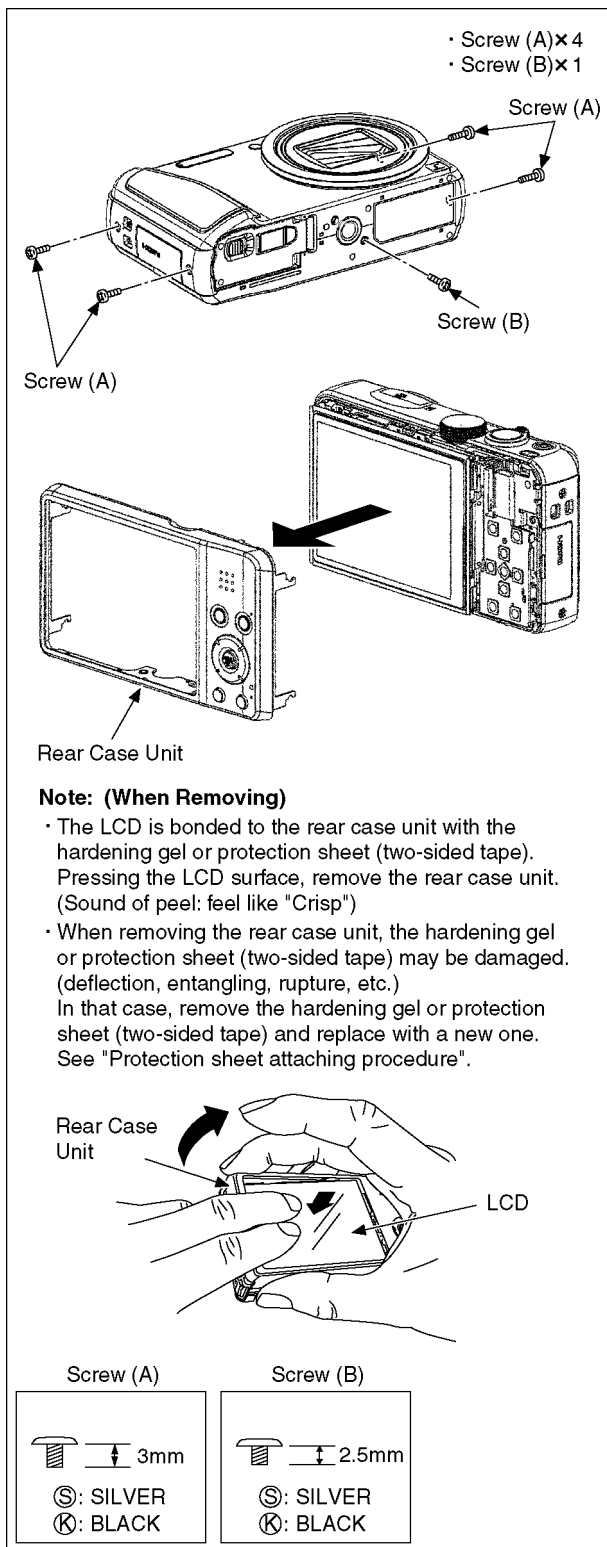


Fig. D1-1

Protection sheet attaching procedure:

1. Remove the protection sheet from the base sheet and fold the flap of the separator to the two-sided tape side.

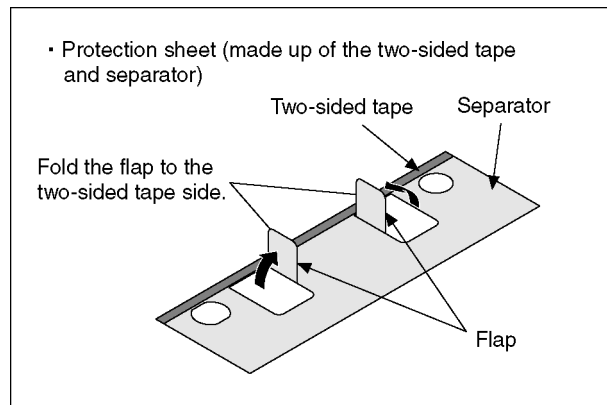


Fig. D1-2

2. Slightly tilt the separator to prevent the two-sided tape's adhesion. Align the flap of the separator with the end of the rear case, and then attach according to the fig. below.

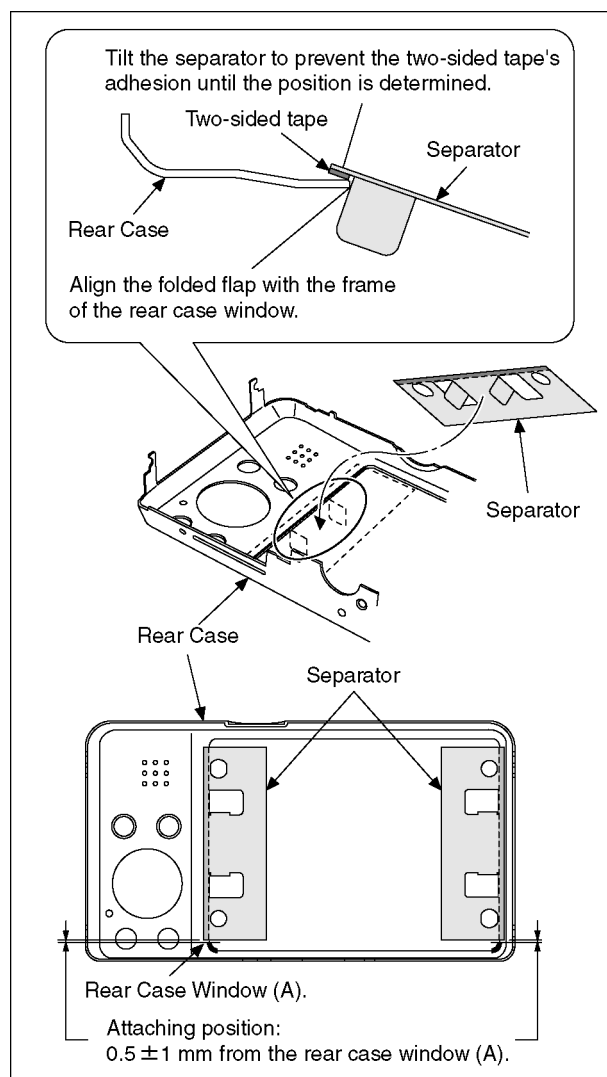


Fig. D1-3

3. Press the separator firmly and attach the two-sided tape.
4. Remove the separator slowly and carefully.
Check if there is nothing sticking out from the rear case window frame.

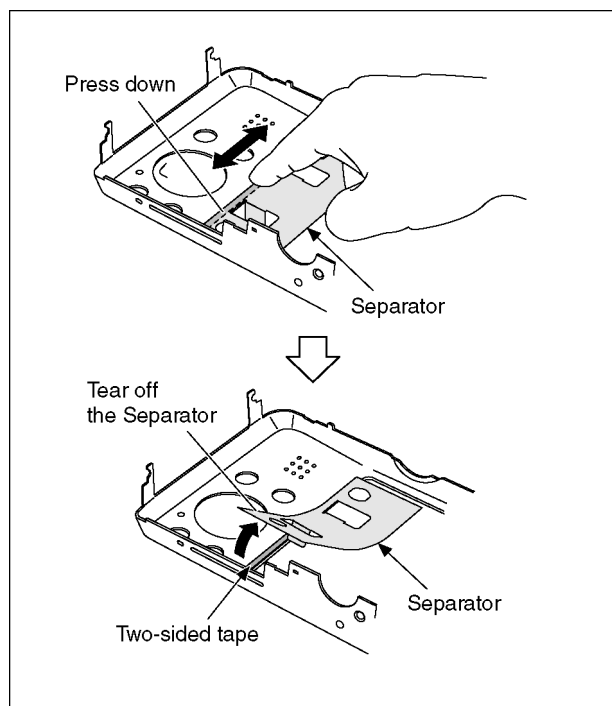


Fig. D1-4

8.3.2. Removal of the Front Case Unit

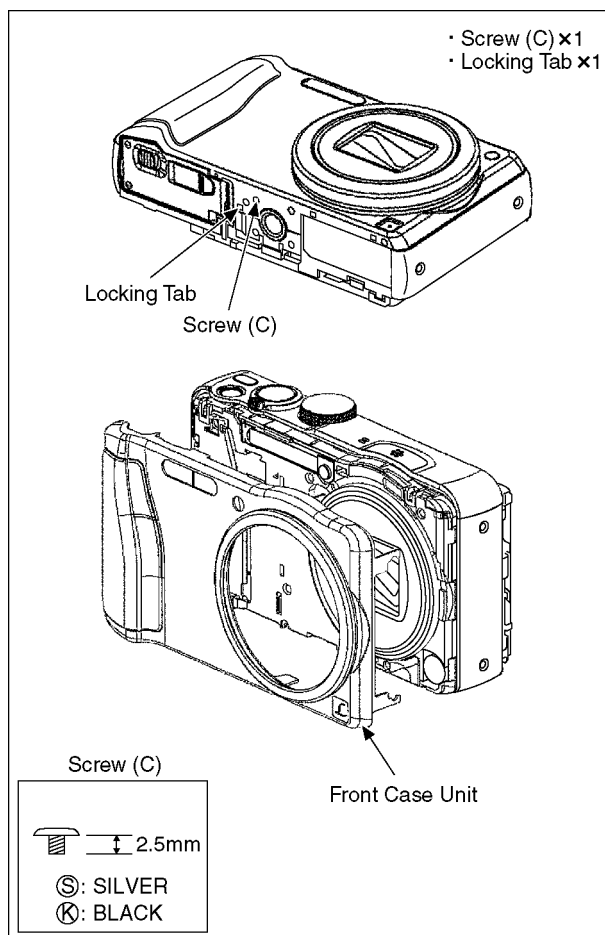


Fig. D2

8.3.3. Removal of the Side Ornament (R), Side Ornament (L) Unit

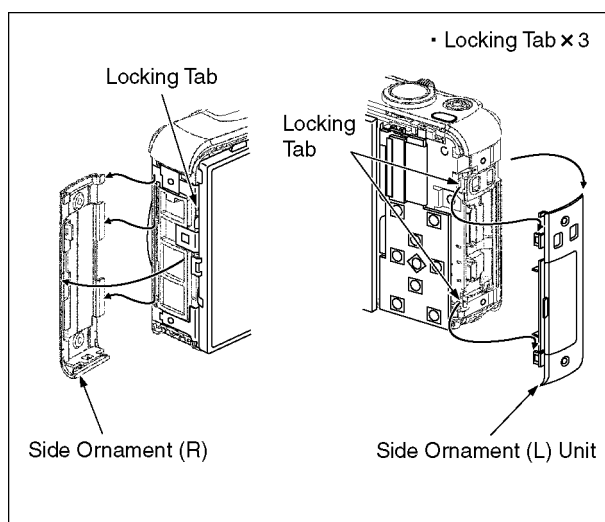


Fig. D3

8.3.4. Removal of the Operation P.C.B.

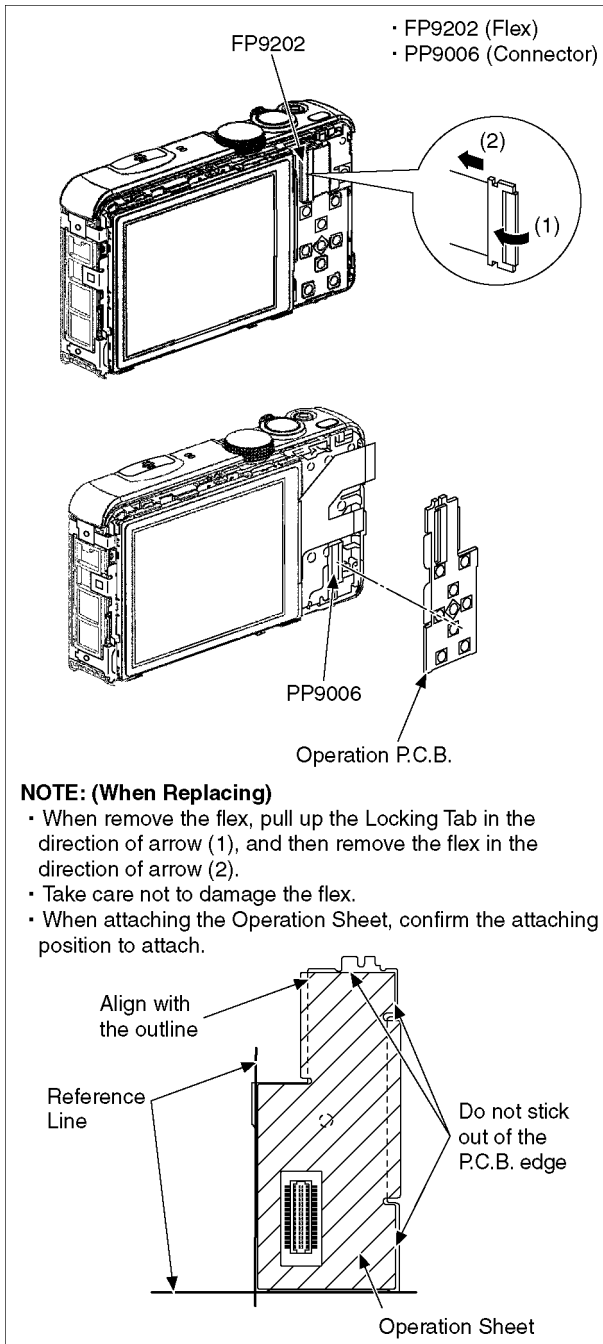


Fig. D4

8.3.5. Removal of the LCD Unit

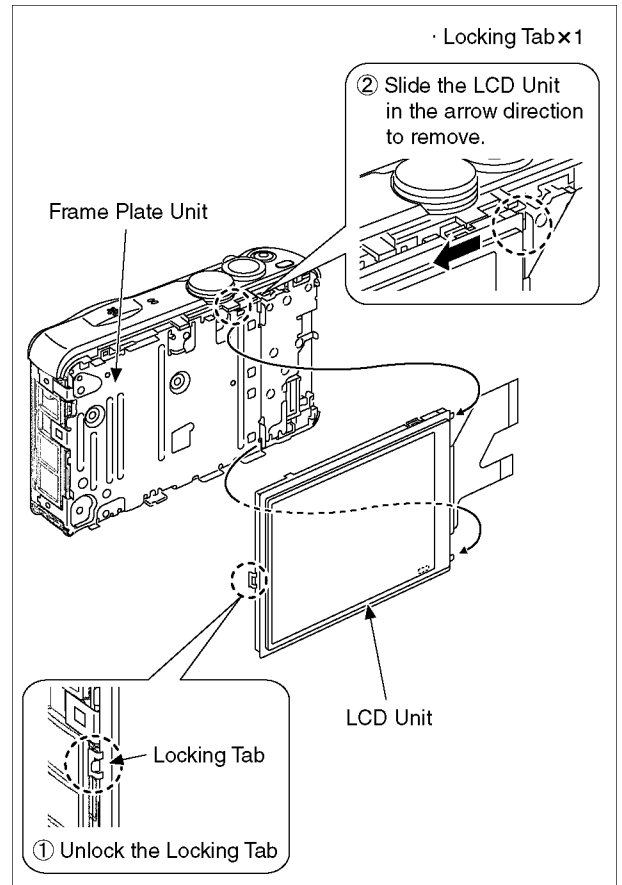


Fig. D5

8.3.6. Removal of the Frame Plate Unit

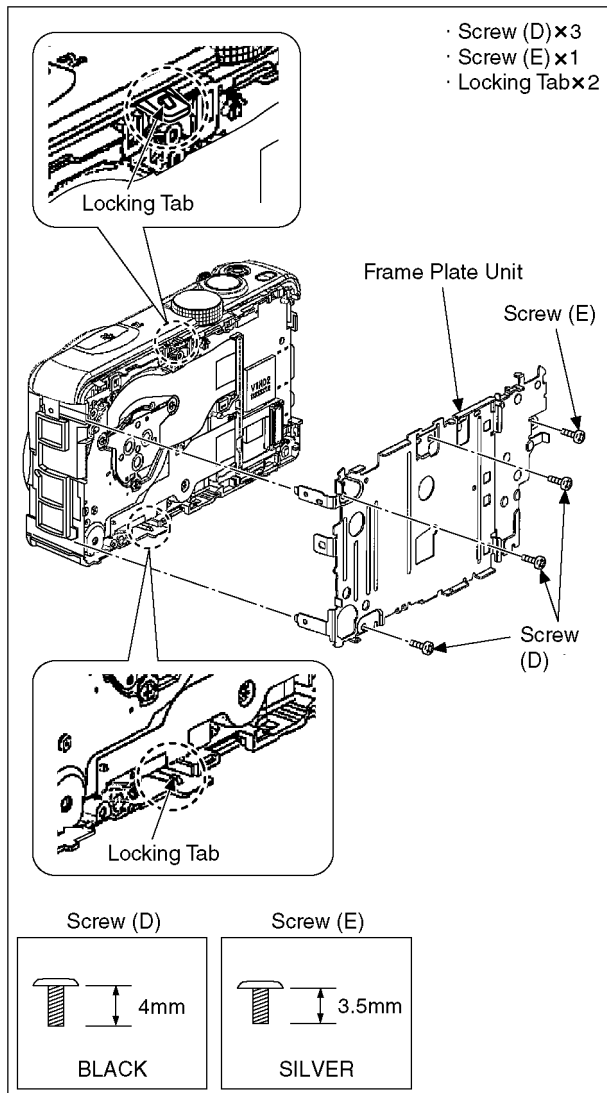


Fig. D6

8.3.7. Removal of the Lens Unit

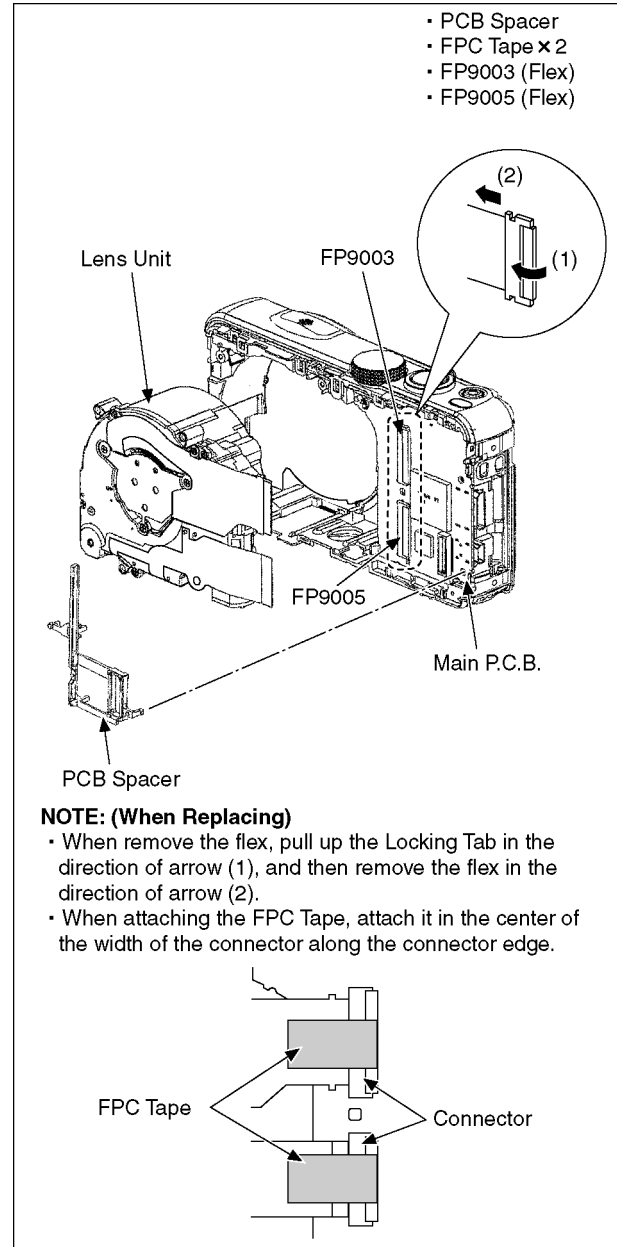


Fig. D7

8.3.8. Removal of the Main P.C.B.

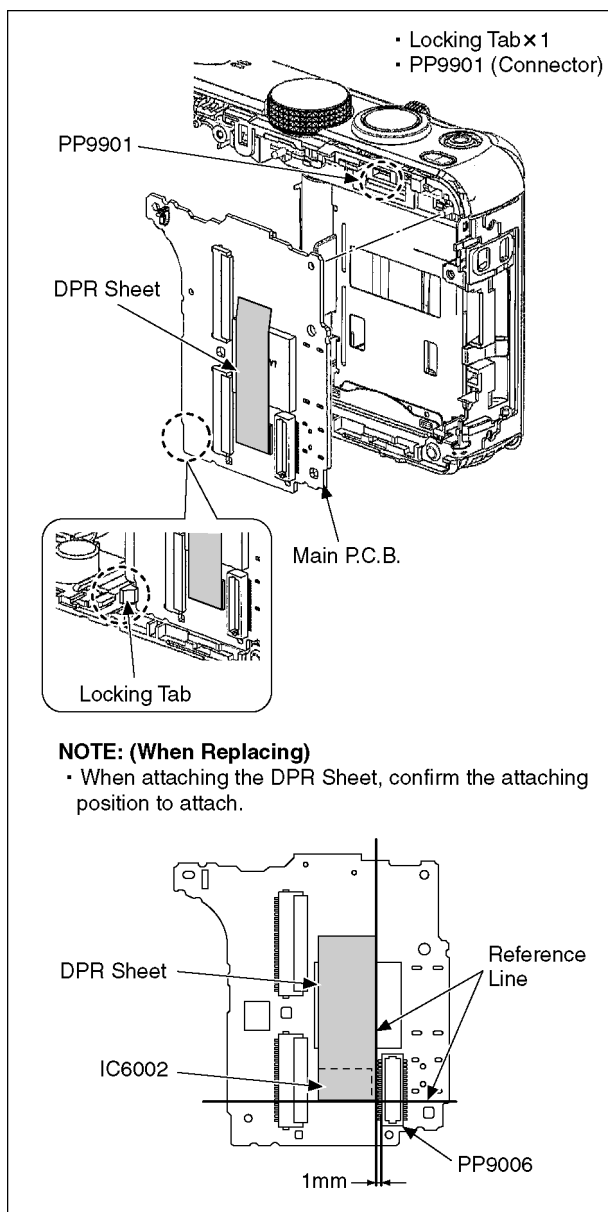


Fig. D8

8.3.9. Removal of the Top Case Unit

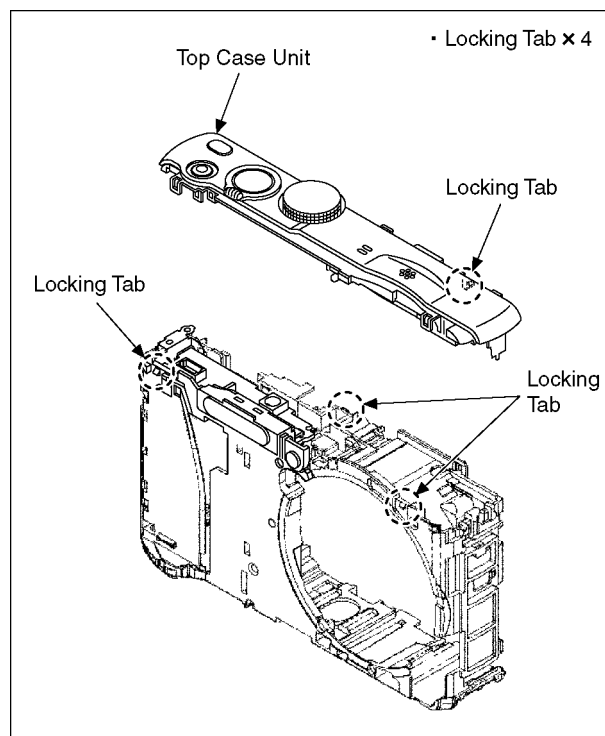


Fig. D9

8.3.10. Removal of the Top P.C.B.

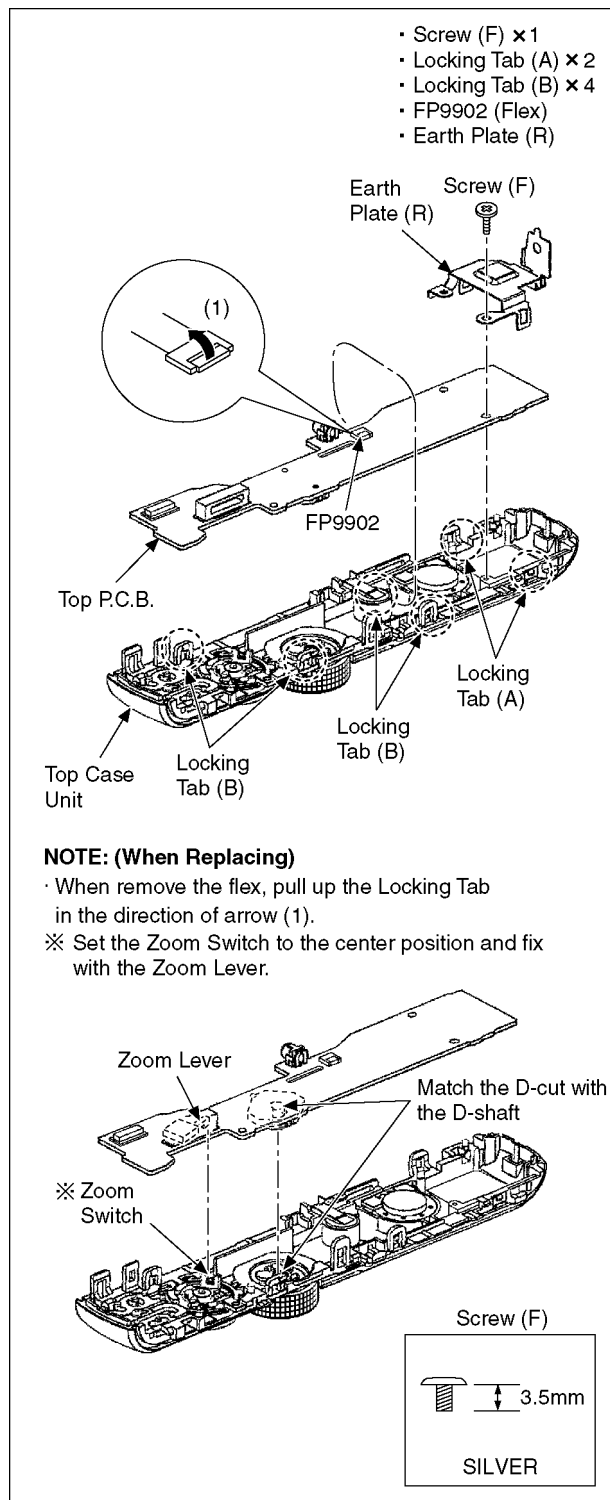


Fig. D10

8.3.11. Removal of the Flash Unit, Flash P.C.B.

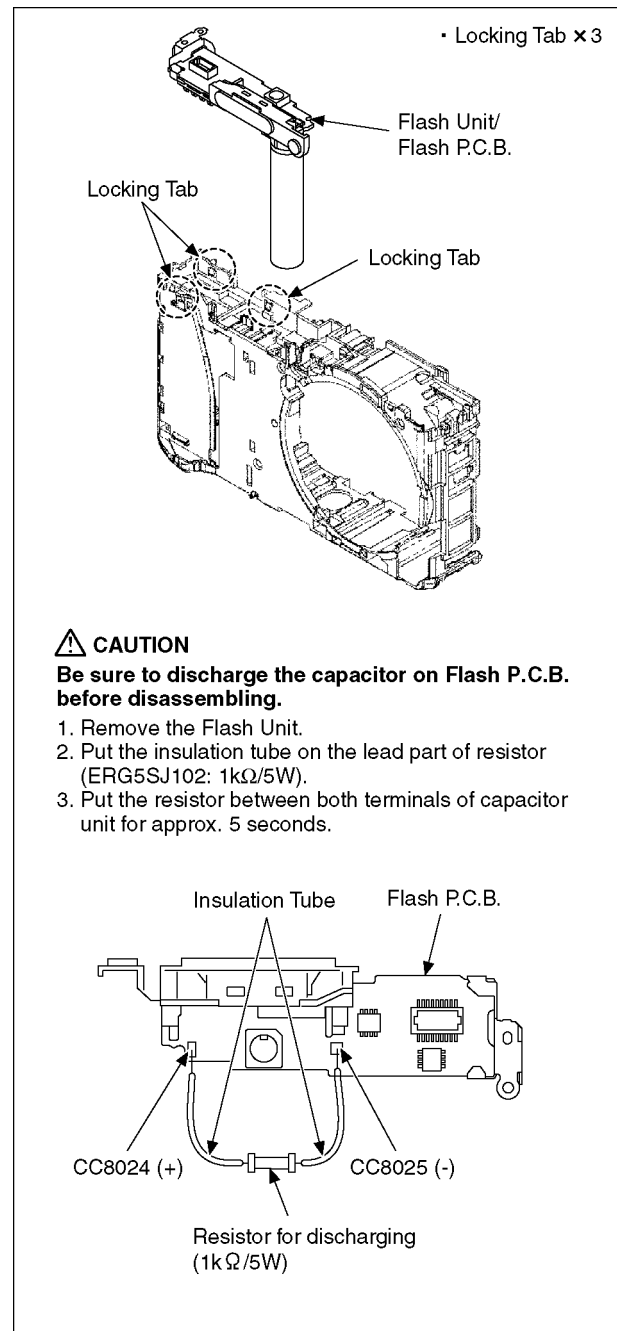


Fig. D11

8.3.12. Removal of the Battery Case

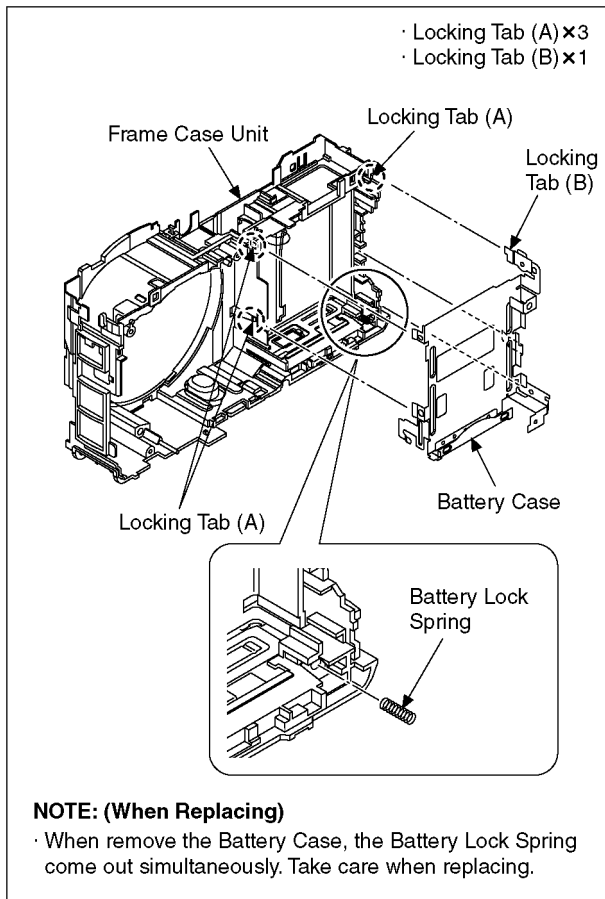


Fig. D12


8.4. Lens Disassembly Procedure

Precaution:


1. Do not remove the MOS when disassembling or re-assembling the lens in order to maintain it clean.
When remove it, refer to item "8.6".
2. Keep dust or dirt away from the lens.
3. To remove dirt or dust from the lens, blow with dry air.
4. Do not touch the lens surface.
5. Use lens cleaning KIT (BK)(VFK1900BK).
6. Apply grease (RFKZ0472) as shown on "THE APPLICATION OF GREASE METHOD" in the figure.
7. Apply a light coat of grease using an object similar to a toothpick.

8.4.1. Removal of the Master Flange Unit

1. Unscrew the 6 screws (A).

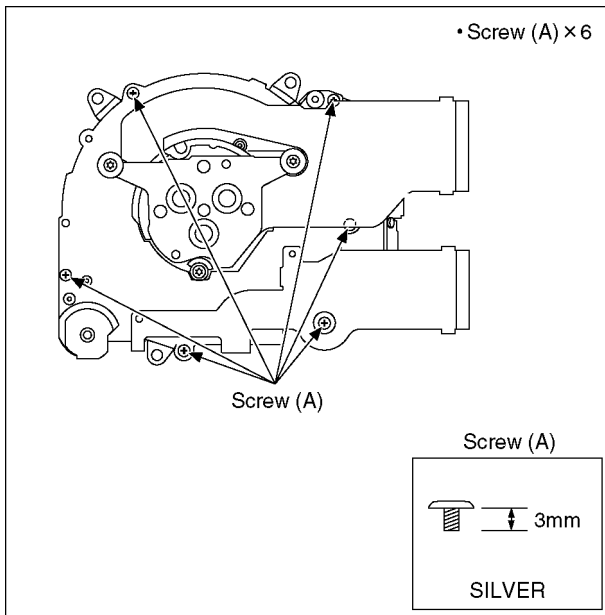


2. Remove the Shutter FPC.
3. Remove the Lens FPC from the positioning boss.
4. Remove the Master Flange Unit and Drive Gear.

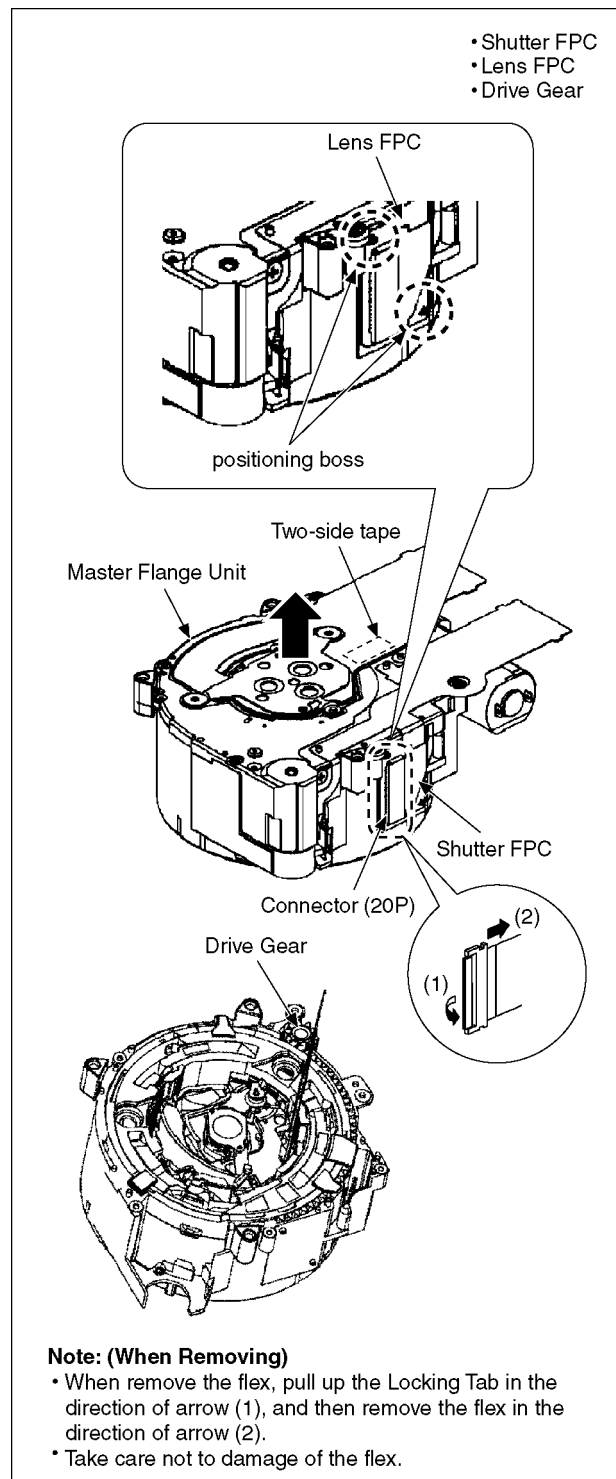


8.4.2. Removal of the Drive Frame Unit, Decorative Frame Unit, Outside Cam Frame, 1st Lens Frame Unit, 2nd Lens Frame Unit, 3rd Lens Frame Unit, Straight Frame and Both Side Cam Frame

1. Turn the Fix Cam Frame Unit in the arrow (1) direction, and align the Δ mark (Fix Cam Frame and Outside Cam Frame and Drive Frame).
2. Push the 1st Lens Frame Unit in the arrow (2) direction from the front of the Lens, and then remove the Unit of Drive Frame Unit, Decorative Frame Unit, Outside Cam Frame, 1st Lens Frame Unit, 2nd Lens Frame Unit, 3rd Lens Frame Unit, Straight Frame and Both Side Cam Frame from the Fix Cam Frame Unit.

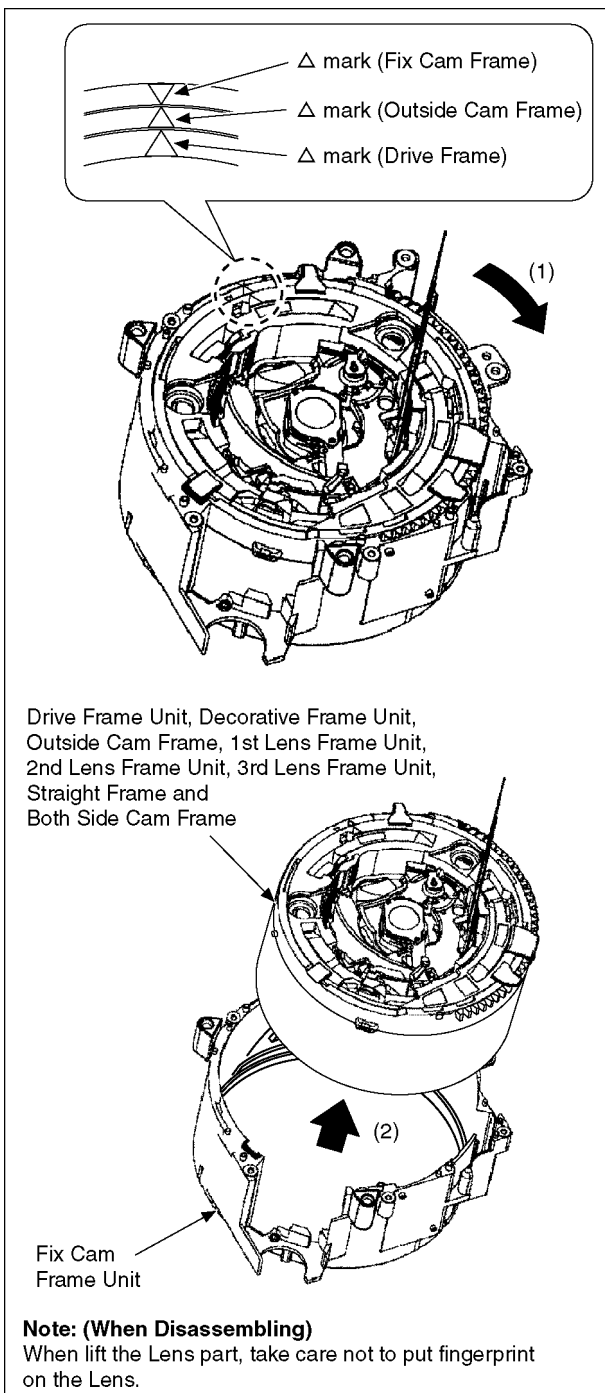


8.4.3. Removal of the Decorative Frame Unit, Outside Cam Frame, 1st Lens Frame Unit, 2nd Lens Frame Unit, 3rd Lens Frame Unit, Straight Frame and Both Side Cam Frame

1. Turn the Outside Cam Frame in the arrow (2) direction, and then align the Δ mark (Drive Frame and Outside Cam Frame).
2. Push the 1st Lens Frame Unit in the arrow (2) direction from the front of the Lens, and remove the Unit of Decorative Frame Unit, Outside Cam Frame, 1st Lens Frame Unit, 2nd Lens Frame Unit, 3rd Lens Frame Unit, Straight Frame and Both Side Cam Frame from the Drive Frame Unit.

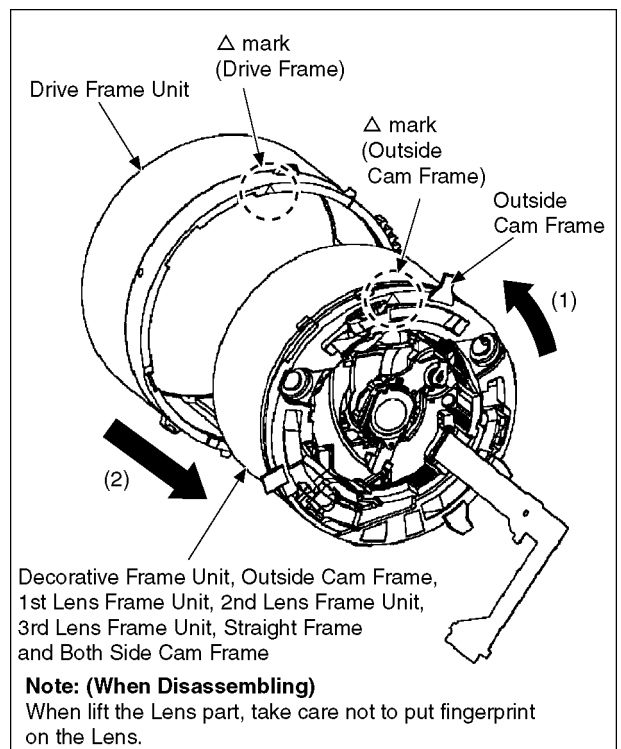


8.4.4. Removal of the Outside Cam Frame, 1st Lens Frame Unit, 2nd Lens Frame Unit, 3rd Lens Frame Unit, Straight Frame and Both Side Cam Frame

- Turn the Decorative Frame Unit in the arrow (1) direction, and remove the Unit of Outside Cam Frame, 1st Lens Frame Unit, 2nd Lens Frame Unit, 3rd Lens Frame Unit, Straight Frame and Both Side Cam Frame from the Decorative Frame Unit in the arrow (2) direction.

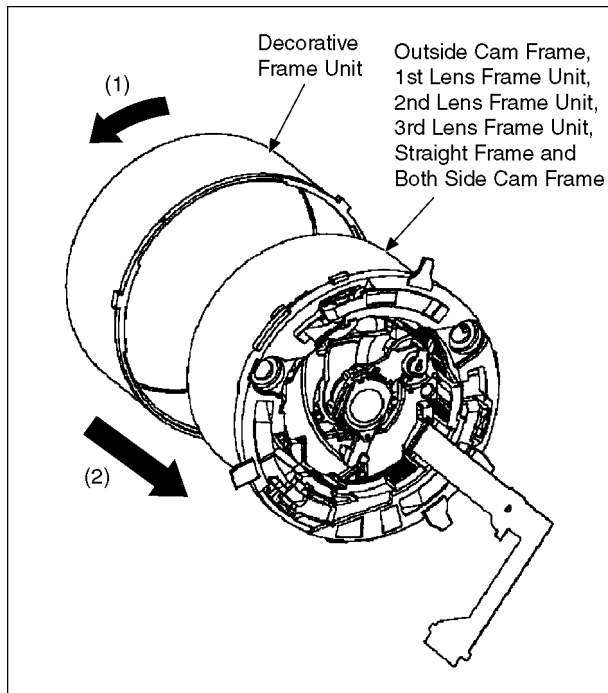


8.4.5. Removal of the 1st Lens Frame Unit, 2nd Lens Frame Unit, 3rd Lens Frame Unit, Straight Frame and Both Side Cam Frame

- Hold the Both Side Cam Frame and turn it in the arrow direction. Align the Δ mark (Outside Cam Frame and Both Side Cam Frame), and then remove the Unit of 1st Lens Frame Unit, 2nd Lens Frame Unit, 3rd Lens Frame Unit, Straight Frame and Both Side Cam Frame from the Outside Cam Frame.

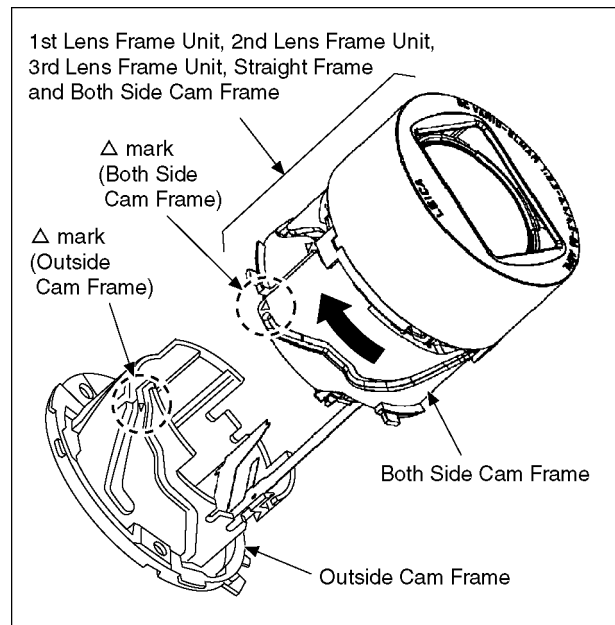


8.4.6. Removal of the 1st Lens Frame Unit

- Turn the 1st Lens Frame Unit in the arrow (1) direction a little, and remove the Unit of 2nd Lens Frame Unit, 3rd Lens Frame Unit, Straight Frame and Both Side Cam Frame in the arrow (2) direction.

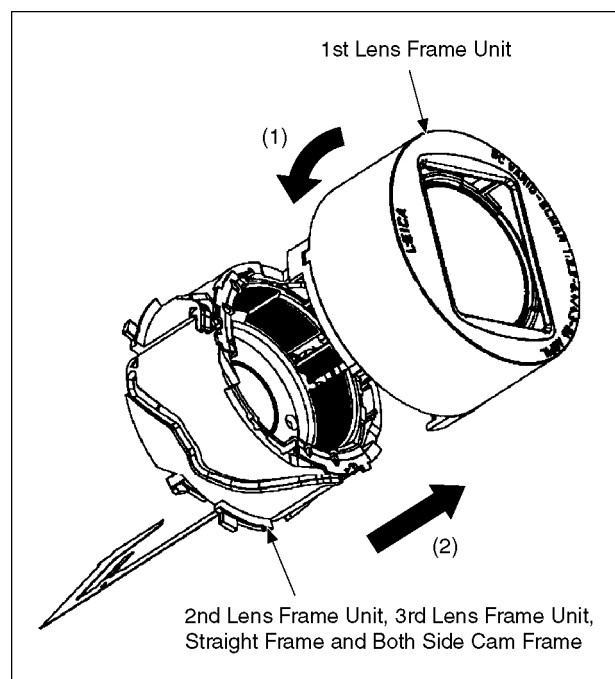


8.4.7. Removal of the 2nd Lens Frame Unit

1. Hold the Straight Frame and turn it in the arrow (1) so that the Δ mark (2nd Lens Frame Unit) meets the Δ mark (Straight Frame).
2. Pushing the 3rd Lens Frame Unit in the arrow (2) direction from the front of the Lens, turn it in the arrow (3) direction.

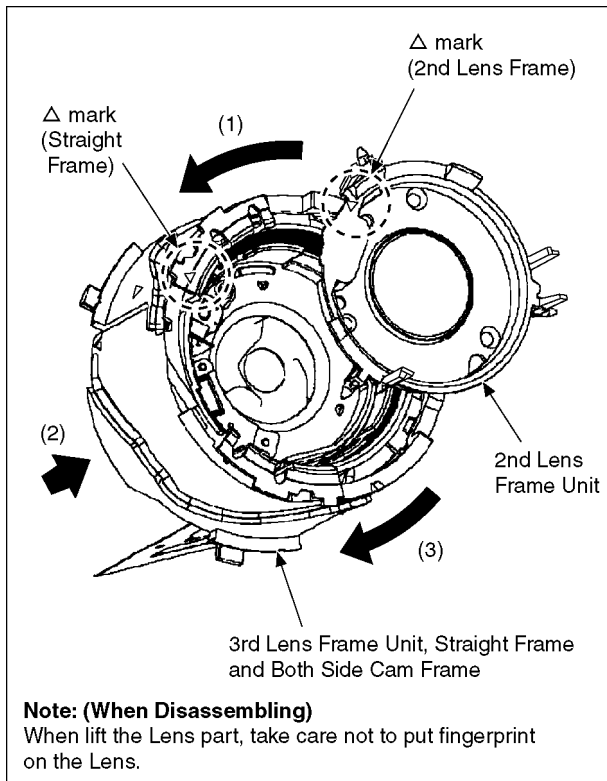

8.4.8. Removal of the 3rd Lens Frame Unit


- Push the 3rd Lens Frame Unit in the arrow direction from the front of the Lens, and remove the 3rd Lens Frame Unit from the Straight Frame and Both Side Cam Frame.

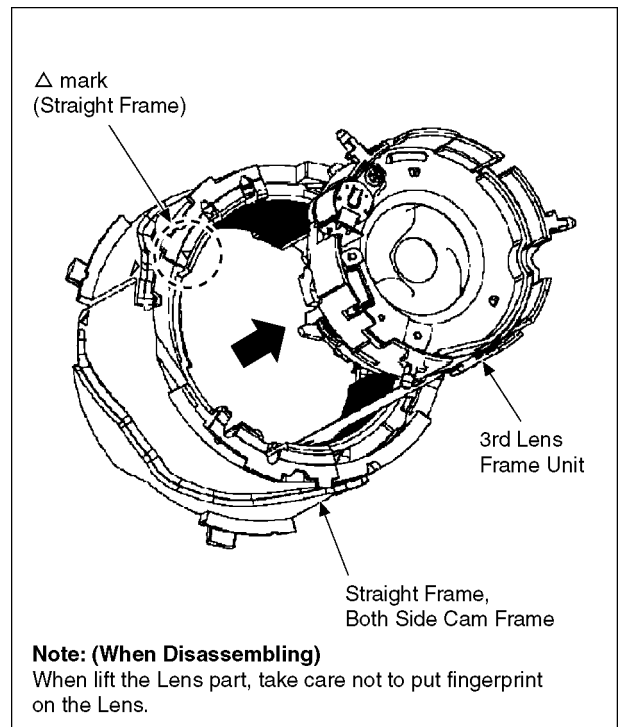

8.4.9. Removal of the Straight Frame

- Turn the Straight Frame in the arrow direction, and align the Δ mark (Straight Frame and Both Side Cam Frame) in the direction as below.


Align the Bayonet Key with the Bayonet Inlet, and remove the Straight Frame from the Both Side Cam Frame.

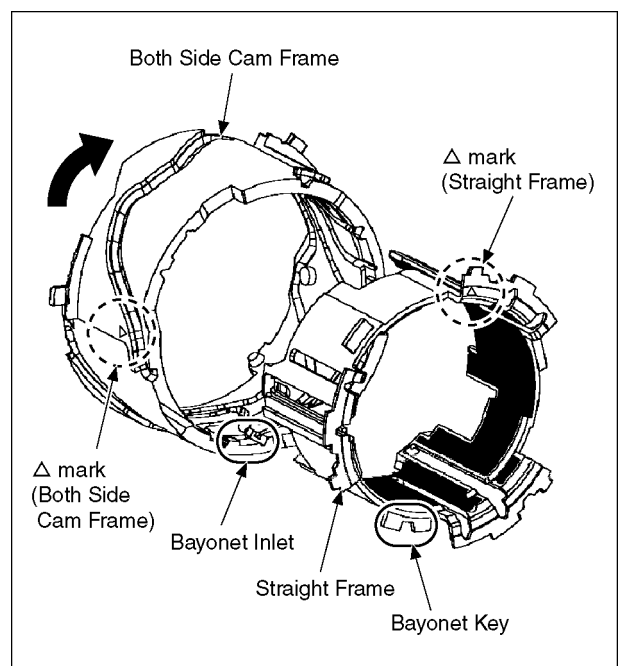


8.5. Assembly Procedure for Lens (Revised Version)

8.5.1. Insert the Straight Frame


1. Insert the Straight Frame into the Both Side Cam Frame as below.
(The phase difference between the two Δ marks is about 90 degrees.)
*The Δ mark of the Straight Frame is under the Shading Sheet.

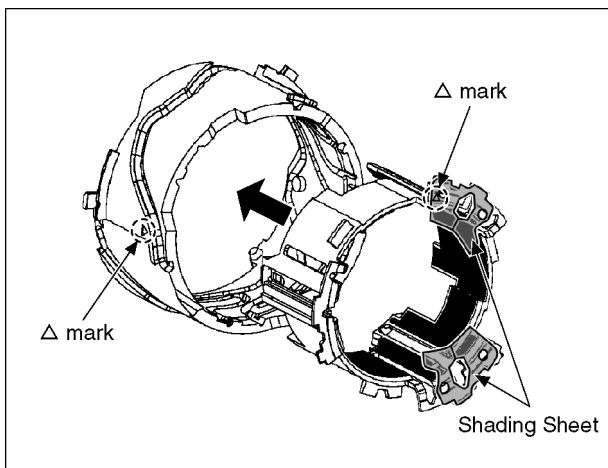

2. Insert the Bayonet Key of the Straight Frame into the Bayonet Inlet of the Both Side Cam Frame.
(Pass the convexity of Bayonet Inlet through the concavity of Bayonet Key.)

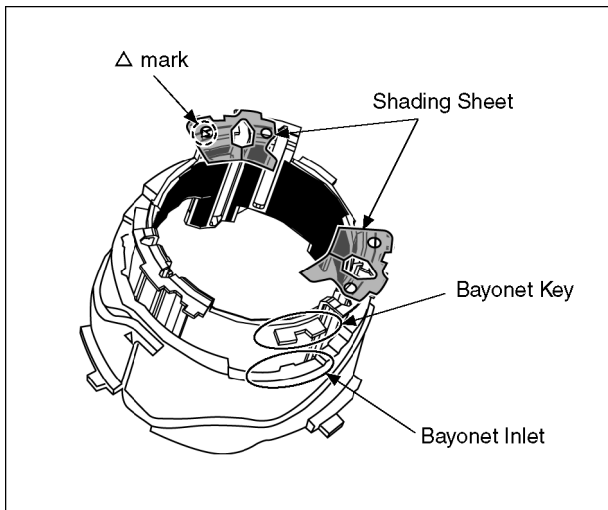


3. Turn the Straight Frame about 90 degrees in the arrow direction so that the Δ mark of Straight Frame comes close to the mark of Both Side Cam Frame.
*As the drawing below indicates, align the Grooves of Straight Frame with the one of Both Side Cam Frame.

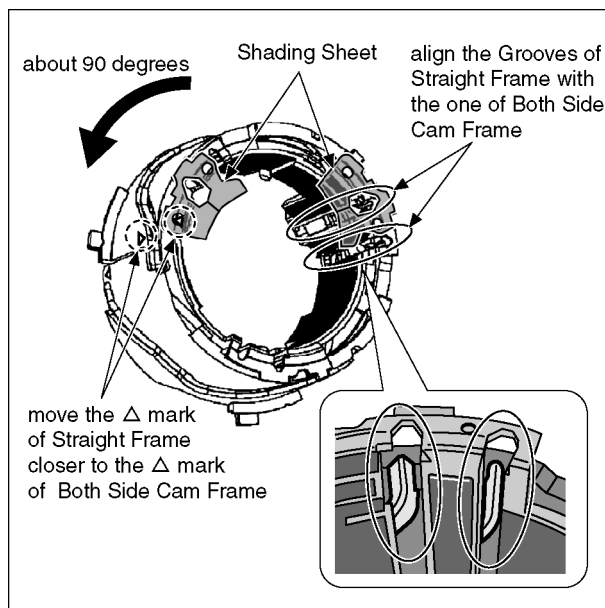


8.5.2. Insert the 3rd Lens Frame Unit and the 2nd Lens Frame Unit

1. Insert the 3rd Lens Frame Unit as the drawing below indicated.
*Align the Stepping Motor of the 3rd Lens Frame Unit with the Δ mark of the Straight Frame Unit, then put the each Cam Pin of the 3rd Lens Frame Unit in the each Groove of the Straight Frame Unit.

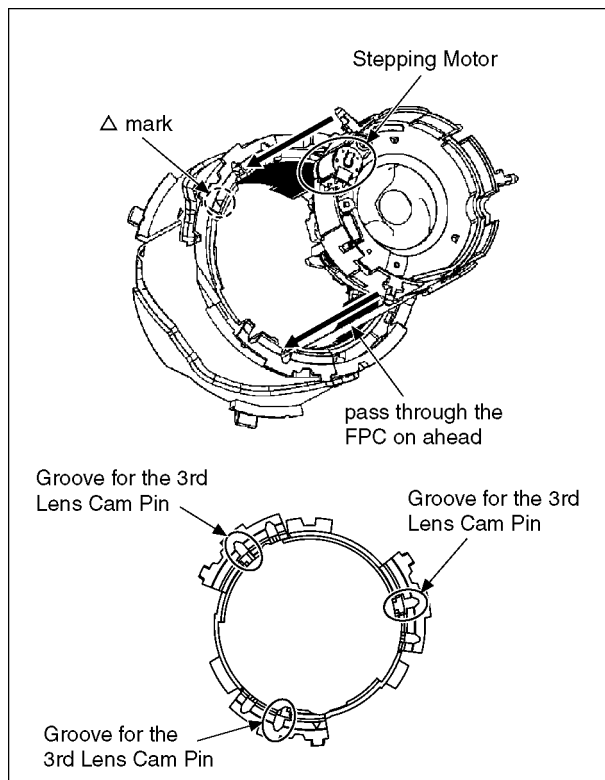


2. Insert the 2nd Lens Frame Unit as the drawing below indicated.

*Align the Δ mark of the 2nd Lens Frame Unit with the one of the Straight Frame Unit, then put the each Cam Pin of the 2nd Lens Frame Unit in the each Groove of the Straight Frame Unit.

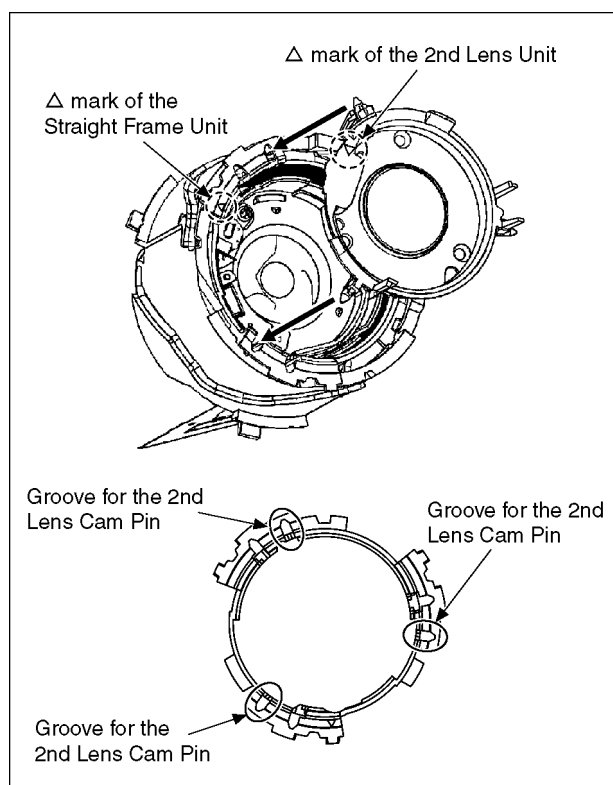


3. While pushing the 3rd Lens Frame Unit and the 2nd Lens Frame Unit, turn the Straight Frame Unit in the arrow direction to the end.(about 30 degree)

*Need to confirm that the two Lens Frames move smoothly when the Straight Frame Unit rotates in two directions.

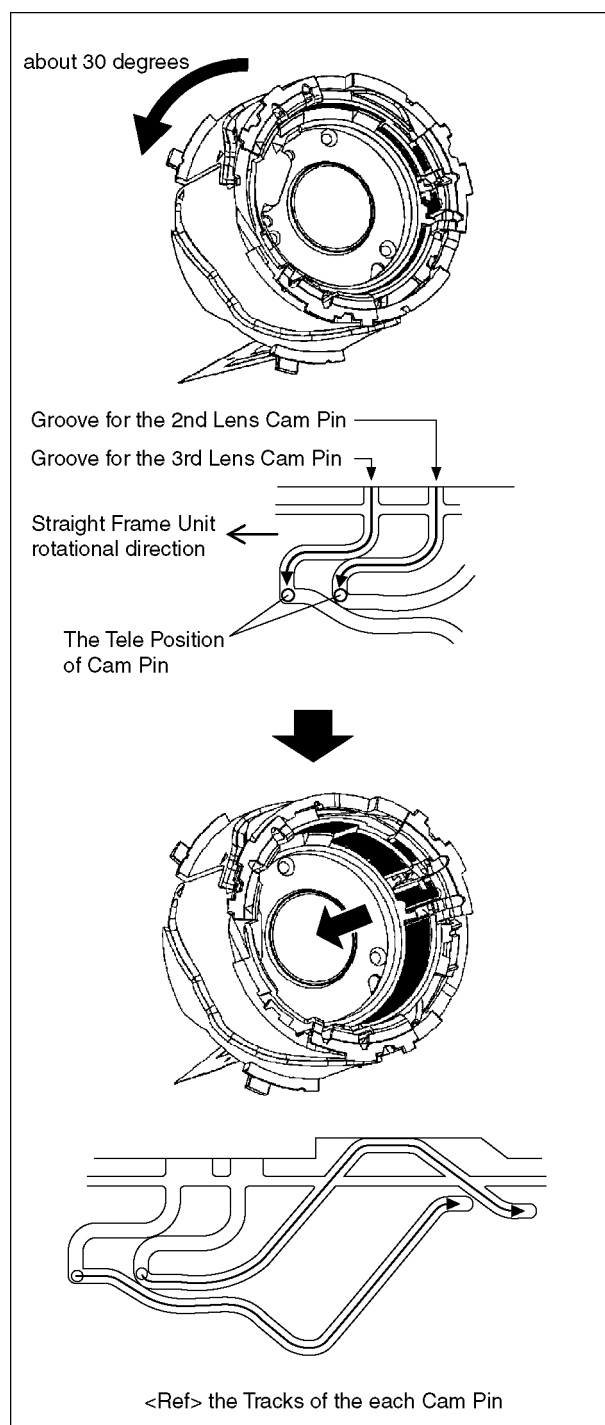


8.5.3. Insert the 1st Lens Frame Unit and the Outside Cam Frame Unit


1. Insert the 1st Lens Frame as the drawing below indicated.
Pass the Cam Pin of the "LEICA" side of the 1st Lens Frame Unit through the Area of Cam Pin Insertion near the mark of Both Side Cam Frame Unit

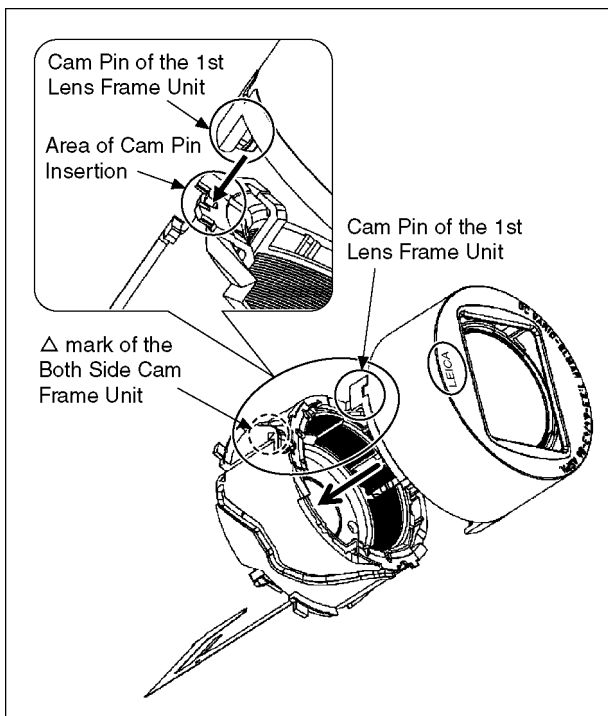

2. Move the △ mark of the Both Side Cam Frame Unit closer to the △ mark of the Outside Cam Frame Unit, then turn the 1st Lens Frame Unit just a bit in the arrow direction.(about 2 degrees)
*Hold the Cam Pin of the Both Side Frame Unit close to the Straight Key of the Straight Frame Unit.
3. Insert the Straight Key and the Cam Pin into the following grooves.
(1)The Straight Key of the Straight Unit -> The groove for the Straight key of the Outside Cam Frame Unit
(2)The Cam Pin of the Both Side Cam Frame Unit -> The groove for the Cam Pin of the Outside Cam Frame Unit

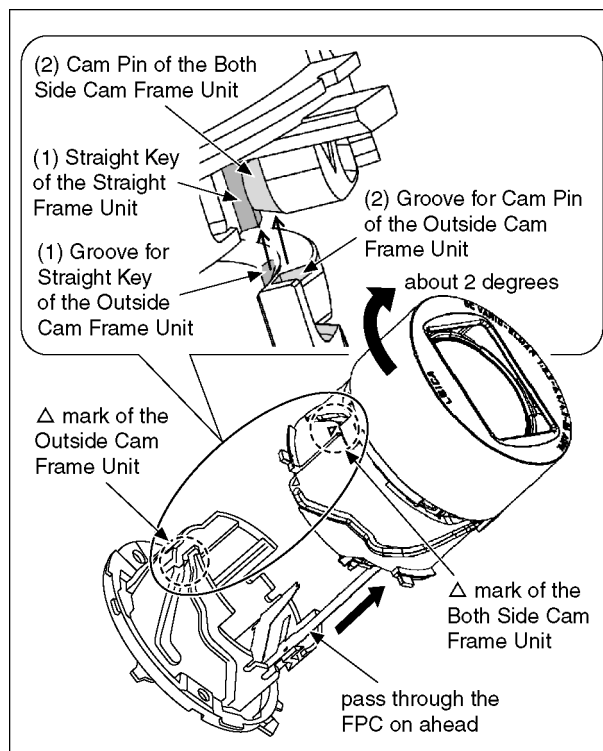


4. Turn the Both Side Cam Frame Unit to the end in the arrow direction while holding the Outside Cam Frame Unit. (About 118.5 degrees)
 *Confirm that 1st Lens Frame Unit does not rotate when the Both Side Cam Frame Unit rotates.
 (It's the confirmation that previous insertion is done normally.)

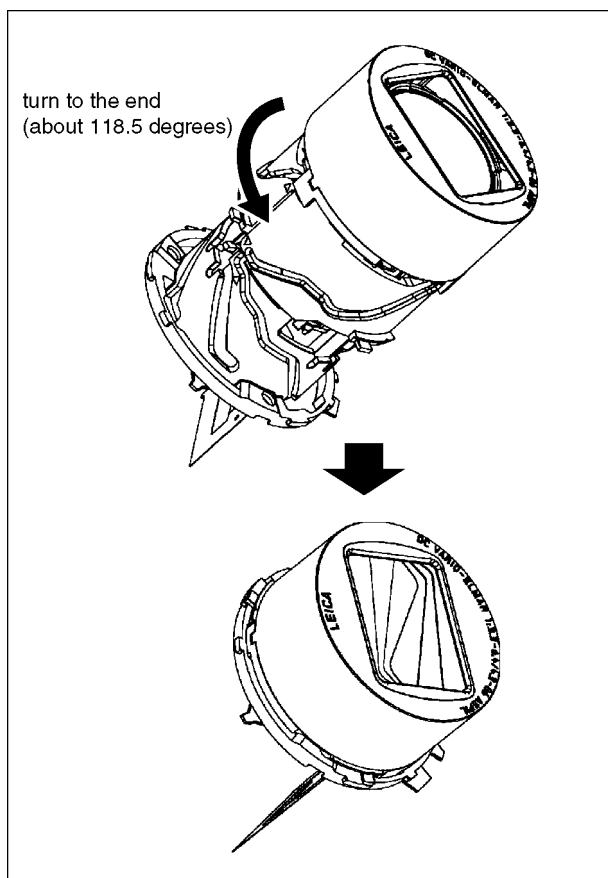


8.5.4. Insert the Decorative Frame Unit


1. Hold the Straight Key (Both Side Cam Frame), turn it in the arrow direction and align with the Straight Key (Outside Cam Frame).

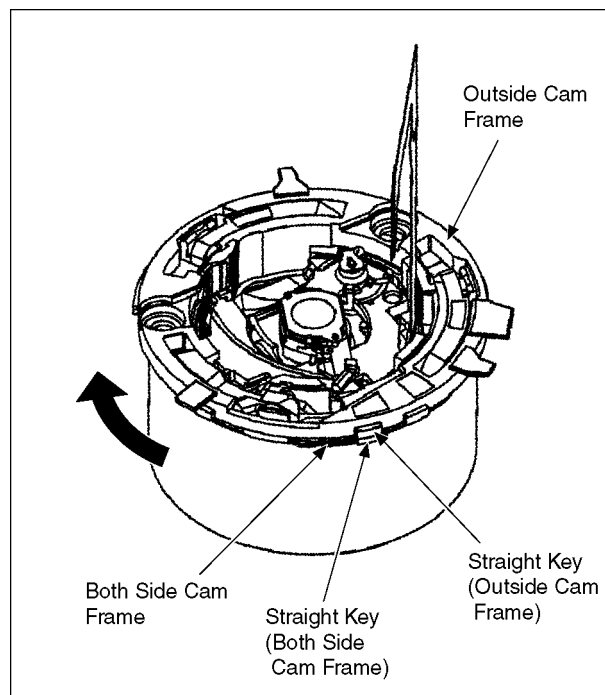

2. Insert 2 toothpicks (rotation stopper) in the position as below.

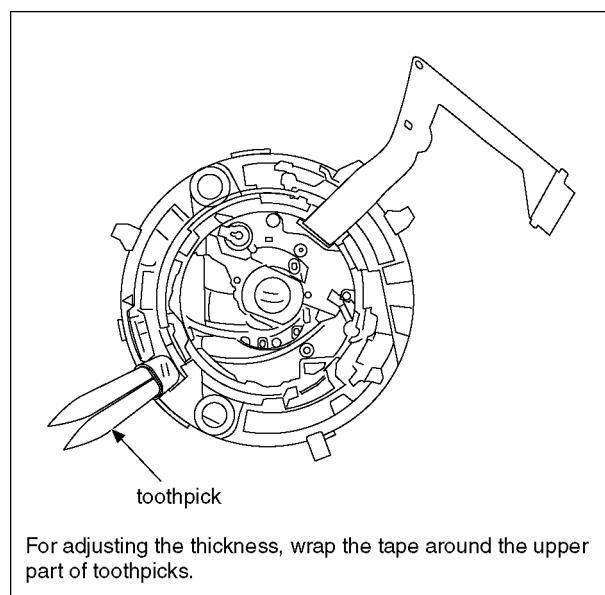


3. Align the Δ mark (Decorative Frame) with the Straight Key (Both Side Cam Frame), and install the Unit of Outside Cam Frame, 1st Lens Frame Unit, 2nd Lens Frame Unit, 3rd Lens Frame Unit, Straight Frame and Both Side Cam Frame to the Decorative Frame Unit.
4. Turn the Decorative Frame Unit in the arrow (2) direction so that the Δ mark (Decorative Frame) meets the mark (Outside Cam Frame).

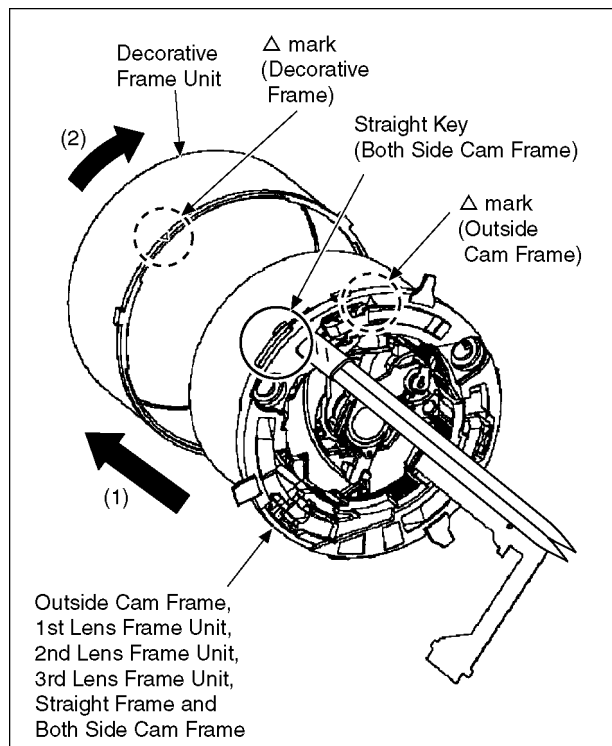

8.5.5. Insert the Drive Frame Unit

- Align the Δ mark (Drive Frame and Outside Cam Frame), and install the Unit of Decorative Frame Unit, Outside Cam Frame, 1st Lens Frame Unit, 2nd Lens Frame Unit, 3rd Lens Frame Unit, Straight Frame and Both Side Cam Frame to the Drive Frame Unit.


*Keep the toothpicks (rotation stopper) inserted.

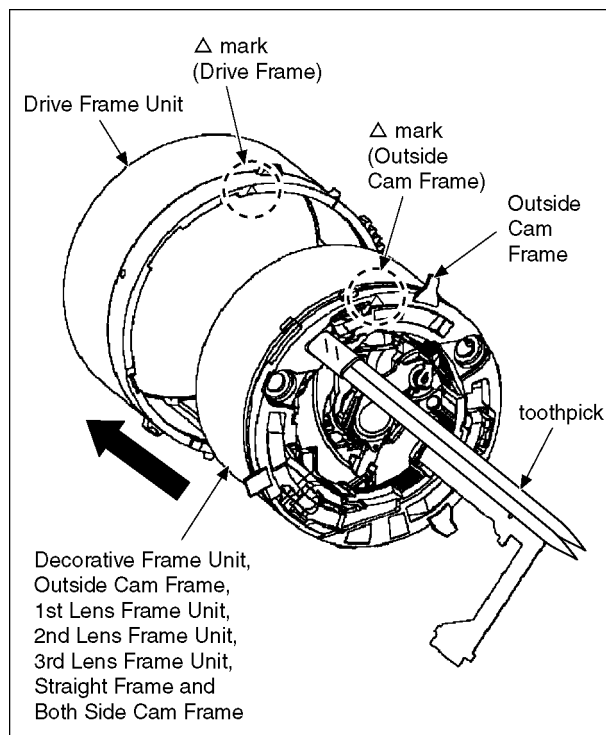


8.5.6. Insert the Fix Frame Unit

1. Install the Drive Gear to the Fix Cam Frame Unit.
2. Align the Δ mark (Outside Cam Frame and Drive Frame and Fix Cam Frame), and install the Unit of Drive Frame Unit, Decorative Frame Unit, Outside Cam Frame, 1st Lens Frame Unit, 2nd Lens Frame Unit, 3rd Lens Frame Unit, Straight Frame and Both Side Cam Frame to the Fix Cam Frame Unit.

*Keep the toothpicks (rotation stopper) inserted.

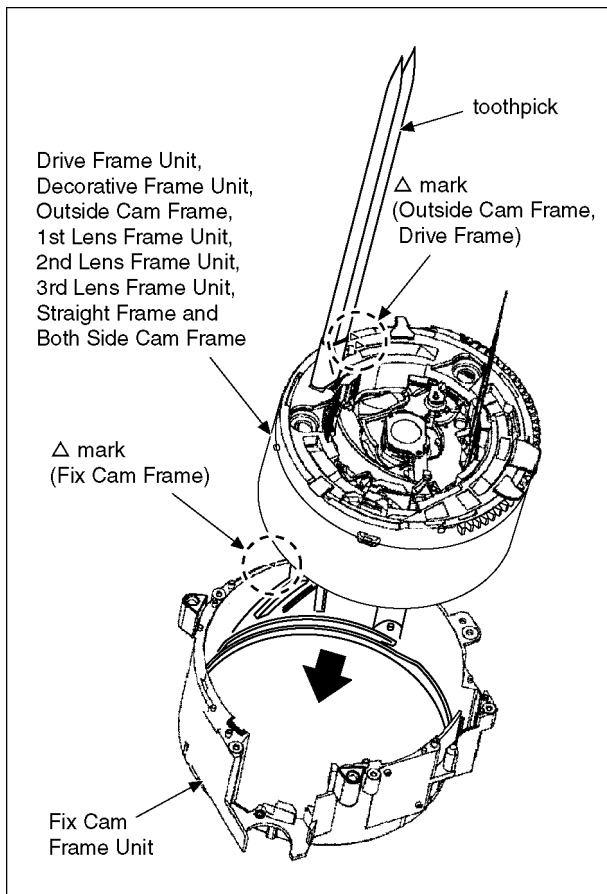

3. Remove the toothpicks (rotation stopper) and insert the Drive Gear.

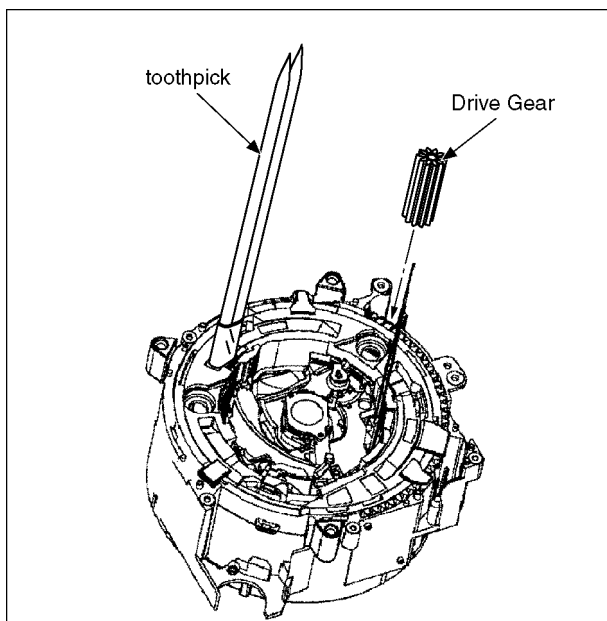

8.5.7. Insert the Master Flange Unit


Note: (When Installing)

Refer to "The Application of Grease Method" when installing the Master Flange Unit.


Take Care not to damage the flex.

Take Care not to tuck in to the Master Flange Unit, When inserting the Shutter Flex.

1. Turn the Drive Frame Unit to the Wide position as below.
2. Push the Hole of the Shutter Flex to the Boss of the Master Flange Unit tightly.
3. Place the Shutter Flex following the Guide of the Fix Cam Frame, and install the Master Flange Unit to the Unit of Fix Cam Frame Unit, Drive Frame Unit, Decorative Frame Unit, Outside Cam Frame, 1st Lens Frame Unit, 2nd Lens Frame Unit, 3rd Lens Frame Unit, Straight Frame and Both Side Cam Frame.
4. Turn the Drive Frame Unit to the completely retracted position.

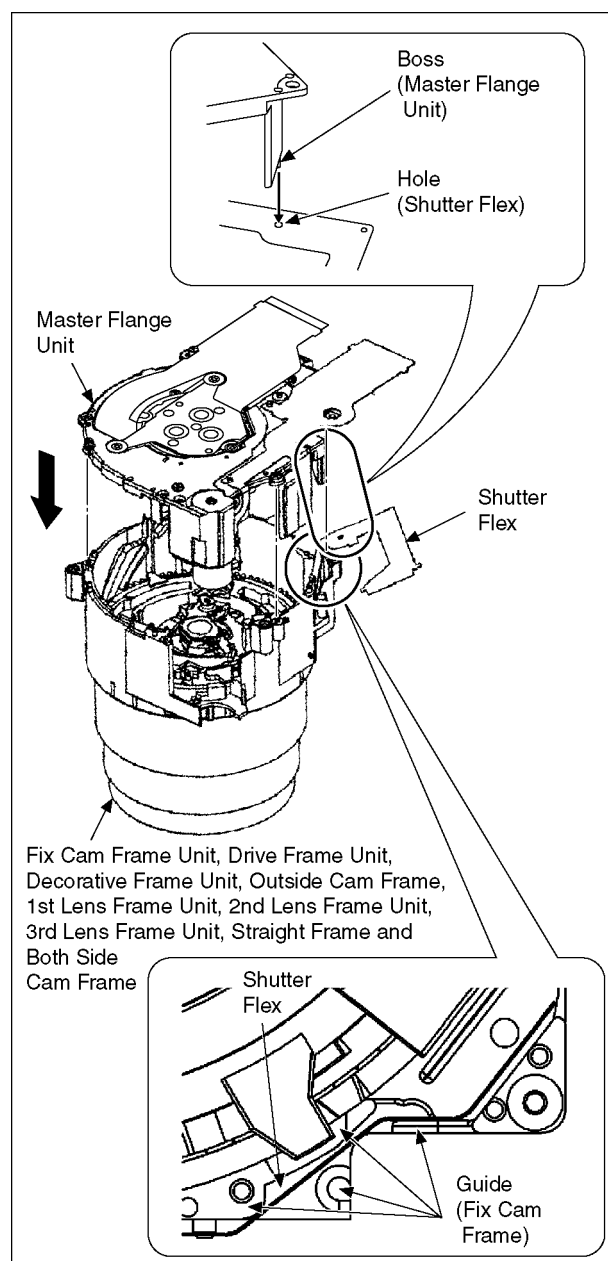


5. Join the Zoom Motor Unit to the Boss, and install to the Fix Cam Frame.

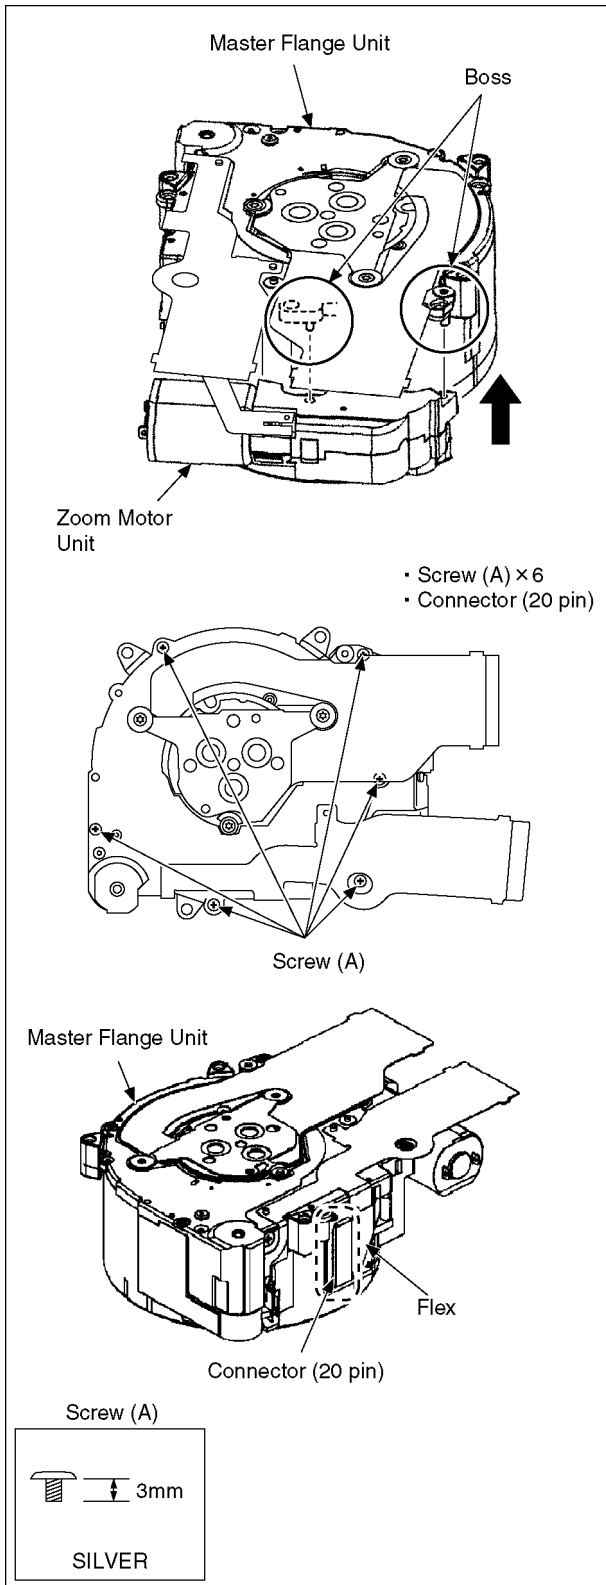

8.6. Removal of the MOS Unit

When remove the MOS Unit once (the Torx screw (A) is loosened even a little), the optical tilt adjustment is required.

When loosen the Torx screw (A), necessary the optical tilt adjustment at the end of assembling. (Refer to item "9.3.2.") To prevent the MOS Unit from catching the dust and dirt, do not remove the MOS Unit except for replacing.

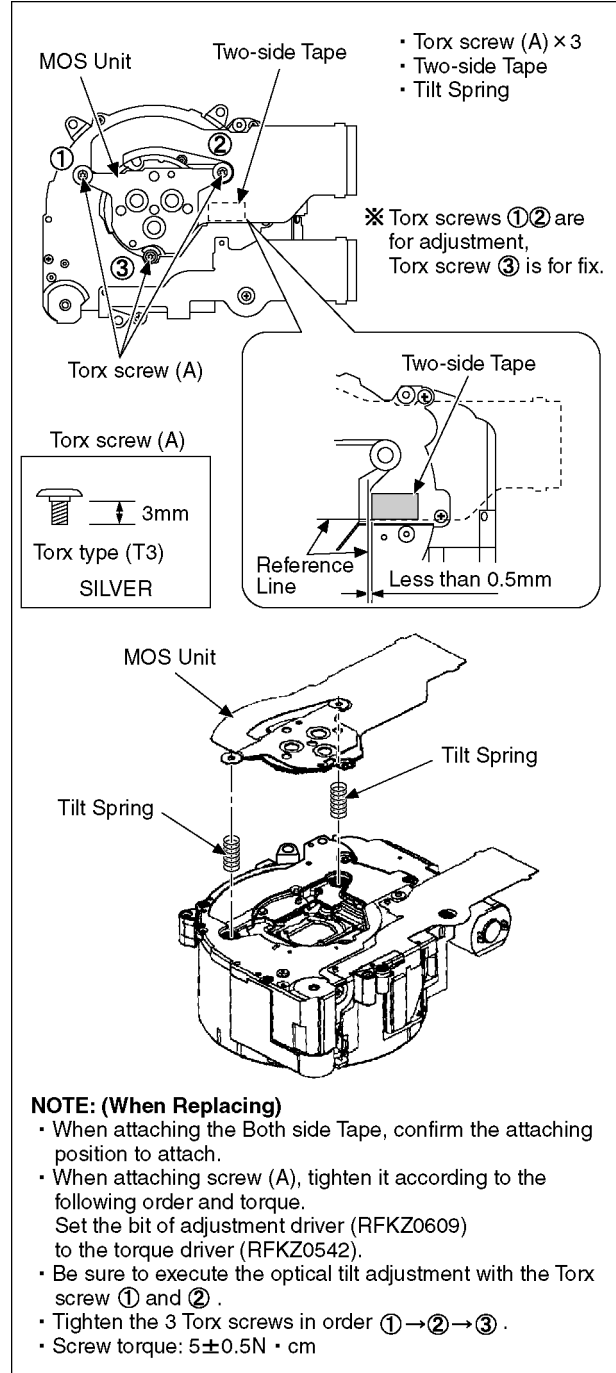

9 Measurements and Adjustments

9.1. Introduction

When servicing this unit, make sure to perform the adjustments necessary based on the part(s) replaced.

When trouble occurs, it is recommended to backup the Flash-rom data before disassembling the unit.

NOTE: (When replacing the Lens unit, Master flange unit and MOS unit)

- When the MOS unit is unavoidably removed for Lens unit, Master flange unit and MOS unit replaced, an optical adjustment is necessary after parts are exchanged.
- It is necessary to use the "DSC_Tilt" software to allow the "Optical tilt adjustment".
- The Adjustment software "DSC_Tilt" is available at "TSN Website".

NOTICE (When Main P.C.B. is exchanged)

Number of necessary adjustment items decreases by copying the backup data to new Main P.C.B. when adjustment data in old Main P.C.B. can be read by ROM_BACKUP "DSC→SD" in "9.2.2. Flash-Rom Data Backup".

For more details, please refer an item "MAIN PCB (to which the backup data was copied)" in the table of "9.3.2. Adjustment Specifications".

IMPORTANT NOTICE (After replacing the Main P.C.B.)

After replacing the Main P.C.B., it is necessary to achieve adjustment.

9.2. Before Disassembling the unit

9.2.1. Initial Setting Release

The cameras specification are initially set in accordance with model suffix (such as EB, EG, GK, GC, and so on.).

Unless the initial setting is not released, an automatic alignment software in the camera is not able to be executed when the alignment is carried out.

Note:

The initial setting should be again done after completing the alignment. Otherwise, the camera may not work properly.

Therefore as a warning, the camera display a warning symbol " ! " on the LCD monitor every time the camera is turned off.

Refer to the procedure described in "3.4.2. INITIAL SETTINGS" for details.

[How to Release the camera initial setting]

Preparation:

Attach the Battery to the unit.

Set the recording mode dial to PROGRAM AE mode.

Step 1. Temporary cancellation of "INITIAL SETTINGS":

While pressing the UP of Cursor button and MOTION PICTURE button simultaneously, turn the Power on.

Step 2. Cancellation of "INITIAL SETTINGS":

Press the PLAYBACK button.

While pressing UP of Cursor button and MOTION PICTURE button simultaneously. (The camera will beep after this.)

Turn the Power off. (The warning symbol " ! " is displayed on the LCD monitor.)

9.2.2. Flash-Rom Data Backup

Number of necessary adjustment items decreases by copying the backup data to new Main P.C.B. when adjustment data in old Main P.C.B. can be read by ROM_BACKUP "DSC→SD".

It is recommended to backup the Flash-rom data as the way of return when trouble occurs before disassembling the unit depending on each case.

[ROM_BACKUP (Method of Non-PC backup)]


1. Insert the Memory Card into the camera.
2. Set the camera to "Temporary cancellation of the initial settings".
3. Select the "SETUP" menu.

From the "SETUP" menu, select "ROM BACKUP".

Note:

This item is not listed on the customer's "SET UP" menu.


4. When this "ROM_BACKUP" item is selected, the following submenus are displayed.

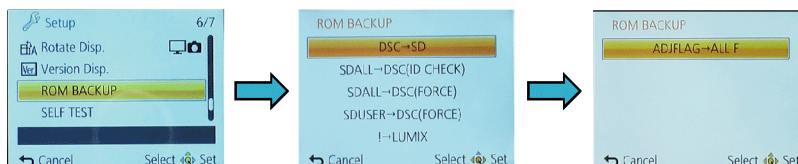

Item	Function	Details
DSC → SD	Save all the DSC's Flash-rom data to Memory Card	- DSC's Flash-rom data is saved to the Memory Card as a data file. (DATA BACKUP) -File location: ROOT DIRECTORY in Memory Card. -File Name: 1) User Setup Information data: <Model No.>U.txt [Depending on the model, more than one file may be generated (e.g. <Model No.>U.TXT and <Model No.>U3.TXT).] 2) Electrical Adjustment data: <Model No.>F.txt [Depending on the model, more than one file may be generated (e.g. <Model No.>F.TXT and <Model No.>F3.TXT).] * If the concerned file already exists, "OVERWRITE?" message is displayed.
SDALL → DSC (ID CHECK)	Write the all data to DSC's Flash-rom from Memory Card	- The backup data stored in the Memory Card is transferred to DSC unit. - ID CHECK: When the model ID is different, data is not transferred.
SDALL → DSC (FORCE)	Write the all data to DSC's Flash-rom from Memory Card	- FORCE: Even if the model ID is different, data is transferred. * If the main PCB is replaced, select "SDALL→DSC(FORCE)".
SDUSER → DSC (FORCE)	Only "User setup information" is written from the saved file in the Memory Card to DSC's Flash-rom.	- Only the user's "setup" setting condition is transferred to DSC unit. - FORCE: Even if the model ID is different, the data is transferred.
! → LUMIX	Shipping set without initializing "User setup information"	- Initial setting is executed without initializing the user's set up setting condition. * The initial setting must be performed while the Self-timer LED is blinking, * The picture data stored in the built-in memory of the DSC is not erased, with this operation.
ADJFLAG → ALL F	Set all adjustment flags completion	Status of the all adjustment flags are changed to "F"(completion).

9.2.3. Light Box

If using VFK1164TDVLB Light Box, remove the lens connection ring by loosening three hexagon screws.

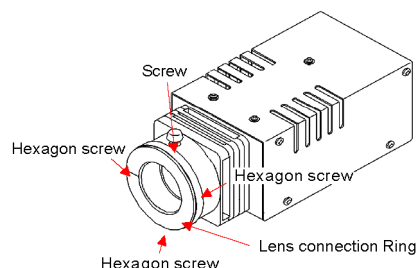

9.3. Details of Electrical Adjustment

9.3.1. How to execute the Electrical Adjustment

It is not necessary to connect the camera to a PC to perform adjustments.

"Flag reset operation" and "Initial setting operation" are required when carrying out the alignment, follow the procedure below.

9.3.1.1. Startup Electrical Adjustment mode

1. Release the initial settings.
2. Insert a recordable Memory Card.
(Without a Memory Card, the automatic adjustment can not executed.)
3. Procedure to set the camera into adjustment mode:
 - a. Set the mode into PROGRAM AE mode.
 - b. Turn the Power off.
 - c. Turn the Power on pressing MOTION PICTURE and MENU/SET simultaneously.
LCD monitor displays "SERVICE MODE".
(Refer to Fig.F3-1)

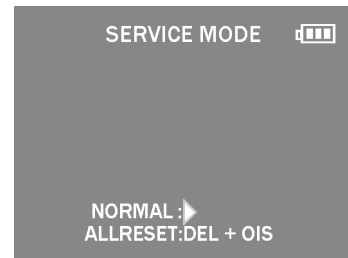


Fig. 3-1

9.3.1.2. Status Adjustment Flag Setting

Reset (Not yet adjusted) the status flag condition.

1. After pressing the DISPLAY button, the LCD monitor displays the Flag status screen (Refer to Fig.3-2.)
2. Select item by pressing the cross keys. (Gray cursor is moved accordingly.)
3. Press the DELETE button.

Note:

The selected item's flag has been changed from "F (green)" to "0 (yellow)".

*(Refer to Fig. 3-3)

*Flag conditions:

F (green)

means that the alignment has been completed and the status flag condition is set. In this case, the flag condition should be reset, if you try to carry out the automatic alignment.

0 (yellow)

means that the alignment has been not "completed" and the status flag condition is "reset". In this case, automatic alignment is available.

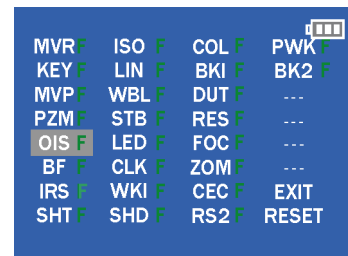


Fig. 3-2

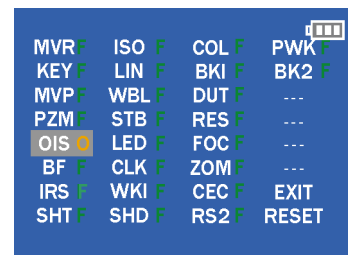


Fig. 3-3

- In case of setting the status flag into set condition again without completion of the alignment, the status flag should be SET by using PC, or UNDO by using ROM BACKUP function.

9.3.1.3. Execute Adjustment

1. Perform step "9.3.1.1." to "9.3.1.2.", to reset the OIS flag status "F" (Set) to "0" (Reset).
2. Press **DISPLAY** button after Flag reset.
OIS Adjustment screen is displayed on the LCD panel.
(Refer to Fig.3-4)
3. Press the shutter button. The adjustment will start automatically.
4. When the adjustment is completed successfully, adjustment report menu appears with Green OK on the LCD monitor. (Refer to Fig.3-5)



Fig. 3-4

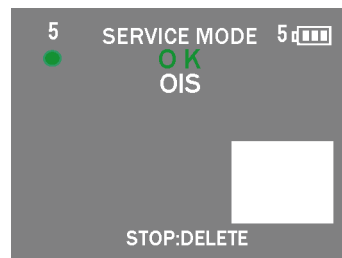


Fig. 3-5

9.3.1.4. Attention point during Adjustment

1. Step "9.3.1.3." procedure shows OIS adjustment as an example. To perform the adjustment, refer to the "9.3.2. Adjustment Specifications" table which shows key point for each adjustment.
2. Do not move the light box, the camera or the chart while adjusting. If one of these is moved accidentally, start the adjustment again.
3. Do not press any buttons/keys until the default menu (Fig.3-6) is displayed on the LCD monitor. Otherwise, adjustment data may not be stored properly.
4. If the adjustment is interrupted accidentally, the alignment data may not be properly saved in the Flash-rom.

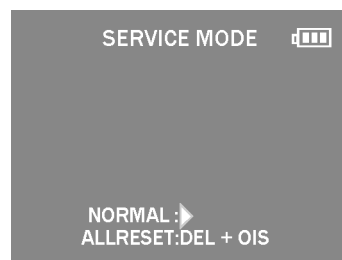


Fig. 3-6

9.3.1.5. Finalizing the Adjustment

1. Several adjustment flags can be reset ("F" into "0") at the same time. In this case, when the adjustment has been completed, the screen will change showing the adjustment for the next item until all reset items are completed.
Also, when the shutter button is pressed, the screen jump to the next adjustment item.
2. To cancel the adjustment mode while in the process of performing the adjustment, follow this procedures.
(1) Press "Right of cross key" button.

Note:

*.If adjustment is cancelled with above procedure, adjustment is not completed. Make sure to adjust it later.

9.3.2. Adjustment Specifications

The following matrix table shows the relation between the replaced part and the Necessary Adjustment.

When a part is replaced, make sure to perform the necessary adjustment(s) in the order indicated.

The table below shows all the information necessary to perform each adjustment.

Adjustment order	Adjustment Item	FLAG	Purpose	Replacing Parts							JIG/TOOLS	SET UP	How to Operate
				MAIN PCB/ VENUS ENGINE (IC6001)/ MCP (IC6002)	MAIN PCB (to which the backup data was copied)	Lens Parts (except MOS UNIT)	MOS UNIT	MIC UNIT	FLASH UNIT	GYRO (IC7101)			
1	Optical Tilt	—	Align the image sensor installation angle to the Lens	—	—	○	○	—	—	—	• OPTICAL AXIS ADJUSTMENT CHART (RFKZ0570) • DRIVER (for OPTICAL AXIS ADJUSTMENT (RFKZ0609 (T3 TORX TYPE)) • CAMERA STAND (RFKZ0333J)	Note: • When the Lens Part (except MOS Unit) or MOS Unit is replaced, make sure to perform the "Optical tilt adjustment" before another "Optical Adjustment". • The "DSC Tilt" software (include the "Optical tilt adjustment process document") for the "Optical tilt adjustment" is specially uploaded on the Web-site.	
2	Venus Zoom	PZM	Venus Zoom Inspection	○	—	—	—	—	—	—	NONE	NONE	1)Press Shutter Button. 2)After completed, the "OK" menu appears.
3	OIS sensor	OIS	OIS sensor output level adjustment	○	—	○	○	—	—	—	NONE	NONE	1)Press Shutter Button (Do not apply any shock and vibration for the camera while adjusting) 2)After completed, the "OK" menu appears.
4	Back focus / GYRO ※4	BF	To have the focus tracking curve be appropriate shape and GYRO sensor adjustment	○	○	○	○ ※1	—	—	○	• COLLIMATOR (RFKZ0422)	1)Set the camera in front of collimator so that the distance from collimator to camera becomes about 5.5 cm as shown in Fig. A. 2)Set the camera angle so that the center of the chart comes to the center of the LCD monitor. [IMPORTANT] The adjustment "NG" might be happened with the following conditions: - Do not put the black colored stuff at the back side of collimator near hunching chart. It needs to get some certain brightness. - Make sure the hunching chart has no dust and dirty condition. - Do not connect a USB cable during adjustment.	1)Press Shutter Button (Do not apply any shock and vibration for the camera while adjusting) 2)After completed, the "OK" menu appears.
5	Iris	IRS	Iris adjustment	○	—	○	○	—	—	—	• LIGHT BOX (VFK1164TDVLB or RFKZ0523)	1)Set the camera in front of LIGHT BOX so that the distance from LIGHT BOX to camera becomes about 15 cm as shown in Fig. B. 2)Aim the LIGHTBOX so that the entire LCD screen becomes fully "white". (No dark area).	1)Press Shutter Button 2)After completed, the "OK" menu appears.
6	Shutter	SHT	Shutter speed adjustment	○	—	○	○	—	—	—		1)Set the camera in front of LIGHT BOX so that the distance from LIGHT BOX to camera becomes about 15 cm as shown in Fig. B. 2)Aim the LIGHTBOX so that the entire LCD screen becomes fully "white". (No dark area).	1)Press Shutter Button 2)After completed, the "OK" menu appears.
7	High brightness coloration	LIN	High brightness coloration adjustment	○	—	○	○	—	—	—	• LIGHT BOX (VFK1164TDVLB or RFKZ0523) • ND FILTER (RFKZ0513 (ND0.3))	1) Set the ND FILTER of LIGHT BOX. 2) Set the camera in front of LIGHT BOX so that the distance from LIGHT BOX to camera becomes about 7 cm as shown in Fig. B. 3) Set the camera angle so that the color chart is displayed on the LCD monitor fully. [IMPORTANT] The adjustment "NG" might be happened with the following conditions: - Since the lens position is automatically set into certain position after executing auto adjustment, confirm the angle after stopping the lens zoom position. - It is no problem even though the chart on to the LCD monitor slightly cut at the corner. - It is no problem even though the focusing slightly becomes out of focusing condition. - Not connect the USB cable at this stage.	1)Press Shutter Button 2)After completed, the "OK" menu appears.
8	Flash ※4	STB	Flash Inspection	○	○	—	—	—	○	—	NONE	NONE	1)Press Shutter Button and check that Flash is emitted. (The number of emissions differs depending on the model.) If Flash is not emitted, Flash Unit may be damaged. 2)If the inspection result shows "NG", use "ROM_BACKUP" and rewrite STB to confirm it is adjusted. The result may show "NG" if the inspection is performed on sites other than the specific environment (factory). However, if the flash emission is visible, there is no problem. 3)After completed, the "OK" menu appears.
9	MOS Missing Pixels (White) ※2	WKI	Compensation of MOS Missing Pixels (White)	○	—	○	○ ※1	—	—	—	NONE	NONE	1)Press Shutter Button 2)After completed, the "OK" menu appears.


Adjustment order	Adjustment Item	FLAG	Purpose	Replacing Parts							JIG/TOOLS	SET UP	How to Operate
				MAIN PCB/ VENUS ENGINE (IC6001)/ MCP (IC6002)	MAIN PCB (to which the backup data was copied)	Lens Parts (except MOS UNIT)	MOS UNIT	MIC UNIT	FLASH UNIT	GYRO (IC7101)			
10	Color reproduction inspection and Microphone check	COL	Color reproduction inspection and Microphone check	○	—	○	○	○	—	—	NONE	Right after pressing the shutter button, enter the continuous sounds (voice) to the microphone until lens unit starting the zooming.	1) Press Shutter Button. Right after pressing the shutter button, make a continuous sound (voice) to the microphone until lens unit starting the zooming. 2) After completed, the "OK" menu appears.
		BKI	Do not use "BKI" adjustment flag for this unit. Use "BK2" adjustment flag, instead. (In case of most DSC models, the adjustment flag for MOS Missing Pixels is "BKI". But, in this model, "BK2" the adjustment flag for MOS Missing Pixels.)										
11	MOS Missing Pixels (Black) ※3	BK2	Compensation of MOS Missing Pixels (Black)	○	—	○	○	—	—	—		1) Prepare the LIGHTBOX (RFKZ0523). (The LIGHTBOX "VFK1164TDVLB" can be used if the front hood of VFK1164TDVLB is removed.) 2) Set the diffuser (RFKZ0591) to the LIGHTBOX. 3) Set the LIGHTBOX and Camera unit so that distance becomes about 4.0 cm. (Fig. B) LIGHT BOX RFKZ0523 (VFK1164TDVLB) DIFFUSER (RFKZ0591) NOTE: Do not use "BKI" adjustment flag for this unit. Use "BK2" adjustment flag, instead.	1) Set the LIGHTBOX and Camera unit so that the distance becomes about 4.0 cm. (Refer to Fig. B) 2) Press the Shutter Button. (The green● mark is displayed on LCD.) 3) Aim the LIGHTBOX and make the frame detail alignment so that the entire LCD screen becomes fully "white". (No dark area). 4) Press Shutter Button. (The adjustment is executed, and then green● mark is displayed on LCD.) 5) Set the LIGHTBOX and Camera unit so that the distance becomes about 5.0 cm. (Refer to Fig. B) 6) Press Shutter Button. (The green● mark is displayed on LCD.) 7) Press Shutter Button. (The adjustment is executed, and then green● mark is displayed on LCD.) 8) Set the LIGHTBOX and Camera unit so that the distance becomes about 6.5 cm. (Refer to Fig. B) 9) Press Shutter Button. (The green● mark is displayed on LCD.) 10) Press Shutter Button. (The adjustment is executed, then "OK" mark is displayed on LCD when the adjustment has been completed successfully.).

※1: This adjustment must be performed not only replacing the MOS unit, but also simply removing the MOS unit.

※2: The pixel that always lights while shaded is called a white wound.

※3: The pixel that does not light while complete exposed is called a black wound. This unit does not have the LCD adjustment of the camera (LCD flicker adjustment etc.).

※4: If the adjusted data is backed up from the main board before replacement or repair, write the data to the new main board. If parts other than the main board are not replaced, adjustment is not necessary for items other than "Backfocus/GYRO(BF)/Flash(STB)".

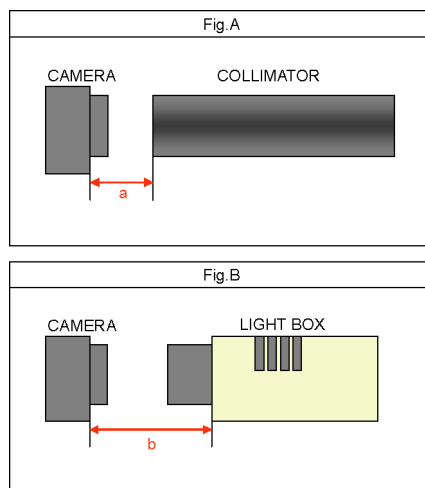

■ IMPORTANT NOTICE (After replacing the Main P.C.B.)

After replacing the Main P.C.B., make sure to perform the "INITIAL SETTINGS" first, then release the "INITIAL SETTINGS" in order to proceed the electrical adjustment.

Note:

1. If electrical adjustment or data re-writing is executed before "INITIAL SETTINGS", suffix code list is never displayed, and it cannot be chosen suitable suffix code.
2. Never remove the battery during initial setting in process.

9.4. After Adjustment

9.4.1. Initial Setting

Since the initial setting has been released to execute the built-in adjustment software, it should be set up again before shipping the camera to the customer.

Refer to the procedure described in "3.4.2. INITIAL SETTINGS" for details.

[IMPORTANT]

1. The initial setting should be done again after completing the alignment. Otherwise, the camera will not work properly.
Therefore as a warning, the camera display a warning symbol " ! " on the LCD monitor every time the camera is turned off.
2. Confirm that status of all adjustment flag show "F". Even if one of the adjustment flag shows "0", initial setting programmed is never executed.

10 Maintenance

10.1. Cleaning Lens, Viewfinder and LCD Panel

Do not touch the surface of lens, Viewfinder and LCD Panel with your hand.

When cleaning the lens, use air-Blower to blow off the dust.


When cleaning the LCD Panel, dampen the lens cleaning paper with lens cleaner, and the gently wipe the their surface.

Note:

The Lens Cleaning KIT; VFK1900BK(Only supplied as 10 set/Box) is available as Service Aid.


11 Block Diagram

11.1. Overall Block Diagram

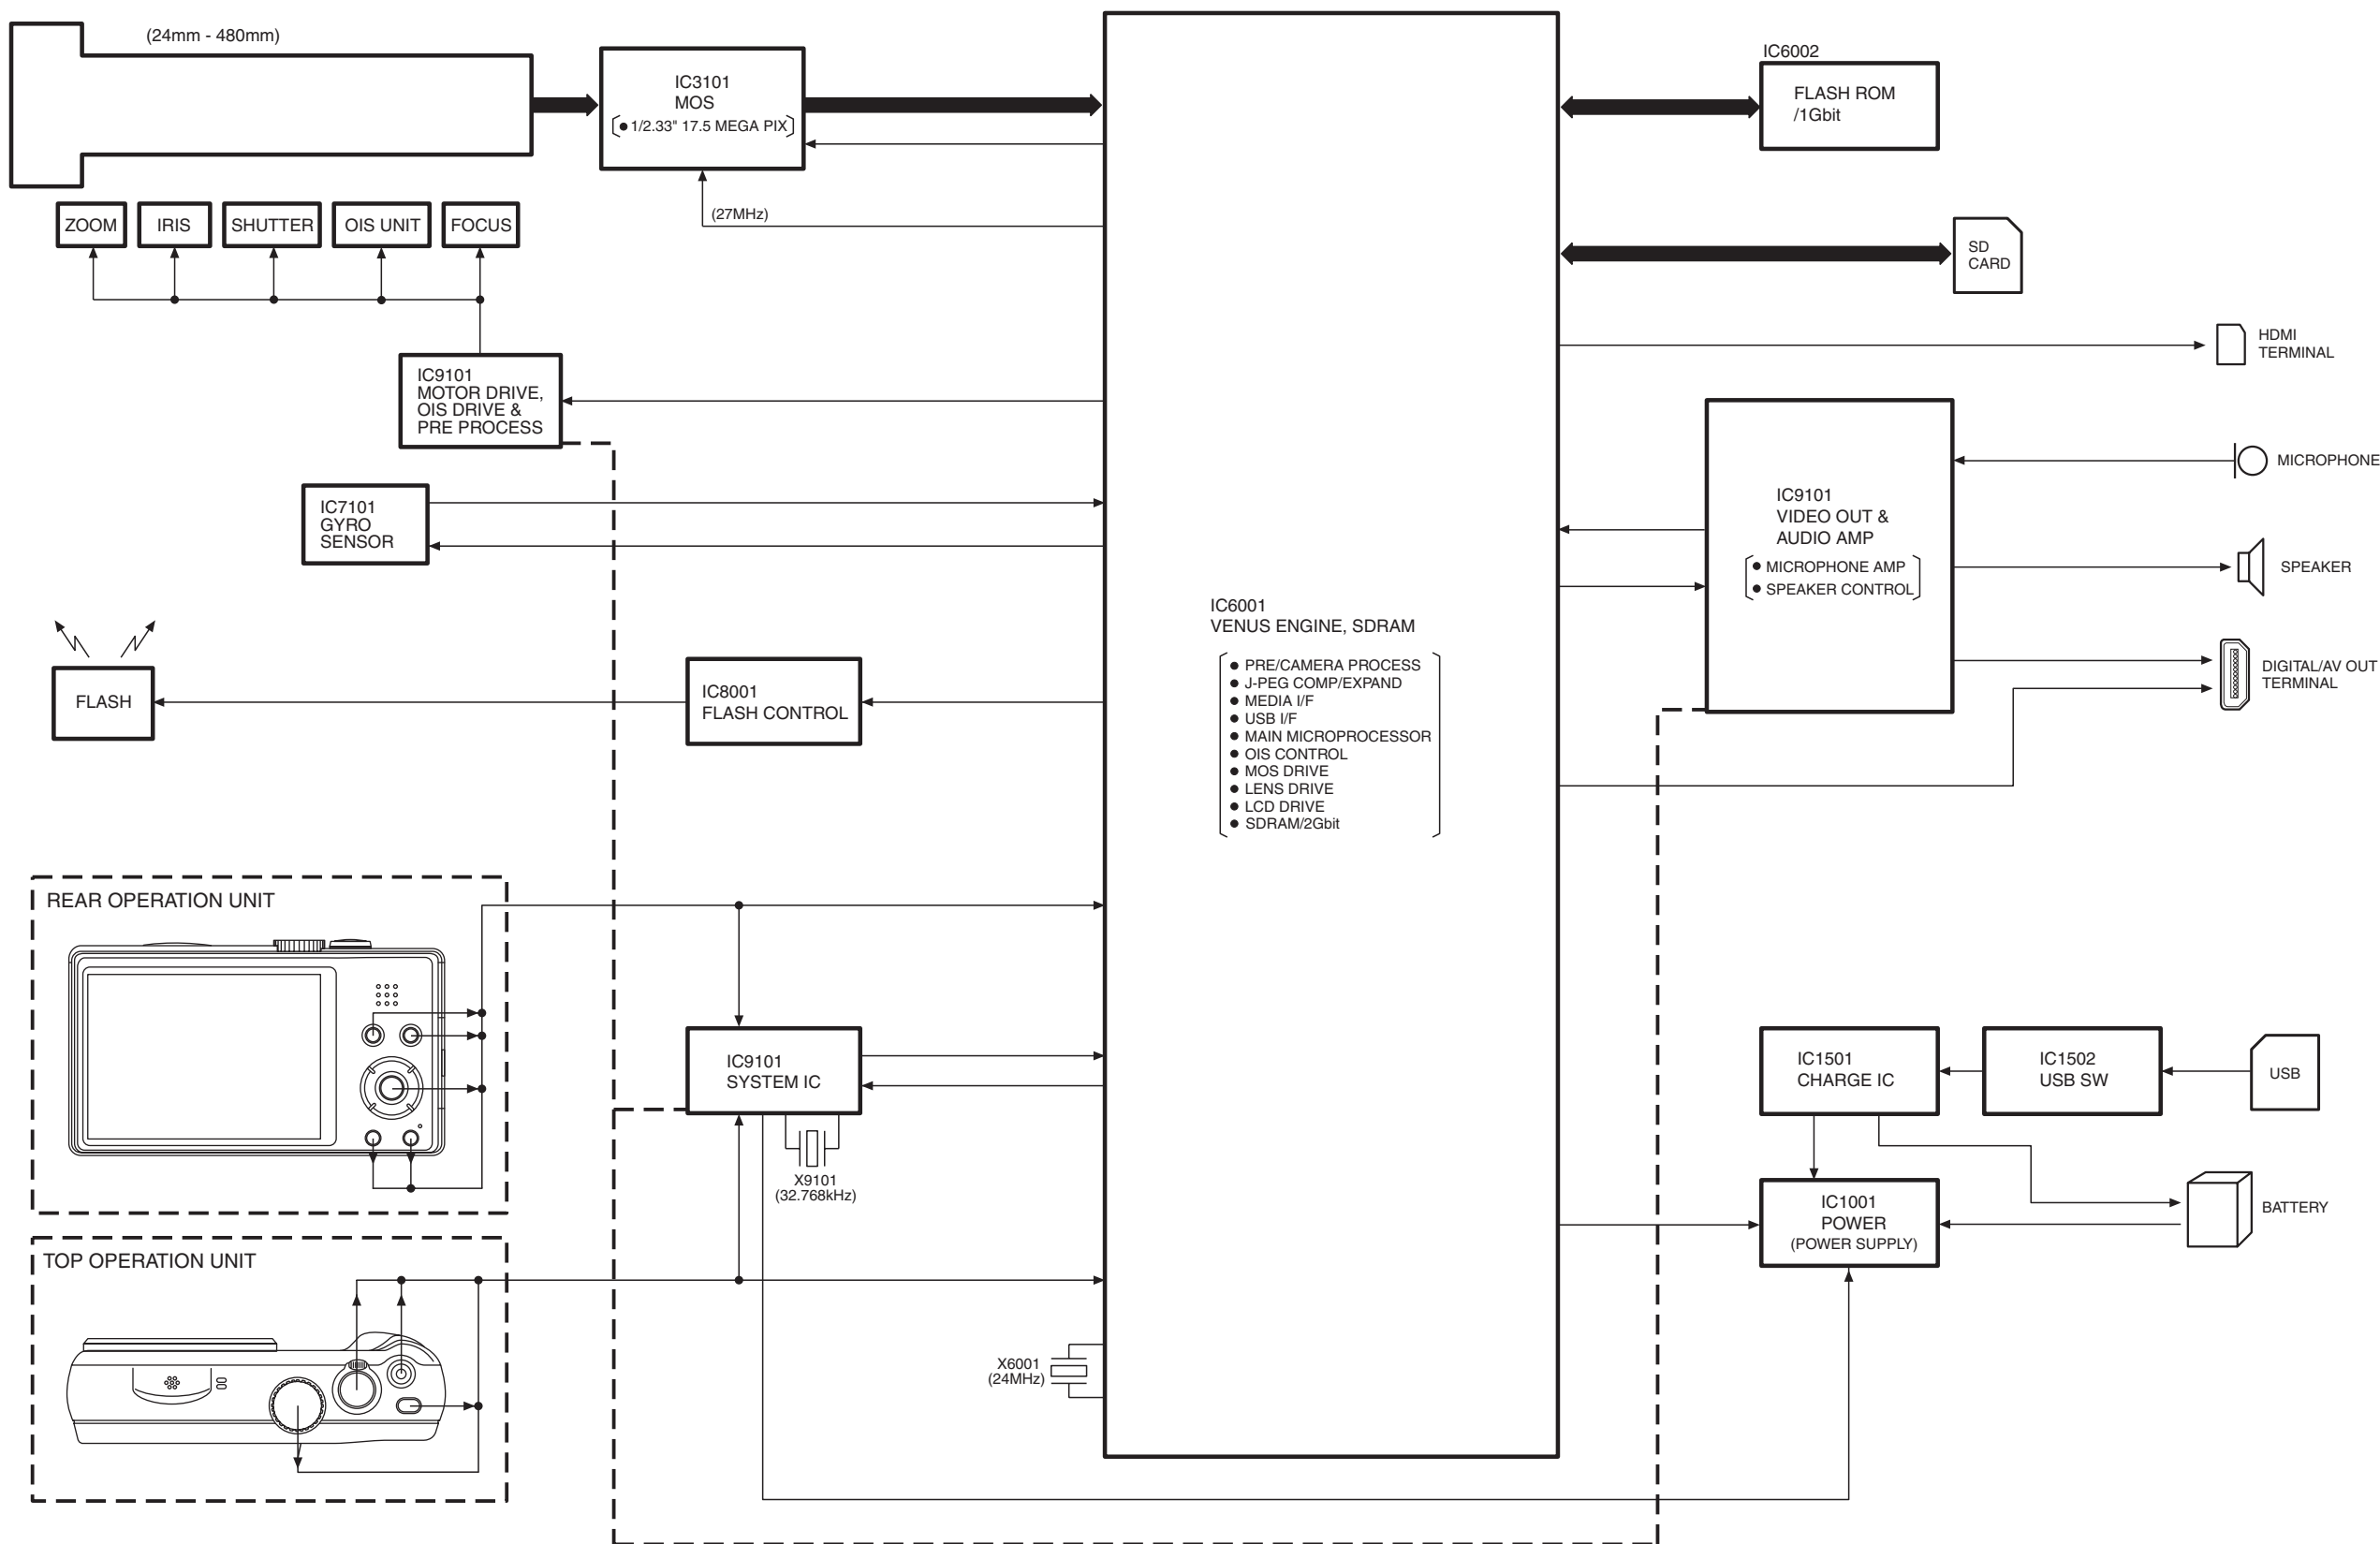


DMC-TZ35/TZ36/ZS25 OVERALL BLOCK DIAGRAM

11.2. System Control Block Diagram

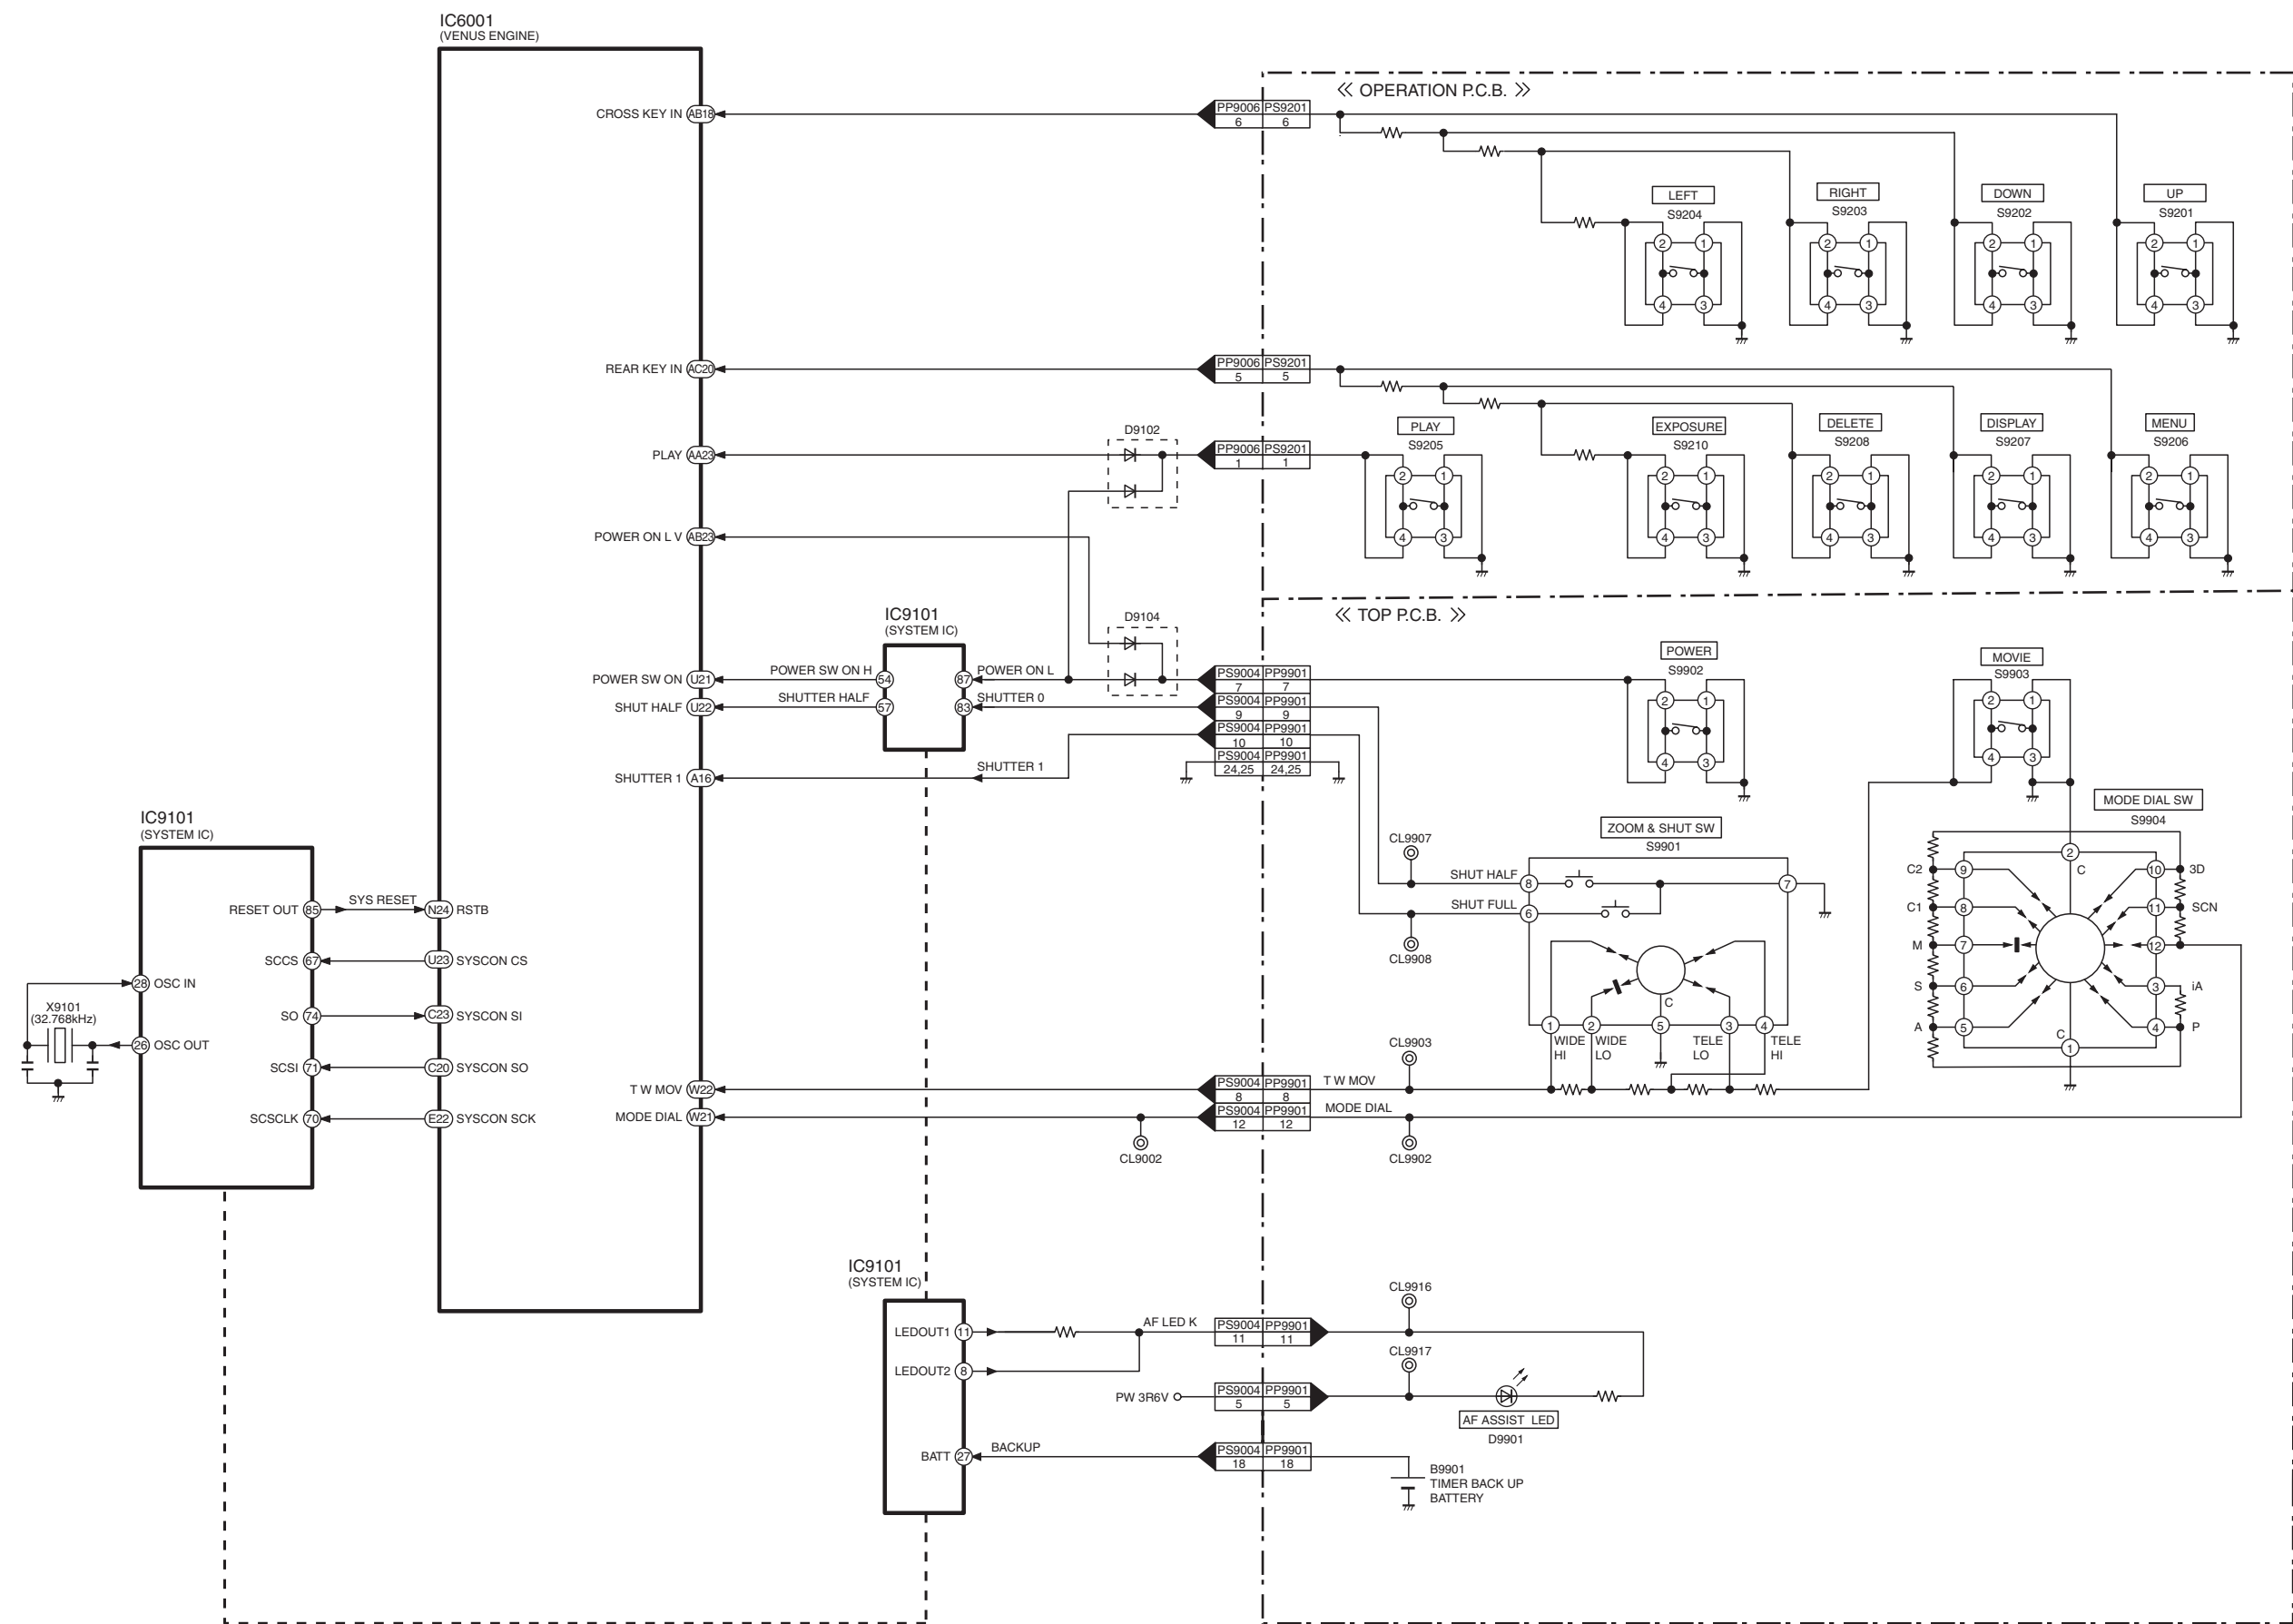


DMC-TZ35/TZ36/ZS25 SYSTEM CONTROL BLOCK DIAGRAM

11.3. Audio/Video Process/ HDMI Block Diagram

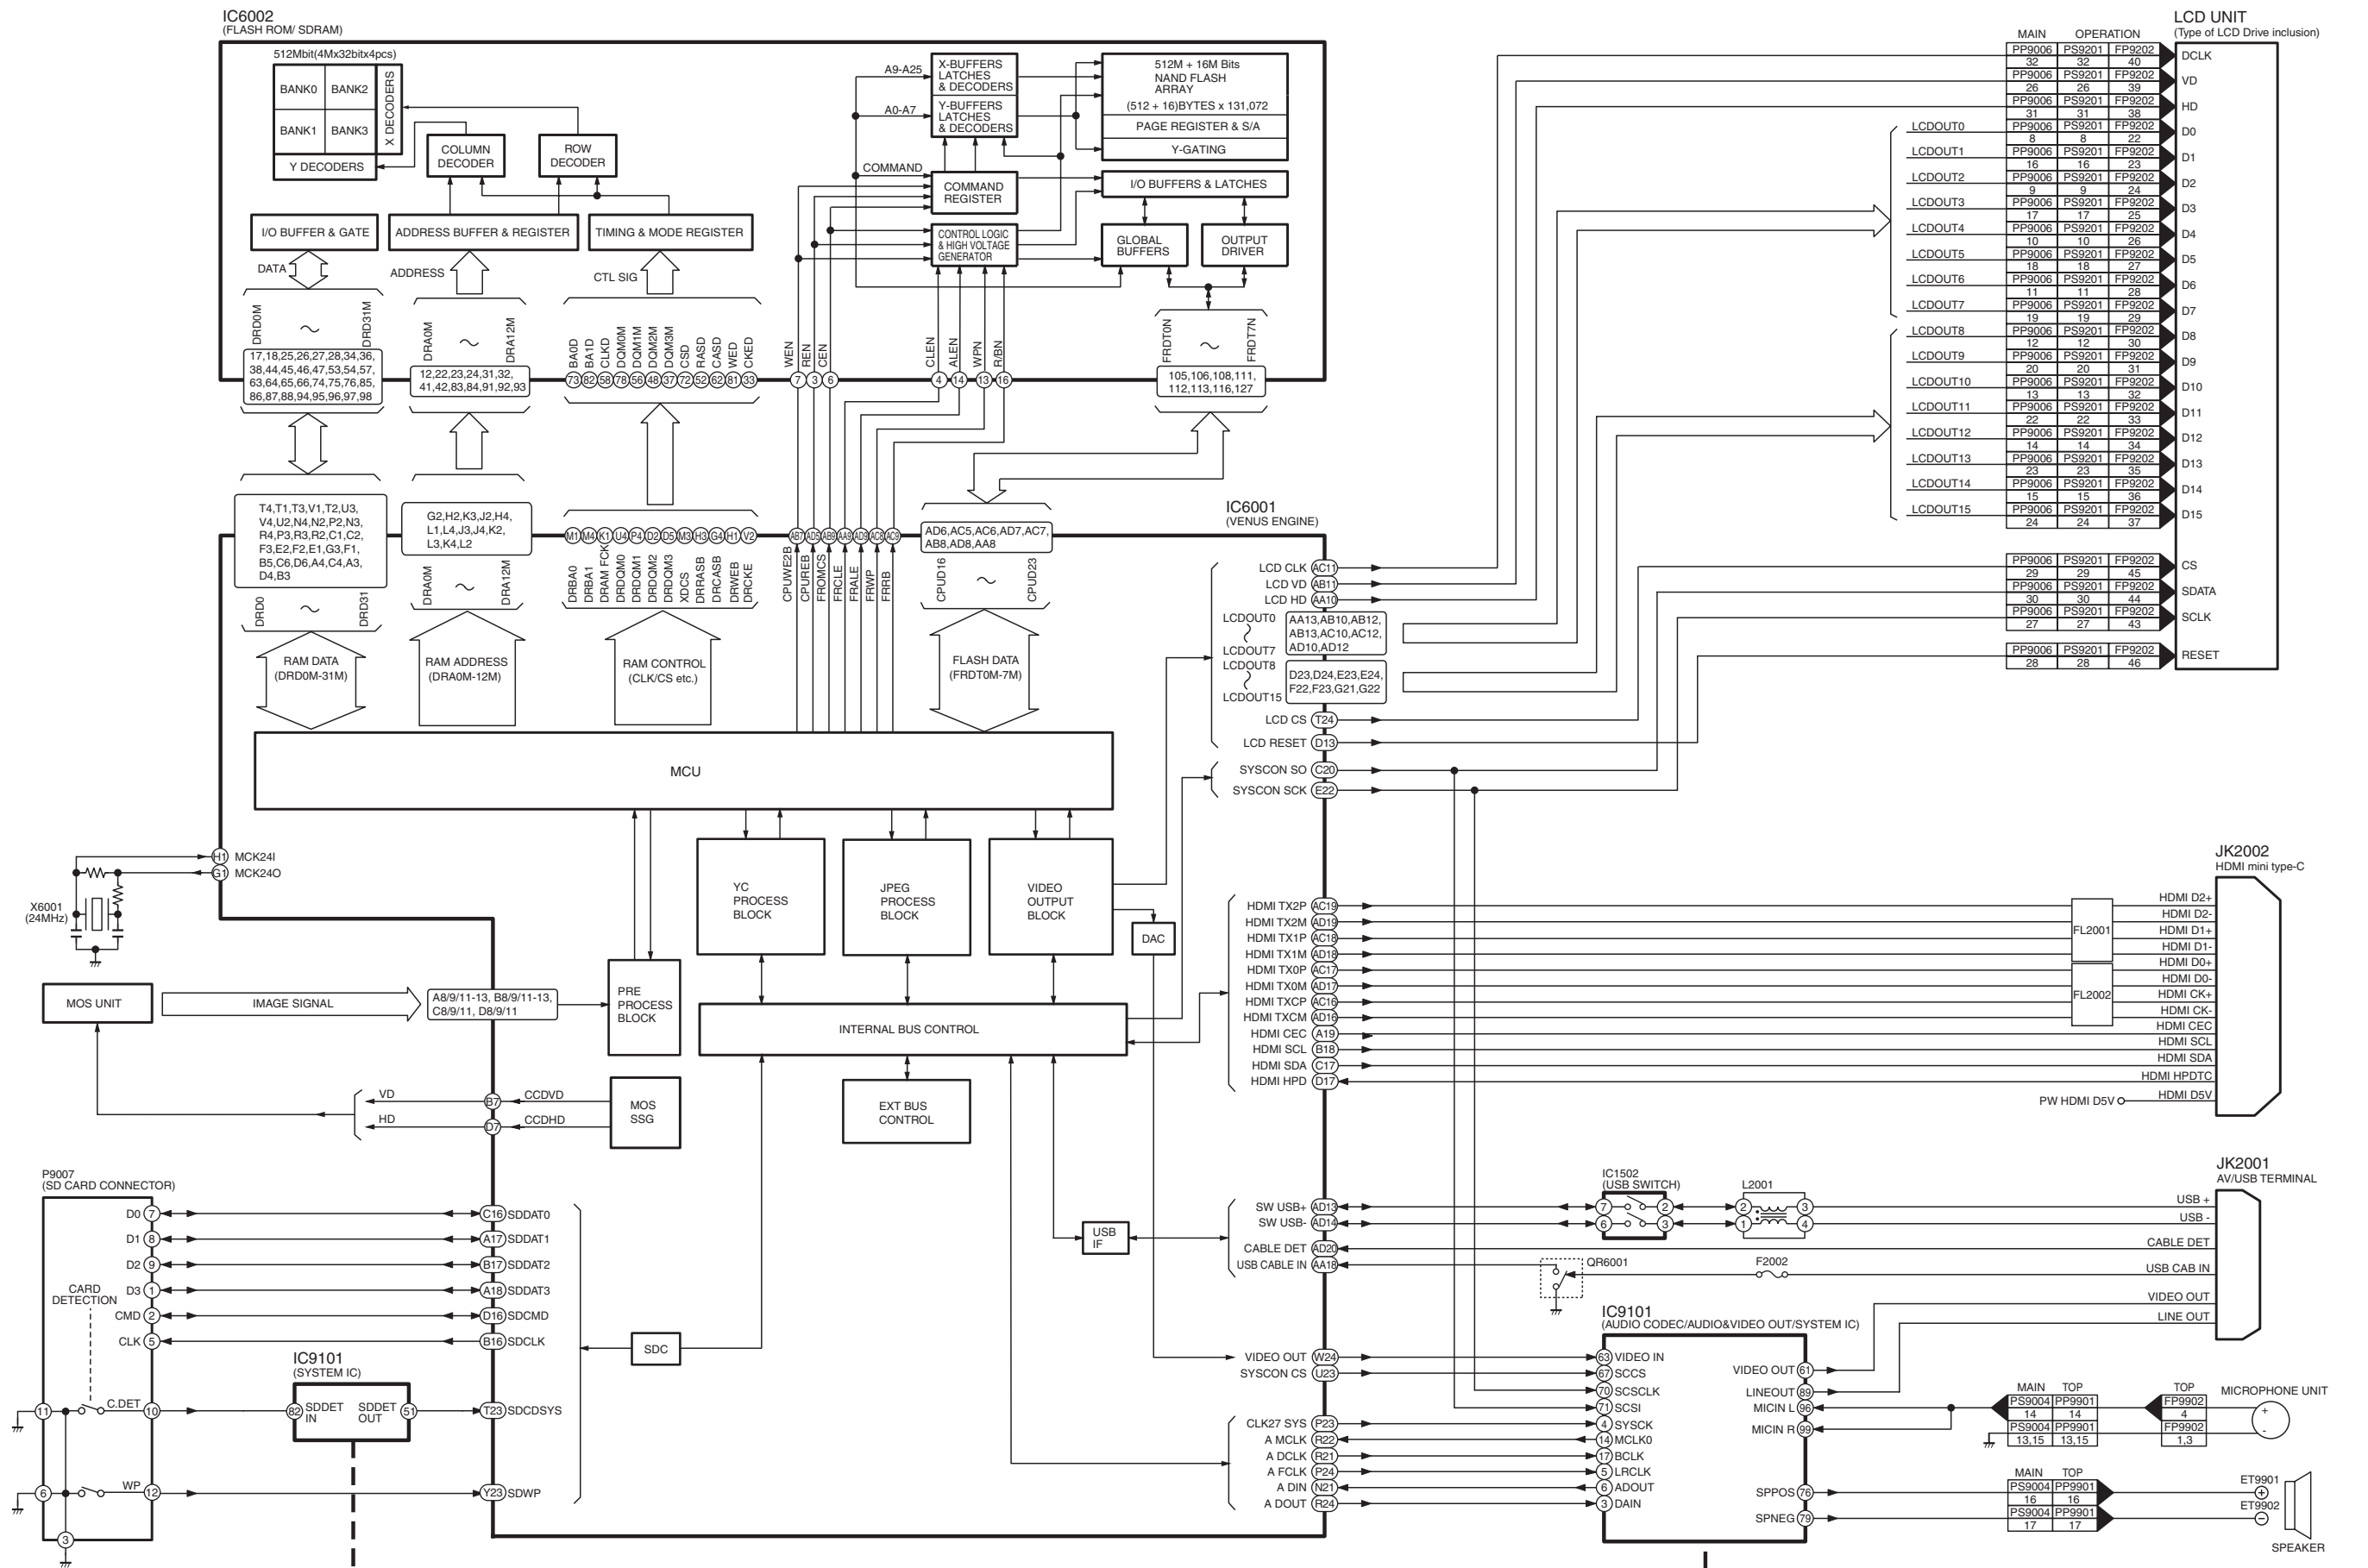


DMC-TZ35/TZ36/ZS25 AUDIO/VIDEO PROCESS/ HDMI BLOCK DAIGRAM

11.4. Lens Drive Block Diagram

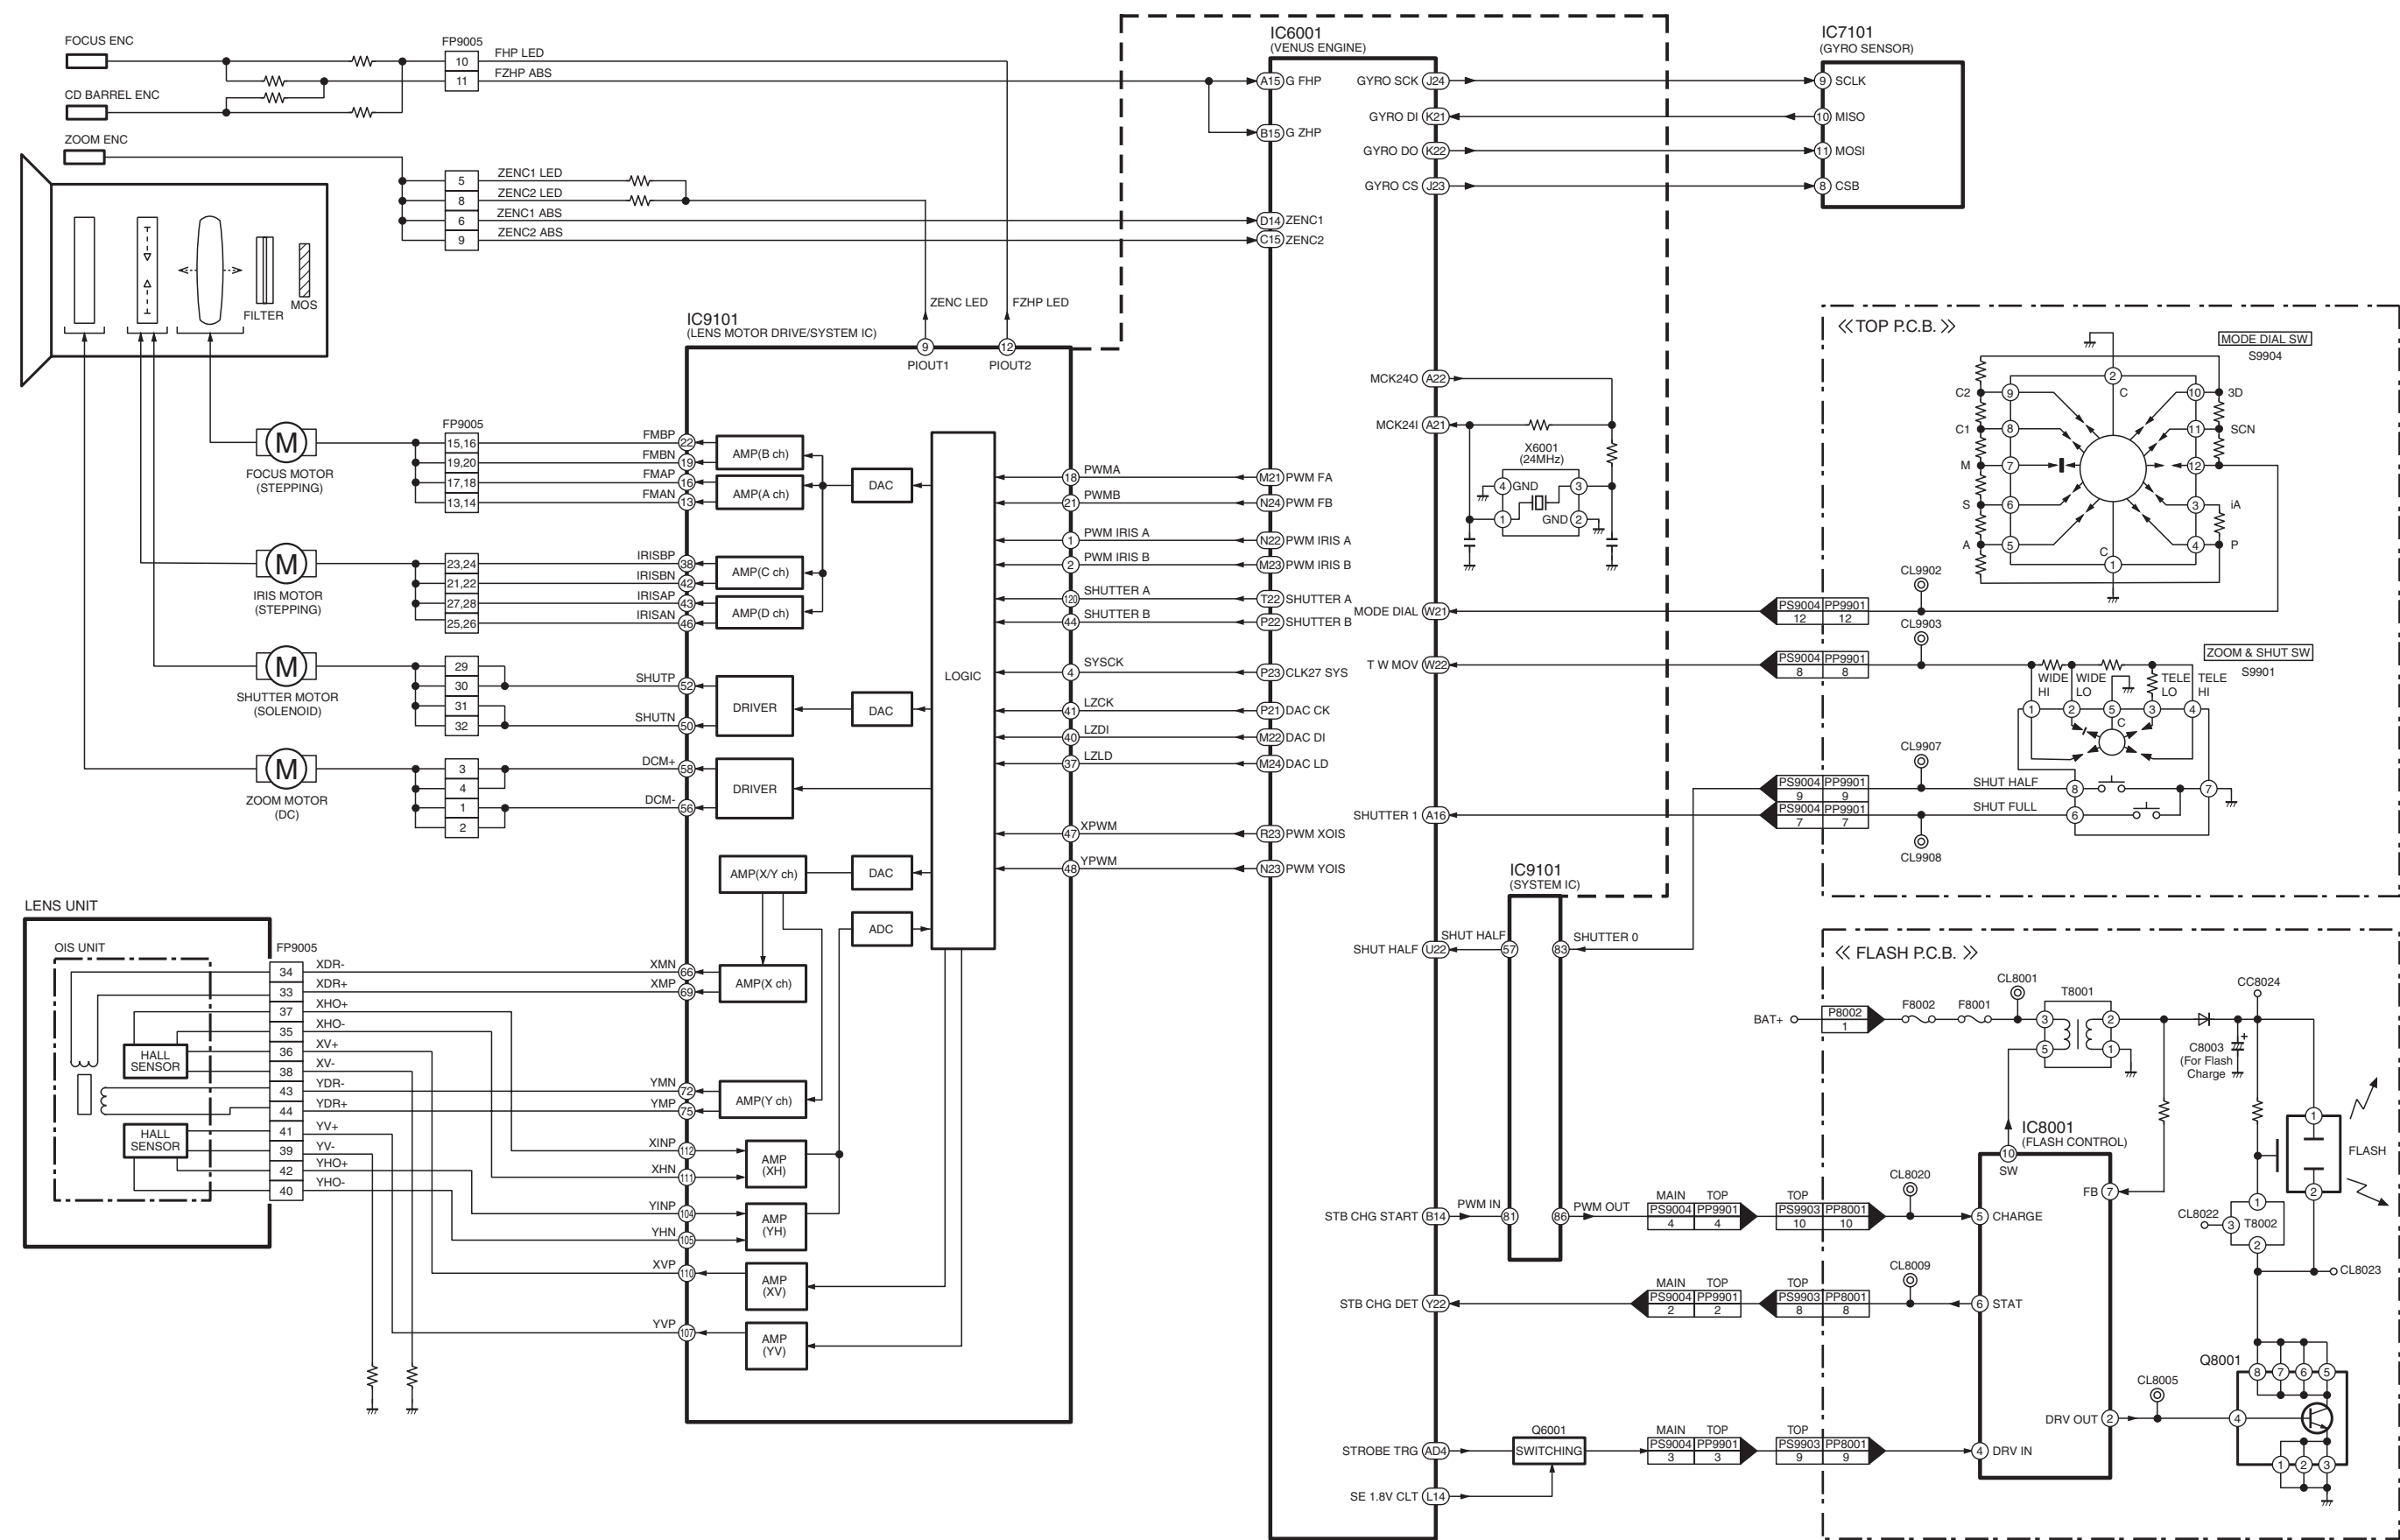

DMC-TZ35/TZ36/ZS25 LENS DRIVE BLOCK DIAGRAM

11.5. Power Block Diagram

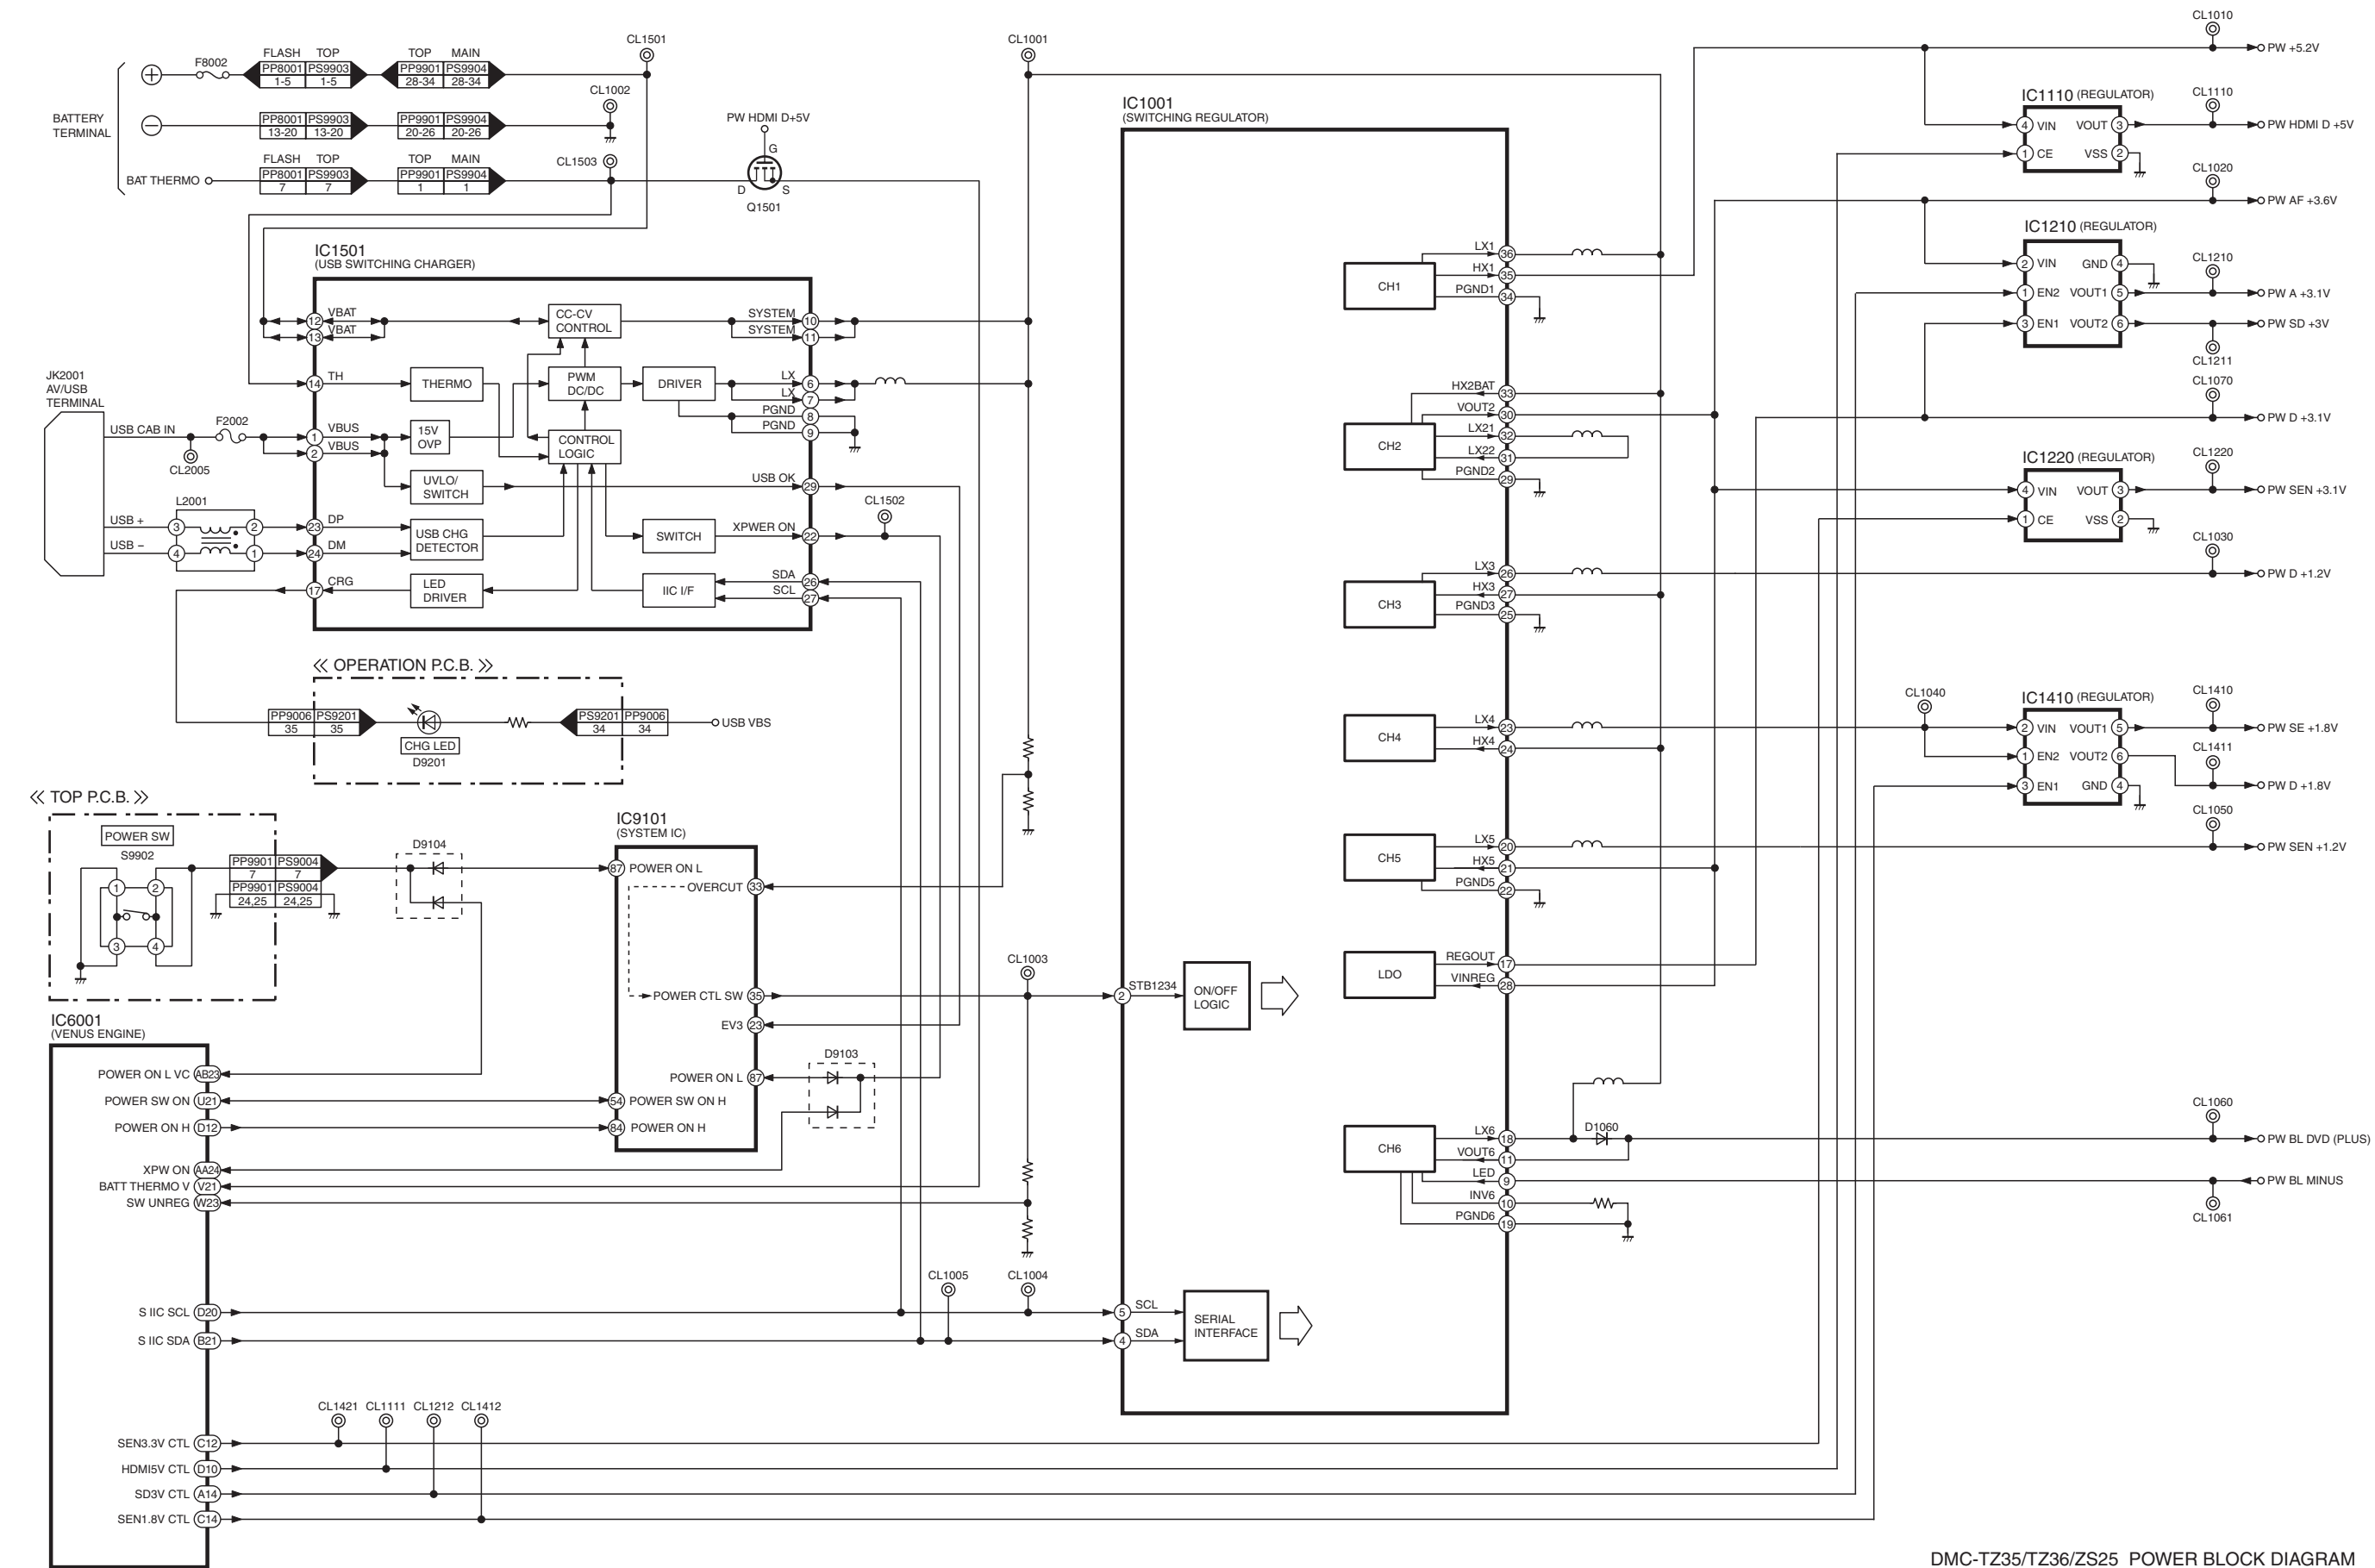

12 Wiring Connection Diagram

12.1. Interconnection Schematic Diagram

