



**Support:** <http://www.jcmglobal.com/en/contact/default.aspx> **Website:** <http://www.jcmglobal.com>

# iVIZION® Series

## Next-Generation Banknote Acceptor Unit

*Operation and Maintenance  
Manual*

*(Revision 5)*



P/N 960-100929R\_Rev. 5 {EDP #148849}



Issue #4074-SME-01-05

© 2014, JAPAN CASH MACHINE CO., LTD.

REVISION HISTORY			
Rev No.	Date	Reason for Update	Comment
A	1-06-11	Initial Version	
1	3-1-11	Section 7 Parts List Number Changes incorporated.	Engineering dictated changes
2	7-11-11	Additional Section 7 Parts List Number Changes incorporated and LD Version information added.	Engineering dictated changes
3	1-25-12	Added Specifications, installation information and Graphics regarding the iVIZION LD Version Unit.	Engineering dictated changes
4	10-12-12	Minor changes & corrections made in Sections 2, 6, 7 & A.	Engineering dictated changes
5	6-17-14	Added SH Specification Cash Box information in Section 1, 4 and 7.	Engineering dictated changes

## International Compliance

- RoHS Directives  or  or  or 
- UL & c-UL Marks  File No. E142330, Subscriber 857947001, Vo.2
- CE Mark 
- CB Scheme **NO58326**
- FCC & IC Directives  See Below.

Contains Transmitter Module

FCC ID: VZQNRWA3

MODEL NO.: NRWA3

IC: 8285A-NRWA3

This device complies with Part 15 of FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

### FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### IC NOTICE

This class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

## Copyright © 2014 By JAPAN CASH MACHINE CO., LTD.

This product document (hereinafter referred to as "Manual") is fully covered by legal Copyrights owned by the JAPAN CASH MACHINE CO., LTD. (hereinafter referred to as "JCM") under Japanese laws and foreign countries. This Manual contains many copyrighted, patented or properly registered equipment items manufactured by JCM, that are prohibited and illegal to duplicate, replicate, or copy in whole, or in part, without the express authorization by JCM with the following exceptions:

1. When an authorized JCM agency or distributor duplicates the Manual for sales promotion and/or service maintenance of the product, or technical service personnel education as required; and
2. When an end user duplicates the Manual to maintain operation of the product or operate the product in general. JCM retains all rights to amend, alter, change or delete any portion of this Manual in whole, or in part, or add items thereto without notice regarding the product or its related products.

JCM is a registered trademark of JAPAN CASH MACHINE CO., LTD. All other product names mentioned herein may be registered trademarks or trademarks of their respective companies. Furthermore, <sup>TM</sup>, ® and © are not always mentioned in each case throughout this publication.

# iVIZION® Series

## Next-Generation Banknote Acceptor Unit

### Table of Contents

	Page
<b>1 GENERAL INFORMATION .....</b>	<b>1-1</b>
Description .....	1-1
iVIZION Units .....	1-1
Model Descriptions .....	1-1
Type Descriptions .....	1-2
Software Descriptions .....	1-2
Precautions .....	1-2
User Cautions .....	1-2
Installation Cautions .....	1-2
Mounting, Dismounting & Transportation .....	1-3
Preventive Maintenance .....	1-3
Banknote Fitness Requirements .....	1-3
Reference Paper Use Precautions .....	1-4
<b>Primary Features .....</b>	<b>1-4</b>
<b>Component Names .....</b>	<b>1-5</b>
<b>Specifications (iVIZION SS/SH Specifications) .....</b>	<b>1-6</b>
Technical Specifications .....	1-6
Environmental Specifications .....	1-7
Electrical Specifications .....	1-7
Structural Specifications .....	1-7
<b>Specifications (iVIZION LD Specifications) .....</b>	<b>1-8</b>
Technical Specifications .....	1-8
Environmental Specifications .....	1-9
Electrical Specifications .....	1-9
Structural Specifications .....	1-9
<b>iVIZION SS Entire Unit Outside Dimensions .....</b>	<b>1-10</b>
<b>iVIZION SH Entire Unit Outside Dimensions .....</b>	<b>1-11</b>
<b>iVIZION SS/SH Installation/Maintenance Space Requirements .....</b>	<b>1-12</b>
<b>iVIZION LD Specification Unit Dimensions .....</b>	<b>1-14</b>
<b>Various Cash Box Unit Dimensions .....</b>	<b>1-15</b>
Standard Cash Box Outside Dimensions .....	1-15
Large Cash Box Outside Dimensions .....	1-15
HC Cash Box Outside Dimensions .....	1-16
<b>Technical Contact Information .....</b>	<b>1-17</b>
Americas .....	1-17
JCM American .....	1-17
Europe, Africa, Russia & Middle East .....	1-17
JCM Europe GmbH .....	1-17
UK & Ireland .....	1-17
JCM Europe (UK Office) .....	1-17
Asia and Oceania .....	1-17
JCM Gold (HK) Ltd. ....	1-17
JAPAN CASH MACHINE CO., LTD. (HQ) .....	1-17
<b>2 INSTALLATION .....</b>	<b>2-1</b>
Installation Process .....	2-1

# Table of Contents

	Page
<b>Cable Interconnection .....</b>	<b>2-2</b>
<b>Lock Installation .....</b>	<b>2-2</b>
Unlock Procedure .....	2-2
<b>DIP Switch Configurations .....</b>	<b>2-3</b>
Primary LED Indications .....	2-3
<b>Connector Pin Assignments .....</b>	<b>2-4</b>
Connector Pin Assignments (Continued 1) .....	2-5
Connector Pin Assignments (Continued 2) .....	2-6
Connector Pin Assignments (Continued 3) .....	2-7
Connector Pin Assignments (Continued 4) .....	2-8
Connector Pin Assignments (Continued 5) .....	2-9
<b>Preventive Maintenance .....</b>	<b>2-10</b>
Retrieving Banknotes .....	2-10
Clearing a Banknote Jam .....	2-10
<b>Cleaning Procedure .....</b>	<b>2-10</b>
Sensor Cleaning Procedure .....	2-10
<b>iVIZION Optional LD Version Unit Installation .....</b>	<b>2-11</b>
<b>iVIZION Sensor Locations .....</b>	<b>2-12</b>
<b>Standard Interface Circuit Schematics .....</b>	<b>2-13</b>
Interface Circuit Schematics (Continued 1) .....	2-14
Interface Circuit Schematics (Continued 2) .....	2-15
Interface Circuit Schematics (Continued 3) .....	2-16
<b>Operational Flowchart .....</b>	<b>2-17</b>
Operational Flowchart (Continued 1) .....	2-18
Operational Flowchart (Continued 2) .....	2-19
<b>3 COMMUNICATIONS .....</b>	<b>3-1</b>
<b>Americas .....</b>	<b>3-1</b>
JCM American .....	3-1
<b>Europe, Africa, Russia &amp; Middle East .....</b>	<b>3-1</b>
JCM Europe GmbH .....	3-1
<b>UK &amp; Ireland .....</b>	<b>3-1</b>
JCM Europe (UK Office) .....	3-1
<b>Asia and Oceania .....</b>	<b>3-1</b>
JCM Gold (HK) Ltd. ....	3-1
JAPAN CASH MACHINE CO., LTD. (HQ) .....	3-1
<b>4 DISASSEMBLY/REASSEMBLY .....</b>	<b>4-1</b>
<b>Tool Requirements .....</b>	<b>4-1</b>
<b>Pusher Unit Timing Belt Removal .....</b>	<b>4-1</b>
iVIZION Standard and Large Cash Box .....	4-1
iVIZION HC Cash Box .....	4-3
<b>Home Position Sensor Board/Home Position Sensor, FFC &amp; Interface</b>	
<b>Connector Board Removals .....</b>	<b>4-5</b>
<b>RFID Module &amp; Harness Removals .....</b>	<b>4-6</b>
<b>Validation CPU &amp; Controller CPU Board Removals .....</b>	<b>4-6</b>
<b>USB FPC, Power FPC &amp; Interface FPC Cable Removals .....</b>	<b>4-7</b>
<b>Validation Unit Harness Removal .....</b>	<b>4-7</b>
<b>Interrupter Board Removal .....</b>	<b>4-8</b>



# Table of Contents

	Page
Motor Unit Timing Belt Removal .....	4-8
Stacker Motor & Transport Motor Removals .....	4-8
Bezel Retainer Clips A & B Removal .....	4-9
Sensor Transfer Board/CIS FFC/Transmissive Light FFC & Upper UV FPC Sensor Removals .....	4-9
Validation Sensor Board Assembly Removal .....	4-10
Validation Sensor FPC Cable Removals .....	4-10
CIS/Transmissive Light & Upper UV Sensor Removals .....	4-11
CIS/CIS FPC/Lower UV Sensor & Lower UV FFC Removal .....	4-12
Validation Unit Timing Belt Removal .....	4-13
Reassembly Cautions .....	4-13
<b>5 WIRING DIAGRAMS .....</b>	<b>5-1</b>
iVIZION System Wiring Diagram .....	5-1
<b>6 PERFORMANCE TESTS .....</b>	<b>6-1</b>
Download and Installation Workbench Tool Requirements .....	6-1
Application Software Installation .....	6-1
Driver Installation Procedure .....	6-2
JCM Tool Suite Standard Edition Mode .....	6-3
Software Download Tool Requirements .....	6-4
Software Download Procedures .....	6-4
Download the Upgrade Program .....	6-4
Downloading the Program First Time .....	6-5
Calibration .....	6-6
When to Calibrate .....	6-6
Calibration Order .....	6-7
Calibration Tool Requirements .....	6-7
Reference Paper Placement .....	6-7
Placing the KS-072/KS-089 Reference Paper .....	6-7
Calibration Procedure .....	6-8
Calibration Only .....	6-8
Calibration Plus Serial Number Writing .....	6-10
Performance Tests .....	6-11
Performance Test Tool Requirement using a PC .....	6-11
Performance Test Items using a PC .....	6-11
PC Performance Test Preparation .....	6-12
Performance Test Procedures .....	6-12
Any Motor Test .....	6-12
LED Indicator Test .....	6-13
Sensor ON/OFF Test .....	6-13
Banknote Acceptance Test .....	6-14
ICB Function Setting (Barcode Coupon) .....	6-14
DIP Switch ON/OFF Test .....	6-15
Performance Test Tool Requirement using an External DIP Switch Box .....	6-16
External DIP Switch Performance Test Procedure Settings .....	6-16
Performance Tests with External Switch Procedures .....	6-16
iVIZION Utility Tools .....	6-17
ICB/Image Setting Tool Requirements .....	6-17
ICB/Image Setting Change Preparation .....	6-17

# Table of Contents

	Page
CIS Image Tool .....	6-17
ICB Function Setting .....	6-18
Setting ICB Enable/Disable Functions .....	6-18
ICB Function Operational Condition .....	6-20
<b>7 EXPLODED VIEWS &amp; PARTS LISTS .....</b>	<b>7-1</b>
<b>iVIZION Entire Unit View .....</b>	<b>7-1</b>
iVIZION Entire Unit Parts List .....	7-2
<b>iVIZION Validation Unit 1 Exploded View .....</b>	<b>7-3</b>
iVIZION Validation Unit 1 Parts List .....	7-4
<b>iVIZION Validation Unit 2 Exploded View .....</b>	<b>7-5</b>
iVIZION Validation Unit 2 Parts List .....	7-6
<b>iVIZION Validation Unit 3 Exploded View .....</b>	<b>7-7</b>
iVIZION Validation Unit 3 Parts List .....	7-8
<b>iVIZION Transport Unit 1 Exploded View .....</b>	<b>7-9</b>
iVIZION Transport Unit 1 Parts List .....	7-10
<b>iVIZION Transport Unit 2 Exploded View .....</b>	<b>7-11</b>
iVIZION Transport Unit 2 Parts List .....	7-12
<b>iVIZION Transport Unit 3 Exploded View .....</b>	<b>7-13</b>
iVIZION Transport Unit 3 Parts List .....	7-14
<b>iVIZION Transport Unit 4 Exploded View .....</b>	<b>7-15</b>
iVIZION Transport Unit 4 Parts List .....	7-16
<b>iVIZION Transport Unit 5 Exploded View .....</b>	<b>7-17</b>
iVIZION Transport Unit 5 Parts List .....	7-18
<b>iVIZION Transport Unit 6 Exploded View .....</b>	<b>7-19</b>
iVIZION Transport Unit 6 Parts List .....	7-20
<b>iVIZION SS Version Frame Unit Exploded View .....</b>	<b>7-21</b>
iVIZION SS Version Frame Unit Parts List .....	7-22
<b>iVIZION Cash Box Unit 1 Exploded View .....</b>	<b>7-23</b>
iVIZION Cash Box Unit 1 Parts List .....	7-24
<b>iVIZION Cash Box Unit 2 Exploded View .....</b>	<b>7-25</b>
iVIZION Cash Box Unit 2 Parts List .....	7-26
<b>iVIZION Cash Box Unit 3 Exploded View .....</b>	<b>7-27</b>
iVIZION Cash Box Unit 3 Parts List .....	7-28
<b>iVIZION LD Frame Exploded View .....</b>	<b>7-29</b>
iVIZION LD Frame Parts List .....	7-30
<b>iVIZION HC Frame Exploded View .....</b>	<b>7-31</b>
iVIZION HC Frame Parts List .....	7-32
<b>iVIZION HC Box Assembly Exploded View .....</b>	<b>7-33</b>
iVIZION HC Box Assembly Parts List .....	7-34
<b>iVIZION HC Box Unit Exploded View .....</b>	<b>7-35</b>
iVIZION HC Box Unit Parts List .....	7-36
<b>iVIZION HC Upper Part Exploded View .....</b>	<b>7-37</b>
iVIZION HC Upper Part Parts List .....	7-38
<b>iVIZION HC Receive Plate Assembly Exploded View .....</b>	<b>7-39</b>
iVIZION HC Receive Plate Assembly Parts List .....	7-40
<b>iVIZION HC Receive Spring Base Assembly Exploded View .....</b>	<b>7-41</b>
iVIZION HC Receive Spring Base Assembly Parts List .....	7-42

# Table of Contents

	Page
<b>iVIZION HC Front Plate Assembly Exploded View .....</b>	<b>7-43</b>
iVIZION HC Front Plate Assembly Parts List .....	7-44
<b>iVIZION HC Pusher Unit Exploded View .....</b>	<b>7-45</b>
iVIZION HC Pusher Unit Parts List .....	7-46
<b>iVIZION HC Pusher Assembly 1 Exploded View .....</b>	<b>7-47</b>
iVIZION HC Pusher Assembly 1 Parts List .....	7-48
<b>iVIZION HC Pusher Assembly 2 Exploded View .....</b>	<b>7-49</b>
iVIZION HC Pusher Assembly 2 Parts List .....	7-50
<b>iVIZION Optional Components Exploded Views .....</b>	<b>7-51</b>
iVIZION Optional Components Parts List .....	7-52
<b>8 INDEX .....</b>	<b>8-1</b>
<b>A TROUBLESHOOTING .....</b>	<b>A-1</b>
Introduction .....	A-1
Troubleshooting Overview .....	A-1
Malfunction LED Error Codes .....	A-1
LED Indication Conditions .....	A-1
Error, Jam and Reject Code Tables .....	A-2
LED Error Codes .....	A-2
Jam Error Codes .....	A-4
Reject Error Code .....	A-5
Maintenance Equipment .....	A-6
iVIZION Maintenance Equipment .....	A-6
Reference Paper Handling .....	A-6
<b>B GLOSSARY .....</b>	<b>B-1</b>

THIS PAGE INTENTIONALLY LEFT BLANK

# iVIZION® Series

## Next-Generation Banknote Acceptor Unit

### List of Figures

	Page
Figure 1-1 iVIZION Unit .....	1-1
Figure 1-2 Precautionary Symbols .....	1-2
Figure 1-3 Unacceptable Banknotes .....	1-3
Figure 1-4 Reference Paper Handling Precautions .....	1-4
Figure 1-5 iVIZION Component Names .....	1-5
Figure 1-6 iVIZION Banknote Acceptor SS Unit Outside Dimensions .....	1-10
Figure 1-7 iVIZION Banknote Acceptor SH Unit Outside Dimensions .....	1-11
Figure 1-8 iVIZION SS Unit Installation and Maintenance Space Requirements Diagram .....	1-12
Figure 1-9 Maximum Gradient Angle = 50 Degrees .....	1-12
Figure 1-10 iVIZION SH Unit Installation and Maintenance Space Requirements Diagram .....	1-13
Figure 1-11 iVIZION LD Unit Outside Dimensions .....	1-14
Figure 1-12 iVIZION LD Unit with Bezel Outside Dimensions .....	1-14
Figure 1-13 iVIZION Standard Cash Box Outside Dimensions .....	1-15
Figure 1-14 iVIZION Large Cash Box Outside Dimensions .....	1-15
Figure 1-15 iVIZION HC Cash Box Outside Dimensions .....	1-16
Figure 2-1 Interface Harness Installation Location .....	2-1
Figure 2-2 M4 Screws Locations (Left/Right Side) .....	2-1
Figure 2-3 Flat Head Screws Locations (Rear Side) .....	2-1
Figure 2-4 Cable Interconnection .....	2-2
Figure 2-5 Lock Size .....	2-2
Figure 2-6 Unlock Rotation Direction .....	2-2
Figure 2-7 Key Cap Installation .....	2-2
Figure 2-8 Retrieving Banknote .....	2-10
Figure 2-9 Open the Upper Guides .....	2-10
Figure 2-10 Retrieving Cash Box Banknote Jam .....	2-10
Figure 2-11 Interface Harness Installation Location .....	2-11
Figure 2-12 M3 Screws Locations .....	2-11
Figure 2-13 iVIZION Sensor Cleaning Locations .....	2-12
Figure 2-14 iVIZION USB Circuit Interface Schematic Diagram .....	2-13
Figure 2-15 iVIZION Photo-Coupler Circuit Interface Schematic Diagram .....	2-13
Figure 2-16 iVIZION RS232C Circuit Interface Schematic Diagram .....	2-14
Figure 2-17 iVIZION ccTalk Circuit Interface Schematic Diagram .....	2-14
Figure 2-18 iVIZION TTL Circuit Interface Schematic Diagram .....	2-15
Figure 2-19 iVIZION LED Circuit Interface Schematic Diagram .....	2-16
Figure 2-20 iVIZION SS/LD Banknote Acceptor Operational Flowchart (Initializing) .....	2-17
Figure 2-21 iVIZION SS Banknote Acceptor Operational Flowchart (Part 1 - Validating) .....	2-18
Figure 2-22 iVIZION LD Banknote Acceptor Operational Flowchart (Part 2 - Validating) .....	2-19

# List of Figures

	<b>Page</b>
Figure 4-1 Pusher Mechanism Screws Removal .....	4-1
Figure 4-2 Pusher Mechanism Removal .....	4-1
Figure 4-3 Pusher Mechanism Cover Removal .....	4-2
Figure 4-4 Stacker Guide Removal .....	4-2
Figure 4-5 Stacker Guide Reassembly .....	4-2
Figure 4-6 Right Frame Outer “R” Removal .....	4-2
Figure 4-7 Left Frame Outer “L” Removal .....	4-3
Figure 4-8 Timing Belt Removal .....	4-3
Figure 4-9 Pusher Mechanism Removal .....	4-3
Figure 4-10 HC Box Stacker Base Removal .....	4-3
Figure 4-11 Pusher Guide Removal .....	4-4
Figure 4-12 Stacker Guide Removal .....	4-4
Figure 4-13 Stacker Guide Reassembly .....	4-4
Figure 4-14 Outer Guide R Removal 1 .....	4-4
Figure 4-15 Outer Guide R Removal 2 .....	4-4
Figure 4-16 Outer Guide L Removal 1 .....	4-5
Figure 4-17 Outer Guide L Removal 2 .....	4-5
Figure 4-18 Timing Belt Removal .....	4-5
Figure 4-19 TR Bottom Cover Removal .....	4-5
Figure 4-20 TR Side Cover “A” Removal .....	4-6
Figure 4-21 Home Position Sensor Board, Home Position Sensor FFC Assembly and Interface Connector Board Removals .....	4-6
Figure 4-22 RFID Module & Harness Removal .....	4-6
Figure 4-23 CPU Board Module Removal .....	4-6
Figure 4-24 Extension Memory Board Removal .....	4-7
Figure 4-25 Validation CPU Board and Control CPU Board Removal .....	4-7
Figure 4-26 Motor Module Removal .....	4-7
Figure 4-27 USB FPC, Power FPC & Interface FPC Cable Removal .....	4-7
Figure 4-28 Validation Unit Harness Removal .....	4-8
Figure 4-29 Interrupter Board Removal .....	4-8
Figure 4-30 Timing Belt Removal .....	4-8
Figure 4-31 Timing Belt Reassembly Path .....	4-8
Figure 4-32 Stacker & Transport Motor Removal .....	4-9
Figure 4-33 Bezel Retainer Chips A&B Removal .....	4-9
Figure 4-34 Upper Cover Removal .....	4-9
Figure 4-35 Sensor Transfer Board Assembly, CIS FFC, Transmissive Light & Upper UV FPC Cable Removal.....	4-9
Figure 4-36 iVIZION Head Cover A Removal .....	4-10
Figure 4-37 Validation Sensor Board Assembly Removal.....	4-10
Figure 4-38 Validation Sensor FPC Removal .....	4-10
Figure 4-39 Validation Sensor FPC Reassembly .....	4-11
Figure 4-40 Upper Validation Part Removal .....	4-11
Figure 4-41 iVIZION Head BG85B Removal .....	4-11
Figure 4-42 CIS, Transmissive Light & Upper UV Sensor Removal .....	4-12

# List of Figures

	<b>Page</b>
Figure 4-43 iVIZION BG 85A HEAD Removal .....	4-12
Figure 4-44 Lower Validation Part Removal .....	4-12
Figure 4-45 CIS, CIS FPC, Lower UV Sensor & Lower UV FFC Removal .....	4-13
Figure 4-46 Timing Belt Removal .....	4-13
Figure 4-47 Timing Belt Replacement .....	4-13
Figure 4-48 Upper/Lower UV Sensors Location .....	4-13
Figure 5-1 iVIZION System Wiring Diagram .....	5-1
Figure 6-1 Tool and Harness Connections .....	6-1
Figure 6-2 USB Cable Type Requirement .....	6-1
Figure 6-3 Setup.exe File Location .....	6-1
Figure 6-4 Install Shield Wizard Screen .....	6-1
Figure 6-5 Customer Information Screen .....	6-2
Figure 6-6 Destination Folder Screen .....	6-2
Figure 6-7 Current Settings Confirmation .....	6-2
Figure 6-8 Installation Completion Screen .....	6-2
Figure 6-9 Hardware Update Wizard Screen 1 .....	6-2
Figure 6-10 Hardware Update Wizard Screen 2 .....	6-3
Figure 6-11 Hardware Update Wizard Screen 3 .....	6-3
Figure 6-12 Hardware Update Wizard Screen 4 .....	6-3
Figure 6-13 Normal Mode Selection .....	6-3
Figure 6-14 Test Mode Selection .....	6-3
Figure 6-15 Required Software Download Tools .....	6-4
Figure 6-16 DIP Switches All OFF .....	6-4
Figure 6-17 JCM Tool Suite Standard Edition Screen .....	6-4
Figure 6-18 JCM Tool Suite Standard Edition Screen Pull-Down Menu .....	6-4
Figure 6-19 Browse Screen Button Location .....	6-4
Figure 6-20 iVIZION Software Program Selection .....	6-5
Figure 6-21 Download Progress Screen 1 .....	6-5
Figure 6-22 Download Completed Screen 1 .....	6-5
Figure 6-23 DIP Switches 6, 7, & 8 ON .....	6-5
Figure 6-24 JCM Tool Suite Standard Edition Screen 2 .....	6-5
Figure 6-25 JCM Tool Suite Standard Edition Screen Pull-Down Menu 2 .....	6-6
Figure 6-26 Browse Screen Button Location .....	6-6
Figure 6-27 iVIZION Software Program Selection .....	6-6
Figure 6-28 Download Progress Screen 2 .....	6-6
Figure 6-29 Download Completed Screen 2 .....	6-6
Figure 6-30 Remote Calibration Tools Required .....	6-7
Figure 6-31 KS-072/KS-089 Reference Paper .....	6-7
Figure 6-32 Reference Paper Setting 1 .....	6-7
Figure 6-33 Reference Paper Setting 2 .....	6-8
Figure 6-34 DIP Switch #8 ON .....	6-8
Figure 6-35 JCM Tool Suite Standard Edition Screen 3 .....	6-8
Figure 6-36 iVIZION Calibration Ver.X.XX Screen .....	6-8
Figure 6-37 Feed-Out Calibration Proceeding Screen.....	6-8

# List of Figures

	<b>Page</b>
Figure 6-38 Calibration Information Screen 1 .....	6-8
Figure 6-39 Calibration Information Screen 2 .....	6-9
Figure 6-40 Pusher Plate Release Location .....	6-9
Figure 6-41 Cardboard Setting Location .....	6-9
Figure 6-42 Exit Calibration Proceeding Screen .....	6-9
Figure 6-43 Calibration Information Screen 3 .....	6-9
Figure 6-44 UV Calibration Proceeding Screen .....	6-9
Figure 6-45 Calibration Information Screen 4 .....	6-9
Figure 6-46 Calibration Information Screen 5 .....	6-10
Figure 6-47 CIS Calibration Proceeding Screen .....	6-10
Figure 6-48 Calibration Information Screen 6 .....	6-10
Figure 6-49 Calibration Value Writing Screen .....	6-10
Figure 6-50 Calibration Complete Screen .....	6-10
Figure 6-51 iVIZION Calibration Service Suite Edition Screen.....	6-10
Figure 6-52 Setting Manufacture No. Screen .....	6-11
Figure 6-53 Calibration Value Writing Screen .....	6-11
Figure 6-54 Adjustment Info Screen .....	6-11
Figure 6-55 PC Performance Test Tools Required .....	6-11
Figure 6-56 DIP Switch #8 Set ON .....	6-12
Figure 6-57 JCM Tool Suite Standard Edition Screen.....	6-12
Figure 6-58 iVIZION Test Item VerX.XX Screen .....	6-12
Figure 6-59 Start, Stop & Exit Screen Button .....	6-12
Figure 6-60 Transport Motor Normal Forward Test Screen .....	6-13
Figure 6-61 LED Indicator Test Screen .....	6-13
Figure 6-62 Sensor ON/OFF Test Screen .....	6-13
Figure 6-63 Denomination Indication Location .....	6-14
Figure 6-64 ICB Function Test Screen .....	6-14
Figure 6-65 DIP Switch ON/OFF Test Screen 1 .....	6-15
Figure 6-66 DIP Switch ON/OFF Test Screen 2 .....	6-15
Figure 6-67 Calibration Tool Requirements .....	6-16
Figure 6-68 ICB Setting Tool Requirements .....	6-17
Figure 6-69 JCM Tool Suite Standard Edition .....	6-17
Figure 6-70 iVIZION Utility Tool Version X.XX for Suite Edition Screen 1 .....	6-17
Figure 6-71 Empty CIS IMAGE Screen .....	6-17
Figure 6-72 Last Acceptance CIS IMAGE Screen .....	6-18
Figure 6-73 iVIZION Utility Tool Version X.XX for Suite Edition Screen 2 .....	6-18
Figure 6-74 ICB Function Screen .....	6-18
Figure 6-75 Enable Setting Completion .....	6-18
Figure 6-76 Disable Setting Completion .....	6-19
Figure 6-77 ICB Current Status Screen .....	6-19
Figure 6-78 Machine Number Setting .....	6-19
Figure 6-79 Machine Number Setting Completion .....	6-19
Figure 6-80 Machine Number Indication .....	6-19
Figure 6-81 Inhibit Screen Button Location .....	6-19



# List of Figures

	<b>Page</b>
Figure 6-82 Inhibit Setting Completion .....	6-20
Figure 6-83 ICB System Status Indication .....	6-20
Figure 7-1 iVIZION Entire Unit View .....	7-1
Figure 7-2 iVIZION Validation Unit 1 Exploded View .....	7-3
Figure 7-3 iVIZION Validation Unit 2 Exploded View .....	7-5
Figure 7-4 iVIZION Validation Unit 3 Exploded View .....	7-7
Figure 7-5 iVIZION Transport Unit 1 Exploded View .....	7-9
Figure 7-6 iVIZION Transport Unit 2 Exploded View .....	7-11
Figure 7-7 iVIZION Transport Unit 3 Exploded View .....	7-13
Figure 7-8 iVIZION Transport Unit 4 Exploded View .....	7-15
Figure 7-9 iVIZION Transport Unit 5 Exploded View .....	7-17
Figure 7-10 iVIZION Transport Unit 6 Exploded View .....	7-19
Figure 7-11 iVIZION SS Version Frame Unit Exploded View .....	7-21
Figure 7-12 iVIZION Cash Box Unit 1 Exploded View .....	7-23
Figure 7-13 iVIZION Cash Box Unit 2 Exploded View .....	7-25
Figure 7-14 iVIZION Cash Box Unit 3 Exploded View .....	7-27
Figure 7-15 iVIZION LD Version Frame Exploded View .....	7-29
Figure 7-16 iVIZION HC Frame Exploded View .....	7-31
Figure 7-17 iVIZION HC Box Assembly Exploded View .....	7-33
Figure 7-18 iVIZION HC Box Unit Exploded View .....	7-35
Figure 7-19 iVIZION HC Upper Part Exploded View .....	7-37
Figure 7-20 iVIZION HC Receive Plate Assembly Exploded View .....	7-39
Figure 7-21 iVIZION HC Receive Spring Base Assembly Exploded View .....	7-41
Figure 7-22 iVIZION HC Front Plate Assembly Exploded View .....	7-43
Figure 7-23 iVIZION HC Pusher Unit Assembly Exploded View .....	7-45
Figure 7-24 iVIZION HC Pusher Assembly 1 Exploded View .....	7-47
Figure 7-25 iVIZION HC Pusher Assembly 2 Exploded View .....	7-49
Figure 7-26 iVIZION Optional Components Exploded Views .....	7-51
Figure A-1 Additional Maintenance Equipment Requirements .....	A-6

THIS PAGE INTENTIONALLY LEFT BLANK

# iVIZION® Series

## Next-Generation Banknote Acceptor Unit

### List of Tables

	Page
Table 1-1 iVIZION Model Number Specifications .....	1-2
Table 1-2 iVIZION Type Number Specifications .....	1-2
Table 1-3 iVIZION Software Number Specifications .....	1-2
Table 1-4 iVIZION SS/SH Technical Specifications .....	1-6
Table 1-5 iVIZION SS/SH Environmental Specifications .....	1-7
Table 1-6 iVIZION SS/SH Electrical Specifications .....	1-7
Table 1-7 iVIZION SS Structural Specifications .....	1-7
Table 1-8 iVIZION LD Technical Specifications .....	1-8
Table 1-9 iVIZION LD Environmental Specifications .....	1-9
Table 1-10 iVIZION LD Electrical Specifications .....	1-9
Table 1-11 iVIZION LD Structural Specifications .....	1-9
Table 2-1 Denomination INHIBIT DIP Switch Settings .....	2-3
Table 2-2 JCM Private Line DIP Switch Setting .....	2-3
Table 2-3 Software DIP Switch Settings .....	2-3
Table 2-4 Serial Communications DIP Switch Settings .....	2-3
Table 2-5 LED Error Pattern Indications .....	2-3
Table 2-6 iVIZION SS/LD USB Connection Pin Assignments .....	2-4
Table 2-7 iVIZION SS/LD Photo-Coupler Connector Pin Assignments .....	2-5
Table 2-8 iVIZION SS/LD RS232C Connector Pin Assignments .....	2-6
Table 2-9 iVIZION SS/LD ccTalk Connector Pin Assignments .....	2-7
Table 2-10 iVIZION SS/LD TTL Connector Pin Assignments .....	2-8
Table 2-11 iVIZION SS/LD Bezel JPL (CN7) Connection Pin Assignments .....	2-9
Table 2-12 iVIZION Sensor Cleaning Location Types .....	2-12
Table 6-1 iVIZION Sensor Calibration Order .....	6-7
Table 6-2 PC Performance Test Items .....	6-11
Table 6-3 LED Indications for each condition .....	6-13
Table 6-4 Sensor Actions and Conditions .....	6-14
Table 6-5 Denomination Valuation List .....	6-14
Table 6-6 Performance Test DIP Switch Settings .....	6-16
Table 6-7 ICB Setting Function Operational Condition .....	6-20
Table 7-1 iVIZION Entire Unit Parts List .....	7-2
Table 7-2 iVIZION Validation Unit 1 Parts List .....	7-4
Table 7-3 iVIZION Validation Unit 2 Parts List .....	7-6
Table 7-4 iVIZION Validation Unit 3 Parts List .....	7-8
Table 7-5 iVIZION Transport Unit 1 Parts List .....	7-10
Table 7-6 iVIZION Transport Unit 2 Parts List .....	7-12

# List of Tables

	Page
Table 7-7 iVIZION Transport Unit 3 Parts List .....	7-14
Table 7-8 iVIZION Transport Unit 4 Parts List .....	7-16
Table 7-9 iVIZION Transport Unit 5 Parts List .....	7-18
Table 7-10 iVIZION Transport Unit 6 Parts List .....	7-20
Table 7-11 iVIZION SS Version Frame Unit Parts List .....	7-22
Table 7-12 iVIZION Cash Box Unit 1 Parts List .....	7-24
Table 7-13 iVIZION Cash Box Unit 2 Parts List .....	7-26
Table 7-14 iVIZION Cash Box Unit 3 Parts List .....	7-28
Table 7-15 iVIZION LD Frame Parts List .....	7-30
Table 7-16 iVIZION HC Frame Parts List .....	7-32
Table 7-17 iVIZION HC Box Assembly Parts List .....	7-34
Table 7-18 iVIZION HC Box Unit Parts List .....	7-36
Table 7-19 iVIZION Upper Part Parts List .....	7-38
Table 7-20 iVIZION HC Receive Plate Assembly Parts List .....	7-40
Table 7-21 iVIZION HC Receive Spring Base Assembly Parts List .....	7-42
Table 7-22 iVIZION HC Front Plate Assembly Parts List .....	7-44
Table 7-23 iVIZION HC Pusher Unit Parts List .....	7-46
Table 7-24 iVIZION HC Pusher Assembly 1 Parts List .....	7-48
Table 7-25 iVIZION HC Pusher Assembly 2 Parts List .....	7-50
Table 7-26 iVIZION Optional Components Parts List .....	7-52
Table A-1 LED Code Condition .....	A-1
Table A-2 LED Error Codes .....	A-2
Table A-3 Jam LED Flash Error Codes .....	A-4
Table A-4 LED Reject Codes .....	A-5
Table A-5 Additional Maintenance Equipment Parts List .....	A-6

# iVIZION® Series

## Next-Generation Banknote Acceptor Unit

### Section 1



## 1 GENERAL INFORMATION

### Description

This section provides a general overview of the iVIZION® Series Next-Generation Banknote Acceptor pictured in Figure 1-1. This section is designed to help the user navigate through this guide with ease. It includes the following information:

- iVIZION® Units
- Product Descriptions
- User Cautions
- Primary Features
- Component Names
- Specifications
- Unit Dimensions
- Technical Contact Information

The following conventions are used throughout this manual to simplify navigation and device operation:

- **Safety Instructions** need to be observed in order to protect the operators and equipment; there are identified with **Bold** text and the following pictographs: 
- **Special Notes** affect the use of the Banknote Acceptor; these are identified with *italic* text and the following pictograph: 
- **Steps** requiring the operator to perform specific actions; these are identified with sequential numbers (1., 2., 3., etc).

### iVIZION Units



Figure 1-1 iVIZION Unit

## Model Descriptions

Table 1-1 lists the product model number descriptions.

**Table 1-1** iVIZION Model Number Specifications

Nº	Model: iVIZION - * * * - * * Nº (1)(2)(3) (4)
(1)	Validation Head 1: Standard 2 - 9: Reserved
(2)	CPU Board (Memory) 0: Standard 1 - 9: Reserved
(3)	Transport Unit Type 0: Standard 1: SH Specification 2 - 9: Reserved
(4)	Stacker Type SS: Security Stacker Down SH: Stacker Horizontal LD: Less Down (No Stacker)

## Type Descriptions

Table 1-2 lists the product type number descriptions.

**Table 1-2** iVIZION Type Number Specifications

Nº	Type: * * * - 00 - * * * * Nº (a)(b)(c) (d) (e)(f)(g)(h)(i)
(a)	Box Capacity* 5: 500 notes (New Banknote) 9: 900 notes (New Banknote) U: 3000 notes (Street Grade Banknote) 0: No Cash Box
(b)	Box Type 0: Standard
(c)	Box Handle 0: Standard
(d)	Transport Unit Type 00: Standard
(e)	Bezel (Option) 0: Without Bezel 1: With LED Bezel (UBA Standard 85)
(f)	ICB (RFID Type) 0: None 1: ICB-Compliant (Standard) (for SS/SH Version Only)
(g)	Optional Board (Memory) 0: Standard Memory (64M Bit) 1: Memory Extension Board (128M bit) 2: Memory Extension Board (192M bit)
(h)	Input/Output Signal Selection P: Photo-Coupler Isolation (Standard) R: RS232C
(d)	External Harness Type 0: No Harness 1: Standard Harness (One side cut) 2: Harness (with USB I/F Cable) (One side cut) 3: Harness 2 (with Connector and USB I/F Cable) 4: SS/SH Harness (with USB I/F Cable) (One side cut) 5: SS/SH Harness 2 (with Connector and USB I/F Cable) 6: Harness (with USB I/F Cable and JPL Connector) (1m one side cut)

\*. The number of stacked Notes depends on the Banknote's condition.


## Software Descriptions

Table 1-3 lists the product software number descriptions.

**Table 1-3** iVIZION Software Number Specifications

Nº	Software: iVIZION-* * *- * * * * - * * * - V * * * Nº (A) (B) (C) (D) (E)
(A)	Software Model Name
(B)	Denomination (Country Code)
(C)	Interface Protocol Name
(D)	Software Version

## Precautions

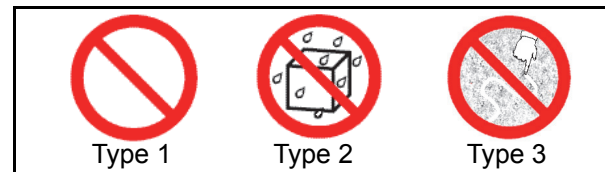

**Figure 1-2** Precautionary Symbols

The Figure 1-2 symbols are defined as follows:

1. **(Type 1)** Do not insert a torn, folded, or wet Banknote; it may cause a jam inside the unit.
2. **(Type 2)** Do not expose the unit to water. The unit contains several precision electronic devices that can be damaged if water or any liquid is sprayed or spilled into the unit.
3. **(Type 3)** Do not install the unit in a dusty environment. Dust may affect/degrade the sensor's performance.

## User Cautions

Careful measures were taken in the design of this product to ensure its quality; however, the following cautions pertain to all users and should be followed for safe operation.

## Installation Cautions

The Installation Cautions are defined as follows:

1. Do not allow the unit to endure or operate at a high temperature, in high humidity and/or dusty environment.
2. Do not install the unit in an area with excessive vibration or shock present.
3. Unit is not designed for outside installation. Be sure that the host machine contains enough protection to avoid wet or dusty conditions when installing in either an indoor or open-air space.
4. Avoid exposing the unit to direct sunlight/incandescent lamp illumination with a gradient angle of 15 degrees or more, and illumination index of 3,000 Lux or less.
5. Ensure that the host machine is designed for daily operational access for maintenance and/or clearing a Banknote Jam.

## Mounting, Dismounting & Transportation

1. Be sure to turn the Power OFF before mounting or removing the Unit from its permanent location. Plugging or unplugging Connector Plugs from their receptacles while the Power is ON may cause damage to the Unit.
2. When reassembling a disassembled Unit Part, ensure that the each part is properly replaced in its correct original location.
3. Be sure to carry the Unit by both hands when transporting it. Holding the Unit by one hand may cause personal injury if the Unit accidentally becomes disassembled and drops away.
4. Be careful not to use excessive outside pressure on the Unit, or subject it to excessive vibration during transportation.

## Preventive Maintenance

1. Be sure to turn the Power OFF on the Unit before beginning a maintenance procedure. The equipment can produce abnormal operating signals while in maintenance mode that may cause personal injury.
2. If the Validator Section is dirty due to dust, foreign objects or other such debris adhering to it, Banknote acceptance rates will degrade. Clean the Unit once a month to keep its performance stable.
3. Use a soft, lint-free cloth, cotton swab or a compressed air spray to clean dust and debris from the Banknote path.



**Caution: DO NOT use any alcohol, solvents, scouring agents or citrus based cleaners that can damage the plastic surfaces of the device when cleaning it.**

4. Do not disassemble the Unit incorrectly or redesign it in any way. Unauthorized use by inadequately trained personnel, or use outside the original manufacturer's intent for operation voids the warranty.
5. When the Unit is exposed to liquid such as water, wipe with a micro fiber cloth to dry the wet areas immediately. Remaining liquids may affect and degrade the Sensors and the Validation Section's performance.



**Caution: Make Interface Harness connections to the Host Machine shorter than 9.84 Feet (3 Meters) in length. Cut off all unused portions of the Interface Harness wiring to avoid static electrical effects or short circuit possibilities that could cause damage to the Unit.**




**WARNING: This Unit is designed for use with a Current limiting Power Source! Design the Host Cabinet space to meet all local related safety standards.**

## Banknote Fitness Requirements

The following Banknote types may not validate correctly, or can cause a Banknote jam and/or damage to the Unit's Transport path. Banknotes exhibiting the conditions listed below and illustrated in Figure 1-3 should be avoided:

- Torn
- Having excessive folds
- Dirty
- Wet
- Having excessive wrinkle
- Adhering foreign objects and/or oil

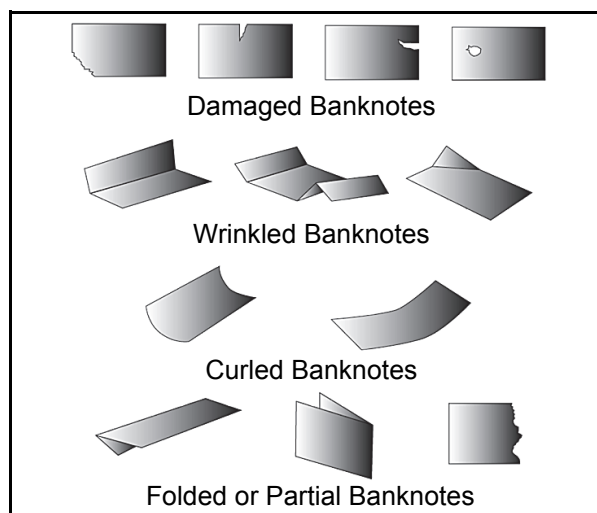


**Figure 1-3 Unacceptable Banknotes**

## Reference Paper Use Precautions

When calibration, using the KS-072/KS-089 Reference Paper, is complete, protect the Reference Paper by handling as follows:

- Ensure that the Reference Paper Carrier is kept in an upright position following use (See Figure 1-4 a) or, replace it into its protective Shipping Carton when calibration is complete (See Figure 1-4 b).

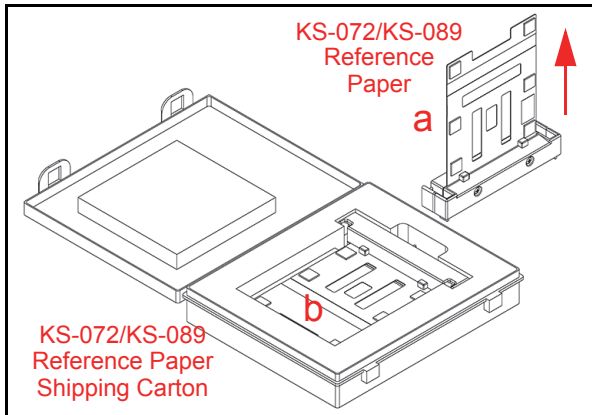

**Figure 1-4** Reference Paper Handling Precautions

- Do not lay the Reference Paper Carrier down on any irregular surface, otherwise the Reference Paper may become wrinkled making it useless for future calibration use.
- ALWAYS return each Reference Paper into its protective Shipping Carton following each use.

## Primary Features


The iVIZION® Series of Banknote Acceptor contains the following primary features:

- Easily swappable single Validation Head for inventory and maintenance efficiency.
- CIS technology allowing 100% scanning of document details and fine line imagery.
- RFID Intelligent Cash Box with lockable Frame Unit, and designed for one-hand removal without the need to use a Button or Lever to release the Cash Box.



## Component Names

Figure 1-5 illustrates the iVIZION® component names and locations.

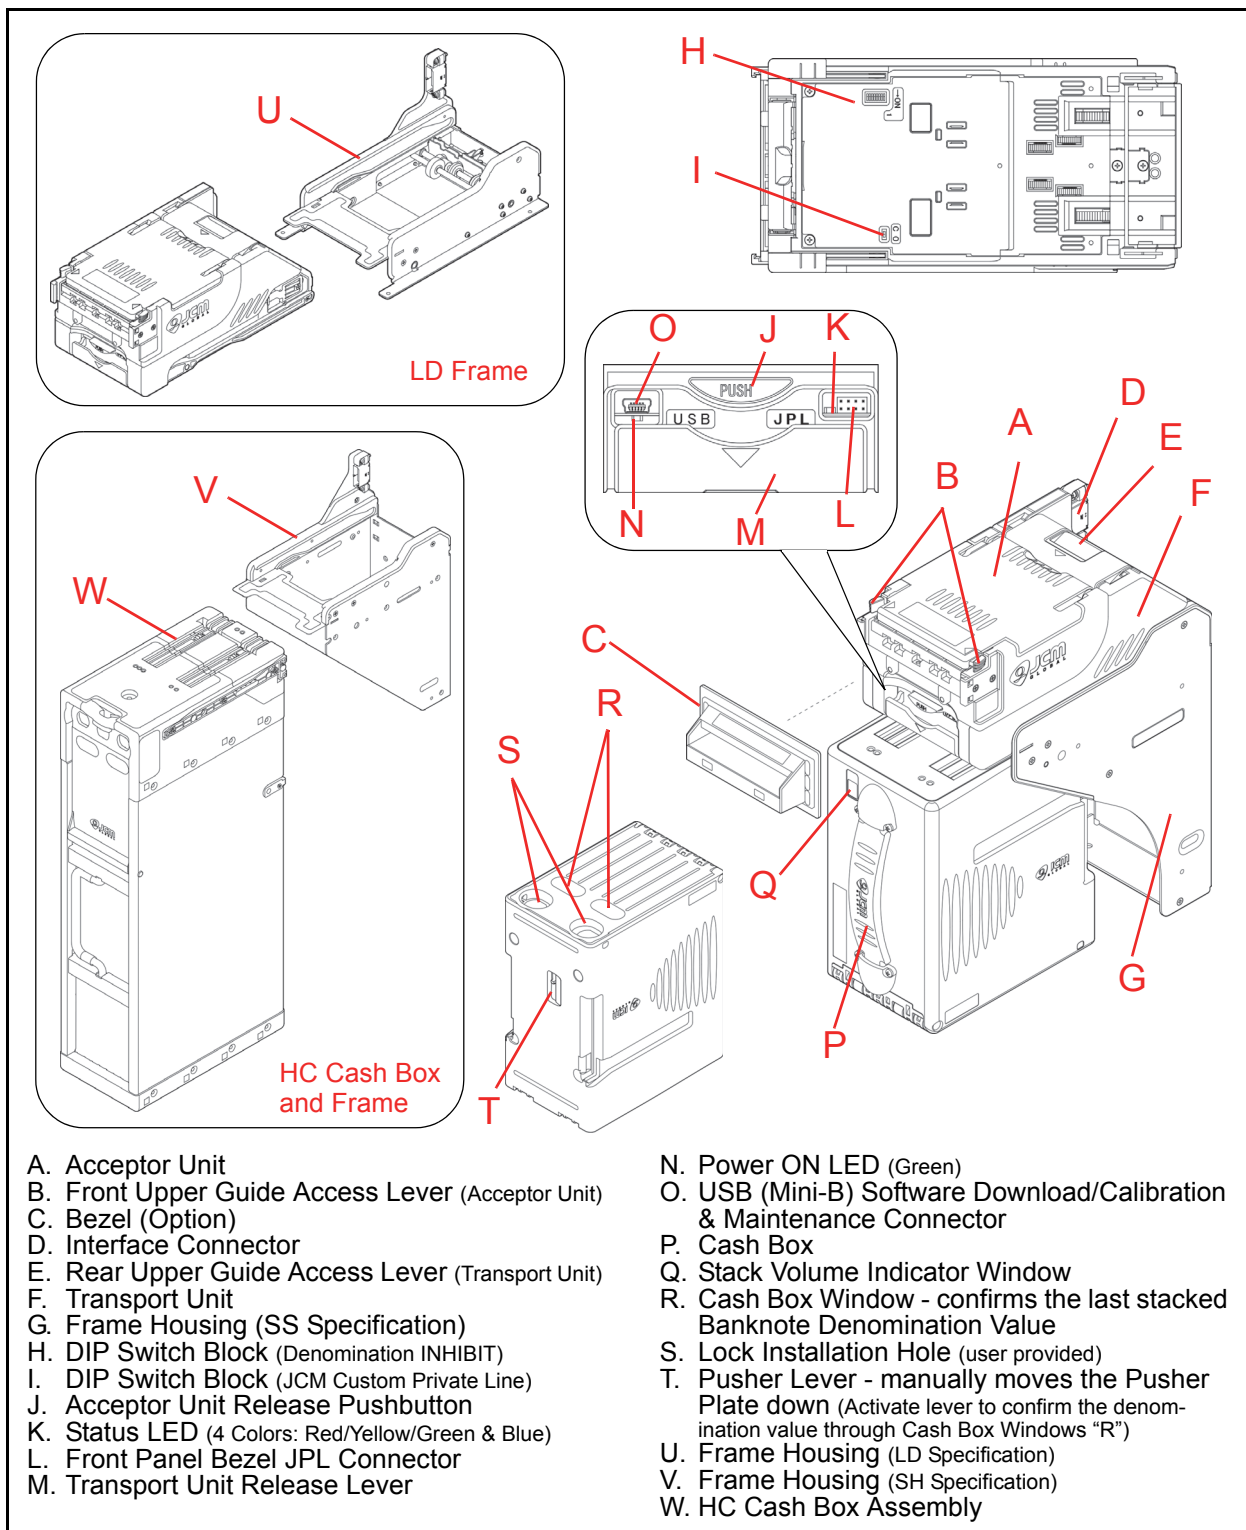

**Figure 1-5 iVIZION Component Names**

## Specifications (iVIZION SS/SH Specifications)

### Technical Specifications

**Table 1-4** iVIZION SS/SH Technical Specifications

Acceptance Rate <sup>*</sup> :	98% or greater The following Banknote types are excluded: a) Banknotes with unclear graphics b) Double (dual) notes c) Worn, dirty, wet, stained, torn or excessively wrinkled Banknotes d) Banknotes having folded corners or edges e) Banknotes having the wrong cut dimensions or a printing displacement f) Returned Banknotes because of incorrect or failed insertion.
Banknote Types Accepted:	Long edge: SS: 110-170 mm (4.33-6.69 in.) SH: 110-177 mm (4.33-6.96 in.) Short edge: 60-85 mm (2.36-3.35 in.).
Barcode Coupon <sup>†</sup> :	Standard Specification a) Read Code interleaved: 2 of 5 b) Narrow Bar: 0.5mm-0.6mm (0.019-0.023 in.) c) Wide Bar: Narrow Bar = 3:1 d) Characters: 18 Characters e) Print Position: Middle (by dividing a Coupon equally on the left, right, top and bottom of the Coupon's exact center) f) Print Width: Wider than 10mm (0.39 in.).
Insertion Direction:	Refer to the specific Country's Software Information Sheet.
Processing Speed:	Approximately 2 seconds from Banknote insertion to Vend signal output. Approximately 3 seconds from Banknote insertion to completion of the stacking operation.
Validation Method:	Optical
Diagnostic Indicators:	Power LED, Status LED, Bezel LED (Optional)
Escrow:	1 Note
Cash Box Type <sup>‡</sup> :	Secure Cash Box Intelligent Cash Box (available with RFID Specification)
Cash Box Capacity <sup>**</sup> :	SS: Standard 500 Banknotes / Large 900 Banknotes SH: HC Cash Box: 3000 Banknotes
Fraud Detection:	Equipped
Interface <sup>††</sup> :	USB Interface: USB Specification Rev.2.0 Serial Interface: Photo-Coupler Isolation Serial Interface: RS232C Communication Protocol.

<sup>\*</sup>. Refer to the specific Country's "Software Information Sheet" for each Country's particular Banknote acceptance rate.

<sup>†</sup>. Refer to the specific Country's "Bar Code Coupon Specification" for more details.

<sup>‡</sup>. User supplied installed Locks (including the attached Plate, Lock and Key).


<sup>\*\*</sup>. The number of Notes stacked depends on the Banknote's condition.

<sup>††</sup>. The Interface Harness connecting to the Host should be less than 3m.

## Environmental Specifications

**Table 1-5** iVIZION SS/SH Environmental Specifications

Operating Temperature:	5° C to +50° C (41° F to 122° F)
Storage Temperature:	-20° C to +70° C (-4° F to 158° F)
Relative Operating Humidity:	15% to 85% RH (non-condensed)
Relative Storage Humidity:	15% to 85% RH (non-condensed)
Installation:	Indoors Only

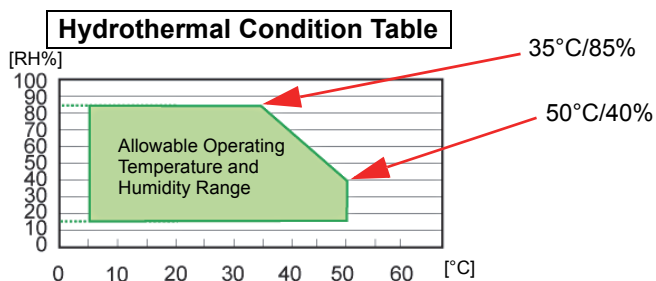

## Electrical Specifications

**Table 1-6** iVIZION SS/SH Electrical Specifications

Supply Voltage:	12V DC (-5%) to 24V DC (+10%) [NOTE: Use a Current Source Limiting Power Supply]
Current Consumption:	Standby: 24V DC = 0.2A, 12V DC = 0.2A Operation: 24V DC = 1.3A, 12V DC = 2.3A Maximum: 24V DC = 3.2A, 12V DC = 3.0A

## Structural Specifications

**Table 1-7** iVIZION SS Structural Specifications

Weight Empty:	SS: Approximately 4.1kg (9.04 lbs) SH: Approximately 7.6kg (16.75 lbs) (with HC Cash Box)
Mounting:	Horizontal (Maximum gradient limitation within 50 degrees; See Figure 1-9 on page 1-12)
Outside Dimensions:	Refer to "iVIZION Banknote Acceptor SS Unit Outside Dimensions" on page 1-10 and "iVIZION Banknote Acceptor SH Unit Outside Dimensions" on page 1-11 of this document.

## Specifications (iVIZION LD Specifications)

### Technical Specifications

**Table 1-8 iVIZION LD Technical Specifications**

Acceptance Rate <sup>*</sup> :	98% or greater The following Banknote types are excluded: a) Banknotes with unclear graphics b) Double (dual) notes c) Worn, dirty, wet, stained, torn or excessively wrinkled Banknotes d) Banknotes having folded corners or edges e) Banknotes having the wrong cut dimensions or a printing displacement f) Returned Banknotes because of incorrect or failed insertion.
Banknote Types Accepted:	Long edge: 110-170 mm (4.33-6.69 in.) Short edge: 60-85 mm (2.36-3.35 in.).
Barcode Coupon <sup>†</sup> :	Standard Specification a) Read Code interleaved: 2 of 5 b) Narrow Bar: 0.5mm-0.6mm (0.019-0.023 in.) c) Wide Bar: Narrow Bar = 3:1 d) Characters: 18 Characters e) Print Position: Middle (by dividing a Coupon equally on the left, right, top and bottom of the Coupon's exact center) f) Print Width: Wider than 10mm (0.39 in.).
Insertion Direction:	Refer to the specific Country's Software Information Sheet.
Processing Speed:	Approximately 2 seconds from Banknote insertion to Vend signal output.
Validation Method:	Optical
Diagnostic Indicators:	Power LED, Status LED, Bezel LED (Optional)
Escrow:	1 Note
Fraud Detection:	Equipped
Interface <sup>‡</sup> :	USB Interface: USB Specification Rev.2.0 Serial Interface: Photo-Coupler Isolation Serial Interface: RS232C Communication Protocol.

<sup>\*</sup>. Refer to the specific Country's "Software Information Sheet" for each Country's particular Banknote acceptance rate.


<sup>†</sup>. Refer to the specific Country's "Bar Code Coupon Specification" for more details.

<sup>‡</sup>. The Interface Harness connecting to the Host should be less than 3m.

## Environmental Specifications

**Table 1-9** iVIZION LD Environmental Specifications

Operating Temperature:	5° C to +50° C (41° F to 122° F)
Storage Temperature:	-20° C to +70° C (-4° F to 158° F)
Relative Operating Humidity:	15% to 85% RH (non-condensed)
Relative Storage Humidity:	15% to 85% RH (non-condensed)
Installation:	Indoors Only

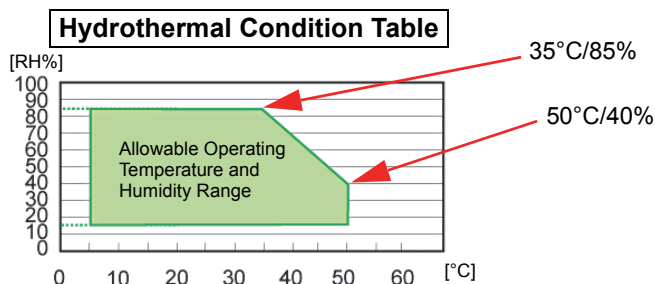

## Electrical Specifications

**Table 1-10** iVIZION LD Electrical Specifications

Supply Voltage:	12V DC (-5%) to 24V DC (+10%) [NOTE: Use a Current Source Limiting Power Supply]
Current Consumption:	Standby: 24V DC = 0.2A, 12V DC = 0.2A Operation: 24V DC = 1.3A, 12V DC = 2.3A Maximum: 24V DC = 3.2A, 12V DC = 3.0A


## Structural Specifications

**Table 1-11** iVIZION LD Structural Specifications

Weight Empty:	Approximately 2.3kg (5.07 lbs)
Mounting:	Horizontal (Maximum gradient limitation within 50 degrees; See Figure 1-9 on page 1-12)
Outside Dimensions:	Refer to "iVIZION LD Unit Outside Dimensions" on page 1-14 of this document.

## iVIZION SS Entire Unit Outside Dimensions


Figure 1-6 illustrates the iVIZION SS entire Unit outside dimensions.

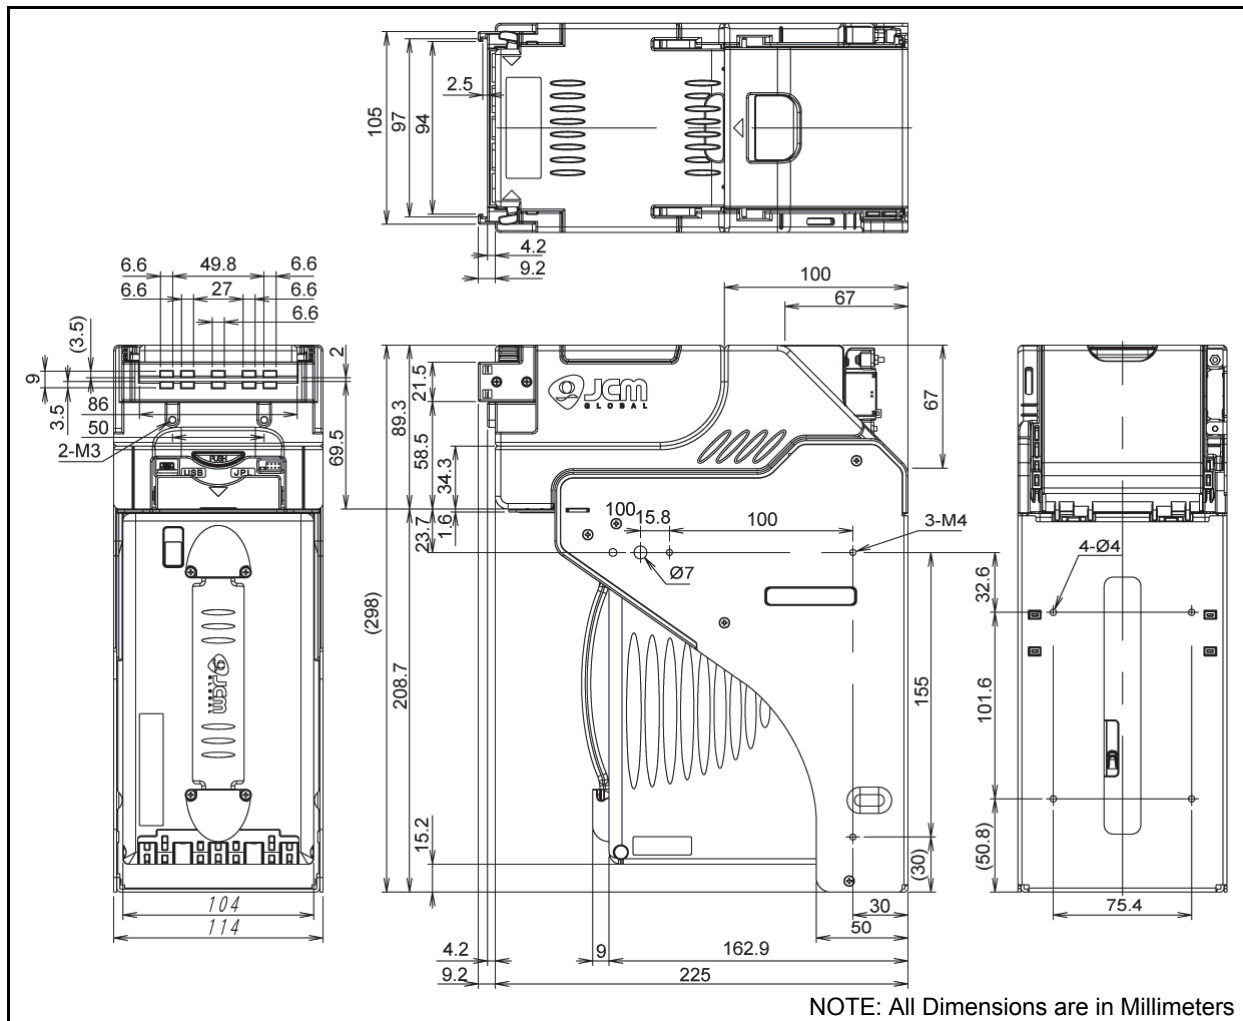

**Figure 1-6** iVIZION Banknote Acceptor SS Unit Outside Dimensions

## iVIZION SH Entire Unit Outside Dimensions


Figure 1-7 illustrates the iVIZION SH entire Unit outside dimensions.

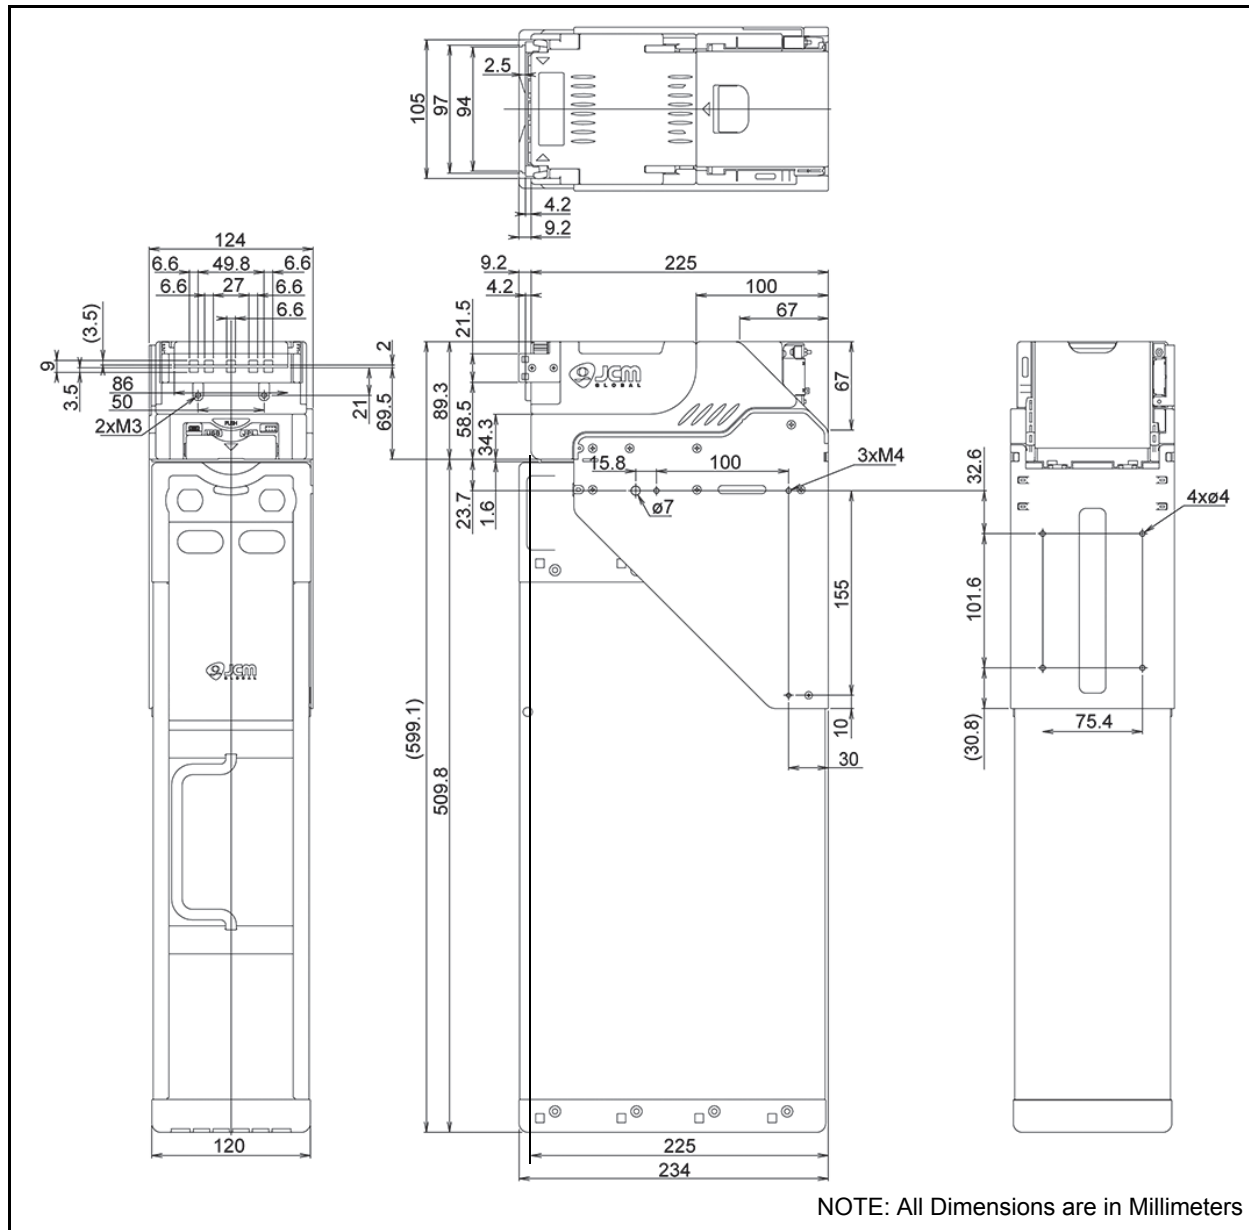

**Figure 1-7** iVIZION Banknote Acceptor SH Unit Outside Dimensions

## iVIZION SS/SH Installation/Maintenance Space Requirements

Figure 1-8 illustrates the iVIZION® SS installation and maintenance space requirements.

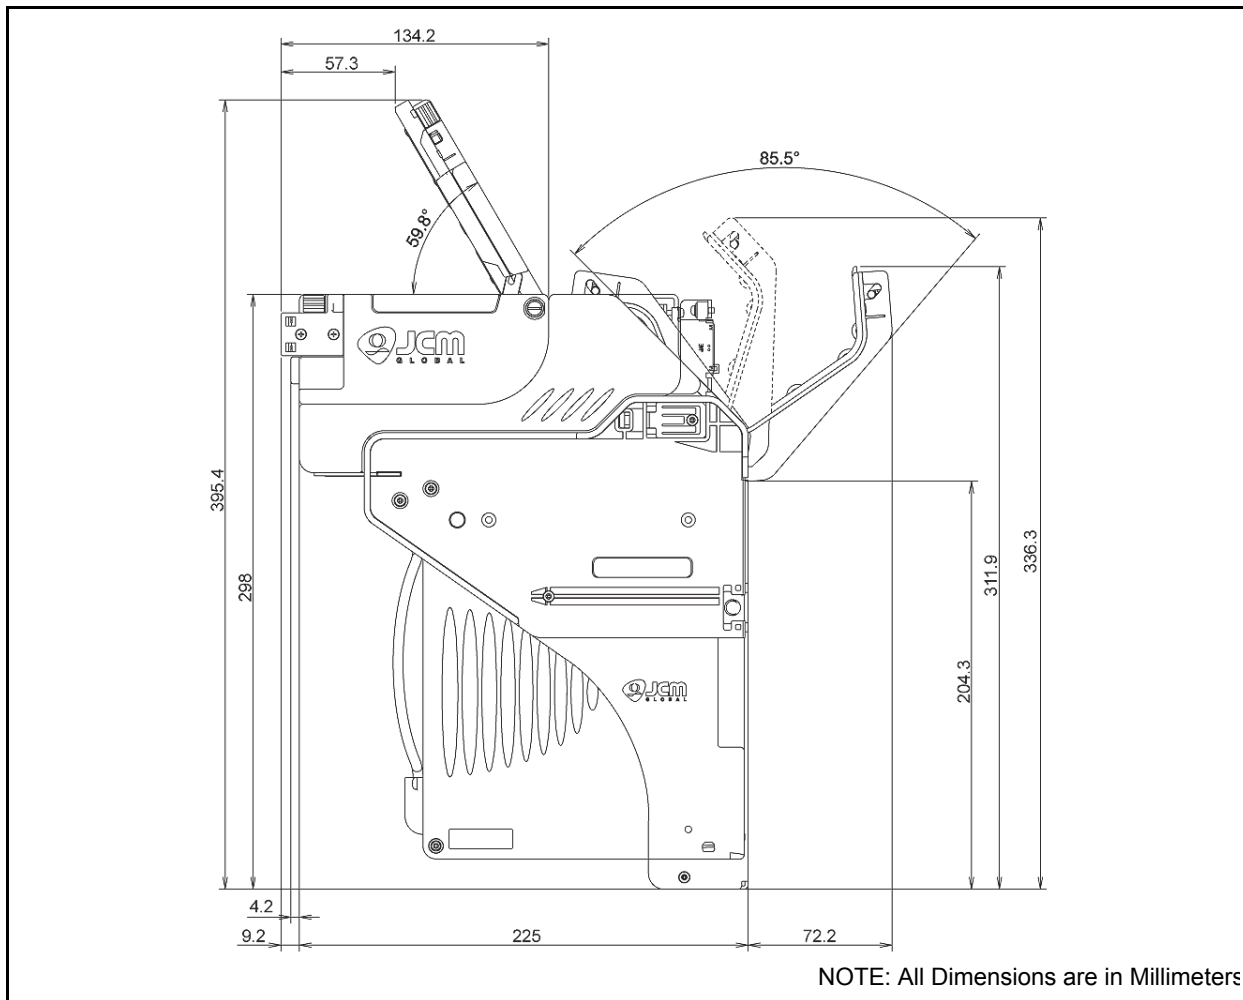


**Figure 1-8** iVIZION SS Unit Installation and Maintenance Space Requirements Diagram



**NOTE:** If a maintenance space clearance area is unavailable, the iVIZION® SS Unit will need to be dismounted when maintenance procedures are to be performed.




**Caution:** When installing the iVIZION SS Unit into a Host Machine, do not mount it tilted downward more than 50 degrees from a Horizontal position (See Figure 1-9).

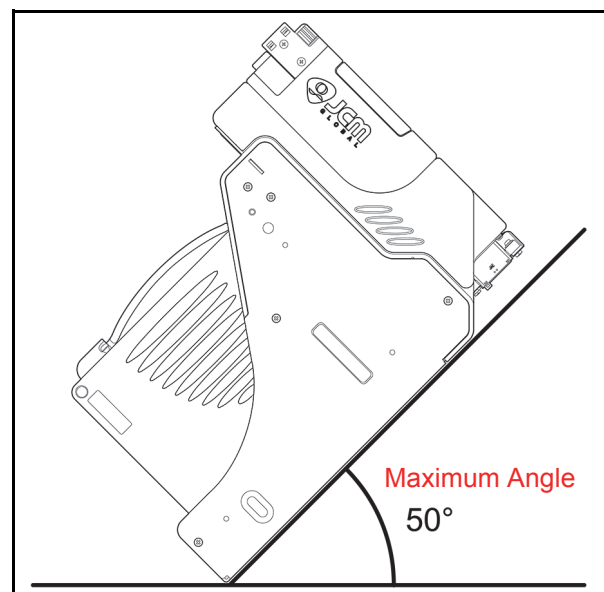

**Figure 1-9** Maximum Gradient Angle = 50 Degrees



Figure 1-10 illustrates the iVIZION® SH installation and maintenance space requirements.

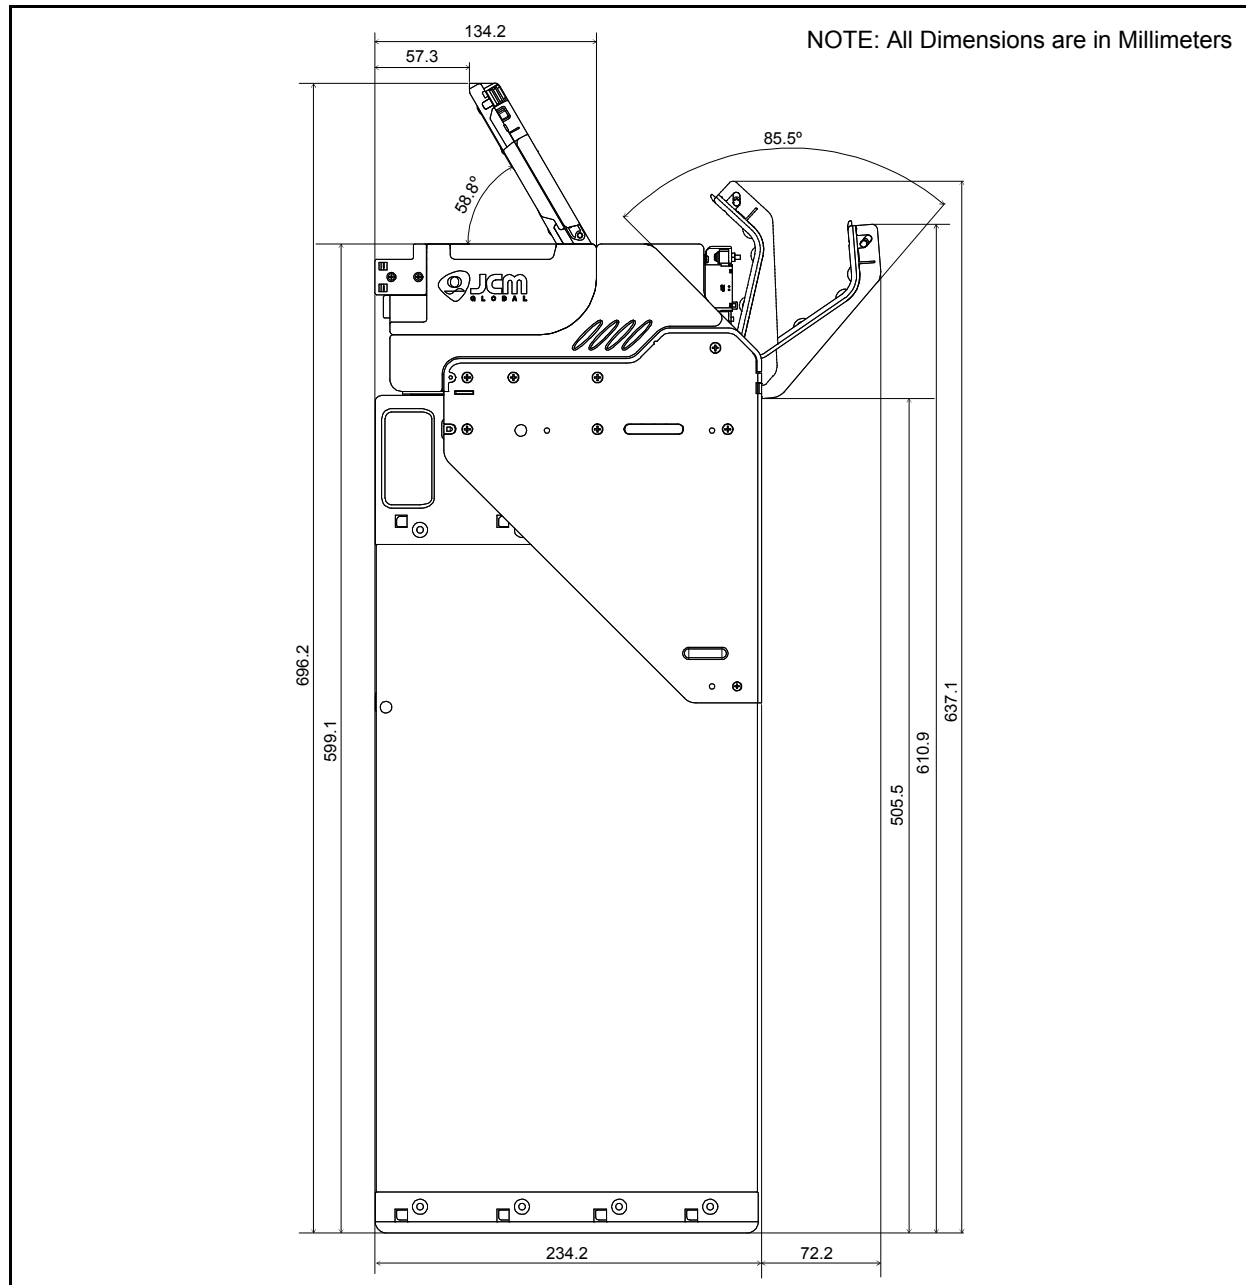

**Figure 1-10 iVIZION SH Unit Installation and Maintenance Space Requirements Diagram**



**NOTE:** The Cash Box is hanging on the Unit. Be careful that the Cash Box does NOT touch the Host Machine and be sure that there is enough space under the Cash Box to be seated/removed properly.



**Caution:** When installing the iVIZION SH Unit into a Host Machine, do not mount it tilted downward more than  $\pm 5$  degrees from a Horizontal position.

iVIZION LD Specification Unit Dimensions

Figure 1-11 illustrates the iVIZION® LD Unit Outside Dimensions.

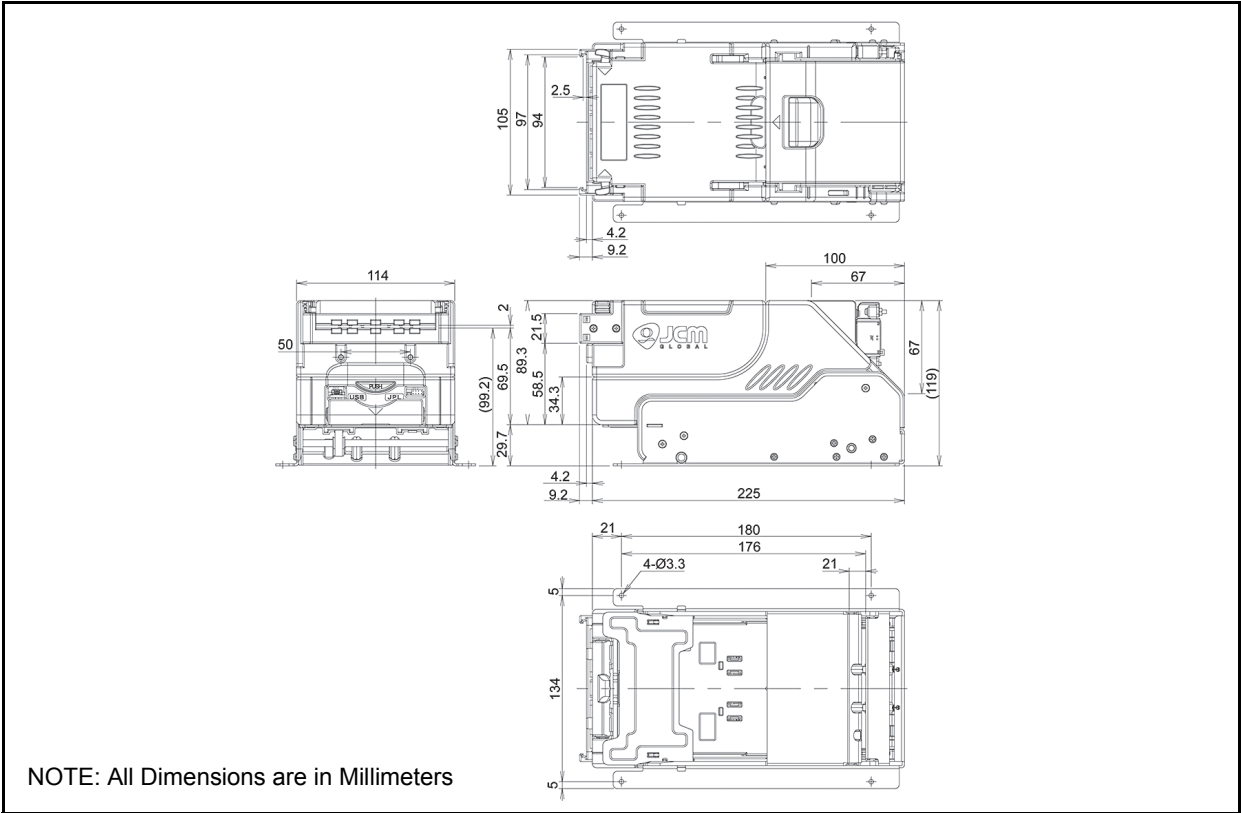


Figure 1-11 iVIZION LD Unit Outside Dimensions

Figure 1-12 illustrates the iVIZION® LD Unit with Bezel Outside Dimensions.


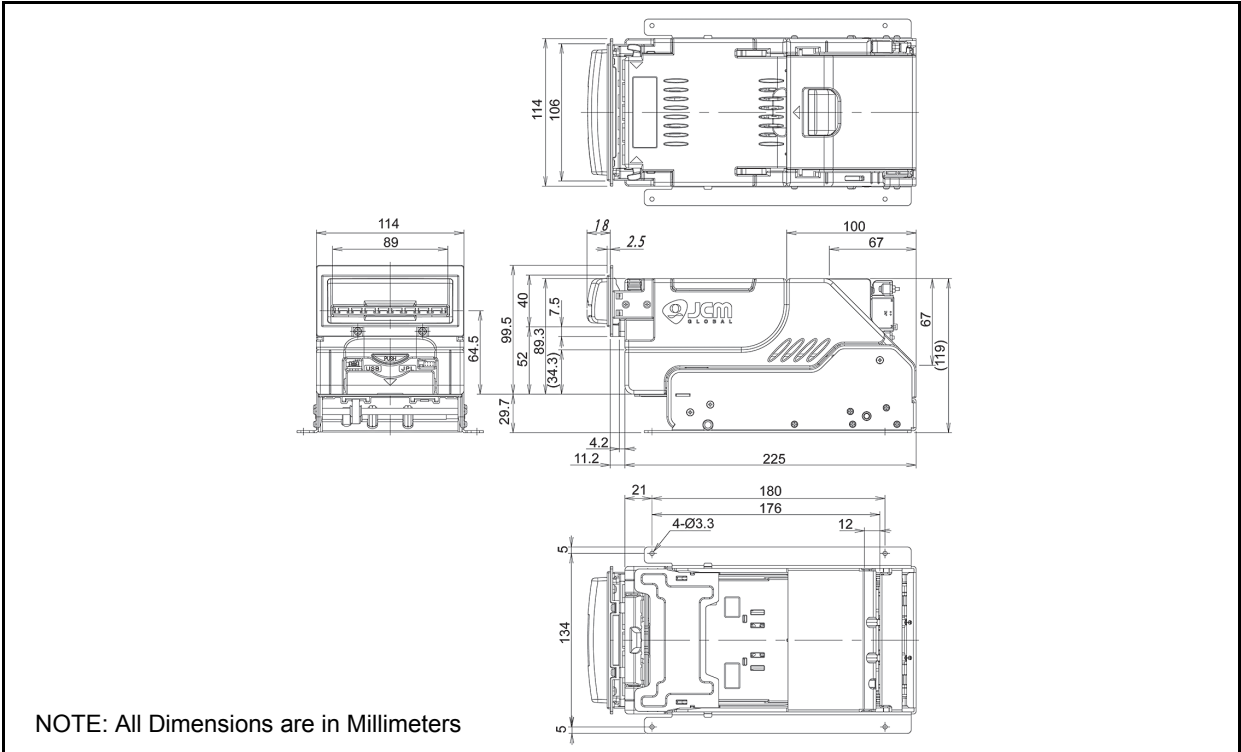


Figure 1-12 iVIZION LD Unit with Bezel Outside Dimensions

## Various Cash Box Unit Dimensions

### Standard Cash Box Outside Dimensions


Figure 1-13 illustrates the iVIZION® Standard Cash Box Outside Dimensions.

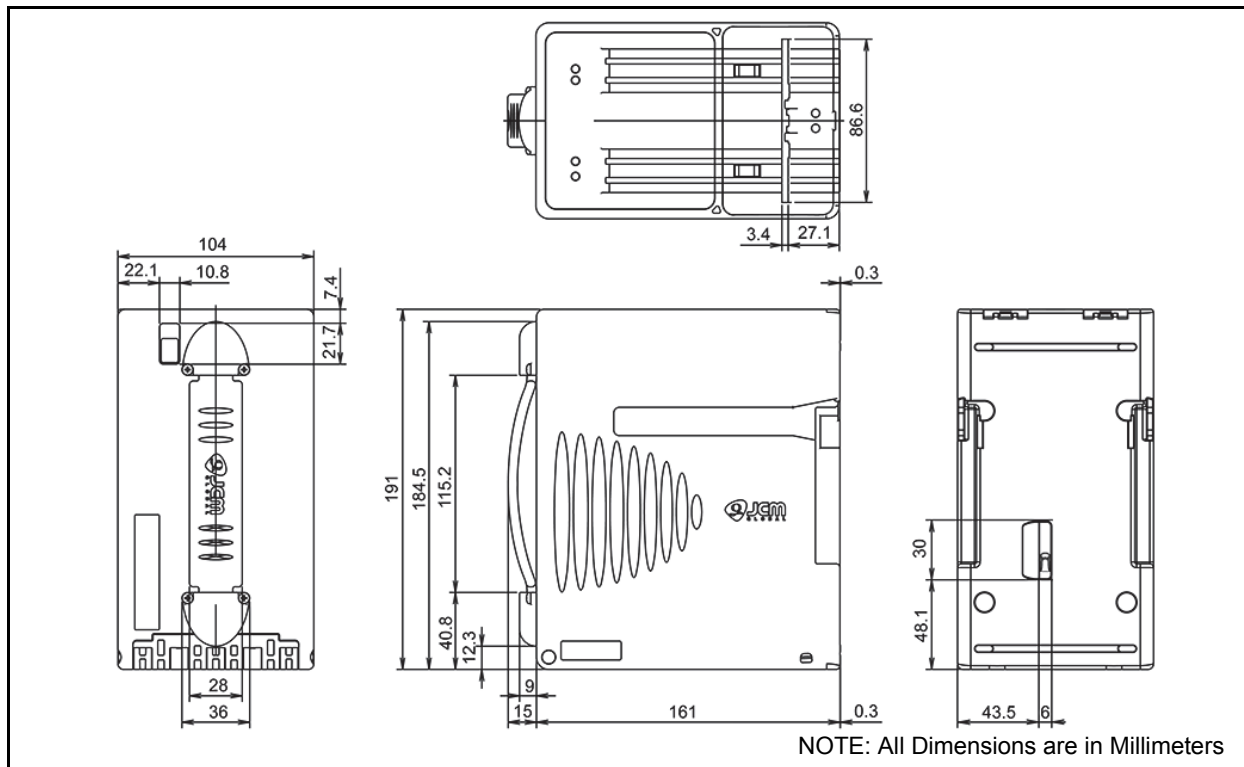

**Figure 1-13** iVIZION Standard Cash Box Outside Dimensions

### Large Cash Box Outside Dimensions

Figure 1-14 illustrates the iVIZION® Large Cash Box Outside Dimensions.

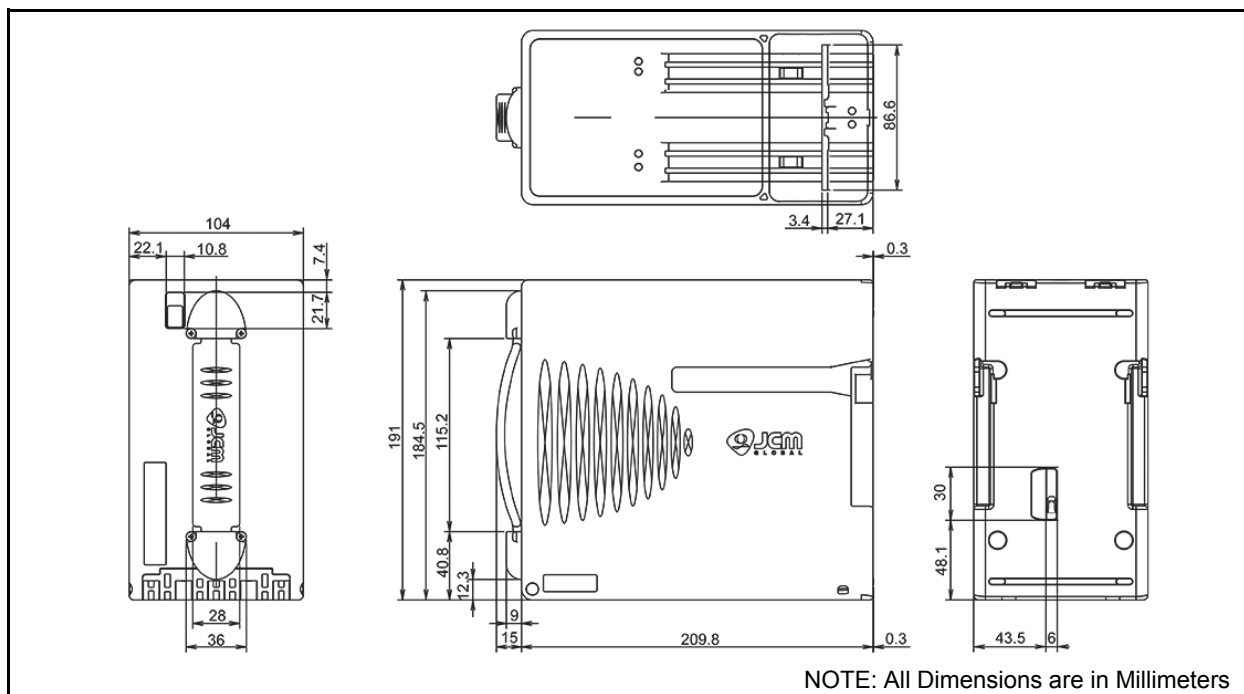

**Figure 1-14** iVIZION Large Cash Box Outside Dimensions

HC Cash Box Outside Dimensions

Figure 1-15 illustrates the iVIZION® HC Cash Box Outside Dimensions.

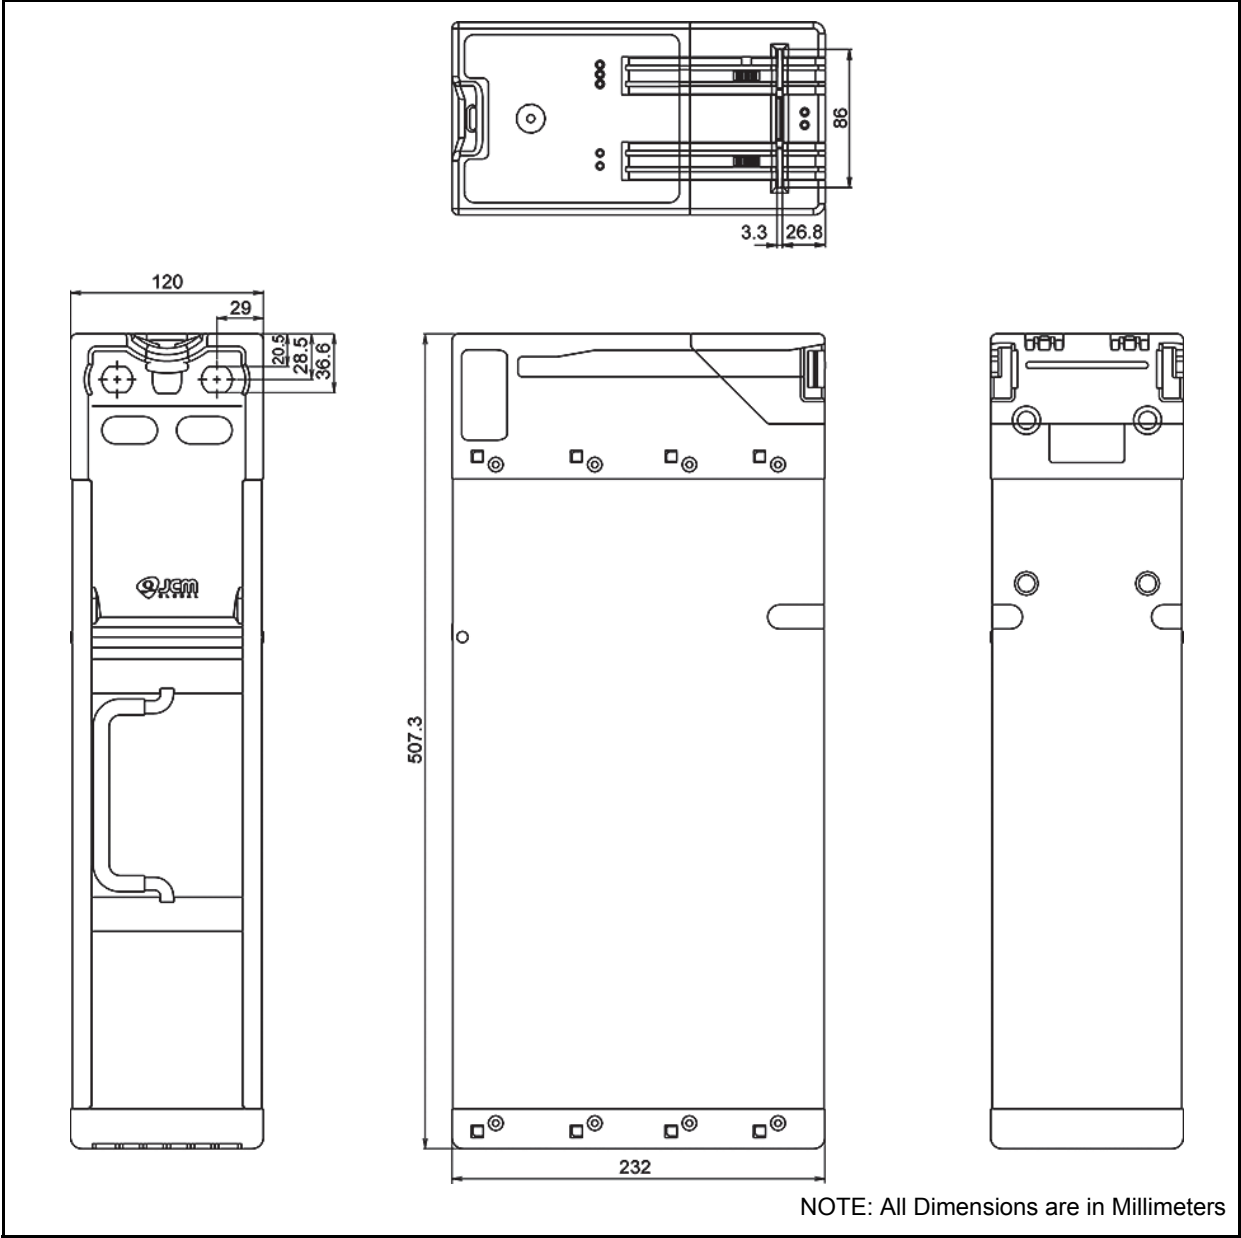


Figure 1-15 iVIZION HC Cash Box Outside Dimensions

## Technical Contact Information

### Americas

#### JCM AMERICAN

Phone: +1-702-651-0000

Fax: +1-702-644-5512

925 Pilot Road, Las Vegas, NV 89119

E-mail: [support@jcmglobal.com](mailto:support@jcmglobal.com)

### Europe, Africa, Russia & Middle East

#### JCM EUROPE GMBH

Phone: +49-211-530-645-60

Fax: +49-211-530-645-65

Muendelheimer Weg 60

D-40472 Duesseldorf Germany

E-mail: [support@jcmglobal.eu](mailto:support@jcmglobal.eu)

### UK & Ireland

#### JCM EUROPE (UK OFFICE)

Phone: +44 (0) 190-837-7331

Fax: +44 (0) 190-837-7834

Unit B, Third Avenue

Denbigh West Business Park

Bletchley, Milton Keynes,

Buckinghamshire MK1 1DH, UK

E-mail: [support@jcmglobal.eu](mailto:support@jcmglobal.eu)

### Asia and Oceania

#### JCM GOLD (HK) LTD.

Phone: +852-2429-7187

Fax: +852-2929-7003

Unit 1-7, 3/F., Favor Industrial Centre

2-6 Kin Hong Street, Kwai Chung,

N.T. Hong Kong

E-mail: [asiapactechsupport@jcmglobal.com](mailto:asiapactechsupport@jcmglobal.com)

#### JAPAN CASH MACHINE CO., LTD. (HQ)

Phone: +81-6-6703-8400

Fax: +81-6-6707-0348

2-3-15, Nishiwaki, Hirano-ku, Osaka 547-0035  
JAPAN

E-mail: [Shohin@jcm-hq.co.jp](mailto:Shohin@jcm-hq.co.jp)

All of these Websites are available via:

<http://www.jcmglobal.com>

THIS PAGE INTENTIONALLY LEFT BLANK

# iVIZION® Series

## Next-Generation Banknote Acceptor Unit

### Section 2

## 2 INSTALLATION


This section provides installation and operating instructions for the iVIZION® Series Next-Generation Banknote Acceptor Unit. The information within contains the following features:

- Installation Process
- DIP Switch Configurations
- Connector Pin Assignments
- Preventive Maintenance
- Cleaning Procedure
- Standard Interface Circuit Schematics
- Operational Flowchart

### Installation Process


Mounting holes are provided in each Frame Unit to attach the iVIZION® to a related Machine during installation. Select and perform the following steps to install the iVIZION® Unit in the related Machine's particular Frame configuration:

1. Install the Interface Harness to the Frame Grounding Plate (FG PLT) (See Figure 2-1 a) using the two (2) Floating Collars (See Figure 2-1 b), the single (1) M2.6x12 W Washer Screw (See Figure 2-1 c), the single (1) M2.6x10 W Washer Screw (See Figure 2-1 d) and the single (1) M2.6 Nylon Nut (See Figure 2-1 e) onto the Frame Assembly. See the Figure 2-1 circled inset to visually see the assembly completed as required.

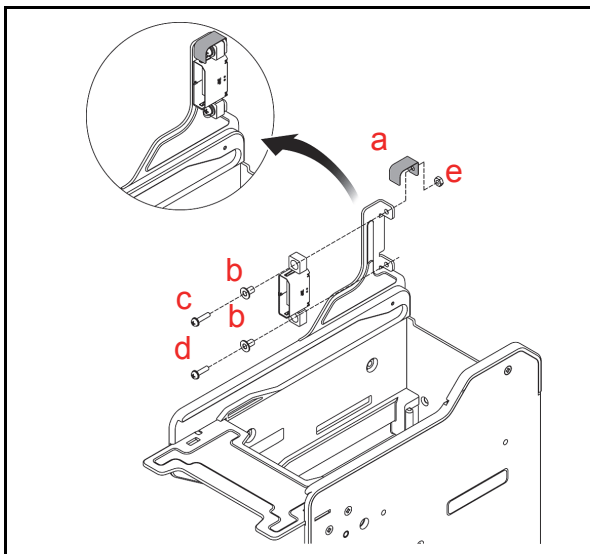


**Figure 2-1** Interface Harness Installation Location

2. When a side mounting configuration is preferred, bolt the left and right side of the iVIZION® Frame into its intended related Machine's location using six (6) M4 Screws on both sides of the Frame (3 Screws on each side as shown in Figure 2-2).

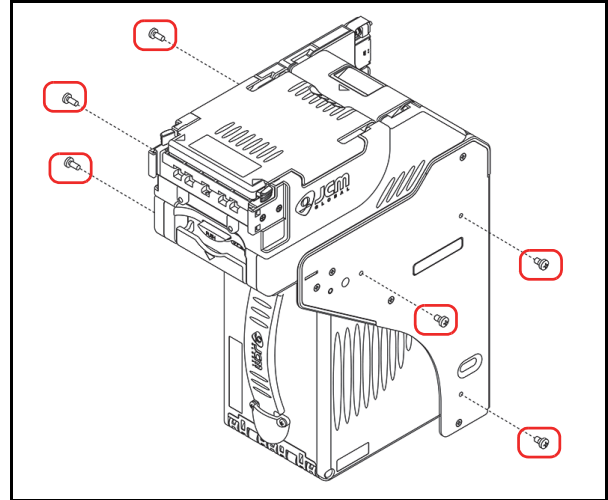


**Figure 2-2** M4 Screws Locations (Left/Right Side)


3. When an end mounting configuration is preferred, remove the Cash Box and attach the rear end of the iVIZION® Frame into its intended location using four (4) UNC6-32 Flat Head Screws from inside the back end of the Frame as shown in Figure 2-3.

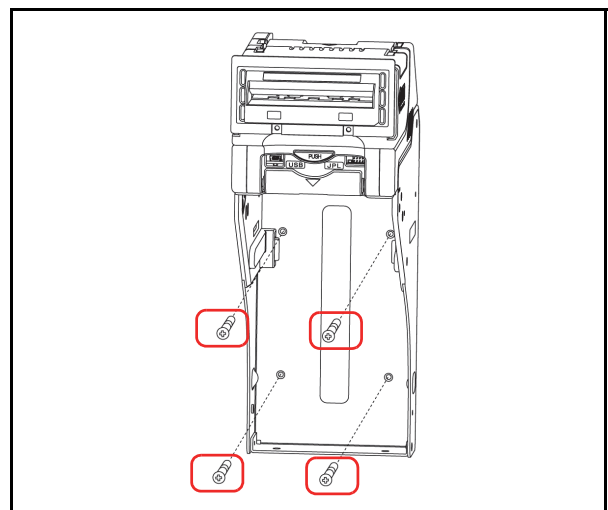

**Figure 2-3** Flat Head Screws Locations (Rear Side)


When installing the iVIZION® SH Unit into the Host Machine, refer to the Figure 1-7 “iVIZION Banknote Acceptor SH Unit Outside Dimensions” on page 1-11.

 **NOTE:** The length from Frame surface to the edge of the M4 Screws should be within 4mm in order not to puncture the Plastic Surface of the iVIZION® Frame when a side mounting configuration is preferred.

 **NOTE:** When installing the iVIZION® LD Version Unit into a related Machine, refer to the iVIZION Optional LD Version Unit Installation detailed information on page 2-11.

## Cable Interconnection

Figure 2-4 illustrates the Cable Harness interconnection requirements between the iVIZION® and a Host Machine.

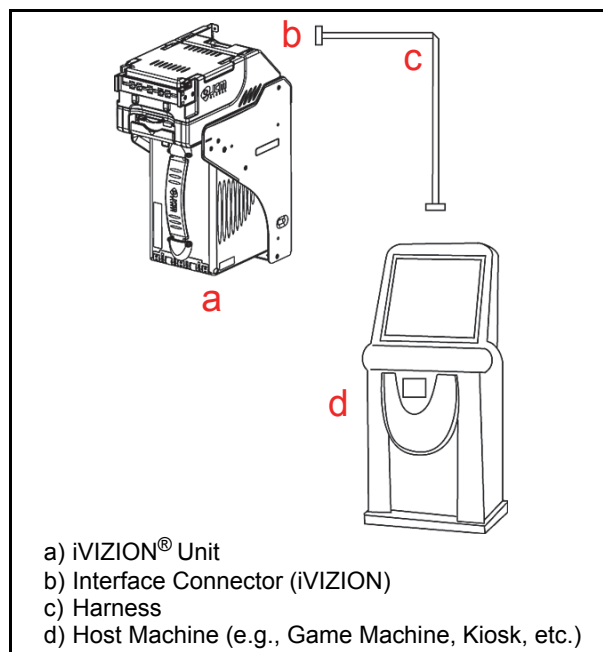


**Figure 2-4** Cable Interconnection

## Lock Installation

One or two security locks can be installed onto a iVIZION® Cash Box. When installing a security lock, the following attachment accessories may be required:

- Key Spacers
- Plate Lock Keys
- Key Cap Attachment


Choose a Lock that fits a standard size hole dimension format (See Figure 2-5). In addition, when two locks are installed, both locks must be identical.

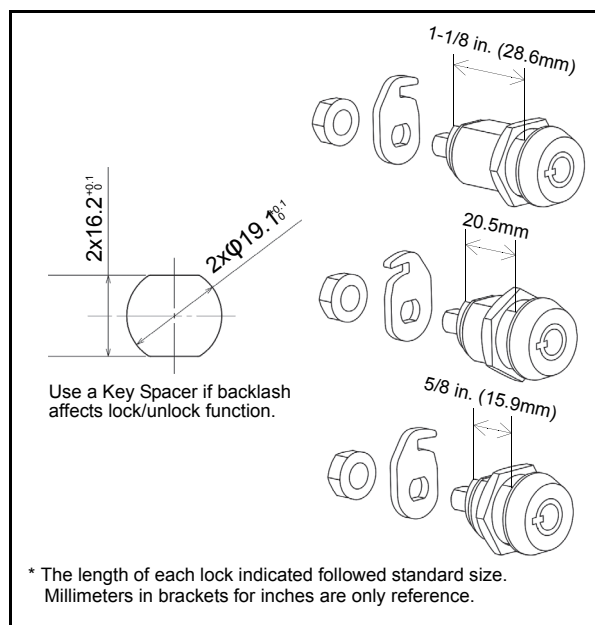


**Figure 2-5** Lock Size


## Unlock Procedure

Each Lock has a different rotation direction to unlock. Make sure when the lock(s) are installed the rotation is in the correct direction(s) (See Figure 2-6).

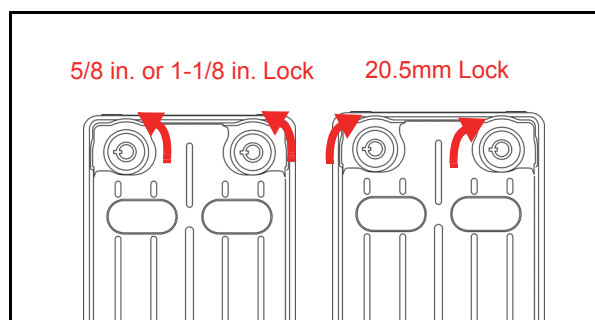

**Figure 2-6** Unlock Rotation Direction

 **NOTE:** When using only one lock, install the Key Cap in the unused key hole (See Figure 2-7).

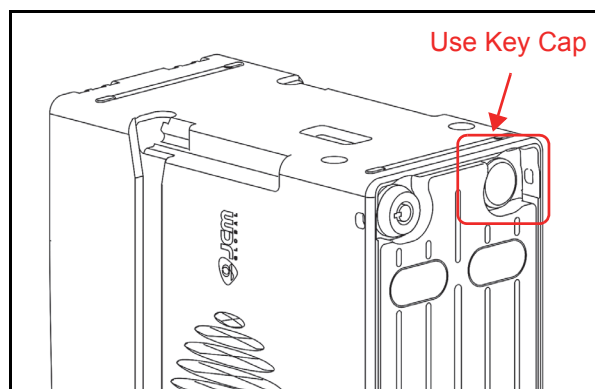


**Figure 2-7** Key Cap Installation



## DIP Switch Configurations


This portion provides the denomination DIP Switch Block Settings for the iVIZION® Unit.

**Table 2-1** Denomination INHIBIT DIP Switch Settings


Validation CPU Board SW1		
		
Switch No.	Switch ON	Switch OFF
1	VEND 1 INHIBIT	VEND 1 ACCEPT
2	VEND 2 INHIBIT	VEND 2 ACCEPT
3	VEND 3 INHIBIT	VEND 3 ACCEPT
4	VEND 4 INHIBIT	VEND 4 ACCEPT
5	VEND 5 INHIBIT	VEND 5 ACCEPT
6	VEND 6 INHIBIT	VEND 6 ACCEPT
7	VEND 7 INHIBIT	VEND 7 ACCEPT
8	N/A*	OFF (Fixed)

\*. Not Applicable (N/A). Used to enter "Test Mode".

**Table 2-2** JCM Private Line DIP Switch Setting


Validation CPU Board JP1		
		
Switch No.	Non-Marked (O)	Marked (C)
1	RS-485 Resistance Terminated	RS-485 Resistance Un-Terminated

**Table 2-3** Software DIP Switch Settings

Controller CPU Board SW1		
		
Switch No.	Switch ON	Switch OFF
1	N/A*	OFF (Fixed)
2	N/A*	OFF (Fixed)
3	N/A*	OFF (Fixed)
4	N/A*	OFF (Fixed)

\*. Not Applicable (N/A). Never Switched to ON.

**Table 2-4** Serial Communications DIP Switch Settings

Controller CPU Board JP2 & JP3		
		
Switch No.	Non-Marked (R)	Marked (P)
JP2	RS232C	Photo-Coupler Isolation (Standard)
JP3	RS232C	Photo-Coupler Isolation (Standard)



**NOTE:** When changing the type of iVIZION Serial Communications, Switches JP2 and JP3 located on the Controller CPU Board must be set to identical switch positions.

## Primary LED Indications

The iVIZION® Unit's two LEDs illuminate different colors when various operating and error conditions occur.

**Table 2-5** LED Error Pattern Indications

No.	Condition	LED Indications	
		Power LED*	Status LED
1	OFF	Extinguished (OUT)	Extinguished (OUT)
2	Initializing	Lit Green	Blue Flashes
3	Stand-by	Lit Green	Extinguished (OUT)
4	Reject	Lit Green	Green Flashes
5	Banknote Jam	Lit Green	Yellow Flashes
6	Abnormal Error	Lit Green	Red Flashes
7	Downloading	Lit Green	Lit Red Lit Green
8	Performance Test (Stand-by)	Lit Green	Lit Blue

\*. The Power LED lights Green when Power is supplied to the Unit.

## Connector Pin Assignments

Table 2-6 lists the iVIZION SS/LD Interface Connector Pin Assignments.

**Table 2-6 iVIZION SS/LD USB Connection Pin Assignments**

Back Side View			
			
<b>Socket Housing (Transport Unit Side): DR1B026JA1 (JCM)</b> <b>Pin Housing (Frame Side): DR1R026PA1 (JCM)</b> <b>Contact Type (Frame Side): D02-22-26P-10000 (JAE) (Poles except 1, 9, 18 &amp; 26)</b> <b>Recommended Wire: UL1061 AWG#26</b> <b>Contact Type (Frame Side): D02-22-22P-10000 (JAE) (Pole# 1, 9, 18 &amp; 26)</b>			
Pin No.	Signal Name	I/O* †	Function
1	24V DC (POWER)	POWER	+24V DC Power
2	M-RESET	IN	Banknote Acceptor Master Reset Input Signal Line
3	USB-	IN/OUT	USB Communication Input/Output Signal Line
4	USB+	IN/OUT	USB Communication Input/Output Signal Line
5	USB GND	SG	USB Communication Ground (0V DC)
6	TTL-TXD	OUT	-
7	TTL-RXD	IN	-
8	LED POWER	OUT	LED Drive Line (anode)
9	24V DC (POWER)	POWER	+24V DC Power
10	RS232 GND	SG	-
11	TXD	OUT	-
12	I/F +12V DC	IN	Interface Power Supply (+12VDC)
13	Vbus	IN	USB Communication Vbus Signal Line (+5V DC)
14	JP+	IN/OUT	-
15	TTL-G	SG	-
16	LED-	IN	LED Drive Line (cathode)
17	ccTalk (P)	IN/OUT	-
18	POWER GND	POWER	Power Ground (0V DC)
19	I/F GND	SG	-
20	RXD	IN	-
21	DET-GND	IN	Connect to DET (Pin-22)
22	DET	OUT	Connect to DET GND (Pin-21)
23	JP-	IN/OUT	-
24	SU SELECT	IN	SS/SU Selection‡
25	ccTalk (S)	IN/OUT	-
26	POWER GND	POWER	Power Ground (0V DC)

\*. I/O (Input/Output) Terminal as viewed from outside the Banknote Acceptor.

†. SG = Signal Ground.

‡. No Connection = SS Version, Connect to any unused SG (Pin #10, Pin #15 or Pin #19) = SU Version.

## Connector Pin Assignments (Continued 1)

Table 2-7 lists the iVIZION SS/LD Photo-Coupler Connector Pin Assignments.

**Table 2-7** iVIZION SS/LD Photo-Coupler Connector Pin Assignments

Back Side View			
			
<b>Socket Housing (Transport Unit Side): DR1B026JA1 (JCM)</b> <b>Pin Housing (Frame Side): DR1R026PA1 (JCM)</b> <b>Contact Type (Frame Side): D02-22-26P-10000 (JAE) (Poles except 1, 9, 18 &amp; 26)</b> <b>Recommended Wire: UL1061 AWG#26</b> <b>Contact Type (Frame Side): D02-22-22P-10000 (JAE) (Pole# 1, 9, 18 &amp; 26)</b>			
Pin No.	Signal Name	I/O* †	Function
1	24V DC (POWER)	POWER	+24V DC Power
2	M-RESET	IN	Banknote Acceptor Master Reset Input Signal Line
3	USB-	IN/OUT	-
4	USB+	IN/OUT	-
5	USB GND	SG	-
6	TTL-TXD	OUT	-
7	TTL-RXD	IN	-
8	LED POWER	OUT	LED Drive Line (anode)
9	24V DC (POWER)	POWER	+24V DC Power
10	RS232 GND	SG	-
11	TXD	OUT	Serial Communication Output Signal Line
12	I/F +12V DC	IN	Interface Power Supply (+12VDC)
13	Vbus	IN	-
14	JP+	IN/OUT	-
15	TTL-G	SG	-
16	LED-	IN	LED Drive Line (cathode)
17	ccTalk (P)	IN/OUT	-
18	POWER GND	POWER	Power Ground (0V DC)
19	I/F GND	SG	Photo-Coupler Communication GND
20	RXD	IN	Serial Communication Input Signal Line
21	DET-GND	IN	Connect to DET (Pin-22)
22	DET	OUT	Connect to DET GND (Pin-21)
23	JP-	IN/OUT	-
24	SU SELECT	IN	SS/SU Selection‡
25	ccTalk (S)	IN/OUT	-
26	POWER GND	POWER	Power Ground (0V DC)

\*. I/O (Input/Output) Terminal as viewed from outside the Banknote Acceptor.


†. SG = Signal Ground.

‡. No Connection = SS Version, Connect to any unused SG (Pin #10 or Pin #15) = SU Version.

## Connector Pin Assignments (Continued 2)

Table 2-8 lists the iVIZION SS/LD RS232C Connector Pin Assignments.

**Table 2-8** iVIZION SS/LD RS232C Connector Pin Assignments

Back Side View			
			
<b>Socket Housing (Transport Unit Side): DR1B026JA1 (JCM)</b> <b>Pin Housing (Frame Side): DR1R026PA1 (JCM)</b> <b>Contact Type (Frame Side): D02-22-26P-10000 (JAE) (Poles except 1, 9, 18 &amp; 26)</b> <b>Recommended Wire: UL1061 AWG#26</b> <b>Contact Type (Frame Side): D02-22-22P-10000 (JAE) (Pole# 1, 9, 18 &amp; 26)</b>			
Pin No.	Signal Name	I/O* †	Function
1	24V DC (POWER)	POWER	+24V DC Power
2	M-RESET	IN	Banknote Acceptor Master Reset Input Signal Line
3	USB-	IN/OUT	-
4	USB+	IN/OUT	-
5	USB GND	SG	-
6	TTL-TXD	OUT	-
7	TTL-RXD	IN	-
8	LED POWER	OUT	LED Drive Line (anode)
9	24V DC (POWER)	POWER	+24V DC Power
10	RS232C GND	SG	RS232C Communication Ground
11	TXD	OUT	Serial Communication Output Signal Line
12	I/F + 12V DC	IN	Interface Power Supply (+12V DC)
13	Vbus	IN	-
14	JP+	IN/OUT	-
15	TTL-G	SG	-
16	LED-	IN	LED Drive Line (cathode)
17	ccTalk (P)	IN/OUT	-
18	POWER GND	POWER	Power Ground (0V DC)
19	I/F GND	SG	-
20	RXD	IN	Serial Communication Input Signal Line
21	DET-GND	IN	Connect to DET (Pin-22)
22	DET	OUT	Connect to DET GND (Pin-21)
23	JP-	IN/OUT	-
24	SU SELECT	IN	SS/SU Selection‡
25	ccTalk (S)	IN/OUT	-
26	POWER GND	POWER	Power Ground (0V DC)

\*. I/O (Input/Output) Terminal as viewed from outside the Banknote Acceptor.


†. SG = Signal Ground

‡. No Connection = SS Version, Connect to any unused SG (Pin #15 or Pin #19) = SU Version.

### Connector Pin Assignments (Continued 3)

Table 2-9 lists the iVIZION SS/LD ccTalk Connector Pin Assignments.

**Table 2-9** iVIZION SS/LD ccTalk Connector Pin Assignments

Back Side View			
			
<b>Socket Housing (Transport Unit Side): DR1B026JA1 (JCM)</b> <b>Pin Housing (Frame Side): DR1R026PA1 (JCM)</b> <b>Contact Type (Frame Side): D02-22-26P-10000 (JAE) (Poles except 1, 9, 18 &amp; 26)</b> <b>Recommended Wire: UL1061 AWG#26</b> <b>Contact Type (Frame Side): D02-22-22P-10000 (JAE) (Pole# 1, 9, 18 &amp; 26)</b>			
Pin No.	Signal Name	I/O* †	Function
1	24V DC (POWER)	POWER	+24V DC Power
2	M-RESET	IN	Banknote Acceptor Master Reset Input Signal Line
3	USB-	IN/OUT	-
4	USB+	IN/OUT	-
5	USB GND	SG	-
6	TTL-TXD	OUT	-
7	TTL-RXD	IN	-
8	LED POWER	OUT	LED Drive Line (anode)
9	24V DC (POWER)	POWER	+24V DC Power
10	RS232C GND	SG	-
11	TXD	OUT	-
12	I/F + 12V DC	IN	Interface Power Supply (+12VDC)
13	Vbus	IN	-
14	JP+	IN/OUT	-
15	TTL-G	SG	-
16	LED-	IN	LED Drive Line (cathode)
17	ccTalk (P)	IN/OUT	ccTalk Communication Power Supply Line
18	POWER GND	POWER	Power Ground (0V DC)
19	I/F GND	SG	-
20	RXD	IN	-
21	DET-GND	IN	Connect to DET (Pin-22)
22	DET	OUT	Connect to DET GND (Pin-21)
23	JP-	IN/OUT	-
24	SU SELECT	IN	SS/SU Selection‡
25	ccTalk (S)	IN/OUT	ccTalk Communication Signal Line
26	POWER GND	POWER	Power Ground (0V DC)

\*. I/O (Input/Output) Terminal as viewed from outside the Banknote Acceptor.

†. SG = Signal Ground.

‡. No Connection = SS Version, Connect to any unused SG (Pin #10, Pin #15 or Pin #19) = SU Version.

## Connector Pin Assignments (Continued 4)

Table 2-10 lists the iVIZION SS/LD TTL Connector Pin Assignments.

**Table 2-10** iVIZION SS/LD TTL Connector Pin Assignments

Back Side View			
 <p>Socket Housing (Transport Unit Side): DR1B026JA1 (JCM)  Pin Housing (Frame Side): DR1R026PA1 (JCM)  Contact Type (Frame Side): D02-22-26P-10000 (JAE) (Poles except 1, 9, 18 &amp; 26)  Recommended Wire: UL1061 AWG#26  Contact Type (Frame Side): D02-22-22P-10000 (JAE) (Pole# 1, 9, 18 &amp; 26)</p>			
Pin No.	Signal Name	I/O* †	Function
1	24V DC (POWER)	POWER	+24V DC Power
2	M-RESET	IN	Banknote Acceptor Master Reset Input Signal Line
3	USB-	IN/OUT	-
4	USB+	IN/OUT	-
5	USB GND	SG	-
6	TTL-TXD	OUT	TTL Communication Output Signal Line
7	TTL-RXD	IN	TTL Communication Input Signal Line
8	LED POWER	OUT	LED Drive Line (anode)
9	24V DC (POWER)	POWER	+24V DC Power
10	RS232C GND	SG	-
11	TXD	OUT	-
12	I/F + 12V DC	IN	Interface Power Supply (+12VDC)
13	Vbus	IN	-
14	JP+	IN/OUT	-
15	TTL-G	SG	-
16	LED-	IN	LED Drive Line (cathode)
17	ccTalk (P)	IN/OUT	-
18	POWER GND	POWER	Power Ground (0V DC)
19	I/F GND	SG	-
20	RXD	IN	-
21	DET-GND	IN	Connect to DET (Pin-22)
22	DET	OUT	Connect to DET GND (Pin-21)
23	JP-	IN/OUT	-
24	SU SELECT	IN	SS/SU Selection‡
25	ccTalk (S)	IN/OUT	-
26	POWER GND	POWER	Power Ground (0V DC)

\*. I/O (Input/Output) Terminal as viewed from outside the Banknote Acceptor.


†. SG = Signal Ground.

‡. No Connection = SS Version, Connect to any unused SG (Pin #10, Pin #15 or Pin #19) = SU Version.

## Connector Pin Assignments (Continued 5)

Table 2-11 lists the iVIZION SS/LD Bezel Connector Pin Assignments.

**Table 2-11** iVIZION SS/LD Bezel JPL (CN7) Connection Pin Assignments

Front Side View			
			
<p><b>Box Pin Header (Control CPU Board Side): A3B-8PA-2DS (71) (HRS) JCM Custom</b>  <b>Socket Housing (Bezel Side): A3B-8D-2C (HRS)</b>  <b>Contact Type (Bezel Side): A3B-2630SCFC (HRS)</b>  <b>Polarizing Pin: A3-GPIN (HRS)</b>  <b>Recommended Wire: UL1007 AWG#24~30</b></p>			
Pin No.	Signal Name	I/O†	Function
1	JP+	IN/OUT	-
2	-	-	Polarizing Pin Key
3	JP-	IN/OUT	-
4	5V DC	OUT	5V DC Power Supply (Maximum 300mA)
5	VIN	OUT	LED Drive Power Supply 12V DC/24V DC (Maximum 300mA)
6	GND	SG	-
7	LED POWER	OUT	LED Power Supply 5V (Maximum 20mA Current Limitation Resistance)
8	LED 1	IN	LED Drive Line (cathode) Maximum Sink Current: 300mA

\*. Caution: The Embossed Numbers located on the Polarizing Pin Connector, and on the CN7 Connector Numbers indicated in Table 2-11 are different.  
The Polarizing Pin Key should be inserted into Pin Position No.4 of the Polarizing Pin Connector.


†. I/O (Input/Output) Terminal as viewed from outside the Banknote Acceptor.

## Preventive Maintenance

### Retrieving Banknotes

To retrieve Cash Box deposited Banknotes perform the following steps:

1. Release the Cash Box from the Frame and pull it forward.
2. Unlock the Cash Box with a User supplied Key.
3. Open the Cash Box Door and retrieve deposited Banknotes as illustrated in Figure 2-8.

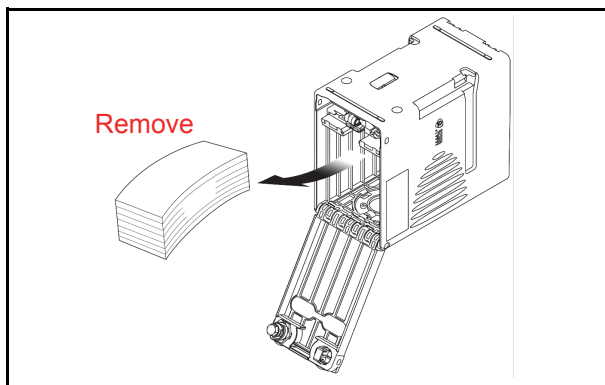


**Figure 2-8** Retrieving Banknote

### Clearing a Banknote Jam

To retrieve a jammed Banknote jammed inside the Banknote Acceptor Head proceed as follows:

1. Open the Acceptor Unit's Upper Guide by pressing in on the two (2) Upper Guide Access Buttons (See Figure 2-9a Blue Arrows) located on each side of the Upper Guide, and lift the Acceptor top up and open and remove the jammed Banknote.
2. If the jammed Banknote is not found in the Acceptor Unit, then
3. Open the Transport Unit's Upper Guide by pressing in on the Upper Guide Access Lever (See Figure 2-9b single Blue Arrow) located in the center of the Upper Guide, and lift the Transport Section up and open and remove the jam.

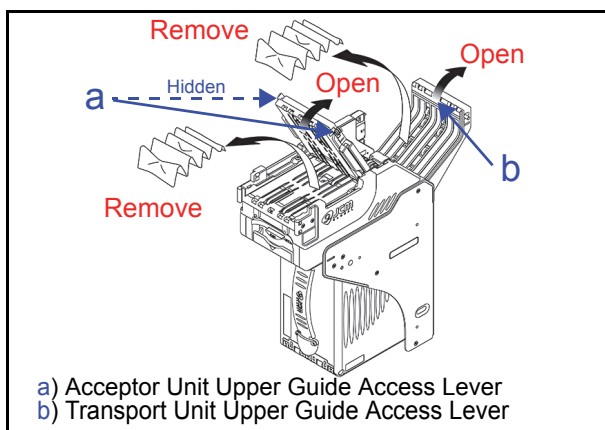


**Figure 2-9** Open the Upper Guides

4. If the jammed Banknote is not found in the higher Sections, pull the Cash Box out of the Frame

(See Figure 2-10 a). Check at the rear side of the Frame and remove the jammed Banknote located there if any (See Figure 2-10 b).

5. A jammed Banknote may also be present on top of the Cash Box; remove it if present at this location (See Figure 2-10 c).

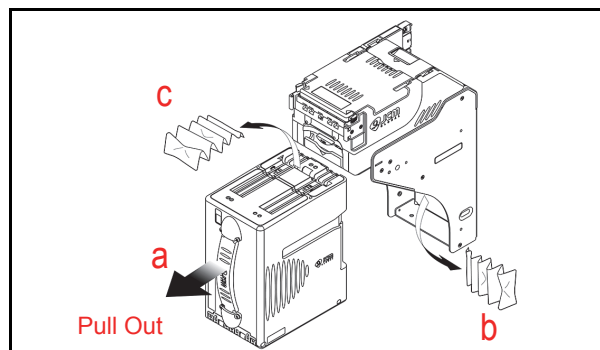

**Figure 2-10** Retrieving Cash Box Banknote Jam

### Cleaning Procedure

To clean the lenses, use a lint-free, Micro-Fiber Cloth and a mild non-abrasive detergent such as liquid dish soap mixed with water to wipe the dirt from the Lenses. It is important to keep the Banknote Path, Rollers, and Belts clean. Use a soft-lint free, Micro-Fiber Cloth or a Cotton Swab to wipe dirt and stains from the surfaces of the Optical Sensors, Rollers and Belts. The Sensor Lenses are transparent, and made of a polymer material; Handle them with care. When the Unit is exposed to liquid such as water, wipe and dry the wet areas immediately. Repeat the cleaning process as needed until the Transport Path is free of contaminants.



**Caution: Do not allow any fluid to remain on internal components, especially on the Anti-String Mechanism and in the Feed-in Sensor's grooved areas.**

### Sensor Cleaning Procedure

1. Turn the iVIZION® Unit Power OFF.
2. Clean the Sensors and lenses in the Acceptor Unit, the Transport Unit and on the Cash Box itself. If necessary, remove each Unit and/or open their Upper Guides for cleaning. See Figure 2-13 and Table 2-12 to locate all cleaning locations.



**Caution: Do not use Alcohol, thinner or citrus based products for cleaning any Banknote transport Sensors or surfaces. The lenses can become clouded by chemical evaporation residue that may cause acceptance errors.**






**NOTE:** When closing the Acceptor or Transport Unit's Upper Guides, ensure that they click firmly into place when being closed. Also, when reassembling the iVIZION® Unit, ensure that it re-seats correctly into place when the reassembly is complete.

## iVIZION Optional LD Version Unit Installation


Mounting holes are provided in the LD Frame Unit to attach the iVIZION® LD Unit to a related Machine during installation. Perform the following steps to install the iVIZION® LD Version Unit into the related Machine's Frame configuration:

1. Install the Interface Harness to the Frame Grounding Plate (FG PLT) (See Figure 2-11 a) using the two (2) Floating Collars (See Figure 2-11 b<sub>1</sub> & b<sub>2</sub>), the related single (1) M2.6x12 W Washer Screw (See Figure 2-11 c), the single (1) M2.6x10 W Washer Screw (See Figure 2-11 d) and the single (1) M2.6 Nylon Nut (See Figure 2-11 e) onto the upper Frame Assembly Bracket. See the Figure 2-11 circled inset to visually see the completed assembly as required.

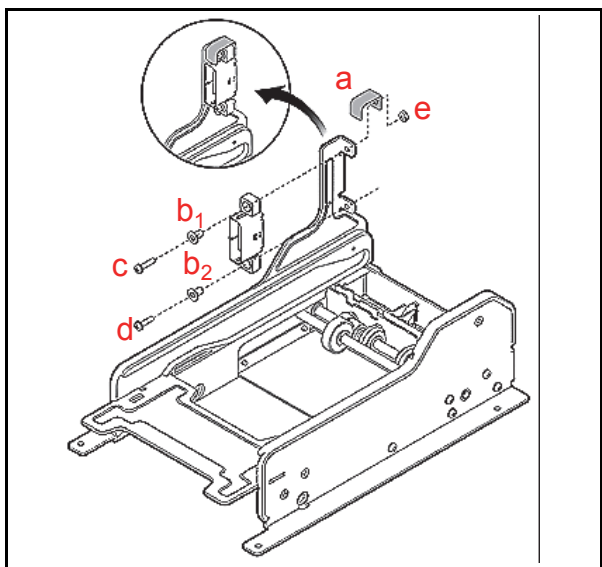

**Figure 2-11** Interface Harness Installation Location

2. Bolt the bottom side of the iVIZION® LD Frame into its intended Machine's location using four (4) M3x6 Screws on both bottom sides of the Frame (2 Screws on each side as shown in Figure 2-12).

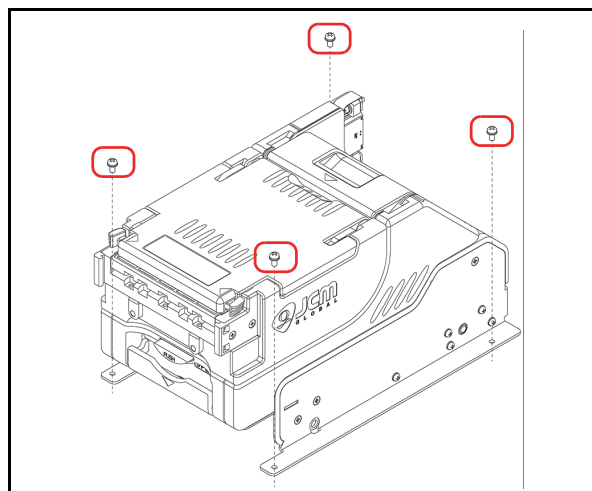

**Figure 2-12** M3 Screws Locations

iVIZION Sensor Locations

Figure 2-13 illustrates and Table 2-12 lists the iVIZION® various Sensor and Sensor Lens locations.

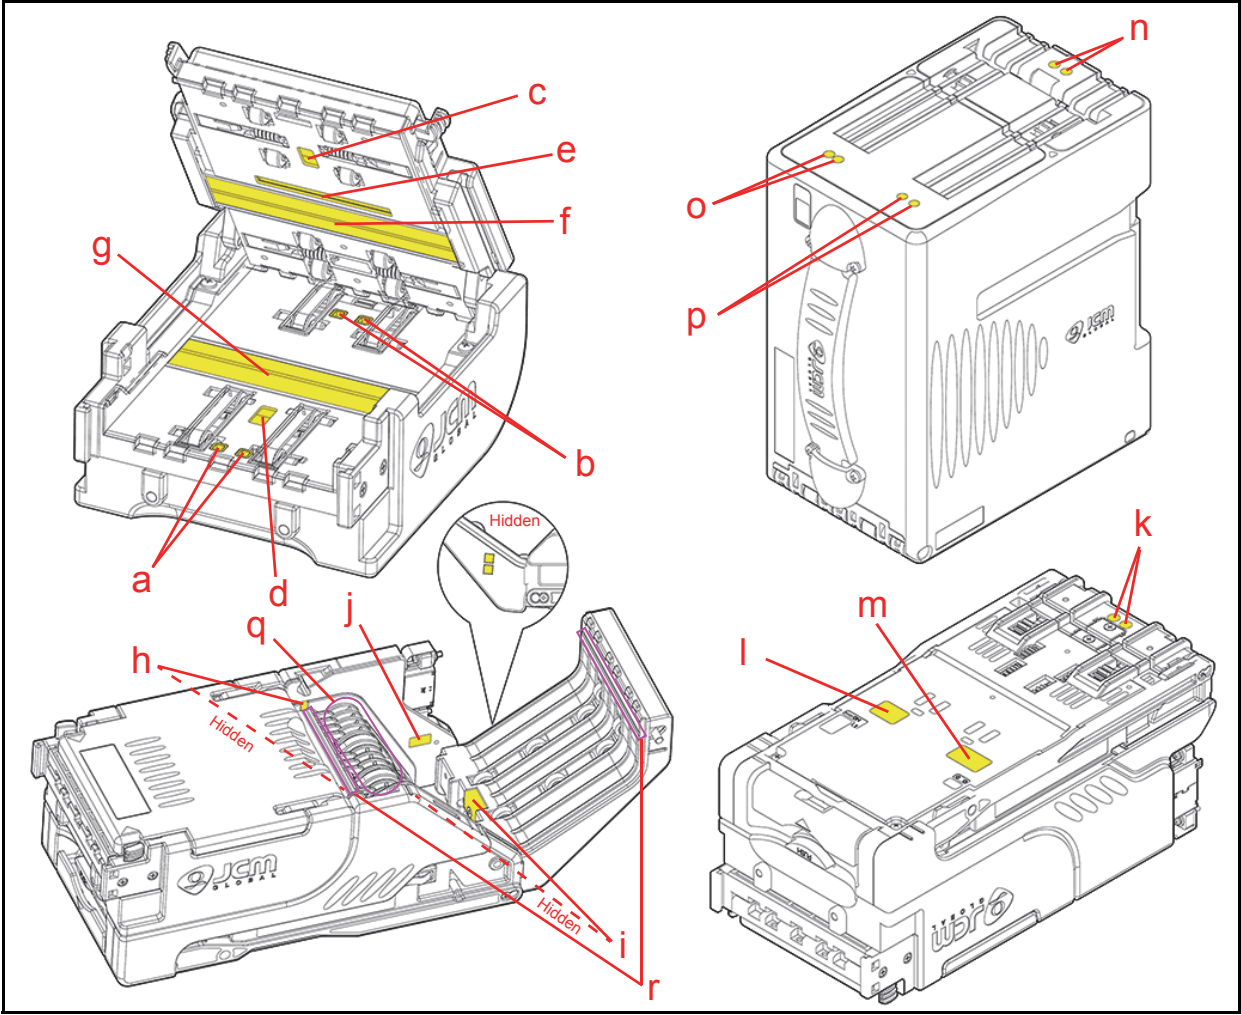


Figure 2-13 iVIZION Sensor Cleaning Locations


Table 2-12 iVIZION Sensor Cleaning Location Types

Sym.	Sensor		Cleaning Method
a	Acceptor Unit	Entrance Sensors	Wipe area clean using a lint-free cloth such as a Micro-Fiber Cloth, or blow clean using Compressed Air.*
b		Exit Sensors	
c		UV Sensor (Upper)	
d		UV Sensor (Lower)	
e		Transmissive Sensor	
f		CIS (Upper)	
g		CIS (Lower)	
h	Transport Unit	Feed-in Sensors	
i		Feed-out Sensors	
j		Home Position Sensor	
k		Home Position Sensor Lens	
l		Nearly Full Sensor	
m		Cash Box Sensor	
n	Cash Box	Home Position Sensor Lens	
o		Cash Box Sensor Lens	
p		Nearly Full Sensor Lens	
q	Anti-Stringing Mechanism		
r	Feed-in Sensor's Comb Grooves		

\*. Use only non-flammable compressed air.


## Standard Interface Circuit Schematics

Figure 2-14 illustrates the iVIZION® USB Circuit Interface Schematic Diagrams.

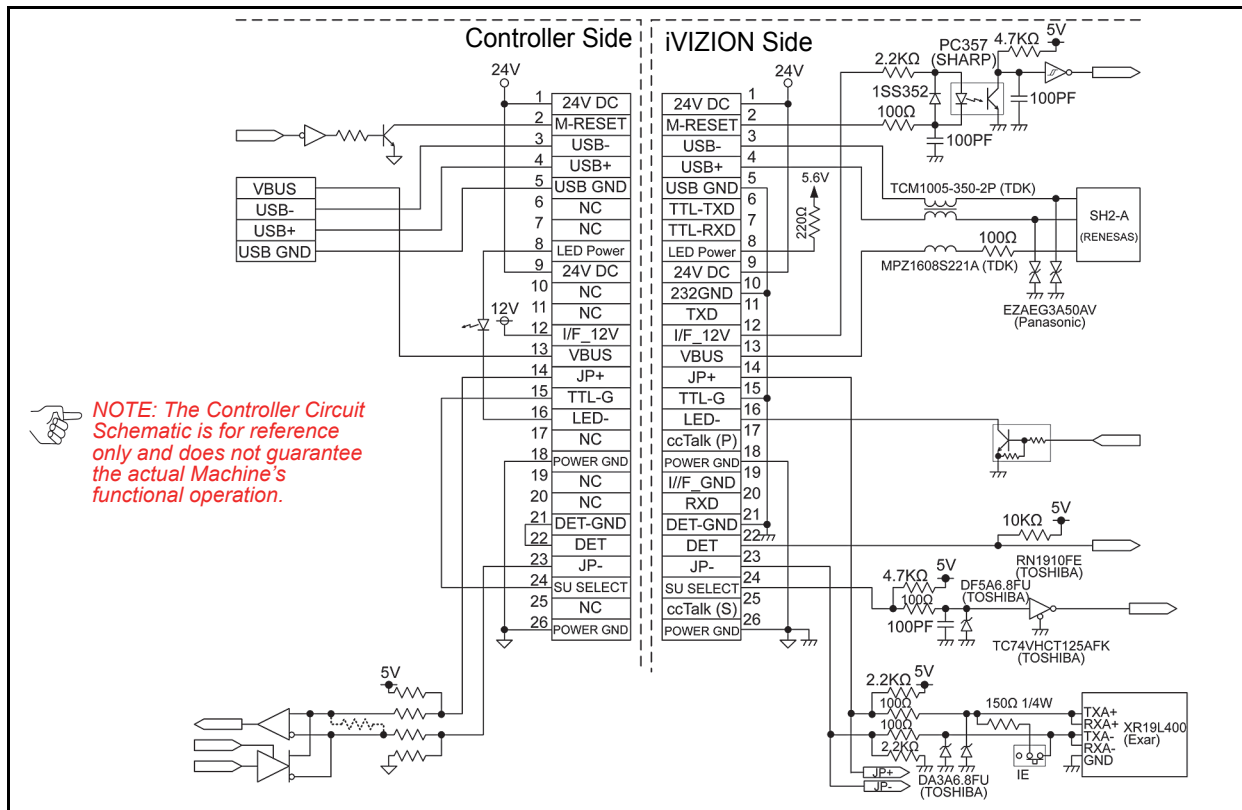

**Figure 2-14** iVIZION USB Circuit Interface Schematic Diagram


Figure 2-15 illustrates the iVIZION® Photo-Coupler Isolation Circuit Interface Schematic Diagrams.

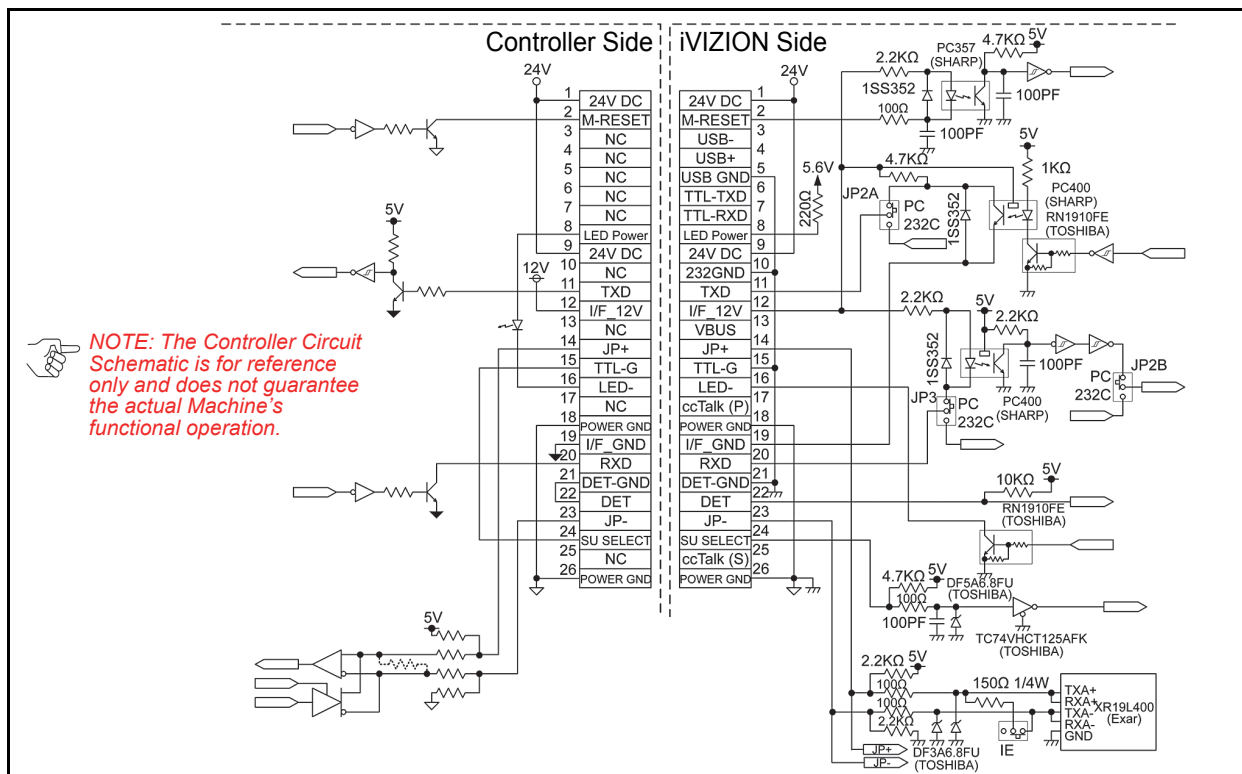

**Figure 2-15** iVIZION Photo-Coupler Circuit Interface Schematic Diagram


## Interface Circuit Schematics (Continued 1)

Figure 2-16 illustrates the iVIZION® RS232C Circuit Interface Schematic Diagrams.

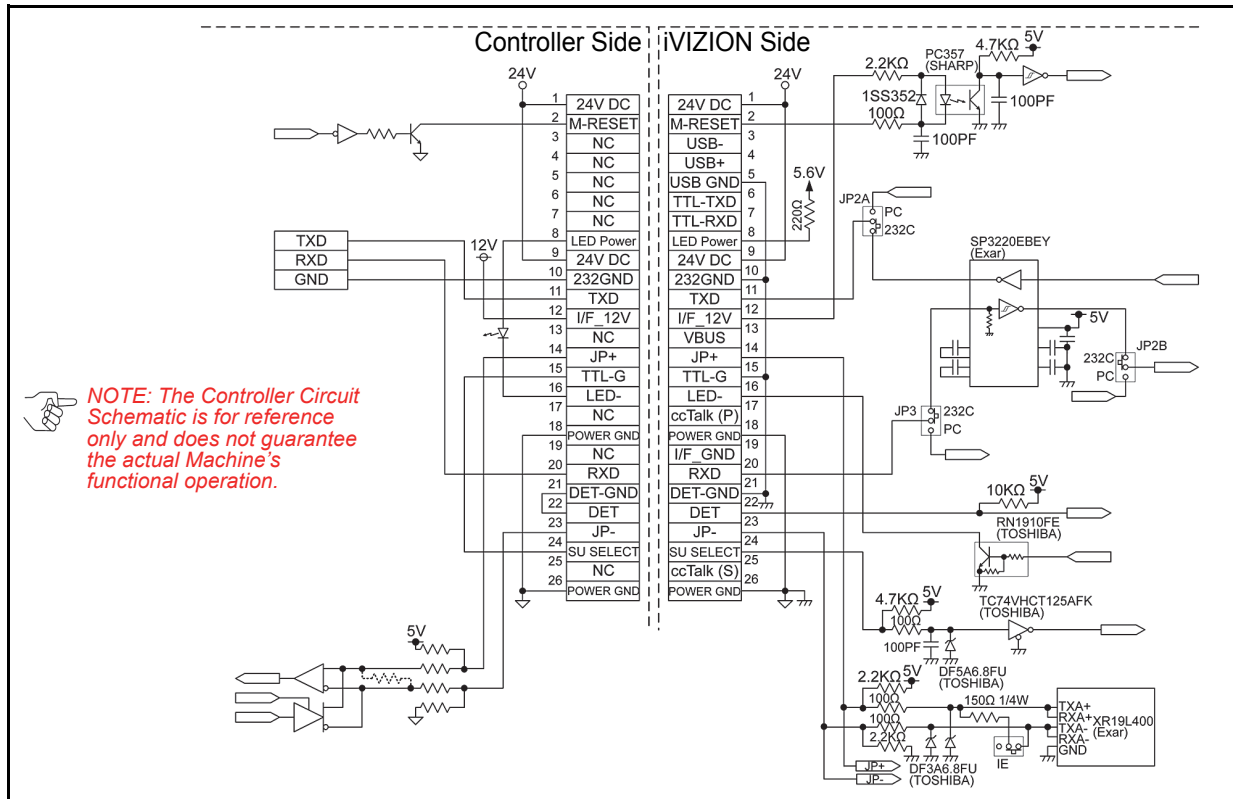

**Figure 2-16** iVIZION RS232C Circuit Interface Schematic Diagram


Figure 2-17 illustrates the iVIZION® ccTalk Circuit Interface Schematic Diagrams.

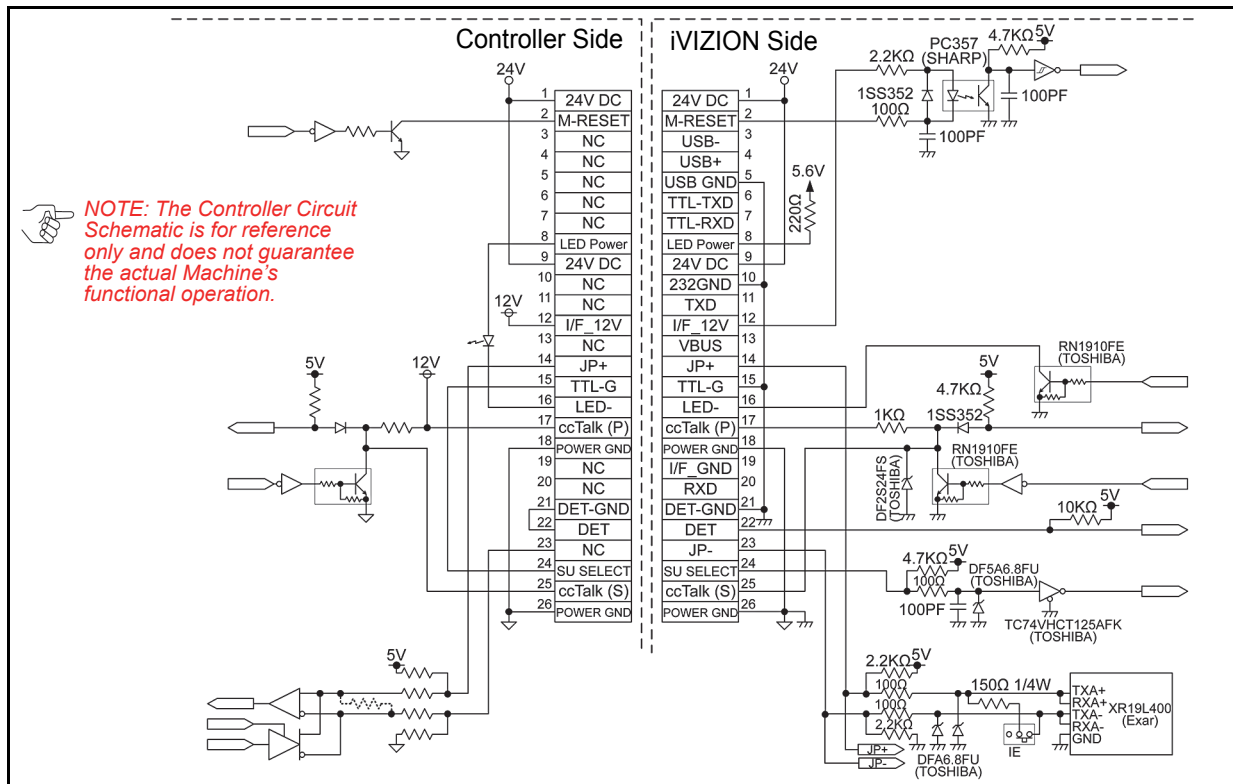

**Figure 2-17** iVIZION ccTalk Circuit Interface Schematic Diagram

## Interface Circuit Schematics (Continued 2)


Figure 2-18 illustrates the iVIZION® TTL Circuit Interface Schematic Diagrams.

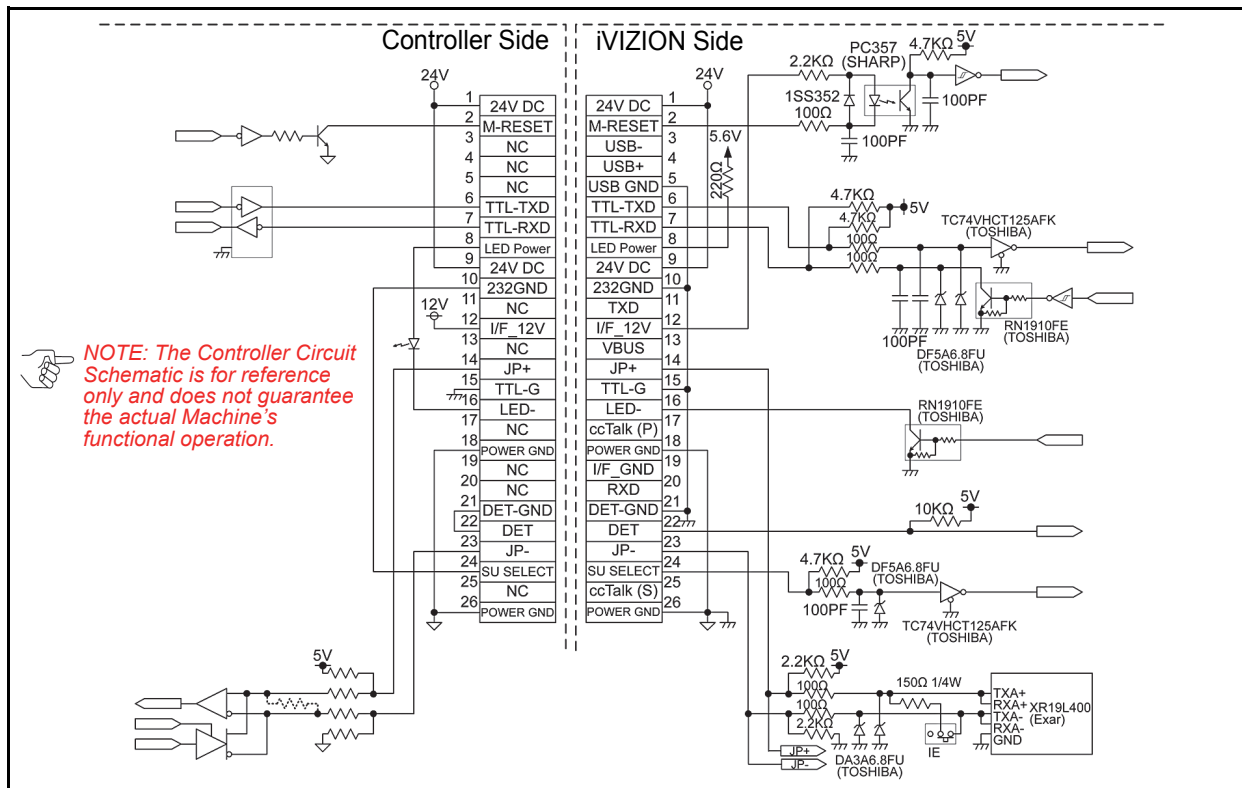

**Figure 2-18** iVIZION TTL Circuit Interface Schematic Diagram

### Interface Circuit Schematics (Continued 3)

Figure 2-19 illustrates the iVIZION® LED Circuit Interface Schematic Diagrams.

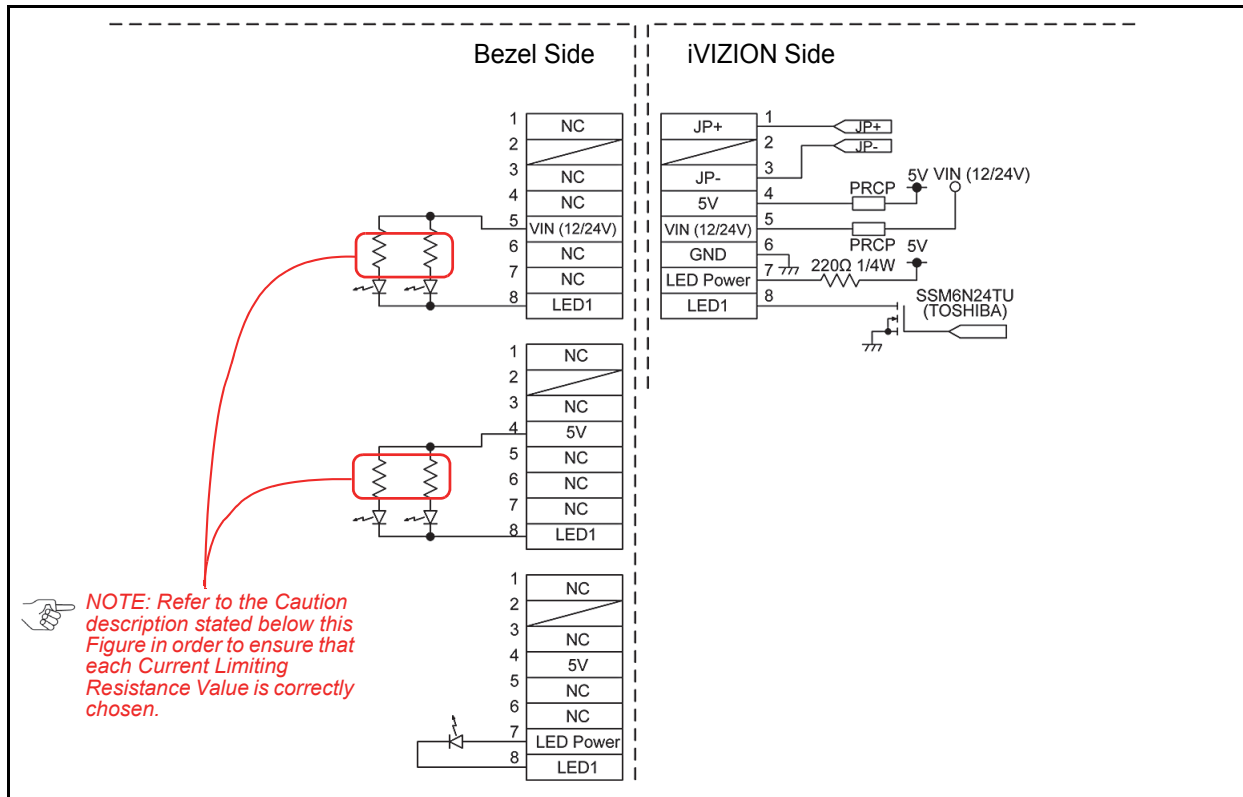

**Figure 2-19** iVIZION LED Circuit Interface Schematic Diagram




**Caution:** Select the Current Resistance Limitation Variable depending on the Voltage at the 5th pin connected to the Machine's input Power Supply.

- Maximum Output Supply
  - 4th pin: 5V 300mA
  - 5th pin: VIN 300mA
  - 7th pin: LED Power 20mA
- Maximum Sink Current
  - 8th pin: LED1 300mA

## Operational Flowchart

Figure 2-20 depicts a typical iVIZION® SS/LD Banknote acceptance flow process (Initialization).

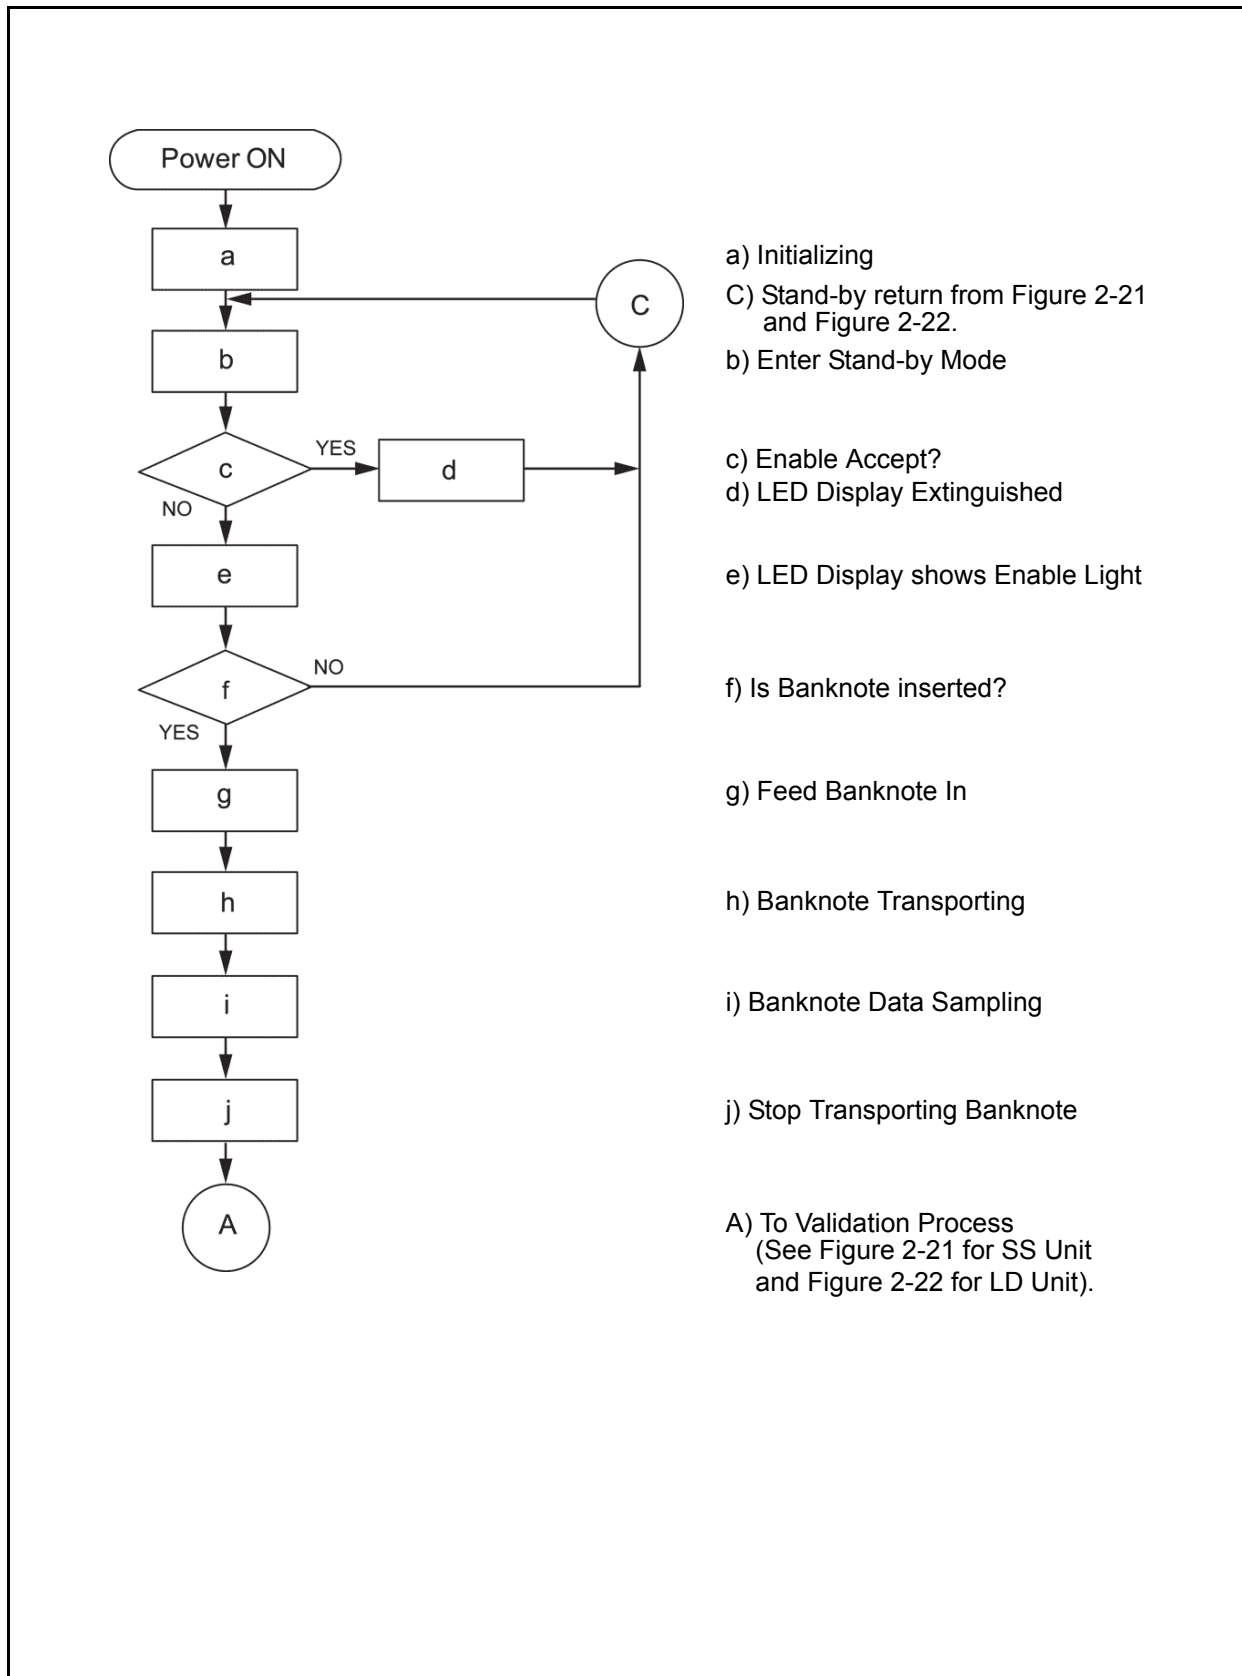


**Figure 2-20** iVIZION SS/LD Banknote Acceptor Operational Flowchart (Initializing)



## Operational Flowchart (Continued 1)

Figure 2-21 depicts a typical iVIZION® SS Banknote flow process (Validation).

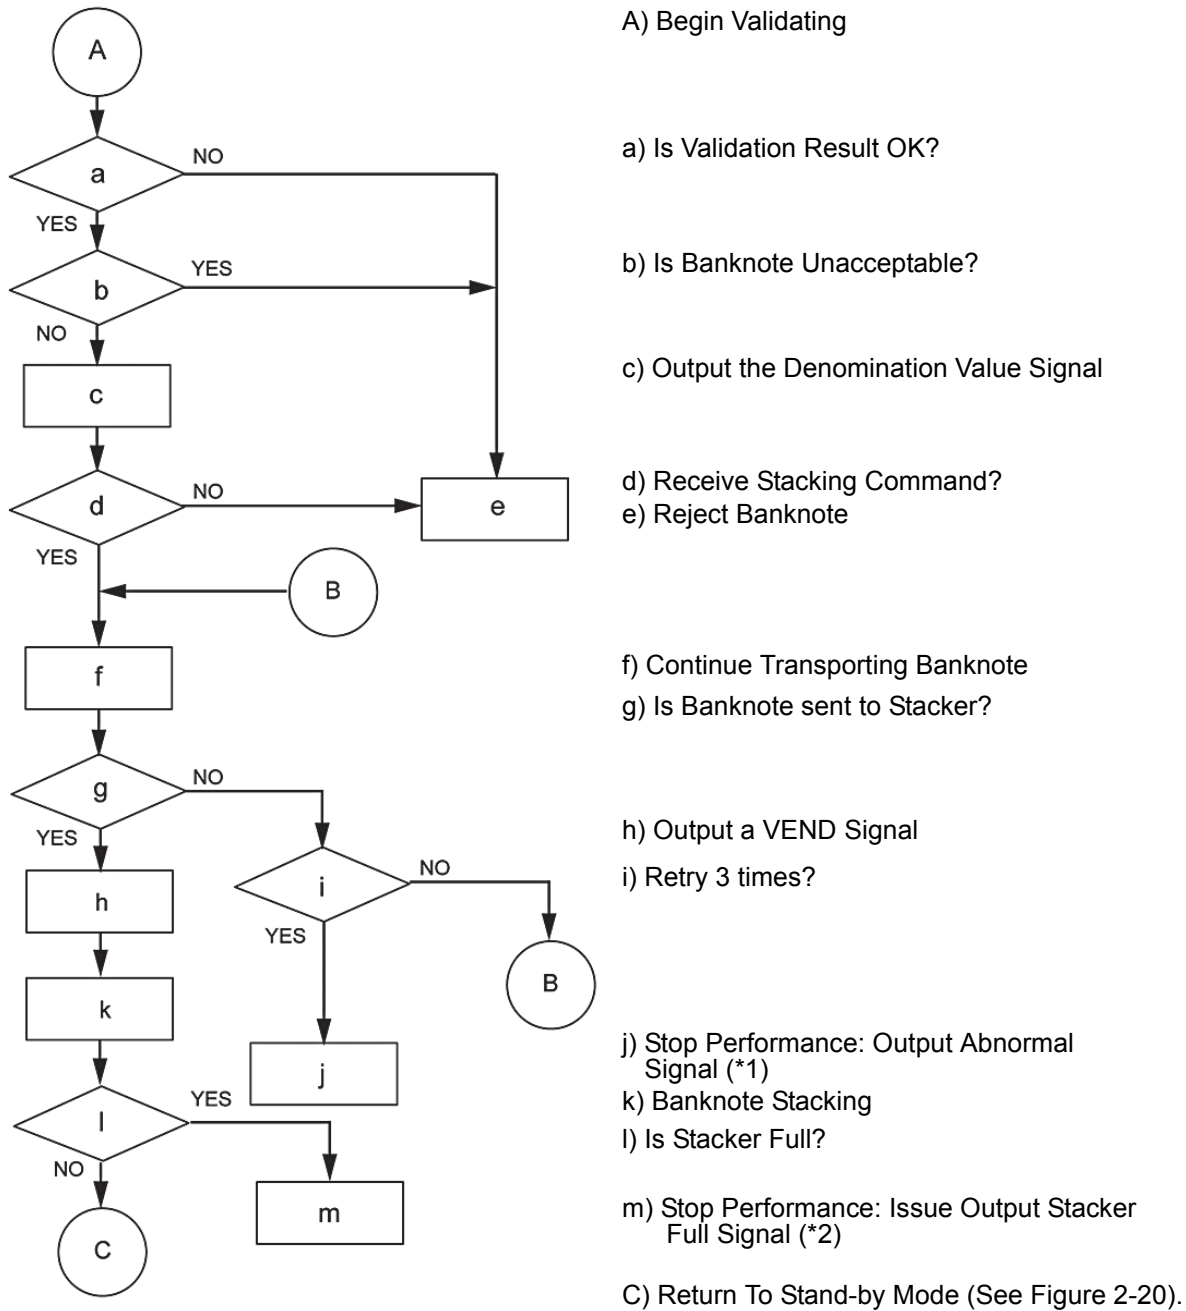

\*1 When Abnormal Output Signal condition occurs, remove the Banknote causing the malfunction and re-apply power to the Unit, or send a Reset Command to the Banknote Acceptor.


\*2 When a Stacker Full signal occurs, remove the Banknotes from the Cash Box and re-install it into its fully seated position. The iVIZION will the automatically re-initialize itself.

**Figure 2-21** iVIZION SS Banknote Acceptor Operational Flowchart (Part 1 - Validating)



## Operational Flowchart (Continued 2)

Figure 2-22 depicts a typical iVIZION® LD Banknote flow process (Validation).

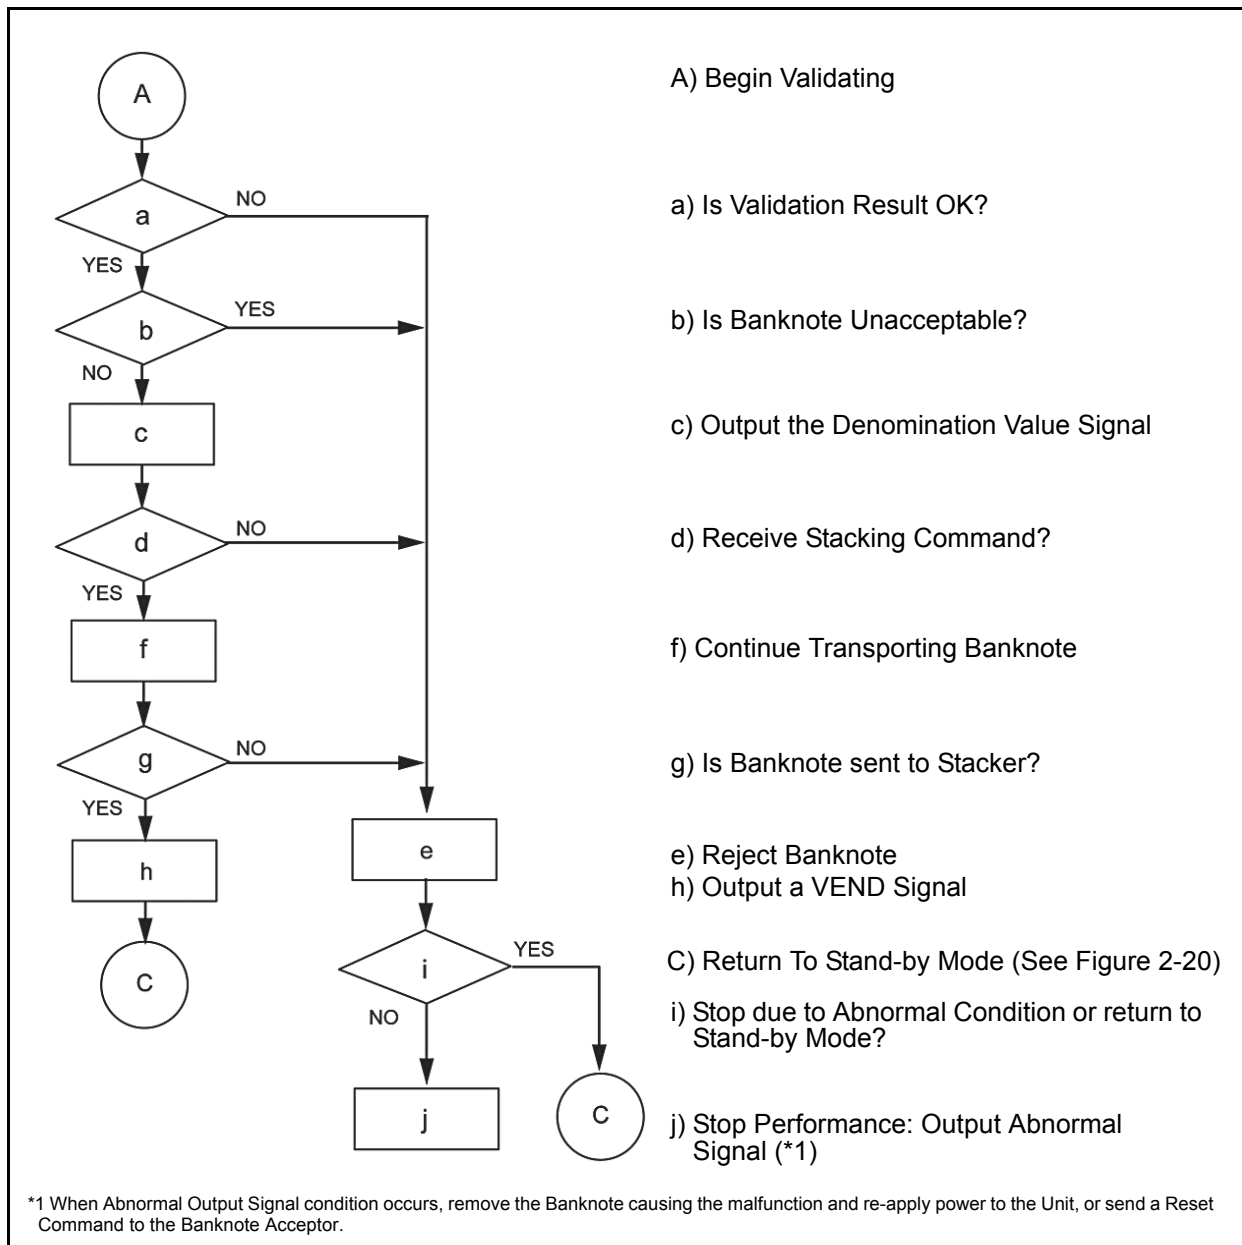

**Figure 2-22** iVIZION LD Banknote Acceptor Operational Flowchart (Part 2 - Validating)

THIS PAGE INTENTIONALLY LEFT BLANK

# **iVIZION® Series**

## **Next-Generation Banknote Acceptor Unit**

### Section 3

### **3 COMMUNICATIONS**

**This section was intentionally left out due to a Non-Disclosure Agreement requirement.**

**If this information is required, please contact the closest office location listed below:**

#### **Americas**

##### **JCM American**

Phone: +1-702-651-0000

Fax: +1-702-644-5512

925 Pilot Road, Las Vegas, NV 89119

E-mail: [support@jcmglobal.com](mailto:support@jcmglobal.com)

#### **Europe, Africa, Russia & Middle East**

##### **JCM Europe GmbH**

Phone: +49-211-530-645-60

Fax: +49-211-530-645-65

Muendelheimer Weg 60

D-40472 Duesseldorf Germany

E-mail: [support@jcmglobal.eu](mailto:support@jcmglobal.eu)

#### **UK & Ireland**

##### **JCM Europe (UK Office)**

Phone: +44 (0) 190-837-7331

Fax: +44 (0) 190-837-7834

Unit B, Third Avenue

Denbigh West Business Park

Bletchley, Milton Keynes,

Buckinghamshire MK1 1DH, UK

E-mail: [support@jcmglobal.eu](mailto:support@jcmglobal.eu)

#### **Asia and Oceania**

##### **JCM Gold (HK) Ltd.**

Phone: +852-2429-7187

Fax: +852-2929-7003

Unit 1-7, 3/F., Favor Industrial Centre

2-6 Kin Hong Street, Kwai Chung,

N.T. Hong Kong

E-mail: [asiapactechsupport@jcmglobal.com](mailto:asiapactechsupport@jcmglobal.com)

##### **JAPAN CASH MACHINE CO., LTD. (HQ)**

Phone: +81-6-6703-8400

Fax: +81-6-6707-0348

2-3-15, Nishiwaki, Hirano-ku, Osaka 547-0035  
JAPAN

E-mail: [Shohin@jcm-hq.co.jp](mailto:Shohin@jcm-hq.co.jp)

All of these Websites are available via:

<http://www.jcmglobal.com>

THIS PAGE INTENTIONALLY LEFT BLANK

# iVIZION® Series

## Next-Generation Banknote Acceptor Unit

### Section 4

#### 4 DISASSEMBLY/REASSEMBLY

This section provides disassembly and reassembly instructions for the iVIZION® Series Next-Generation Banknote Acceptor Unit. This section contains the following information:

- Tool Requirements
- Pusher Unit Timing Belt Removal
- Home Position Sensor Board/Home Position Sensor FFC & Interface Connector Board Removals
- RFID Module & RFID Harness Removals
- Validation CPU & Controller CPU Board Removals
- USB FPC/Power FPC & Interface FPC Cable Removals
- Validation Unit Harness Removal
- Interrupter Board Removal
- Motor Unit Timing Belt Removal
- Stacker Motor & Transport Motor Removals
- Bezel Hold Chips A/B Removals
- Sensor Transfer Board/CIS FFC/Transmissive Light FFC & Upper UV FPC Sensor Removals
- Validation Sensor Board Assembly Removal
- Validation Sensor FPC Cable Removal
- CIS/Transmissive Light/Upper UV Sensor Removals
- CIS/CIS FPC/Lower UV Sensor & Lower UV FFC Removals
- Validation Unit Timing Belt Removal.

#### Tool Requirements

The following tools will be required to perform iVIZION® disassembly and reassembly;


- #1 & #2 Phillips Screw Drivers
- #T6 “TORX” Brand Torque Wrench Driver
- #1 & #2 Torque Wrench Drivers
- Motor Gear Assembly Pressure Bar
- Pliers
- Tweezers

#### Pusher Unit Timing Belt Removal

##### iVIZION Standard and Large Cash Box


To remove the Timing Belt proceed as follows:

1. Remove the Cash Box from the iVIZION® Unit.
2. Open the Cash Box Door.
3. Remove the two (2) screws (See Figure 4-1 a<sub>1</sub> & a<sub>2</sub>) retaining the Pusher Mechanism Unit to the Cash Box.

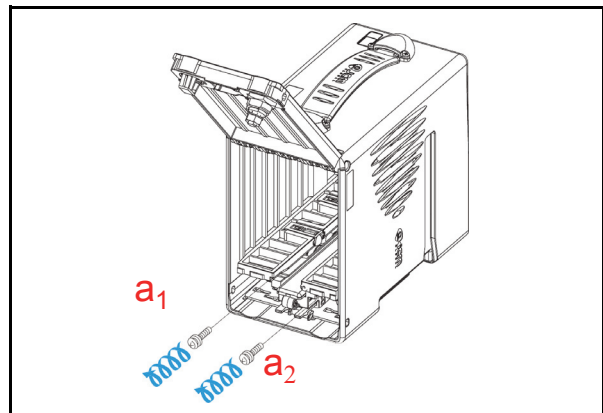


**Figure 4-1** Pusher Mechanism Screws Removal

4. While pulling upward on the Door Latch Stoppers (See Figure 4-2 a<sub>1</sub> & a<sub>2</sub>) of the Pusher Mechanism Unit (See Figure 4-2 b), slide it forward to remove the Pusher Mechanism Assembly out of the Cash Box.

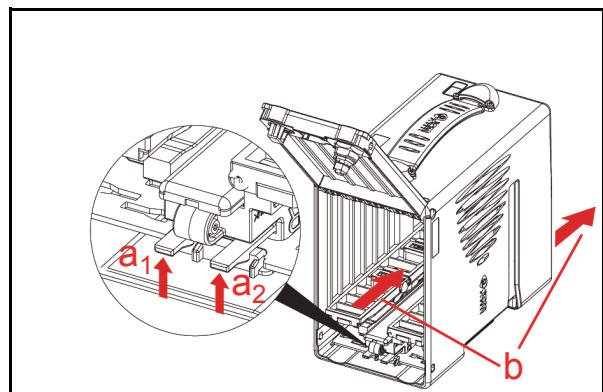


**Figure 4-2** Pusher Mechanism Removal

5. Remove the four (4) screws (See Figure 4-3 a<sub>1</sub>, a<sub>2</sub>, a<sub>3</sub> & a<sub>4</sub>) retaining the Unit Cover in place (See Figure 4-3 b), and remove the Unit Cover from the Pusher Mechanism Assembly.

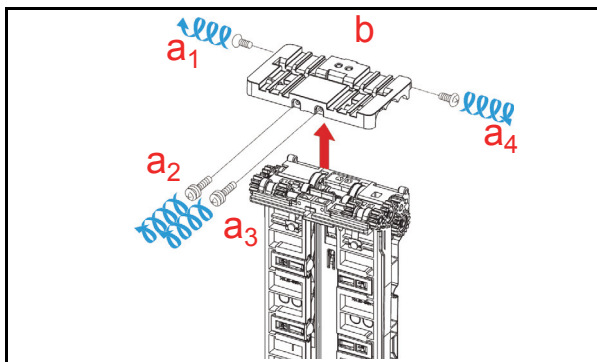


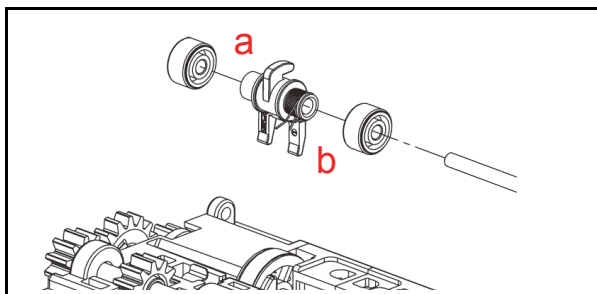
**Figure 4-3 Pusher Mechanism Cover Removal**

6. Remove the two (2) screws (See Figure 4-4 a<sub>1</sub> & a<sub>2</sub>) retaining the two (2) Flat Leaf Springs (See Figure 4-4 b<sub>1</sub> & b<sub>2</sub>). Remove the two (2) Flat Springs, the single (1) Stacker Guide (See Figure 4-4 c), the single (1) Pin 0360 (See Figure 4-4 d), the two (2) Rollers (See Figure 4-4 e<sub>1</sub> & e<sub>2</sub>) and the single (1) related pressure Coil Spring (See Figure 4-4 f) from the Pusher Mechanism Assembly.

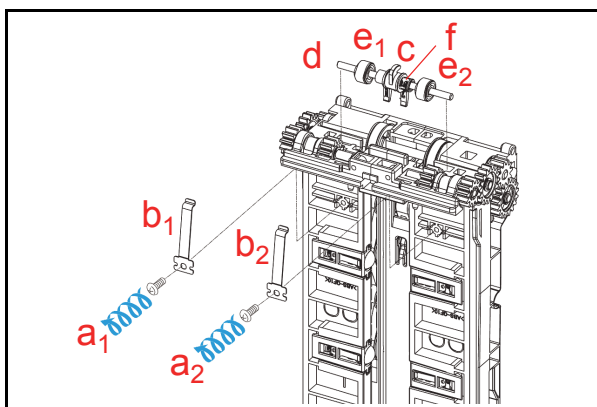


**Figure 4-4 Stacker Guide Removal**

 **NOTE:** When reassembling the Stacker Guide (See Figure 4-5 a), ensure that the Coil Spring (See Figure 4-5 b) is replaced in the correct direction. When reinserting the Pin 0360, put it in place while lifting the Flat Leaf Springs upward; then install the screws retaining each Flat Leaf Spring in place. Apply Screw Lock Compound to the head of each screw to secure.




**Figure 4-5 Stacker Guide Reassembly**


7. Remove the single (1) E-ring (See Figure 4-6 a) and the single (1) Gear (See Figure 4-6 b) located on the right side of the Transport Unit.

 **NOTE:** Be careful that the parallel Pin (See Figure 4-6 c) and the related Bushings (See Figure 4-6 d<sub>1</sub> & d<sub>2</sub>) are not lost when removed.


8. Remove the three (3) Assembly Mounting Screws (See Figure 4-6 e<sub>1</sub>, e<sub>2</sub> & e<sub>3</sub>) located on the right side of the Transport Unit, and remove the Right Frame Outer "R" Assembly (See Figure 4-6 f) from the Transport Unit.

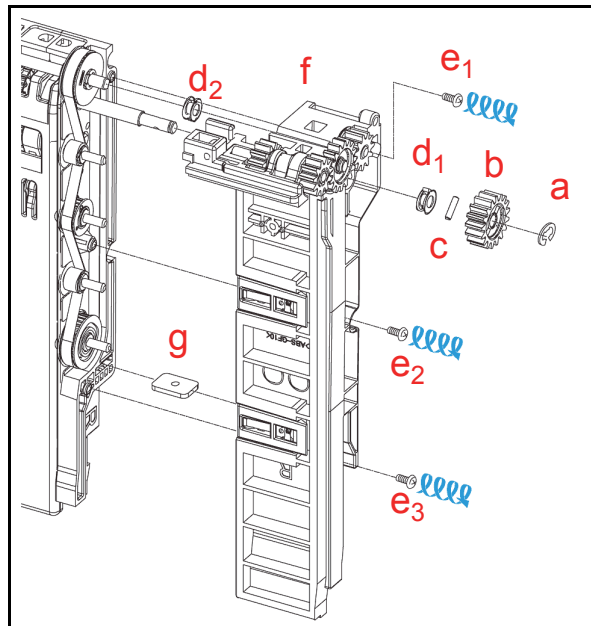


**Figure 4-6 Right Frame Outer "R" Removal**

 **NOTE:** When replacing the Frame Outer "R" Assembly, ensure that the Plate Nut is correctly re-positioned (See Figure 4-6 g).

9. Remove the single (1) E-ring (See Figure 4-7 a) and the two (2) Gears (See Figure 4-7 b<sub>1</sub> & b<sub>2</sub>) located on the left side of the Transport Unit.

 **NOTE:** Be careful that the parallel Pin (See Figure 4-7 c) and their related Bushings (See Figure 4-7 d<sub>1</sub>, d<sub>2</sub> & d<sub>3</sub>) are not lost when removed.

10. Remove the three (3) Assembly Mounting Screws (See Figure 4-7 e<sub>1</sub>, e<sub>2</sub> & e<sub>3</sub>) and remove the Left Frame Outer "L" Assembly (See Figure 4-7 f) from the Transport Unit.

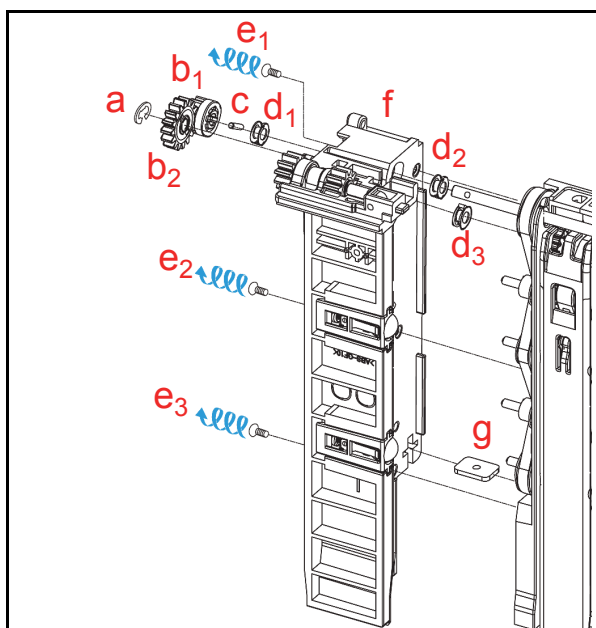


**Figure 4-7** Left Frame Outer "L" Removal



**NOTE:** When replacing the Frame Outer "L" Assembly, ensure that the Plate Nut is correctly re-positioned (See Figure 4-7 g).

11. Remove the two (2) Timing Belts (See Figure 4-8 a<sub>1</sub> & a<sub>2</sub>) from the Transport Unit.

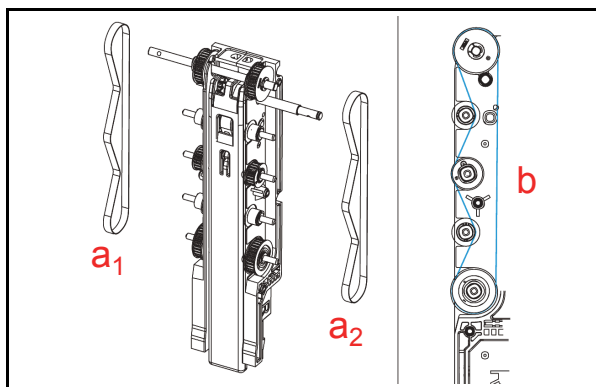

**Figure 4-8** Timing Belt Removal




**NOTE:** The Timing Belts should be replaced as illustrated in Figure 4-8b when reassembling the Unit. Be careful that the Pulleys and/or Rollers do not fall off during reassembly.

### iVIZION HC Cash Box

To remove the Timing Belt proceed as follows:


1. Remove the Cash Box from the iVIZION® Unit.
2. Open the Cash Box Door.
3. Remove the two (2) screws (See Figure 4-9 a<sub>1</sub> & a<sub>2</sub>) retaining the Pusher Mechanism Unit to the Cash Box.

4. Slide the Pusher Mechanism Assembly (See Figure 4-9 b) backward and remove the Pusher Mechanism Assembly out of the Cash Box

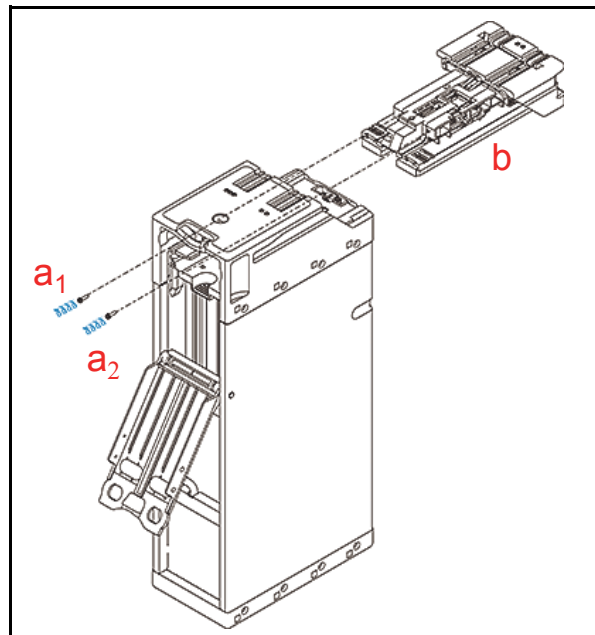

**Figure 4-9** Pusher Mechanism Removal


5. Remove the four (4) screws (See Figure 4-10 a<sub>1</sub>, a<sub>2</sub>, a<sub>3</sub> & a<sub>4</sub>) retaining the HC Box Stacker Base (See Figure 4-10 b) in place, and remove the HC Box Stacker Base from the Pusher Mechanism Assembly.

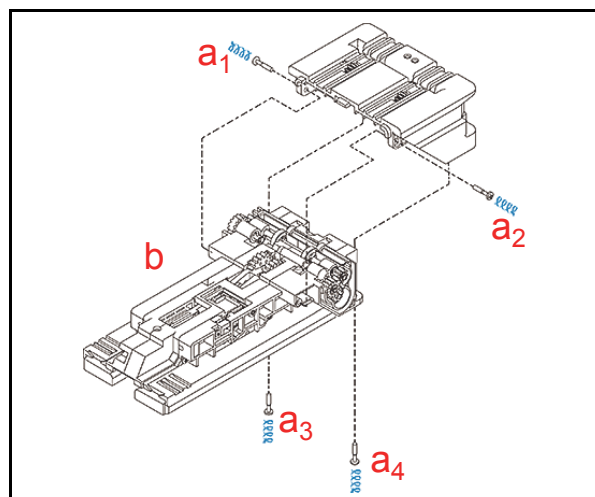

**Figure 4-10** HC Box Stacker Base Removal


6. Remove the four (4) screws (See Figure 4-11 a<sub>1</sub>, a<sub>2</sub>, a<sub>3</sub> & a<sub>4</sub>) retaining the Pusher Guide (See Figure 4-11 b), and remove the guide from the Pusher Mechanism.



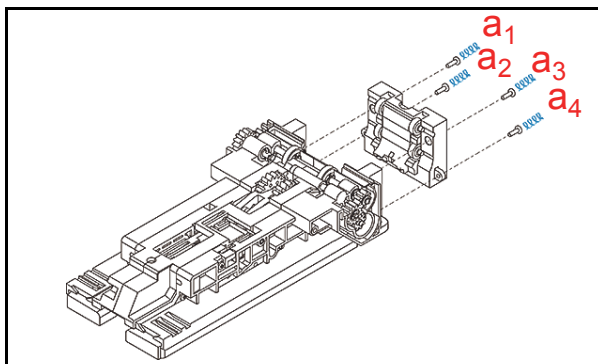


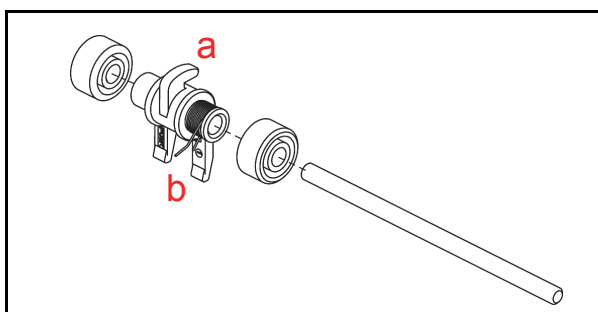
**Figure 4-11 Pusher Guide Removal**

7. Remove the single (1) Stacker Guide (See Figure 4-12 a), the single (1) Stacker Guide Sustainer (Pin 0360) (See Figure 4-12 b), the two (2) Rollers (See Figure 4-12 c<sub>1</sub> & c<sub>2</sub>) and the single (1) related pressure Coil Springs (See Figure 4-12 d) from the Pusher Mechanism Assembly.

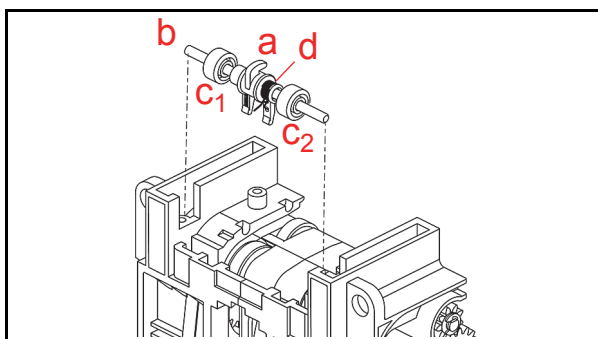


**Figure 4-12 Stacker Guide Removal**


 **NOTE:** When reassembling the Stacker Guide (See Figure 4-13 a), ensure that the Coil Spring (See Figure 4-13 b) is replaced in the correct direction.



**Figure 4-13 Stacker Guide Reassembly**


8. Remove the two (2) E-rings (See Figure 4-14 a<sub>1</sub> and a<sub>2</sub>) retaining the two (2) Gears and then remove the three (3) Gears (See Figure 4-14 b, c and d) on the right side of the Pusher Assembly.

 **NOTE:** Be careful that the parallel Pin (See Figure 4-14 e), the bushing (See Figure 4-14 f) and the E-ring (See Figure 4-14 g) are not lost when removing them.

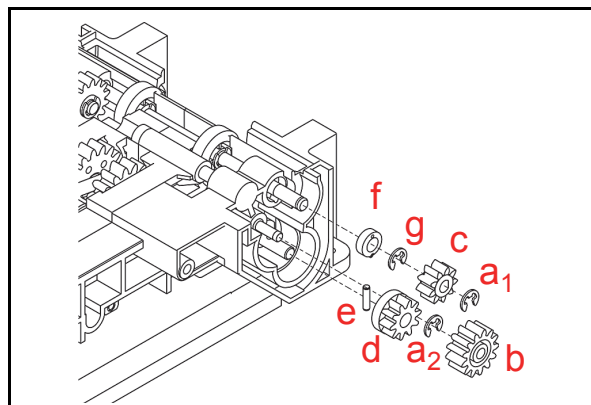


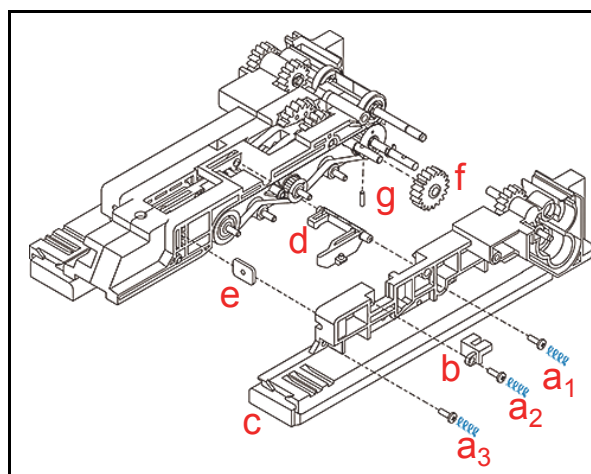
**Figure 4-14 Outer Guide R Removal 1**

9. Remove the three (3) Assembly Mounting Screws (See Figure 4-15 a<sub>1</sub>, a<sub>2</sub> & a<sub>3</sub>) and the Stacker Home Prism (See Figure 4-15 b) located on the right side of the Pusher Assembly, and remove the Right Frame Outer R Assembly (See Figure 4-15 c) from the Pusher Assembly.
10. Remove the Stacker Home Lever (See Figure 4-15 d) and the Plate Nut (See Figure 4-15 e).

 **NOTE:** Be careful that the two bushings are not lost when removing them.


11. Remove the single (1) Gear (See Figure 4-15 f) from the Pusher Assembly.

 **NOTE:** Be careful that the single Parallel Pin (See Figure 4-15 g) is not lost when removing it.




**Figure 4-15 Outer Guide R Removal 2**




 **NOTE:** When replacing the Frame Outer R Assembly, ensure that the Plate Nut (See Figure 4-15 e) is correctly re-positioned.


12. Remove the two (2) Assembly Mounting Screws (See Figure 4-16 a<sub>1</sub> and a<sub>2</sub>).
13. Remove the single (1) E-ring (See Figure 4-16 b) and the single (1) Gear (See Figure 4-16 c) from the Outer Guide L (See Figure 4-16 d).

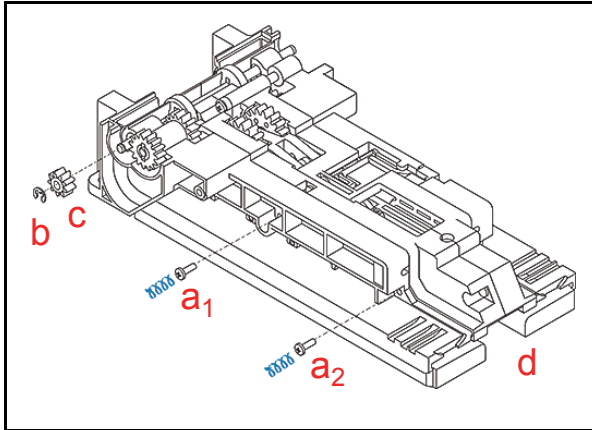


**Figure 4-16** Outer Guide L Removal 1

14. Remove the Outer Guide L (See Figure 4-17 a) from the Pusher Assembly (See Figure 4-17 b).


 **NOTE:** Be careful that the two (2) Bushings (See Figure 4-17 c<sub>1</sub> & c<sub>2</sub>) and the Plate Nut (See Figure 4-17 d) are not lost when removing them.

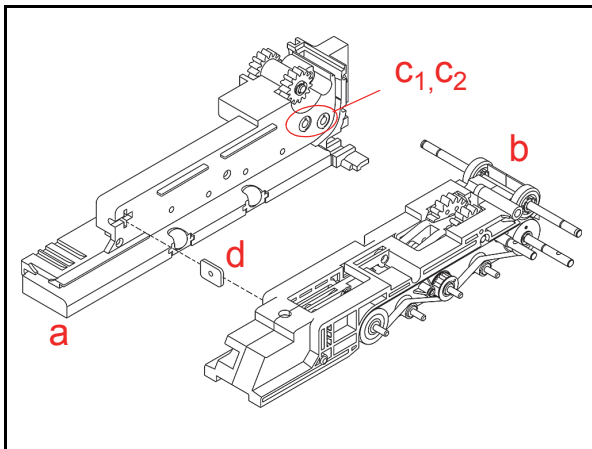


**Figure 4-17** Outer Guide L Removal 2

 **NOTE:** When replacing the Outer Guide L, ensure that the Plate Nut is correctly re-positioned (See Figure 4-17 d).

15. Remove the two (2) Timing Belts (See Figure 4-18 a<sub>1</sub> & a<sub>2</sub>) from the Pusher Assembly.

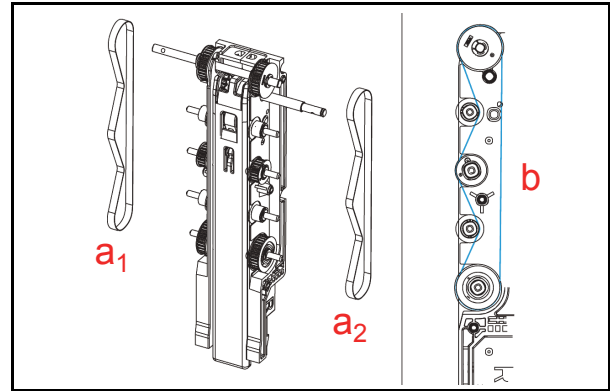


**Figure 4-18** Timing Belt Removal

 **NOTE:** The Timing Belts should be replaced as illustrated in Figure 4-18b when reassembling the Unit. Be careful that the Pulleys and/or Rollers do not fall off during reassembly.

## Home Position Sensor Board/ Home Position Sensor, FFC & Interface Connector Board Removals


To remove the Home Position Sensor Board, the Home Position Sensor FFC and the Interface Connector Board proceed as follows:

1. Remove the Transport Unit from the iVIZION® Unit.
2. Remove the Validation Section from the Transport Unit.
3. Remove the two (2) TR Cover mounting Screws (See Figure 4-19 a<sub>1</sub> & a<sub>2</sub>) from the bottom of the Transport Unit, and remove the Transport (TR) Bottom Cover (See Figure 4-19 b) off the Transport Unit.

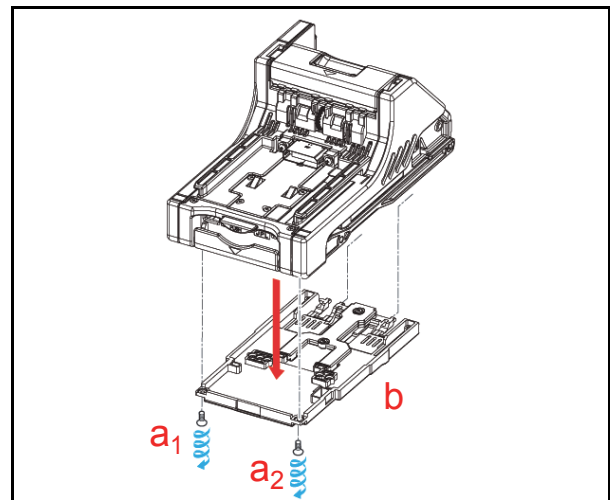

**Figure 4-19** TR Bottom Cover Removal

4. Use a small Screwdriver to release the five (5) Click-tab Stops of TR Side Cover “A” (See Figure 4-20 a<sub>1</sub> through a<sub>5</sub>), and remove TR Side Cover “A” (See Figure 4-20 b) from the Transport Assembly.

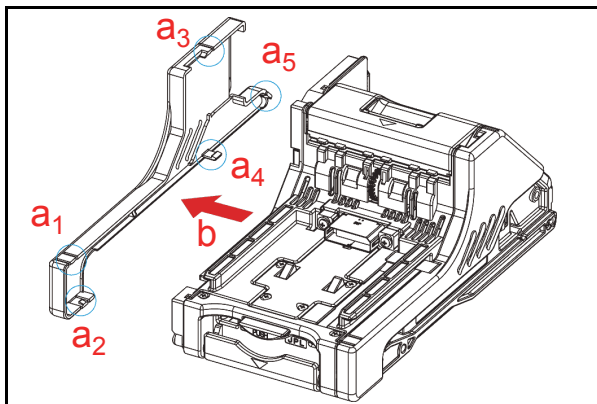


**Figure 4-20** TR Side Cover “A” Removal



**NOTE:** When the three (3) lower Click-tab stops are difficult to remove from the top, release them from bottom-side instead.

5. Remove the two (2) mounting Screws (See Figure 4-21 a<sub>1</sub> & a<sub>2</sub>) retaining the Home Position Sensor Board in place (See Figure 4-21 b).
6. Remove the Home Position Sensor Board and the Home Position Sensor FFC Assembly (See Figure 4-21 c) from the Transport Unit.
7. Remove the three (3) mounting Screws (See Figure 4-21 d<sub>1</sub>, d<sub>2</sub> & d<sub>3</sub>) retaining the Interface Connector Board in place (See Figure 4-21 f), and then remove the three (3) Flat Ribbon Cables from the Interface Connector Board (See Figure 4-21 e<sub>1</sub>, e<sub>2</sub> & e<sub>3</sub>).

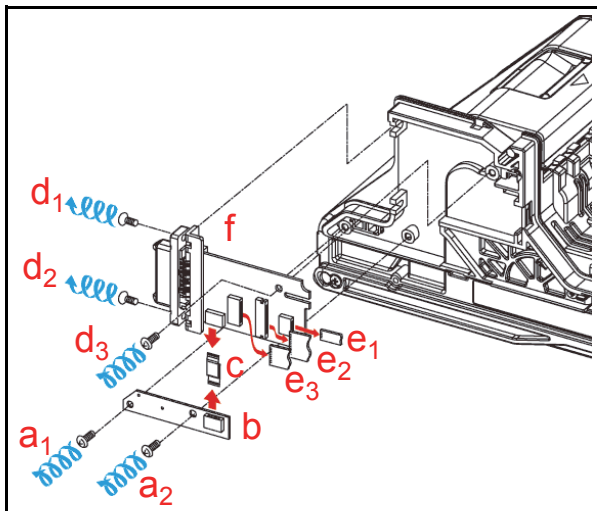


**Figure 4-21** Home Position Sensor Board, Home Position Sensor FFC Assembly and Interface Connector Board Removals

## RFID Module & Harness Removals

To remove the RFID Module and RFID Harness proceed as follows:

1. Remove the two (2) mounting Screws (See Figure 4-22 a<sub>1</sub> & a<sub>2</sub>) retaining the RFID Module to the back side of the Transport Unit (See Figure 4-22 b).
2. Remove the RFID Module and the RFID Harness (See Figure 4-22 c) from the Transport Unit.

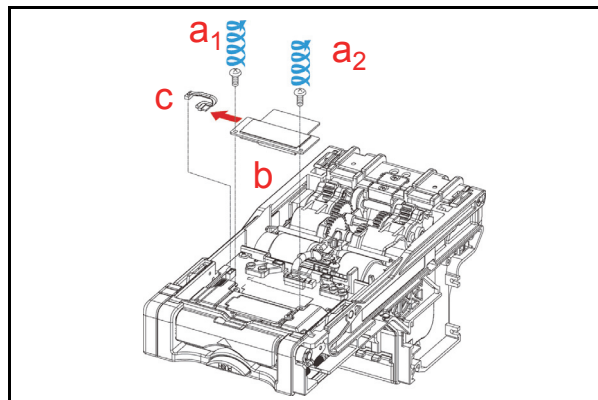


**Figure 4-22** RFID Module & Harness Removal

## Validation CPU & Controller CPU Board Removals


To remove the Validation CPU Board and the Controller CPU Board from the CPU Board Module, proceed as follows:

1. Remove the four (4) mounting Screws (See Figure 4-23 a<sub>1</sub> through a<sub>4</sub>) that are retaining the CPU Board Module (See Figure 4-23 d) to the Transport Unit, and unplug the two (2) Signal Connectors (See Figure 4-23 b<sub>1</sub> & b<sub>2</sub>) with the three (3) Flat Ribbon Cables (See Figure 4-23 c<sub>1</sub>, c<sub>2</sub> & c<sub>3</sub>) located on the CPU Board Module and remove the CPU Board Module from the Transport Unit.

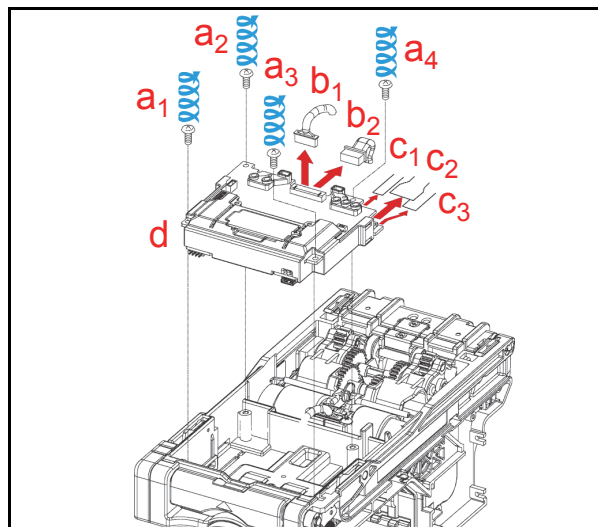


**Figure 4-23** CPU Board Module Removal

2. Remove the single (1) mounting Screw (See Figure 4-24 a) and remove the Optional Extension Memory Board if installed (See Figure 4-24 b) from the assembled Extension Memory Board.

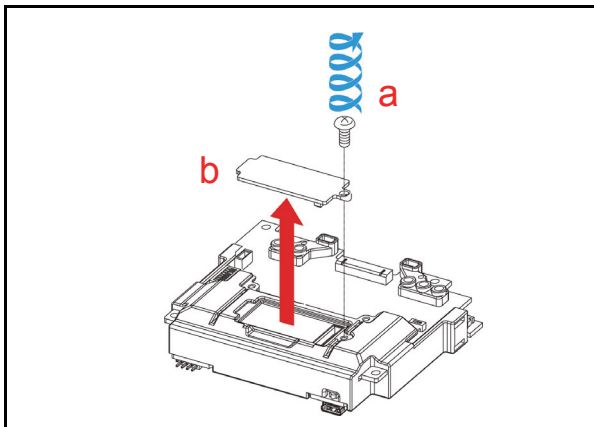

**Figure 4-24** Extension Memory Board Removal

3. Carefully spread both sides of the PCB Support apart (See Figure 4-25 a<sub>1</sub> & a<sub>2</sub>) and slide the Validation CPU Board (See Figure 4-25 c) and the Controller CPU Board (See Figure 4-25 d) off of the CPU Board Module.
4. Remove two (2) mounting Screws (See Figure 4-25 b<sub>1</sub> & b<sub>2</sub>), and separate the Validation CPU Board and the Controller CPU Board from one another.

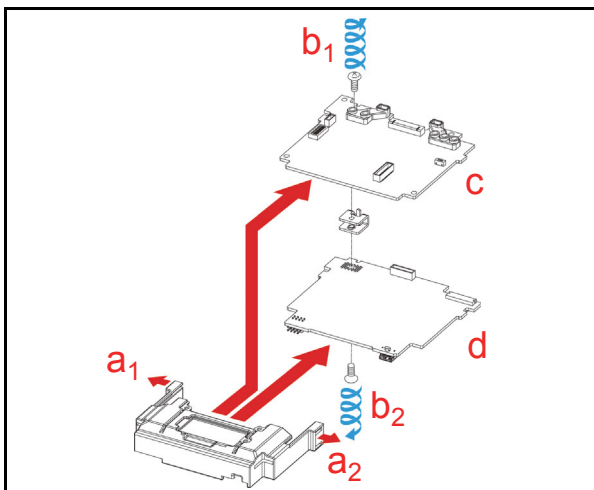

**Figure 4-25** Validation CPU Board and Control CPU Board Removal

## USB FPC, Power FPC & Interface FPC Cable Removals

To remove the USB FPC, the Power FPC and the Interface FPC proceed as follows:

1. Remove the two (2) mounting Screws (See Figure 4-26 a<sub>1</sub> & a<sub>2</sub>) retaining the Motor Unit to the Transport Assembly, and remove the Motor Module (See Figure 4-26 b) from the Transport Unit.


2. Remove the USB FPC (See Figure 4-27 a), the Power FPC (See Figure 4-27 b) and the Interface FPC (See Figure 4-27 c) from the Transport Unit.




**NOTE:** Carefully observe the Up and Down Fold Line indications shown by the two (2) Cyan Arrows in Figure 4-27, and DO NOT rebend them in an opposite direction!



**NOTE:** When installing new FPCs, fold-up along the Solid Lines and fold-down along the Dashed Lines before setting them in place. Once an FPC is folded, DO NOT unfold it back again or fold in the opposite direction.

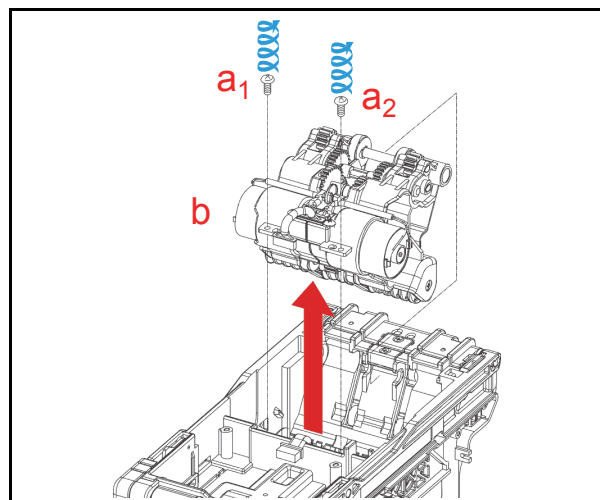

**Figure 4-26** Motor Module Removal

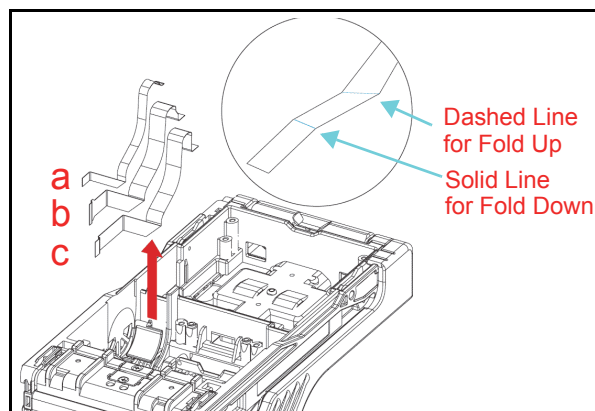

**Figure 4-27** USB FPC, Power FPC & Interface FPC Cable Removal


## Validation Unit Harness Removal


To remove the Validation Unit Harness proceed as follows:

1. Remove the two (2) mounting Screws (See Figure 4-28 a<sub>1</sub> & a<sub>2</sub>) retaining the Validation Unit Harness in place (See Figure 4-28 b).



2. Remove the Validation Unit Harness from the Transport Unit.

 **NOTE:** Ensure that when the Collars (See Figure 4-28 c<sub>1</sub> & c<sub>2</sub>) and/or Washers (See Figure 4-28 d<sub>1</sub> & d<sub>2</sub>) are removed that they are not lost when they are removed.

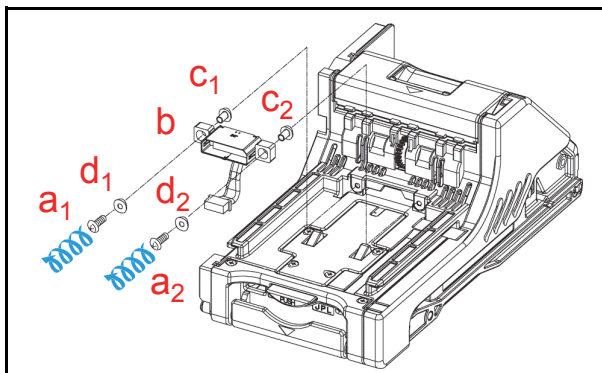


**Figure 4-28** Validation Unit Harness Removal

## Interrupter Board Removal

To remove the Interrupter Board proceed as follows:

1. Remove the two (2) mounting Screws (See Figure 4-29 a<sub>1</sub> & a<sub>2</sub>) retaining the Interrupter Board to the Motor Module Assembly (See Figure 4-29 b), and carefully unplug the three (3) Signal Connectors (See Figure 4-29 c<sub>1</sub>, c<sub>2</sub> & c<sub>3</sub>) from the Board.
2. Carefully pull the Interrupter Board off of the Motor Module Assembly.

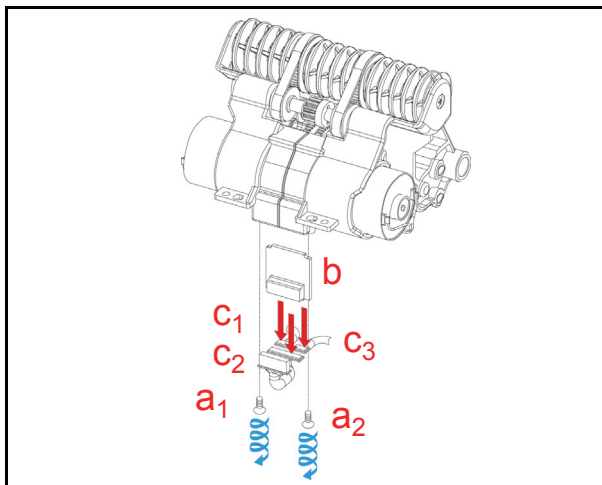


**Figure 4-29** Interrupter Board Removal


## Motor Unit Timing Belt Removal

To remove the Timing Belt, proceed as follows:


1. Remove the two (2) mounting Screws (See Figure 4-30 a<sub>1</sub> & a<sub>2</sub>) and remove Drive Mod FR “A” (See Figure 4-30 b) from the Motor Module Assembly.

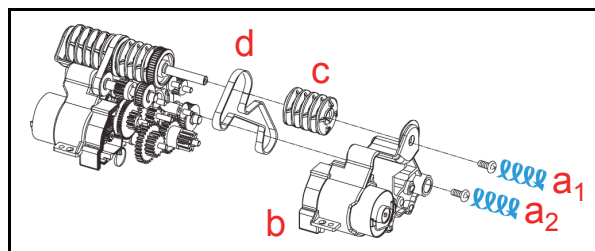


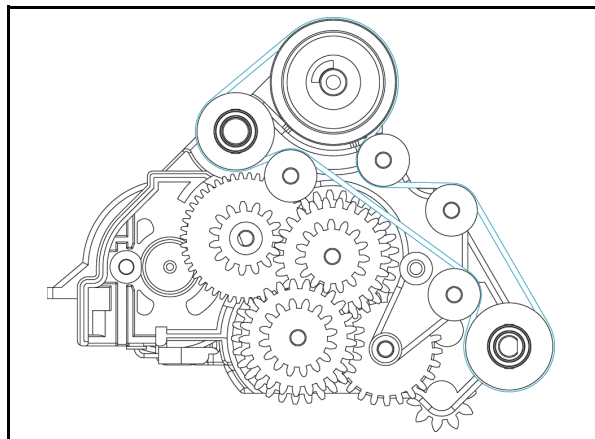
**Figure 4-30** Timing Belt Removal

 **NOTE:** When re-assembling Drive Mod FR “A”, ensure that it mates directly with the “D” Plane of the Drive Shaft.


2. Remove the Belt Reel (See Figure 4-30 c) and the Timing Belt (See Figure 4-30 d) from the Motor Module Assembly.

 **NOTE:** Follow the same procedure to remove the opposite side Timing Belt.

 **NOTE:** The a<sub>1</sub> and a<sub>2</sub> Mounting Screws should be reinstalled using a #1 (2.5kgfxcm) Torque Wrench Driver.




**Figure 4-31** Timing Belt Reassembly Path


 **NOTE:** The Timing Belts should be replaced as illustrated by the Blue path in Figure 4-31 when the Unit is being reassembled.

## Stacker Motor & Transport Motor Removals


To remove the Stacker Motor and the Transport Motor proceed as follows:

1. Remove the TR-ST Motor Gear (See Figure 4-32 a) and the two (2) mounting Screws (See Figure 4-32 b<sub>1</sub> & b<sub>2</sub>) retaining the Motor Module in place.
2. Remove the Stacker Motor (See Figure 4-32 c) from the Motor Module Assembly.

 **NOTE:** Follow the same procedure to remove the Transport Motor on the opposite side.

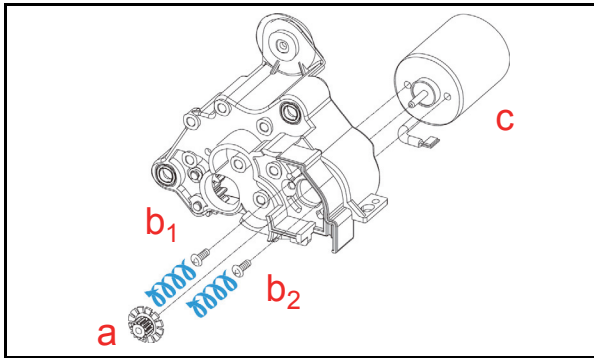


**Figure 4-32** Stacker & Transport Motor Removal

 **NOTE:** When reassembling the TR-ST Motor Gear, a Motor Gear Assembly Pressure Bar will be required.


## Bezel Retainer Clips A & B Removal

To remove Bezel Retainer Clips “A” and Bezel Retainer Clips “B” proceed as follows:

1. Remove the two (2) laminated, M2.6x6 Phillips Self-Tapping Screws (See Figure 4-33 a<sub>1</sub> and a<sub>2</sub>) from the Bezel, and then remove Bezel Retainer Clip “A” from the left side of the Assembly (See Figure 4-33 b).
2. Remove the two (2) laminated M2.6x6 Phillips Self-Tapping Screws (See Figure 4-33 a<sub>3</sub> and a<sub>4</sub>) from the Bezel, and then remove Bezel Retainer Clip “B” from the right side of the Assembly (See Figure 4-33 c).

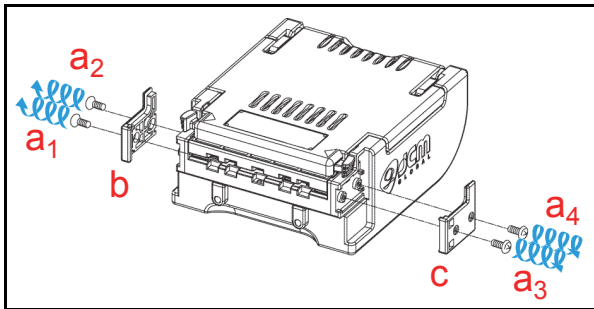

**Figure 4-33** Bezel Retainer Chips A&B Removal


 **NOTE:** Use a T6 “TORX” Torque Wrench Driver when reattaching Bezel Retainer Clips “A” and “B” onto the Transport Unit.

## Sensor Transfer Board/CIS FFC/ Transmissive Light FFC & Upper UV FPC Sensor Removals

To remove the Sensor Transfer Board, the CIS FFC Sensor, the Transmissive Light FFC Sensor and the Upper UV FPC Sensor proceed as follows:


1. Open the Validation Section and release the six (6) Upper Cover Click-tab Stops (See Figure 4-34 a<sub>1</sub> through a<sub>6</sub>) by using a small Screwdriver.

2. Remove the Upper Cover (See Figure 4-34 b) from the Upper Guide.

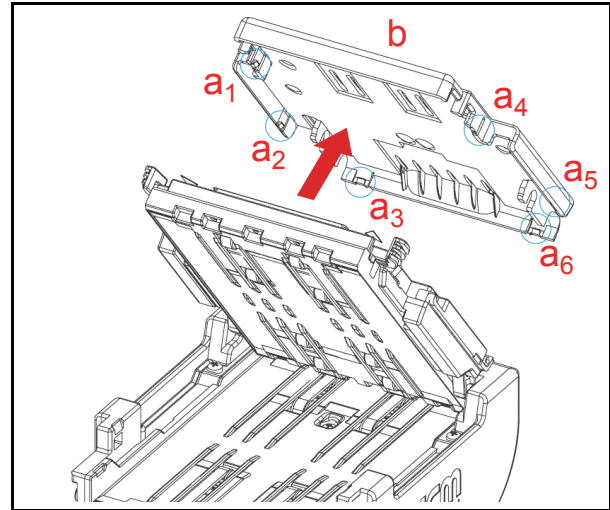

**Figure 4-34** Upper Cover Removal

3. Remove the two (2) mounting Screws (See Figure 4-35 a<sub>1</sub> & a<sub>2</sub>) retaining the Sensor Transfer Board Assembly to the Transport.
4. Remove the CIS FFC (See Figure 4-35 b), the Transmissive Light FFC (See Figure 4-35 c), and the Upper UV FPC (See Figure 4-35 d) from the Validation Head.
5. Unplug the two (2) Flat Flexible Cables (FFC) (See Figure 4-35 e<sub>1</sub> & e<sub>2</sub>) and then remove the Sensor Transfer Board Assembly (See Figure 4-35 f) off of the Validation Head; then
6. Remove the CIS FFC, the Transmissive Light FFC and the Upper FPC from the Validation Unit.

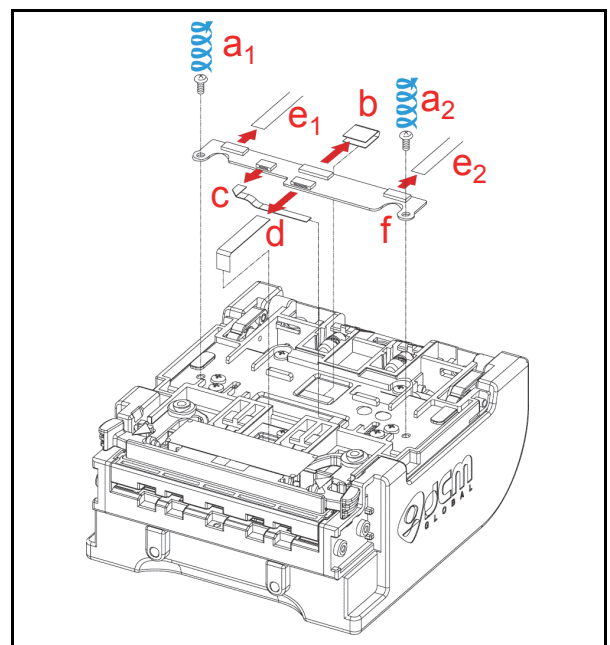


**Figure 4-35** Sensor Transfer Board Assembly, CIS FFC, Transmissive Light & Upper UV FPC Cable Removal


## Validation Sensor Board Assembly Removal

To remove the Validation Sensor Board Assembly, proceed as following:

1. Remove the four (4) Cover Mounting Screws (See Figure 4-36 a<sub>1</sub> through a<sub>4</sub>) located on the base side of the Validation Unit, and remove the iVIZION® Head Cover “A” (See Figure 4-36 b) off the Validation Assembly.
2. Remove the two (2) mounting Screws (See Figure 4-37 a<sub>1</sub> & a<sub>2</sub>) and take Grounding Plate “A” (See Figure 4-37 b) off the Validation Unit.
3. Remove the two (2) screws (See Figure 4-37 c<sub>1</sub> & c<sub>2</sub>) retaining the Validation Sensor Assembly Board.
4. Unplug the two (2) FPC Cables (See Figure 4-37 d<sub>1</sub> & d<sub>2</sub>) and the two (2) FFC Cables (See Figure 4-37 e<sub>1</sub> & e<sub>2</sub>) from the Validation Sensor Assembly Board.
5. Take the Validation Sensor Board Assembly (See Figure 4-37 f) off the Validation Unit.

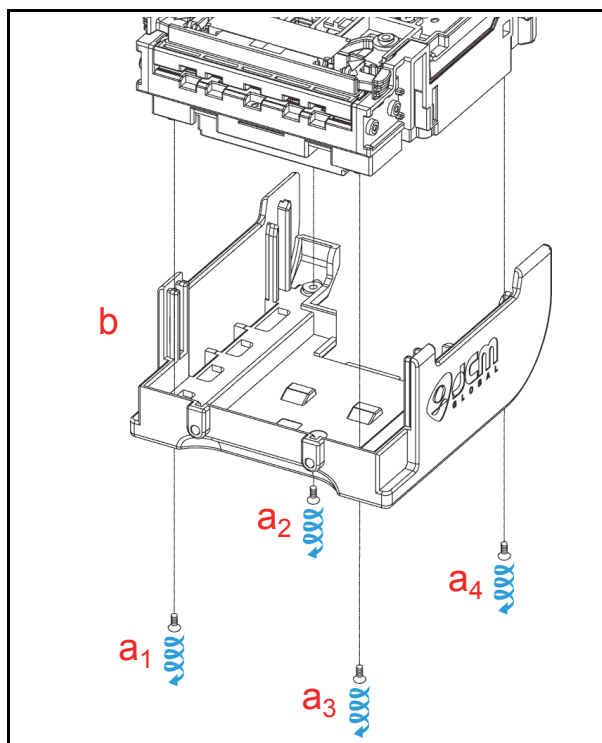

**Figure 4-36** iVIZION Head Cover A Removal

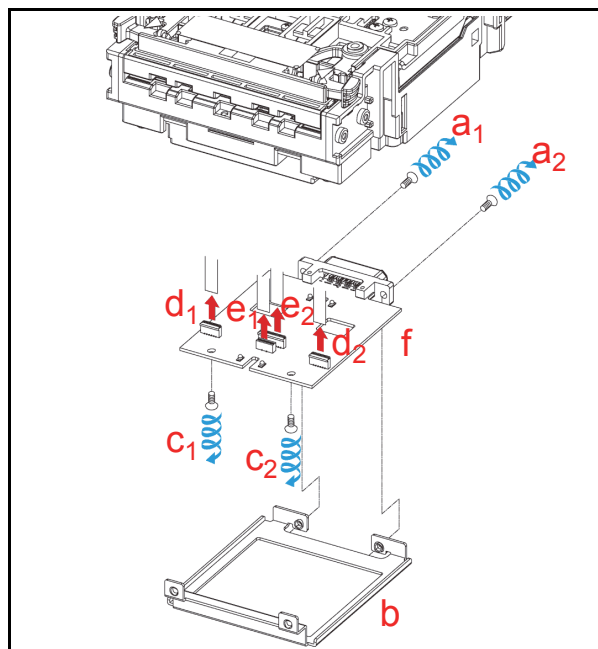


**Figure 4-37** Validation Sensor Board Assembly Removal

## Validation Sensor FPC Cable Removals

To remove the Validation Sensor FPC Cables, proceed as follows:

1. Remove the two (2) Validation Sensor FPC Cables (See Figure 4-38 a<sub>1</sub> & a<sub>2</sub>) from the Validation Unit.

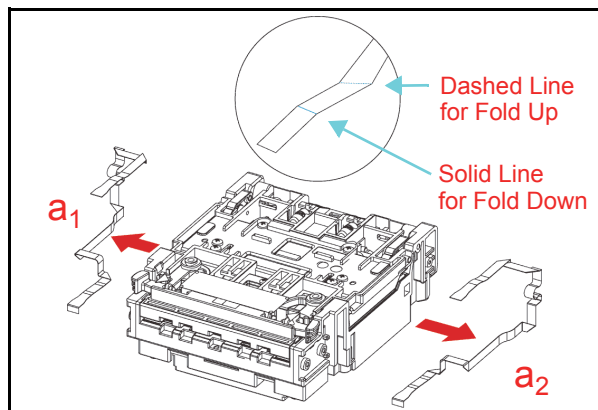

**Figure 4-38** Validation Sensor FPC Removal



**NOTE:** Carefully observe the Up and Down Fold Line indications shown by the two (2) Cyan Arrows in Figure 4-38, and DO NOT unfold them in an opposite direction!




**NOTE:** When installing new FPCs, fold-up along the Solid Lines and fold-down along the Dashed Lines before setting them in place. Once an FPC is folded, DO NOT unfold it back again or fold in the opposite direction.





**NOTE:** When the Unit is reassembled, the FPCs should be reinstalled as illustrated by the **Blue** paths shown in Figure 4-39.

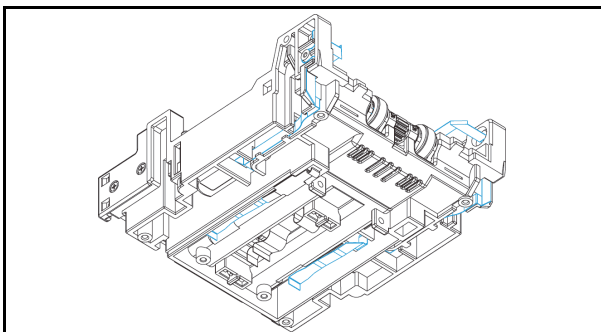

**Figure 4-39** Validation Sensor FPC Reassembly

## CIS/Transmissive Light & Upper UV Sensor Removals


To remove the CIS, the Transmissive Light and the Upper UV Sensors proceed as follows:

1. Push out the two (2) Alignment Pins (See Figure 4-40 a<sub>1</sub> & a<sub>2</sub>) retaining the two (2) Limit Stops (See Figure 4-40 b<sub>1</sub> & b<sub>2</sub>) using holes provided inside the Unit, and individually remove the two (2) Stops from the Validation Unit.




**NOTE:** When reassembling the Unit, ensure that the right and left side Pins are correctly repositioned when reinstalled.

2. Carefully spread both sides of iVIZION® Head FR "A" Frame apart (See Figure 4-40 c<sub>1</sub> & c<sub>2</sub>), and lift the Upper Validation Section (See Figure 4-40 d) up and out of the Validation Unit.

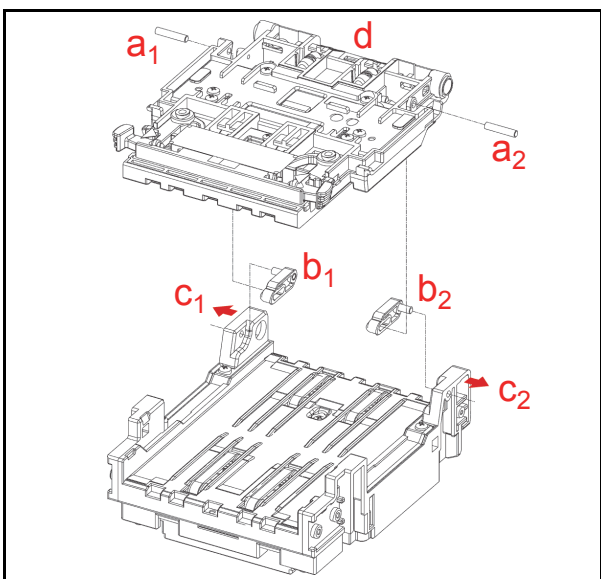

**Figure 4-40** Upper Validation Part Removal

3. Remove the six (6) mounting Screws (See Figure 4-41 a<sub>1</sub> through a<sub>6</sub>) retaining the upper iVIZION® BG 85B Head Assembly (See Figure 4-41 b) to the lower Validation Unit.

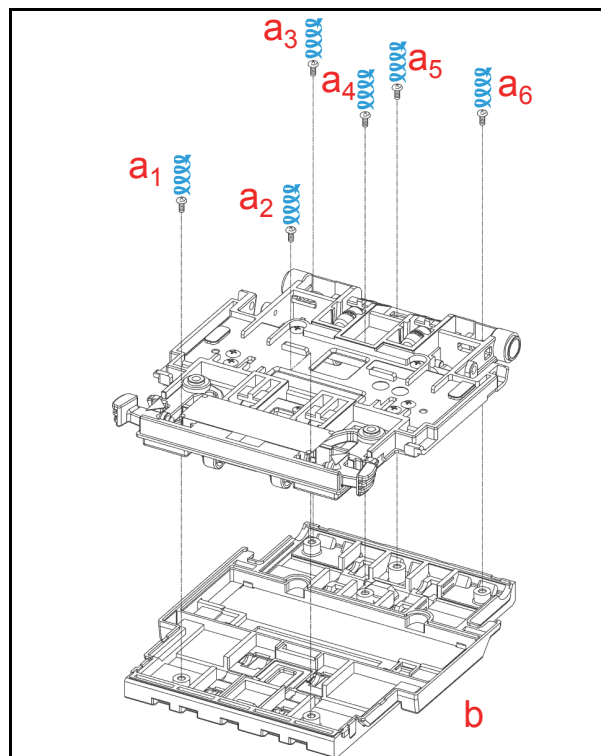

**Figure 4-41** iVIZION Head BG85B Removal

4. Remove the four (4) CIS Sensor Mounting Screws (See Figure 4-42 a<sub>1</sub> through a<sub>4</sub>) and remove the CIS Sensor (See Figure 4-42 b) from the Upper Validation Section.




**NOTE:** When reassembling the Unit, ensure that the UV Sensors are correctly re-positioned when set in place (See "Reassembly Cautions" on page 4-13 of this Section).



**NOTE:** If foreign objects are observed adhering to the Sensor's surface, blow it clean by using a Compressed Air spray.

5. Remove the two (2) mounting Screws (See Figure 4-42 c<sub>1</sub> & c<sub>2</sub>) retaining the Transmissive Light Sensor in place (See Figure 4-42 d), and remove it from the Upper Validation Section.
6. Remove the two (2) mounting Screws (See Figure 4-42 e<sub>1</sub> & e<sub>2</sub>) retaining the Upper UV Sensor in place (See Figure 4-42 f), and drop it down and off the Upper Validation Section.

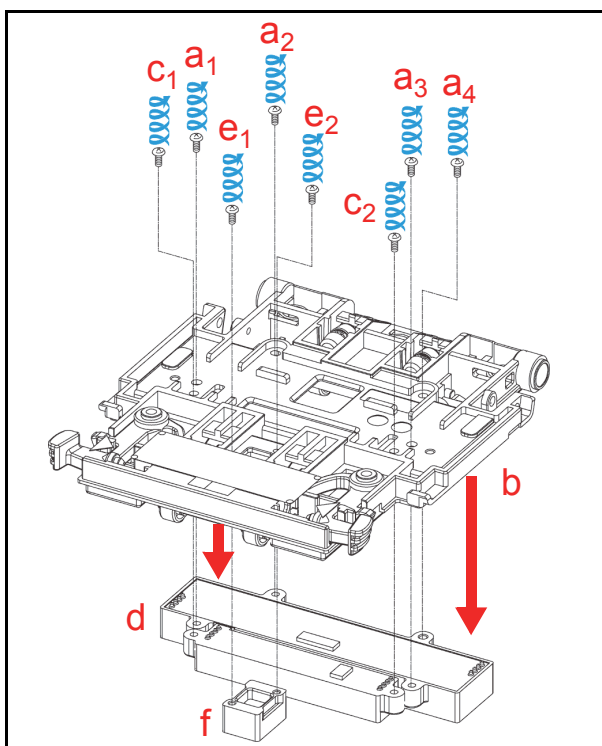


**Figure 4-42** CIS, Transmissive Light & Upper UV Sensor Removal

### CIS/CIS FPC/Lower UV Sensor & Lower UV FFC Removal


To remove the CIS, the CIS FPC, the Lower UV Sensor and the Lower UV FFC proceed as follows:

1. Remove three (3) BG 85A Head Mounting Screws (See Figure 4-43 a<sub>1</sub>, a<sub>2</sub> & a<sub>3</sub>) and release the four (4) Clip-tab Stops (See Figure 4-43 b<sub>1</sub> through b<sub>4</sub>) on the iVIZION® BG 85A Head.
2. Remove the iVIZION® BG 85A Head (See Figure 4-43 c) up and off of the Validation Unit.

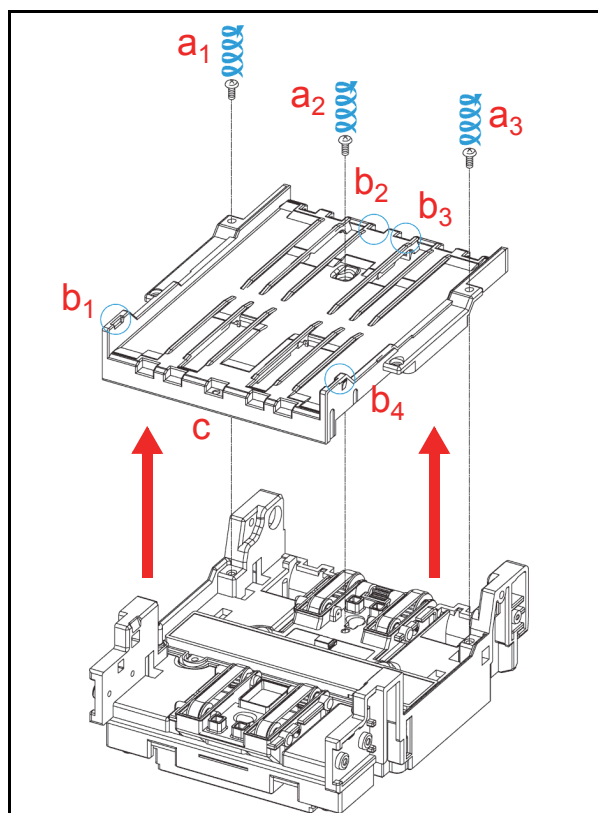

**Figure 4-43** iVIZION BG 85A HEAD Removal


3. Remove two (2) mounting screws (See Figure 4-44 a<sub>1</sub> & a<sub>2</sub>) retaining the Lower Validation Section in place (See Figure 4-44 b) and remove it up and off the Validation Unit.

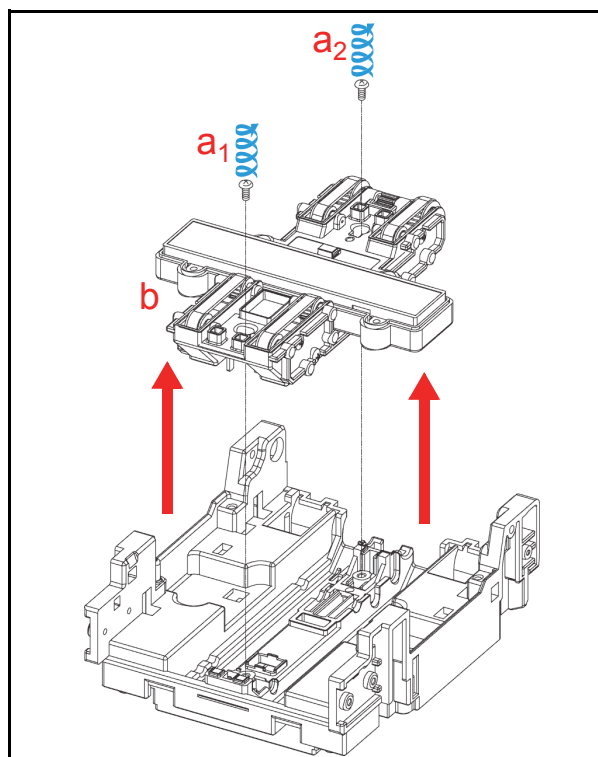


**Figure 4-44** Lower Validation Part Removal




- Remove the four (4) CIS Sensor Mounting Screws (See Figure 4-45 a<sub>1</sub> through a<sub>4</sub>), and remove the CIS Sensor (See Figure 4-45 b) and the CIS FPC Cable (See Figure 4-45 c) off of the Lower Validation Section.

 **NOTE:** If foreign objects are observed adhering to the CIS surface, blow it clean by using a Compressed Air spray.

- Remove two (2) mounting screws (See Figure 4-45 d<sub>1</sub> & d<sub>2</sub>), retaining the Lower UV Sensor (See Figure 4-45 e) in place and remove it and the Lower UV FFC Cable (See Figure 4-45 f) from the Lower Validation Section.

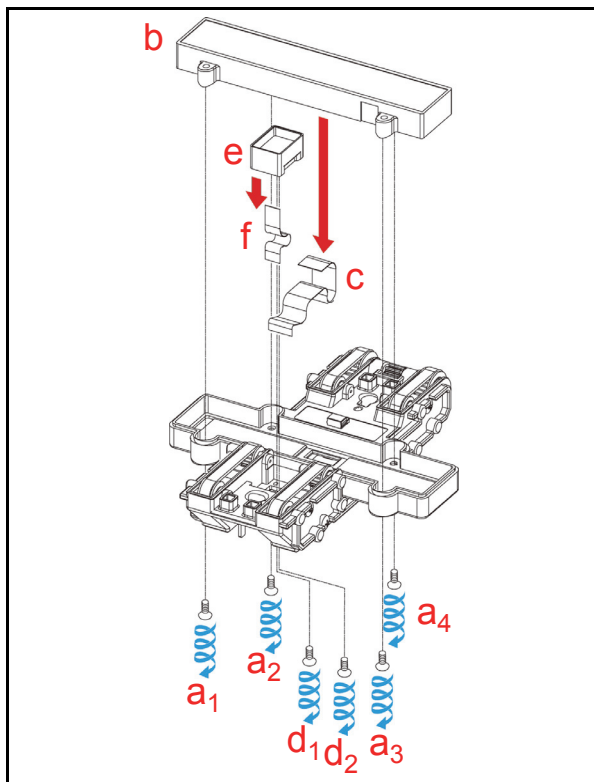


**Figure 4-45** CIS, CIS FPC, Lower UV Sensor & Lower UV FFC Removal


 **NOTE:** When reassembling the Unit, ensure that the UV Sensors are correctly re-positioned and set in place as illustrated in Figure 4-48 on this page.

## Validation Unit Timing Belt Removal


To remove Timing Belt proceed as follows:


- Remove the three (3) Side Plate Cover Mounting Screws (See Figure 4-46 a<sub>1</sub>, a<sub>2</sub> & a<sub>3</sub>) located on right side of the Lower Validation Section.
- Remove the Cover (See Figure 4-46 b) from the Lower Validation Section.
- Remove Timing Belt (See Figure 4-46 c) from the Lower Validation Section.

 **NOTE:** Follow the same procedure to remove the opposite side Timing Belt.

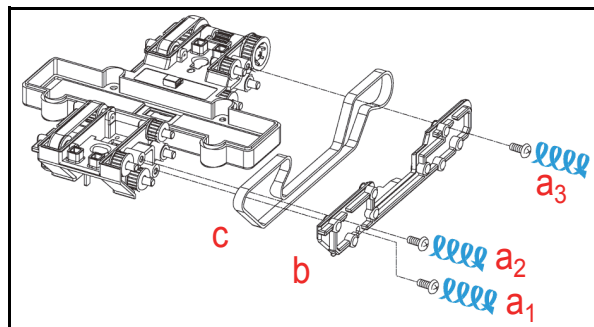

**Figure 4-46** Timing Belt Removal


 **NOTE:** The Timing Belt should be reinstalled as illustrated by the Blue path shown in Figure 4-47 when the Unit is being reassembled.

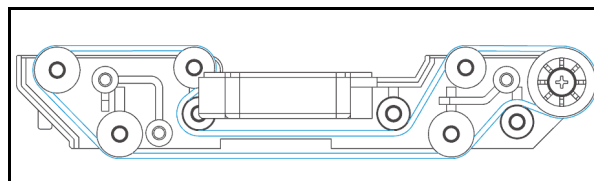


**Figure 4-47** Timing Belt Replacement

## Reassembly Cautions

When reassembling the Upper/Lower UV Sensors, make sure that both of the Sensor positions and directions are correctly placed. Match the Connector's position as illustrated in Figure 4-48a.

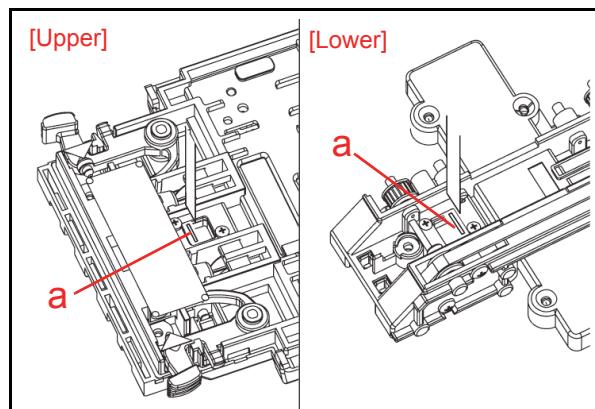

**Figure 4-48** Upper/Lower UV Sensors Location

 **NOTE:** Ensure that all Sensors and the iVIZION® BG 85B Head surfaces are absolutely clean before reassembling the iVIZION® Unit. Also ensure that all Finger Prints, smudges, dirt or film that exists on any surfaces in the Transport path are removed.

Disassembly and Reassembly of the iVIZION® Unit is now complete.

THIS PAGE INTENTIONALLY LEFT BLANK

# iVIZION® Series

## Next-Generation Banknote Acceptor Unit

### Section 5

#### 5 WIRING DIAGRAMS

This chapter provides the iVIZION® Series Next-Generation Banknote Acceptor Unit Wiring Diagrams for the following items:

- iVIZION System Wiring Diagram.

#### iVIZION System Wiring Diagram

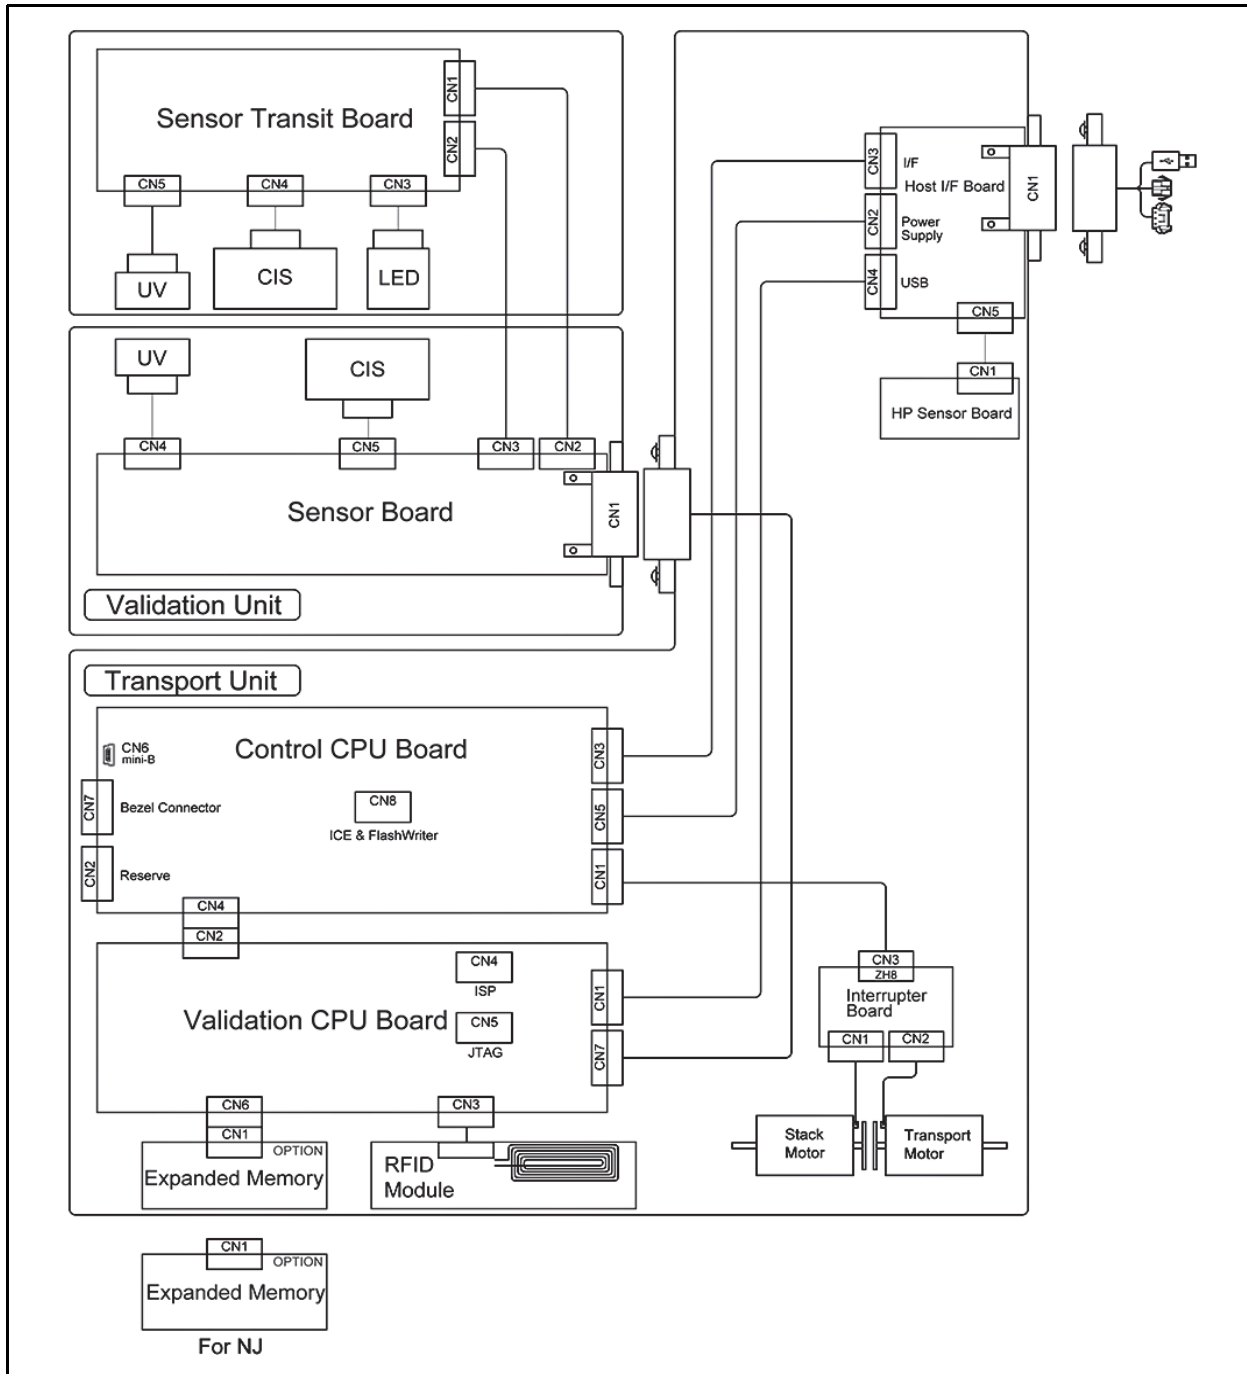


Figure 5-1 iVIZION System Wiring Diagram

THIS PAGE INTENTIONALLY LEFT BLANK

# iVIZION® Series

## Next-Generation Banknote Acceptor Unit

### Section 6


## 6 PERFORMANCE TESTS

This section provides Calibration and Performance Testing instructions for the iVIZION® Series Next-Generation Banknote Acceptor Unit and contains the following information:


- Tool Requirements
- Installation Procedures
- Download Procedures
- JCM Tool Suite Standard Edition Mode
- Calibration
- Performance Tests
- iVIZION Utility

### Download and Installation Workbench Tool Requirements

Figure 6-1 illustrates and identifies the tools and equipment interconnects necessary to download and install the iVIZION® Device.

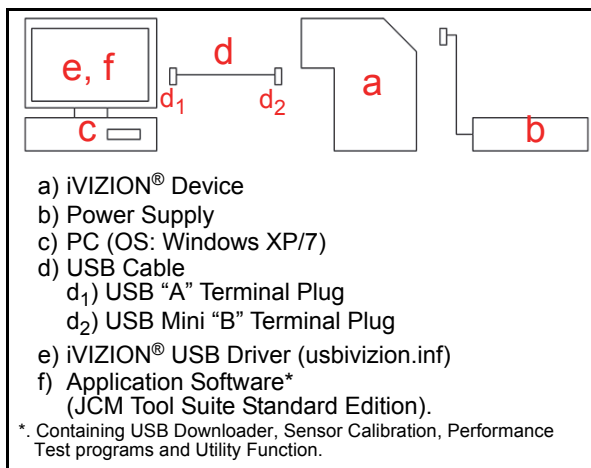

**Figure 6-1** Tool and Harness Connections

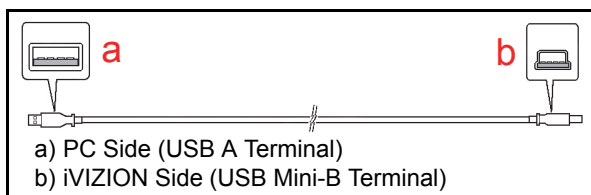


**Figure 6-2** USB Cable Type Requirement

## Application Software Installation

Perform the following steps to install the "JCM Tool Suite Standard Edition" Application Software (Refer to Figure 6-1 and Figure 6-2 for the necessary Tool and Harness Connections and USB Cable Type Requirements respectively).


1. Copy the "JCMToolSuiteStandardEdition.zip" Application Software and extract on the Desktop.
2. Open the Third Layer of the extracted Folder and Double-click on "Setup.exe"(See Figure 6-3 a).

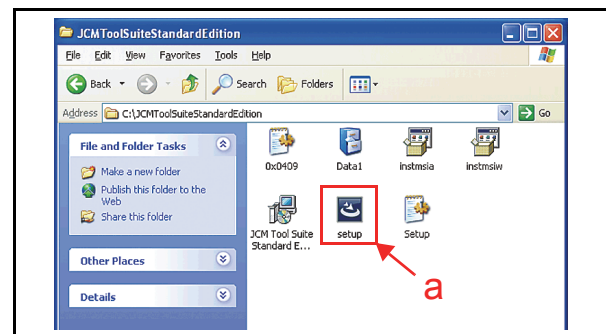

**Figure 6-3** Setup.exe File Location

The "JCM Tool Suite Standard Edition - Install Shield Wizard" Screen shown in Figure 6-4 will appear.


3. Click on "Next>" Screen Button (Figure 6-4 a).

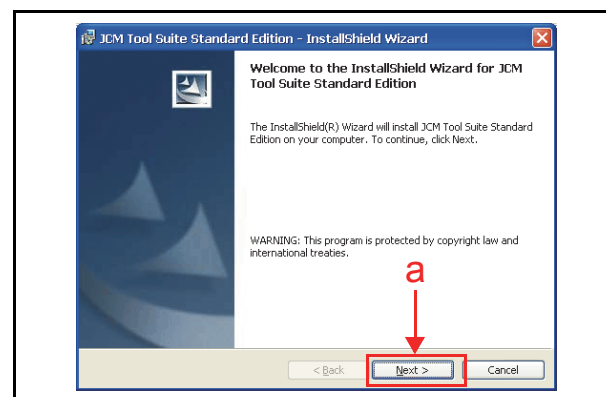

**Figure 6-4** Install Shield Wizard Screen

4. When the "Custom Information Screen" shown in Figure 6-5 appears, click on the Radio Screen Button ☐ located next to the "Anyone who use


this computer” (See Figure 6-5 a) and click on “Next>” Screen Button.

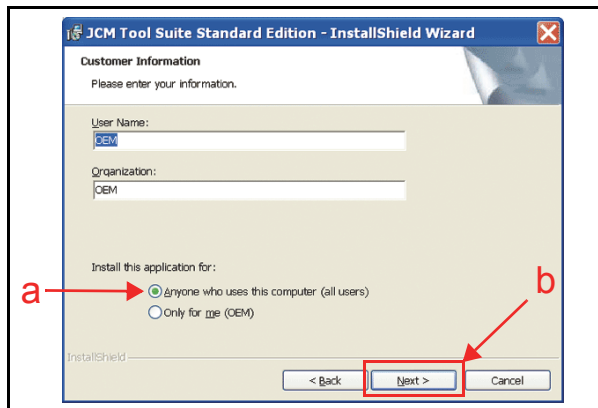

**Figure 6-5** Customer Information Screen


**NOTE:** The “OEM” in “Last Name:” and “Organization:” fields are default settings. The actual “Last Name” and “Organization Name” is available for a Customer’s use.

- Click on “Next>” Screen Button (See Figure 6-6 a) when the “Destination Folder” Screen shown in Figure 6-6 appears.

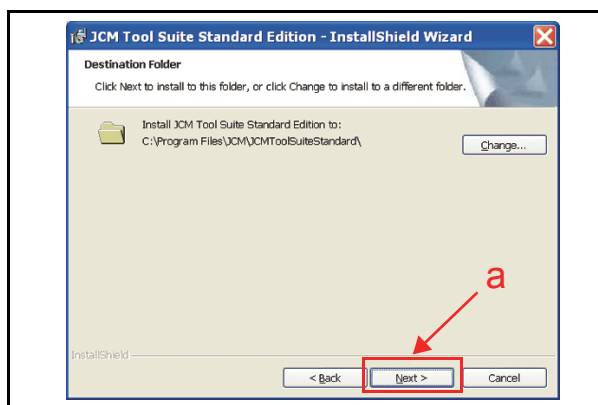


**Figure 6-6** Destination Folder Screen

- Check the “Current Settings:” area (See Figure 6-7 a) and then click on the “Install” Screen Button (See Figure 6-7 b) to start the installation.

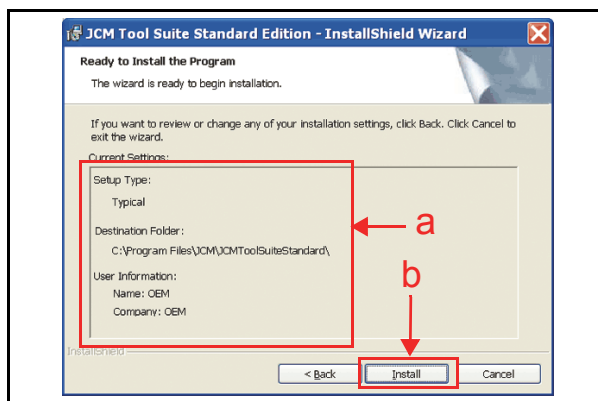

**Figure 6-7** Current Settings Confirmation

- Once installation is complete, the “InstallShield Wizard Completed” Screen shown in Figure 6-8 will appear.

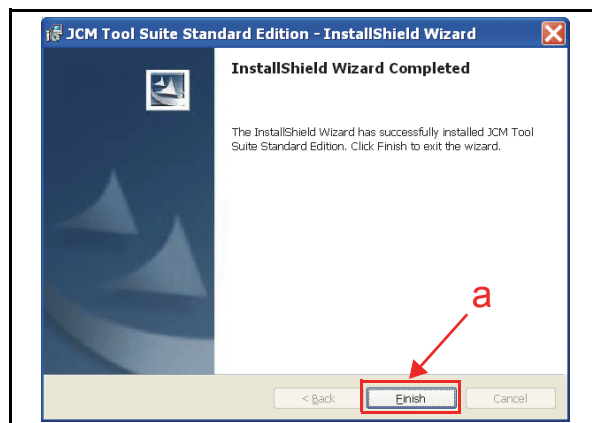

**Figure 6-8** Installation Completion Screen


- Click on the “Finish” Screen Button to end the installation process.

This completes the “JCM Tool Suite Standard Edition” installation procedure.

## Driver Installation Procedure

Perform the following steps to install the various iVIZION® Software Drivers (Refer to Figure 6-1 for the Tool Requirements and Harness Connector locations). Before downloading the iVIZION® USB Driver the “usbivizion.inf” application must be installed in a designated Folder on the PC first.

- Connect the USB Cable to the iVIZION® Unit.
- Supply power to the iVIZION® Unit.
- The “Hardware Update Wizard” Screen shown in Figure 6-10 will appear. Click on the Radio Screen Button ☒ located beside “No, not this time” (See Figure 6-9 a) and then click on the “Next>” Screen Button (See Figure 6-9 b).

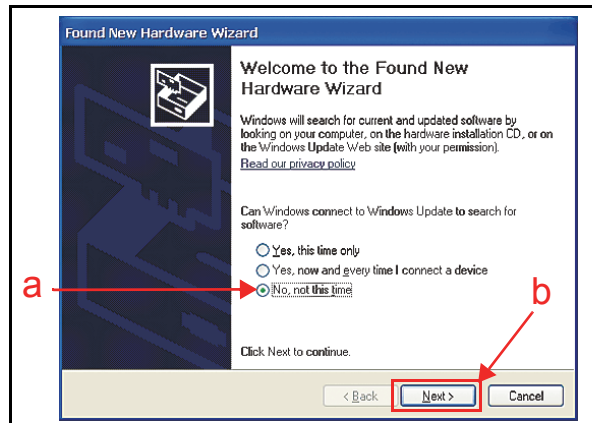


**Figure 6-9** Hardware Update Wizard Screen 1

- When the Screen shown in Figure 6-10 appears, click on the Radio Screen Button ☒ located beside “Install the software automatically (Recommended)” line (See Figure 6-10 a), and then click




on the “Next>” Screen Button (See Figure 6-10 b).

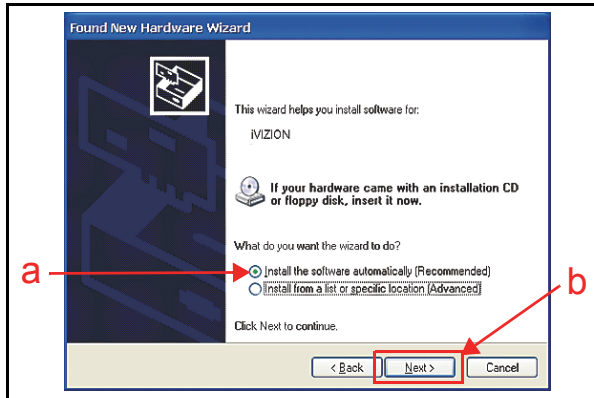


**Figure 6-10** Hardware Update Wizard Screen 2

- The USB Driver locating process will begin. If the Hardware Installation Warning shown in Figure 6-11 appears, click on the “Continue Anyway” Screen Button (See Figure 6-11 a).

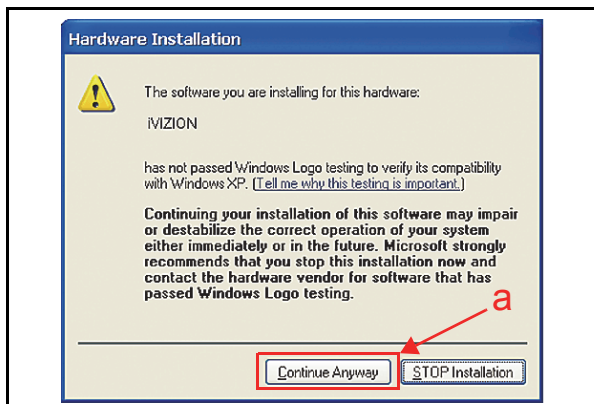

**Figure 6-11** Hardware Update Wizard Screen 3

- The (usbvizion.inf) USB Driver installation process will now begin.
- When Software installation is complete, the “Completing the Found New Hardware Wizard” Screen will appear as shown in Figure 6-12.

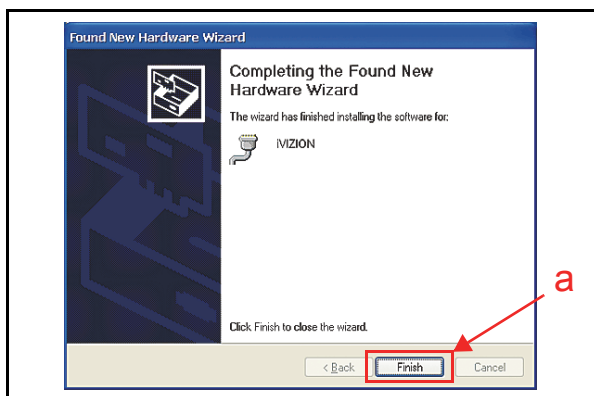

**Figure 6-12** Hardware Update Wizard Screen 4

- click on the “Finish” Screen Button to close the “Completing...” Screen (See Figure 6-12 a).

- Turn the iVIZION® power switch OFF.

This complete the iVIZION® USB Driver Software installation procedure.


## JCM Tool Suite Standard Edition Mode

The following two (2) modes exist in the “JCM Tool Suite Standard Edition” package:

- Normal Mode
- Test Mode.

“Normal Mode” is a mode designed to provide the iVIZION® Operating Software to be downloaded. The “Service Mode” Pull-Down Menu contains three (3) available choices shown in Figure 6-13 as follows:


- **Download** (for downloading software)
- **Statistics** (for observing log data)
- **Utility** (for setting ICB and CIS Image functions).



**Figure 6-13** Normal Mode Selection

“Test Mode” is a mode designed to perform iVIZION® Calibration and Performance Testing. The “Service Mode” contains five (5) available choices in its Pull-down Menu shown Figure 6-14 as follows:


- **Download** (for downloading software)
- **Statistics** (for observing log data)
- **Sensor Adjustment** (for calibration)
- **Performance Test** (for performance testing)
- **Utility** (for setting ICB and CIS Image functions).

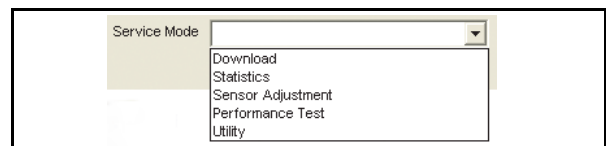

**Figure 6-14** Test Mode Selection

## Software Download Tool Requirements

The tools listed in Figure 6-15 are required to install the iVIZION® Operating Software.

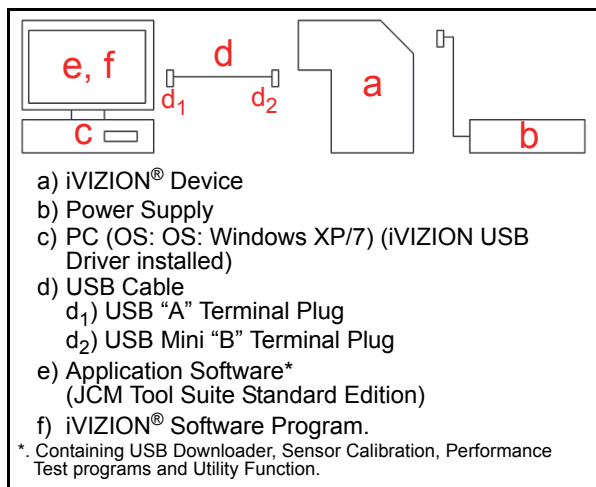

**Figure 6-15** Required Software Download Tools

## Software Download Procedures

The following two (2) types of download procedures exist, depending on the iVIZION® operating conditions:

- The iVIZION® contains the "iVIZION® Software Program already installed" (Upgrading)
- The iVIZION® is new and does not have the "iVIZION® Software Program installed" (e.g., New CPU Board).

### DOWNLOAD THE UPGRADE PROGRAM


To download an update of the last "iVIZION® Software Program" into the iVIZION®, proceed as follows:

1. Turn the iVIZION® Power Switch to **OFF**.
2. Set all of the 8-Position DIP Switches to **OFF** (See Figure 6-16).




**Figure 6-16** DIP Switches All OFF

3. Connect the USB Port located on the front side of the iVIZION® Unit to the PC using a USB "A" to "mini-B" Communications Cable.
4. Turn the iVIZION® Power Switch to **ON**.
5. Launch the "JCM Tool Suite Standard Edition" Application. The Screen shown in Figure 6-17 will appear when the application becomes activate.

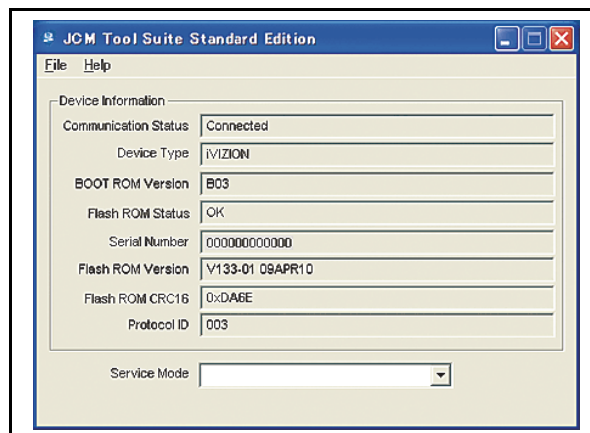


**Figure 6-17** JCM Tool Suite Standard Edition Screen

6. Click on, and hold-down the "Service Mode" Pull-Down Menu and select "Download". When selected it will highlight the selected Field Area in Blue (See Figure 6-18), the Status LED will flash at a **Green** Color rate. The "JCM Downloader Suite Edition Version X.XX" will automatically open, and the Screen shown in Figure 6-19 will appear.
7. Click on the "Browse" Screen Button (See Figure 6-19 a).

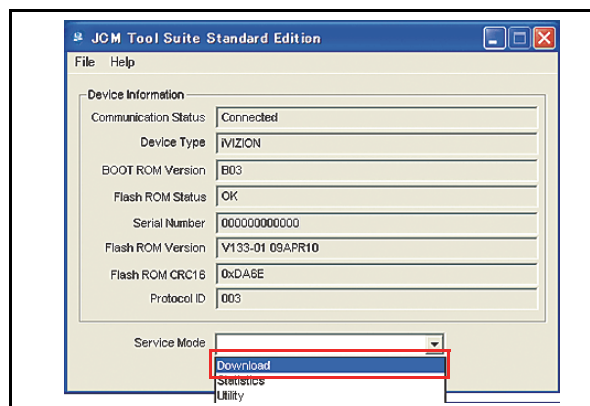

**Figure 6-18** JCM Tool Suite Standard Edition Screen Pull-Down Menu

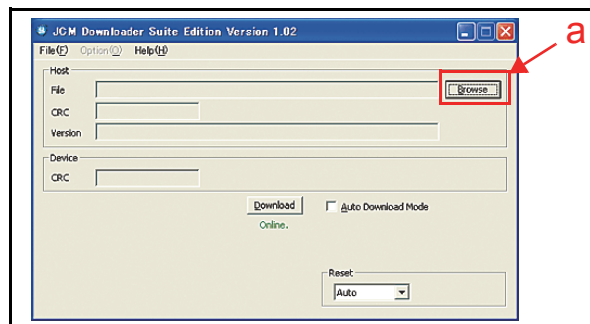


**Figure 6-19** Browse Screen Button Location

8. Select the Current iVIZION® Software Program Version (e.g., the "iVIZION® 100(USA)ID003 V13901" example shown in Figure 6-20a) from the **Download File** Screen that appears.




9. Click on the “Open” Screen Button (See Figure 6-20 b).

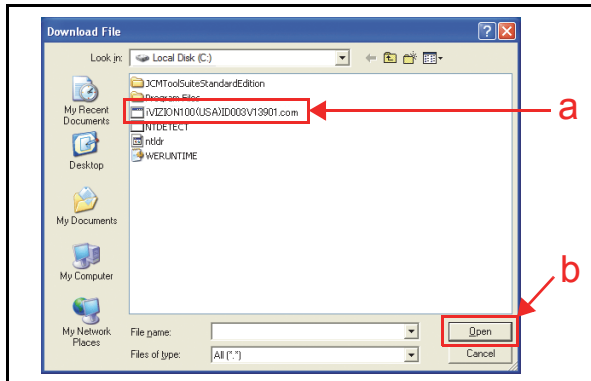


**Figure 6-20** iVIZION Software Program Selection

10. When the “JCM Downloader Suite” Screen reappears, click on the center “Download” Screen Button (See Figure 6-21 a) to begin the Software download into the iVIZION® Unit. The Download Screen will display a Progress Barograph during the download operation (See Figure 6-21 b), and a Blue Text Line below the Download Screen Button will display the download Percentage as “Downloading : XX%” (See Figure 6-21 c). The Status LED will alternately light Green and Red during this operation.

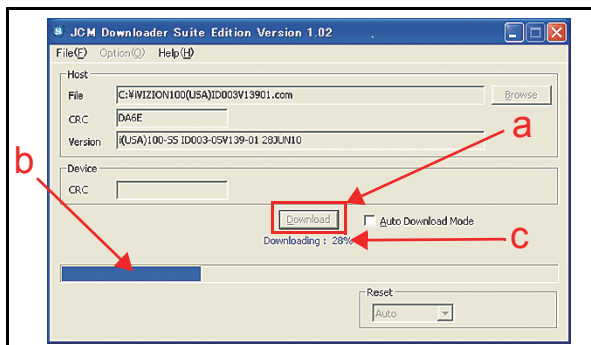

**Figure 6-21** Download Progress Screen 1

11. When the download is complete, the “Download Success. Reset Done. Waiting for USB Cable Disconnection.” Blue Text Line will appear (See Figure 6-22 a).
12. Confirm that the Host’s Checksum and the Device Checksum’s identically match each other (See Figure 6-22 b).

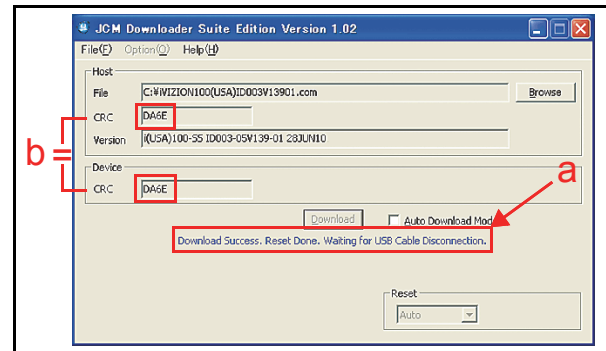

**Figure 6-22** Download Completed Screen 1

### DOWNLOADING THE PROGRAM FIRST TIME

When the iVIZION® Software Program is not pre-installed (e.g., when changing the CPU Board), the download procedure for an “empty” Unit is slightly different from the Download and Upgrade Program procedures that were presented previously.


To download the “iVIZION® Software Program” into an “empty” iVIZION® for the first time, proceed as follows:

1. Turn the iVIZION® Power Switch to **OFF**.
2. Set 8-Position DIP Switch #6, #7 and #8 to **ON** (See Figure 6-23).




**Figure 6-23** DIP Switches 6, 7, & 8 ON

3. Connect from the USB Port located on the front side of the iVIZION® Unit to the PC using the “A”/“mini-B” USB Communications Cable.
4. Turn the iVIZION® Power Switch to **ON**. The Status LED will flash at a Green Color rate.
5. Launch the “JCM Tool Suite Standard Edition” Application. The Screen shown in Figure 6-24 will appear when the application is activate.

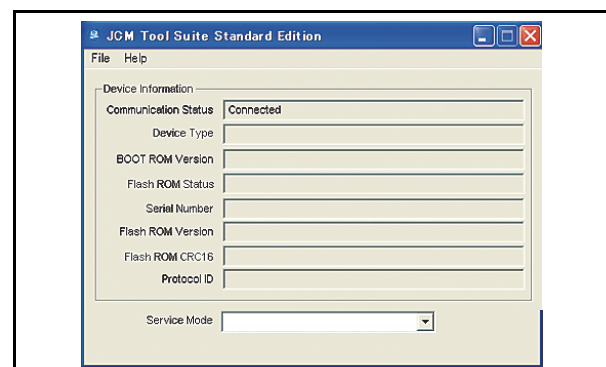

**Figure 6-24** JCM Tool Suite Standard Edition Screen 2


- Click on, and hold-down the “Service Mode” Pull-Down Menu selection and Slide-down the Menu to select “Download”. When selected it will Highlight the selected Field Area in **Blue** (See Figure 6-25), and the Status LED will flash at a **Green** Color rate.

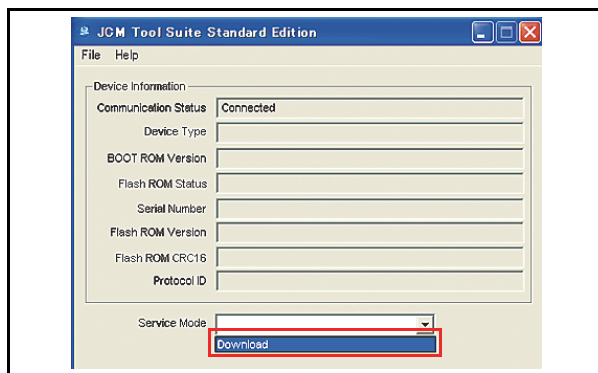

**Figure 6-25** JCM Tool Suite Standard Edition Screen Pull-Down Menu 2


The “JCM Downloader Suite Edition Version X.XX” will automatically open, and the Screen shown in Figure 6-26 will appear.

- Click on the “Browse” Screen Button (Figure 6-26 a).

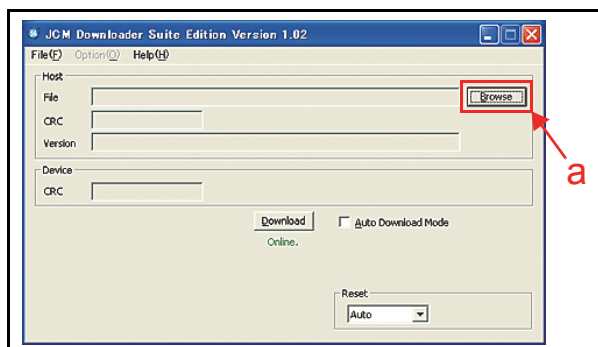

**Figure 6-26** Browse Screen Button Location


- Select the current iVIZION® Software Program version (e.g., iVIZION100(USA)ID003V13901 in the Figure 6-27a example) from the **Download File** Screen that appears, then click on the “Open” Screen Button (See Figure 6-27 b).

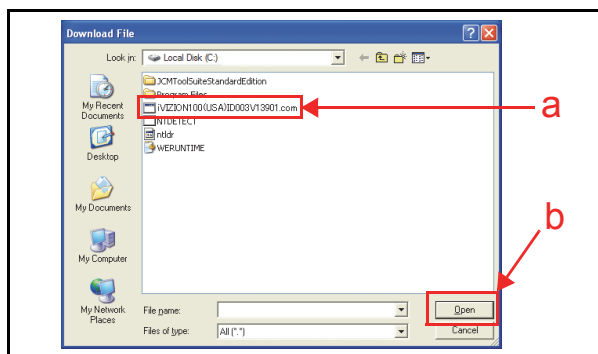

**Figure 6-27** iVIZION Software Program Selection


- When the “JCM Downloader Suite...” Screen reappears, click on the center “Download” Screen Button (See Figure 6-28 a) to begin the Software

download into the iVIZION® Unit. The Download Screen will display a Progress Barograph during the download operation (See Figure 6-28 b), and a **Blue Text Line** below the Download Screen Button will display the download Percentage as “**Downloading : XX%**” (See Figure 6-28 c). The Status LED will alternately light **Green** and **Red**.

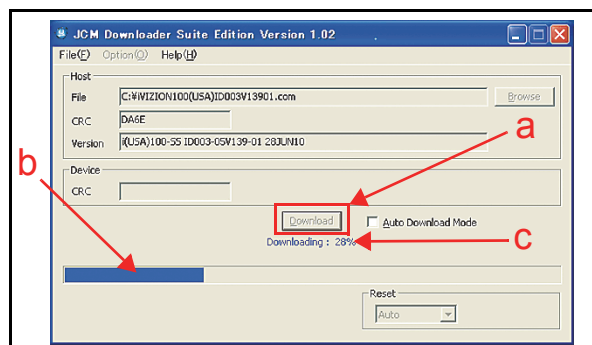

**Figure 6-28** Download Progress Screen 2

- When the download is complete, the “**Download Success. Reset Done. Waiting for USB Cable Disconnection.**” **Blue Text Line** will appear (See Figure 6-29 a).
- Confirm that the Host’s Checksum and the Device Checksums identically match each other (See Figure 6-29 b).

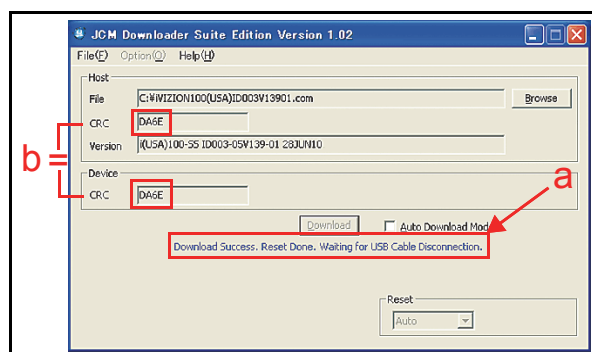

**Figure 6-29** Download Completed Screen 2

This completes the iVIZION Software Downloading Procedures.

## Calibration

This section provides instructions for performing a calibration of the Acceptor Unit Sensors and the Transport Unit Sensors within the iVIZION® Device.

### When to Calibrate

Calibration should be performed when one of the following four (4) conditions occur:

- When removing one of the Circuit Boards.
- When replacing one of the Circuit Boards.
- When dirt adheres to the Sensors (See “Sensor Cleaning Procedure” on page 2-10 of this Manual).
- When the Banknote Acceptance Rate becomes drastically degraded.

## CALIBRATION ORDER

Table 6-1 lists the Calibration Order related to each iVIZION® Sensor's Screen indication.

**Table 6-1** iVIZION Sensor Calibration Order


Step	Screen Indication	Related Sensor
Calibration #1	Box RUNNING	Cash Box Sensor
	Nearly Full RUNNING	Nearly Full Sensor
	Feed-Out RUNNING	Feed-Out Sensor
Calibration #2	Home Position RUNNING	Home Position Sensor
	Feed-In RUNNING	Feed-In Sensor
	Entrance RUNNING	Entrance Sensor
	Exit RUNNING	Exit Sensor
Calibration #3	UV RUNNING	UV Sensor (Upper)
	UV RUNNING	UV Sensor (Lower)
Calibration #4	CIS RUNNING	CIS transmissive Sensor
		CIS Sensor (Lower)
		CIS Sensor (Upper)

## Calibration Tool Requirements

Figure 6-30 illustrates and list identifies the calibration Tools and equipment interconnects necessary to install an iVIZION® Unit away from its Host Machine.



**NOTE:** When the "USB "A" Terminal" is connected to a USB Hub, the iVIZION may not be operating. Ensure that the "USB "A" Terminal" is properly connected directly to the USB Port of the PC.

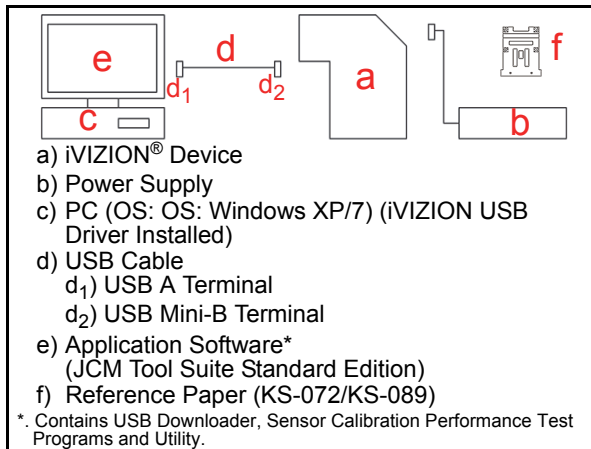

**Figure 6-30** Remote Calibration Tools Required


## Reference Paper Placement

### PLACING THE KS-072/KS-089 REFERENCE PAPER

This portion provides information concerning the KS-072/KS-089 Reference Paper's settings and uses.



**NOTE:** Do not touch the Paper Surfaces of either side of the KS-072/KS-089 Reference Paper (See Figure 6-31 a).

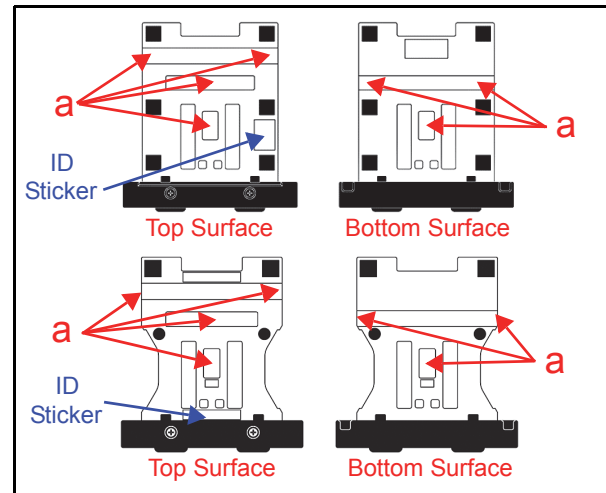


**Figure 6-31** KS-072/KS-089 Reference Paper

Perform the following steps to properly place the KS-072/KS-089 Calibration Reference Paper into the iVIZION® Device:

1. Open the Upper Guide while pressing in on the Upper Guide Access Levers located on each side of the Acceptor Unit that are indicated by the Blue Arrows in Figure 6-32a.
2. Place the KS-072/KS-089 Reference Paper (See Figure 6-32 b) in the Unit until its Catch Edge reaches both the left and right side of the Frame (See Figure 6-32 c).




**NOTE:** Place the KS-072/KS-089 Reference Paper so the ID Sticker is visible, otherwise, Calibration will not be performed correctly.

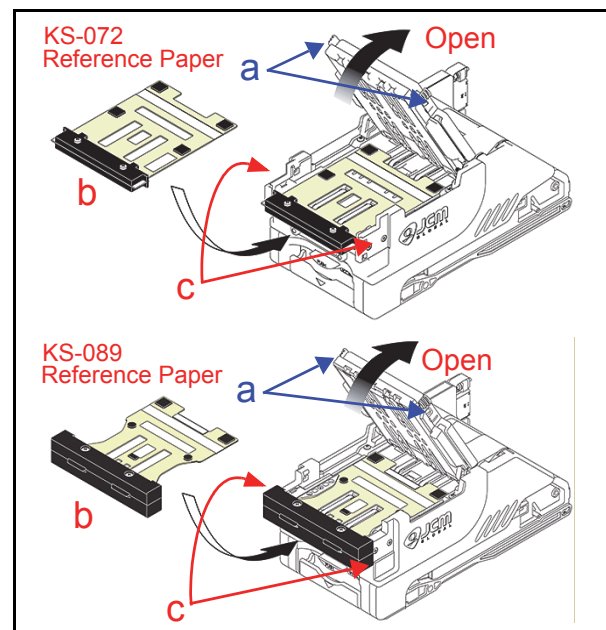

**Figure 6-32** Reference Paper Setting 1

3. Firmly close the Upper Guide (See Figure 6-33 a) until it “clicks” into place, and ensure that both sides are tightly closed and locked in place.

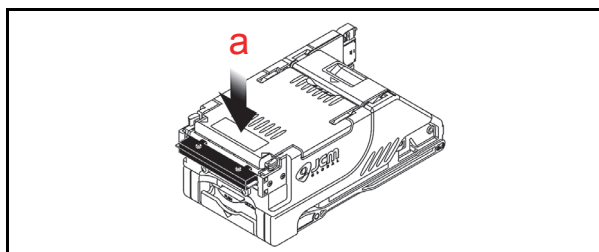

**Figure 6-33 Reference Paper Setting 2**

### Calibration Procedure

The following two (2) methods exist for performing each of the iVIZION® Calibration Procedures:

- Calibration Only
- Calibration plus Serial Number Writing.

#### CALIBRATION ONLY


Perform the following steps to just calibrate the iVIZION® Unit Sensors:

1. Turn the iVIZION® Unit's Power Switch **OFF**.
2. Set DIP Switch #8 to **ON** (See Figure 6-34).
3. Turn the iVIZION® Unit's Power Switch **ON**. The Status LED will begin flashing and then will light a steady **Blue** Color.




**Figure 6-34 DIP Switch #8 ON**

4. Launch the “JCM Tool Suite Standard Edition” Application. The “JCM Tool Suite Standard Edition” Screen shown in Figure 6-35 will appear when the application becomes active.
5. Click on, and hold-down the “Service Mode” Pull-Down Menu Selection (See Figure 6-35 a) and slide-down to select “Sensor Adjustment” from within the Pull-Down Menu (See Figure 6-35 b).

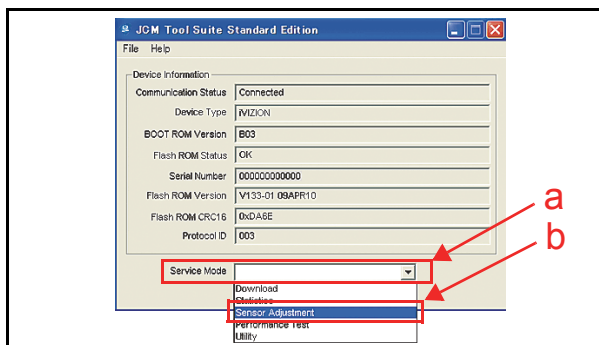

**Figure 6-35 JCM Tool Suite Standard Edition Screen 3**

6. This action will activate the “iVIZION Calibration Ver.X.XX” Mode automatically, and the Screen shown in Figure 6-36 will appear.

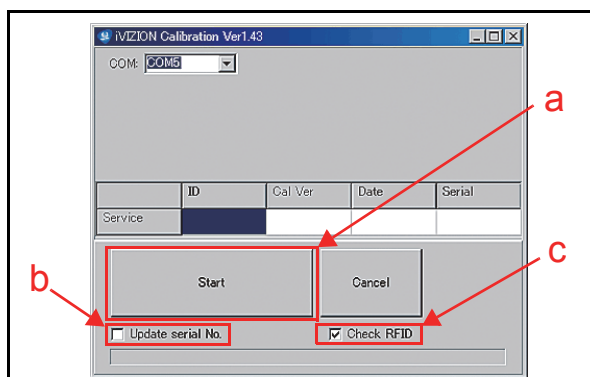

**Figure 6-36 iVIZION Calibration Ver.X.XX Screen**

**NOTE:** Writing a Serial No. can be performed after a Calibration is completed. To do so, Click on the “Update serial No.” Check-box (See Figure 6-36 b) if the iVIZION Device needs its current Serial No. written.


**NOTE:** If the RFID Board is not featured within the iVIZION Device, remove the check in the “Check RFID” Check-box.

7. Click on the “Start” Screen Button (See Figure 6-36 a) to begin the following three (3) sequential Sensors Calibration Procedures:


- Cash Box Sensor
- Nearly Full Sensor
- Feed-Out Sensor

Calibration will be performed in the above order while one of either “**Box RUNNING**”, “**Nearly Full RUNNING**” and “**Feed-Out RUNNING**” messages is showing on the Screen (See Figure 6-37).

**NOTE:** If the “Check RFID” Check-box shown in Figure 6-37a is unchecked, the “Calibration Information” Screen shown in Figure 6-38 will appear. When present, click on the “OK” Screen Button (See Figure 6-38 a) to begin the Calibration Procedure.

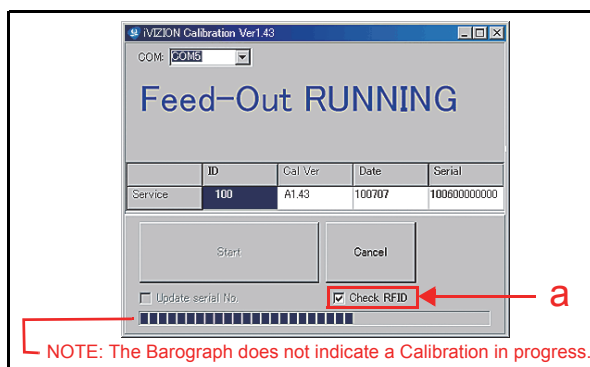


**Figure 6-37 Feed-Out Calibration Proceeding Screen**

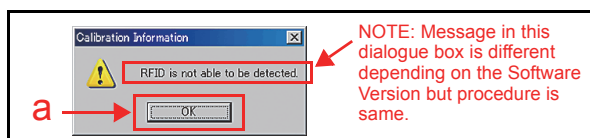

**Figure 6-38 Calibration Information Screen 1**




Once the three (3) Sensor Calibration Procedures are complete, the “**Calibration Information**” Screen shown in See Figure 6-39 will appear.

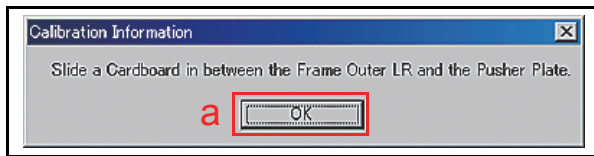


**Figure 6-39 Calibration Information Screen 2**

8. Remove the Cash Box to set the Pusher Plate for the Home Position Sensor Calibration Procedure.
9. Open the Cash Box and press down on the Pusher Release Plate (See Figure 6-40 a & b).

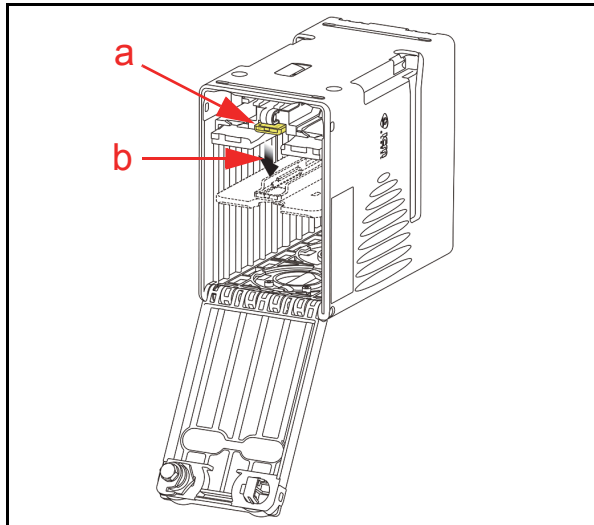


**Figure 6-40 Pusher Plate Release Location**

10. Hold the Pusher Plate down (See Figure 6-41 a) and slide a 80x50mm piece of Cardboard (See Figure 6-41 b) in between the Frame Outer LR Guides (Figure 6-41 c) and the Pusher Plate.

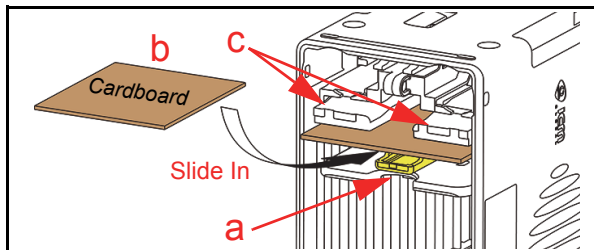


**Figure 6-41 Cardboard Setting Location**

11. Reseat the Cash Box back into its Frame position.
12. Click on the “OK” Screen Button (Review Figure 6-39 a) to begin the following four (4) Sensor Calibration Procedures:
  - Home Position Sensor
  - Feed-In Sensor
  - Entrance Sensor
  - Exit Sensor
 Calibration will be performed in the above order while one of “**Home Position RUNNING**”, “**Feed-In RUNNING**”, “**Entrance RUNNING**” or “**Exit RUNNING**” messages is showing on the Screen (See Figure 6-42).

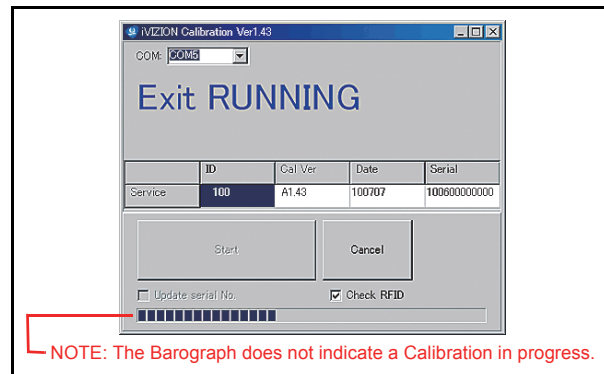


**Figure 6-42 Exit Calibration Proceeding Screen**

Once the four (4) Sensors Calibration Procedures are complete, the “**Calibration Information**” Screen shown in Figure 6-43 will appear.

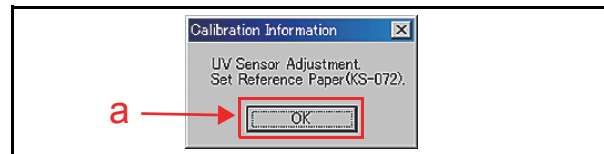


**Figure 6-43 Calibration Information Screen 3**

13. Remove the Cash Box and remove the piece of Cardboard, then reseat the Cash Box into the iVIZION® Device again.
14. Place Reference Paper KS-072/KS-089 into the iVIZION® Device (See “Placing the KS-072/KS-089 Reference Paper” on page 6-7 of this Section).
15. Click on the “OK” Screen Button (See Figure 6-43 a) to begin the following two (2) UV Sensor Calibration Procedures:
  - Lower UV Sensor
  - Upper UV Sensor
 Calibration will be performed in the above alphabetic order while “**UV RUNNING**” is showing on the Screen (See Figure 6-44).

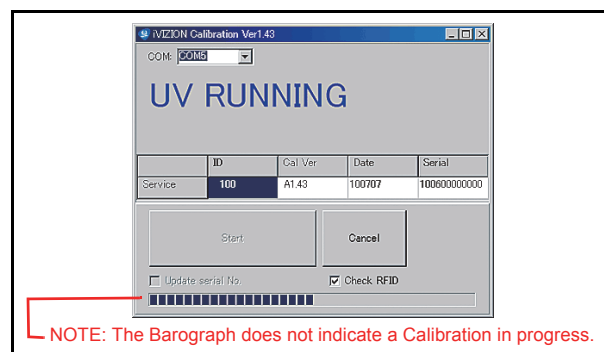


**Figure 6-44 UV Calibration Proceeding Screen**

Once the UV Sensor Calibration is complete, the “**Calibration Information**” Screen shown in Figure 6-45 will appear.

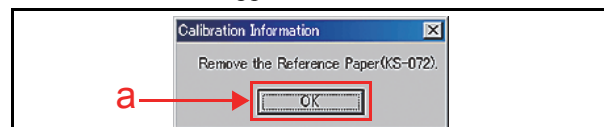

**Figure 6-45 Calibration Information Screen 4**

16. Remove the KS-072/KS-089 Reference Paper and click on the “OK” Screen Button (See Figure 6-45 a) to begin the UV Sensor Non-Paper Calibration. Once the UV Sensor Non-Paper Calibration is complete, the “**Calibration Information**” Screen shown in Figure 6-46 will appear.

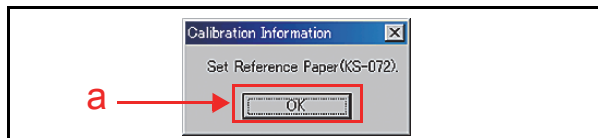


**Figure 6-46** Calibration Information Screen 5

17. Place the KS-072/KS-089 Reference Paper back into the iVIZION® Device (See “Placing the KS-072/KS-089 Reference Paper” on page 6-7 of this Section).
18. Click on the “OK” Screen Button (See Figure 6-46 a) to begin the following three (3) CIS Calibration Procedures:


- CIS Transmissive
- CIS Upper
- CIS Lower

Calibration will be performed in the above order while “**CIS RUNNING**” is showing on the Screen (See Figure 6-47).

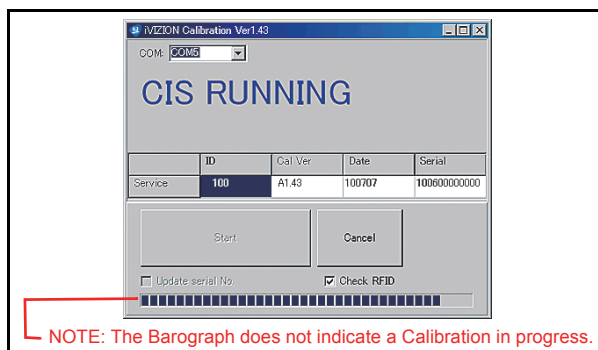


**Figure 6-47** CIS Calibration Proceeding Screen

Once the CIS Calibration is complete, the “**Calibration Information**” Screen shown in Figure 6-48 will re-appear.

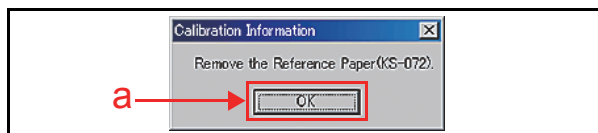


**Figure 6-48** Calibration Information Screen 6

19. Remove the KS-072/KS-089 Reference Paper and click on the “OK” Screen Button (See Figure 6-48 a) to begin the CIS Sensor Non-Paper Calibration Procedure. Once the CIS Non-Paper Calibration Procedure is complete, the Calibration Value will be written to the EEPROMs located on the Sensor Board and the CPU Board (See Figure 6-49).

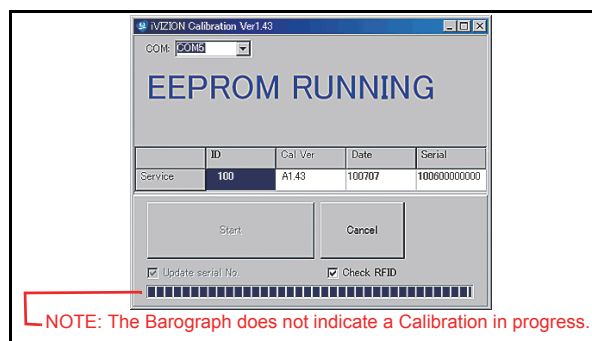

**Figure 6-49** Calibration Value Writing Screen

20. When the Calibration Value writing EEPROM writing is complete, the “**Calibration Information**” Screen shown in Figure 6-50 will appear.
21. Click on the “OK” Screen Button (See Figure 6-50 a).

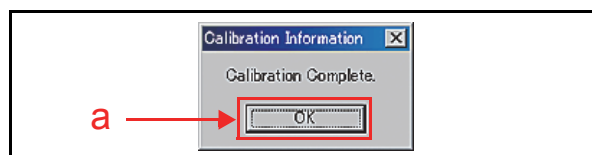

**Figure 6-50** Calibration Complete Screen

This completes the Paper Calibration Procedures. Refer to “Reference Paper Use Precautions” on page 1-4 to properly store and prevent damage to the KS-072/KS-089 Reference Paper.


### CALIBRATION PLUS SERIAL NUMBER WRITING

When the Sensor Calibration procedure is complete, the capability to write the Serial Number into the iVIZION® Unit becomes possible. To write a Serial Number into Memory, proceed as follows:

1. Complete the initial Sensor Calibration Procedure first (See “Calibration Only” on page 6-8 of this Section).

*NOTE: To perform the “Writing Serial No.” process, click on the “Update serial No.” Check-box when the “iVIZION Calibration Ver.X.XX” Screen is active (See iVIZION Calibration Ver.X.XX Screen Figure 6-36 b on page 6-8 of this Section).*


2. Once the CIS Sensor Calibration is complete, the “**iVIZION Calibration Service Suite Edition**” Screen shown in Figure 6-51 will appear.

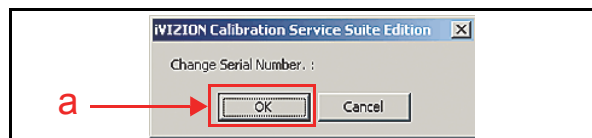

**Figure 6-51** iVIZION Calibration Service Suite Edition Screen


3. Click on the “OK” Screen Button (See Figure 6-51 a). The “**Setting Manufacture No**” Screen shown in Figure 6-52 will then appear.

- Click on either the “▲” or “▼” Triangle Indication Buttons in each Serial Number Box located at the bottom of the Screen to either increase or decrease the numbers to change (See Figure 6-52 a).
- Click on the “✓ OK” Screen Button located on the right side of the Screen (See Figure 6-52 b).

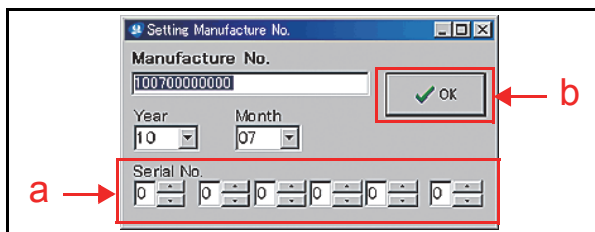


**Figure 6-52** Setting Manufacture No. Screen

The Calibration Value and the Serial Number will then be written into the EEPROMs on the Sensor and the CPU Boards (See Figure 6-53).

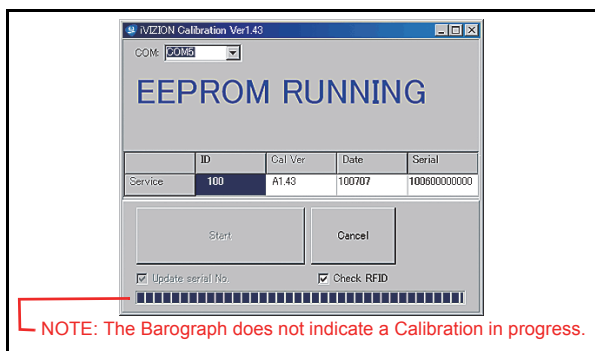

**Figure 6-53** Calibration Value Writing Screen

When the data writing into the EEPROM is complete, the “Calibration Information” Screen shown in Figure 6-54 will appear.

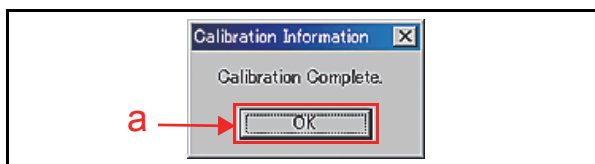

**Figure 6-54** Adjustment Info Screen

- Click on the “OK” Screen Button (See Figure 6-54 a).

This completes the Serial Number Writing Procedure.

## Performance Tests


This portion explains the iVIZION® Performance Test Procedures. The following two (2) methods exist to perform this Performance Test Procedure.

- Performance Test using a PC
- Performance Test using the External DIP Switches.

Choose one (1) of the two (2) above Performance Test Procedures by selecting the one related to the particular circumstance desired.

### Performance Test Tool Requirement using a PC

Figure 6-55 illustrates and list identifies the Tools and Equipment Interconnects required to perform a PC iVIZION® Performance Test.

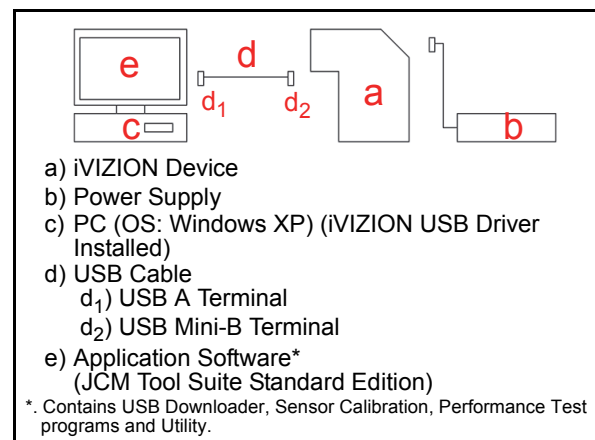

**Figure 6-55** PC Performance Test Tools Required

### Performance Test Items using a PC

Table 6-2 lists the available Performance Test Items and their purpose using a PC for testing.

**Table 6-2** PC Performance Test Items

No.	Test Item	Test Purpose	Status LED	
			Stand-by	Operating
1	Motor Normal Rotation	Testing the Transport Motor rotation in a Banknote intake direction	Blue Lit	Yellow Flashes
2	Motor Reverse Rotation	Testing the Transport Motor rotation in a Banknote reject direction		
3	Stacker Motor	Testing the Stacker Motor's movement		
4	Cycle Movement	Testing sequential movement from Banknote transportation to stacking at regular intervals without Banknotes		
5	Status LED Indication	Testing the Status LED Indications		Red
				Green
				Blue

**Table 6-2 PC Performance Test Items**

No.	Test Item	Test Purpose	Status LED	
			Stand-by	Operating
6	Sensor ON/OFF	Testing each Sensor's Performance	Blue Lit	Blue Lit
7	DIP Switch ON/OFF	Testing the 8-Position DIP Switches Performance		Blue Lit
8	Banknote Acceptance	Testing Transportation, Validation, Stacking and Reject Performance, and the Vend Signal Output		Extinguished (Out)
9	ICB Setting (Reading Ticket)	Setting the ICB Enable, Disable and Machine No. Functions.		Extinguished (Out)


### PC Performance Test Preparation

Perform following steps to begin the Performance Test Preparation Procedure:


1. Turn the iVIZION® Unit's Power Switch **OFF**.
2. Remove the Transport Unit from the Frame.
3. Set 8-Position DIP Switch #8 to **ON**.

**Figure 6-56 DIP Switch #8 Set ON**


4. Place the Transport Unit into the Frame.
5. Turn the iVIZION® Unit's Power Switch **ON**. The Status LED will light a steady **Blue** Color.
6. Launch the "JCM Tool Suite Standard Edition" Application. The Screen shown in Figure 6-57 will appear when the application becomes active.

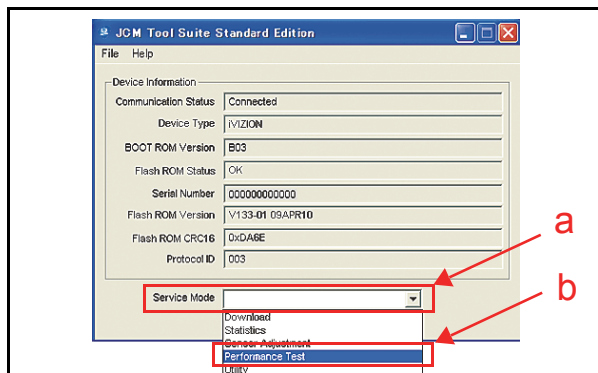**Figure 6-57 JCM Tool Suite Standard Edition Screen**

7. Click on, and hold-down the "Service Mode" selection Pull-Down Menu (See Figure 6-57 a) and Slide-down select "Performance Test" from the Pull-Down Menu Selections (See Figure 6-57 b).
8. Activate the "iVIZION Test Item VerX.XX" Application and the Screen shown in Figure 6-58 will automatically appear.

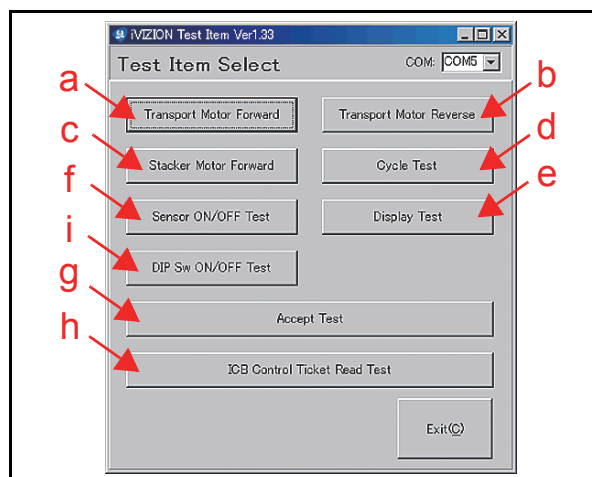**Figure 6-58 iVIZION Test Item VerX.XX Screen**

9. Click on each Screen Button to begin its related Performance Test. A Screen similar the Screen shown in Figure 6-59 will appear for each Test. For more detail concerning each Performance Test, refer to "Performance Test Items using a PC" on page 6-11 of this Section.

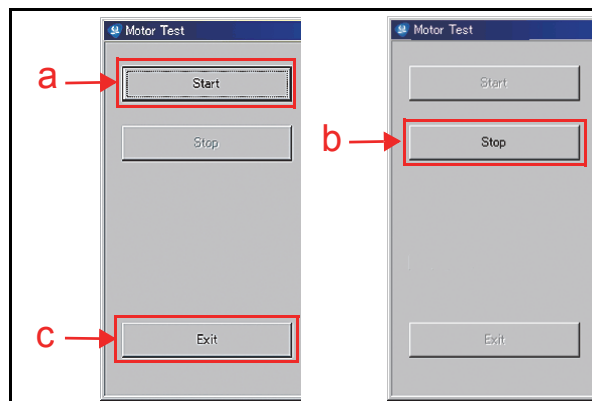**Figure 6-59 Start, Stop & Exit Screen Button**

10. Click on the related "Start" Screen Button (See Figure 6-59 a) to begin the desired Performance Test. When the desired Performance Test is complete, click on the "Stop" Screen Button (See Figure 6-59 b). If a return to the "Test Item Select" Screen is desired, click on the "Exit" Screen Button (See Figure 6-59 c).

### Performance Test Procedures

This portion provides information concerning each Performance Test Procedure.

#### ANY MOTOR TEST

Perform the following steps to test the Transport Motor's Normal Rotation, the Transport Motor's Reverse Rotation, the Stacker Motor's operation and a complete Cyclic Movement Test.

The following four (4) Motor Tests available:


- Transport Motor Normal Rotation Test
- Transport Motor Reverse Rotation Test
- Stacker Motor Test



- Cyclic Movement Test.

To run a specific Test, proceed as follows:

1. Launch the “**Test Item Select**” Screen (Refer to the “PC Performance Test Preparation” on page 6-12 of this Section).
2. Click on the desired Test Screen Button from the Menu Screen provided (Refer back to Figure 6-58 a, b, c & d).
3. Click on the “**Start**” Screen Button (Refer to Figure 6-60 a) to begin each Test.
4. Check that the Status LED is blinking at a **Yellow** Color rate. (See Table 6-3 to identify the various Status LED conditions).
5. Click on the “**Stop**” Screen Button (See Figure 6-60 b) to end each Test.
6. Click on the “**Exit**” Screen Button (See Figure 6-60 c) to return to the “**Test Item Select**” Screen.

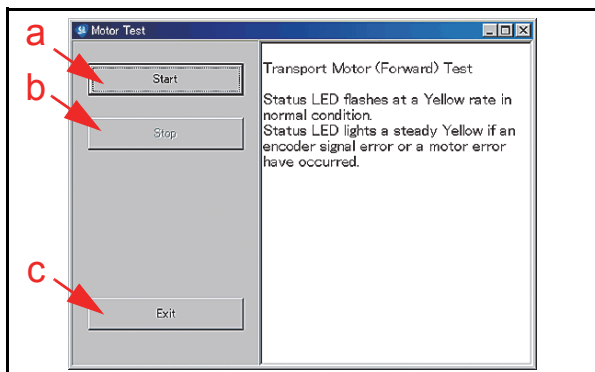

**Figure 6-60** Transport Motor Normal Forward Test Screen

Table 6-3 lists the Status LED indications for each normal or abnormal Test Item condition.

**Table 6-3** LED Indications for each condition

Test Item	Screen Button	Status LED	
		Normal	Abnormal
Transport Motor Normal Rotation	Transport motor Forward	Yellow Flashes	Lit Yellow or Extinguished (Out)
Transport Motor Reverse Rotation	Transport motor Reverse		
Stacker Motor	Stacker motor Forward		
Cyclic Movement*	Cycle Test		Red Flashes


\*. Once the Cycle Movement Test is complete, transport movement will halt for approximately 25 seconds; then start the test again. (See “Error, Jam and Reject Code Tables” on page A-2 of Appendix A in this Service Manual when the Status LED indicates an abnormal operating condition).

### LED INDICATOR TEST

Perform the following steps to test the LED Indicators.

1. Launch the “**Test Item Select**” Screen again (Refer to “PC Performance Test Preparation” on page 6-12 of this Section).
2. Click on the “**Display Test**” Screen Button (See Figure 6-58 e).

3. Click on the “**Start**” Screen Button (See Figure 6-61 a) to begin the LED Indicator Test.

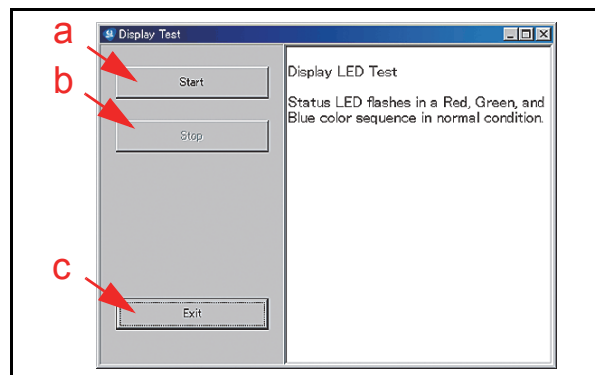


**Figure 6-61** LED Indicator Test Screen

4. Check the Status LED’s condition. When the Status LED Indicator blinks in a **Red, Green, and Blue** Color sequence, the Status LED is performing normally.
5. Click on the “**Stop**” Screen Button (See Figure 6-61 b) to end the LED Indicator Test.
6. Click on the “**Exit**” Screen Button (See Figure 6-61 c) to return to the “**Test Item Select**” Screen.

### SENSOR ON/OFF TEST

Perform the following steps to enable the Sensor ON/OFF Test.

1. Launch the “**Test Item Select**” Screen again (Refer to “PC Performance Test Preparation” on page 6-12 of this Section).
2. Click on the “**Sensor ON/OFF Test**” Screen Button (See Figure 6-58 f).
3. Click on the “**Start**” Screen Button (See Figure 6-62 a) to begin the Sensor ON/OFF Test. The current testing condition is indicated in a column adjacent to the Function being tested on the Figure 6-62 Screen.

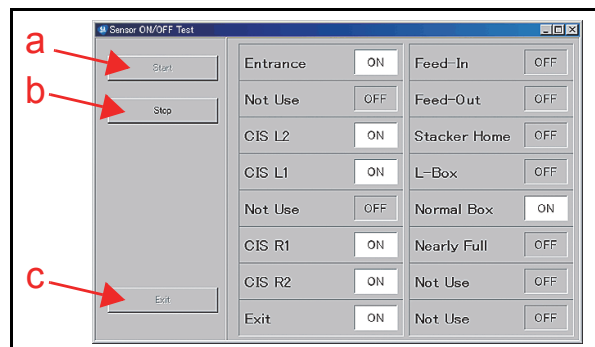

**Figure 6-62** Sensor ON/OFF Test Screen

Five (5) actions are required to check all twelve (12) Sensors in the iVIZION® Unit. Refer to Table 6-4 for each action regarding the related Sensor being tested.

When the desired test action is complete, the resulting condition of each Sensor is indicated by its Screen condition turning “ON”.

**Table 6-4** Sensor Actions and Conditions

Action	Sensor	Condition
Open the Acceptor Unit's Upper Guide	Entrance	OFF→ON
	CIS L2	
	CIS L1	
	CIS R1	
	CIS R2	
	Exit	
Open the Transport Unit's Upper Guide	Feed-In	OFF→ON
	Feed-Out	
No Action Required (Seat the Cash Box correctly in place)	Cash Box (Large Cash Box or Standard Cash Box)	OFF→ON
Remove the Cash Box from the Unit	Nearly Full	OFF→ON
Hold-down the Pusher Plate and slide a 80x50mm piece of Cardboard in-between the Frame Outer LR and the Pusher Plate*	Home Position	OFF→ON


\*. Review Figure 6-40 and Figure 6-41 on page 6-9 regarding how to set the Cardboard in place.

- Click on the “Stop” Screen Button (See Figure 6-62 b) to end the Sensor ON/OFF Test.
- Click on the “Exit” Screen Button (See Figure 6-62 c) to return to the “**Test Item Select**” Screen.

### BANKNOTE ACCEPTANCE TEST

Perform the following steps to test the transportation, validation, stacking and reject sequential performance and Vend Signal Output functions of the iVIZION® Unit.

- Launch the “**Test Item Select**” Screen again (Refer to “PC Performance Test Preparation” on page 6-12 of this Section).
- Click on the “**Accept Test**” Screen Button (See Figure 6-58 g).
- Click on the “**Start**” Screen Button (See Figure 6-63 a) to begin the Banknote Transport Test.
- Insert a Banknote into the iVIZION® Unit. The Banknote's Denomination will be indicated on a Screen similar to Figure 6-63d.

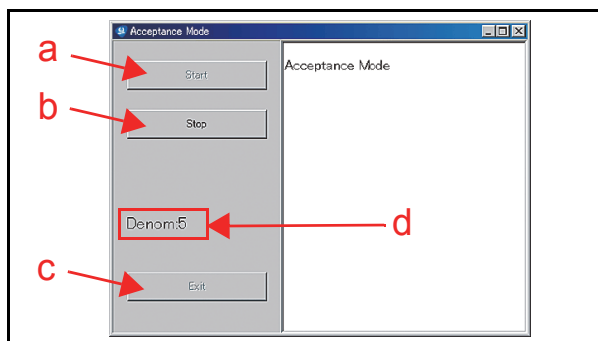**Figure 6-63** Denomination Indication Location**Table 6-5** Denomination Valuation List

Denomination	Value Indication
\$1	1
\$5	5

**Table 6-5** Denomination Valuation List (Continued)

Denomination	Value Indication
\$10	10
\$20	20
\$50	50
\$100	100

- Click on the “Stop” Screen Button (See Figure 6-63 b) to end the Acceptance Test Screen.
- Click on the “Exit” Screen Button (See Figure 6-63 c) to return to the “**Test Item Select**” Screen.




**NOTE:** If the intent is to perform other tests, close all of the Screens open on the PC, and turn the iVIZION Power Switch OFF; then, Turn the iVIZION Power Switch back ON, and begin the Performance Test Procedures over again.

### ICB FUNCTION SETTING (BARCODE COUPON)

Perform the following steps to set the ICB Enable/Disable Functions when using a Barcode Coupon.

#### To enable the ICB function:

- Launch the “**Test Item Select**” Screen again (Refer to “PC Performance Test Preparation” on page 6-12 of this Section).
- Click on the “ICB Control Ticket Read Test” Screen Button (See Figure 6-58 h).
- Click on the “Start” Screen Button (See Figure 6-64 a) to begin the ICB Function Setting.

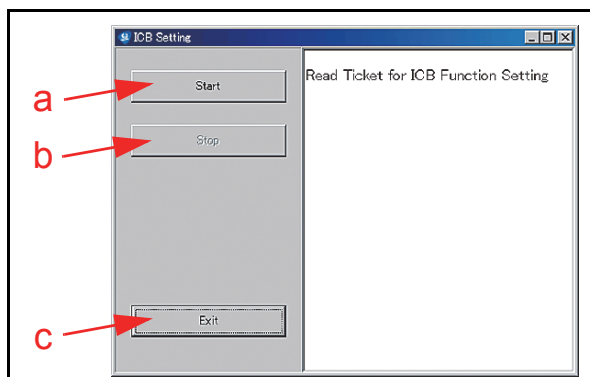**Figure 6-64** ICB Function Test Screen

- Insert an “ICB Enable Ticket” Barcode Coupon. The Status LED will blink three (3) times at a **Green** Color rate when the ICB Enable Ticket is being read correctly.
- Once the Status LED begins blinking normally, insert a “JCM Global” Barcode Coupon in order to configure the Machine Number for the iVIZION® Unit being tested. The Status LED will blink three (3) times at a **Green** Color rate when the Machine Number is being read correctly. If the Status LED blinks at a **Blue** Color rate, an error condition has occurred (See “Error, Jam and Reject Code Tables” on page A-2 of Appendix A in this Service Manual for more details).
- Click on the “Stop” Screen Button (See Figure 6-64 b) to complete the ICB Function Setting operation.

- Click on the “Exit” Screen Button (See Figure 6-64 c) to return to the “**Test Item Select**” Screen.



*NOTE: If the intent is to perform other tests, close all of the Screens open on the PC, and turn the iVIZION Power Switch OFF; then, Turn the iVIZION Power Switch back ON, and begin the Performance Test Procedures over again.*

#### To disable the ICB function:

- Launch the “**Test Item Select**” Screen (Refer to “PC Performance Test Preparation” on page 6-12 of this Section).
- Click on the “ICB Control Ticket Read Mode” Screen Button (See Figure 6-58 h).
- Click on the “Start” Screen Button (See Figure 6-64 a) to begin the ICB Function Setting operation.
- Insert an “ICB Disable Ticket” Barcode Coupon. The Status LED will blink three (3) times at a **Green** Color rate when the ICB Disable Ticket reading is properly completed. If the Status LED is blinks at a **Blue** Color rate, some error condition has occurred (See “Error, Jam and Reject Code Tables” on page A-2 of Appendix A in this Manual for more details).
- Click on the “Stop” Screen Button (See Figure 6-64 b) to finish the ICB Function Setting operation.
- Click on the “Exit” Screen Button (See Figure 6-64 c) to return to the “**Test Item Select**” Screen.



*NOTE: If the intent is to perform other tests, close all of the Screens open on the PC, and turn the iVIZION Power Switch OFF; then, Turn the iVIZION Power Switch back ON, and begin the Performance Test Procedures over again.*


#### DIP SWITCH ON/OFF TEST

Perform the following steps to test the 8-Position DIP Switch ON/OFF Functions:

- Turn the iVIZION® Power Switch to **OFF**.
- Remove the Transport Unit from the iVIZION® Unit’s upper Section.
- Set the desired DIP Switches being tested to **ON** and set DIP Switch #8 to **ON**. DIP Switch #8 will always be set to ON during all remaining Switch Tests being performed (The Figure 6-65 example shows DIP Switch #3 and #5, plus DIP Switch #8 all set to **ON**).
- Launch the “**Test Item Select**” Screen (Refer to “PC Performance Test Preparation” on page 6-12 of this Section).
- Click on the “DIP Sw ON/OFF Test” Screen Button (Review Figure 6-58 i) to begin the DIP Switch ON/OFF Test.
- Click on the “Start” Screen Button (See Figure 6-65 a). The tested DIP Switch condition will be indicated on the Screen similar to that shown in Figure 6-65. Make sure the desired DIP Switch Number is shown as “ON”.



*NOTE: If DIP Switch #3 and #5 were set during a previous procedure, the Screen will indicate “ON” in each Field Window related to their DIP Switch Number.*

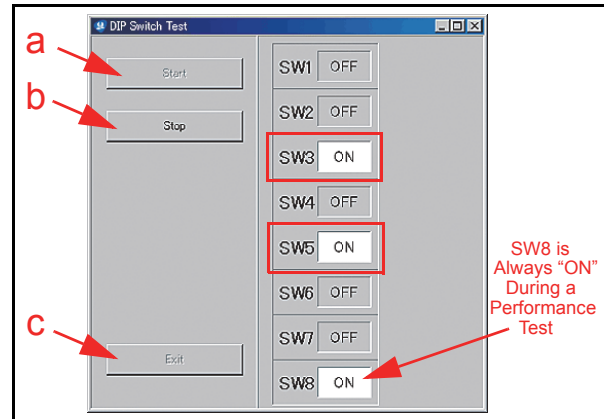


**Figure 6-65 DIP Switch ON/OFF Test Screen 1**

- Set the desired DIP Switch to **OFF** (Figure 6-66 example = DIP Switch #3 and #5).
- Make sure the desired DIP Switch Number is “OFF”. (If DIP Switch #3 and #5 were set during a previous procedure, the Screen will indicate “ON” in each Field Window related to their DIP Switch Number).
- Click on the “Stop” Screen Button (See Figure 6-66 b) to end the DIP Switch ON/OFF Test.
- Click on the “Exit” Screen Button (See Figure 6-66 c) to return to the “**Test Item Select**” Screen.
- Turn the iVIZION® Power Switch **OFF**.
- Place the Transport Unit onto the Frame.




*NOTE: If it is necessary to perform another test, make sure that DIP Switch No.8 is still set to ON.*

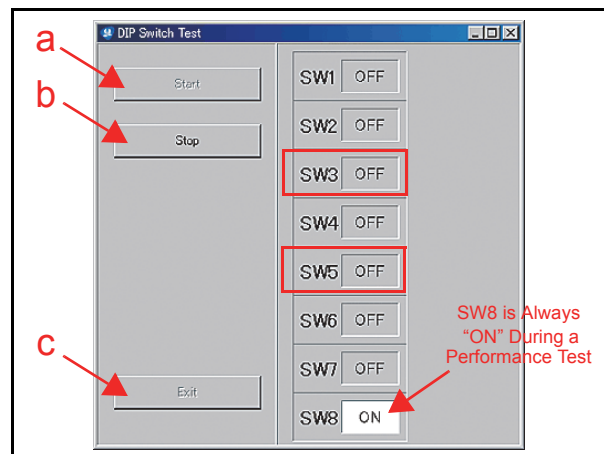

**Figure 6-66 DIP Switch ON/OFF Test Screen 2**

## Performance Test Tool Requirement using an External DIP Switch Box

Figure 6-67 illustrates and list identifies the Tools and equipment interconnects necessary to perform the iVIZION® Performance Tests using an External Switch Box.

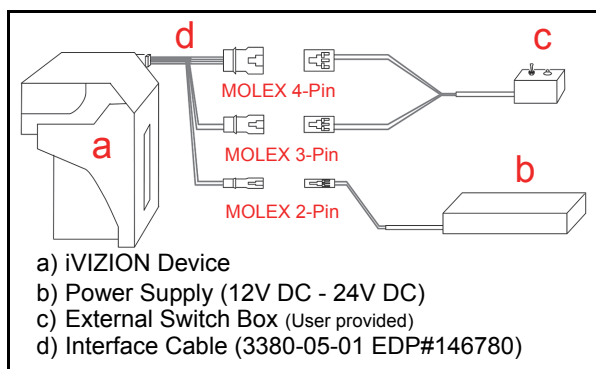

**Figure 6-67** Calibration Tool Requirements

## External DIP Switch Performance Test Procedure Settings

Table 6-2 lists the DIP Switch settings for the Performance Tests using the External Switch Box.

**Table 6-6** Performance Test DIP Switch Settings \*

No.	Test Item	Status LED		DIP Switch Setting (O = ON)							
		Stand-by	Operat-ing	1	2	3	4	5	6	7	8
1	Motor Normal Rotation	Blue Lit	Yellow Flashes	-	O	-	-	-	-	-	O
2	Motor Reverse Rotation			O	O	-	-	-	-	-	O
3	Stacker Motor			-	-	O	-	-	-	-	O
4	Cyclic Movement			-	-	-	O	-	-	-	O
5	Status LED Indication		Red	-	-	-	-	O	-	-	O
			Green	-	-	-	-	O	-	-	O
			Blue	-	-	-	-	O	-	-	O
6	Banknote Accept-ance		Exting-uished (Out)	O	O	O	O	-	-	-	O
7	ICB Setting (Reading Ticket)			O	-	-	O	-	-	-	O

\*. NOTE: The Sensor ON/OFF Test and the DIP Switch ON/OFF Test are ONLY available when using the PC procedure!

## Performance Tests with External Switch Procedures

Perform the following steps to test the Motor Normal Forward and Reverse Rotation, the Stacker Motor, the Cyclic Movement Test, the Status LED Indication Test, the Banknote Transportation and the ICB Function Setting Performance Tests.

1. Turn the iVIZION® Power Switch **OFF**.
2. Remove the Transport Unit from the Frame.
3. Set the appropriate DIP Switch(es) to "**ON**" for the test desired using the 8-Position DIP Switch (See Table 6-6).
4. Place the Transport Unit back onto the Frame.
5. Connect the third the fourth Pin Connector of the External Switch Box Cable to the corresponding Connector Pins of the five (5) Pin Plug located at the rear side of the iVIZION® Transport Unit
6. Set the External Switch Box Switch to the position away from the Status LED on the Box.
7. Turn the iVIZION® Power Switch to **ON**. The iVIZION® Status LEDs will indicate Stand-by Mode when the Status LED on the iVIZION® Lights a steady **Blue** Color, and the Status LED on the External Switch blinks at a **Red** Color rate.
8. Turn the External Switch Box Switch toward the iVIZION® status LED on the Box. The desired Test selected by DIP Switch Positions will then begin (Refer to Table 6-6 "Performance Test DIP Switch Settings" on page 6-16 of this Section for each test and its resulting Test indication).
9. Return the External Switch Box Switch to the position away from the iVIZION® Status LED on the Box again, and the current Test being run will end. If other Switch Box Tests are necessary, restart from Step 1 at the beginning of this procedure.



## iVIZION Utility Tools


This portion provides information regarding each iVIZION® Service Mode setting procedure.

The following two (2) Tool setting types exist when using the iVIZION Utility Tools:

- CIS Image Views
- ICB Function Settings.

### ICB/Image Setting Tool Requirements

The Tools listed in Figure 6-68 are required to set or change each iVIZION® ICB Setting.

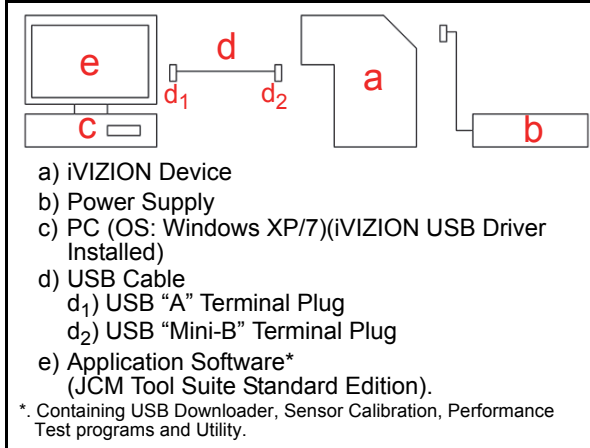

**Figure 6-68** ICB Setting Tool Requirements




**NOTE:** The ICB Function Status is initially Factory Set to "INHIBIT" as a standard function. Therefore, the iVIZION Unit's ICB must be first initialized using the USB Tool Suite Utility Options. Refer to the JCM ICB Installation Guide for exact programming descriptions and operational details.

### ICB/Image Setting Change Preparation

Perform the following steps to set or reset the ICB Functions.

1. Turn the iVIZION® Unit's Power Switch to **ON**.
2. Launch the "JCM Tool Suite Standard Edition" Application. The Figure 6-69 Screen will appear when the application becomes active.
3. Click on, and hold-down on the "Service Mode" selection Pull-Down Menu (See Figure 6-69 a), and Slide-down select "Utility" from the Pull-Down Menu Sections (See Figure 6-69 b). The "iVIZION Utility Tool Version X.XX for Suite Edition" Application Menu selection Screen shown in Figure 6-70 will automatically appear.

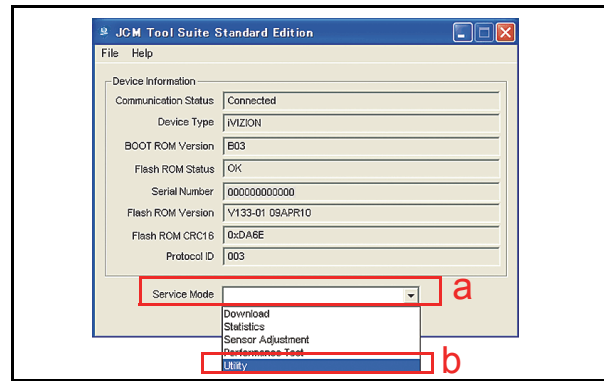


**Figure 6-69** JCM Tool Suite Standard Edition


### CIS Image Tool

The CIS Image Tool provides graphic views of the scanned Banknote images directly. This feature is available to confirm the last stacked Banknote denomination by presenting its scanned front and back images.


1. Click on the large "1) CIS IMAGE" Screen Button located on the "iVIZION Utility Tool" Screen (See Figure 6-70 a).
2. Confirm that the "CIS Image" Screen shown in Figure 6-71 appears.
3. Click on the "Read" Screen Button (See Figure 6-71 a) to see an image of the last scanned Banknote's upper and lower surface images on the Screen (See Figure 6-72 b & c).
4. Click on the "File Save" Screen Button (See Figure 6-71 b) if necessary to save the data.
5. Click on the "File Read" Screen Button (See Figure 6-71 c) to retrieve the saved file data.

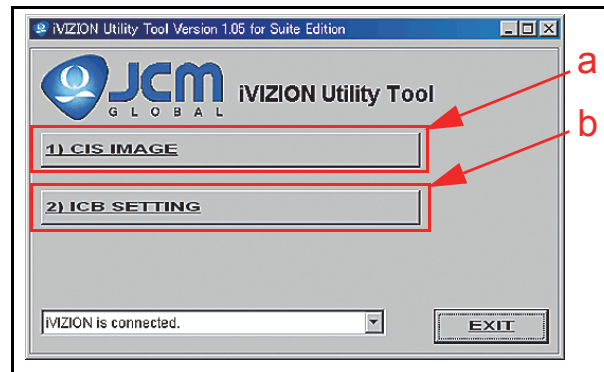

**Figure 6-70** iVIZION Utility Tool Version X.XX for Suite Edition Screen 1

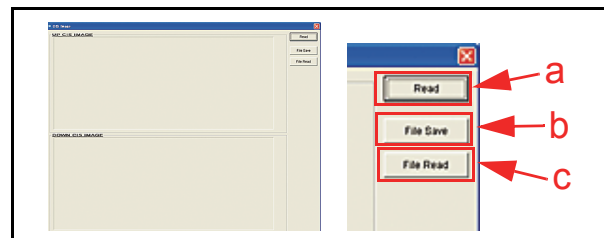

**Figure 6-71** Empty CIS IMAGE Screen

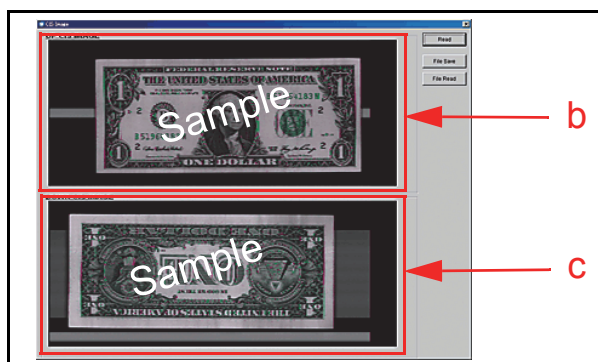

**Figure 6-72** Last Acceptance CIS IMAGE Screen

**NOTE:** The CIS Image data will not be retained if the iVIZION's Power Supply is turned OFF after stacking the last Banknote!

### ICB Function Setting

This portion provides information about each Screen Button located on the “ICB Function” Screen shown in Figure 6-74.


The following three (3) setting types are available for use with the ICB Functions:

- Setting the ICB Enable/Disable Function
- Setting the Machine Number
- Setting the ICB Inhibit Function.

### SETTING ICB ENABLE/DISABLE FUNCTIONS


The following portion explains each ICB setting when activated:

1. Click on the large “**2) ICB SETTING**” Screen Button (See Figure 6-73 a) located on the “iVIZION Utility Tool” Screen.

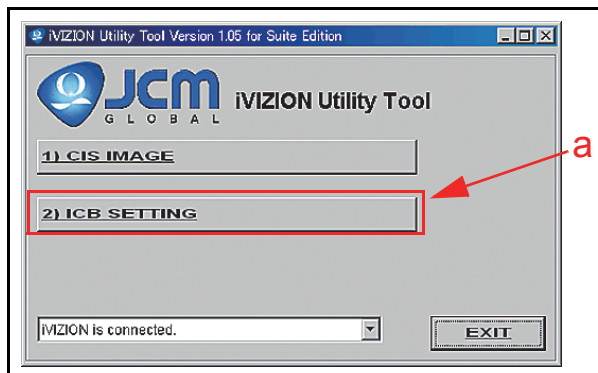

**Figure 6-73** iVIZION Utility Tool Version X.XX for Suite Edition Screen 2

2. Confirm that the “ICB Function” Screen shown in Figure 6-74 appears. Seven (7) Screen Buttons exist on this Screen.

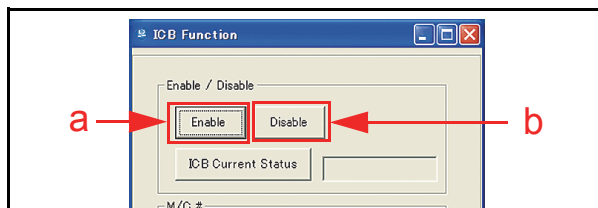

**Figure 6-74** ICB Function Screen

### Enabling the ICB Function

To set the ICB “Enable” Function when an RFID Circuit Board, is installed in the iVIZION® Unit.

**NOTE:** If the Cash Box is set to “System Inhibit” or if the RFID Circuit Board IS NOT installed, the Status LED will flash at a **Blue** Color rate to notify that an error exists (See Table 6-7 on page 6-20 of this Section to resolve this issue).

**NOTE:** To set the Cash Box setting “Enable” from “System Inhibit”, the Read-Write Tool is required.


To set ICB Enable proceed as follows:

1. First, confirm that the Cash Box setting is set to “System Enable” (See Figure 6-83 b).

**NOTE:** Confirm “System Enable” condition by “Get ICB System Status” function (See Figure 6-83 a).

2. Then click on the “Enable” Screen Button (See Figure 6-74 a) to activate the ICB Function.
3. When the ICB Function is correctly enabled, the “**ICB Successfully Enabled.**” pop-up Dialog Message Window shown in Figure 6-75 will appear.
4. Click the “OK” Screen Button (See Figure 6-75 a) to accept the reported message.

**NOTE:** When ICB is Enabled, a Machine Code Number can be assigned. See “Setting the Machine Code Number (M/C #)” on page 6-19.

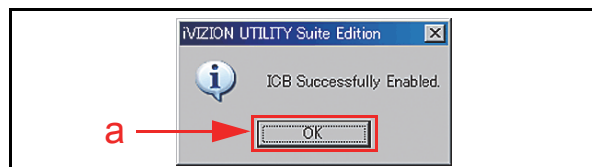

**Figure 6-75** Enable Setting Completion

### Disabling the ICB Function

The ICB “Disable” Function is used when an RFID Circuit Board IS NOT installed or the ICB Function is not being used.


**NOTE:** If the ICB Function is “Enable” when the RFID Circuit Board IS NOT installed, the Status LED will flash at a **Blue** Color rate to notify that an error exists (See Table 6-7 on page 6-20 of this Section to resolve this issue).

To set ICB Disable proceed as follows:

**NOTE:** If the RFID Circuit Board IS installed, set the Cash Box to “System Inhibit” (See Figure 6-81 on page 6-19).

1. Then click on the “Disable” Screen Button (See Figure 6-74 b) to disable the ICB Function.
2. When the ICB Function is correctly disabled, the “**ICB Successfully Disabled**” pop-up Dialog Message Window shown in Figure 6-76 will appear.

- Click the “OK” Screen Button (See Figure 6-76 a to accept the reported message).

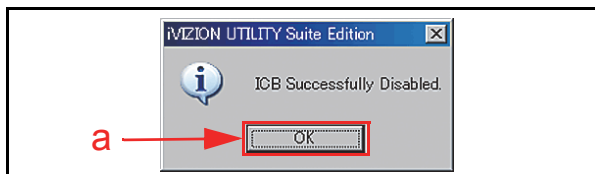


**Figure 6-76** Disable Setting Completion

### ICB Current Status Screen Button

To check the current ICB Enable/Disable Setting Status proceed as follows:

- Click on the “ICB Current Status” Screen Button (See Figure 6-77 a).
- The Current ICB Enable/Disable Status will appear in a Field Window next to the “ICB Current Status” Screen Button (See Figure 6-77 b).

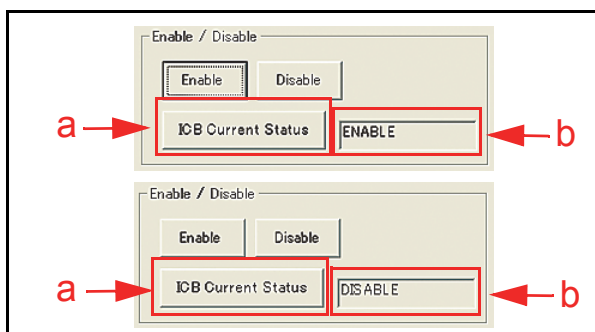


**Figure 6-77** ICB Current Status Screen

### Setting the Machine Code Number (M/C #)

This setting allows a unique fourteen (14) digit Machine Code Number to be entered into the iVIZION®. The Machine Number helps to identify to which Game Machine the iVIZION® belongs, and avoids the using of an assigned Cash Box in another Game Machine.

To enter and set a Machine Code Number, proceed as follows:

- Type the fourteen (14) Machine Code Number in the Text Field Window located next to the “Set M/C” Screen (See Figure 6-78 b).
- Click on the “Set M/C” Screen Button (See Figure 6-78 b) to set the Machine Number.

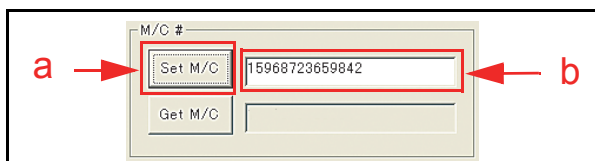


**Figure 6-78** Machine Number Setting



**NOTE:** When the Machine Code Number is less than fourteen (14) digits in length, add zeros “0” to the head of the Machine Number in order to create a recognizable 14 digit Code Number.


- When the Machine Number is correctly set, the “M/C# Set Successfully” pop-up Dialog Message Window shown in Figure 6-79 will appear.
- Click the “OK” Screen Button (See Figure 6-79 a) to accept the reported message.

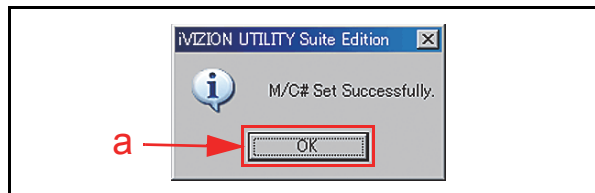

**Figure 6-79** Machine Number Setting Completion

To retrieve the current Machine Code Number set in an iVIZION® Unit proceed as follows:

- Click on the “Get M/C” Screen Button (See Figure 6-80 a).
- The existing fourteen (14) Machine Code Number will appear in the Text Field Window located next to the “Get M/C” Screen Button (See Figure 6-80 b).

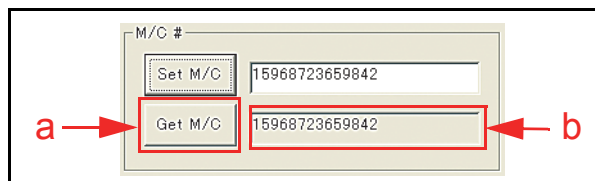


**Figure 6-80** Machine Number Indication

### Setting Inhibit ICB System

The Inhibit ICB System Function is used to get the status of the RFID Module in the Cash Box or disable the RFID Module in the Cash Box.

To set the Cash Box ICB Function to “Inhibit” when the RFID Circuit Board is installed proceed as follows:

- Click on the “Inhibit” Screen Button (See Figure 6-81 a).

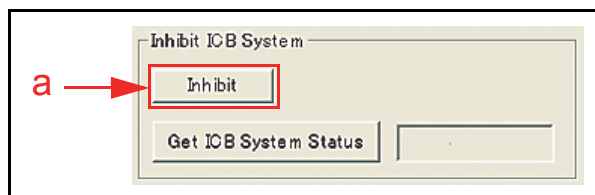


**Figure 6-81** Inhibit Screen Button Location



**NOTE:** The JCM Factory Default Setting is “Inhibit” (See Table 6-7).

- When the ICB Inhibit Function in a Cash Box is properly set, the “ICB Inhibition Successfully” pop-up Dialog Message Window shown in Figure 6-82 will appear.
- Click on the “OK” Screen Button (See Figure 6-82 a) to accept the reported message.

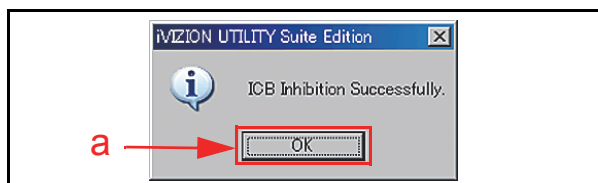


**Figure 6-82** Inhibit Setting Completion

*NOTE: To "System Enable" a Cash Box, it must be place on a Read-Write Tool and be initialized.*

To retrieve the current ICB Function Setting in a Cash Box proceed as follows:

1. Click on the "Get ICB System Status" Screen Button (See Figure 6-83 a).

2. The existing ICB Inhibit Function set in the Cash Box will appear in the pop-up Dialog Message Window next to the "Get ICB System Status" Screen Button (See Figure 6-83 b).

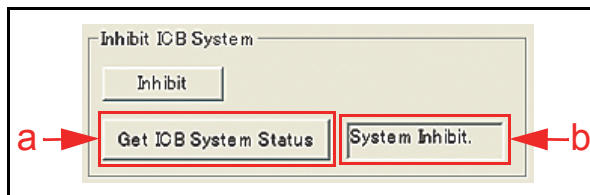

**Figure 6-83** ICB System Status Indication

### ICB Function Operational Condition

Table 6-7 lists various functional combinations available for the iVIZION® Unit, RFID Board, Cash Box and ICB Function Settings (Refer to "Error, Jam and Reject Code Tables" on page A-2 of Appendix A in this Manual for more details concerning each error type).

**Table 6-7** ICB Setting Function Operational Condition

iVIZION	RFID Board	Cash Box	Initialization Cash Box	Installed the same Machine	Installed another Machine	Read/Write Tool Data Correction	Checksum Errors
Enable	Installed	System Enable	OK	OK	Not Available	Not Available	Not Available
		System Inhibit	Not Available	Not Available	Not Available	Not Available	Not Available
	NOT Installed	-	Not Available	Not Available	Not Available	Not Available	Not Available
Disable	Installed	System Enable	Not Available	Not Available	Not Available	Not Available	Not Available
		System Inhibit	OK	OK	OK	OK	OK
	NOT Installed	-	OK	OK	OK	OK	OK



# iVIZION® Series

## Next-Generation Banknote Acceptor Unit

### Section 7

#### 7 EXPLODED VIEWS & PARTS LISTS


This section provides product exploded views and parts lists for the iVIZION® Series Next-Generation Banknote Acceptor Unit. This section contains the following information.



**NOTE:** When replacing parts, make sure that the parts are functionally the same as advised by JCM.

- iVIZION Entire Unit View
- iVIZION Validation Unit Exploded View
- iVIZION Transport Unit Exploded View
- iVIZION Frame Unit Exploded View
- iVIZION Cash Box Unit Exploded View
- iVIZION Upper Part Exploded View
- iVIZION Plate Assembly Exploded View
- iVIZION Pusher Unit/Assembly Exploded View
- iVIZION Option Unit Exploded View


#### iVIZION Entire Unit View

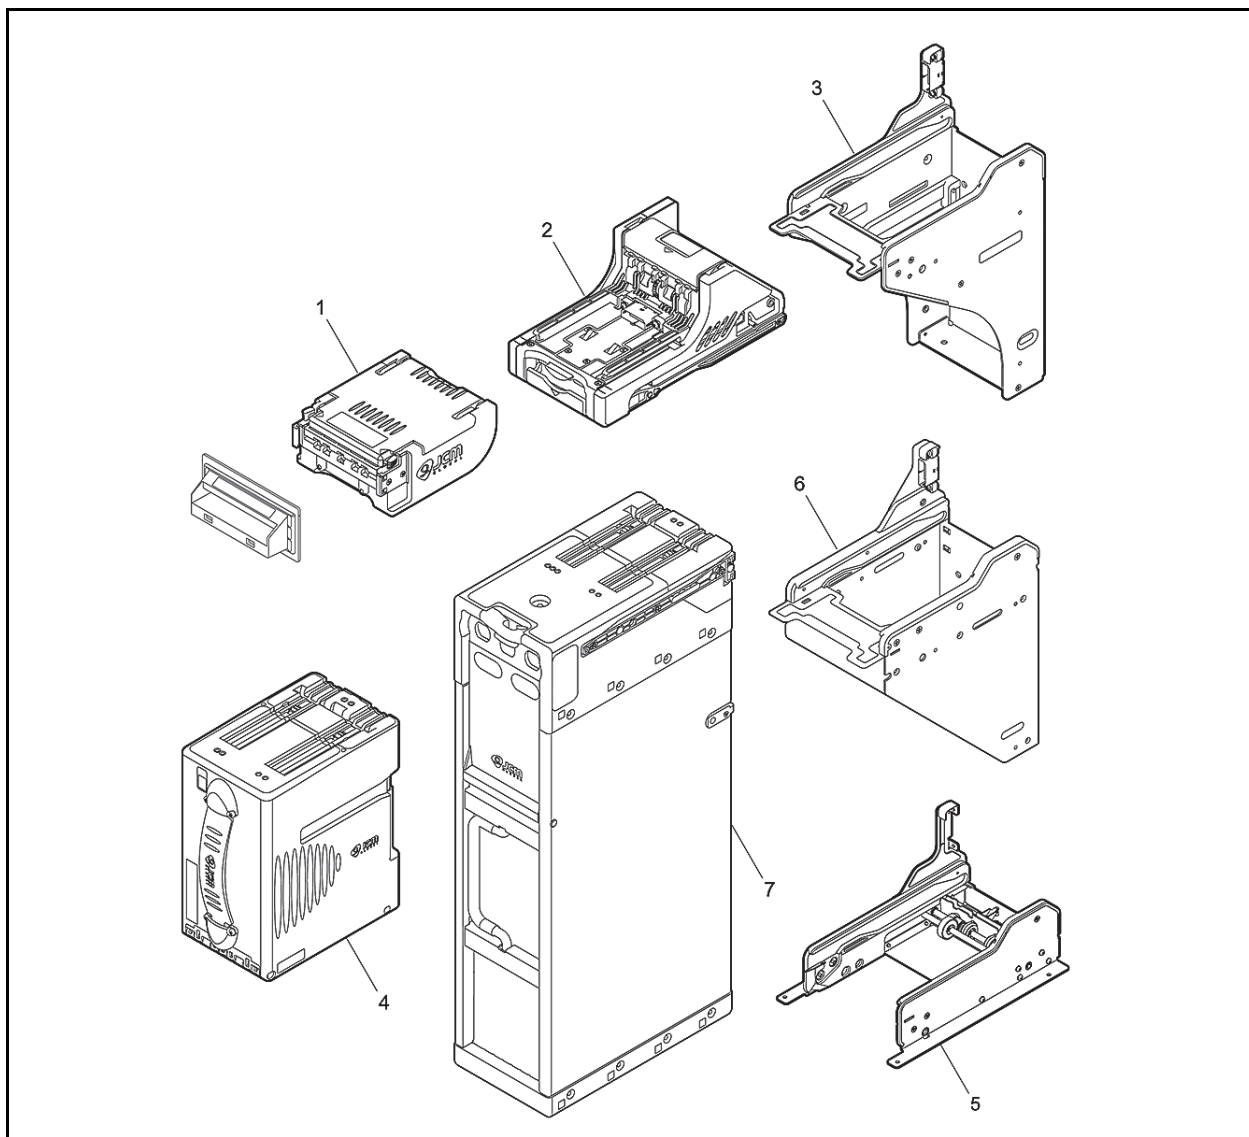

**Figure 7-1** iVIZION Entire Unit View

**iVIZION Entire Unit Parts List****Table 7-1** iVIZION Entire Unit Parts List


Ref No.	EDP No.	Description	Qty	Remark
1	148069	iVIZION Validation Unit	1	
2	148070	iVIZION Transport Unit	1	
3	149468	iVIZION Frame Unit	1	
	219100	iVIZION Frame Unit without Nut	1	
4	214104	iVIZION Cash Box (S)	1	
	214105	iVIZION Cash Box (L)	1	
5	206387	iVIZION LD Frame Unit	1	
6	226099	iVIZION HC Frame Unit	1	
7	226100	iVIZION HC Cash Box	1	

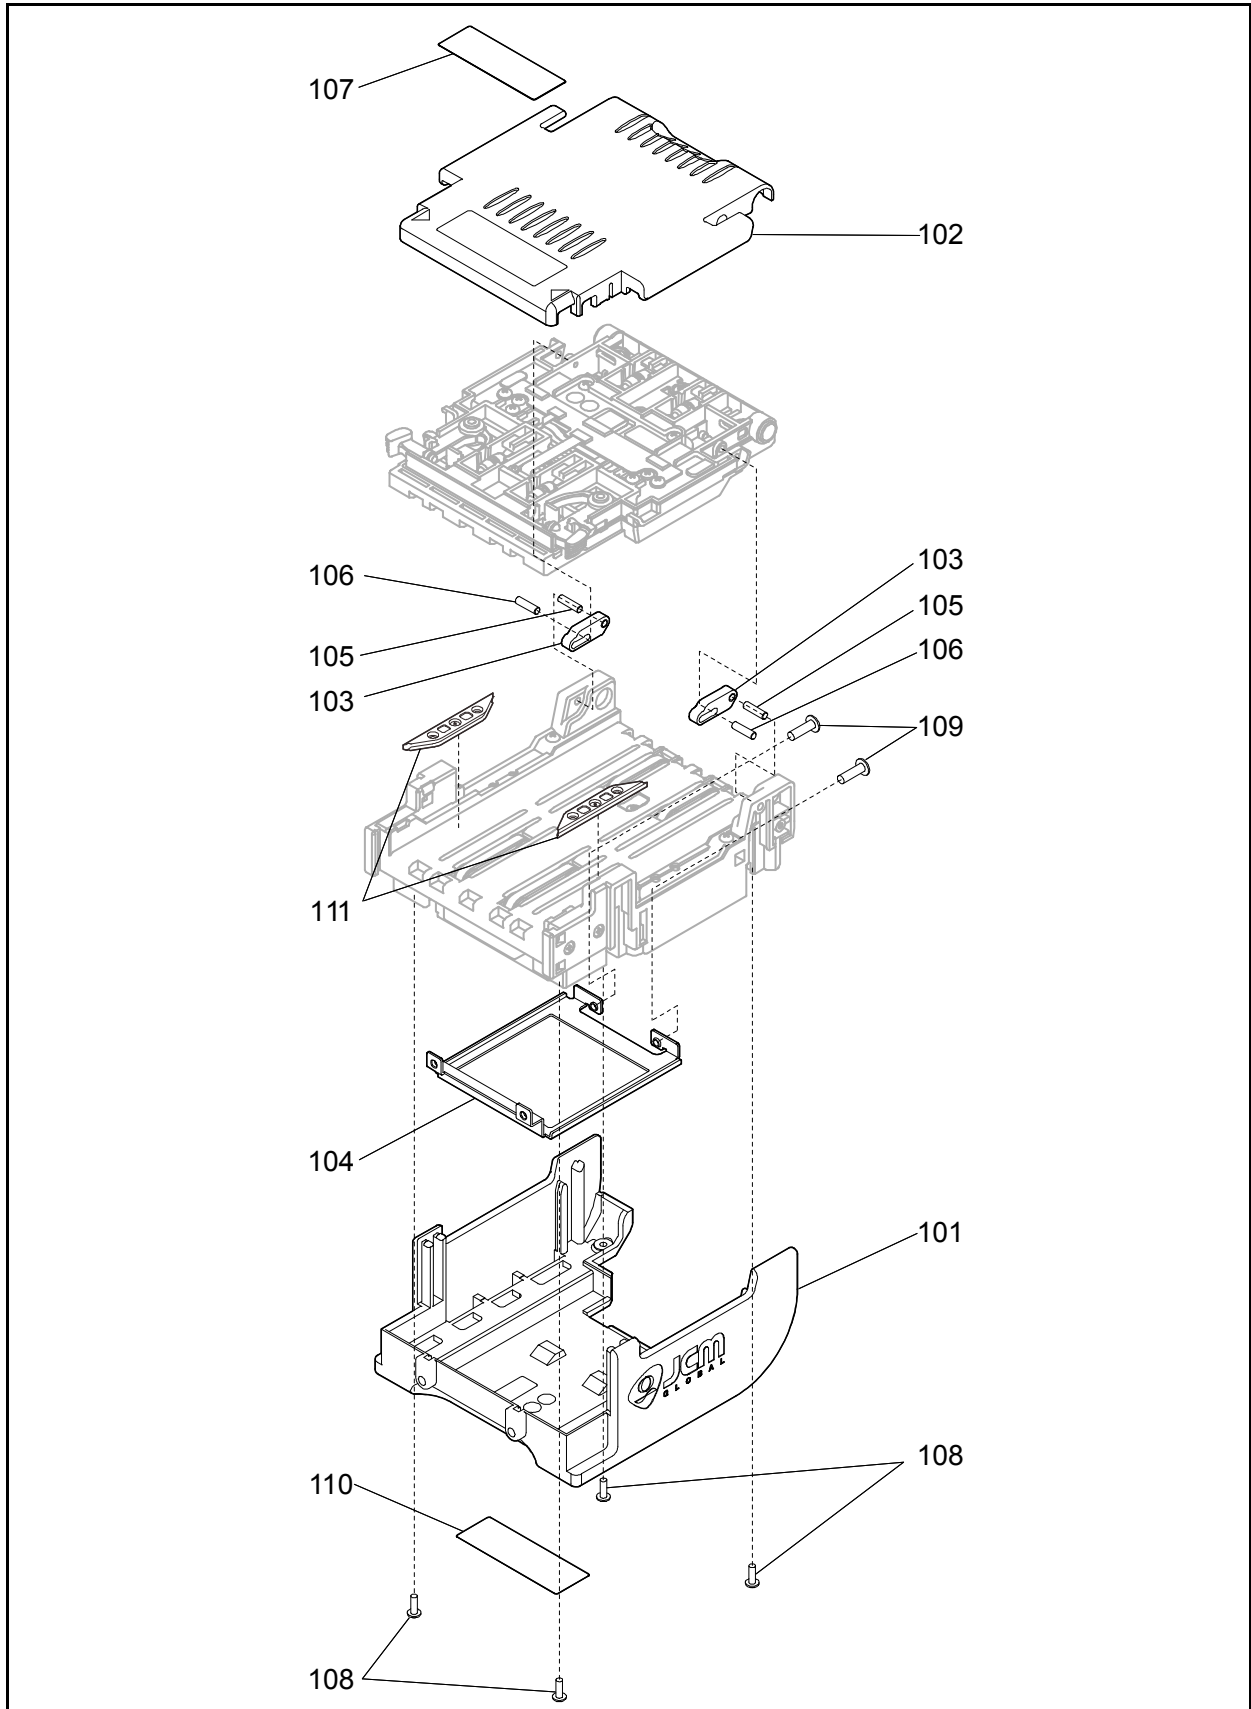**iVIZION Validation Unit 1 Exploded View****Figure 7-2 iVIZION Validation Unit 1 Exploded View**

**iVIZION Validation Unit 1 Parts List****Table 7-2** iVIZION Validation Unit 1 Parts List

Ref No.	EDP No.	Description	Qty	Remark
101	147804	iVIZION Head Cover A	1	
102	147805	iVIZION Head Cover B	1	
103	147828	Head Open Stopper	2	
104	147768	Grounding Plate A	1	
105	147972	Stopper Fulcrum Pin	2	
106	147973	Stopper Pin	2	
107	151783	iVIZION Sticker	1	
108	106002	2.6×8 Phillips, Self-Tapping, Binding Head Screw 3M (Black)	4	
109	045969	M2.6×10 Pan Head Screw with W Washer 3M	2	
110	187255	Validation Serial Label	1	
111	214671	Banknote Guide 72	2	North America units only (Production Install Only)

## iVIZION Validation Unit 2 Exploded View

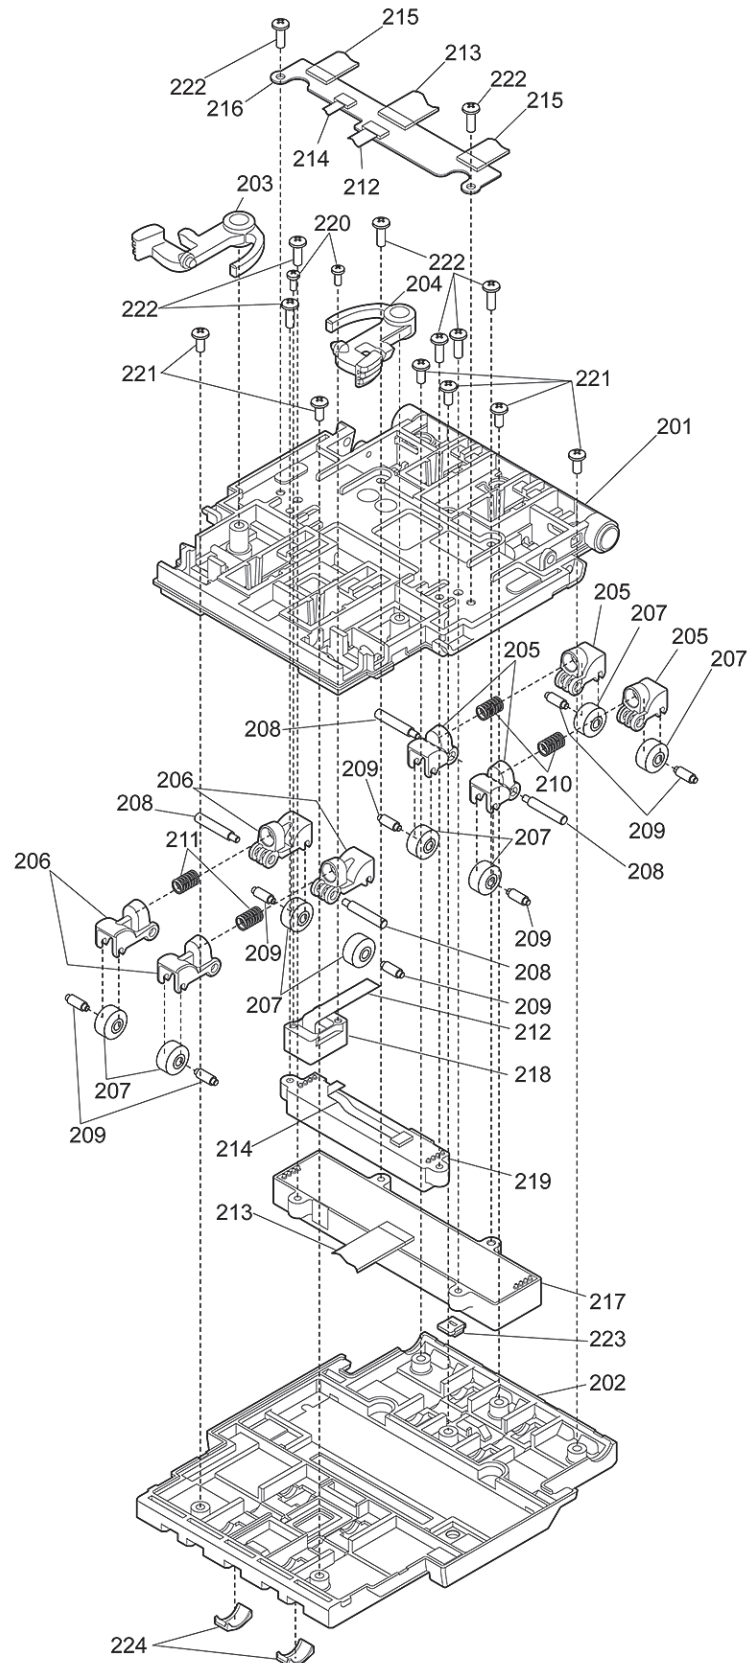


**Figure 7-3** iVIZION Validation Unit 2 Exploded View

**iVIZION Validation Unit 2 Parts List****Table 7-3** iVIZION Validation Unit 2 Parts List

Ref No.	EDP No.	Description	Qty	Remark
201	147803	iVIZION Head Frame B	1	
202	236142	iVIZION Head Bill Guide 85B	1	
203	147813	Head Open Latch A	1	
204	147823	Head Open Latch B	1	
205	147826	Roller Arm Front	4	
206	147827	Roller Arm Rear	4	
207	147929	iVIZION Head Roller	8	
208	147969	Roller Arm Shaft	4	
209	147970	Head Roller Shaft	8	
210	147734	Spring Arm Rear	2	
211	147746	Spring Arm Front	2	
212	142633	Upper UV FPC	1	
213	142635	Upper CIS FFC	1	
214	146755	Transmissive Light FFC	1	
215	146757	Validation Sensor FPC (Right)	2	
	193583	Validation Sensor FPC (Left)		
216	189841	Sensor Relay Board Assy	1	
217	146788	CIS	1	
218	146786	Upper UV Sensor	1	
219	146790	Transmissive Light	1	
220	149786	2×5 Phillips Strict, Self-Tapping, Binding Head Screw (Black) 3M	2	
221	104010	2.6×6 Phillips, Self-Tapping, Binding Head Screw 3M	6	
222	106002	2.6×8 Phillips, Self-Tapping, Binding Head Screw (Black) 3M	8	
223	151781	CIS Partner	1	
224	213297	Roller Cancellor	2	Support Parts for the Banknote Guide

## iVIZION Validation Unit 3 Exploded View

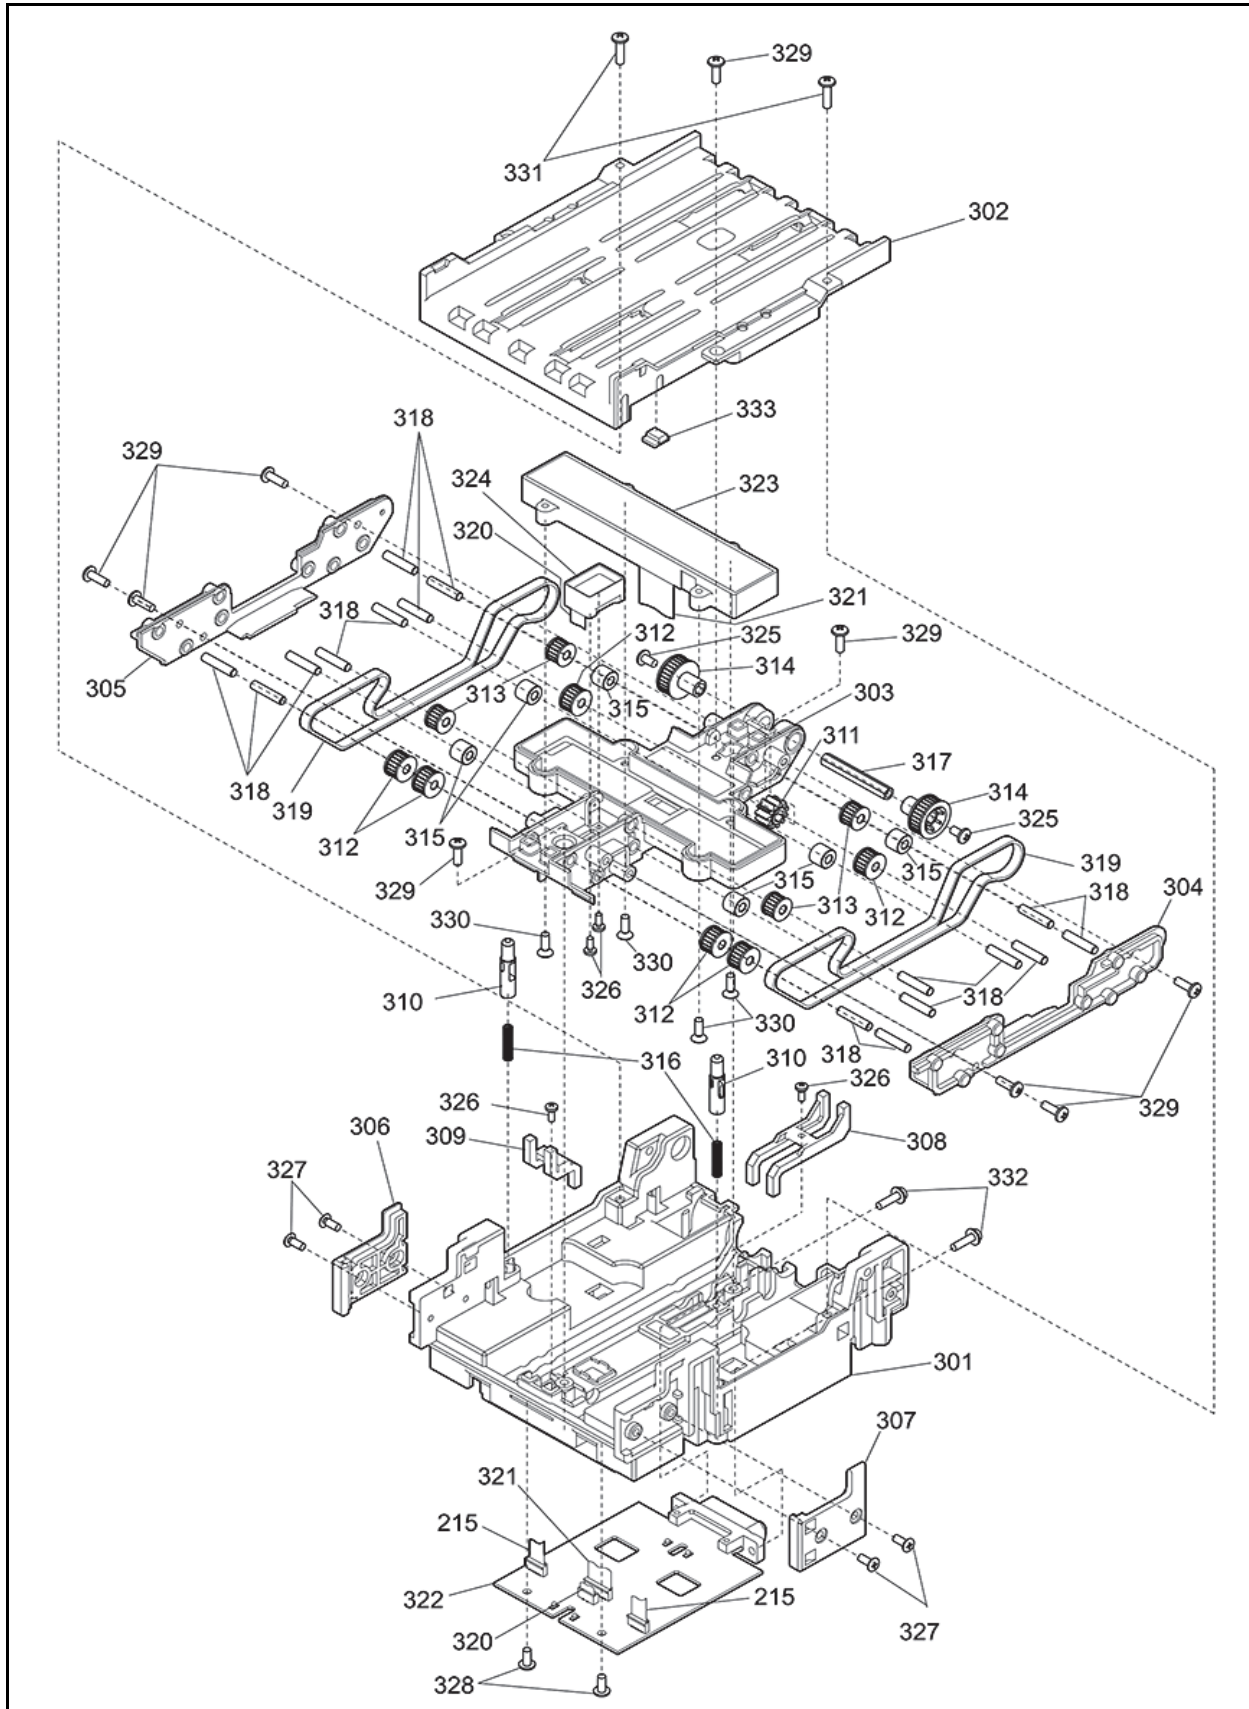


**Figure 7-4** iVIZION Validation Unit 3 Exploded View

**iVIZION Validation Unit 3 Parts List****Table 7-4** iVIZION Validation Unit 3 Parts List

Ref No.	EDP No.	Description	Qty	Remark
301	147802	iVIZION Head Frame A	1	
302	147806	iVIZION Head Bill Guide 85A	1	
303	147808	Head Drive Frame	1	
304	147809	Head D-Frame Cover A	1	
305	147810	Head D-Frame Cover B	1	
306	147811	Bezel Hold Chips A	1	
307	147812	Bezel Hold Chips B	1	
308	147824	Exit Sensor Prism	1	
309	147825	Entrance Prism	1	
310	147829	Bill Guide Push Pin	2	
311	147914	Head Drive Gear	1	
312	147923	Pulley Head Idler 1	6	
313	147924	Pulley Head Idler 2	4	
314	147925	Pulley Head Drive	2	
315	147930	iVIZION Head Roller 2	6	
316	147747	Spring Bill Guide Push Pin	2	
317	147968	Head Drive Shaft	1	
318	147971	Head Pulley Pin	16	
319	148034	Timing Belt (Eco Specifications)	2	
320	146761	Lower UV FFC	1	
321	146764	Lower CIS FFC	1	
322	231079	Validation Sensor Board Assy.	1	
323	146788	CIS	1	
324	146787	Lower UV Sensor	1	
325	148574	M2.6×5 Phillips, Binding Head Screw with Nyloc 3M	2	
326	149786	2×5 Phillips Strict, Self-Tapping, Binding Head Screw (Black) 3M	4	
327	149787	2.6×6 Phillips Strict, Self-Tapping, Rammimate Screw M3 II (TORX)	4	
328	104010	2.6×6 Phillips, Self-Tapping, Binding Head Screw 3M	2	
329	106002	2.6×8 Phillips, Self-Tapping, Binding Head Screw (Black) 3M	9	
330	101782	M2.6×8 Flathead, Phillips, Self-Tapping Screw 3M	4	
331	104012	2.6×10 Phillips, Self-Tapping Screw (Blue) 3M	2	
332	045969	2.6×10 Pan Head Screw with W Washer 3M	2	
333	151781	CIS Spacer	1	

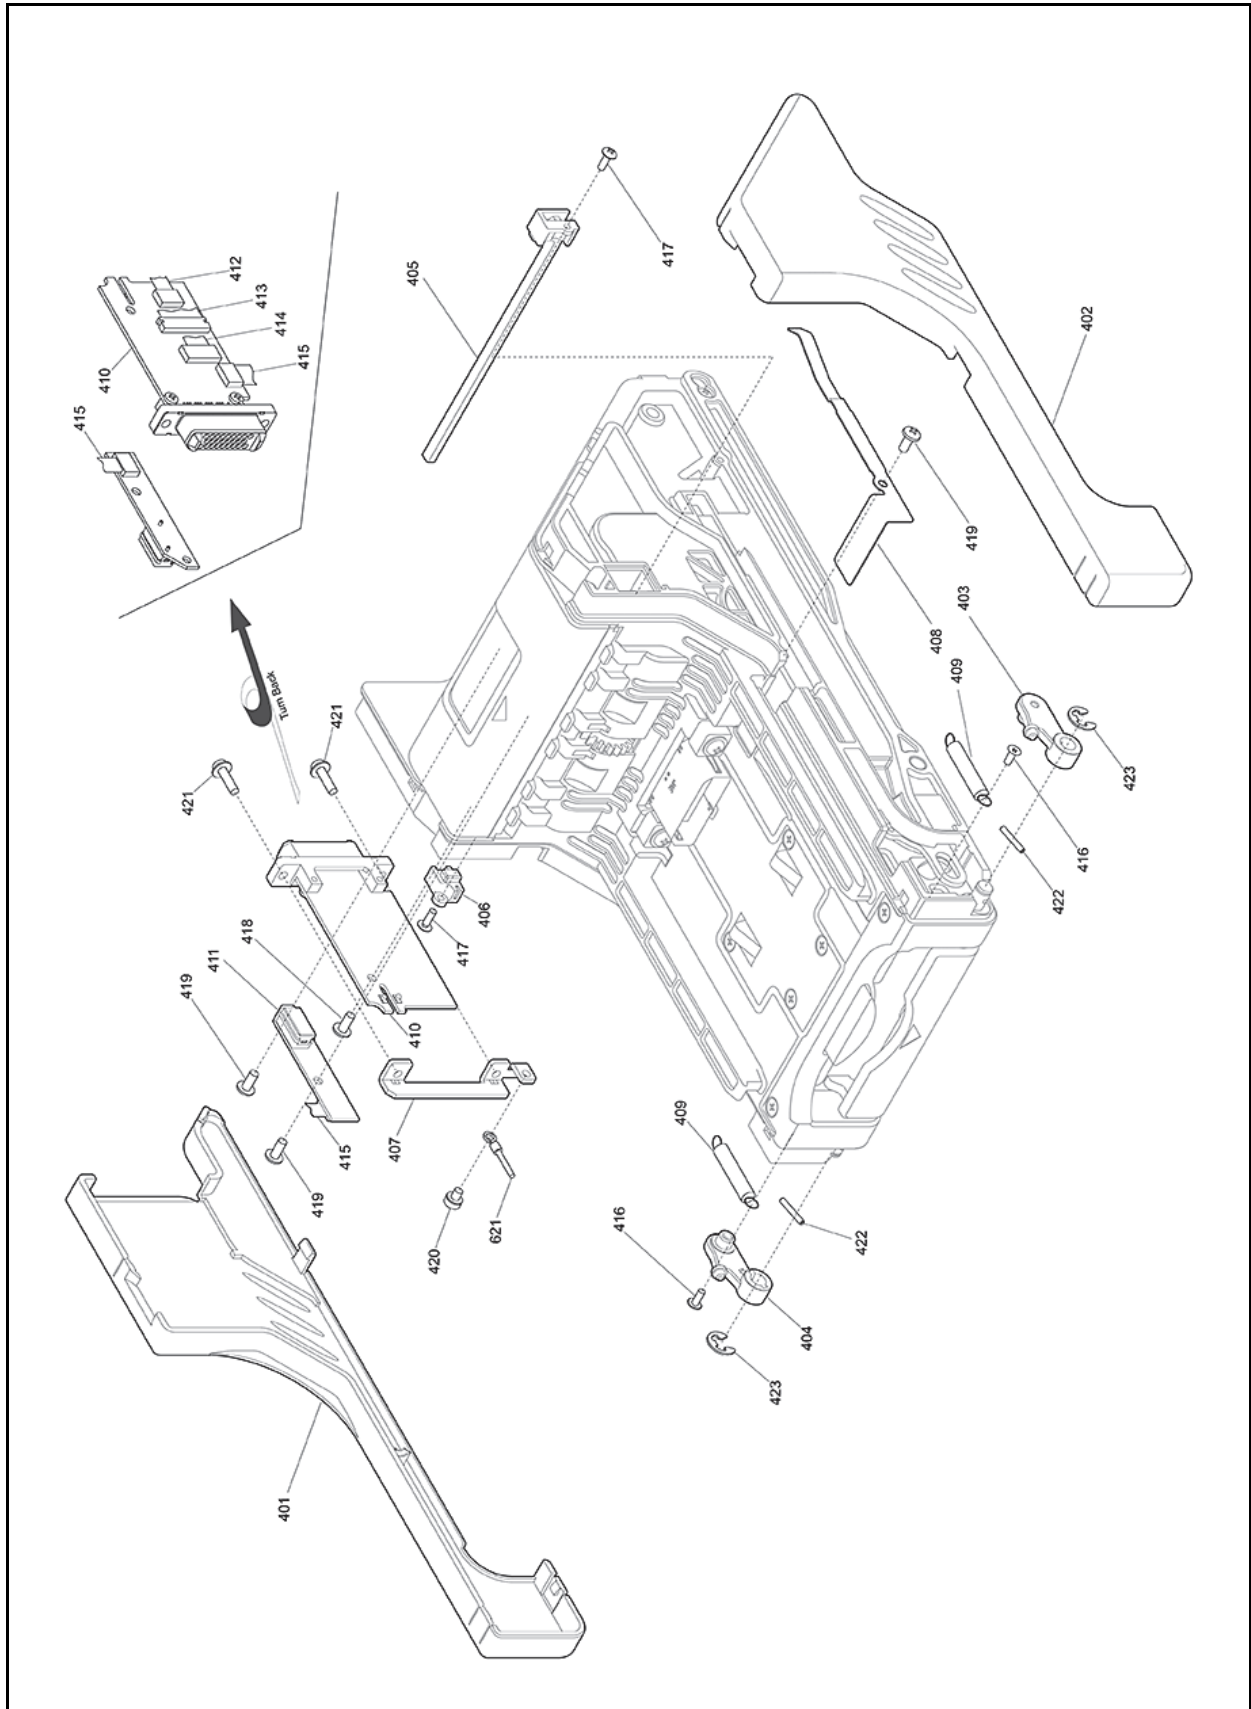


**iVIZION Transport Unit 1 Exploded View****Figure 7-5 iVIZION Transport Unit 1 Exploded View**

**iVIZION Transport Unit 1 Parts List****Table 7-5** iVIZION Transport Unit 1 Parts List

Ref No.	EDP No.	Description	Qty	Remark
401	147831	Transport Side Cover A	1	
402	147832	Transport Side Cover B	1	
403	147841	Transport Removal Arm A	1	
404	147842	Transport Removal Arm B	1	
405	147850	Side Sensor Cover	1	
406	147851	Side Sensor Prism	1	
407	147771	Connector Plate	1	
408	147772	Transport GND Plate	1	
409	147988	Spring Transport Latch	2	
410	231080	Interface Connector Board Assy	1	
411	148059	Home Position Sensor Board Assy	1	
412	142636	USB FPC	1	
413	146754	Power Supply FPC	1	
414	146805	Interface FPC	1	
415	146810	Home Position Sensor FFC	1	
416	149788	2×5 Phillips, Self-Tapping, Binding Head Screw 3M (Black)	2	
417	148572	2×6 Phillips, Self-Tapping, Truss Head Screw 3M	2	
418	082040	2.6×6 Phillips, Self-Tapping, Pan Head Screw 3M	1	
419	104010	2.6×6 Phillips, Self-Tapping, Binding Head Screw 3M	3	
420	023755	M2.6×4 Pan Head Screw with W Washer 3M (Small)	1	
421	045969	M2.6×10 Pan Head Screw with W Washer 3M (Small)	2	
422	137787	Φ1.6×10 Parallel Pin Sustainer (Hard)	2	
423	104036	Φ4 E-Ring	2	

## iVIZION Transport Unit 2 Exploded View

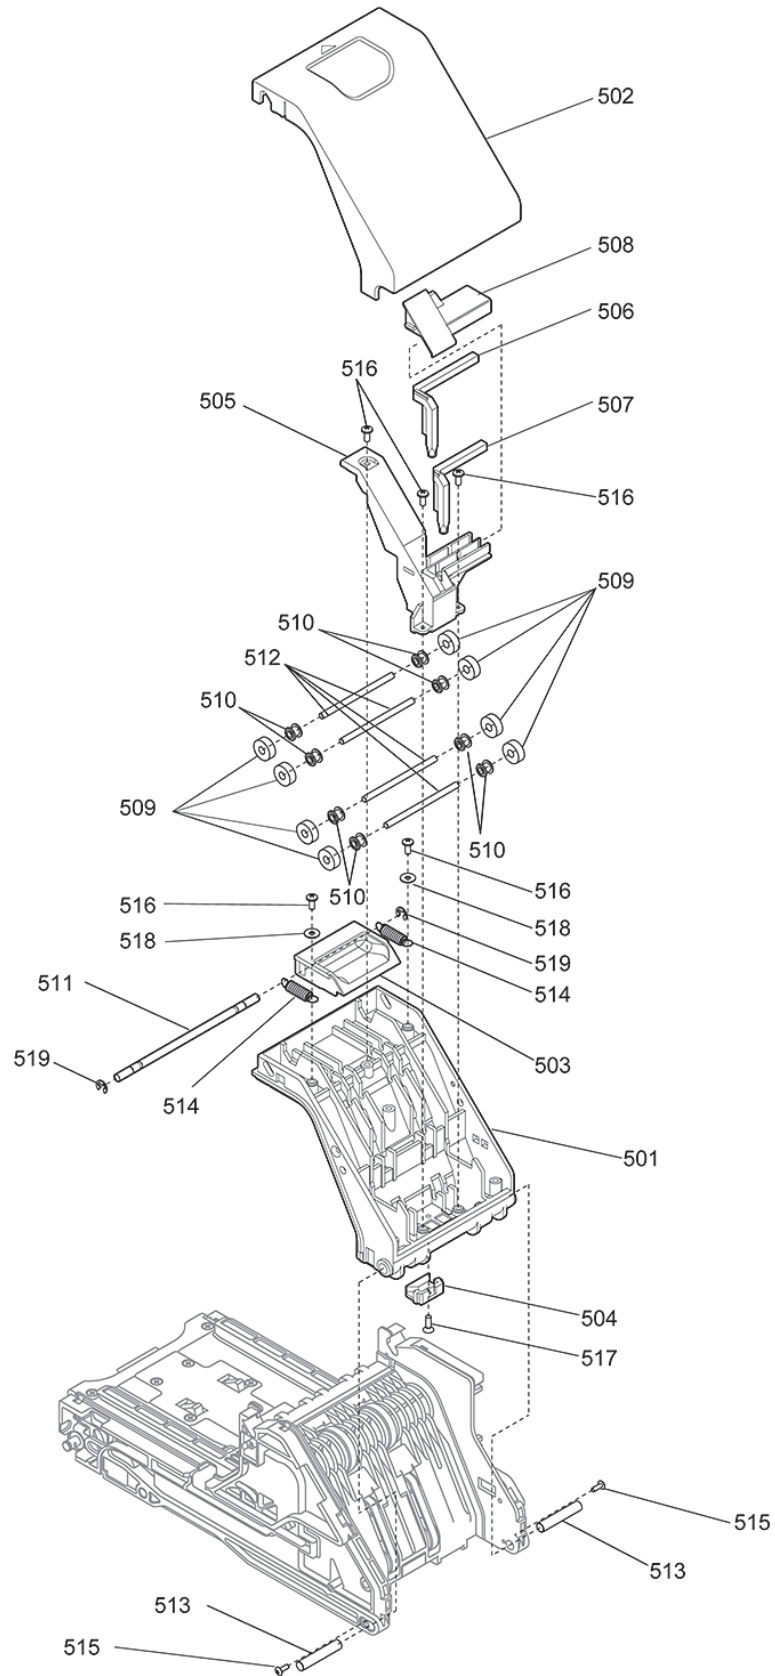


**Figure 7-6** iVIZION Transport Unit 2 Exploded View

**iVIZION Transport Unit 2 Parts List****Table 7-6** iVIZION Transport Unit 2 Parts List

Ref No.	EDP No.	Description	Qty	Remark
501	147833	Transport UP Frame	1	
502	147834	Transport UP-Bill Guide Cover	1	
503	147843	Bill Guide Open-Close Lever	1	
504	236362	Transport Light Guide D	1	
505	147881	Fixer Roller Shaft	1	
506	147882	Transport Light Guide F	1	
507	147883	Transport Light Guide G	1	
508	147887	Cover Prism Home Position	1	
509	147767	Sponge Roller	8	
510	147966	Transport Roller Core	8	
511	147976	Bill Guide Open-Close Shaft	1	
512	147984	UP-Bill Guide Roller Shaft	4	
513	147985	Bill Guide Fulcrum Pin	2	
514	147987	Spring Bill Guide Open-Close	2	
515	148572	2×6 Phillips, Self-Tapping, Truss Head Screw 3M	2	
516	104010	2.6×6 Phillips, Self-Tapping, Binding Head Screw 3M	5	
517	110949	2.6×8 Phillips, Self-Tapping, Flat Head Screw 3M (Black)	1	
518	000666	Φ2.6×7.5×0.5 Plain Washer	2	
519	104035	Φ3 E-Ring	2	

### iVIZION Transport Unit 3 Exploded View

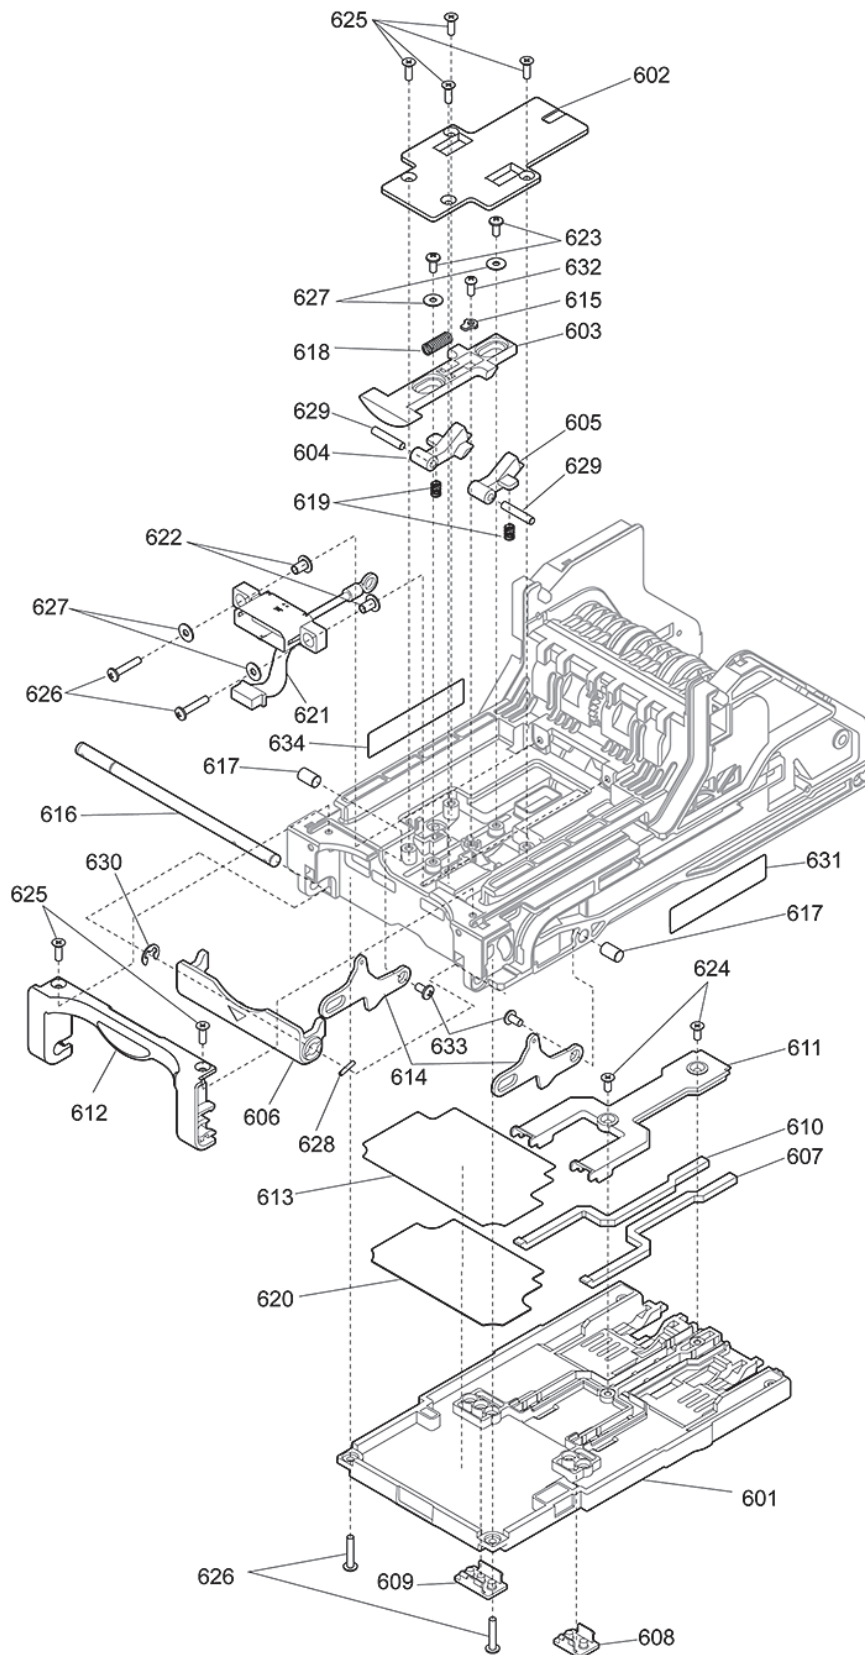


**Figure 7-7 iVIZION Transport Unit 3 Exploded View**

**iVIZION Transport Unit 3 Parts List****Table 7-7** iVIZION Transport Unit 3 Parts List

Ref No.	EDP No.	Description	Qty	Remark
601	147835	Transport Bottom Cover	1	
602	147836	Head Latch Cover	1	
603	147837	Head Latch Button	1	
604	147838	Head Removal Latch A	1	
605	147839	Head Removal Latch B	1	
606	147840	Transport Removal Lever	1	
607	147844	Transport Light Guide A	1	
608	147845	Transport Light Guide B	1	
609	147846	Transport Light Guide C	1	
610	147890	Transport Light Guide H	1	
611	147893	Prism Cover Feed Out Sensor	1	
612	147897	Front Mask Transport	1	
613	187258	UC Insulating Sheet	1	
614	147770	Transport Removal Latch	2	
615	147773	Fixer Head Latch Spring	1	
616	147974	Head Removal Shaft	1	
617	147986	Transport Unit Latch Fulcrum Pin	2	
618	147748	Spring Head Button	1	
619	147749	Spring Head Latch	2	
620	187256	Noise Shielding Sticker	1	
621	147158	Validation Unit Harness	1	
622	148610	Floating Collar	2	
623	104010	2.6×6 Phillips, Self-Tapping, Binding Head Screw 3M	2	
624	052564	2.6×6 Flathead, Phillips, Self-Tapping Screw 3M	2	
625	110949	2.6×8 Flathead, Phillips, Self-Tapping Screw (Black) 3M	6	
626	148573	2.6×14 Phillips, Self-Tapping, Binding Head Screw (Black) 3M	4	
627	000666	Φ2.6×7.5×0.5 Plain Washer	4	
628	104020	Φ1.6×8 Parallel Pin Sustainer (Hard)	1	
629	109658	Φ3×16 Parallel Pin Sustainer (Hard)	2	
630	104035	Φ3 E-Ring	1	
631	187257	Transport Serial Label	1	
632	082040	2.6×6 Phillips, Self-Tapping, Pan Head Screw 3M	1	
633	192747	2 x 5 Ramimate with Nyloc 3M	2	
634	Pending	Bar Code Label	1	

## iVIZION Transport Unit 4 Exploded View

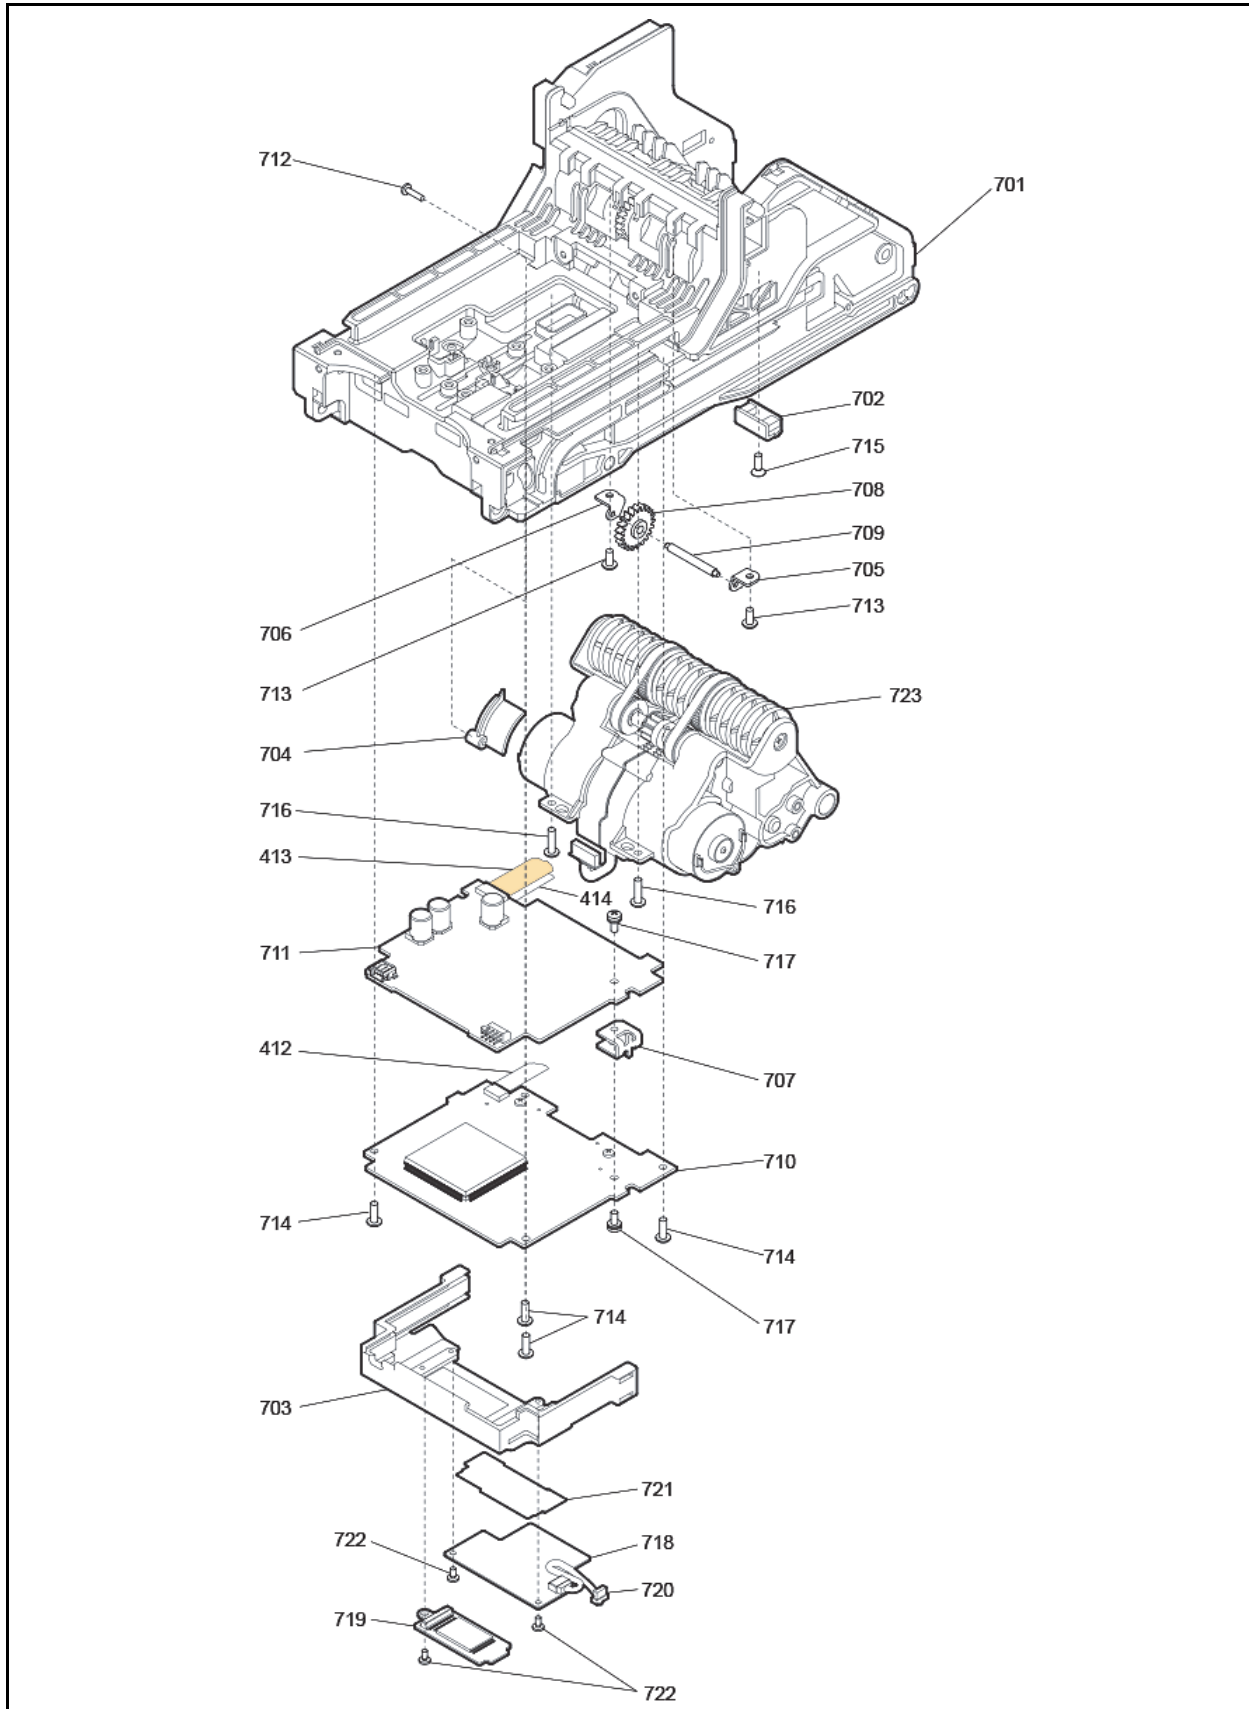


**Figure 7-8** iVIZION Transport Unit 4 Exploded View



**iVIZION Transport Unit 4 Parts List****Table 7-8** iVIZION Transport Unit 4 Parts List

Ref No.	EDP No.	Description	Qty	Remark
701	147830	Transport Main Frame	1	
702	236363	Transport Light Guide E	1	
703	147885	PCB Supporter	1	
704	147895	FPC Cover	1	
705	147774	Fixer Gear Shaft A	1	
706	147775	Fixer Gear Shaft B	1	
707	185199	SG Plate	1	
708	147764	Gear Head Connection 2	1	
709	147979	Head Connection Shaft	1	
710	231077	Validation CPU Board	1	
711	231078	Control CPU Board	1	
712	098267	2×8 Phillips, Self-Tapping, Binding Head Screw (Black) 3M	1	
713	104010	2.6×6 Phillips, Self-Tapping, Binding Head Screw 3M	2	
714	106002	2.6×8 Phillips, Self-Tapping, Binding Head Screw (Black) 3M	4	
715	148186	2.6×6 Phillips, Self-Tapping, Flat Head Screw 3M (Black)	1	
716	104012	2.6×10 Phillips, Self-Tapping, Binding Head Screw (Blue) 3M	2	
717	124663	M2.6×6 Pan Head Screw with W Washer 3M	2	
718	146783	RFID Module	1	
719	140963	Extended Memory Board Assy 64M bit (total 128M bit)	1	
	Pending	Extended Memory Board Assy 128M bit (total 192M bit)	1	
720	146816	RFID Harness	1	
721	185749	RFID Insulating Sheet	1	
722	076466	2×4 Phillips, Self-Tapping, Binding Head Screw 3M	3	
723	197877	Motor and Gear Unit	1	SS only

## iVIZION Transport Unit 5 Exploded View

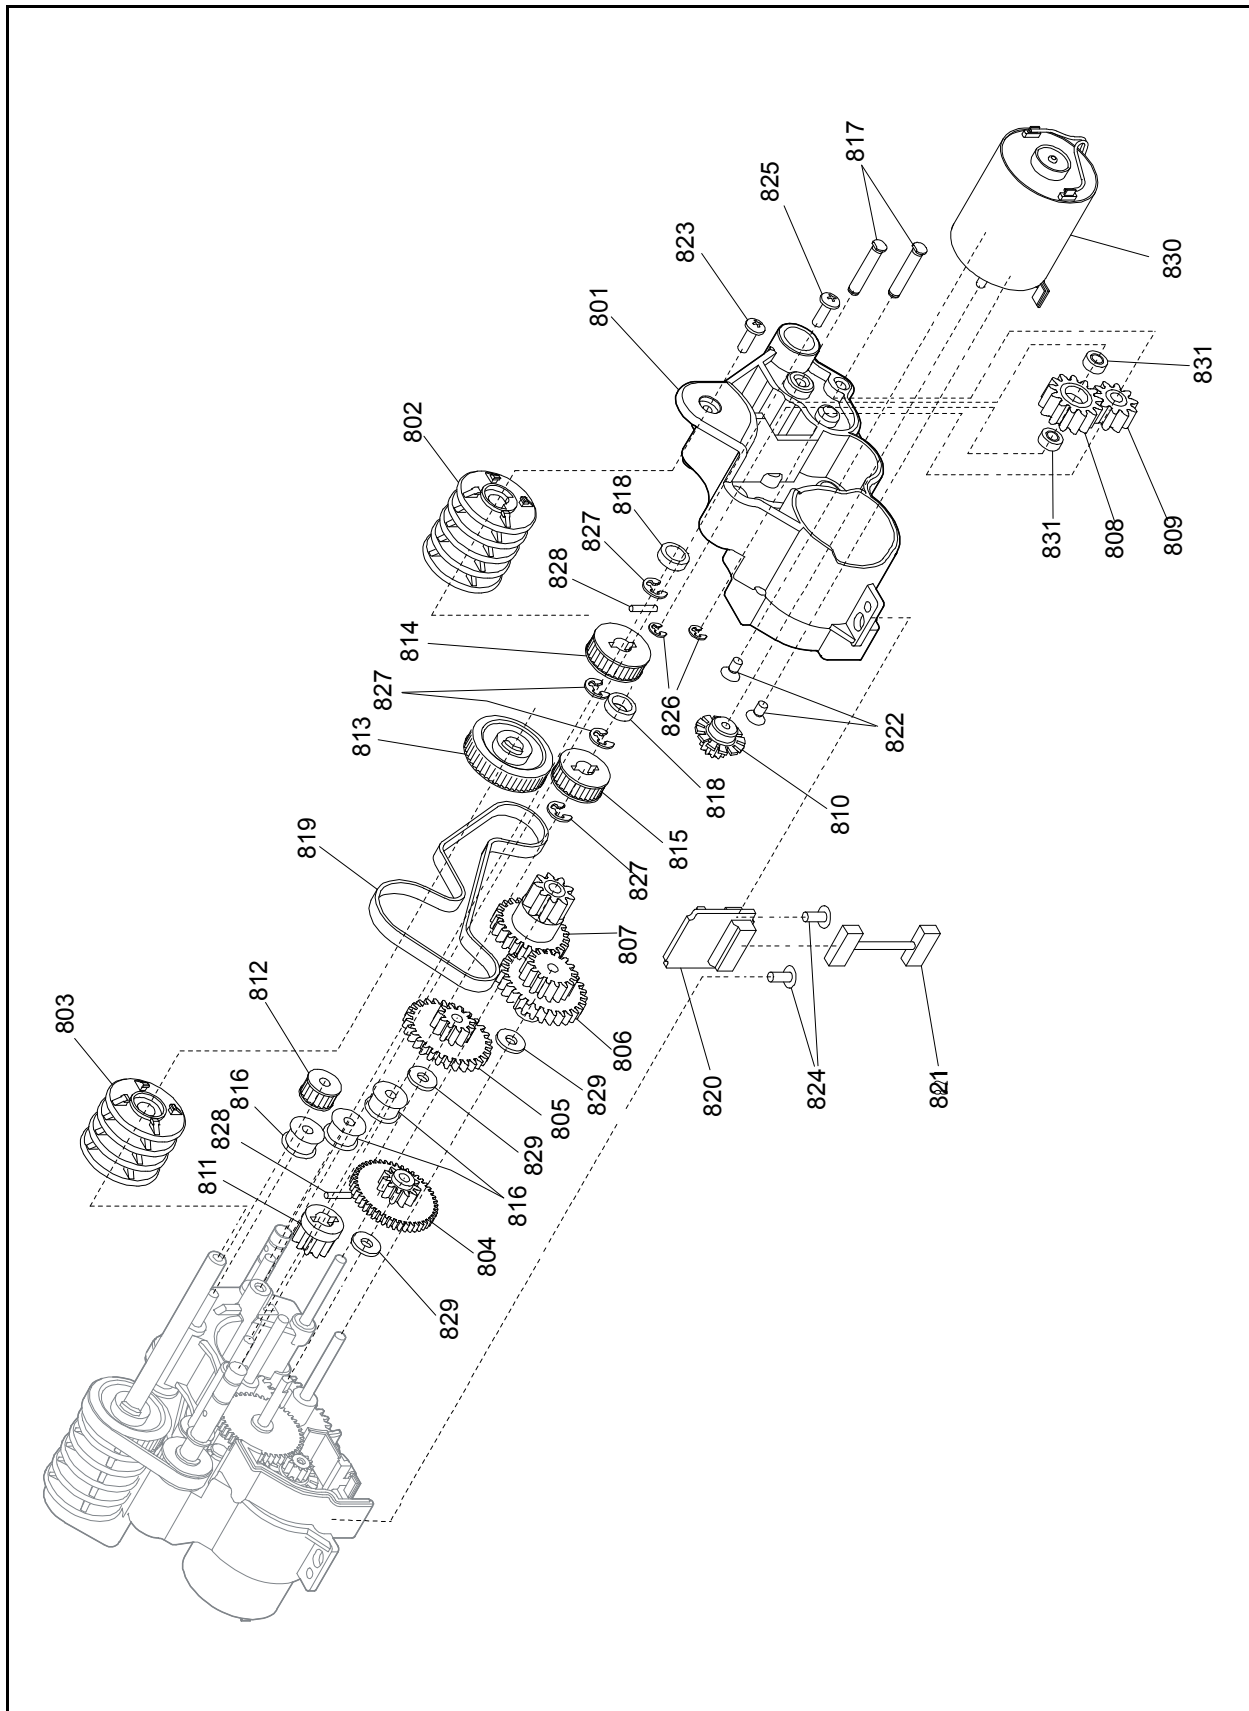


**Figure 7-9** iVIZION Transport Unit 5 Exploded View

**iVIZION Transport Unit 5 Parts List****Table 7-9** iVIZION Transport Unit 5 Parts List


Ref No.	EDP No.	Description	Qty	Remark
801	147852	Drive Module Frame A	1	
802	147879	iVIZION Reel A	1	
	230486		1	SH only
803	147880	iVIZION Reel B	1	
	230487		1	SH only
804	147752	Gear Stack 2	1	
805	147753	Gear Stack 3	1	
806	147754	Gear Stack 4	1	
807	147879	Gear Transport-Stacking 1	1	
	235788		1	SH only
808	147756	Gear Transport-Stacking 2	1	
809	147757	Gear Box Connection	1	
810	147759	Gear Transport-Stacking Motor	1	
811	147763	Gear Head Connection 1	1	
812	147923	Pulley Head Idler 1	1	
813	147799	Pulley Reel	1	
814	147800	Pulley Transport Drive	1	
815	147801	Pulley Head Connection	1	
816	147967	Pulley Idler 2	3	
817	147980	Outside Gear Shaft	2	
818	148032	Bearing	2	
819	148035	Timing Belt (Eco Specification)	1	
820	148058	Interrupter Board Assy	1	
821	146782	Interrupter Harness	1	
822	081564	M2.6×5 Phillips, Flat Head Screw with Nyloc 3M	2	
823	104007	M2.6×8 Phillips, Binding Head Screw (Blue) with F-Lock 3M	1	
824	148572	2.6×6 Phillips, Self-Tapping, Truss Head Screw 3M	2	
825	106002	2.6×8 Phillips, Self-Tapping, Binding Head Screw (Black) 3M	1	
826	091517	Φ2 E-Ring	2	
827	104035	Φ3 E-Ring	4	
828	104020	Φ1.6x8 Parallel Pin Sustainer (Hard)	2	
829	148030	Φ3.1x6x1.0 Poly Vinyl Slider	3	
830	148672	Motor Assy	1	
831	147759	Gear Transport-Stacking Motor (SH)	2	SH only
832	230483	Gear Transport-Stacking 2 (SH)	2	
833	230484	Bearing	2	

## iVIZION Transport Unit 6 Exploded View

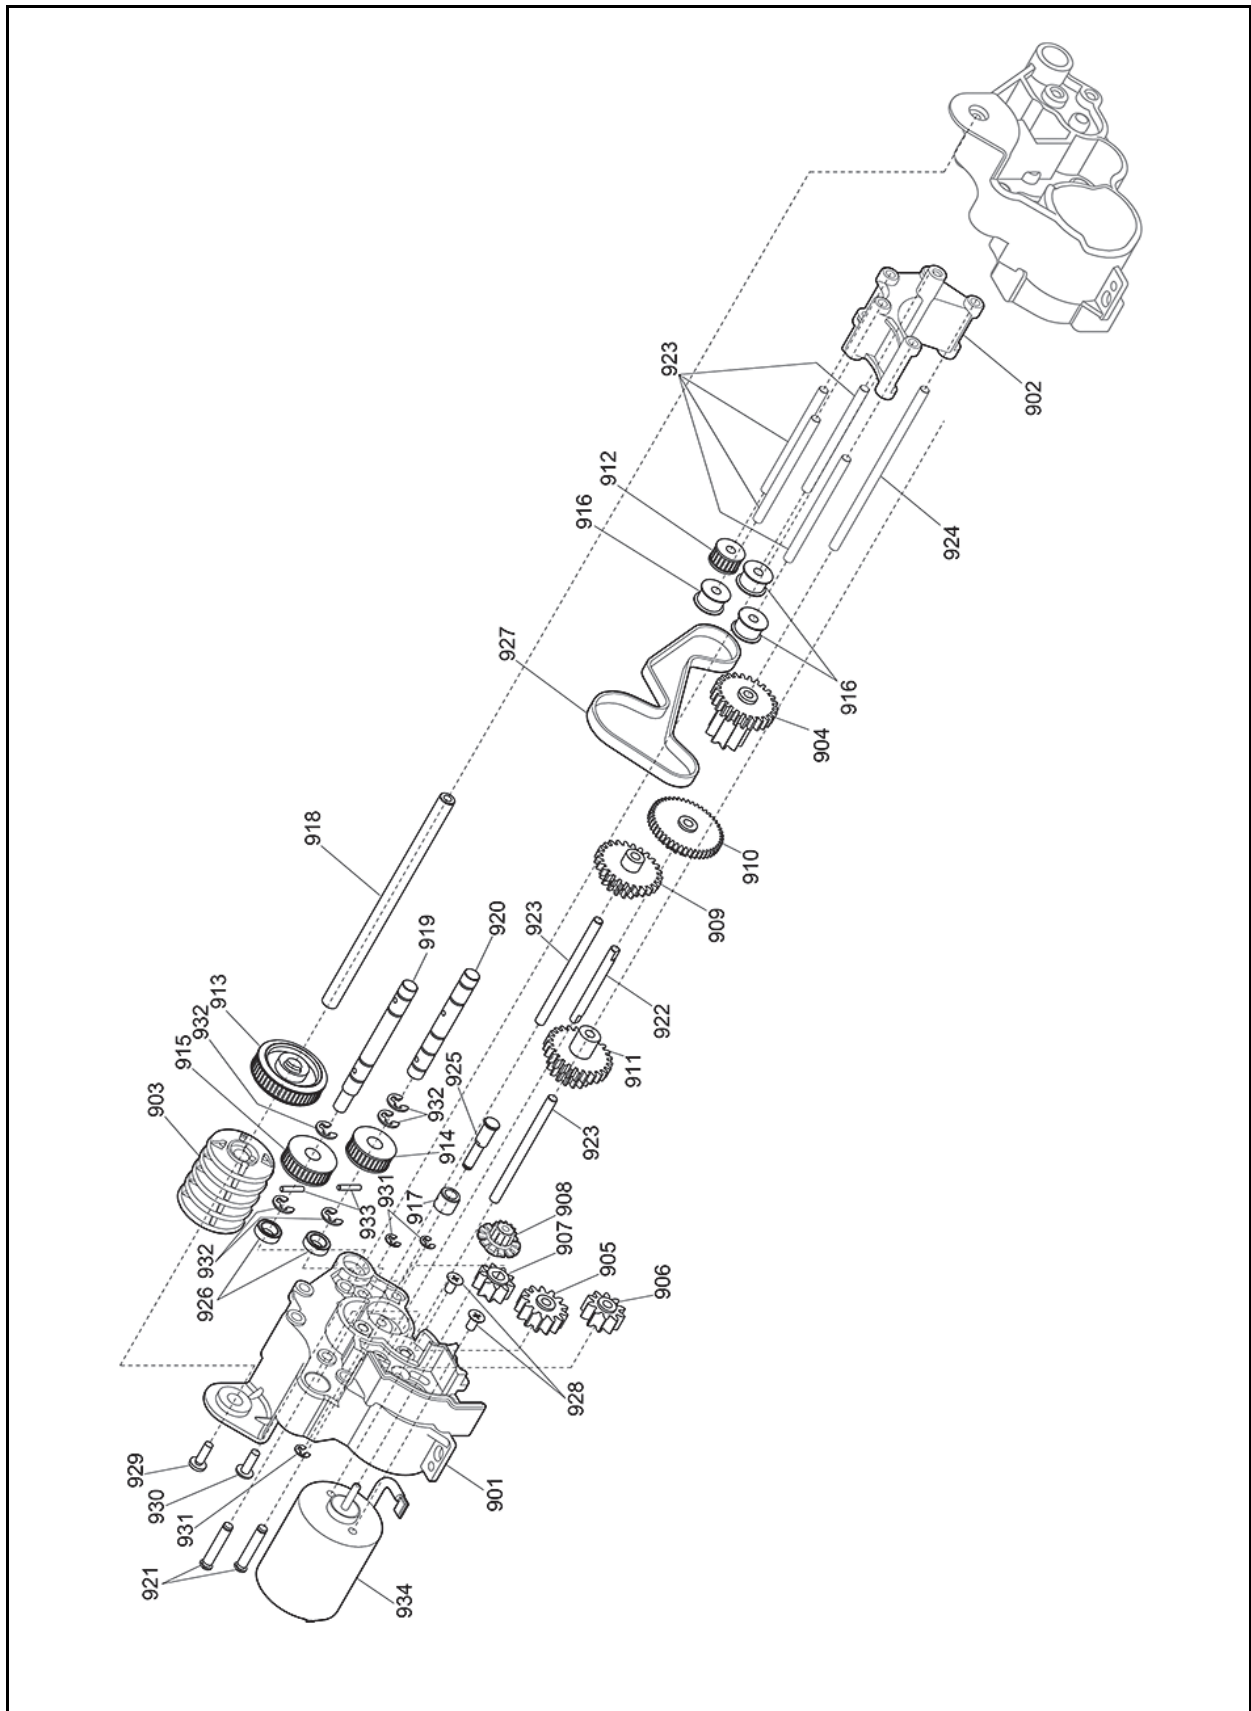

**iVIZION Transport Unit 6 Parts List****Table 7-10** iVIZION Transport Unit 6 Parts List

Ref No.	EDP No.	Description	Qty	Remark
901	147853	Drive Module Frame B	1	
902	147854	Transport Gear Stabilizer	1	
903	147879	iVIZION Reel A	1	
	230486		1	SH only
904	147879	Gear Transport-Stacking 1	1	
	235788		1	SH only
905	147756	Gear Transport-Stacking 2	1	
906	147757	Gear Box Connection	1	
907	147758	Gear Pulley Drive	1	
908	147759	Gear Transport-Stacking Motor	1	
909	147760	Gear Transport 2	1	
910	147761	Gear Transport 3	1	
911	147762	Gear Transport 4	1	
912	147923	Pulley Head Idler 1	1	
913	147799	Pulley Reel	1	
914	147800	Pulley Transport Drive	1	
915	147801	Pulley Head Connection	1	
916	147967	Pulley Idler 2	3	
917	185195	Roller Belt Stopper	1	
918	147975	Reel Shaft	1	
919	147977	Transport Drive Shaft	1	
920	147978	Head Connection Shaft 1	1	
921	147980	Outside Gear Shaft	2	
922	147981	Gear Module Shaft 1	1	
923	147982	Gear Module Shaft 2	6	
924	147983	Gear Module Shaft 3	1	
925	185200	Belt Stopper Roller Pin	1	
926	148032	Bearing	2	
927	148035	Timing Belt (Eco Specifications)	1	
928	081564	M2.6×5 Phillips, Flat Head Screw with Nyloc 3M	2	
929	104007	M2.6×8 Phillips, Binding Head Screw with Nyloc 3M (Blue)	1	
930	106002	2.6×8 Phillips, Self-Tapping, Binding Head Screw 3M (Black)	1	
931	091517	Φ2 E-Ring	3	
932	104035	Φ3 E-Ring	5	
933	104020	Φ1.6×8 Parallel Pin Sustainer (Hard)	2	
934	148672	Motor Assy	1	

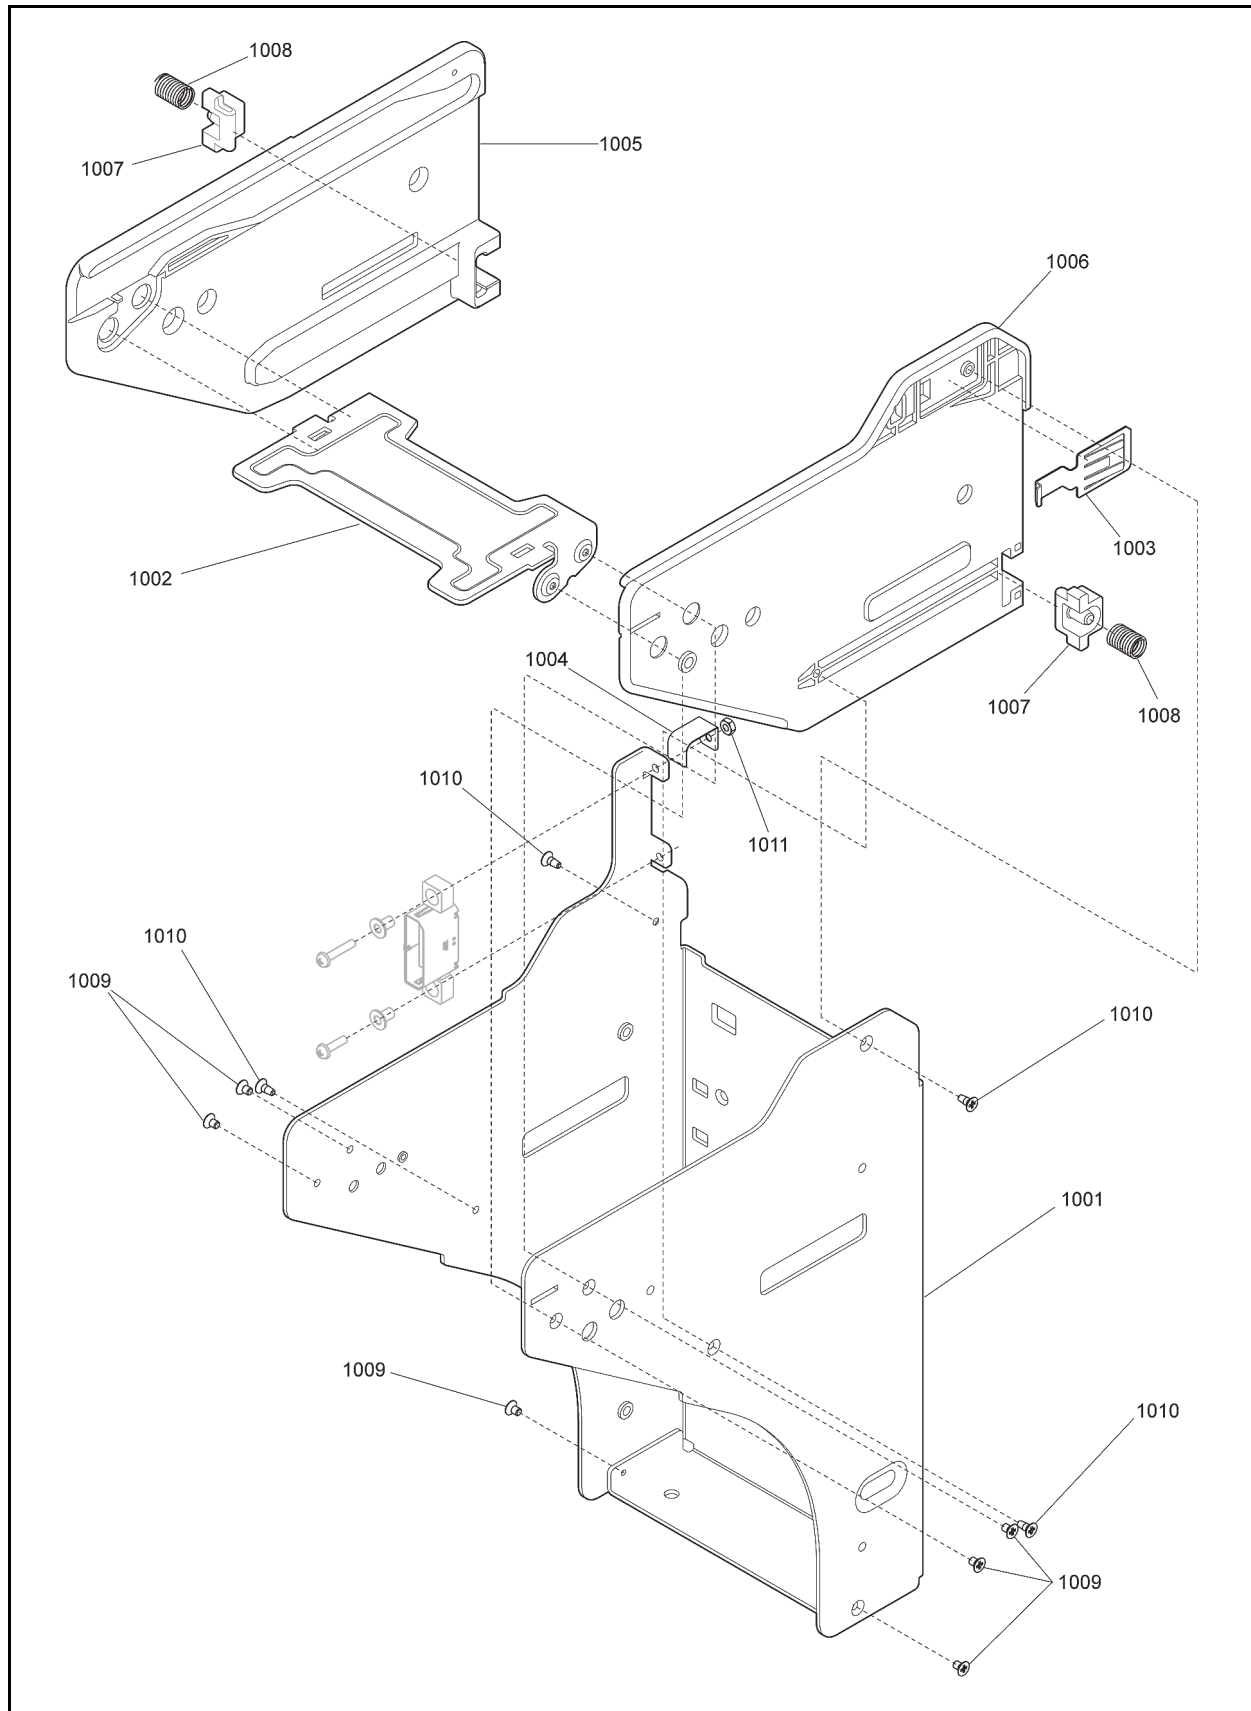
**iVIZION SS Version Frame Unit Exploded View****Figure 7-11 iVIZION SS Version Frame Unit Exploded View**

**iVIZION SS Version Frame Unit Parts List****Table 7-11** iVIZION SS Version Frame Unit Parts List

Ref No.	EDP No.	Description	Qty	Remark
1001	147777	Frame Base	1	
1002	147778	Frame Base Guide	1	
1003	147793	Frame Spring Plate	1	
1004	151784	Frame FG Plate	1	
1005	147904	Frame Guide L	1	
1006	147905	Frame Guide R	1	
1007	229918	Frame Latch	2	
1008	147750	Frame Compression Spring 01	2	
1009	006021	M2.6×4 Phillips, Flat Head Screw 3M	6	
1010	148186	2.6×6 Phillips, Self-Tapping, Flat Head Screw 3M	4	
1011	149426	M2.6 Nylon Nut	1	



## iVIZION Cash Box Unit 1 Exploded View

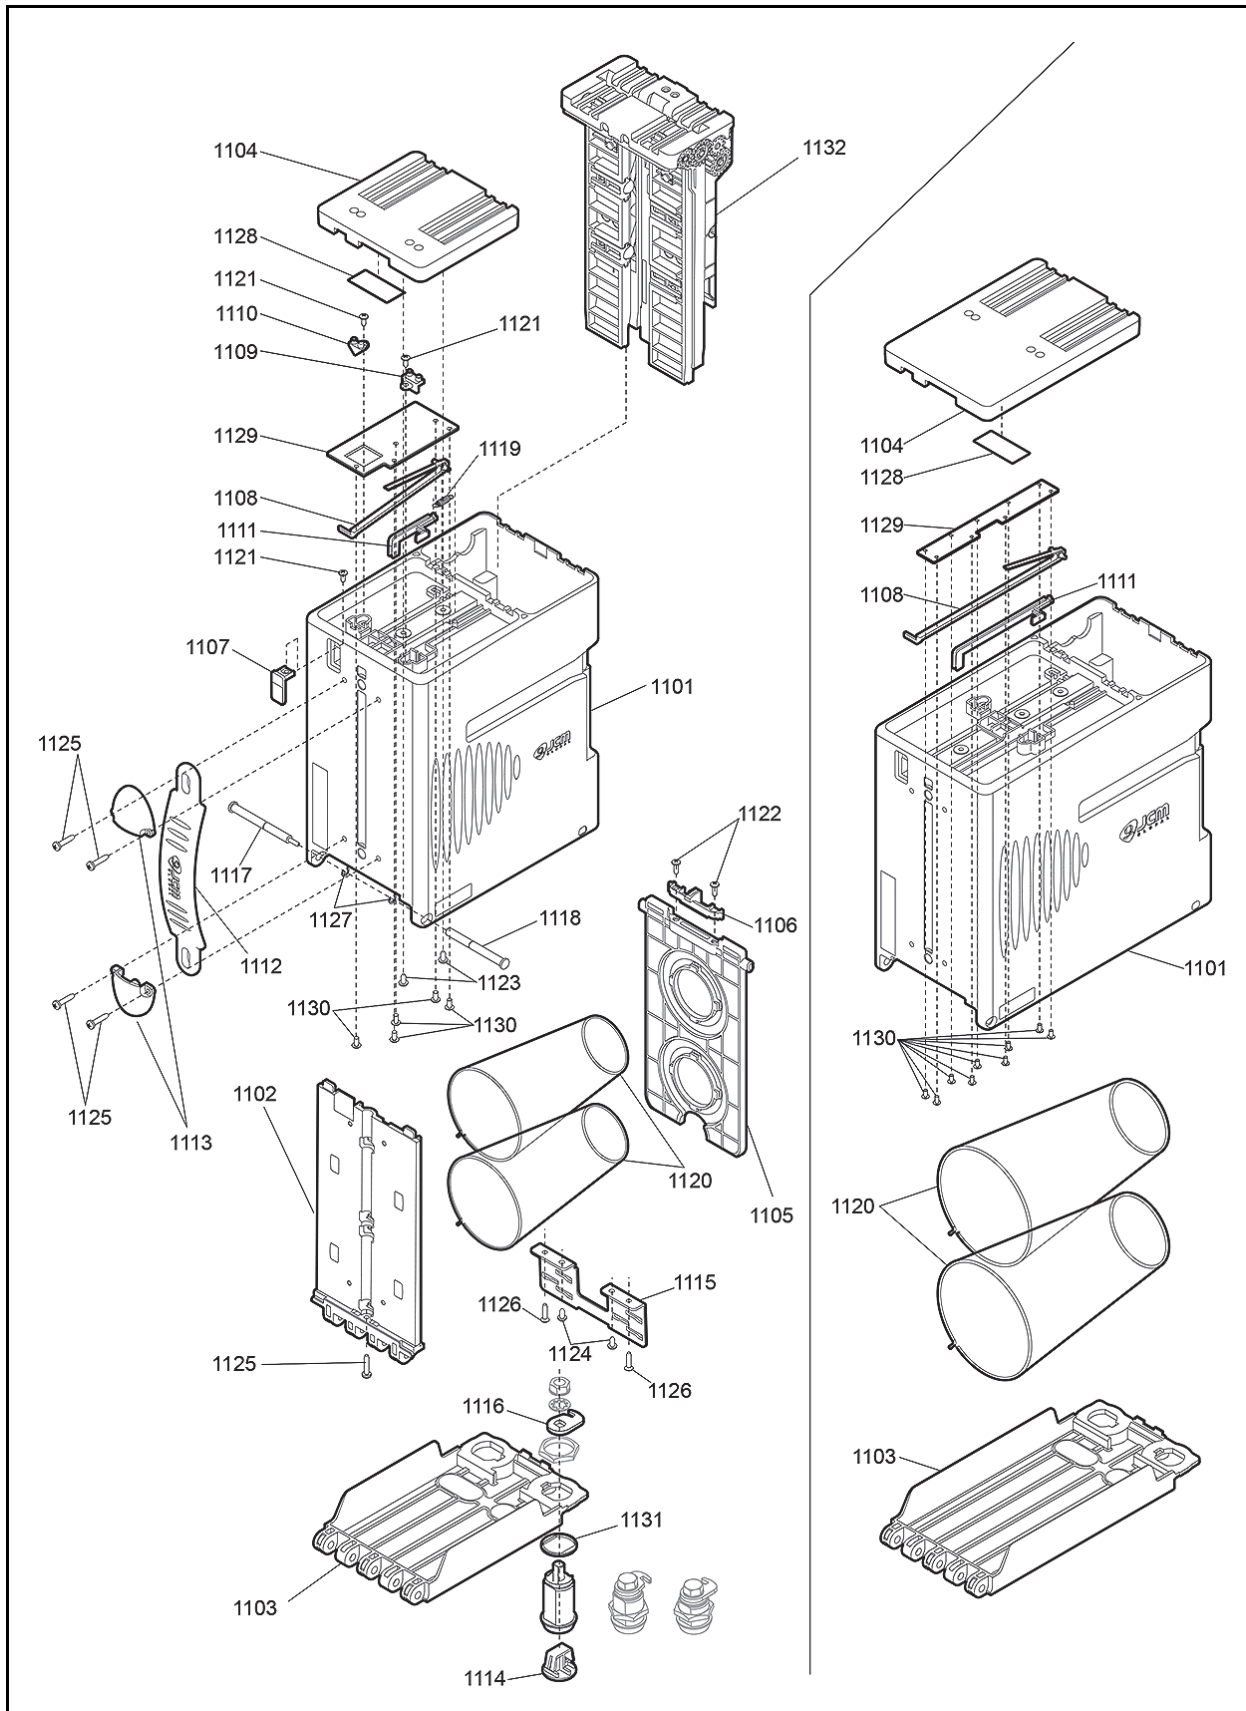


**Figure 7-12** iVIZION Cash Box Unit 1 Exploded View

**iVIZION Cash Box Unit 1 Parts List****Table 7-12** iVIZION Cash Box Unit 1 Parts List

Ref No.	EDP No.	Description	Qty	Remark
1101	147907	Box (S)	1	
	148781	Box (L)		
1102	147908	Pressure Plate	1	
1103	214099	Box Door (S)	1	
	214101	Box Door (L)		
1104	147910	Box Cover (S)	1	
	148783	Box Cover (L)		
1105	147911	Box Base Plate	1	
1106	147912	Plate Stopper	1	
1107	147941	Indicator Window	1	
1108	147942	Indicator Arm (S)	1	
	148785	Indicator Arm (L)		
1109	147943	Box Prism (Near-Full)	1	
1110	147944	Box Prism (State)	1	
1111	147945	Lever Nearly Full (S)	1	
	148784	Lever Nearly Full (L)		
1112	147946	Handle	1	
1113	147947	Handle Cover	2	
1114	148472	Key Cover	1	
1115	147794	Lock Bracket	1	
1116	147795	Lock Plate	2	
1117	147934	Box Shaft (1)	1	
1118	147935	Box Shaft (2)	1	
1119	147990	Home Position Lever Spring	1	
1120	114526	Cash Stock Spring	2	
	127714	IQ P-Box Spring		
1121	104418	2.6x6 Phillips, Self-Tapping, Binding Head Screw (Black) 3M	3	
1122	056165	2.6x8 Phillips, Self-Tapping, Binding Head Screw 3M	2	
1123	187735	3x6 Pan NONSERT Head Screw	2	
1124	060794	3x12 Flathead, Phillips, Self-Tapping Screw 3M	2	
1125	185201	3x14 Phillips, Self-Tapping, Pan Head Screw 3M (Black)	5	
1126	006037	M3 x 12 Pan Head Screw with W Washer 3M (Small)	2	
1127	003718	Crescent Snap Ring	2	
1128	146785	RFID Tag	1	
1129	192745	Indicator Cover (S)	1	
	192746	Indicator Cover (L)	1	
1130	140958	2.6x5 Ramimate Screw 3M	5	
			9	
1131	059086	Key Spacer	3	
1132	197878	Box Pusher Unit	1	

## iVIZION Cash Box Unit 2 Exploded View

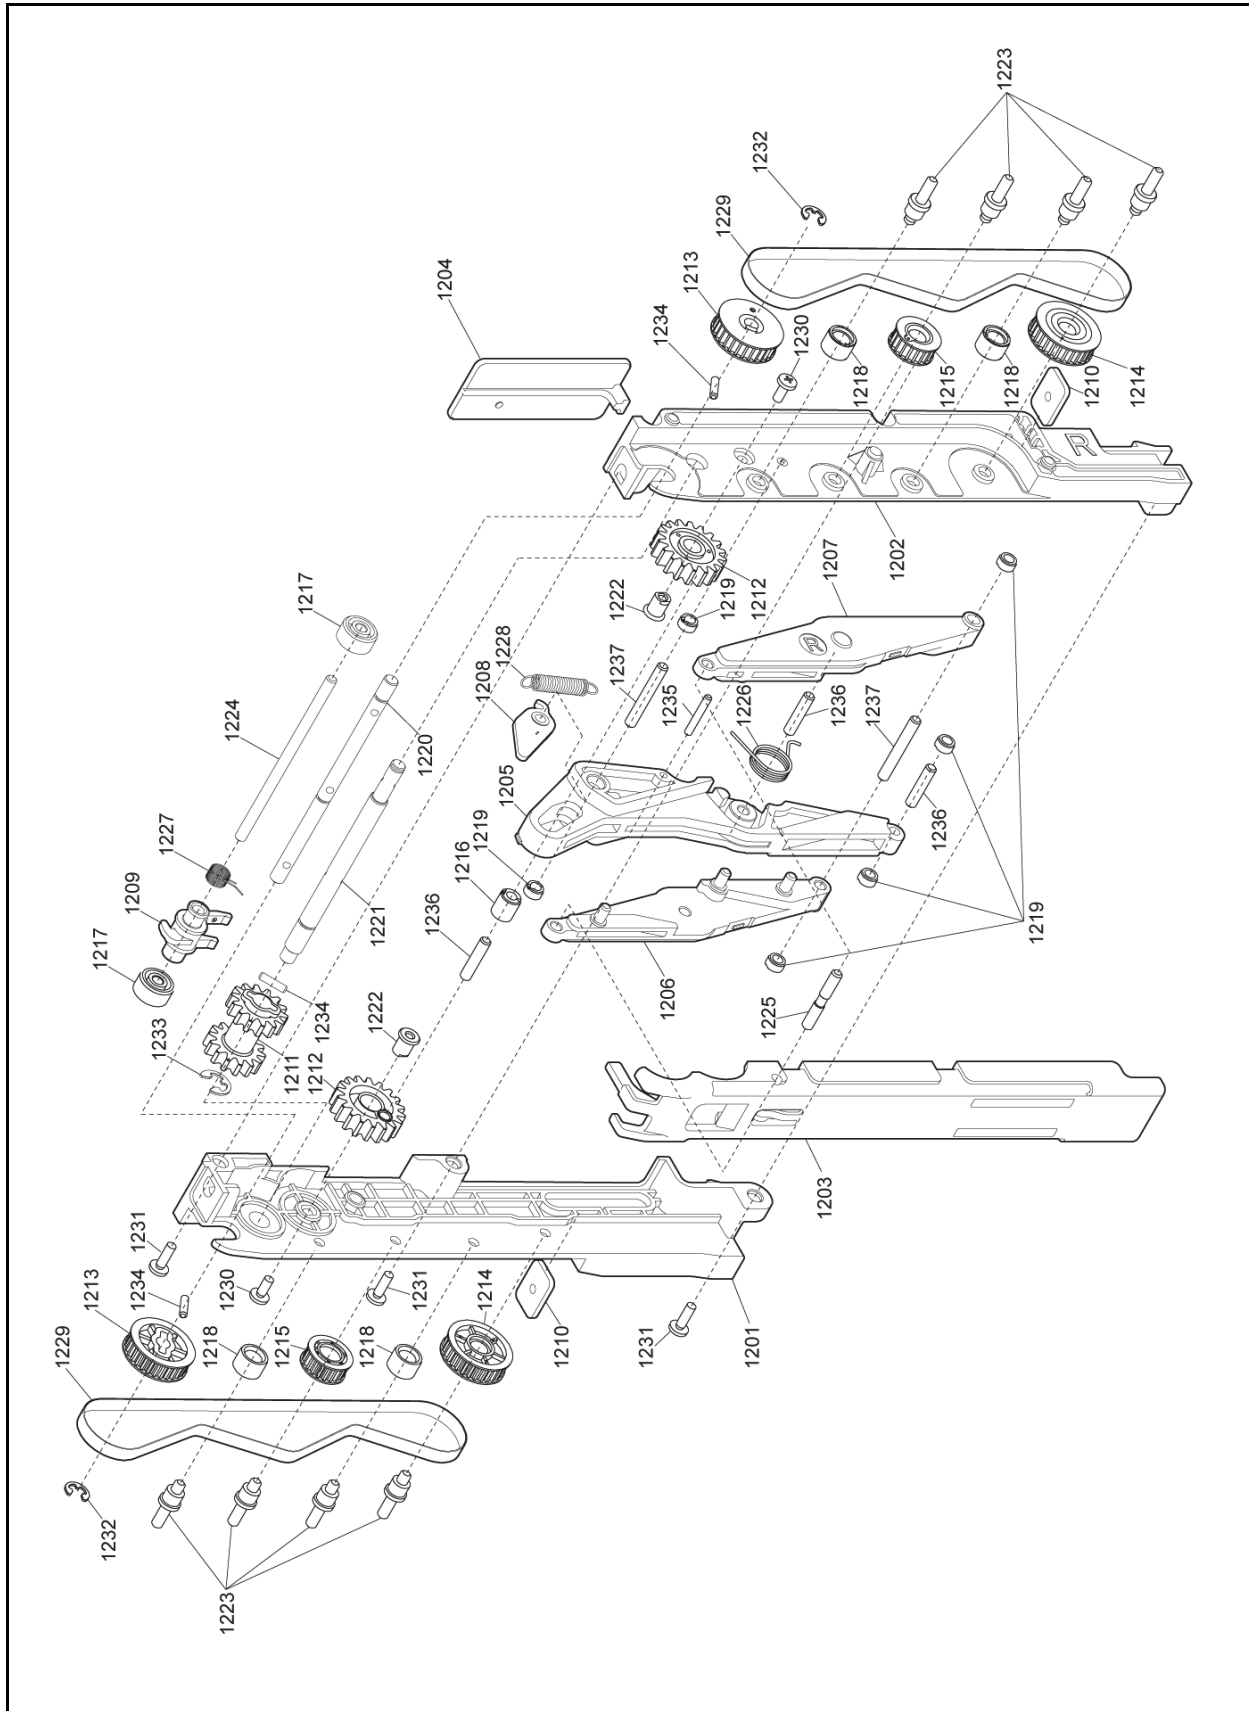


**Figure 7-13** iVIZION Cash Box Unit 2 Exploded View

**iVIZION Cash Box Unit 2 Parts List****Table 7-13** iVIZION Cash Box Unit 2 Parts List

Ref No.	EDP No.	Description	Qty	Remark
1201	147953	Frame Inner L	1	
1202	147954	Frame Inner R	1	
1203	147955	Arm Pusher	1	
1204	147956	Arm Slide Lever	1	
1205	147958	Arm Center	1	
1206	147959	Arm Left	1	
1207	147960	Arm Right	1	
1208	147961	Home Position Lever	1	
1209	147963	Stack Guide	1	
1210	147796	Plate Nut	2	
1211	147918	Arm Drive Gear	1	
1212	147919	Arm Link Gear	2	
1213	147926	Feed Drive Pulley	2	
1214	147927	Feed Driven Pulley	2	
1215	147928	Feed Idol Pulley	2	
1216	147931	Link Roller	1	
1217	147932	Feed Roller	2	
1218	147933	Feed Idol Roller	4	
1219	185197	Arm Slide Roller	6	
1220	147937	Feed Shaft	1	
1221	147938	Stack Shaft	1	
1222	147939	Arm Link Shaft	2	
1223	147821	Feed Pulley Shaft	8	
1224	147940	Pin 0360	1	
1225	147822	Arm Link Pin	1	
1226	147765	Arm Spring	1	
1227	232818	Stack Guide Spring	1	
1228	147990	Home Position Lever Spring	1	
1229	148033	Timing Belt (Eco Specifications)	2	
1230	003598	M2.6×6 Pan Head Screw with Washer 3M	2	
1231	056165	2.6×8 Phillips, Self-Tapping Binding Head Screw 3M	3	
1232	104035	Φ3 E-Ring	2	
1233	104036	Φ4 E-Ring	1	
1234	104027	Φ2x8 Parallel Pin Sustainer	3	
1235	064863	Φ2x14 Parallel Pin Sustainer	1	
1236	066091	Φ3x14 Parallel Pin Sustainer	3	
1237	061317	Φ3x22 Parallel Pin Sustainer	2	


### iVIZION Cash Box Unit 3 Exploded View

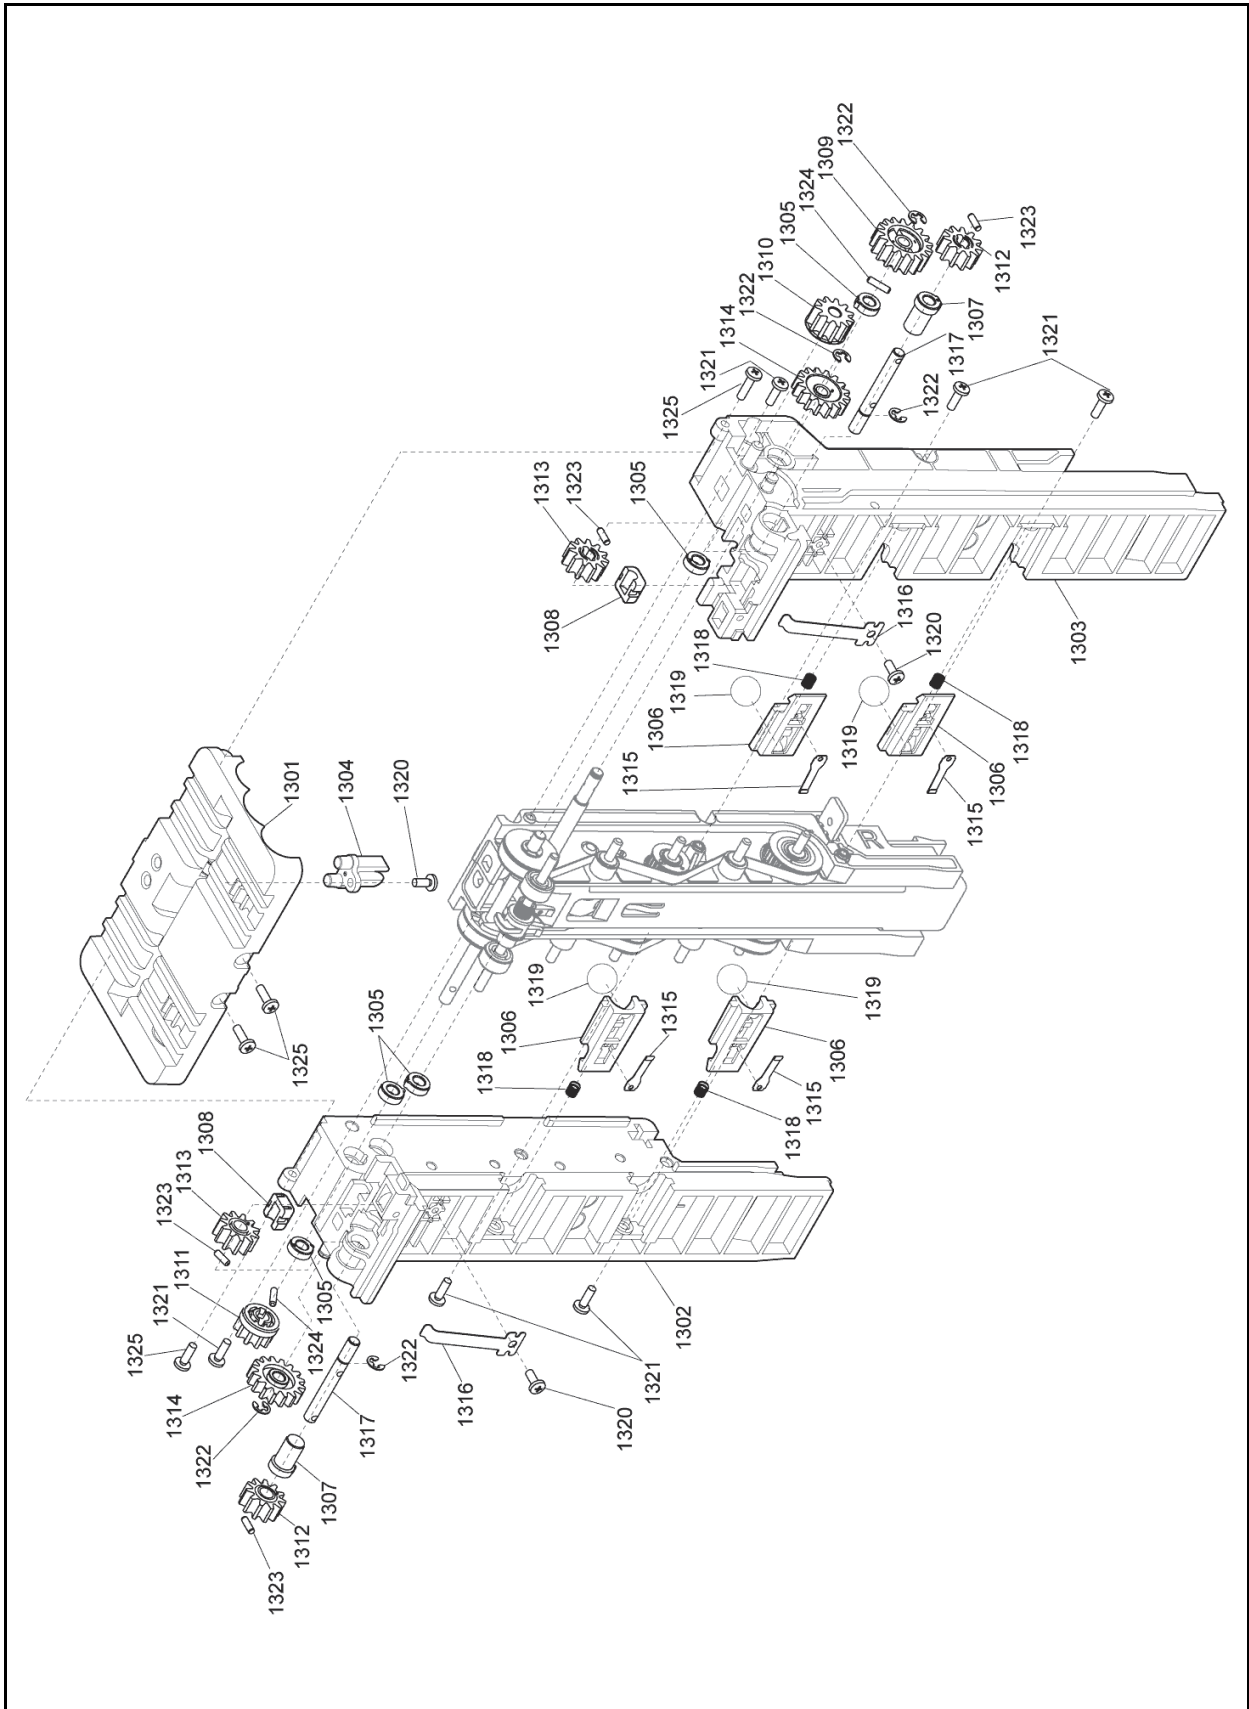

**Figure 7-14** iVIZION Cash Box Unit 3 Exploded View

**iVIZION Cash Box Unit 3 Parts List****Table 7-14** iVIZION Cash Box Unit 3 Parts List

Ref No.	EDP No.	Description	Qty	Remark
1301	147950	Unit Cover	1	
1302	147951	Frame Outer L	1	
1303	147952	Frame Outer R	1	
1304	147957	Home Position Prism	1	
1305	147962	Bearing 0804	5	
1306	147964	Ball Guide Spring	4	
1307	148536	Bearing Connect	2	
1308	185198	Frame Bush	2	
1309	147915	Stack Gear	1	
1310	147916	Stack Idol Gear	1	
1311	147917	Feed Gear	1	
1312	147920	Drive Gear	2	
1313	147921	Connect Gear	2	
1314	185196	Idol Gear	2	
1315	147797	Ball Spring	4	
1316	147798	Feed Roller Spring	2	
1317	147936	Connect Gear Shaft	2	
1318	147751	Ball Guide Spring	4	
1319	148029	Poly Acetal Ball 3/8 inch High Level	4	
1320	104418	2.6x6 Phillips, Self-Tapping, Binding Head Screw (Black) 3M	3	
1321	056165	2.6x8 Phillips, Self-Tapping, Binding Head Screw 3M	8	
1322	003706	Φ2.5 E-Ring	5	
1323	104288	Φ2x6 Parallel Pin Sustainer	4	
1324	104027	Φ2x8 Parallel Pin Sustainer	2	
1325	063302	2.6x10 Phillips, Self-Tapping, Binding Head Screw (Black) 3M	2	

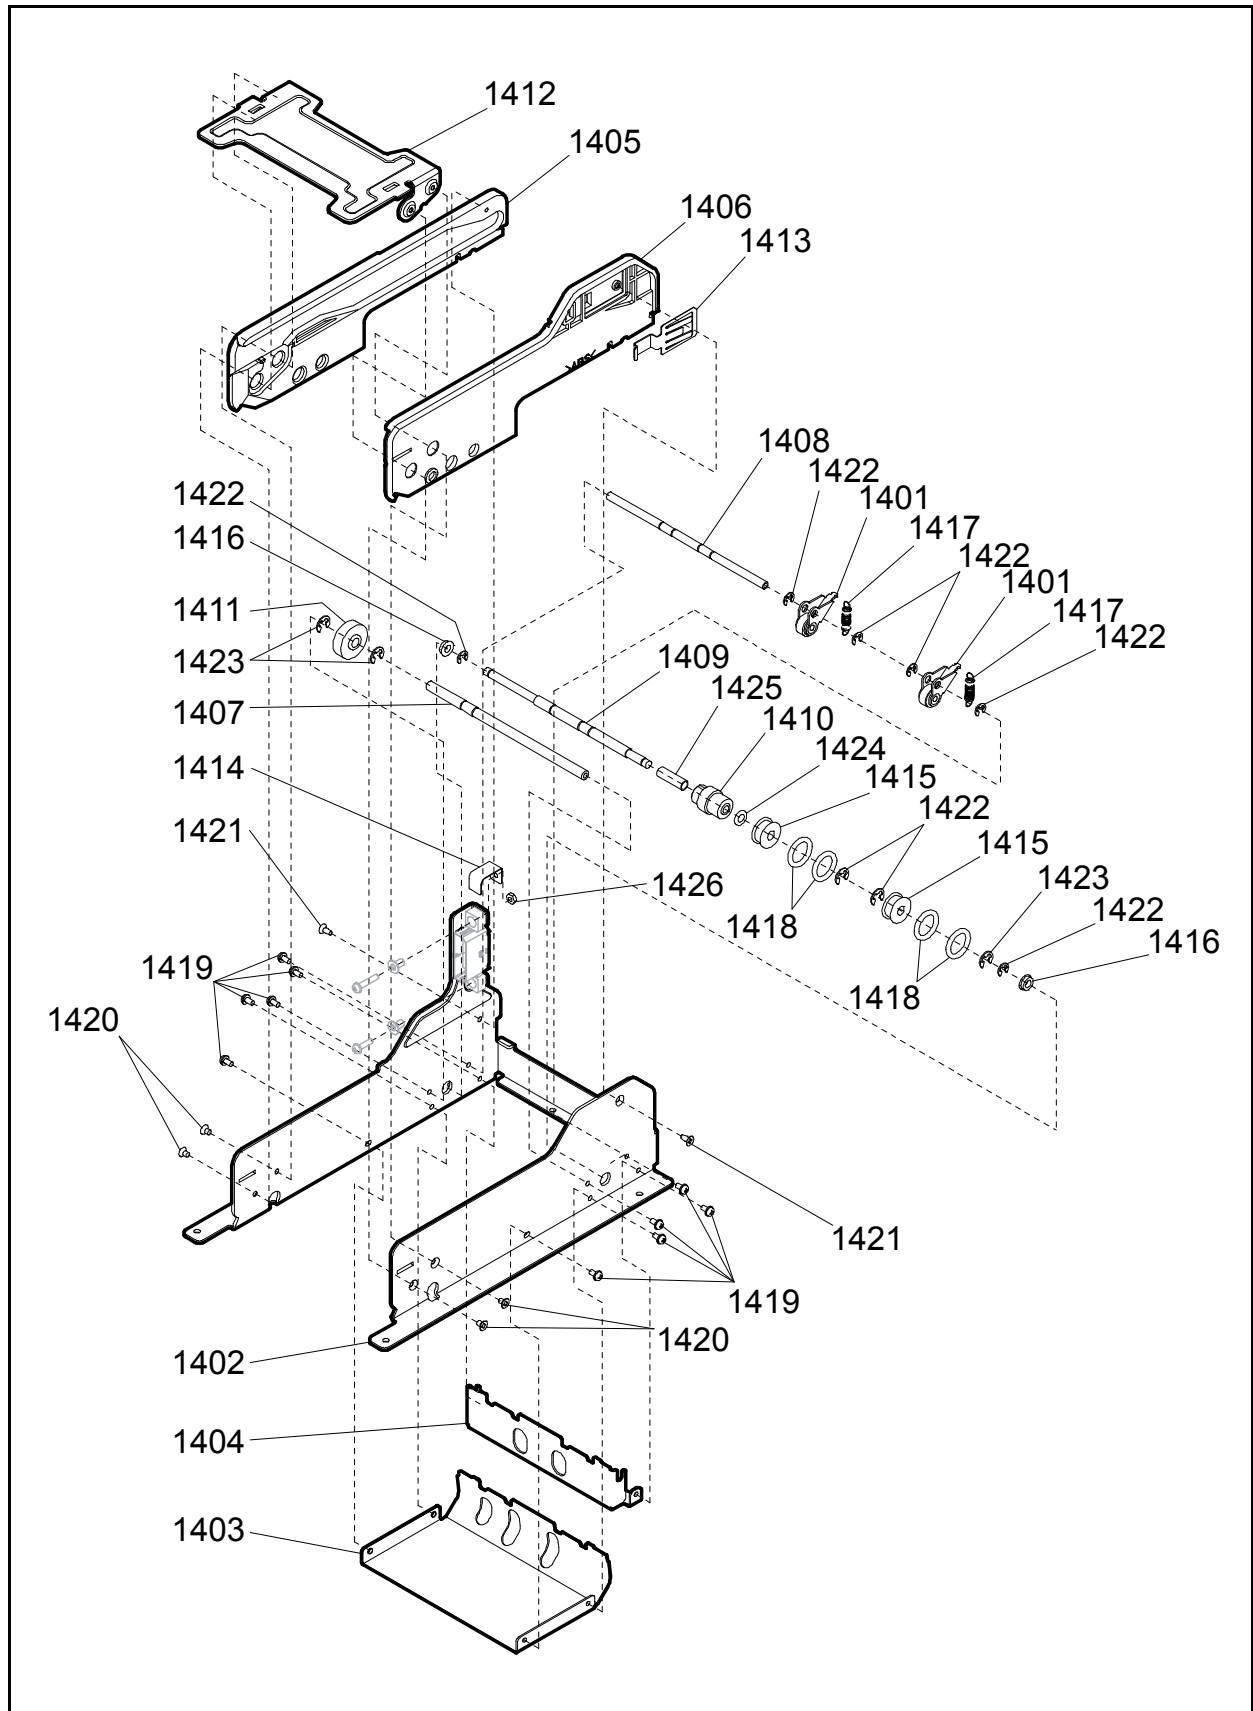
**iVIZION LD Frame Exploded View****Figure 7-15 iVIZION LD Version Frame Exploded View**



**iVIZION LD Frame Parts List****Table 7-15** iVIZION LD Frame Parts List

Ref No.	EDP No.	Description	Qty	Remark
1401	206386	LD Roller Arm Assy.	2	
1402	206378	LD Frame Base	1	
1403	206377	LD Banknote Front Guide	1	
1404	206376	LD Banknote Rear Guide	1	
1405	206379	LD Frame Guide Left	1	
1406	206380	LD Frame Guide Right	1	
1407	206381	LD Idler Beam	1	
1408	206382	LD Roller Arm Beam	1	
1409	206383	LD Roller Shaft	1	
1410	206384	LD One Way Gear	1	
1411	206385	LD Idler Gear	1	
1412	147778	Frame Base Guide	1	
1413	147793	Frame Spring Plate	1	
1414	151784	Frame Ground Plate	1	
1415	052509	OL Roller	2	
1416	034270	Ball Bearing (F674ZZ)	2	
1417	035276	Spring	2	
1418	081620	O-Ring	4	
1419	003596	M2.6x5 Washer	10	
1420	006021	M2.6x4 Flat Screw	4	
1421	052564	Φ2.6x6 Phillips, Self-Tapping, Flat Screw	2	
1422	003707	Φ3 E-Ring	6	
1423	003708	Φ4 E-Ring	5	
1424	206374	Φ4 Plain Washer (Wave Shape)	1	
1425	206375	Φ4x17 Reel Bushing	1	
1426	149426	M2.6 Nylon Nut	1	

## iVIZION HC Frame Exploded View

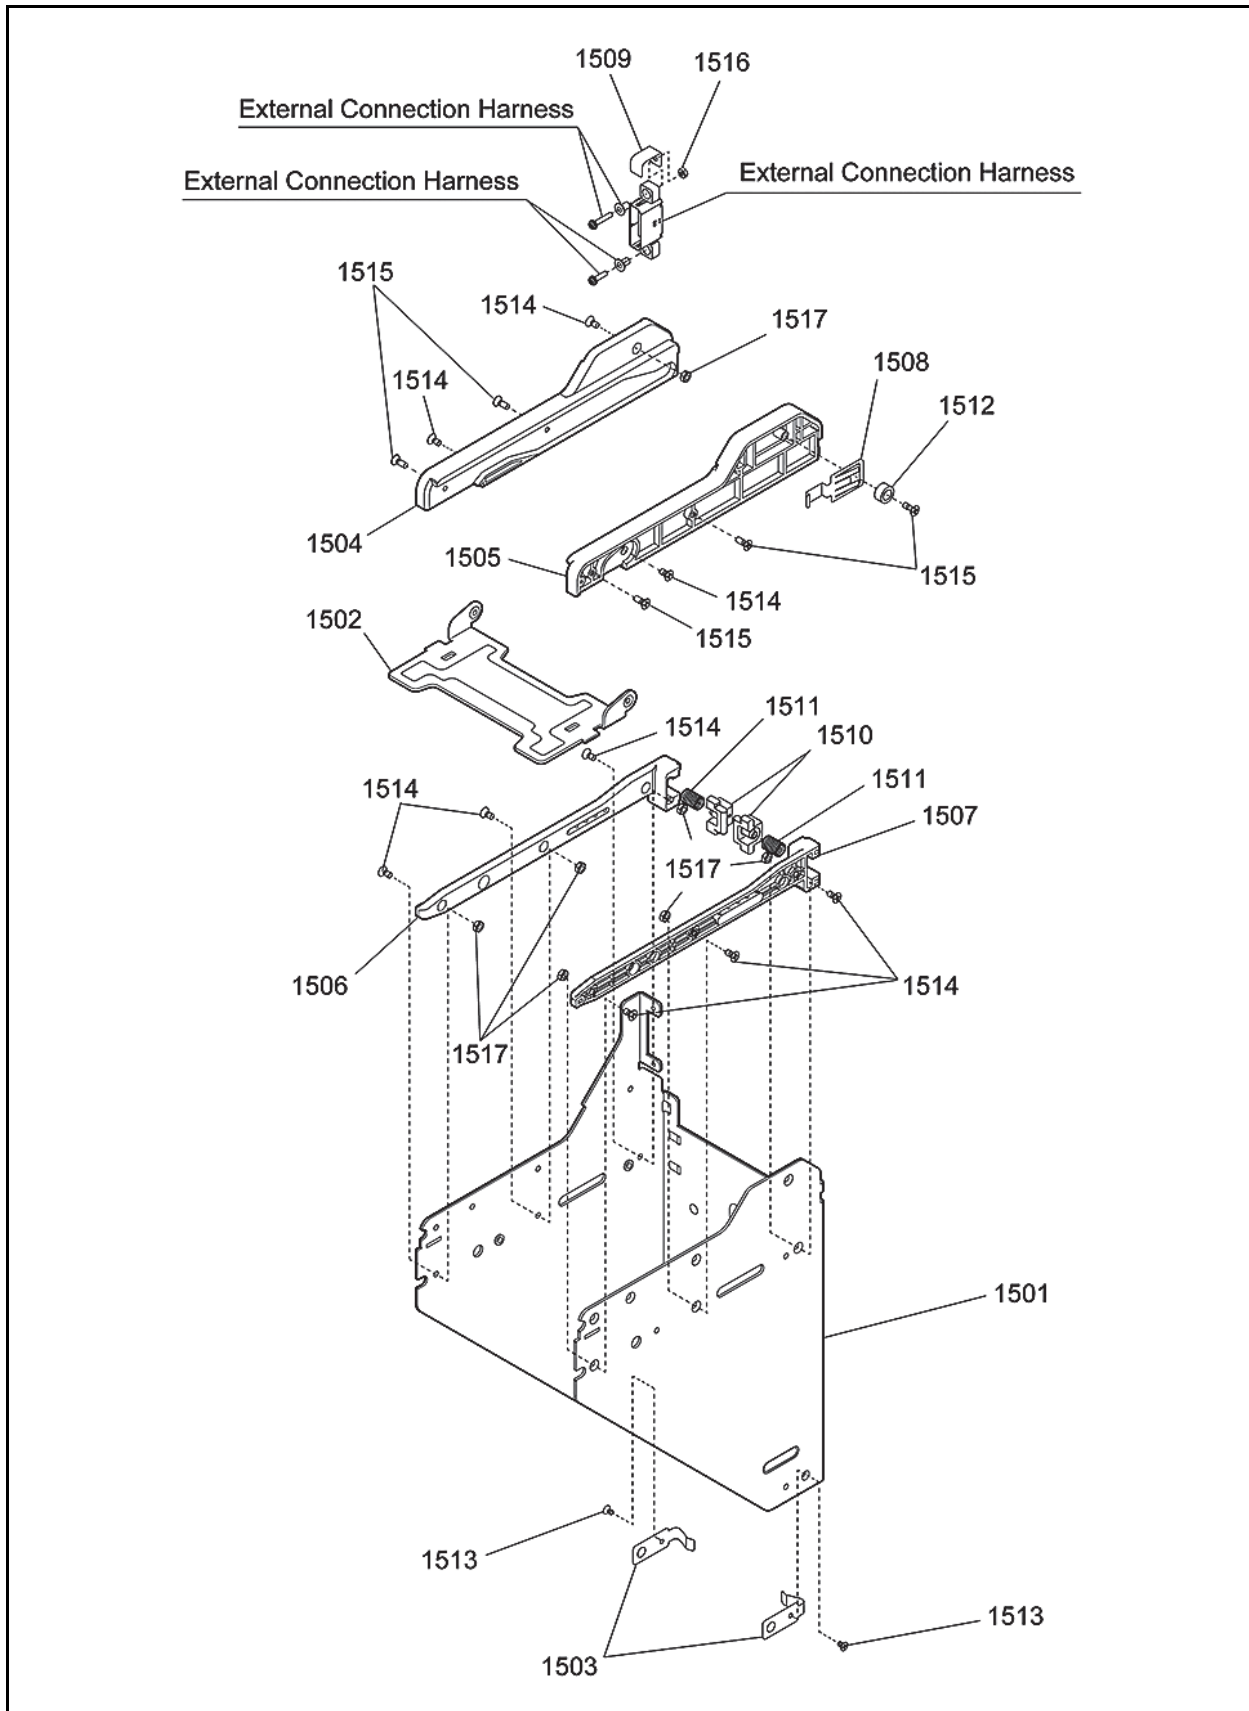


**Figure 7-16** iVIZION HC Frame Exploded View

**iVIZION HC Frame Parts List****Table 7-16** iVIZION HC Frame Parts List

Ref No.	EDP No.	Description	Qty	Remark
1501	226031	HC Frame Base	1	
1502	226032	HC Frame Base Guide	1	
1503	226033	Rear Frame Ground Plate	2	
1504	226034	Frame Transport Guide L	1	
1505	226035	Frame Transport Guide R	1	
1506	226036	Frame Box Guide L	1	
1507	226037	Frame Box Guide R	1	
1508	147793	Frame Spring Plate	1	
1509	151784	Frame Ground Plate	1	
1510	147906	Frame Latch	2	
1511	227687	Hold Spring	2	
1512	226038	Juracon Spacer	1	
1513	006021	M2.6x4 Flat Screw	2	
1514	005769	M3x6 Flat Screw	9	
1515	092229	3x8 Self-tapping Flat Screw	5	
1516	149426	M2.6 Nylon Nut	1	
1517	003675	M3 Hex Nut	7	

## iVIZION HC Box Assembly Exploded View

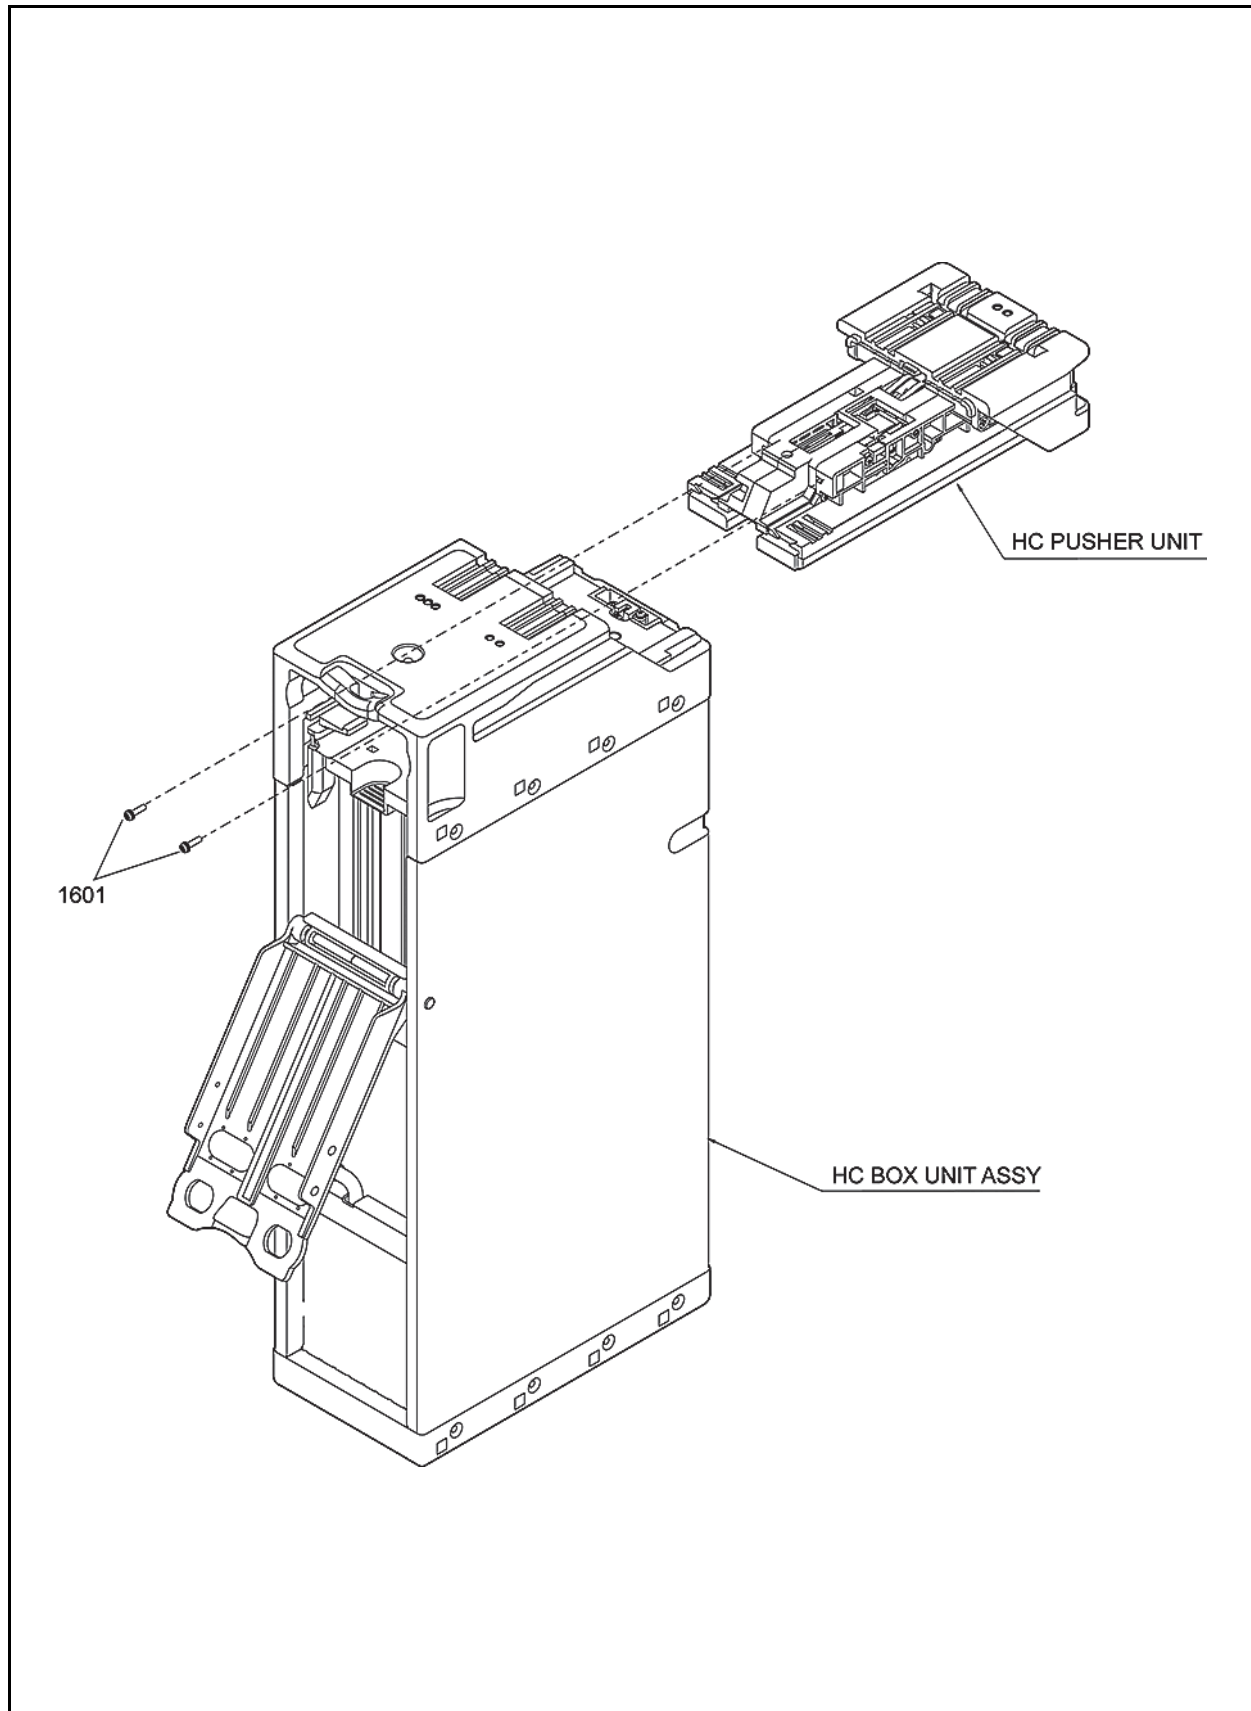


**Figure 7-17** iVIZION HC Box Assembly Exploded View

**iVIZION HC Box Assembly Parts List****Table 7-17** iVIZION HC Box Assembly Parts List

Ref No.	EDP No.	Description	Qty	Remark
1601	006037	M3x12 W Washer (Small)	2	

## iVIZION HC Box Unit Exploded View

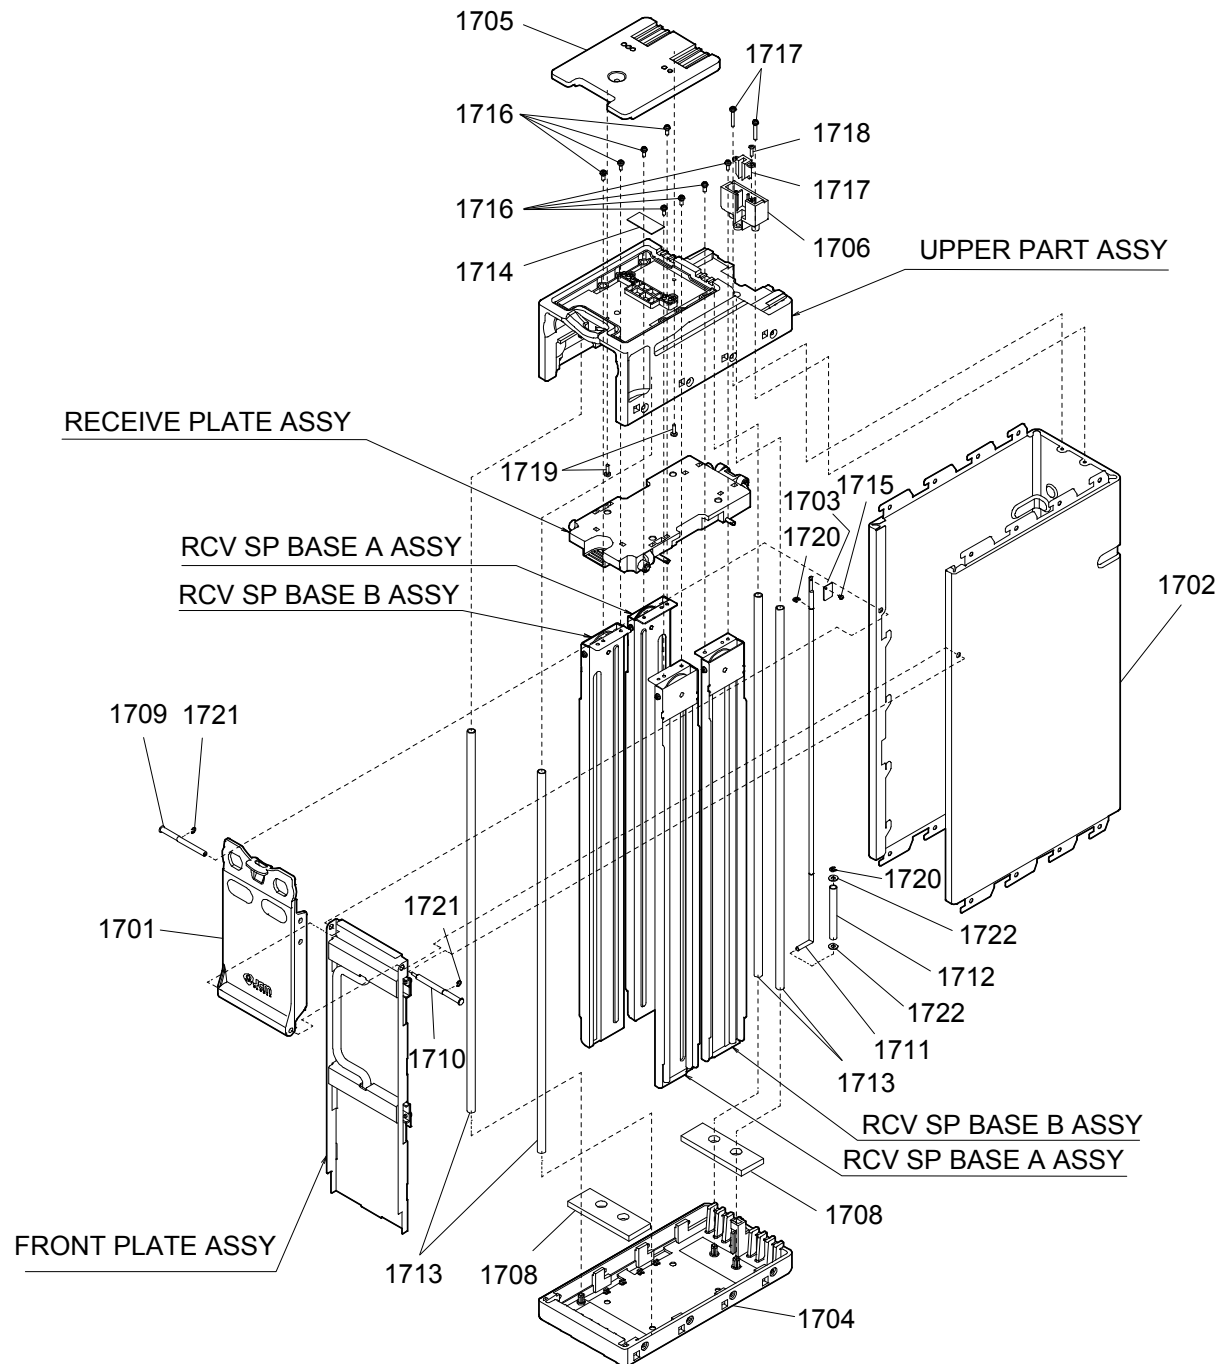

**Figure 7-18** iVIZION HC Box Unit Exploded View


**iVIZION HC Box Unit Parts List****Table 7-18** iVIZION HC Box Unit Parts List

Ref No.	EDP No.	Description	Qty	Remark
1701	226039	HC Box Door Assy	1	
1702	226048	HC Box Main Plate	1	See Footnote*
1703	226051	Interrupt Plate	1	
1704	226041	HC Box Lower Part	1	See Footnote*
1705	226042	HC Box Top Cover	1	
1706	226043	HC Box Near Full Case	1	
1707	226046	Near Full Prism B	1	
1708	226067	Bottom Sponge Sheet	2	
1709	226058	HC Door Hinge A	1	
1710	226059	HC Door Hinge B	1	
1711	226060	Near Full Shaft A	1	
1712	226056	Near Full Spring	1	
1713	226069	Receive Plate Guide	4	
1714	146785	RFID Tag	1	
1715	047278	M2x3 Washer	1	
1716	003611	M3x8 W Washer (Small)	8	
1717	006482	M3x20 W Washer (Small)	2	
1718	071182	2.6x10 Self-tapping Binding Screw	1	
1719	107111	3x10 Self-tapping Binding Screw	2	
1720	091516	φ3 E-Ring	2	
1721	003718	Crescent Stopper	2	
1722	052669	φ4 Plain Washer (Large Washer)	2	

\*. This part requires specific tools to assemble and individual parts are not available.



## iVIZION HC Upper Part Exploded View

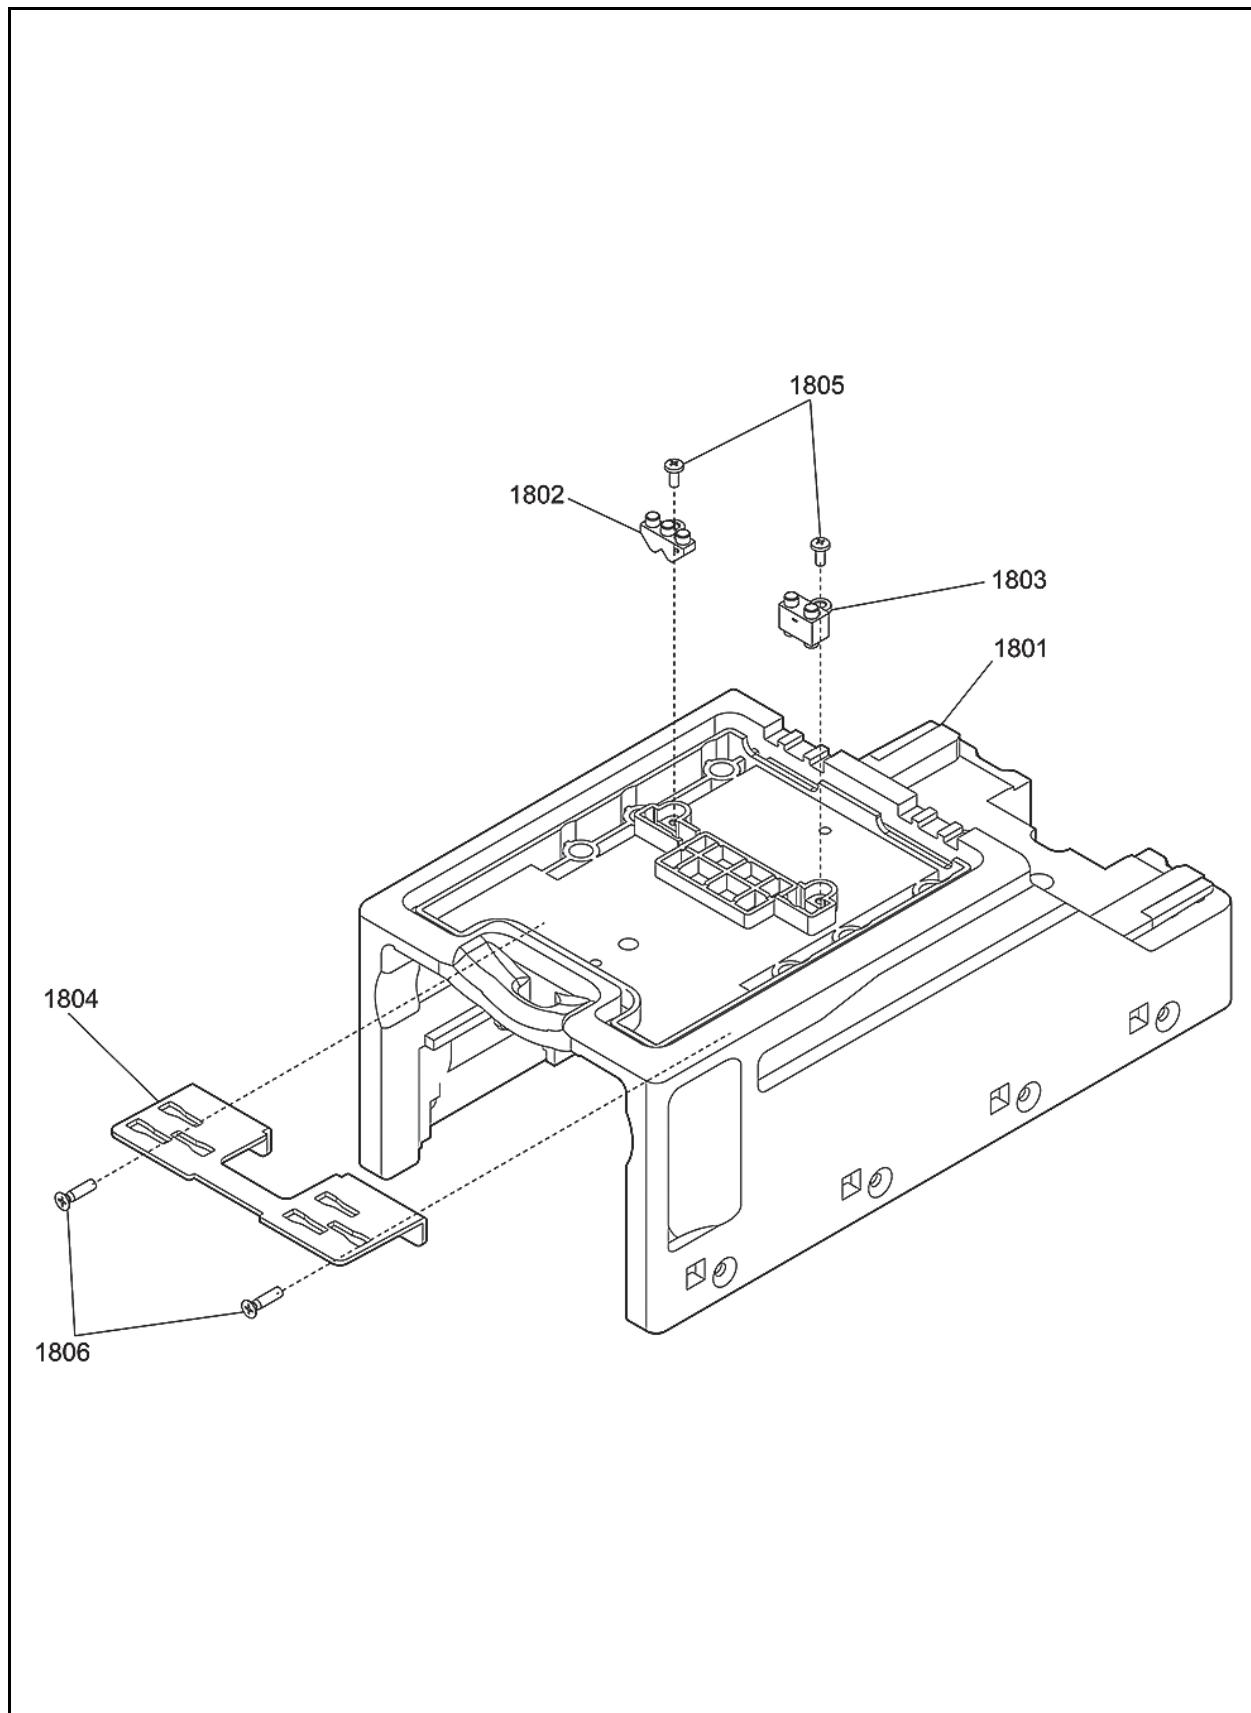


**Figure 7-19** iVIZION HC Upper Part Exploded View

**iVIZION HC Upper Part Parts List****Table 7-19** iVIZION Upper Part Parts List

Ref No.	EDP No.	Description	Qty	Remark
1801	226040	HC Box Upper Part	1	
1802	226044	Box Detection Prism	1	
1803	226045	Stud Home Prism A	1	
1804	147794	Lock Bracket	1	
1805	063250	2.6x6 Self-tapping Binding Screw	2	
1806	060794	3x12 Self-tapping Binding Screw	2	

## iVIZION HC Receive Plate Assembly Exploded View

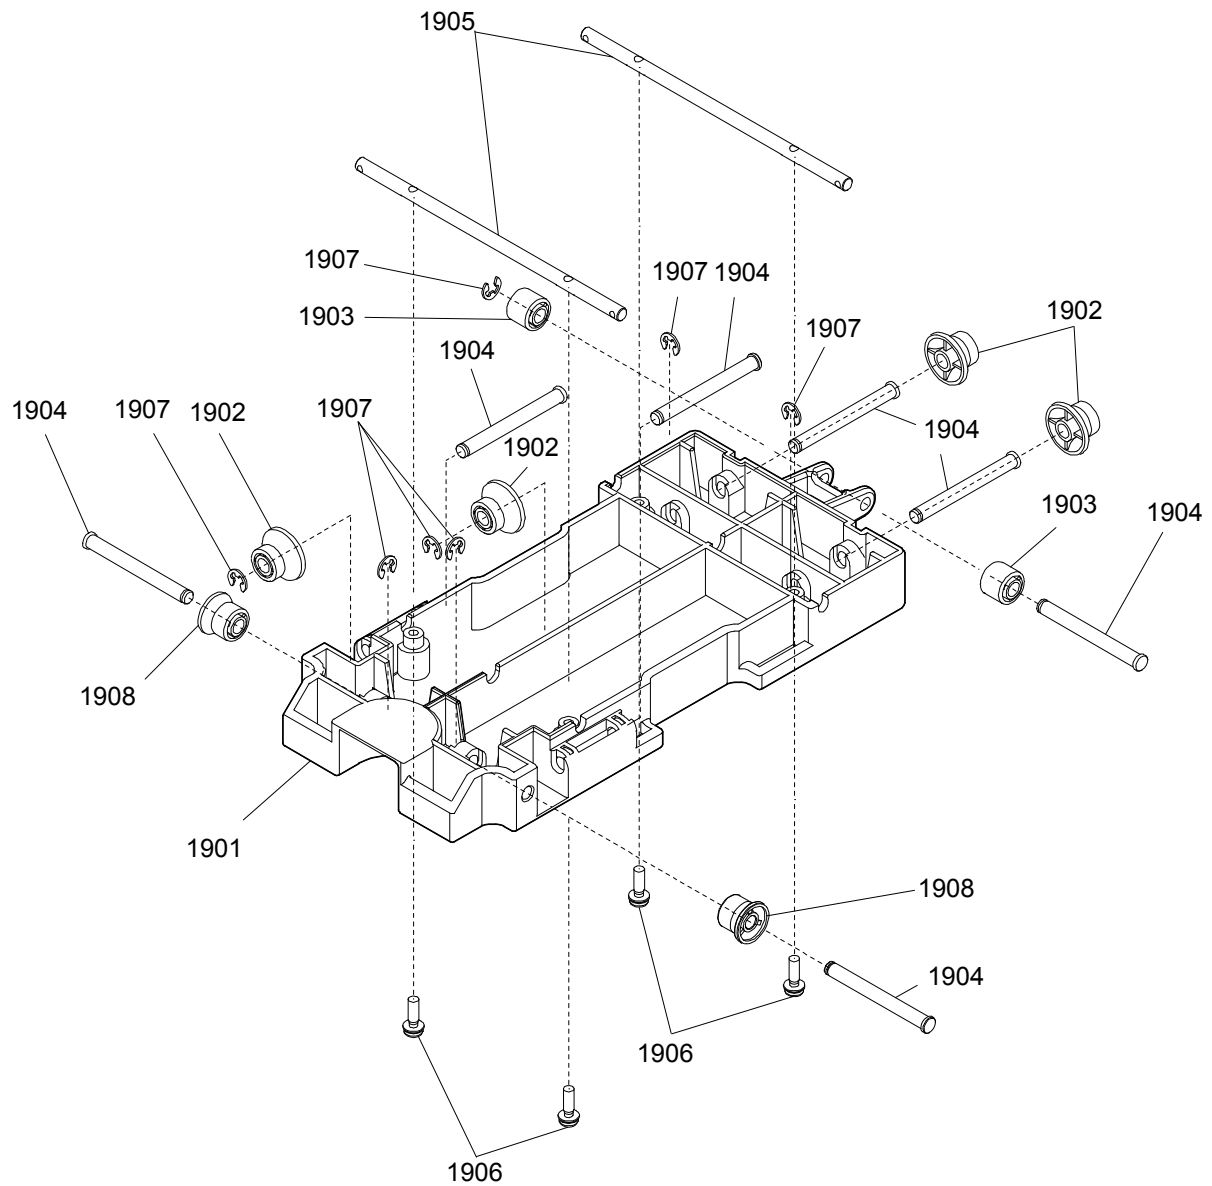


**Figure 7-20** iVIZION HC Receive Plate Assembly Exploded View

**iVIZION HC Receive Plate Assembly Parts List****Table 7-20** iVIZION HC Receive Plate Assembly Parts List

Ref No.	EDP No.	Description	Qty	Remark
1901	226047	Receive Plate	1	
1902	226064	Receive Roller A	4	
1903	226065	Receive Roller B	2	
1904	226061	Receive Plate Shaft A	7	
1905	226062	Receive Plate Shaft B	2	
1906	013536	M3x10 W Washer (Small)	4	
1907	091516	φ3 E-Ring	7	
1908	230490	Receive Roller C	2	


## iVIZION HC Receive Spring Base Assembly Exploded View

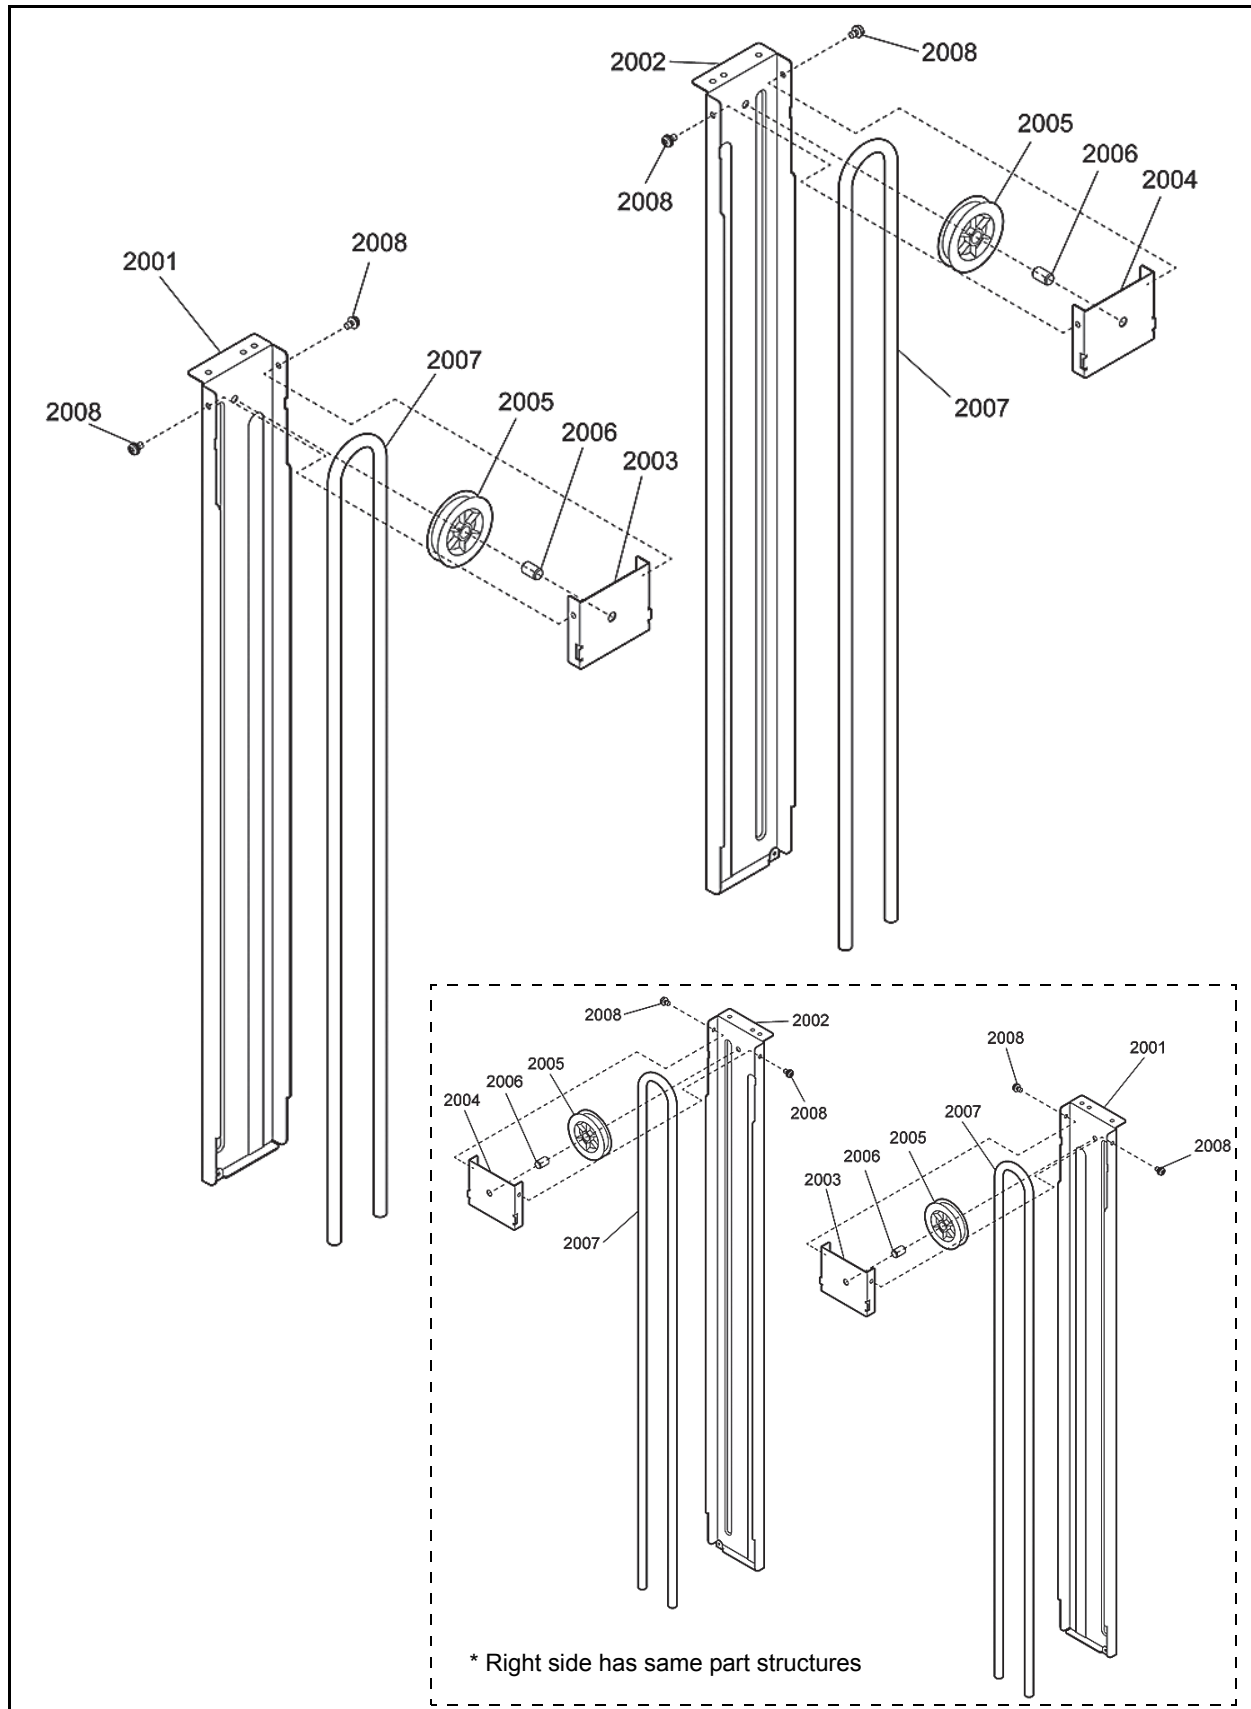

**Figure 7-21** iVIZION HC Receive Spring Base Assembly Exploded View

**iVIZION HC Receive Spring Base Assembly Parts List****Table 7-21** iVIZION HC Receive Spring Base Assembly Parts List


Ref No.	EDP No.	Description	Qty	Remark
2001	226052	Receive Spring Base B	2	
2002	226053	Receive Spring Base A	2	
2003	226054	Receive Spring Cover A	2	
2004	226055	Receive Spring Cover B	2	
2005	226066	Receive Spring Pulley	4	
2006	226063	Receive Plate Shaft C	4	
2007	226057	Receive Plate Spring	4	
2008	001767	M3x5 W Washer (Small)	8	

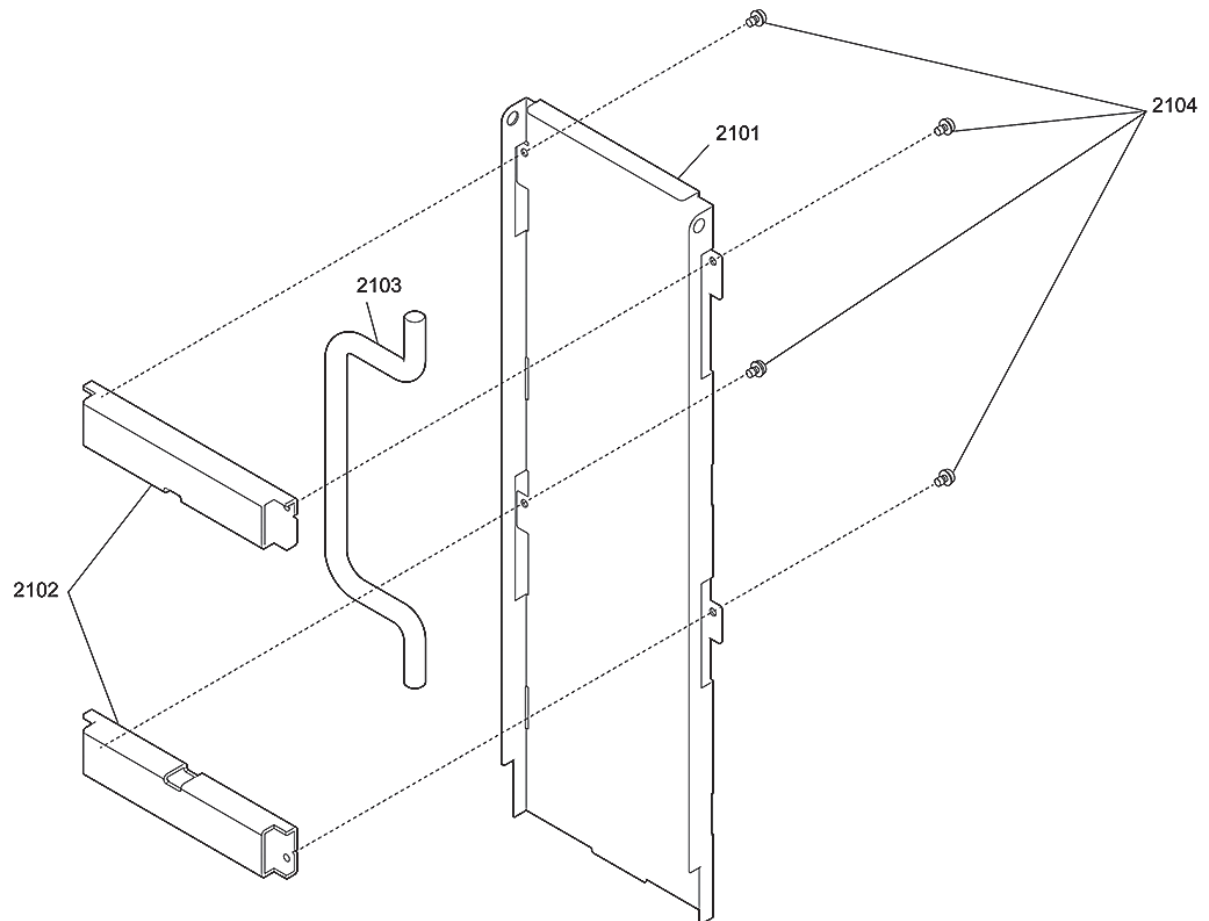**iVIZION HC Front Plate Assembly Exploded View****Figure 7-22** iVIZION HC Front Plate Assembly Exploded View



**iVIZION HC Front Plate Assembly Parts List****Table 7-22** iVIZION HC Front Plate Assembly Parts List


Ref No.	EDP No.	Description	Qty	Remark
2101	226049	HC Box Front Plate	1	
2102	226050	HC Box Handle Hinge	2	
2103	226068	HC Box Handle	1	
2104	001767	M3x5 W Washer (Small)	4	

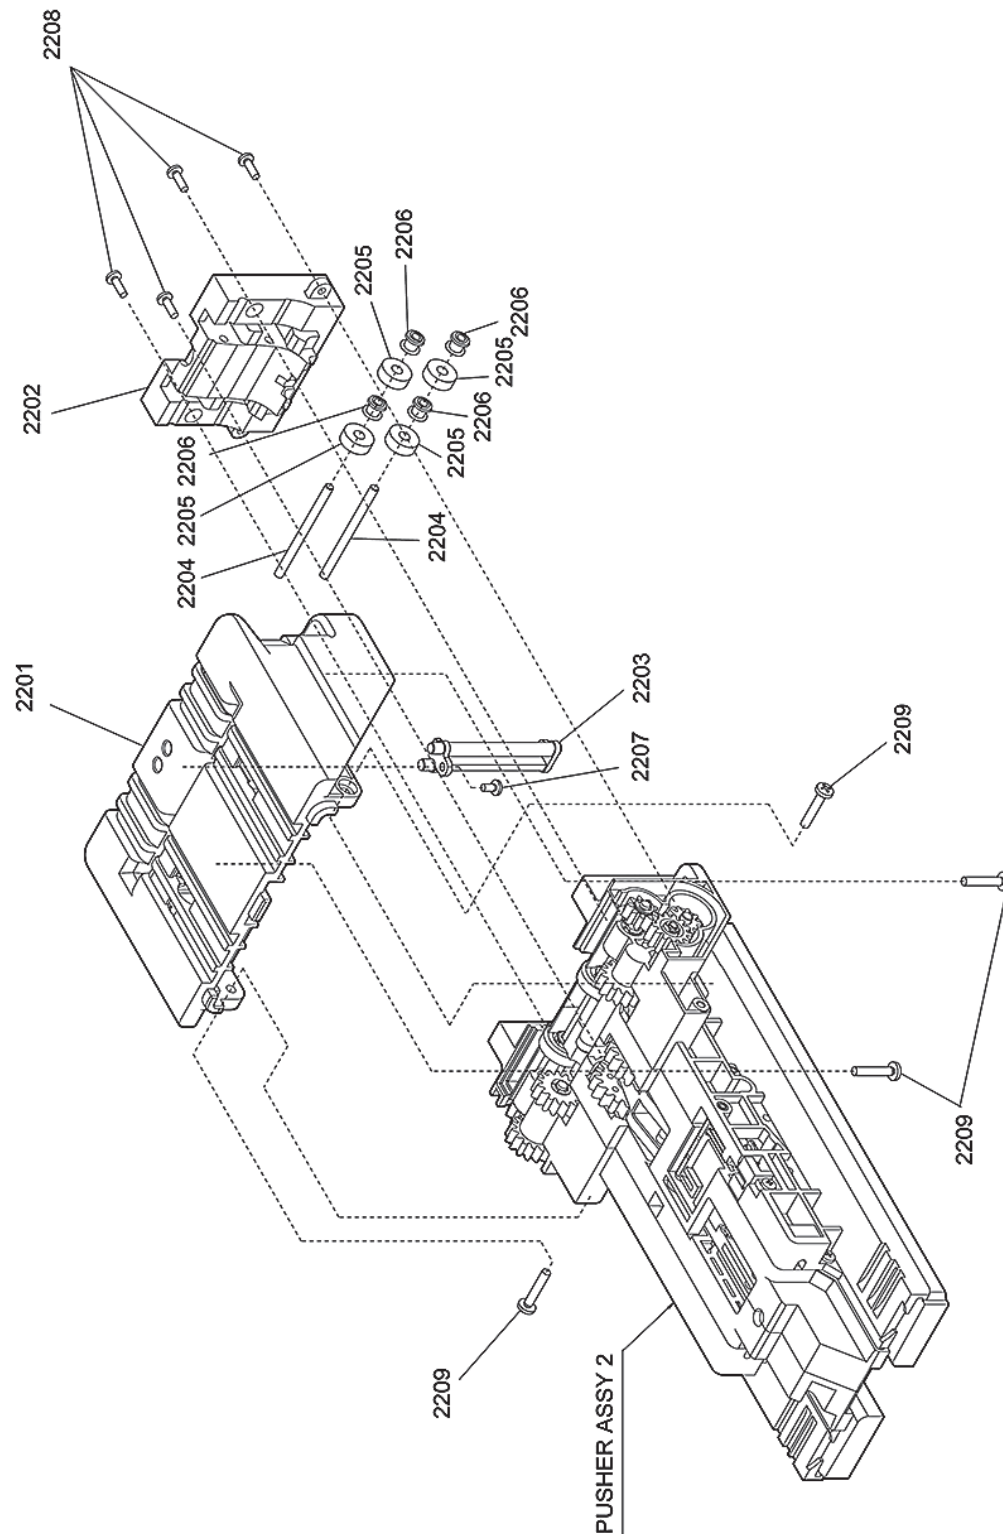**iVIZION HC Pusher Unit Exploded View****Figure 7-23** iVIZION HC Pusher Unit Assembly Exploded View

**iVIZION HC Pusher Unit Parts List****Table 7-23** iVIZION HC Pusher Unit Parts List

Ref No.	EDP No.	Description	Qty	Remark
2201	226072	HC Box Stacker Base	1	
2202	226076	Centering Guide	1	
2203	226080	Near Full Prism A	1	
2204	226085	Stacker Transport Shaft D	2	
2205	230643	Shaft Sponge Roller	4	
2206	147966	Transport Roller Core	4	
2207	058274	2.6x5 Self-tapping Binding Screw	1	
2208	056165	2.6x8 Self-tapping Binding Screw	4	
2209	226104	3x18 Self-tapping Binding Head Screw	4	

## iVIZION HC Pusher Assembly 1 Exploded View

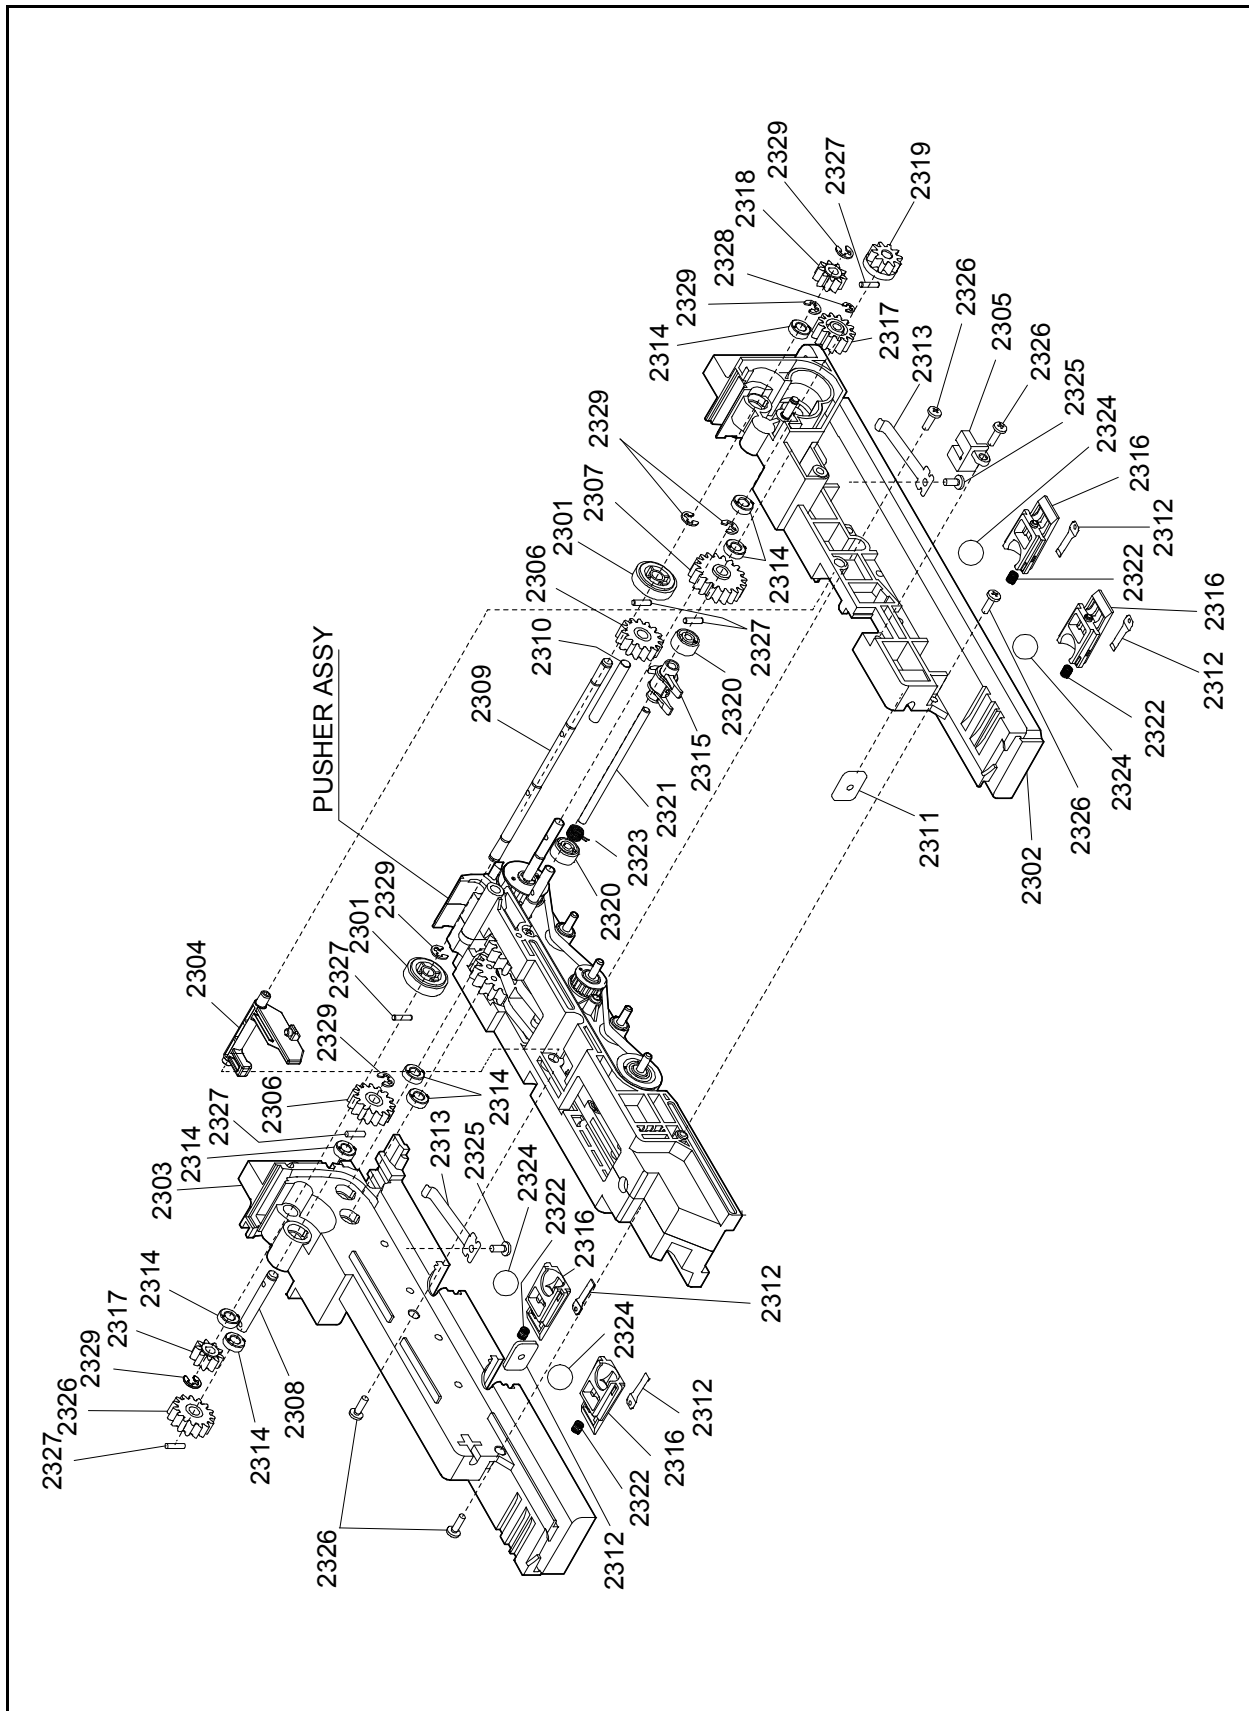


**Figure 7-24** iVIZION HC Pusher Assembly 1 Exploded View

**iVIZION HC Pusher Assembly 1 Parts List****Table 7-24** iVIZION HC Pusher Assembly 1 Parts List

Ref No.	EDP No.	Description	Qty	Remark
2301	226070	Transport Feed Roller Assy	2	
2302	226071	Outside Guide R Assy	1	
2303	226075	Outside Guide L Assy	1	
2304	226078	Stud Home Lever	1	
2305	226079	Stud Home Prism	1	
2306	226098	Connecting Gear	3	
2307	226093	Gear Stack A	1	
2308	226082	Stacker Transport Shaft A	1	
2309	226083	Stacker Transport Shaft B	1	
2310	226086	Stacker Stud Shaft A	1	
2311	147796	Plate Nut	2	
2312	147797	Ball Spring	4	
2313	147798	Feed Roller Spring	2	
2314	147962	Bearing 0804	8	
2315	147963	Stack Guide	1	
2316	147964	Ball Guide	4	
2317	147756	Gear Transport Stud 2	2	
2318	147758	Gear Pulley Drive	1	
2319	147917	Feed Gear	1	
2320	147932	Feed Roller	2	
2321	147940	Pin 0360	1	
2322	147751	Bill Guide Spring	4	
2323	227688	HC Box Stack Guide Spring	1	
2324	148029	POM 3/8 inch	4	
2325	063250	2.6x6 Self-tapping Binding Screw	2	
2326	056165	2.6x8 Self-tapping Binding Screw	5	
2327	104027	2x8 Parallel Pin (Hard)	6	
2328	091517	φ2 E-Ring	1	
2329	091516	φ3 E-Ring	7	

## iVIZION HC Pusher Assembly 2 Exploded View

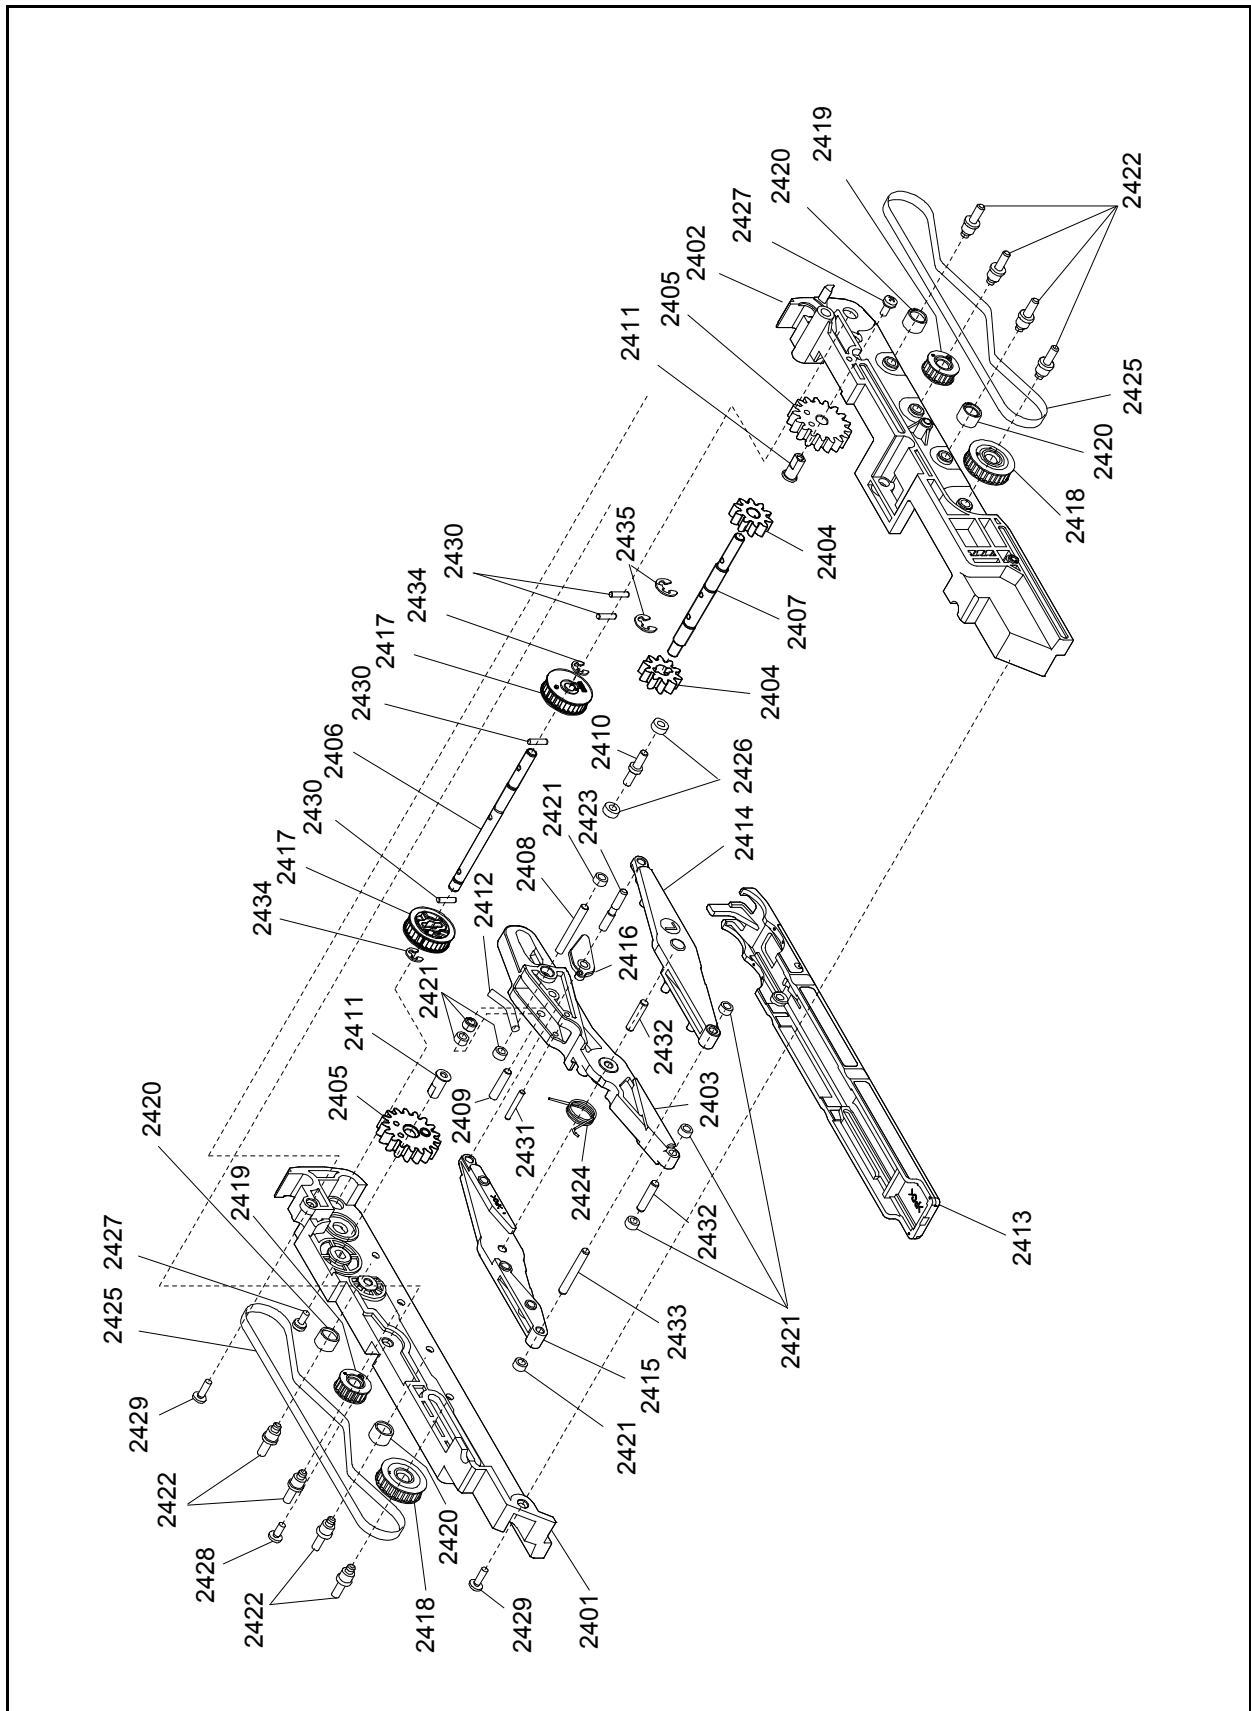


**Figure 7-25** iVIZION HC Pusher Assembly 2 Exploded View

**iVIZION HC Pusher Assembly 2 Parts List****Table 7-25** iVIZION HC Pusher Assembly 2 Parts List

Ref No.	EDP No.	Description	Qty	Remark
2401	226073	Inside Guide L	1	
2402	226074	Inside Guide R	1	
2403	226077	Arm Pusher	1	
2404	226094	Gear Stack B	2	
2405	226095	Gear Stack C	2	
2406	226084	Stacker Transport Shaft C	1	
2407	226087	Stacker Stud Shaft B	1	
2408	226088	Stacker Stud Shaft C	1	
2409	226089	Stacker Stud Shaft D	1	
2410	226090	Stacker Stud Shaft E	1	
2411	226091	Stacker Stud	2	
2412	226081	Stacker Arm Spring	1	
2413	147955	Arm Pusher Base	1	
2414	147959	Arm Left	1	
2415	147960	Arm Right	1	
2416	147961	Home Position Lever	1	
2417	147926	Feed Drive Pulley	2	
2418	147927	Feed Driven Pulley	2	
2419	147928	Feed Idol Pulley	2	
2420	147933	Feed Idol Roller	4	
2421	185197	Arm Slide Roller	8	
2422	147821	Feed Pulley Shaft	8	
2423	147822	Arm Link Pin	1	
2424	147765	Arm Spring	1	
2425	148033	Timing Belt	2	
2426	226096	Bearing	2	
2427	005555	2.6x6 W Washer (Small)	2	
2428	063250	2.6x6 Self-tapping Binding Screw	1	
2429	056165	2.6x8 Self-tapping Binding Screw	2	
2430	104027	2x8 Parallel Pin (Hard)	4	
2431	064863	2x14 Parallel Pin (Hard)	1	
2432	066091	3x14 Parallel Pin (Hard)	2	
2433	061317	3x22 Parallel Pin (Hard)	1	
2434	091516	φ3 E-Ring	2	
2435	104036	φ4 E-Ring	2	

## iVIZION Optional Components Exploded Views

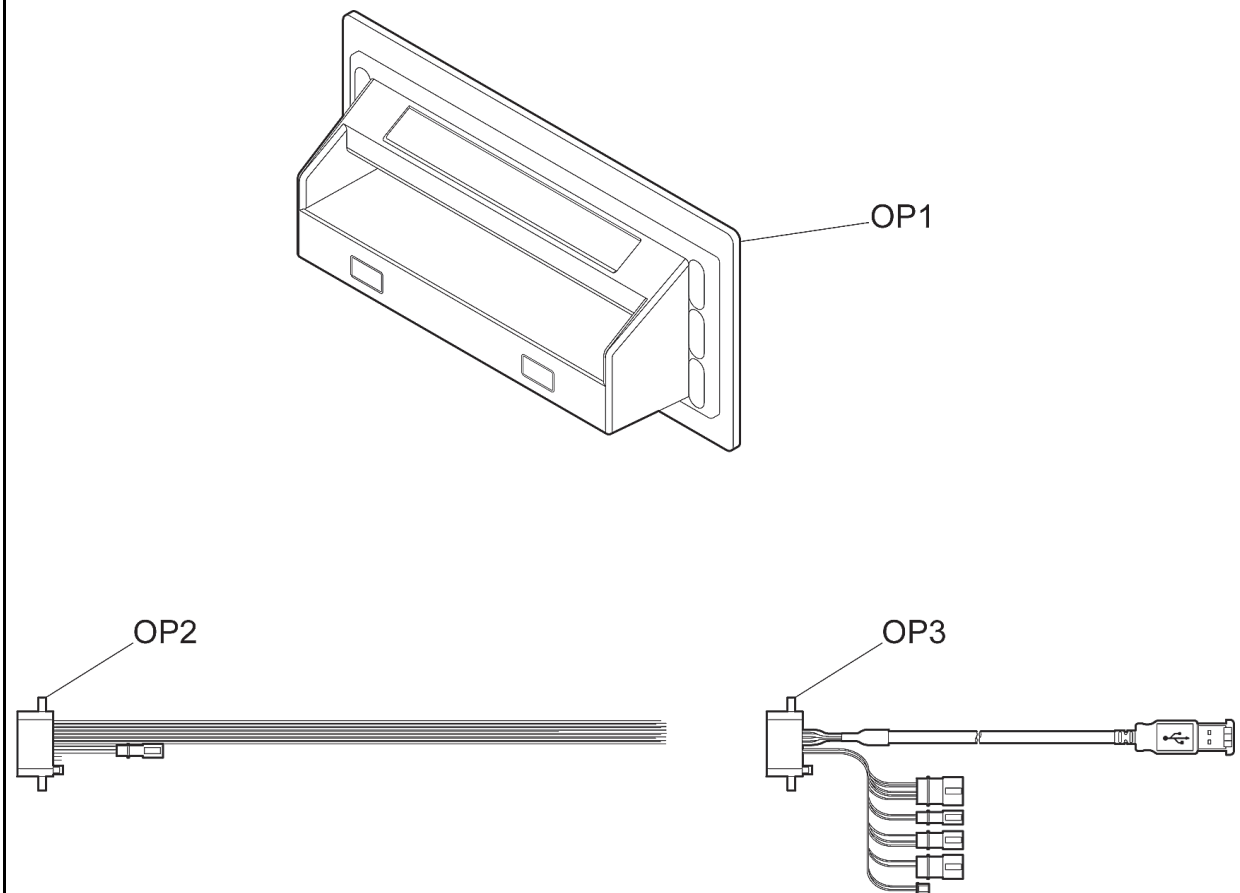

**Figure 7-26** iVIZION Optional Components Exploded Views



**iVIZION Optional Components Parts List****Table 7-26** iVIZION Optional Components Parts List

Ref No.	EDP No.	Description	Qty	Remark
OP1	196590	iVIZION Bezel SS Type 1 RoHS	1	Black/Green LED
	196591	iVIZION Bezel SS Type 2 RoHS	1	Blue/Blue LED (2 Line)
	196592	iVIZION Bezel SS Type 3 RoHS	1	Green/Green LED (2 Line)
OP2	185884	Interface Harness	1	One Side Clipping, Non-USB/IF, JCM Basic Harness
OP3	193582	Interface Harness	1	Connectors and USB/IF

# iVIZION® Series

## Next-Generation Banknote Acceptor Unit

### Section 8

## 8 INDEX

	<b>B</b>	
Banknote Jam		Preparation for ...6-8
clearing a ...2-10		Performance Test
	<b>C</b>	Requirements for ...6-11, 6-16
Calibration		Performance Testing
Methods of ...6-6		instructions for ...6-1
Tool requirements for ...6-7		Pin Assignments
Cautions		Table listing primary connector ...2-4, 2-5, 2-6, 2-7, 2-8, 2-9
high temperature, high humidity or dusty areas		Precautionary Symbols
storage in ...1-2		types of ...1-2
Cleaning		<b>S</b>
methods of, and equipment required for ...2-10		Safety
Communications		pictographs indicating
criteria regarding receipt of ...3-1		1 to 3 symbols inside boxed area ...1-1
Contact Information		Special Notes
Address and Telephone Numbers for ...1-17		italic text highlights
	<b>D</b>	finger points to ...1-1
Dimensions		Specifications
entire unit		Electrical
drawing of ...1-10, 1-11		information regarding ...1-7, 1-9
Disassembly/Reassembly		Environmental
instructions for ...4-1		information regarding ...1-7, 1-9
	<b>E</b>	Structural
Exploded View		information regarding ...1-7, 1-9
illustrations of ...7-1		Technical
	<b>F</b>	information regarding ...1-6, 1-8
Faults		Steps
Table Listing of ...A-1		sequential numbering of ...1-1
Flowchart		Symbols
Operational ...2-17		Precautionary
operational ...2-17		definitions of ...1-2
	<b>I</b>	System Wiring Diagram
Installation		Schematic diagram of ...5-1
Processes for ...2-1		<b>T</b>
iVIZION Unit		Tool Requirements
photo of a ...1-1		workbench ...4-1
	<b>N</b>	Troubleshooting
Navigation		Instructions for ...A-1
within manual		<b>W</b>
procedure for ...1-1		Wiring Diagram
	<b>P</b>	system & individual primary part ...5-1
PC Calibration		

THIS PAGE INTENTIONALLY LEFT BLANK

# iVIZION® Series

## Next-Generation Banknote Acceptor Unit

### Appendix A

## A TROUBLESHOOTING

This section provides Troubleshooting instructions for the iVIZION® Series Next-Generation Banknote Acceptor Unit. This section contains the following information:

- Introduction
- Troubleshooting Overview
- Malfunction LED Error Codes
- LED Indication Conditions.

### Introduction

Most Banknote Acceptor failures are due to minor causes. Before replacing any parts, make sure that all assembly and circuit board connectors are properly fitted and the harness is properly connected.

Lower than expected Banknote acceptance by the Validator portion of the iVIZION® is often caused when dust or debris adheres to the Identification Sensor, or Transport Belt.

Clean the Acceptor section first, then observe the operating state of the Acceptor in detail when re-initializing power. This observation is important in locating any failure causes and the possible fault area.

If the Acceptor Head has to be repaired by disassembling it, always re-calibrate the Sensors following repair.

Perform all repairs by referring to Calibration and Testing in Section 6 of this manual, and Disassembly/Reassembly in Section 4 of this manual.

### Troubleshooting Overview

The iVIZION® allows the operator to perform fault diagnosis by checking various fault Table listings against the symptom, and survey the cause(s) of any failure occurrences during the process.

After determining the cause of the failure, repair the iVIZION® Unit by replacing any appropriate parts, execute the Performance Test to confirm iVIZION performance, then perform a Sensor re-adjustment.

### Malfunction LED Error Codes

The iVIZION® contains two (2) Front Panel Indicators (e.g., a Green Power LED and a Status LED that exhibits four (4) colors).

The Power LED always lights a Green Color when power is applied to the iVIZION® Unit.

The Status LED lights solid or flashes one combination of four (4) Colors when errors, Banknote jams or a reject occurs. The iVIZION® Status, Error Codes, Banknote Jam Codes or Banknote Reject Codes are indicated by the number and/or Color of the Status LED solid or flashing light Color conditions.

### LED Indication Conditions

Table A-1 lists the Green Power ON LED and the various Four (4) Color LED Status/Error Code indications for the iVIZION® Unit.

**Table A-1** LED Code Condition

Symptoms	Power ON LED	Status LED	Causes and Solutions
Normal Condition	Lit Green	Extinguished (Out)	The iVIZION® is set-up correctly (Stand-by).
Initializing		Blue Flashes	The iVIZION® is initializing.
Downloading		Red Lit	The iVIZION® is performing a download.
		Green Lit	
Near Full Detection		Yellow Lit	The iVIZION® has detected a Nearly-full Cash Box Condition.
Test Mode		Blue Lit	The iVIZION® status is in a "Performance Test Mode" (Stand-by).
Error		Red Flashes	The iVIZION® has an error condition (See Table A-2 LED Error Codes ).
Banknote Jam		Yellow Flashes	The iVIZION® has a jammed Banknote (See Table A-3 Jam LED Flash Error Codes ).
Reject		Green Flashes	The iVIZION® has a Reject error condition (See Table A-4 LED Reject Codes ).
ICB		Blue Flashes	ICB Error Condition (See Table A-2 LED Error Codes ).

**Table A-1 LED Code Condition (Continued)**

Symptoms	Power ON LED	Status LED	Causes and Solutions
The iVIZION® is not working	Green Extinguished (Out)	Extinguished (Out)	<p>The power is not being supplied. [Solution]</p> <ul style="list-style-type: none"> <li>• Ensure the harnesses are connected to the Interfaces.</li> <li>• Ensure that the power supply working voltage and range is appropriate.</li> <li>• Ensure the Interface harnesses are not disconnected between the Transport Unit and the Frame Unit.</li> <li>• Ensure that the higher Interface Board Fuse (F1) is not blown.</li> <li>• Ensure that all harnesses and/or connectors are on the Control CPU Board.</li> </ul>

## Error, Jam and Reject Code Tables

The Status LED indicates various color combinations or solid/flash lighting conditions when errors listed in Table A-2, Table A-3 and Table A-4 occur. Identify the causes and solution for these indications from each Table's list and ensure that the relative assemblies are properly connected and/or harnessed, and that all of the Unit's Sensors are clean.

### LED Error Codes

Table A-2 lists the various LED Flash Error Code causes & solutions.

**Table A-2 LED Error Codes**

LED Color	Status LED		Causes and Solutions
	Flash Sequence	Errors	
Red	1	Stacker Full	<p>Detected a Stacker Full Condition. [Solution] Retrieving the Banknotes from the Cash Box. [Relative Parts] Full Sensor: Validation CPU Board PL1, PT2, CN2 or Control CPU Board CN4.</p>
	2	Communication Error between CPU Boards	<p>Abnormal communication error between the Control CPU Board and the Validation CPU Board detected. [Solution] Ensure that all of the connectors on the Control CPU Board and the Validation CPU Board are properly connected.</p>
	3	Sensor Adjustment Error	<p>Abnormal Sensor adjustment detected on the Control CPU Board and the Validation CPU Board. [Solution] Perform a Sensor Adjustment of the Acceptor Unit.</p>
	4	Speed Error	<p>Abnormal Transport Speed Adjustment detected. [Solution] Ensure that no foreign objects are adhering to the Sensors. [Relative Parts] FEED Motor: Interrupter Board CN1 or Control CPU Board CN1.</p>
	5	E2P Error (no Sensor adjustment)	<p>Replaced the Acceptor Unit without performing a Sensor Adjustment. [Solution] Perform a Acceptor Unit Sensor Adjustment.</p>
	6	Transport Error	<p>Motor locked while transporting or stacking a Banknote. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] FEED Motor: Interrupter Board CN1 or Control CPU Board CN1.</p>
	7	Reject Error	<p>Motor Locked while rejecting a Banknote. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] FEED Motor: Interrupter Board CN1 or Control CPU Board CN1.</p>
	8	Stacker Error (Pusher Plate Movement)	<p>Motor locked while stacking (Pusher Plate movement) Banknote. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] STACK Motor: Interrupter Board CN1 or Control CPU Board CN1.</p>
	9	Pusher Plate Position Error	<p>Did not detect the Position Sensor while moving the Pusher Plate. [Solution] Ensure that the Transport Unit and/or the Cash Box are properly Seated. Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] Home Position Sensor: HP Sensor Board LED, PT1, C1/High I/F Board CN5, CN1, CN3 or Control CPU Board CN3 STACK Motor: Interrupter Board CN1 or Control CPU Board CN1.</p>
	10	No Cash Box	<p>The Cash Box is not seated. [Solution] Ensure that the Cash Box is properly seated. [Relative Parts] Box Sensor: Validation CPU Board PL4, PT3, PT4, CN2 or Control CPU Board CN4.</p>

**Table A-2 LED Error Codes (Continued)**

LED Color	Status LED		Causes and Solutions
	Flash Sequence	Errors	
Red	11	No Acceptor Head	The Acceptor Unit's Access Cover is not locked in place. [Solution] Ensure that the Acceptor Unit's Access Cover is properly locked down.
	12	Anti-Strings Error	Fraud detected. [Solution] Ensure that no fraud condition exists such as anti-stringing.
	13	Reserved	Reserved
	14	Damaged Board	An IC is malfunctioning. [Solution] The Control CPU Board or the Validation CPU Board may be damaged. Replace the Circuit Boards if necessary. [Relative Parts] Control CPU or Validation CPU.
	15	ROM/RAM Error	ROM or RAM is malfunctioning. [Solution] The Control CPU Board or the Validation CPU Board has performed abnormally. Replace the Circuit Boards if necessary. [Relative Parts] Control CPU or Validation CPU.
Blue	1	Reserved	Reserved
	2	ICB Function Error	The ICB Function Setting is incorrect. [Solution] Confirm that ICB is Enabled and the Cash Box has been initialized when using the ICB Function. Confirm that ICB is Disabled and the Cash Box has been inhibited when the ICB function is not being used. [Relative Parts] RFID Module: Validation CPU Board CN3, CN2 or Control CPU Board CN4.
	3	ICB R/W Error	ICB unable to communicate. [Solution] Confirm that the RFID Transmitter and Module in the Cash Box perform properly. [Relative Parts] RFID Module: Validation CPU Board CN3, CN2 or Control CPU Board CN4.
	4	ICB Data Error	ICB Data is incorrect. [Solution] Replace the Cash Box with a cleared Cash Box. [Relative Parts] RFID Module: Validation CPU Board CN3, CN2 or Control CPU Board CN4.
	5	ICB Number Error	The Game Machine number is different. [Solution] Replace the Cash Box with a cleared Cash Box or reinstall the Cash Box assigned to this machine number. [Relative Parts] RFID Module: Validation CPU Board CN3, CN2 or Control CPU Board CN4.
	6	ICB Initialize Error	The Cash Box has not been initialized. [Solution] Replace the Cash Box with a cleared Cash Box [Relative Parts] RFID Module: Validation CPU Board CN3, CN2 or Control CPU Board CN4.
	7	Reserved	Reserved
	8	Reserved	Reserved
	9	Reserved	Reserved
	10	Reserved	Reserved
	11	Reserved	Reserved
	12	Reserved	Reserved
	13	Reserved	Reserved
	14	Reserved	Reserved
	15	Reserved	Reserved

## Jam Error Codes

Table A-3 lists the various LED Jam Flash Code causes & solutions.

**Table A-3** Jam LED Flash Error Codes

LED Color	Status LED		Causes and Solutions
	Flash Sequence	Errors	
Yellow	1	Reserved	Reserved
	2	Entrance Sensor Jam	A Banknote jam occurred near the Entrance Sensor [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] Entrance Sensor: Sensor Board LED1, PT1, CN1, or Validation CPU Board CN7.
	3	CIS Sensor Jam	Banknote jam occurred near the CIS Sensor. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] CIS Sensor (Upper): Sensor Transfer Board CN4, CN1, CN2, Sensor Board CN2, CN3, CN1 or Validation CPU Board CN7. Lower CIS Sensor: Sensor Board CN5, CN1 or Validation CPU Board CN7.
	4	Exit Sensor Jam	Banknote jam occurred near the Exit Sensor. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] Exit Sensor: Sensor Board LED2, PT1, CN1 or Validation CPU Board CN7.
	5	Feed-in Sensor Jam	Banknote jam occurred near the Feed-in Sensor. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] Feed-in Sensor: High I/F Board LED1, PT1, CN3/ or Control CPU Board CN3.
	6	Feed-out Sensor Jam	Banknote jam occurred near the Feed-out Sensor. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] Feed-out Sensor: Validation CPU Board PL3, PT1, CN2 or Control CPU Board CN4.
	7	Cash Box Inside Jam	Banknote jam occurred at the Cash Box. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport.
	8	Reserved	Reserved
	9	Reserved	Reserved
	10	Reserved	Reserved
	11	Reserved	Reserved
	12	Reserved	Reserved
	13	Reserved	Reserved
	14	Reserved	Reserved
	15	Reserved	Reserved

## Reject Error Code

Table A-4 is the LED Reject Error Flash Code causes & solutions.

**Table A-4 LED Reject Codes**


LED Color	Status LED		Causes and Solutions
	Flash Sequence	Errors	
Lit Green	1	Banknote Insertion Error	Banknote is rejected by a skew detection. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform adjustment of the Acceptor Unit Sensors if necessary.
	2	UV Sensor Error	Banknote is rejected by the UV Sensor process. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform adjustment of the Acceptor Unit Sensors if necessary.
	3	Banknote remaining Error (Head Section)	Banknote is rejected by detecting a Banknote remaining in the Acceptor Unit. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform adjustment of the Acceptor Unit Sensors if necessary.
	4	Adjustment Error/ Diameter Error	Banknote is rejected by the Validation Sensing process. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform adjustment of the Acceptor Unit Sensors if necessary.
	5	Transport Time-Out Error	Transport timing is incorrect. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the path near the Transport Path Sensors.
	6	Denomination Error	Banknote is rejected by an incorrect denomination validation process. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform adjustment of the Acceptor Unit Sensors if necessary.
	7	Photo Pattern Error 1	Banknote is rejected by the Validation Pattern process. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform adjustment of the Acceptor Unit Sensors if necessary.
	8	Photo Level Error	Banknote is rejected by the Transmissive Level Validation process. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform adjustment of the Acceptor Unit Sensors if necessary.
	9	INHIBIT Error	Banknote is rejected by the INHIBIT Setting (banknote acceptance inhibit). Command for Escrow has not been sent. [Solution] Ensure that the active state of a Host Machine or an iVIZION® DIP Switch INHIBIT setting is properly set.
	10	Reject Request	Banknote is rejected by Host Machine request. [Solution] Ensure the INHIBIT setting of the Host Machine is correct.
	11	Ticket Error	Ticket Upside-down. [Solution] Ensure that the Ticket Barcode is facing up when inserted.
	12	Transport Overrun Error (Stacker Part)	Banknote is rejected by detecting a Banknote remaining in the Transport Unit. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport Unit Sensors.
	13	Banknote Length Error	Banknote is rejected because of a length longer than the acceptable length. [Solution] Ensure that the Banknote is a proper length
	14	Photo Pattern Error 2	Banknote is rejected by the Validation Pattern process. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform an adjustment of the Acceptor Unit Sensors if necessary.
	15	Authentic Banknote Identify Error	Banknote is rejected by the authentic Banknote Validation process. [Solution] Ensure a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform adjustment of the Acceptor Unit Sensors if necessary.



## Maintenance Equipment

This portion provides product information for the iVIZION® Maintenance Equipment.

### iVIZION Maintenance Equipment

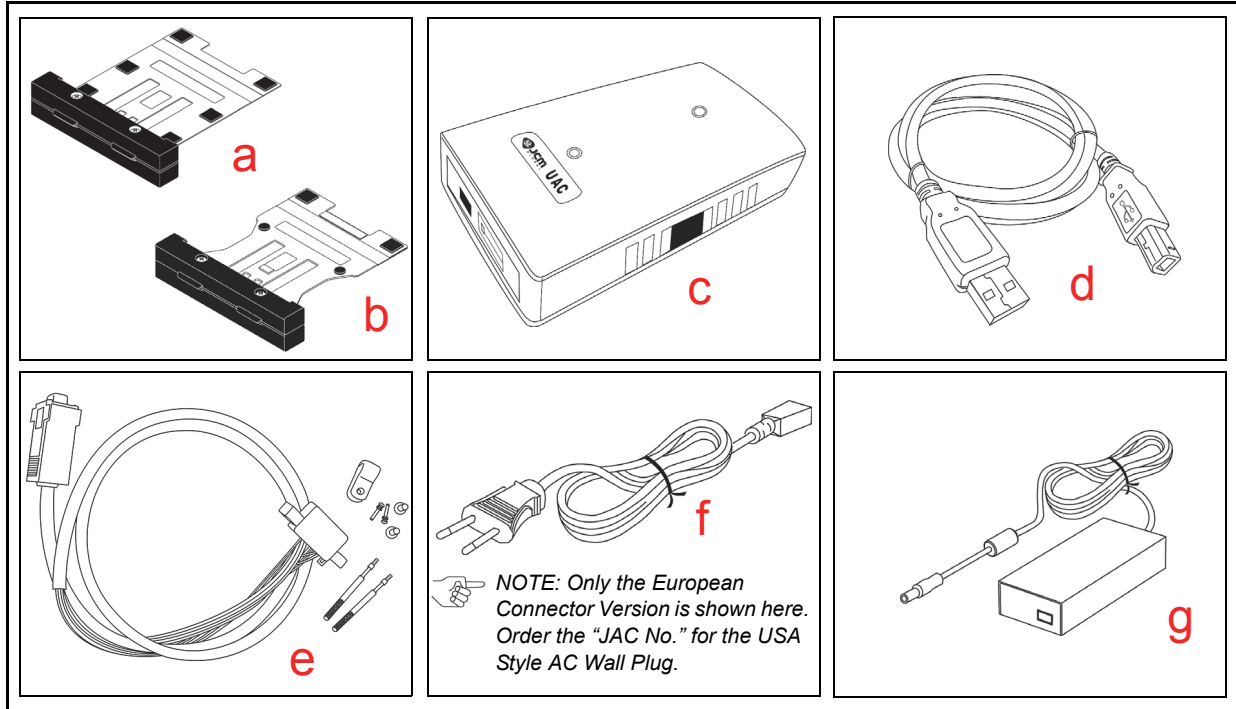

**Figure A-1** Additional Maintenance Equipment Requirements

**Table A-5** Additional Maintenance Equipment Parts List

Ltr.	EDP No.*	JAC No.	Description	Qty.	Remark
a	201544	← Use EDP#	Reference Paper (White: KS-072 Std) <sup>†</sup>	1	
b	211266	← Use EDP#	Reference Paper (White: KS-089 Std)	1	For use with Banknote Guide 69 or 72
c	G00205	501-100218R	UAC Module	1	
d	G00230	400-100249R	UAC USB Cable	1	
e	G00262	40i-000026R	UAC/iVIZION Adapter Harness	1	
f	G00213	302-100007RA	Power Cord (USA or Euro)	1	For UAC
g	G00286	← Use G#	AC Power Adapter	1	For UAC

\*. A Product EDP Number that begins with a "G" is a Product developed by JCM-E Germany.

<sup>†</sup>. Carefully replace the used Reference Paper back into its protective Shipping Carton following each calibration use (refer to Reference Paper Use Precautions and Figure 1-3 in Section 1 for further detailed user instructions).

### Reference Paper Handling

All JCM Reference Paper should be handled as follows:

1. Do not allow the Reference Papers to endure high temperatures and/or high humidity environments.
2. Store unused Reference Papers in their original Shipping Carton to avoid exposing them to direct Sunlight and/or bright indoor light. Ensure that the Reference Papers being stored are not damaged as they are replaced into their shipping carton.
3. Do not use Reference Paper containing damaged areas that are worn, dirty, wrinkled, distorted and/or discolored.
4. Use new Reference Paper for every 400 Units being calibrated. Incorrect calibration errors may occur when using Reference Paper that has been used for calibrating more than 400 Units.

# **iVIZION® Series**

## **Next-Generation Banknote Acceptor Unit**

### **Appendix B**

## **B GLOSSARY**

### **A**

#### **1 Acceptor**

term used to identify a number of devices used to validate and accept Banknotes, then communicate the acceptance results to a host machine. ...1-1

### **B**

#### **2 Bezel**

a removable Plastic Assembly attached to the front of the Banknote Insertion Slot of a iVIZION® Unit ...1-2

### **C**

#### **3 Calibration**

a process performed on electronic equipment which ensures that all circuits are properly aligned and operating at optimum levels. For iVIZION®, calibration is accomplished using a software based program which checks and sets the operational reference levels for Sensors. This helps to ensure that the Unit operates with the highest Banknote acceptance rate possible. Calibration is recommended whenever the CPU Board, or one of the Sensor Boards are replaced ...6-6

#### **4 ccTalk**

a Serial based Communication Protocol commonly used in control, electronic payment, and vending systems. Developed by Money Controls Ltd., the format enjoys widespread use throughout Europe. cc-Talk is supported communications format in the iVIZION® Unit ...2-7

#### **5 Checksum**

a numerical value assigned to a data file or block of data (usually expressed in Hexadecimal notation). Checksum values are used to verify that the contents of a data file are not corrupted in any way during transmission or encryption. The Checksum values of both the original and duplicate files are compared to each other. If the values do not match then it is recommend that the file be copied (uploaded) again until the Checksum do match. ...6-5

#### **6 CIS**

an acronym for Contact Image Sensor. This type of image Sensor is able to scan every portion of a Banknotes surface as it passes over it ...4-9

#### **7 CPU**

an acronym for Central Processing Unit ...4-1

## D

### 8 **DIP Switch Block**

Dual Inline Packaged Switch Block – a printed circuit board mountable two-position slide switch package containing up to 16 individual switches ...2-3

## E

### 9 **External Switch**

a switch added to the external harness to allow performing iVIZION Performance Test without using a PC ...6-16

## F

### 10 **FFC**

an acronym for Flat Flexible Cable. This type of Cable contains printed circuit traces in it, and is generally used to interconnect and distribute signal information between various Printed Circuit Boards ...4-6

### 11 **FG PLT**

an acronym for Frame Grounding PLaTe ...2-1

### 12 **FPC**

an acronym for Flexible Printed Circuit. This type of Circuit Card/Cable contains printed circuit traces on each side of it, and is generally used to interconnect and distribute signal information between two closely placed Printed Circuit Boards ...4-7

## I

### 13 **ID Sticker**

another name for the Product Identification Label located on the right side of the iVIZION® Cabinet Frame ...6-7

## J

### 14 **JCM USB Tool Suite Standard Edition**

a PC Application Program that includes Sub-routine Programs for Downloading a File, Calibrating Sensors, examining Performance Metrics, testing Acceptor Functions, Enabling & Disabling the ICB Feature and viewing an image of the last Banknote accepted ...6-1

### 15 **JPL**

an acronym for JCM Private Line to identify the Connector for activating an attached Sentry-2 Bezel Option ...1-5

## **L**

### **16 LED**

an acronym for Light Emitting Diode. An LED is Semiconductor Device which turned on, emits a signal output in the visible light range. Available in a variety of colors, LEDs are cost effective and are commonly used as Indicator Lights in a variety of equipment devices. LEDs are also available in the invisible light range (i.e., ultraviolet, near-infrared etc.) making them useful as operational indicators for a variety of electronic equipment and applications, such as Banknote Validation Circuit in the iVIZION® Unit ...1-6

## **P**

### **17 Photo-Coupler**

a method of increasing safety to both the equipment and personnel by isolating and routing transmitted data signals via using a Light Emitting Diode (LED) and Photosensitive Transistor combination circuit in various electronic equipment ...2-5

### **18 Pictograph**

small internationally recognized safety and attention symbols placed to the left of Notes, Cautions and Warnings throughout a JCM Maintenance Manual ...1-1

## **R**

### **19 Reference Paper**

specialty coated/colored paper strips which are inserted into a Banknote Validator when performing iVIZION® Unit Calibration. Reference Paper is used to help set minimum and maximum threshold detection levels when adjusting the photo-optical Sensors in the unit for optimum performance ...6-7

### **20 RFID**

an acronym for Radio Frequency IDentification ...1-2

### **21 RS232C**

a common serial data communication standard protocol ...2-6

## **S**

### **22 Sensor**

a Photo Sensitive Device and LED combination designed to detect timing and movement events ...2-10

## **T**

### **23 Timing Belt**

Rubberized Belts used to transport Banknote inside the Acceptor ...4-1

# V

## 24 **Validation**

in Banknote Validators, identifies the process of drawing a Banknote into the Unit and then uses various Sensors to read and determine the authenticity of the Banknote based on the comparison of collected reading to a set of reference data stored in memory ...1-3





Issue #4074-SME-01-05