

RESIDENTIAL GAS WATER HEATERS

POWER VENTED GAS MODELS
WITH HOT SURFACE IGNITION

NOT FOR USE IN MANUFACTURED (MOBILE) HOMES



TABLE OF CONTENTS

GENERAL INFORMATION	2
CHECKING THE GAS SUPPLY PRESSURE	3
LEAKAGE CHECKPOINTS	4
TEMPERATURE ADJUSTMENT	5
ANODE ROD REMOVAL/REPLACEMENT	6
DIP TUBE REMOVAL/REPLACEMENT	7
DOOR-BURNER ASSEMBLY REMOVAL/ REPLACEMENT	8
FLAME SENSOR AND IGNITER REMOVAL/ REPLACEMENT	10
BURNER AND ORIFICE REMOVAL/ REPLACEMENT	12
DOOR GASKET REPLACEMENT	16
CONTROL MODULE REMOVAL/REPLACEMENT	18
VALVE MODULE REMOVAL/REPLACEMENT	20
TEMPERATURE SENSOR AND CABLE REMOVAL/ REPLACEMENT	21
GAS VALVE REMOVAL/REPLACEMENT	22
BLOWER REMOVAL/REPLACEMENT	24
ROTATING THE BLOWER	25
PRESSURE SWITCH REMOVAL/REPLACEMENT	26
FV SENSOR	27
CLEANING THE COMBUSTION CHAMBER	28
CLEANING THE BLOWER	29
TECHNICAL BULLETINS	30
TROUBLESHOOTING CHART	36

Note: References to the Manual refer to the "Installation and Operating Manual".

GENERAL INFORMATION

Draw efficiency is the quantity of hot water available to the consumer before the outlet water temperature decreases by 25F° (14C°). A 40 gallon water heater will typically provide 70% (28 gallons) of this “usable” hot water (60% is the minimum). The burner or elements are allowed to operate during this test. Incoming, cold water mixes the remaining stored water below this 25F° (14C°) limitation.

Energy Factor is an indicator of the combined thermal efficiency and standby efficiency of a water heater. The higher the energy factor, the more efficient the water heater will be.

Minerals and gases will separate from water as temperature increases.

“R” Value is a measure of the resistance of a substance to heat flow.

Recovery rate is the amount of water that is heated to a set temperature, per hour.

Standby efficiency is the water heater’s ability to contain heat in the tank. A minimum of tank water heat loss per hour is desired. e.g. temperature change/“R” value = Btu/h loss/square foot of tank surface

Temperature rise is the increase in the temperature from its coldest “inlet” water temperature to the desired hot (outlet) setting. Typically it is assumed that the entering water be 40°F (5°C), stored water desired to be 120°F (49°C) resulting in a “temperature rise” of 80F° (44C°).

Thermal efficiency is approximately the amount of generated BTU (British Thermal Units), which enters the water. A percentage of the total BTU passes out through the vent piping.

Water cannot (for all practical purposes) be compressed.

Water expands when it is heated.

Formulas and Conversions:

BTU (British Thermal Unit) is the heat required to raise 1 pound of water 1F°

1 BTU = 252 cal = 0.252 kcal

1 cal = 4.187 Joules

BTU X 1.055 = Kilo Joules

BTU divided by 3,413 = Kilowatts

To convert from Fahrenheit to Centigrade: (°F – 32) times 5/9, or .556, equals degrees C.

One gallon of (120°F, 49°C) water weighs approximately 8.25 pounds.

Pounds X .45359 = Kilogram

Gallons X 3.7854 = Liters

% of Hot = (Mixed Temp. – Cold) divided by (Hot Temp. – Cold)

% Thermal Efficiency = (GPH X 8.25 X Temp. Rise X 1.0) divided by BTU/H Input

BTU Output = GPH X 8.25 X Temp. Rise X 1.0

GPH = (BTU/H Input X % Eff.) divided by (Temp. Rise X 8.25)

One cubic foot of Natural Gas contains about 1000 BTU of heat.

One “therm” is equal to 100,000 BTU

One cubic foot of Propane Gas contains about 2500 BTU of heat.

One gallon of Propane gas contains about 91,250 BTU of heat.

One pound of Propane gas contains about 21,600 BTU of heat.

One pound of gas pressure is equal to 27.7 inches water column pressure

Inches of Water Column X .036091 = PSI

Inches of Water Column X .073483 = Inches of Mercury (Hg.)

Centimeters = Inches X 2.54

mm (millimeters) = Inches X 25.4

Meters = Inches X .0254

Doubling the diameter of a pipe will increase its flow capacity (approximately) 5.3 times.

Construction: Tank is constructed of steel. The inside of the tank is constructed of a glass lining bonded to the steel. This prevents water to metal contact and rusting of the tank. An anode rod will be installed within the tank. The hex-head plug end of the anode is visible on the top of the water heater. This metal rod offers secondary protection of the tank against corrosion where the application of glass is not possible (threaded tank openings). These areas will have small areas of water to metal contact.

All water heaters will contain at least one thermostat (to operate the heater) and one high limit (to prevent water from overheating).

CHECKING THE GAS SUPPLY PRESSURE

Gas pressure checks are done with flowing gas using a gas pressure manometer capable of reading pressure in inches of water column.

Supply gas pressure checks are measured before the gas control valve and as close to the water heater as possible. Manifold (main burner) gas pressure is measured at the pressure tap on the bottom of the gas control valve (see Figure 1). Use an allen wrench to remove the plug, then attach the gas gauge.

Note: Desired gas pressures will be noted on the gas valve label located on the gas control valve and rating plate.

IF	THEN
Supply gas pressure is under desired pressure requirement	• Increase supply gas pressure regulator setting. • Call the gas utility company to readjust gas pressure on main supply. Technicians can not adjust main gas supply pressure.
Supply gas pressure is over desired pressure	• Add gas pressure regulator. • Call the gas utility company to readjust gas pressure on main supply. Technicians can not adjust main gas supply pressure.
Manifold gas pressure is more than +/- .4 inch W.C. from values indicated on gas valve or rating plate	• Ensure there is adequate supply gas pressure. • Ensure the main burner orifice is the correct size for the water heater model being tested. • If the above tests have been performed and the results were correct replace the gas control valve.

Important: After checking the manifold gas pressure, detach the gas gauge, reinstall the plug using insulation tape and tighten with allen wrench. Check for leaks and repair as required.

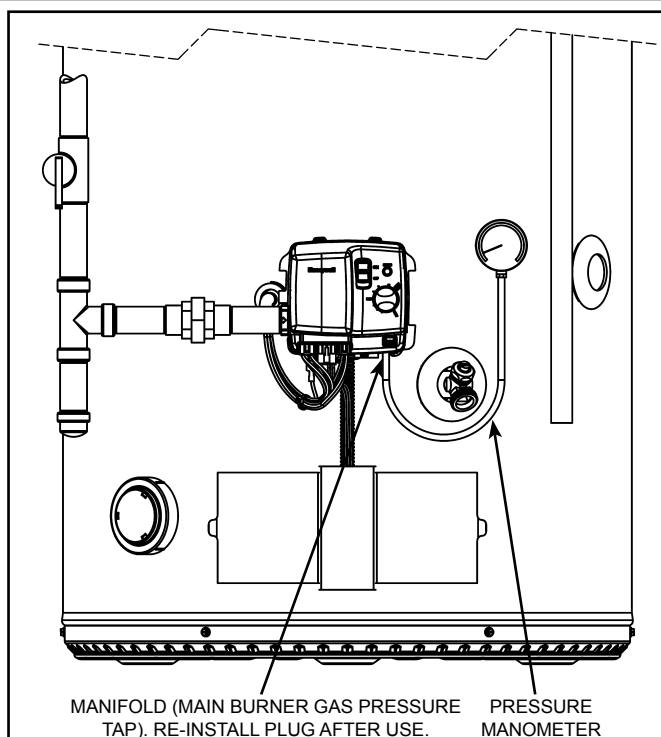


Figure 1

LEAKAGE CHECKPOINTS

- A. Water at the blower assembly is water vapor which has condensed out of the combustion products. This is caused by a problem in the vent or blockage in the drain coupling.
- B. Condensation may be seen on pipes in humid weather or pipe connections may be leaking.
- C. The anode rod fitting may be leaking.
- D. Small amounts of water from temperature-pressure relief valve may be due to thermal expansion or high water pressure in your area.
- E. *The temperature-pressure relief valve may be leaking at the tank fitting.
- F. Water from a drain valve may be due to the valve being slightly opened.
- G. The drain valve may be leaking at the tank fitting.
- H. Combustion products contain water vapor which can condense on the cooler surfaces of the tank. Droplets form and drip onto the burner. This is common at the time of start-up after installation and when incoming water is cold.
- I. Water in the water heater bottom or on the floor may be from condensation. DO NOT replace the water heater until a full inspection of all possible water sources is made and necessary corrective steps taken.
- J. Leakage from other appliances, water lines, or ground seepage should also be checked.

- * To check where threaded portion enters tank, insert cotton swab between jacket opening and fitting. If cotton is wet, follow draining instructions in the "Draining and Flushing" section in the Manual and then remove fitting. Put pipe dope or Teflon® tape on the threads and replace. When you are finished, follow the steps in "Filling the Water Heater" section in the Manual.

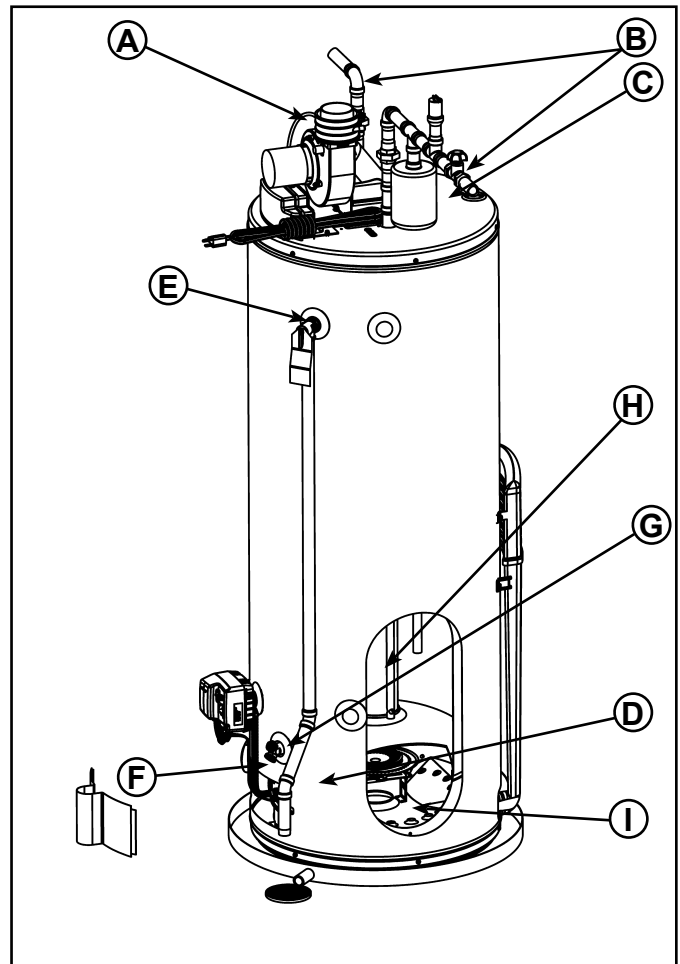


Figure 2

TEMPERATURE ADJUSTMENT

Safety

Due to the nature of the typical gas water heater, the water temperature in certain situations may vary up to 30F° (16C°) higher or lower at the point of use such as bathtubs, showers, sink, etc.

HOT WATER CAN SCALD: Water heaters are intended to produce hot water. Water heated to a temperature which will satisfy space heating, clothes washing, dish washing, and other sanitizing needs can scald and permanently injure you upon contact. Some people are more likely to be permanently injured by hot water than others. These include the elderly, children, the infirm, or physically/mentally handicapped. If anyone using hot water in your home fits into one of these groups or if there is a local code or state law requiring certain temperature water at the hot water tap, then you must take special precautions.

In addition of using the lowest possible temperature setting that satisfies your hot water needs, a means such as a mixing valve should be used at the hot water taps used by these people or at the water heater. Mixing valves are available at plumbing supply or hardware stores. Follow manufacturer's instructions for installation of the valves. Using the lowest hot water temperature that meets your needs will also provide the most energy efficient operation of the water heater.

Never allow small children to use a hot water tap, or to draw their own bath water. Never leave a child or handicapped person unattended in a bathtub or shower.

Note: A water temperature range of 120°F-140°F (49°C-60°C) is recommended by most dishwasher manufacturers.

Settings

Temperature range on residential gas water heater is from 110°F ±10° to 155°F ±10° and a 70°F vacation setting. The T&P valve will open at 195°F ± 10°.

The water heater temperature adjusting dial (see Figure 3) was factory set at the lowest temperature; all the way counter-clockwise to the mechanical stop, unless specified differently by provincial or state regulations. It is adjustable and must be reset to the desired temperature setting to reduce the risk of scald injury. Turning the dial clockwise will increase the temperature and counter-clockwise will reduce the temperature. The HOT marking on the Honeywell gas valve is indicative of approximately 120°F (49°C) and is the preferred starting point. Some states have a requirement for a lower setting. Should overheating occur or the gas supply fails to shut off, turn "OFF" the manual gas control valve to the water heater.

temperatures at the point of use to exceed the thermostat setting by up to 30F° (16C°). If you experience this type of use, you should consider using lower temperature settings to reduce scald hazards. Listed below is time-to-burn relationship for normal adult skin.

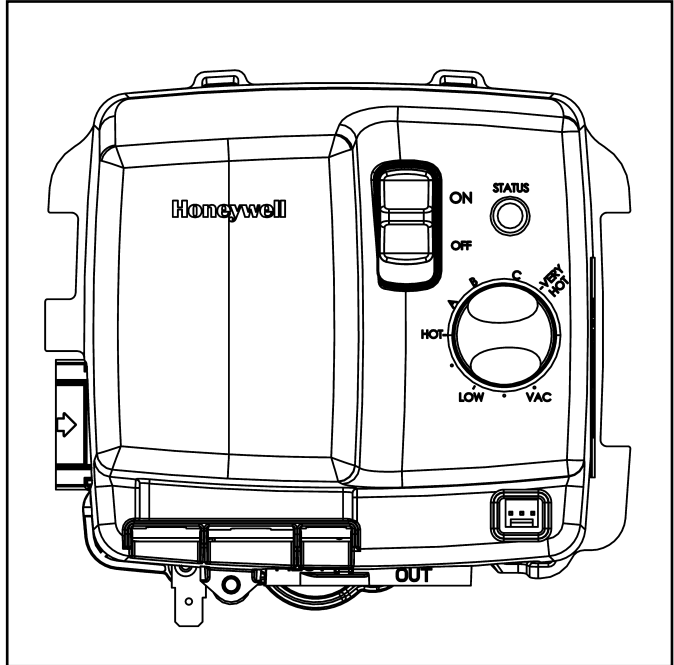


Figure 3

Temperature Setting	Approximate Temperature °F (°C)	Time to reduce a 2nd and 3rd Degree burn to adult skin
VERY HOT	155 (68)	Less than 1 second
C	150 (65)	About 1.5 seconds
B	140 (60)	Less than 5 seconds
A	130 (54)	More than 30 seconds
HOT	120 (49)	More than 5 minutes
LOW	110 (43)	Normal shower temp
VAC	70 (21)	N/A

Table 1

The following table lists the approximate water temperatures produced by various dial settings. Short repeated heating cycles caused by small hot water uses can cause

ANODE ROD REMOVAL/REPLACEMENT

ANODE ROD

Important: Use only factory authorized replacement parts. If you lack the necessary skills to properly perform the installation, you should not proceed, but get help from a qualified service technician.

Tools required:

- Ratchet with 1-1/16" Socket
- Pliers
- Teflon® Tape or an approved pipe sealant

Removing Anode Rod:

1. Set the gas control valve/thermostat to its lowest setting by turning the knob counter-clockwise to the VAC point (see Figure 3).
2. Turn gas control switch to the "OFF" position and turn "OFF" the gas supply to the unit (see Figure 3).
3. Disconnect the electrical power to the water heater from the wall outlet.
4. Shut off the incoming water supply to the water heater and open a nearby hot-water faucet to depressurize the water tank.
5. Connect a hose to the drain valve and terminate it to adequate drain or to the exterior of the building. Open the drain valve and allow at least 5 gallons of water to drain from the tank. Close drain and remove hose.
6. Remove and retain the anode cap on top of the heater and remove and retain just enough insulation so you can access to the anode head (see Figure 4). Keep in a safe place for reinstallation later.
7. Remove the anode rod by using a ratchet and a 1-1/16" socket turning counter-clockwise (see Figure 4).

Installing Anode Rod:

1. Use Teflon® tape or an approved pipe sealant on threads of the new anode rod.
2. Place the anode rod in the spud (top of the tank) and turn clockwise until the threads are hand tight. Using a ratchet and 1-1/16" socket tighten down water tight.
3. Turn the main water supply back on.
4. Open a nearby hot-water faucet to purge air from the water line. Fill water heater tank completely (**Note:** To assure the water heater tank is full, keep the hot-water faucet open for 3 minutes after a constant flow of water is obtained).
5. After turning off the hot-water faucet, check for water leaks around anode rod and immediately correct any if found.
6. Reinstall the insulation and anode cap which were removed in step 6 above.
7. Reconnect the electrical power to the water heater in the wall outlet and turn the main gas supply back "ON" to the gas control valve/thermostat.
8. Turn the gas control switch to the "ON" position (see Figure 3).
9. To restart the water heater, follow the directions on the "Lighting and Operating Instructions" label located on the front of the water heater near the gas control valve/thermostat.

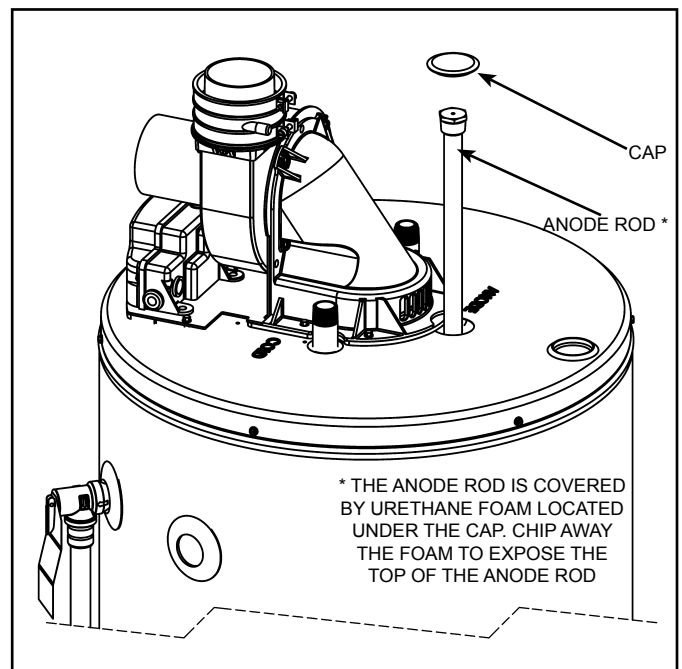


Figure 4

DIP TUBE REMOVAL/REPLACEMENT

DIP TUBE

Important: Use only factory authorized replacement parts. If you lack the necessary skills to properly perform the installation, you should not proceed, but get help from a qualified service technician.

Tools required:

- 18" Pipe wrench
- Piping and soldering equipment
- Teflon® Tape or an approved pipe sealant

Removing Dip Tube:

1. Set the gas control valve/thermostat to its lowest setting by turning the knob counter-clockwise to the VAC point (see Figure 3).
2. Turn gas control switch to the "OFF" position and turn "OFF" the gas supply to the unit (see Figure 3).
3. Disconnect the electrical power to the water heater from the wall outlet.
4. Shut off the incoming water supply to the water heater and open a nearby hot-water faucet to depressurize the water tank. Remove pipe insulation from cold inlet piping.
5. Connect a hose to the drain valve and terminate it to adequate drain or to the exterior of the building. Open the drain valve and allow at least 5 gallons of water to drain from the tank. Close drain and remove hose.
6. Remove the inlet water piping connected to the cold inlet of the water heater (see Figures 5 & 6). Some installations will have a union connection, others will have the supply piping soldered to an adapter that connects to the nipple on the water heater. Using the pipe wrench remove the piping from the top of the tank.
7. With the piping removed, use the pipe wrench on the exposed nipple directly to remove it from the heater.
Note: Sometimes the dip tube will come out with the piping in one piece. Separate accordingly.

Installing Dip Tube:

1. Use Teflon® tape or an approved pipe sealant on threads of the new dip tube.
2. Place the dip tube into the spud on top of the tank and turn clockwise until tight. Using the pipe wrench continue to tighten until the joint is water tight. **Note:** Do not clamp the pipe wrench jaws on the threaded portion of the nipple and do not over tighten. This can cause the threads to distort and can result in a leak.
3. Apply Teflon® tape or pipe sealant on the top threads and reconnect the water piping (see Figure 6).
4. Turn the main water supply back on.
5. Open a nearby hot-water faucet to purge air from the water line. Fill water heater tank completely (**Note:** To assure the water heater tank is full, keep the hot-water faucet open for 3 minutes after a constant flow of water is obtained).

6. After turning off the hot-water faucet, check for water leaks around dip tube and immediately correct any if found.
7. Reinstall the pipe insulation removed in step 4 removal process.
8. Reconnect the electrical power to the water heater in the wall outlet and turn the gas supply back "ON" to the gas control valve/thermostat.
9. Turn the gas control switch to the "ON" position (see Figure 3).
10. To restart the water heater, follow the directions on the "Lighting and Operating Instructions" label located on the front of the water heater near the gas control valve/thermostat.

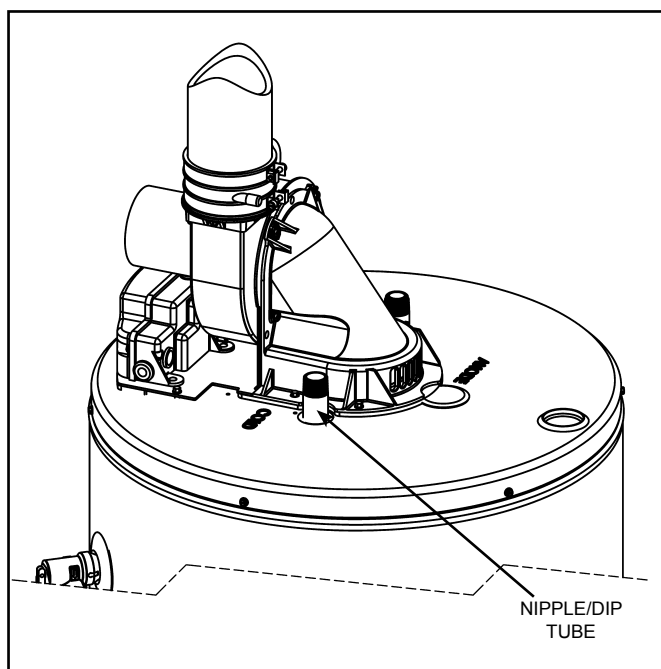


Figure 5

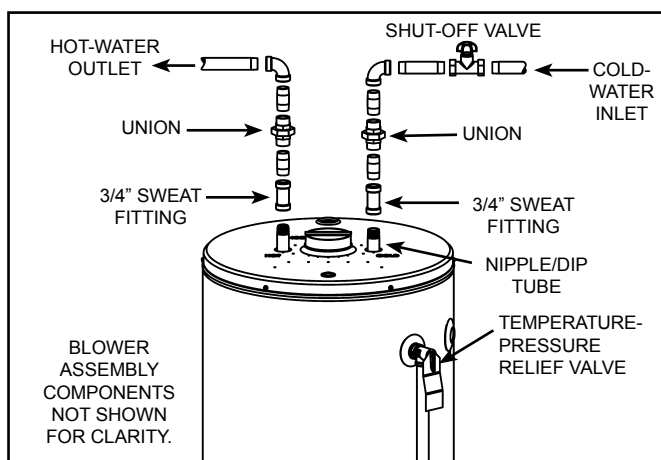


Figure 6

DOOR-BURNER ASSEMBLY REMOVAL/REPLACEMENT

INNER DOOR/MANIFOLD/BURNER ASSEMBLY

Important: Use only factory authorized replacement parts. If you lack the necessary skills to properly perform the installation, you should not proceed, but get help from a qualified service technician.

Tools required:

- 3/4" Open-End Wrench
- Phillips Head Screwdriver
- Ratchet with 1/4" socket or 1/4" nutdriver
- Flashlight

Removing Inner Door/Manifold/Burner Assembly

1. Set the gas control valve/thermostat to its lowest setting by turning the knob counter-clockwise to the VAC point (see Figure 3).
2. Turn gas control switch to the "OFF" position and turn "OFF" the gas supply to the unit (see Figure 3).
3. Disconnect the electrical power to the water heater from the wall outlet.
4. Remove the outer door from the unit.
5. Unplug all the electrical connections from the bottom of the gas control valve/thermostat (see Figure 7).
6. Using a 3/4" open end wrench remove the manifold tube from the gas control valve/thermostat (turning counter-clockwise for natural gas, clockwise for L.P.). Grasp the manifold tube and push down slightly to free the manifold tube from the gas control valve/thermostat (see Figure 7).
7. Remove the insulation pad on the inner door by cutting it if necessary. Keep the insulation in a safe place for reusing it later.
8. Use a 1/4" nutdriver or 1/4" socket & ratchet to loosen the 2 hex head screws on the inner door so the inner door/manifold/burner assembly can be removed (see Figure 7).
9. Remove inner door/manifold/burner assembly by grasping the manifold and pull back slowly. Rotating it to the left to clear the igniter and flame sensor. Care should be taken when inner door and burner assembly passes through jacket opening that it does not damage any of the electrical wiring (see Figure 9).

Caution Must Be Taken

Prior to installing the new inner door/manifold/burner, look inside the burner chamber to fully understand the correct positioning of the burner assembly and burner manifold tab. It is necessary to use a flashlight to ensure correct placement. Care must be taken so as to not damage any electrical wiring or components as you are installing the new inner door/manifold/burner assembly.

Extra caution should be taken to ensure that electrical wiring, fiberglass insulation or any other object is not between door gasket and combustion chamber shield.

Note: If the burner door gasket (see Figure 9) is worn or damaged it needs to be replaced. See section "Door Gasket Replacement".

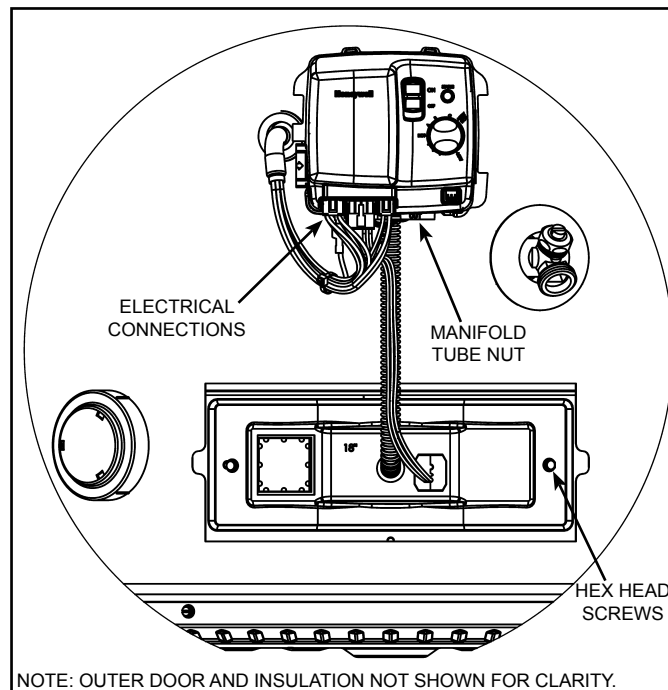


Figure 7

Re-installing Inner Door/Manifold/Burner Assembly

1. Insert the manifold/burner assembly in the burner chamber compartment, making sure that the tip of burner manifold tab engages in the proper slot of the bracket (see Figure 8).

Important:

- The tip end of the burner manifold **MUST** be placed in the **upper** slotted portion for models with input rate of 40,000 to 50,000 Btu/hr to obtain proper installation.
 - The tip end of the burner manifold **MUST** be placed in the **lower** slotted portion for models with input rate of 60,000 to 75,000 Btu/hr to obtain proper installation.
2. After confirming no materials of any type are between door gasket and combustion chamber shield, align the screws on the inner door with the screw holes on the combustion chamber and tighten with 1/4" nutdriver or 1/4" socket & ratchet (see Figure 7). After tightening the inner door screws, visually inspect area around door gasket and skirt for spaces or gaps. The door gasket **MUST** be sealed completely in order for the water heater to perform properly. **DO NOT OPERATE THE WATER HEATER IF THE DOOR GASKET DOES NOT CREATE A SEAL BETWEEN MANIFOLD DOOR AND COMBUSTION CHAMBER.**
 3. Reconnect the manifold tube to the gas control valve/thermostat (**Note:** Do Not apply any thread sealant at this connection). To prevent any cross threading the manifold tube should be started by hand (turn clockwise for natural gas, counter-clockwise for L.P.). Upon tightening with the fingers and confirming it has not been cross threaded, tighten nut with a 3/4" open end wrench (see Figure 7).
 4. Reinstall the insulation pad which was removed in step 7 above.
 5. Reconnect all the electrical connections to the bottom of the gas control valve/thermostat, gently pushing each connector up until it snaps into place (see Figures 7 & 10).
 6. Reconnect the electrical power to the water heater in the wall outlet and turn the main gas supply back "ON" to the gas control valve/thermostat.
 7. Restart the water heater by following the directions on the "Lighting and Operating Instructions" label located on the front of the water heater. Test gas connections by brushing on an approved non-corrosive leak detection solution. (**Note:** Do not splash the solution on control. If a leak is detected, shut the water heater down by following the directions on the "Lighting and Operating Instructions". Repair the leak(s) and repeat this step.
 8. Upon verifying proper operation of the water heater, replace the insulation and outer door.

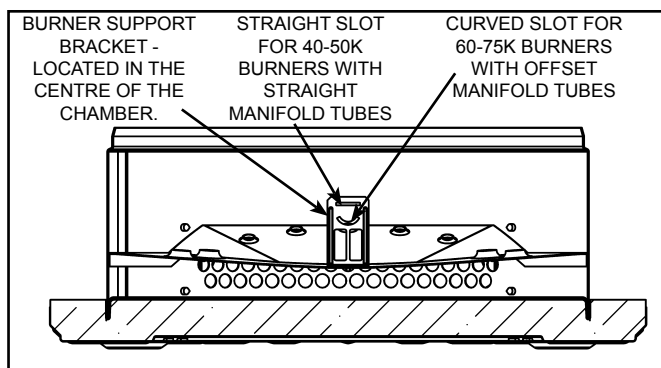


Figure 8

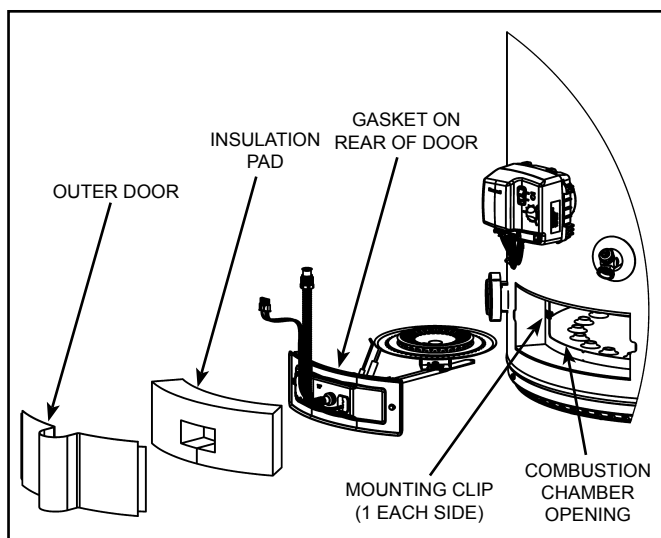


Figure 9



Figure 10

FLAME SENSOR AND IGNITER REMOVAL/REPLACEMENT

FLAME SENSOR AND/OR HOT SURFACE IGNITER

Important: Use only factory authorized replacement parts. If you lack the necessary skills to properly perform the installation, you should not proceed, but get help from a qualified service technician.

Tools required:

- 3/4" Open-End Wrench
- Phillips Head Screwdriver
- Ratchet with 1/4" socket or 1/4" nutdriver
- Flashlight
- Flat Blade screwdriver

Removing Inner Door/Manifold/Burner Assembly:

1. Set the gas control valve/thermostat to its lowest setting by turning the knob counter-clockwise to the VAC point (see Figure 3).
2. Turn gas control switch to the "OFF" position and turn "OFF" the gas supply to the unit (see Figure 3).
3. Disconnect the electrical power to the water heater from the wall outlet.
4. Remove the outer door from the unit.
5. Unplug all the electrical connections from the bottom of the gas control valve/thermostat (see Figure 11).
6. Using a 3/4" open end wrench remove the manifold tube from the gas control valve/thermostat (turning counter-clockwise for natural gas, clockwise for L.P.). Grasp the manifold tube and push down slightly to free the manifold tube from the gas control valve/thermostat (see Figure 11).
7. Remove the insulation pad on the inner door by cutting it if necessary. Keep the insulation in a safe place for reusing it later.
8. Use a 1/4" nutdriver or 1/4" socket & ratchet to loosen the 2 hex head screws on the inner door so the inner door/manifold/burner assembly can be removed (see Figure 11).
9. Remove inner door/manifold/burner assembly by grasping the manifold, rotating it to the left to clear the igniter and flame sensor and pulling back. Care should be taken when inner door and burner assembly passes through jacket opening that it does not damage any of the electrical wiring (see Figure 13).

Removing Flame Sensor And/Or Hot Surface Igniter:

Note: The configuration of the flame sensor and igniter allows you to replace them separately. It is recommended to clean the flame sensor when you replace the igniter.

1. Lift the retainer clip straight up from the back of the manifold component block (using a flat-blade screwdriver), then remove the manifold component block from the manifold door (see Figure 14).
2. Disconnect the wiring connection between the flame sensor/igniter and valve.
3. Remove and retain the screw(s) securing the flame sensor and/or hot surface igniter assembly (see Figure 14).

4. Remove and discard the old flame sensor and/or hot surface igniter assembly.
5. Install the new Flame Sensor and/or Hot Surface Igniter.
6. Route the new flame sensor and/or hot surface igniter connector wire through manifold/burner door opening. Secure the assembly to the bracket using screw(s) removed in step 3 above.
7. Reconnect the wiring connection between the flame sensor/igniter and the valve.
8. Reposition the manifold component block in the manifold door opening and secure it with the retainer clip.

Caution Must Be Taken

Prior to installing the new inner door/manifold/ burner assembly, look inside the burner chamber to fully understand the correct positioning of the burner assembly and burner manifold tab. It may be necessary to use a flashlight to ensure correct placement. Care must be taken so as to not damage any electrical wiring or components as you are installing the new inner door/manifold/burner assembly.

Extra caution should be taken to ensure that electrical wiring, fiberglass insulation or any other object is not caught between door gasket and combustion chamber shield.

Note: If the burner door gasket (see Figure 9) is worn or damaged it needs to be replaced. See section "Door Gasket Replacement".

Re-installing Inner Door/Manifold/Burner Assembly

1. Insert the manifold/burner assembly in the burner chamber compartment, making sure that the tip of burner manifold tab engages in the proper slot of the bracket (see Figure 12). The tip end of the burner manifold **MUST** be placed in the slotted portion under the condensation pan to obtain proper installation (see Figure 12).

Important:

- The tip end of the burner manifold **MUST** be placed in the **upper** slotted portion for models with input rate of 40,000 to 50,000 Btu/hr to obtain proper installation.
- The tip end of the burner manifold **MUST** be placed in the **lower** slotted portion for models with input rate of 60,000 to 75,000 Btu/hr to obtain proper installation.

2. After confirming no materials of any type are between door gasket and combustion chamber shield, align the screws on the inner door with the screw holes on the combustion chamber and tighten with 1/4" nutdriver or 1/4" socket & ratchet (see Figure 11). After tightening the inner door screws, visually inspect area around door gasket and skirt for spaces or gaps. The door gasket **MUST** be sealed completely in order for the water heater to perform properly. **DONOT OPERATE THE WATER HEATER IF THE DOOR GASKET DOES NOT CREATE A SEAL BETWEEN MANIFOLD DOOR AND COMBUSTION CHAMBER.**

Reconnect the manifold tube to the gas control valve/thermostat (**Note:** Do Not apply any thread sealant at this connection). To prevent any cross threading the manifold tube should be started by hand (turn clockwise for natural gas, counter-clockwise for L.P.). Upon tightening with the fingers and confirming it has not been cross threaded, tighten nut with an 3/4" open end wrench (see Figure 11).

3. Reconnect all the electrical connections to the bottom of the gas control valve/thermostat, gently pushing each connector up until it snaps into place (see Figures 10 & 11).
4. Reconnect the electrical power to the water heater in the wall outlet and turn the main gas supply back "ON" to the gas control valve/thermostat.
5. Restart the water heater by following the directions on the "Lighting and Operating Instructions" label located on the front of the water heater.
6. As the burner is heating (view flames through viewport), test the manifold tube connection at the gas control valve/thermostat by brushing on an approved noncorrosive leak detection solution (**Important:** Do Not splash the solution onto any electrical connections. If a leak is detected, shut the water heater down by following the directions on the "Lighting and Operating Instructions". Repair the leak(s) and repeat step 6 above).
7. Upon verifying proper operation of the water heater, reinstall the insulation and the outer door.

Note: The structure of flame sensor/hot surface igniter allows you to remove and replace them separately.

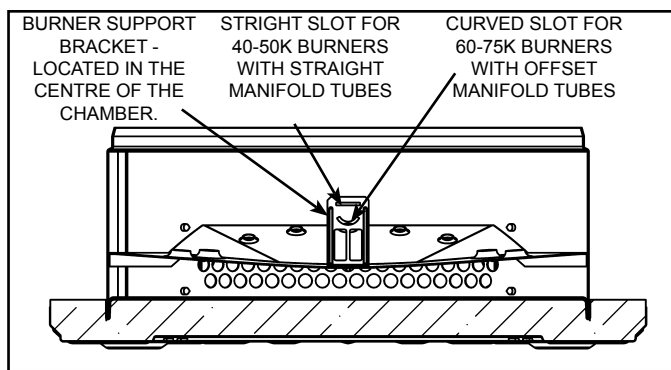


Figure 12

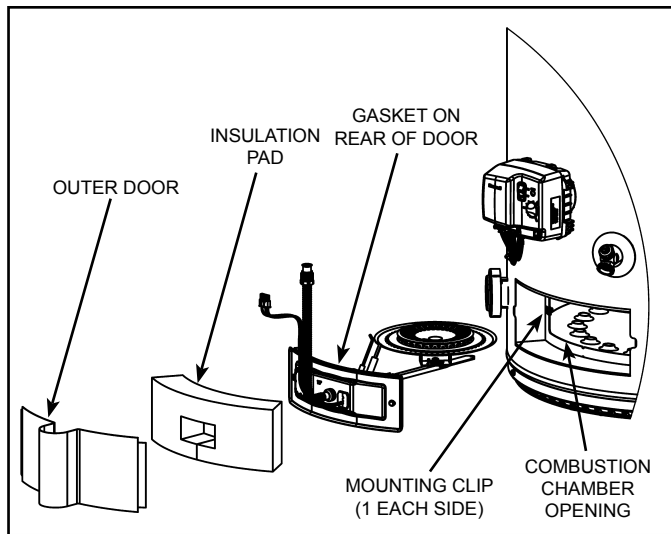


Figure 13

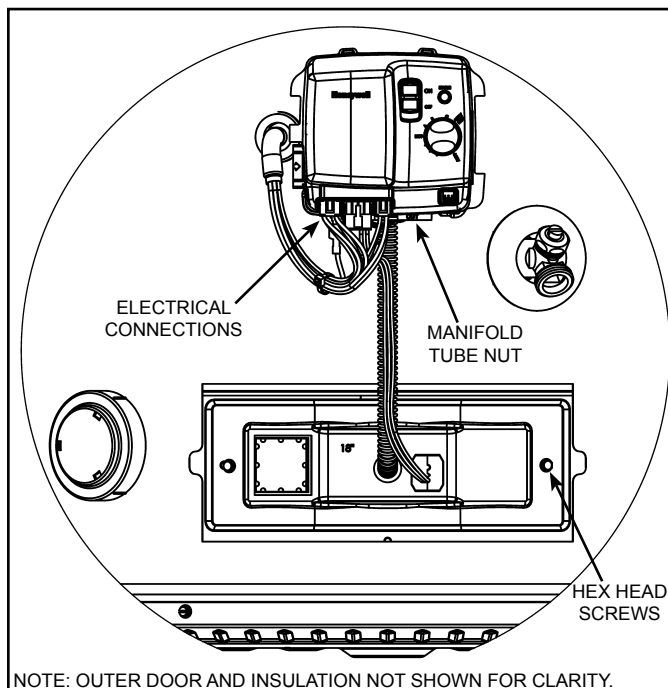


Figure 11

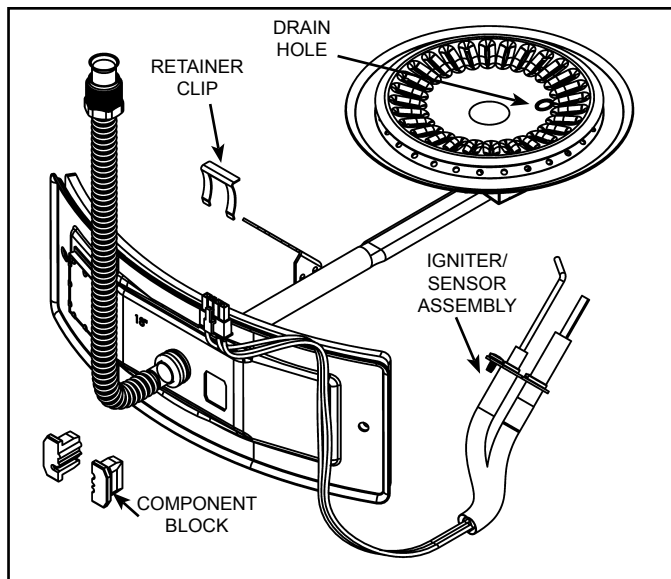


Figure 14

BURNER AND ORIFICE REMOVAL/REPLACEMENT

BURNER

Important: Use only factory authorized replacement parts. If you lack the necessary skills to properly perform the installation, you should not proceed, but get help from a qualified service technician.

Tools required:

- 3/4" Open-End Wrench
- Phillips Head Screwdriver
- Ratchet with 1/4" socket or 1/4" nutdriver.

Removing Inner Door/Manifold/Burner Assembly:

1. Set the gas control valve/thermostat to its lowest setting by turning the knob counter-clockwise to the VAC point (see Figure 3).
2. Turn gas control switch to the "OFF" position and turn "OFF" the gas supply to the unit (see Figure 3).
3. Disconnect the electrical power to the water heater from the wall outlet.
4. Remove the outer door from the unit.
5. Unplug all the electrical connections from the bottom of the gas control valve/thermostat (see Figure 15).
6. Using a 3/4" open end wrench remove the manifold tube from the gas control valve/thermostat (turning counter-clockwise for natural gas, clockwise for L.P.). Grasp the manifold tube and push down slightly to free the manifold tube from the gas control valve/thermostat (see Figure 15).
7. Remove the insulation pad on the inner door by cutting it if necessary. Keep the insulation in a safe place for reusing it later.
8. Use a 1/4" nutdriver or 1/4" socket & ratchet to loosen the 2 hex head screws on the inner door so the inner door/manifold/burner assembly can be removed (see Figure 15).
9. Remove inner door/manifold/burner assembly by grasping the manifold, rotating it to the left to clear the igniter and flame sensor and pulling back. Care should be taken when inner door and burner assembly passes through jacket opening that it does not damage any of the electrical wiring (see Figure 17).

Removing Burner:

1. Burner may be hot. Wait until burner has cooled off. After noting the position of the condensation drain hole on the top of the burner, turn the inner door/manifold/burner assembly upside down. Using a Phillips head screwdriver, remove and retain the 2 screws attaching the burner to the manifold pipe (see Figure 18 & 19).

Installing Burner:

Care **MUST** be taken to ensure the burner is installed correctly on the inner door/manifold assembly. Position the new burner upside down with the orientation of the burner's condensation drain as shown in illustration (see Figure 18 & 19).

1. Align the screw holes on the inner door/manifold assembly. Using the two screws removed in step 1 of Removing Burner, install the new burner to the inner door/ manifold assembly (rotate the assembly to visually check the top portion of the burner assembly and confirm the orientation of the condensation drain hole (see Figure 19 and note).

Caution Must Be Taken

Prior to installing the new inner door/manifold/burner assembly, look inside the burner chamber to fully understand the correct positioning of the burner assembly and burner manifold tab. It may be necessary to use a flashlight to ensure correct placement. Care must be taken so as to not damage any electrical wiring, or components as you are installing the new inner door/manifold/burner assembly. Extra caution should be taken to ensure that electrical wiring, fiberglass insulation or any other object is not between door gasket and combustion chamber shield. **Note:** If the burner door gasket (see Figure 9) is worn or damaged it needs to be replaced. See section "Door Gasket Replacement".

Reinstalling Inner Door/Manifold/Burner Assembly

1. Insert the manifold/burner assembly in the burner chamber compartment, making sure that the tip of burner manifold tab engages in the proper slot of the bracket. The tip end of the burner manifold **MUST** be placed in the slotted portion under the condensation pan to obtain proper installation (see Figure 16).
Important:
 - The tip end of the burner manifold **MUST** be placed in the **upper** slotted portion for models with input rate of 40,000 to 50,000 Btu/hr to obtain proper installation.
 - The tip end of the burner manifold **MUST** be placed in the **lower** slotted portion for models with input rate of 60,000 to 75,000 Btu/hr to obtain proper installation.
2. After confirming no materials of any type are between door gasket and combustion chamber shield, align the screws on the inner door with the screw holes on the combustion chamber and tighten with 1/4" nutdriver or 1/4" socket & ratchet (see Figure 15). After tightening the inner door screws, visually inspect area around door gasket and skirt for spaces or gaps. The door gasket **MUST** be sealed completely in order for the water heater to perform properly. **DO NOT OPERATE THE WATER HEATER IF THE DOOR GASKET DOES NOT CREATE A SEAL BETWEEN MANIFOLD DOOR AND COMBUSTION CHAMBER.**
3. Reconnect the manifold tube to the gas control valve/ thermostat (**Note:** Do Not apply any thread sealant at this connection). To prevent any cross threading the manifold tube should be started by hand (turn clockwise for natural gas, counter-clockwise for L.P.). Upon tightening with the fingers and confirming it has not been cross threaded, tighten nut with a 3/4" open end wrench (see Figure 15).

4. Reconnect all the electrical connections to the bottom of the gas control valve/thermostat, gently pushing each connector up until it snaps into place (see Figures 10 & 15).
5. Reconnect the electrical power to the water heater in the wall outlet and turn the gas supply back "ON" to the gas control valve/thermostat.
6. Restart the water heater by following the directions on the "Lighting and Operating Instructions" label located on the front of the water heater.
7. As the burner is heating (view flames through viewport), test the manifold tube connection at the gas control valve/thermostat by brushing on an approved noncorrosive leak detection solution. **Important:** Do Not splash any solution onto any electrical connections.
8. Upon verifying proper operation of the water heater, replace the outer door.

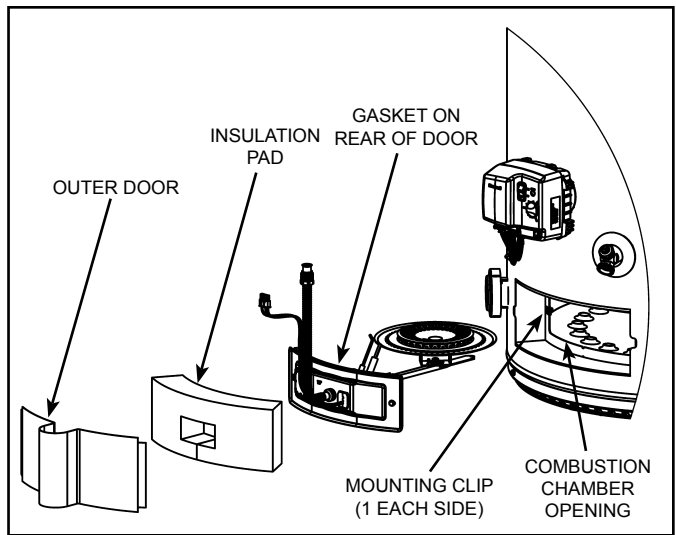


Figure 17

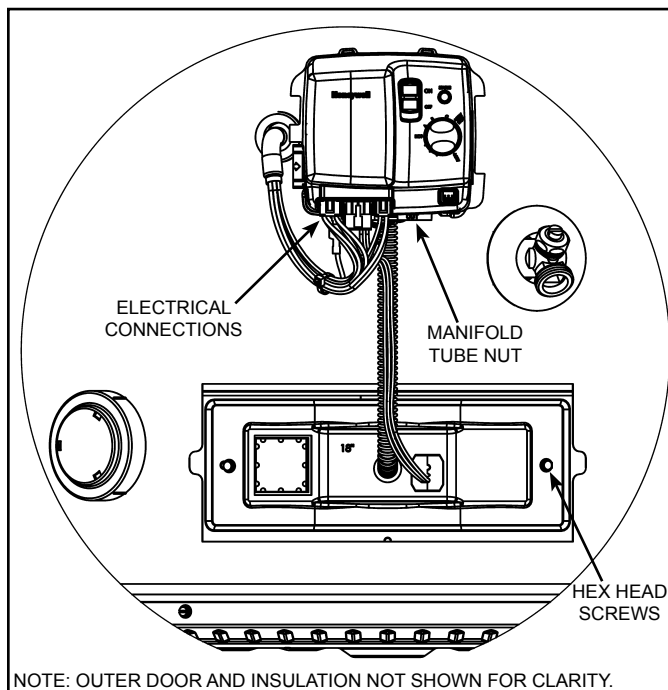


Figure 15

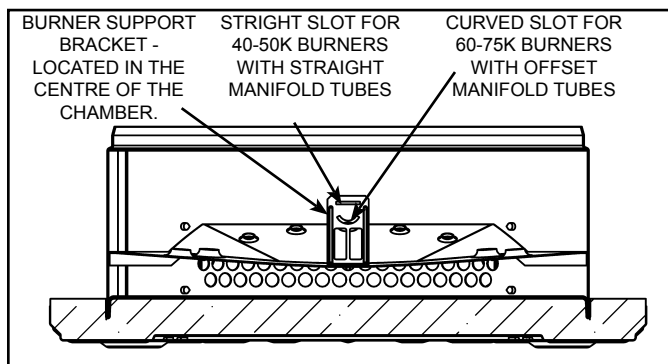


Figure 16

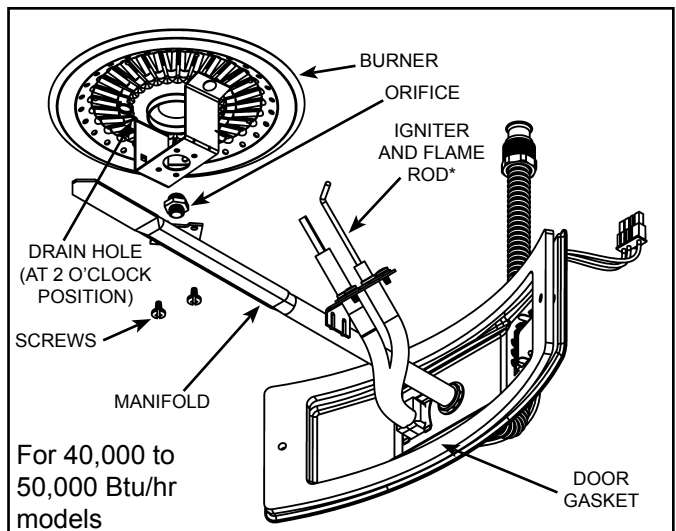


Figure 18

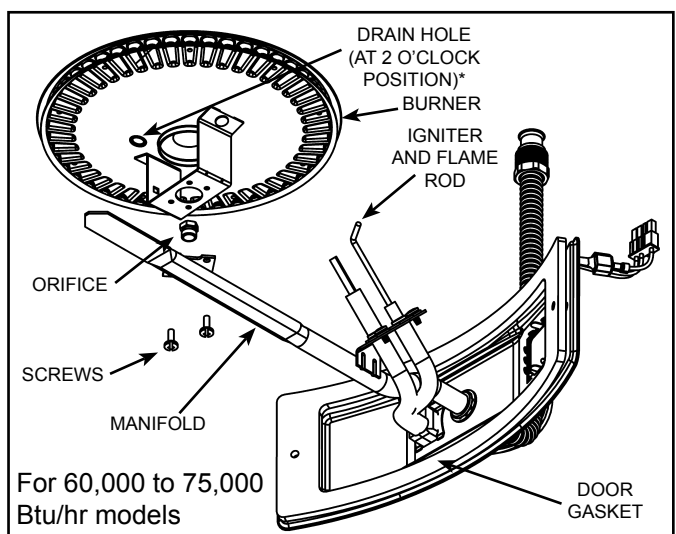


Figure 19

Note: The drain hole must be at the 2 o'clock position, directly opposite the igniter and flame rod.

BURNER ORIFICE

Important: Use only factory authorized replacement parts. If you lack the necessary skills to properly perform the installation, you should not proceed, but get help from a qualified service technician.

Tools required:

- 3/4" Open-End Wrench
- Phillips Head Screwdriver
- Ratchet with 1/4" socket or 1/4" nutdriver
- Ratchet with 1/2" socket.

Removing Inner Door/Manifold/Burner Assembly

1. Set the gas control valve/thermostat to its lowest setting by turning the knob counter-clockwise to the VAC point (see Figure 3).
2. Turn gas control switch to the "OFF" position and turn "OFF" the gas supply to the unit (see Figure 3).
3. Disconnect the electrical power to the water heater from the wall outlet.
4. Remove the outer door from the unit.
5. Unplug all the electrical connections from the bottom of the gas control valve/thermostat (see Figure 15).
6. Using a 3/4" open end wrench remove the manifold tube from the gas control valve/thermostat (turning counter-clockwise for natural gas, clockwise for L.P.). Grasp the manifold tube and push down slightly to free the manifold tube from the gas control valve/thermostat (see Figure 15).
7. Remove the insulation pad on the inner door by cutting it if necessary. Keep the insulation in a safe place for reusing it later.
8. Use a 1/4" nutdriver or 1/4" socket & ratchet to loosen the 2 hex head screws on the inner door so the inner door/manifold/burner assembly can be removed (see Figure 15).
9. Remove inner door/manifold/burner assembly by grasping the manifold, rotating it to the left to clear the igniter and flame sensor and pulling back. Care should be taken when inner door and burner assembly passes through jacket opening that it does not damage any of the electrical wiring (see Figure 17).

Removing Burner Orifice

1. Burner may be hot. Wait until burner has cooled off. After noting the position of the condensation drain hole on the top of the burner, turn the inner door/manifold/burner assembly upsidedown. Using a Phillips head screwdriver, remove and retain the 2 screws attaching the burner to the manifold pipe (see Figure 18 & 19).
2. Using a ratchet with 1/2" socket, remove the burner's old orifice (**Note:** the burner orifices have different threads dependent upon the gas type. Orifices for natural gas have right-hand threads, orifices for L.P. have left-hand threads (see Figures 18 & 19).

Installing Burner Orifice

1. Using a ratchet with 1/2" socket, install the new burner orifice (**Note:** the burner orifices have different threads dependent upon the gas type. right-handed threads for natural gas (turn clockwise to install) and left-handed threads for propane gas (turn counter-clockwise to install) (see Figures 18 & 19). **Note:** Determine whether the orifice is tall or short and DO NOT replace them with each other.
2. Care MUST be taken to ensure the burner is installed correctly on the inner door/manifold assembly. Position the new burner upside down with the orientation of the burner's condensation drain as noted in "Removing Burner Orifice" step 1.
3. Align the screw holes on the inner door/manifold assembly. Using the two screws removed in step 1 above, installed the new burner to the inner door/manifold assembly (rotate the assembly to visually check the top portion of the burner assembly and confirm the orientation of the condensation drain hole as shown in the illustration) (see Figure 18 & 19).

Caution Must Be Taken

Prior to installing the new inner door/manifold/burner assembly, look inside the burner chamber to fully understand the correct positioning of the burner assembly and burner manifold tab. It may be necessary to use a flashlight to ensure correct placement. Care must be taken so as to not damage any electrical wiring or components as you are installing the new inner door/manifold/burner assembly.

Extra caution should be taken to ensure that electrical wiring, fiberglass insulation or any other object is not between door gasket and combustion chamber shield.

Note: If the burner door gasket (see Figure 9) is worn or damaged it needs to be replaced. See section "Door Gasket Replacement".

Reinstalling Inner Door/Manifold/Burner Assembly

1. Insert the manifold/burner assembly in the burner chamber compartment, making sure that the tip of burner manifold tab engages in the proper slot of the bracket (see Figure 16).
Important:
 - The tip end of the burner manifold MUST be placed in the **upper** slotted portion for models with input rate of 40,000 to 50,000 Btu/hr to obtain proper installation.
 - * The tip end of the burner manifold MUST be placed in the **lower** slotted portion for models with input rate of 60,000 to 75,000 Btu/hr to obtain proper installation.
2. After confirming no materials of any type are between door gasket and combustion chamber shield, align the screws on the inner door with the screw holes on the combustion chamber and tighten with 1/4" nutdriver or 1/4" socket & ratchet (see Figure 15). After tightening the inner door screws, visually inspect area around door gasket and skirt for spaces or gaps. The door gasket MUST be sealed completely in order for the water heater to perform properly.

DO NOT OPERATE THE WATER HEATER IF THE DOOR GASKET DOES NOT CREATE A SEAL BETWEEN MANIFOLD DOOR AND COMBUSTION CHAMBER.

3. Reconnect the manifold tube to the gas control valve/thermostat (**Note:** Do Not apply any thread sealant at this connection). To prevent any cross threading the manifold tube should be started by hand (turn clockwise for natural gas, counter-clockwise for L.P.). Upon tightening with the fingers and confirming it has not been cross threaded, tighten nut with an 3/4" open end wrench (see Figure 15).
4. Reconnect all the electrical connections to the bottom of the gas control valve/thermostat, gently pushing each connector up until it snaps into place (see Figures 10 & 15).
5. Reconnect the electrical power to the water heater in the wall outlet and turn the gas supply back "ON" to the gas control valve/thermostat.
6. Restart the water heater by following the directions on the "Lighting and Operating Instructions" label located on the front of the water heater.
7. As the burner is heating (view flames through viewport), test the manifold tube connection at the gas control valve/thermostat by brushing on an approved noncorrosive leak detection solution. **Important:** Do Not splash any solution onto any electrical connections.
8. Upon verifying proper operation of the water heater, replace the outer door.

DOOR GASKET REPLACEMENT

DOOR GASKET

Important: Use only factory authorized replacement parts. If you lack the necessary skills to properly perform the installation, you should not proceed, but get help from a qualified service technician.

Tools required:

- 3/4" Open-End Wrench
- 3/4" Scraper
- Ratchet with 1/4" socket or 1/4" nutdriver
- Flashlight

Removing Inner Door/Manifold/Burner Assembly

1. Set the gas control valve/thermostat to its lowest setting by turning the knob counter-clockwise to the VAC point (see Figure 3).
2. Turn gas control switch to the "OFF" position and turn "OFF" the gas supply to the unit (see Figure 3).
3. Disconnect the electrical power to the water heater from the wall outlet.
4. Remove the outer door from the unit.
5. Unplug all the electrical connections from the bottom of the gas control valve/thermostat (see Figure 7).
6. Using a 3/4" open end wrench remove the manifold tube from the gas control valve/thermostat (turning counter-clockwise for natural gas, clockwise for L.P.). Grasp the manifold tube and push down slightly to free the manifold tube from the gas control valve/thermostat (see Figure 7).
7. Remove the insulation pad on the inner door by cutting it if necessary. Keep the insulation in a safe place for reusing it later.
8. Use a 1/4" nutdriver or 1/4" socket & ratchet to loosen the 2 hex head screws on the inner door so the inner door/manifold/burner assembly can be removed (see Figure 7).
9. Remove inner door/manifold/burner assembly by grasping the manifold and pull back slowly. Rotating it to the left to clear the igniter and flame sensor. Care should be taken when inner door and burner assembly passes through jacket opening that it does not damage any of the electrical wiring (see Figure 9).

Removing The Door Gasket.

1. Locate the gasket that is on the rear of the burner door assembly (see figure 17 - 19).
2. Pull off this gasket and using the 3/4" scraper, scrape away and gasket stuck to the door.
3. Using the 3/4" scraper, clean around the combustion chamber opening to ensure no old gasket material is stuck on the combustion chamber (Figure 17). Use the flashlight to clearly illuminate this area. Take care not to damage the mounting clips located on each side of the opening.

Replacing The Door Gasket.

1. Remove the paper cover on the new door gasket. This will expose the gasket adhesive.
2. Position the gasket on the freshly cleaned door surface so that the adhesive firmly holds the gasket to the door.
3. Smooth the gasket to avoid creases.

Re-installing Inner Door/Manifold/Burner Assembly

1. Insert the manifold/burner assembly in the burner chamber compartment, making sure that the tip of burner manifold tab engages in the proper slot of the bracket (see Figure 8).
Important:
 - The tip end of the burner manifold **MUST** be placed in the **upper** slotted portion for models with input rate of 40,000 to 50,000 Btu/hr to obtain proper installation.
 - The tip end of the burner manifold **MUST** be placed in the **lower** slotted portion for models with input rate of 60,000 to 75,000 Btu/hr to obtain proper installation.
2. After confirming no materials of any type are between door gasket and combustion chamber shield, align the screws on the inner door with the screw holes on the combustion chamber and tighten with 1/4" nutdriver or 1/4" socket & ratchet (see Figure 7). After tightening the inner door screws, visually inspect area around door gasket and skirt for spaces or gaps. The door gasket **MUST** be sealed completely in order for the water heater to perform properly. **DO NOT OPERATE THE WATER HEATER IF THE DOOR GASKET DOES NOT CREATE A SEAL BETWEEN MANIFOLD DOOR AND COMBUSTION CHAMBER.**
3. Reconnect the manifold tube to the gas control valve/thermostat (**Note:** Do Not apply any thread sealant at this connection). To prevent any cross threading the manifold tube should be started by hand (turn clockwise for natural gas, counter-clockwise for L.P.). Upon tightening with the fingers and confirming it has not been cross threaded, tighten nut with a 3/4" open end wrench (see Figure 7).
4. Reinstall the insulation pad which was removed in step 7 above.
5. Reconnect all the electrical connections to the bottom of the gas control valve/thermostat, gently pushing each connector up until it snaps into place (see Figures 7 & 10).
6. Reconnect the electrical power to the water heater in the wall outlet and turn the main gas supply back "ON" to the gas control valve/thermostat.
7. Restart the water heater by following the directions on the "Lighting and Operating Instructions" label located on the front of the water heater. Test gas connections by brushing on an approved non-corrosive leak detection solution. (**Note:** Do not splash the solution on control. If a leak is detected, shut the water heater down by following the directions on the "Lighting and Operating Instructions". Repair the leak(s) and repeat this step.
8. Upon verifying proper operation of the water heater, replace the insulation and outer door.

CONTROL MODULE REMOVAL/REPLACEMENT

ELECTRONIC CONTROL MODULE

Important: Do not remove the entire gas control assembly from the water heater.

Important: Use only factory authorized replacement parts. If you lack the necessary skills to properly perform the installation, you should not proceed, but get help from a qualified service technician.

Tools required:

- T15 Torx screwdriver
- Flat-blade screwdriver

Removing Electronic Control Module

1. Set the gas control valve/thermostat to its lowest setting by turning the knob counter-clockwise to the VAC point (see Figure 20).
 2. Turn gas control switch to the "OFF" position and turn off the gas supply to the unit (see Figure 20).
 3. Disconnect the electrical power to the water heater from the wall outlet.
 4. Remove the front Torx screw at the bottom of the gas control valve/thermostat as illustrated in Figure 21.
 5. Use a flat-blade screwdriver to release the two tabs at the top of the gas control valve/thermostat and lift the electronic control straight up (see Figures 22 & 23).
 6. Disconnect the temperature sensor cable.
- Note:** When removing the control module from the gas control assembly, disengage the pins on the valve module without causing damage.
7. Re-assemble in the reverse order.

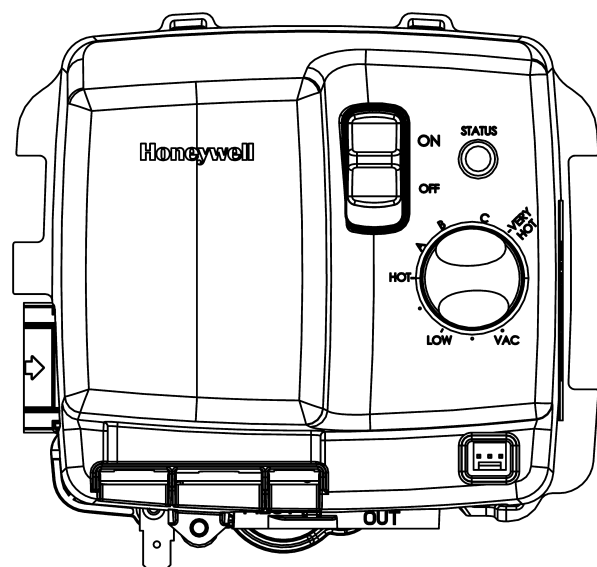


Figure 20



Figure 21

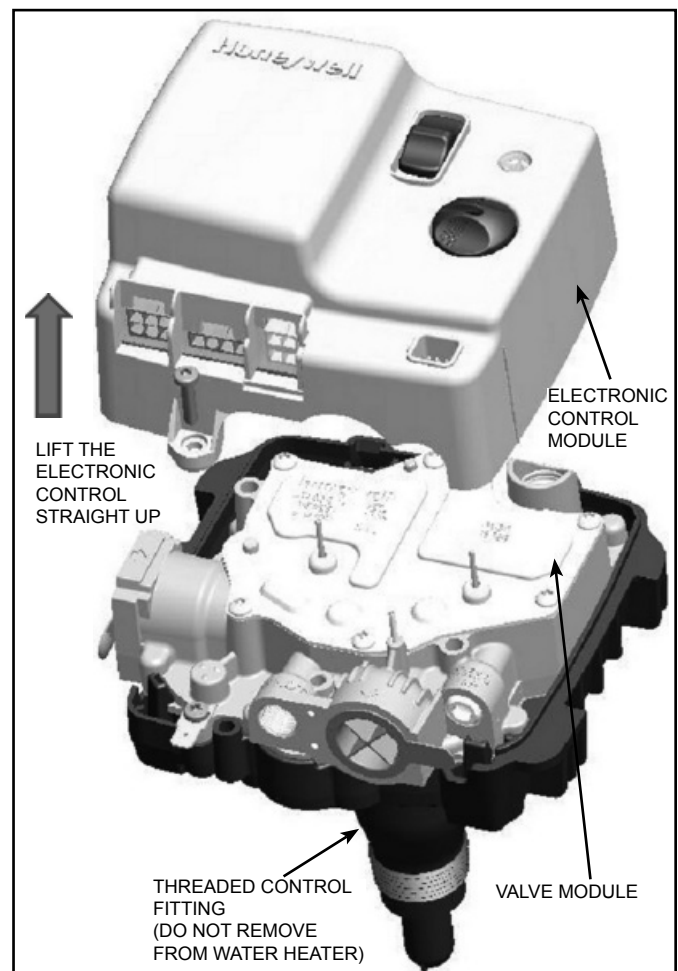


Figure 22

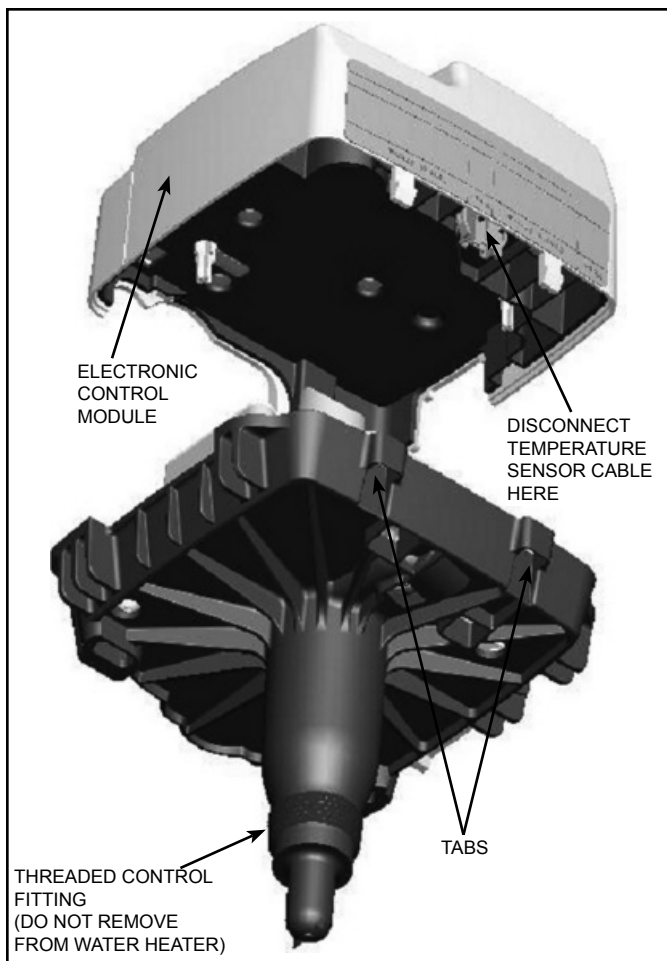


Figure 23

VALVE MODULE REMOVAL/REPLACEMENT

VALVE MODULE

Important: Do not remove the entire gas control assembly from the water heater.

Important: Use only factory authorized replacement parts. If you lack the necessary skills to properly perform the installation, you should not proceed, but get help from a qualified service technician.

Tools required:

- T15 Torx screwdriver
- Flat-blade screwdriver

Removing Valve Module

1. Set the gas control valve/thermostat to its lowest setting by turning the knob counter-clockwise to the VAC point (see Figure 20).
2. Turn gas control switch to the "OFF" position and turn off the gas supply to the unit (see Figure 20).
3. Disconnect the electrical power to the water heater from the wall outlet.
4. Remove the Electronic Control Module as outlined in "Removing Electronic Control Module" above.
Note: When removing the control module from the gas control assembly, disengage the pins on the valve module without causing damage.
5. Remove the screw and the ground tab with a Torx screwdriver (see Figure 24).
6. Insert a flat-blade screwdriver between the casting and the locking tabs at the bottom of the valve.
7. Carefully pry against the casting until it barely slides past the locking tab edge.
8. Repeat on the opposite side.
9. Replace the valve.
Note: When replacing the valve, do not apply pressure with the hand on the valve pins.
10. Re-assemble in the reverse order.
Note: During re-assembly, align the pins on the valve module to their proper location in the control module without causing damage.

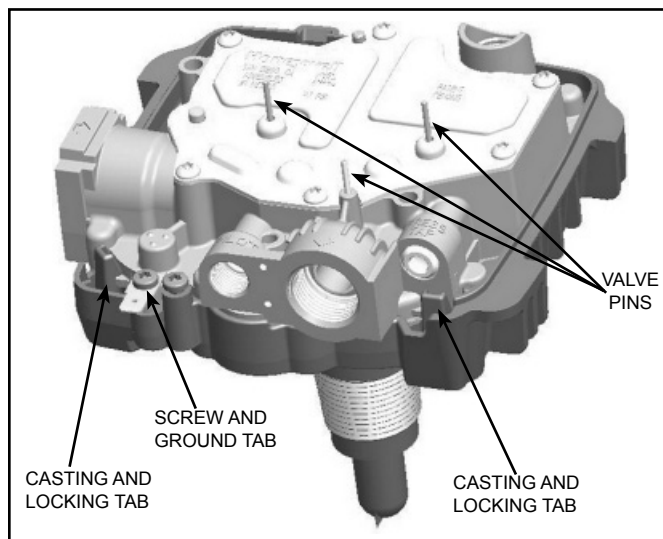


Figure 24

TEMPERATURE SENSOR AND CABLE REMOVAL/REPLACEMENT

TEMPERATURE SENSOR AND CABLE

Important: Do not remove the entire gas control assembly from the water heater.

Important: Use only factory authorized replacement parts. If you lack the necessary skills to properly perform the installation, you should not proceed, but get help from a qualified service technician.

Tools required:

- T15 Torx screwdriver
- Flat-blade screwdriver

Removing Temperature Sensor and Cable

1. Set the gas control valve/thermostat to its lowest setting by turning the knob counter-clockwise to the VAC point (see Figure 20).
2. Turn gas control switch to the "OFF" position and turn off the gas supply to the unit (see Figure 20).
3. Disconnect the electrical power to the water heater from the wall outlet.
4. Remove the Electronic Control Module as outlined in "Removing Electronic Control Module" section above.
5. Remove the Valve Module as outlined in "Removing Valve Module" section above.
6. Use a screwdriver to pry under the sensor retainer finger to remove the temperature sensor and cable (see Figure 25).
7. Re-assemble in the reverse order.

Note: When replacing the valve, do not apply pressure with the hand on the valve pins.

Note: During re-assembly, align the pins on the valve module to their proper location in the control module without causing damage.

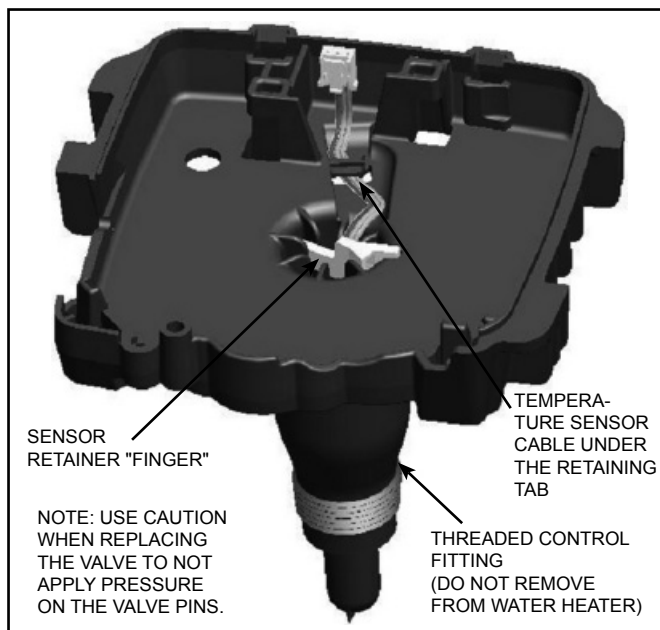


Figure 25

GAS VALVE REMOVAL/REPLACEMENT

GAS CONTROL VALVE

Important: Use only factory authorized replacement parts. If you lack the necessary skills to properly perform the installation, you should not proceed, but get help from a qualified service technician.

Tools required:

- 3/4" Open-End Wrench
- short length of 1/2" threaded pipe
- Pipe Wrench

Removing Gas Control Valve

1. Set the gas control valve/thermostat to its lowest setting by turning the knob counter-clockwise to the VAC point (see Figure 3).
2. Turn gas control switch to the "OFF" position and turn off the gas supply to the unit (see Figure 3).
3. Disconnect the electrical power to the water heater from the wall outlet.
4. Release water pressure by opening a nearby hot water faucet, let run until water is cool to touch. Turn off water supply to the water heater.
5. Remove the outer door from the unit.
6. Connect a drain hose to the drain valve and run it to an adequate drain or to the exterior of the building. Open the water heater drain valve and allow the water to drain from the tank.
7. Unplug all the electrical connections from the bottom of the gas control valve/thermostat (see Figure 26).
8. Using a 3/4" open end wrench remove the manifold tube from the gas control valve/thermostat (turning counter-clockwise for natural gas, clockwise for L.P.). Grasp the manifold tube and push down slightly to free the manifold tube from the gas control valve/thermostat (see Figure 26).
9. Ensuring that the gas supply line is turned off, disconnect the gas piping at the ground joint union, then remove the gas piping from the gas control valve/thermostat.
10. Remove any other fittings that may be installed on the threaded pipe to the gas control valve/thermostat.
11. After ensuring the water heater is completely drained, thread a short length of 1/2" threaded pipe into the inlet connection of the gas control valve/thermostat and use it to turn the gas control valve/thermostat counter-clockwise to remove (see Figure 27). Do not use any type of wrench on the valve body as it may cause damage to the gas control valve/thermostat assembly.

Installing Gas Control Valve

1. Do not apply any sealant tape to the gas control/thermostat threads that screw into the tank. The threads have a pre-applied white sealing material.
2. Thread a short length of 1/2" threaded pipe into the inlet connection of the new gas control valve/thermostat and use it to turn the gas control valve/thermostat clockwise to tighten into place (**Note:** Do Not over tighten or damage may result, but it needs to be water tight (see Figure 27).
3. Remove the 1/2" threaded pipe from the gas control valve/thermostat.
4. Reconnect the gas piping to the gas control valve/thermostat, use Teflon® tape or an approved pipe sealant on threads of the piping.
5. Close the drain valve and turn on the cold water supply line filling the tank completely with water. Purge the water lines of any excess air by opening a hot water faucet allowing the water to flow for a minimum of 3 minutes, allowing the tank to fill completely.
6. Reconnect the manifold tube to the gas control valve/thermostat (**Note:** Do Not apply any thread sealant at this connection). To prevent any cross threading the manifold tube should be started by hand (turn clockwise for natural gas, counter-clockwise for L.P.). Upon tightening with the fingers and confirming it has not been cross threaded, tighten nut with an 3/4" open end wrench (see Figure 26).
7. Reconnect all the electrical connections to the bottom of the gas control valve/thermostat, gently pushing each connector up snapping into place (see Figures 10 & 26).
8. Turn on the gas supply to the unit and test the gas supply line and union connections by brushing on an approved noncorrosive leak detection solution. (**Note:** Do not splash the solution on control. If a leak is detected, shut the water heater down by following the directions on the "Lighting and Operating Instructions". Repair the leak(s) and repeat leak test).
9. Reconnect the electrical power to the water heater in the wall outlet and turn the gas supply back on to the gas control valve/thermostat.
10. Restart the water heater by following the directions on the "Lighting and Operating Instructions" label located on the front of the water heater.
11. As the burner is heating (view flames through viewport), test the manifold tube connection at the gas control valve/thermostat by brushing on an approved noncorrosive leak detection solution. **Important:** Do Not splash any solution onto any electrical connections.
12. Upon verifying proper operation of the water heater, replace the outer door.

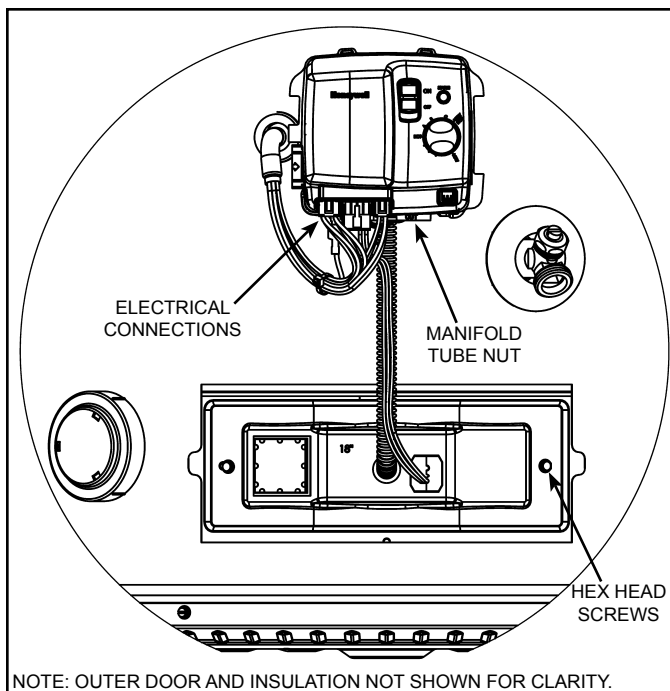


Figure 26

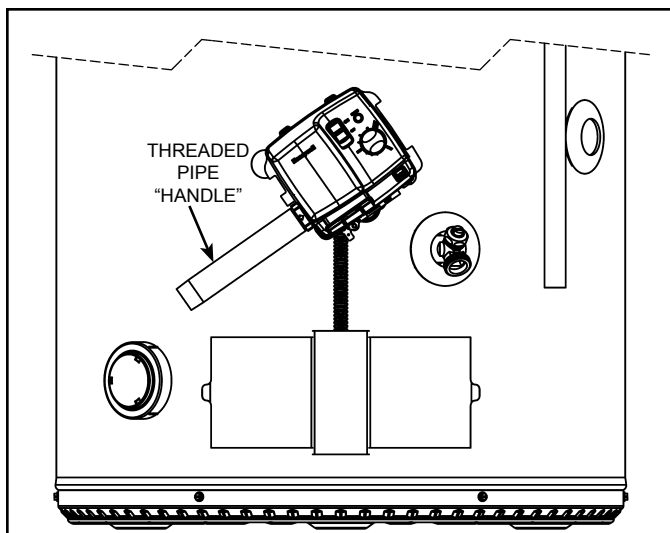


Figure 27

BLOWER REMOVAL/REPLACEMENT

BLOWER

Important: Use only factory authorized replacement parts. If you lack the necessary skills to properly perform the installation, you should not proceed, but get help from a qualified service technician.

Tools required:

- Ratchet with 5/16" socket or 5/16" nutdriver
- Ratchet with 1/4" socket or 1/4" nutdriver

Removing Blower

1. Set the gas control valve/thermostat to its lowest setting by turning the knob counter-clockwise to the VAC point (see Figure 3).
2. Turn gas control switch to the "OFF" position and turn "OFF" the gas supply to the unit (see Figure 3).
3. Disconnect the electrical power to the water heater from the wall outlet.
4. Use a 5/16" nutdriver to loosen the screw on the upper gear clamp of the rubber coupling adaptor connecting the venting to the blower. Slowly pull the vent from the adaptor (see Figure 28).
Note: The rubber coupling adaptor will be different based on the venting size (2" or 3" vent pipe).
5. Use a 1/4" nutdriver or 1/4" socket & ratchet to loosen the screw on the junction box. Remove and retain the screw and junction box cover. Disconnect the power and ground connectors (see Figure 28).
6. Use a 1/4" nutdriver or 1/4" socket & ratchet to loosen, remove and retain the 6 hex head screws so the blower assembly can be removed. Remove the blower while carefully passing the power and ground connectors through the junction box opening (see Figure 28).
Important: When removing the blower, care must be taken to pass the power and ground connectors through the junction box opening so the wires and blower do not get damaged.

Installing Blower

1. Pass the power and ground connectors through the junction box opening and place the blower on top of the water heater.
2. Reconnect the power connector and the ground connector. Reinstall the junction box cover and screw removed in step 5 above. Tighten with 1/4" nutdriver or 1/4" socket & ratchet.
3. Align the screw holes on the blower assembly with those on the top of the heater. Using the six screws removed in step 6 above, install the blower assembly and tighten with 1/4" nutdriver or 1/4" socket & ratchet (see Figure 28).
4. Reinstall the vent by pushing it into the adaptor. After confirming the vent is properly seated in the adaptor, use a 5/16" nutdriver to tighten the screw on the gear clamp of the adaptor connecting the venting to the blower.
Important: This connection must be properly sealed to prevent the leakage of the products of combustion into the living area.

5. Reconnect the electrical power to the water heater in the wall outlet and turn the gas supply back "ON" to the gas control valve/thermostat.
6. Restart the water heater by following the directions on the "Lighting and Operating Instructions" label located on the front of the water heater.

Note: This power vent heater will accept a 2" or 3" rubber outlet coupling, depending on the size of the water heater. This coupling, mounted in the vertical position, accepts the vent piping and is attached as shown in Figure 28. Refer to the Manual to determine vent pipe sizing for your application. The blower assembly may be rotated 90 degrees clockwise or counter-clockwise to allow horizontal venting in areas having restricted space above the water heater (see "Rotating the Blower" section).

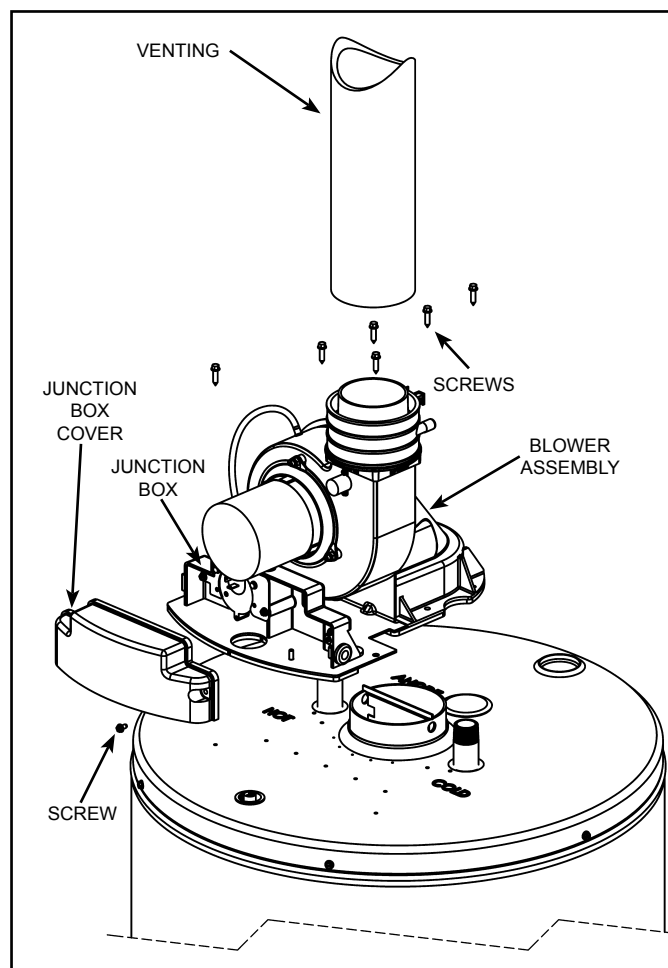


Figure 28

ROTATING THE BLOWER

BLOWER EXHAUST DIRECTION

Important: Use only factory authorized replacement parts. If you lack the necessary skills to properly perform the installation, you should not proceed, but get help from a qualified service technician.

Tools required:

- Ratchet with 11/32" socket or 11/32" nutdriver

The blower assembly may be rotated 90 degree clockwise or counterclockwise to allow horizontal venting in areas having restricted space above the water heater. To rotate the blower outlet, remove the four nuts with 11/32" nut driver (see Figure 29), securing the flue collector to the blower housing. Pull the blower assembly forward to free it from the mounting studs. Rotate the blower housing clockwise or counter-clockwise and align the four holes and screws together. Reattach the blower housing to the flue collector.

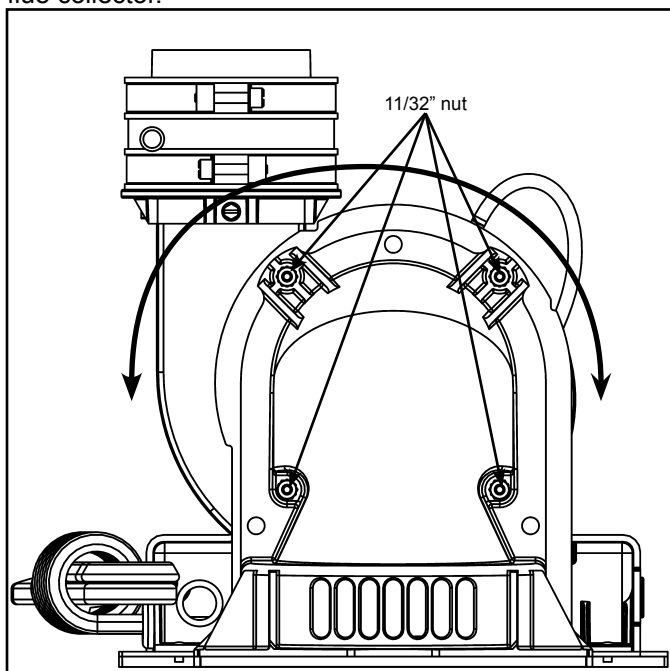


Figure 29

This power vent heater can accept 2" or 3" rubber outlet coupling, depending on the capacity of the water heater. This coupling, mounted in the vertical position, accepts the vent piping and is attached as shown in Figure 28.

PRESSURE SWITCH REMOVAL/REPLACEMENT

PRESSURE SWITCH

Important: Use only factory authorized replacement parts. If you lack the necessary skills to properly perform the installation, you should not proceed, but get help from a qualified service technician.

Tools required:

- Phillips Head Screwdriver
- Ratchet with 1/4" socket or 1/4" nutdriver

Removing Pressure Switch

1. Set the gas control valve/thermostat to its lowest setting by turning the knob counter-clockwise to the VAC point (see Figure 3).
2. Turn gas control switch to the "OFF" position and turn "OFF" the gas supply to the unit (see Figure 3).
3. Disconnect the electrical power to the water heater from the wall outlet.
4. Use a 1/4" nutdriver or 1/4" socket & ratchet to loosen the screw on the junction box. Remove and retain the screw and junction box cover (see Figure 30).
5. Remove the air pressure tubing from the air pressure switch by pulling upward on the tubing at the connection to the air pressure switch.
6. After noting the position of each electrical flag terminals, remove the two (2) electrical flag terminals from the switch by pulling outward and off the switch.
7. Using a hex head screwdriver, remove and retain the 2 screws securing the bracket to the junction box (see Figure 30).
8. Using a hex head screwdriver, remove and retain the 2 screws securing the pressure switch to the bracket (see Figure 30).

Installing Pressure Switch

1. Using a hex head screwdriver, secure the new pressure switch to the bracket with the screws removed in step 8 above. Care should be taken to ensure the proper orientation of the bracket and pressure switch (see Figure 30).
2. Using a hex head hex screwdriver, secure the bracket to the junction box with the screws removed in step 7 above (see Figure 30).
3. Reattach the two (2) electrical flag terminals by pushing the flag terminals onto the switch. Care MUST be taken to ensure that each of the electrical flag terminals is in its original position.
4. Reattach the air pressure tubing to the air pressure switch by pushing the tubing onto the connector until the end of the tubing reaches the shoulder of the connector.
5. Replace the blower's junction box door by reusing the screw removed in step 4 above.
6. Reconnect the electrical power to the water heater in the wall outlet and turn the gas supply back "ON" to the gas control valve/thermostat.
7. Restart the water heater by following the directions on the "Lighting and Operating Instructions" label located on the front of the water heater.

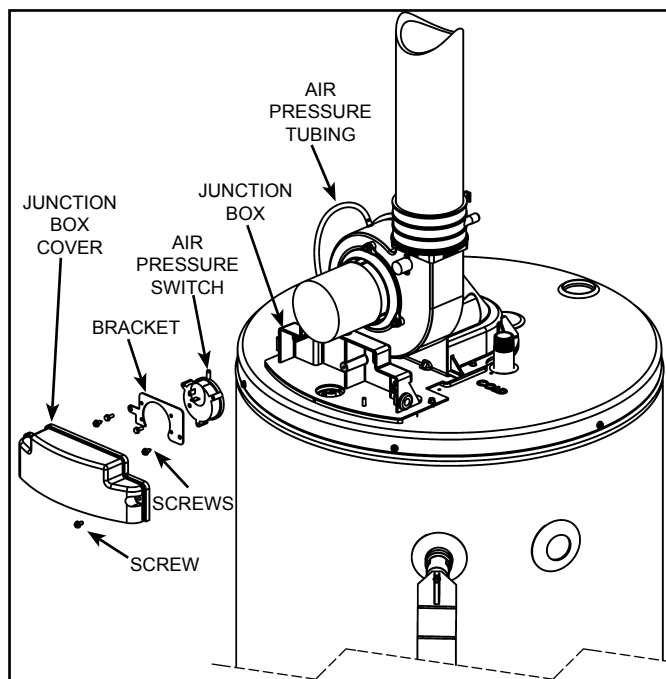


Figure 30

FV SENSOR

FLAMMABLE VAPOR SENSOR

When using a gas fired water heater there is a risk of flammable vapors entering the combustion chamber, being ignited by the burner flame and causing a flashback. In order to detect such flammable vapors before they enter the combustion chamber, this water heater is equipped with a flammable vapor sensor (FVS). It is a chemical-absorption based sensor that is connected to the gas control/thermostat (see Figure 31). When exposed to flammable vapors it will trigger the control to stop the flow of gas and enter the FVS lockout state. While in the FVS lockout state the LED on the control will flash the gas lockout code. Refer to the “Gas Control Led Status Codes” section for an explanation of the codes applicable to the control installed on your water heater. If an FVS lockout occurs, check around the water heater for sources of chemical contamination such as flammable vapors including gas vapors, solvents, paint and thinners as well as sources of water and detergents.

Note: Resetting the heater will reset the FVIR circuit if all sources of contamination have been removed and the sensor clears. If all sources of contamination have been removed and the system will not reset, the sensor will need to be replaced.

If there is a problem with the wiring of the flammable vapor sensor or the flammable vapor interface the LED will flash the failure status code (see “Troubleshooting Guide”).

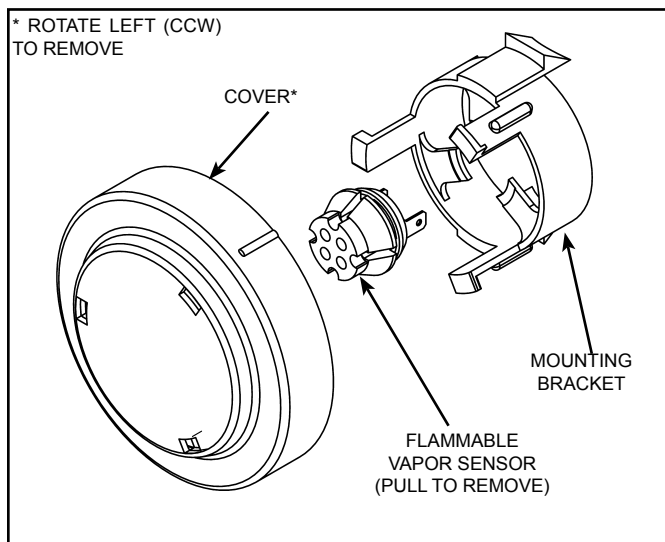


Figure 31

CLEANING THE COMBUSTION CHAMBER

1. Follow procedure outlined in “Removing Inner Door/Manifold/Burner Assembly”.
2. Use a vacuum cleaner/shop vac to remove all loose debris in the combustion chamber.
3. Reassemble following the procedure under “Installing Inner Door/Manifold/Burner Assembly”.

CLEANING THE BLOWER

BLOWER

In dusty and contaminated air conditions, the interior of the blower and the blower wheel may require periodic cleaning. This is often indicated by nuisance failures of the air pressure switch or the high limit temperature control. A collection of dust or debris on the rear blower air intakes can also indicate reduced blower capacity. To clean the inside of the blower assembly and the blower wheel requires the removal of the blower/motor from the mounting plate located on the top of the heater. Tools required include an 11/32" nut driver, small (1") paintbrush, toothbrush and vacuum cleaner.

1. Set the gas control valve/thermostat to its lowest setting by turning the knob counter-clockwise to the VAC point (see Figure 3).
2. Turn gas control switch to the "OFF" position and turn "OFF" the gas supply to the unit (see Figure 3).
3. Disconnect the electrical power to the water heater from the wall outlet.
4. Disconnect the vent piping from the top of the blower. Loosen the lower gear clamp that holds the rubber coupling to the blower.
5. Remove and retain the (4) 11/32" nuts located on the back of the blower with the nutdriver (see Figure 32).
6. Holding the blower motor and the blower housing, pull the assembly forward to disengage it from the mounting plate. The blower will still be connected to the junction box so exercise care not to stress the wiring.
7. Accessing the blower wheel through the outlet, use the paint brush to brush off the outer edge of the blower wheel to dislodge the dirt stuck on the blades and the inside of the housing. Rotate the wheel until all blades are clear. **Note:** The wheel is a balanced component. Do not bend, dent or distort the blades as this can upset the wheel balance and affect the blower operation. Vacuum out the loosened dirt.
8. Accessing the inside of the blower wheel through the rear of the housing, gently brush off the inside of the blades using the toothbrush. Again, take care not to distort the blades. Rotate the wheel until all blades are cleaned and vacuum the debris.
9. Inspect the flue collector hood (still attached to the heater) and vacuum out the dust and debris that may have accumulated.
10. With all parts cleaned and the blower wheel turning freely, reinstall the blower to the mounting plate aligning the (4) studs and pushing tight against the mounting plate.
11. Reinstall the (4) 11/32" nuts and tighten securely. All (4) nuts must be in place and secure to safely operate the blower.
12. Reattach the vent piping and coupling to the top of the blower, tighten the bottom gear clamp and ensure the piping is secure.

13. With all components clean and secure, reconnect the electrical power to the heater.
14. Reset the thermostat to the desired temperature setting and turn the gas control switch back to the "ON" position. **Note:** If the water in the heater is hot, the unit will wait to operate until there is a need for more hot water.

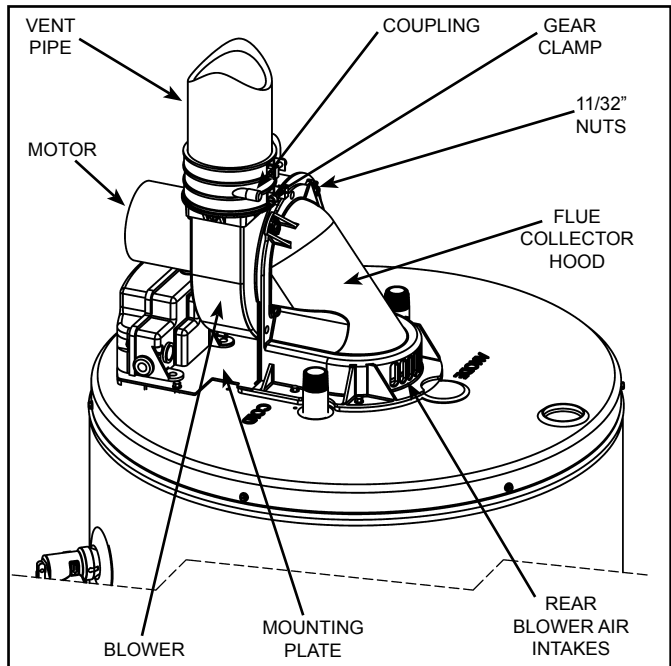


Figure 32

TECHNICAL BULLETINS

WATER HAMMER

GENERAL	Water hammer is the destructive force, pounding noise and vibration in a piping system when water flowing through a pipeline is stopped abruptly. When water hammer occurs, a high intensity pressure wave travels back through the piping system until it reaches a point of some relief. The shock wave will then surge back and forth between the point of relief and the point of stoppage until the destructive energy is dissipated in the piping system. The violent action accounts for “banging”, “thumping”, and/or intense vibration in the pipe line. Although noise is generally associated with the occurrence of water hammer, it can occur without audible sound or noise. Quick closure of valves always causes some degree of shock with or without noise. The common cause of water hammer is single lever faucets (sinks/lavatories) or automatic solenoid valves dishwashers, washing machines, etc.). The speed of the valve closure time is directly related to the intensity of the surge pressure.
EFFECTS	The damage from water hammer can manifest itself in a number of ways. The most common are: • Expanded Tank Shell - This can be demonstrated by measuring the circumference at various locations along the shell. Pressures in excess of the maximum design working pressure can cause permanent deformation of the shell. Note: The continuous expansion of the tank shell may cause the tank to rupture at a welded seam. • Collapsed Flue Tube - This will choke off the ability to vent the products of combustion causing the flame and/or combustion to spill out from the combustion chamber. Often this will occur where thinning of the flue tube walls has occurred due to contamination of the combustion air or because of excessive condensation. • Inverted or Deformed Tank Heads - Often this accompanies collapsed flues, but one or both heads can be deformed.
THE FIX	The only effective means of control is to install water hammer arrestors. These devices have diaphragms which separate an air chamber from the water in the piping system. As the shock wave reaches this device, the air chamber absorbs the shock. Arrestors should be located as close as possible to the source of the shock wave.
NOTES	Since water hammer exposes the equipment to pressures in excess of its design limits, failures caused by water hammer are not eligible for warranty consideration.

MINERAL BUILD-UP

SYMPTOMS	• Rumbling • Crackling • Popping
CAUSE	With the increase in fuel costs and hot water consumption, deliming has become a necessity of modern maintenance. Lime (CaCO_3), is the most notable factor when discussing water hardness. Lime is present in every water system to some degree. Since lime is inversely soluble (the more you heat, the more lime comes out), higher usage, excessive hardness, and increased heating surface can lead to a high incidence of “limed-up” heaters. Symptoms often include a popping of water trapped under lime deposits or the sizzling of water trapped next to elements, boiling it to steam.
THE FIX	Treatment of a “limed-up” heater is relatively simple. Since CaCO_3 is a base, the easiest way to dissolve it so it can be flushed from the heater is with an acid. The most commonly used is phosphoric acid at a food-grade level. Two available treatments are Mag-Erad® and Un-Lime®. Any well stocked plumbing supply house should have a deliming solution available. The directions on the product should be followed explicitly.

CONDENSATION	
SYMPTOMS	The water heater appears to be releasing water while the main burner is on or water is found surrounding the heater shortly after the water heater has been used. This section explains why flue gases condense and how you can differentiate between condensation and leaking.
CAUSES	Condensate is the result of air borne water vapor being chilled below the dew point. The dew point is the temperature at which water vapor turns into liquid. Low incoming water temperatures cool the piping and the heat transfer surfaces of the water heater. When the main burner comes on, the hot flue gases turn into condensate upon contact with these surfaces. The typical home water heater will produce about one-half gallon of water vapor during every hour of operation. Condensate is often mistaken for leaking. Newer heaters will condensate more than older heaters because modern water heaters are much more efficient than their predecessors. The newer heaters utilize as much of the energy out of the main burner flame as possible. This lowers the flue gas and tank storage temperature and closer to the dew point temperature.
THE FIX	To distinguish between a condensating water heater and a leaking water heater: 1. Wipe up any water under the heater, 2. Turn gas control switch to the "OFF" position, 3. Wait 8 hours, check for water accumulation under the heater. 4. Condensation should stop when the entire tank water is heated above approximately 115°F. a. If no water is under the heater, the water heater was condensating. b. If water is under the heater, check further for a loose fitting. If all fittings are tight and the tank is leaking, replace the water heater. Leaking heaters cannot be "repaired".

DISCOLORED WATER	
SYMPTOMS	Rusty, brown, black, or yellow water appearing in the hot water.
CAUSES	Complaints of discolored water are commonly blamed on water heaters and storage tanks, but in fact, it is a rare occurrence for today's high quality glass lined tanks to have a lining failure significant enough to allow water to contact enough bare metal to discolor the contents of even a small tank. The most common cause of "rusty" water is a non-toxic iron reducing bacteria, scientifically termed Crenothrix, Leptothrix, and Gallionella. Iron bacteria is commonly found in soil, water wells, water treatment plants and water distribution piping systems where soluble iron exceeds 0.2 ppm, higher levels make conditions even more favorable. Soluble iron in the water provides food for the bacteria. Rusty discolored water is the end result of the bacteria feeding process. Water heaters and storage tanks usually require new anode rods as presence of iron bacteria contributes to premature anode failure. The requirements for the bacteria to thrive are: • Elevated levels of iron and manganese in the water. • Water with little or no dissolved oxygen. • Temperatures below 138°F. Items that can increase the potential for this bacteria are: • Water softeners. • Well water. • Long periods of no water movement.
TREATMENT	The simplest treatment available is shock-chlorination of the system. This is a surface treatment, and often requires repeated trials in heavily infected systems. The chlorination of a system requires that you follow each step explicitly to avoid an untreated portion of the piping system from re-infecting another part. See the "Chlorination Procedure" section.
NOTES	Since rusty water is caused by a bacteria presence and is not caused by the water heater, any treatment would not be considered warranty related.

SMELLY WATER	
SYMPTOMS	Rusty, brown, black, or yellow water appearing in the hot water.
CAUSES	The most common cause of “smelly water” is a non-toxic sulfate reducing bacteria, scientifically termed Divibrio Sulfurcans. This bacteria often enters the water system through construction or a break in ground piping. The bacteria create the energy it needs to survive by converting sulfate (SO₄) to hydrogen sulfide (H₂S) gas you smell in the water. Hydrogen sulfide gas is distinctive because of its rotten egg-like stench. Its presence can severely affect the taste as well as the odor of the water. Occasionally this bacteria can be accompanied by black deposits, the result of pipe and fitting corrosion. In extremely high concentrations, hydrogen sulfide gas can be toxic though the gas is detectable long before harmful levels are reached. The requirements for the bacteria to thrive are: • Elevated levels of iron and manganese in the water. • Water with little or no dissolved oxygen. • Temperatures below 138°F. Items that can increase the potential for this bacteria are: • Water softeners. • Well water. • Long periods of no water movement. Other factors that may contribute to smelly water: • Chlorides of Magnesium and Calcium leave a bitter taste. • Chloride of Sodium produces a salty taste. • Sulfates (50 ppm) gives a medicinal taste. • Carbon Dioxide in low pH water gives fizzy water. • Iron and tannic waters also give a bad taste and odor.
TREATMENT	The simplest treatment available is the shock-chlorination of the system. This is a surface treatment, and often requires repeated trials in heavily infected systems. The chlorination of a system requires that you follow each step explicitly to avoid an untreated portion of the piping system from re-infecting another part. See the “Chlorination Procedure” section. Longer lasting solutions include chlorination or aeration of the water supply.
NOTES	Since rusty water is caused by a bacteria presence and is not caused by the water heater, any treatment would not be considered warranty related.

CHLORINATION PROCEDURE	
CAUSES	The chlorination procedure is used to eliminate various bacteria that accumulate and grow in water heaters. These bacteria often cause odorous or discolored water conditions.
TREATMENT	The simplest treatment available is the shock-chlorination of the system. This is a surface treatment, and often requires repeated trials in heavily infected systems. The chlorination of a system requires that you follow each step explicitly to avoid an untreated portion of the piping system from re-infecting another part. Longer lasting solutions include chlorination or aeration of the water supply.
PROCEDURE	Please read the steps of the chlorination procedure prior to beginning. If you feel uncomfortable performing any of these steps, contact a service person to perform this procedure for you.
STEP 1	Turn off the gas and electric supply to the tank.
STEP 2	Turn off the cold water supply valve to the tank.
STEP 3	Open a nearby hot water faucet to relieve the vacuum.
STEP 4	Drain all the water from the tank (a water-hose may be needed).
STEP 5	Remove the anode rod(s), and close the drain valve.
STEP 6	Using a funnel in the anode opening add one gallon of household chlorine bleach for every 25 gallons of tank capacity.
STEP 7	Reinstall anode rod(s) after inspecting and replacing as needed.
STEP 8	Open cold water supply valve and refill the system. Then draw the water to every hot water fixture, until the smell of chlorine is detected. Operate dish and clothes washers until a noticeable amount of the chlorine is detected as well. All hot water lines must receive treatment.
STEP 9	Leave the chlorine solution undisturbed for one hour or more.
STEP 10	After the contact time has elapsed, drain the tank according to steps 2, 3, & 4.
STEP 11	Close the drain valve and refill the tank. Allow the tank to sit for 15 minutes. Repeat steps 2, 3, and 4. Continue to flush the tank if the water is discolored or contains a chlorine odor.
STEP 12	Close the drain valve and refill the tank. Flush all chlorine from the piping by opening every hot water outlet/ appliance.
STEP 13	Return hot water heating system to service by following the recommended start-up procedure posted on the unit or in the manual.

NOT ENOUGH HOT WATER	
CAUSES	• The heating capacity of the water heater has been exceeded: complaints regarding an insufficient supply of hot water are typically the result of a water heater that cannot meet the demands of the residence (both people and appliances). The demand for sufficient hot water may also be exceeded if additional people and/or appliances are added to the residence. • Operating Set Point is too low. • Mineral build-up. • Hot water supply valve(s) to fixtures not fully open. • Inlet/outlet water piping connections to water heater reversed. • Dip tube inside water inlet connection missing.
THE FIX	Compare hot water requirements with the capacity of the water heater. If necessary, install a water heater with greater capacity. • Turn temperature knob to desired temperature as described in the Manual. • Drain the tank (see "Draining and Flushing" section in the Manual). Determine if water treatment is needed. • Check to see if hot water supply valve is fully open, check inlet/outlet piping connections to water heater are not reversed, check to see if the dip tube inside water inlet connection is not missing.

THERMAL EXPANSION	
SYMPTOMS	• Effects are only noticeable after hot water use followed by periods of no water use. • Relief valve drips during any recovery cycle when no hot or cold water is used. • Hot water pipes creak while water heater is recovering and all valves are closed. • Tanks or other components of the water supply system fail prematurely. • A metallic creaking noise might actually be heard in the location of the heater as the pressure is relieved and the stretched tank returns to a natural shape. • Faucet drips during any recovery cycle when no hot or cold water is used. • Water surges when a faucet is first opened and then pressure drops.
CAUSE	The water in a water heating system expands when it is heated and increases in volume. Since water will not compress (like air), system designers must include provisions for thermal expansion. (Water in a closed tank at 50 psi, when heated just 10 degrees, will reach a pressure of 250 psi). Many water supply systems have check valves or back flow preventers at the water meter to prevent any possible contamination of the public water supply by the accidental back-flow of contaminated water into the supply mains. These check valves are often required by code, and some cities are even installing the check valves. They serve a useful purpose. Do not remove them! The use of pressure reducing valves (PRV) is another cause. PRVs are designed to conserve water and prolong fixture life. Many PRVs also act as very effective check valves. Again, do not remove them! Water softeners in the system may also act as back-flow preventers.
TEST	Follow these easy steps to diagnose thermal expansion: • Turn gas control switch to the "OFF" position, and install a water pressure gauge with dead hand on the drain valve. Open the drain valve, so the gauge reads system pressure. • Open a hot water tap and allow 15% to 20% of the tanks volume to run out. Shut off the drain valve and make sure that no other fixture in the system, hot or cold, is open. Make sure that outside fixtures, if they are on the same system, are turned off too. Any water leaks or use will make the test meaningless. • Check the water pressure gauge, and turn the pointer so it lines up with the pressure indicating needle. Turn the gas control switch "ON", so the heater cycles on. Watch the pressure gauge. • If the system is closed, the pressure will start to climb steadily and rapidly. A small amount of thermal expansion control may be built into the system because of trapped air pockets or a water hammer arrestor. In that case the pressure will increase slightly, hold steady for a short time and then rapidly increase. The temperature and pressure relief valve (T&P) or PRV should open and release water once the pressure reaches the maximum setting on the valve. The valve will close once the pressure falls below the pressure setting of the valve.
THE FIX	The ideal fix involves the use of a pressure reducing valve if supply pressures are above 60 to 70 psi, and a properly sized expansion tank. The PRV reduces supply pressures to 40 to 60 psi allowing an economically priced and sized expansion tank to be used. The PRV also offers the benefit of saving water and prolonging the life of water flow valves. The PRV is not required if the system already has one or if high supply pressures are desired. A supply water pressure of 80 PSI is a maximum set by many codes. The PRV is installed between the check valve and the water heating system. The expansion tank is installed between the PRV and the water heating system. Follow the manufacturers instructions for installing the expansion tank. Run the thermal expansion check again. The pressure should increase only slightly then hold steady throughout the recovery cycle. The expanded water is flowing back from the heater and into the pressurized storage bladder of the expansion tank. Air pressure will force this water out of the expansion tank into the supply once usage resumes. DO NOT DEPEND ON THE TEMPERATURE & PRESSURE VALVE (T&P VALVE) TO HANDLE THERMAL EXPANSION! The T&P valve manufacturers designed the valve to be an emergency relief device only. The T&P Valve could be subject to reduced effectiveness or failure.
WARNING	Thermal expansion of water, if not compensated for in system design, will lead to the early failure of components. These failures are not covered by the manufacturer's warranty, so it is extremely important that everyone be aware of the causes, symptoms and solutions to thermal expansion in a closed water heating system.

LEAKING TEMPERATURE AND PRESSURE RELIEF VALVE	
SYMPTOMS	• Water seeping around the relief valve tank connection. • Leakage at the threaded portion of the relief valve connection. • Intermittent weeping and/or dribbling from the relief valve. • Large volume of hot water sporadically discharged from the relief valve.
CAUSE	The temperature and pressure relief valve (T&P) is a safety device limiting temperature and pressure levels in a water heater. Each T&P has both a temperature and pressure rating. Normally, the temperature and pressure relief valve will have a temperature rating of 210°F. A probe (part of the relief valve) extends into the tank measuring the stored water temperature. This probe must be within the top six inches of the water heater. If the water heater's thermostat malfunctions, higher than normal water temperatures could be produced. Once the probe senses a temperature approaching its temperature rating, the relief valve will open to full capacity releasing "very hot" water until the temperature is below its reset temperature. The pressure rating on the relief valve should be the same or less than the certified working pressure of the tank (generally 150 psi) and be below the lowest maximum working pressure rating of any system components. Once the pressure in the tank reaches the valve's pressure rating, it will slightly open relieving the pressure. Relieving of pressure can be noted as "dribbling" or "weeping" water from the relief valve. If an incorrectly sized temperature and pressure relief valve is installed, the warranty will be void.
THE FIX	Follow these easy steps to diagnose thermal expansion: • Intermittent weeping and/or dribbling at the relief valve - The relief valve relieves water slowly when actuating on pressure. A closed system can cause pressure to increase in the system. This condition is called thermal expansion. For additional information regarding thermal expansion please see thermal expansion section on of the Installation and Operating Manual. • Leaking at the spud of the water heater - Spuds are welded to the tank and are not repairable. The heater should be replaced. • Leakage at the threaded relief valve connection - Remove relief valve and reseal connection. • Large volume of hot water sporadically discharged from the relief valve – The relief valve relieves water quickly when actuating on temperature. The only cause of this problem is a malfunctioning thermostat.

INSULATION BLANKETS	
GENERAL	The purpose of an insulation blanket is to reduce the standby heat loss encountered with storage tank heaters. Most modern water heaters have adequate factory installed insulation, the use of an after market insulation blanket is no longer recommended by most experts. While the use of an external insulation blanket will not void the warranty, the water heater manufacturer explicitly disclaims any liability for problems associated with the use of insulation blankets. Note: A few local energy codes may still require the use of insulation blankets on water heaters. Be sure to follow all installation instructions, cautions, and warnings for the insulation blanket as well as the cautions and warning of the water heaters owners manual.
NOTES	Should you choose to apply an insulation blanket to this heater, you should follow these instructions. Failure to follow these instructions can restrict the air flow required for proper combustion, resulting in fire, asphyxiation, serious personal injury or death. • Do not cover the outer door, thermostat or temperature & pressure relief valve. • When installed the insulation blanket will cover important safety and operation labels. Obtain new warning and instruction labels from the Technical Information Center listed in the owners' manual. The replacement labels must be placed on the blanket in the location of the original labels on the water heater jacket. • Do not cover the instruction manual. Keep it on the side of the water heater or nearby for future reference. • Do not apply insulation to the top of the water heater, as this will interfere with safe operation of the draft hood. • Do not allow insulation to come within 2" of the rear air duct of the water heater to prevent blockage of combustion air flow to the burner. The combustion air openings in the rear air duct of the water heater must NOT be obstructed. • Inspect the insulation blanket frequently to make certain it does not sag, thereby obstructing combustion air flow.

TROUBLESHOOTING CHART

PROBLEM	POSSIBLE CAUSE(S)	CORRECTIVE ACTION
BURNER FLAME TOO HIGH	1. Insufficient secondary air 2. Orifice too large	1. Provide ventilation to water heater 2. Replace with correct orifice
FLAME BURNS AT ORIFICE	1. Low gas pressure 2. Defective gas control (thermostat)	1. Check with gas utility company 2. Replace gas control (thermostat)
INSUFFICIENT HOT WATER	1. Low gas pressure 2. Orifice too small 3. Thermostat set too low 4. Gas control error codes 5. Sediment or lime in tank 6. Water heater too small 7. Wrong piping connections 8. Leaking faucets 9. Wasted hot water 10. Long runs of exposed piping 11. Hot water piping in outside wall	1. Check with gas utility company 2. Replace with correct orifice 3. Turn temperature knob to higher setting 4. Refer to gas control error code in the Installation and Operating Manual 5. Drain/flush-provide water treatment if needed 6. Install adequate heater 7. Correct piping: dip tube must be in cold inlet 8. Repair faucets 9. Advise customer 10. Insulate piping 11. Insulate piping
WATER IS TOO HOT	1. Thermostat is too high 2. Defective gas control (thermostat)	1. Turn temperature knob to lower setting 2. Replace the gas control (thermostat)
SLOW HOT WATER RECOVERY	1. Insufficient secondary air 2. Low gas pressure 3. Orifice too small 4. Thermostat set too low 5. Heater too small 6. Wrong piping connection 7. Wasted hot water 8. Flue clogged	1. Provide ventilation to water heater. Check flue way, flue baffle and burner 2. Check with gas utility company 3. Replace with correct orifice 4. Turn temperature knob to higher setting 5. Install adequate heater 6. Correct piping-dip tube must be in cold inlet 7. Advise customer 8. Clean flue, locate source and correct
DRIP FROM RELIEF VALVE	1. Pressure build-up 2. Heater stacking 3. Closed water system 4. Improperly seated valve	1. Use a pressure reducing valve and relief valve 2. Lower the thermostat setting 3. See "Thermal Expansion" Section in the Manual 4. Check Relief valve for proper operation (Do Not plug T&P valve)
GAS CONTROL/ THERMOSTAT FAILS TO SHUT OFF	1. Defective gas control (thermostat)	1. Replace gas control (thermostat)
SMELLY WATER	1. Sulfides in water supply 2. Bacteria in water supply	1. See "Smelly water" section in the Manual 2. See "Smelly water" section in the Manual
CONDENSATION	1. Filling the new water heater for the first time 2. Moisture from the products of combustion 3. Water dripping from blower assembly 4. Undersized water heater	1. Normal operation: the condensation should disappear after heater warms up 2. Normal operation: the condensation should disappear in time 3. Provide drip "TEE" to the horizontal section of exhaust vent close to blower assembly 4. Install adequate heater
COMBUSTION ODORS	1. Insufficient secondary air 2. Flue clogged 3. Heater installed in a confined area 4. House too tight	1. Provide fresh air ventilation to the water heater 2. Clean, locate source and correct 3. Provide fresh air ventilation to the water heater 4. Provide fresh air ventilation to the water heater

PROBLEM	POSSIBLE CAUSE(S)	CORRECTIVE ACTION
SMOKING AND CARBON FORMATION	1. Insufficient secondary air 2. Low gas pressure 3. Orifice too large 4. Flue clogged 5. Defective gas control (thermostat) 6. Heater installed in a confined area	1. Provide ventilation to water heater. Check flue way, flue baffle and burner 2. Check with gas utility company 3. Replace with correct orifice 4. Clean, locate source and correct 5. Replace gas control (thermostat) 6. Provide fresh air ventilation
UNABLE TO LIGHT THE BURNER	1. Air in gas line 2. Pressure switch 3. Blocked exhaust 4. Wire connection 5. Defective gas control (thermostat)	1. Purge the air from gas line 2. Check the pressure switch, make sure the pressure switch hose is not kinked 3. Check vent pipe for blockage 4. Check wire connections 5. Replace the gas control (thermostat)
SIZZLING, RUMBLING NOISE	1. Scale and sediment 2. Condensation dripping on burner	1. Drain/flush-provide water treatment if needed 2. See "Strange sounds" section in the Manual
WATER LEAKAGE	1. Condensation 2. Dripping Temperature & Pressure Relief Valve 3. Thermostat does not shut-off 4. Drain valve dripping/leaking 5. Tank Leak	1. See "Condensate" section in the Manual 2. See "Temperature & Pressure Relief Valve" section in the Manual 3. Check the Thermostat 4. Back flush to clean out sediment, replace if necessary. 5. See "Leakage Checkpoints" section
BLOWER WILL NOT START	1. No power to unit 2. Thermostat set too low 3. Defective air pressure switch 4. Defective blower 5. Disconnected or loose wire 6. Control locked out	1. Plug in power cord, check fuses and/or supply voltage 2. Turn temperature knob to higher setting 3. Replace air pressure switch 4. Replace blower 5. Repair and reconnect wires 6. Reset – determine cause of lockout
BLOWER RUNS CONTINUOUSLY	1. Air pressure switch not closing due to insufficient draft—check for: a. Vent piping blocked b. Piping length too long c. Clogged/dirty blower 2. Disconnected, torn or blocked pressure switch hose from air pressure switch to blower housing 3. Defective pressure switch 4. High limit switch open due to excessive vent temperature or defective switch	1. Determine cause of insufficient draft. Check draft with manometer at pressure switch (Refer to Table 1 in the Manual for minimum acceptable draft setting) a. Remove blockage b. Reduce vent length/increase vent size c. Clean blower wheel 2. Reconnect or replace pressure switch hose 3. Replace defective pressure switch 4. Determine cause of overheating check for: overfiring, insufficient air supply, high ambient air temperature (once high limit switch activated, must be replaced)
HOT SURFACE IGNITER NOT GLOWING FOLLOWING WARM-UP PERIOD	1. Defective hot surface igniter 2. Defective gas control (thermostat)	1. Replace igniter 2. Replace gas control (thermostat)
VENT PIPE TOO HOT (ABOVE 170°F)	1. Blower does not run when heater fired 2. Not enough dilution air to mix with flue gases 3. Air in room too hot for mixing with flue gases 4. Wrong burner orifice	1. Refer to "BLOWER WILL NOT START" problem 2. Proper air circulation must be provided for combustion and dilution of flue temp 3. Room air to be used for dilution with combustion products in flue should be less than 90°F 4. Install correct orifice

GAS CONTROL LED STATUS CODES

LED Flash Sequence	Control Status
Short flash once every four seconds	IDLE (no call for heat, no fault conditions)
“Heartbeat”, alternates bright/dim	Call For Heat (no fault conditions)
One Flash, three second pause	Low Flame Signal (control continues to operate)
Two Flash, three second pause	Pressure Switch Failed Closed
Three Flash, three second pause	Pressure Switch Failed Open
Four Flash, three second pause	TCO Limit Lockout
Five Flash, three second pause	Flame Out Of Sequence
Six-One Flash, three second pause	Soft Lockout - Retry Limit - Failed TFI
Six-Two Flash, three second pause	Soft Lockout - Recycle Limit - PS/Limit opened
Six-Three Flash, three second pause	Soft Lockout - Recycle Limit - Flame Lost
Six-Four Flash, three second pause	Soft Lockout - Flame out of Sequence Sensed
Seven Flash, three second pause	Flammable Vapor Sensor Lockout
Eight-One Flash, three second pause	FVS Fault Detected
Eight-Two Flash, three second pause	Temperature Sensor Fault Detected
Eight-Three Flash, three second pause	Electronics Fault Detected
Eight-Four Flash, three second pause	Valve Fault Detected

IGNITION STATE AND TIMING

IGNITION STATE	TIMING
Pre-purge	5 seconds (NG models)
	15 seconds (LP models)
HSI Warmup	10 seconds
Ignition Activation Period (IAP)	3.5 seconds maximum
Flame Recognition Period (FRP)	0.5 second
Trial For Ignition	IAP + FRP
Flame Stabilization Period	Not Applicable
Inter-purge	30 seconds
Flame Failure Response Time	2 seconds max (@ 1uA flame current)
Post-purge	30 seconds
PS Prove Period	2 minutes
PS Fault Delay (failed open/closed)	2 minutes
Soft Lockout	20 minutes
TCO Limit Lockout	Indefinite (follow defined procedure to restart)
Flammable Vapor Sensor Lockout	Indefinite (follow defined procedure to restart)
Hardware Fault Lockout	Indefinite (clear fault to restart in 15 seconds or less)

This page intentionally left blank. May be used for notes or to record other installation information.