



Installation and Service Manual Room Slideout System with Programmable Control

CONTENTS

Introduction	1
Installation	1
Installation Problems	2
Program Mode	2-3
Operation Mode	4
Preventative Maintenance	4
Fault Diagnostics	5
Troubleshooting	5
Override Modes	6-7
Wiring Diagram	7
Warranty	8



Always keep away from the slide-out room and rails when the room is being operated. The gear assembly may pinch or catch on loose clothing causing personal injury

Failure to follow these instructions could result in serious injury or death



1217 E. 7th Street
Mishawaka, IN 46544
powergearus.com

Introduction

SYSTEM DESCRIPTION

Your Power Gear Slideout System is a rack and pinion design operated by a 12 Volt DC electric motor.

MAJOR COMPONENTS

- Inner rail assemblies are designed to support the room weight.
- The 12 Volt DC gearmotor will operate the room using power from the on-board unit battery.
- Slideout systems are equipped with a manual override that allows you to extend / retract the room in the event of a loss of power.
- A specially designed control that gives the user full control of room movement, in or out. The control has programmable stops that stop the motor when the room is fully extended or retracted and the ability to detect faults for ease in troubleshooting.

Installation

- Refer to 'Electric Motor Driven Slide-Out OEM Installation Manual (Power Gear P/N 81-1291) for proper installation of rail assemblies.
- If using room locks, refer to Power Gear drawing #907100112GA for proper installation of room locks.
- **Control and touchpad Installation.** *Refer to proper wiring diagram in back of manual*
 1. Mount control box (Fig 1a or 1b) in a location that will protect the components from the elements and being hit but is easily accessible for service.
 2. Determine location to mount touchpad (Figure 7). Location needs to be in view of slideout room and have a minimum depth of 1" inside the wall. Cut 2 7/8" wide x 1 3/4" high rectangular opening in wall to mount the touchpad.
 3. Route and attach touchpad harness to where touchpad will be mounted. Mount touchpad with (2) screws after system has been programmed.
 4. If using room locks, route and attach room lock harness from control to room lock.
 5. Route and attach the motor and sensor harness from the control box to the slideout room motors.
 6. Route and attach the proper gauge wire from the control to the chassis battery.

CAUTION

During Program mode the control has no stop locations and the user must teach the control where to stop. Damage to the room may occur if system is extended or retracted too far.

WARNING

Always keep away from the slide rails when the room is being operated. The gear assembly may pinch or catch on loose clothing causing personal injury.

WARNING

Failure to follow these instructions could result in serious injury of death

Installation Problems

The control is also equipped to help troubleshoot the system during installation. Count the number of LED flashes and refer to **Fault Diagnostics** section previous.





If you are still having difficulties programming the system and prior to replacing the control, verify the system has been wired correctly and the “in” stop location was programmed before the “out” stop location was programmed.

Program Mode

Use this procedure to initially set the IN and OUT stops or to change the current stop settings

Note:

- At anytime during the program procedure, the unit will exit program mode if the the room had not been moved for 45 seconds or if a fault is detected during programming, the LED will flash rapidly for 10 seconds to indicate that the programming procedure failed. After the 10 seconds of flashing, the control will automatically default to fault code 1 (stops not programmed) and the program mode must be re-done.

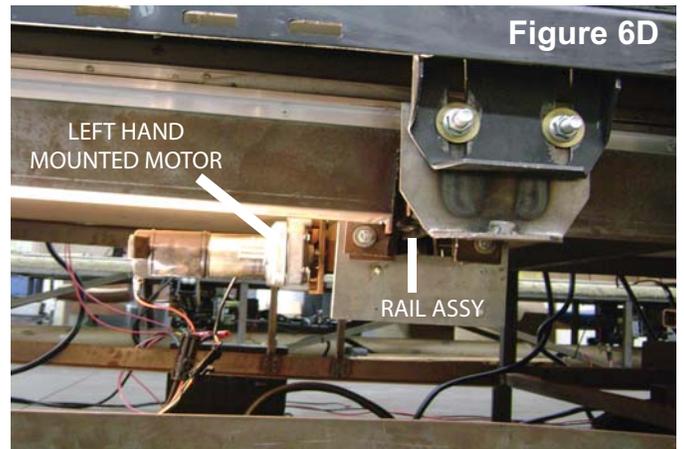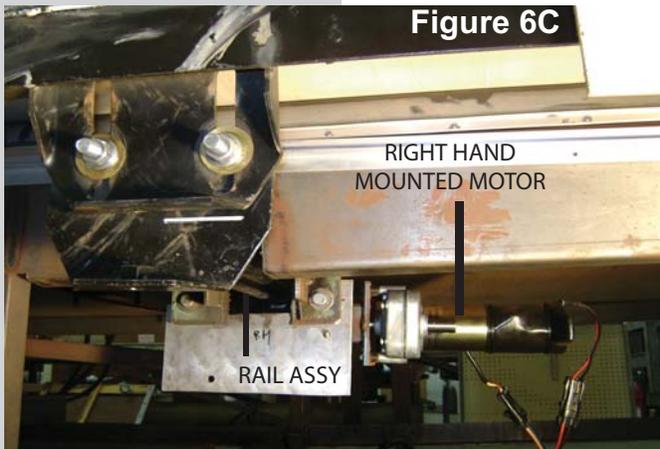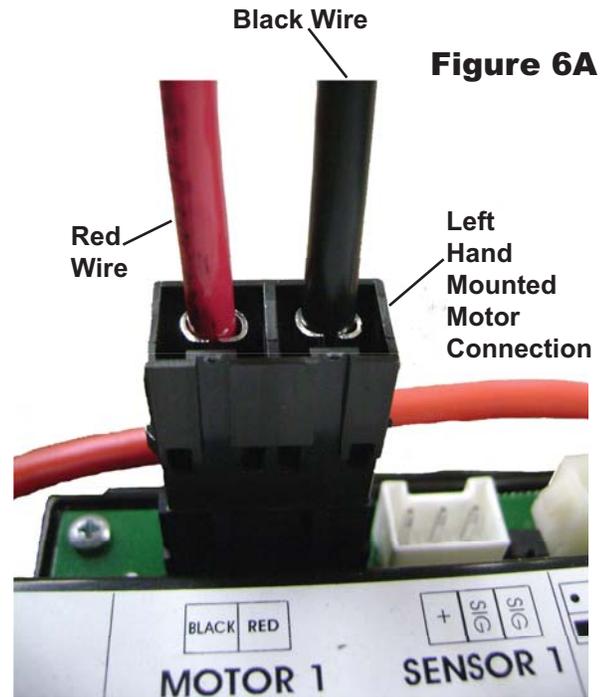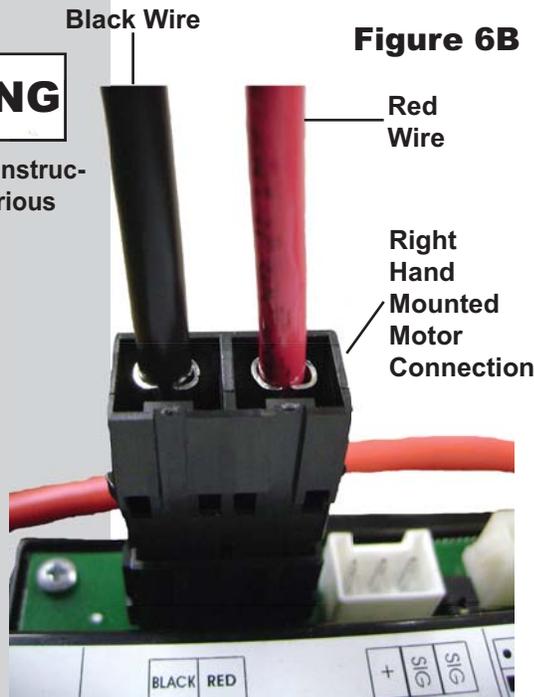

WARNING

Prior to extending or retracting the room, take a moment to insure the following:

1. Follow the coach manufacturer instructions regarding the leveling of the coach and room slide out operation
2. Verify the battery is fully charged. Keeping the coach running will ensure proper voltage for room extension/retraction
3. Park brake must be set
4. Check both inside and outside of the vehicle to make sure there are no people who could be harmed or obstacles that could cause damage due to room extension or retraction
5. Check to ensure that all safety travel straps/locks/bars have been removed and that no obstructions exist between the inside wall flange and the inside wall of the coach
6. If the slide out room is equipped with a couch or other furniture, make sure that the room is clear of people and pets during extension. Once the room has reached it's maximum extension the room may be occupied again
7. Always keep away from the slide-out room and rails when the room is being operated. The gear assembly may pinch or catch on loose clothing causing personal injury.

-Cont- Program Mode

1. This step will only need to be set when initially programming the slideout motor rotation on the control. If you are resetting stop locations or the control has already been programmed, skip to the next step.
 - For initial programming of the slideout motors rotation, you need to determine each slideout motor mounting orientation. Motor mounting orientation is determined by which side of the rail assembly the motor is mounted on when viewed from the outside of the unit. (Figure 6C and 6D) Pin out the motor connector per Fig 6A or 6B depending upon motor orientation
 - If during programming a motor runs in the opposite direction, switch the slideout motor leads either at the control or motor connection
2. Remove the touchpad (Fig 7) from the wall.
3. Press and hold the "Set Stops/Clear Fault" button on the back of the wall touchpad for 5 seconds. (Figure 4). Both LED's will light while the button is held down. (Figure 7)

Note:

 - After 5 second, the GREEN LED will begin flashing and the RED LED will remain lit.
 - If the room is equipped with room locks and the room locks are extended, the room locks will retract automatically.
4. The unit is now ready to set the retracted or IN stop.
 - a. Press the IN or OUT button on the front of the wall touchpad depending upon direction of rail movement you desire.
 - b. Move the room to the fully retracted position
 - c. Press the "Set Stop/Clear Fault" button on the back of the wall touchpad to program the retracted stop position.

Note:

 - The RED LED will now begin flashing and the GREEN LED will remain lit.
5. The unit is now ready to set the extended or OUT stop.
 - a. Press the IN or OUT button on the front of the wall touchpad depending upon direction of rail movement you desire.
 - b. Move the room to the fully extended position
 - c. Press the "Set Stop/Clear Fault" button on the back of the wall touchpad to program the extended stop position.

Note:

 - The control must be programmed correctly before it will operate in normal mode.
 - If both LED's flash rapidly 3 times and turn off, the control has been programmed correctly and is now in normal operation mode.
 - If both LED's flash rapidly for 10 seconds, the control has NOT been programmed correctly or the system is wired incorrectly. The touchpad will flash the fault code that occurred during programming. Fix the fault and repeat the **Programming Mode** procedure starting with step 3 above. If the "Set Stops / Clear Fault" button on the back of the wall touchpad is pressed and released, the control will default to Fault Code 1 indicating you must program the control.
6. Re-install the wall touchpad. Done

CAUTION

Use caution when initially programming the control as the correct motor rotation must be determined and programmed with the control (Ref. Step 2). Damage to the room or system may result. Once control has been programmed correctly, this step will not need to be repeated.

WARNING

Failure to follow these instructions could result in serious injury or death



P/N 1510000120
Figure 1a



P/N 1510000121
Figure 1b

WARNING

Prior to extending or retracting the room, take a moment to insure the following:

1. Follow the coach manufacturer instructions regarding the leveling of the coach and room slide out operation
2. Verify the battery is fully charged. Keeping the coach running will ensure proper voltage for room extension/retraction
3. Park brake must be set
4. Check both inside and outside of the vehicle to make sure there are no people who could be harmed or obstacles that could cause damage due to room extension or retraction
5. Check to ensure that all safety travel straps/locks/bars have been removed and that no obstructions exist between the inside wall flange and the inside wall of the coach
6. If the slide out room is equipped with a couch or other furniture, make sure that the room is clear of people and pets during extension. Once the room has reached it's maximum extension the room may be occupied again
7. Always keep away from the slide-out room and rails when the room is being operated. The gear assembly may pinch or catch on loose clothing causing personal injury.

WARNING

Failure to follow these instructions could result in serious injury of death

CAUTION

Do not work on your slide out system unless the battery is disconnected

Operation Mode

Note:

- The system will not work until stops are properly set or faults are cleared.
- The GREEN LED indicates system operation. (Figure 7)
 - A solid GREEN LED indicates room movement
 - A flashing GREEN LED indicates room lock movement, if room is equipped with room locks.
- The RED LED indicates a fault or problem with the system. (Figure 7) Refer to Fault Diagnostics Mode in this manual for additional information.
- Prior to moving the slideout room, make sure the engine is running to ensure ample voltage to the motors and the parking brake is set.

EXTENDING THE ROOM

1. Level the unit.
2. Remove transit bars (if so equipped).
3. Turn 'ON' the on/off switch or key (if so equipped).
4. Press and hold the OUT button (Figure 7). If equipped with room locks, the room locks will first retract prior to room movement. Reference the GREEN LED indications above to determine component movement.
5. Release the button, when room is fully extended and stops moving.
6. Turn 'OFF' the on/off switch or key (if so equipped).

RETRACTING THE ROOM

1. Turn 'ON' the on/off switch or key (if so equipped).
2. Press and hold the IN button (Figure 7) If equipped with room locks, the room locks will automatically extend when the room is fully retracted. Reference the GREEN LED indications above to determine component movement.
3. Release the button when room is fully retracted or when the room locks are fully extended and stop moving.
4. Turn 'OFF' the on/off switch or key (if so equipped).
5. Install the transit bars (if so equipped).

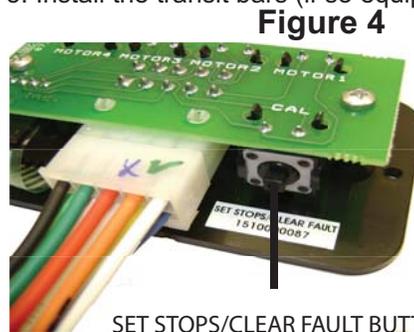


Figure 4

SET STOPS/CLEAR FAULT BUTTON

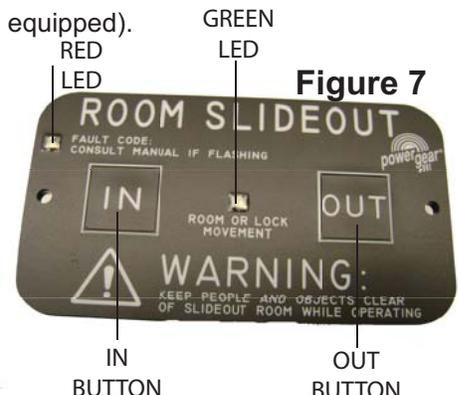


Figure 7

IN
BUTTON

OUT
BUTTON

Preventative Maintenance

Your Power Gear slide-out system has been designed to require very little maintenance. To ensure the long life of your slide-out system read and follow these few simple procedures.

- When the room is out, visually inspect the inner slide rail assemblies. Check for excess build-up of dirt or other foreign material; remove any debris or items that may be present.
- If the system squeaks or makes any noises it is permissible to apply a light coating of silicone spray or lithium grease to the roller and bearing sleeve I.D., removing any excess lubricant so that dirt or debris do not build-up. DO NOT lubricate the slide-out drive gears, gear racks, or roller OD as this will attract dirt / debris.

IF YOU HAVE ANY PROBLEMS OR QUESTIONS CONSULT YOUR LOCAL AUTHORIZED DEALER.

Fault Diagnostics

The control has the ability to detect several faults. When a fault is detected, the room movement will stop and the RED LED (Figure 7) will flash a number of times corresponding to a specific fault code listed below.

- There are 2 types of faults (Minor and Major) and a fault must be cleared in order for the room to operate.
 - **MINOR** faults can be cleared by pushing the 'IN' and 'OUT' buttons on the wall touchpad
 - **MAJOR** faults must be cleared by pushing the 'Set Stop/Clear Fault' button located on the back of the wall touchpad (Figure 4). This is done to alert the end user that there is a major problem with the system and to prevent damage to the slideout room.

NOTE:

- For fault codes 8, 9, or 10 the control must be overridden by following the **Emergency Retract Mode** (listed below) and the control must be reprogrammed (See **Program Mode**) when the fault is fixed.
- To determine the fault, count the number of GREEN and RED LED flashes on the wall touchpad (Fig 7) The number of flashes corresponds to a fault code number.
 - GREEN LED refers to the fault that has occurred with a specific motor. Example: 1 LED flash represents motor 1; 2 flashes represents motor 2; etc

NOTE:

- The only exception is with minor battery fault codes 2, 3, or 4. These faults apply to the entire system and are not motor specific but the control will flash the GREEN LED once to signify the start/end of the fault flash code.
- RED LED refers to the fault that has occurred.

Troubleshooting

Fault Code	Fault Type	Description	Probable Cause	Possible Solutions
1	Major	Stop Not Programmed	No stop locations has been set for the control	Set stop locations. Refer to Program Mode procedures to set stops
2	Minor	Battery Dropout Voltage. Voltage dropped below 8.0V	Bad Battery, bad wire connection or short in system	Repair bad wire connection, short or replace battery
3	Minor	Low Battery Voltage. Voltage is below 10.5V when room movement was initiated	Bad wire connection from battery to control or low battery	Repair bad wire connection or replace battery
4	Minor	Excessive Battery Voltage. Battery Voltage is above 18.0V when room movement was initiated.	Bad battery	Replace battery
5	Minor	Slideout motor drawing excessive current	Excessive system/room drag, obstruction, improper stop locations or damaged component	Remove obstruction, re-adjust room, reset stops, or replace damaged component
6	Major	Slideout Motor Short	Shorted wiring or motor	Inspect motor harness wires and motor for shorts. Replace shorted component.
7	Major	Slideout Motor Open	Bad connection, motor or blown fuse.	Repair bad wire connection, replace motor or fuse
8	Major	No signal on motor sensor Out 1 (yellow) wire	Bad wire connection or sensor	Repair bad wire connection or replace motor*
9	Major	No signal on motor sensor Out 2 (blue) wire	Bad wire connection or sensor	Repair bad wire connection or replace motor*
10	Major	No signal on motor sensor wires yellow or blue	Bad wire connection or sensor	Repair bad sensor or motor lead connections. Lastly, replace motor. *
11	Minor	Room lock motor drawing excessive current	Excessive drag or obstruction or damaged component	Remove obstruction or replace damaged component
12	Major	Room lock motor short	Shorted wiring or motor	Inspect motor harness wires and motor for shorts. Replace shorted component
13	Major	Room lock motor open	Bad connection or motor	Repair bad connection or replace motor
14	Minor	Room lock timeout	Bad wire connection, obstruction, broken component or low voltage	Remove obstruction, replace battery, repair bad wire connection of fix broken component in room lock

*Refer to Tip Sheet 82-S0539 and 82-S0540

CAUTION

During override mode the control has no stop locations. Use another individual to assist in determining when the room is retracted. Damage to the room can occur during over travel.

WARNING

After the room has been moved in the desired direction, the brake levers on each motor **MUST** be returned to the "engaged" position. When the motor brake is disengaged the slideout room will not lock into place; therefore, the room will not be sealed. When the room has been manually retracted, be sure to install the transit bars (if so equipped) and return the motor brake lever to its normal engaged position in order to seal and lock the room into position. Do not travel unless each motor brake is in the "engaged" position!

WARNING

If the room has been moved while the motor sensing control harness has been unplugged, do not attempt to use the room again until a service center has reprogrammed the computerized controller according to the service manuals instructions. Failure to reset the controller may cause damage to the system or coach.

Override Modes

●●●●In the event of component failure or loss of system power●●●●
Your system can be manually overridden.

NOTE:

- At anytime during the override procedure, the unit will exit override mode if the room had not been moved for 45 seconds or if a fault is detected during overriding, the LED will flash rapidly for 10 seconds to indicate that the override procedure failed. After 10 seconds of flashing, the control will automatically default to fault code 1 (stops not programmed) and the override mode must be re-done.
- The room control will need to be re-programmed (refer to **Program Mode**) after the system has been overridden.

1. **Emergency Retract Mode** - use this procedure when there is NO loss of power or electrical problem with the system.

1. Remove the touchpad (**Fig 7**) from the wall
2. Press and hold the "Set Stops/Clear Fault" button on the back of the wall touchpad for 5 seconds (**Figure 4**). Both LED's will light while the button is held down. (**Figure 7**)

NOTE:

- After 5 seconds, the GREEN LED will begin flashing and the RED LED will remain lit.
- If the room is equipped with room locks and the room locks are extended, the room locks will retract automatically.
- 3. The unit is now ready to retract the room.
 - a. Press the IN button on the front of the wall touchpad (**Figure 7**) until the room is fully retracted
- 4. Re-install the wall touchpad.
- 5. Take your unit to a certified dealer for repairs. Done

2. **-or- Emergency Retract Module (ERM)** - This procedure is an alternate to the above procedure and can only be used with Power Gear control P/N 1510000108. Ref Fig 1b. This kit (P/N 1010001197) can be purchased from Power Gear. The kit contains a module that will bypass the control and send power to the slideout motors.

3. **-or- Manual Crank Mode** - use this procedure when the above procedures do not work.

The system has been equipped with $\frac{3}{4}$ " hex override couplers located on a drive component of the system. Due to the size and weight of some rooms, assistance may be needed and care taken during the process. Use the following steps to mechanically operate the room:

1. Locate the motor and $\frac{3}{4}$ " hex coupler. (**Figure 8**) The hex coupler may not be attached to the motor as pictured but attached to a system drive component.
2. Unplug each motor connector. Leave the sensor connector attached.
3. With your thumb, depress the spring lock lever on the right hand side of the boot cover. Then, rotate the override lever counter-clockwise with your index finger to disengage the motor brake. (**Figure 9**)
4. Use a wrench or socket and ratchet to turn the override coupler in the direction required to retract the room.
5. Once room is fully retracted, re-engage brake lever on motor (**Figure 9**).
6. Reconnect the motor leads to the connector.
7. Take the unit to an authorized dealer for service. Do not use the slideout room as damage to the room may result.

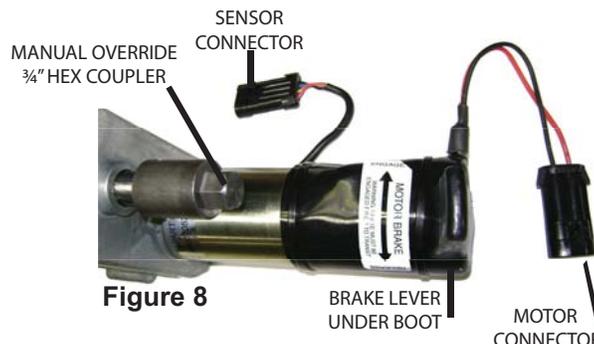
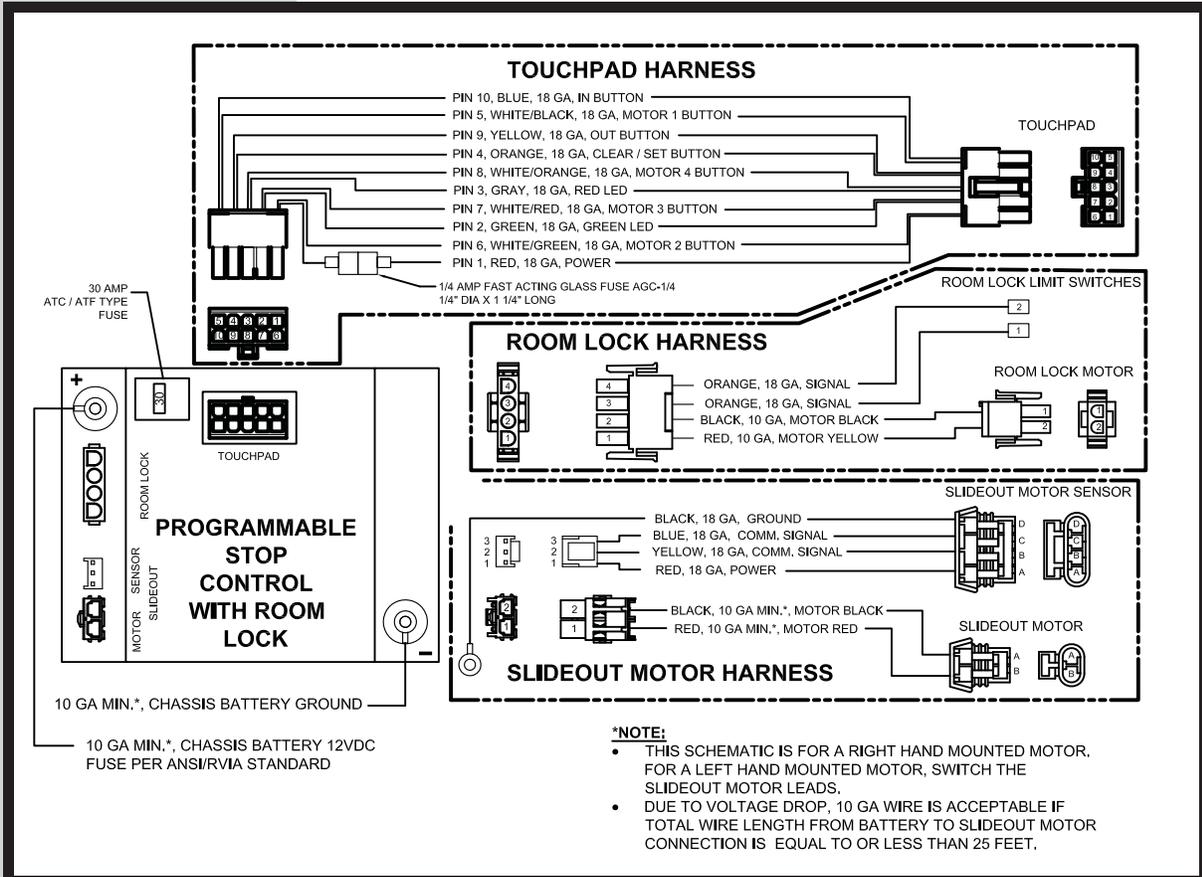


Figure 8

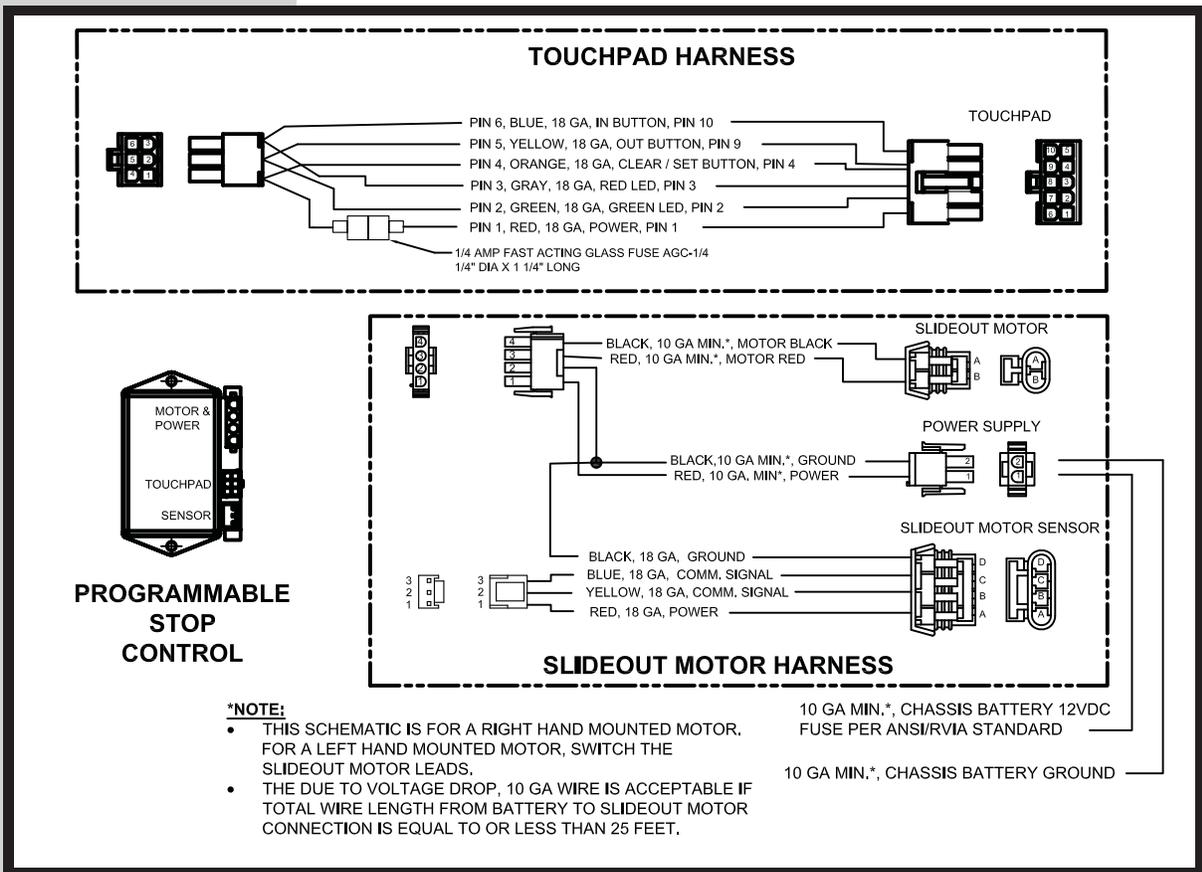


Figure 9

Wiring Diagram



Programmable Stop Control With Room Locks



Programmable Stop Control

Power Gear Limited Warranty

Power Gear Limited Warranty Policy (original equipment)

Power Gear warrants its manufacturer installed Power Gear and Kwikkee brand products to be free of material and workmanship defects for two (2) years from the date of the original sale of the motor vehicle in which they are installed, provided that these products are installed and operated according to the purpose for which they were intended, designed and specified. This warranty does not cover product that is incorrectly installed, or upon examination has been misused or abused by the vehicle owner.

Warranty coverage includes:

- Repair or replacement of the defective component(s) of the malfunctioning system. Entire systems are not replaced unless either the faulty component is not replaceable or all components comprising the system are defective.
- Labor costs for the diagnosis and repair work associated with the repair or replacement of the defective component(s) by a licensed servicing center.

This warranty does not include payment or reimbursement of:

- Normal system maintenance and preventive maintenance.
- Mobile service or towing expenses related to field repairs and/or the transportation of the vehicle to a repair facility.
- Living or travel related expenses incurred in the repair of the vehicle.

By filing a warranty claim in accordance with Power Gear's Warranty Administration Procedure, service providers agree that the replacement part(s) will be provided to the vehicle owner at no cost and that the total labor charges for the completion of warranty repairs will be billed to Power Gear. Accordingly, under no circumstances will Power Gear reimburse the vehicle owner directly for costs covered under this warranty policy.

Warranty coverage runs concurrently with any vehicle warranty period provided by the manufacturer, and is transferable to subsequent owners. Proof of original date of purchase of vehicle, and if applicable subsequent owner's proof of purchase, is required to confirm coverage.

Power Gear reserves the right to change the terms of our warranty policy at any time. For the most current information on product warranty and our warranty claim procedure, visit our website at www.powergearus.com.

Additional References located at powergearus.com

3010001346 - Owners Manual Room Slideout System with Control Box 1510000120 and 1510000121

82-SO539 - Encoder Test 1

82-SO540 - Encoder Test 2