

ALLEN & HEATH



WARNING – HIGH VOLTAGES

Power Supply Unit (PSU) work should only
be carried out by qualified personnel.

We recommend that you use an approved Allen & Heath
service centre for all power supply work.

Please contact your local Allen & Heath distributor for more details.

<http://www.allen-heath.com/>



WZ20:8:2

20 INPUT 8 TRACK RECORDING CONSOLE

SERVICE MANUAL

PUBLICATION AP2933

INTRODUCTION

The information presented in this manual is intended for competent technical personnel to carry out service and product support for the **MixWizard WZ 20:8:2**. We assume that the reader is familiar with the related electronic theory and audio terminology, and is able to carry out basic servicing, fault-finding and repair of audio equipment of this type. Service personnel should also be familiar with audio systems, mains earthing and power requirements, as well as handling precautions.

For further information on the operation and application of the **MixWizard WZ 20:8:2** please refer to the **USER GUIDE** publication AP2932 supplied with each console.

Whilst we believe the information in this manual to be reliable we do not assume responsibility for inaccuracies. We also reserve the right to make changes in the interest of further product development.

SERVICE AND TECHNICAL SUPPORT

Under normal conditions the **MixWizard WZ 20:8:2** does not require user maintenance or internal calibration. Any service work required should be carried out by qualified technical personnel only.

We are able to offer further product support through our worldwide distribution network. To help us provide the most efficient service please would you quote the console serial number in any communication regarding this product.

SAFETY WARNING !

Mains electricity is dangerous and can kill. Mains voltage is present within the unit. Do not remove any covers with mains connected. Do not carry out any work within the unit while it is powered. High voltage components are insulated for safety but should not be touched with power applied. The mains voltage setting is indicated on the rear panel next to the mains socket. Check that this matches your local mains supply. Check your mains wiring and earthing before switching on.

DO NOT REMOVE THE MAINS EARTH CONNECTION!

The chassis is always connected to mains earth. Audio 0V connects to the chassis internally. Should problems be encountered with ground loops operate the audio ground lift switches on other equipment connected to the unit or disconnect the cable screens at one end. Refer to the section on 'EARTHING' in the User Guide.

CONTENTS

INTRODUCTION, SERVICE AND TECHNICAL SUPPORT	2
TECHNICAL DESCRIPTION	3
SPECIFICATION & CONNECTIONS	4
DIMENSIONS FOR FLIGHTCASING, INSTALLING THE CONSOLE	5
REMOVING THE CONNECTOR CIRCUIT BOARD	6-7
REMOVING A MONO or STEREO INPUT, LEFT or RIGHT CIRCUIT BOARD	8-9
INTERNAL LINK OPTIONS	10-11
ORDERING A CONSOLE, SPARE PARTS & ASSEMBLIES	12-14
FRONT & REAR PANELS	15
TRANSFORMER & POWER WIRING	16-17
MONO INPUT CIRCUIT BOARD COMPONENT IDENT	AG2894
MONO INPUT CIRCUIT DIAGRAM	C2894
STEREO INPUT CIRCUIT BOARD COMPONENT IDENT	AG2937
STEREO INPUT CIRCUIT DIAGRAM	C2937
LEFT CIRCUIT BOARD COMPONENT IDENT	AG2938
LEFT CIRCUIT BOARD CIRCUIT DIAGRAM sheet 1	C2938
LEFT CIRCUIT BOARD CIRCUIT DIAGRAM sheet 2	C2938
RIGHT CIRCUIT BOARD COMPONENT IDENT	AG2939
RIGHT CIRCUIT BOARD CIRCUIT DIAGRAM sheet 1	C2939
RIGHT CIRCUIT BOARD CIRCUIT DIAGRAM sheet 2	C2939
CONNECTOR CIRCUIT BOARD COMPONENT IDENT	AG2940A
CONNECTOR CIRCUIT BOARD CIRCUIT DIAGRAM sheet 1	C2940A
CONNECTOR CIRCUIT BOARD CIRCUIT DIAGRAM sheet 2	C2940A
CONNECTOR CIRCUIT BOARD CIRCUIT DIAGRAM sheet 3	C2940A
CONNECTOR CIRCUIT DAUGHTER BOARD COMPONENT IDENT	AG2940B
CONNECTOR CIRCUIT DAUGHTER BOARD CIRCUIT DIAGRAM	C2940B
BLOCK DIAGRAM	34

TECHNICAL DESCRIPTION

The ALLEN & HEATH *MixWizard WZ 20:8:2* is a dedicated 8-track rack mount or desk standing mixer with 8 mono inputs and 6 stereo inputs. All mono input channels have a 4 band 2-sweep EQ with 6 individual aux sends and Direct output. The 6 stereo inputs have a 2 band EQ with 2 stereo cue/aux sends and 2 mono aux sends. The 8 tape return inputs have individual level and pan controls with a stereo cue facility. In addition the *MixWizard WZ 20:8:2* also has extensive talkback facilities and an internal 1kHz sinewave oscillator for level checking. The internal power supply unit is located in the rotating connector module.

CONSTRUCTION

All metal chassis for 19" rack mount in 10U space. Comprises a 16swg steel front panel housing individual channel circuit assemblies interconnected by means of soldered copper wire busbars. The connectors are housed in a rotating connector module for either rack or desk mounted applications. Access to the channel internal assemblies is by removal of the 18swg folded steel base. Access to the connectors and power supply components is by removal of the rear cover of the connector module without the need to remove the console base. The channel assemblies may be removed for servicing.

THE CIRCUIT COMPONENTS

The *MixWizard WZ 20:8:2* is manufactured using high performance industry standard linear op-amp and discrete semiconductor circuit devices. In particular the switches and potentiometers have proven to be durable and problem free. When operated correctly the normal performance of the unit introduces no noticeable audio signal degradation.

AUDIO INPUTS AND OUTPUTS

All XLR connector inputs and outputs are balanced (differential) with high impedance inputs and low impedance outputs. To use these with unbalanced equipment the -ve signal should be linked to 0V in the cable or input connector. All unbalanced connections are line level 3-pole TRS 1/4" jack sockets. All outputs are low impedance and thus capable of driving several high impedance inputs simultaneously. All inputs and outputs are in phase.

THE PFL SYSTEM

The console PFL switches send pre-fade signals to the PFL mix bus. These signals are switched with 4053 CMOS gates located on the RIGHT circuit board (PCB No: AG2939). The supply for the 4053 is ±8V DC and is derived locally from the ±16V. The gates are switched when a PFL switch is selected.

EARTHING THE AUDIO SYSTEM

The console chassis is connected to mains earth via the mains power cable. Console audio 0V is also connected to chassis.

FOR SAFETY REASONS NEVER REMOVE THE EARTH WIRE FROM THE MAINS PLUG.

Multiple earth paths cause earth (ground) loops which may result in audible hum and interference. These may be avoided by making sure that there is only one path to earth from each piece of equipment, disconnecting audio cable screens at one end if necessary.

INTERCONNECTIONS

Where possible use balanced connections for the CHANNEL inputs, AUX/CUE SENDs, and both L/R outputs to minimise noise pick-up. Avoid running audio cables near to mains or lighting cables, thyristor dimmer units or power supplies etc. These may cause audible hum and buzz. The use of low impedance sources significantly reduces interference pick-up. Check the cables for correct wiring to avoid problems with phase reversal and unreliable connection. The *MixWizard WZ 20:8:2* follows the convention for XLR pin 2 and jack tip = signal hot (+).

ALWAYS USE BALANCED CABLES WHEN CONNECTING TO PHANTOM POWERED MICROPHONES.

WHEN USING NON-PHANTOM POWERED OR UNBALANCED MICROPHONES OR UNBALANCED LINE SOURCES, MAKE SURE THAT THE +48V IS DISABLED TO PREVENT ACCIDENTAL DAMAGE.

INDIVIDUAL CHANNELS CAN HAVE +48V DISABLED, REFER TO THE LINK OPTIONS SECTION IN THE USER GUIDE OR SERVICE MANUAL.

If ground loops cause problems, connect the cable screen at one end only. Balanced outputs may be connected to unbalanced inputs and vice versa by linking the signal cold (-) to 0V ground.

SPECIFICATIONS

0 dBu = 0.775 Volts rms 0 dBV = 1 Volt rms

HEADROOM: +21dB channels
+23dB mix to output

MAX OUTPUT: XLR +27dBu 2kohm max load
jack +21dBu 2kohm max load

METERS: L, R peak reading 12 bar LED

PEAK LEDs: Turn on 5dB before clipping

FREQUENCY RESPONSE: 20Hz to 50kHz +0/-1dB


DISTORTION: THD+Noise at +14dBu 1kHz
Channel to mix output 0.008%

WEIGHT: unpacked 11kg, packed 14kg

CROSSTALK: Referred to driven channel at 1kHz
Channel fader off <-90dB
Channel off <-90dB

NOISE: Measured rms 22Hz to 22kHz bandwidth
Mic input EIN (150 ohm source) . <-128dB
LR output residual noise <-97dBu 101dB/S/N
LR faders unity mix noise <-82dBu 86dB S/N

POWER SUPPLY: internal, linear regulated
AC Mains input: IEC socket with lead supplied
100 to 240V AC @ 50/60Hz
factory wired to country voltage
Power consumption 35W max
Mains Fuse rating: 100-120V AC T630mA 20mm
220-240V AC T315mA 20mm

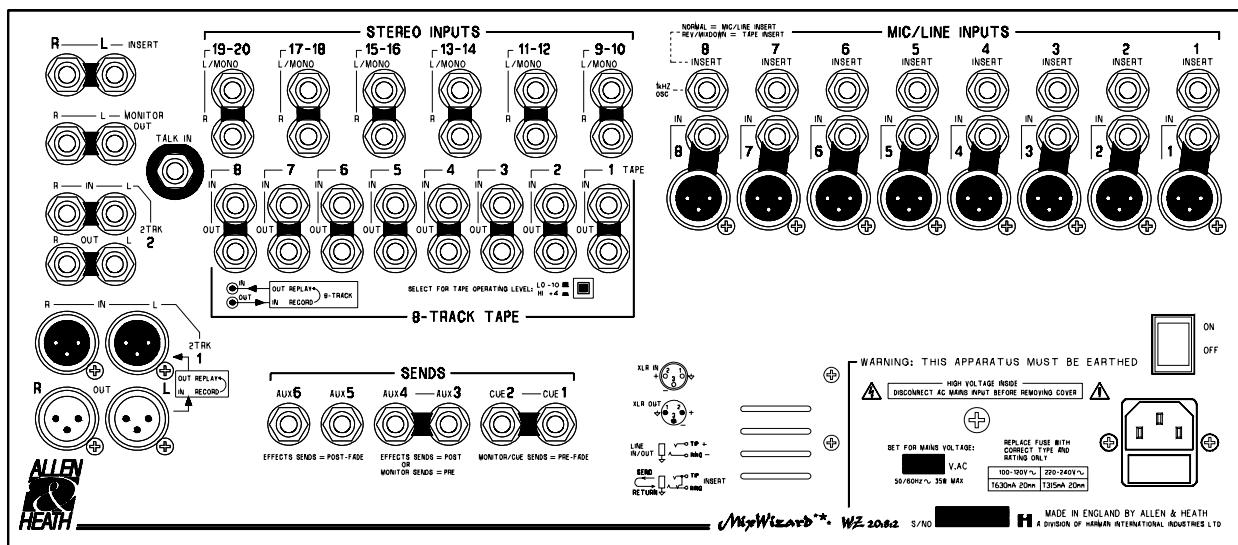

CONNECTIONS

INPUTS:

Channel 1-8 IN	XLR pin 2 hot, 3 cold, bal	PAD out 2k ohm variable -60 to -20dBu
	TRS jack tip hot, ring cold, bal	PAD in >10k ohm variable -30 to +10dBu
Stereo 9/10-19/20 IN	TRS jack (L/M,R) tip sig, ring grnd, unbal	>10k ohm -10dBV / +4dBu
Tape 1-8 IN	TRS jack tip sig, ring grnd, unbal	>10k ohm -10dBV / +4dBu
2-Track 1 IN	XLR pin 2 hot, 3 cold, balanced	>10k ohm +4dBu
2-Track 2 IN	TRS jack tip hot, ring cold, balanced	>10k ohm -10dBV
Talkback mic IN	TRS jack tip sig, ring grnd, unbalanced	2k ohm variable -50 to -20dBu

INSERTS:


Channel 1-8 Insert	TRS jack tip send, ring return, unbal	<75 ohm, >3k ohm 0dBu
L-R mix	TRS jack tip send, ring return, unbal	<75 ohm, >7k ohm -2dBu

OUTPUTS:

2-Track 1 OUT	XLR pin 2 hot, 3 cold, balanced	<75 ohm +4 dBu
2-Track 2 OUT	TRS jack tip hot, ring cold, impedance bal	<75 ohm -10dBV
Tape 1-8 OUT	TRS jack tip hot, ring cold, impedance bal	<75 ohm -10dBV / +4dBu
Cue 1-2 OUT	TRS jack tip hot, ring cold, impedance bal	<75 ohm -2dBu
Aux 1-4 OUT	TRS jack tip hot, ring cold, impedance bal	<75 ohm -2dBu
Monitor L,R OUT	TRS jack tip hot, ring cold, impedance bal	<75 ohm -2dBu
PHONES OUT	TRS jack tip left, ring right	for stereo headphones 30 to 600 ohms

DIMENSIONS


The diagrams below give the dimensions for flightcasing the console.

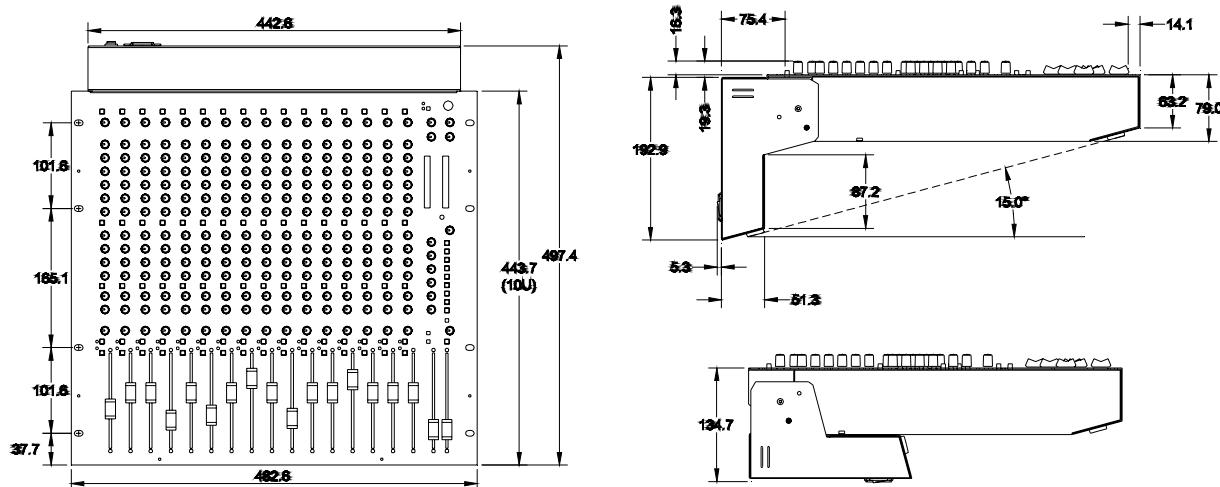

INSTALLING THE CONSOLE


The *MixWizard Series* features the ALLEN & HEATH Quick Change Connector (QCC) system. The rear connector module may be hinged and locked into either of two positions: **Rear connectors** for desktop operation with the control panel sloped at a convenient 15 degrees, or **Underside connectors** for 19" rack mounting in a compact 10U space. The connector position can be easily changed at any time to fit your application.

To change the position remove the crosshead locking screw on each side, swing the connector pod into position, and refit the two screws.

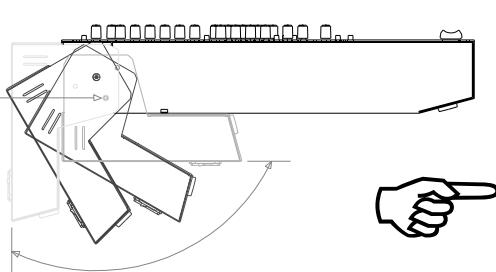


Do not transport or carry the console with the locking screws removed.

Do not attempt to remove the connector pod from the console.

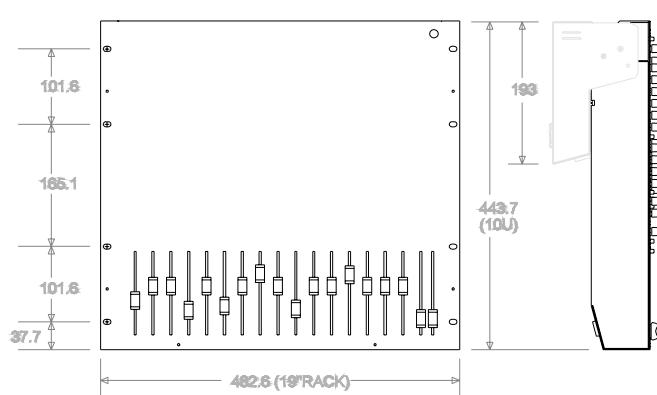

19" Rack Mounting

Mount the console in the rack using 4x M6 bolts each side for maximum strength. We recommend you fit the bolts with plastic cup washers to protect the panel, and they look good... These should be available from the supplier of the rack unit or a good hardware store.

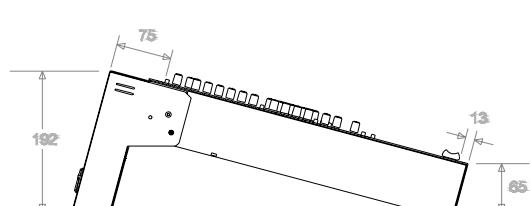


Desktop Operation

The console is fitted with rubber feet to ensure it does not slip or scratch the work surface. The control panel is angled at 15 degrees for operating convenience.


REMOVING THE CONNECTOR CIRCUIT BOARD ASSEMBLY

Before beginning any service work, remove all power to the unit and disconnect any signal cables where necessary. The rotating connector module must be set for desk top operation to gain access to the cover screws. It is not necessary to disconnect the connector module from the main unit. Service work is best carried out with the unit inverted on a clean work surface suitably covered to protect the mixer cosmetics. Ensure adequate lighting and use the correct tools. Access to the connector circuit board options can be achieved without the complete removal of the circuit board.

- 1.) Working from the rear of the console remove screws (A) fixing the XLR connectors to the panel and using a 12mm Nutdriver, remove jack nuts (B). Also remove the 2 screws indicated.

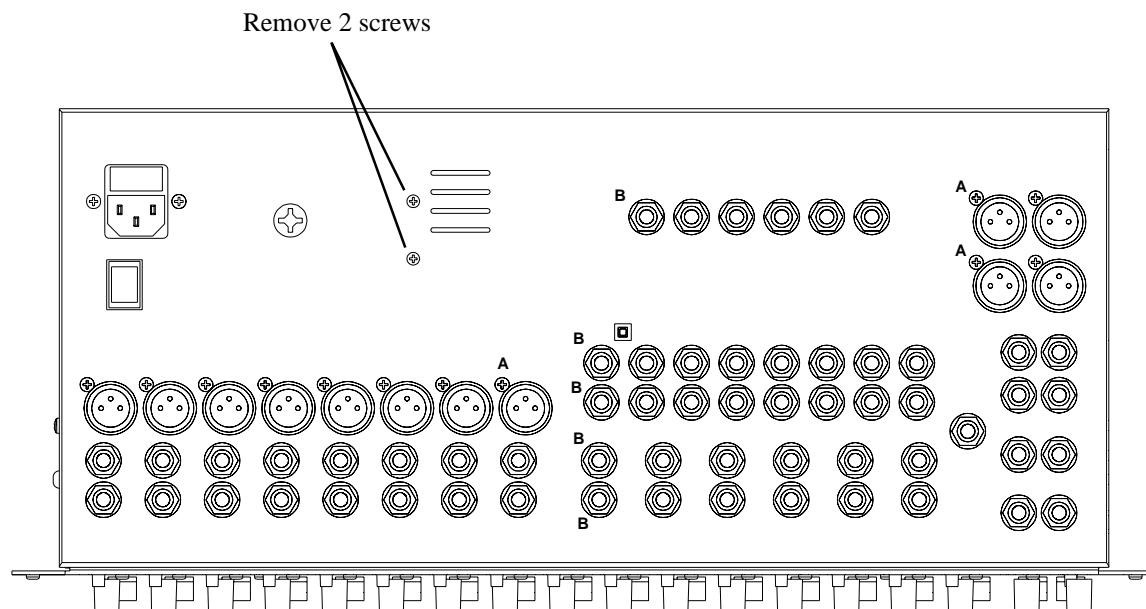

- 2.) With the unit inverted, remove the 4 connector cover screws (C) and remove the cover.

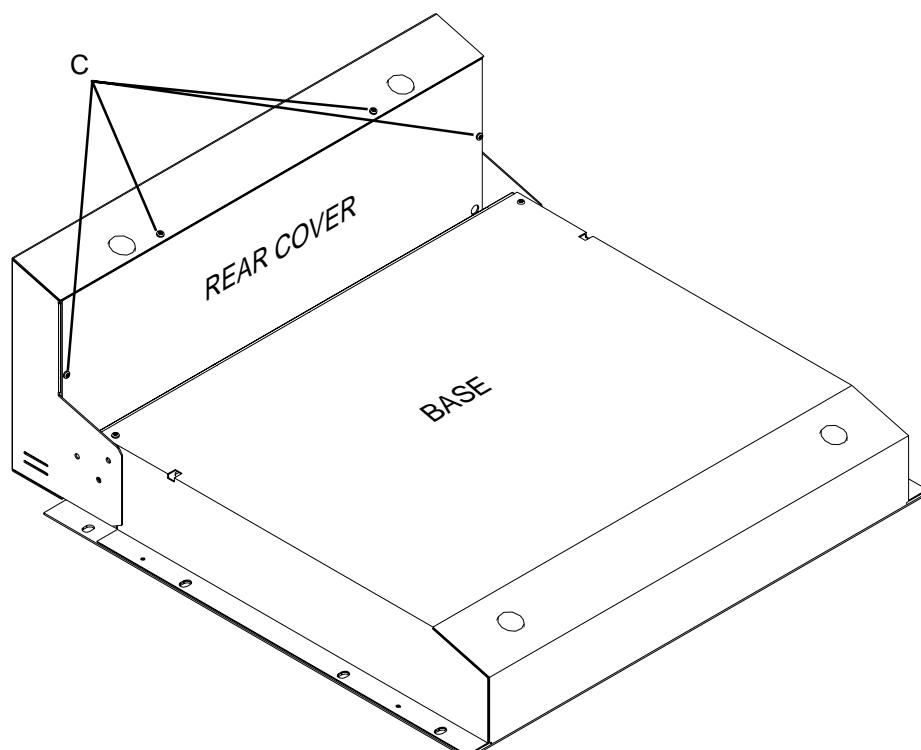


Access to the connector circuit board options can be achieved at this stage by carefully easing the circuit board assembly from the rear panel with the harnesses still connected.
It is not necessary to completely remove the circuit board assembly to change the options.
Refer to the section INTERNAL LINK OPTIONS for more details.

To completely remove the connector circuit board assembly

- 4.) First remove the base cover of the main unit to gain more access. Refer to 2 and 3 in the section REMOVING AN INPUT, LEFT or RIGHT CIRCUIT BOARD for details on the removal of the base cover.
- 5.) Cut the cable ties along the bottom edge of the connector circuit board fixing the harness to the connector circuit board assembly and lift the circuit board assembly from the chassis.
- 6.) Then carefully disconnect the ribbon cable and the 4 flexible flat cables plugged into the circuit board assembly.
- 7.) Before desoldering the wires connected to the circuit board, make a note of their colour and locations.
- 8.) The circuit board can now be completely removed from the chassis.

When all service work is complete, remove all debris such as solder, component legs and wire clippings from inside the console and check your work carefully before reassembly. To refit the connector circuit assembly follow the above procedure in reverse order. Make sure all harnesses are correctly aligned and plugged on. Test for correct operation.

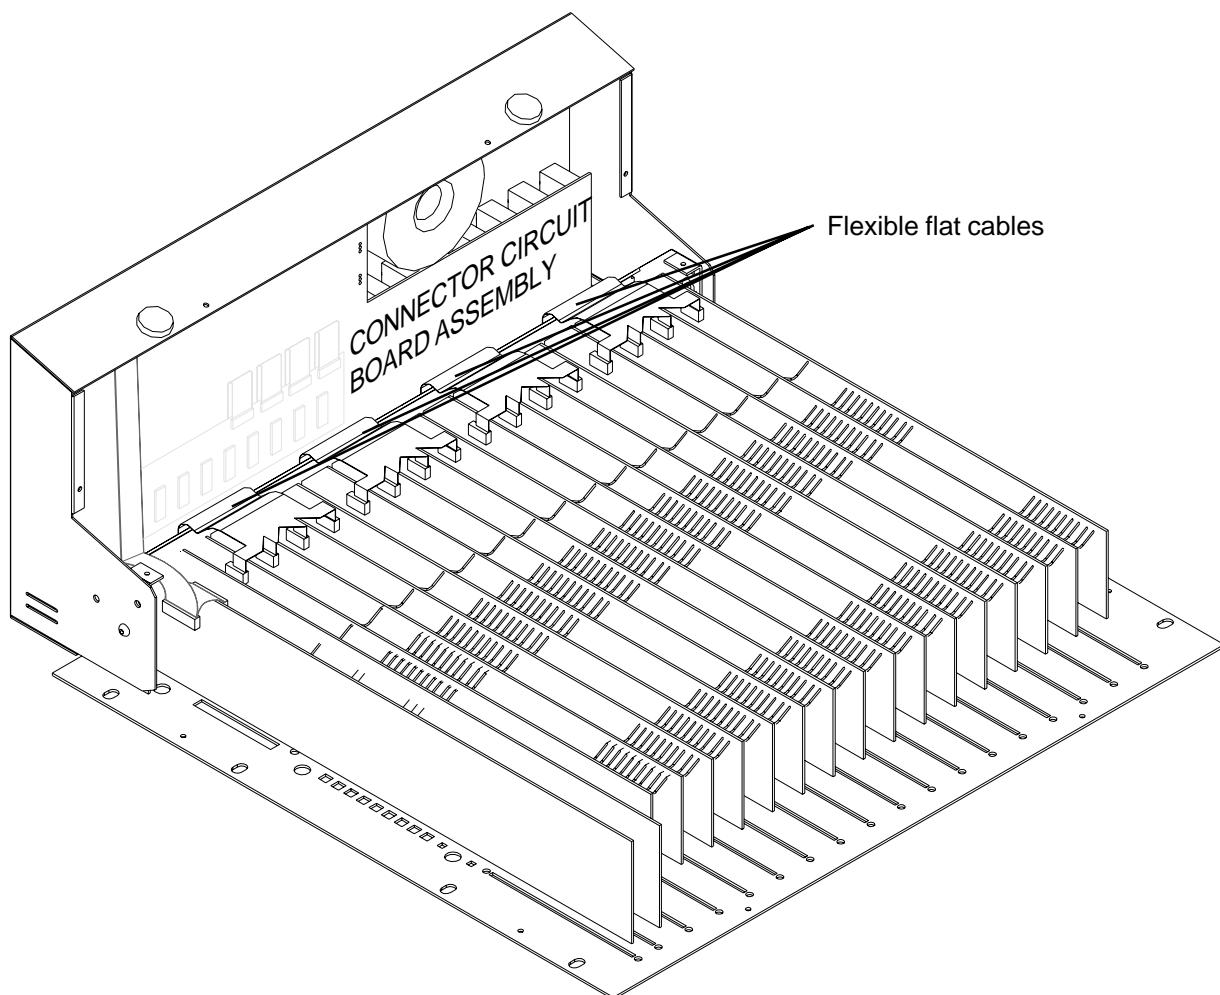


Unit inverted with the base and connector cover removed.


REMOVING AN INPUT, LEFT or RIGHT CIRCUIT BOARD ASSEMBLY

Before beginning any service work, remove all power to the unit and disconnect any signal cables where necessary. The rotating connector module must be set for desk top operation to gain access to the cover. Service work is best carried out with the unit inverted on a clean work surface suitably covered to protect the mixer cosmetics. Ensure adequate lighting and use the correct tools. Access to the channel circuit board options can be achieved without the removal of the circuit board.

- 1.) If completely removing a circuit board assembly, pull off the knobs and remove the pot nuts and fader screws from the circuit assembly to be removed. The switch caps can remain in place. If removing the LEFT circuit board assembly remove the nut on the headphone socket.
- 2.) Working from the front of the mixer remove screws and nuts (A) fixing the base cover to the front panel.

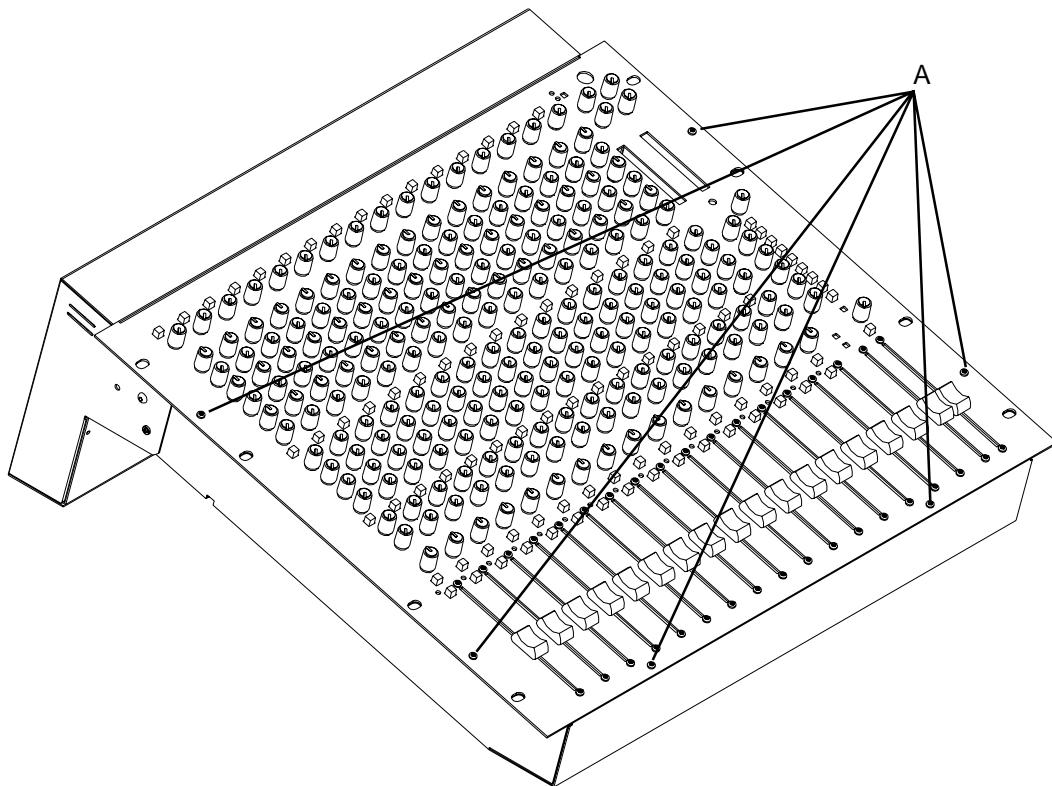

- 3.) With the unit inverted, remove the 2 remaining screws (B) in the base cover and remove the base.

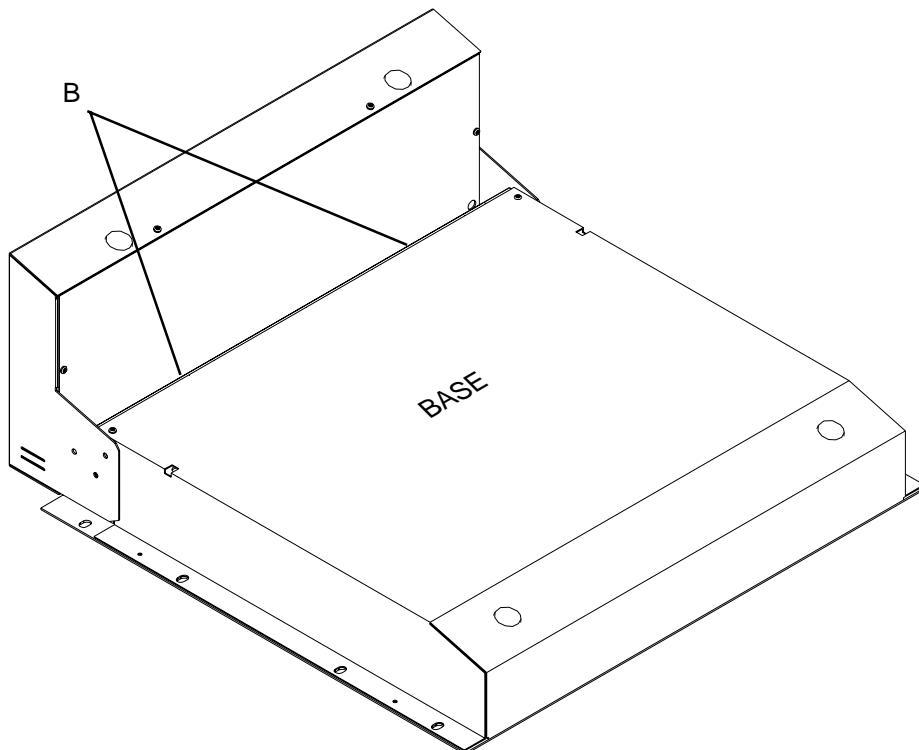


Access to the input channel circuit board options can be achieved at this stage by carefully cutting and resoldering the link options as necessary. It is not necessary to completely remove the circuit board assembly to change the options.

Refer to the section INTERNAL LINK OPTIONS for more details.

To completely remove a circuit board assembly


- 4.) Identify the circuit board assembly to be removed and then cut the buss wires half way between each circuit board. Disconnect the flexible flat cable (C) plugged into the connectors mounted along the edge of the circuit board. If removing the LEFT or RIGHT circuit board assembly, the ribbon cable (D) and flexible flat cable (E) will have to be carefully unplugged as well.
- 5.) The circuit board can now be removed.

When all service work is complete, remove all debris such as solder, component legs and wire clippings from inside the console and check your work carefully before reassembly. To refit the circuit assembly follow the above procedure in reverse order. Make sure all harnesses are correctly aligned and plugged on. Test for correct operation.

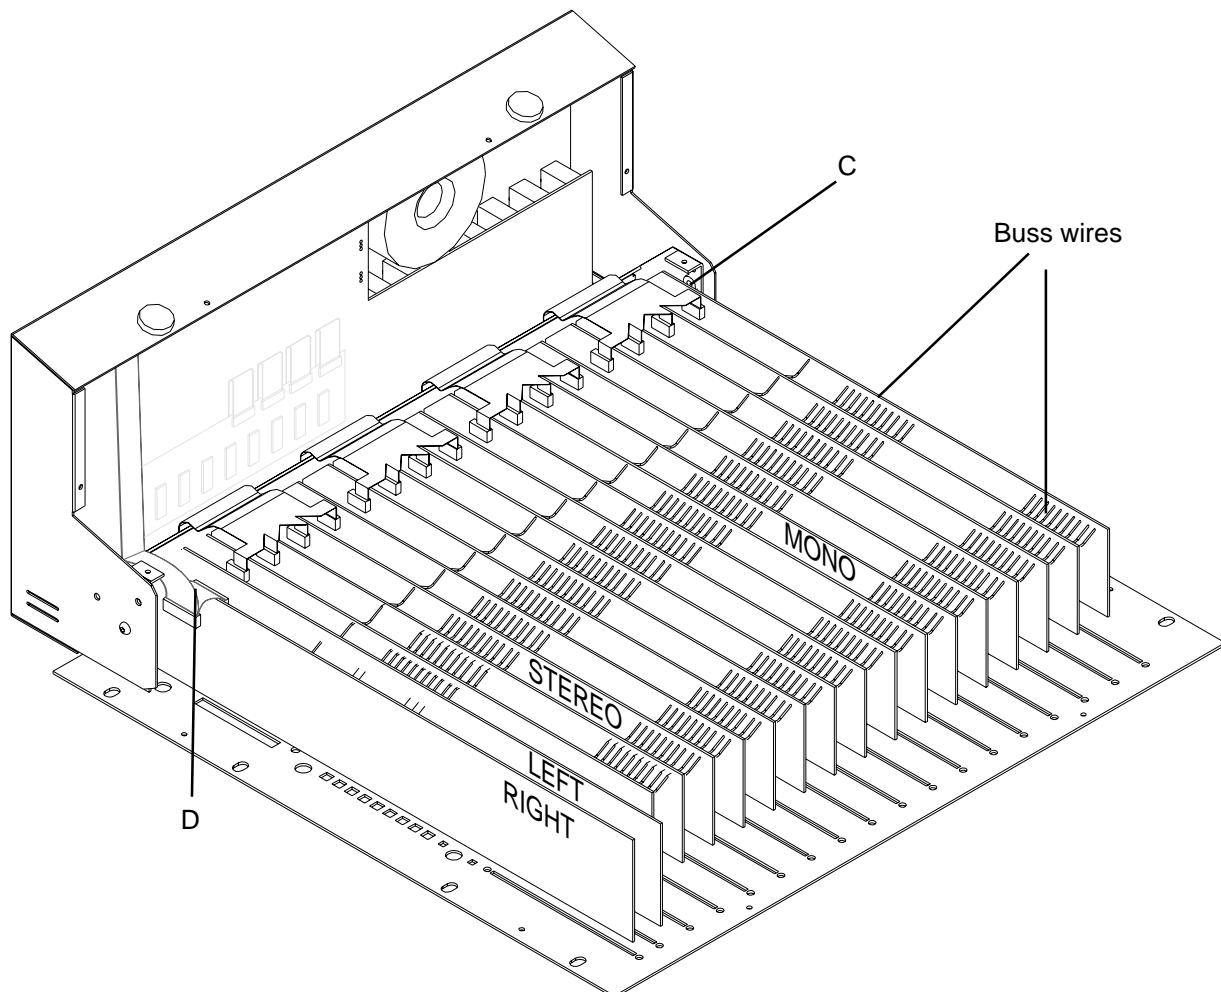


Unit inverted with the base and connector cover removed.

Cut each wire
in the centre

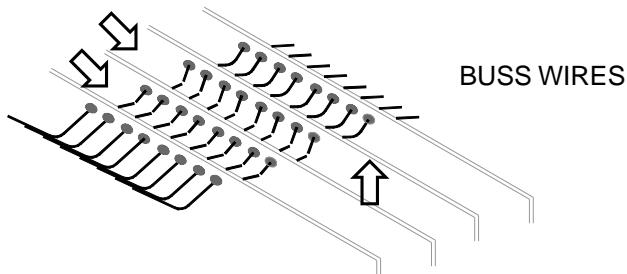


BUSS WIRES

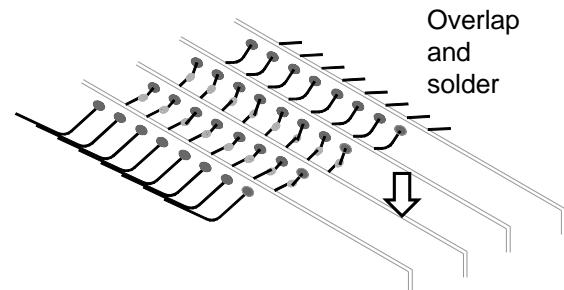

INTERNAL LINK OPTIONS

The console is set to satisfy most applications that should be encountered. However, the following internal link options are offered to provide alternative settings for those applications that may require them. Access to the options requires the removal of the rear covers depending on which option settings are to be altered. Refer to the section for removing circuit board assembly on which the link option is located. Some options involve the cutting of circuit board tracks and soldering of circuit board links and should only be carried out by competent technical personnel. Further information is available from **ALLEN & HEATH** if required.

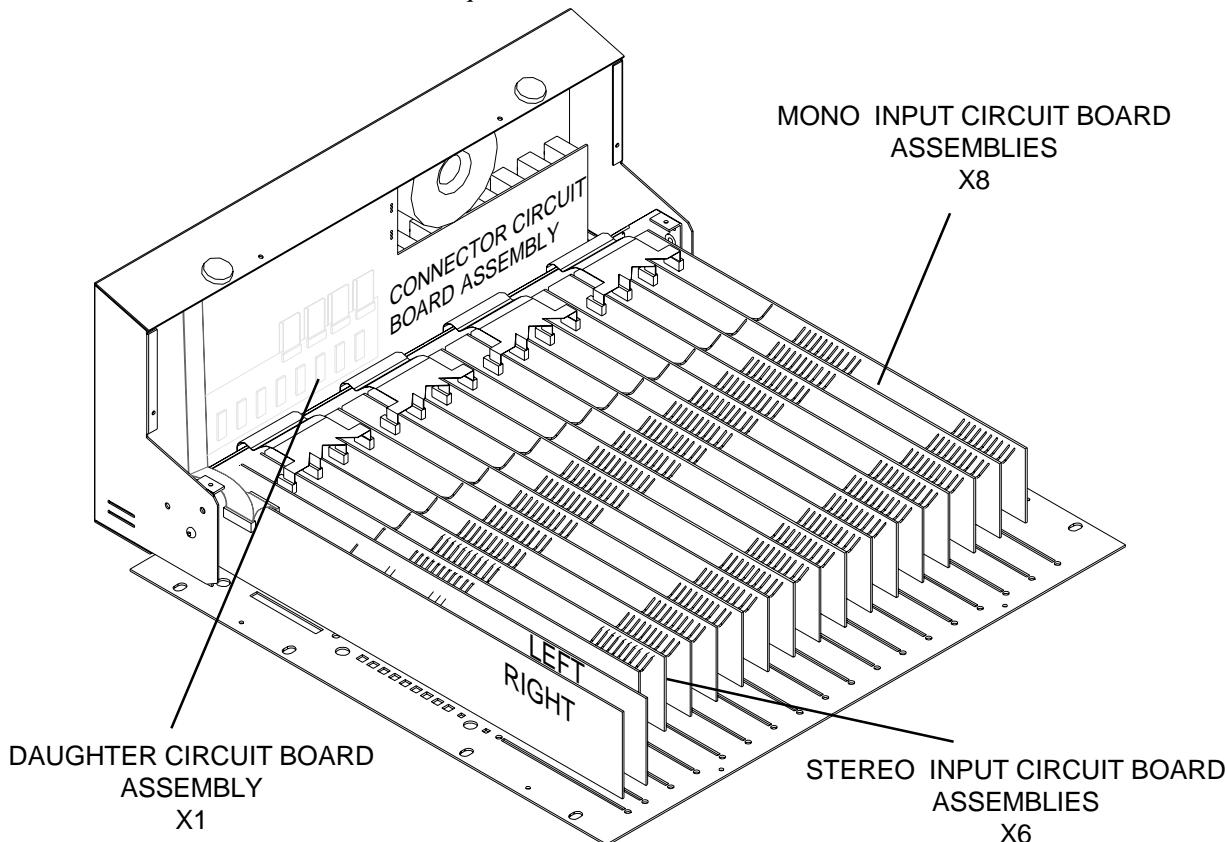


Unit inverted with the base and connector cover removed.

Channel Pre-Fade Aux Send Options

The pre-fade sends are set post-EQ and post-ON as standard. However, link options on each channel assembly allow pre-EQ and/or pre-ON if required. Refer to the diagram below.


Channel Direct Output Source

The direct outputs are sourced post-fader as standard. A link option is available per channel to select a pre-fade source. Refer to the diagram below.

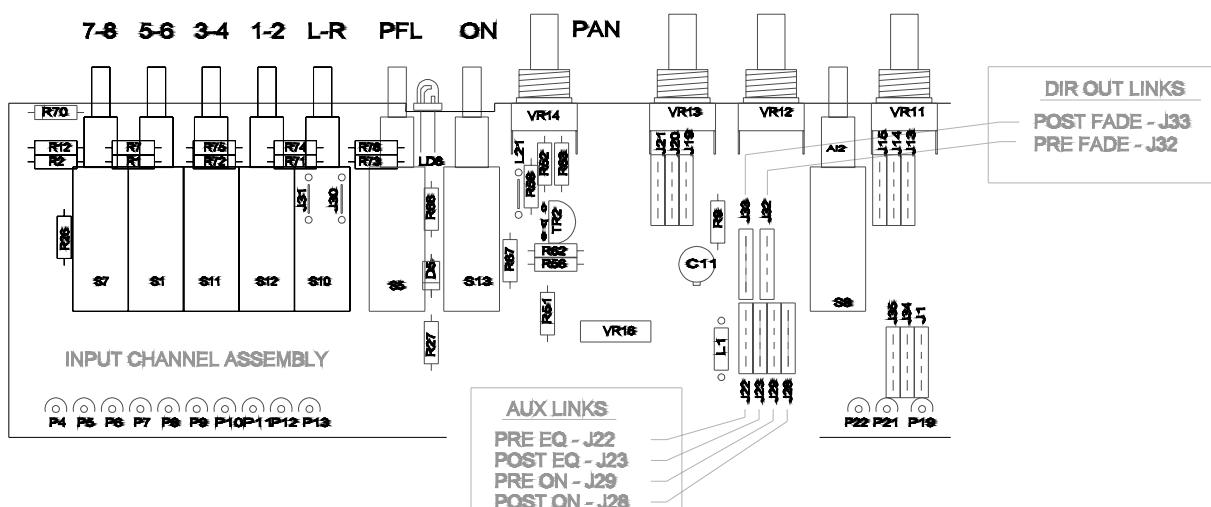

Phantom Power Disable


It is perfectly safe to connect non-phantom powered sources such as dynamic microphones to powered XLR sockets providing that **balanced leads and sources are used**. The +48V supply is current limited through 6.8k ohm resistors to each XLR to prevent damage. However, you can disable phantom power to selected channels by cutting out links on the rear connector circuit assembly.

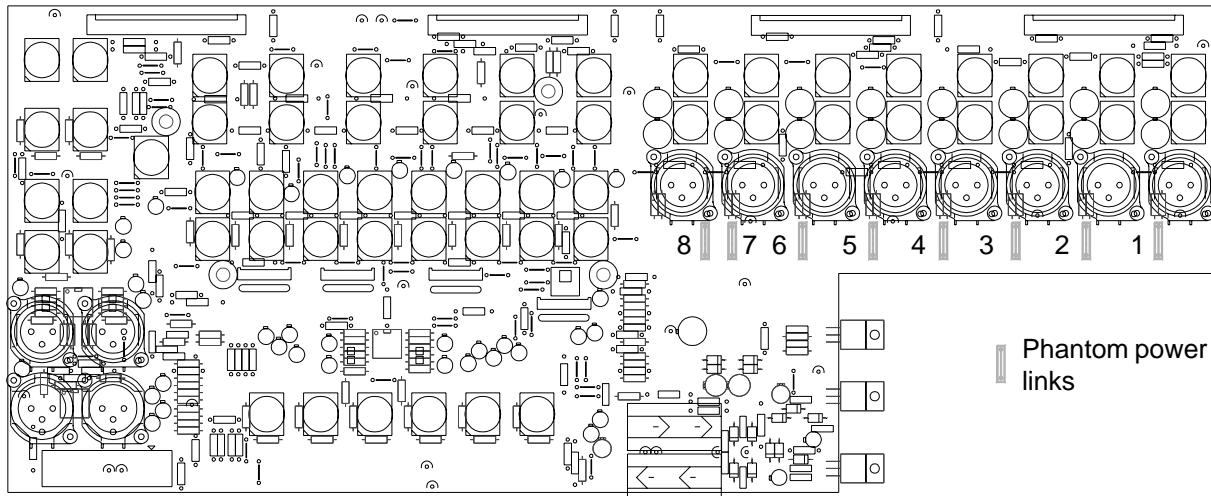


Connector circuit board assembly.
component side view

2 Track 1 & 2 Track 2 Input Sensitivity

Both 2 track inputs can be set for nominal high level +4dBu operation or low level -10dBV operation as is common with much of the external equipment available today. The factory default setting for 2 track 1 is nominal high level +4dBu operation and for 2 track 2 the factory default setting is low level -10dBV operation. Most outboard equipment includes output level adjustment but if you wish to change the input sensitivity, the rear connector circuit board assembly can be reconfigured.

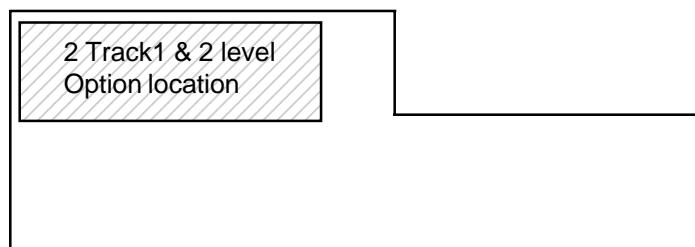

Connector circuit board assembly
trackside view

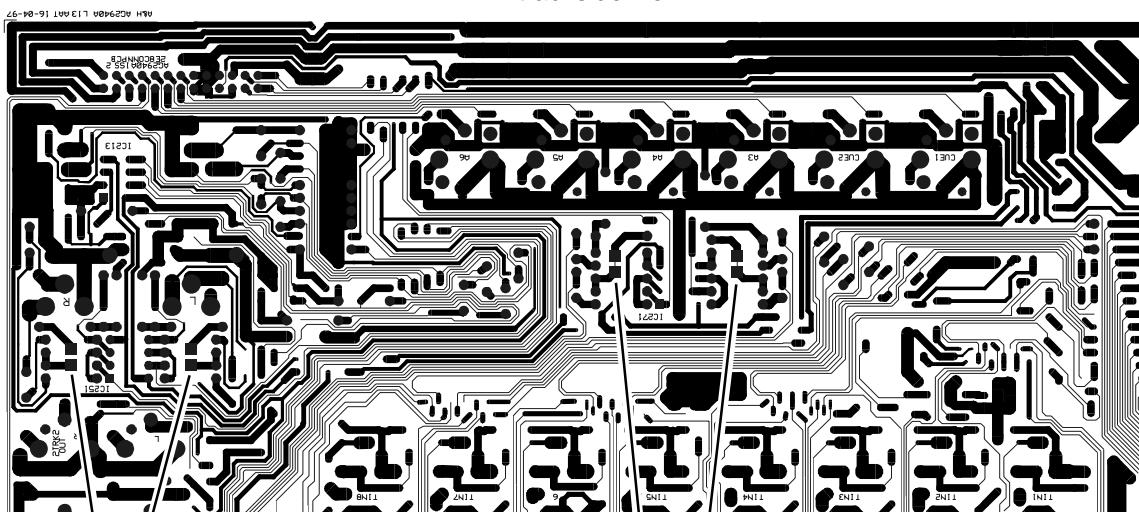

Solder link between square pads for -10dBV operating level on 2 Track 1.

Cut tracks between square pads for +4dBu operating level on 2 Track 2.

ORDERING SPARE PARTS

ORDERING A CONSOLE

To order a new console unit please specify the model number and AC mains voltage required.

MODEL	DESCRIPTION	ORDER CODE
<i>MixWizard 20:8:2</i>	8 Mono + 6 Stereo Input channels	WZ 2082/volts
<i>MixWizard 16:2</i>	16 Mono Input channels	WZ 1602/volts

MANUALS AND SUPPORT DOCUMENTATION

DESCRIPTION	ORDER CODE
<i>MixWizard 20:8:2</i> User Guide	AP2932
<i>MixWizard 20:8:2</i> Service Manual	AP2933
<i>MixWizard 20:8:2</i> Brochure	AP2941

SERVICE TOOLS

The tools required to service the *MixWizard* range of products are standard to an electronics service workshop and are easily obtainable. The following items are necessary for disassembly and service access:

1-point Crosshead screwdriver (M3, 4AB)	AT0004
2-point Crosshead screwdriver (M4, 6AB)	AT0002
11mm AF Nutdriver (potentiometer nuts, headphone socket nuts)	
12mm AF Nutdriver (jack nuts)	

ORDERING AN ASSEMBLY

The following assemblies for the *MixWizard 20:8:2* are supplied fully tested. Please quote the description and order code for the part required.

Printed circuit (PCB) assemblies:

Mono Input PCB assembly	002-257
Stereo Input PCB assembly chans 13/14, 15/16	002-258
Stereo Input PCB assy chans 9/10, 11/12, 17/18, 19/20	002-270
Left PCB assembly	002-259
Right PCB assembly	002-260
Connector & Daughter PCB assembly	002-261

IDC connector harnesses:

<i>MixWizard WZ 20:8:2</i>	26 way Master harness	AL2978
----------------------------	-----------------------	--------

ORDERING A SPARES KIT

It is recommended that the spares kit order code **002-247** is held and maintained by the service agent to enable in-field service repairs to the *MixWizard WZ 20:8:2* independent of the ALLEN & HEATH factory. Commonly available items such as resistors, capacitors, tools and soldering equipment are not included. The contents of the kit is listed below. Individual spare parts may be ordered. Please quote the description and order code for the part required.

DESCRIPTION	ORDER CODE	QTY
Fixings:		
Screw 4AB x 5/16" Pan Pozi Black	AB0057	10
Screw M2.5 x 4mm Pan Pozi Black	AB2944	10
Screw M3 x 4mm Pan Pozi Black	AB0233	10
Screw M3 x 8mm Pan Pozi Black	AB0073	5
Screw M3 x 6mm TT Pan Pozi Black	AB0071	5
Screw M3 x 10mm CSK Pozi Black	AB0093	5
Screw M3 x 10mm Pan Pozi Black	AB0076	5
Screw M3 x 12mm Pan Pozi Black	AB0078	5
Nylock Nut M3	AB0102	5

Knobs and caps:		
Knob Yellow & Grey 11mm D	AJ2079	10
Knob Dark Grey & Grey 11mm D	AJ2078	10
Knob Green & Grey 11mm D	AJ2077	10
Knob Blue & Grey 11mm D	AJ2075	10
Knob Brown & Grey 11mm D	AJ2080	10
Knob Red & Grey 11mm D	AJ2074	10
Knob L./blue & Grey 11mm D	AJ2076	10
Fader Knob 11mm White+Black line	AJ8078	10
Fader Knob 11mm Yellow+White line	AJ8080	5
Fader Knob 11mm Blue+Black line	AJ8081	5
Button 5.5mm Square Grey	AJ0363	10
Button 5.5mm Square Red	AJ0364	10
Button 5.5mm Square White	AJ0373	10

Faders, Potentiometers, switches, and connectors:		
10KD fader 100mm	AI8108	5
10KD x 2 fader 100mm	AI8116	5
20KK (203K)	AI8003	5
20KB (203B) centre click	AI8004	5
200KC x 2 (204C)	AI8005	5
20KB x 2 (203B 14mm wide)	AI8006	5
20KK x 2 (203K 14mm wide)	AI8007	5
10KAC x 2 (103KAC 14mm wide)	AI8008	5
5KD reverse (502RD)	AI8111	5
5KB (502B)	AI8112	5
Pot Nut 9mm	AB8050	10
Switch 2PCO Latching	AL0162	5
Jack Socket Vert PCB+nut (IN, INSERTS, ST1/2)	AL8082	10
Jack Socket Vertical PCB + nut	AL8114	10
Jack Socket Headphone	AL0328	1
XLR 3 Pin Female Vertical PCB Mount	AL2410	5
XLR 3 Pin Male Vertical PCB Mount	AL2411	5

LEDs and Semiconductors:		
LED 3mm T1 Yellow	AE0084	5
LED 3mm T1 Green	AE0085	5
LED 3mm T1 Red	AE0086	5
LED Bar Rectangular 8Green/3Yellow/1Red	AE2701	2
Transistor 2N4403 PNP	AE0273	5
Transistor BC214C PNP	AE0031	2
Transistor BC549 NPN	AE0020	2
IC TL072CP Dual Op Amp	AE0046	5
IC NE5532N OP-AMP	AE0221	1
IC LM339N Quad Comparator	AE0071	2
IC CMOS 4053B	AE0117	3
IC SSM2142P Balanced output driver	AE0302	-



POWER SUPPLY:

Mains lead IEC-2pin EURO	AH0205	-
Mains lead IEC-3pin UK	AL0206	-
Mains lead IEC-3pin US (C33)	AL0323	-
Mains Fuse 20mm T315mA (UK,EU)	AL0349	5
Mains Fuse 20mm T630mA (USA,CAN)	AL0297	5
Transformer 30VA	AM0918	-
IC Adjustable Regulator 783 (+48V DC)	AE0214	2
IC Regulator 7815 (+15V DC)	AE0047	2
IC Regulator 7915 (-15V DC)	AE0048	2
Insulating kit TO220	AA0693	2

Miscellaneous:


<i>MixWizard WZ 16:2</i> Packing assembly	002-245	-
<i>MixWizard WZ 20:8:2</i> Packing assembly	002-271	-
Flex cable 39 way 200mm	AH2900	2
Flex socket 39 way straight	AL2902	-
Flex socket 8 way 90deg	AL2901	-

FRONT & REAR PANELS

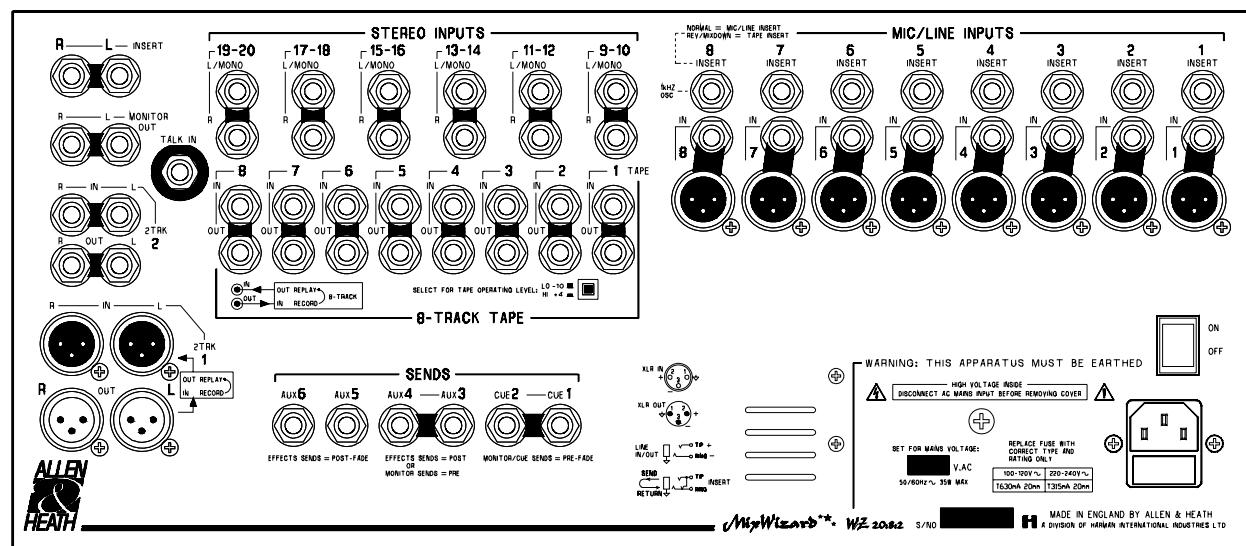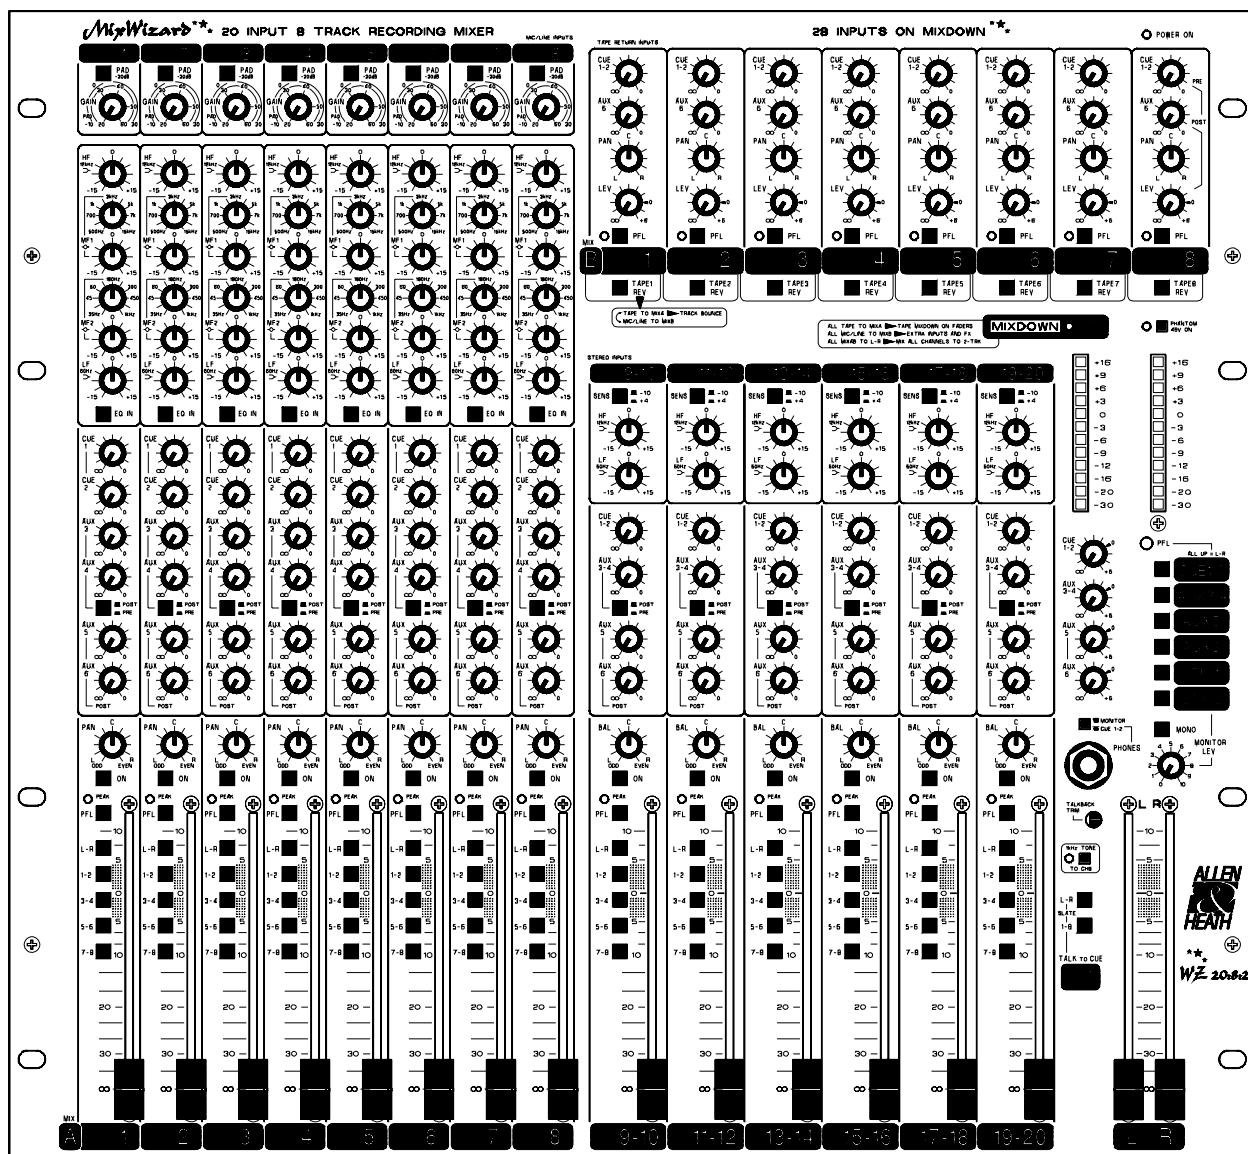

2e TRANSFORMER - MAINS WIRING

--- SLEVED & UNCONNECTED.

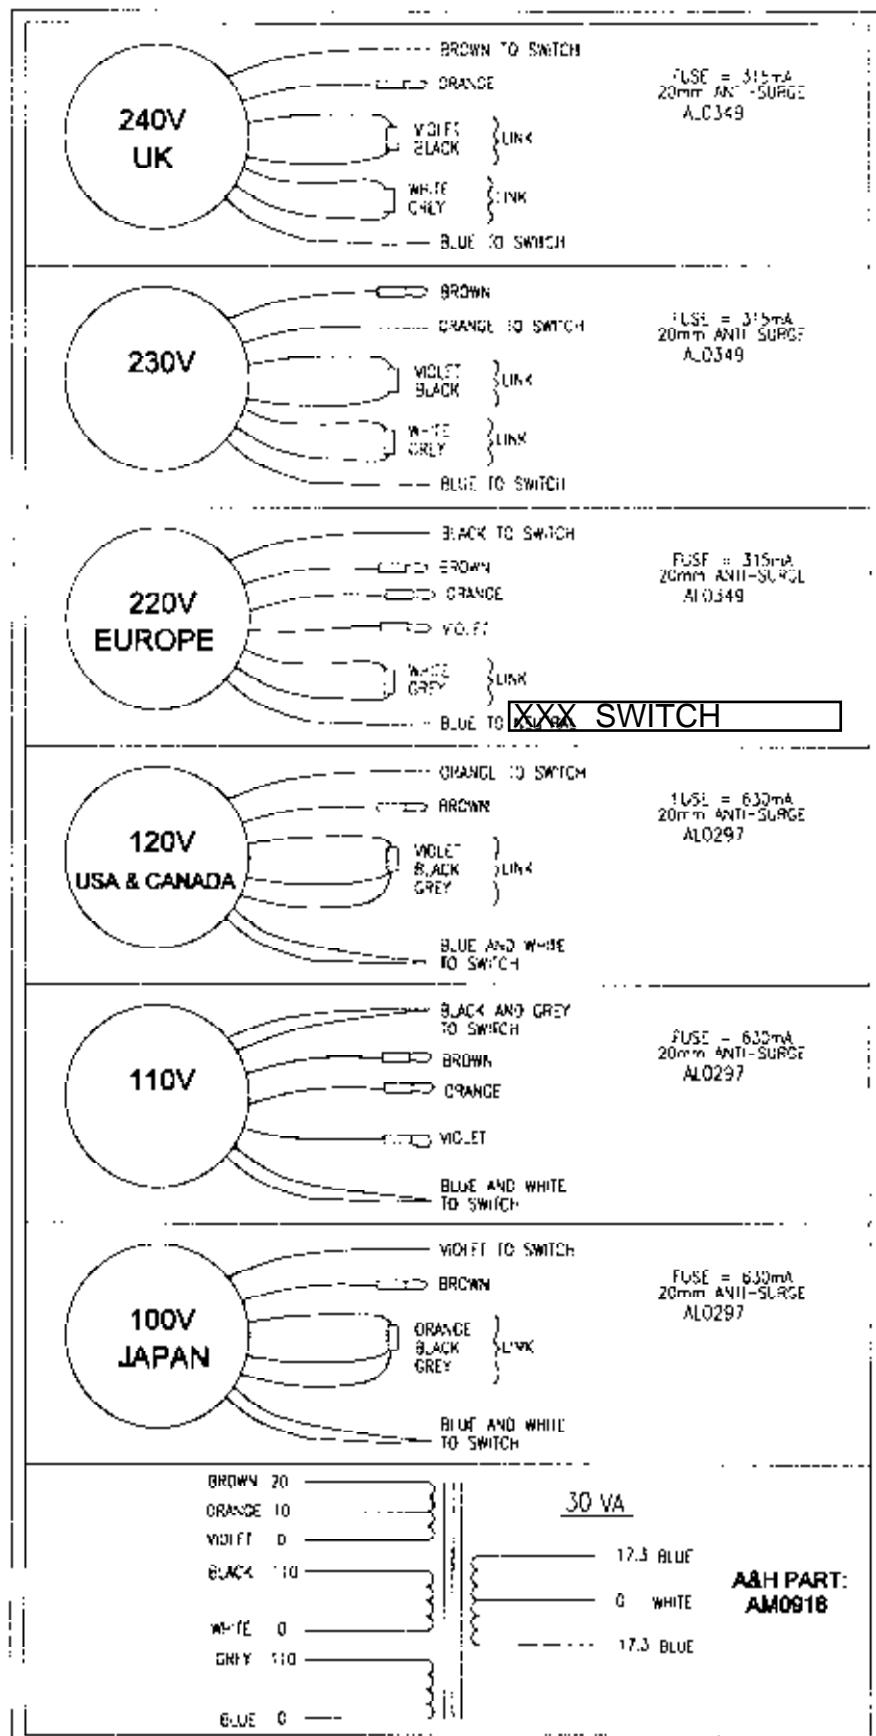

Connector PCB
PCB No: AG294QA

-17V IN +17V IN
0V IN RdG RdG
Gn Gn

Transformer

Chassis Earth terminal

Daughter PCB
PCB No: AG294QB

Earth Braid
to main console

INSERT Gn

Gn

INSERT Gn

Main console unit removed for clarity


CHASSIS EARTH ARRANGEMENT


M3 NYLON NUT (A80137)
4BZ FLAT HEAD TAGS (A800007)
M3 NUT (A80C94)
M3 STAINLESS STEEL WASHER
(A80242)
4BZ C/S ASSIST FLAT HEAD AG
(A80242)




STOCK NO: A80137-AE1
S/N X 12747-AE1 TRM/KAL


2e		PSU ASSEMBLY
Issue	Revision	Date
1	PRODUCTION	Mar 10-6-97
DRAUGHTS & TITLE		
ALLEN & HEATH KEEN CH 1 HOUSTON, AL ESTATE, SEAFORTH, COVENTRY, CV5 8LU. TEL. 01256 372070 FAX. 01256 372092		
DRAWING NO. M002-256A		
PAGE 1		

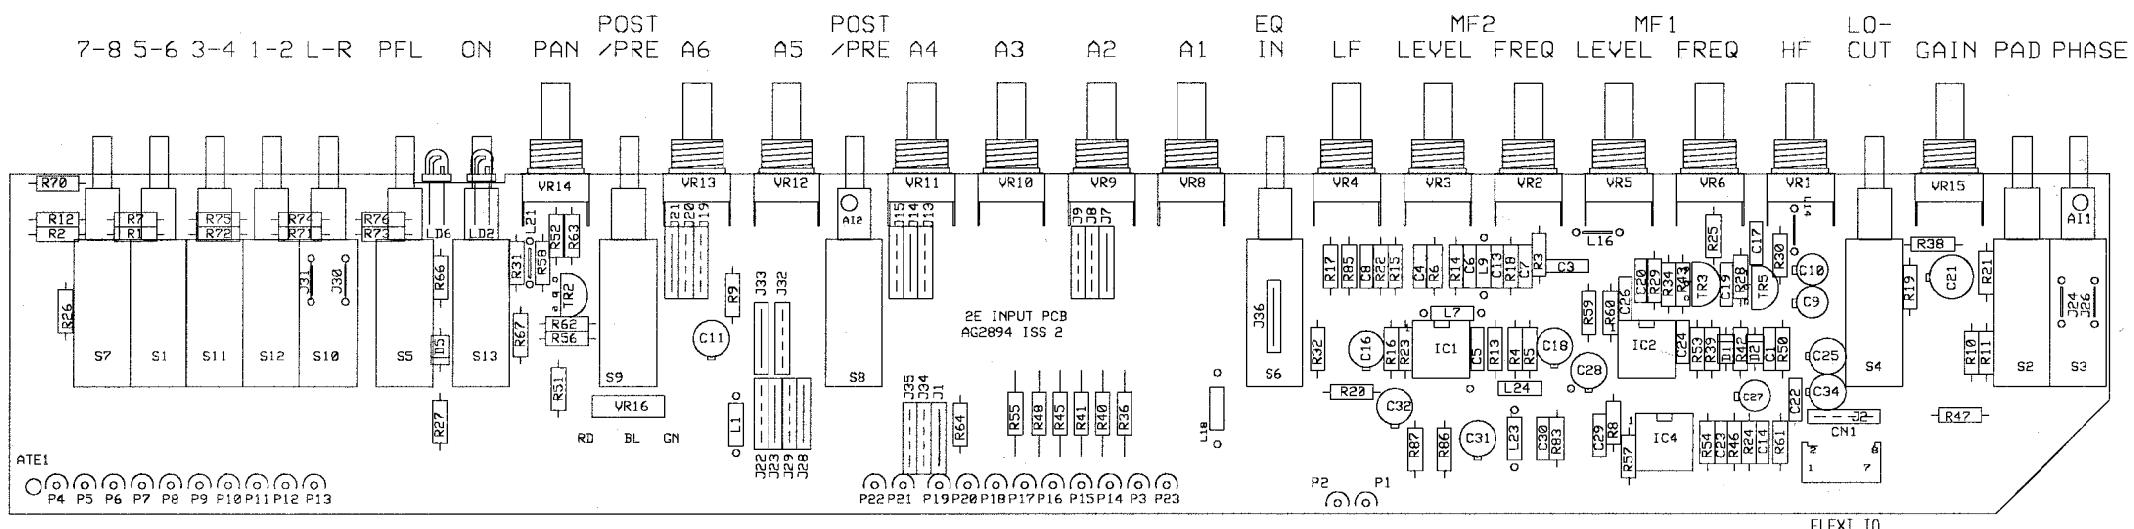







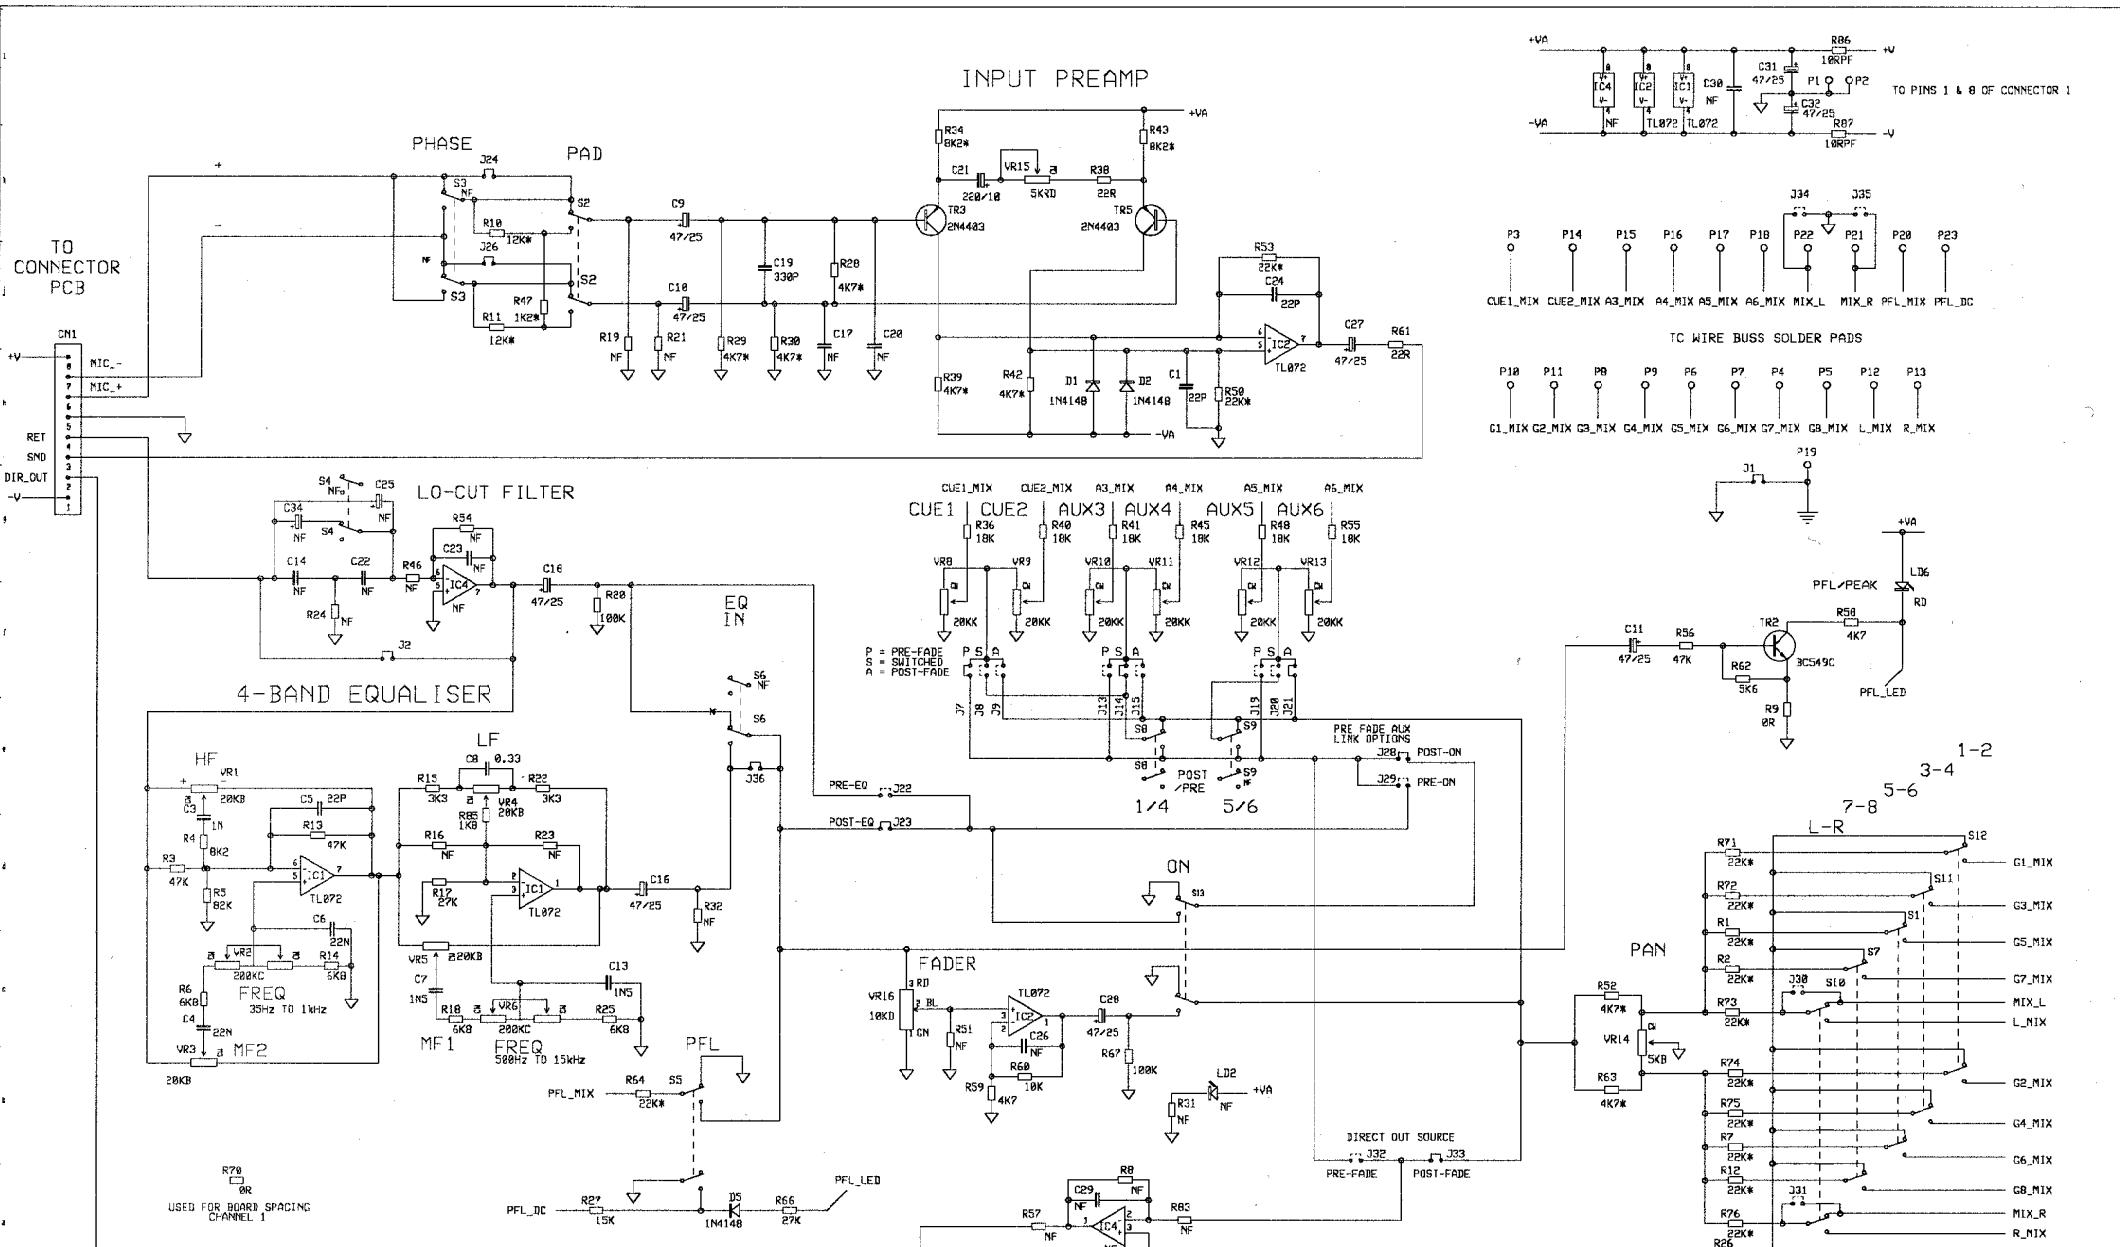


ISS.	REVISION	BY DATE	NOTES	C	D	E	F	G	H	I	J	K	L	
A 1	ORIGIN PRODUCTION	IWD 01/04/97 IWD 19/04/97	1. RESISTORS MARKED * ARE 1% ALL OTHERS ARE 1/4W UNLESS OTHERWISE MARKED 2. ELECTROLYTIC CAPACITORS ARE μ F/10VDC 3. DO NOT MODIFY THIS CCT. WITHOUT REFERENCE TO OTHER WIZARD INPUT CCTs.							UNIT TITLE 2E-8	DRAWING TITLE INPUT CIRCUIT DIAGRAM	MANUFACTURED IN ENGLAND BY R/G304 ALLEN & HEATH		
											PCB TYPE AG2894	DRAWING NO. C2894 ISSUE 1	A1	

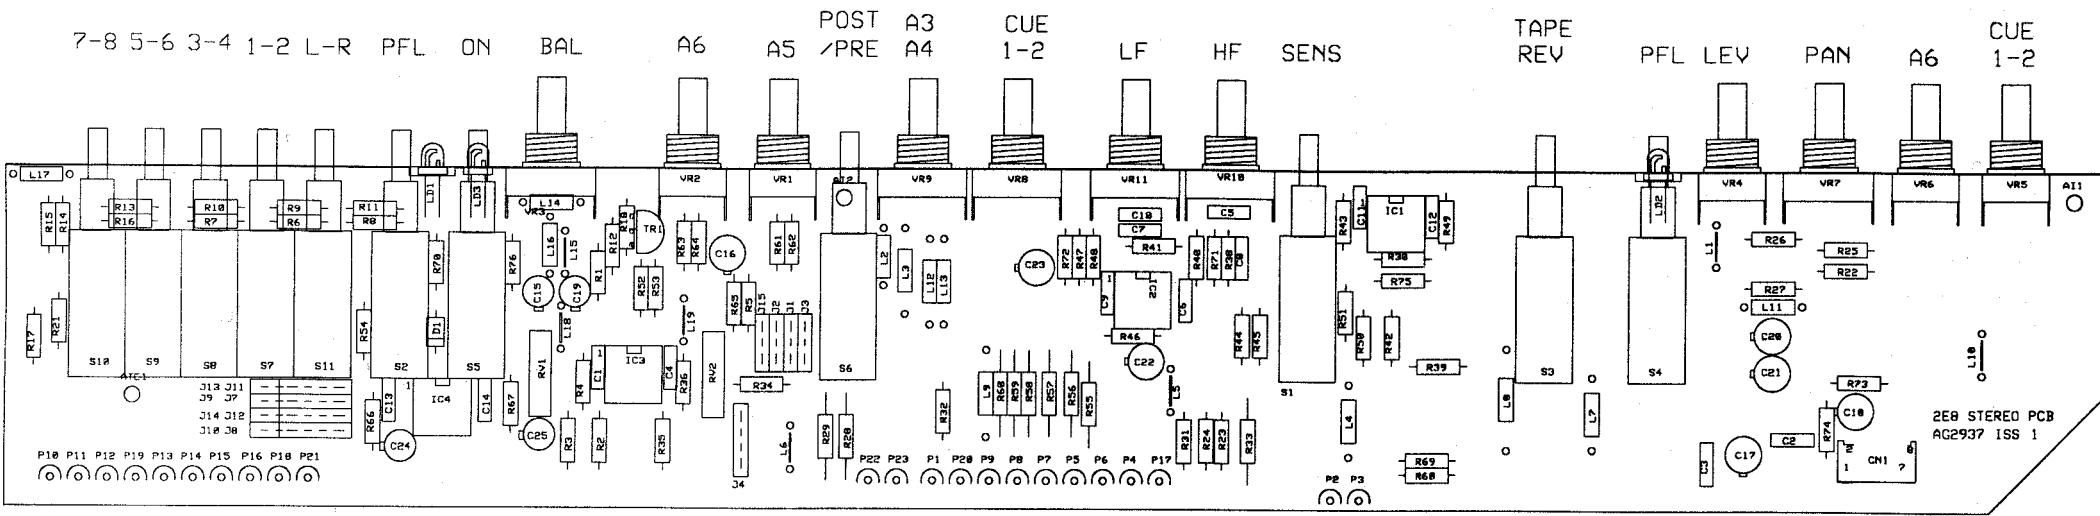

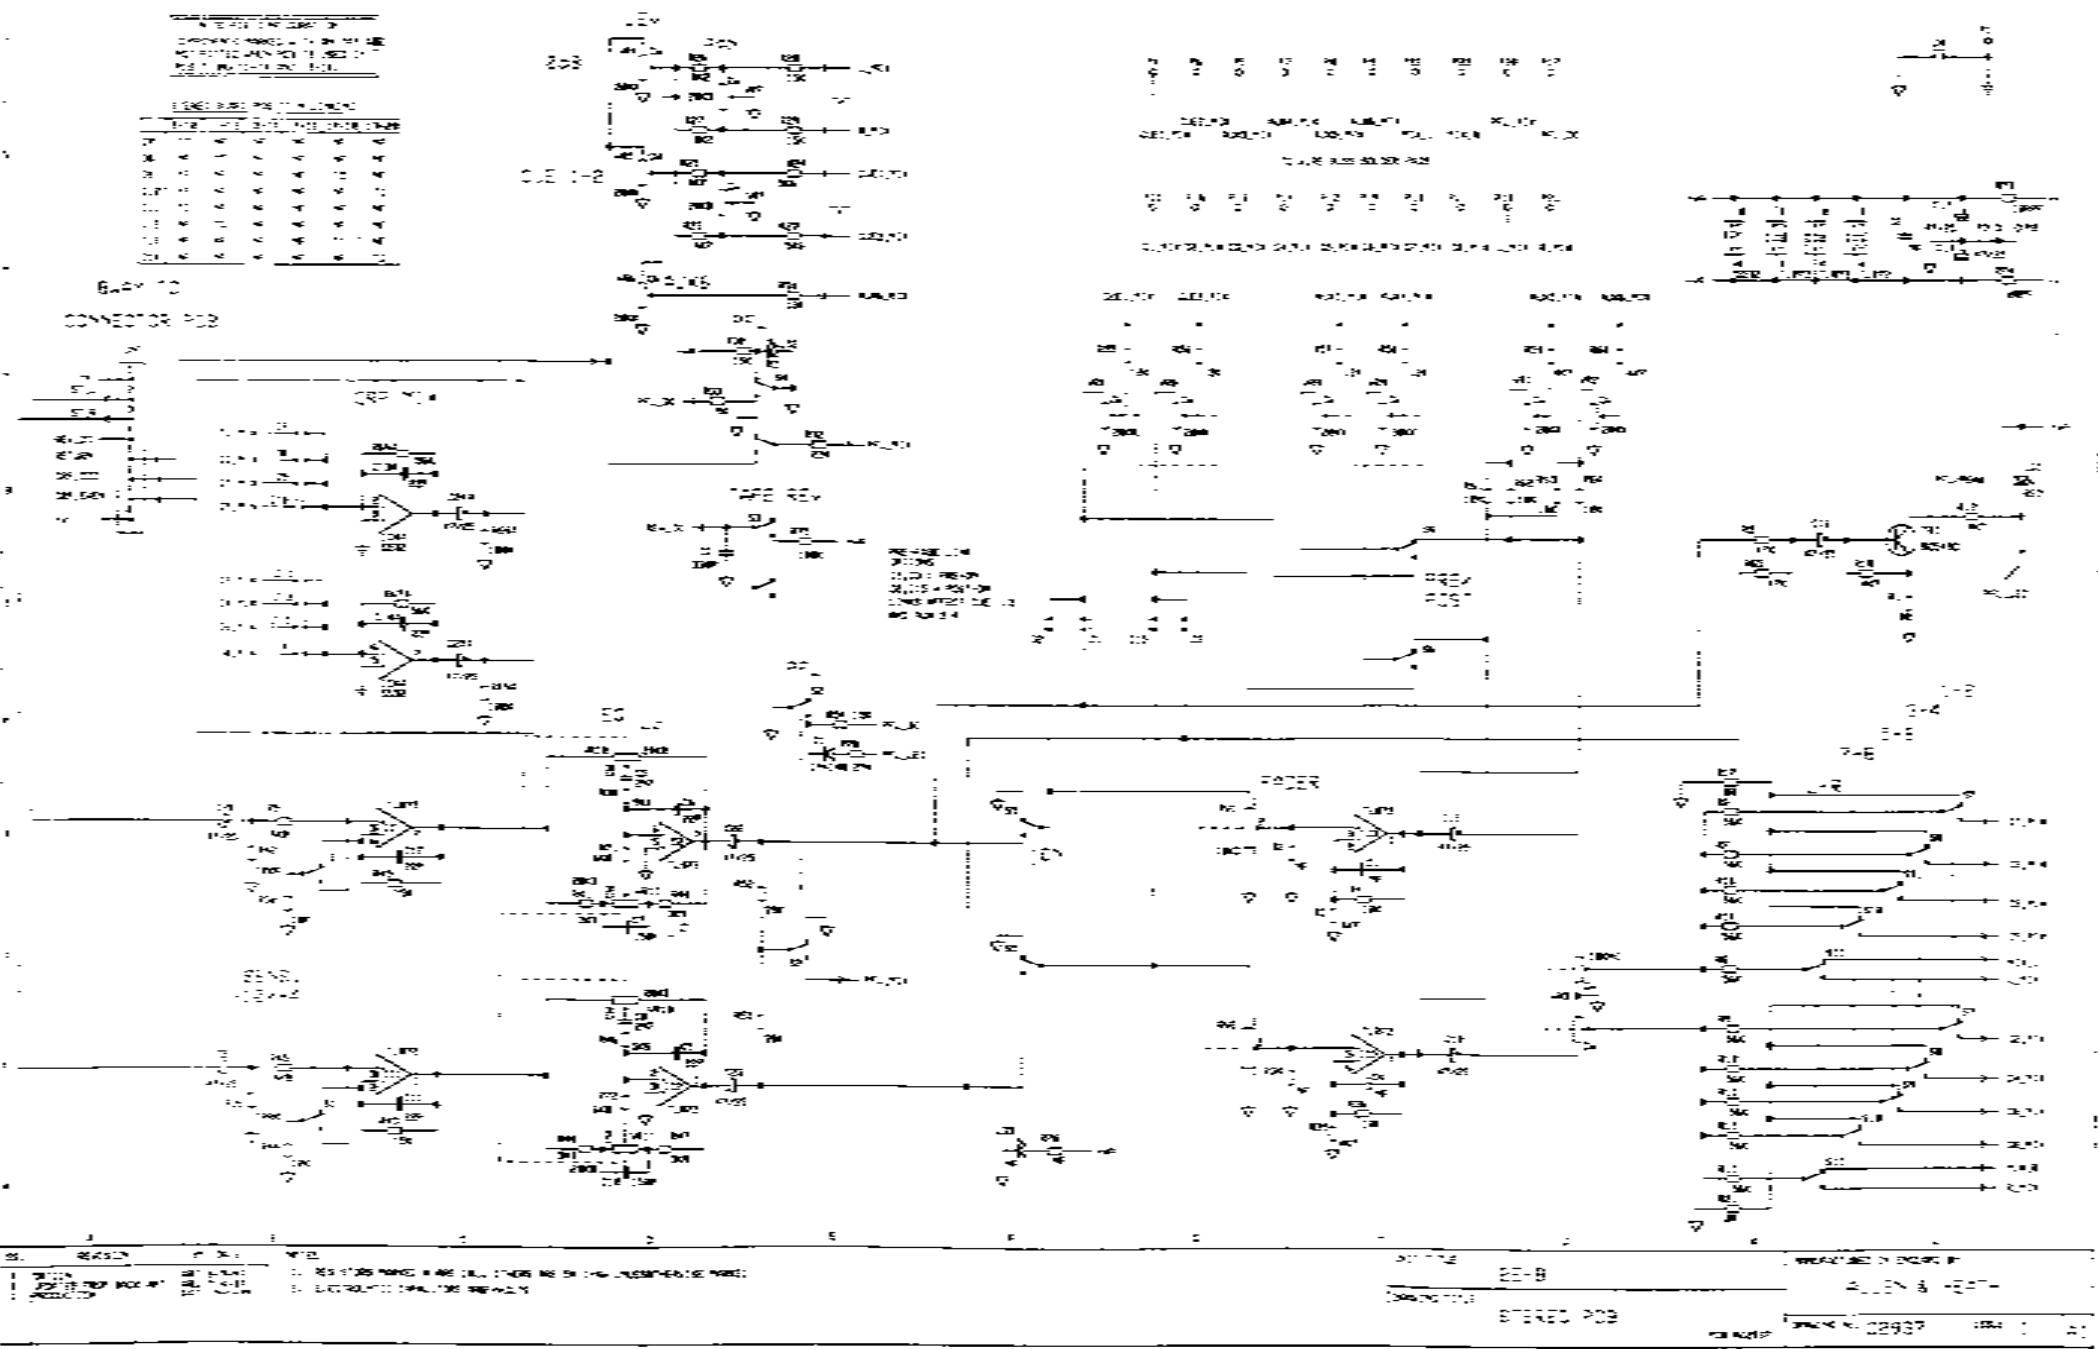

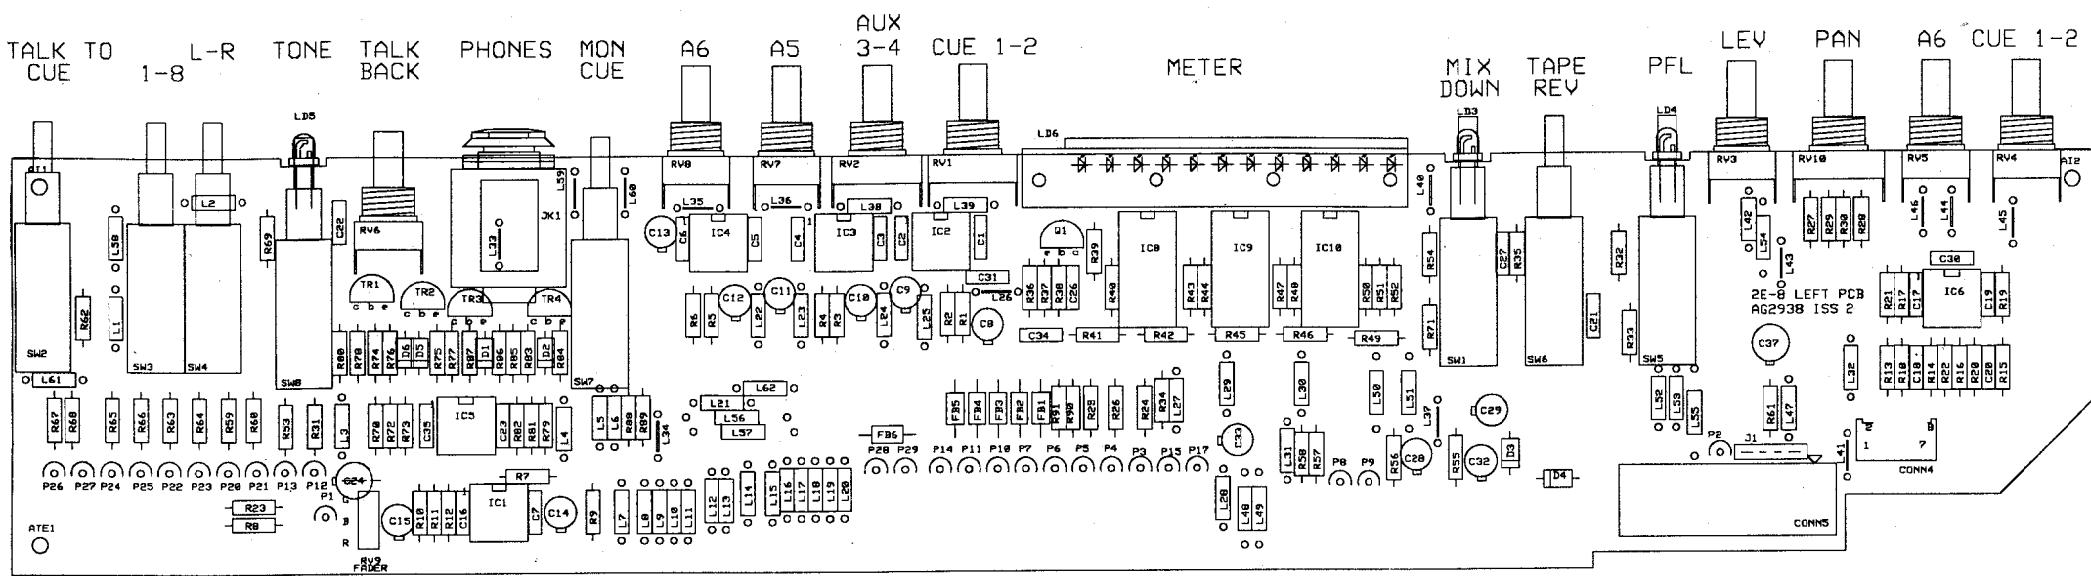

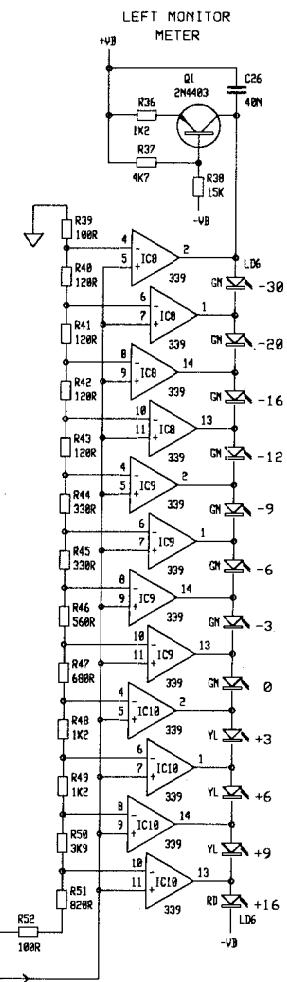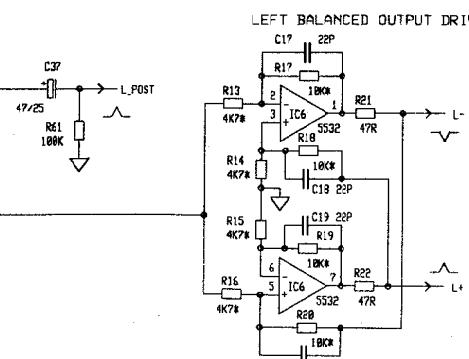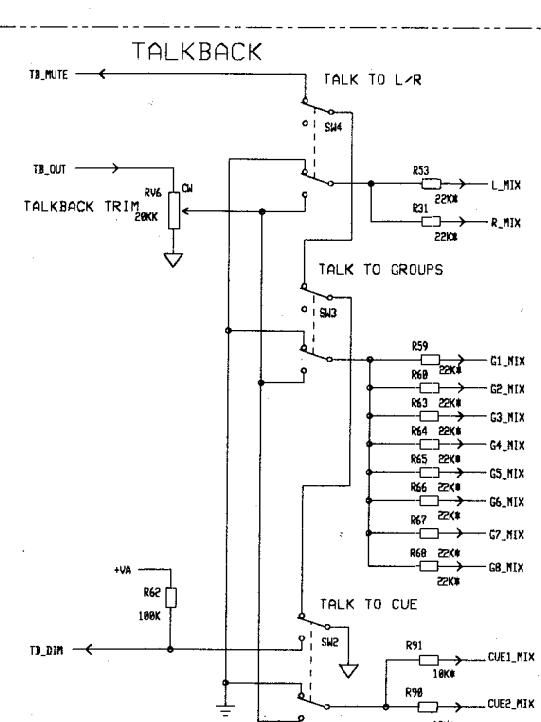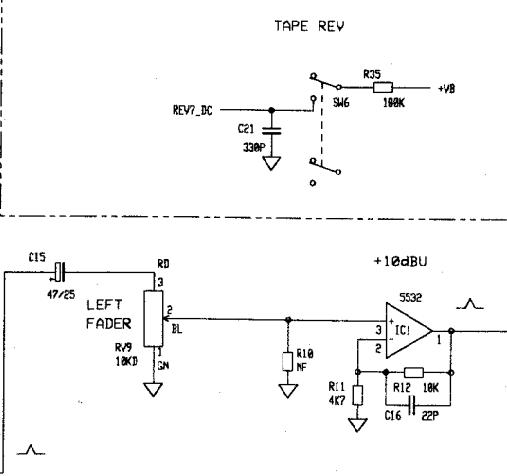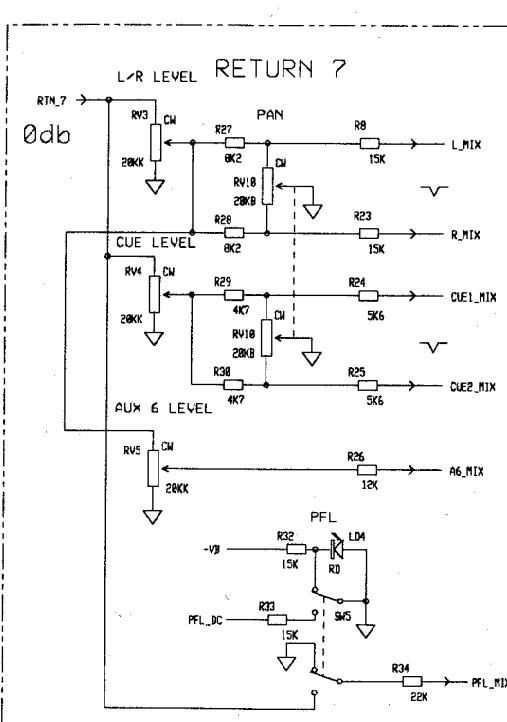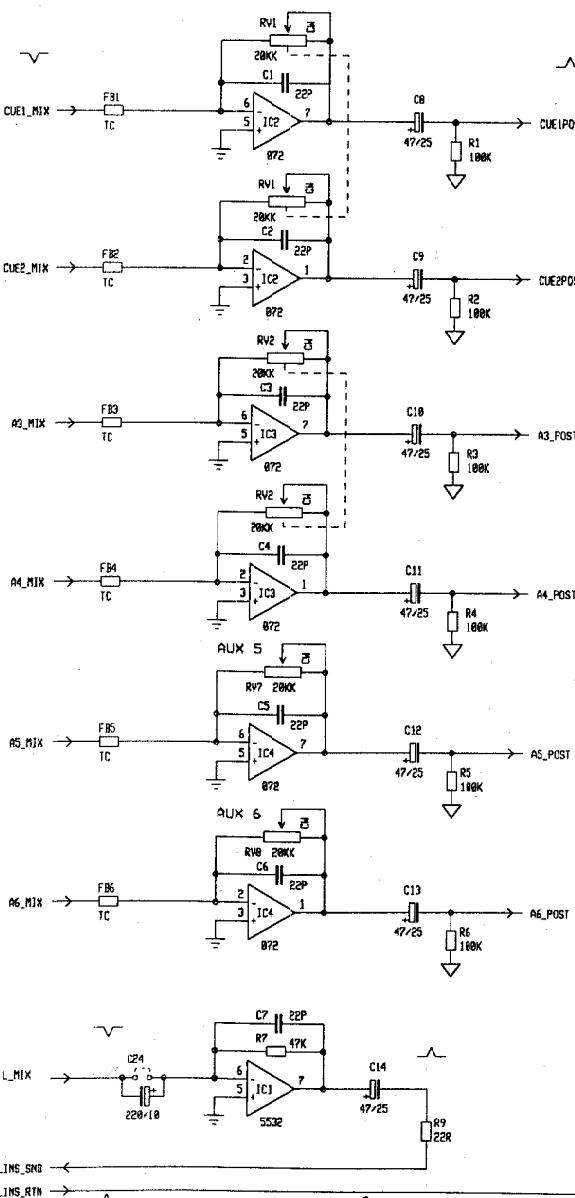


ISS.	REVISION	BY	DATE	NOTES
A	ORIGIN PRODUCTION	ARJ	7-3-97	1. RESISTORS MARKED # ARE 1X ALL OTHERS ARE 5K 1/4W UNLESS OTHERWISE MARKED
1	C24 ADDED CONN4 L-,L+	DRP	16-4-97	
2	PINS SWAPPED	DRP	15-5-97	2. ELECTROLYTIC CAPACITORS ARE 50V/10uF









UNIT TITLE 2E-8
DRAWING TITLE LEFT PCB
SHEET 1 OF 2

MANUFACTURED IN ENGLAND BY RC316
ALLEN & HEATH
DRAWING No. C2938 ISSUE 2 A2

TC BUS

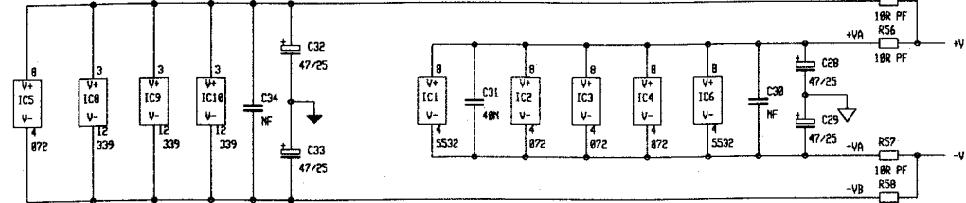

G1_MIX — O P20
 G2_MIX — O P21
 G3_MIX — O P22
 G4_MIX — O P23
 G5_MIX — O P24
 G6_MIX — O P25
 G7_MIX — O P26
 G8_MIX — O P27
 L_MIX — O P13
 R_MIX — O P12
 O P19
 MIX_L — O P28
 MIX_R — O P29

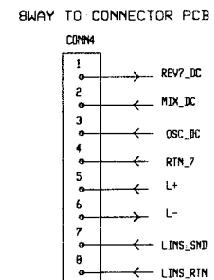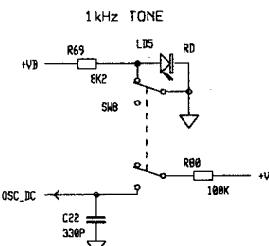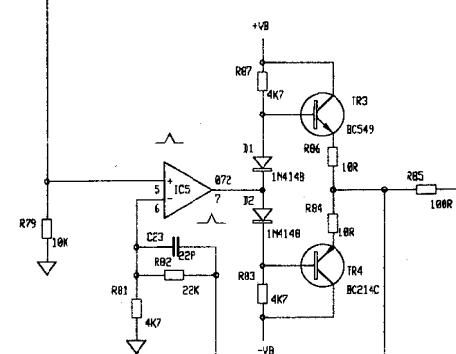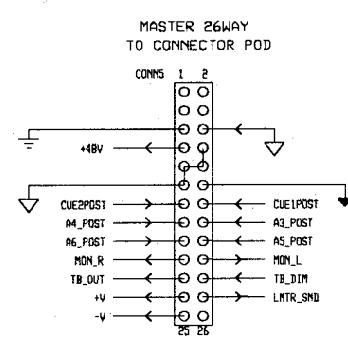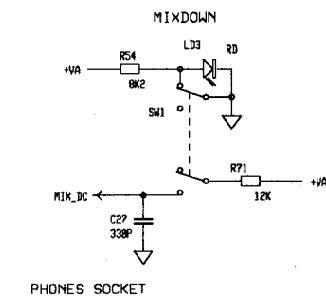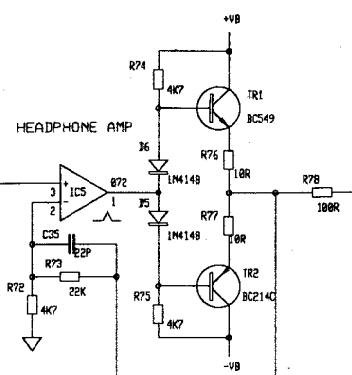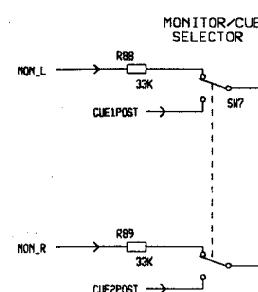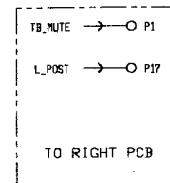

A REVISION
 1 ORIGIN PRODUCTION DRP 7-3-97
 2 C24 ADDED CONN4 L-, L+ PINS SWAPPED DRP 15-4-97
 DRP 15-5-97

NOTES

- RESISTORS MARKED * ARE 1K ALL OTHERS ARE 5K 1/4W UNLESS OTHERWISE MARKED
- ELECTROLYTIC CAPACITORS ARE μ F/VOLTS

UNIT TITLE

2E-8

SHEET 2 OF 2


DRAWING TITLE

LEFT PCB




MANUFACTURED IN ENGLAND BY
ALLEN & HEATH

RG316



DRAWING No. C2938 ISSUE 2 A2

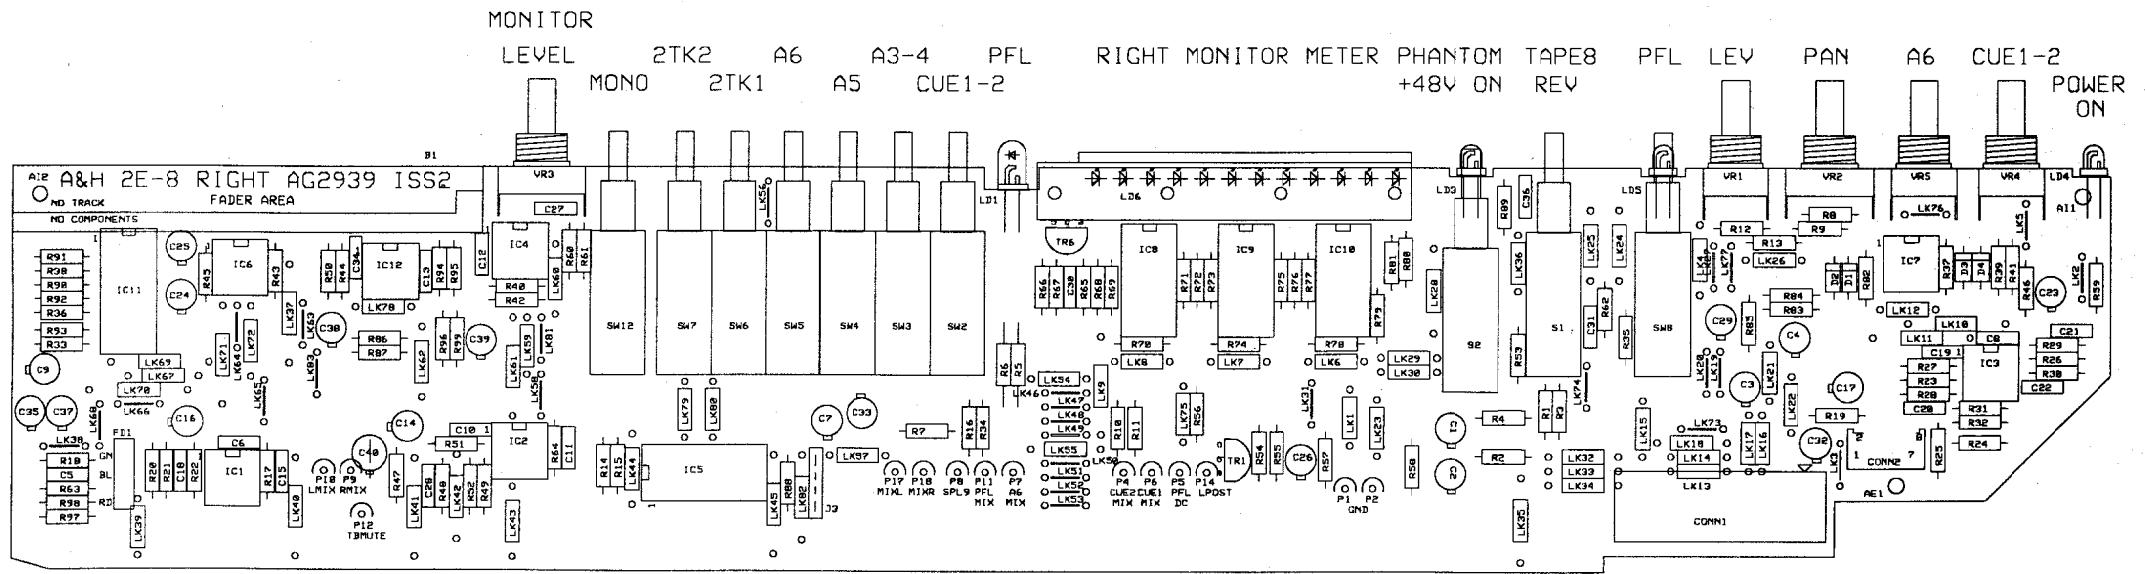




POWER SUPPLY FILTERING

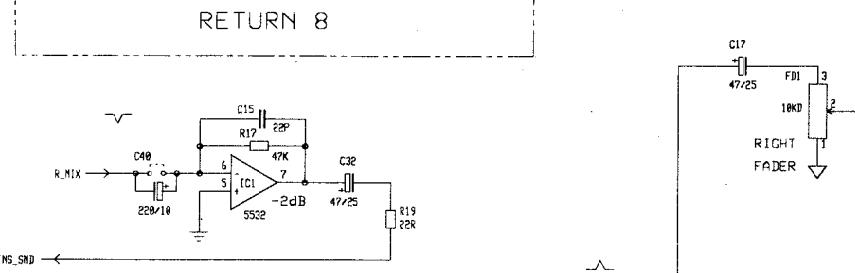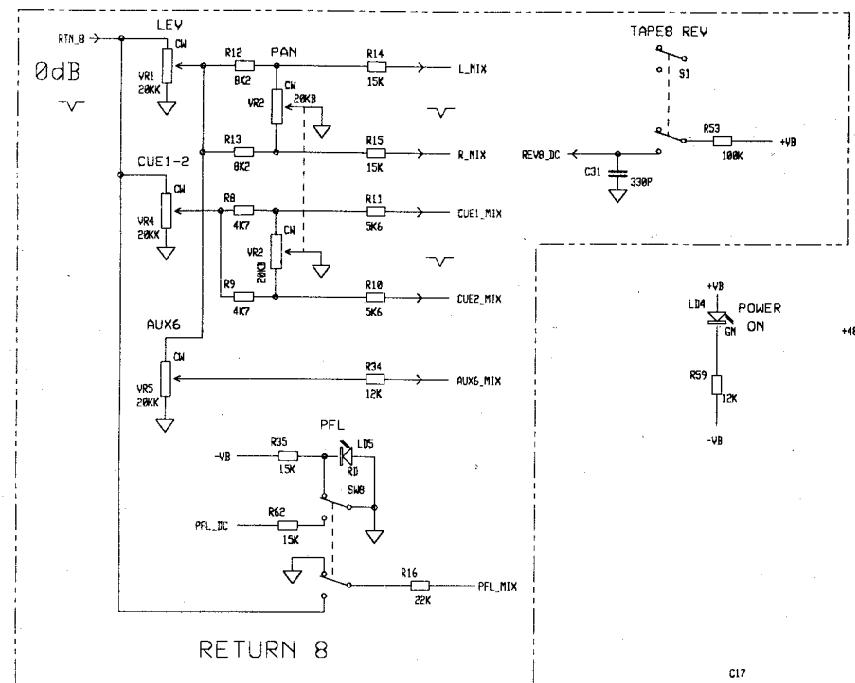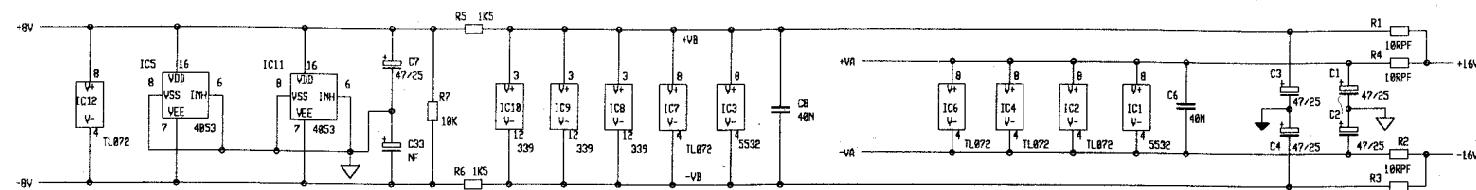


ISS.	REVISION	BY	DATE	NOTES	UNIT TITLE	PAGE 1 OF 2	MANUFACTURED IN ENGLAND BY
A1	ORIGIN PRODUCTION	ARJ	12/3/97	1. RESISTORS MARKED # ARE 1W ALL OTHERS ARE 5W (4W UNLESS OTHERWISE MARKED)	2E-8		ALLEN & HEATH
2	C40 ADDED	DLP	11/4/97	2. ELECTROLYTIC CAPACITORS ARE μ F/VOLTS			RG334
			DRP	16/5/97	DRAWING TITLE		DRAWING No. C2939 ISSUE 2 A2
					RIGHT PCB		

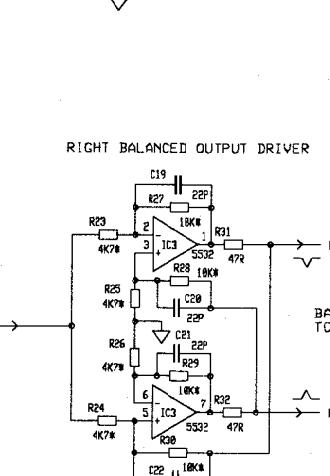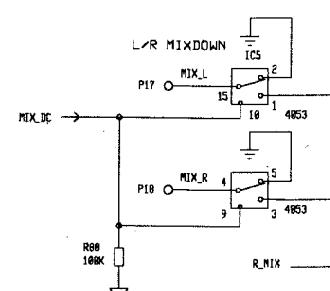



TC BUS

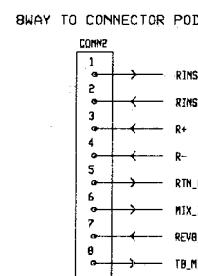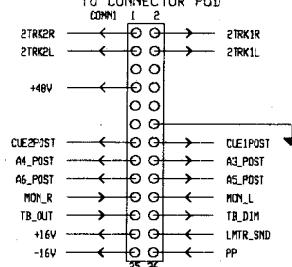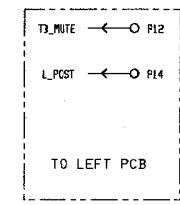

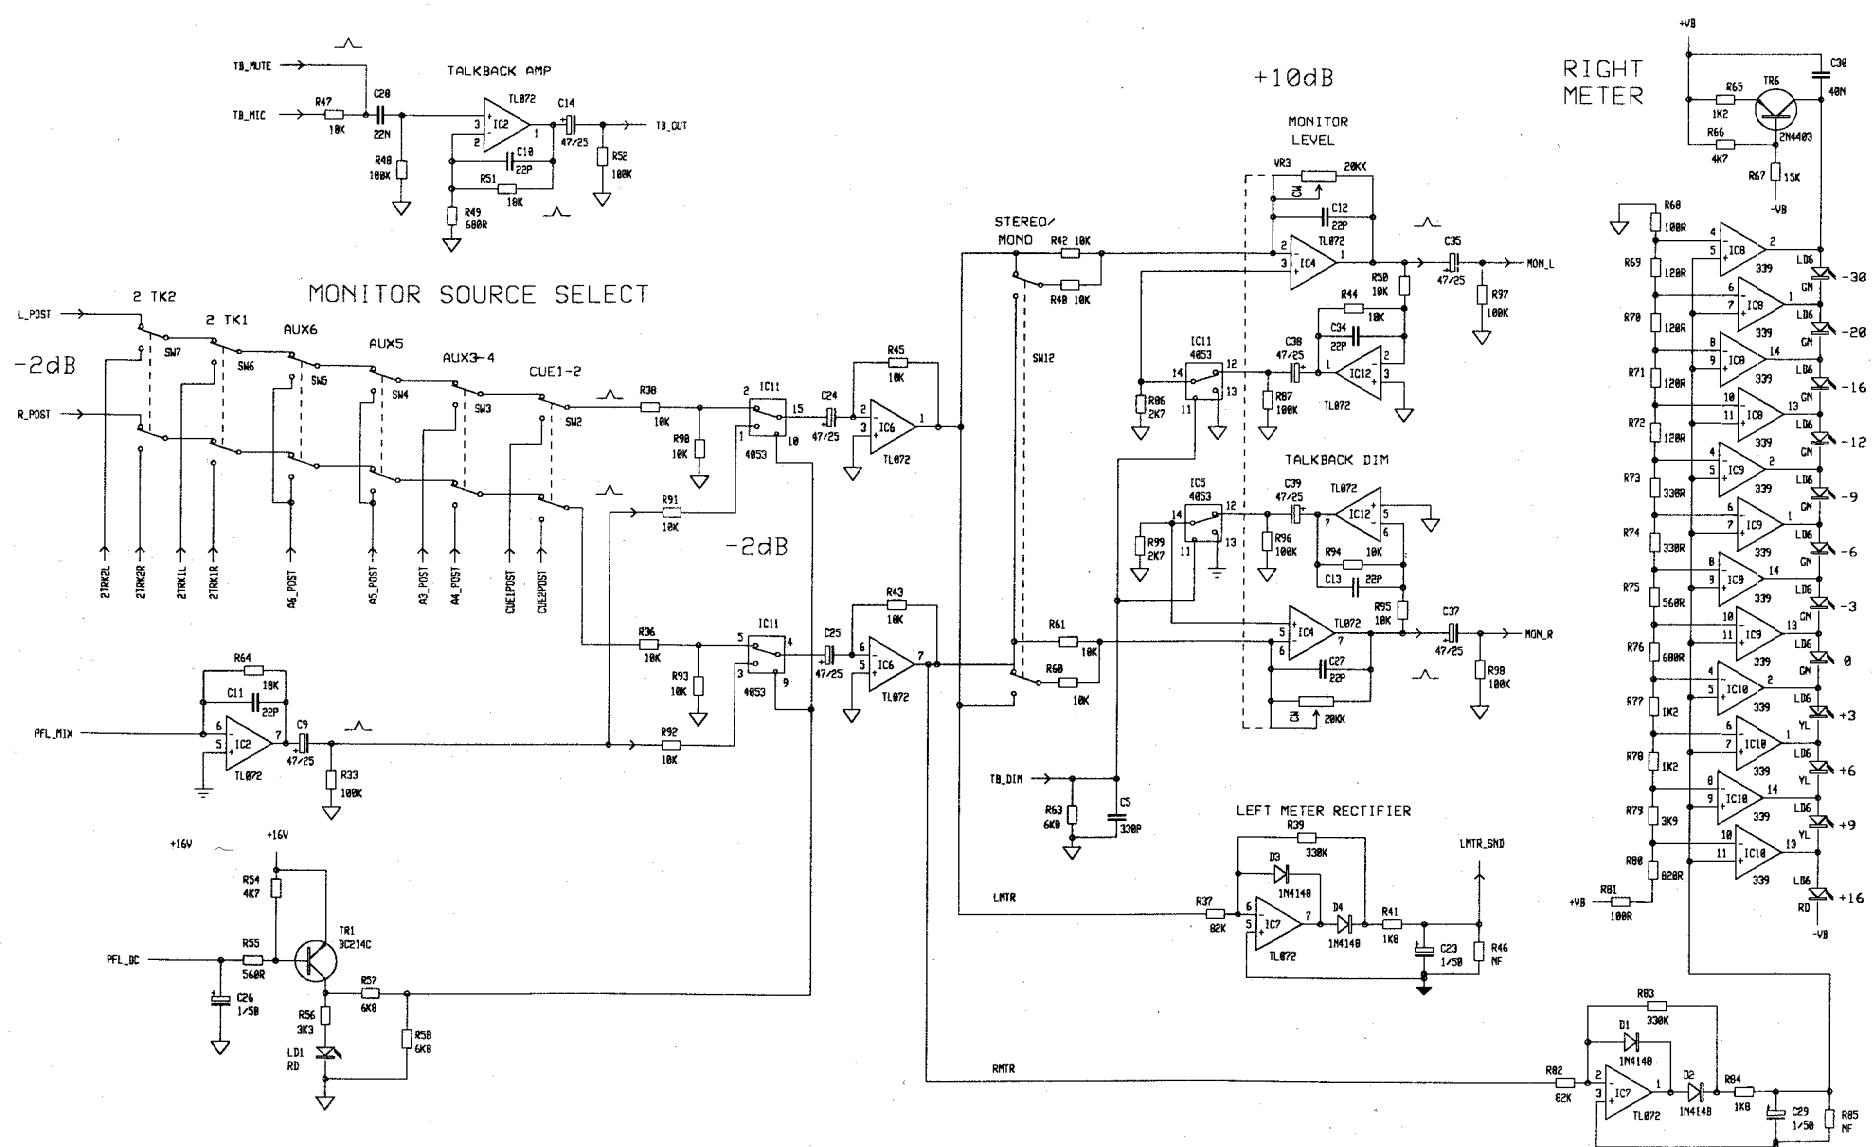

A	B	C	D	E	F	G	H
ISS.	REVISION	BY DATE	NOTES	UNIT TITLE	PAGE 2 OF 2	MANUFACTURED IN ENGLAND BY	
A 1	ORIGIN PRODUCTION C48 ADDED IC12 PWR WAS + & -VA	ARJ 27/3/97 DLP 11/4/97 DRP 16/5/97	1. RESISTORS MARKED * ARE 1K ALL OTHERS ARE 5% 1/4W UNLESS OTHERWISE MARKED 2. ELECTROLYTIC CAPACITORS ARE μ F/VOLTS	2E-8		ALLEN & HEATH	RG334
2				DRAWING TITLE		DRAWING No.	C2939 ISSUE 2 A2
				RIGHT PCB			

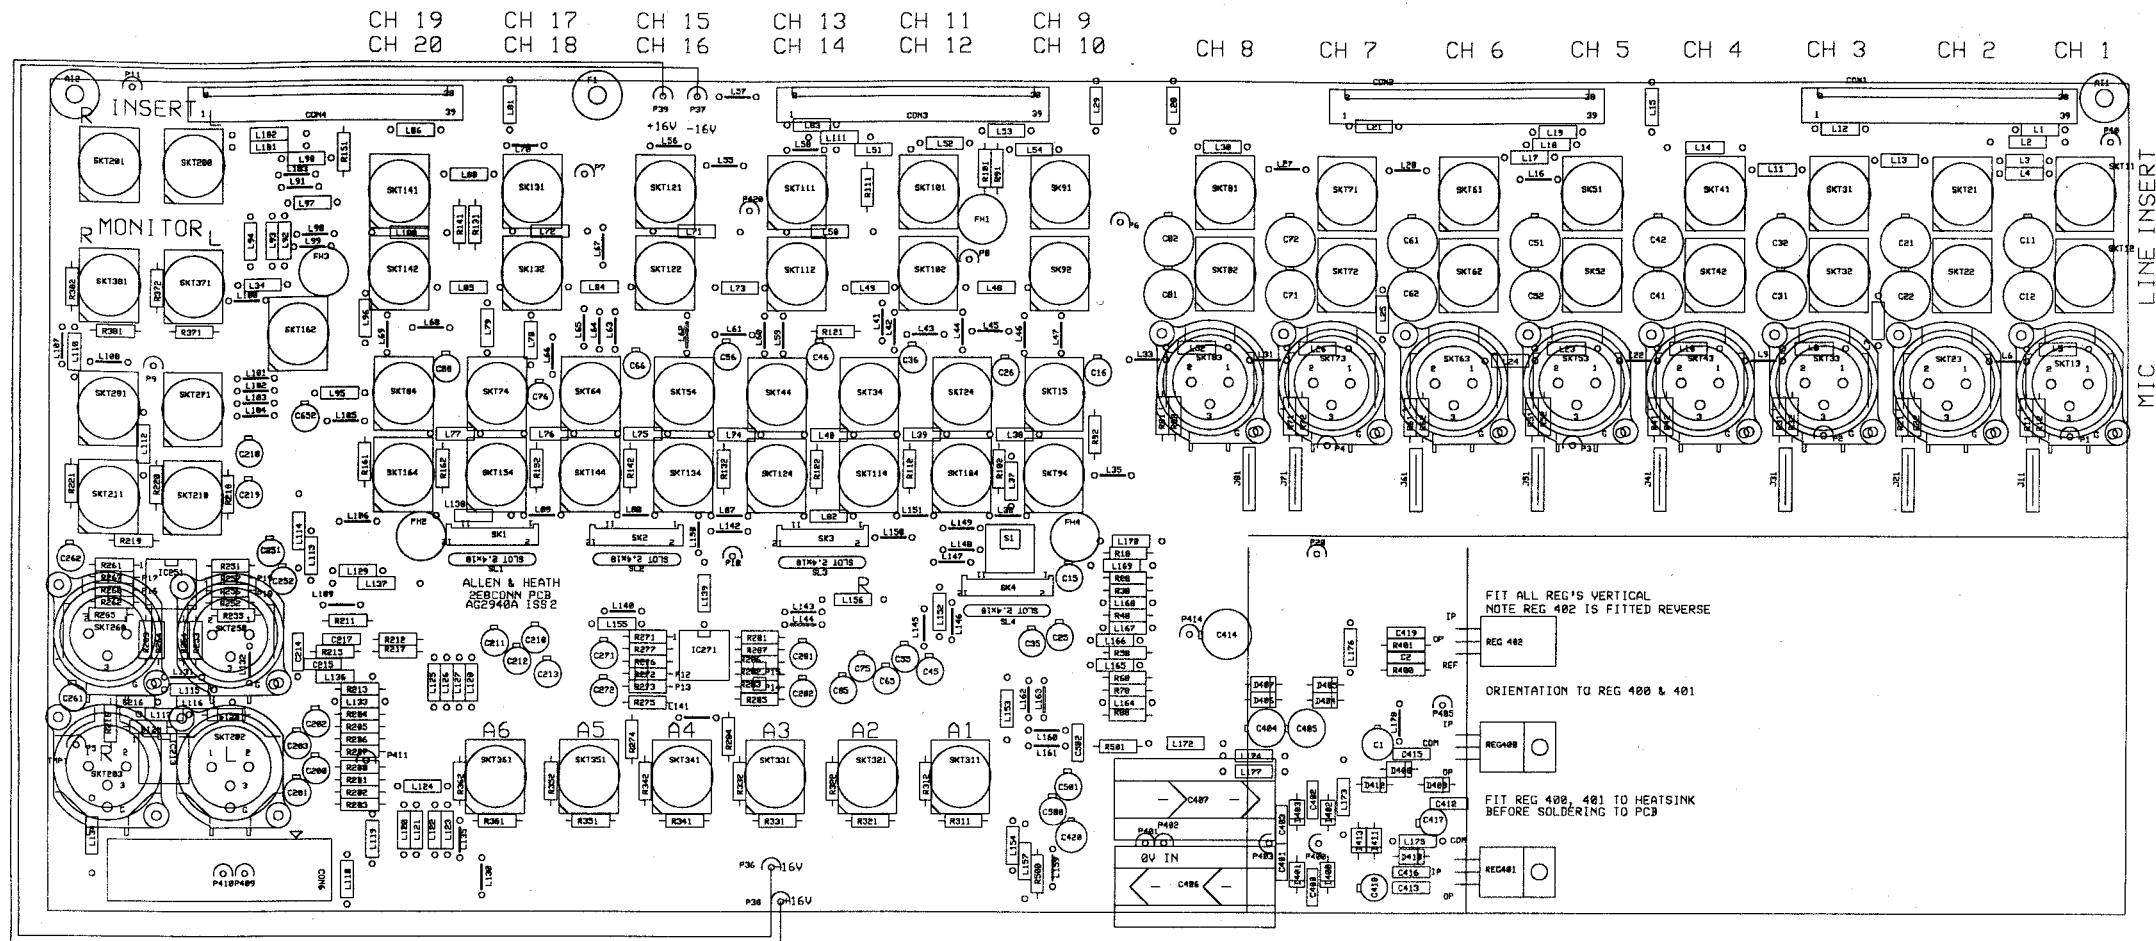


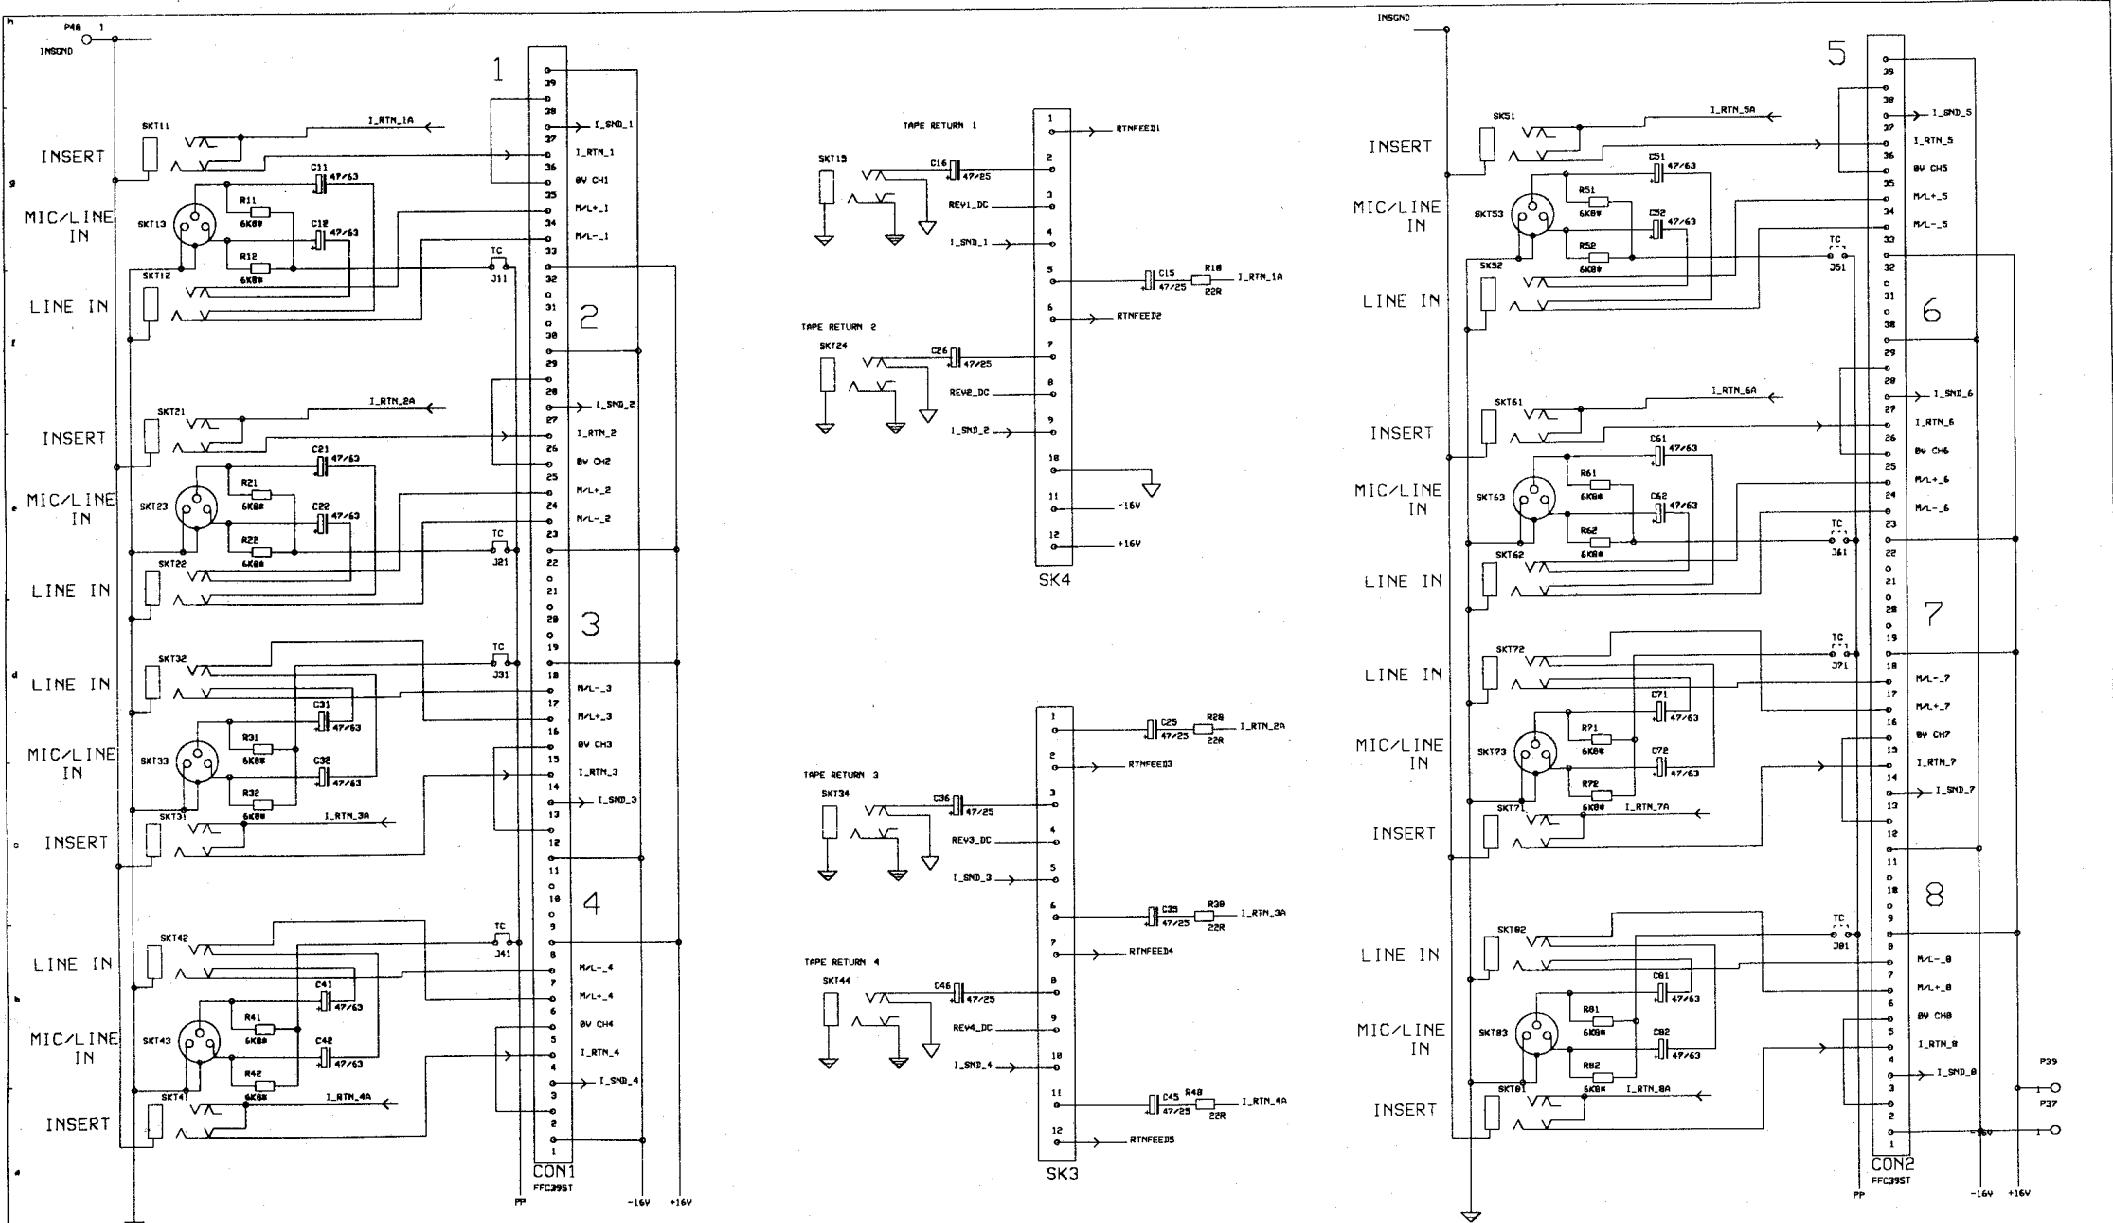


ISS.	REVISION	BY DATE	NOTES
A 1	ORIGIN PRODUCTION	AT 03-04-97	1. RESISTORS MARKED # ARE 1K ALL OTHERS ARE 51/4W UNLESS OTHERWISE MARKED
2	PHASE CORRECTION	AT 16-04-97	2. ELECTROLYTIC CAPACITORS ARE μ F/VOLTS
3	PHANTOM PWR MOD	AT 22-05-97 DWD 27-05-97	

UNIT TITLE 2E8
 DRAWING TITLE CONNECTOR/PSU PCB PAGE 1 OF 3
 PCB TYPE AC2940A


MANUFACTURED IN ENGLAND BY ALLEN & HEATH
 DRAWING No. C2940A ISSUE 3 A2

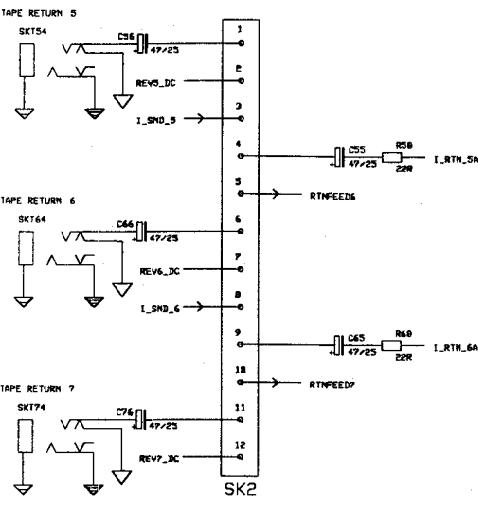



BALANCED OUTPUT

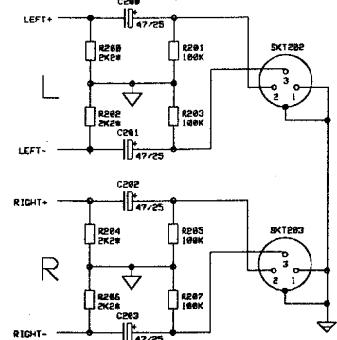


2 TRACK 1 IN

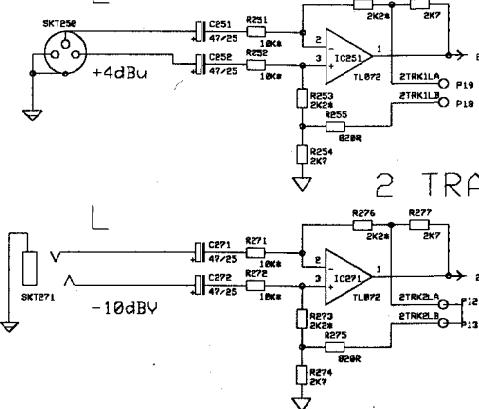


2 TRACK 2 IN

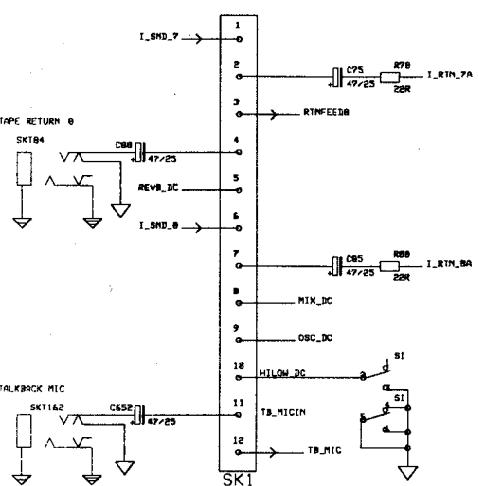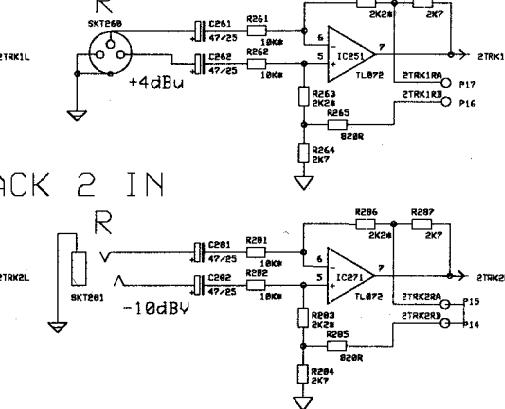


L & R INSERT

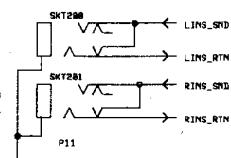


MONITOR

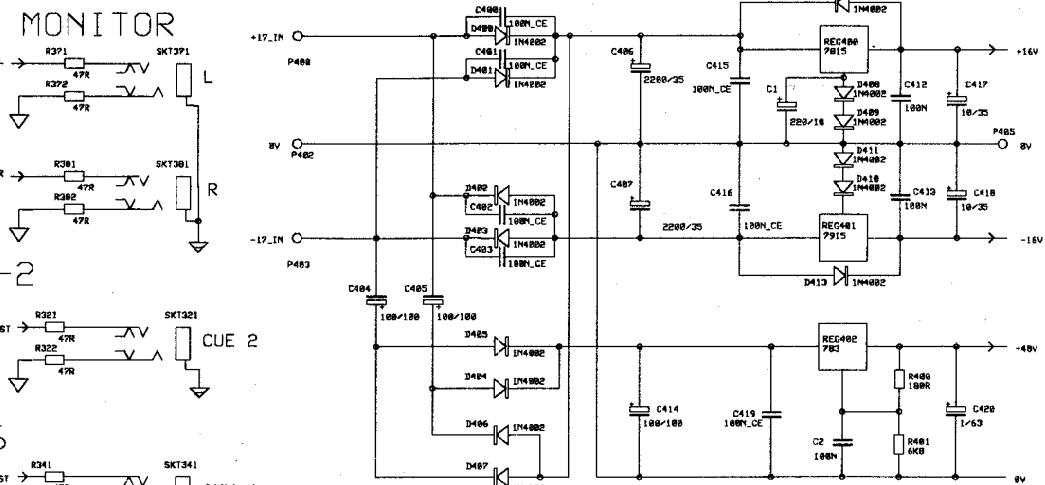


CUE 1-2

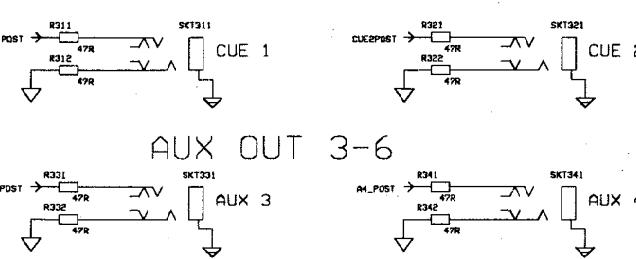

AUX OUT 3-6

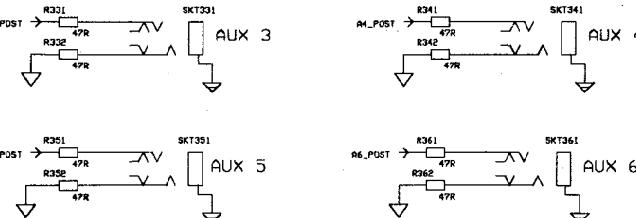

EDGEPIN

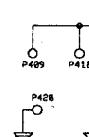


2E8

DRAWING TITLE
CONNECTOR/PSU
PCB


MANUFACTURED IN ENGLAND BY
ALLEN & HEATH


PAGE 2 OF 3
DRAWING No. C2940A ISSUE 3
PCB TYPE AC2940A

ISS.	REVISION	BY DATE	NOTES
1	ORIGIN	AAT 03-04-97	1. RESISTORS MARKED * ARE 1M ALL OTHERS ARE 5K 1/4W UNLESS OTHERWISE MARKED
2	PRODUCTION	AAT 16-04-97	2. ELECTROLYtic CAPACITORS ARE μ F VOLTS
3	PHASE CORRECTION	AAT 22-05-97	
	PHANTOM PWR MOD	DWD 27-05-97	

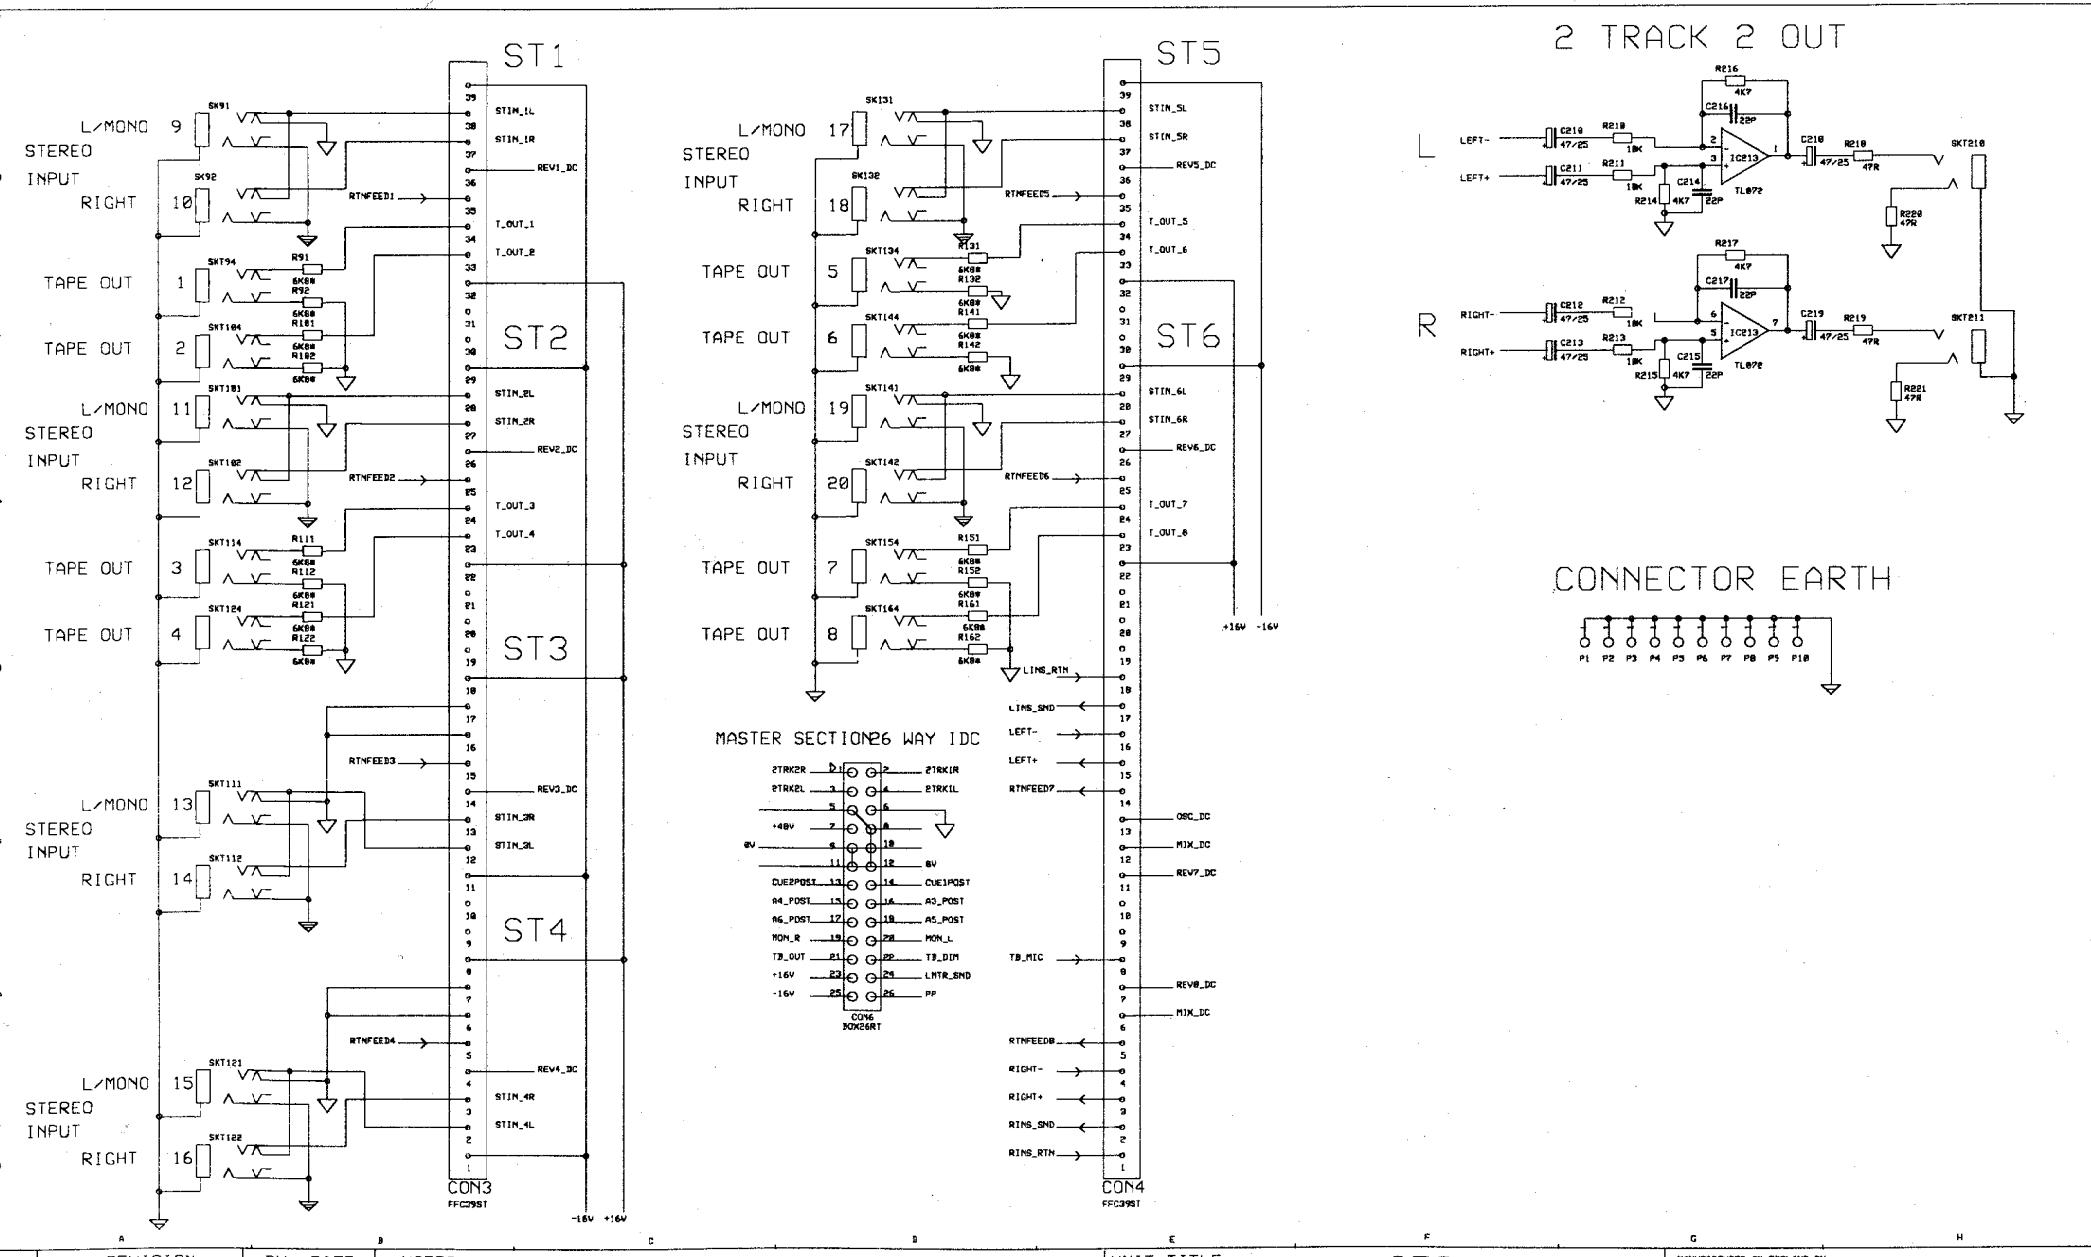

ISS.	REVISION	BY DATE	NOTES	UNIT TITLE	DRAWING TITLE	MANUFACTURED IN ENGLAND BY
A 1	ORIGIN PRODUCTION	AAT 03-04-97	1. RESISTORS MARKED # ARE 1K ALL OTHERS ARE 5X 1/4W UNLESS OTHERWISE MARKED	2E8	CONNECTOR/PSU	ALLEN & HEATH
2	PHASE CORRECTION	AAT 16-04-97	2. ELECTROLYTIC CAPACITORS ARE 100VOLTS		PAGE 3 OF 3	
3	PHANTOM PWR MOD	AAT 22-05-97 DWD 27-05-97		PCB	PCB TYPE AG2940A	DRAWING No. C2940A ISSUE 3 A2

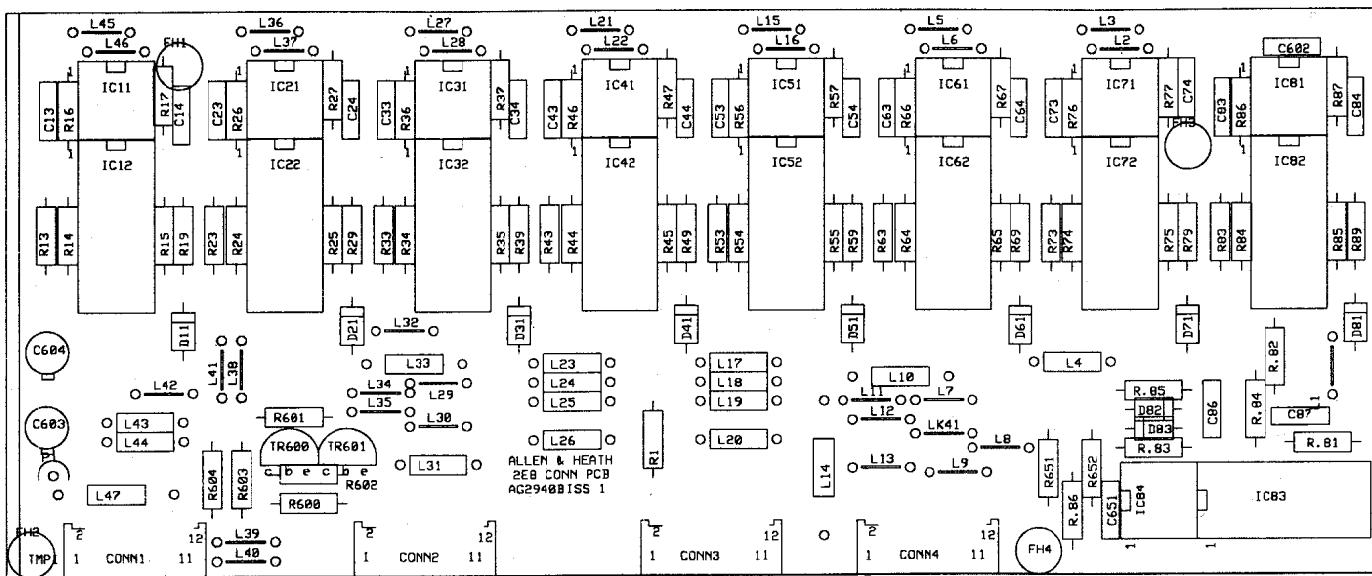

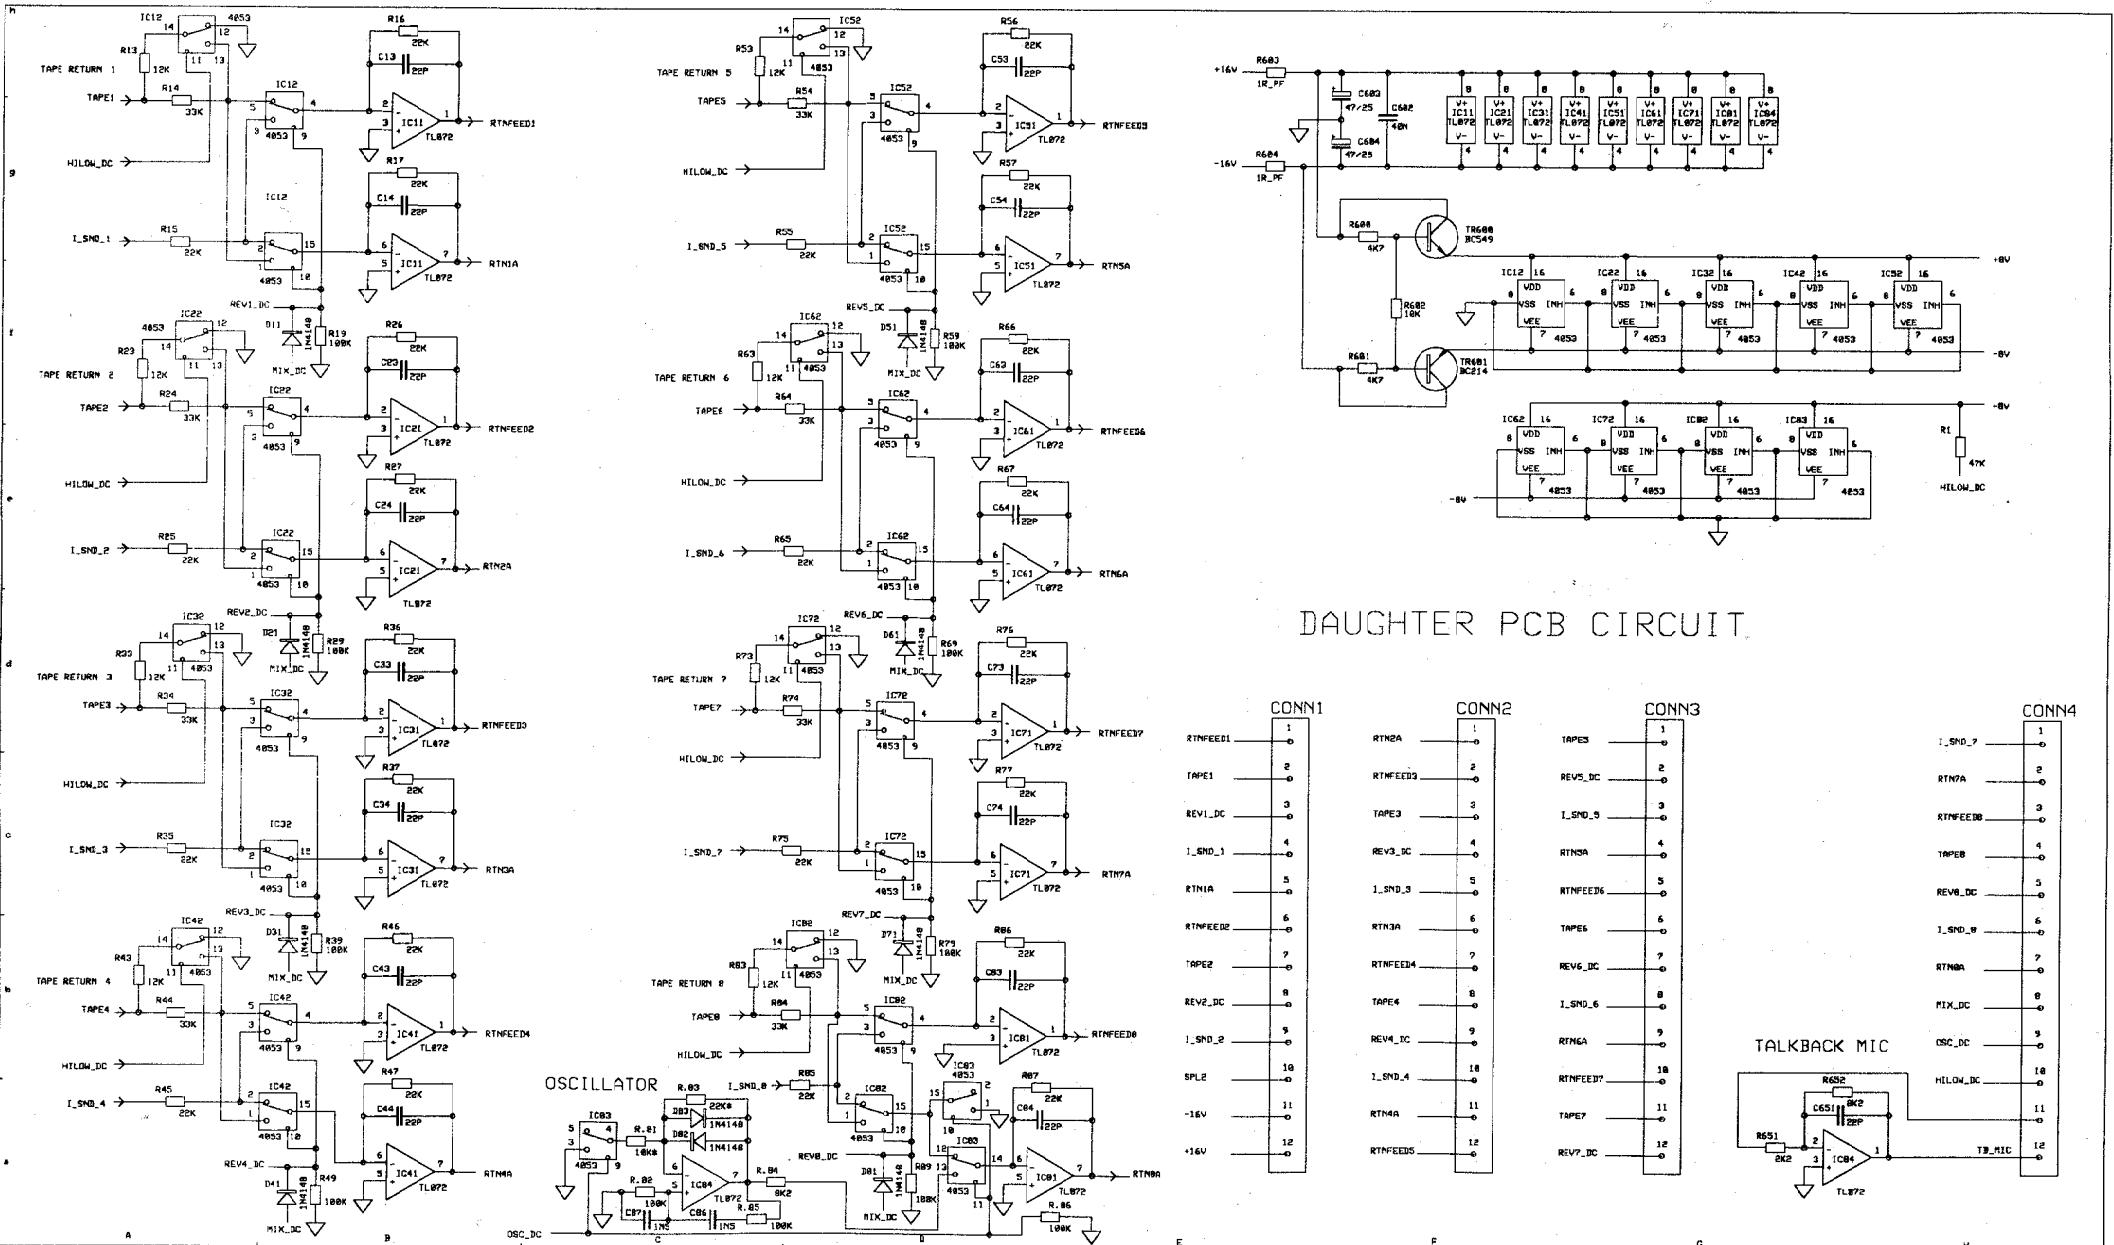

DAUGHTER PCB CIRCUIT

ISS.	REVISION	BY DATE	NOTES	UNIT TITLE	MANUFACTURED IN ENGLAND BY
A 1	ORIGIN PRODUCTION VALUE CHANGE/ RE-PACKED IC'S	AAT 04-04-97 AAT 17-04-97 ARJ 29-4-97	1. RESISTORS MARKED * ARE 1K ALL OTHERS ARE 5K 1/4W UNLESS OTHERWISE MARKED 2. ELECTROLYtic CAPACITORS ARE 10V/100uF	2E8 DRAWING TITLE CONNECTOR PCB PAGE 1 OF 1 PCB TYPE AC2940B	ALLEN & HEATH

DRAWING No. C2940B ISSUE 1 A2

BLOCK DIAGRAM

