

KIPOR

WUXI KIPOR POWER PRODUCTS CO., LTD.
IG2600/IG2600P/IG2600HP SHOP MANUAL
EPA/CETL Certified Models



Kipor Power Systems, Inc.

Revision 1 June, 2011

Preface

This manual covers the construction, repair, and servicing procedures for the KIPOR IG2000 and IG2000P Model generators. Some models were sold with an "H" suffix, designating an integrated handle.

The manual is applicable to EPA and CETL models. Through the 2011 model year, CARB certified units have not been offered.

Careful observance of these instructions will result in better, safer service work.

All information, illustrations, directions and specifications included in this publication are based on the latest product information available at the time of approval for printing. Wuxi Kipor Power Co., Ltd., reserves the right to make changes without incurring any obligation.

No part of this publication may be reproduced without written permission.

CONTENTS

PREFACE	1
CONTENTS	2
1. SPECIFICATIONS/WIRING DIAGRAM.....	4
1.1 SPECIFICATIONS	4
1.2 PERFORMANCE CHARACTERISTICS	5
1.3 PERFORMANCE CURVES	7
1.4 DIMENSIONAL DRAWING	9
1.5 WIRING DIAGRAMS	11
2. SERVICE INFORMATION.....	13
2.1 THE IMPORTANCE OF PROPER SERVICING.....	13
2.2 IMPORTANT SAFETY PRECAUTIONS	13
2.3 SERVICE RULES	14
2.4 ELECTRICAL PRECAUTIONS	14
2.5 SERIAL NUMBER LOCATION.....	15
2.6 MAINTENANCE STANDARDS	16
2.7 TORQUE VALUES.....	17
3. TROUBLESHOOTING	18
3.1 GENERAL SYMPTOMS AND CAUSES	18
3.2 HARD STARTING	19
3.3 OIL ALARM	22
3.4 ENGINE STOPS RUNNING	22
3.5 ENGINE SPEED UNSTABLE	23
3.6 THROTTLE CONTROL SYSTEM.....	23
3.7 SMART THROTTLE.....	24
3.8 LOW OR NO AC OUTPUT	24
3.9 NO DC OUTPUT.....	26
3.10 NO PARALLEL OUTPUT	26
4. MAINTENANCE	28
4.1 MAINTENANCE SCHEDULE	28
4.2 ENGINE OIL	29
4.3 CHECKING THE LOW OIL ALARM	30
4.4 AIR CLEANER	31
4.5 SPARK PLUG	33
4.6 VALVE CLEARANCE.....	35
4.6 FUEL TANK AND FILTER	38
4.8 FUEL PUMP AND HOSES.....	39
4.9 SPARK ARRESTOR	40
5. EXHAUST SYSTEM	41
5.1 MUFFLER.....	41
5.2 EXHAUST TUBE/SECONDARY AIR INJECTION VALVE	42

6. INTAKE SYSTEM	43
6.1 AIR FILTER REMOVAL AND INSTALLATION	43
6.2 CARBURETOR REMOVAL AND INSTALLATION.....	43
6.3 INSPECTION.....	46
7. CONTROL PANEL	48
7.1 REMOVAL AND INSTALLATION	48
7.2 INSPECTION OF COMPONENTS	49
8. HOUSING/ FUEL TANK/ GUIDE PLATE/ BOTTOM PLASTE	52
8.1 HOUSING DISASSEMBLY AND REASSEMBLY	52
8.2 FUEL TANK ASSEMBLY	53
8.3 GUIDE PLATE/BOTTOM PLATE	54
8.4 BOTTOM PLATE IG2600H	55
9. RECOIL STARTER/AIR CONDUCT COVER/IGNITION COIL	56
9.1 DISASSEMBLY AND REASSEMBLY	56
9.2 RECOIL STARTER INSTALLATION	58
9.3 IGNITION COIL INSPECTION.....	61
10. ALTERNATOR/TRIGGER	62
10.1 ALTERNATOR.....	62
10.2 INSPECTION	62
10.3 TRIGGER ADJUSTMENT	63
11. VALVE COVER/ROCKER ARM.....	64
11.1 DISASSEMBLY/REASSEMBLY	64
11.2 INSPECTION	64
12. CRANKCASE COVER/CAMSHAFT DRIVE CHAIN	66
12.1 DISASSEMBLY	66
12.2 CRANKCASE COVER REASSEMBLY	67
12.3 ROLLER CHAIN REASSEMBLY	67
12.4 CHAIN SUPPORT PLATE/PRESSURE PLATE	68
12.5 CRANKCASE COVER ASSEMBLY	71
12.6 INSPECTION.....	71
13. CRANKSHAFT/PISTON AND CONNECTING ROD	74
13.1 DISASSEMBLY	74
13.2 PISTON/CONNECTING ROD.....	75
13.3 INSPECTION	76

.....

1. SPECIFICATIONS

1.1 SPECIFICATIONS

Dimensions and weights

Model	IG2600	IG2600H
Overall length in (mm)	22.2 (564)	23.3 (590)
Overall width in (mm)	12.6 (320)	13 (330)
Overall height in (mm)	18.3 (465)	18.9 (480)
Dry weight lb (kg)	68 (29.5)	70.4 (31)

Engine

Model	KG166
Type	4-stroke, single-cylinder, overhead camshaft, gasoline engine
Displacement (cm ³)	171
Bore × stroke(mm)	66×50
Max. output (KW) /rpm	3.3/3600
Compression ratio	8.5:1
Cooling system	Forced air
Ignition system	T.C.I
Ignition timing (fixed)	26.5° B.T.D.C
Spark plug	UR5
Carburetor	Float type, Horizontal, butterfly valve type
Air cleaner	Semi-dry type, twin elements
Governor	Electronic control
Lubrication system	Splash
Oil capacity (L)	0.56
Starting system	Recoil starter
Stopping system	Primary circuit ground
Fuel type	Automotive unleaded gasoline

Generator

Model	KD30
Generator type	Multi pole alternator
Generator structure	Self-ventilation drip-proof
Excitation	Self-excitation (Magnet)
Voltage regulation system	PWM (Magnet)
Phase	Single phase
Rotating direction	Clockwise (Viewed from the generator end)
Frequency	Inverter quartz regulation

1.2 Performance Characteristics

Model	IG2600/IG2600H
Max. output (AC)	2.6 KVA
Rated output (AC)	2.3 KVA
Rated frequency	60 Hz
Rated voltage (AC)	120
Rated voltage (DC)	12V
Rated current (AC)	19.2A
Rated current (DC)	5A
Power factor $\cos\phi$	1.0
Voltage variation rate: Momentary Average Average time	Max.10% Max. 1.5% Max.3s
Voltage stability	$\pm 1\%$
Frequency variation rate: Momentary Average Average time	Max.1% Max.1% Max.1s
Frequency stability	$\pm 0.1\%$
Insulation resistance	Mini10M Ω
AC circuit protector	11.5A(230V)
DC Circuit protector	5A

Fuel tank capacity	4.6L
Fuel consumption g/KW.h (at rated load)	500
Continuous operating hours (at rated load)	3
Noise level @ 23' (7M) NL-FL	58~65 dB




© 2011 Kipor Power Systems, Inc.

1.3 PERFORMANCE CURVES


The curves show performance of the generator under average condition. Performance may vary to some degree depending on ambient temperature and humidity.

The output voltage will be higher than usual when the generator is still cold.

- AC External characteristic curves

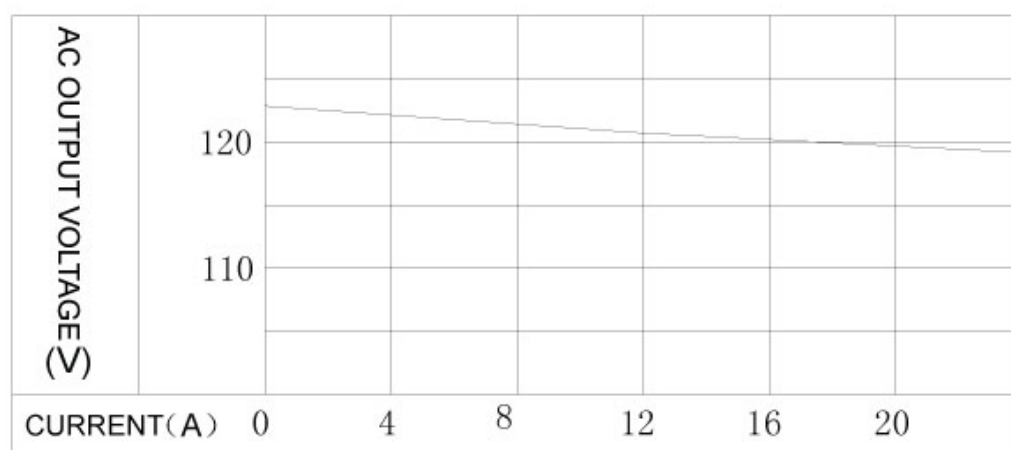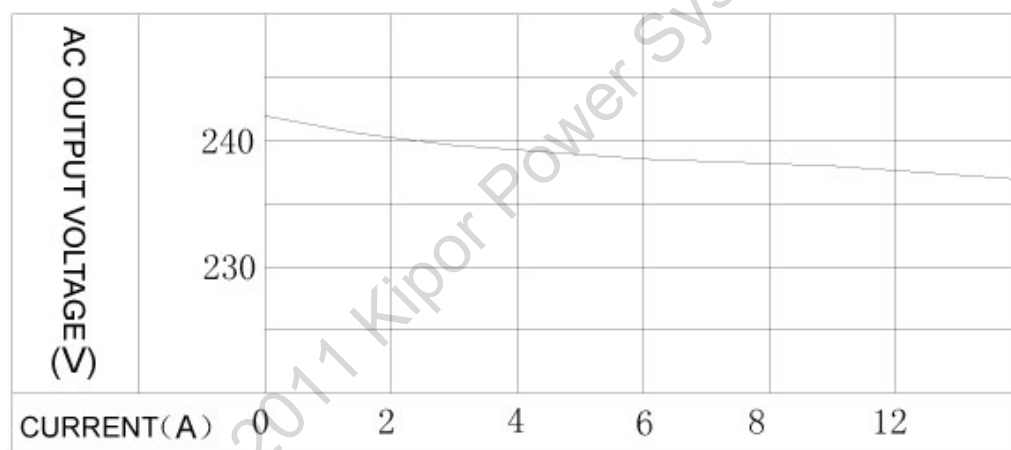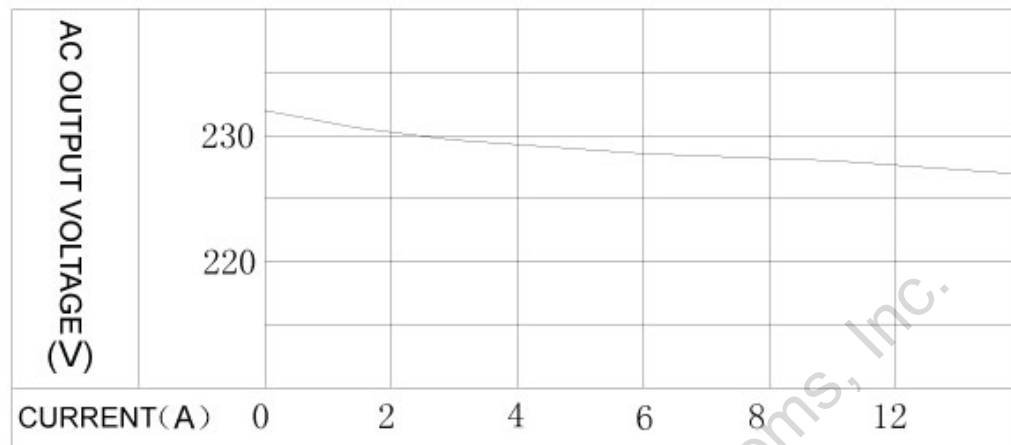

- DC External characteristic curves

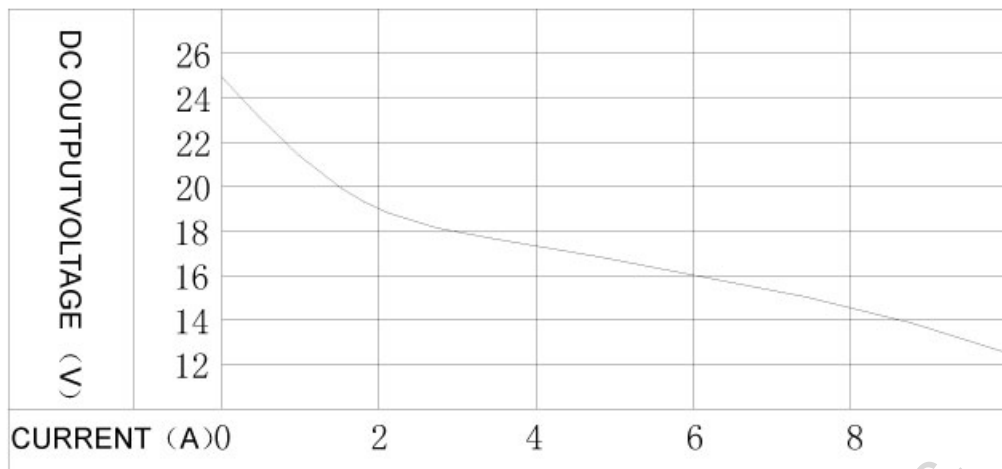


© 2011 Kipor Power Systems, Inc.


1.4 DIMENSIONAL DRAWING

UNIT: mm

a. IG2600

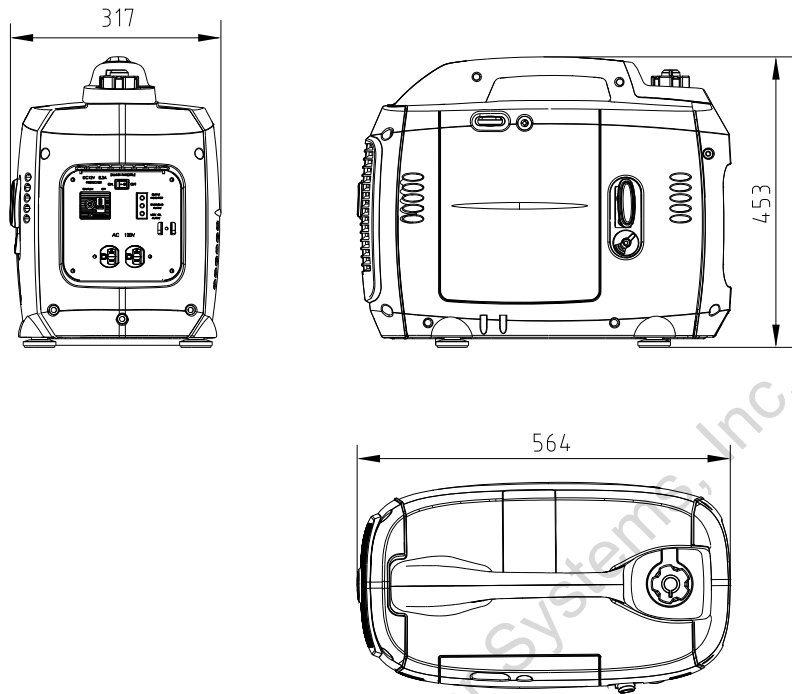


b. IG2600h

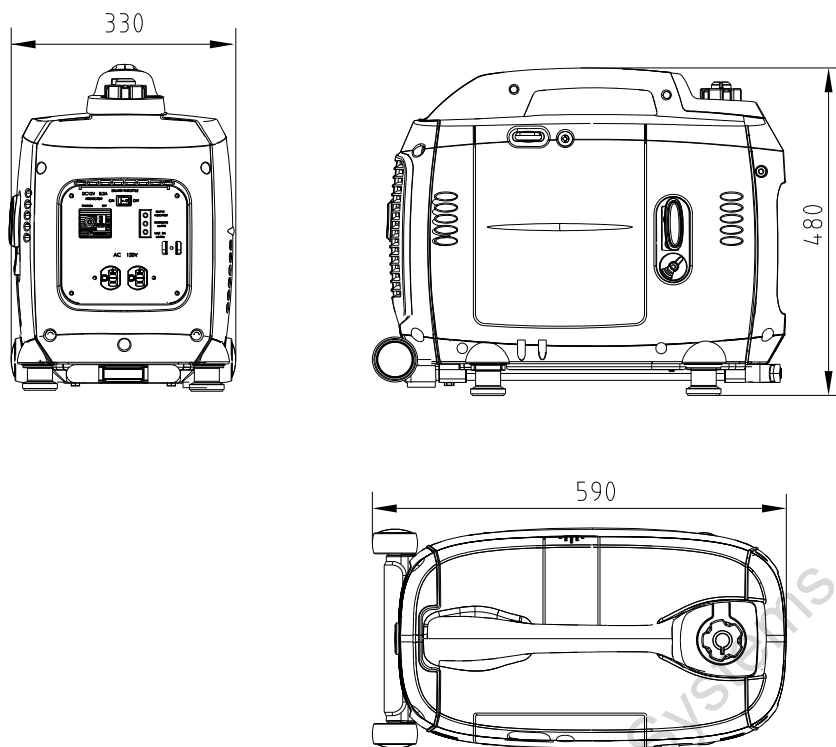


© 2017 Kipor Power Systems, Inc.

1.5 WIRING DIAGRAM IG2600

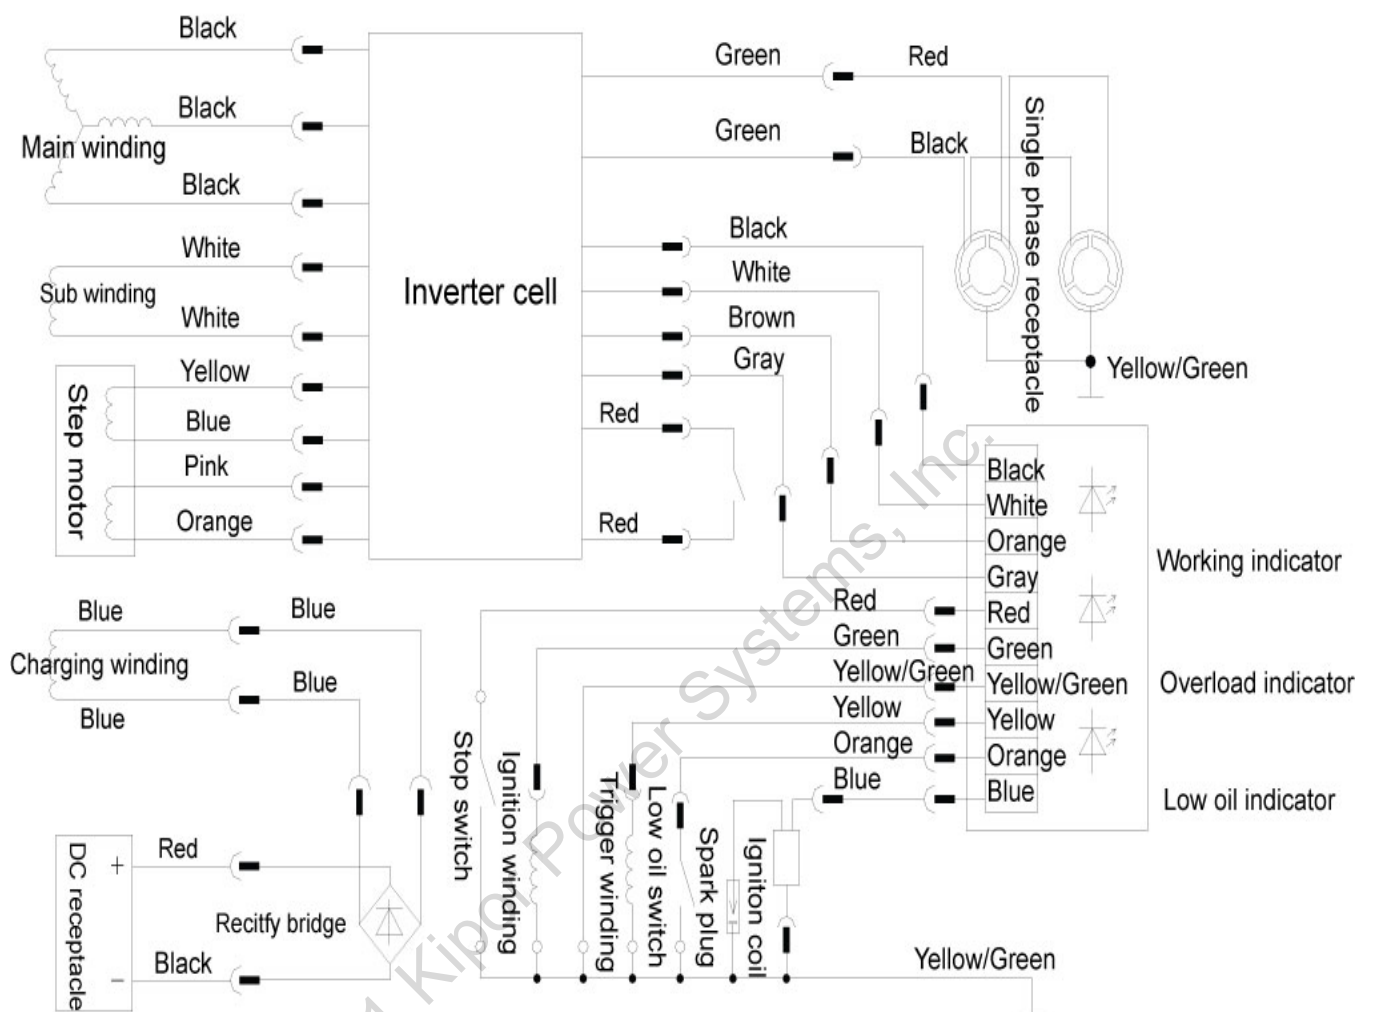

1.6 IG2600P

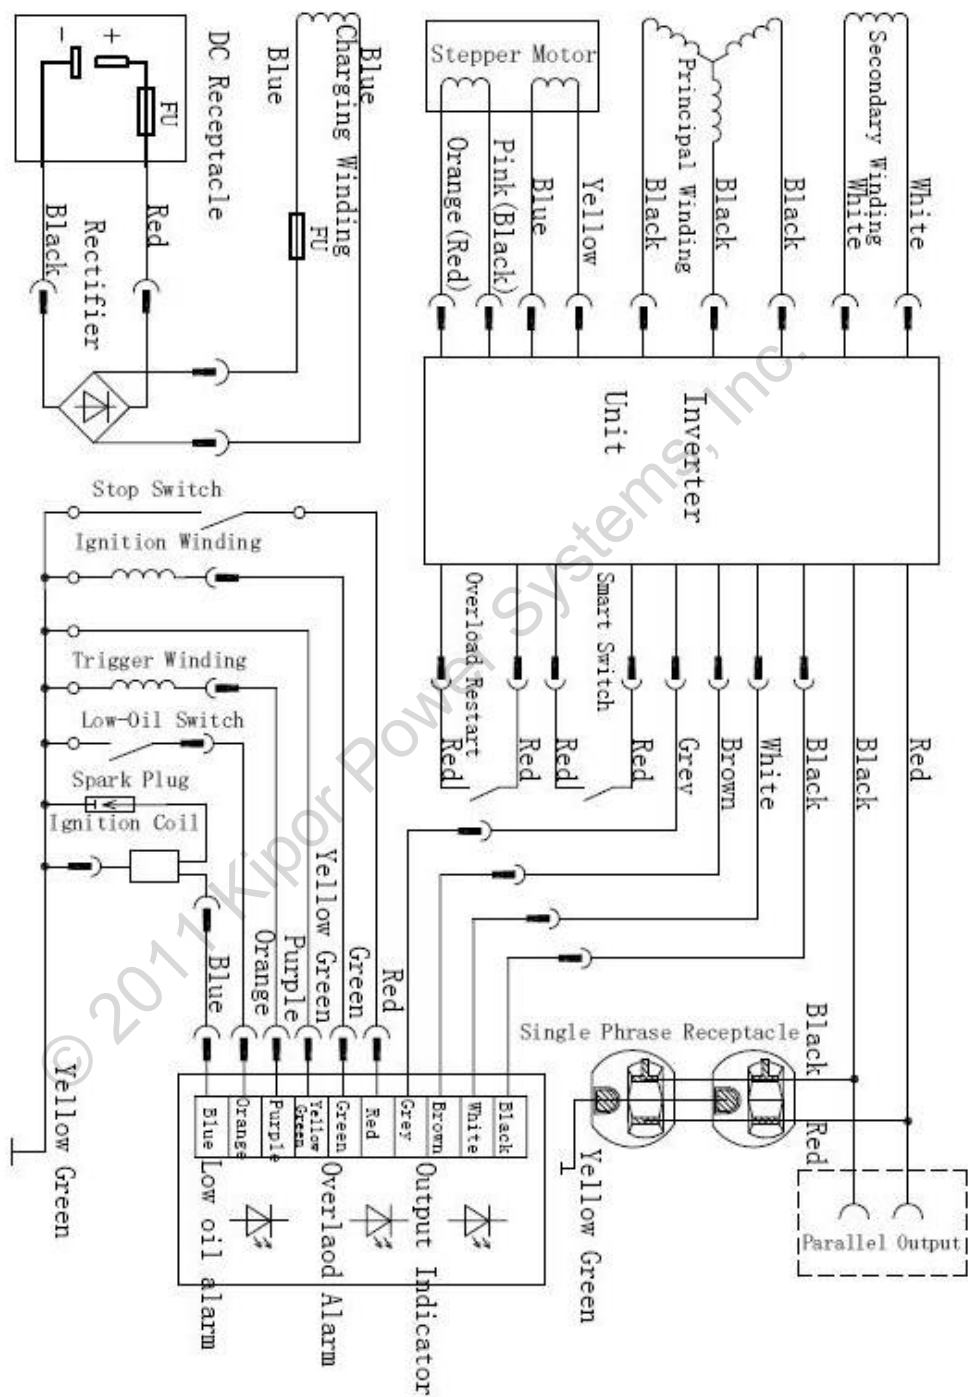

2. Service information

2.1 The importance of proper servicing

■ Proper servicing is essential to the safety of the operator and the reliability of the engine. Any error or oversight made by the technician while servicing can easily result in faulty operation, damage to the engine or injury to the operator.



■ Improper servicing can cause an unsafe condition that can lead to serious injury or death. Follow the procedures and precautions in this shop manual carefully.

■ Some of the most important precautions are given below. However, we cannot warn you of every conceivable hazard that can arise in performing maintenance or repairs. Only you can decide whether you should perform a given task.



■ Failure to follow maintenance instructions and precautions can cause you to be seriously hurt or killed. Follow the procedures and precautions in this shop manual carefully.

2.2 Important safety precautions

Be sure you have a clear understanding of all basic shop safety practices and that you are wearing appropriate clothing and safety equipment. When performing maintenance or repairs, be especially careful of the following:

■ Read the instructions before you begin, and be sure you have the tools and skills required to perform the tasks safely.

■ Be sure that the engine is off before you begin any maintenance or repairs. This will reduce the possibility of several hazards:

Be careful for carbon monoxide poisoning from engine exhaust.

Be sure there is adequate ventilation whenever you run the engine.

Be careful for burns from hot parts.

Let the engine cool before you touch it.

Be careful for injury from moving parts.

■ Do not run the engine unless the instruction tells you to do so. Even then, keep your hands, fingers, and clothing away.

■ To reduce the possibility of a fire or explosion, be sure when working around gasoline, use only a nonflammable solvent, not gasoline, to clean parts. Keep all cigarettes, sparks, and flames away from all fuel-related parts.

2.3 Service rules


1. Use genuine KIPOR or KIPOR-recommended parts and lubricants or their equivalents. Parts that do not meet Kipor's design specifications may damage the engine.
2. Use the special tools designed for the product.
3. Install new gaskets, O-rings, etc. when reassembling.
4. When torquing bolts or nuts, begin with larger-diameter or inner bolts first and tighten to the specified torque diagonally, unless a particular sequence is specified.
5. Clean parts in cleaning solvent upon disassembly. Lubricate any sliding surfaces before reassembly.
6. After reassembly, check all parts for proper installation and operation.
7. Many screws used in this machine are self-tapping. Be aware that cross-threading or over tightening these screws will strip the threads and ruin the hole.
8. Use only metric tools when servicing this engine. Metric bolts, nuts and screws are not interchangeable with non metric fasteners. The use of incorrect tools and fasteners may damage the engine.
9. Follow the instructions represented by these symbols when they are used.

2.4 Electric precautions

1. Hold the connector body to disconnect the connector. Do not disconnect by pulling the wire harness. To disconnect the locking connector, be sure to unlock first, and then disconnect.
2. Check the connector terminals for bend, excessive extrusion, missing terminal, or other abnormalities before connecting the connector.
3. To connect, insert the connector as full as it goes. If the connector is a locking type, be sure that it is locked securely.
4. Check the connector cover for breakage and check whether the connector female terminal is open excessively. Then, connect the connector securely. Check the connector terminal for rust. Remove the rust using an emery paper or equivalent material before connecting the connector.
5. Set the harness clips in the specified places of the frame securely, and clamp the wire harnesses.
6. Clamp the wire harnesses securely so that they do not interfere with the rotating parts, moving parts and the hot parts.
7. Route and connect the wire harnesses properly. Be sure that the harnesses are not slack, twisted or pulled taut.
8. Route the wire harnesses properly so that they do not contact with the shape edges and corners, and the end of the bolts and screws on the body.
9. If a wire harness contacts the end of the bolts/screws or sharp edges and corners, protect the contact part of the harness with a tube or by winding with an electrician's insulating tape. If the wire harness has a grommet, set the grommet securely.
10. Take care not to pinch the wire harnesses during installation of a part. If a wire harness has the damaged insulation, repair by winding with the electrician's insulating tape.
11. Read the tester manufacture's operation instructions carefully before operation with tester. Follow the instructions of the Service Manual. Be sure that the battery built in a tester is fully charged and check the meter before inspection using the tester.

2.4 Serial number location

The engine serial number is stamped at the underside of engine side cover. Refer to these numbers when ordering or making technical inquiries.

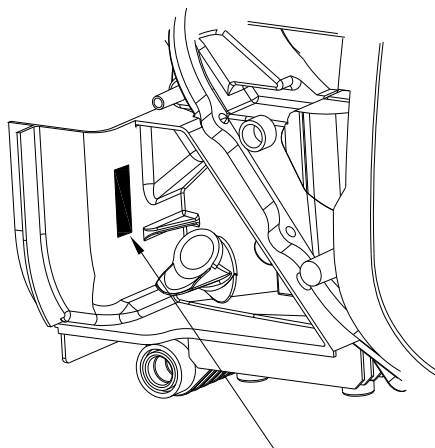

Serial number

© 2017 Kipor Power Systems, Inc.

2.5 Maintenance standards

Engine

Part	Item		Standard (mm)	Maintenance limiting
Engine	Maximum speed without load		3600±100 rpm	——
	Cylinder compression		0.45Mpa/800rpm	——
Cylinder	Sleeve I.D.		66.01~66.03	66.115
Piston	Piston Skirt O.D		65.96~65.98	65.85
	Piston Pin bore I.D.		13.002~13.008	13.05
Piston pin	O.D		12.994~13.000	12.95
Piston ring	First air ring	Height h	1.47~1.48	1.37
		Side gap	0.03~0.06	0.15
		Closed entry gap	0.20~0.30	1.0
		Thickness t	2.70~2.90	2.5
	Second air ring	Height h	1.47~1.48	1.37
		Side gap	0.03~0.06	0.15
		Closed entry gap	0.20~0.35	1.0
		Thickness t	2.70~2.90	2.5
	Oil ring	Height h	2.47~2.48	2.37
		Side gap	0.03~0.06	0.12
		Closed entry gap	0.15~0.30	1.0
		Thickness t	2.70~2.90	2.5
Connection rod	Small end I.D		13.006~13.014	13.077
	Big end I.D		26.020~26.033	26.09
Crankshaft	Crank pin O.D		25.967~25.980	25.9
Valve	Valve clearance	Intake	0.10±0.02	——
		Exhaust	0.15±0.02	——
	Stem O.D.	Intake	5.46~5.48	5.4
		Exhaust	5.45~5.47	5.4
	Guide I.D.	Intake/Exhaust	5.500~5.512	5.56
	Seat width	Intake/Exhaust	0.8~1.2	2.0
Valve spring	Free length	Intake/Exhaust	30.5	29
Cam wheel	Cam height		29.026~29.086	28.15
Camshaft	O.D		8.966~8.975	8.92
	Camshaft Bearing I.D		9.000~9.015	9.035
Rocker arm	Rocker arm I.D		6.000~6.012	6.05
	Rocker arm shaft O.D		5.972~5.98	5.91
	Rocker arm shaft I.D (bore)		6.000~6.012	6.05

Carburetor	Main jet		0.70	——
	Float height		16	——
	Indicator switch width		2 circle	——
Spark plug	Air gap.		0.6~0.7	——
Ignition coil	Resistance	Primary side	0.8~1.3Ω	——
		Second side	15~21KΩ	——
Pulse coil (Trigger)	Air gap.		0.5~0.75	——
	Resistance		80~130Ω	——

Alternator

Parts	Item	Type	Standard (Ω)
			120V
Ignition coil	Resistance	Green-YELLOW/GREEN	0.26~0.28
Outer charging winding	Resistance	Blue - Blue	0.12~0.15
Vice wining	Resistance	White - White	0.12~0.14
Main winding	Resistance	Black - Black	0.8~1.1

2.6 Torque Values

Fastening parts	Fastening parts specification	Fastening torque	
		N.m	Kgf.m
Connecting rod bolt	M7	14~16	1.4~1.6
Spark plug	M14×1.25×19	25~30	2.5~3.0
Valve gap adjuster nut	M5×0.5	6~9	0.6~0.9
Flywheel nut	M14×1.5	80~90	8.0~9.0
Standard torque	M5 bolt, nut	6~8	0.6~0.8
	M6 bolt, nut	8~10	0.8~1.0
	M8 bolt, nut	20~23	2.0~2.3
	M10 bolt, nut	55~60	5.5~6.0

Note:


Use standard torque values for fasteners that are not listed in this table.

3. TROUBLESHOOTING

3.1 General symptoms and possible causes

Engine does not start or hard starting	Fuel filter clogged	Clean
	Fuel tank tube clogged	Clean
	Fuel switch clogged	Clean
	Carburetor faulty	Clean or replace
	Ignition coil faulty	Inspect and replace
	Spark plug faulty	Inspect and replace
	Trigger faulty or trigger clearance faulty	Inspect and replace
	Spark plug cap loose.	Install securely
	Low oil alarm faulty	Inspect and replace
	Igniter faulty	Inspect and replace
	Ignition winding faulty	Inspect and replace
	Throttle opening fault	Set in fully closed or half closed position
Engine speed does not stabilize, too high or too low	Carburetor faulty	Clean or replace
	Throttle control motor (stepping motor) faulty	Inspect and replace
	Inverter unit faulty	Inspect and replace
	Valve clearance misadjusted	Readjust


3.2 Hard starting

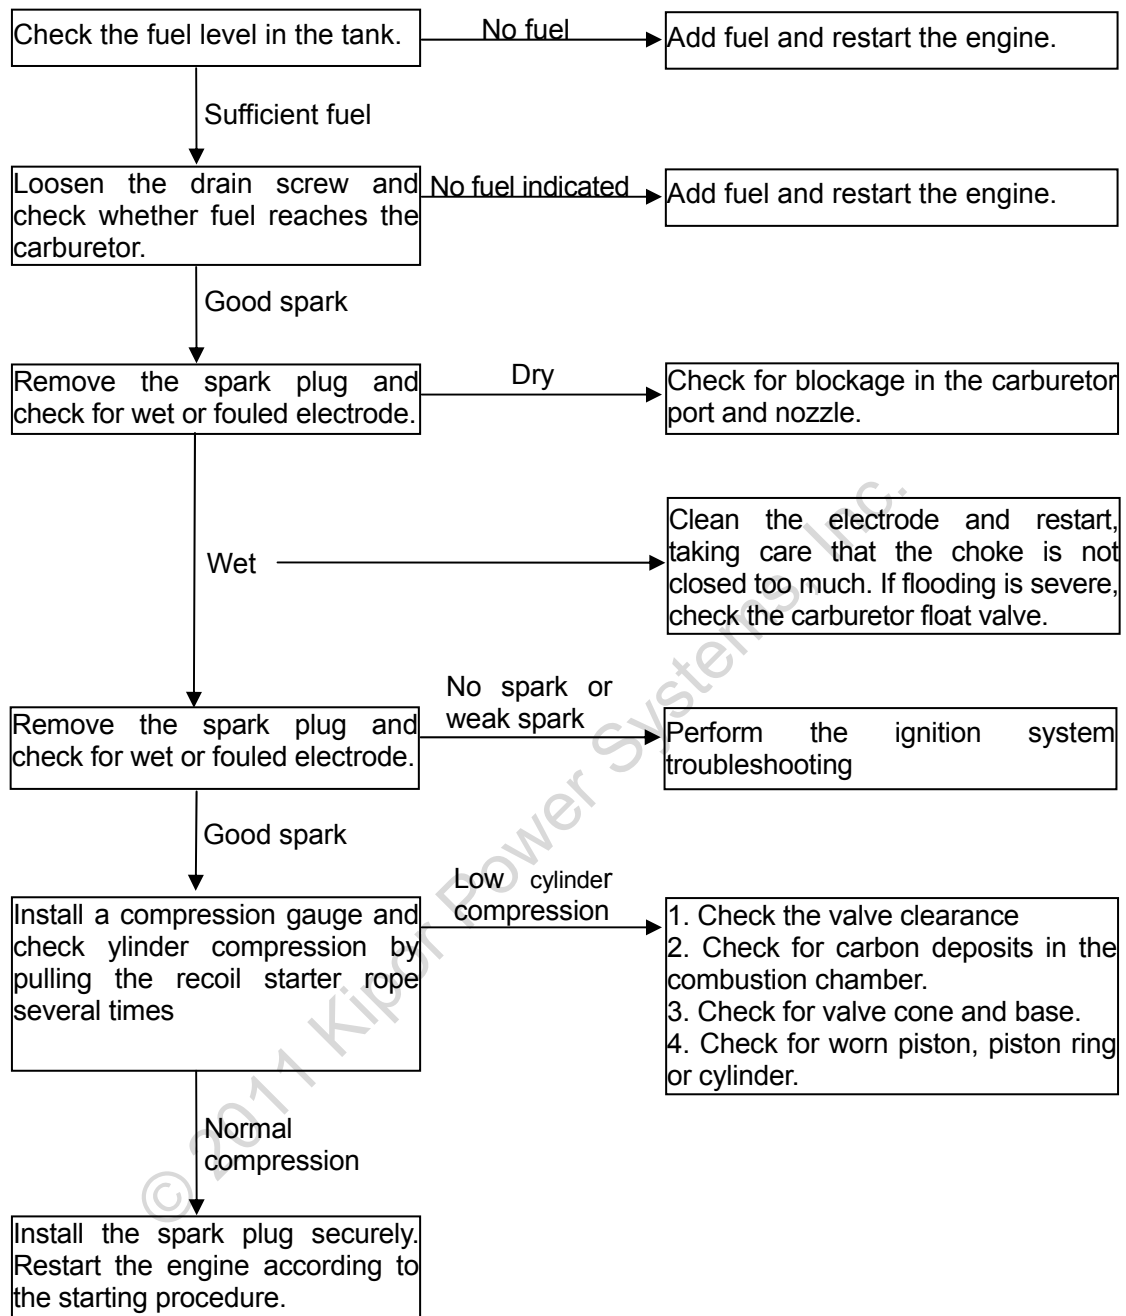

■ Cylinder compression check

1. Remove the spark plug cap and spark plug.
2. Install a compression gauge in the spark plug hole, pull the recoil starter rope several times with force and measure the cylinder compression.

Cylinder compression	0.45Mpa/800rpm
----------------------	----------------


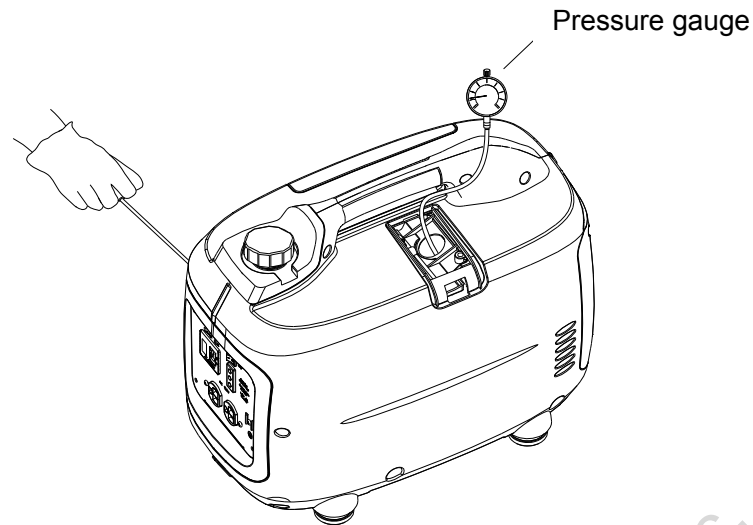


c. Ignition system


- Fill in oil to the demanded level.
- Use specified UR5 spark plug
- Spark plug inspection
 1. Disassemble spark plug
 2. Install spark plug onto spark plug cap.
 3. Set the oil switch to the "ON" position. Ground the negative (—) electrode (i.e. threaded part) of the spark plug against the shroud and pull the recoil starter rope to check the spark plug. You should see a clear spark.




- Don't pull the recoil starter while touching the high tension wire with wet hands. High voltage is generated and very dangerous.
- Drain the gasoline from the fuel tank and carburetor.
- Pull the recoil starter several times to release the unburned gas in the cylinder with the engine switch OFF.

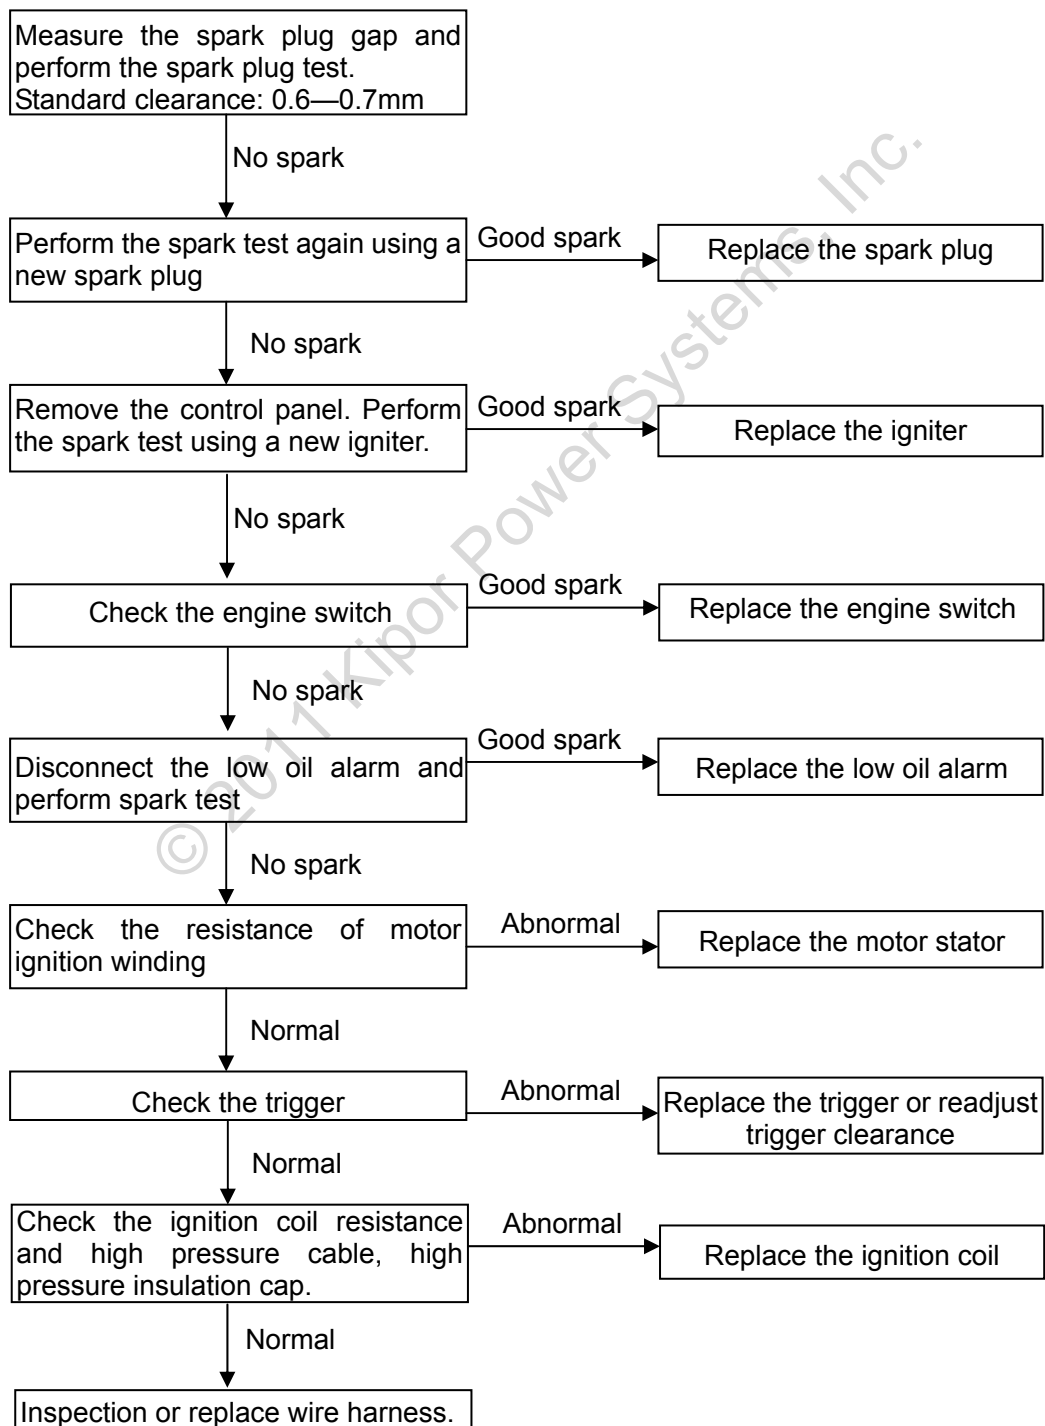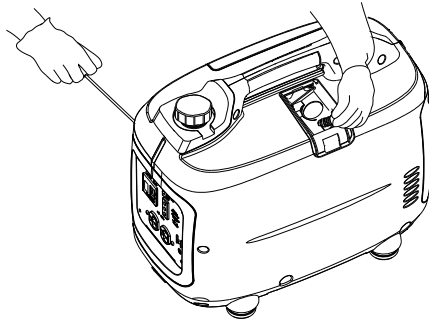


3.3 Engine oil level is low, but engine does not stop. (Defective oil alarm device)

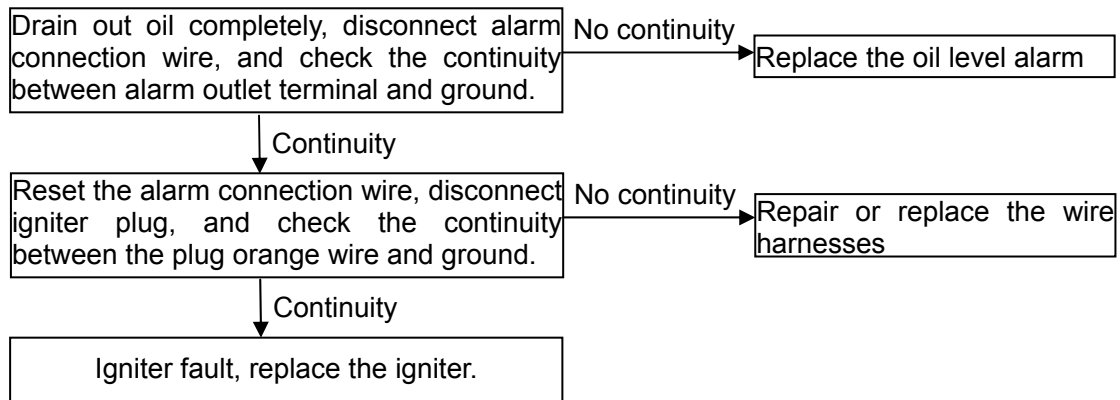

3.4 Engine stops running (Throttle is at the correct position)

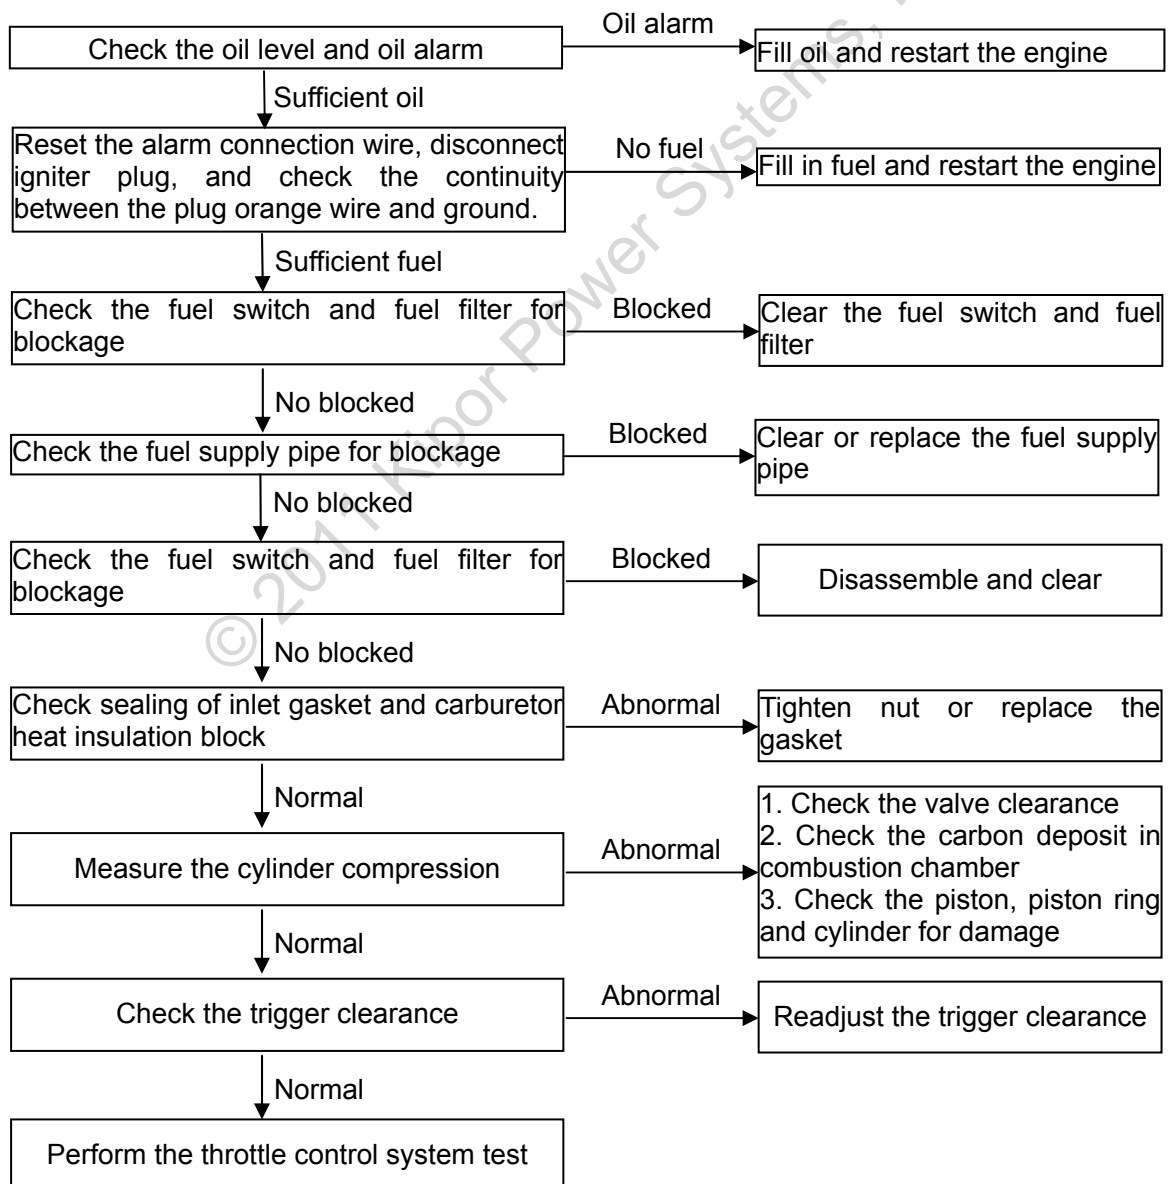


3.5 Engine speed can't increase or unstable (choke is at the correct position)

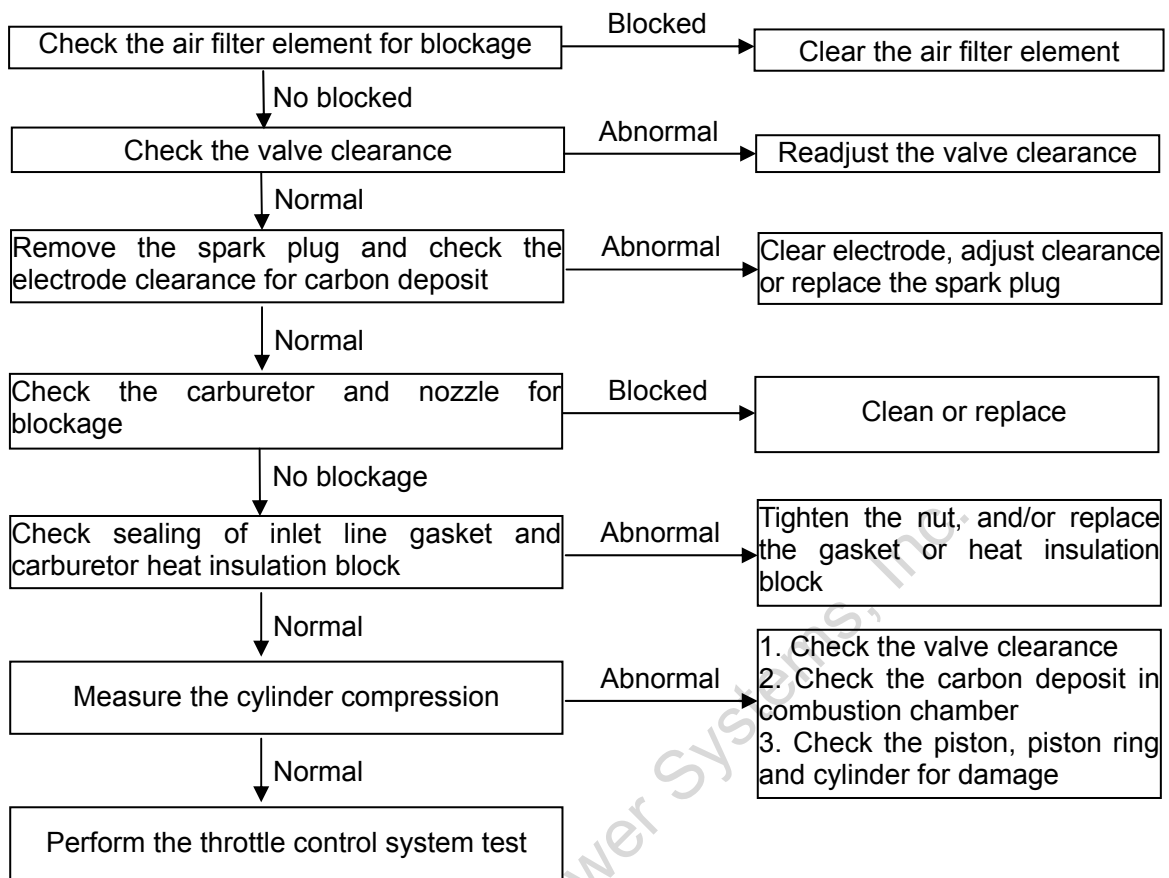


3.6 Throttle control system test


1. Engine speed too high or too low

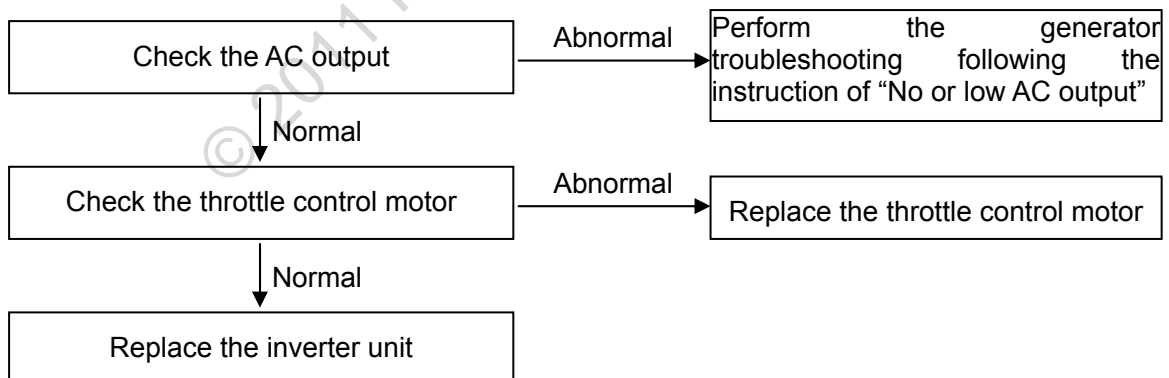


3.7 Smart throttle doesn't work with zero load, engine speed doesn't increase with smart throttle on and load connected.

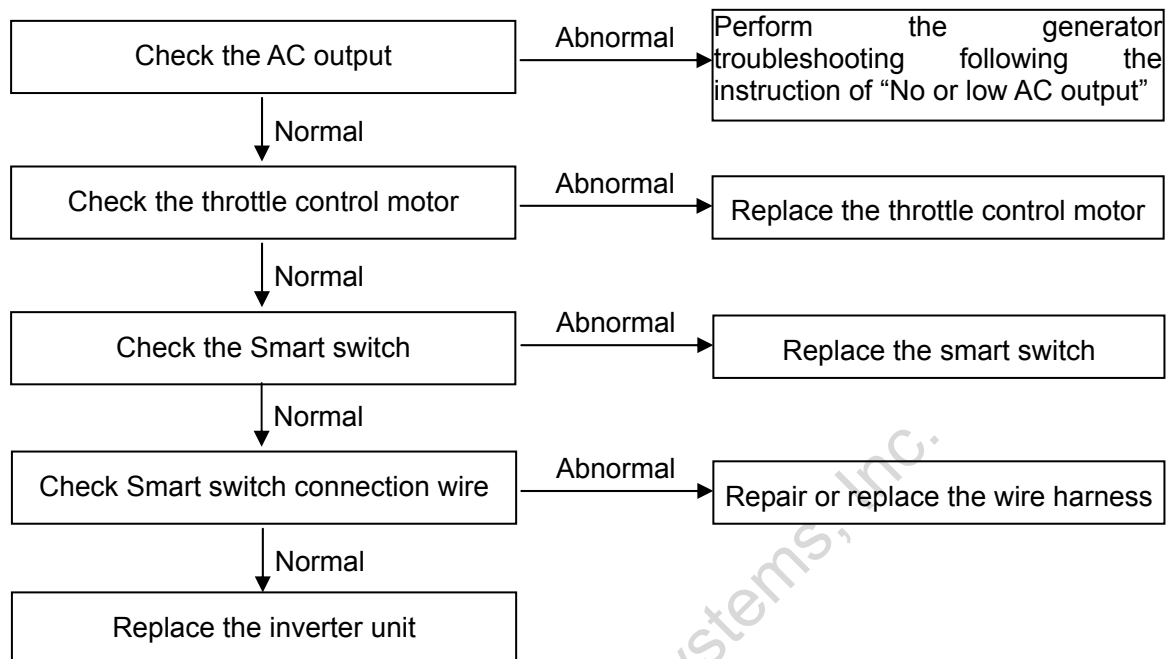

3.8 No or low AC output

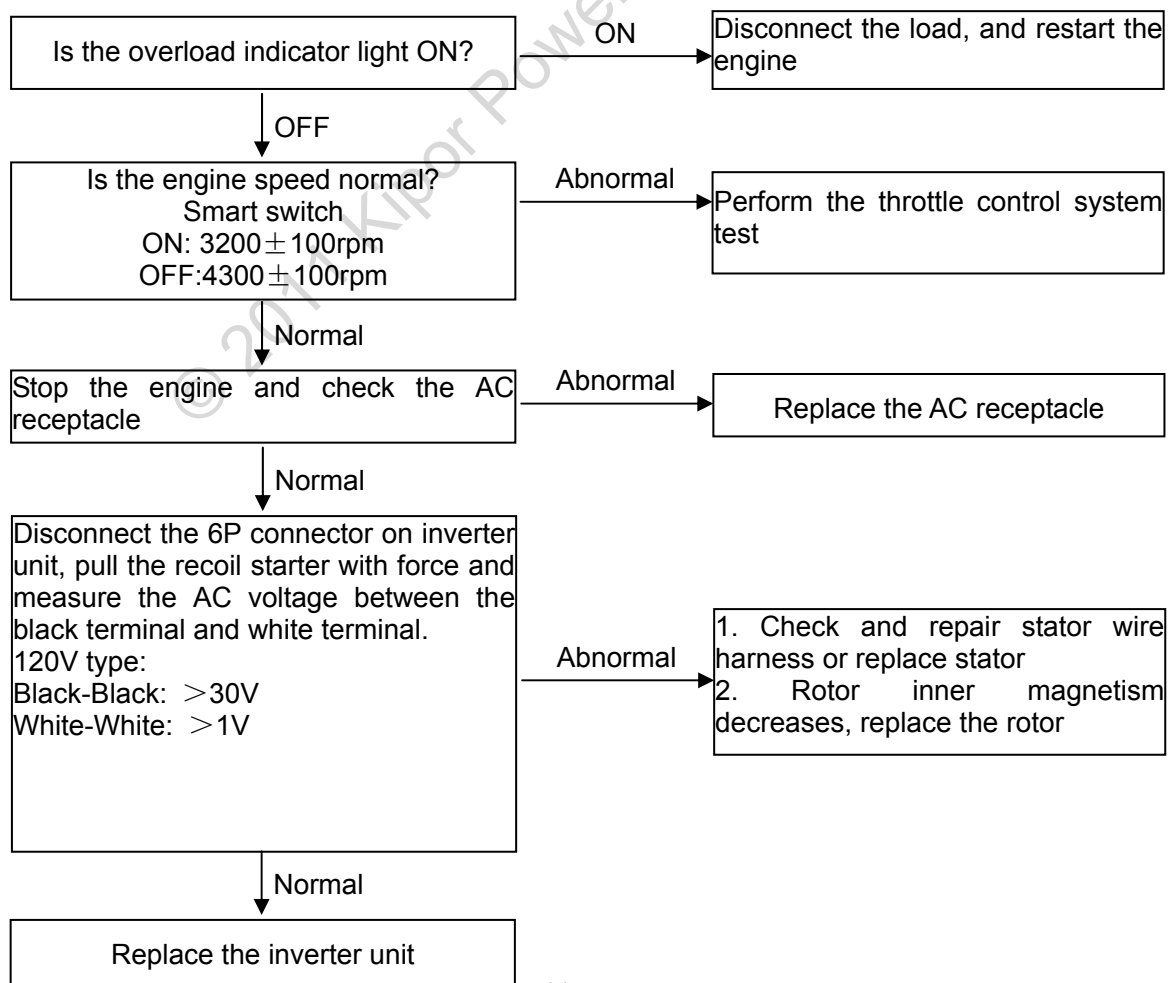


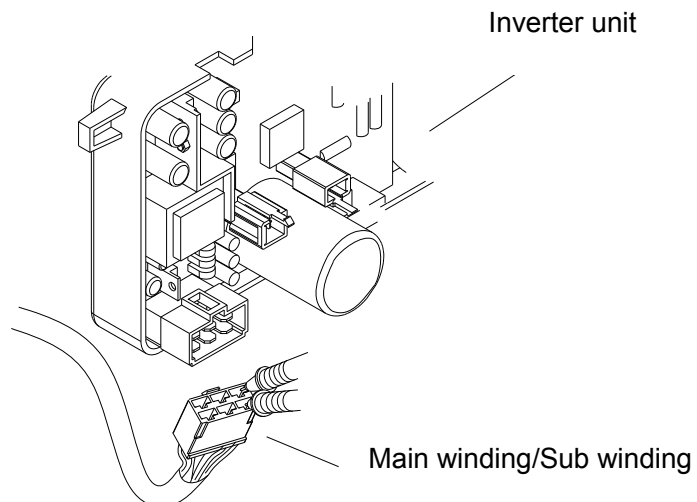


Measure voltage

Model Item	Phase wire color: Black-Black-Black Sub winding color: White-White	
	120V	240V
Voltage between phase wires	>30V	>60V
Sub winding voltage	>1V	

Phase sequence arrangement

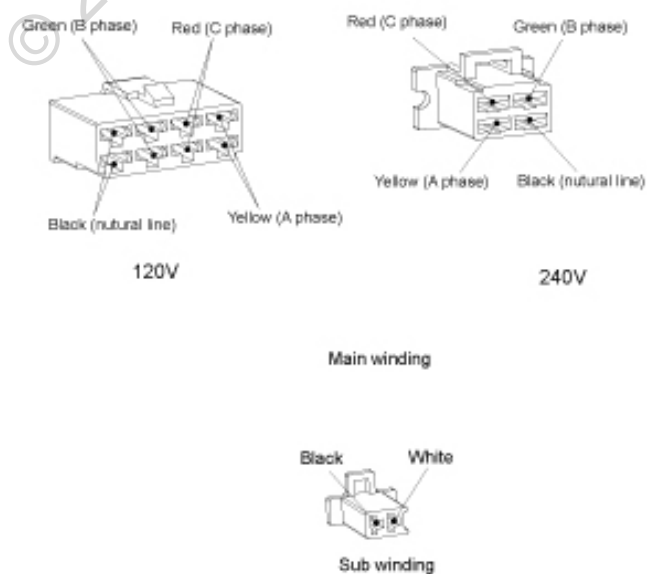


3.9 No DC output

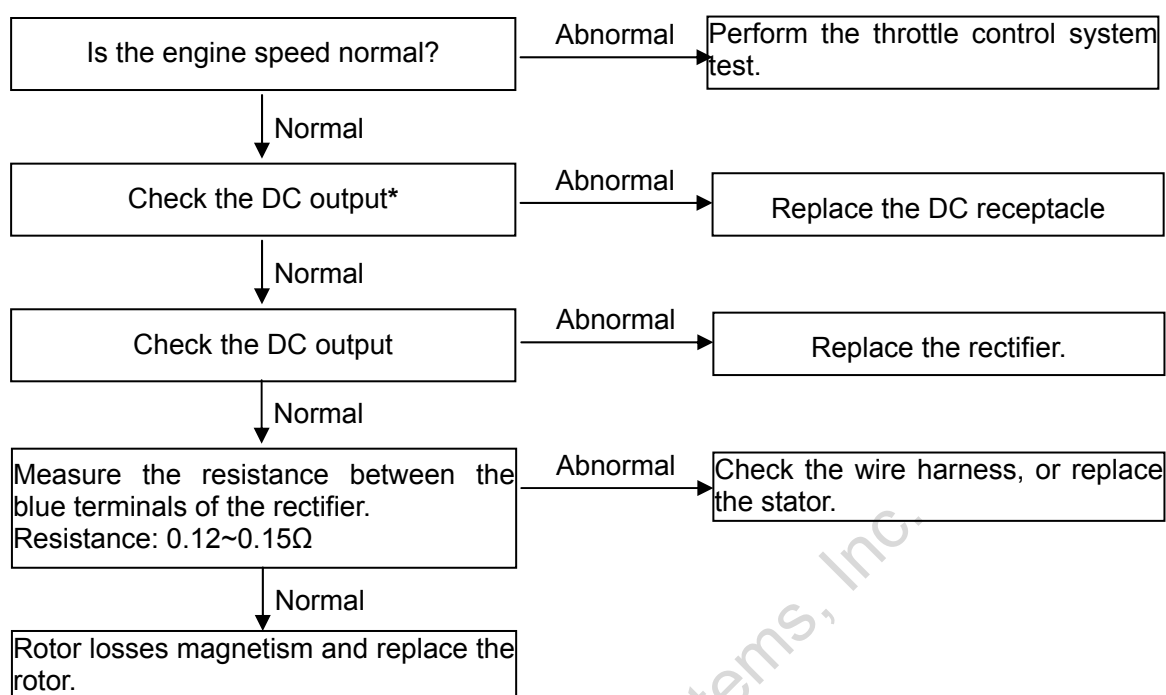

*later models have a fuse in the receptacle. Check the fuse before replacing the receptacle.


3.10 No Parallel Output (prior to 2011 model year)

■ Make sure that the parallel output cables are inserted into the parallel cable connectors on the control panel..



Warning

- Use only KIPOR parallel output cables.
- Use only the KIPOR parallel output box.
- Don't use any control panel receptacles when running in parallel..
- Don't disconnect the parallel cables while either generator is operating.

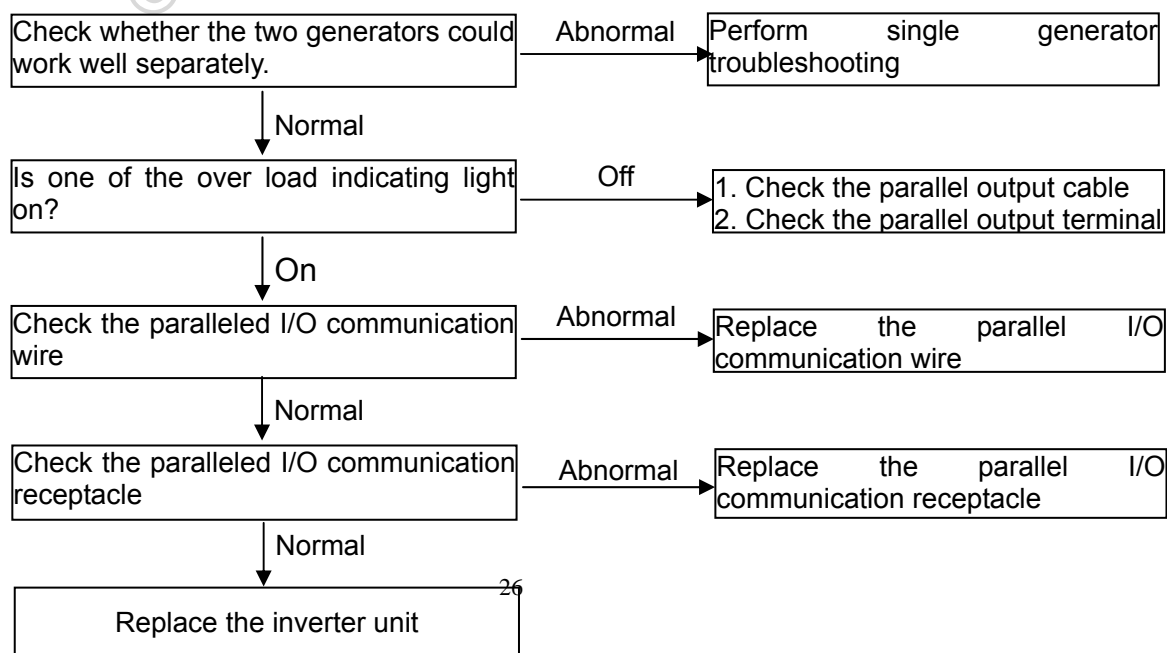



4. Maintenance

4.1 Maintenance Schedule

Regular service period(1)		Each use	First month or 20 Hrs.	Every 3 months or 50Hrs.	Every 6 months or 100 Hrs.	Every year or 300 Hrs.
Item perform at every indicated month or operating hour interval, whichever comes first						
Engine Oil	Check	●				
	Replace		●		●	
Air filter	Check	●				
	Clean			●②		
Spark plug	Clean-Adjust				●	
Spark catcher	Clean-Adjust				●	
Valve clearance	Check-Adjust					●③
Fuel tank and filter element	Clean					●③
Fuel line	Check	Every 2 year (Replace if necessary)				

Note:

(1) For commercial use, operation hours are determined by proper maintenance.

(2) Service more frequently when operating in dusty areas, every 10 hrs or every day.


(3) Service by KIPOR authorized agency, unless correct tools or professional specialist is available. Do service according to the manual.

4.2 Engine oil

■ Checking the oil level

Stop the engine and check the oil level. Be sure to have the generator on a level surface.

1. Loosen the screws of the maintenance cover and remove the cover.
2. Remove the oil filler cap and check the oil level.

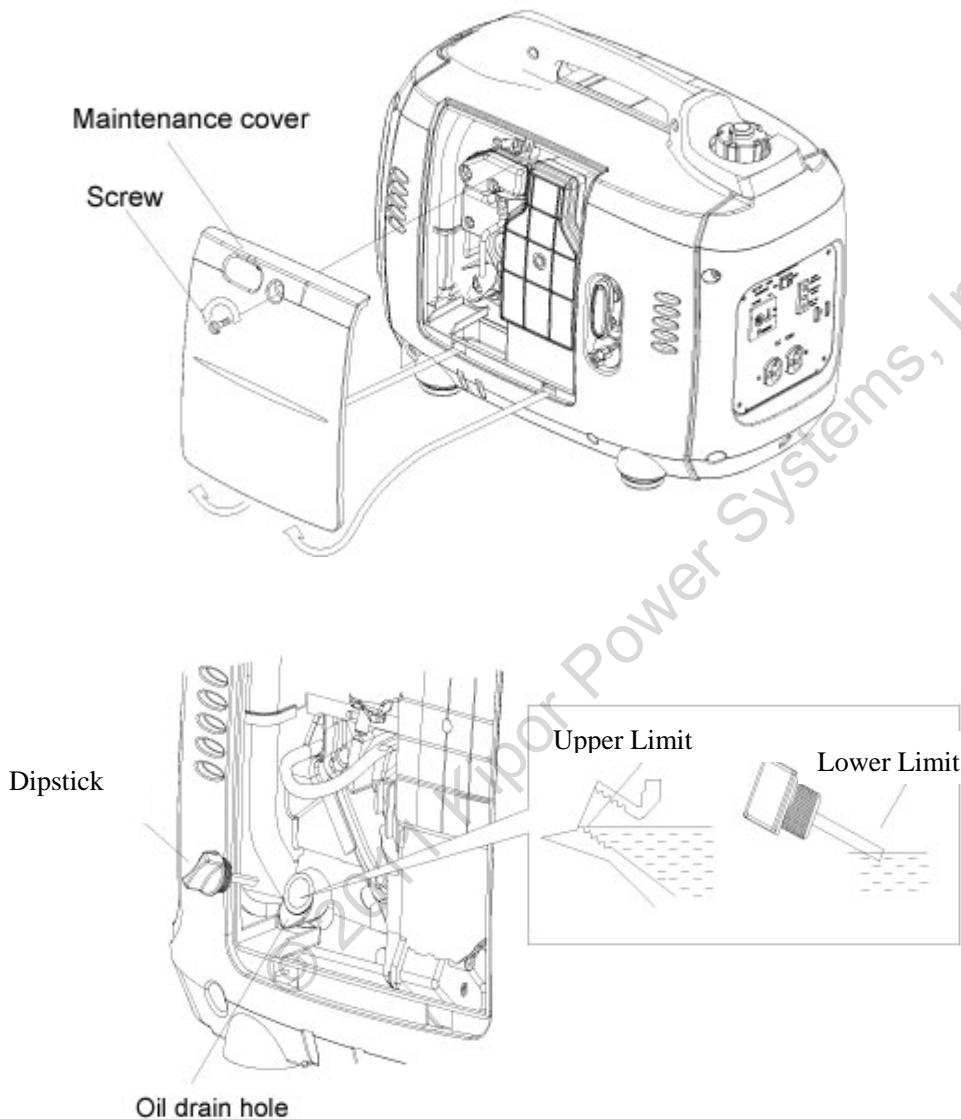

3. If the oil level is low, add to the edge of the oil filler port.

■ Replace the engine oil

1. Disassemble the oil dipstick and oil drain bolt, drain out dirty oil.
2. Fix the oil drain bolt tightly.
3. Refill in clean oil. (Oil capacity is 0.4L)


※ Recommended oil: SAE10W-30 or SAE30; API Service Classification SE, SF or SG. SAG5W-30 or API Service Classification SF or SG for cold area.

4. Check the oil level; fill to the upper limitation level if necessary.

5. Tighten the oil dipstick.


■ Please dispose of the used motor oil in a manner that is compatible with the environment. We suggest you take used oil in a sealed container to your local recycling center or service station for reclamation. Do not throw it in the trash; pour it on the ground, or down a drain.

■ Drain the used oil while the engine is warm. Warm oil drains quickly and completely.

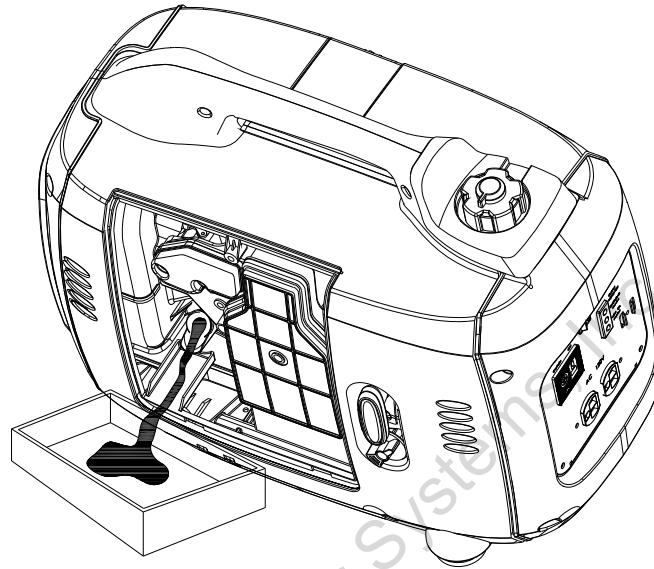


4.3 Checking the low oil alarm

1. Disconnect oil alarm connector when the engine is still running, connect the two plugs, be sure that oil alarm lights and engine stops.

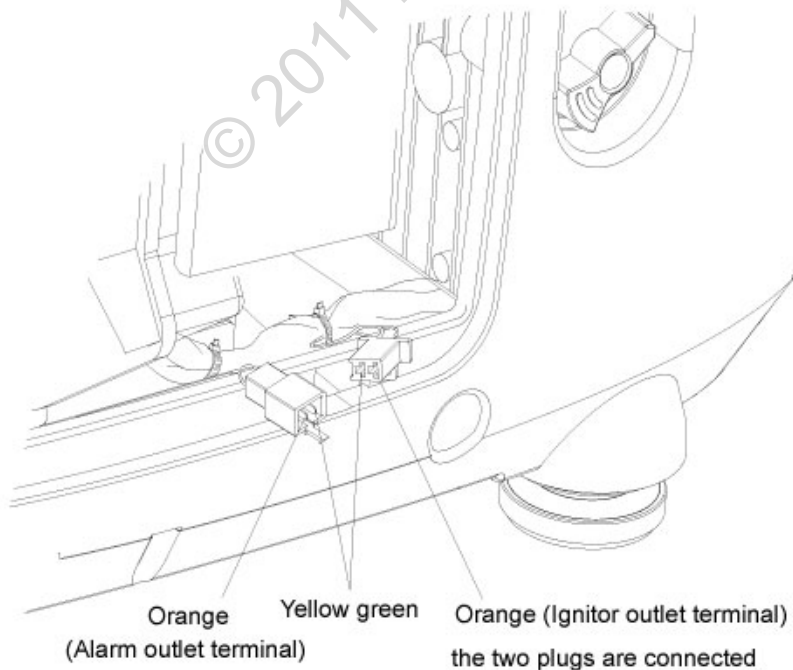


2. Stop engine, disconnect oil alarm connector, check the connector continuity; no continuity is normal.

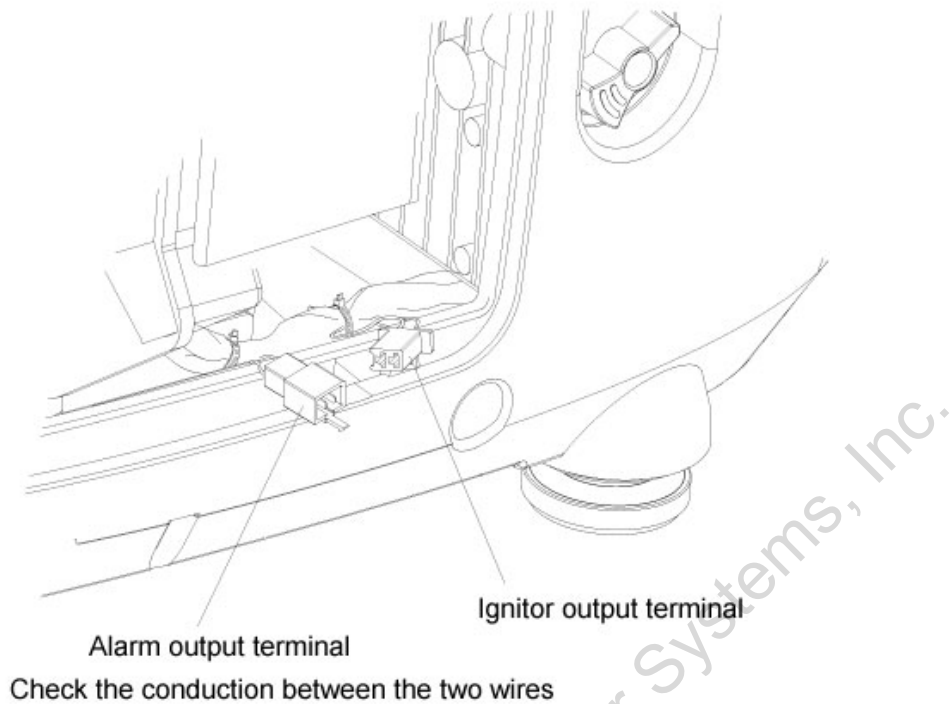

3. Drain the engine oil and check for continuity. Continuity is normal.

4.4 Air cleaner service

- 1) Loosen the cover screw and remove the maintenance cover.
- 2) Disengage the locking tab by pushing and removing the air cleaner cover.
- 3) Remove the element from the air cleaner case.
- 4) Clean the element in warm soapy water, rinse and allow to dry thoroughly, or clean with solvent and allow to dry.
- 5) Dip the element in clean engine oil and squeeze out all the excess oil. Excess oil will restrict air flow through the foam element and may smoke at the engine start.
- 6) Install the air cleaner element in the air cleaner case.
- 7) Clean the air cleaner seal and the air cleaner case if necessary. Be sure the air cleaner cover seals are seated securely.
- 8) Install the air cleaner cover. Be sure that the air cleaner cover seals are set securely.
- 9) Install the maintenance cover securely.

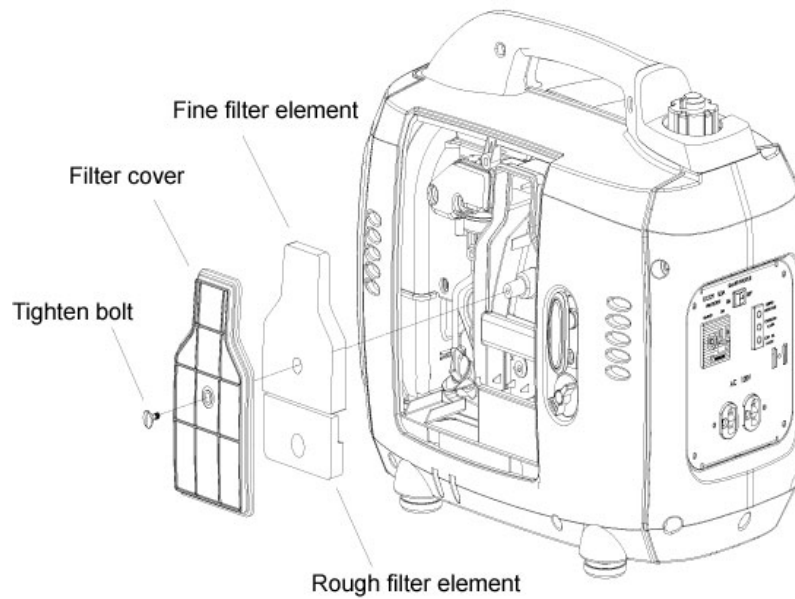


Wash

Dry

Dip in engine oil

Squeeze firmly

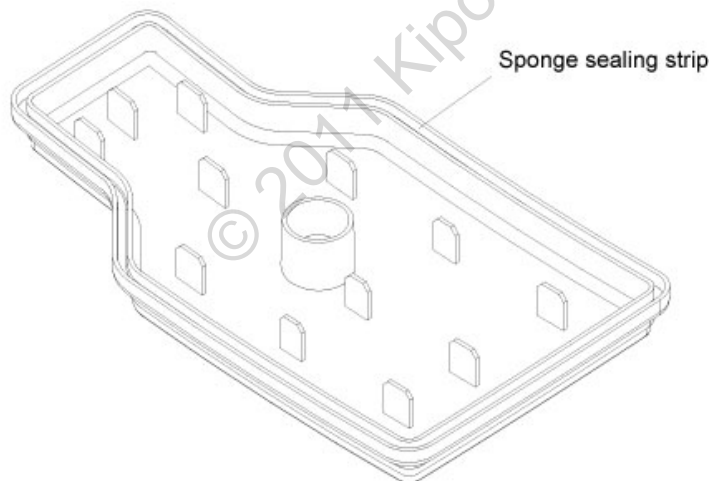


Caution

- A dirty air cleaner will restrict air flow to the carburetor, reducing engine performance. If the engine is operated in dusty areas, clean the air cleaner more often than specified in the Maintenance Schedule.
- Never run the engine with a damaged or missing air cleaner.

4.5 Spark plug


Inspection/Cleaning:

- 1) Remove the spark plug cap and remove the spark plug.
- 2) Remove carbon or other deposits with a plug cleaner or stiff wire brush. Check the sealing washer for damage.

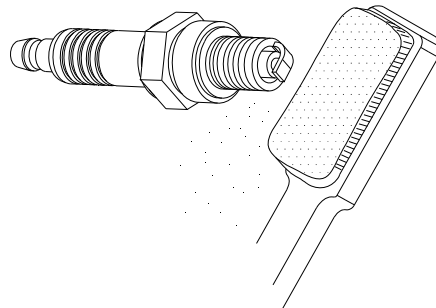


- 3) Measure the plug resistance; replace the spark plug if the measure is not accord with the asked value.

Spark plug resistance	3~9K Ω
-----------------------	---------------

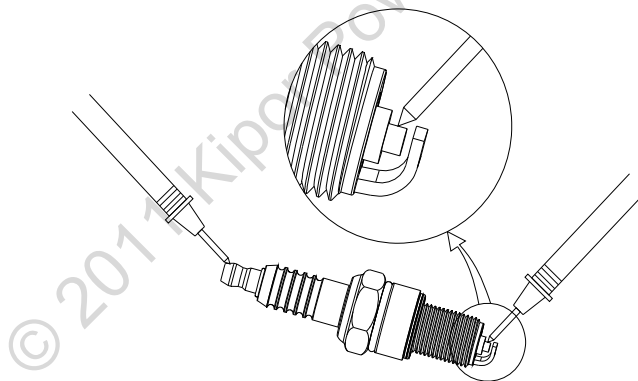

- 4) Measure the plug gap with a wire-type feeler gauge. Adjust by bending the side electrode if the outside the specification.

Spark plug clearance	0.6~0.7mm
Standard spark plug	A7RTC

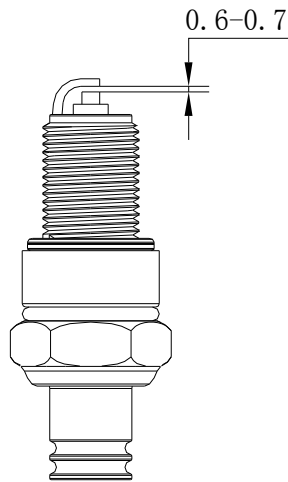

- 5). Install the plug finger tight to seat the washer and then tighten with a plug wrench.
Torque valve is 25~30 N.m

© 2017 Kipor Power Systems, Inc.

4.6 Valve clearance


Caution

■ Valve clearance inspection and adjustment must be performed with the engine cold.

1) Remove the following parts:


- Front cover, control panel
- Rear cover
- Right/left side covers
- Fuel tank
- Inverter unit
- Recoil starter, fan cover
- Inlet/Exhaust side baffle

2) Remove the four tighten bolts and disassemble the cylinder cover. Don't remove the cylinder cover with excessive force. It can deform the cylinder cover. Replace the cylinder cover if it is deformed.

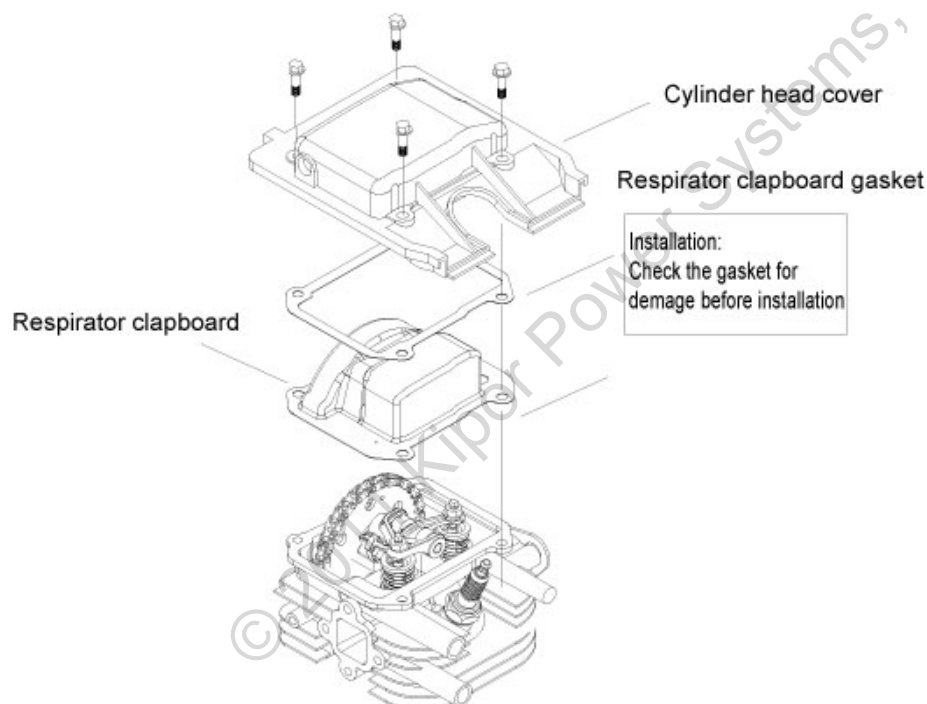

3) Turn the rotor to set the piston at top dead center of the compression stroke.

Timing line of camshaft driving chain should align with the cylinder head seal. Insure the intake and exhaust valve are closed.

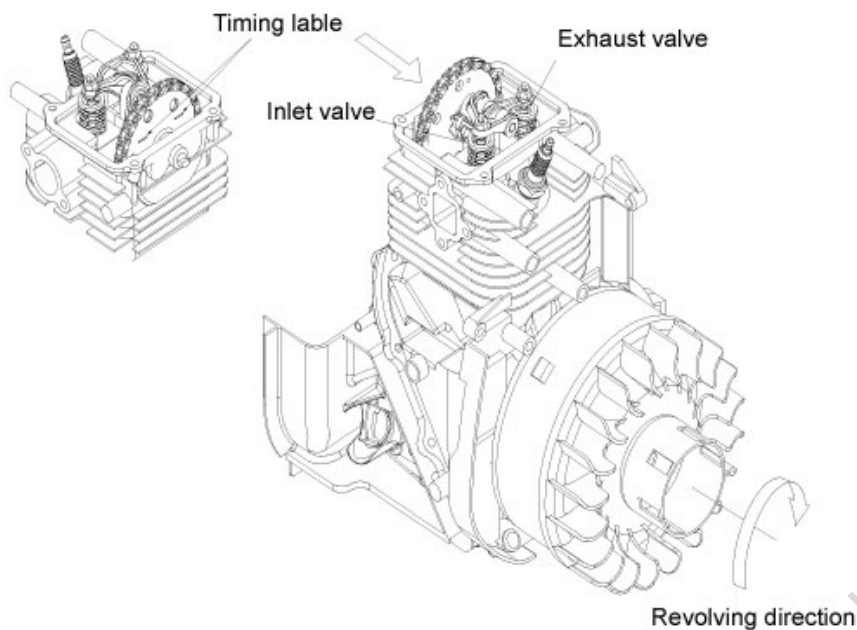

Caution


■ If the intake valve is open, turn the rotor again to align the timing line with the cylinder head seal and both the valves should be closed.

4) Insert a feeler gauge between the rocker arm and the valve and measure the valve clearance.


Valve clearance	IN	$0.10 \pm 0.02\text{mm}$
	EX	$0.15 \pm 0.02\text{mm}$

5) If adjustment is necessary, proceed as follows:

- Loosen the adjusting screw lock nut and adjust the valve clearance by turning the adjusting screw in or out.
- Secure the adjusting screw with a socket wrench and tighten the lock nut to the specified torque.
- After tightening the lock nut, check the valve clearance again.

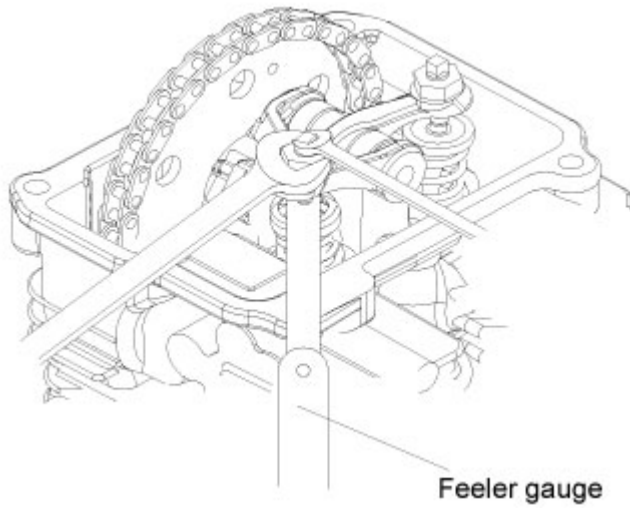

- 6) Clean the liquid gasket of the cylinder block and cylinder head cover. Apply the liquid gasket (Three Bond 1207B or equivalent) to the cylinder block installation surface as shown.

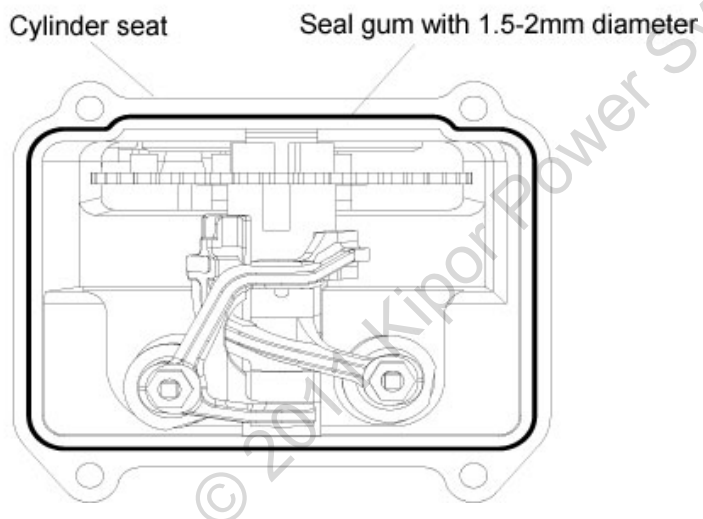

- 7) Install the parts in the reverse order of removal.

4.7 Fuel tank/Fuel filter

Caution

■ Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel. Keep heat, sparks, and flame away. Wipe up spills immediately.

1) Drain the fuel from the tank and carburetor, and then remove the following parts.

—Rear cover

—Front cover and control panel

—Right/Left side cover

2) Disconnect the fuel tube from the fuel tank, and remove the fuel filter.


3) Remove the clogged foreign material from the fuel filter, and check the fuel filter for damage. Replace the fuel filter if necessary.

4) Remove the fuel tank and clean it with cleaning solvent and allow the fuel tank to dry thoroughly.

5) After cleaning, install the fuel tank and set the fuel filter in the tank. Connect the fuel tube.

6) Install the removed parts in the reverse order of removal.

7) Fill the fuel tank with gasoline and check the fuel tube for gasoline leakage.

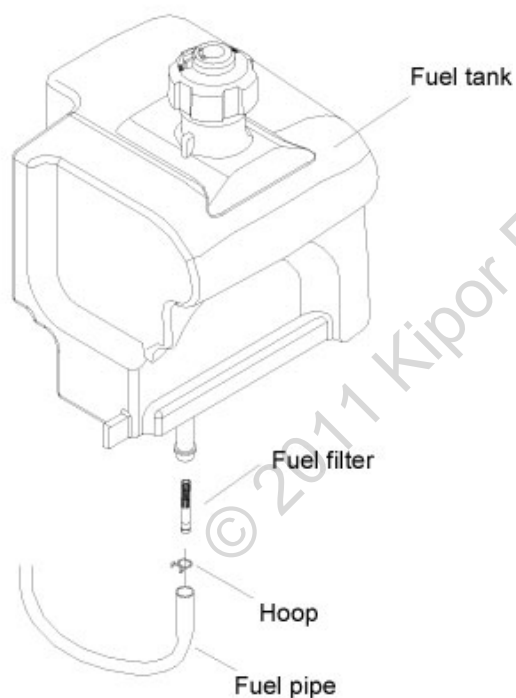

4.8 Fuel tube/ Fuel pump

Caution

■ Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel. Keep heat, sparks, and flame away. Wipe up spills immediately.

1) Drain the fuel from the tank and carburetor, and then remove the following parts.

—Rear cover

—Front cover and control panel

—Right/Left side cover

2) Check the fuel tube for deterioration, cracks and gasoline leakage. If there is any abnormality in the fuel tube, replace the tube.


3) Check the diaphragm tube for deterioration, crack and oil leakage. If there is any abnormality in the diaphragm tube, replace the tube.

4) Check to see whether water or foreign material has been accumulated in the fuel pump.

If there is water or foreign material accumulated in the pump, replace the fuel pump.

5) Check the fuel switch and fuel duct, blow away the foreign matter with high pressure gas with oil switch turned on.

6) After assembly, check for gasoline leakage from each part.

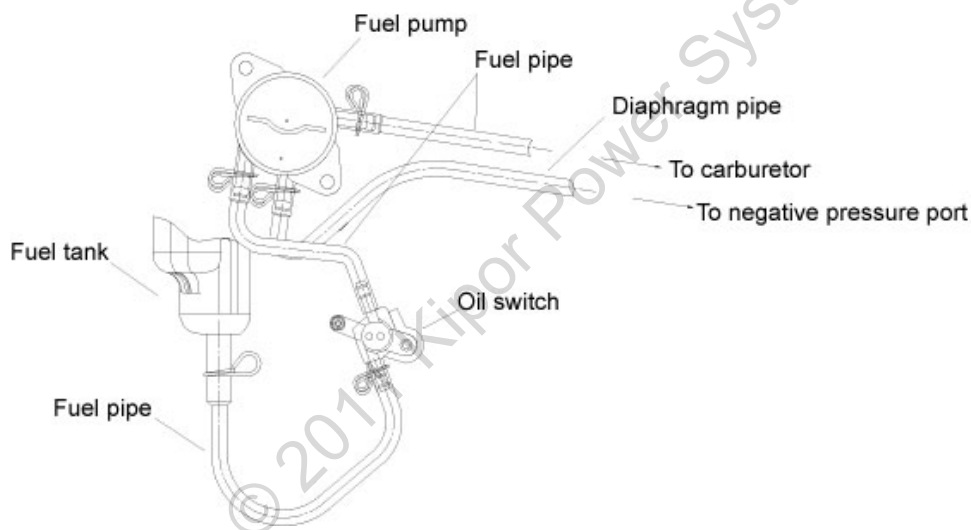


4.9 Spark arrestor

Caution

■ Perform maintenance on a cool engine.

- (1) Remove the rear cover
- (2) Disassemble the spark arrestor from muffler
- (3) Remove the carbon from the spark catcher steel mesh, check for damage and replace if necessary.
- (4) Install the removed parts in the reverse order of removal.

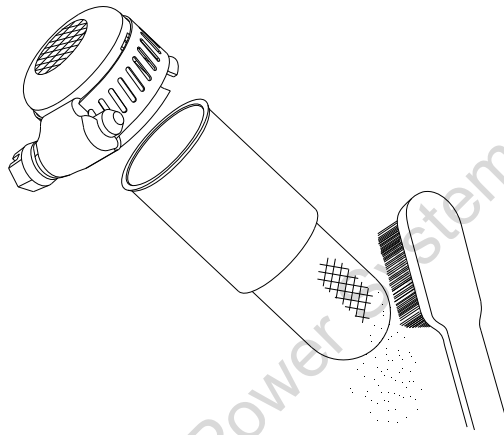


5. Muffler

Caution

5.1 Muffler


- Muffler removal/installation must be performed with the engine cold.

- Disassembly/Reassembly

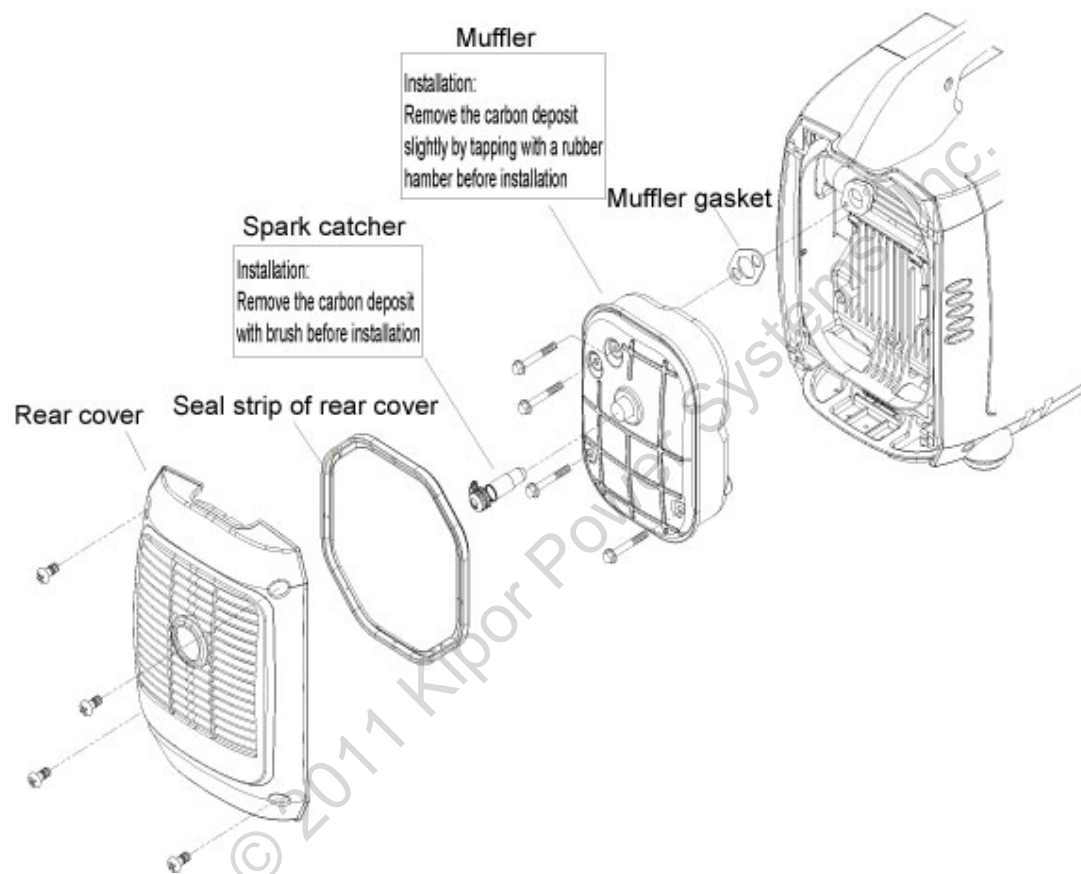

5.2 Exhaust tube, secondary air injection valve

● Disassembly/Reassembly

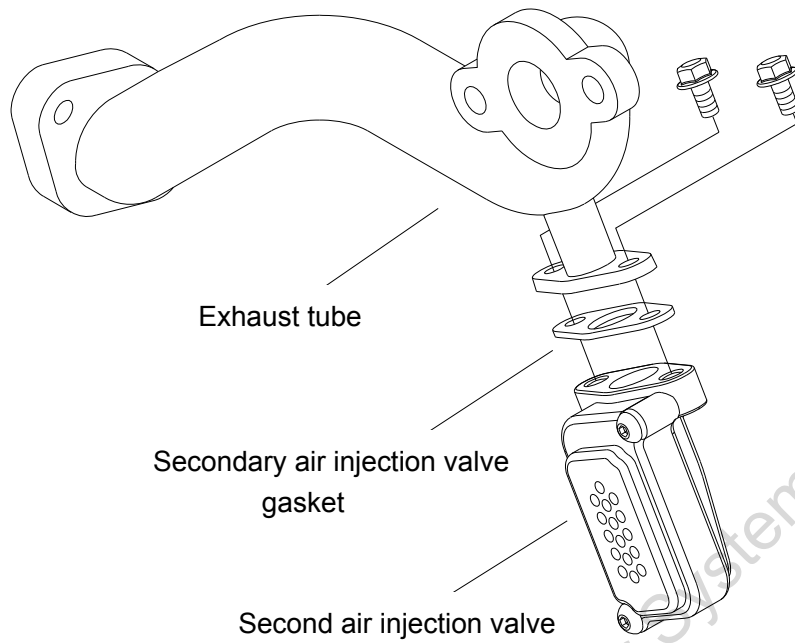


6. Intake System


Caution

- Loosen the drain bolt and drain out fuel before disassembly.
- Keep heat, flame and sparks away.


6.1 Disassembly/Installation of Air filter

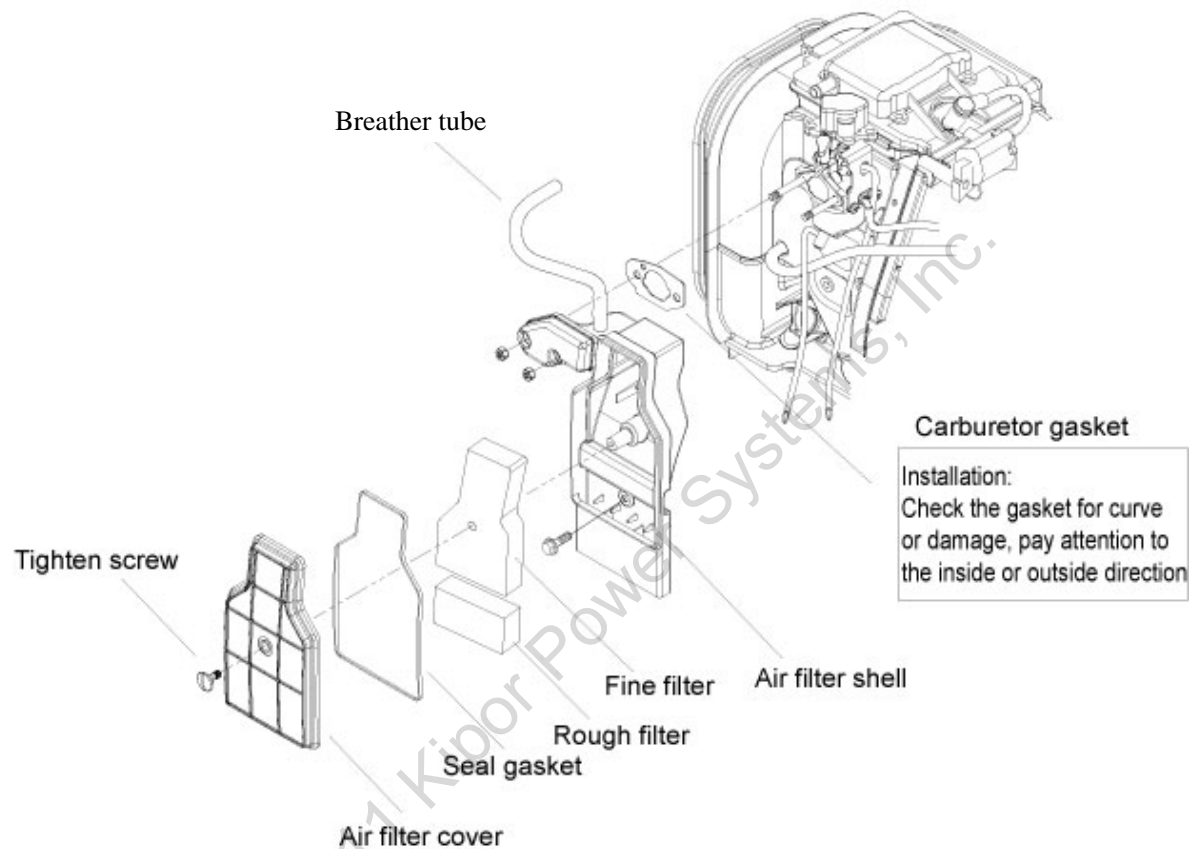


6.2 Disassembly/Installation of Carburetor

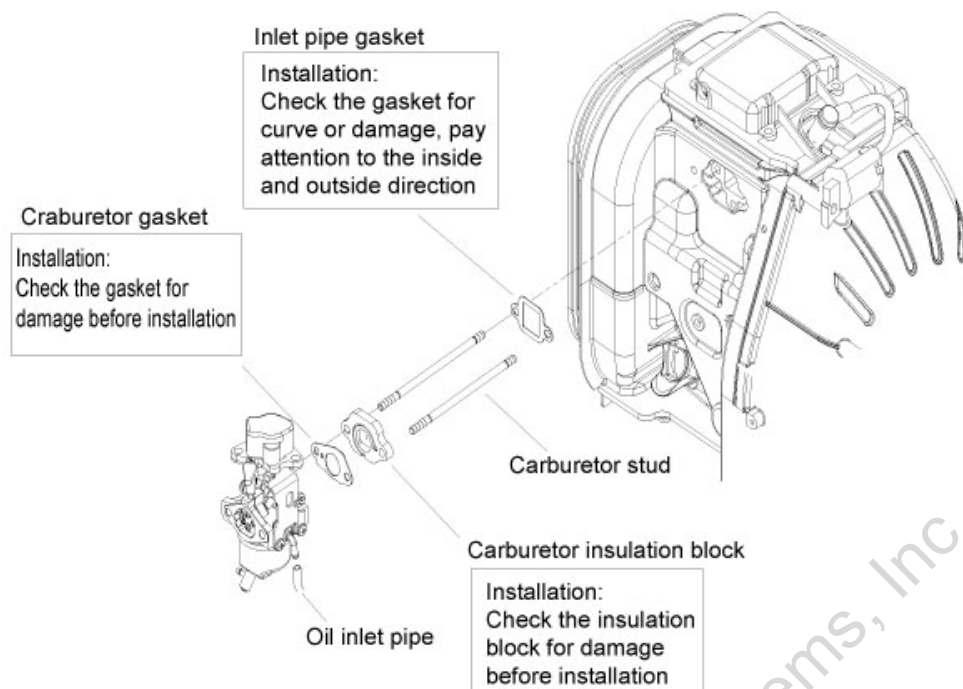

•Disassembly/Installation of Stepping motor

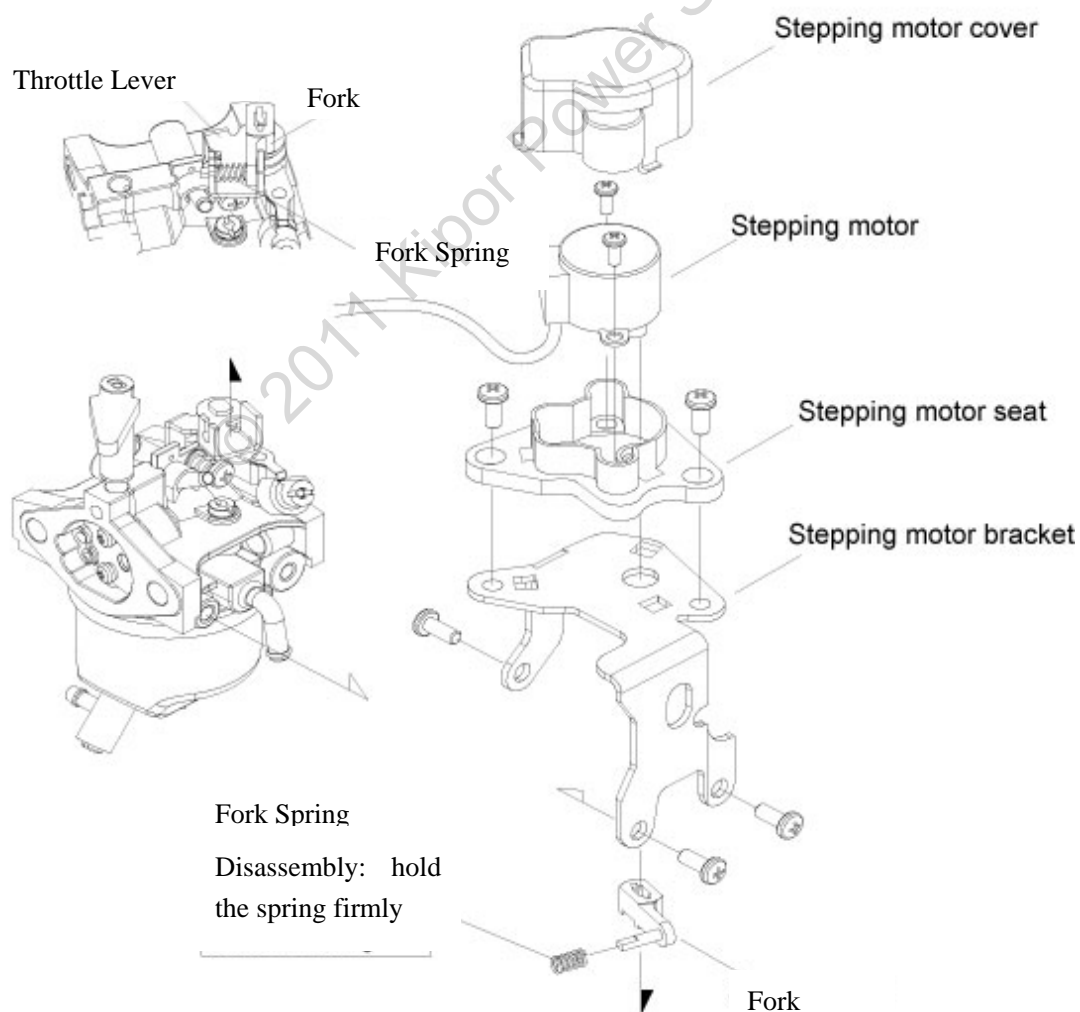

● Disassembly/Installation of Carburetor

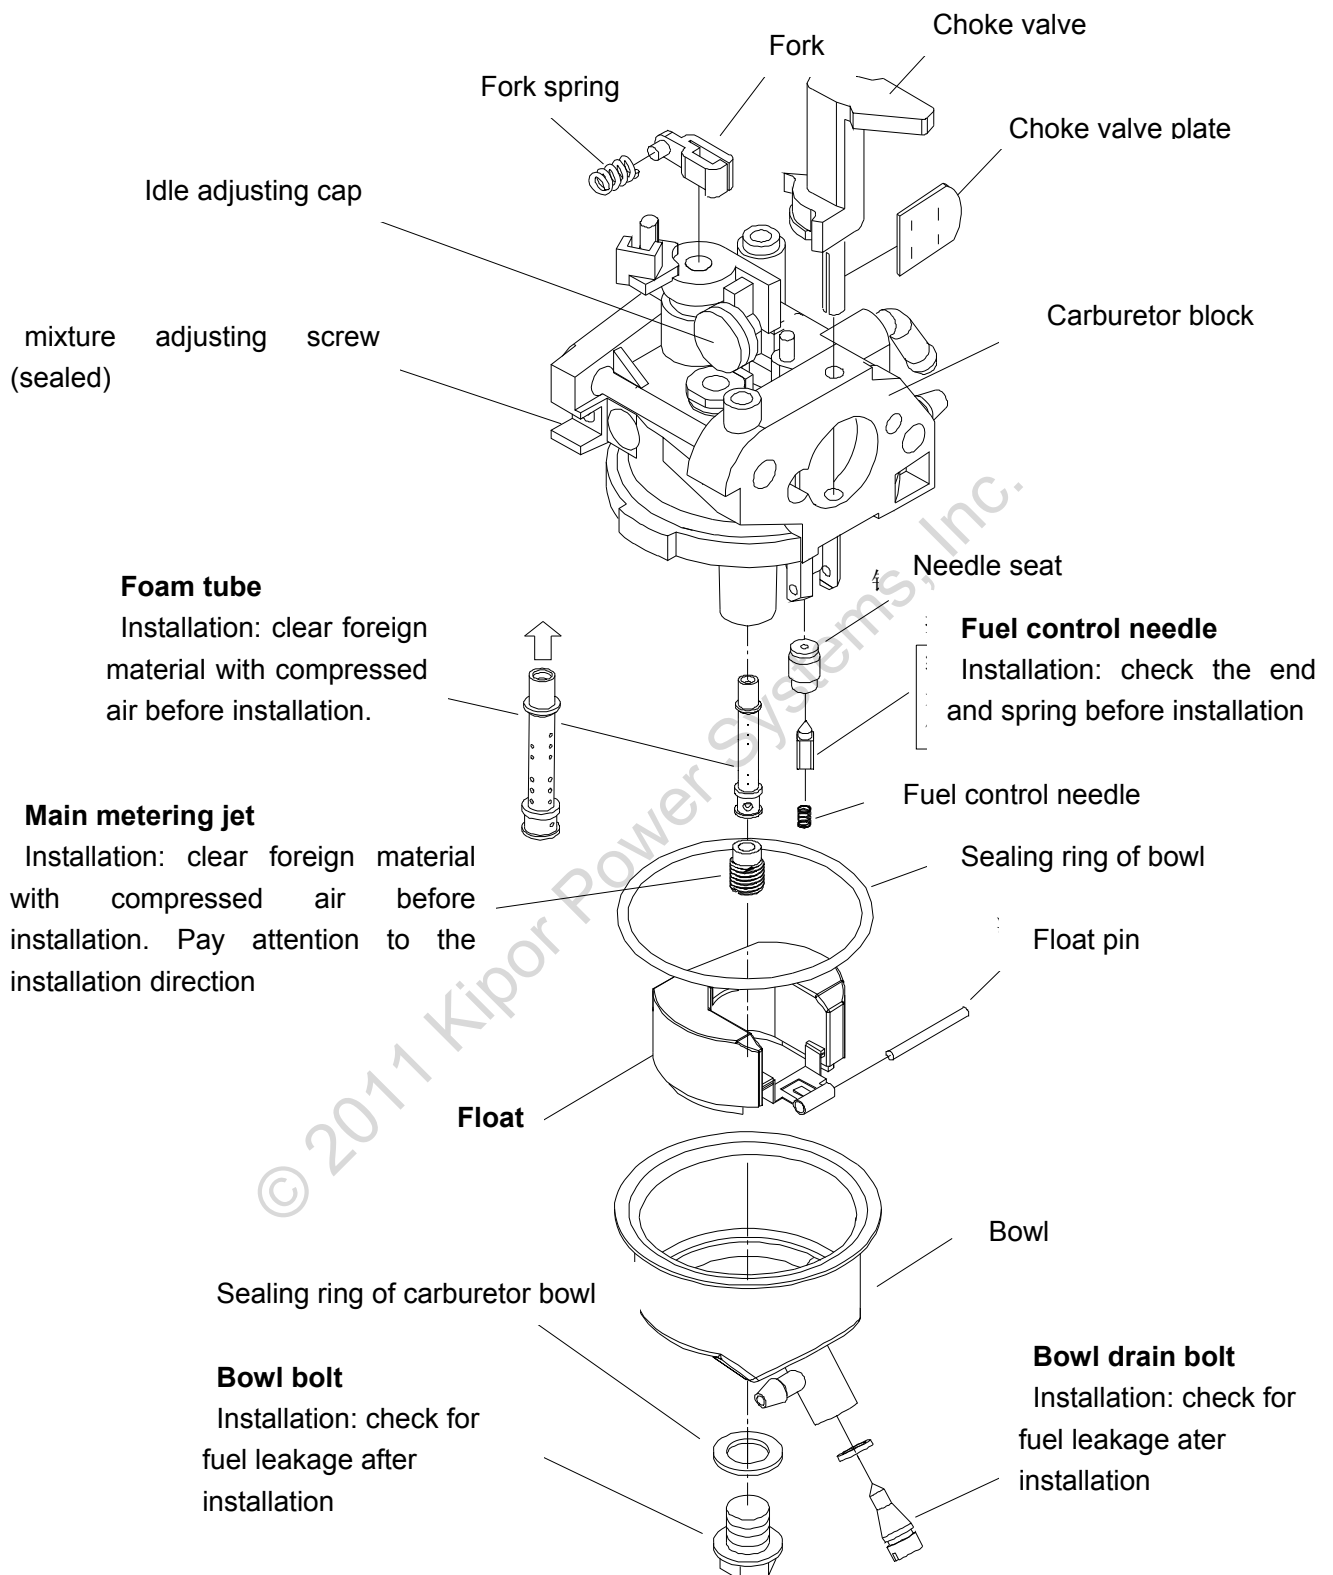

NOTE: With the exception of changing the main jet, no adjustments, modifications, or other maintenance is permitted on EPA and CARB certified engines. This includes any Kipor generator ever sold in North America. This drawing is for information only. Kipor will not supply any carburetor parts other than stepping motors and main jets


6.3 Inspection

● Float height

Place the carburetor on a level surface as shown; measure the float height between the float and carburetor block.

Height	12mm
--------	------

Replace the carburetor if the float height is not correct.

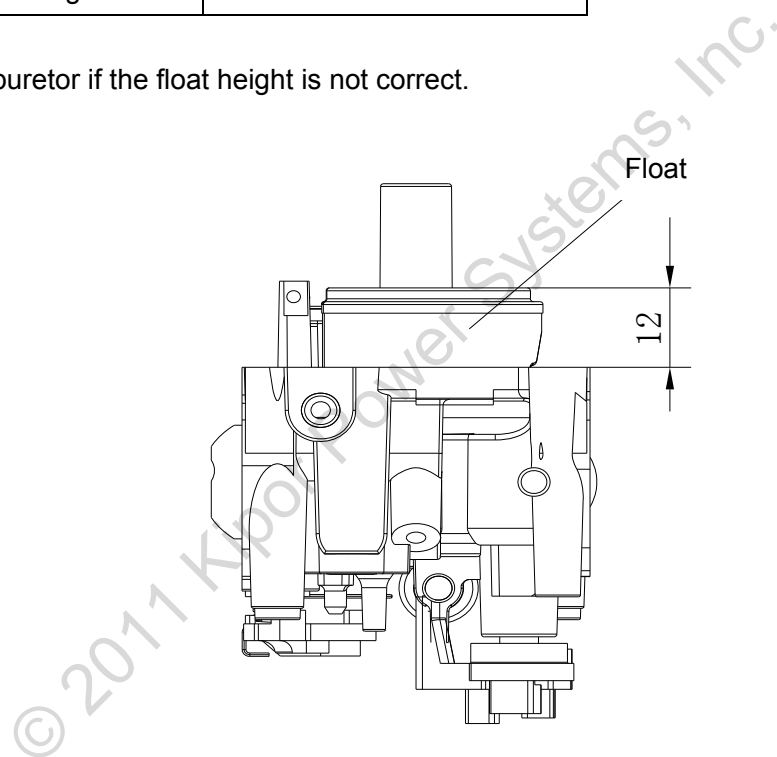


● Stepping motor

Measure the resistance of stepping motor connection to the inverter.


Standard resistance	Between 1 and 3: 45~55Ω
	Between 2 and 4: 45~55Ω


Replace the stepping motor if the resistance exceeds the above range.

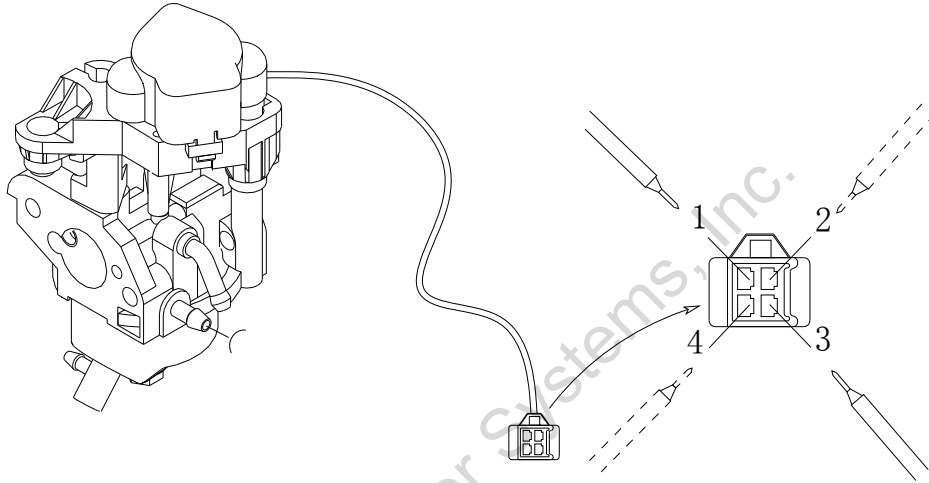

7. Control panel

7.1 Removal/Installation

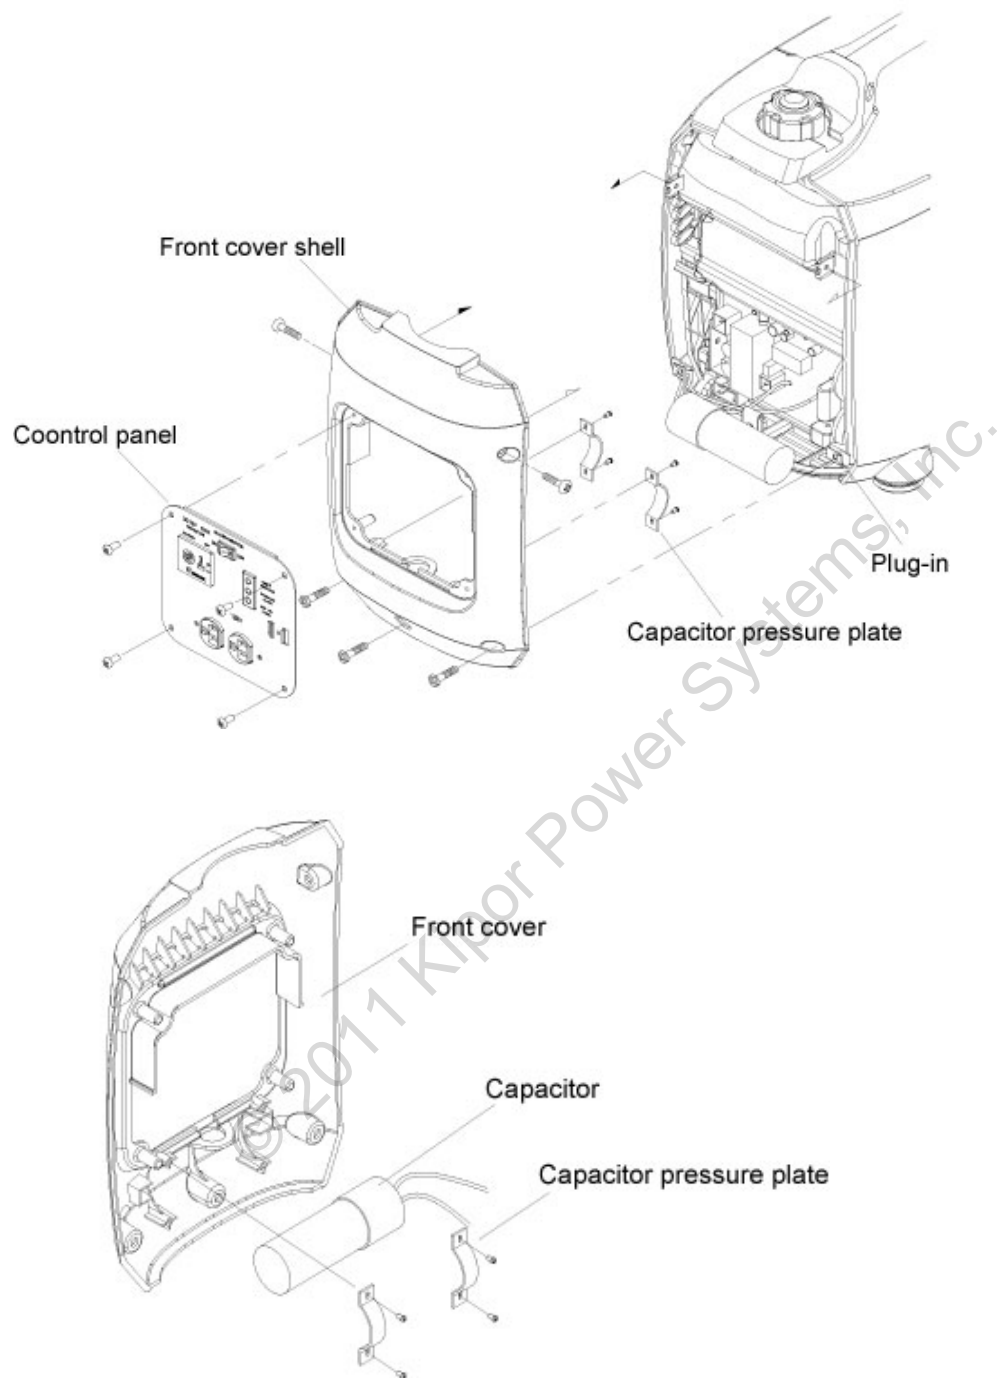

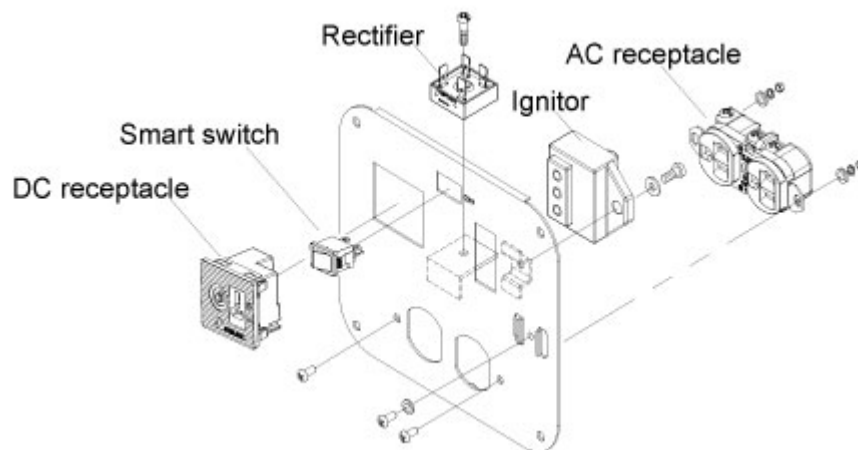

7.2 Inspection

a. Control panel

● AC receptacle

Check the electrode contact disk inside receptacle, if it is burnt or the color changes, replace for it.

● DC receptacle

Connect both terminals of the receptacle with a jumper wire to short. There must be continuity between the lead wire terminals with the circuit protector ON. Replace the DC receptacle if there is no continuity.



● Smart switch

There should be continuity with the switch ON, and no continuity with the switch OFF.

● Ignitor (ignition module)


Pull off the 10P receptacle from ignitor, measure the resistance by connecting one testing pen with the metal outer case of engine, and the other testing pen with the 10P connector.

Color	Circuit unit	Standard resistance
Blue	Primary coil of the ignition coil	0.8-1.3Ω
Orange	Oil level alarm	There should be no continuity with correct oil level
Yellow	Trigger coil	80-130Ω
Yellow/Green	Ground wire	Continuity
Green	Ignitor unit power coil winding	0.26-0.28Ω
Red	Engine switch	There should be no continuity with the switch ON, continuity with the switch OFF

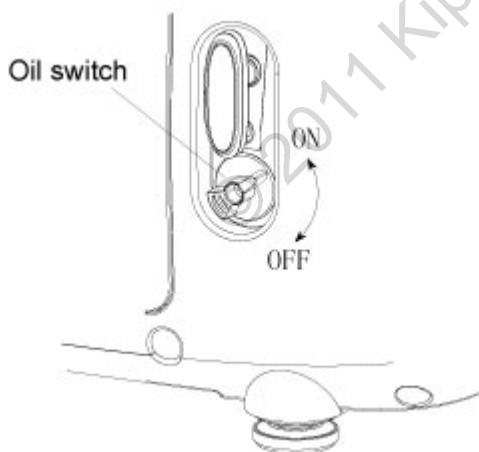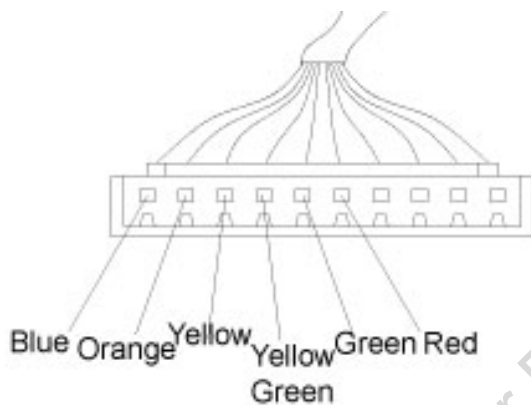

● Engine switch


Check the continuity of connector, there should be continuity if presses down the micro switch, otherwise,
Disconnect the switch.

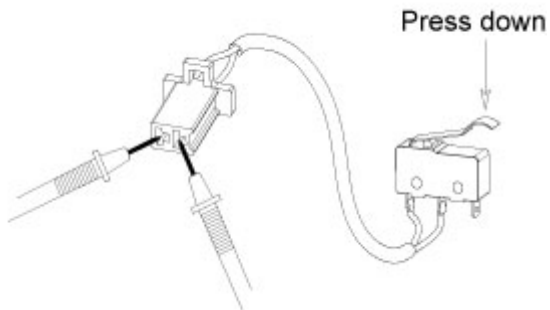

● Rectifier


Measure the on or off (positive pressure fall) of rectifier with control potentiometer $\rightarrow + \sim$, the measurement should accord with the standard as shown in the chart.

Positive Negative	1	2	3	4
1		OFF	OFF	OFF
2	ON		OFF	OFF
3	ON	ON		ON
4	ON	OFF	OFF	

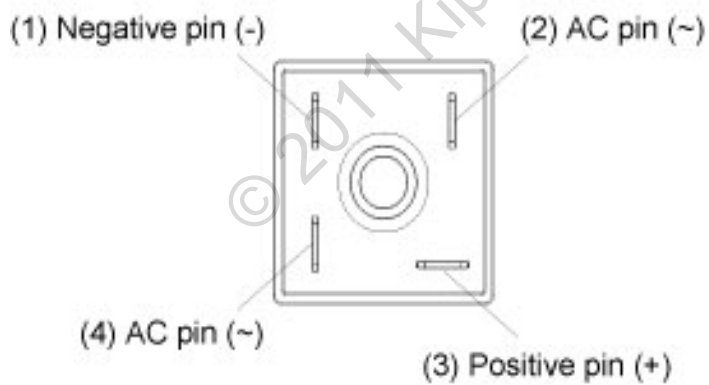



8. Housing case/ Fuel tank/Guide Plate/ Bottom Plate/ Inverter unit

8.1 Disassembly and reassembly of housing case

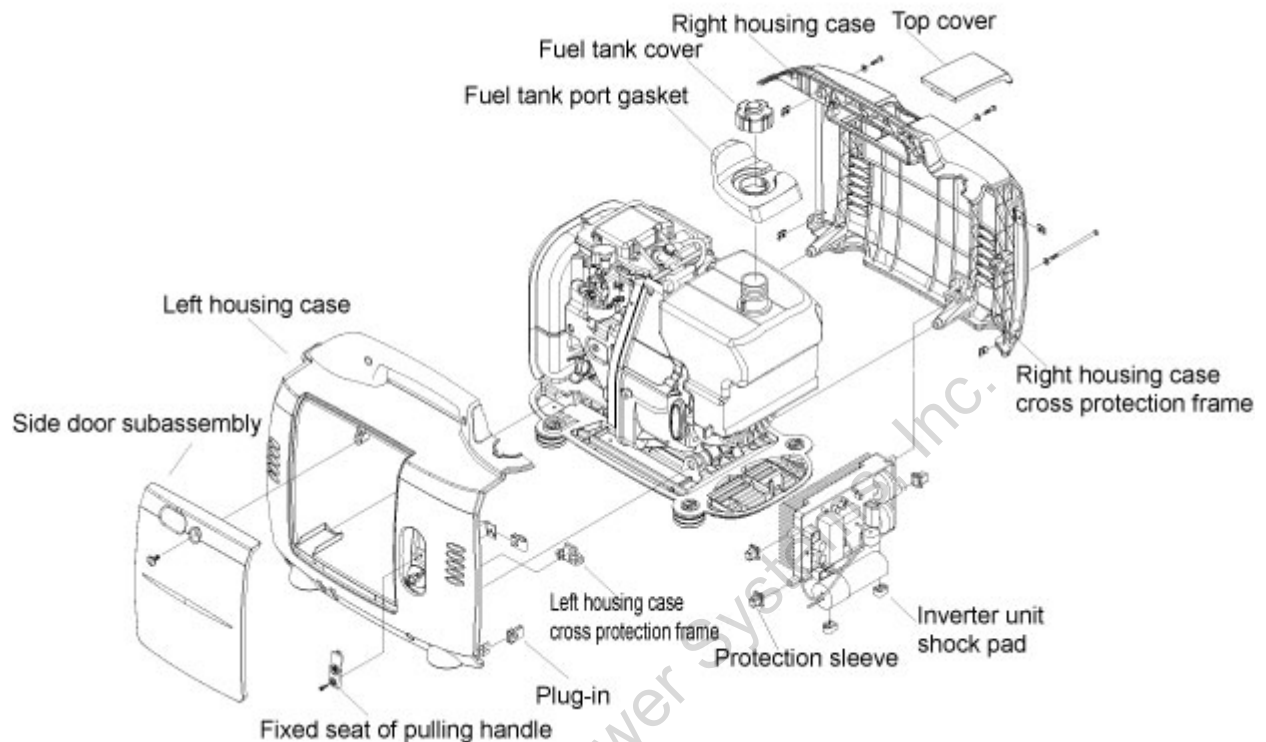

•Left Housing Case

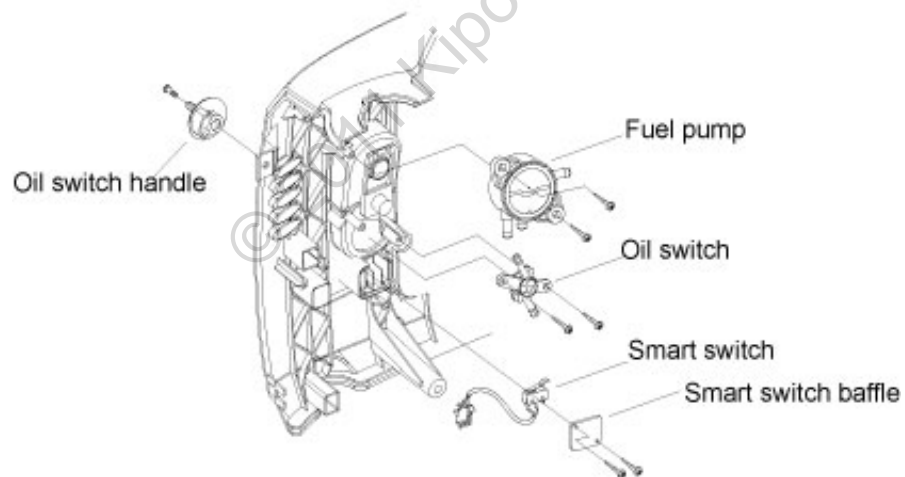


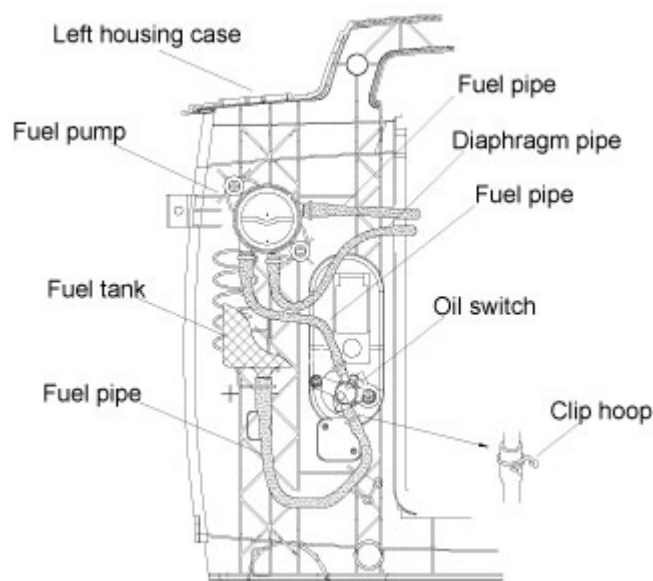


8.2 Fuel Tank

Caution


- Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel. Keep heat, sparks, and flame away. Wipe up spills immediately. Loosen the drain screw to drain the carburetor thoroughly before removal.

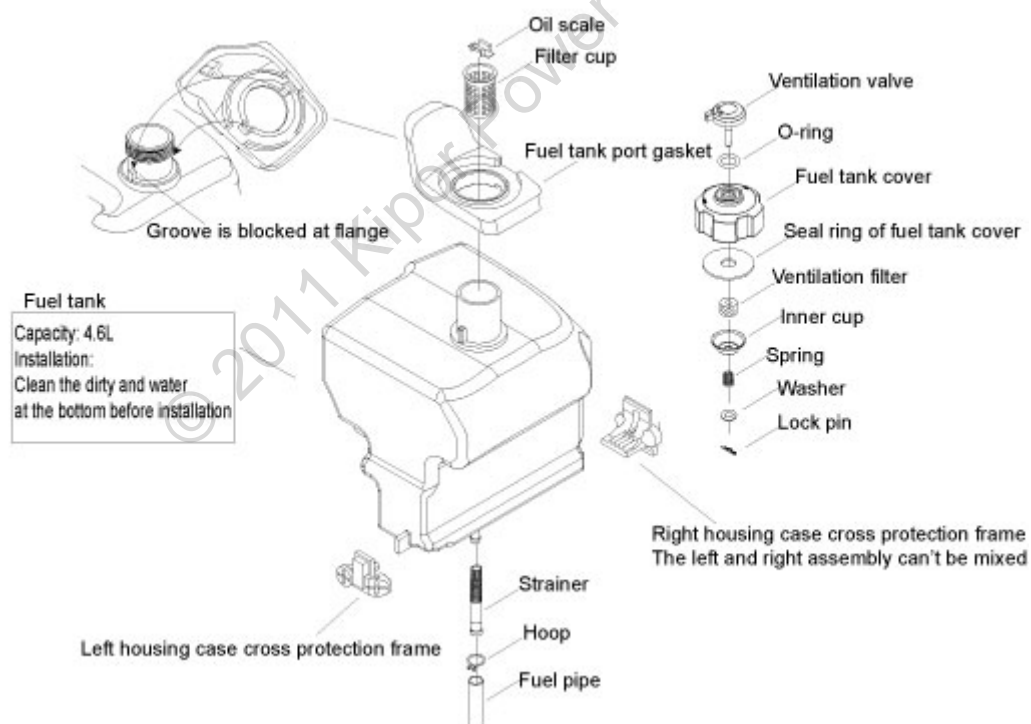

8.3 Guide Plate/ Bottom Plate

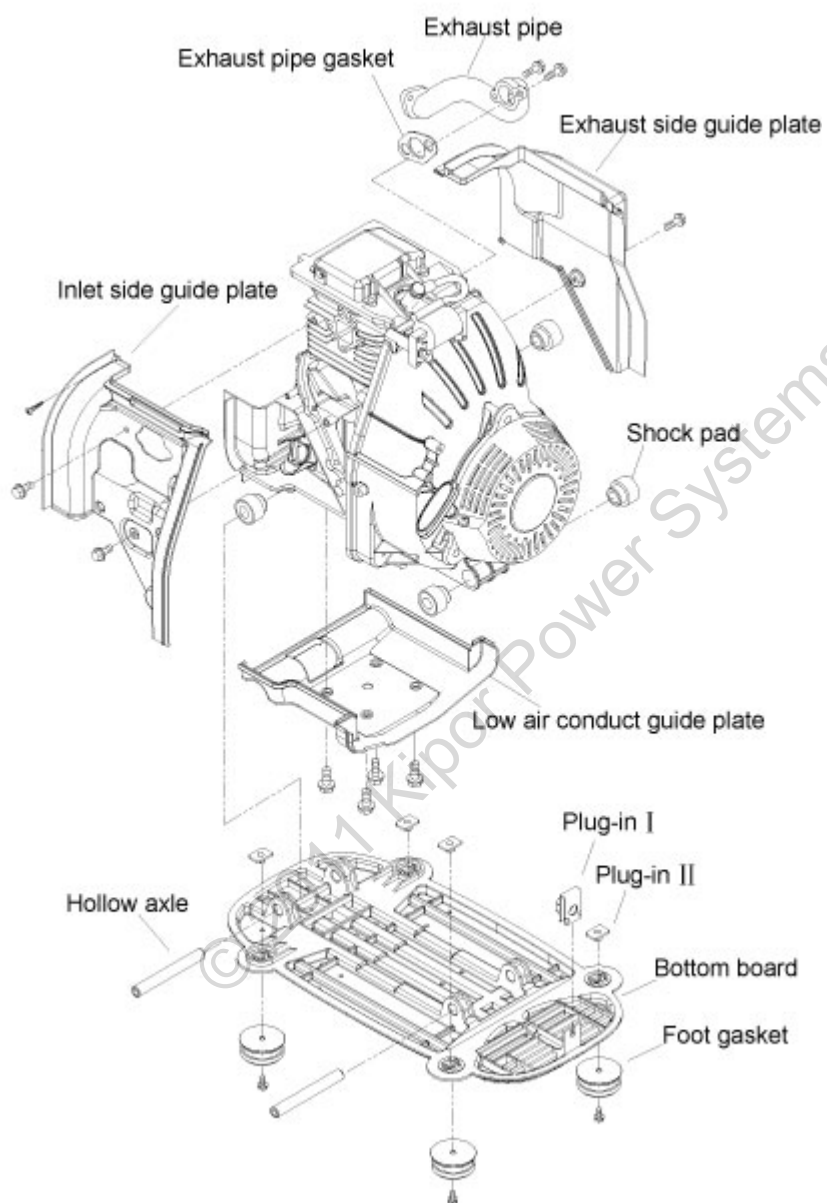



8.4 Bottom Plate for IG2600h

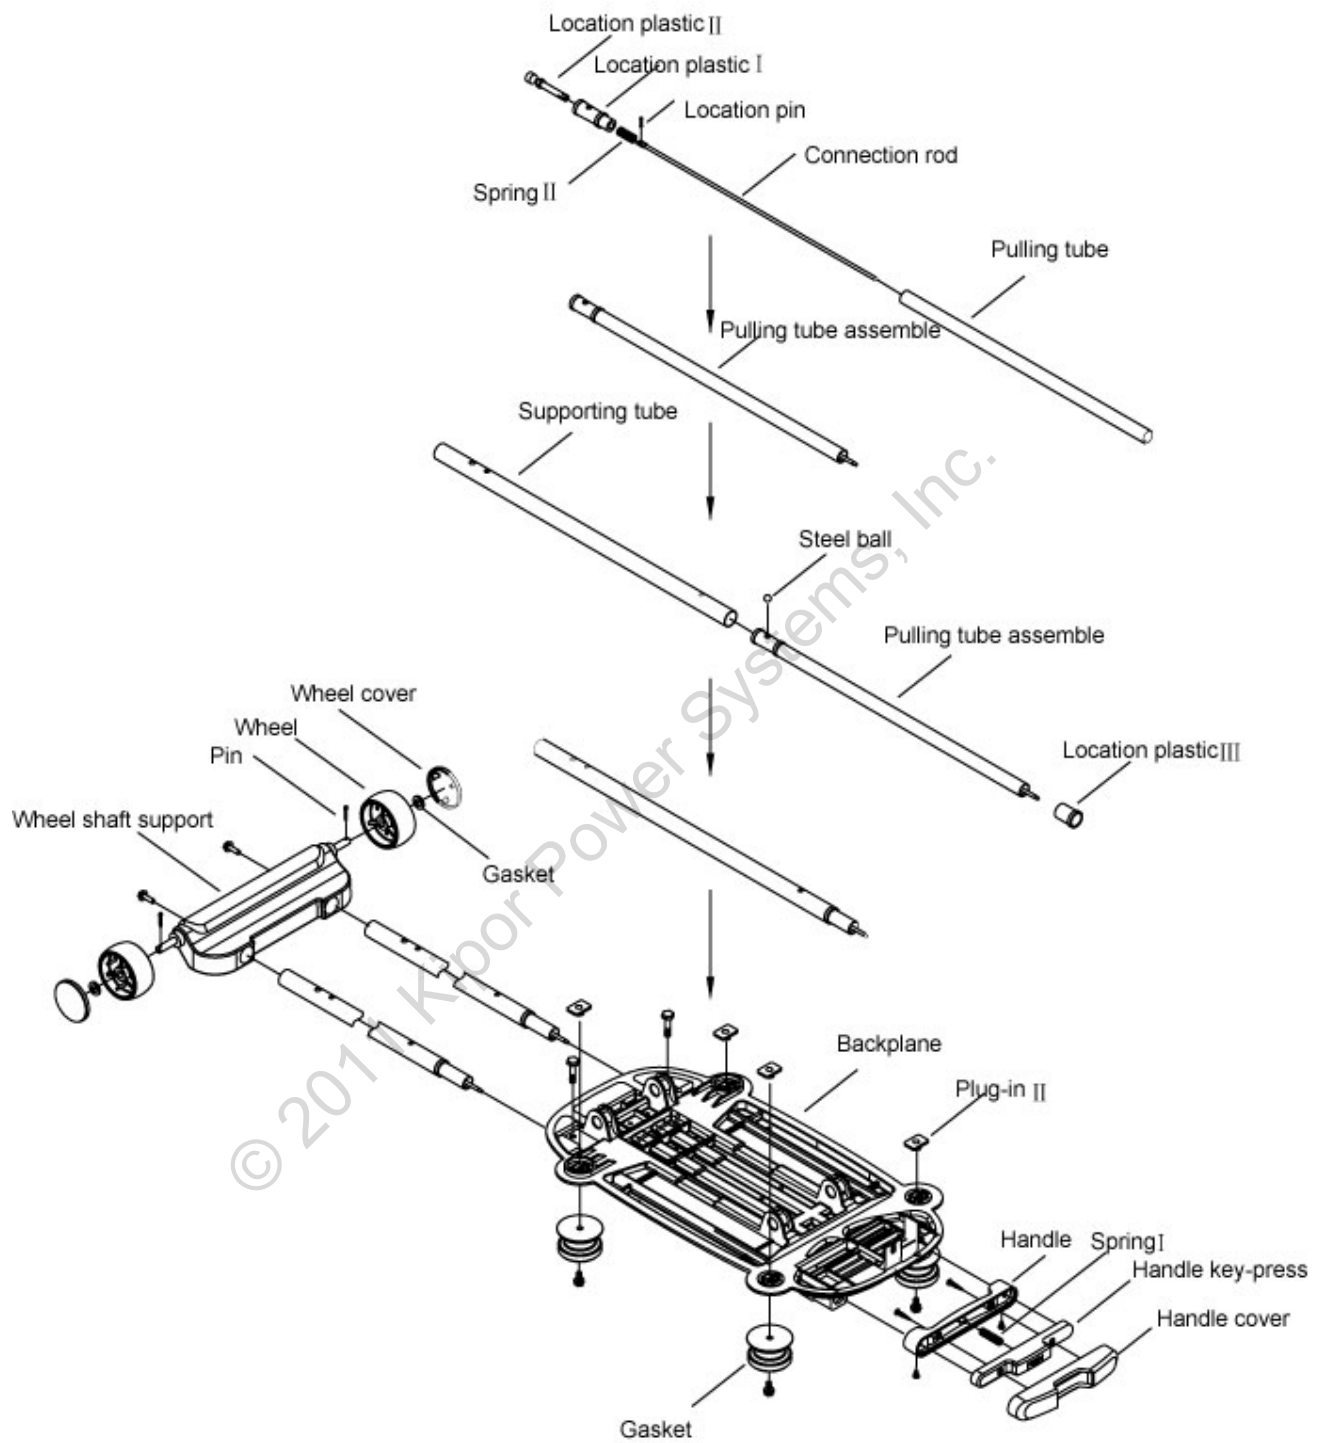

9. Recoil starter/Air conduct cover/Ignition coil


9.1 Disassembly/Reassembly

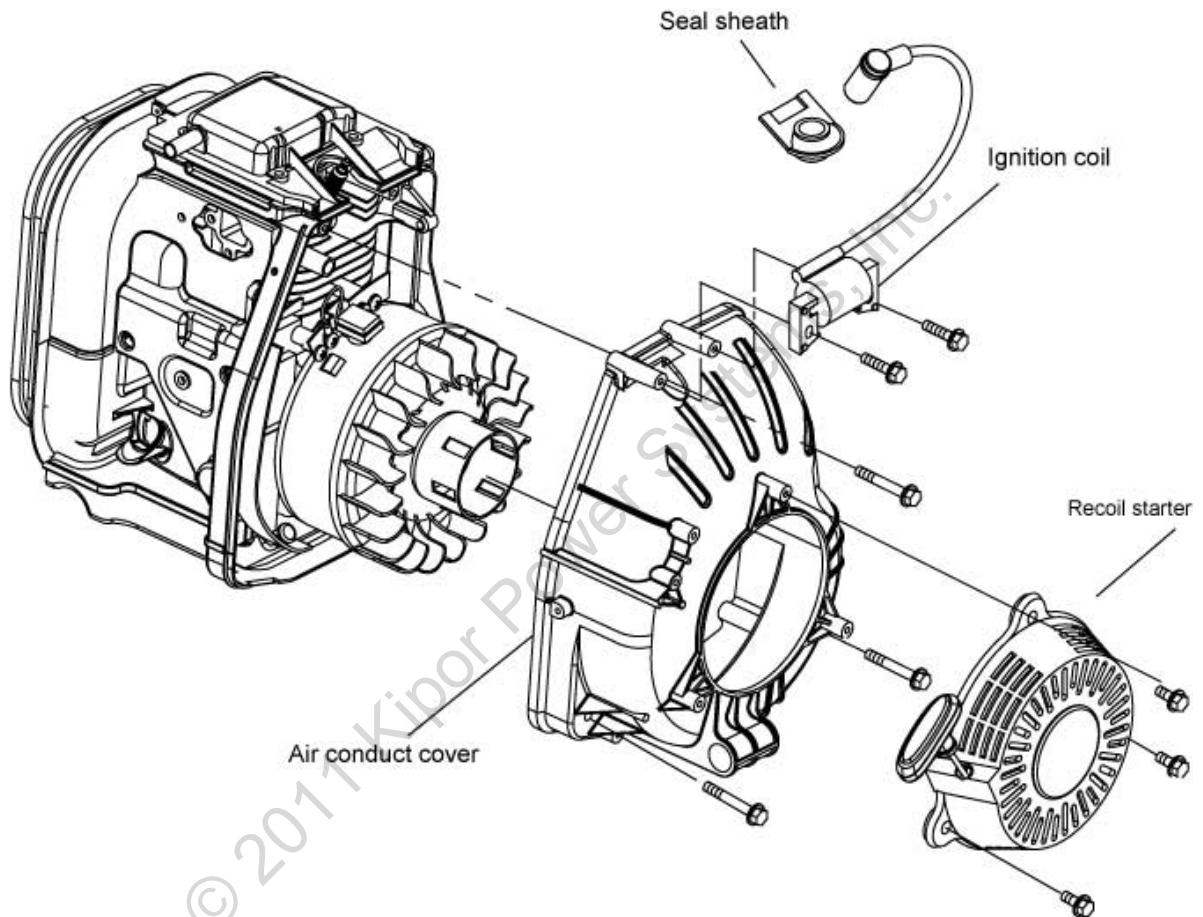

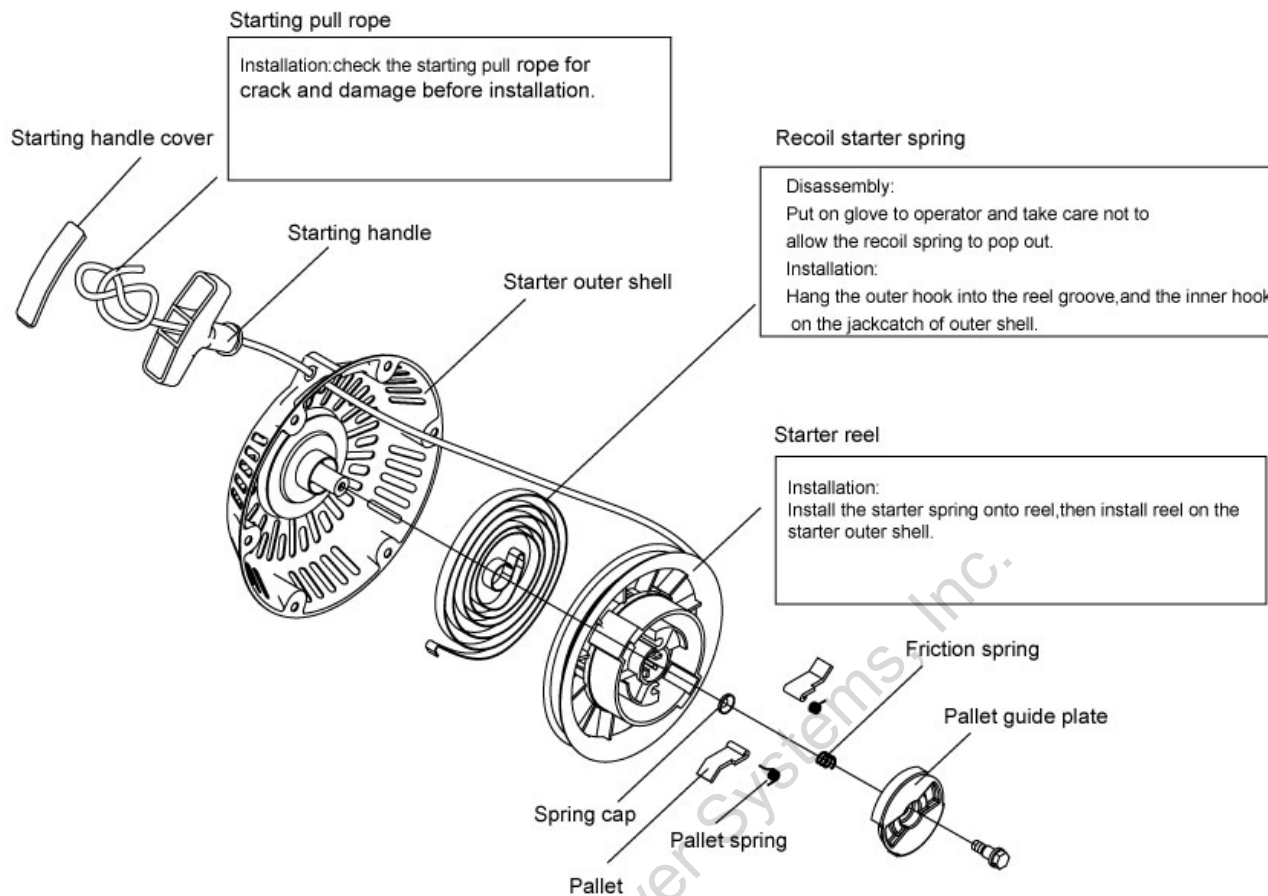


9.2 Installation of recoil starter


(1) Set the spring into the starter reel, and hang the spring outer hook inside the reel groove.

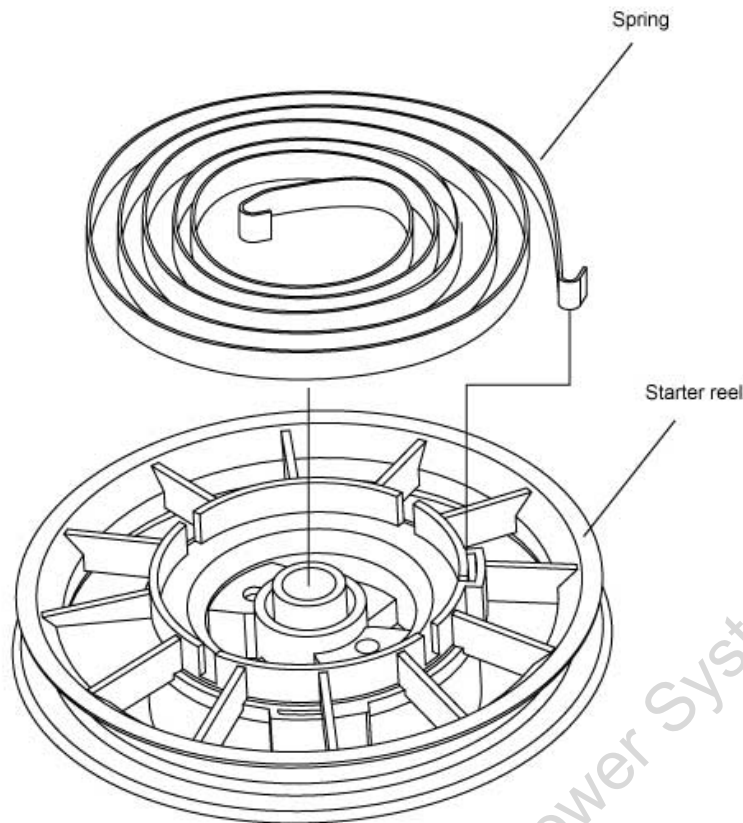


(2) Smear lubrication grease on the starter outer shell claw, install the starter reel. Revolve the reel anticlockwise to hang the spring inner hook on the starter outer shell claw.

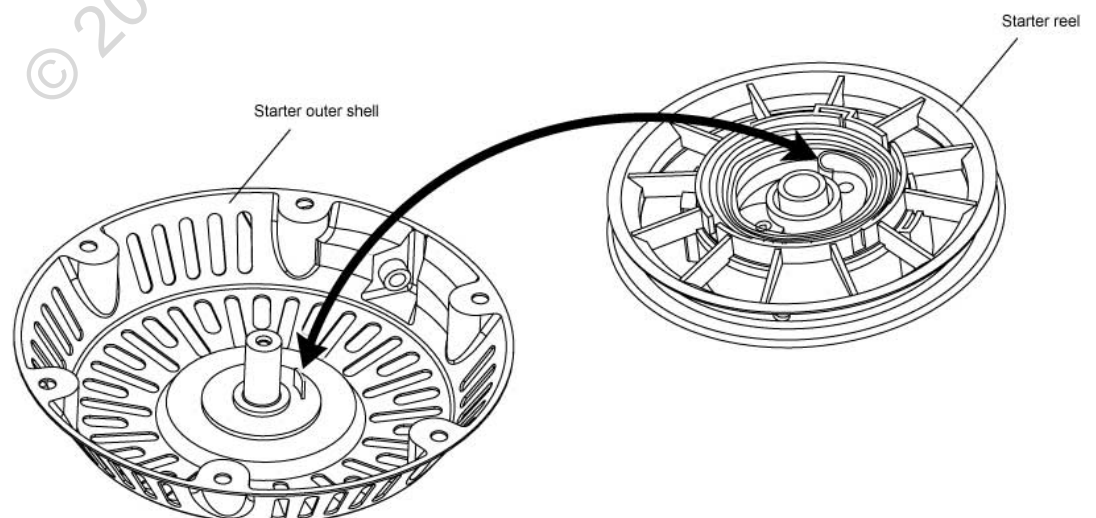


(3) Make a "8" knot at one end of the rope, pass the other end through the reel hole. Wind the reel anticlockwise 4 turns to fix the reel.

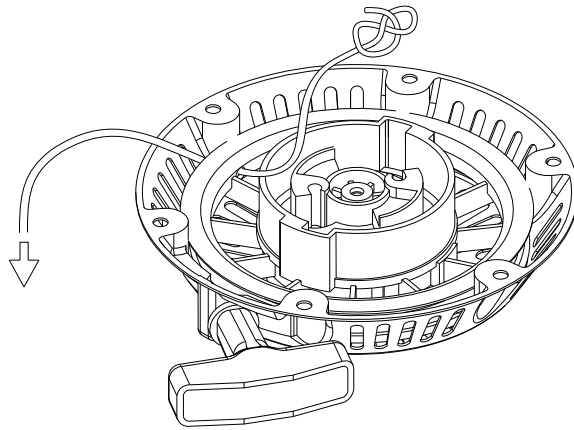

(4) Pull out rope thum from starter outer shell hole completely, pass it through the handle and make a “8” knot, then turn off handle cover. Loosen the reel to rebound the spring, take care not to allow the reel pop out.

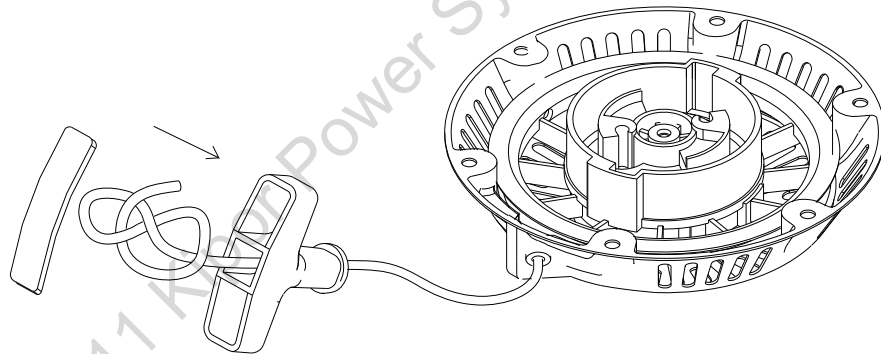

(5) Install the starter pallet and fix it with bolts.

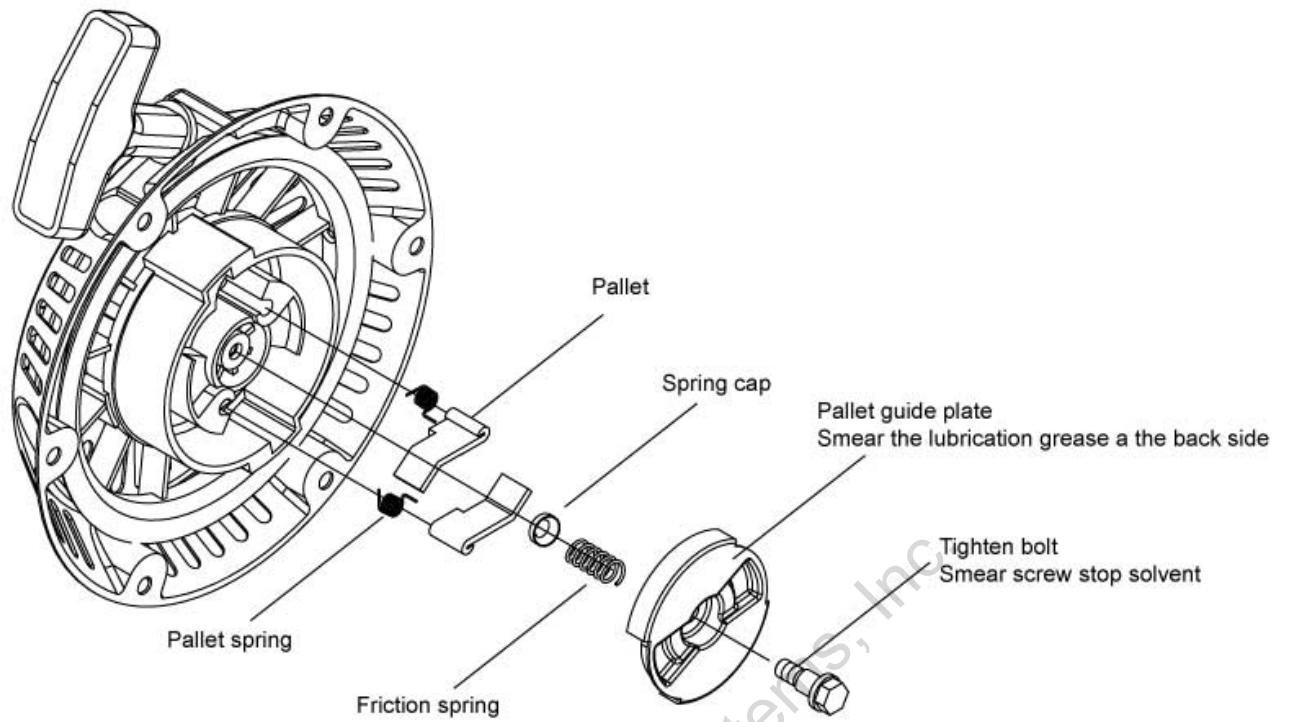


(6) Pull the starter for several times, and check the ratchet wheel returning.

9.3 Ignition Coil Inspection


- Attach the two leads of tester to the primary coil plug of ignition coil, and measure the primary resistance of the ignition coil.

Primary resistance	0.8—1.3Ω
--------------------	----------

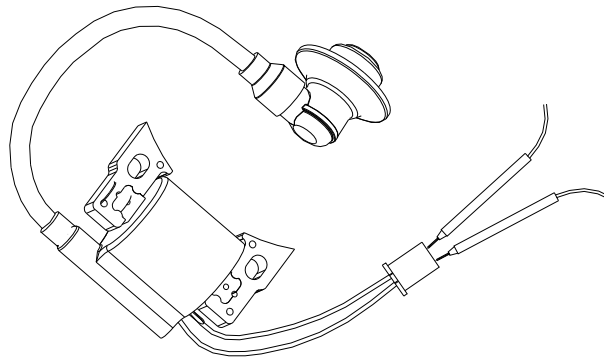

- Attach one lead of the tester to each terminal of primary coil plugs of ignition coil and the other lead to the spark plug cap, then measure the secondary resistance of the ignition coil.


Secondary resistance	15—21kΩ
----------------------	---------

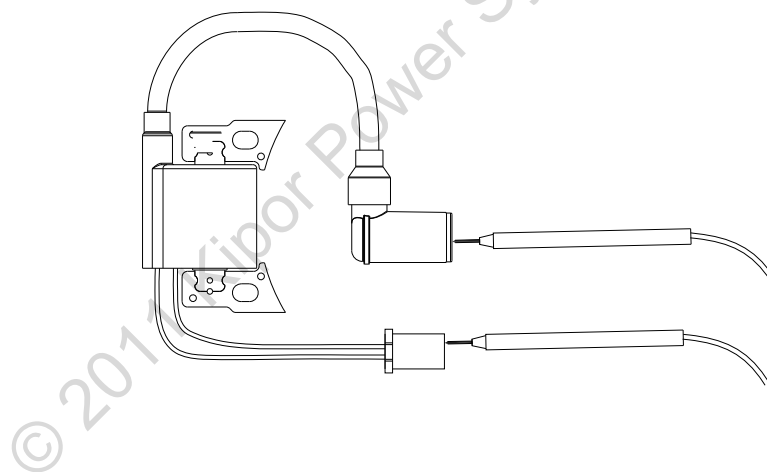

10. Alternator/ Trigger

10.1 Alternator

Disassembly/Reassembly

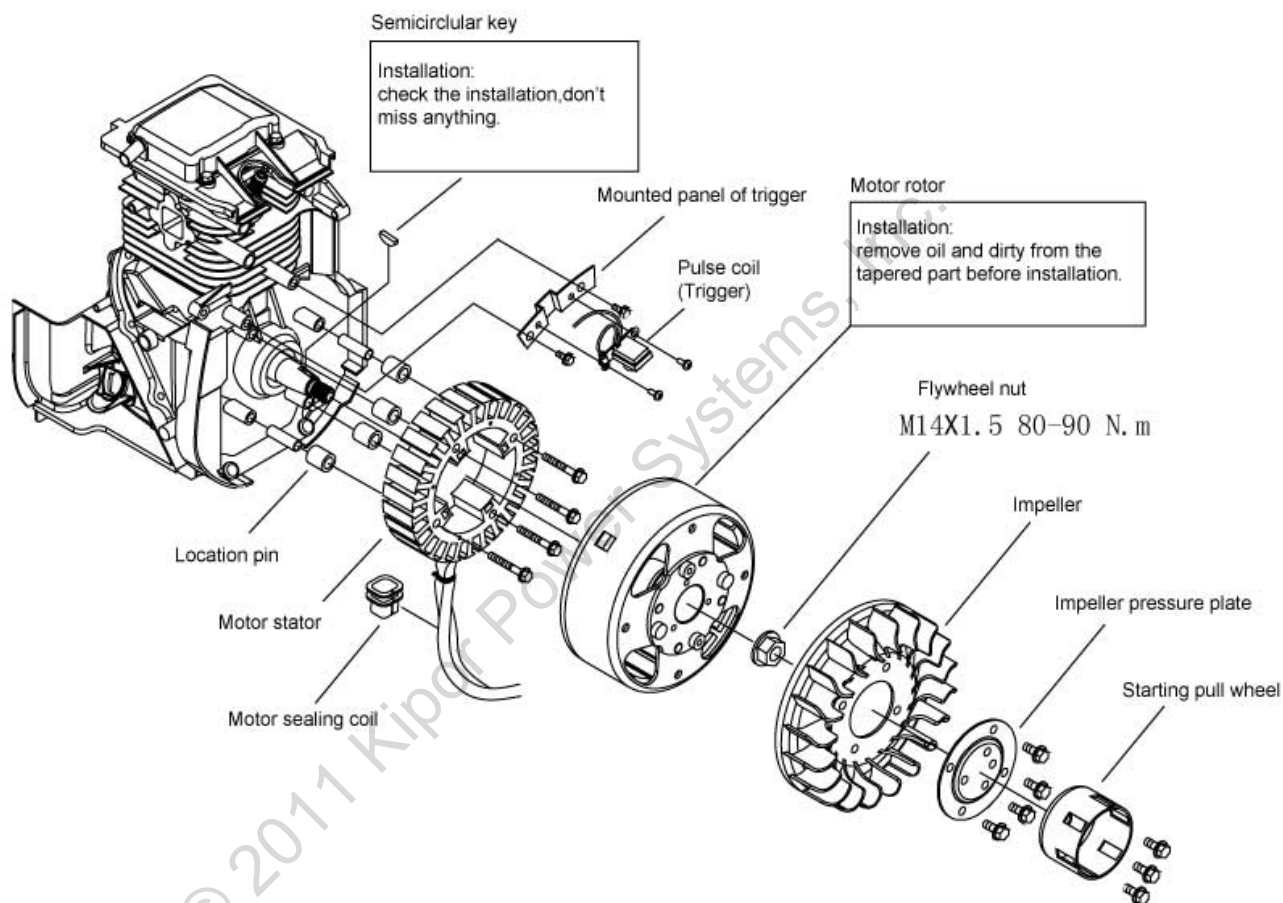

10.2 Inspection

(1) Ignition winding

Measure the resistance between the green terminal and yellow/green terminal.

Resistance	0.26-0.28Ω
------------	------------

(2) Outer charging winding

Measure the resistance between the two blue terminals.

Resistance	0.12-0.15Ω
------------	------------

(3) Sub winding

Measure the resistance between the two white terminals.

Resistance	0.12-0.14Ω
------------	------------

(4) Main winding


Measure the resistance among the three black terminals.

Resistance	120V	230/240V
	0.8~1.1Ω	3.3~3.5Ω

(5) Trigger

Attach the two testers in the trigger, and measure its resistance.


Trigger resistance	80-130Ω
--------------------	---------

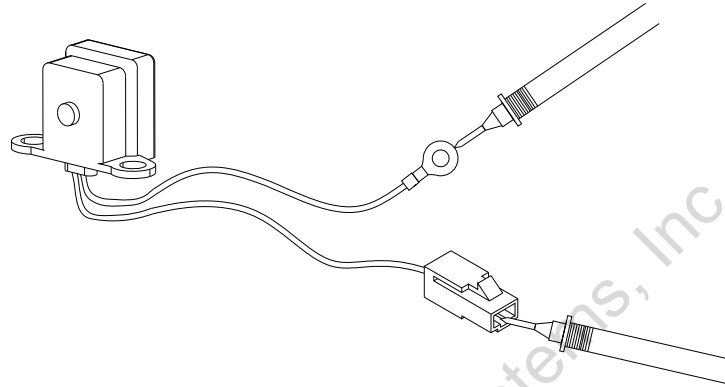

10.3 Trigger adjustment

Adjust the clearance between trigger and the projection part of rotor.


Trigger clearance	0.50-0.75mm
-------------------	-------------

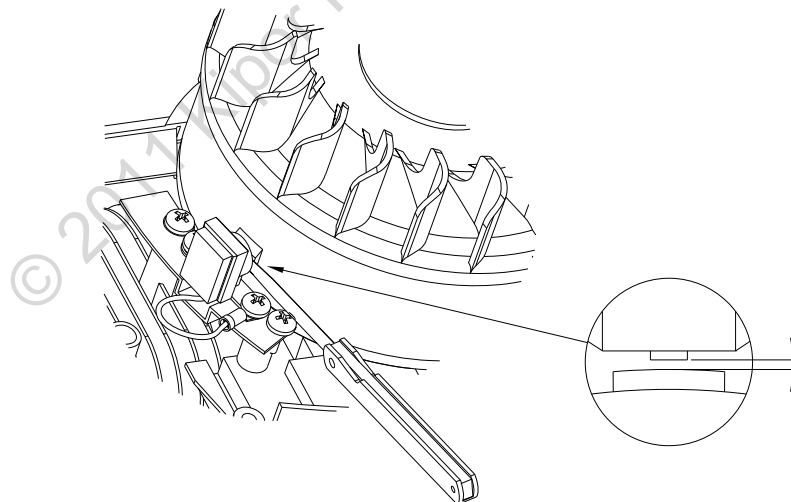

Insert a feeler gauge between the trigger and the projection part of the rotor; loosen the trigger fixed plate bolt to adjust the clearance slightly. Never move the plastic part of trigger, to avoid it separates from the fixed plate and damages the trigger.

11. VALVE COVER/ROCKER ARM ASSEMBLY


11.1 Disassembly/ Reassembly

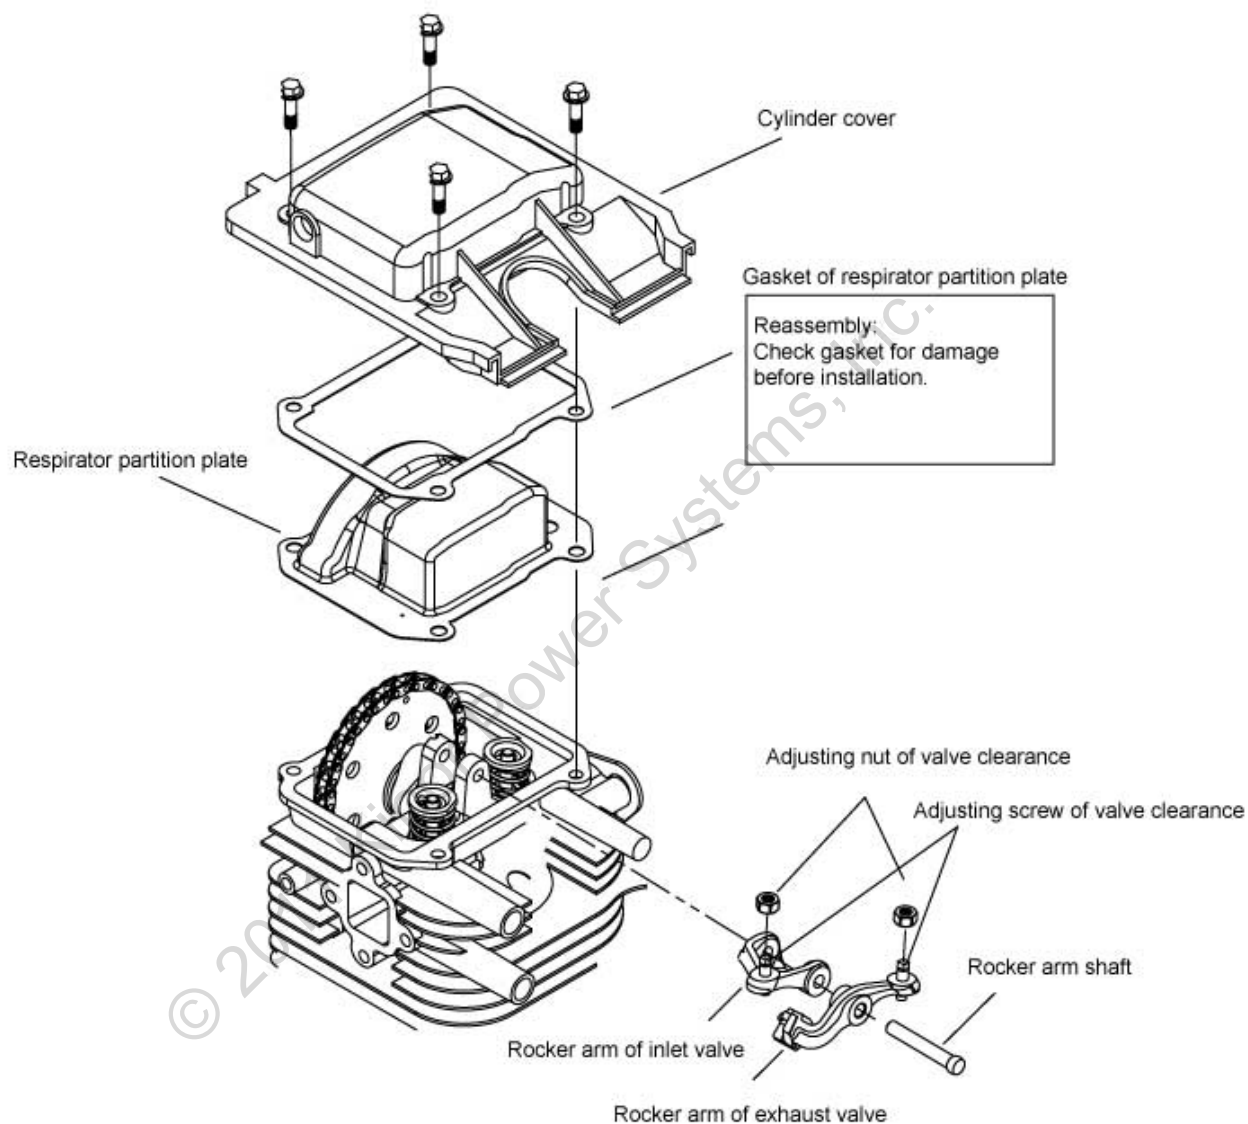

11.2 Inspection


● Rocker arm outer diameter

Standard(mm)	Service limit(mm)
5.972-5.980	5.91

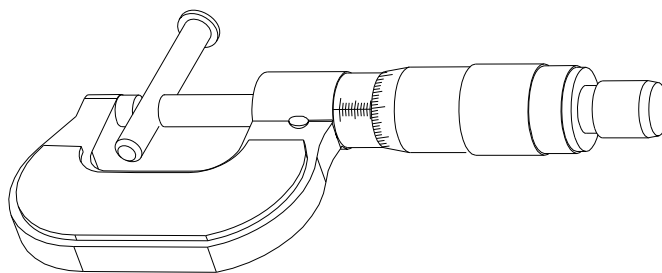


● **Rocker arm inner diameter of inlet/exhaust valve**

Standard(mm)	Service limit(mm)
6.000-6.012	6.05

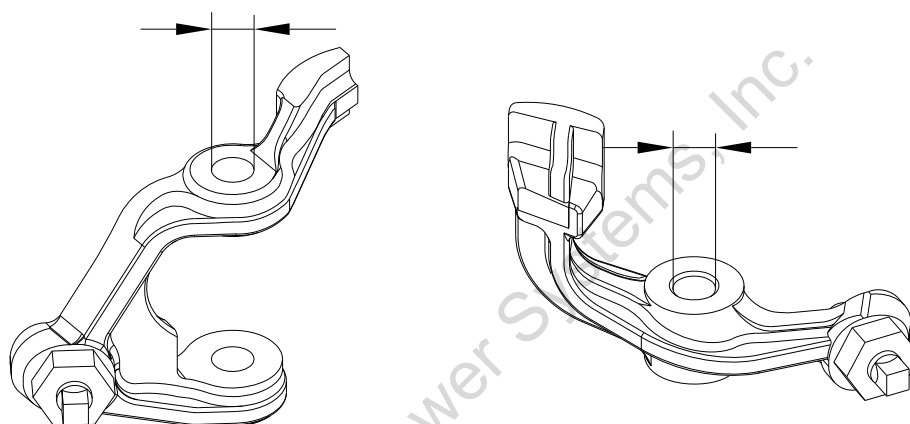


● **Inner diameter of rocker arm bearing**

Standard(mm)	Service limit(mm)
6.000-6.012	6.05

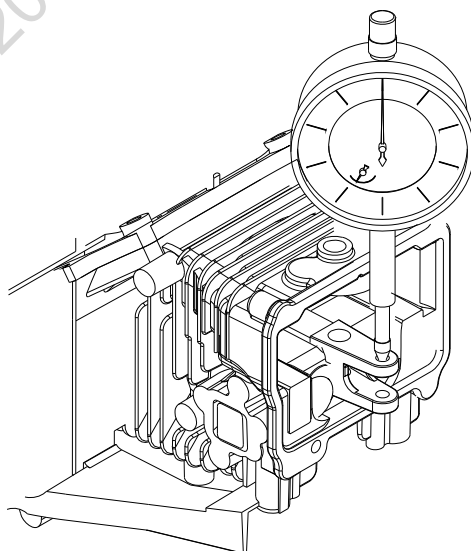


12. Crankcase Cover/ Camshaft Timing Driving Chain

12.1 Disassembly

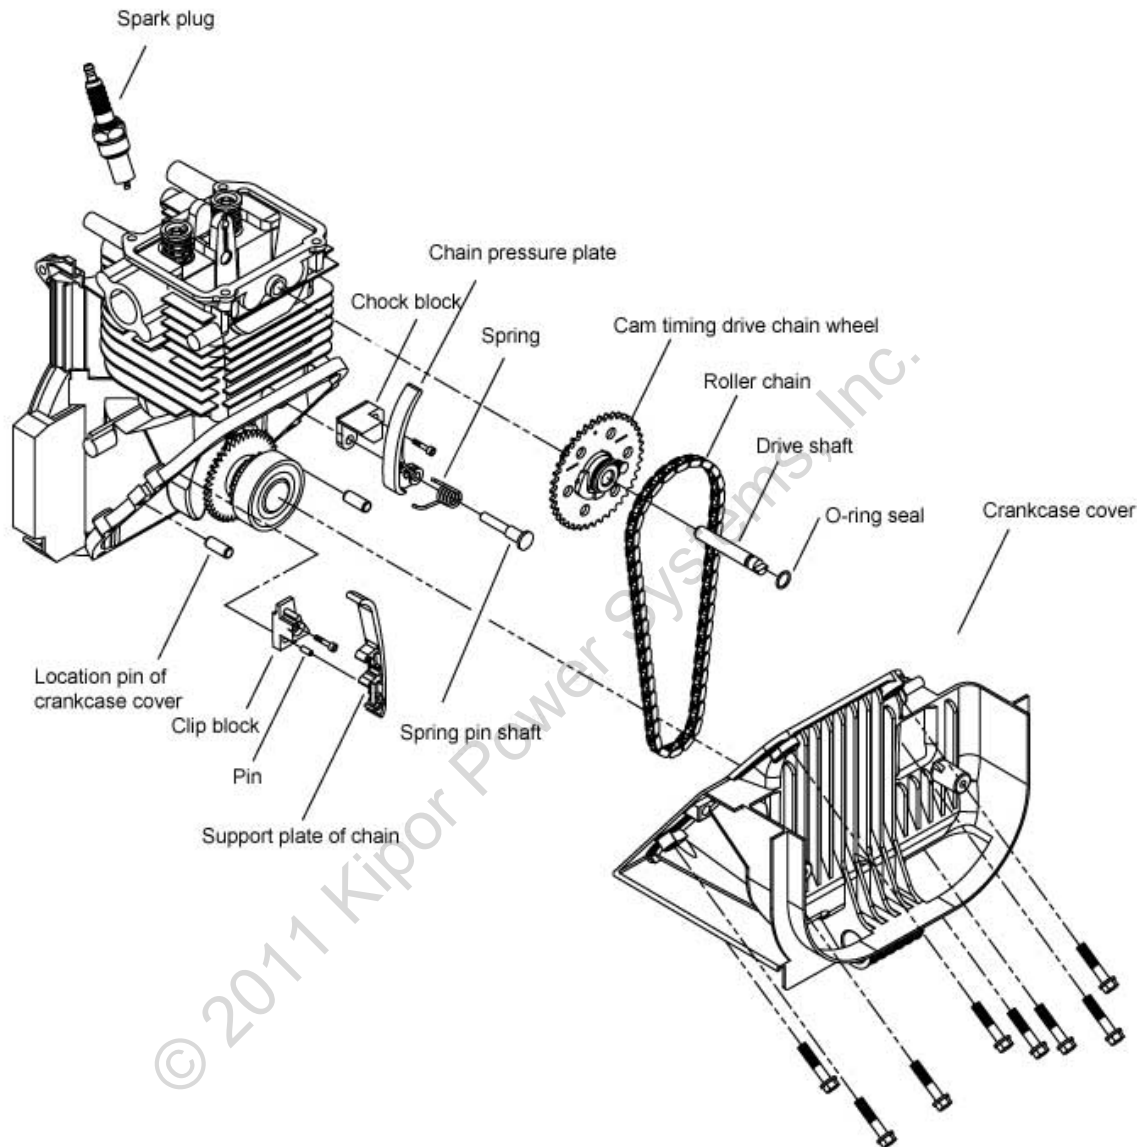

12.2 Crankcase cover

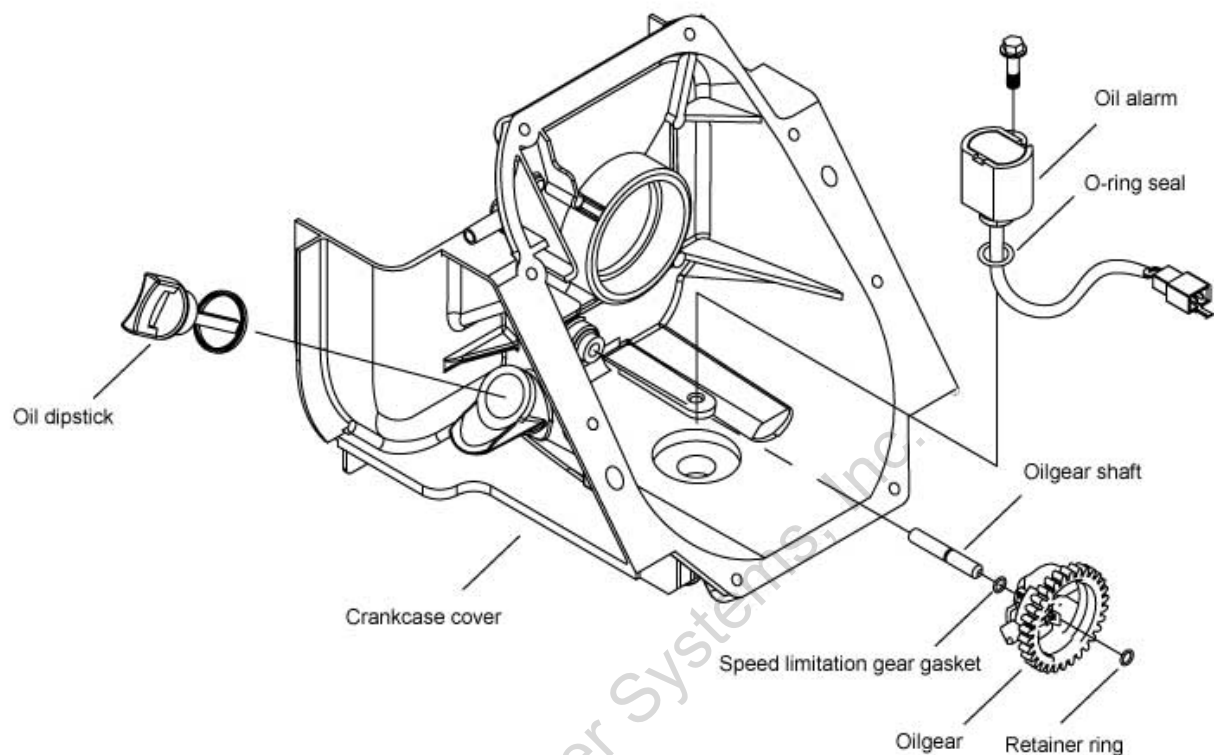


12.3 Reassembly of roller chain

1. Install the crankshaft, piston and connection rod assembly on the cylinder block.
2. Revolve the crankshaft; align the timing mark of crankshaft timing shaft with the timing mark of crankcase. (Step 1)
3. Install the roller chain on the cam timing drive chain, level the timing mark upward. (Step 2)
4. Put the roller chain into the crankcase, set the end of roller chain to the crankshaft timing gear. (Step 3) straighten the chain to align the timing mark of cam timing drive chain with cylinder head sealing face.

Caution

Don't remove the timing mark of crankshaft timing gear during installation. If the timing mark of cam timing drive chain is not parallel with cylinder head sealing face, adjust the meshing of chain and cam.

5. Install the O-seal ring into the drive shaft, and then assemble the drive shaft. (Step 4) Pay attention that the opening of drive shaft should upward.
6. Install chain pressure plate. (Step 5)

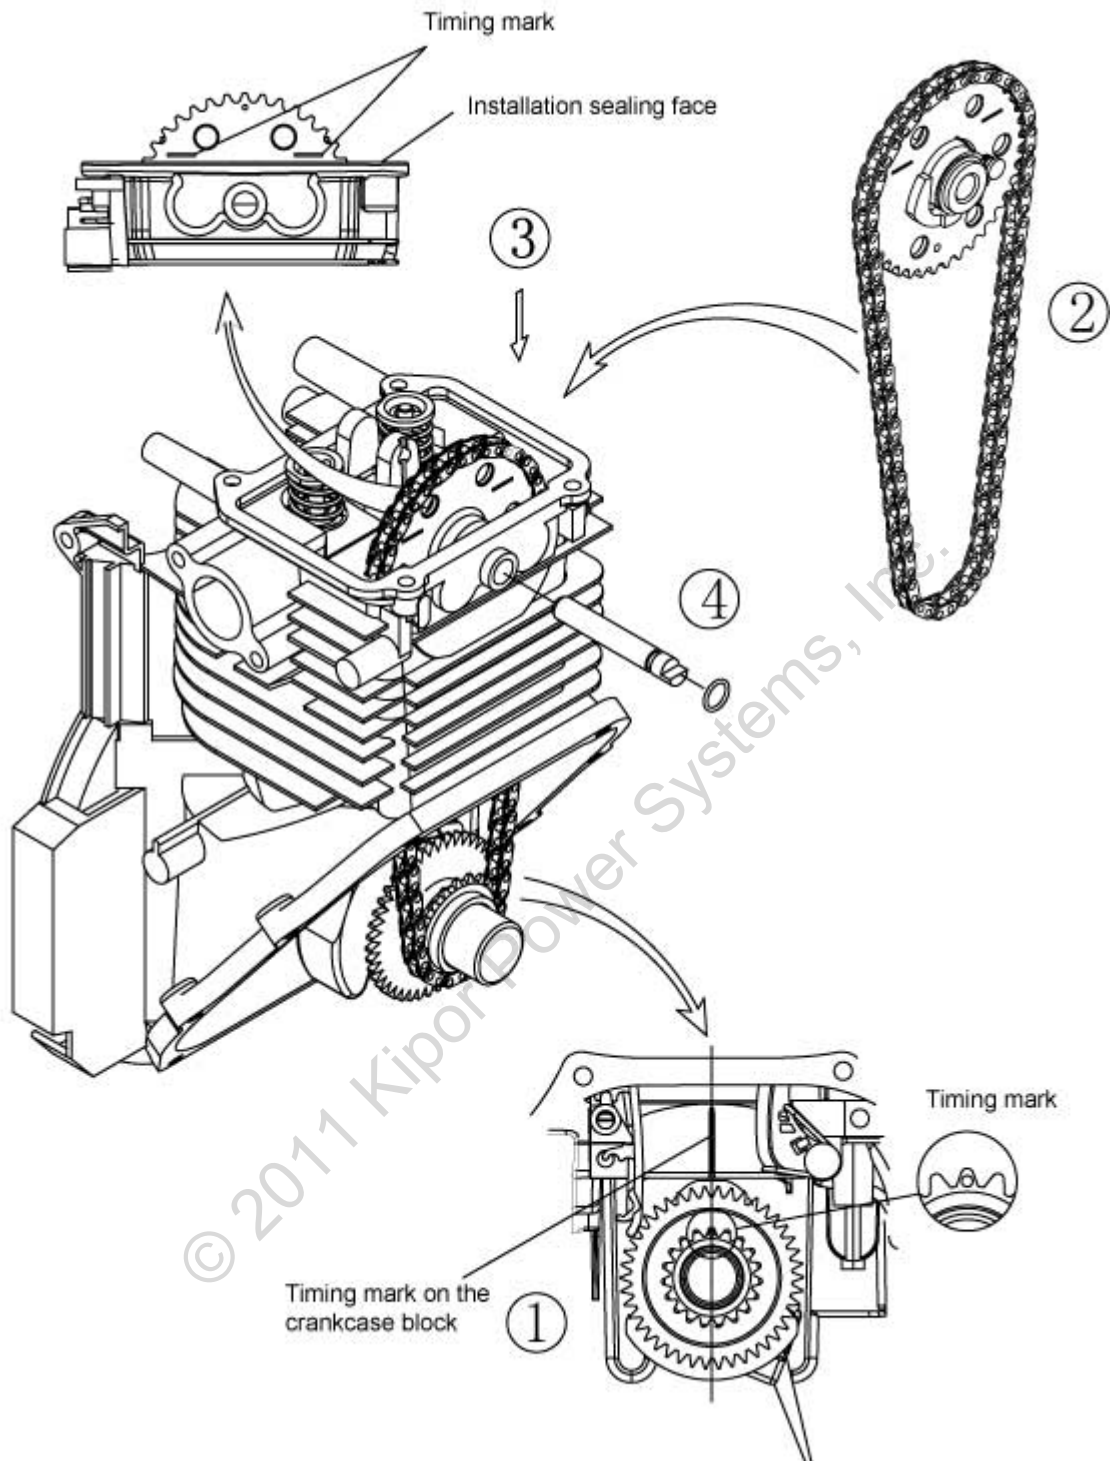


12.4 Assembly of chain support plate/ pressure plate

● Chain support plate


1. Put the upper groove of chain support plate into block; press the other end to seize the support plate fully.
2. Insert the location pin into cylinder block location hole and align them, set the support plate and clip block into cylinder block. Adjust the clip block location to align the clip bolt with cylinder block bolt.

3. Install inner hexagonal bolt and tighten hard.

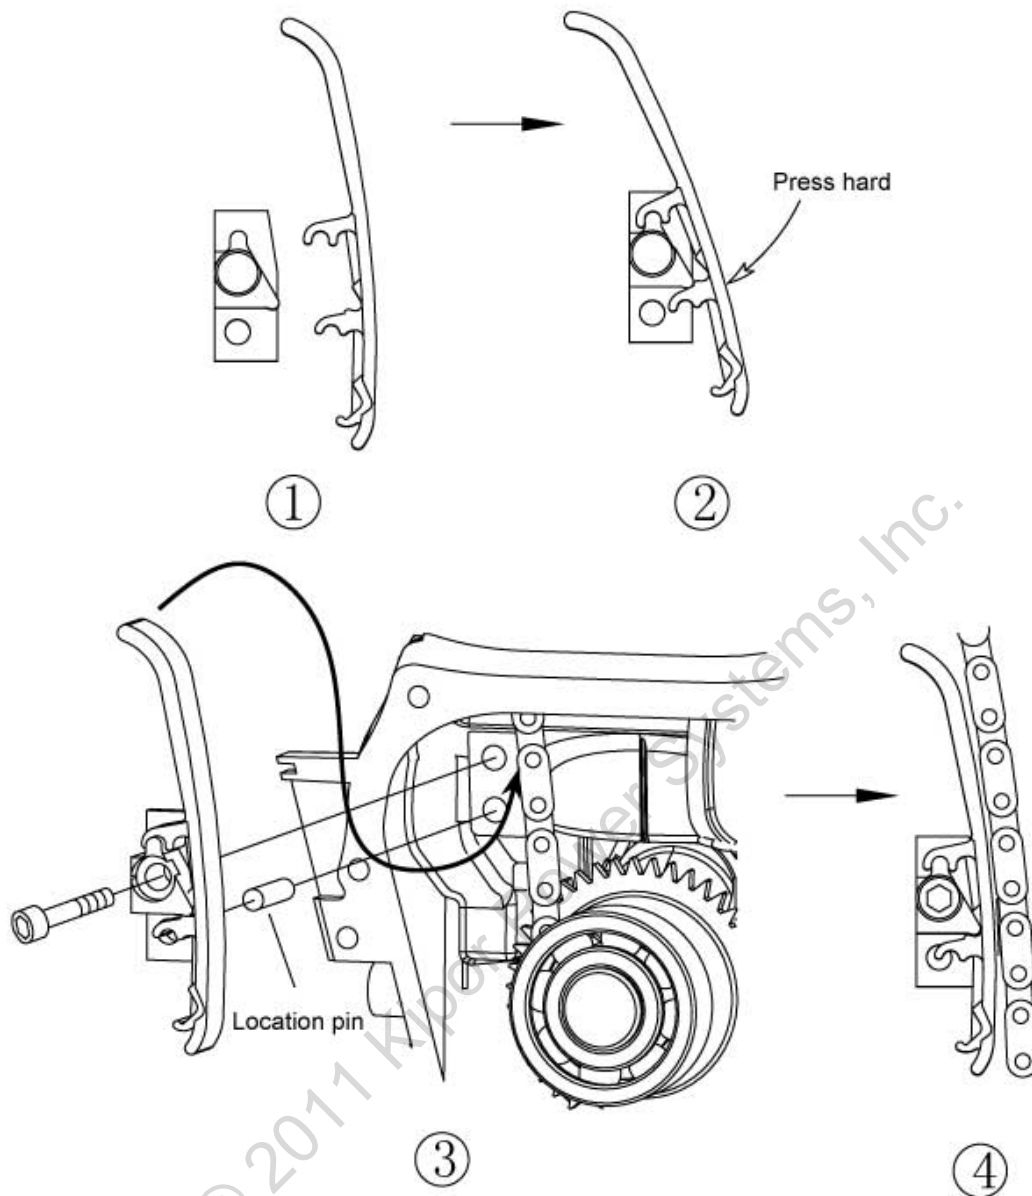

● Chain pressure plate

1. Install the spring pin shaft, spring and chain pressure plate as the picture shows.
2. Insert the spring into block location hole, set the chain pressure plate into cylinder block and spring into location hole. Pay attention that the spring pin should be inserted as far as location.
3. Adjust the block location to align the block bolt hole with cylinder block bolt hole.
4. Install the inner hexagonal bolt and tighten it.
5. Hold the spring free end to seize the block (as picture shows), knock the spring pin with copper hammer.

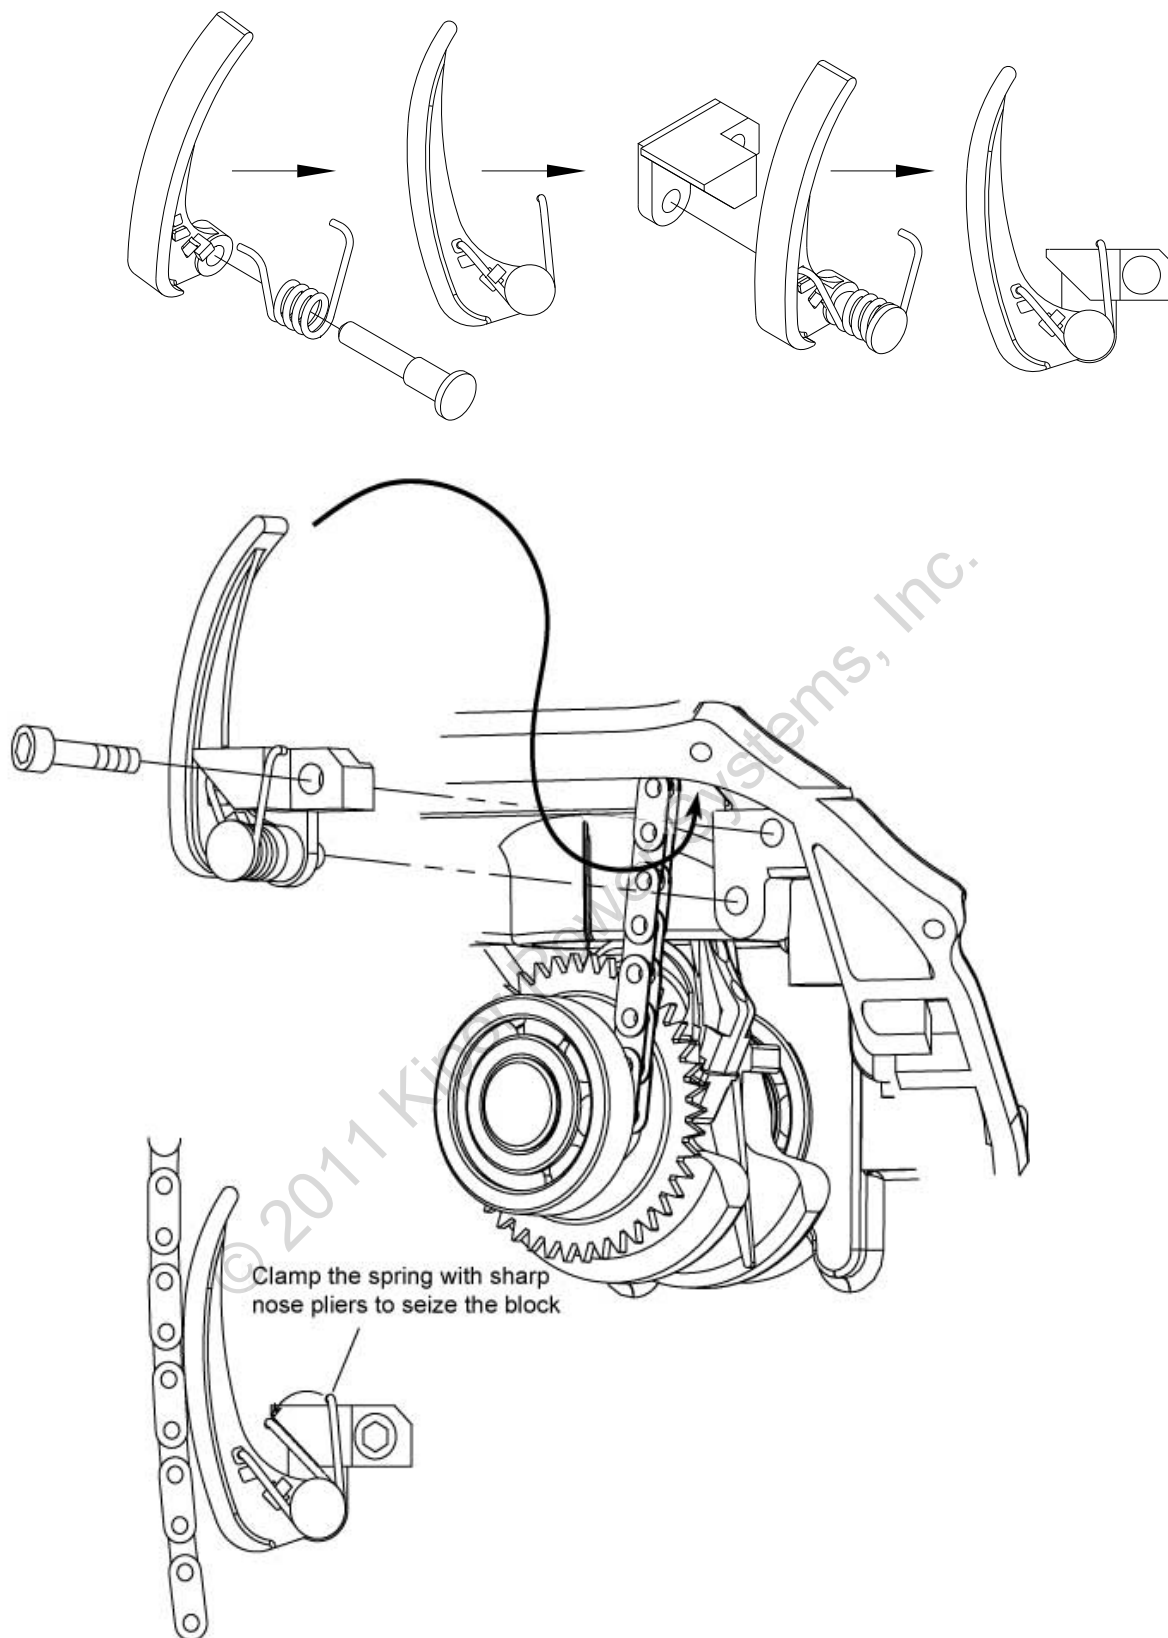


12.5 Assembly of crankcase cover

1. Clear the remaining seal gum on the cylinder block and crankcase cover with cloth.
2. Smear seal gum (1207B) on the cylinder block sealing face, as picture shows.
3. Reassemble the crankcase cover in the opposite direction of disassembly.

Caution

Install the crankcase cover on the cylinder block 3 minutes after smearing. Revolve the crankshaft if necessary.


4. Tighten the crankcase cover bolt slowly, screw to the prescribed torque.
5. Wait for 20 minutes after installation, never refill in oil or start the engine during these 20 minutes.

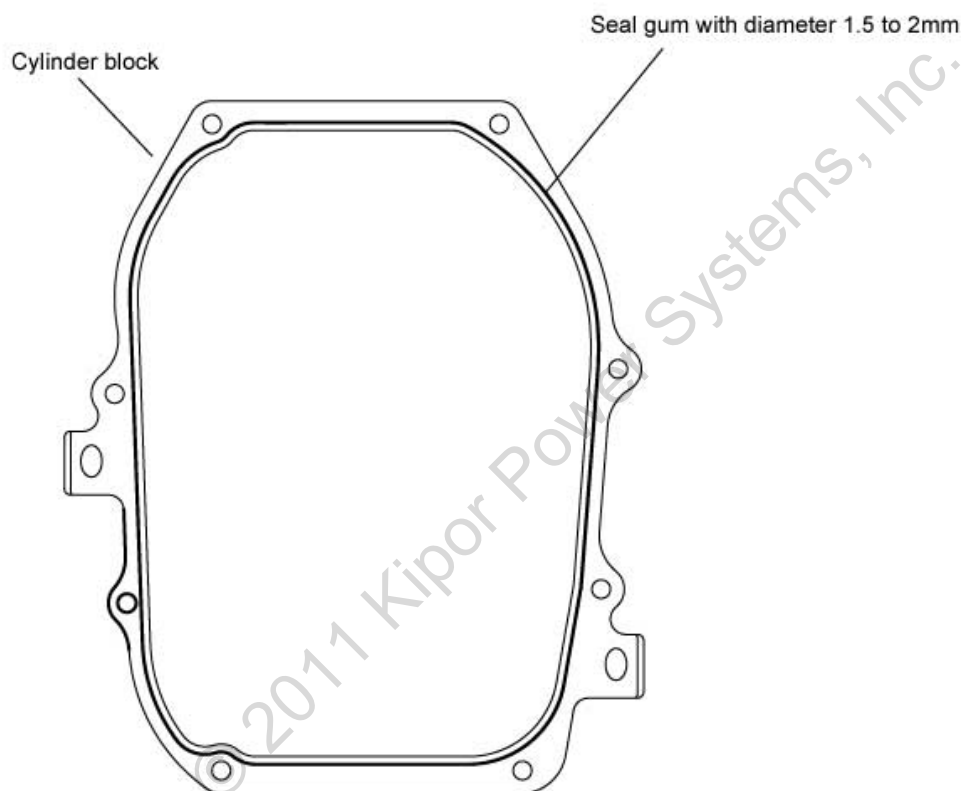

11.6 Inspection


● Inspection of oil alarm

- (1) Stand the oil alarm, check the oil alarm output wire and copper earth wire, there should be no continuity.
- (2) Bottom up the oil alarm; check again, there should be continuity.
- (3) Bottom up the oil alarm completely in the oil, check the float, there should be no continuity.

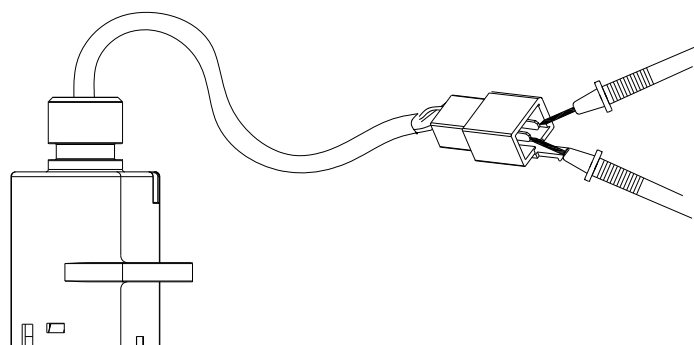


● **Cam height**

Standard(mm)	Service limit(mm)
29.026-29.086	28.15

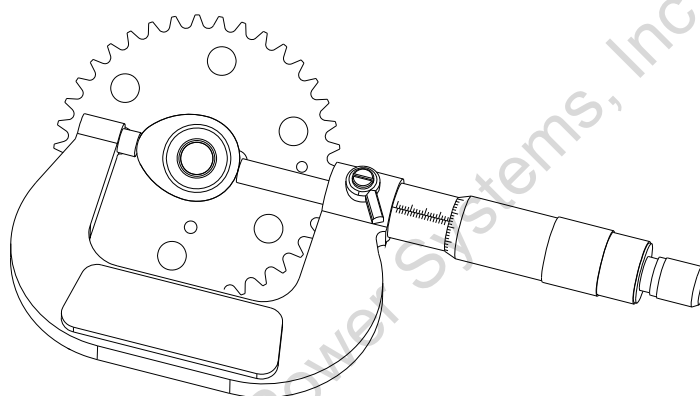

● **Cam inner diameter**


Standard(mm)	Service limit(mm)
9.000-9.015	9.035

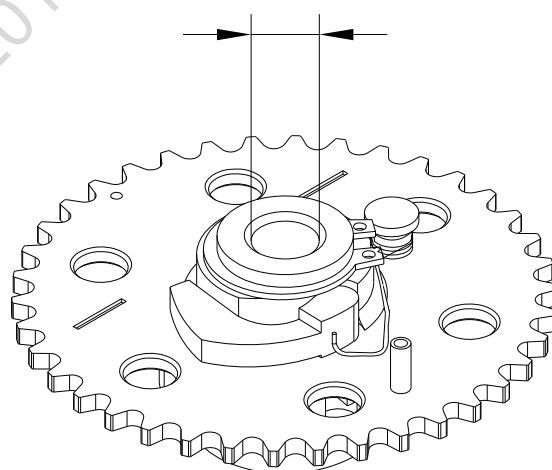

● **Camshaft outer diameter**


Standard(mm)	Service limit(mm)
--------------	-------------------

8.966-8.975	8.920
-------------	-------

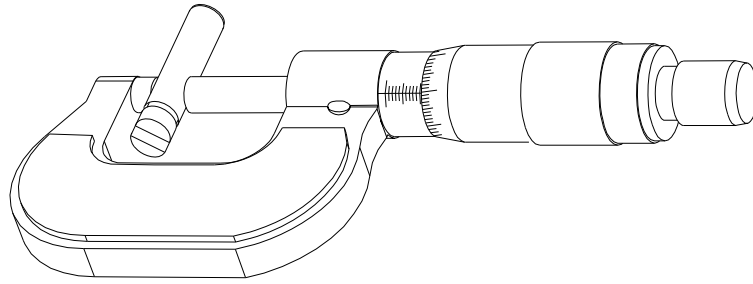


● Decompression block

Check the return spring for damage and weary, make sure the decompression block could perform well.

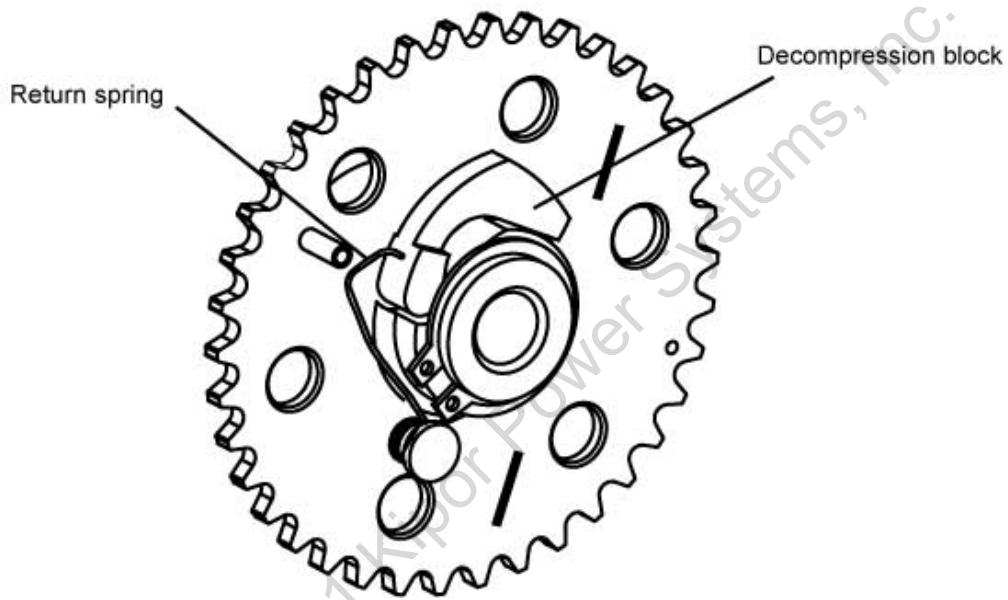


13. CRANKSHAFT/ PISTON

13.1 Disassembly/ Reassembly

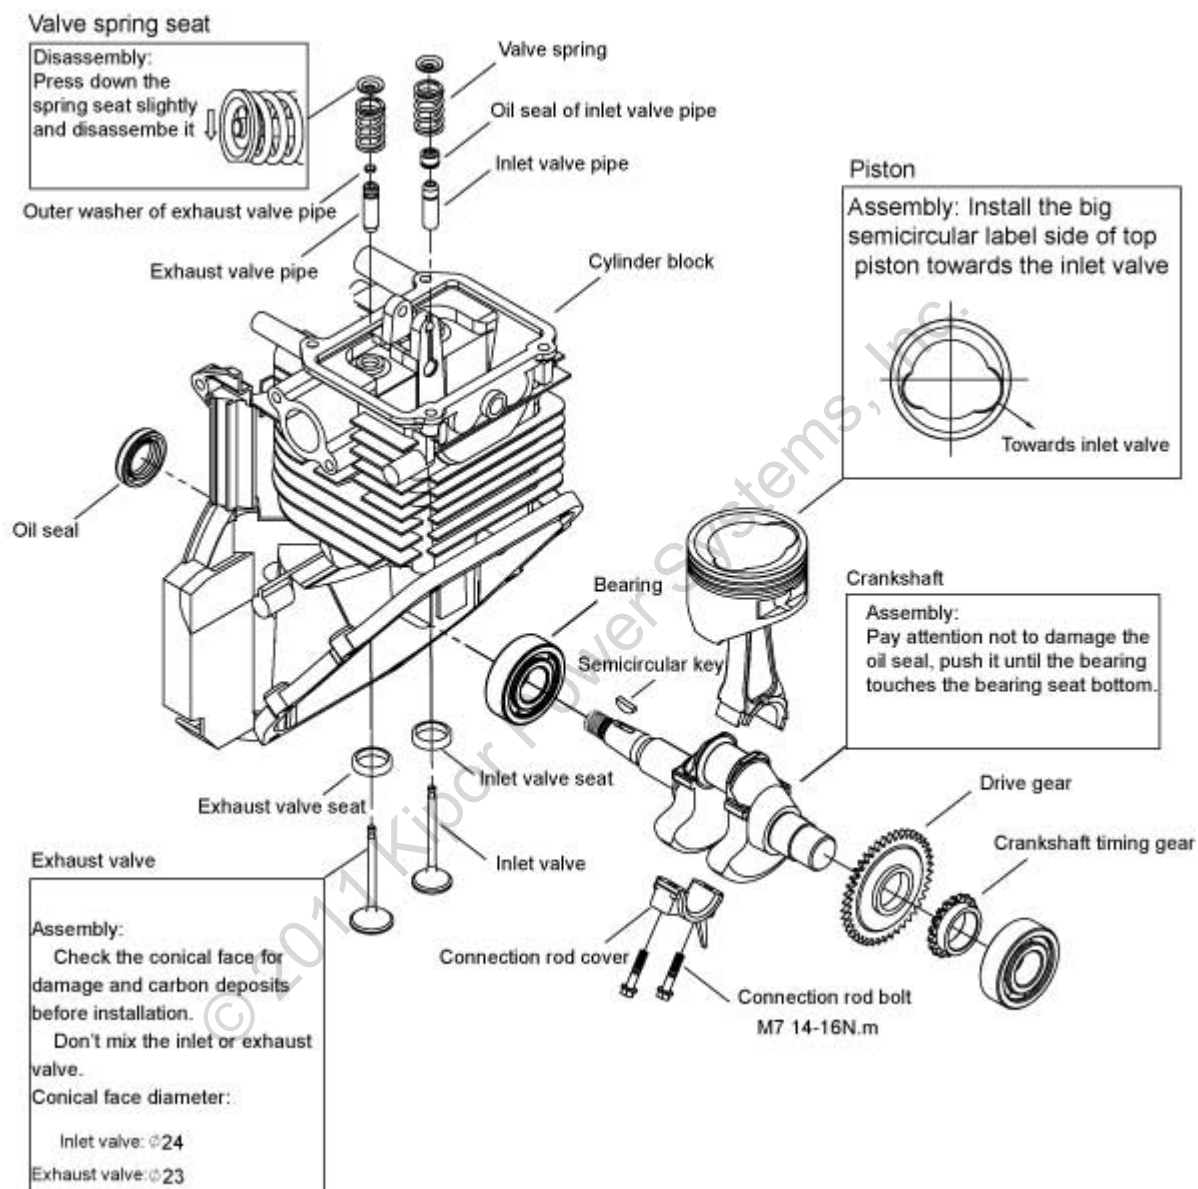


13.3 Piston

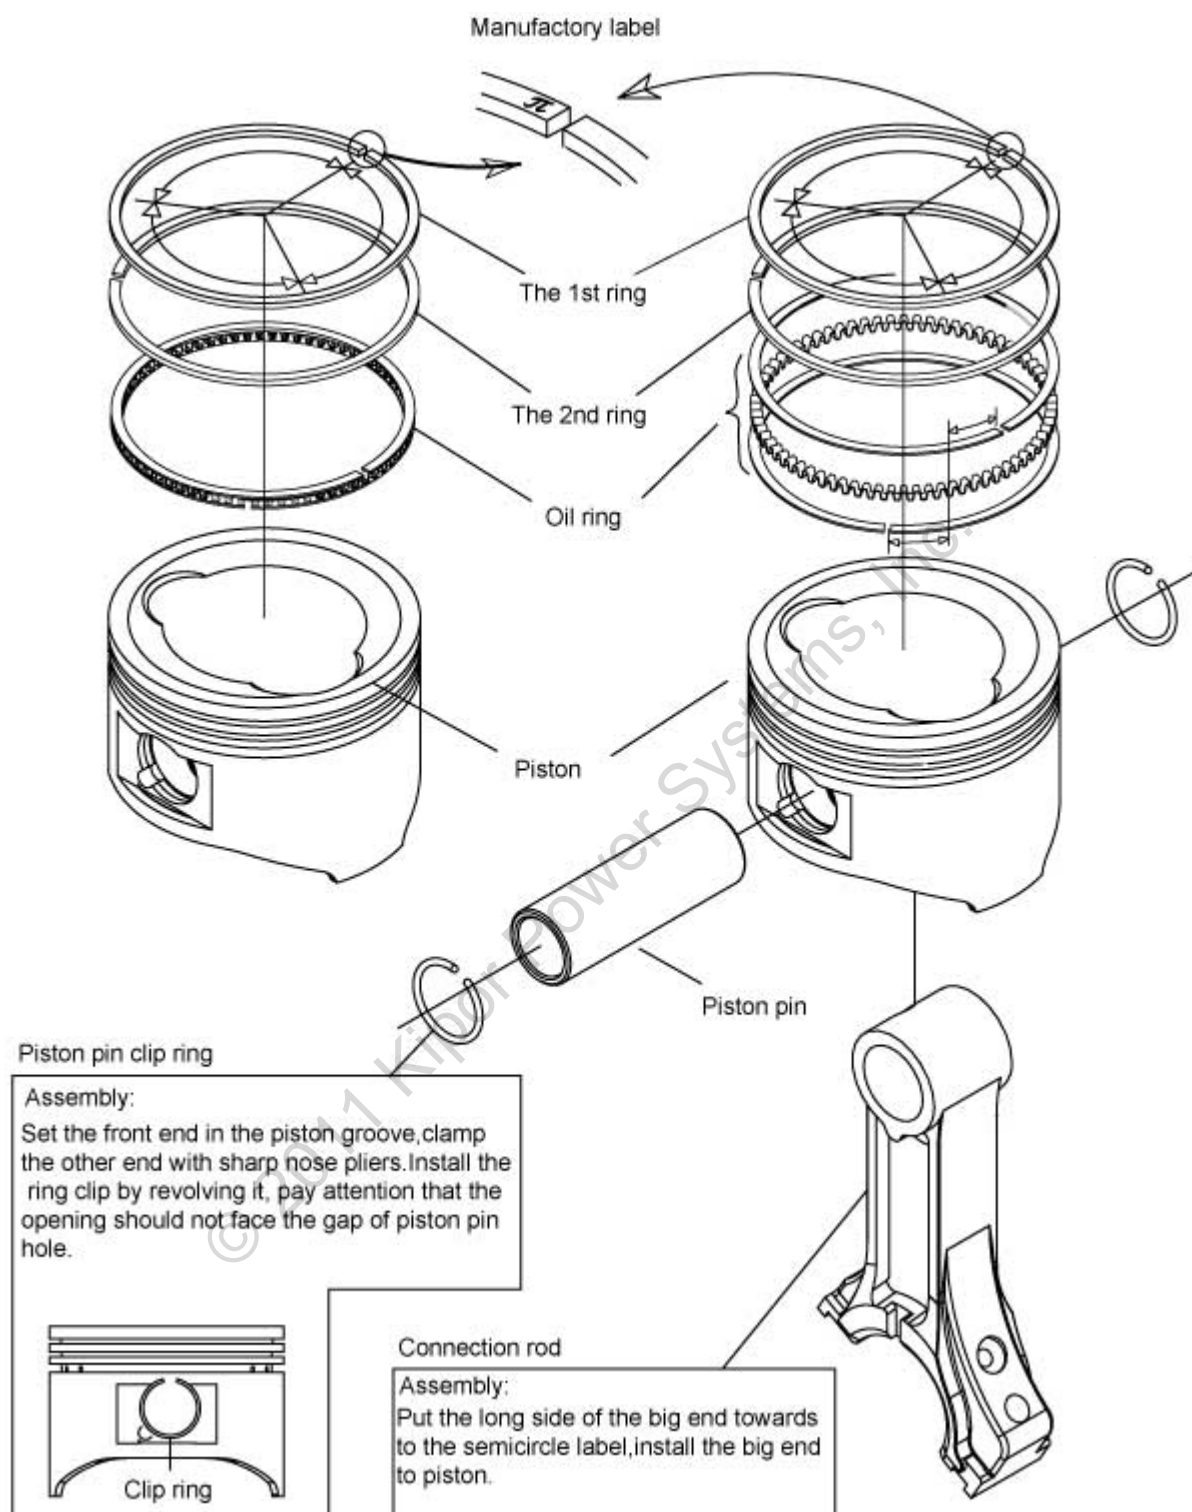

13.3 Inspection


● Free length of valve spring

Standard(mm)	Service limit(mm)
30.5	29

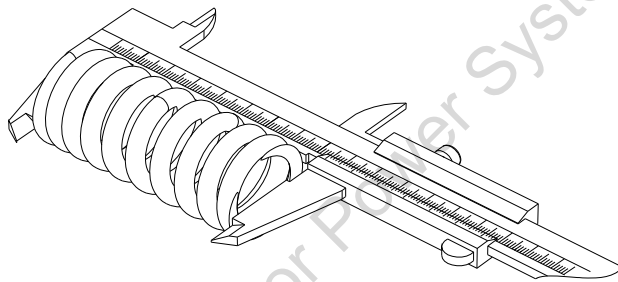


● Valve seat width

Standard(mm)	Service limit(mm)
0.8~1.2	2.0

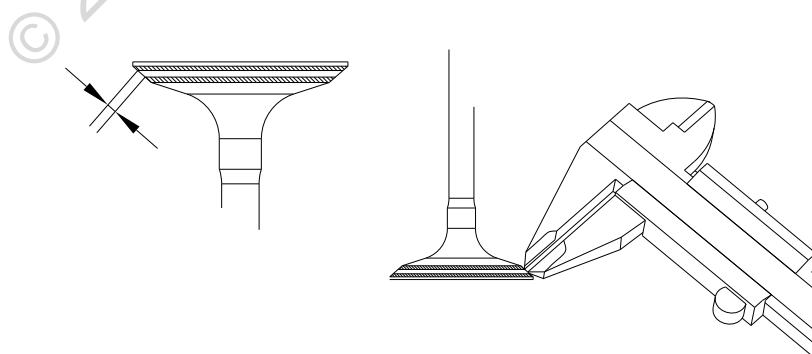


● **Valve rod outer diameter**

	Standard(mm)	Service limit(mm)
Inlet valve	5.46-5.48	5.4
Exhaust valve	5.45-5.47	5.4

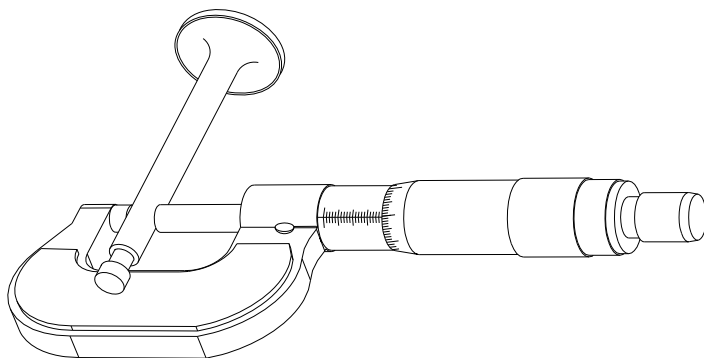

● **Valve guide pipe inner diameter**

	Standard(mm)	Service limit(mm)
Inlet/Exhaust valve	5.500-5.512	5.56

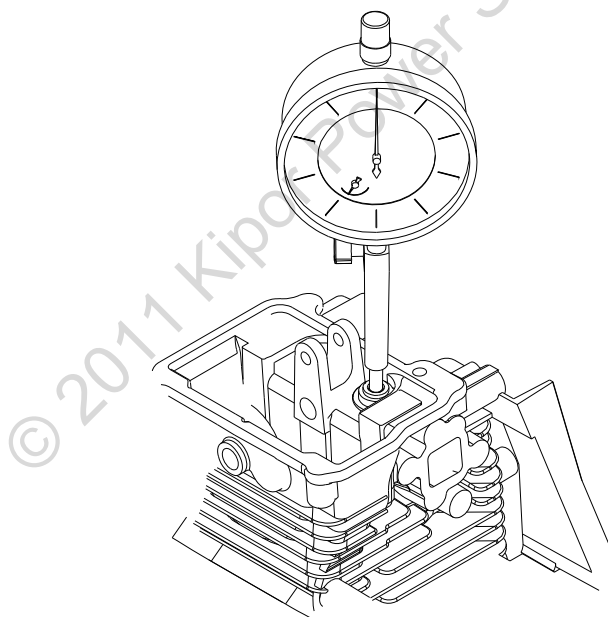


● **Clearance between valve rod and valve guide pipe**

	Standard(mm)	Service limit(mm)
Inlet valve	0.020-0.052	0.10
Exhaust valve	0.030-0.062	0.12


● **Cylinder inner diameter**

Standard(mm)	Service limit(mm)
66.010-66.030	66.115

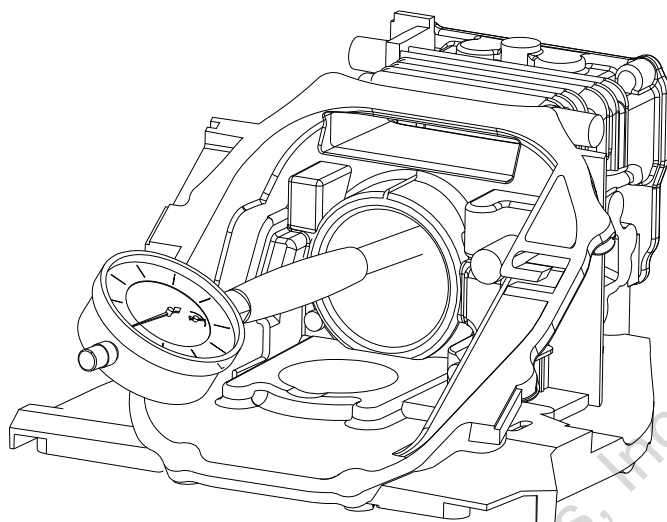

● **Piston skirt outer diameter**

Standard(mm)	Service limit(mm)
65.960-65.980	65.850

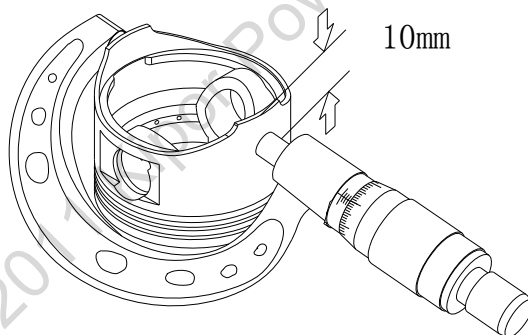


● **Clearance between piston and cylinder**

Standard(mm)	Service limit(mm)
0.030-0.070	0.120

● **Side clearance of piston ring**


Standard(mm)	Service limit(mm)
0.03-0.06	0.15

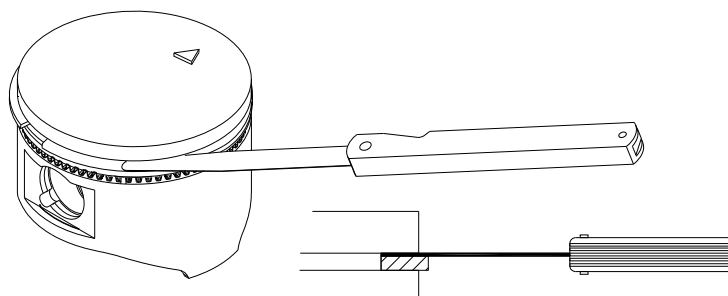

● Piston ring end clearance


Locate the piston ring into cylinder with piston top, and measure the piston end clearance.

Standard(mm)	Service limit(mm)
0.20-0.35	1.0

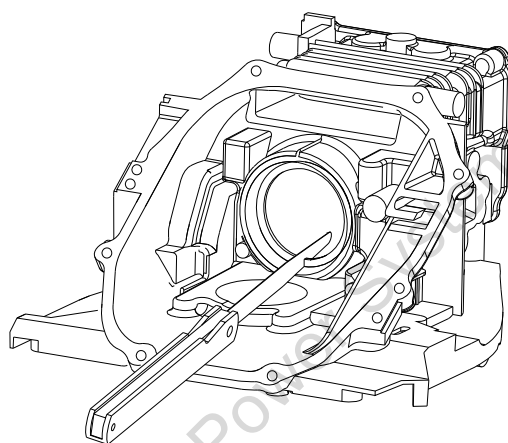


● Piston ring height

	Standard(mm)	Service limit(mm)
The 1 st , 2 nd ring	1.47-1.48	1.37

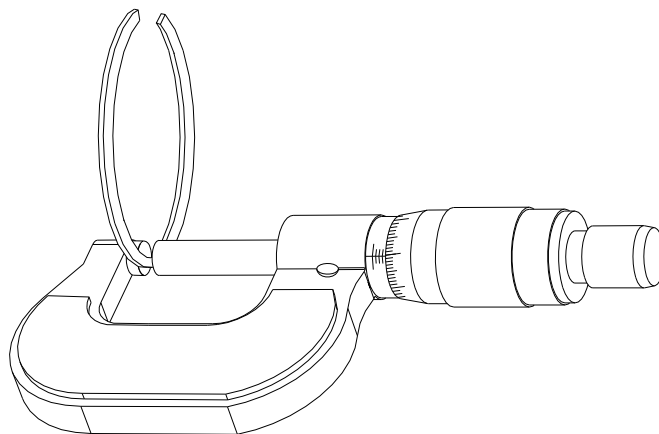


● **Piston pin outer diameter**

Standard(mm)	Service limit(mm)
12.994-13.000	12.950

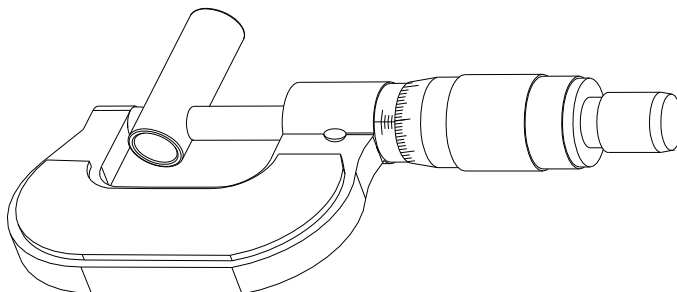

● **Piston pin hole inner diameter**

Standard(mm)	Service limit(mm)
13.002-13.008	13.050

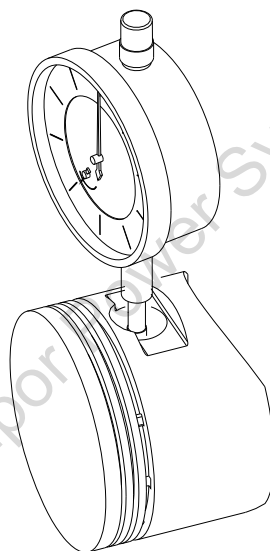


● **Clearance between piston pin and piston pin hole**

Standard(mm)	Service limit(mm)
0.002-0.014	0.080


● **Connection rod small end inner diameter**

Standard(mm)	Service limit(mm)
13.006-13.014	13.077

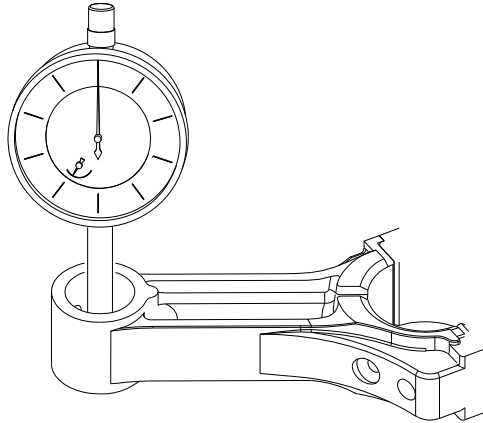


● **Connection rod big end inner diameter**

Standard(mm)	Service limit(mm)
26.020-26.033	26.090

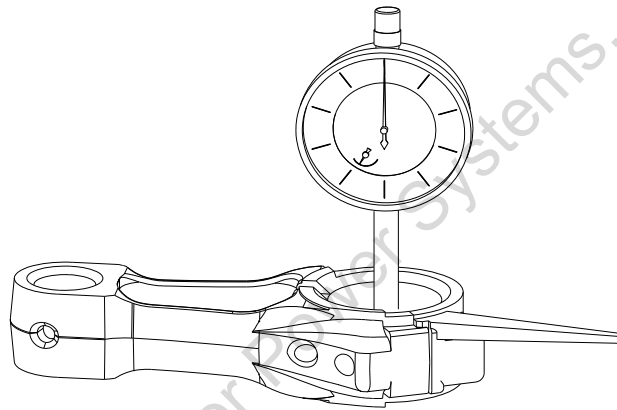


● **Crankshaft neck outer diameter**

Standard(mm)	Service limit(mm)
25.967-25.980	25.900

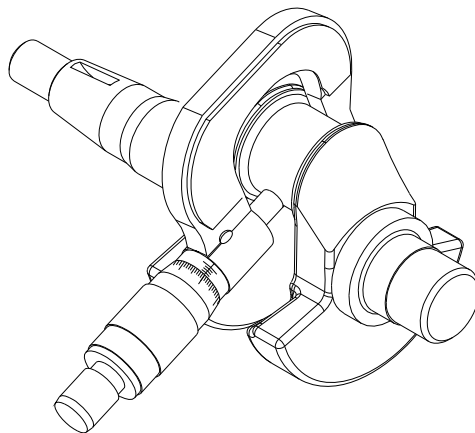

● **Connection rod big end side clearance**


Standard(mm)	Service limit(mm)
0.1-0.4	0.8

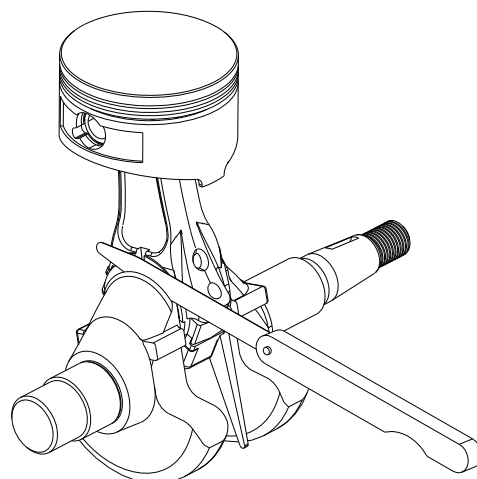


● **Oil film clearance of connection rod big end**

- (1) Wipe off the oil on the surface of crankshaft neck.
- (2) Set the plastic wire feeler at the crankshaft neck and install the connection rod. Tighten the bolt to the prescribed torque, pay attention that don't revolve the crankshaft. The tighten torque is 8 to 10N.m.
- (3) Disassemble the connection rod, measure the plastic wire feeler thickness.
- (4) Replace the connection rod if the clearance exceeds the service limit and measure the clearance again. Grind the crankshaft neck if the new clearance still exceeds the service limit, and use the connection rod less than the standard valve.

Standard(mm)	Service limit(mm)
0.040-0.066	0.120

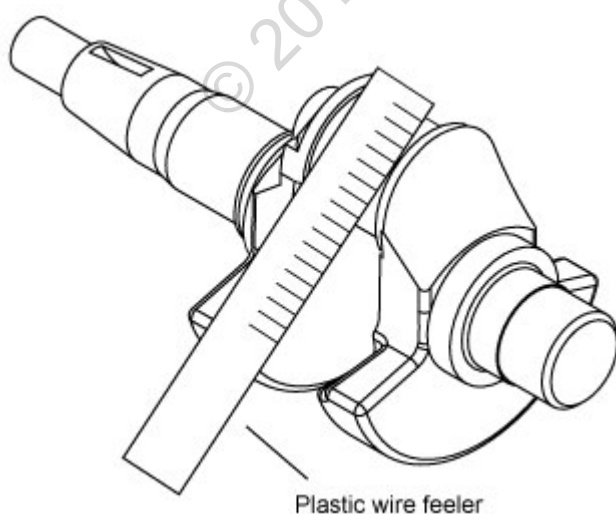

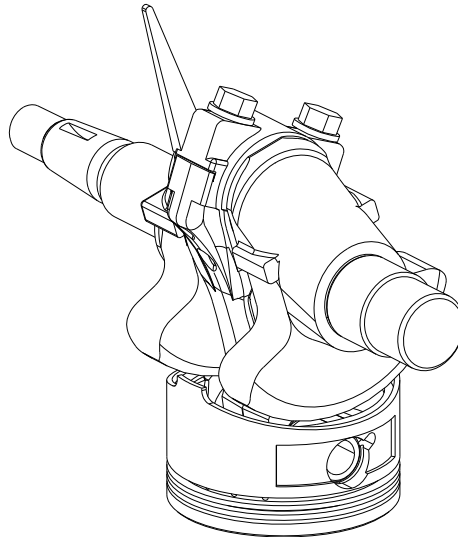

● Bearing vibration

Clear the bearing and dry it, check the clearance between crankshaft journal and connecting rod big end by revolving bearing by hands. Replace for a new bearing if there is abnormal noise or vibration.

