

OPERATION AND PARTS MANUAL



WHISPERWATT™ SERIES MODEL DCA-25SSIU2 60 Hz GENERATOR

PARTS LIST NO. M1870300804

Revision #0 (01/27/06)

**THIS MANUAL MUST ACCOMPANY
THE EQUIPMENT AT ALL TIMES.**



WARNING



CALIFORNIA — Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

HERE'S HOW TO GET HELP

PLEASE HAVE THE MODEL AND SERIAL
NUMBER *ON-HAND* WHEN CALLING

MQ POWER CORPORATE OFFICE

18910 Wilmington Ave. 800-421-1244
Carson, CA 90746 FAX:310-632-2656
Email: mqpower@multiquip.com
Internet: www.mqpower.com

PARTS DEPARTMENT

800-427-1244 FAX:800-672-7877
310-537-3700 FAX:310-637-3284

SERVICE DEPARTMENT

800-835-2551 FAX:310-638-8046
310-537-3700

TECHNICAL ASSISTANCE

800-835-2551 FAX:310-638-8046

WARRANTY DEPARTMENT

800-835-2551, EXT.279 FAX:310-638-8046
310-537-3700, EXT.279

© COPYRIGHT 2005, MULTIQUIP INC.

MQ Power Inc, Ultra-Silent series, and the MQ Power logo are registered trademarks of Multiquip Inc. and may not be used, reproduced, or altered without written permission. All other trademarks are the property of their respective owners and used with permission.

This manual **MUST** accompany the equipment at all times. This manual is considered a permanent part of the equipment and should remain with the unit if resold.

The information and specifications included in this publication were in effect at the time of approval for printing. Illustrations are based on the *DCA-25SSIU2 (60 HZ) Whisperwatt™ Generator*. Multiquip Inc. reserves the right to discontinue or change specifications, design or the information published in this publication at any time without notice and without incurring any obligations.

To find the latest revision of this
publication, visit our website at:
www.mqpower.com




**MQ POWER DCA-25SSIU2 (60 HZ)
WHISPERWATT™ GENERATOR**

California Proposition 65 Warning 2
 Here's How To Get Help 3
 Table Of Contents 4
 Parts Ordering Procedures 5
 Specifications 6
 Dimensions (Side, Front) 7
 Safety Message Alert Symbols 8-9
 Rules for Safe Operation 10-13
 Generator Decals 14-15
 Installation 16-17
 General Information 18
 Major Components 19
 Generator Control Panel 20
 Engine Operating Panel 21
 Output Terminal Panel Familiarization 22-24
 Load Application 25
 Generator Outputs 26
 Gauge Reading 27
 Output Terminal Panel Connections 28-29
 Pre Setup 30-33
 Generator Start-up Procedure 34-36
 Generator Shut-Down Procedure 36
 Maintenance 37-38
 Trailer Maintenance 39-42
 Trailer Wiring Diagram 43
 Generator Wiring Diagram 44
 Engine Wiring Diagram 45
 Generator Troubleshooting 46
 Engine Troubleshooting 47-48
 Explanation of Code in Remarks Column 50
 Suggested Spare Parts 51

COMPONENT DRAWINGS

Generator Assembly 52-53
 Control Box Assembly 54-57
 Engine Operating Panel Assembly 58-59
 Engine & Radiator Assembly 60-63
 Output Terminal Assy. 64-65
 Battery Assembly 66-67
 Muffler Assembly 68-69
 Fuel Tank Assembly 70-71
 Enclosure Assembly 72-75
 Rubber Seal Assembly 72-73
 Name Plate And Decals 74-75
 Rubber Seal Assembly 76-77
 Nameplate and Decals 78-79
 Terms and Condition of Sale — Parts 80

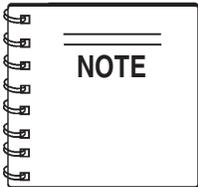

Specification and part number are subject to change without notice.

PARTS ORDERING PROCEDURES

When ordering parts, please supply the following information:

- Dealer account number
- Dealer name and address
- Shipping address (if different than billing address)
- Return fax number
- Applicable model number
- Quantity, part number and description of each part
- Specify preferred method of shipment:
 - ✓ FedEx or UPS Ground
 - ✓ FedEx or UPS Second Day or Third Day
 - ✓ FedEx or UPS Next Day
 - ✓ Federal Express Priority One
 - ✓ DHL
 - ✓ Truck

Note: Unless otherwise indicated by customer, all orders are treated as "Standard Orders", and will ship within 24 hours. We will make every effort to ship "Air Shipments" the same day that the order is received, if prior to 2PM west coast time. "Stock Orders" must be so noted on fax or web forms.



Here's how to get help...

Please have the model and serial number on hand when calling.

MQ POWER CORPORATE OFFICE

18910 Wilmington Ave. 800-421-1244
 Carson, CA 90746 FAX: 310-632-2656
 Email: mqpower@multiquip.com
 Internet: www.mqpower.com

PARTS DEPARTMENT

800-427-1244 FAX: 800-672-7877
 310-537-3700 FAX: 310-637-3284

SERVICE DEPARTMENT

800-835-2551 FAX: 310-638-8046
 310-537-3700

TECHNICAL ASSISTANCE

800-835-2551 FAX: 310-638-8046

WARRANTY DEPARTMENT

800-835-2551, EXT. 279 FAX: 310-638-8046
 310-537-3700, EXT. 279

Place Your Parts Order Via Web or Fax For Even More Savings!

(Domestic USA Dealers Only)

Extra Discounts!

All parts orders which include complete part numbers and are received by our automated web parts order system, or by fax qualify for the following extra discounts:

| Ordered via | Standard orders | Stock orders (\$750 list and above) |
|-------------|-----------------|-------------------------------------|
| Fax | 3% | 10% |
| Web | 5% | 10% |

Special freight allowances when you order 10 or more line items via Web or Fax! **

FedEx Ground Service **at no charge for freight**

No other allowances on freight shipped by any other carrier.

****Common nuts, bolts and washers (all items under \$1.00 list price) do not count towards the 10+ line items.**

NOTE: DISCOUNTS ARE SUBJECT TO CHANGE



MQPOWER
 A Division of Multiquip Inc.
 POST OFFICE BOX 6254
 CARSON, CA 90749
 310-537-3700 • 800-421-1244
 FAX: 310-632-2656
 E-MAIL: mqpower@multiquip.com
 INTERNET: www.mqpower.com

Direct TOLL-FREE access to our Parts Department:

Toll-free nationwide — 800-427-1244

Toll-free FAX — 800-6-PARTS-7 (800/672-7877)

DCA-25SSIU2 (60 HZ)— SPECIFICATIONS

Table 1. Generator Specifications

| Model | DCA-25SSIU2 | |
|----------------------------|---|----------|
| Type | Revolving field, self ventilated, open protected type synchronous generator | |
| Armature Connection | Star with Neutral | Zig Zag |
| Phase | 3 | Single |
| Standby Output | 27.5 KVA (22)KW | 15.8 KW |
| Prime Output | 25 KVA (20 KW) | 14.4 KW |
| Voltage | 240V or 480V | 240/120V |
| Frequency | 60 Hz | |
| Speed | 1,800 rpm | |
| Power Factor | 0.8 | 1 |
| Aux. AC Power | Single Phase, 60 Hz | |
| Voltage | 120 VAC | |
| Output | 4.8 KW (2.4 KW x 2) | |

Table 2. Engine Specifications

| Model | ISUZU AA-4LE2 |
|---------------------------|---|
| Type | 4 Cycle, water-cooled, direct injection |
| No. of Cylinders | 4 cylinders |
| Bore x Stroke | 3.35 in. x 3.78 in. (85 mm x 96 mm) |
| Displacement | 132 cu. in. (2,179 cc) |
| Starting | Electric |
| Coolant Capacity | 1.7 gal. (6.4 liters) |
| Lube Oil Capacity | 2.24 gal. (8.5 liters) |
| Fuel Tank Capacity | 17.2 gal. (65 liters) |
| Fuel Consumption | 1.44 gal. (5.47 L)/hr at full load |
| Battery | 27 (CCA 0° F 525A) X1 |
| Fuel | #2 Diesel Fuel |

DCA-25SSIU2 (60 HZ)— DIMENSIONS (TOP, SIDE AND FRONT)


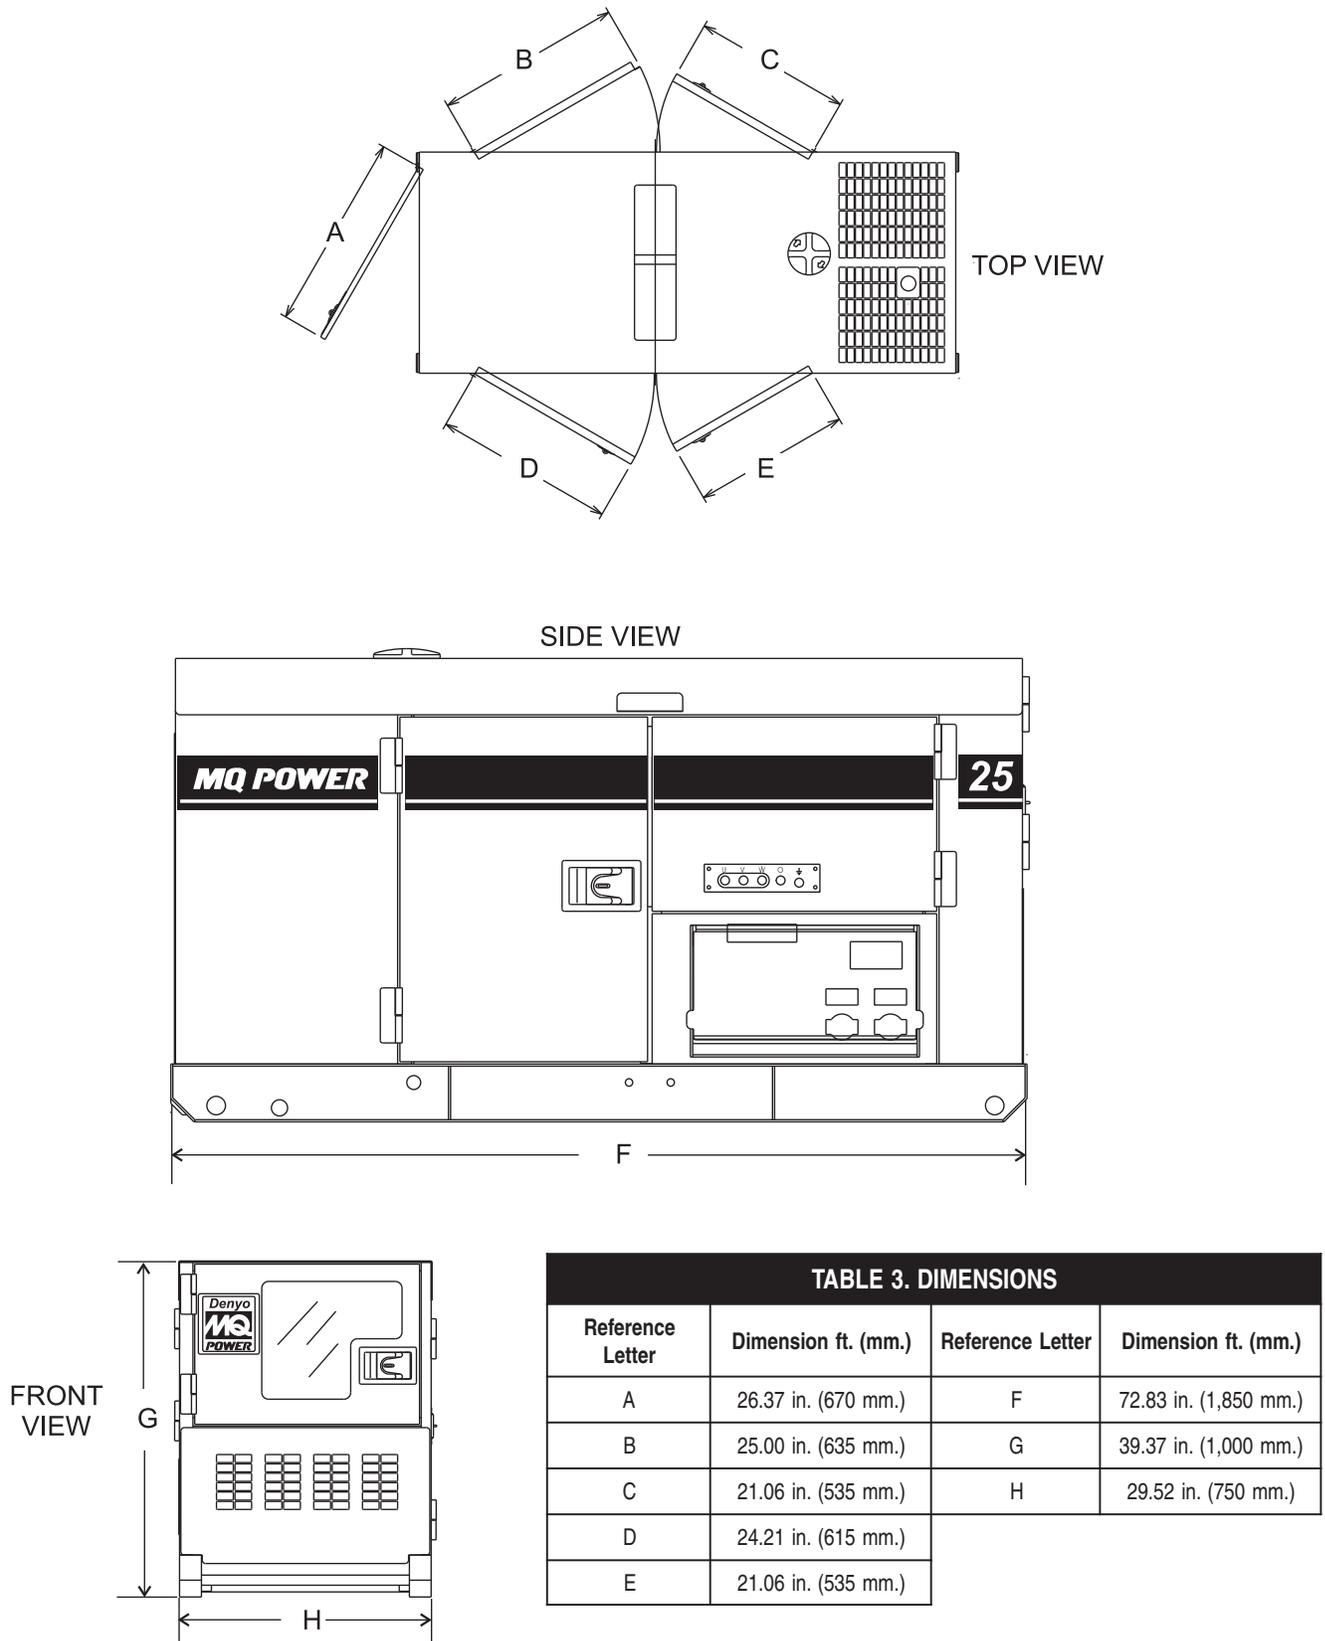


Figure 1. Dimensions

DCA-25SSIU2 (60 HZ) — SAFETY MESSAGE ALERT SYMBOLS

FOR YOUR SAFETY AND THE SAFETY OF OTHERS!

Safety precautions should be followed at all times when operating this equipment. Failure to read and understand the Safety Messages and Operating Instructions could result in injury to yourself and others.

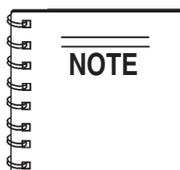

This *Operation and Parts* Manual has been developed to provide complete instructions for the safe and efficient operation of the MQ Power *Model DCA-25SSIU2 (60Hz) Whisperwatt™ Generator*.

Before using this generator, ensure that the operating individual has read and understands all instructions in this manual.

SAFETY MESSAGE ALERT SYMBOLS

The three (3) Safety Messages shown below will inform you about potential hazards that could injure you or others. The Safety Messages specifically address the level of exposure to the operator, and are preceded by one of three words: **DANGER**, **WARNING**, or **CAUTION**.

DANGER

You **WILL** be **KILLED** or **SERIOUSLY** injured if you do not follow directions.

WARNING

You **COULD** be **KILLED** or **SERIOUSLY** injured if you do not follow directions.

CAUTION

You **CAN** be injured if you do not follow directions

HAZARD SYMBOLS


Potential hazards associated with the operation of this equipment will be referenced with "**Hazard Symbols**" which appear throughout this manual, and will be referenced in conjunction with Safety "**Message Alert Symbols**".

WARNING - LETHAL EXHAUST GASES



Diesel engine exhaust gases contain poisonous carbon monoxide. This gas is colorless and odorless, and can cause **DEATH** if inhaled. **NEVER** operate this equipment in a confined area or enclosed structure that does not provide ample free flow air.

WARNING - EXPLOSIVE FUEL

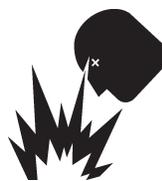

Diesel fuel is extremely flammable, and its vapors can cause an explosion if ignited. **DO NOT** start the engine near spilled fuel or combustible fluids. **DO NOT** fill the fuel tank while the engine is running or hot.

DO NOT overfill tank, since spilled fuel could ignite if it comes into contact with hot engine parts or sparks from the ignition system. Store fuel in approved containers, in well-ventilated areas and away from sparks and flames. **NEVER** use fuel as a cleaning agent.

WARNING - BURN HAZARDS



Engine components can generate extreme heat. To prevent burns, **DO NOT** touch these areas while the engine is running or immediately after operations. **NEVER** operate the engine with heat shields or heat guards removed.

DANGER - ELECTROCUTION HAZARDS

During operation of this generator, there exists the possibility of **electrocution, electrical shock or burn**, which can cause **severe bodily harm** or even **DEATH!**



DCA-25SSIU2 (60 HZ) — SAFETY MESSAGE ALERT SYMBOLS

WARNING - ROTATING PARTS



NEVER operate equipment with covers, or guards removed. Keep **fingers, hands, hair** and clothing away from all moving parts to prevent injury.

CAUTION - RESPIRATORY HAZARDS




ALWAYS wear approved **respiratory** protection.

CAUTION - ACCIDENTAL STARTING



ALWAYS place the **Engine ON/OFF** switch in the **OFF** position and remove the ignition key when the pump is not in use.

CAUTION - SIGHT AND HEARING HAZARDS

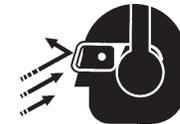

ALWAYS wear approved **eye** and **hearing** protection.

CAUTION - OVER-SPEED CONDITIONS



NEVER tamper with the factory settings of the engine governor or settings. Personal injury and damage to the engine or equipment can result if operating in speed ranges above maximum allowable.

CAUTION - EQUIPMENT DAMAGE MESSAGES

Other important messages are provided throughout this manual to help prevent damage to your generator, other property, or the surrounding environment.



This generator, other property, or the surrounding environment could be damaged if you do not follow instructions.

DCA-25SSIU2 (60 HZ)— RULES FOR SAFE OPERATION

DANGER - READ THIS MANUAL!

Failure to follow instructions in this manual may lead to **serious injury** or even **DEATH!** This equipment is to be operated by trained and qualified personnel only! This equipment is for industrial use only.

The following safety guidelines should always be used when operating the **DCA-25SSIU2 (60 HZ) Generator**:

General Safety:

- **DO NOT** operate or service this equipment before reading this entire manual.



The operator **MUST BE** familiar with proper safety precautions and operations techniques before using generator.

- This equipment should not be operated by persons under 18 years of age.
- **NEVER** operate this equipment without proper protective clothing, shatterproof glasses, steel-toed boots and other protective devices required by the job.



- **NEVER** operate this equipment when not feeling well due to fatigue, illness or taking medicine.
- **NEVER** operate this equipment under the influence or drugs or alcohol.



- **NEVER** use accessories or attachments, which are not recommended by MQ Power for this equipment. Damage to the equipment and/or injury to user may result.
- Manufacturer does not assume responsibility for any accident due to equipment modifications. Unauthorized equipment modification will void all warranties.
- Whenever necessary, replace nameplate, operation and safety decals when they become difficult read.

- **ALWAYS** check the machine for loosened threads or bolts before starting.


- **NEVER** operate the generator in an explosive atmosphere or near combustible materials. An explosion or fire could result causing severe **bodily harm or even death**.

- **NEVER** touch the hot exhaust manifold, muffler or cylinder. Allow these parts to cool before servicing engine or generator.



- **High Temperatures** – Allow the engine to cool before performing service and maintenance functions. Contact with **hot!** components can cause serious burns.

- The engine of this generator requires an adequate free flow of cooling air. **NEVER** operate the generator in any enclosed or narrow area where free flow of the air is restricted. If the air flow is restricted it will cause serious damage to the generator or engine and may cause injury to people. The generator engine gives off **DEADLY** carbon monoxide gas.

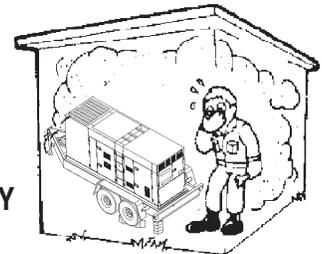

- **DO NOT** place hands or fingers inside generator engine compartment when engine is running.
- **NEVER** run engine without air filter. Severe engine damage may occur.
- **DO NOT** leave the generator running in the **manual mode** unattended.
- Refer to the **Isuzu Engine Owner's Manual** for engine technical questions or information.
- **ALWAYS** store equipment properly when it is not being used. Equipment should be stored in a clean, dry location out of the reach of children.

DCA-25SSIU2 (60 HZ)— RULES FOR SAFE OPERATION

Generator Grounding

To guard against electrical shock and possible damage to the equipment, it is important to provide a good **EARTH** ground.

Article 250 (Grounding) of the **National Electrical Code** (NEC) provides guide lines for proper grounding and specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

The following safety recommendations should also be followed:

- **ALWAYS** make sure generator is properly grounded.
- **NEVER** use gas piping as an electrical ground.
- **ALWAYS** make sure that electrical circuits are properly **grounded** per the **National Electrical Code** (NEC) and local codes before operating generator. Severe **injury** or **DEATH!** by electrocution can result from operating an ungrounded generator.
- **ALWAYS** be sure to use the ground terminal (green wire) when connecting a load to the U,V, and W output terminal lugs.

Electrical Safety

- **ALWAYS** have a qualified electrician perform the generator wiring installation.
- **ALWAYS** make sure generator installation is accordance with the **National Electrical Code** (NEC) and local codes before operating generator.
- **NEVER** use a defective or frayed power cable. Check the cable for cuts in the insulation.
- **NEVER** use a extension cord that is frayed or damaged where the insulation has been cut.
- **ALWAYS** make certain that proper extension cord has been selected for the job. See Table 6.
- **NEVER** power cables or cords **lay in water**.
- **NEVER stand in water** while AC power from the generator is being transfer to a load.

DANGER - ELECTROCUTION HAZARDS


During operation of this generator, there exists the possibility of **electrocution, electrical shock or burn**, which can cause **severe bodily harm** or even **DEATH!**




To avoid these hazards:

NEVER use damaged or worn cables when connecting equipment to the generator. Make sure power connecting cables are securely connected to the generator's output terminals, insufficient tightening of the terminal connections may cause damage to the generator and electrical shock.


NEVER grab or touch a live power cord with wet hands.

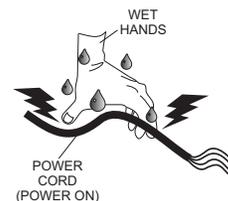

NEVER touch output terminals during operation. This is extremely dangerous. **ALWAYS** stop the machine and place the circuit breaker in the **OFF** position when contact with the output terminals is required.

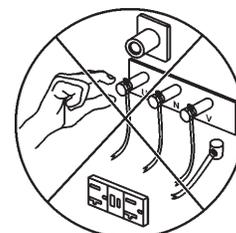

Backfeed to a utility system can cause **electrocution** and or property damage. **DO NOT** connect to any building's electrical system except through an approved device or after building main switch is opened. **ALWAYS** have a licensed electrician perform the installation

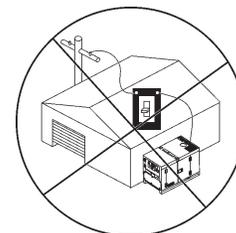

DCA-25SSIU2 (60 HZ)— RULES FOR SAFE OPERATION

Maintenance Safety

- The electrical voltage required to operate the generator can cause severe injury or even death through physical contact with live circuits. Turn all circuit breakers **OFF** before performing maintenance on the generator.
- **NEVER** lubricate components or attempt service on a running machine.
- **ALWAYS** disconnect the **NEGATIVE battery terminal** before performing service on the generator.
- Follow all Battery Safety Guidelines listed in this manual when handling or servicing the generator.
- **ALWAYS** allow the machine a proper amount of time to cool before servicing.
- Keep the machinery in proper running condition.
- Fix damage to the machine immediately and always replace broken parts.
- **ALWAYS** service air cleaner frequently to prevent engine malfunction.

WARNING - BURN HAZARDS

To prevent burns, **DO NOT** touch or open any of the below mentioned components while the engine is running or immediately after operations. Always allow sufficient time for the engine and generator to cool before performing maintenance.




- **Radiator Cap** - Removing the radiator cap while the engine is hot will result in high pressurized, boiling water to gush out of the radiator, causing severe scalding to any persons in the general area of the generator.
- **Coolant Drain Plug** - Removing the coolant drain plug while the engine is hot will result in hot coolant gushing out of the coolant drain plug, therefore causing severe scalding to any persons in the general area of the generator.
- **Engine Oil Drain Plug** - Removing the engine oil drain plug while the engine is hot will result in hot oil gushing out of the oil drain plug, therefore causing severe scalding to any persons in the general area of the generator.

Battery Safety

Use the following guidelines when handling the battery:


- The battery contains acids that can cause injury to the eyes and skin. To avoid eye irritation, **always** wear safety glasses.
- Use well insulated gloves when picking up the battery.

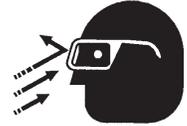

DANGER - EXPLOSION HAZARDS

The risk of an explosion exists when performing service on the battery. To avoid **severe injury** or **DEATH**:

- **DO NOT** drop the battery. There is the possibility of risk that the battery may explode.
- **DO NOT** expose the battery to open flames, sparks, cigarettes etc. The battery contains combustible gases and liquids. If these gases and liquids come in contact with a flame or spark, an explosion could occur.

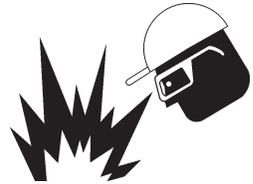

- **ALWAYS** keep the battery charged. If the battery is not charged a buildup of combustible gas will occur.
- **ALWAYS** keep battery charging and cables in good working condition. Repair or replace all worn cables.
- **ALWAYS** recharge the battery in a vented air environment, to avoid risk of a dangerous concentration of combustible gases.
- In case the battery liquid (dilute sulfuric acid) comes in contact with **clothing or skin**, rinse skin or clothing immediately with plenty of water.
- In case the battery liquid (dilute sulfuric acid) comes in contact with your **EYES**, rinse eyes immediately with plenty of water and contact the nearest doctor or hospital to seek medical attention.

DCA-25SSIU2 (60 HZ)— RULES FOR SAFE OPERATION

Towing & Transporting Safety

To reduce the possibility of an accident while transporting the generator on public roads, always make sure the trailer that supports the generator and the towing vehicle are in good operating condition and both units are mechanically sound.

The following list of safety precautions should be followed when towing your generator:

CAUTION - FOLLOW TOWING REGULATIONS

Check with your local county or state safety towing regulations, in addition to meeting **Department of Transportation (DOT) Safety Towing Regulations**, before towing your generator.

- **ALWAYS** shutdown engine before transporting.
- Tighten both fuel tank caps securely.
- If generator is mounted on a trailer, make sure trailer complies with all local and state safety transportation laws. Follow the listed **Towing & Transporting Safety** guidelines for basic towing techniques.
- Make sure the hitch and coupling of the towing vehicle are rated equal to, or greater than the trailer "gross vehicle weight rating."
- **ALWAYS** inspect the hitch and coupling for wear. **NEVER** tow a trailer with defective hitches, couplings, chains etc.
- Check the tire air pressure on both towing vehicle and trailer. **Trailer tires should be inflated to 50 psi cold.** Also check the tire tread wear on both vehicles.
- **ALWAYS** make sure the trailer is equipped with a "Safety Chain".
- **ALWAYS** attach trailer's safety chains to towing vehicle properly.
- **ALWAYS** make sure the vehicle and trailer directional, backup, brake, and trailer lights are connected and working properly.
- DOT Requirements include the following:
 - Connect and test electric brake operation.
 - Secure portable power cables in cable tray with tie wraps.

- The maximum speed for highway towing is **55 MPH** unless posted otherwise. Recommended off-road towing is not to exceed **15 MPH** or less depending on type of terrain.
- Place **chock blocks** underneath wheel to prevent **rolling**, while parked.
- Use the trailer's swivel jack to adjust the trailer height to a level position while parked.
- Avoid sudden stops and starts. This can cause skidding, or jack-knifing. Smooth, gradual starts and stops will improve towing.
- Avoid sharp turns.
- Trailer should be adjusted to a level position at all times when towing.
- Raise and lock trailer wheel stand in up position when transporting.
- The maximum speed for highway towing is **55 MPH** unless posted otherwise. Recommended off-road towing is not to exceed **15 MPH** or less depending on type of terrain.
- Place **support blocks** underneath the trailer's bumper to prevent **tipping**, while parked.
- Avoid sharp turns to prevent rolling.
- **DO NOT** transport generator with fuel in tank.

Emergencies

- **ALWAYS** know the location of the nearest **fire extinguisher**.
- **ALWAYS** know the location of the nearest and **first aid kit**.
- **ALWAYS** know the location of the nearest phone or **keep a phone on the job site**, in case of emergencies.
- **ALWAYS** have easy access to the phone numbers of the nearest **Ambulance, Doctor** and **Fire Department**. This information will be invaluable in the case of an emergency.



DCA-25SSIU2 (60 HZ)— GENERATOR DECALS

The **DCA-25SSIU2 (60 Hz) Whisperwatt™ Generator** is equipped with a number of safety decals (Figures 2 & 3). These decals are provided for operator safety and maintenance information. The illustration below and on the preceding page show the decals as they appear on the machine. Should any of these decals become unreadable, replacements can be obtained from your dealer.

OPERATING PROCEDURES

Manual Starting

1. Check the engine oil, coolant, and fuel levels, Replenish if necessary.
2. Place all Generator Circuit Breakers in the "OFF" position and close all doors.
3. Check that the Voltage select switch (or the Voltage change-over board) is present at desired voltage.
(In case of generator having multiple voltage ratings.)
4. Set the Engine speed switch to the "LOW" position.
5. Turn the Auto-Off/Reset/Manual switch to the "Manual" position to start the engine. If the engine fails to start in the specified number of attempts, the overcrank lamp will indicate and the Auto-Off/Reset/Manual switch must be returned to the "Off/Reset" position before proceeding.
6. When the engine is ready for starting during cold weather operating conditions, push the Intake Heater button for approximately 30 seconds. Start engine using the Auto-Off/Reset/Manual switch to the "Manual" position. As soon as the engine starts, release the button.
If the engine still does not start, utilize the water heater until water is warm. (If additional water heater is supplied.)
7. After starting, allow the engine to run for 1 or 2 minutes to warm-up. At temperatures below freezing, this time period must be extended to 2 to 4 minutes.
8. When the engine starts, immediately check for abnormal noise, vibration, fluid leakage or any indication of a problem. Check the control panel gauges. If all in normal, let the engine remain at the "Low" position for a short time, depending on the ambient conditions, warm up.
9. After sufficient warm-up time has elapsed, set the Engine speed switch to the "High" position and the unit is ready for operation.
10. Check the No-Load speed as shown in the table below.
50% operation—Approx. 1600 (1800 rpm)
11. Adjust the Voltage Regulator to the specified voltage.

Manual Stopping

1. Place the Generator Circuit Breakers in the "OFF" position.
2. Set the Engine speed switch to the "LOW" position, and allow the unit to cool for a few minutes.
3. Turn the Auto-Off/Reset/Manual switch, to the "Off/Reset" position.

Auto Starting/Stopping

1. With the Auto/Manual switch in the Auto position, the Auto Starting/Stopping controller monitors remote start contacts. Closure of the remote start contacts will begin engine cranking. When the contacts are opened cranking will stop or if running the engine will stop. All functions of the Automatic Shutdown System work as in Manual Starting/stopping.
2. For cold weather conditions utilize the water heater until water is warm. If the engine still does not start, please operate as in Manual Starting.

Emergency Stopping

1. Place the Generator Circuit Breakers in the "OFF" position.
2. Turn the Auto-Off/Reset/Manual switch to the "Off/Reset" position.

M35200010

P/N M3552000103

SAFETY INSTRUCTIONS

Improper operation of this machine can cause severe injury or death.

- Read the instruction manual carefully before operating or servicing.

This machine should only be operated by a person with sufficient knowledge and skill to ensure safe operation. High voltage circuits are located inside the output terminal cover and control panel.


- Close the cover and control panel before operating.

Moving parts and hot surfaces are contained within the enclosure.


- Close all doors and lock them before operating.

M92010030

P/N M9520100304

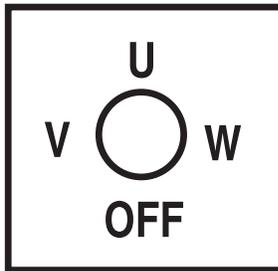

P/N M9520000104

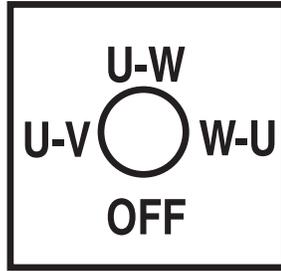

P/N M9520000204



P/N M950000004



P/N M9510200002


DIESEL FUEL
M90050000
P/N M9500500004



P/N M9500300104



P/N M9500300004

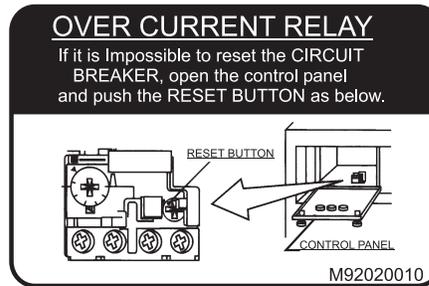

P/N M9520200104



P/N M9500500104

WATER • OIL CHECK AND FILL DAILY
M90300010

P/N M9503000103

Figure 2. Generator Decals

DCA-25SSIU2 (60 HZ)— GENERATOR DECALS

| | | | |
|---|--|--|---|
|  | ⚠ WARNING | ⚠ WARNING | ⚠ WARNING |
| | ELECTRIC SHOCK HAZARD <ul style="list-style-type: none"> Do not touch output terminals when this machine is operating. Turn power off before servicing. | ELECTRIC SHOCK HAZARD <ul style="list-style-type: none"> Always complete the grounding path from the ground terminal on this genset to an external grounding source. See instruction manual for details. | <ul style="list-style-type: none"> Before connecting this generator to any building's electrical system, a licensed electrician must install an isolation (transfer) switch. Serious injury or death may result without this transfer switch. |

M9520 100503

P/N M9520100503

| | |
|---|--|
|  | ⚠ WARNING |
| | HOT COOLANT can cause severe burns. <ul style="list-style-type: none"> Do not remove cap if radiator is hot. |

M90310000

P/N M9503100004

| | |
|--|--|
|  | ⚠ WARNING |
| | ENGINE EXHAUST can cause severe injury or death. <ul style="list-style-type: none"> Use only in open, well ventilated areas or vent exhaust outside. |

M90320000

P/N M9503200004

| |
|---------------------|
| DANGER |
| HIGH VOLTAGE |

M9520100401

P/N M9520100404

| |
|------------------------------|
| ⚠ CAUTION |
| Stop engine before switching |

M9520100204

P/N M9520100204

| | |
|---|---|
|  | ⚠ CAUTION |
| | MOVING PARTS can cause severe injury. <ul style="list-style-type: none"> Do not operate with doors open. Stop engine before servicing. |

M90300000

P/N M9503000004

| |
|--|
| NOTE |
| To use 50 amp receptacles, adjust the voltage selector switch to the single phase position and the main line circuit breaker to the on position. |

P/N M1500020

P/N M1550000204

| | |
|---|---|
|  | ⚠ CAUTION |
| | <ul style="list-style-type: none"> HOT PARTS can burn skin. Do not touch until the machine has sufficiently cooled. |

M91010000

P/N M9510100004

| | |
|--|---|
|  | ⚠ WARNING |
| | ELECTRIC SHOCK HAZARD <ul style="list-style-type: none"> Do not touch output terminals while this machine is operating. Turn power off before servicing. |

P/N M9520100503

| | |
|---|---|
|  | ⚠ WARNING |
| | ELECTRIC SHOCK HAZARD <ul style="list-style-type: none"> Do not touch internal wiring or connections while this machine is operating. Turn power off before servicing. |

M92010000

P/N M9520100004

Figure 3. Generator Decals (Continued)

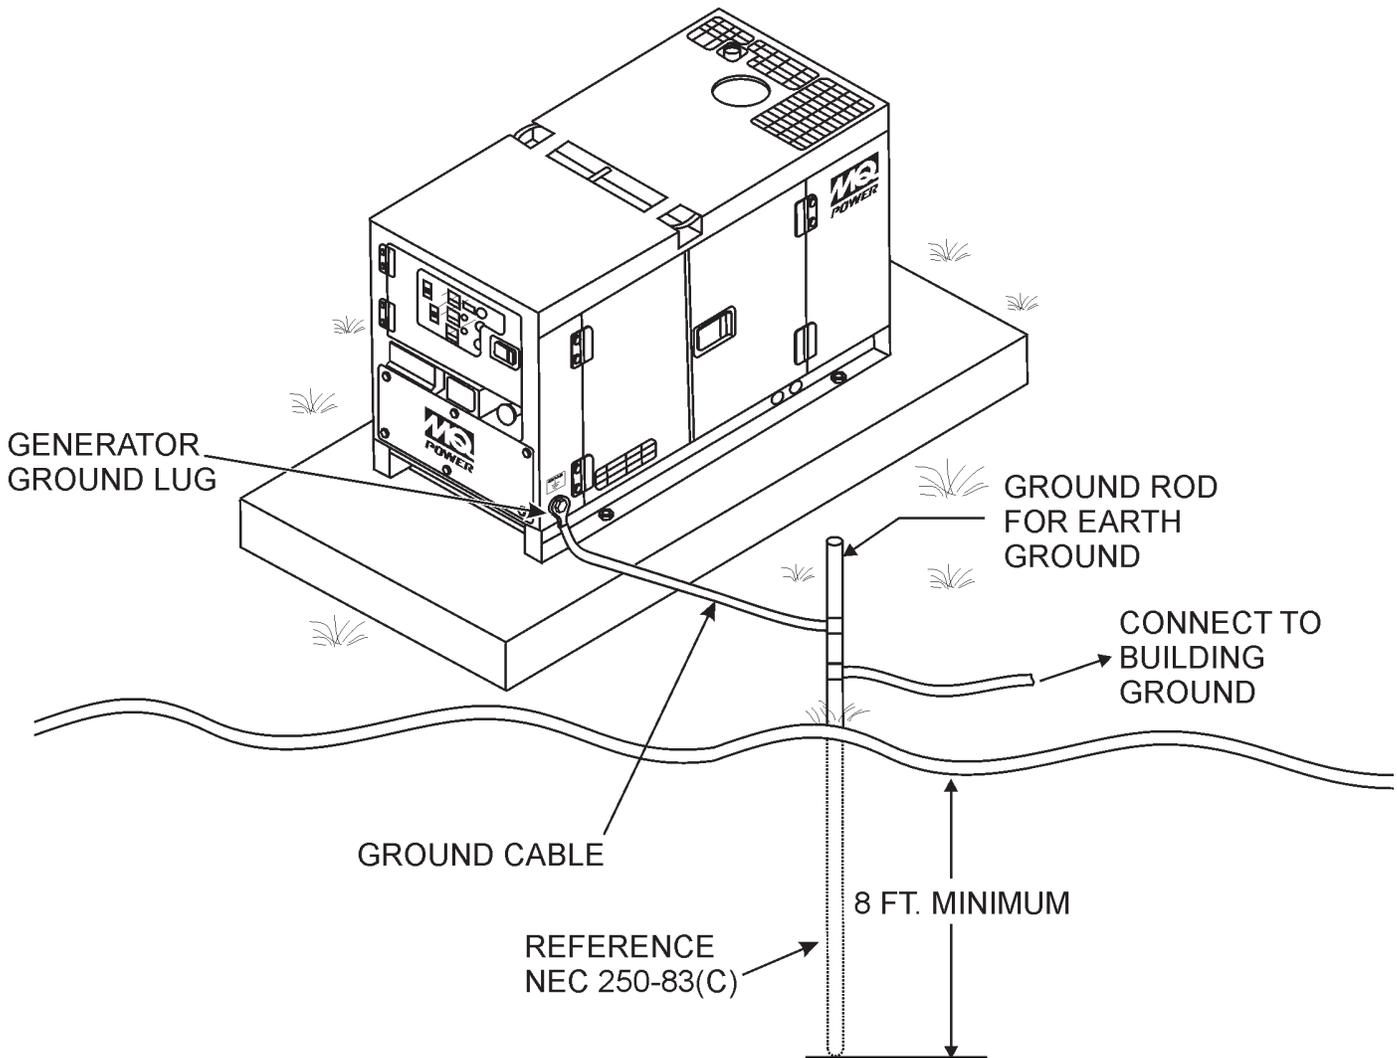


Figure 4. Typical Generator Grounding Application

Outdoor Installation

Install the generator in a area that is free of debris, bystanders, and overhead obstructions. Make sure the generator is on secure level ground so that it cannot slide or shift around. Also install the generator in a manner so that the exhaust will not be discharged in the direction of nearby homes.

The installation site must be relatively free from moisture and dust. All electrical equipment should be protected from excessive moisture. Failure to do will result in deterioration of the insulation and will result in short circuits and grounding.

Foreign materials such as dust, sand, lint and abrasive materials have a tendency to cause excessive wear to engine and alternator parts.

CAUTION - EXHAUST HAZARD

Pay close attention to ventilation when operating the generator inside tunnels and caves. The engine exhaust contains noxious elements. Engine exhaust must be routed to a ventilated area.

Indoor Installation

Exhaust gases from diesel engines are extremely poisonous. Whenever an engine is installed indoors the exhaust fumes must be vented to the outside. The engine should be installed at least two feet from any outside wall. Using an exhaust pipe which is too long or too small can cause excessive back pressure which will cause the engine to heat excessively and possibly burn the valves.

Mounting

The generator must be mounted on a solid foundation (such as concrete) and set firmly on the foundation to isolate vibration of the generator when it is running. The generator must set at least 6 inches above the floor or grade level (in accordance to NFPA 110, Chapter 5-4.1). **DO NOT** remove the metal skids on the bottom of the generator. They are to resist damage to the bottom of the generator and to maintain alignment.

Generator Grounding

To guard against electrical shock and possible damage to the equipment, it is important to provide a good **EARTH** ground. See Figure 4 for a typical grounding configuration.

Article 250 (Grounding) of the National Electrical Code (NEC) provides guide lines for proper grounding and specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

NEC articles 250-64(b) and 250-66 set the following grounding requirements:

1. Use one of the following wire types to connect the generator to earth ground.
 - a. Copper - 10 AWG (5.3 mm²) or larger.
 - b. Aluminum - 8 AWG (8.4 mm²) or larger.
2. When grounding the generator (Figure 5) connect the ground cable between the lock washer and the nut on the generator and tighten the nut fully. Connect the other end of the ground cable to earth ground.
3. NEC article 250-52(c) specifies that the earth ground rod should be buried a minimum of 8 ft. into the ground.



When connecting the generator to any buildings electrical system **ALWAYS** consult with a licensed electrician.

DCA-25SSIU2 (60 HZ)— GENERAL INFORMATION

DCA-25SSIU2 (60 Hz) Series Familiarization

Generator

The MQ Power Model DCA-25SSIU2 (60 Hz) is a 20 kW generator (Figure 5) that is designed as a high quality portable (requires a trailer for transport) power source for telecom sites, lighting facilities, power tools, submersible pumps and other industrial and construction machinery.

Engine Operating Panel

The "Engine Operating Panel" is provided with the following:

- Tachometer
- Water Temperature Gauge
- Water Temperature Alarm Lamp
- Oil Pressure Gauge
- Oil Pressure Alarm Lamp
- Charging Ammeter Gauge
- Fuel Level Gauge
- Pre-heat Lamp
- Panel Light/Panel Light Switch
- Ignition Switch
- Fuel Filter Water Level Alarm Lamp

Generator Control Panel

The "Generator Control Panel" is provided with the following:

- Frequency Meter (Hz)
- AC Ammeter (Amps)
- AC Voltmeter (Volts)
- Ammeter Change-Over Switch
- Voltmeter Change-Over Switch
- Voltage Regulator
- 3-Pole, 60 amp Main Circuit Breaker
- "Control Box" (located behind the Gen. Control Panel)
 - Automatic Voltage Regulator
 - Current Transformer
 - Over-Current Relay
 - Voltage Rectifier
 - Starter Relay
 - Voltage Selector Switch

Output Terminal Panel

The "Output Terminal Panel" is provided with the following:

- Two 120/240V output receptacles (CS-6369), 50A
- Two auxiliary circuit breakers, 50A
- Two 120V output receptacles (GFCI), 20A
- Two GFCI circuit breakers, 20A
- Five output terminal lugs (3Ø power)
- Battery Charger (Optional)
- Water Heater (Optional)

Open Delta Excitation System

The DCA-25SSIU2 (60 HZ) generator is equipped with the state of the art "**Open-Delta**" excitation system. The open delta system consist of an electrically independent winding wound among stationary windings of the AC output section.

There are four connections of the open delta A, B, C and D. During steady state loads, the power from the voltage regulator is supplied from the parallel connections of A to B, A to D, and C to D. These three phases of the voltage input to the voltage regulator are then rectified and are the excitation current for the exciter section.

When a heavy load, such as a motor starting or a short circuit occurs, the automatic voltage regulator (AVR) switches the configuration of the open delta to the series connection of B to C. This has the effect of adding the voltages of each phase to provide higher excitation to the exciter section and thus better voltage response during the application of heavy loads.

The connections of the AVR to the AC output windings are for sensing only. No power is required from these windings.

The open-delta design provides virtually unlimited excitation current, offering maximum motor starting capabilities. The excitation does not have a "**fixed ceiling**" and responds according the demands of the required load.

DCA-25SSIU2 (60 HZ)— MAJOR COMPONENTS

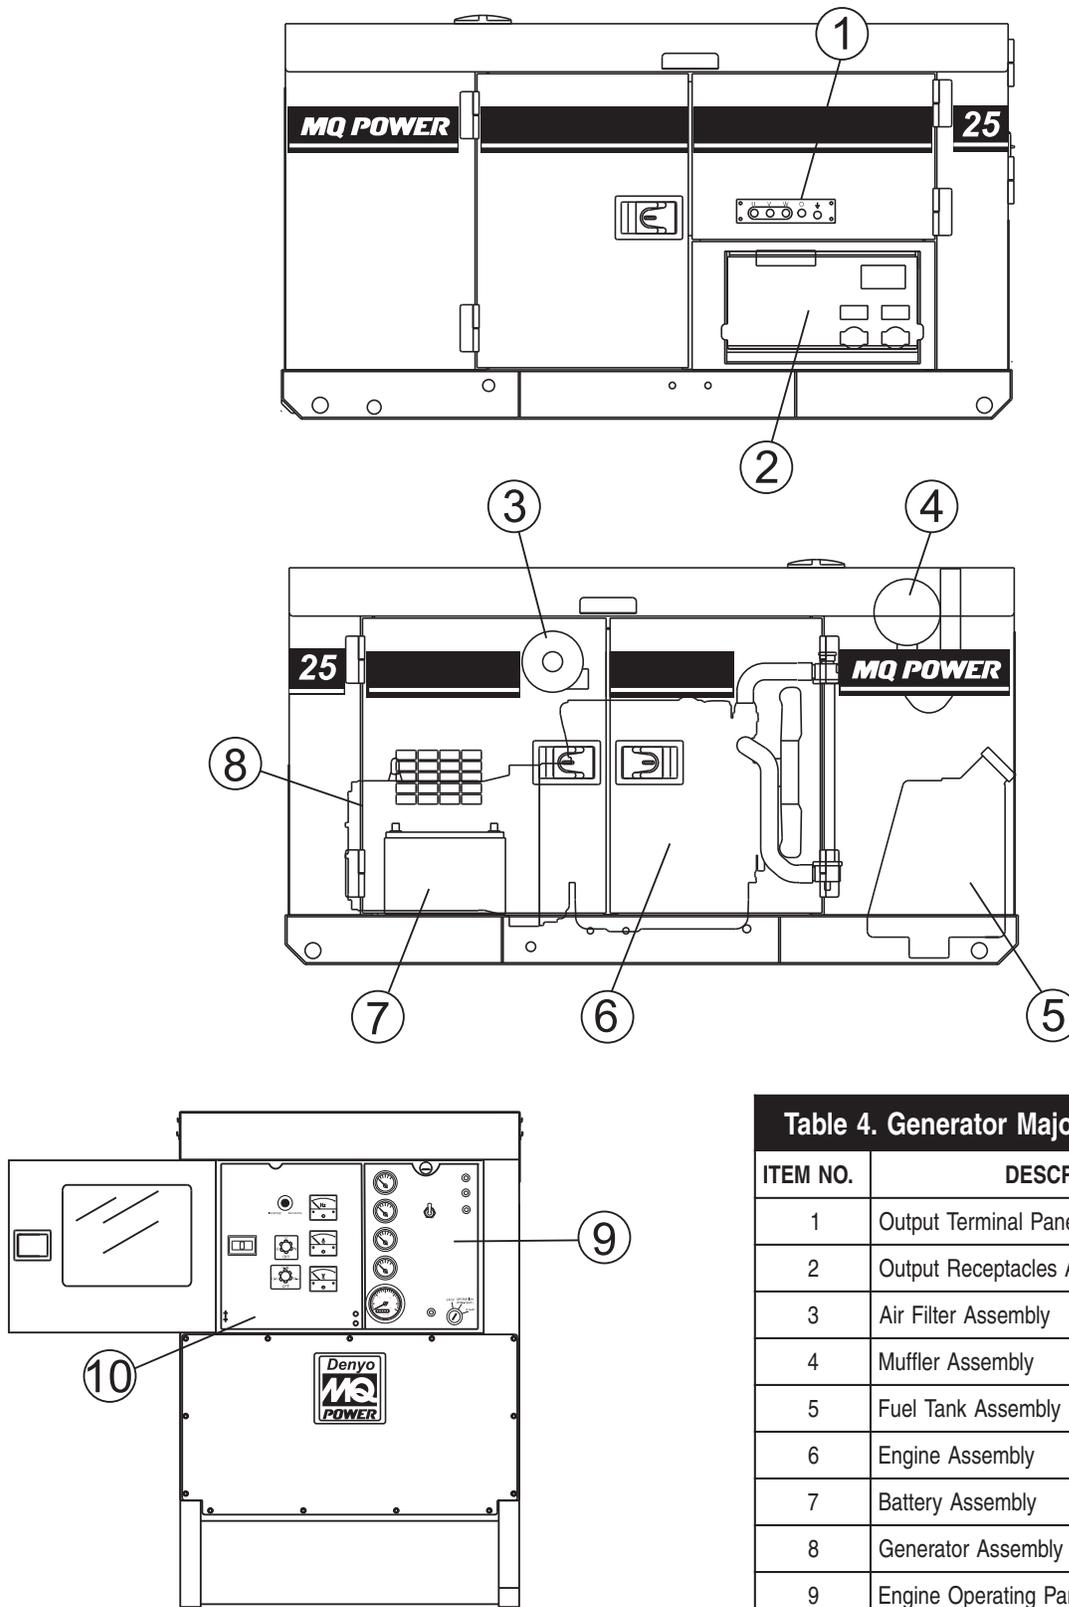


Table 4. Generator Major Components

| ITEM NO. | DESCRIPTION |
|----------|----------------------------------|
| 1 | Output Terminal Panel Assembly |
| 2 | Output Receptacles Assembly |
| 3 | Air Filter Assembly |
| 4 | Muffler Assembly |
| 5 | Fuel Tank Assembly |
| 6 | Engine Assembly |
| 7 | Battery Assembly |
| 8 | Generator Assembly |
| 9 | Engine Operating Panel Assembly |
| 10 | Generator Control Panel Assembly |

Figure 5. Major Components

DCA-25SSIU2 (60 HZ)— GENERATOR CONTROL PANEL

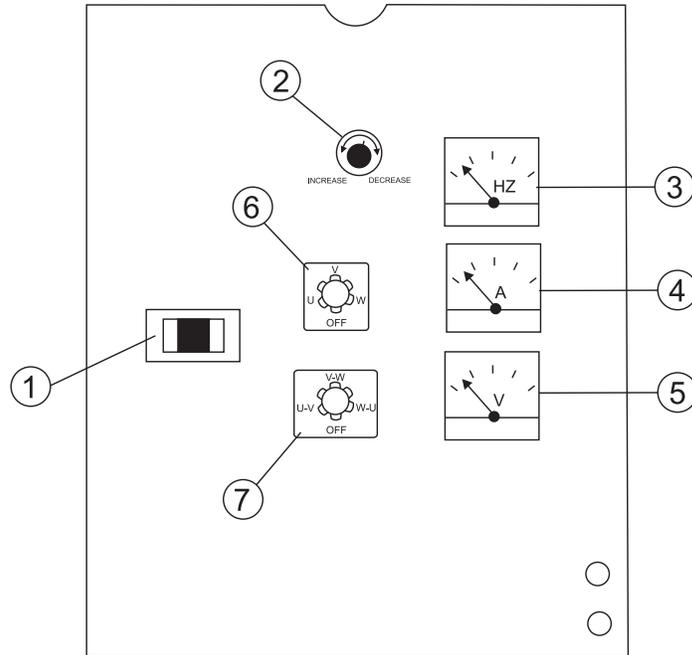


Figure 6. Generator Control Panel



The definitions below describe the controls and functions of the **DCA-25SSIU2 (60 HZ) Generator Control Panel** (Figure 6).

- 1. Main Circuit Breaker** – This three-pole, 60A main breaker is provided to protect the **U, V, and W Output Terminal Lugs** from overload.
- 2. Voltage Regulator Control** – Allows $\pm 15\%$ manual adjustment of the generator's output voltage
- 3. Frequency Meter** – Indicates the output frequency in hertz (Hz). Normally 60 Hz.
- 4. AC Ammeter** – Indicates the amount of current the load is drawing from the generator per leg selected by the ammeter phase-selector switch.
- 5. AC Voltmeter** – Indicates the output voltage present at the **U, V, and W Output Terminal Lugs**.
- 6. Ammeter Change-Over Switch** – This switch allows the AC ammeter to indicate the current flowing to the load connected to any phase of the output terminals, or to be switched off. This switch does not effect the generator output in any fashion, it is for current reading only.
- 7. Voltmeter Change-Over Switch** – This switch allows the AC voltmeter to indicate phase to phase voltage between any two phases of the output terminals or to be switched off.

Located behind the generator control panel is the **Generator Control Box**. This box contains some of the necessary electronic components required to make the generator function.

The **Control Box** is equipped with the following major components:

- Over-Current Relay
- Voltage Rectifier (AVR)
- Starter Relay
- Current Transformer
- Voltage Selector Switch

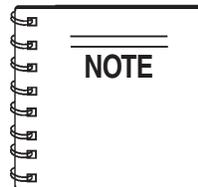

Remember the **overcurrent relay** monitors the current flowing from the **U, V, and W Output Terminal Lugs** to the load.

In the event of a short circuit or over current condition, it will automatically trip the 60 amp main breaker.

To restore power to the **Output Terminal Panel**, press the **reset** button on the overcurrent relay and place the **main** circuit breaker in the **closed** position (ON).

DCA-25SSIU2 (60 HZ)— ENGINE OPERATING PANEL

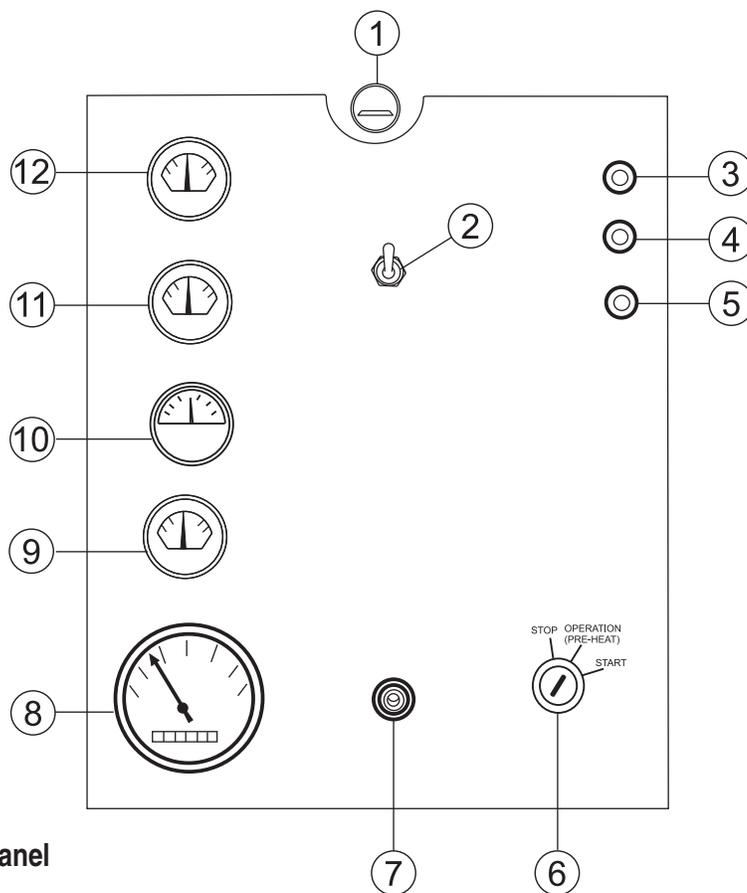


Figure 7. Engine Operating Panel


The definitions below describe the controls and functions of the DCA-25SSIU2 (60 HZ) "**Engine Operating Panel**" (Figure 7).

1. **Panel Light** - Normally used in dark places or at night. When activated, panel will illuminate. When the generator is not in use, turn the panel light switch to the 'OFF' position.
2. **Panel Light Switch**- When activated, will turn on control panel light.
3. **Oil Pressure Alarm Lamp** - Indicates that the oil pressure is too low or high and will shut down the engine.
4. **Water Temperature Alarm Lamp** - Indicates that the water temperature is outside of normal range and will shut down the engine.
5. **Fuel Filter Water Level Alarm Lamp** - Indicates that water level in the fuel level has risen. Drain the water in the fuel filter strainer when this condition occurs.
6. **Ignition Switch** – Three position switch, stop, operation and start. Insert ignition key to start and stop engine.
7. **Pre-heat Lamp** - This indicates when the engine is ready for starting during cold weather operating conditions.
8. **Tachometer** – Indicates engine speed in RPM's for 50 Hz operation. This meter should indicate 1500 RPM's when the rated load is applied. In addition a built in hour meter will record the number of operational hours that the generator has been in use.
9. **Fuel Gauge** - Indicates amount of diesel fuel available.
10. **Charging Ammeter Gauge** – Indicates the current being supplied by the engine's alternator which provides current for generator's control circuits and battery charging system.
11. **Water Temperature Gauge** – During normal operation this gauge be should read between 165° F to 203° F.
12. **Oil Pressure Gauge** – Normal operation should be between 28 ~71 psi (193 ~490 kPa). When starting the generator the oil pressure may read a bit higher, but after the engine warms up the oil pressure should return to normal.

DCA-25SSIU2 (60 HZ)— OUTPUT TERMINAL PANEL FAMILIARIZATION

Output Terminal Panel

The **Output Terminal Panel** (Figure 8) shown below is located on the right-hand side (left from control panel) of the generator. Lift up on the cover to gain access to receptacles and terminal lugs.

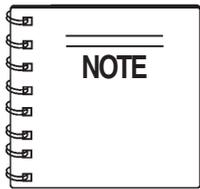

Terminal legs "O" and "Ground" are considered **bonded grounds**.

Output Terminal Familiarization

The "**Output Terminal Panel**" (Figure 9) is provided with the following:

- 120/240V output receptacles (2) @ 50 amp
- Circuit Breakers (2) @ 50 amps, 2-pole
- 120V GFCI receptacles (2) @ 20 amp
- GFCI Circuit Breaker (2) @ 20 amps, 1-pole
- Five (5) Output Terminal Lugs (U, V, W, O, Ground)

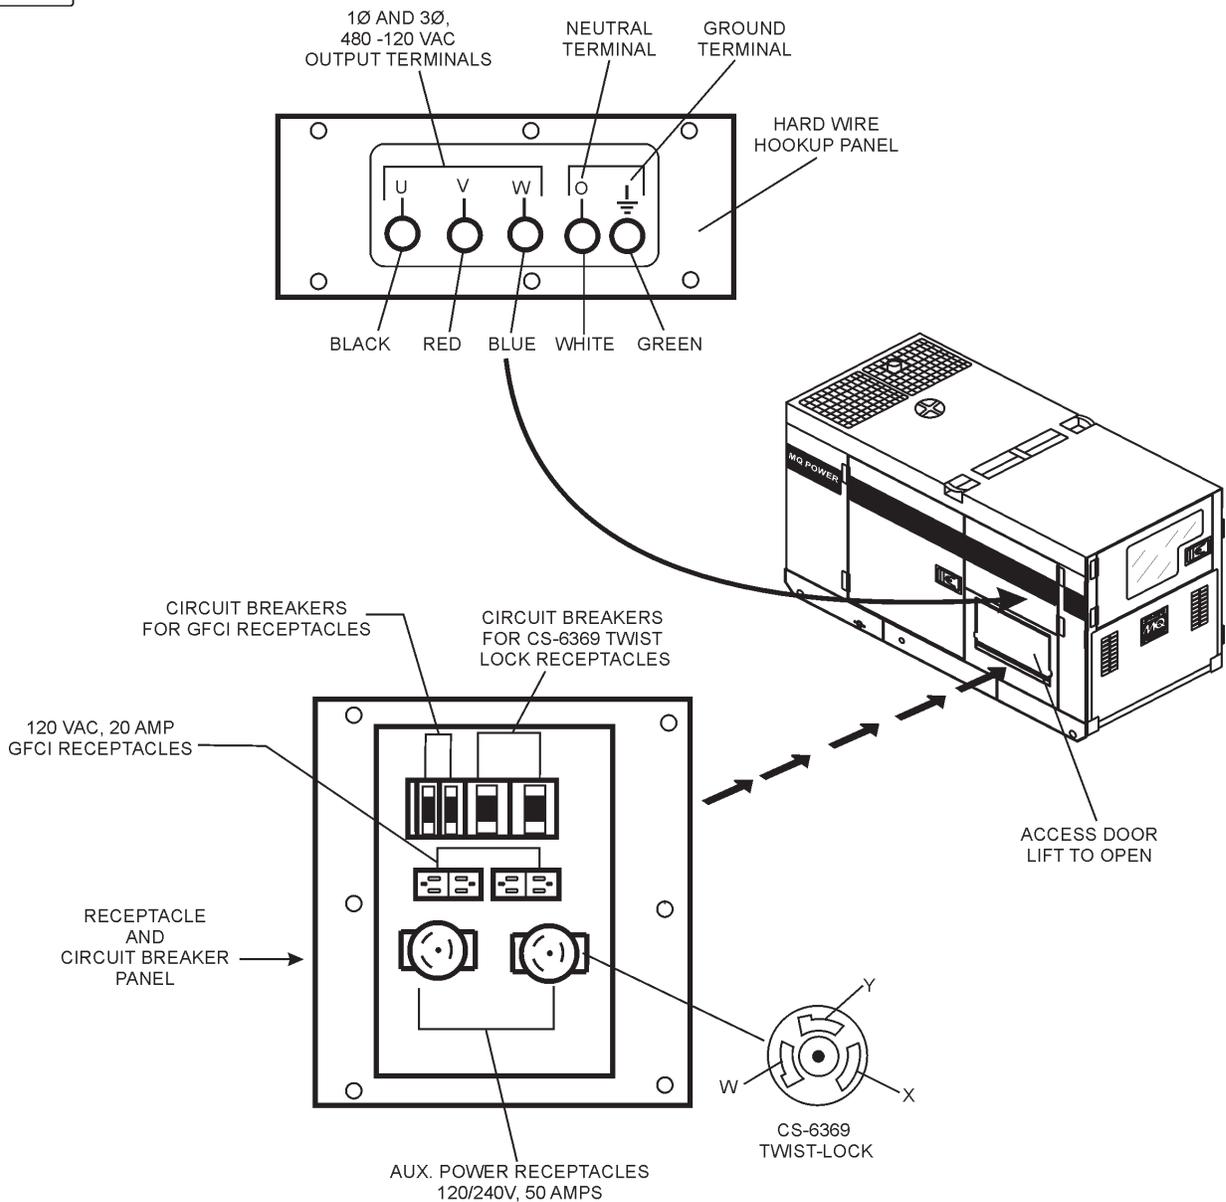


Figure 8. Output Terminal Panel

DCA-25SSIU2 (60 HZ)— OUTPUT TERMINAL PANEL FAMILIARIZATION

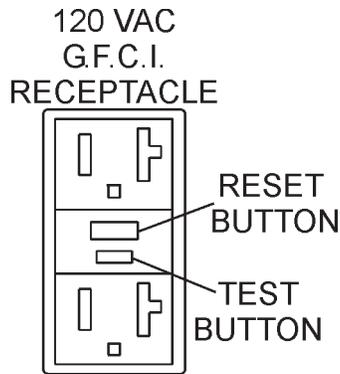


Figure 9. G.F.C.I. Receptacle

120VAC GFCI Receptacles

There are two 120 VAC, 20 amp GFCI (Duplex Nema 5-20R) receptacles provided on the output terminal panel. These receptacles can be accessed in **any voltage selector switch** position. Each receptacle is protected by a 20 amp circuit breaker. These breakers are located directly above the GFCI receptacles. Remember the load output (current) of both GFCI receptacles is dependent on the load requirements of the U, V, and W output terminal lugs.

Pressing the **reset** button resets the GFCI receptacle after being tripped. Pressing the **Test Button** (See Figure 9) in the center of the receptacle will check the GFCI function. Both receptacles should be tested at least once a month.

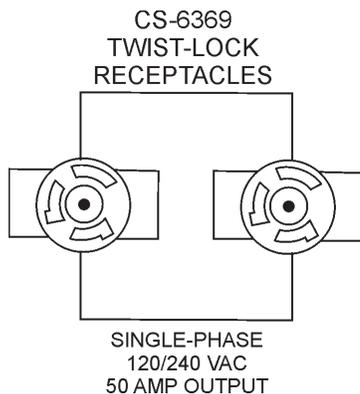


Figure 10. 120/240V Twist-Lock Auxiliary Receptacles

Twist Lock Dual Voltage 120/240 VAC Receptacles

There are two 120/240V, 50 amp auxiliary twist-lock (CS-6369) receptacles (Figure 10) provided on the output terminal panel. These receptacles can **only** be accessed when the voltage selector switch is placed in the **single-phase 240/120 position**.

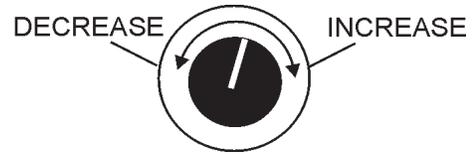


Figure 11. Voltage Regulator Control Knob

Each auxiliary receptacle is protected by a 50 amp circuit breaker. These breakers are located directly above the GFCI receptacles. Remember the load output (current) on all three receptacles is dependent on the load requirements of the **Output Terminal Lugs**.

Turn the **voltage regulator control knob** (Figure 11) on the control panel to obtain the desired voltage. Turning the knob clockwise will **increase** the voltage, turning the knob counter-clockwise will **decrease** the voltage.

Removing the Plastic Face Plate (Hard Wire Hookup Panel)

The **Output Terminal Lugs** are protected by a plastic face plate cover (Figure 12). Un-screw the securing bolts and lift the plastic terminal cover to gain access to the terminal enclosure.

After the load wires have been securely attached to the terminal lugs, reinstall the plastic face plate.

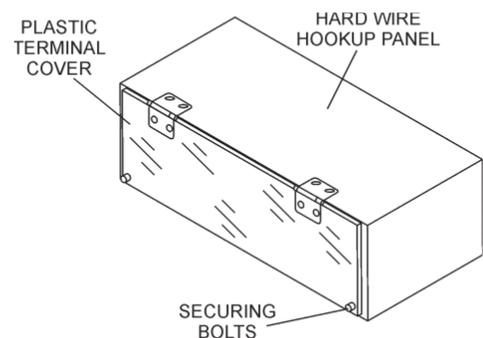


Figure 12. Plastic Face Plate (Output Terminal Lugs)

DCA-25SSIU2 (60 HZ)— OUTPUT TERMINAL PANEL FAMILIARIZATION

Connecting Loads

Loads can be connected to the generator by the **Output Terminal Lugs** or the convenience receptacles (Figure 13). Make sure to read the operation manual before attempting to connect a load to the generator.

To protect the output terminals from overload, a 3-pole, 60A **main** circuit breaker is provided. Make sure to switch **ALL** circuit breakers to the **OFF** position prior to starting the engine.

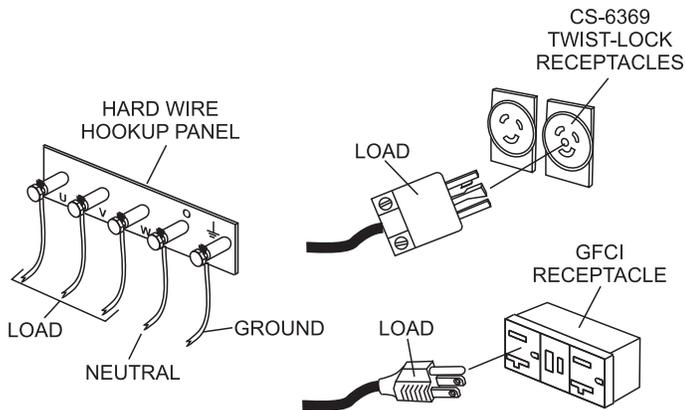


Figure 13. Connecting Loads

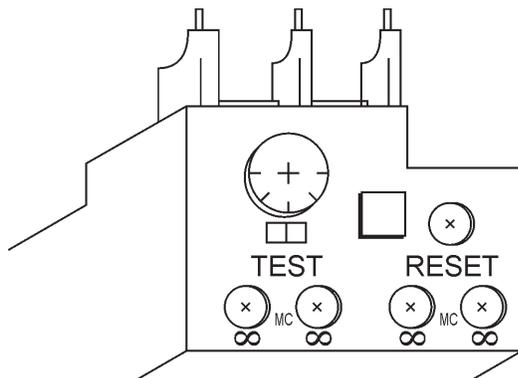


Figure 14. Over Current Relay

Over Current Relay

An **over current relay** (Figure 14) is connected to the main circuit breaker. In the event of an overload, both the circuit breaker and the over current relay may trip. If the circuit breaker can not be reset, the **reset button** on the over current relay must be pressed. The over current relay is located in the control box.

Blower Fan

This unit has an intake fan located at the rear of the machine to draw outside air into the cabinet to cool the engine. The fan has a 10 amp AC fuse located beneath the **Voltage Selector Switch** (Figure 15).

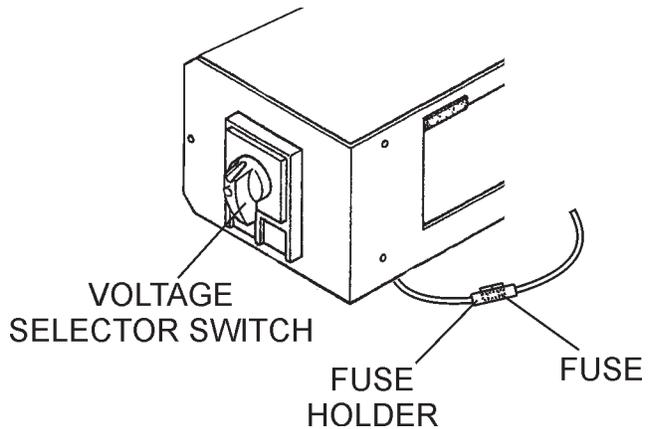


Figure 15. Blower Fan Fuse

! DANGER - ELECTROCUTION HAZARDS

This fuse has current running through it any time the engine is running. This fuse is **NOT** connected to the main circuit breaker of the generator. Attempting to replace the fuse with the engine and/or generator operating could result in **electrocution** and **severe bodily harm**. **ALWAYS** turn the unit completely off before attempting to replace or handle this fuse.




DCA-25SSIU2 (60 HZ)— LOAD APPLICATION

Single Phase Load

Always be sure to check the nameplate on the generator and equipment to insure the wattage, amperage, frequency, and voltage requirements are satisfactorily supplied by the generator for operating the equipment.

Generally, the wattage listed on the nameplate of the equipment is its rated output. Equipment may require 130—150% more wattage than the rating on the nameplate, as the wattage is influenced by the efficiency, power factor and starting system of the equipment.

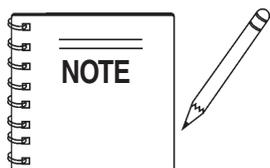

If wattage is not given on the equipment's name plate, approximate wattage may be determined by multiplying nameplate voltage by the nameplate amperage.

$$\text{WATTS} = \text{VOLTAGE} \times \text{AMPERAGE}$$

The power factor of this generator is 0.8. See Table 5 below when connecting loads.

Table 5. Power Factor By Load

| Type Of Load | Power Factor |
|---|--------------|
| Single-phase induction motors | 0.4 - 0.75 |
| Electric heaters, incandescent lamps | 1.0 |
| Fluorescent lamps, mercury lamps | 0.4 - 0.9 |
| Electronic devices, communication equipment | 1.0 |
| Common power tools | 0.8 |

Table 6. Cable Selection (60 Hz, Single Phase Operation)


| Current in Amperes | Load In Watts | | Maximum Allowable Cable Length | | | |
|--------------------|---------------|--------------|--------------------------------|----------|----------|----------|
| | At 120 Volts | At 240 Volts | #10 Wire | #12 Wire | #14 Wire | #16 Wire |
| 2.5 | 300 | 600 | 1000 ft. | 600 ft. | 375 ft. | 250 ft. |
| 5 | 600 | 1200 | 500 ft. | 300 ft. | 200 ft. | 125 ft. |
| 7.5 | 900 | 1800 | 350 ft. | 200 ft. | 125 ft. | 100 ft. |
| 10 | 1200 | 2400 | 250 ft. | 150 ft. | 100 ft. | |
| 15 | 1800 | 3600 | 150 ft. | 100 ft. | 65 ft. | |
| 20 | 2400 | 4800 | 125 ft. | 75 ft. | 50 ft. | |

CAUTION: Equipment damage can result from low voltage.


Three Phase Load

When calculating the power requirements for 3-phase power use the following equation:

$$\text{KVA} = \frac{\text{VOLTAGE} \times \text{AMPERAGE} \times 1.732}{1000}$$

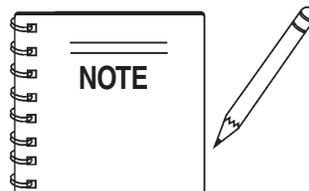

If 3Ø load (kVA) is not given on the equipment nameplate, approximate 3Ø load output may be determined by multiplying voltage by amperage by 1.732.

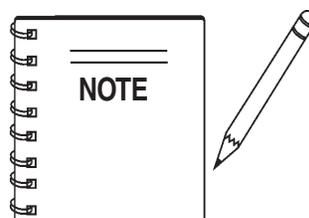

Motors and motor-driven equipment draw much greater current for starting than during operation.

An inadequate size connecting cable which cannot carry the required load can cause a voltage drop which can burn out the appliance or tool and overheat the cable. See Table 6.

- When connecting a resistance load such as an incandescent lamp or electric heater, a capacity of up to the generating set's rated output (kW) can be used.
- When connecting a fluorescent or mercury lamp, a capacity of up to the generating set's rated output (kW) multiplied by 0.6 can be used.
- When connecting an electric drill or other power tools, pay close attention to the required starting current capacity.

When connecting ordinary power tools, a capacity of up to the generating set's rated output (kW) multiplied by 0.8 can be used.

DANGER - ELECTRICAL SYSTEM HAZARDS

Before connecting this generator to any building's electrical system, a **licensed electrician** must install an **isolation (transfer) switch**. Serious damage to the building's electrical system may occur without this transfer switch.

DCA-25SSIU2 (60 HZ)— GENERATOR OUTPUTS

Voltage Selector Switch

The **voltage selector** switch (Figure 16) is located above the output terminal panel's **Hard Wire Hook-up Panel**. It has been provided for ease of voltage selection.

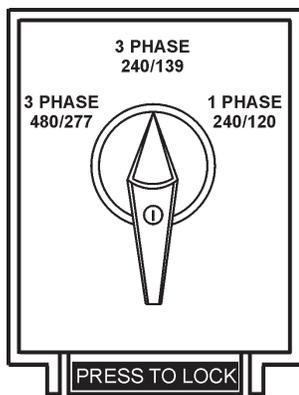


Figure 16. Voltage Selector Switch

Voltage Selector Switch Locking Button

The voltage selector switch has a locking button to protect the generator and load from being switched while the engine is running. To lock the voltage selector switch, **press** and **hold** the **red button** located at the bottom of the switch.

⚠ CAUTION - CHANGING VOLTAGES

NEVER change the position of the **voltage selector switch** while the engine is running. **ALWAYS** place circuit breaker in the open position before selecting voltage.

Generator Output Voltages

A wide range of voltages are available to supply voltage for many different applications. Voltages are selected by using the **voltage selector** switch (Figure 16). To obtain some of the voltages as listed in Table 7 (see below) will require a fine adjustment using the **voltage regulator (VR) control knob** located on the control panel.

| Table 7. Voltages Available | | | | | | |
|-----------------------------|------|------|------|------|------|------|
| Three Phase (Switchable) | 208V | 220V | 240V | 416V | 440V | 480V |
| Single Phase (Switchable) | 120V | 127V | 139V | 240V | 254V | 277V |

Generator Amperage

Table 8 describes the generator's current output capability for both 1Ø-phase and 3Ø phase applications.

| Table 8. Generator Ampere Ratings | | | | | | |
|-----------------------------------|------|-----|---------|-------|------|------|
| DCA- 25SSIU2 | KW | KVA | 120V | 208V | 240V | 480V |
| Single Phase | 14.4 | N/A | 60A x 2 | N/A | 60A | N/A |
| Three Phase | 20 | 25 | N/A | 69.5A | 60A | 30A |
| *Power Factor = 0.8 | | | | | | |

GFCI Receptacle Load Capability

The load capability of the GFCI receptacles is directly related to the voltage being supplied at either the output terminals or the 2 twist lock auxiliary receptacles.

Tables 9 and 10 show what amount of current is available at the GFCI receptacles when the output terminals and twist lock receptacles are in use. Be careful that your load does not to exceed the available current capability at the receptacles.

| Table 9. GFCI Receptacle Load Capability | |
|--|----------------------------------|
| KW in Use Twist-Lock (CS6369) | Available Load Current (Amps) |
| 1Ø 240/120V | GFCI Duplex NEMA 5-20R 120V |
| 14.4 | 0 |
| 13.2 | 5 amps per receptacle |
| 12.0 | 10 amps per receptacle |
| 10.8 | 15 amps per receptacle |
| 9.6 | 20 amps per receptacle |

| Table 10. GFCI Receptacle Load Capability | |
|---|----------------------------------|
| KVA in Use (UVWO Terminals) | Available Load Current (Amps) |
| 3Ø 240/480V | GFCI Duplex NEMA 5-20R 120V |
| 25 | 0 |
| 20.8 | 5 amps per receptacle |
| 16.7 | 10 amps per receptacle |
| 12.5 | 15 amps per receptacle |
| 8.4 | 20 amps per receptacle |

How to Read the Output Terminal Gauges.

The gauges and selector switches on the control panel **DO NOT** effect the generator output. They are provided to help observe how much power is being supplied at the **Output terminals lugs**.

Before taking a reading off either gauge, set the **Voltage Selector Switch** (Figure 17) to the position which produces the required voltage (For example, for 3Ø 240V, choose the center 3Ø 240/139V position on the volt- selector switch.)


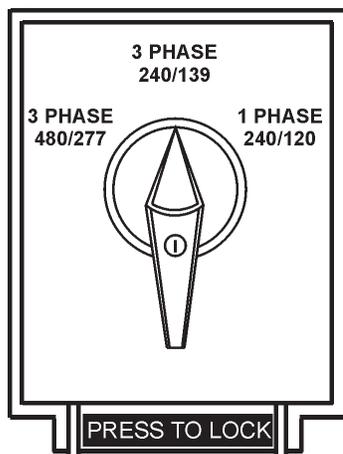


Figure 17. Voltage Selector Switch 240/139V Three Phase Position

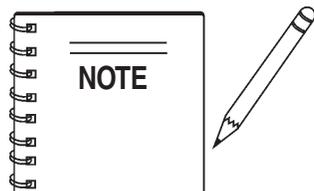

For 3Ø 208V/1Ø,120V, place the Voltage Selector Switch in the 3 Phase 240/139 position.

Reading Amperage

To determine the amperage at a terminal lug, set the **AC Ammeter Change-Over Switch** to the appropriate setting (Figure 20) to activate the **AC Ammeter Gauge** (Figure 21) and read the available amperage at the terminal lug.

For example, to measure the amperage at the U terminal lug, set the **AC Ammeter Change-Over Switch** to U and read the **AC Ammeter Gauge**.

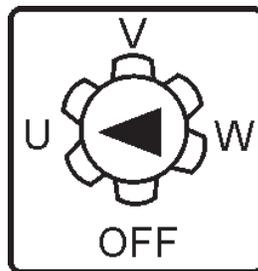


Figure 20. AC Ammeter Change-Over Switch


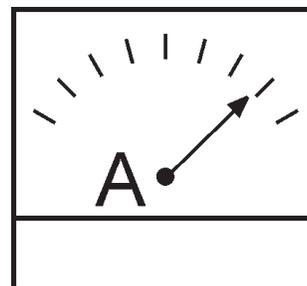


Figure 21. AC Ammeter (Amp reading on U lug)

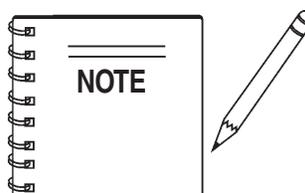

The **ammeter** gauge will only show a reading when the **Output Terminal Lugs** are connected to a load and in use.

Reading Voltage

To determine the voltage between two terminal lugs, set the **AC Voltmeter Change-Over Switch** to the appropriate setting (Figure 18) to activate the **AC Voltmeter Gauge** (Figure 19) and read the available voltage between the two lugs.

For example, to measure the voltage between the W and U terminal lugs, set the **AC Voltmeter Change-Over Switch** to W-U and read the **AC Voltmeter Gauge**.

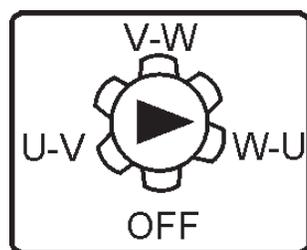


Figure 18. AC Voltmeter Change-Over Switch

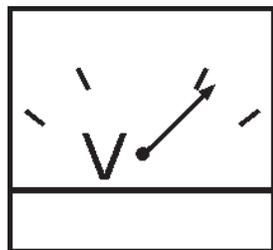


Figure 19. AC Voltmeter Gauge

DCA-25SSIU2 (60 HZ)— OUTPUT TERMINAL PANEL CONNECTIONS

UVWO Terminal Output Voltages

Various output voltages can be obtained using the **Output Terminal Lugs**. The voltages at the terminals are dependent on the position of the **Voltage Selector Switch** and the adjustment of the **Voltage Regulator Control Knob**.

Remember the voltage selector switch determines the **range** of the output voltage. The voltage regulator (VR) allows the user to increase or decrease the selected voltage.

3Ø-240/139 Output Terminal Lug Voltages

1. Place the voltage selector switch in the 3Ø 240/139 position as shown in (Figure 22).

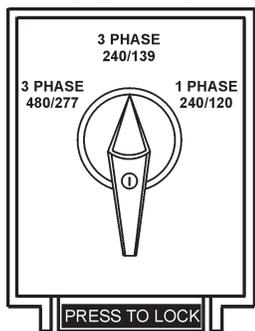


Figure 22. Voltage Selector Switch 240/139V Three-Phase Position

2. Connect the load wires to the **Output Terminal Lugs** as shown in (Figure 23).

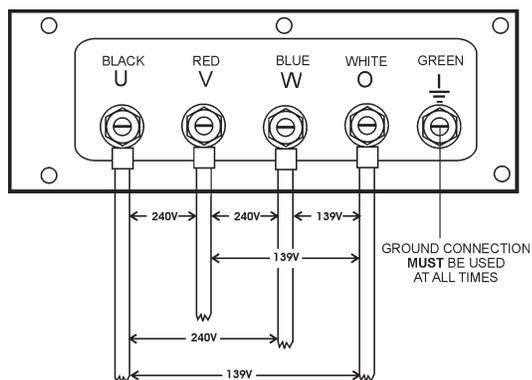


Figure 23. Output Terminal Lugs 3Ø-240/139 Three Phase Connections


3. Turn the voltage regulator knob (Figure 24) clockwise to increase voltage output, turn counterclockwise to decrease voltage output.



Figure 24. Voltage Regulator Knob (139V/240V)

3Ø 208V/1Ø120V Output Terminal Lug Voltages

1. Place the voltage selector switch in the 3Ø 240/139 position as shown in Figure 25.

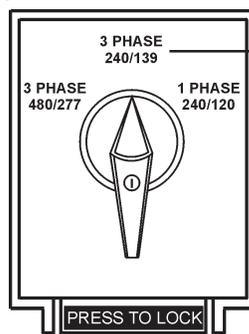

Use this position for 3Ø-208 or 1Ø120V.

Figure 25. Voltage Selector Switch 240/139V Three-Phase Position

2. Connect the load wires to the **Output Terminal Lugs** as shown in Figure 26.


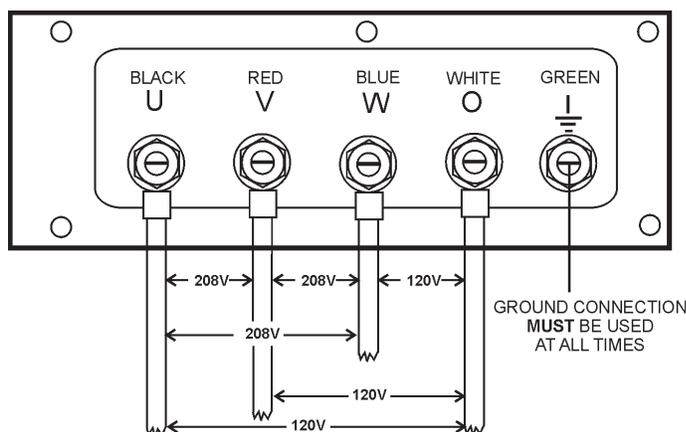


Figure 26. Output Terminal Lugs 3Ø-208/120V Connections

3. Turn the voltage regulator knob (Figure 25) clockwise to increase voltage output, turn counterclockwise to decrease voltage output.

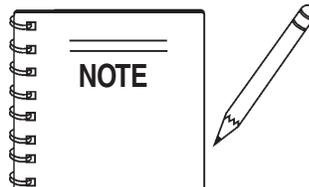

To achieve a 3Ø 208V output the voltage selector switch must be in the 3Ø-240/139 position and the voltage regulator must be adjusted to 208V.

DCA-25SSIU2 (60 HZ)— OUTPUT TERMINAL PANEL CONNECTIONS

3Ø 480/277 Output Terminal Lug Voltages

1. Place the voltage selector switch in the 3Ø 480/277 position as shown in Figure 27.

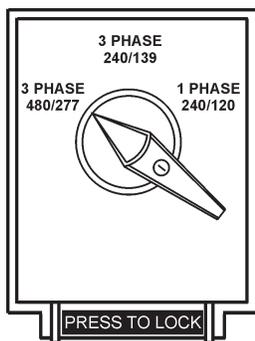


Figure 27. Voltage Selector Switch 480/277V Three-Phase Position

1Ø 240V/120V Output Terminal Lug Voltages

1. Place the voltage selector switch in the 1Ø 240/120 position as shown in Figure 29.

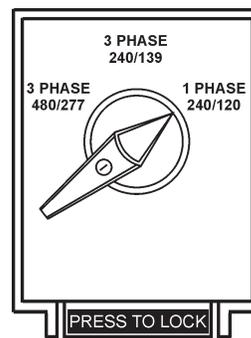


Figure 29. Voltage Selector Switch 240/120V Single-Phase Position

2. Connect the load wires to the **Output Terminal Lugs** as shown in Figure 28.

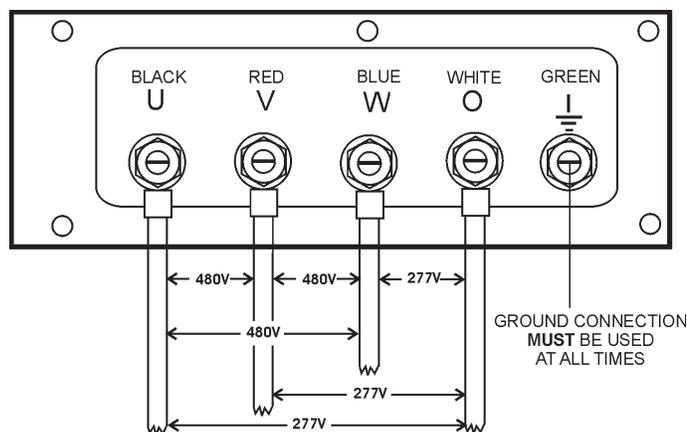


Figure 28. Output Terminal Lugs 3Ø-480/277V Three Phase Connections

2. Connect the load wires to the **Output Terminal Lugs** as shown in (Figure 30).

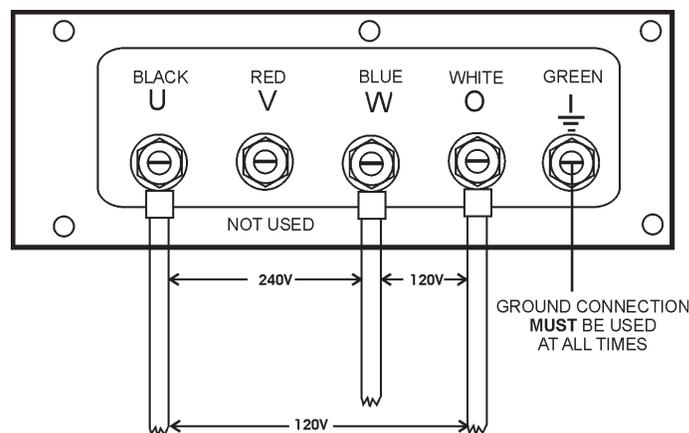


Figure 30. Output Terminal Lugs 1Ø-240/120V Connections

3. Turn the voltage regulator knob (Figure 24) clockwise to increase voltage output, turn counterclockwise to decrease voltage output.

3. Turn the voltage regulator knob (Figure 24) clockwise to increase voltage output, turn counterclockwise to decrease voltage output.

Circuit Breakers

To protect the generator from an overload, a 3-pole, 60 amp, **main** circuit breaker is provided to protect the **U, V, and W Output Terminals** from overload. In addition two single-pole, 20 amp **GFCI** circuit breakers are provided to protect the GFCI receptacles from overload. Two 50 amp, 2-pole circuit breakers have also been provided to protect the auxiliary receptacles from overload. Make sure to switch **ALL** circuit breakers to the **OFF** position prior to starting the engine.

Lubrication Oil

Fill the engine crankcase with lubricating oil through the filler hole, but **DO NOT** overfill. Make sure the generator is level, and verify that the oil level is maintained between the two notches (Figure 31) on the dipstick. See Table 11 for proper selection of engine oil.

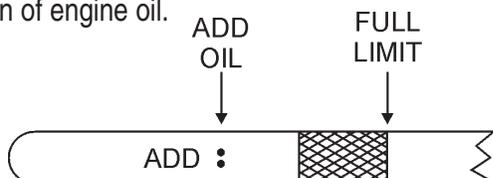


Figure 31. Engine Oil Dipstick

When checking the engine oil, be sure to check if the oil is clean. If the oil is not clean, drain the oil by removing the oil drain plug, and refill with the specified amount of oil as outlined in the **Isuzu Engine Owner's Manual**. Oil should be warm before draining.

Other types of motor oils may be substituted if they meet the following requirements:

- API Service Classification CC/SC
- API Service Classification CC/SD
- API Service Classification CC/SE
- API Service Classification CC/SF

| Table 11. Recommended Motor Oil | | OIL: SAE | |
|---------------------------------|-----|------------|--------|
| °F | °C | | |
| 122 | 50 | 10W/40 | 10W/40 |
| 104 | 40 | 30 | 15W/30 |
| 86 | 30 | 10W/30 | 10W |
| 68 | 20 | 5W/30 | 20W/40 |
| 50 | 10 | ARCTIC OIL | |
| 32 | 0 | | |
| -14 | -10 | | |
| -4 | -20 | | |
| -22 | -30 | | |
| -40 | -40 | | |

Fuel Check

! DANGER - EXPLOSION/FIRE HAZARDS

Fuel spillage on a **hot** engine can cause a **fire** or **explosion**. If fuel spillage occurs, wipe up the spilled fuel completely to prevent fire hazards. **NEVER** smoke around or near the generator.

Refilling the Fuel System

! CAUTION - REFUELING THE GENERATOR

ONLY properly trained personnel who have read and understand this section should refill the fuel tank system.

Located at the bottom-front of the cabinet (Figure 32) is the internal fuel tank. Some generators may be equipped with a trailer mounted fuel tank (option). **ALWAYS** fill the either fuel tank with clean and fresh **#2 diesel fuel**. **DO NOT** fill the fuel tanks beyond their capacities.

Pay attention to the fuel tank capacity when replenishing fuel. The fuel tank cap must be closed tightly after filling. Handle fuel in a safety container. If the container does not have a spout, use a funnel. Wipe up any spilled fuel immediately.

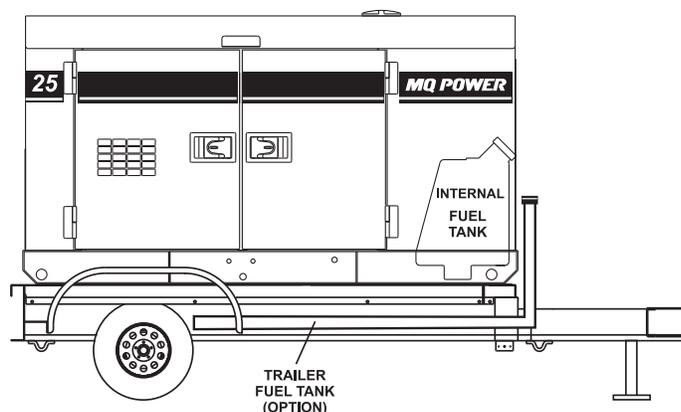


Figure 32. Internal Fuel Tank System

Refueling Procedure:

! WARNING - RESPIRATORY HAZARDS

Diesel fuel and its vapors are dangerous to your health and the surrounding environment. Avoid skin contact and/or inhaling fumes.



1. **Level Tanks** – Make sure fuel cells are level with the ground. Failure to do so will cause fuel to spill from the tank before reaching full capacity (Figure 33).

! CAUTION - REFUELING THE GENERATOR

ALWAYS place trailer on firm level ground before refueling to prevent spilling and maximize the amount of fuel that can be pumped into the tank.


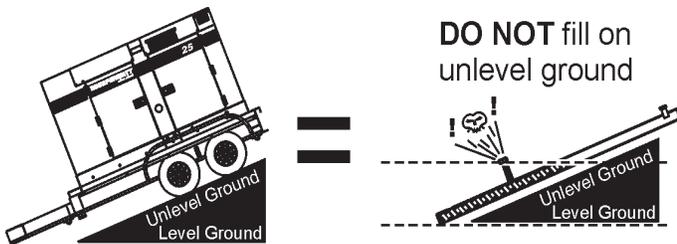


Figure 33. Only Fill on Level Ground

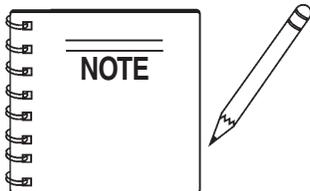

ONLY! use #2 diesel fuel when refueling.

2. Remove fuel cap and fill fuel tank as shown in Figure 34.

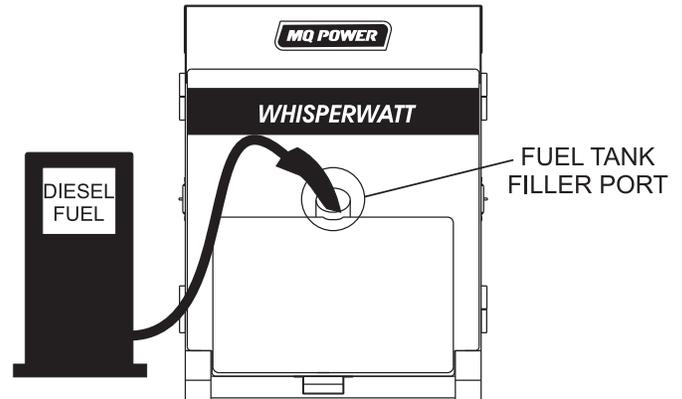


Figure 34. Fueling the Generator

3. **NEVER overfill fuel tank** – It is important to read the fuel gauge when filling trailer fuel tank. **DO NOT** wait for fuel to rise in filler neck (Figure 35).

FUEL GAUGE LOCATED ON CONTROL PANEL

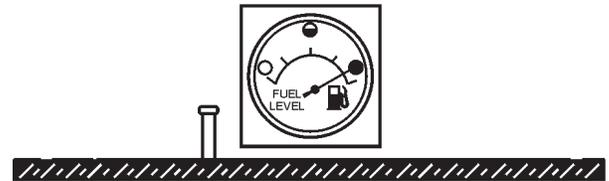


Figure 35. Full Fuel Tank

! CAUTION - REFUELING THE GENERATOR

DO NOT OVERFILL fuel system. Leave room for fuel expansion. Fuel expands when heated (Figure 36).



Figure 36. Fuel Expansion

Coolant (Isuzu Antifreeze/Summer Coolant/Water)

Isuzu recommends Isuzu Antifreeze/Summer Coolant for use in their engines, which can be purchased in concentrate (and mixed with 50% demineralized water) or pre-diluted. See the **Isuzu Engine Owner's Manual** for further details.

! WARNING - BURN HAZARDS

If adding coolant/antifreeze mix to the radiator, **DO NOT** remove the radiator cap until the unit has completely cooled. The possibility of **hot!** coolant exists which can cause severe burns.



Day-to-day addition of coolant is done from the recovery tank. When adding coolant to the radiator, **DO NOT** remove the radiator cap until the unit has completely cooled. See Table 12 for engine, radiator, and recovery tank coolant capacities. Make sure the coolant level in the recovery tank is always between the "H" and the "L" markings.

| Component | Capacity |
|---------------------|------------------------|
| Engine and Radiator | 1.74 Gal. (6.6 liters) |
| Reserve Tank | 2 Quarts (1.9 liters) |

Operation Freezing Weather

When operating in freezing weather, be certain the proper amount of antifreeze (Table 13) has been added.

| Vol % Anti-Freeze | Freezing Point | |
|----------------------|----------------|-----|
| | °C | °F |
| 50 | -37 | -34 |



When the antifreeze is mixed with water, the antifreeze mixing ratio **must be** less than 50%.

Cleaning the Radiator

The engine may overheat if the radiator fins become overloaded with dust or debris. Periodically clean the radiator fins with compressed air. Cleaning inside the machine is dangerous, so clean only with the engine turned off and the **negative** battery terminal disconnected.

Air Cleaner

Periodic cleaning/replacement is necessary. Inspect it in accordance with the **Isuzu Engine Owner's Manual**.

Fan Belt Tension

A slack fan belt may contribute to overheating, or to insufficient charging of the battery. Inspect the fan belt for damage and wear and adjust it in accordance with the **Isuzu Engine Owner's Manual**.

The fan belt tension is proper if the fan belt bends 10 to 15 mm (Figure 37) when depressed with the thumb as shown below.

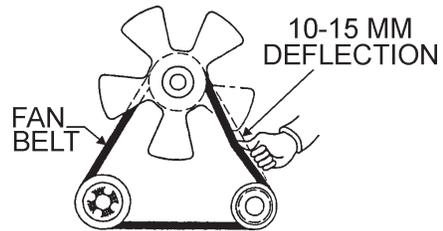


Figure 37. Fan Belt Tension

! CAUTION - ROTATING PARTS

NEVER place hands near the belts or fan while the generator set is running.




Battery

This unit is of negative ground **DO NOT** connect in reverse. Always maintain battery fluid level between the specified marks. Battery life will be shortened, if the fluid level are not properly maintained. Add only distilled water when replenishment is necessary.

DO NOT over fill. Check to see whether the battery cables are loose. Poor contact may result in poor starting or malfunctions. **Always** keep the terminals firmly tightened. Coating the terminals with an approved battery terminal treatment compound. Replace battery with only recommended type battery. The battery type used in this generator is BCI Group 27.

The battery is sufficiently charged if the specific gravity of the battery fluid is 1.28 (at 68° F). If the specific gravity should fall to 1.245 or lower, it indicates that the battery is dead and needs to be recharged or replaced.

Before charging the battery with an external electric source, be sure to disconnect the battery cables.

Battery Cable Installation

ALWAYS be sure the battery cables (Figure 38) are properly connected to the battery terminals as shown below. The **Red Cable** is connected to the positive terminal of the battery, and the **Black Cable** is connected to the negative terminal of the battery.

! CAUTION - BATTERY SERVICING SAFETY

ALWAYS disconnect the negative terminal **FIRST** and reconnect negative terminal **LAST**.


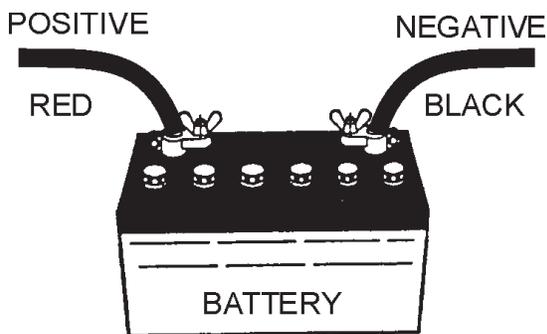


Figure 38. Battery Connections

When connecting battery do the following:

1. **NEVER** connect the battery cables to the battery terminals when the ignition is in the **operate** or **start** position.
2. Place a small amount of battery terminal treatment compound around both battery terminals. This will ensure a good connection and will help prevent corrosion around the battery terminals.

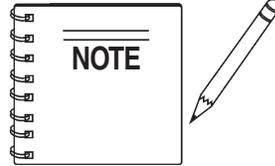

If the battery cable is connected incorrectly, electrical damage to the generator will occur. Pay close attention to the polarity of the battery when connecting the battery.

! CAUTION - BATTERY SERVICING SAFETY

Inadequate battery connections may cause poor starting of the generator, and create other malfunctions.

Alternator

The polarity of the alternator is negative grounding type. When an inverted circuit connection takes place, the circuit will be in short circuit instantaneously resulting the alternator failure.

DO NOT put water directly on the alternator. Entry of water into the alternator can cause corrosion and damage the alternator.

Wiring

Inspect the entire generator for bad or worn electrical wiring or connections. If any wiring or connections are exposed (insulation missing) replace wiring immediately.

Piping and Hose Connection

Inspect all piping, oil hose, and fuel hose connections for wear and tightness. Tighten all hose clamps and check hoses for leaks.

If any hose (**fuel** or **oil**) lines are defective replace them immediately.

DCA-25SSIU2 (60 HZ)— GENERATOR START-UP PROCEDURE

Before Starting

CAUTION - LETHAL EXHAUST HAZARD

The engine's exhaust contains harmful emissions. **ALWAYS have adequate ventilation when operating.** Direct exhaust away from nearby personnel.

WARNING - STARTING THE GENERATOR

NEVER! manually start the engine with the **main, GFCI** or **auxiliary** circuit breakers in the **ON** (closed) position.

1. Place the **main, G.F.C.I.,** and **aux.** circuit breakers (Figure 39) in the **OFF** position prior to starting the engine.



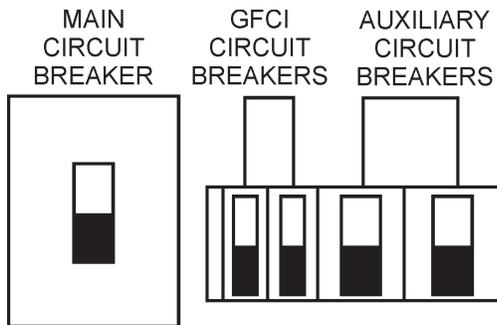


Figure 39. Main, Aux. and GFCI Circuit Breakers (OFF)

2. Connect the load to the **receptacles** or the **Output Terminal Lugs** as shown in Figure 13. These load connection points can be found on the output terminal panel and the output terminal panel's hard wire hookup panel.
3. The output terminal lugs are protected by a plastic cover. Remove this cover to gain access to the terminals. Tighten terminal nuts securely to prevent load wires from slipping out.
4. Close all engine enclosure doors (Figure 40).

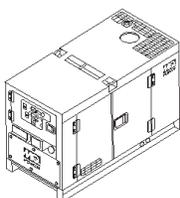

CORRECT

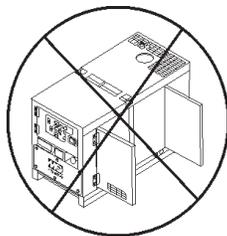

INCORRECT

Figure 40. Engine Enclosure Doors

5. Place the **voltage selector switch** in the desired voltage position (Figure 41).

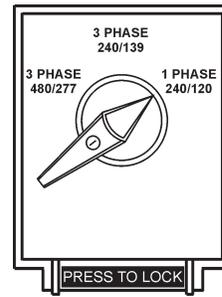


Figure 41. Voltage Selector Switch

6. Preheat the engine **glow plugs** by turning the ignition key (Figure 42) to the **"OPERATION"** position.

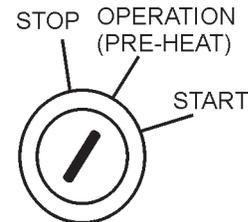


Figure 42. Ignition Switch (Operation Pre-Heat Position)

7. When the preheat lamp illuminates (Figure 43), turn the ignition key to the **"START"** position. Once the engine starts, release the ignition key and allow it to return to the **"OPERATION"** position (Figure 42).

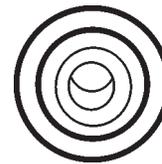


Figure 43. Pre-Heat Indicator Lamp

8. Let the engine run for 3-5 minutes, listen and check for any abnormal sounds or smells. Check for fuel leaks, and noises that would associate with a loose cover or hardware. If any of the above mentioned conditions exists, shut-down the engine and correct the problem.

DCA-25SSIU2 (60 HZ)— GENERATOR START-UP PROCEDURE

9. The generator's frequency meter (Figure 44) displays the 60 cycle output frequency in **HERTZ**.

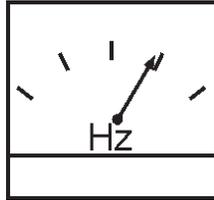


Figure 44. Frequency Meter (Hz)

10. The generator's voltage meter (Figure 45) displays the 120 VAC in **VOLTS**. If the voltage is not within the specified frequency tolerance,

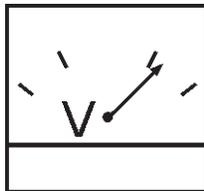


Figure 45. AC Voltmeter

11. Use the voltage adjustment control knob (Figure 46) to increase or decrease the desired voltage.



Figure 46. Voltage Adjusted Control Knob

12. The ammeter (Figure 47) will indicate zero amps with no load applied. When a load is applied, this meter will indicate the amount of current that the load is drawing from the generator.

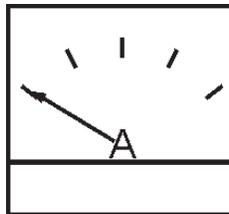


Figure 47. Ammeter (No Load)

13. The engine oil pressure gauge (Figure 48) will indicate the oil pressure (kg/cm²) of the engine. Under normal operating conditions the oil pressure is between 28 ~71 psi (193 ~490 kPa).

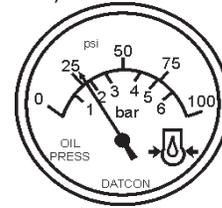


Figure 48. Oil Pressure Gauge

14. The coolant temperature gauge (Figure 49) will indicate the coolant temperature. Under normal operating conditions the coolant temperature is between 165 and 203 degrees Fahrenheit (74 ~ 95 degrees Celsius).

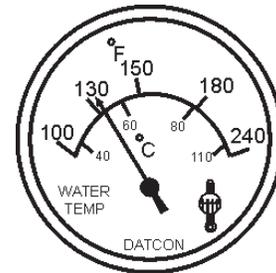


Figure 49. Coolant Temperature Gauge

15. The tachometer (Figure 50) will indicate the speed of the engine when the generator is operating. Under normal operating conditions this speed is approximately 1800 RPM's.

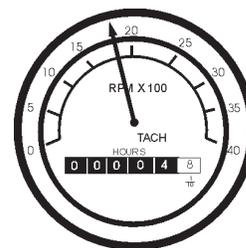


Figure 50. Engine Tachometer

DCA-25SSIU2 (60 HZ)— GEN. START-UP PROCEDURE/SHUTDOWN

- Turn the **main**, **GFCI**, and **aux.** circuit breakers to the “**ON**” position (Figure 51).

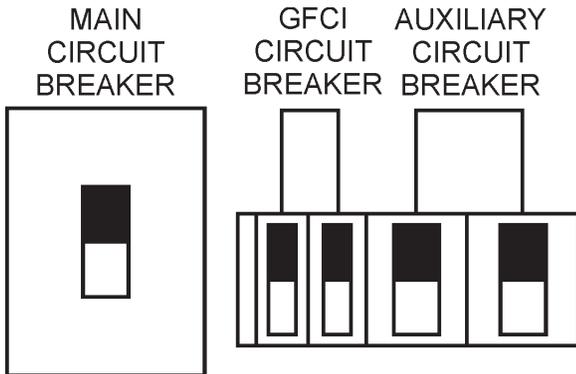


Figure 51. Main, AUX. and GFCI Circuit Breakers (ON)

- Observe the generator’s ammeter (Figure 52) and verify it reads the anticipated amount of current with respect to the load. The ammeter will only display a current reading if the load is in use.

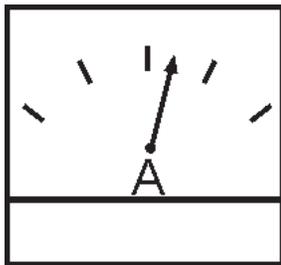


Figure 52. Ammeter (Load)

- The generator will run until manually stopped or an abnormal condition occurs.

NORMAL SHUT-DOWN

To shutdown the generator, use the following procedure:

- Switch the **MAIN**, **AUX** and **GFCI** circuit breakers (Figure 53) to the “**OFF**” position (no load).

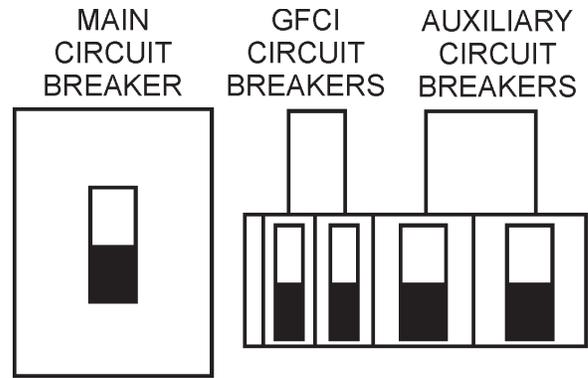


Figure 53. Main, AUX. and GFCI Circuit Breakers (OFF)

- Let the engine cool by running it for 3-5 minutes with no load applied (circuit breakers in the off position).
- Place the ignition switch (Figure 54) in the “**STOP**” position, remove the key and store in a safe place.

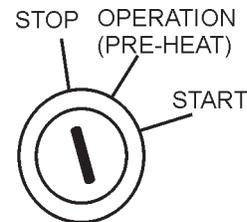


Figure 54. Ignition Switch (Stop Position)

- Remove **all** loads from the generator.

EMERGENCY SHUT-DOWN

- To shut-down the engine in the event of an emergency, switch the **MAIN**, **GFCI** and **LOAD** (Figure 55) circuit breakers to “**OFF**” position.
- Turn the ignition switch key to the “**STOP**” position.

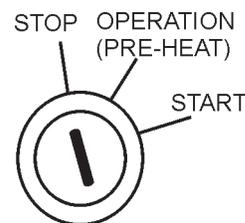


Figure 55. Ignition Switch (Off Position)

DCA-25SSIU2 (60 HZ)— MAINTENANCE

| TABLE 14. INSPECTION/MAINTENANCE | | 10 Hrs DAILY | 250 Hrs | 500 Hrs | 1000 Hrs |
|----------------------------------|---|-----------------|---------|---------|----------|
| ENGINE | Check Engine Fluid Levels | X | | | |
| | Check Air Cleaner | X | | | |
| | Check Battery Acid Level | X | | | |
| | Check Fan Belt Condition | X | | | |
| | Check for Leaks | X | | | |
| | Check for Loosening of Parts | X | | | |
| | Replace Engine Oil and Filter * 1 | | X | | |
| | Clean Air Filter | | X | | |
| | Clean Unit, Inside and Outside | | X | | |
| | Change Fuel Filter | | | X | |
| | Clean Radiator and Check Coolant Protection Level*2 | | | X | |
| | Replace Air Filter Element * 3 | | | X | |
| | Check all Hoses and Clamps * 4 | | | | X |
| | Clean Inside of Fuel Tank | | | | X |
| GENERATOR | Measure Insulation Resistance Over 3M ohms | | X | | |
| | Check Rotor Rear Support Bearing | | | X | |

*1 Replace engine oil and filter at 100 hours, first time only.

*2 Add "Supplemental Coolant Additives (SCA'S)" to recharge the engine coolant.

*3 Replace primary air filter element when restriction indicator shows a vacuum of 625 mm (25 in. H₂O).

*4 If blowby hose needs to be replaced, ensure that the slope of the blowby hose is at least a 1/2 inch per foot, with no sags or dips that could collect moisture and/or oil.

General Inspection

Prior to each use, the generator should be cleaned and inspected for deficiencies. Check for loose, missing or damaged nuts, bolts or other fasteners. Also check for fuel, oil, and coolant leaks. Use Table 14 as a general maintenance guideline **Engine Side** (Refer to the Engine Instruction Manual)

Air Cleaner

Every 250 hours: Remove air cleaner element and clean the heavy duty paper element with light spray of compressed air. Replace the air cleaner as needed.

Air Cleaner with Dust Indicator

This indicator is attached to the air cleaner. When the air cleaner element is clogged, air intake restriction becomes greater and the dust indicator signal shows **RED** meaning the element needs changing or service. After changing the air element, press the dust indicator button to reset the indicator.

Service Daily

If the engine is operating in very **dusty** or **dry grass** conditions, a clogged air cleaner will result. This can lead to a loss of power, excessive carbon buildup in the combustion chamber and high fuel consumption. Change air cleaner more **frequently** if these conditions exist.

Fuel Addition

Add diesel fuel (the grade may vary according to season and locations).

Removing Water from the Fuel Tank

After prolonged use, water and other impurities accumulate in the bottom of the tank. Occasionally inspect the fuel tank for water contamination and drain the contents if required.

During cold weather, the more empty volume inside the tank, the easier it is for water to condense. This can be reduced by keeping the tank full with diesel fuel.

Air Removal

If air enters the fuel injection system of a diesel engine, starting becomes impossible. After running out of fuel, or after disassembling the fuel system, bleed the system according to the following procedure.

To restart after running out of fuel, turn the switch to the "ON" position for 15-30 seconds. Try again, if needed. This unit is equipped with an automatic air bleeding system.

Cleaning the Fuel Strainer

Clean the fuel strainer if it contains dust or water. Remove dust or water in the strainer cap and wash it in gasoline. Securely fasten the fuel strainer cap so that fuel will not leak. Check the fuel strainer every 200 hours of operation or once a month.

Check Oil Level

Check the crankcase oil level prior to each use, or when the fuel tank is filled. Insufficient oil may cause severe damage to the engine. Make sure the generator is level. The oil level must be between the two notches on the dipstick as shown in (Figure 31).

Replacing Oil Filter

- To remove the oil filter, grip the filter body and turn counter-clockwise
- Apply a film of oil to the rubber seal gasket.
- Place the oil filter body onto the oil filter spindle by turning clockwise. **DO NOT** over tighten.
- After the oil filter has been replaced, the engine oil will drop slightly. Run the engine for a while and check for leaks before adding more oil if needed. Clean excessive oil from engine.

Replacing Fuel Filter

- Replace the fuel filter cartridge with new one every 500 hours or so.
- Loosen the drain plug at the lower top of the fuel filter. Drain the fuel in the fuel body together with the mixed water. **DO NOT** spill the fuel during disassembly.
- Vent any air.

Flushing Out Radiator and Replacing Coolant

- Open both cocks located at the crankcase side and at the lower part of the radiator and drain coolant. Open the radiator cap while draining. Remove the overflow tank and drain.
- Check hoses for softening and kinks. Check clamps for signs of leakage.
- Flush the radiator by running clean tap water through radiator until signs of rust and dirt are removed. **DO NOT** clean radiator core with any objects, such as a screwdriver.
- Tighten both cocks and replace the overflow tank.
- Replace with coolant (Table 13 for correct mixture).
- Close radiator cap tightly.



WARNING - BURN HAZARDS

Allow engine to **cool** when flushing out radiator. Flushing the radiator while hot could cause serious burns from water steam.



Generator Storage

For long term storage of the generator the following is recommended:

- Fill the fuel tank completely. Treat with a fuel stabilizer if necessary.
- Completely drain the oil from the crankcase and refill if necessary with fresh oil.
- Clean the entire generator, internal and external.
- Cover the generating set and store in a clean, dry place.
- Disconnect the battery.
- Make sure engine coolant is at proper level.
- If generator is mounted on a trailer, jack trailer up and place on block so tires do touch the ground or remove tires.

DCA-25SSIU2 (60 HZ)— MAINTENANCE

Jacket Water Heater and Internal Battery Charger 120 VAC Input Receptacles (OPTIONAL)



This generator can be optionally equipped with two 120 VAC, 20 amp input receptacles located on the output terminal panel.

The purpose of these receptacles is to provide power via commercial power to the *jacket water heater* and *internal battery charger*.

These receptacles will **ONLY** function when commercial power has been supplied to them (Figure 56). To apply commercial power to these receptacles, a power cord of adequate size will be required (See Table 6).

When using the generator in *hot* climates there is no reason to apply power to jacket water heater. However, if the generator will be used in *cold* climates it is always a good idea to apply power to the jacket water heater at all times. To apply power to the jacket water heater simply apply power to the jacket water heater receptacle via commercial power using an power cord of adequate size.

If the generator will be used daily, the battery should normally not require charging. If the generator will be idle (not used) for long periods of time, apply power to the battery charger receptacle via commercial power using an power cord of adequate size.

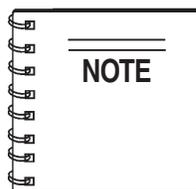

To ensure adequate starting capability, **always** have power applied to the generator's *internal battery charger*.

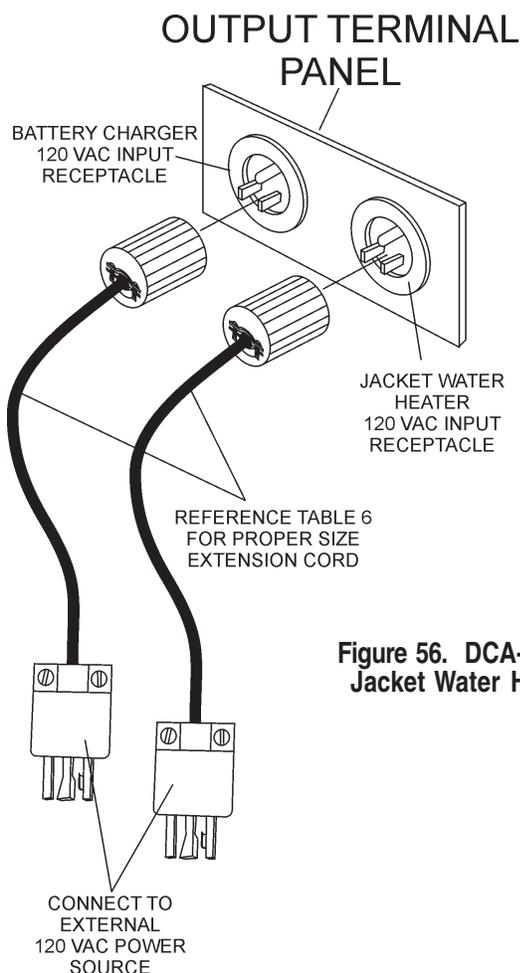


Figure 56. DCA-25SSIU2 Battery Charger & Jacket Water Heater Power Connections

DCA-25SSIU2 (60 HZ)—TRAILER MAINTENANCE

Trailer Maintenance

This section is intended to provide the user with generic trailer service and maintenance information. The service and maintenance guidelines referenced in this section refer to a wide range of trailers.

Remember periodic inspection of the trailer will ensure safe towing of the generator and will prevent personal injury and damage to the equipment.

The definitions below describe some of the major components of a typical trailer that would be used with the DCA-25SSIU2 Whisperwatt™ Generator.

1. **Fuel Cell** - Provides an adequate amount of fuel for the equipment in use. Fuel cells must be empty when transporting equipment.
2. **Braking System** - System employed in stopping the trailer. Typical braking systems are electric, surge, hydraulic, hydraulic-surge and air.
3. **GVWR**- Gross Vehicle Weight Rating (GVWR) is the maximum number of pounds the trailer can carry, including the fuel cell (empty).
4. **Frame Length** - Measurement is from the ball hitch to the rear bumper (reflector).
5. **Frame Width** - Measurement is from fender to fender
6. **Jack Stand** - Trailer support device with maximum pound requirement from the tongue of the trailer.
7. **Coupler** - Type of hitch used on the trailer for towing.
8. **Tire Size** - Indicates the diameter of the tire in inches (10,12,14, etc.), and the width in millimeters (175,185,205, etc.). The tire diameter must match the diameter of the tire rim.
9. **Tire Ply** - The tire ply (layers) number is rated in letters; 2-ply,4-ply,6-ply, etc.
10. **Wheel Hub** - The wheel hub is connected to the trailer's axle.
11. **Tire Rim** - Tires mounted on a tire rim. The tire rim must match the size of the tire.
12. **Lug Nuts** - Used to secure the wheel to the wheel hub. Always use a torque wrench to tighten down the lug nuts. See Table 18 and Figure 58 for lug nut tightening and sequence.
13. **Axle** - Indicates the maximum weight the axle can support in pounds, and the diameter of the axle expressed in inches. Please note that some trailers have a double axle. This will be shown as 2-6000 lbs., meaning two axles with a total weight capacity of 6000 pounds.
14. **Suspension** - Protects the trailer chassis from shocks transmitted through the wheels. Types of suspension used are leaf, Q-flex, and air ride.
15. **Electrical** - Electrical connectors (looms) are provided with the trailer so the brake lights and turn signals can be connected to the towing vehicle.
16. **Application** - Indicates which units can be employed on a particular trailer.

DCA-25SSIU2 (60 HZ)—TRAILER MAINTENANCE

Brakes

Trailer brakes should be inspected the **first 200 miles** of operation. This will allow the brake shoes and drums to seat properly. After the first 200 mile interval, inspect the brakes **every 3,000 miles**. If driving over rough terrain, inspect the brakes more frequently.

Figure 57 displays the major hydraulic surge brake components that will require inspection and maintenance. Please inspect these components as required using steps 1 through 8 and Table 15 as shown below:

Brake Adjustment

1. Place the trailer on jack stands. Make sure the jack stands are placed on secure level ground.
2. Check the wheel and drum for free rotation.
3. Remove the adjusting hole cover from the adjusting slot at the bottom brake backing plate.
4. With a screwdriver or standard adjusting tool, rotate the star wheel of the adjuster assembly to expand the brake shoes.
5. Adjust the brake shoes outward until the pressure of the lining against the wheel drum makes the wheel difficult to turn.
6. Adjust, rotate the star wheel in the opposite direction until the wheel rotates freely with slight lining drag.
7. Replace the adjusting hole cover and lower the trailer to the ground.
8. Repeat steps 1 through 7 on the remaining brakes.

Hydraulic Surge Brakes

Hydraulic surge brakes (Figure 56) should not require any special attention with the exception of routine maintenance such as shoe and lining replacement. Brake lines should be periodically checked for cracks, kinks, or blockage.

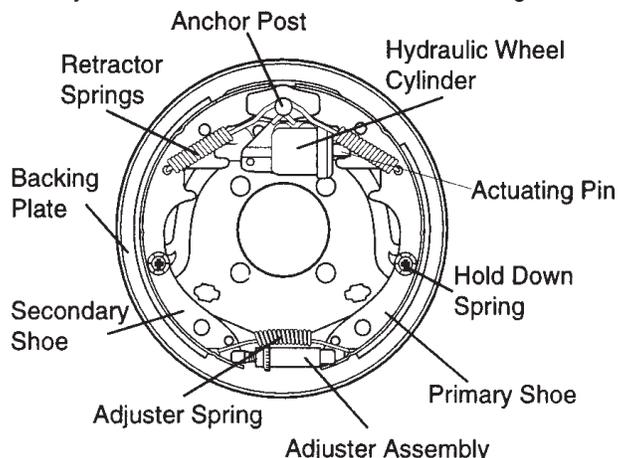


Figure 57. Hydraulic Brake Components

Actuator

Hydraulic surge braking requires the installation of an actuator at the tongue of the trailer. Remember the **surge** or **push** of the trailer toward the tow vehicle automatically synchronizes the trailer brakes with the tow vehicle brakes. As the trailer pushes against the tow vehicle the actuator telescopes together and applies force to the master cylinder, supplying hydraulic pressure to the trailer brakes.

Periodically check and test the surge “**actuator**” to make sure that it is functioning correctly. Never use an undersize actuator.

Table 15. Hydraulic Brake Troubleshooting

| Symptom | Possible Cause | Solution |
|--|---|---|
| No Brakes | Brake line broken or kinked? | Repair or replace. |
| Weak Brakes or Brakes Pull to One Side | Brake lining glazed? | Reburnish or replace. |
| | Trailer overloaded? | Correct weight. |
| | Brake drums scored or grooved? | Machine or replace. |
| | Tire pressure correct? | Inflate all tires equally. |
| | Tires unmatched on the same axle? | Match tires. |
| Locking Brakes | Brake components loose, bent or broken? | Replace components. |
| | Brake drums out-of-round? | Replace. |
| Noisy Brakes | System lubricated? | Lubricate. |
| | Brake components correct? | Replace and correct. |
| Dragging Brakes | Brake lining thickness incorrect or not adjusted correctly? | Install new shoes and linings. |
| | Enough brake fluid or correct fluid? | Replace rubber parts fill with dot 4 fluid. |


DCA-25SSIU2 (60 HZ)—TRAILER MAINTENANCE

Tires/Wheels/Lug Nuts

Tires and wheels are a very important and critical components of the trailer. When specifying or replacing the trailer wheels it is important the wheels, tires, and axle are properly matched.


! CAUTION - EYESIGHT HAZARD

ALWAYS wear safety glasses when removing or installing force fitted parts. Failure to comply may result in serious injury.

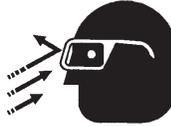

! CAUTION - REPAIRING TRAILER WHEELS

DO NOT attempt to repair or modify a wheel. **DO NOT** install in inner tube to correct a leak through the rim. If the rim is cracked, the air pressure in the inner tube may cause pieces of the rim to explode (break off) with great force and cause serious eye or bodily injury.

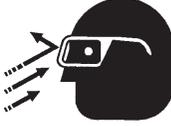

Tire Wear/Inflation

Tire inflation pressure is the most important factor in tire life. Pressure should be checked cold before operation **DO NOT** bleed air from tires when they are **hot!** Check inflation pressure weekly during use to insure the maximum tire life and tread wear.

Table 16 (Tire Wear Troubleshooting) will help pinpoint the causes and solutions of tire wear problems.

| TABLE 16. TIRE WEAR TROUBLESHOOTING | | |
|---|--------------------------------|---|
| WEAR PATTERN | CAUSE | SOLUTION |
|  Center Wear | Over Inflation. | Adjust pressure to particular load per tire manufacturer. |
|  Edge Wear | Under Inflation. | Adjust pressure to particular load per tire manufacturer. |
|  Side Wear | Loss of camber or overloading. | Make sure load does not exceed axle rating. Align wheels. |
|  Toe Wear | Incorrect toe-in. | Align wheels. |
|  Cupping | Out-of-balance. | Check bearing adjustment and balance tires. |
|  Flat Spots | Wheel lockup & tire skidding. | Avoid sudden stops when possible and adjust brakes. |

Suspension

The **leaf suspension** springs and associated components (Figure 58) should be visually inspected every 6,000 miles for signs of excessive wear, elongation of bolt holes, and loosening of fasteners. Replace all damaged parts (suspension) immediately. Torqued suspension components as detailed in Table 17.

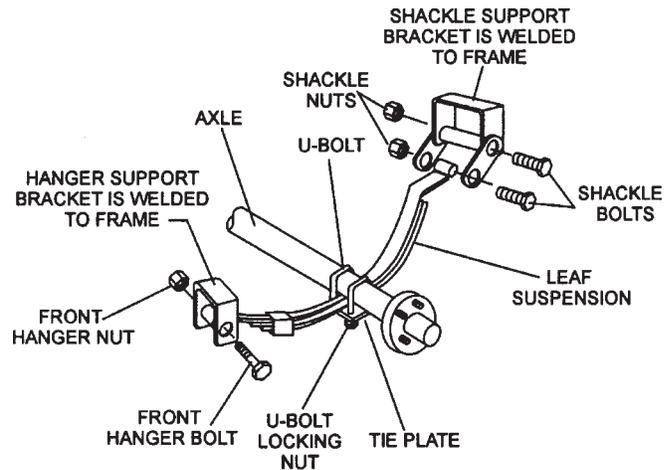


Figure 58. Major Suspension Components

| Table 17. Suspension Torque Requirements | |
|--|--|
| Item | Torque (Ft.-Lbs.) |
| 3/8" U-BOLT | MIN-30 MAX-35 |
| 7/16" U-BOLT | MIN-45 MAX-60 |
| 1/2" U-BOLT | MIN-45 MAX-60 |
| SHACKLE BOLT SPRING EYE BOLT | SNUG FIT ONLY. PARTS MUST ROTATE FREELY. LOCKING NUTS OR COTTER PINS ARE PROVIDED TO RETAIN NUT-BOLT ASSEMBLY. |
| SHOULDER TYPE SHACKLE BOLT | MIN-30 MAX-50 |

DCA-25SSIU2 (60 HZ)—TRAILER MAINTENANCE


Lug Nut Torque Requirements

It is extremely important to apply and maintain proper wheel mounting torque on the trailer. Be sure to use only the fasteners matched to the cone angle of the wheel. Proper procedure for attachment of the wheels is as follows:


1. Start all wheel lug nuts by hand.
2. Torque all lug nuts in sequence (see Figure 59). **DO NOT** torque the wheel lug nuts all the way down. Tighten each lug nut in 3 separate passes as defined by Table 18.
3. After first road use, retorque all lug nuts in sequence. Check all wheel lug nuts periodically.

Table 18. Tire Torque Requirements

| Wheel Size | First Pass FT-LBS | Second Pass FT-LBS | Third Pass FT-LBS |
|------------|-------------------|--------------------|-------------------|
| 12" | 20-25 | 35-40 | 50-65 |
| 13" | 20-25 | 35-40 | 50-65 |
| 14" | 20-25 | 50-60 | 90-120 |
| 15" | 20-25 | 50-60 | 90-120 |
| 16" | 20-25 | 50-60 | 90-120 |

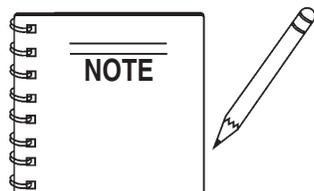


NEVER use an pneumatic air gun to tighten wheel lug nuts.

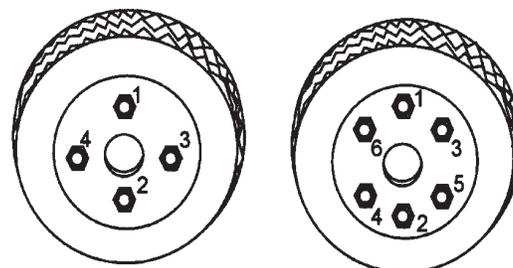


4-LUG NUTS

6-LUG NUTS

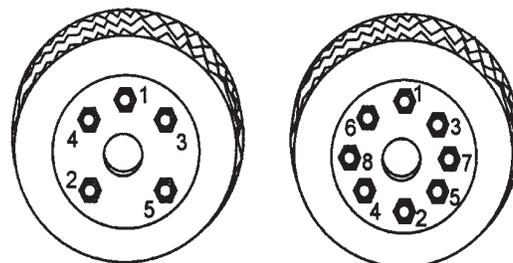

5-LUG NUTS

8-LUG NUTS

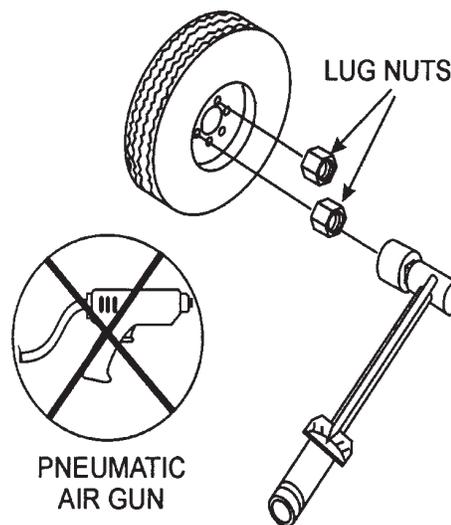

TORQUE WRENCH

Figure 59. Wheel Lug Nuts Tightening Sequence

DCA-25SSIU2 (60 HZ)—TRAILER WIRING DIAGRAM


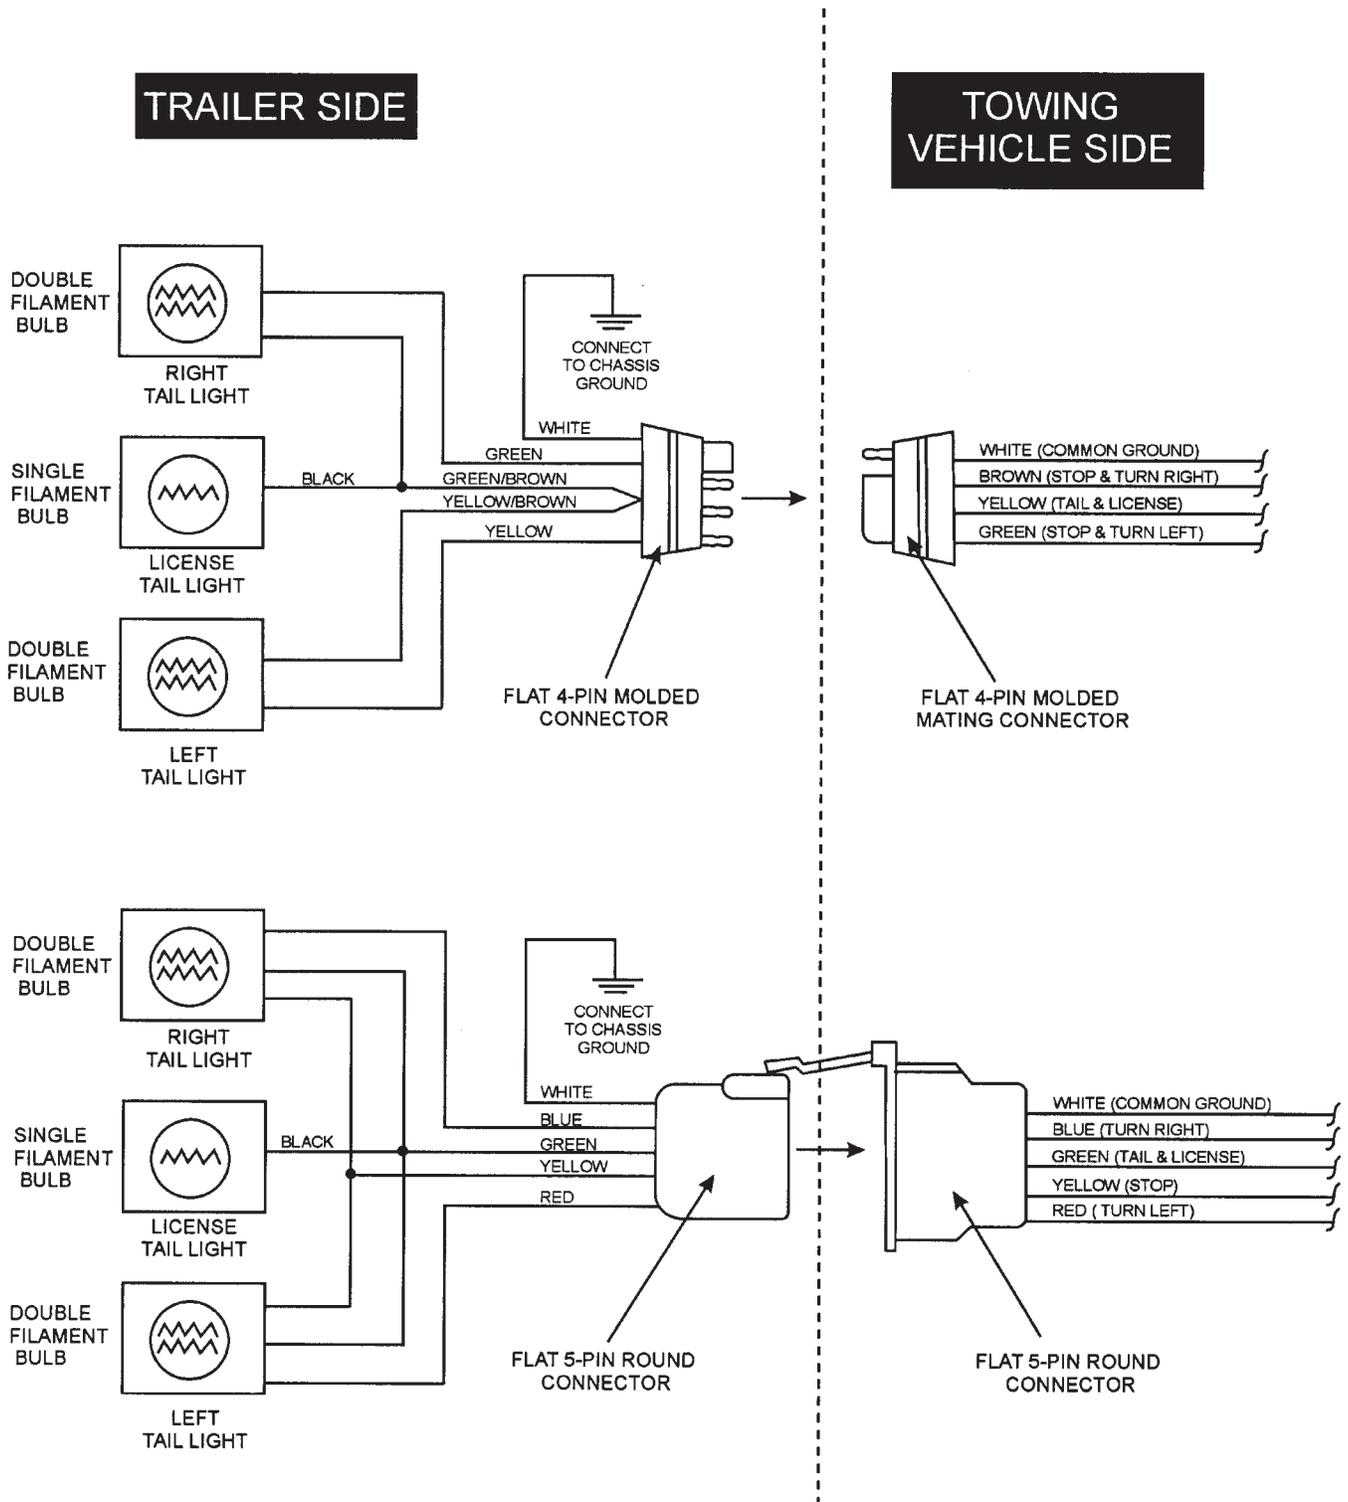


Figure 60. Trailer/Towing Vehicle Wiring Diagram

DCA-25SSIU2 (60 HZ)— GENERATOR WIRING DIAGRAM

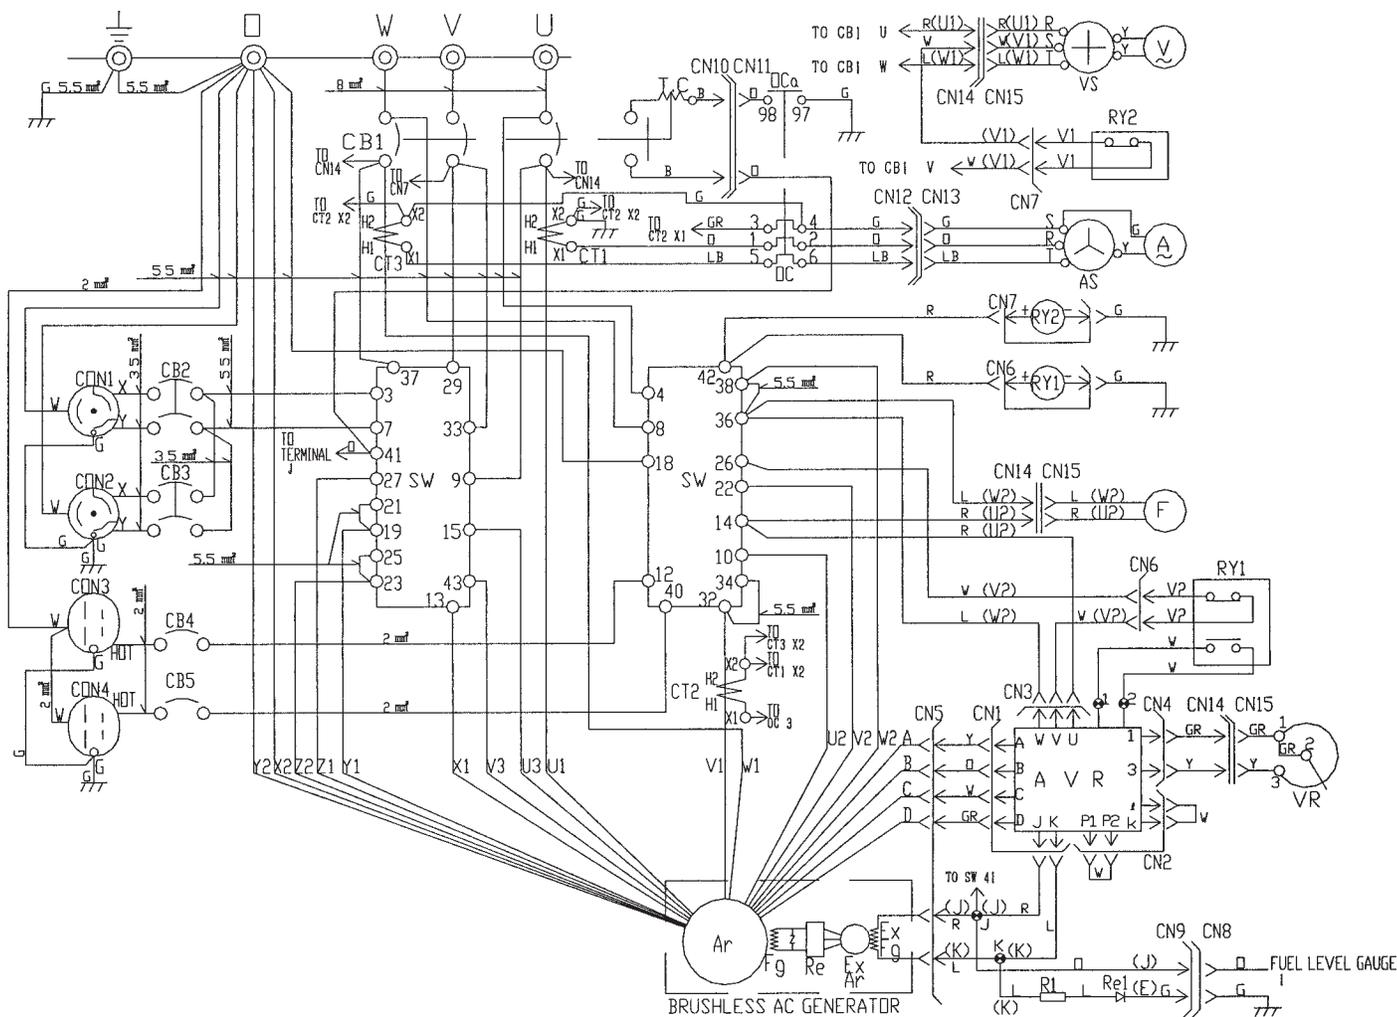

| SYMBOL | DESIGNATION |
|----------|---------------------------------|
| Ar | MAIN GENERATOR ARMATURE WINDING |
| Fg | MAIN GENERATOR FIELD WINDING |
| ExAr | EXCITER ARMATURE WINDING |
| ExFg | EXCITER FIELD WINDING |
| Re | RECTIFIER |
| AVR | AUTOMATIC VOLTAGE REGULATOR |
| VR | VOLTAGE REGULATOR (RHEOSTAT) |
| CT 1,2,3 | CURRENT TRANSFORMER |
| AS | CHANGE-OVER SWITCH, AMMETER |
| A | AC, AMMETER |
| VS | CHANGE-OVER SWITCH, VOLTMETER |
| V | AC, VOLTMETER |
| F | FREQUENCY METER |
| CB1 | CIRCUIT BREAKER |
| CB2,3,4 | CIRCUIT BREAKER |
| CB5,6 | CIRCUIT BREAKER |
| CON1,2,3 | RECEPTACLE |
| CON4,5 | RECEPTACLE |
| OC | OVER CURRENT RELAY |
| SW | SELECTOR SWITCH |
| RY1,2 | RELAY UNIT |
| R1 | RESISTOR |
| Re1 | RECTIFIER |
| ⊗ | TERMINAL |

CONNECTOR ARRANGEMENT (WIRING VIEW)



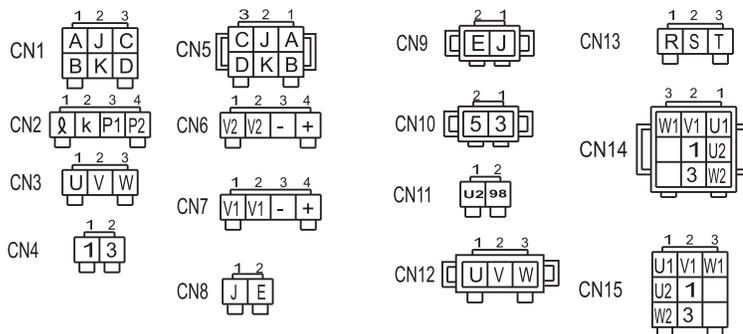


Figure 61. Generator Wiring Diagram

DCA-25SSIU2 (60 HZ)— ENGINE WIRING DIAGRAM

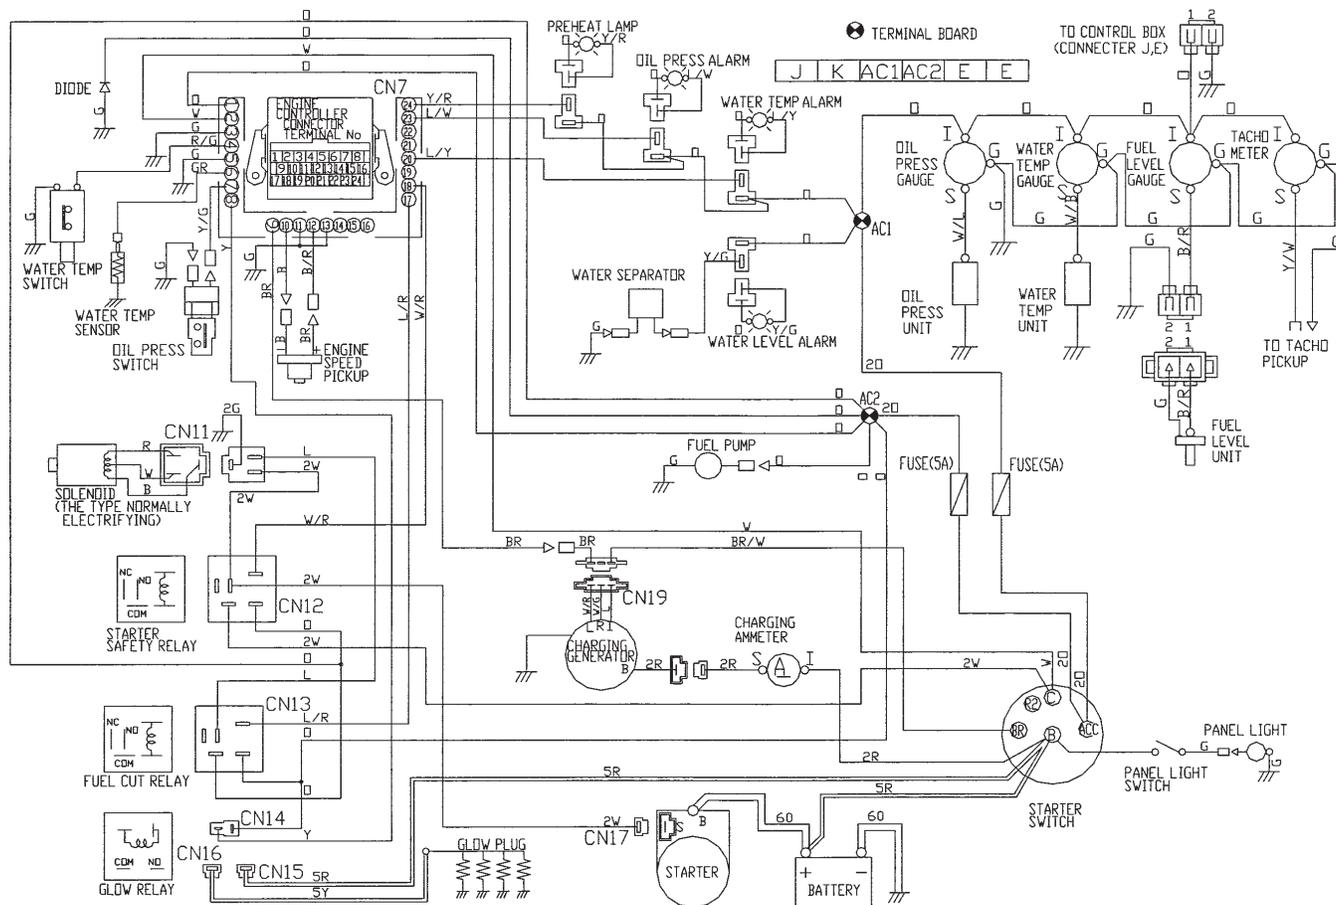

| COLOR CODE | | | |
|------------|------------|----|-------------|
| | WIRE COLOR | | WIRE COLOR |
| B | BLACK | R | RED |
| L | BLUE | W | WHITE |
| BR | BROWN | Y | YELLOW |
| G | GREEN | LB | LIGHT BLUE |
| GR | GRAY | LG | LIGHT GREEN |
| V | VIOLET | O | ORANGE |
| P | PINK | | |

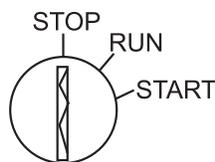

| | KEY CONNECTION DIAGRAM | | | | |
|-------|------------------------|-----|----|---|----|
| | B | ACC | R2 | C | BR |
| STOP | ○ | | | | |
| RUN | ○ | ○ | | | ○ |
| START | ○ | ○ | ○ | ○ | ○ |

WARNING: CONNECTOR viewed from inserting wire side.

Figure 62. Engine Wiring Diagram

DCA-25SSIU2 (60 HZ)—TROUBLESHOOTING (GENERATOR)

Practically all breakdowns can be prevented by proper handling and maintenance inspections, but in the event of a breakdown, use Table 20 shown below for diagnosis of the Generator. If the problem cannot be remedied, consult our company's business office or service plant.

TABLE 20. GENERATOR TROUBLESHOOTING

| SYMPTOM | POSSIBLE PROBLEM | SOLUTION |
|-------------------------|-------------------------------|---|
| No Voltage Output | AC Voltmeter defective? | Check output voltage using a voltmeter. |
| | Is wiring connection loose? | Check wiring and repair. |
| | Is AVR defective? | Replace if necessary. |
| | Defective Rotating Rectifier? | Check and replace. |
| | Defective Exciter Field? | Check for 17.3 ohms across J & K on CN1 |
| Low Voltage Output | Is engine speed correct? | Turn engine throttle lever to "High". |
| | Is wiring connections loose? | Check wiring and repair. |
| | Defective AVR? | Replace if necessary. |
| High Voltage Output | Is wiring connections loose? | Check wiring and repair. |
| | Defective AVR? | Replace if necessary. |
| Circuit Breaker Tripped | Short Circuit in load? | Check load and repair. |
| | Over current? | Confirm load requirements and reduce. |
| | Defective circuit breaker? | Check and replace. |
| | Over current Relay actuated? | Confirm load requirement and replace. |

DCA-25SSIU2 (60 HZ)—TROUBLESHOOTING (ENGINE)

Practically all breakdowns can be prevented by proper handling and maintenance inspections, but in the event of a breakdown, use Table 21 (Engine Troubleshooting) as a basic guideline for troubleshooting the Engine. If the problem cannot be remedied, consult our company's business office or service plant.

TABLE 21. ENGINE TROUBLESHOOTING

| SYMPTOM | POSSIBLE PROBLEM | SOLUTION |
|------------------------|--|---|
| Engine does not start. | No fuel? | Replenish fuel. |
| | Air in the fuel system? | Bleed system. |
| | Water in the fuel system? | Remove water from fuel tank. |
| | Fuel pipe clogged? | Clean fuel pipe. |
| | Fuel filter clogged? | Clean or change fuel filter. |
| | Excessively high viscosity of fuel or engine oil at low temperature? | Use the specified fuel or engine oil. |
| | Fuel with low cetane number? | Use the specified fuel. |
| | Fuel leak due to loose injection pipe retaining nut? | Tighten nut. |
| | Injection nozzle clogged? | Clean injection nozzle. |
| | Injection pump malfunctioning? | Repair or replace. |
| | Seizure of crankshaft, camshaft, piston, cylinder liner or bearing? | Repair or replace. |
| | Compression leak from cylinder? | Replace head gasket, tighten cylinder head bolt, glow plug and nozzle holder. |
| | Piston ring and liner worn? | Replace. |
| | Excessive valve clearance? | Adjust. |
| Starter does not run. | Starter malfunctioning? | Repair or replace. |
| | Wiring disconnected? | Connect wiring. |

DCA-25SSIU2 (60 HZ)—TROUBLESHOOTING (ENGINE)

TABLE 21. ENGINE TROUBLESHOOTING (CONTINUED)

| SYMPTOM | POSSIBLE PROBLEM | SOLUTION |
|--|--|---|
| Engine revolution is not smooth. | Fuel filter clogged or dirty? | Clean or change. |
| | Air cleaner clogged? | Clean or change. |
| | Fuel leak due to loose injection pipe retaining nut? | Tighten nut. |
| | Injection pump malfunctioning? | Repair or replace. |
| | Incorrect nozzle opening pressure? | Adjust. |
| | Injection nozzle stuck or clogged? | Repair or replace. |
| | Fuel over flow pipe clogged? | Clean. |
| | Governor malfunctioning? | Repair. |
| Either white or blue exhaust gas is observed. | Excessive engine oil? | Reduce to the specified level. |
| | Piston ring and liner worn or stuck? | Repair or replace. |
| | Incorrect injection timing? | Adjust. |
| | Deficient compression? | Adjust top clearance. |
| Either black or dark gray exhaust gas is observed. | Overload? | Lessen the load. |
| | Low grade fuel used? | Use the specified fuel. |
| | Fuel filter clogged? | Clean or change. |
| | Air cleaner clogged? | Clean or change. |
| | Deficient nozzle injection? | Repair or replace the nozzle. |
| Deficient output. | Incorrect injection timing? | Adjust. |
| | Engine's moving parts seem to be seizing? | Repair or replace. |
| | Uneven fuel injection? | Repair or replace the injection pump. |
| | Deficient nozzle injection? | Repair or replace the nozzle. |
| | Compression leak? | Replace head gasket, tighten cylinder head bolt, glow plug and nozzle holder. |

EXPLANATION OF CODE IN REMARKS COLUMN

How to read the marks and remarks used in this parts book.


Items Found In the “Remarks” Column

Serial Numbers-Where indicated, this indicates a serial number range (inclusive) where a particular part is used.


Model Number-Where indicated, this shows that the corresponding part is utilized only with this specific model number or model number variant.

Items Found In the “Items Number” Column

All parts with same symbol in the number column, *, #, +, %, or <, belong to the same assembly or kit.

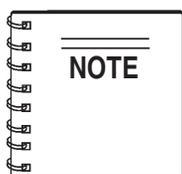

If more than one of the same reference number is listed, the last one listed indicates newest (or latest) part available.

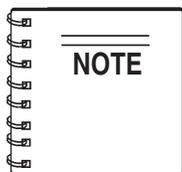


The contents of this catalog are subject to change without notice.

DCA-25SSIU2 (60 HZ)— SUGGESTED SPARE PARTS

DCA-25SSIU2 (60 HZ) ULTRA-SILENT GENRATOR W/SUZU AA-4LE2 ENGINE 1 TO 3 UNITS


| <u>Qty.</u> | <u>P/N</u> | <u>Description</u> |
|-------------|------------------|------------------------------------|
| 5 | 2944566410 | FILTER, OIL |
| 5 | 8943692993 | FILTER, FUEL |
| 3 | 0602046321 | ELEMENT, AIR |
| 1 | 8972606490 | BELT, FAN |
| 1 | 0605505070 | CAP. FUEL TANK |
| 1 | 9831401570 | UNIT, OIL PRESSURE |
| 1 | 8970785920 | UNIT, WATER TEMPERATURE |
| 1 | 8944032410 | SENDER, WATER SWITCH (ENGINE SIDE) |
| 1 | 9827200690 | SENDER, OIL SWITCH (ENGINE SIDE) |

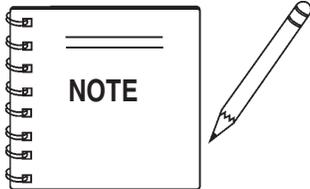

Part number on this Suggested Spare Parts list may supercede/replace the P/N shown in the text pages of this book.

DCA-25SSIU2 (60 HZ)— GENERATOR ASSY.

GENERATOR ASSY.

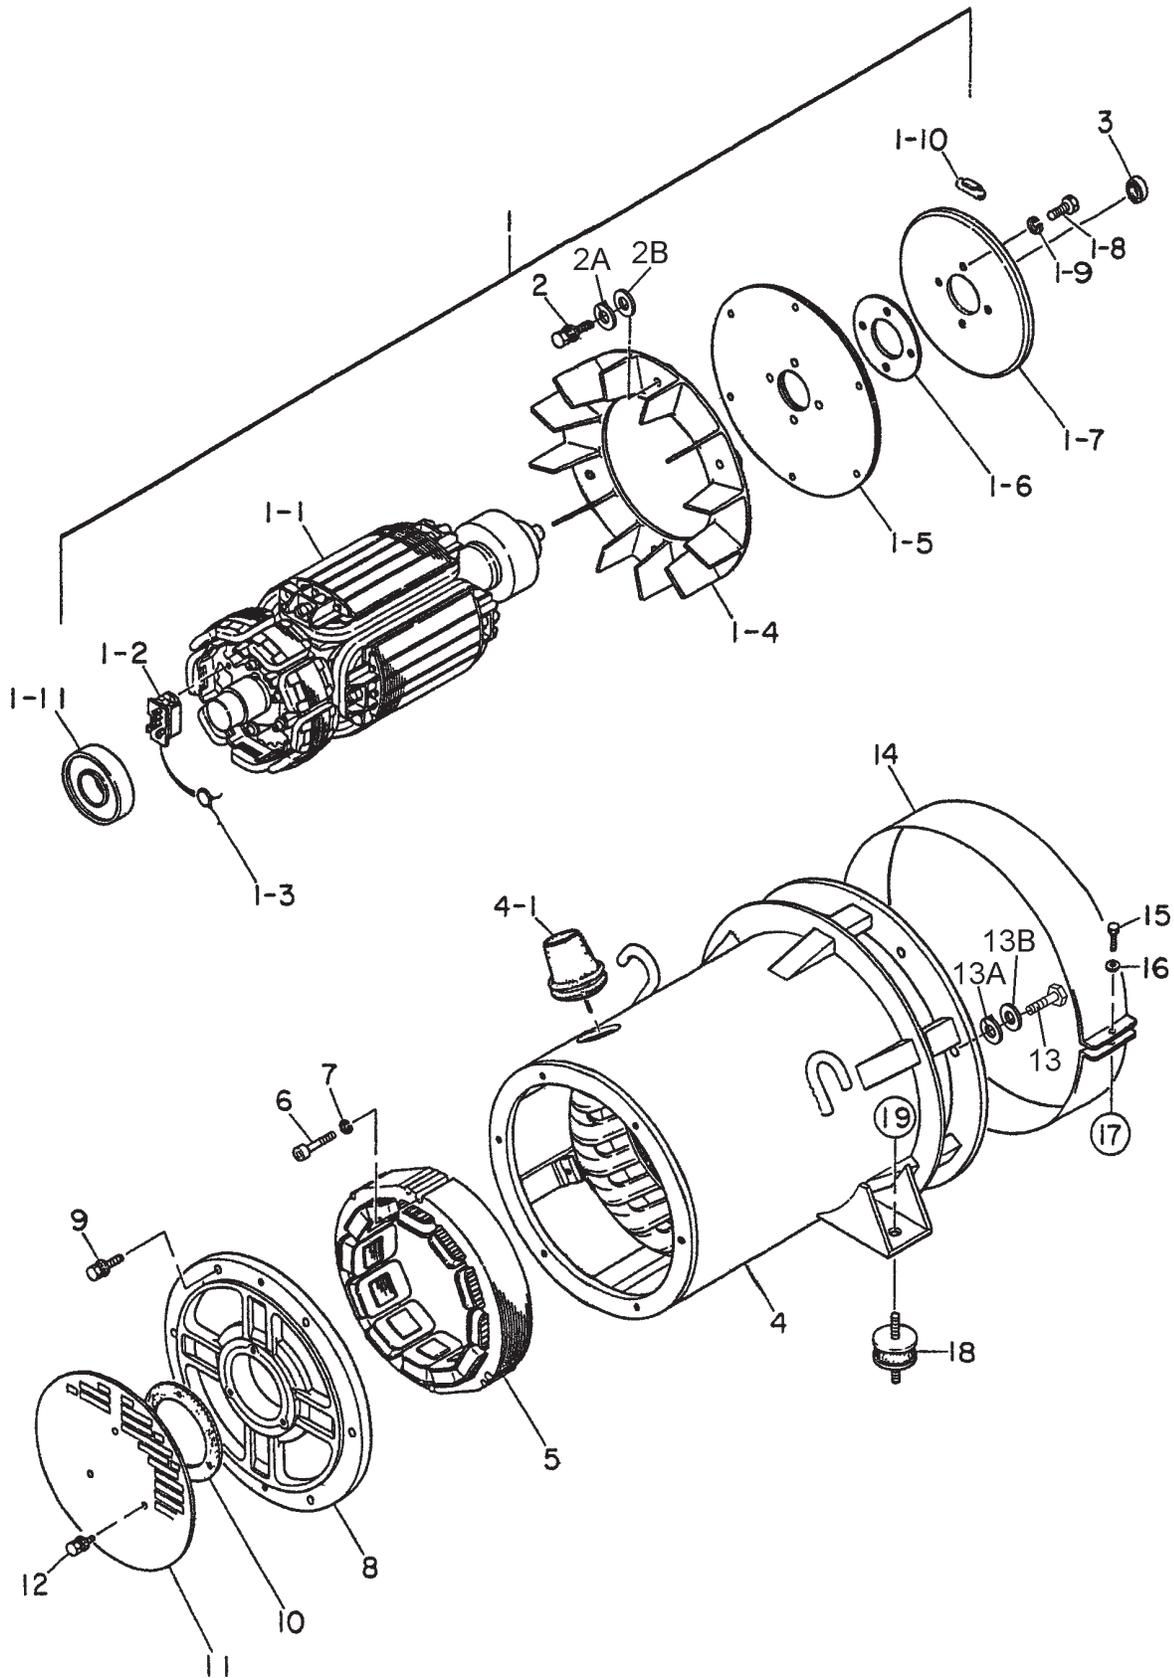


DCA-25SSIU2 (60 HZ)— GENERATOR ASSY.

GENERATOR ASSY.

| <u>NO.</u> | <u>PART NO.</u> | <u>PART NAME</u> | <u>QTY.</u> | <u>REMARKS</u> |
|------------|-----------------|---------------------------------|-------------|----------------------|
| 1 | B1110200602 | ROTOR ASSY. | 1 | INCLUDES ITEMS W/* |
| 1-1* | | FIELD ASSY. | 1 | |
| 1-2* | 7961025004 | RECTIFIER | 1 | |
| 1-3* | 0601822630 | SURGE ABSORBER, TNR23G471K | 1 | |
| 1-4* | 8001070003 | FAN | 1 | |
| 1-5* | 8351611004 | COUPLING DISK | 2 | |
| 1-6* | 8351612004 | WASHER, COUPLING HUB | 1 | |
| 1-7* | B1112300003 | BALANCING PLATE | 1 | PURCHASE SET OF 1-10 |
| 1-8* | 0010310025 | HEX, HEAD BOLT | 4 | |
| 1-9* | 0042510000 | SPRING WASHER | 4 | |
| 1-10* | 0601000209 | BALANCING WEIGHT KIT | 1 | |
| 1-11* | 0071906308 | BEARING, 6308DDU C3 | 1 | |
| 2 | 0010308035 | HEX, HEAD BOLT | 6 | |
| 2A | 0040008000 | SPRING WASHER | 6 | |
| 2B | 0041208000 | PLAIN WASHER | 6 | |
| 3 | 0070506803 | BEARING, 6803ZZ | 1 | |
| 4 | B1130201103 | STATOR ASSY. | 1 | |
| 4-1 | 0845041904 | GROMMET | 1 | |
| 5 | B1138000003 | FIELD ASSY. EXCITER | 1 | |
| 6 | 0016008045 | HEX, SOCKET HEAD CAP SCREW S=22 | 3 | |
| 7 | 0042508000 | SPRING WASHER | 3 | |
| 8 | 8351315003 | END BRACKET | 1 | |
| 9 | 0017108035 | HEX, HEAD BOLT | 6 | |
| 10 | 8351312004 | PACKING | 1 | |
| 11 | 8351331004 | COVER, SUCTION | 1 | |
| 12 | 0017106016 | HEX, HEAD BOLT | 3 | |
| 13 | 0010310030 | HEX, HEAD BOLT | 6 | |
| 13A | 0040010000 | SPRING WASHER | 6 | |
| 13B | 0041210000 | PLAIN WASHER | 6 | |
| 14 | B0155400204 | COVER, FAN | 1 | |
| 15 | 0010106030 | HEX, HEAD BOLT | 1 | |
| 16 | 0041206000 | PLAIN WASHER | 1 | |
| 17 | 0600815000 | NUT, USN-6001 | 1 | |
| 18 | M9312600004 | RUBBER SUSPENSION | 2 | |
| 19 | 0207010000 | HEX, NUT | 2 | |

DCA-25SSIU2 (60 HZ)— CONTROL BOX ASSY.

CONTROL BOX ASSY.

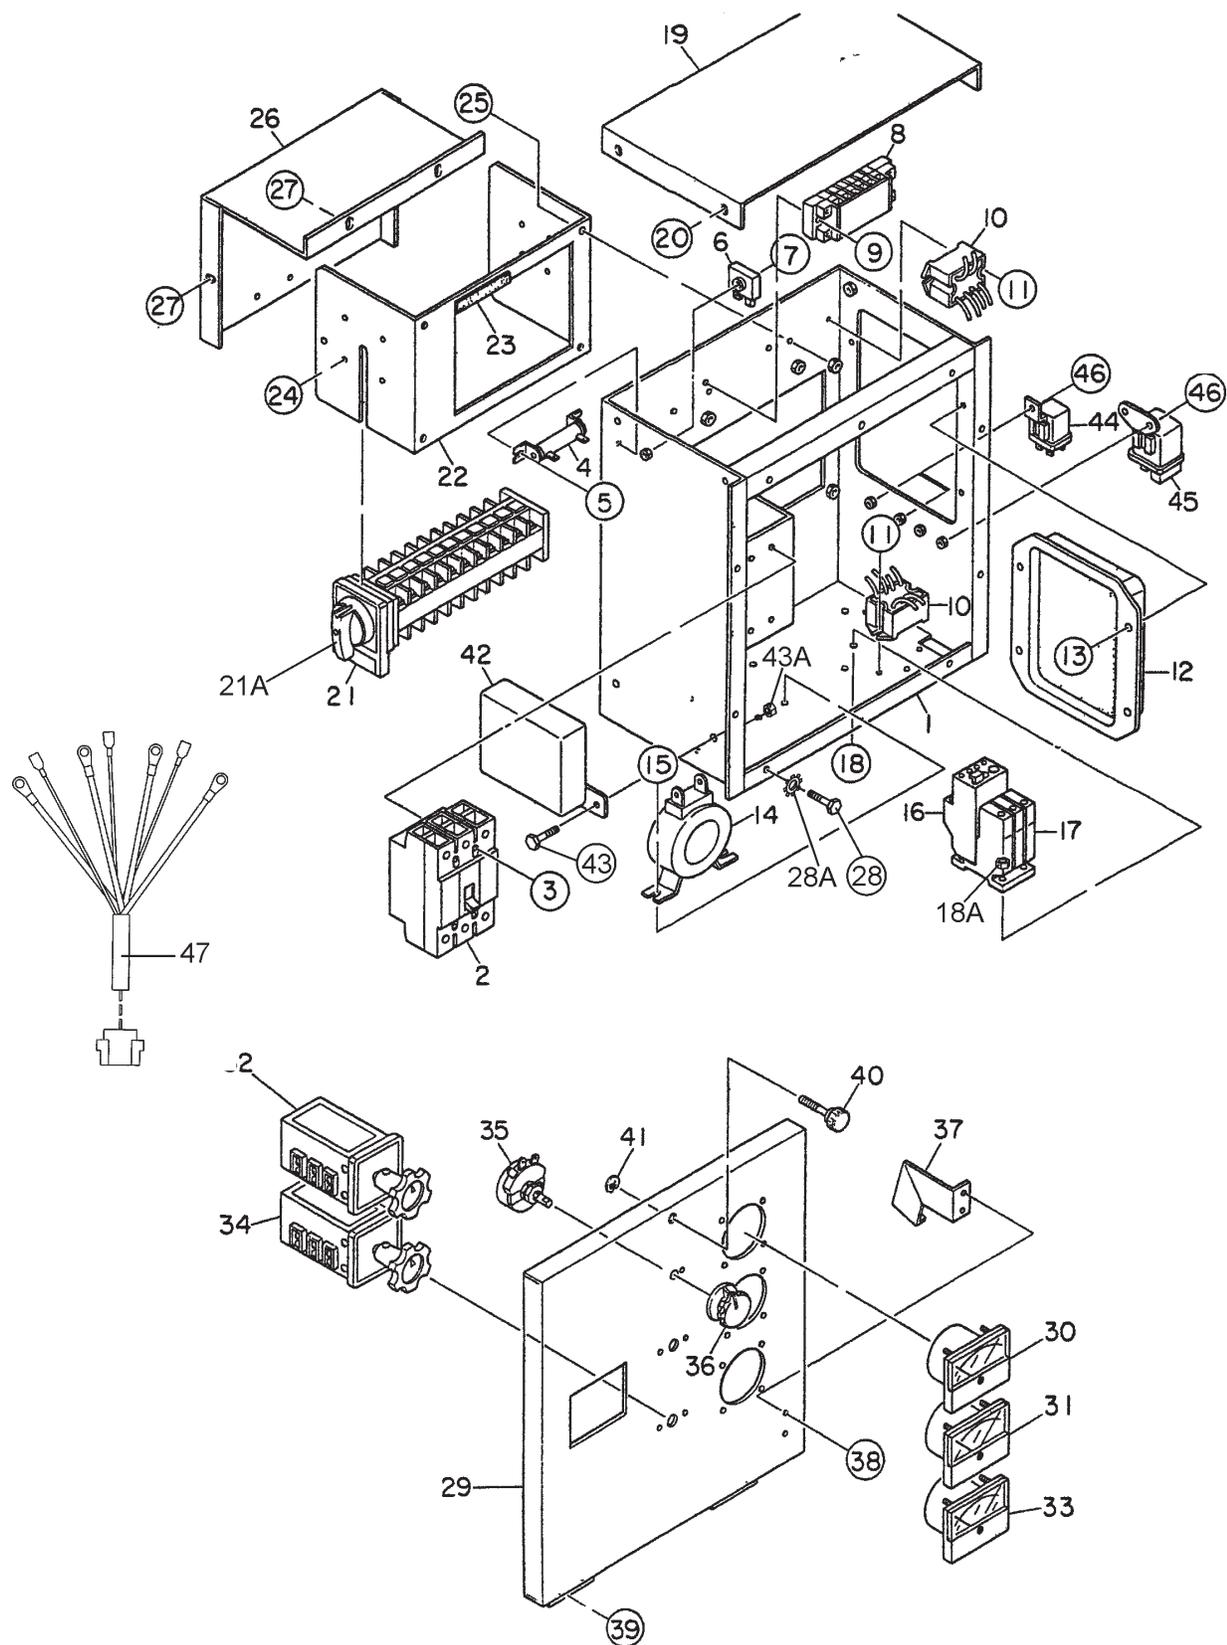


DCA-25SSIU2 (60 HZ)— CONTROL BOX ASSY.

CONTROL BOX ASSY.

| <u>NO.</u> | <u>PART NO.</u> | <u>PART NAME</u> | <u>QTY.</u> | <u>REMARKS</u> |
|------------|-----------------|---|-------------|----------------|
| 1 | M1213000902 | CONTROL BOX | 1 | |
| 2 | 0601870430 | CIRCUIT BREAKER, GD3060D33 3P 60A T.C. 12V DC | 1 | |
| 3 | 0021004075 | MACHINE SCREW | 4 | |
| 4 | 0601842384 | RESISTOR, GG20W 50 OHM | 1 | |
| 5 | 0021004010 | MACHINE SCREW | 2 | |
| 6 | 0601823240 | RECTIFIER, DE45 | 2 | |
| 7 | 0027104030 | MACHINE SCREW | 1 | |
| 8 | 0601815759 | TERMINAL BOARD, KT-20 6P | 1 | |
| 9 | 0027104020 | MACHINE SCREW | 2 | |
| 10 | 0601823863 | RELAY UNIT, MSA9013A | 2 | |
| 11 | 0027104016 | MACHINE SCREW | 4 | |
| 12 | 0601820671 | AUTOMATIC VOLTAGE REGULATOR, NTA-5A-2DB | 1 | |
| 13 | 0027105016 | MACHINE SCREW | 4 | |
| 14 | 0601806115 | CURRENT TRANSFORMER, 812-943 50/5A | 3 | |
| 15 | 0027106016 | MACHINE SCREW | 6 | |
| 16 | 0601820847 | OVER CURRENT RELAY, TA25DU 4.0 | 1 | |
| 17 | 0601820848 | OVER CURRENT RELAY, DB25/25A | 1 | |
| 18 | 0027104016 | MACHINE SCREW | 2 | |
| 18A | 0207004000 | HEX, NUT | 2 | |
| 19 | M1213500203 | CONTROL BOX COVER | 1 | |
| 20 | 0016906016 | HEX, HEAD BOLT | 4 | |
| 21 | M1923100004 | SELECTOR SWITCH, VY-40 | 1 | |
| 21A | 47130106 | KNOB, SELECTOR SWITCH | 1 | |
| 22 | M1213600114 | SWITCH BRACKET | 1 | |
| 23 | 0330000160 | EDGING | 2 | |
| 24 | 0027103010 | MACHINE SCREW | 4 | |
| 25 | 0016906016 | HEX, HEAD BOLT | 4 | |
| 26 | M1213600014 | SWITCH COVER | 1 | |
| 27 | 0016906016 | HEX, HEAD BOLT | 3 | |
| 28 | 0016906016 | HEX, HEAD BOLT | 8 | |
| 28A | 0040506000 | TOOTHED WASHER | 1 | |
| 29 | M1223000403 | CONTROL PANEL | 1 | |
| 30 | 0601807641 | FREQUENCY METER, FCF-6 45~65Hz 240V | 1 | |

DCA-25SSIU2 (60 HZ)— CONTROL BOX ASSY.

CONTROL BOX ASSY.(CONT.)

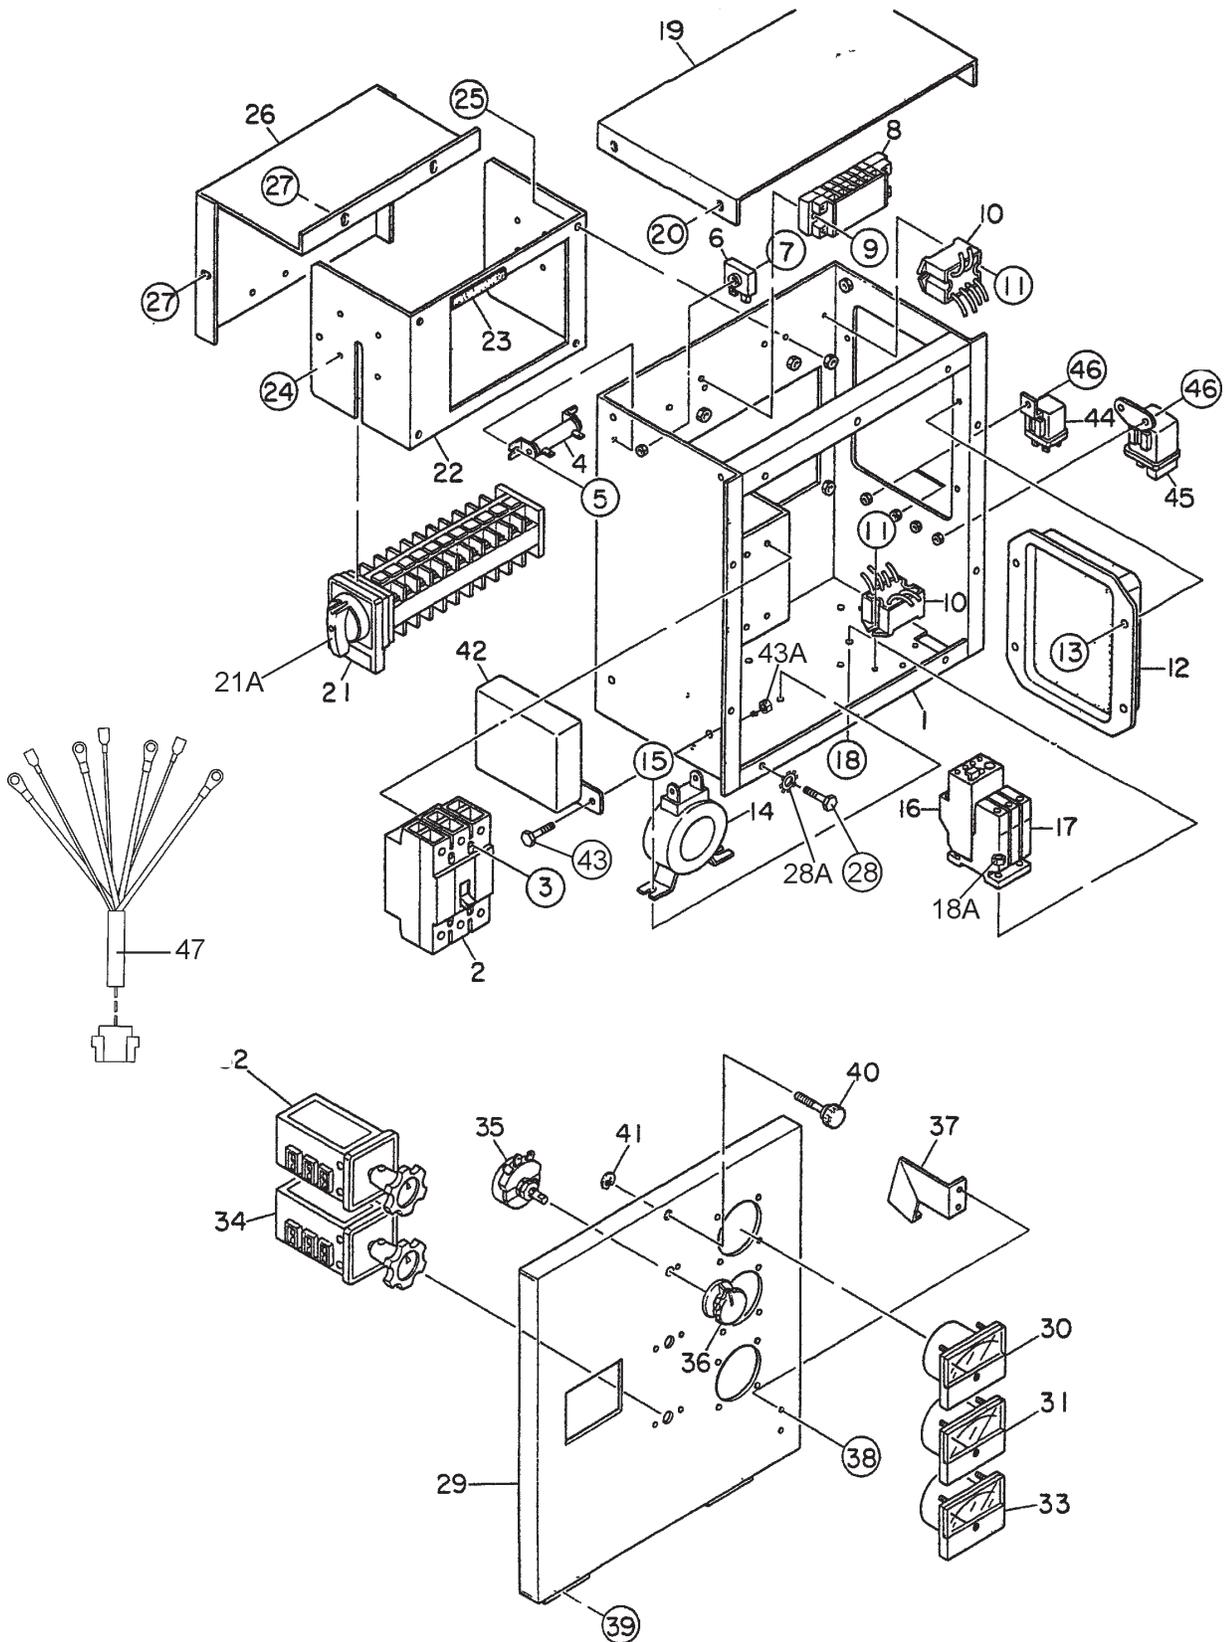


DCA-25SSIU2 (60 HZ)— CONTROL BOX ASSY.

CONTROL BOX ASSY.(CONT.)

| <u>NO.</u> | <u>PART NO.</u> | <u>PART NAME</u> | <u>QTY.</u> | <u>REMARKS</u> |
|------------|-----------------|--|-------------|----------------|
| 31 | 0601808985 | AC AMMETER, ACF-6 0~50A/100A:5A | 1 | |
| 32 | 0601801040 | CHANGE-OVER SWITCH, AMMETER, SL-2 AS | 1 | |
| 33 | 0601806859 | AC VOLTMETER, SCF-6, 0~600V | 1 | |
| 34 | 0601801041 | CHANGE-OVER SWITCH, VOLTMETER, SL-2 VS | 1 | |
| 35 | 0601840073 | RHEOSTAT (VOLT. REGULAT.) RA20A2SE102BJ 2W 1K Ω | 1 | |
| 36 | 0601840121 | KNOB, 25N | 1 | |
| 37 | M1223100004 | STOPPER | 1 | |
| 38 | 0027105010 | MACHINE SCREW | 2 | |
| 39 | 0027105010 | MACHINE SCREW | 4 | |
| 40 | M9220100004 | SET SCREW | 1 | |
| 41 | 0080200007 | SNAP RING | 1 | |
| 42 | 8973259120 | ENGINE CONTROLLER | 1 | |
| 43 | 0016906016 | HEX, HEAD BOLT | 2 | |
| 43A | 0207006000 | HEX, NUT | 2 | |
| 44 | 8944299470 | RELAY | 2 | |
| 45 | 8944001061 | GLOW RELAY | 1 | |
| 46 | 0027105016 | MACHINE SCREW | 4 | |
| 47 | M1246702304 | WIRE HARNESS, GENERATOR | 1 | |

DCA-25SSIU2 (60 HZ)— ENGINE OPERATING PANEL ASSY.

ENGINE OPERATING PANNEL ASSY.

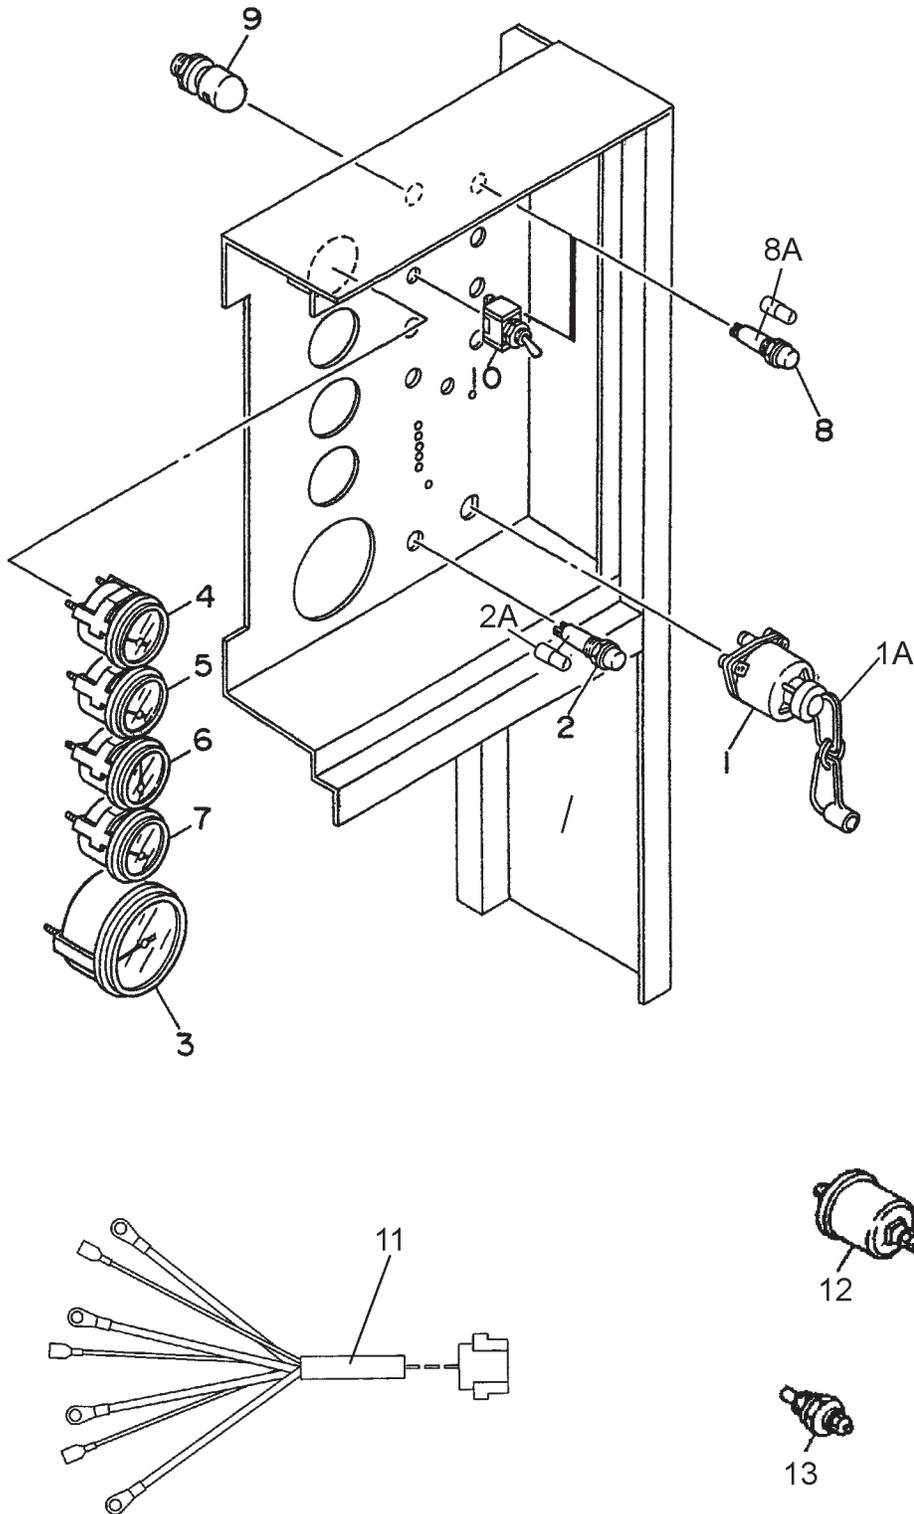


DCA-25SSIU2 (60 HZ)— ENGINE OPERATING PANEL ASSY.

ENGINE OPERATING PANEL ASSY.

| <u>NO.</u> | <u>PART NO.</u> | <u>PART NAME</u> | <u>QTY.</u> | <u>REMARKS</u> |
|------------|-----------------|-------------------------|-------------|-------------------|
| 1 | 8970444180 | IGNITION SWITCH | 1 | INCLUDES ITEM W/* |
| 1A* | 8944024980 | KEYS, IGNITION SWITCH | 1 | |
| 2 | 0602103092 | PREHEAT LAMP | 1 | INCLUDES ITEM W/# |
| 2A# | 0601810245 | BULB, E-10 T-10 DC18V | 1 | |
| 3 | 0602120095 | TACHOMETER, | 1 | |
| 4 | 0602122093 | OIL PRESSURE GAUGE | 1 | |
| 5 | 0602123090 | WATER TEMPERATURE GAUGE | 1 | |
| 6 | 0602121080 | CHARGING AMMETER | 1 | |
| 7 | 0602125090 | FUEL GAUGE | 1 | |
| 8 | 0602103092 | ALARM LAMP | 3 | INCLUDES ITEM W/+ |
| 8A+ | 0601810245 | BULB, E-10 T-10 DC18V | 3 | |
| 9 | 0601810141 | PANEL LIGHT | 1 | |
| 10 | 0601831330 | SWITCH, PANEL LIGHT | 1 | |
| 11 | M1357201212 | WIRE HARNESS, ENGINE | 1 | |
| 12 | 983101570 | UNIT, OIL PRESSURE | 1 | |
| 13 | 894032410 | SENDER, OVERHEAT SWITCH | 1 | |

DCA-25SSIU2 (60 HZ)— ENGINE & RADIATOR ASSY.

ENGINE & RADIATOR ASSY.

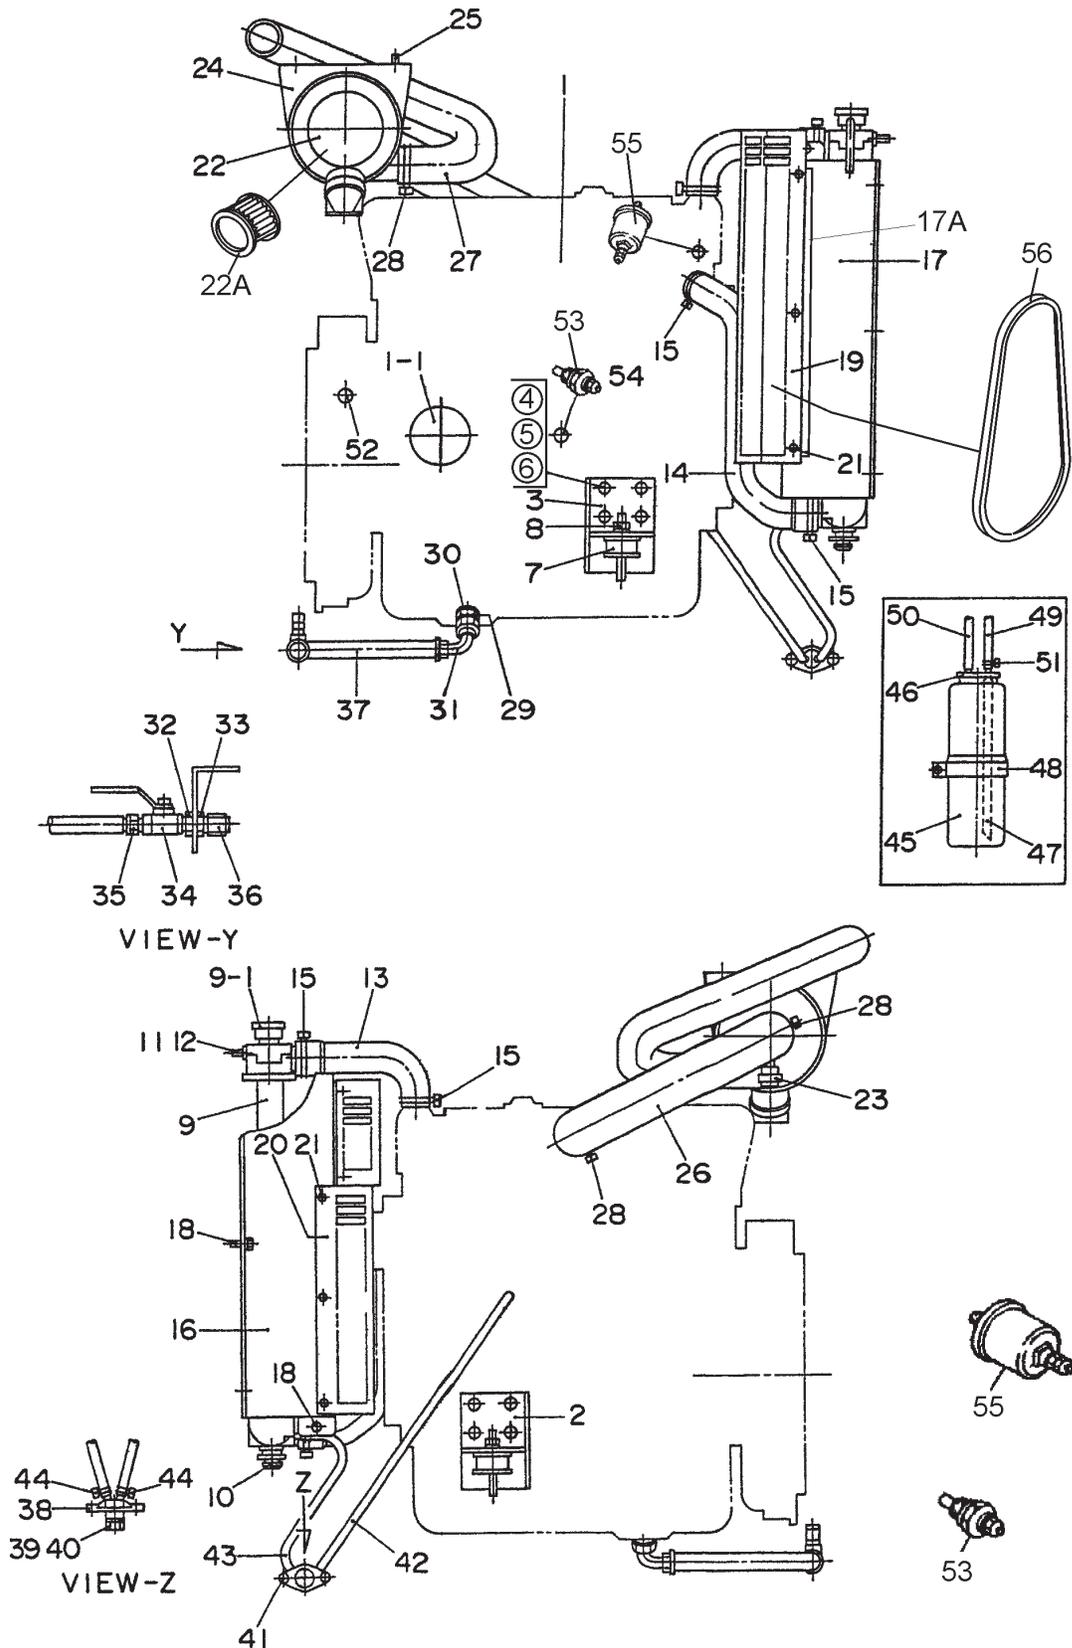


DCA-25SSIU2 (60 HZ)— ENGINE & RADIATOR ASSY.

ENGINE & RADIATOR ASSY.

| <u>NO.</u> | <u>PART NO.</u> | <u>PART NAME</u> | <u>QTY.</u> | <u>REMARKS</u> |
|------------|-----------------|--|-------------|----------------|
| 1 | M1923200044 | ENGINE, ISUZU AA-4LE2 DA-05 | 1 | |
| 1-1 | 0602041210 | CARTRIDGE, OIL FILTER, ISUZU 894456-7411 | 1 | |
| 2 | M1305200304 | ENGINE FOOT | 1 | |
| 3 | M1305200204 | ENGINE FOOT | 1 | |
| 4 | 0010310025 | HEX, HEAD BOLT | 8 | |
| 5 | 0040010000 | SPRING WASHER | 8 | |
| 6 | 0041210000 | PLAIN WASHER | 8 | |
| 7 | 0605000066 | RUBBER SUSPENSION, KA-50 | 2 | |
| 8 | 0207010000 | HEX, NUT | 2 | |
| 9 | 0602012776 | RADIATOR, 2951-292-0000 | 1 | |
| 9-1 | 0602011079 | CAP, RADIATOR, 6713-092-0901 | 1 | |
| 10 | M9312200104 | MOUNT RUBBER | 2 | |
| 11 | 0016908040 | HEX, HEAD BOLT | 2 | |
| 12 | 0207008000 | HEX, NUT | 2 | |
| 13 | M1310500803 | RADIATOR HOSE | 1 | |
| 14 | M1310500903 | RADIATOR HOSE | 1 | |
| 15 | 0605515149 | HOSE BAND | 4 | |
| 16 | M1310200003 | FAN SHROUD | 1 | |
| 17 | M1310200103 | FAN SHROUD | 1 | |
| 17A | M1493105004 | ACOUSTIC SHEET | 1 | |
| 18 | 0016908020 | HEX, HEAD BOLT | 8 | |
| 19 | M1310300703 | FAN GUARD | 1 | |
| 20 | M1310300803 | FAN GUARD | 1 | |
| 21 | 0016908020 | HEX, HEAD BOLT | 8 | |
| 22 | 0602046580 | AIR CLEANER, FPG05-7513 | 1 | |
| 22A | 0602046321 | ELEMENT, AIR CLEANER, P82-1575 | 1 | |
| 23 | 0602040651 | INDICATOR, AIR CLEANER, X00-2352 | 1 | |
| 24 | 0602040552 | BRACKET, AIR CLEANER, P77-7730 | 1 | |
| 25 | 0016908030 | HEX, HEAD BOLT | 2 | |
| 26 | M1373100303 | HOSE, AIR CLEANER | 1 | |
| 27 | M1373100503 | HOSE, AIR CLEANER | 1 | |
| 28 | 0605515147 | HOSE BAND | 3 | |
| 29 | 0602022560 | ADAPTER, 10-M20X1.5 F80X-S | 1 | |
| 30 | M1320300304 | PACKING | 1 | |
| 31 | 0602011430 | FAN BELT, ISUZU 897224-9990 | 1 | |

DCA-25SSIU2 (60 HZ)— ENGINE & RADIATOR ASSY. (CONT.)

ENGINE & RADIATOR ASSY.(CONT.)

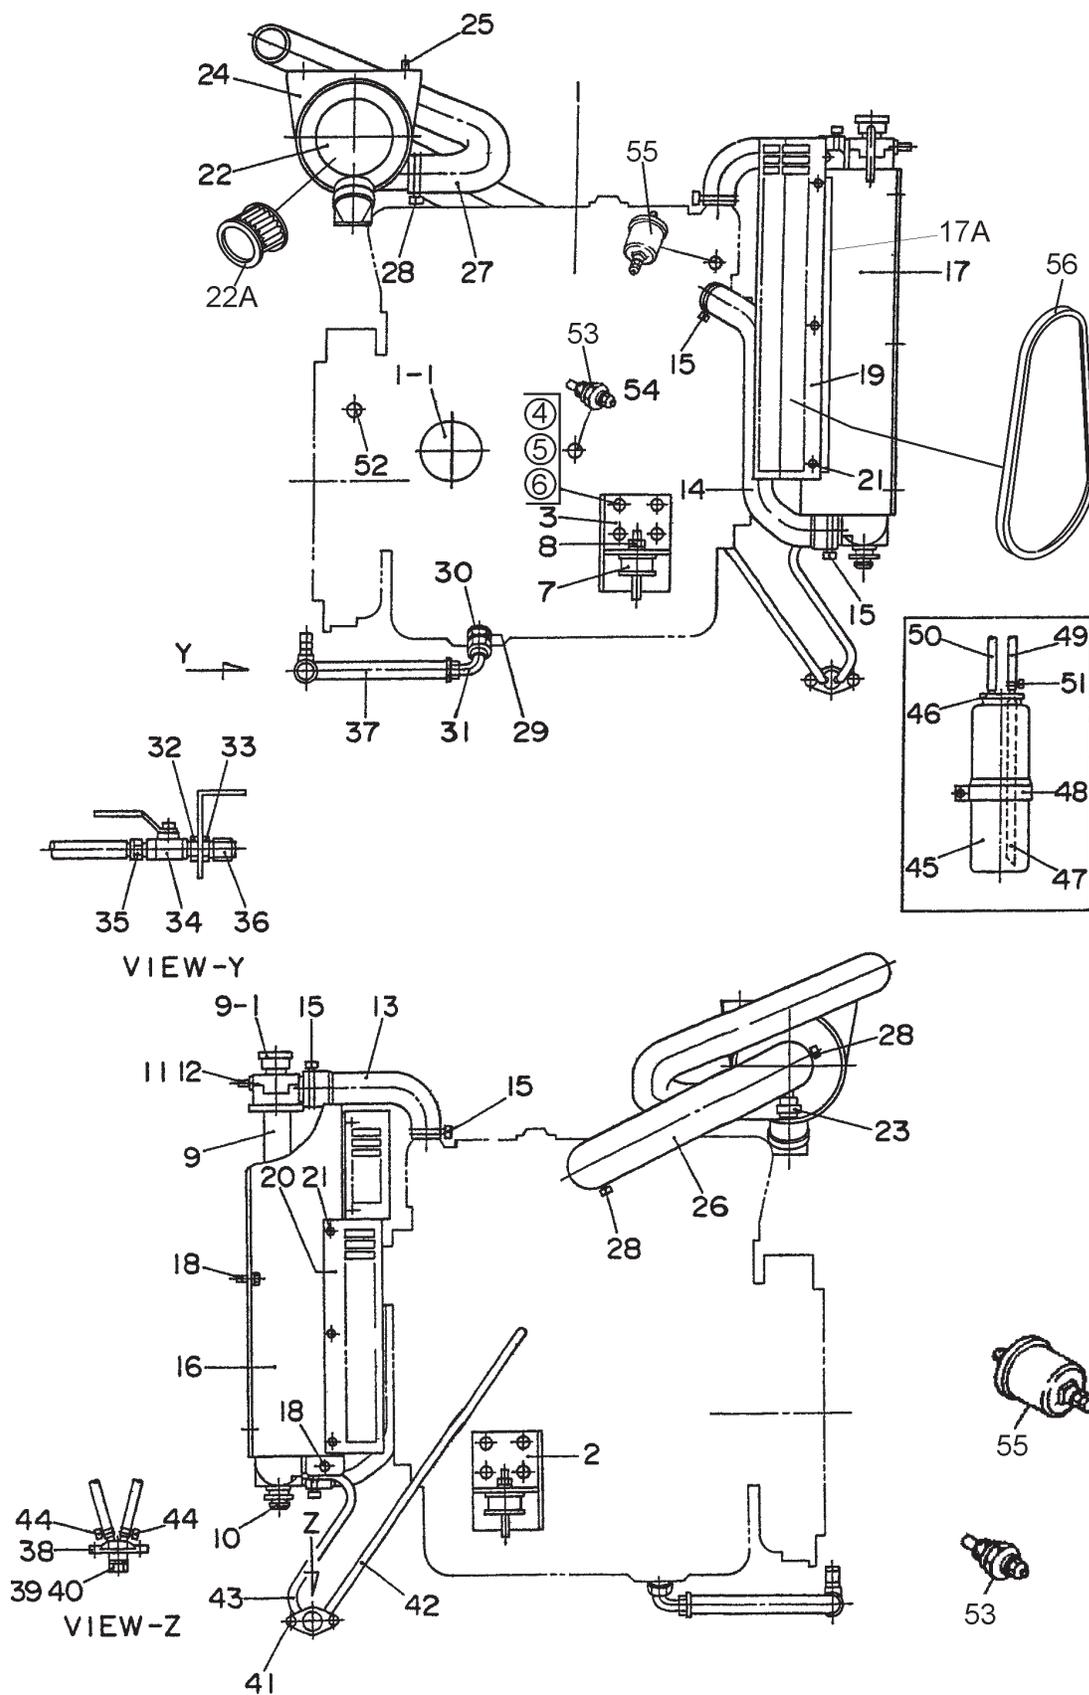


DCA-25SSIU2 (60 HZ)— ENGINE & RADIATOR ASSY. (CONT.)

ENGINE & RADIATOR ASSY.(CONT.)

| <u>NO.</u> | <u>PART NO.</u> | <u>PART NAME</u> | <u>QTY.</u> | <u>REMARKS</u> |
|------------|-----------------|-------------------------------|-------------|----------------|
| 31 | 0602022561 | 90 DEGREE ELBOW, 33982-10-10+ | 1 | |
| 32 | 0603306590 | CONNECTOR, 10WFTX-S | 1 | |
| 33 | 0603300285 | LOCKNUT, 10WLN | 1 | |
| 34 | 0605511395 | VALVE, XV500P-8 | 1 | |
| 35 | 0603306395 | HOSE JOINT, 30182-8-10 | 1 | |
| 36 | 0602021070 | CAP, 10FNTX-S | 1 | |
| 37 | 0269200280 | DRAIN HOSE, 836-10 | 1 | |
| 38 | M9602000003 | DRAIN JOINT | 1 | |
| 39 | M9200200004 | PLUG | 1 | |
| 40 | 0150000018 | O RING, A P18 | 1 | |
| 41 | 0016906020 | HEX, HEAD BOLT | 2 | |
| 42 | 0199900600 | DRAIN HOSE | 1 | |
| 43 | 0199900500 | DRAIN HOSE | 1 | |
| 44 | 0605515106 | HOSE BAND, RS-8006 | 4 | |
| 45 | M9300000003 | RESERVE TANK | 1 | |
| 46 | M9300100003 | CAP, RESERVE TANK | 1 | |
| 47 | 0199100215 | HOSE | 1 | |
| 48 | M1317100004 | BRACKET, RESERVE TANK | 1 | |
| 49 | 0199100350 | HOSE | 1 | |
| 50 | 0193600850 | HOSE | 1 | |
| 51 | 0605515106 | HOSE BAND, RS-8006 | 2 | |
| 52 | 0602120481 | PICK UP, TACHOMETER, 71255-00 | 1 | |
| 53 | 9827200690 | SENDER, OIL SWITCH | 1 | |
| 54 | M9200100004 | ADAPTER | 1 | |
| 55 | 8970785920 | UNIT, WATER TEMPERATURE | 1 | |

DCA-25SSIU2 (60 HZ)— OUTPUT TERMINAL ASSY.

OUTPUT TERMINAL ASSY.

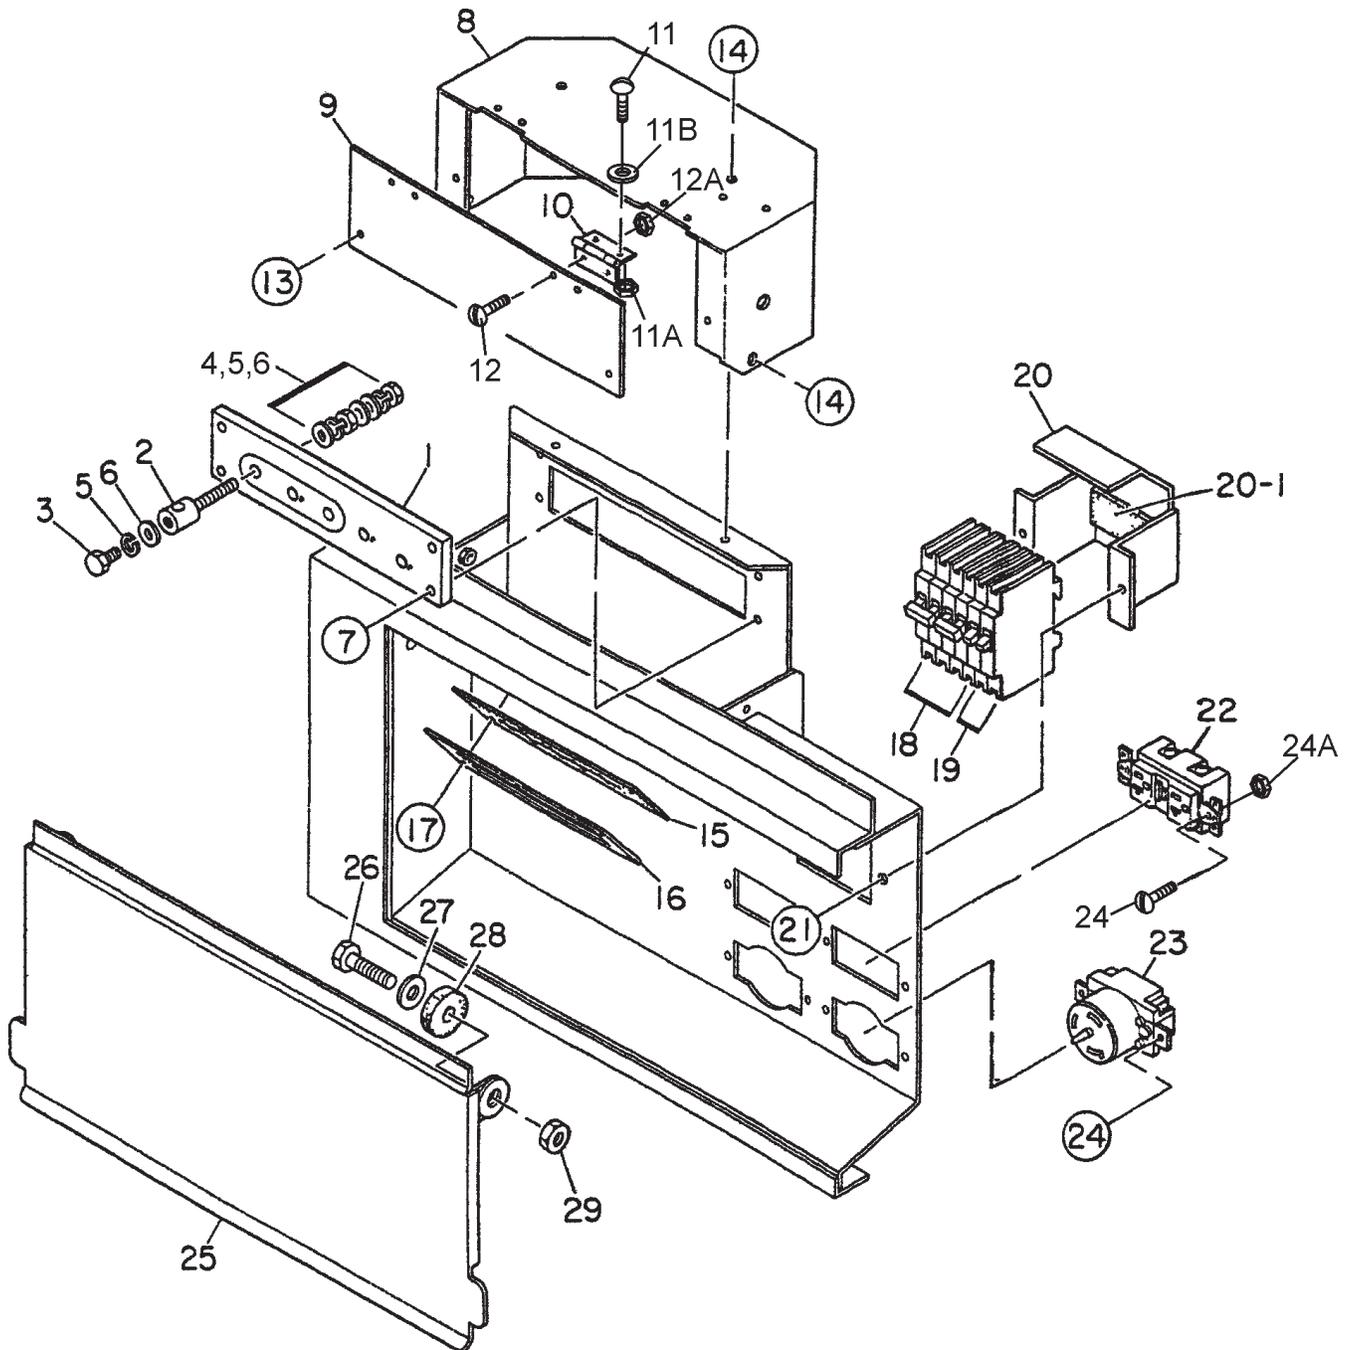

ADD THE FOLLOWING DIGITS AFTER THE PART NUMBER WHEN ORDERING ANY PAINTED PANEL TO INDICATE COLOR OF UNIT:

- | | |
|-----------------|----------------------|
| 1-ORANGE | 5-BLACK |
| 2-WHITE | 6-CATERPILLAR YELLOW |
| 3-SPECTRUM GREY | 7-CATO GOLD |
| 4-SUNBELT GREEN | 8-RED |

THE SERIAL NUMBER MAY BE REQUIRED.


DCA-25SSIU2 (60 HZ)— OUTPUT TERMINAL ASSY.

OUTPUT TERMINAL ASSY.

| <u>NO.</u> | <u>PART NO.</u> | <u>PART NAME</u> | <u>QTY.</u> | <u>REMARKS</u> |
|------------|-----------------|----------------------------------|-------------|----------------|
| 1 | M1230700003 | TERMINAL PANEL | 1 | |
| 2 | M9220000004 | OUTPUT TERMINAL BOLT | 5 | |
| 3 | M9220000104 | TIE BOLT | 5 | |
| 4 | 0039308000 | HEX, NUT | 10 | |
| 5 | 0040008000 | SPRING WASHER | 15 | |
| 6 | 0041408000 | PLAIN WASHER | 20 | |
| 7 | 0016906020 | HEX, HEAD BOLT | 4 | |
| 8 | M1236100313 | TERMINAL COVER | 1 | |
| 9 | M1236100404 | OUTPUT WINDOW | 1 | |
| 10 | 0605010040 | HINGE, TH-TM122 | 2 | |
| 11 | 0027103010 | MACHINE SCREW | 4 | |
| 11A | 0030003000 | HEX, NUT | 4 | |
| 11B | 0041203000 | PLAIN WASHER | 4 | |
| 12 | 0027103010 | MACHINE SCREW | 4 | |
| 12B | 0030003000 | HEX, NUT | 4 | |
| 13 | 0016906020 | HEX, HEAD BOLT | 2 | |
| 14 | 0016906016 | HEX, HEAD BOLT | 4 | |
| 15 | M1236400004 | CABLE OUTLET COVER | 1 | |
| 16 | M1236300004 | SUPPORTER, CABLE OUTLET COVER | 1 | |
| 17 | 0016906020 | HEX, HEAD BOLT | 6 | |
| 18 | 0601870441 | CIRCUIT BREAKER, QCF 2050 2P 50A | 2 | |
| 19 | 0601870440 | CIRCUIT BREAKER, QCF 1020 1P 20A | 2 | |
| 20 | M1260700404 | BREAKER FITTING COVER | 1 | |
| 20-1 | 0222100080 | CUSHION RUBBER | 1 | |
| 21 | 0016906020 | HEX, HEAD BOLT | 2 | |
| 22 | 0601812598 | RECEPTACLE, GF-53 OEM 125V 20AX2 | 2 | |
| 23 | 0601812538 | RECEPTACLE CS6369 250V 50A | 2 | |
| 24 | 0027104016 | MACHINE SCREW | 8 | |
| 24A | 0207004000 | HEX, NUT | 4 | |
| 25 | M1236100503 | TERMINAL COVER | 1 | |
| 26 | 0010112045 | HEX, HEAD BOLT | 2 | |
| 27 | 0041212000 | PLAIN WASHER | 2 | |
| 28 | M9310200004 | STAY RUBBER | 2 | |
| 29 | 0030012000 | HEX, NUT | 2 | |

DCA-25SSIU2 (60 HZ)— BATTERY ASSY.

BATTERY ASSY.

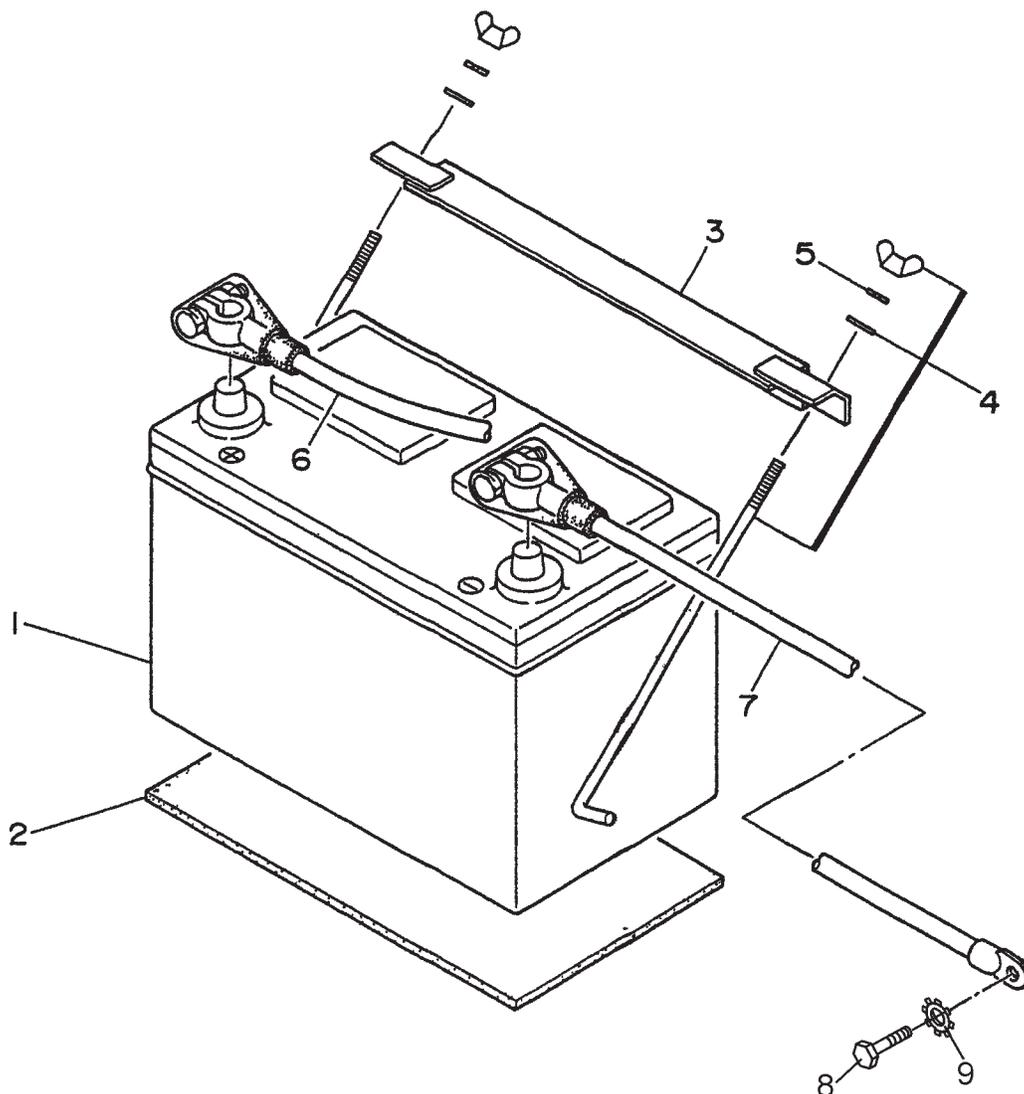


DCA-25SSIU2 (60 HZ)— BATTERY ASSY.

BATTERY ASSY.

| <u>NO.</u> | <u>PART NO.</u> | <u>PART NAME</u> | <u>QTY.</u> | <u>REMARKS</u> |
|------------|-----------------|------------------|-------------|----------------|
| 1 | 0602220185 | BATTERY | 1 | |
| 2 | M9310500014 | BATTERY SHEET | 1 | |
| 3 | M9103000304 | BATTERY BAND | 1 | |
| 4 | 0602220920 | BATTERY BOLT SET | 2 | |
| 5 | 0040006000 | SPRING WASHER | 2 | |
| 6 | M1348400204 | BATTERY CABLE | 1 | |
| 7 | M2346400104 | BATTERY CABLE | 1 | |
| 8 | 0016910020 | HEX HEAD BOLT | 1 | |
| 9 | 0040510000 | TOOTHED WASHER | 1 | |

DCA-25SSIU2 (60 HZ)— MUFFLER ASSY.

MUFFLER ASSY.

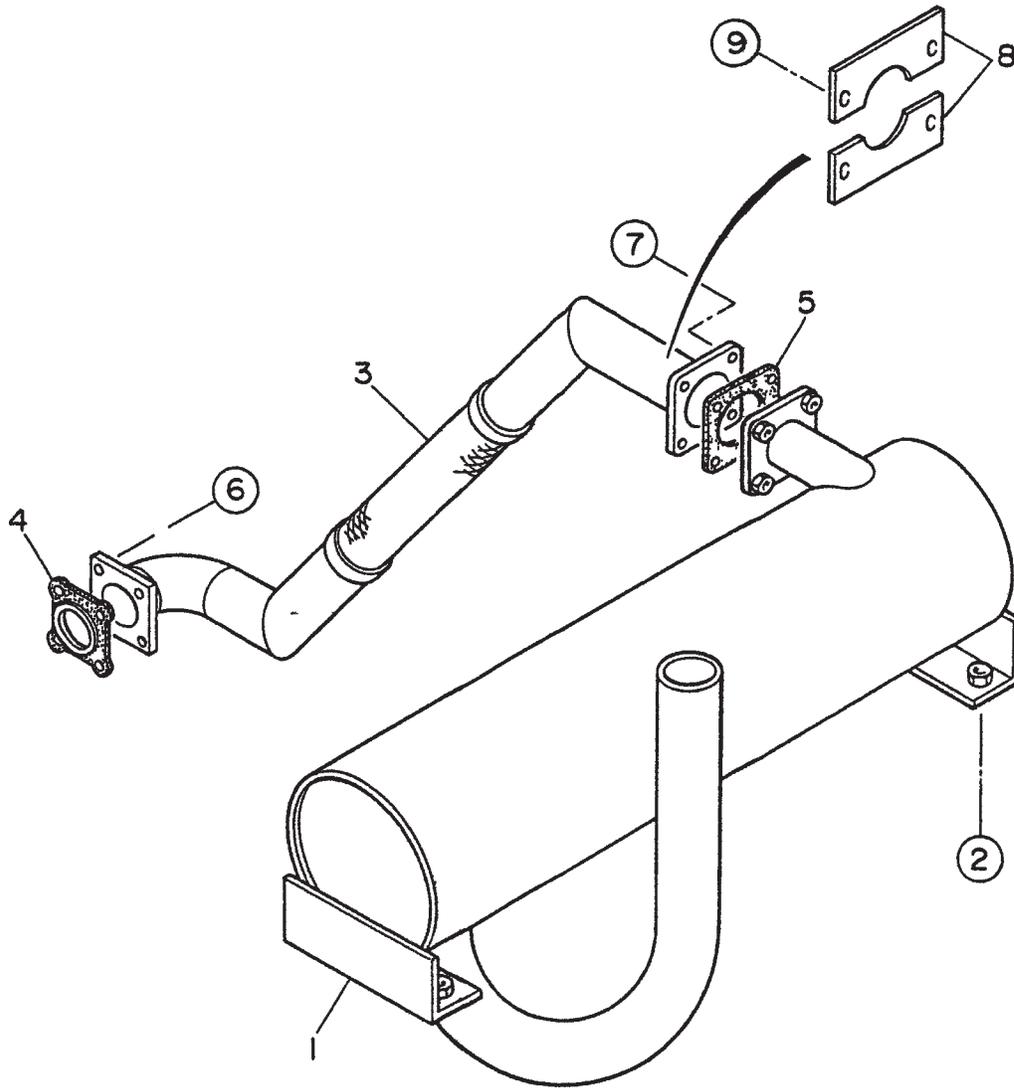


DCA-25SSIU2 (60 HZ)— MUFFLER ASSY.

MUFFLER ASSY.

| <u>NO.</u> | <u>PART NO.</u> | <u>PART NAME</u> | <u>QTY.</u> | <u>REMARKS</u> |
|------------|-----------------|------------------|-------------|-------------------------|
| 1 | 0602300390 | MUFFLER | 1 | |
| 2 | 0016908020 | HEX HEAD BOLT | 4 | |
| 3 | M1333201703 | EXHAUST PIPE | 1 | |
| 4 | 8970420280 | GASKET | 1 | REPLACES P/N 0602320100 |
| 5 | M1333200014 | GASKET | 1 | |
| 6 | 0207008000 | HEX NUT | 4 | |
| 7 | 0016908035 | HEX HEAD BOLT | 4 | |
| 8 | M1330400204 | COVER | 2 | |
| 9 | 0016906016 | HEX HEAD BOLT | 4 | |

DCA-25SSIU2 (60 HZ)— FUEL TANK ASSY.

FUEL TANK ASSY.

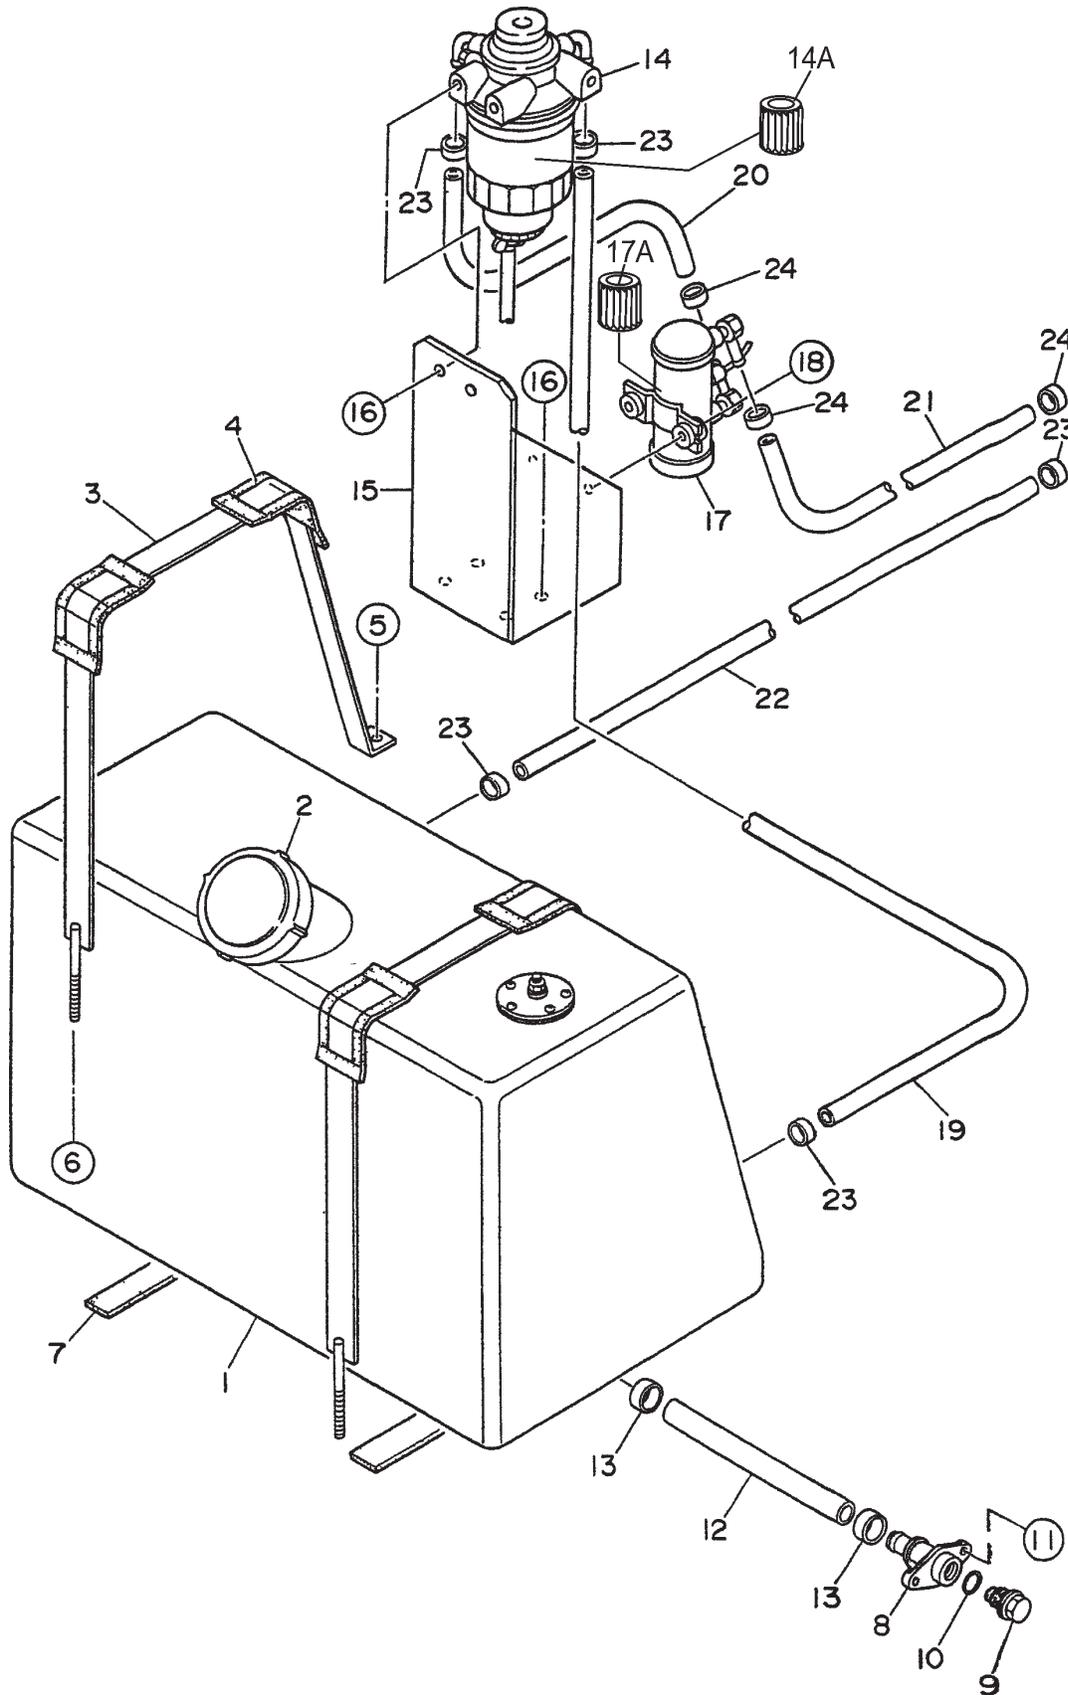


DCA-25SSIU2 (60 HZ)— FUEL TANK ASSY.

FUEL TANK ASSY.

| <u>NO.</u> | <u>PART NO.</u> | <u>PART NAME</u> | <u>QTY.</u> | <u>REMARKS</u> |
|------------|-----------------|------------------------------|-------------|-------------------------|
| 1 | M1363000212 | FUEL TANK | 1 | |
| 2 | 0605505070 | CAP, FUEL TANK | 1 | |
| 3 | M1363200004 | TANK BAND | 2 | |
| 4 | M9310500104 | SUPPORTER SHEET | 4 | |
| 5 | 0016908020 | HEX HEAD BOLT | 2 | |
| 6 | 0207308000 | HEX NUT | 2 | |
| 7 | 0222100080 | RUBBER SHEET | 4 | |
| 8 | M9200000003 | DRAIN JOINT | 1 | |
| 9 | M9200200004 | DRAIN BOLT | 1 | |
| 10 | 0150000018 | O RING | 1 | |
| 11 | 0016906020 | HEX HEAD BOLT | 2 | |
| 12 | M1363400104 | DRAIN HOSE | 1 | |
| 13 | 0605515198 | HOSE BAND | 2 | |
| 14 | 8943672922 | FILTER, FUEL | 1 | INCLUDES ITEM W/* |
| | | | | REPLACES P/N 0602042202 |
| 14A* | 8943692993 | CARTRIDGE, FUEL FILTER | 1 | REPLACES P/N 0602042700 |
| 15 | M1366700104 | BRACKET, FUEL FILTER | 1 | |
| 16 | 0016908020 | HEX HEAD BOLT | 6 | |
| 17 | 8970398340 | FUEL PUMP | 1 | REPLACES P/N 0602023177 |
| 17A | 8944370220 | FILTER, FUEL PUMP | | |
| 18 | 0016906025 | HEX HEAD BOLT | 2 | |
| 19 | 0191200900 | SUCTION HOSE | 1 | |
| 20 | 0191200300 | SUCTION HOSE | 1 | |
| 21 | 0191200650 | SUCTION HOSE | 1 | |
| 22 | 0191201100 | RETURN HOSE | 1 | |
| 23 | 0605515108 | HOSE BAND | 5 | |
| 24 | 0605515198 | HOSE BAND | 3 | |

DCA-25SSIU2 (60 HZ)— ENCLOSURE ASSY.

ENCLOSURE ASSY.

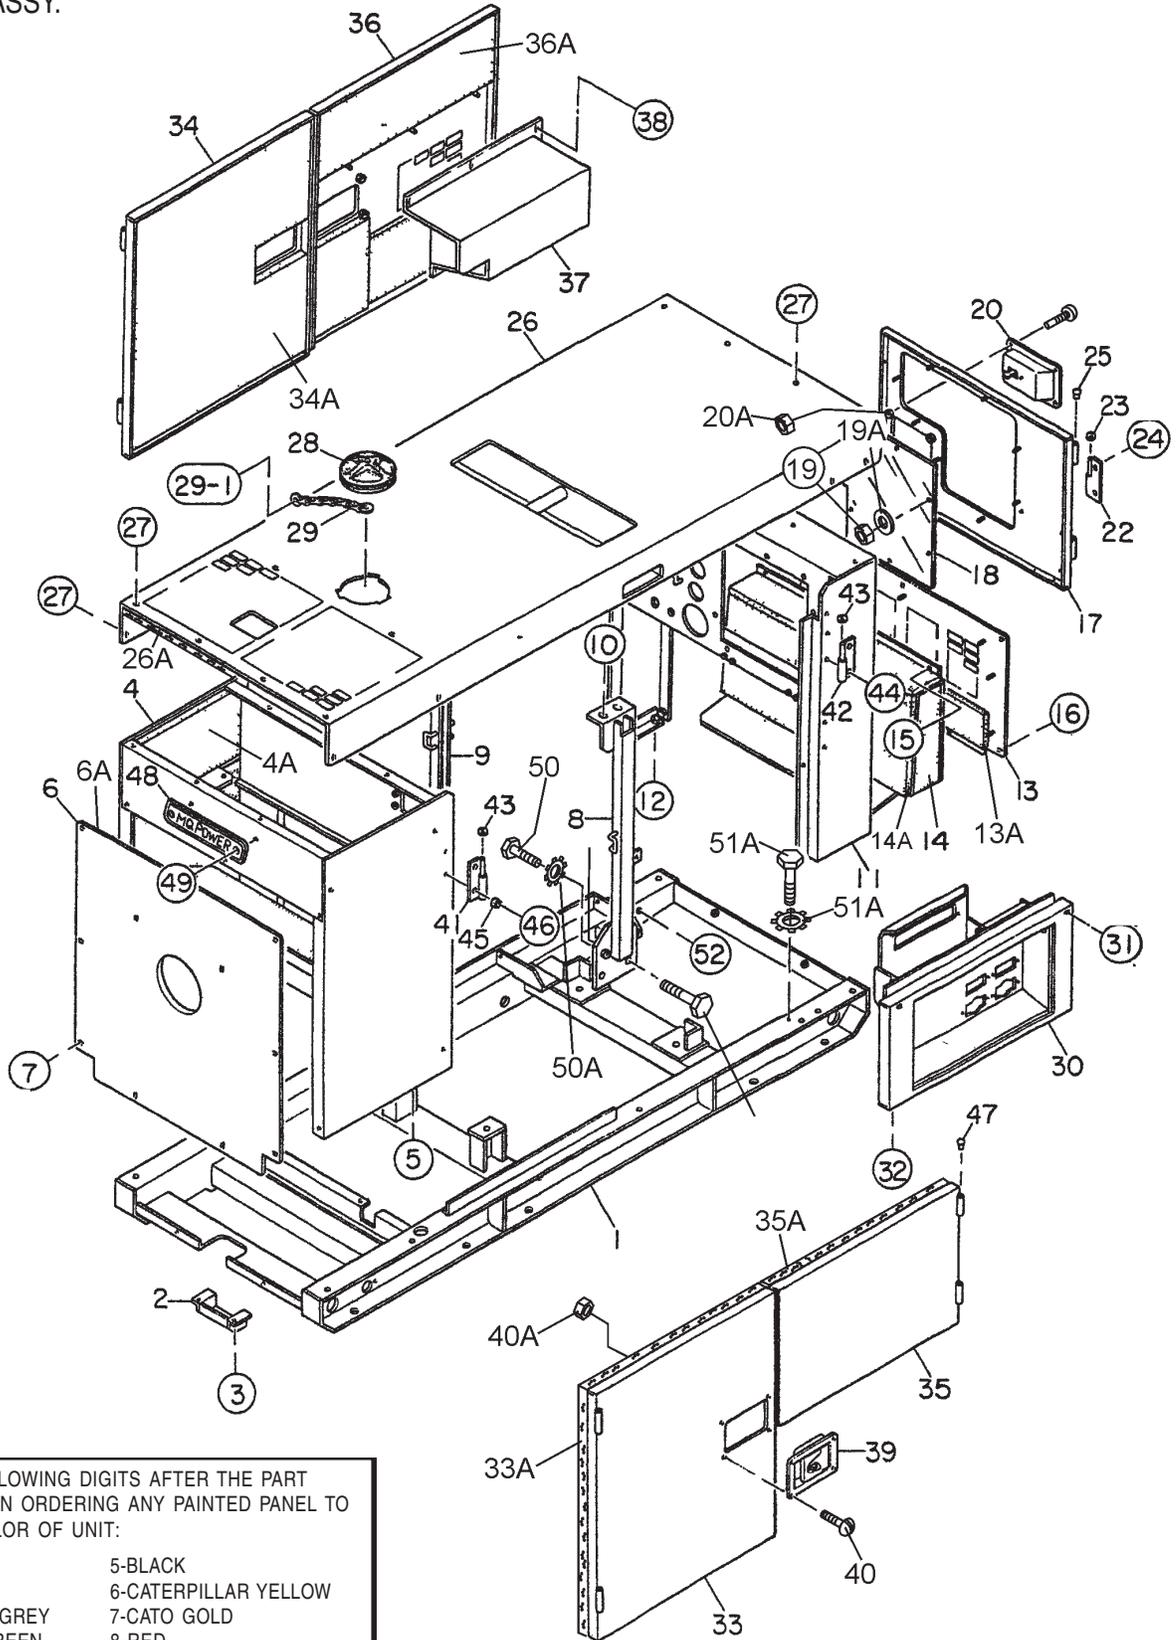

ADD THE FOLLOWING DIGITS AFTER THE PART NUMBER WHEN ORDERING ANY PAINTED PANEL TO INDICATE COLOR OF UNIT:

- | | |
|-----------------|----------------------|
| 1-ORANGE | 5-BLACK |
| 2-WHITE | 6-CATERPILLAR YELLOW |
| 3-SPECTRUM GREY | 7-CATO GOLD |
| 4-SUNBELT GREEN | 8-RED |

THE SERIAL NUMBER MAY BE REQUIRED.


DCA-25SSIU2 (60 HZ)— ENCLOSURE ASSY.

ENCLOSURE ASSY.

| <u>NO.</u> | <u>PART NO.</u> | <u>PART NAME</u> | <u>QTY.</u> | <u>REMARKS</u> |
|------------|-----------------|--------------------|-------------|----------------|
| 1 | M1413002802 | BASE | 1 | |
| 2 | M1413400004 | UNDER COVER | 1 | |
| 3 | 0016908020 | HEX HEAD BOLT | 2 | |
| 4 | M1423001802 | FRONT FRAME | 1 | |
| 4A | M1493104903 | ACOUSTIC SHEET | 1 | |
| 5 | 0016908020 | HEX HEAD BOLT | 4 | |
| 6 | M1423200304 | COVER, FRONT FRAME | 1 | |
| 6A | M1493100604 | ACOUSTIC SHEET | 1 | |
| 7 | 0016908020 | HEX HEAD BOLT | 11 | |
| 8 | M1433000203 | CENTER FRAME | 1 | |
| 9 | M1433000303 | CENTER FRAME | 1 | |
| 10 | 0010114030 | HEX HEAD BOLT | 8 | |
| 10A | 0040014000 | SPRING WASHER | 8 | |
| 10B | 0041214000 | PLAIN WASHER | 8 | |
| 11 | M1443001402 | REAR FRAME | 1 | |
| 12 | 0016908020 | HEX HEAD BOLT | 4 | |
| 13 | M1443300513 | REAR COVER | 1 | |
| 13A | M1493300304 | ACOUSTIC SHEET | 1 | |
| 14 | M1443301503 | DUCT, REAR COVER | 1 | |
| 14A | M1493300404 | ACOUSTIC SHEET | 1 | |
| 15 | 0207006000 | HEX NUT | 7 | |
| 16 | 0016908020 | HEX HEAD BOLT | 7 | |
| 17 | M1443200613 | REAR DOOR | 1 | |
| 18 | M1443600114 | WINDOW PLATE | 1 | |
| 19 | 0037906000 | HEX NUT | 8 | |
| 19A | 0041206000 | PLAIN WASHER | 8 | |
| 20 | M9113000002 | DOOR HANDLE ASSY | 1 | |
| 21 | 0021806016 | MACHINE SCREW | 4 | |
| 21A | 0030006000 | HEX NUT | 4 | |
| 22 | M9110100204 | HINGE | 2 | |
| 23 | M9116100004 | WASHER | 2 | |
| 24 | 0016908020 | MACHINE SCREW | 3 | |
| 25 | M9310000004 | BLIND PLUG | 2 | |
| 26 | M1463001702 | ROOF PANEL | 1 | |
| 26A | M1493502903 | ACOUSTIC SHEET | 1 | |
| 27 | 0016908020 | HEX HEAD BOLT | 18 | |
| 28 | M9310000103 | BONNET CAP | 1 | |
| 29 | M1483600204 | CHAIN ASSY | 1 | |
| 29-1 | 0016908020 | HEX HEAD BOLT | 1 | |
| 30 | M1453200702 | SPLASHER PANEL | 1 | |

DCA-25SSIU2 (60 HZ)— ENCLOSURE ASSY. (CONT.)

ENCLOSURE ASSY.(CONT.)

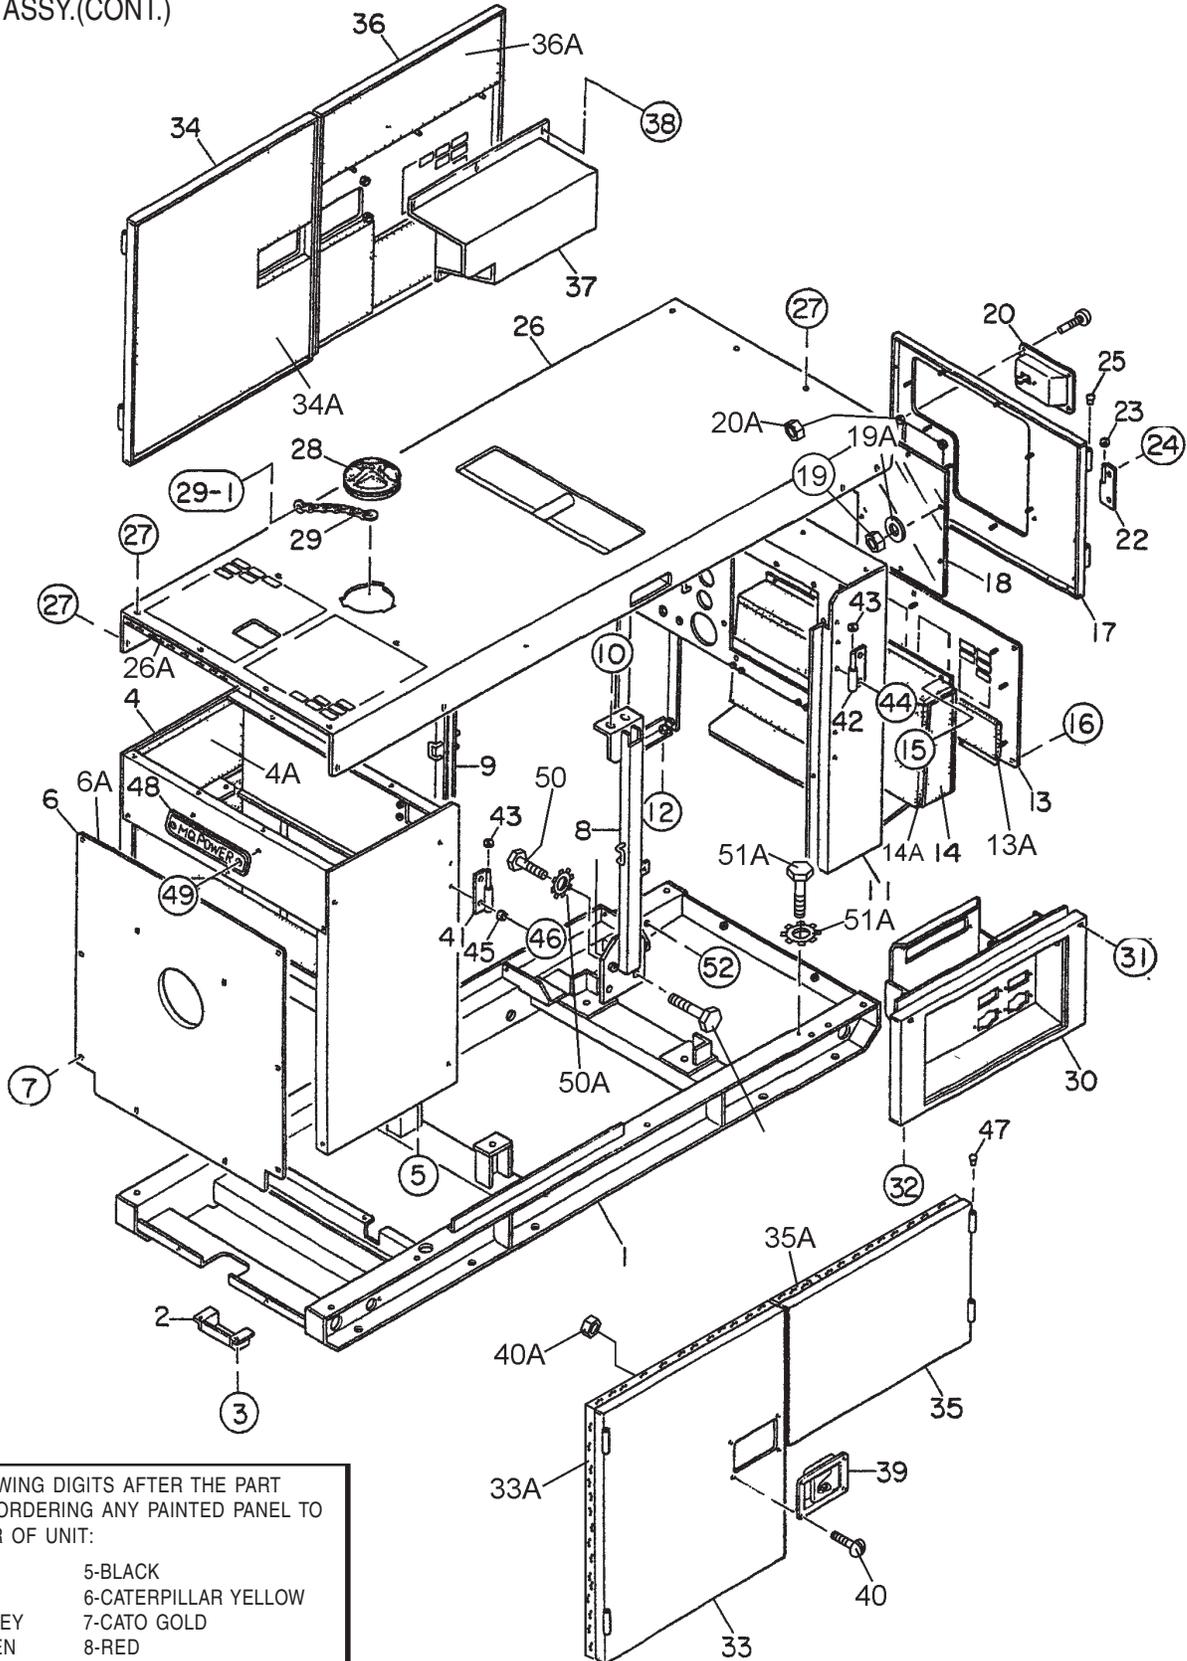

ADD THE FOLLOWING DIGITS AFTER THE PART NUMBER WHEN ORDERING ANY PAINTED PANEL TO INDICATE COLOR OF UNIT:

- | | |
|-----------------|----------------------|
| 1-ORANGE | 5-BLACK |
| 2-WHITE | 6-CATERPILLAR YELLOW |
| 3-SPECTRUM GREY | 7-CATO GOLD |
| 4-SUNBELT GREEN | 8-RED |

THE SERIAL NUMBER MAY BE REQUIRED.




DCA-25SSIU2 (60 HZ)— ENCLOSURE ASSY. (CONT.)

ENCLOSURE #1 ASSY.(CONT.)

| <u>NO.</u> | <u>PART NO.</u> | <u>PART NAME</u> | <u>QTY.</u> | <u>REMARKS</u> |
|------------|-----------------|------------------|-------------|----------------|
| 31 | 0016908055 | HEX HEAD BOLT | 2 | |
| 32 | 0016908020 | HEX HEAD BOLT | 2 | |
| 33 | M1453003803 | SIDE DOOR | 1 | |
| 33A | M1493405604 | ACOUSTIC SHEET | 1 | |
| 34 | M1453003903 | SIDE DOOR | 1 | |
| 34A | M1493405704 | ACOUSTIC SHEET | 1 | |
| 35 | M1453004003 | SIDE DOOR | 1 | |
| 35A | M1493405804 | ACOUSTIC SHEET | 1 | |
| 36 | M1453004103 | SIDE DOOR | 1 | |
| 36A | M1493405904 | ACOUSTIC SHEET | 1 | |
| 37 | M1453301203 | DUCT | 1 | |
| 38 | 0207006000 | HEX NUT | 4 | |
| 39 | M9113000002 | DOOR HANDLE ASSY | 3 | |
| 40 | 0021806016 | MACHINE SCREW | 12 | |
| 40A | 0030006000 | HEX NUT | 12 | |
| 41 | M9110100204 | HINGE | 4 | |
| 42 | M9110100304 | HINGE | 4 | |
| 43 | M9116100004 | WASHER | 8 | |
| 44 | 0021808020 | MACHINE SCREW | 9 | |
| 45 | 0601850097 | DOOR STOPPER | 8 | |
| 46 | 0027208025 | MACHINE SCREW | 8 | |
| 47 | M9310000004 | BLIND PLUG | 8 | |
| 48 | 0600500090 | EMBLEM | 1 | |
| 49 | 0021106016 | MACHINE SCREW | 2 | |
| 50 | 0016910020 | HEX HEAD BOLT | 1 | |
| 50A | 0040510000 | TOOTHED WASHER | 1 | |
| 51 | 0016908020 | HEX HEAD BOLT | 1 | |
| 51A | 0040508000 | TOOTHED WASHER | 1 | |
| 52 | 0016906020 | HEX HEAD BOLT | 1 | |

DCA-25SSIU2 (60 HZ)— RUBBER SEALS ASSY.

ENCLOSURE ASSY.

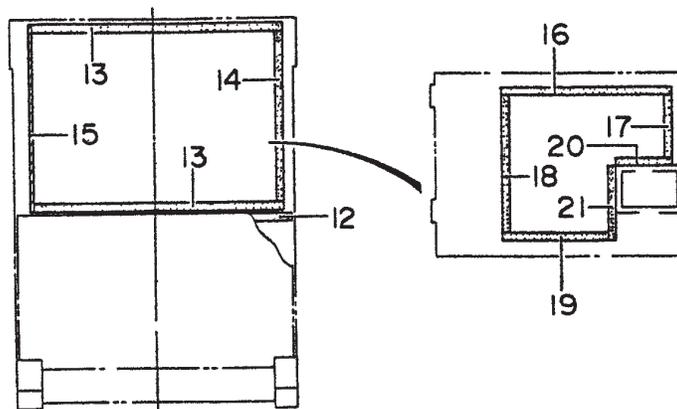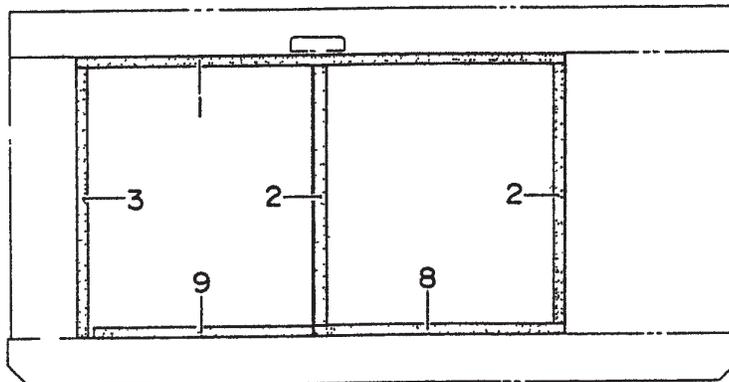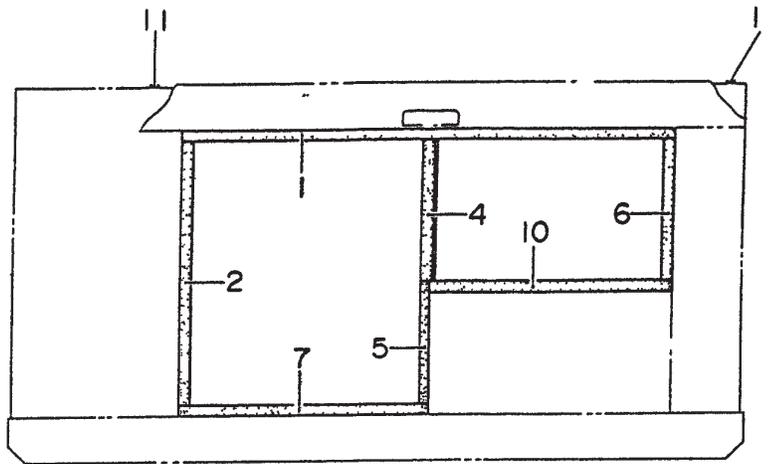


DCA-25SSIU2 (60 HZ)— RUBBER SEALS ASSY.

ENCLOSURE ASSY.

| <u>NO.</u> | <u>PART NO.</u> | <u>PART NAME</u> | <u>QTY.</u> | <u>REMARKS</u> |
|------------|-----------------|------------------|-------------|----------------|
| 1 | 0228901170 | SEAL RUBBER | 2 | |
| 2 | 0228900695 | SEAL RUBBER | 3 | |
| 3 | 0228900725 | SEAL RUBBER | 1 | |
| 4 | M1490300004 | SEAL RUBBER | 1 | |
| 5 | 0228800325 | SEAL RUBBER | 1 | |
| 6 | 0228900370 | SEAL RUBBER | 1 | |
| 7 | 0228900550 | SEAL RUBBER | 1 | |
| 8 | 0228900560 | SEAL RUBBER | 1 | |
| 9 | 0229200595 | SEAL RUBBER | 1 | |
| 10 | 0228900620 | SEAL RUBBER | 1 | |
| 11 | 0229200750 | SEAL RUBBER | 2 | |
| 12 | 0229200740 | SEAL RUBBER | 1 | |
| 13 | 0228800670 | SEAL RUBBER | 2 | |
| 14 | 0228800445 | SEAL RUBBER | 1 | |
| 15 | 0228800485 | SEAL RUBBER | 1 | |
| 16 | 0228100458 | SEAL RUBBER | 1 | |
| 17 | 0228100171 | SEAL RUBBER | 1 | |
| 18 | 0228100351 | SEAL RUBBER | 1 | |
| 19 | 0228100285 | SEAL RUBBER | 1 | |
| 20 | 0228100153 | SEAL RUBBER | 1 | |
| 21 | 0228100180 | SEAL RUBBER | 1 | |

DCA-25SSIU2 (60 HZ)— NAMEPLATE AND DECALS

NAMEPLATE AND DECALS ASSY.

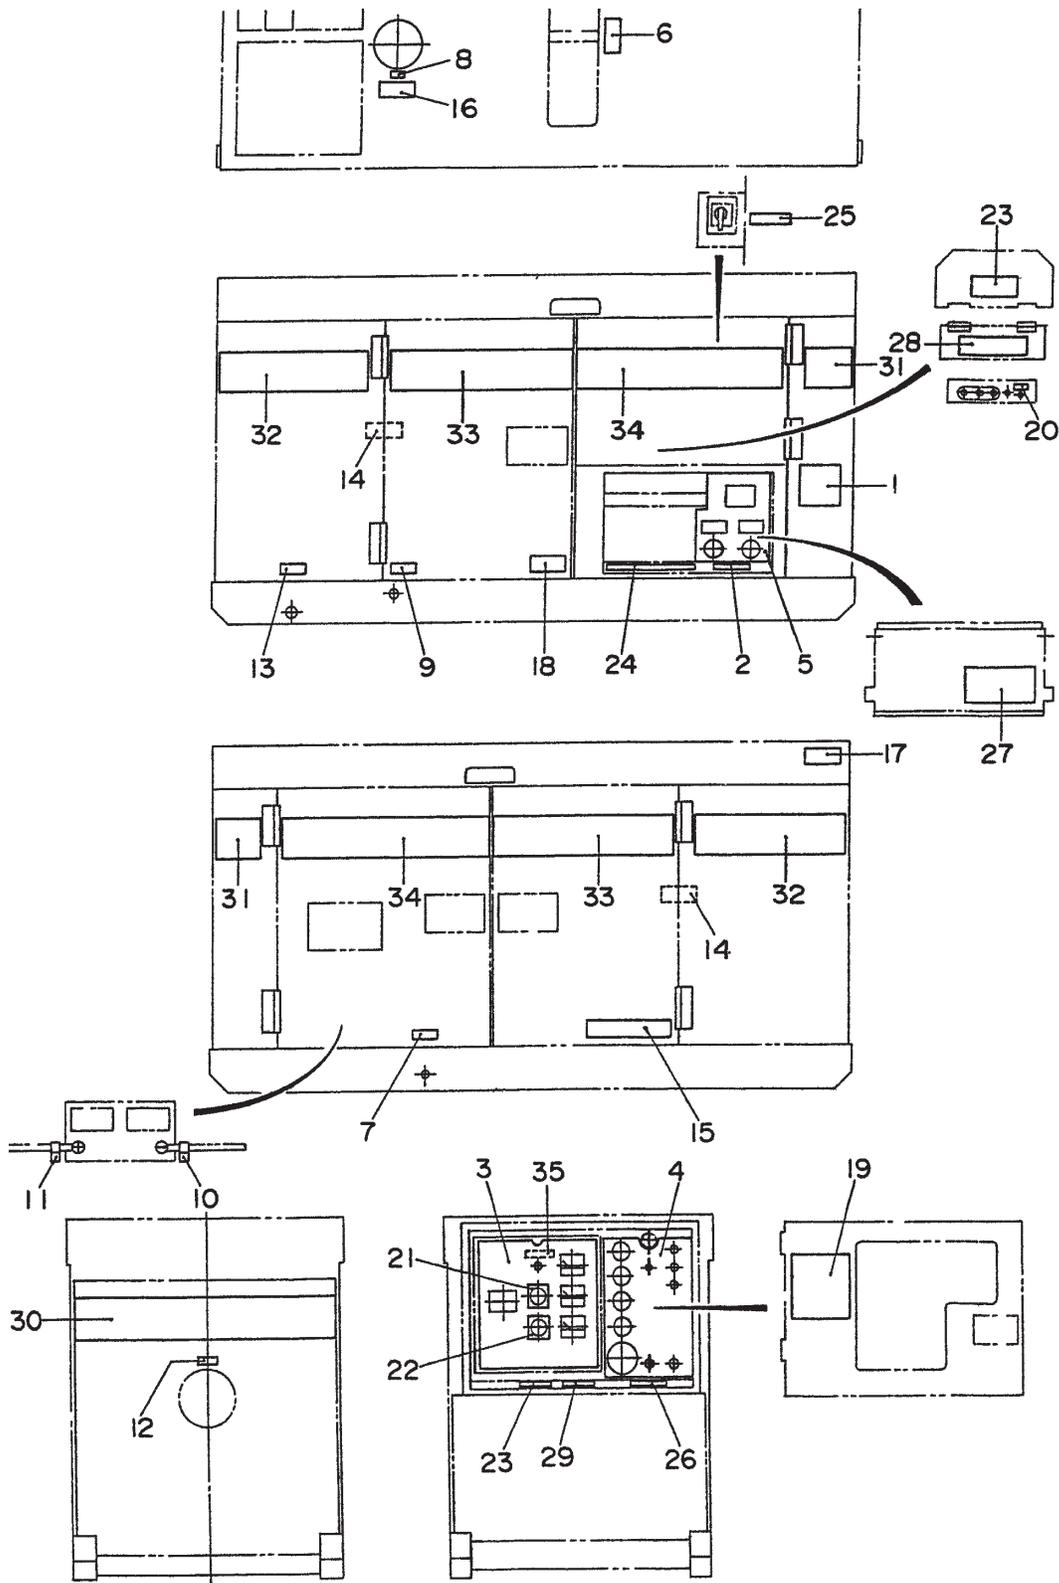

DCA-25SSIU2 (60 HZ)— NAMEPLATE AND DECALS

NAMEPLATE AND DECALS ASSY.

| <u>NO.</u> | <u>PART NO.</u> | <u>PART NAME</u> | <u>QTY.</u> | <u>REMARKS</u> |
|------------|-----------------|---|-------------|----------------|
| 1 | M1550000104 | DECAL; NOTE | 1 | M15000010 |
| 2 | M1550000204 | DECAL; NOTE | 1 | M15000020 |
| 3 | M1550001603 | DECAL; GENERATOR CONTROL | 1 | M15000160 |
| 4 | M1550017003 | DECAL; ENGINE OPERATING | 1 | M15000170 |
| 5 | M1550001803 | DECAL; AUXILLARY OUTPUT | 1 | M15000180 |
| 6 | M1550001904 | DECAL; CAUTION | 1 | M15000190 |
| 7 | M9500000004 | DECAL; OIL DRAIN PLUG | 1 | M90000000 |
| 8 | M9500100004 | DECAL; WATER | 1 | M90010000 |
| 9 | M9500100104 | DECAL; WATER DRAIN | 1 | M90010010 |
| 10 | M9500300004 | DECAL; - | 1 | M90030000 |
| 11 | M9500300104 | DECAL; + | 1 | M90030010 |
| 12 | M9500500004 | DECAL; DIESEL FUEL | 1 | M90050000 |
| 13 | M9500500104 | DECAL; FUEL DRAIN PLUG | 1 | M90050010 |
| 14 | M9503000004 | DECAL; WARNING | 2 | M90300000 |
| 15 | M9503000103 | DECAL; WATER - OIL CHECK | 1 | M90300010 |
| 16 | M9503100004 | DECAL; WARNING | 1 | M90310000 |
| 17 | M9503100004 | DECAL; WARNING | 1 | M90320000 |
| 18 | M9510100004 | DECAL; CAUTION | 1 | M91010000 |
| 19 | M9510200002 | DECAL; MQ | 1 | M91020000 |
| 20 | M9520000004 | DECAL; GROUND | 1 | M92000000 |
| 21 | M9520000104 | DECAL; AMMETER CHANGE-OVER SW. | 1 | M92000010 |
| 22 | M9520000204 | DECAL; VOLTMETER CHANGE-OVER SW. | 1 | M92000020 |
| 23 | M9520100004 | DECAL; WARNING | 2 | M92010000 |
| 24 | M9520100503 | DECAL; WARNING | 1 | M92010050 |
| 25 | M9520100204 | DECAL; CAUTION | 1 | M92010020A |
| 26 | M9520100304 | DECAL; SAFETY INSTRUCTIONS | 1 | M92010030 |
| 27 | M9520100404 | DECAL; DANGER | 1 | M92010040 |
| 28 | M9520200003 | DECAL; CONNECTION OF OUTPUT CABLE | 1 | M92020000 |
| 29 | M9520200404 | DECAL; OVER CURRENT RELAY | 1 | M92020040 |
| 30 | M1560100403 | STRIPE; WHISPERWATT | 1 | |
| 31 | M1560100504 | STRIPE; 25 | 2 | |
| 32 | M1560101604 | DECAL; MQ POWER | 2 | |
| 33 | M1560101704 | STRIPE | 2 | |
| 34 | M1560101804 | STRIPE | 2 | |
| 35 | M9521000004 | DECAL; TERMINAL | 1 | |

PAYMENT TERMS

Terms of payment for parts are net 10 days.

FREIGHT POLICY

All parts orders will be shipped collect or prepaid with the charges added to the invoice. All shipments are F.O.B. point of origin. Multiquip's responsibility ceases when a signed manifest has been obtained from the carrier, and any claim for shortage or damage must be settled between the consignee and the carrier.

MINIMUM ORDER

The minimum charge for orders from Multiquip is \$15.00 net. Customers will be asked for instructions regarding handling of orders not meeting this requirement.

RETURNED GOODS POLICY

Return shipments will be accepted and credit will be allowed, subject to the following provisions:

1. A Returned Material Authorization must be approved by Multiquip prior to shipment.
2. To obtain a Return Material Authorization, a list must be provided to Multiquip Parts Sales that defines item numbers, quantities, and descriptions of the items to be returned.
 - a. The parts numbers and descriptions must match the current parts price list.
 - b. The list must be typed or computer generated.
 - c. The list must state the reason(s) for the return.
 - d. The list must reference the sales order(s) or invoice(s) under which the items were originally purchased.
 - e. The list must include the name and phone number of the person requesting the RMA.
3. A copy of the Return Material Authorization must accompany the return shipment.
4. Freight is at the sender's expense. All parts must be returned freight prepaid to Multiquip's designated receiving point.

5. Parts must be in new and resalable condition, in the original Multiquip package (if any), and with Multiquip part numbers clearly marked.

6. The following items are not returnable:
 - a. Obsolete parts. (If an item is in the price book and shows as being replaced by another item, it is obsolete.)
 - b. Any parts with a limited shelf life (such as gaskets, seals, "O" rings, and other rubber parts) that were purchased more than six months prior to the return date.
 - c. Any line item with an extended dealer net price of less than \$5.00.
 - d. Special order items.
 - e. Electrical components.
 - f. Paint, chemicals, and lubricants.
 - g. Decals and paper products.
 - h. Items purchased in kits.

7. The sender will be notified of any material received that is not acceptable.
8. Such material will be held for five working days from notification, pending instructions. If a reply is not received within five days, the material will be returned to the sender at his expense.
9. Credit on returned parts will be issued at dealer net price at time of the original purchase, less a 15% restocking charge.
10. In cases where an item is accepted, for which the original purchase document can not be determined, the price will be based on the list price that was effective twelve months prior to the RMA date.
11. Credit issued will be applied to future purchases only.

PRICING AND REBATES

Prices are subject to change without prior notice. Price changes are effective on a specific date and all orders received on or after that date will be billed at the revised price. Rebates

for price declines and added charges for price increases will not be made for stock on hand at the time of any price change.

Multiquip reserves the right to quote and sell direct to Government agencies, and to Original Equipment Manufacturer accounts who use our products as integral parts of their own products.

SPECIAL EXPEDITING SERVICE

A \$35.00 surcharge will be added to the invoice for special handling including bus shipments, insured parcel post or in cases where Multiquip must personally deliver the parts to the carrier.

LIMITATIONS OF SELLER'S LIABILITY

Multiquip shall not be liable here under for damages in excess of the purchase price of the item with respect to which damages are claimed, and in no event shall Multiquip be liable for loss of profit or good will or for any other special, consequential or incidental damages.

LIMITATION OF WARRANTIES

No warranties, express or implied, are made in connection with the sale of parts or trade accessories nor as to any engine not manufactured by Multiquip. Such warranties made in connection with the sale of new, complete units are made exclusively by a statement of warranty packaged with such units, and Multiquip neither assumes nor authorizes any person to assume for it any other obligation or liability whatever in connection with the sale of its products. Apart from such written statement of warranty, there are no warranties, express, implied or statutory, which extend beyond the description of the products on the face hereof.

OPERATION AND PARTS MANUAL

HERE'S HOW TO GET HELP

PLEASE HAVE THE MODEL AND SERIAL
NUMBER *ON-HAND* WHEN CALLING

MQ POWER CORPORATE OFFICE

18910 Wilmington Ave. 800-421-1244
Carson, CA 90746 FAX: 310-632-2656
Email: mqpower@multiquip.com
Internet: www.mqpower.com

PARTS DEPARTMENT

800-427-1244 FAX: 800-672-7877
310-537-3700 FAX: 310-637-3284

SERVICE DEPARTMENT

800-835-2551 FAX: 310-638-8046
310-537-3700

TECHNICAL ASSISTANCE

800-835-2551 FAX: 310-638-8046

WARRANTY DEPARTMENT

800-835-2551, EXT. 279 FAX: 310-638-8046
310-537-3700, EXT. 279

Manufactured for Multiquip Inc.
by
DENYO CO., LTD, JAPAN

Your Local Dealer is:



MQ POWER

A Division of Multiquip Inc.

POST OFFICE BOX 6254

CARSON, CA 90749

310-537-3700 • 800-421-1244

FAX: 310-632-2656

E-mail: mqpower@multiquip.com

Internet: www.mqpower.com