



INSTRUCTIONS FOR INSTALLATION & USE

WD72, WDM73

Hotpoint recommends, for your own safety and to ensure you get the best possible results from your Washer Dryer, you read through this booklet and follow these steps thoroughly.

STEP 1 Electrical Guide

Choose a location for your washer dryer, where possible on a solid floor, with the electrical sockets and water supply taps easily accessible.

Allow sufficient space: 600mm width, 600mm depth and 900mm height.
DO NOT install in a bath or shower room.

WARNING: This appliance must be earthed.



STEP 2 Installation Guide

Dispose of packaging material in a safe place and remove any labels.

Please read through thoroughly to ensure you understand each stage before you begin.

Remember you may be charged for a service call if a problem with your washer dryer is caused by incorrect installation or misuse.



STEP 3 Dispenser Drawer

Read through this section to familiarise yourself with the different compartments within the dispenser drawer.

Hotpoint recommend the Persil range of detergent products.

NOTE: Always follow manufacturer's dosage recommendations.



STEP 4 Wash Guide

A wash chart is provided to help you to select your required programme.

Examples given for the maximum washing load weight for different fabric types.



STEP 5 Options Guide

All available optional wash features are explained within this section - These allow you to adjust your selected wash programme to suit your needs.

NOTE: In addition to the temperature of the incoming water, the selection of optional wash features will affect the programme times.



STEP 6 Drying Guide

A guide to drying times is provided for independent drying programmes, along with a list of items not suitable for tumble drying.

Examples given for the maximum drying load weight for different fabric types.

NOTE: Always make sure the mains button is in the OFF position before selecting an independent drying programme.



STEP 7 Wash & Auto Dry Programme

A picture guide provides a clear explanation how to set a wash and auto dry programme.

DO NOT overload the washer dryer.

NOTE: Hotpoint recommend, on completion of your programme, that you switch off both the electricity and water supply to the appliance.



STEP 8 Troubleshooting

Please refer to the Troubleshooting section if you have any problems when using your washer dryer.
There may be nothing wrong!

**READ BEFORE
CONTACTING
SERVICE!**

Read the rest of these instructions to get the best from your appliance, remember to fill in your guarantee registration.

Keep these instructions in a safe place for quick reference.



Hotpoint guarantee

"Satisfaction guaranteed or your money back"

We give you a unique 'satisfaction guaranteed' promise - **valid for 90 days** - after you have purchased your Hotpoint appliance. If there is a technical problem simply call Hotpoint Repair service or visit our web-site at www.theservicecentre.co.uk and where necessary, we will arrange for an engineer to call. If the technical problem is not resolved under this guarantee, **we will replace your machine or, if you prefer, give you your money back.**

All Hotpoint appliances carry a fully inclusive 12 month parts and labour guarantee as well as free replacement parts for the first 5 years (except microwaves, selected integrated appliances and cooker hoods, which have a one year guarantee) provided that they are fitted by a Hotpoint engineer.

Guarantee terms and conditions

Your guarantee is only applicable in the United Kingdom or Republic of Ireland and is subject to the following provisions that your appliance:

- Has been installed and used correctly in accordance with this instruction booklet.
- Has been used solely for domestic purposes and is located on domestic premises (ie. not for commercial or trade use).
- Has been properly connected to a suitable electrical supply voltage as stated on the appliance rating plate.
- Has not been subject to misuse, accident, modified or repaired by anyone other than one of our own service engineers.

For pre purchase information on any other Hotpoint product,



call: 08701 50 60 70 or visit: www.hotpoint.co.uk



Recycling & Disposal Information

As part of Hotpoint's continued commitment to helping the environment, Hotpoint reserves the right to use quality recycled components to keep down customer costs and minimise material wastage.

Please dispose of packaging and old appliances carefully.

To minimise risk of injury to children, remove the door, plug and cut mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut.

After Sales Service

"No company is better positioned to offer an after sales service on a Hotpoint appliance than us - the manufacturer"

As part of our commitment to you, all Hotpoint appliances have the added benefit of a fully inclusive parts and labour guarantee for the first 12 months. In addition to this you also have the advantage of **free replacement parts for the first 5 years** when fitted by a Hotpoint engineer. When the 12 months parts and labour guarantee expires we offer the following after sales service options:

Repair Service and Information Help Desk

UK: 08709 066066

www.theservicecentre.co.uk

Republic of Ireland: 1850 302 200

Note: Our operators will require the Model number and the Serial number of your appliance.

Available 364 days a year with a fast, effective and value for money service. We have the largest white goods repair service in the UK with over 1200 of our own fully trained engineers. All repairs include a parts and labour guarantee for 12 months from the date of the repair.

If you require any information or have any questions about your appliance, our operators are on hand with help and advice.

All this ensures that you will receive the best available after sales service possible.

Extended Warranties

UK: 08709 088 088

www.theservicecentre.co.uk

Republic of Ireland: 1850 502 200

Whether you have just one or a number of Hotpoint appliances in your kitchen, we offer two service cover plans to give you total peace of mind.

- Repair Protection Plan - FREE service repairs for a single Hotpoint appliance during the period of cover.
- Kitchen Cover - FREE service repairs for all your Hotpoint appliances less than 8 years old.

Genuine Parts and Accessories

UK: 08709 077 077

www.theservicecentre.co.uk

Republic of Ireland: (01) 842 6836

A wide range of genuine parts and accessories are available from our hotline or through our web site.

Genuine parts and accessories, extended warranties and service repairs are all

available on our web-site at:










www.theservicecentre.co.uk

General Domestic Appliances Limited, Morley Way, Peterborough, PE2 9JB.

STEP 4

Choosing a Washing Programme

IMPORTANT INFORMATION: The temperature of the incoming water supply and selection of any Optional Wash Feature will affect the programme times.

| ITCL | Codes | Fabric | Temp. °C | Full Load | Programme Time (mins) based on hot and cold fill | Approx. Max Spin Speed depending on model |
|----------|---|--|-------------|--------------|---|--|
| A |  | White Cotton & Linen without special finishes. | 95 | 5kg | 120 - 140 | 1200rpm |
| B |  | Colourfast cotton, linen or viscose without special finishes | 60 | 5kg | 150 - 170 | 1200rpm |
| C |  | Non-colourfast cotton, linen & viscose | 40 | 5kg | 70 - 80 | 1200rpm |
| D |  | Coloured nylon, polyester, acrylic/cotton mixtures, cotton or viscose with special finishes (eg. drip dry), coloured polyester/cotton mixtures | 50 | 3kg | 60 - 70 | 900rpm |
| E |  | Acrylics, acetates & tri-acetate blends of these fabrics with wool, polyester/wool blends | 40 | 3kg | 50 - 60 | 900rpm |
| F |  | Woollen blankets, wool mixtures with cotton, rayon or silk. | 40 | 2.7kg | 55 - 65 | 900rpm |
| | | Shrink resistant machine washable wool | 40 | 1.4kg | 40 - 50 | 900rpm |
| G |  | Silk & printed acetate fabrics with colours not fast at 40° | 30 | 1.4kg | 35 - 40 | 900rpm |
| | | Refresh programmes | warm | 0.9kg | 30 - 35 | 900rpm |

For gentle wash, rinse & spin options see STEP 7

WASHING WEIGHT LOADS

Two examples of typical loads for washing different types of fabric:

COTTON

- 2 Bath Towels
- 6 Shirts
- 6 Blouses
- 2 Set of Pyjamas
- 4 Sets of Underwear
- 2 Pillow Cases


= 5kg

SYNTHETIC

- 2 Children's Dresses
- 4 Shirts
- 4 Blouses
- 1 Set of Pyjamas
- 4 Sets of Underwear

= 3kg

Selecting a Prewash

For heavily soiled loads, press and hold the required wash programme button until a second beep is heard, the infobubble™ will display 'Prewash' and .

To cancel press the wash programme button a third time and a beep will be heard.

Button Selection:

To select, press button.
Press again to cancel.

Interlocking Door System:


To Open...

Grip the door handle and press the button whilst pulling open the door.


To Close...

Apply pressure at the 2 o'clock position until the door clicks.

Indicator Light...

When 'START' is pressed the door will lock and a  symbol will be displayed in the Infobubble™ throughout the programme.

Approximately 1-2 minutes after the programme has finished the symbol will disappear and the door can be opened.

WARNING: Do not attempt to open the door whilst the  symbol is displayed in the infobubble™



STEP 5

Optional Wash Features

Cancel Button

To start the selection again, press and hold the cancel button for a few seconds, all settings displayed will disappear and the Infobubble™ will display 'Select Programme'.



NOTE: If pressed when setting 'Time Delay' or when time delay is active, time delay is cancelled but the selected wash programme and optional wash features will remain, the Infobubble™ will display these. Press start to proceed with the programme.

| Rinse Hold / Fabric Care | | | |
|---|-------------|--|---------------------|
| ● Not available with Programme 'F'. | | | |
| Press Button | Action | | Infobubble™ Display |
| x1 | Rinse Hold | - Minimises creasing of silk by suspending wash load in final rinse water. | |
| Note: To spin, press the 'Rinse Hold' button again (the Infobubble™ display will remind you to do this, or select the buzzer). | | | |
| x2 | Fabric Care | - Protects delicates with a gentle wash, automatic rinse hold and 800rpm spin. | |
| x3 | Cancel | | |

| Bioprofile / Time Saver | | | |
|-------------------------|--|--|---------------------|
| Press Button | Action | | Infobubble™ Display |
| x1 | Bioprofile | - Increases water temperature at stages to ensure maximum wash performance from your biological detergent. | |
| x2 | Time Saver | - Saves up to 25 minutes on lightly soiled items by reducing the wash & spin time of any programme. | |
| x3 | Selects Bioprofile & Time Saver together | | |
| x4 | Cancel | | |

| Variable Temperature | | | |
|----------------------|---|--|---------------------|
| Press Button | Action | | Infobubble™ Display |
| x1 & Hold | Reduce programmed temperature in 5°C intervals to a minimum of 30°C | | |
| x2 | Cancel | | |

Drying Programme / Drying Time

| | | | |
|---|-----------------------------|--|---|
| ● Not available with Programme 'F'. | | | |
| Press Button | Action | | Infobubble™ Display |
| x1 | Selects low heat programme | |  |
| x2 | Selects full heat programme | |  |
| <i>Note: To increase drying time by 10 minute increments, up to 120 minutes, press and hold button.</i> | | | |

Start, Buzzer / Time Delay

| Press Button | Action | | Infobubble™ Display |
|---|------------|--|---------------------|
| x1 & Hold | Buzzer | - Lets you know when the programme has finished or when Rinse Hold is activated. | |
| | Time Delay | - Gives you the option to delay your wash programme from 1 to 18 hours. | |
| Note: When the button is released the programme will start automatically and the Infobubble™ will display 'Starting Programme'. | | | |

Variable Spin

| Press Button | Action | | Infobubble™ Display |
|--------------|---|--|---------------------|
| x1 | Display existing programme spin speed. | | |
| x2 & Hold | Reduce spin speed by 100rpm intervals to 400rpm or '0' (no spin). | | |
| x3 | Return to normal programme setting. | | |

Variable Rinse


| ● Not available with Programme 'F'. | | | |
|-------------------------------------|--|--|---------------------|
| Press Button | Action | | Infobubble™ Display |
| x1 | Add a rinse for sensitive skin. | | |
| x2 | Delete a rinse to save time and water. | | |
| x3 | Return to normal programme setting. | | |



STEP 6

Choosing a Drying Programme

Items Not Suitable for Tumble Drying:

- Garments with the ITCL code -  DO NOT TUMBLE DRY.
- Woollens.
- Large bulky items eg. quilts, bedspreads, pillows etc... expand when dry, preventing air flow through the appliance.
- Items containing plastic film, foam rubber or rubber like materials eg. pillows, cushions, PVC rainwear or inflammable articles which contain inflammable substances eg. towels contaminated with hair lacquer.
- Fibreglass (eg. some types of curtains).
- Items which have been dry cleaned.

| Fabric Type | Programme | Dry Weight Load | Programme Selector Setting | | Time Setting (approx.mins) | |
|-------------|-----------|-----------------|----------------------------|--------|----------------------------|----------|
| | | | SPIN | HEAT | IRON DRY | FULL DRY |
| Natural | B,C,D & E | 2.5kg max. | ⊙ Long | ☀ High | 55 | 80 |
| | | | ⊙ Long | ☀ High | 35 | 50 |
| Synthetic | F,G & H | 2kg max. | ⊙ Short | ☀ Low | 80 | 90 |
| | | | ⊙ Short | ☀ Low | 45 | 60 |

IMPORTANT INFORMATION: A 10 minute 'Cool Tumble' phase at the end of each drying cycle allows fabrics to gently cool down, minimising creasing.

All fabrics contain a little natural moisture even when 'dry', this should not be lost if the clothes are to remain soft and fluffy. If clothes are subjected to extreme drying they tend to wrinkle and consequently need more ironing than usual. As clothes feel damper when warm, allow for this when removing items before the 'Cool Tumble' phase is complete.

This machine incorporates a 'Dry Spin' feature, see Automatic Features.

DRYING WEIGHT LOADS

Two examples of typical loads for drying different types of fabric:

COTTON

- 1 Bath Towel
- 3 Shirts
- 3 Blouses
- 1 Set of Pyjamas
- 2 Sets of Underwear
- 1 Pillow Case

= 2.5kg

SYNTHETIC

- 2 Children's Dresses
- 2 Shirts
- 4 Blouses
- 1 Set of Pyjamas

= 2kg

Independent Drying Programme

IMPORTANT INFORMATION: Before selecting an independent drying programme, ensure the mains button is in the 'OFF' position.




1 Remove the wet laundry and dosing ball (if used) until the correct 'Drying Weight Load' is left in the drum.



2 Close door by applying pressure at the 2 o'clock position.



3 Switch 'ON'. The Infobubble™ will display 'Select Programme'

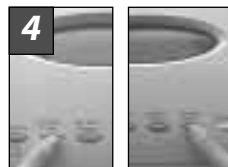

4 Select optional wash & dry features (STEP 5), you will hear a beep and the Infobubble™ will display the selection.



5 Press 'START', the door will lock and the Infobubble™ symbol will appear in the Infobubble™ throughout the wash & dry programme.



6 1-2 minutes after completion of the wash programme the Infobubble™ symbol will disappear and the door can be opened. Switch 'OFF' after use.

WARNINGS:

- If your appliance is not permanently plumbed in, turn on the cold water supply to the appliance and hook the drain hose over the sink to enable to condensing action to work.
- The dryer is intended for use only where water is used for the cleaning process.
- Be careful not to touch the drum at the top as this area gets hot during drying.
- On no account should liquid fabric conditioner be added during the drying process.
- Misuse of the dryer may create a fire hazard.



STEP 7

Wash & Auto Dry Programme



Switch on both the water and electricity supply at the mains.



Sort laundry by label into groups with the same wash & dry requirements, load the appliance. See Drying Weight Load examples (STEP 6)



Close door by applying pressure at the 2 o'clock position.



Add detergent / conditioner to the dispenser drawer (STEP 3). Refer to the manufacturer's dosage instructions.



Select optional wash programme (STEP 4), you will hear a beep and the Infobubble™ will display the programme information.



Select optional wash & dry features (STEP 5), you will hear a beep and the Infobubble™ will display the selection.



Press 'START', the door will lock and the symbol will appear in the Infobubble™ throughout the wash & dry programme.



1-2 minutes after completion of the wash programme the symbol will disappear and the door can be opened. Switch 'OFF' after use.

WARNINGS:

- Do not allow children to play with the appliance or tamper with the controls.
- Do not overload the appliance! It may damage laundry and reduce the quality of the wash.
- Do not attempt to open the door when water is visible in the drum or if the symbol is displayed in the Infobubble™.
- Do not use a dosing ball to dispense detergent when using a wash and auto dry programme.

Gentle Wash, Rinse & Spin Options for Programme G

| Press Button | Infobubble™ Display | Description | Options Available |
|--------------|--------------------------|--|---|
| Once | Silk 30°C | Gentle Wash for Silks. | Rinse Hold, Fabric Care, Variable Rinse, Variable Spin & Timer Saver. |
| x2 | Refresh 40°C | A very quick light wash for freshening up. | No options. |
| x3 | Rinses & Super Spin 1200 | Rinse for hand washed cottons or as an extra rinse for programme 'F'. | Variable Rinse. |
| x4 | Wool Rinses & Spin 1000 | Rinse for hand washed woollens or as an extra rinse for programme 'F'. | Variable Rinse. |

| | | | |
|----|--|--|-----------------|
| x5 | Rinses & Slow Spin 800 | Rinse for hand washed delicates / acrylics or as an extra rinse after programmes 'D, E & G'. | Variable Rinse. |
| x6 | Super Spin 1200 | Spin for hand washed cottons or as an extra spin for programmes 'A, B & C'. | No options. |
| x7 | Wool Spin 1000 | Spin for hand washed woollens or as an extra spin for programme 'F'. | No options. |
| x8 | Slow Spin 800 | Spin for hand washed delicates or as an extra spin for programmes 'D, E & G'. | |
| x9 | NOTE: Returns Infobubble™ display to Silks 30°C | | |

Washcare Tips:

Before washing:

- Pre-treat stains.
- Close zips, tie belts, strings etc... and press studs to prevent tangling.
- Remove papers or tissues from pockets.
- Remove sharp objects and coins from pockets as they could cause damage to clothes or the appliance.
- Limit the size of absorbent loads ie. towels, to 3kg (7lb) to give good washing/rinsing results.
- Place small items in a wash bag.
- Check wash labels as some items may require a cool programme.
- Wash non-colourfast woollens or really dirty laundry separately as they may affect other items.
- Laundry will not wash properly if you overload the appliance.
- Laundry without a wash label should not be machine washed.

MY MACHINE MAKES A NOISE OR VIBRATES IN A SPIN PROGRAMME.

Check all loose items, such as coins, have been removed from the laundry.

Have both transit fixings been removed from the machine?

Has the polystyrene block been removed from underneath the machine?

Have you adjusted the feet to stabilise the machine?

See STEP 2: **Installation**

MY LAUNDRY HAS NOT SPUN DRY.

Was a short spin programme used on a non-synthetic load.

There has been an unbalanced load and the machine could not spin. Redistribute the clothes by hand and select a spin only programme.

Did the water pump out?
If not see **'MY MACHINE DOES NOT PUMP OUT WATER'**.

MY MACHINE WILL NOT START

Close the door. Choose a programme and then press start

Does the 'door indicator' light come on after 2 seconds?

Check that a time delay has not been set on the machine.

Is the machine plugged in and switched on?

Is the socket OK? Test with another appliance to check.

Is the fuse in the plug OK?

Plug the machine in and turn the socket switch on.

If possible use another socket for the machine.

If not replace it, see STEP 1: **Electricity Supply**

MY MACHINE STOPS BEFORE A SPIN PROGRAMME.

The 'Rinse Hold' button has been pressed and this will be displayed in the Infobubble™ display until the button is pressed again.

MY MACHINE DOES NOT PUMP OUT WATER (E15)

Has the drain hose been connected correctly?

Are the drainage unit, or under sink connection from blocked?

Has 'Rinse Hold' been pressed? The light will flash until it is pressed again.

Press the 'Rinse Hold' button again.

See STEP 2: **Installation**

Clear any blockages that have been found.

Is the machine connected to a sink waste system?

Check the blocked end of the under sink drainage pipe has not been cut off.

WATER COLLECTS IN FABRIC DISPENSER COMPARTMENT

Clean fabric dispenser.
See STEP 3: **The Dispenser Drawer**.

ES NOT
TER

en installed

standpipe
tions free
es?

selected?
the button
in.

' button

ation

that have

ected to
em?

nd of the
unit has

IN THE
USER
NT

er drawer.
penser

MY MACHINE IS LEAKING (E10/E11/E13)

Are the fill hoses on correctly?
If not tighten them.

Is your water pressure too
high?

Turn the main supply tap
down.

Is the standpipe or household
drain blocked.

You may need to call in a
plumber.

Is steam coming from the
dispenser drawer?

The machine is designed to
release steam from the dispenser
drawer during hot washes.

Check the feet have been
levelled.

THE PROGRAMME TAKES A LONG TIME

Check for low temperature and
low pressure for the hot and
cold water supply

SUDS ARE COMING FROM THE DISPENSER DRAWER

Check the correct amount of
suitable detergent has been
used, refer to manufacturer's
recommendations.

THE LAUNDRY IS NOT DRY AFTER USING THE DRY PROGRAMME

Is the cold water turned on at the
tap?

Did you select the right heat/time
setting?

Was the laundry spun dry at the
end of a wash programme, if not
select a spin and dry option to
suit the fabric type.

ERROR CODES


In the unlikely event of a problem
occurring with your machine, an Error
Code will appear in the Infobubble™.
Brief explanations of the codes are
shown below:

- E10/11/13** No Hot / Cold fill -
Check the water supply
and the hot and cold hose
connections.
- E15** Water will not pump out -
See 'MY MACHINE DOES
NOT PUMP OUT WATER'.
- E17** Door is not closed properly
Pressure at the 2 o'clock
position until door clicks.
- E16** High water level -
Disconnect or turn off the
water supply, then call for a
Service Engineer.
- E14** Call for a Service Engineer
- E30/31** Motor Drive Problem -
Run the programme again,
if problem persists call for
a Service Engineer.
- E50/51** Call for a Service Engineer.

If the appliance is still not working
contact:
Repair Service and Information Desk
UK 08709 066 066
Republic of Ireland 1850302 200

You will be asked for the following
details: Name and Address, Post
Code, Telephone Number, Date of
Purchase, Colour and Model/Serial
Numbers - which can be found on
the inside of the door.
Clear and precise details of the query
or fault.

Getting to Know your Appliance

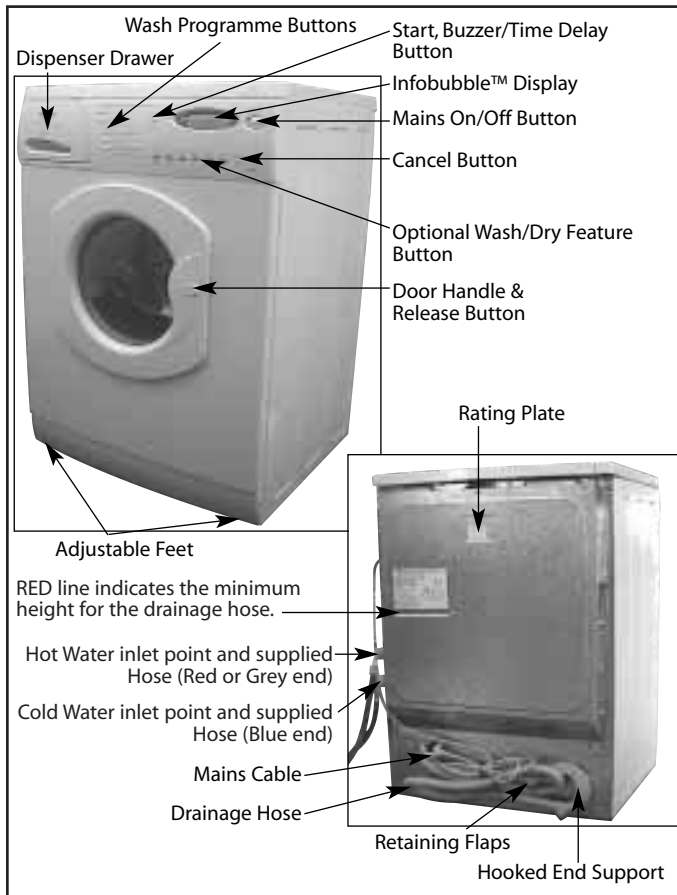

Cleaning the Exterior:

Use a damp cloth or silicon polish to clean the exterior surfaces of the appliance.

Cleaning the Door Bowl:

Clean the internal surface of the door bowl regularly with a soft cloth. A build up of soap powder and water hardness residue may result in water leaking from the door.

DO NOT clean any part of the machine with abrasive cleaners, scouring agents, acids, chlorine based bleach or metal polish as they may cause damage.

Maintenance Wash:

We recommend a maintenance wash 2 or 3 times a year, to avoid a build up of greasy deposits and water hardness residue. Simply run wash programme 'C' without any laundry in the drum, using the usual amount of detergent.

Automatic Features:

Intelligent Care:

Takes care of your laundry by monitoring your machine's performance. Prevents your machine spinning with an uneven load and reports any specific problems on the Infobubble™ display.

Temperature Sensed Fill:

Makes the best use of the existing hot water supply, saving energy, time and money.

Auto Creasecare:

Reduces creasing on any wash programme by gradually reducing the water temperature towards the end of the wash programme.

Profile Spin:

Less water, less creasing and less ironing. Gradually steps up the spin speed for the most efficient water extraction.

Pulse Spin:

Reduces wear and tear on your laundry. A long, steady spin is followed by a 30 second burst at the maximum speed for your machine, to enable safer, more efficient water extraction.

Dry Spin:

There will be a 2 minute spin about 20 minutes after the drying programme has started; this improves the drying performance.

NOTE: This feature will not operate if you have selected a combined Wash & Auto Dry Programme for synthetic fabrics.

Infobubble™ Display:

The Infobubble™ displays your selected wash programme, optional wash features selected and shows you exactly where you are in the washing cycle.

Key Contacts

After Sales Service

Over 1200 trained specialists, directly employed by us, ensure that you can have complete confidence in both the appliances and services we offer.

Repair Service and Information Desk

UK: 08709 066 066

(Open 8 to 8 Mon - Fri, 8 to 6 Sat, 10 to 4 Sun & Bank Holidays)

www.theservicecentre.co.uk

Republic of Ireland: 1850 302 200

Note: Our operators will require the Model number and Serial number.

Extended Warranties

UK: 08709 088 088

(Open 8 to 8 Mon - Sun)

www.theservicecentre.co.uk

Republic of Ireland: 1850 502 200

Genuine Parts and Accessories

UK: 08709 077 077

(Open 8-30 to 5-30 Mon - Fri & 9 to 12 Sat)

www.theservicecentre.co.uk

Republic of Ireland: (01) 842 6836

STEP 1 *Electricity Supply*

WARNING: *The appliance must be earthed.*

Fuses

Your appliance comes fitted with a plug and a 13A fuse. If you need to replace the fuse, only those rated at 13A and ASTA approved to BS1362 should be used. To change fuse lift holder to vertical position and lift fuse out. To replace, insert fuse and push fuse holder down into locked position. Correct replacement is identified by colour coding or the marking on base of plug.

WARNING: *Do not use plug unless fuse holder is in locked position.*

Changing the Mains Lead

A special lead can be ordered from Hotpoint Service
UK: 08709 066 066 or Republic of Ireland: 1850 302 200
If you have damaged the existing lead or require a longer one a charge will be made. It is strongly advised that this work is carried out by a qualified electrician.

Changing the Plug

Cut off and dispose of the supplied plug if it does not fit your socket.

WARNING: *To avoid a shock hazard do not insert the discarded plug into a socket anywhere else.*


IMPORTANT: WIRES IN THE MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE:

| | | |
|--------------|---|---------|
| Green/Yellow | - | Earth |
| Blue | - | Neutral |
| Brown | - | Live |

If you change the plug, the colour of wires in the mains lead may not correspond with the colour of the markings identifying terminals in the plug. You should therefore wire it as shown:

Green and yellow (Earth) wire to terminal marked 'E', symbol \perp , or coloured green and yellow.

Blue (Neutral) wire to terminal marked 'N' or coloured black.

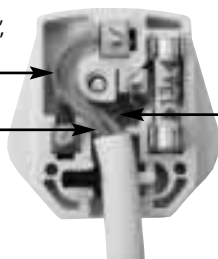

13A ASTA approved fuse to BS1362.

Brown (Live) wire to terminal marked 'L' or coloured red.



CE marking certifies that this appliance conforms to the following EEC directives:

Low Voltage Equipment - 72/23/EEC & 93/68/EEC

Electromagnetic Compatibility - 89/336/EEC, 92/31/EEC & 93/68/EEC



STEP 2

1

POLYSTYRENE BLOCK...

NOTE: YOU MAY NEED A SECOND PERSON TO HELP Y
RAISE AND LOWER THE APPLIANCE.



This is part of the packaging and should have come away with the polystyrene base -

IF IT HAS NOT... **REMOVE IT!**

4

NOT
MO
ALC

W
Y
H
LEV
D
(*s

5


LEVEL?...

YOUR MACHINE WILL BE NOISY IF THE TWO
NOT ADJUSTED SO THE MACHINE STANDS

Each foot has two parts: The Locking Disk

Locking
Disk

Foot



i Release the locking disk on the two front feet and screw the feet in or out until the machine stands firm and level.

ii Turn on the each of the

Installation


2

REMOVE TRANSIT BRACKETS...


IMPORTANT:

Internal transit brackets are fitted to prevent damage during transit and **MUST** be removed before use...

Failure to do so may cause damage to your machine!

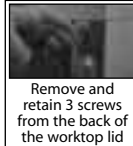

Remove and retain 3 screws from the back of the worktop lid

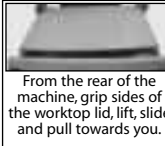


From the rear of the machine, grip sides of the worktop lid, lift, slide and pull towards you.




Remove 4 screws and the rear transit bracket - retain.



Remove 3 screws and front transit bracket - retain.

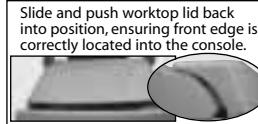

Slide and push worktop lid back into position, ensuring front edge is correctly located into the console.

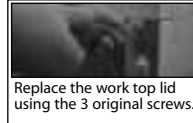

Replace the work top lid using the 3 original screws.

3

CONNECT TO THE DRAINAGE SYSTEM...

PLEASE USE THE NEW HOSES SUPPLIED, FITTED TO THE MACHINE.



DO NOT REMOVE!

Old hoses may cause leaks due to worn out washers.


DRAINAGE SYSTEM... we recommend one of the following:

NOTE: ALTHOUGH YOU MAY NEED TO REMOVE THE HOOKED END SUPPORT ALONG THE GREY DRAINAGE HOSE, DO NOT REMOVE IT.

WHICHEVER DRAINAGE METHOD YOU USE, MAKE SURE THAT THE HOOKED END SUPPORT IS FIXED FIRM TO, OR ABOVE THE 'MINIMUM DRAINAGE HOSE HEIGHT LINE'* (See Getting to Know your Appliance)

STANDPIPE METHOD

Hooked End Support

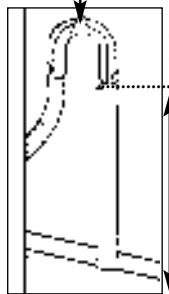


Insert drainage hose approximately 100mm into the standpipe.


Standpipe height: minimum 500mm from the floor.

OR

UNDER SINK METHOD

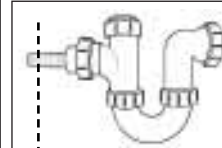

cut off the blocked end of the under sink drainage unit.

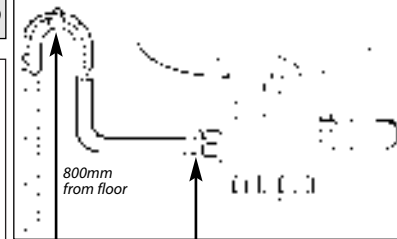

Fix the hooked end support at a minimum 800mm from the floor.

Attach the GREY drainage hose to the under sink drainage unit securely, using a hose clip.

6

CONNECT TO THE POWER SUPPLY...

PLUG YOUR MACHINE INTO AN ELECTRICAL SOCKET WHICH IS EASILY ACCESSIBLE. **SWITCH ON**




NOTE: Hotpoint recommend extension leads are not used.

Move your machine into position, take care not to trap or kink the hoses.

7

READY...

TO CHECK ALL PARTS ARE CLEAN THE INSIDE OF THE MACHINE. **SELECT A 95° WHITE**

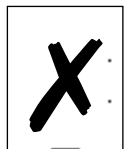

WITH

THIS WILL TAKE A

THE WATER SUPPLY...

i Check both hot and cold water supplies are running freely...

ii Connect fill hoses to water supply taps:

- Red or Grey Hose end to Hot
- Blue Hose end to Cold

TURN ON BOTH TAPS

If you have no hot water supply...

A cold fill adaptor is available from your local Hotpoint authorised Service Centre or by calling the Genuine Parts & Accessories Hotline (see KEY CONTACTS).




OF THE INSTALLATION AND TO THOROUGHLY
YOUR MACHINE:

COTTON WASH PROGRAMME (refer to STEP 4)

WITHOUT ANY LAUNDRY

and

WITHOUT ANY DETERGENT



APPROXIMATELY 2hrs 30mins TO COMPLETE

STEP 3 The Dispenser Drawer

Changing the Main Wash Indicator:

The main wash indicator has been fitted to dispense powder detergent only.

If you wish to use liquid detergent, reposition the main wash indicator as shown below:



1 Pull the drawer out until it reaches its stop.




2 Press down on button, to release the drawer latch and remove the drawer.



3 Lift the main wash indicator out of slots, rotate and reposition for Liquid, ensuring it is secure.



4 Relocate the drawer and push back into place.

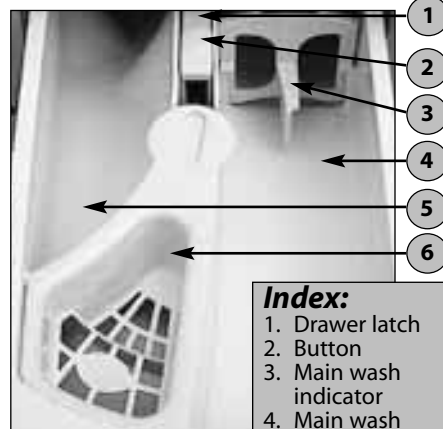

Index:

1. Drawer latch
2. Button
3. Main wash indicator
4. Main wash compartment
5. Prewash compartment
6. Fabric conditioner compartment.

Dispensing Powder Detergent

To achieve optimum wash results we recommend that you use the detergent manufacturers dispensing cup, to dispense no more than 300ml of powder.



Dispensing Fabric Conditioner

Pour fabric conditioner into the compartment. We recommend that you do not exceed the maximum level indicated.



Cleaning the Dispenser Drawer & Compartments:

It is advisable to clean the dispenser drawer regularly:

Remove the drawer, see 'Changing the Main Wash Indicator', wash the dispenser drawer and clean out the compartment. Dry thoroughly and relocate.

