




BLACK & DECKER®

SAVE THIS USE AND CARE BOOK

Spacemaker* Optima™ Horizontal Toaster

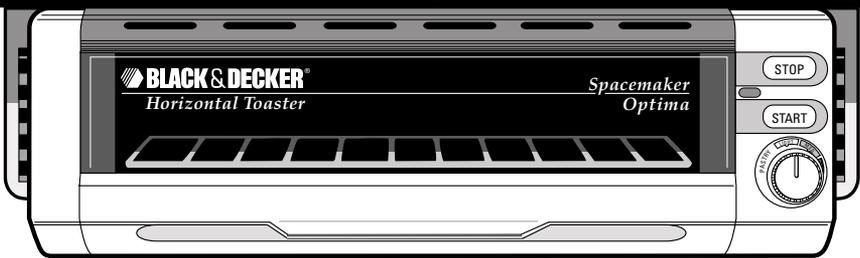

1-800-231-9786
QUESTIONS? Please call us TOLL FREE

MODEL T1000

*Trademark of General Electric Company, U.S.A.

IMPORTANT SAFEGUARDS


When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS.

- Do not touch hot surfaces. Use handles or knobs.
- Do not operate any electric or gas heating appliance beneath this unit. Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not install the horizontal toaster over a sink or basin or any electrical or gas heating appliance.
- To protect against electrical shock, do not immerse cord, plug, or any part of horizontal toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the horizontal toaster.
- Do not open crumb tray while horizontal toaster is in operation.
- Do not operate any horizontal toaster with a damaged cord or plug or after it has been damaged in any manner. Return horizontal toaster to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of table or counter, or touch hot surfaces.
- Plug the cord into the wall outlet. To disconnect, turn all controls "OFF", then remove the plug from the wall outlet. Do not yank on the cord.
- Do not use the horizontal toaster for other than intended use.
- Oversized foods or utensils must not be inserted in the toaster, as they may create a fire or risk of electric shock.

- A fire may occur if the horizontal toaster is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the horizontal toaster when in operation.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Do not leave unattended while toasting.
- Do not operate in the presence of explosive and/or flammable fumes.
- This product is intended for household use only and not for commercial or industrial use.

SAVE THESE INSTRUCTIONS

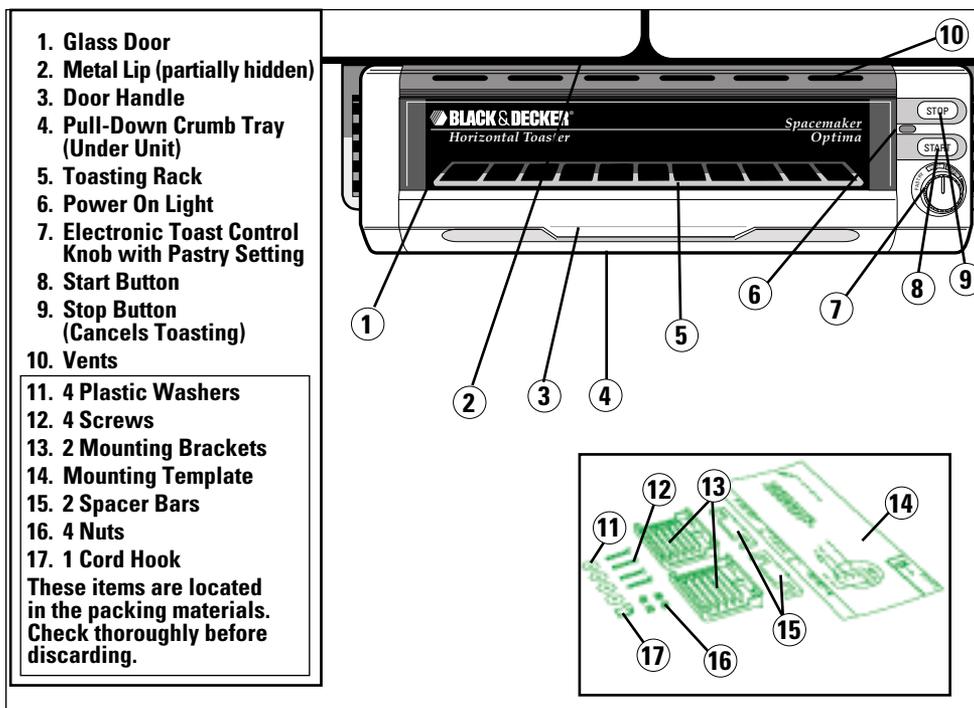

SAFETY NOTE: Overtoasting of thinly sliced breads, reduced fat diet breads, and packaged greasy toaster foods could cause them to catch on fire. Toast thin, diet light, or greasy slices only in lower settings of the Toast Color Control; for packaged toaster foods, follow toasting instructions provided by their manufacturers.

POLARIZED PLUG

This horizontal toaster has a polarized plug — one blade is wider than the other. To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse it. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.

How to Use

CHOOSING A MOUNTING LOCATION

Your Spacemaker* Optima™ Horizontal Toaster is designed to be mounted under a cabinet. **DO NOT ATTEMPT TO OPERATE UNLESS THE UNIT IS PROPERLY INSTALLED.** It can be mounted to wood or metal cabinets. When choosing a mounting location:

- Keep in mind that it fits your normal work pattern - especially the use of counter top appliances and the possible addition of other under-the cabinet appliances.
 - Hold the Toaster in various locations while you consider the most convenient location for mounting in your kitchen.
 - Do not install the Toaster over another cooking or heating appliance or behind, under, or in front of under-cabinet lighting appliances.
-

*Trademark of General Electric Company, U.S.A.

- Do not install the Toaster directly in front of an electrical outlet, but be sure it is mounted within reach of an electrical outlet.
- The Toaster is designed to be mounted directly next to **any other Spacemaker* Optima™ product**, with a clearance of at least 1" between the two products. If it is not mounted next to any other Spacemaker* Optima™ product, maintain at least a 5" clearance on all sides including the back.

NOTE: If you have **Flush Bottom** cabinets—a flat level surface where the cabinet doors come to the bottom of the cabinet front—(See Illustration 1A page 6) please take note that the Metal Lip of the Toaster should not be placed anywhere under the hinge area of two cabinet doors.

If you are mounting the Horizontal Toaster directly next to another Spacemaker* Optima™ product that is already mounted:

1. Place the Mounting Template along the side of the already-mounted Spacemaker* Optima™ product that your Horizontal Toaster will hang next to.
2. Using the Mounting Template edge as a guide, draw a line on the underside of the cabinet. (Figure A) This will be the line to use to mark the edge of the Horizontal Toaster's location.



Figure A


NOTE: To help determine mounting location, see page 24 for the lengths of all the Spacemaker* Optima™ products.

*Trademark of General Electric Company, U.S.A.


INSTALLING YOUR HORIZONTAL TOASTER

Tools you will need for installation:

- Drill and 1/4" drill bit
 - Phillips screwdriver
 - Hammer/Nail to start a drill hole
 - Adhesive tape
 - Eye Protection Goggles
 - Newspaper to cover counter tops (optional)
-

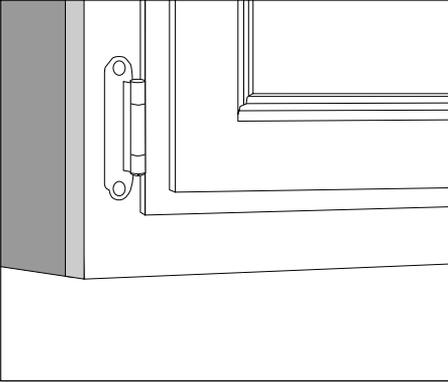

Flush bottom-1A

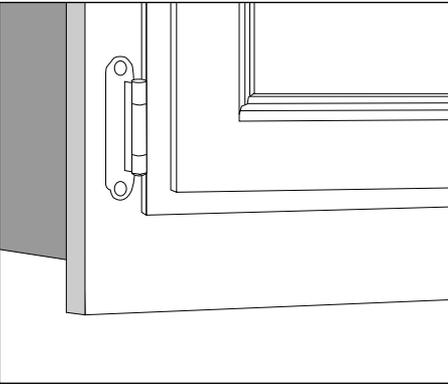

Overhang Bottom-1B




Figure B

First, determine if your cabinet has a flush bottom or overhang bottom. (See Illustration 1A & 1B). If your cabinet has a flush bottom — flat, level surface — follow the mounting instructions below. If your cabinet has an overhang — a lip extending below the bottom of the cabinet shelf — turn to page 9 for mounting instructions.

MOUNTING INSTRUCTIONS FOR CABINET WITH FLUSH BOTTOM

1. Empty your cabinet of its contents before starting to drill. **Clean the underside of the cabinet to remove any grease or other residue.**
2. With the doors of the cabinet open, place the front of the Mounting Template even with the front of the cabinet. (Figure B) Tape securely in place.
3. Mark the four drill holes through the Template onto the cabinet bottom with a pencil and



Figure C




Figure D



Figure E

remove the Mounting Template. (Figure C)

4. Cover the counter top to catch drilled wood chips.

CAUTION: Suitable eye protection is recommended to prevent injury from shavings while using a drill.

5. Make a small starter hole by hammering a nail or using a smaller drill bit. Holding the drill straight and vertical at the hole marks, center and drill up through the bottom of the cabinet. (Figure D)

6. Insert a plastic washer on each screw with the flat side of the washer resting on the cabinet bottom. Drop each screw with the washer in place through a drilled hole from inside the cabinet. Repeat the procedure with remaining screws and washers. Thread a nut onto each screw so that approximately 1/4" of the screw is exposed beyond the nut. (Figure E)

7. Slide the Mounting Bracket above the nuts through the U-shaped openings on the Bracket. The Bracket will then be resting on the nuts. (Figure F) (See page 8).



Figure F

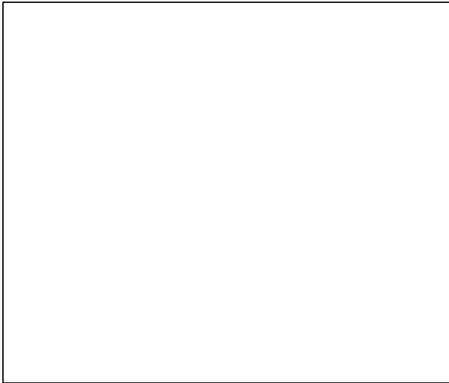


Figure G



Figure H

8. Press the Bracket inward and forward toward the front of the cabinet until it stops. Tighten the screw/nut assembly with a screwdriver until the Bracket just touches the bottom of the cabinet. (Figure G) The Bracket should move freely front to rear in the slot to fine tune the fit of the Toaster to the cabinet front. Repeat Steps 7 and 8 for the other Bracket.

9. Hold the Toaster in front of you and push it forward into the slots on the Mounting Brackets until it locks into place. The Metal Lip on the top of the Toaster must rest against the cabinet front. (See Figure H) The front of the Toaster will extend $1\frac{1}{2}$ " beyond the front of the cabinet.

10. Drape the Cord toward an electrical outlet and use the Cord Hook to hold it out of the way. Peel the paper off the adhesive back of the Cord Hook. Place the Cord Hook at the back edge of the cabinet (on or next to the wall) over the outlet to be used.

NOTE: For safety, NEVER USE TACKS THROUGH OR AGAINST THE CORD TO HOLD IT.

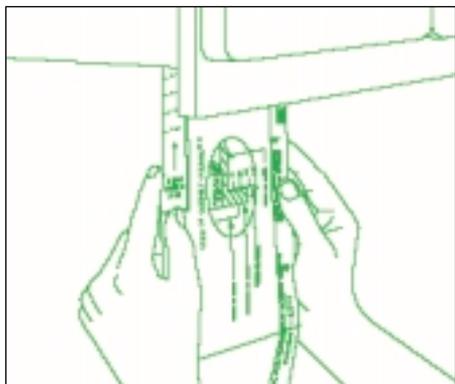


Illustration 2

MOUNTING INSTRUCTIONS FOR CABINET WITH OVERHANG

If your cabinet has an overhang — a lip extending below the bottom of the cabinet shelf — follow these simple mounting instructions.

1. Empty your cabinet of its contents before starting to drill. **Clean the underside of the cabinet to remove any grease or other residue.**
2. To determine whether you need to use Spacer Bars to mount your Horizontal Toaster, use the Cabinet Overhang Ruler on your Mounting Template and measure the cabinet overhang (See Illustration 2). If the overhang measures $\frac{1}{4}$ " , $\frac{3}{4}$ " , $1\text{-}\frac{1}{4}$ " , or $1\text{-}\frac{3}{4}$ " inches, you will need Spacer Bars. Instructions for using Spacer Bars are on page 12.

NOTE: If The Mounting Location Has A Partition: The Mounting Template must be cut and a piece removed to allow for this partition. (Figure I) Measure and cut very carefully. Save any pieces of the Mounting Template you remove.



Figure I

3. Fold down the grey strip on the Mounting Template at the dotted line.
4. With the doors of the cabinet open, position the Mounting Template under the cabinet so

the folded grey strip is against the back of the cabinet overhang. Tape the Mounting Template securely in place. Check to be sure the Mounting Template is located where you plan to mount the toaster.

NOTE: If the cabinet has an overhang that extends more than 2 inches below the cabinet bottom, a wooden shim (a piece of wood that fits between the Cabinet and the Bracket) will be necessary. Cut a block of wood that is: 16 1/4" x 5 1/2". Make sure the wood is at least as thick as the amount of the overhang that exceeds 2 inches. Locate and drill holes on the shim for the screws to pass through. (Longer screws may be needed. See Note after Step # 7.)

5. Mark the four drill holes through the Template onto the cabinet bottom with a pencil and remove the Mounting Template. (Figure J)

Cover the counter top to catch drilled wood chips.

CAUTION: Suitable eye protection is recommended to prevent injury from shavings while using a drill.



Figure J



Figure K

6. Make a small starter hole by hammering a nail or using a smaller drill bit. Holding the drill straight and vertical at the hole marks, center and drill up through the bottom of the cabinet. (Figure K)

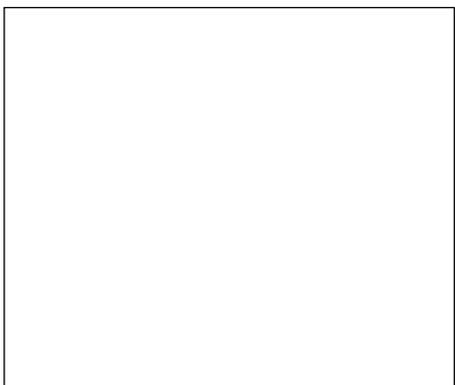


Figure L

7. Insert a plastic washer on each screw with the flat side of the washer resting on the cabinet bottom. Drop each screw with the washer in place through a drilled hole from inside the cabinet. Repeat the procedure with remaining screws and washers. Thread a nut onto each screw so that approximately 1/4 of the screw is exposed beyond the nut. (Figure L)

NOTE: If it was necessary to use a wood shim (See NOTE after Step #4), you may need to use screws longer than those provided. To determine this, hold the shim firmly against the underside of the cabinet. Drop one of the screws provided through the cabinet shelf and the shim. Check to see that at least 1/2 inch of the screw is visible to provide secure mounting. If it is not, you will need #10-24 flat head machine screws. The length of the screws should equal at least the thickness of the cabinet floor PLUS the thickness of the shim PLUS 1/2 inch. These screws can be obtained at a hardware store.



Figure M

8. If you determined you need Spacer Bars (See Step # 2, page 9), place the Spacer Bars on top of each Bracket so that the 2 small tabs on the bars fit into the notches on the Brackets. Slide the Mounting Bracket and Spacer Bars above the nuts through the U-shaped openings on the Bracket. The Bracket will then be resting on the nuts. (Figure M)

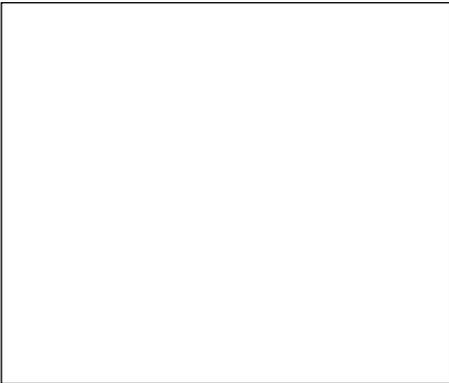


Figure N

9. Push the Spacer Bars/Bracket up against the screws and forward toward the front of the cabinet. Tighten the screw/nut assembly with a screwdriver until the Spacer Bars/Bracket just touches the bottom of the cabinet. (Figure N) The Bracket should move freely front to rear in the slot to fine tune the fit of the Toaster to the cabinet front. Repeat Steps 8 and 9 for the other Bracket.



Figure O

10. Hold the Toaster in front of you and push it forward into the slots on the Mounting Brackets until it locks into place. The Metal Lip on the top of the Toaster should rest against the cabinet front. (Figure O) The front of the Toaster will extend 1½" beyond the front of the cabinet.

11. Drape the Cord toward an electrical outlet and use the Cord Hook to hold the Cord out of the way. Peel the paper off the adhesive back of the Cord Hook. For the most attractive appearance, place the Cord Hook at the back edge of the cabinet (on or next to the wall) over the outlet to be used.

NOTE: For safety, NEVER USE TACKS THROUGH OR AGAINST THE CORD TO HOLD IT.

USING THE TOASTER

NOTE: The Horizontal Toaster must be mounted before using.


A NOTE ABOUT THE TOASTER: This toaster is designed with a special setting for pastry and a range of settings — light to dark — for toast.

1. Plug the cord into a standard electrical outlet. This Toaster is equipped with electronic toasting, which means consistent toasting performance for each setting. Adjust the Electronic Toast Control Knob to the desired setting - Light to Dark or Pastry.
2. For first use, set the Toast Control at Medium. Readjust for lighter or darker toasting. All breads/pastries do not toast alike. For example, thinner, dry bread requires a lighter setting than thicker, fresh bread. See the *"Toasting Guide"* on page 14 for recommended settings.

(Continued on page 16)

TOASTING GUIDE

Electronic Toast Control Knob Guide			
Pastry	Light	Medium	Dark

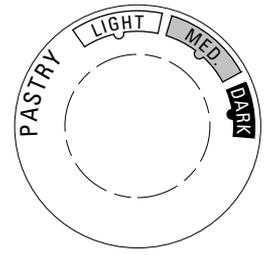


FOOD	No. of SLICES	RECOMMENDED SETTING*
White Bread, soft type	2 Slices 1 Slice	Medium Light
Wheat Bread	2 Slices 1 Slice	Medium Medium
Rye Bread	2 Slices 1 Slice	Dark Medium
Variety Bread, Hand Sliced, 3/4" thick	1 Slice	Medium
Italian Bread, 3/4" thick	2 Slices	Light
French Bread, 3/4" thick	2 Slices	Light
Portuguese Bread, 6-8" long, 1/2" thick	1 Slice	Medium
Thin Slice White Bread	2 Slices 1 Slice	Medium Light
Fresh Bagel	2 Halves	Dark
Frozen Bagel (thawed)	2 Halves	Medium
English Muffins	2 Halves	Dark
Toaster Waffles	2 Sections	Light
Toaster Breakfast Pastry	2 Pastries	Pastry
French Toast	2 Slices	Medium
Toaster Corn Muffins	2 Muffins	Light
Pop Tarts	1-2 Tarts	Pastry
Homemade Pound Cake, 3/4" thick	2 Slices	Pastry
Toaster Hash Browns	2 Sections	Medium

* Some adjustments may be necessary due to differences in bread and individual preferences.

Questions on Using the Horizontal Toaster

1. Can I toast thick slices of homemade breads?

Yes, as long as the slices don't go over the MAX FILL LINE. You can see the words MAX FILL LINE and the line when you pull open the door. It is not recommended to put foods in the toaster that exceed the MAX line.

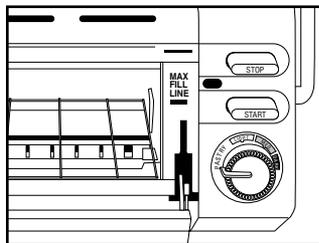

2. I noticed some moisture on the glass door—is that normal?

Yes. Some condensation may form on the door during the toasting cycle because the door traps the heat and moisture. This is normal.

3. Can I interrupt a toasting cycle once it's started?

Yes. Push the "Stop" button and the cycle will stop. If you use a second toasting cycle, watch for doneness and use "Stop" to stop the cycle and avoid burning. You should use a lower setting for a second toast cycle.

4. What do I do if my toast burns and starts flaming?

The door of this toaster has an added benefit should flaming occur. Since it traps the flames, the door helps extinguish any fire within a short time. DO NOT open the door until the flames go out. Allow the toaster to cool before removing burnt food.

5. Can I put butter or margarine on my food before toasting?

Yes. You can use a very thin layer of butter or margarine before toasting. Be sure to use a setting of Medium or Light. Some dripping may occur. Avoid using sugary toppings such as jellies, preserves, or syrups in the toaster since they get very hot and may burn.

6. Pop-up toasters usually indicate one slot or the other for toasting one slice. What is the best position for toasting one slice in this toaster? For the most even heating and toasting, place the food in the center of the toasting rack. Use lower settings for a single slice of toast. (See the "Toasting Guide" on page 14.)

7. Can I reheat foods (i.e. Danish, a slice of pizza) on aluminum foil in the toaster? No. This toaster should only be used with traditional toaster-style foods. No foods should be heated in foil or on trays.

8. What is the best way to clean crumbs out of the door area?

Remove the rack and sweep crumbs out with a pastry brush. If you don't have a pastry brush, use a dry paper towel and wipe clean.



Figure P

3. Pull the handle down until the door is fully opened and latched. The Slide-Out Rack will come forward. Place the slices of bread or toaster foods on the Rack. Use the Door Handle to gently close the door. (Figure P)

NOTE: For best toasting results, use the MAX FILL LINE located on the metal border inside the Glass Door as a guide to food height. It is not recommended to toast foods that rise above the MAX line because toasting quality will be affected.

4. Press the Start Button and the Power On Light will glow. Once the Toasting cycle has been completed, a signal bell will ring. Pull the door handle down until the door is opened and latched. The Power On Light will go off and the Rack will move forward to present your food.

5. For your safety, use a potholder or utensil to remove toasted food.

6. To stop the toasting cycle at any time during it's operation, press the "Stop" Button and the Power On Light will turn off.

CLEANING

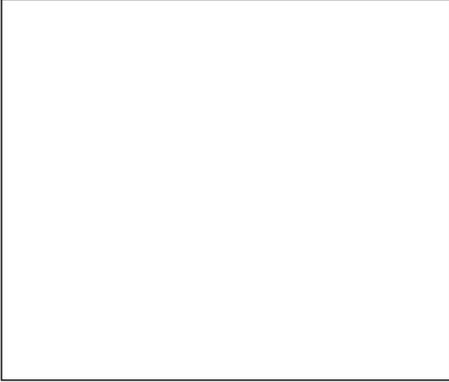


Figure Q

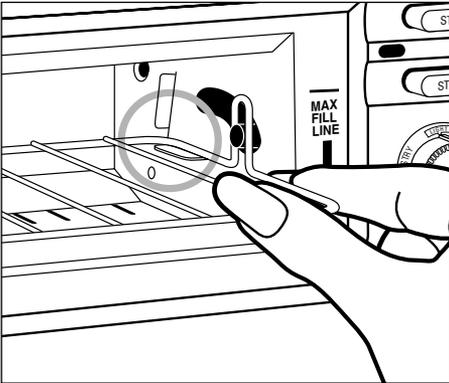


Illustration 3

NOTE: Always unplug the cord from the electrical outlet and allow the Toaster to cool before cleaning.

DO NOT IMMERSE TOASTER IN WATER

1. The See-Through Glass Door should be cleaned with a damp, sudsy cloth. Dry thoroughly before using the Toaster.

2. To clean the Slide-Out Rack, pull the handle down until the door is fully opened and latched. Grasp the rack, lift it slightly over the rack pins and pull outward.

(Figure Q) Wash the Rack in hot, sudsy water. To remove stubborn spots, use a polyester or nylon mesh pad, and dry thoroughly before replacing in the Toaster. To replace, tilt the rack slightly downward to fit through the rack guides at the back of the Toaster. (See Illustration 3) Drop the rack down over the rack pins and close the Door.

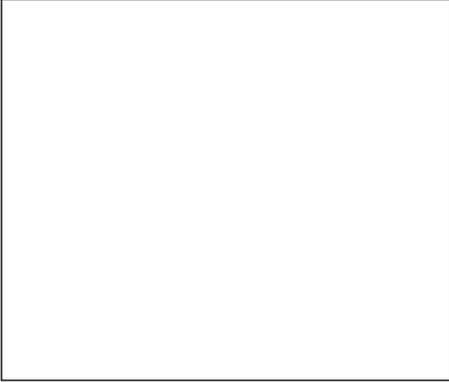


Figure R

NOTE: The Pull-Down Crumb Tray can be extremely hot. Allow it to cool completely before cleaning.

3. Check and clean the Pull-Down Crumb Tray often. (Figure R) Immediately wipe away any food crumbs or spills from fillings or toppings before next use. Place a waste receptacle under the Crumb Tray. Open the Crumb Tray to empty the crumbs. Use a cloth or plastic scouring pad and hot, sudsy water to clean the tray.

4. Dry the Pull-Down Crumb Tray thoroughly before latching to the toaster. **DO NOT ATTEMPT TO OPERATE THE TOASTER WITHOUT CLOSING THE PULL-DOWN CRUMB TRAY.**

5. Clean the outside of the Toaster with a slightly damp cloth, then dry thoroughly with a dry cloth. When cleaning the outer shell, **NEVER USE STRONG CLEANERS OR ABRASIVES THAT WILL SCRATCH THE SURFACES.** Never spray or apply cleaner directly to the Toaster.

Need Help?

TIPS ABOUT THE ELECTRICAL CORD

The cord length of this Horizontal Toaster was selected to reduce safety hazards that may occur with a longer cord. If more cord length is needed, an extension cord may be used. It should be rated not less than 10 amperes, 120 volts, and should have Underwriters Laboratories listing. A properly rated extension cord with a polarized plug may be purchased from a Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Center. When using a longer cord, be sure that it does not drape over a working area or dangle where it could be pulled on or tripped over.

SERVICE OR REPAIR?

Service, if necessary, must be performed by a Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Center. The Service Center nearest you can usually be found in the yellow pages of your phone book under "Electric Appliances-Small-Repairing." For your convenience, a complete listing of our Company-Owned Service Centers can be found on pages 21 & 22. To remove the unit for service or repair, grasp the toaster on both sides, lift up, and pull forward.

If mailing or shipping the Horizontal Toaster, pack it carefully into a sturdy carton with enough packing material to prevent damage. The original carton is not suitable for mailing. Include a note describing the problem to our Service Center and be sure to give your return address. We also suggest that you insure the package for your protection.

FULL TWO-YEAR WARRANTY

Black & Decker (U.S.) Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period after the original date of consumer purchase or receipt as a gift. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge, including free return transportation, provided it is delivered prepaid to any Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Center.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Answers to any questions regarding warranty or service locations may be obtained by calling toll-free 800-231-9786 or by writing:

Consumer Assistance and Information
Black & Decker (U.S.) Inc.
626 Hanover Pike
Hampstead, MD 21074-0618



BLACK AND DECKER COMPANY-OWNED SERVICE CENTERS

ALABAMA

BIRMINGHAM — 2412 Green Springs Hwy., 35209
205-942-0538
MOBILE — 3831 Airport Blvd., 36608 205-343-6624

ALASKA

ANCHORAGE — 910 West International Airport Rd., 99518
907-563-4664

ARIZONA

MESA — 535 South Dobson Rd., Suite 7, 85202
602-461-1074
PHOENIX — 4501 N. 7th Ave., 85013 602-279-6414
TUCSON — 4845 E. Speedway Blvd., 85712 602-323-3388

ARKANSAS

LITTLE ROCK — 519 W. Seventh St., 72201 501-372-3040

CALIFORNIA

ANAHEIM — 540 South State College Blvd., 92806
714-772-4050
CHULA VISTA — 309 Broadway, 91911 619-420-6350
CONCORD — 1500 Monument Blvd., #C2, 94520
510-682-4880
FRESNO — 5412 North Blackstone Ave., 93710 209-435-0810
LONG BEACH — 2011 South St., 90805 310-422-5825
LOS ANGELES — 4820 South Eastern Ave., Suite "L" 90040
213-720-1834
RIVERSIDE — 6215 Magnolia Ave., Suite B, 92506
714-787-9700
SACRAMENTO — 2033 Fulton Ave., 95825 916-972-9090
SAN DIEGO — 9270 Clairmont Mesa Blvd., 92123
619-279-2011
SAN JOSE — 1185 South Bascom Ave., 95128 408-293-7350
SAN LEANDRO — 15206 East 14th St., 94578 510-276-1610
VAN NUYS — 14920 Victory Blvd., 91411 818-787-5531

COLORADO

DENVER — 1171 South Federal Blvd., Box 19220, 80219
303-922-8325

CONNECTICUT

HARTFORD — 662 Silas Deane Hwy., 06109 203-563-5800
ORANGE — 481 Boston Post Rd., 06477 203-795-3583

DISTRICT OF COLUMBIA

COLMAR MANOR, MD — 4153 Bladensburg Rd., 20710
301-779-3808
FALLS CHURCH, VA — 344 W. Broad St., 22046
703-533-7313

FLORIDA

FT. LAUDERDALE — 799 East Oakland Pk. Blvd., 33334
305-566-5102
FT. MYERS — 5224 Bank St., 33907 813-278-1188
JACKSONVILLE — 920 Cassat Ave., 32205 904-781-2253
MIAMI — 13345 North West Seventh Ave., 33168
305-681-6658
MIAMI — 12233 South Dixie Hwy., 33156 305-232-9497
ORLANDO — 3807 East Colonial Dr., 32803 407-894-7011
ST. PETERSBURG — 5635 49th St. North, 33709
813-525-0273
TAMPA — 3432 West Kennedy Blvd., 33609 813-872-8317
WEST PALM BEACH — 310 South Military Trail, 33415
407-689-3247

GEORGIA

ATLANTA (South) — 5330 Old National Hwy., 30349 404-762-8844
SMYRNA — 2550 Cobb Parkway South, 30080 404-956-0869
STONE MOUNTAIN — 5723 Memorial Dr., 30083 404-292-4714

HAWAII

HONOLULU — Unit No. 106, Sand Island Access Rd., 96819
808-847-7447

ILLINOIS

CHICAGO (Lincolnwood) — 6710 North Crawford Ave., 60646
708-673-0923
DES PLAINES — 1277 South Elmhurst Rd., 60018 708-364-5220
LISLE — 2950 Ogden Ave., Unit H, 60532 708-717-1075
MOLINE — 4433 23rd Ave., 61265 309-762-3000
OAK LAWN — 6343 W. 95th St., 60453 708-423-7212
WAUKEGAN — 31 S. Greenbay Rd., 60085 703-249-4390

INDIANA

EVANSVILLE — 307 First Ave., Crescent Ctr., 47710 812-425-4269
HAMMOND — 7103 Kennedy Ave., 46323 219-845-5100
INDIANAPOLIS (Speedway) — 5999 Crawfordsville Rd., 46224
317-243-8308

IOWA

DES MOINES — 3427 Merle Hay Rd., 50310 515-270-1340

KANSAS

WICHITA — 155 South West St., 67213 316-943-1271

KENTUCKY

LOUISVILLE — 5211 Preston Hwy., 40213 502-968-7100

LOUISIANA

BATON ROUGE — 11859 Florida Blvd., 70815 504-272-8111
HARVEY — 2500 Lapalco Blvd., 70058 504-366-8676
METAIRIE (New Orleans) — 3504 North Causeway Blvd., 70002
504-837-2550
SHREVEPORT — 7710-7714 Jewella Rd., 71108 318-688-1553

MARYLAND

BALTIMORE — 4712 Erdman Ave., 21205 410-485-5550
BALTIMORE — 29-31 Cranbrook Rd., Cockeysville, 21030
410-666-5966
COLMAR MANOR (Wash. D.C.) — 4153 Bladensburg Rd., 20722
301-779-3808
PASADENA — 8220 Ritchie Hwy., 21122 410-647-8456

MASSACHUSETTS

BRIGHTON (Boston) — 12 Market St., 02135 617-782-6264
SEEKONK — 120 Highland Ave., 02771 508-336-6510

MICHIGAN

GRAND RAPIDS — 3040 28th St., SE, 49512 616-949-8331
LANSING — 3205 W. Saginaw Hwy., 48917 517-323-4181
WARREN — 27035 Van Dyke Blvd., 48093 313-756-6711
WESTLAND — 8067 N. Wayne Rd., 48185 313-427-1520

MINNESOTA

BLOOMINGTON — 9517 Lyndale Ave., South, 55420 612-884-9191

MISSOURI

KANSAS CITY — 4324 Main St., 64111 **816-531-0629**
ST. ANN — 3637 North Lindbergh Blvd., 63074
314-739-4661
ST. LOUIS — 12852 Manchester Rd., 63131 **314-821-8740**

NEBRASKA

OMAHA — 4225 South 84th St., 68127 **402-592-5666**

NEVADA

LAS VEGAS — 3411 East Charleston Blvd., 89104
702-641-6555

NEW JERSEY

CHERRY HILL — 1444 East Marilton Pike (Rt. 70), 08034
609-429-2822
LITTLE FALLS — 1189 U.S. Hwy. 46, 07424 **201-256-9373**
SCOTCH PLAINS — 2520 Route #22 East, 07076 **908-233-5665**

NEW MEXICO

ALBUQUERQUE — 5617 Menaul Blvd., N.E., 87110
505-884-1002

NEW YORK

ALBANY (Latham) — 836 Troy-Schenectady Rd., 12110
518-785-1867
BUFFALO — 881 West Delavan Ave., 14209 **716-884-6220**
CENTEREACH L.I. — 2061-63 Middle Country Rd., 11720
516-737-4706
NEW YORK (Hicksville) — 259 South Broadway, Route 107, 11801
516-938-8180
NEW YORK (Manhattan) — 50 West 23rd St., 10010
212-929-6450
NEW YORK (Woodside) — 56-15 Queens Blvd., 11377
ROCHESTER — 2969 W. Henrietta Rd., 14623 **716-424-1310**
SYRACUSE — 3485 Erie Blvd., East, 13214 **315-446-3086**

NORTH CAROLINA

CHARLOTTE — 3007 East Independence Blvd., 28205
704-374-1779
GREENSBORO — 3716 High Point Rd., 27407 **919-852-1300**
RALEIGH — 2930 Capital Blvd., 27604 **919-878-0357**

OHIO

CINCINNATI — 2310 East Sharon Rd., 45241 **513-772-3111**
COLUMBUS — 3975 East Livingston Ave., 43227
614-237-0461
DAYTON — 2898 South Dixie Drive, 45409 **513-298-1951**
MAYFIELD HEIGHTS — 5881 Mayfield Rd., 44124
216-449-2770
PARMA HEIGHTS (Cleveland) — 6483 Pearl Rd., 44130
216-842-9100
TOLEDO — 3231 Dorr St., 43607 **419-531-8921**

OKLAHOMA

OKLAHOMA CITY — 1318 Linwood Blvd., 73106
405-232-7515
TULSA — 3120 S. Sheridan Rd, 74145 **918-622-5666**

OREGON

PORTLAND — 1640 NW Johnson St., 97209
503-228-8631

PENNSYLVANIA

ALLENTOWN (Whitehall) — 2242 MacArthur Rd., 18052
215-435-9544
EVANS CITY — Cranberry Town Center Plaza, 20808 Rt. 19 N., 16033
412-779-9600
HARRISBURG — 6080 Allentown Blvd., 17112 **717-545-0651**
LANCASTER — 118 Keller Ave., 17601 **717-393-5251**
PHILADELPHIA — 9977-81 Bustleton Ave., 19115
215-464-7771
PHILADELPHIA — 333 North 20th St., 19103 **215-564-5520**
PITTSBURGH — 5437 Baum Blvd., 15232 **412-362-2700**
WILKES-BARRE — 759 Kidder St., 18702 **717-824-5704**

PUERTO RICO

GUAYNABO — "C" Street # 14, Rexco Industrial Park, 00922-1924
809-783-3535

RHODE ISLAND

SEEKONK, MA — 120 Highland Ave., 02771 **508-336-6510**

SOUTH CAROLINA

GREENVILLE — 1557 Laurens Rd., 29607 **803-232-3038**

TENNESSEE

CHATTANOOGA — Perimeter Place Shopping Ctr., Sp. E, 6231 Perimeter Dr., 37421 **615-894-5957**
KNOXVILLE — 4118 North Broadway, 37917 **615-688-0921**
MEMPHIS — 1085 East Brooks Rd., 38116 **901-332-3444**
NASHVILLE — 4811 Nolensville Rd., 37211 **615-833-8277**

TEXAS

AMARILLO — 3008 West 6th Ave., 79106 **806-373-1531**
AUSTIN — 6549 Burnet Rd., 78757 **512-459-1133**
DALLAS — 2257 Royal Lane, 75229 **214-620-8655**
EL PASO — 6822 Gateway East, 79915 **915-778-9769**
FORT WORTH — 721 North Beach St., 76111 **817-831-3828**
GARLAND — 78 West Centerville Rd., 75043 **214-686-9302**
HOUSTON — 536 East Tidwell Rd., 77022 **713-692-7111**
SAN ANTONIO — 500 Culebra Ave., 78201 **210-732-1221**
WEBSTER — 100 East Nasa Road One, Ste. 75, 77598 **713-338-4556**

UTAH

SALT LAKE CITY — 1541 S. Third West St., 84115 **801-486-5828**

VIRGINIA

FALLS CHURCH — 344 W. Broad St., 22046 **703-533-7313**
HAMPTON — 3416 W. Mercury Blvd., 23666 **804-826-9382**
NORFOLK — 7631 Sewells Point Rd., 23513 **804-480-3333**
RICHMOND — 1424 Chamberlayne Ave., 23222 **804-649-9245**

WASHINGTON

SEATTLE — 421 S. Michigan, 98108 **206-763-2010**
SPOKANE — N. 7011 Division St., 99208 **509-467-8190**
TACOMA — 2602 S. 38th St., 98409 **206-473-6040**

WEST VIRGINIA

CHARLESTON — 1638 Sixth Ave., 25312 **304-343-0289**

WISCONSIN


MILWAUKEE (Wauwatosa) — 10424 W. Bluemound Rd., 53226
414-453-4240

REV: 3/95



750 Watts, 6.25 Amps, 120 V, 60 Hz
Listed by Underwriters Laboratories Inc.
Copyright © 1993, 1995 Black & Decker
Printed in U.S.A.
Pub. No. 168631-16-RV00

The Spacemaker* Optima™ Line

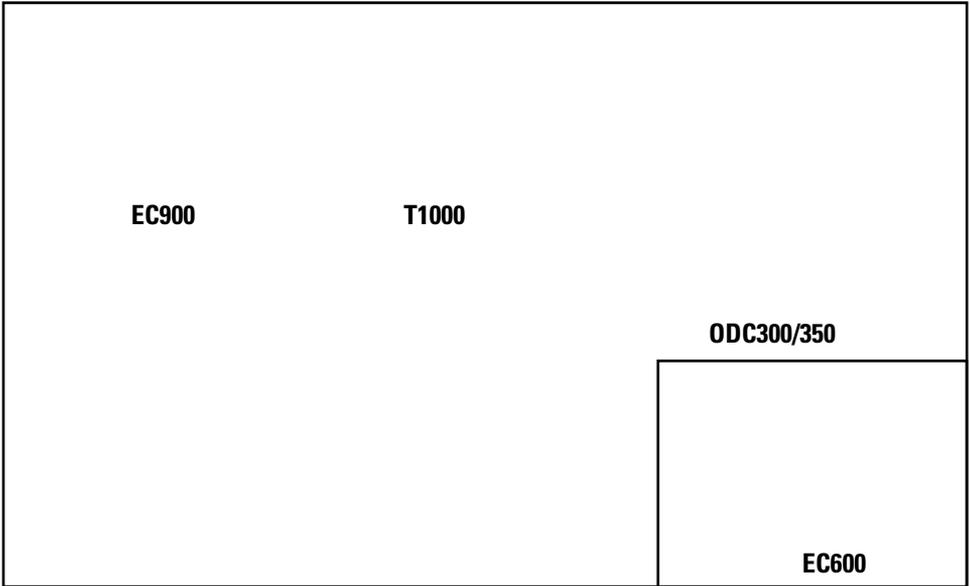

The full line of Spacemaker* Optima™ appliances is smartly designed to look as good as it works.

The SPACEMAKER* OPTIMA™ Hideaway Can Opener: EC600

Tucks away for a clean look and easy access. **Length - 7-3/8"**

The SPACEMAKER* OPTIMA™ Hideaway Can Opener/Knife Sharpener: EC900

Quiet powerful motor with Automatic Shut-Off features a built-in knife sharpener. **Length - 8-3/8"**

The SPACEMAKER* OPTIMA™ Horizontal Toaster: T1000

A different angle on toasting, it's always handy to toast a wide range of toaster foods. **Length - 16-1/4"**

The SPACEMAKER* OPTIMA™ Coffeemaker:

Models ODC300/ODC350

Digital Clock/Timer Models brew up to 12 cups of coffee and have many different features to choose from. **Length 14-11/32"**

The SPACEMAKER* OPTIMA™ Coffeemaker Model ODC150

Lighted-on Indicator model brews up to 12 cups of coffee.

Length 14-11/32"

*Trademark of General Electric Company, U.S.A.