

TEST RUN SERVICE MANUAL



R410A

W-2WAY ECO-i MULTI SYSTEM



■ R410A Models

Indoor Units

	Class	7	9	12	18	24	36	48
X	4-Way Air Discharge Semi-Concealed			XHX1252	XHX1852	XHX2452	XHX3652	
A	1-Way Air Discharge Semi-Concealed	AHX0752	AHX0952	AHX1252				
U	Concealed-Duct	UHX0752		UHX1252	UHX1852	UHX2452	UHX3652	
D	Concealed-Duct High-Static Pressure						DHX3652	DHX4852
T	Ceiling-Mounted			THX1252	THX1852	THX2452		
K	Wall-Mounted	KHX0752	KHX0952	KHX1252	KHX1852	KHX2452		

Outdoor Units

	Class	90	140
C	ECO-i W-2WAY	CHDX09053	CHDX14053

Section

1

2

3

4

5

6

IMPORTANT!

Please Read Before Starting

This air conditioning system meets strict safety and operating standards. As the installer or service person, it is an important part of your job to install or service the system so it operates safely and efficiently.

For safe installation and trouble-free operation, you must:

- Carefully read this instruction booklet before beginning.
- Follow each installation or repair step exactly as shown.
- Observe all local, state, and national electrical codes.
- This product is intended for professional use.
Permission from the power supplier is required when installing an outdoor unit that is connected to a 16 A distribution network.
- Pay close attention to all warning and caution notices given in this manual.



WARNING

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



CAUTION

This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.

If Necessary, Get Help

These instructions are all you need for most installation sites and maintenance conditions. If you require help for a special problem, contact our sales/service outlet or your certified dealer for additional instructions.

In Case of Improper Installation

The manufacturer shall in no way be responsible for improper installation or maintenance service, including failure to follow the instructions in this document.

SPECIAL PRECAUTIONS

WARNING When Wiring



ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH. ONLY A QUALIFIED, EXPERIENCED ELECTRICIAN SHOULD ATTEMPT TO WIRE THIS SYSTEM.

- Do not supply power to the unit until all wiring and tubing are completed or reconnected and checked.
- Highly dangerous electrical voltages are used in this system. Carefully refer to the wiring diagram and these instructions when wiring. Improper connections and inadequate grounding can cause **accidental injury or death**.
- **Ground the unit** following local electrical codes.
- Connect all wiring tightly. Loose wiring may cause overheating at connection points and a possible fire hazard.

When Transporting

Be careful when picking up and moving the indoor and outdoor units. Get a partner to help, and bend your knees when lifting to reduce strain on your back. Sharp edges or thin aluminum fins on the air conditioner can cut your fingers.

When Installing...

... In a Room

Properly insulate any tubing run inside a room to prevent “sweating” that can cause dripping and water damage to walls and floors.

... In Moist or Uneven Locations

Use a raised concrete pad or concrete blocks to provide a solid, level foundation for the outdoor unit. This prevents water damage and abnormal vibration.

... In an Area with High Winds

Securely anchor the outdoor unit down with bolts and a metal frame. Provide a suitable air baffle.

... In a Snowy Area (for Heat Pump-type Systems)

Install the outdoor unit on a raised platform that is higher than drifting snow. Provide snow vents.

When Connecting Refrigerant Tubing

- Ventilate the room well, in the event that is refrigerant gas leaks during the installation. Be careful not to allow contact of the refrigerant gas with a flame as this will cause the generation of poisonous gas.
- Keep all tubing runs as short as possible.
- Use the flare method for connecting tubing.
- Apply refrigerant lubricant to the matching surfaces of the flare and union tubes before connecting them, then tighten the nut with a torque wrench for a leak-free connection.
- Check carefully for leaks before starting the test run.

NOTE

Depending on the system type, liquid and gas lines may be either narrow or wide. Therefore, to avoid confusion the refrigerant tubing for your particular model is specified as either “narrow” or “wide” than as “liquid” or “gas.”

When Servicing

- Turn the power OFF at the main power box (mains) before opening the unit to check or repair electrical parts and wiring.
- Keep your fingers and clothing away from any moving parts.
- Clean up the site after you finish, remembering to check that no metal scraps or bits of wiring have been left inside the unit being serviced.



CAUTION

- Ventilate any enclosed areas when installing or testing the refrigeration system. Escaped refrigerant gas, on contact with fire or heat, can produce dangerously toxic gas.
- Confirm after installation that no refrigerant gas is leaking. If the gas comes in contact with a burning stove, gas water heater, electric room heater or other heat source, it can cause the generation of poisonous gas.

Check of Density Limit

The room in which the air conditioner is to be installed requires a design that in the event of refrigerant gas leaking out, its density will not exceed a set limit.

The refrigerant (R410A), which is used in the air conditioner, is safe, without the toxicity or combustibility of ammonia, and is not restricted by laws imposed to protect the ozone layer. However, since it contains more than air, it poses the risk of suffocation if its density should rise excessively. Suffocation from leakage of refrigerant is almost non-existent. With the recent increase in the number of high density buildings, however, the installation of multi air conditioner systems is on the increase because of the need for effective use of floor space, individual control, energy conservation by curtailing heat and carrying power, etc.

Most importantly, the multi air conditioner system is able to replenish a large amount of refrigerant compared to conventional individual air conditioners. If a single unit of the multi air conditioner system is to be installed in a small room, select a suitable model and installation procedure so that if the refrigerant accidentally leaks out, its density does not reach the limit (and in the event of an emergency, measures can be made before injury can occur).

In a room where the density may exceed the limit, create an opening with adjacent rooms, or install mechanical ventilation combined with a gas leak detection device. The density is as given below.

Total amount of refrigerant (lbs)


$$\text{Min. volume of the indoor unit installed room (ft.}^3\text{)} \leq \text{Density limit (oz/ft.}^3\text{)}$$

The density limit of refrigerant which is used in multi air conditioners is 0.3 oz/ft.³ (ISO 5149).

NOTE

1. If there are 2 or more refrigerating systems in a single refrigerating device, the amount of refrigerant should be as charged in each independent device.

For the amount of charge in this example:

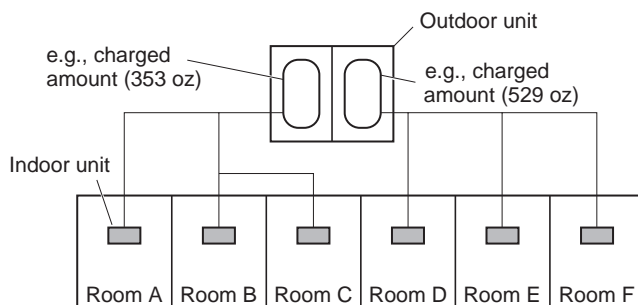


The possible amount of leaked refrigerant gas in rooms A, B and C is 353 oz.


The possible amount of leaked refrigerant gas in rooms D, E and F is 529 oz.

2. The standards for minimum room volume are as follows.


- (1) No partition (shaded portion)

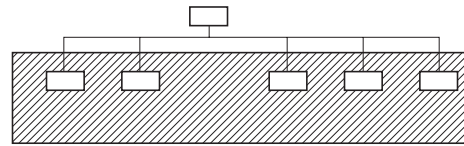


- (2) When there is an effective opening with the adjacent room for ventilation of leaking refrigerant gas (opening without a door, or an opening 0.15% or larger than the respective floor spaces at the top or bottom of the door).

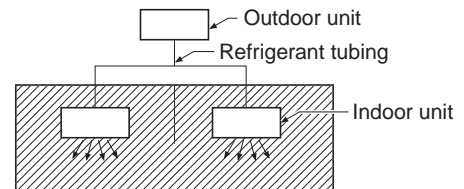


- (3) If an indoor unit is installed in each partitioned room and the refrigerant tubing is interconnected, the smallest room of course becomes the object. But when mechanical ventilation is installed interlocked with a gas leakage detector in the smallest room where the density limit is exceeded, the volume of the next smallest room becomes the object.

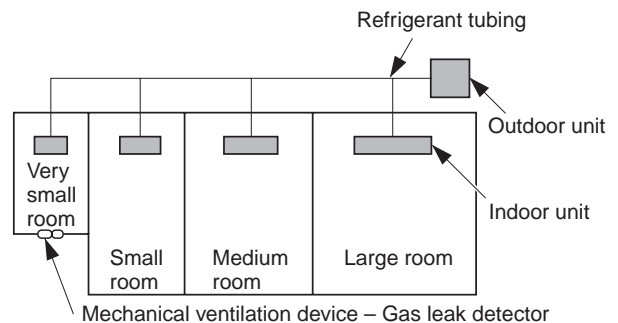

3. The minimum indoor floor space compared with the amount of refrigerant is roughly as follows: (When the ceiling is 8.8 ft. high)

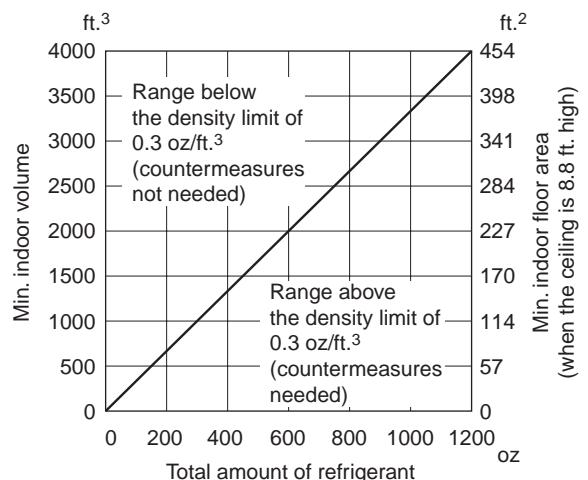

Contents

Section 1: TEST RUN	1-1
1. Test Run	1-2
2. Setting of Unit Control PCB	1-4
3. Auto Address Setting	1-6
4. Remote Controller Test Run Settings	1-12
5. Caution for Pump Down	1-13
6. Meaning of Alarm Messages	1-14
Section 2: REMOTE CONTROL FUNCTIONS	2-1
1. Main Operating Functions	2-2
2. Wireless Remote Controller	2-4
3. Timer Remote Controller (RCS-TM80BG)	2-15
Section 3: TROUBLE DIAGNOSIS	3-1
1. Contents of Remote Controller Switch Alarm Display	3-2
2. Outdoor Unit Control PCB LED Display	3-4
3. W-2WAY ECO-i Alarm Codes	3-5
4. Blinking  (Inspection) Display on the Remote Controller	3-22
Section 4: PCB AND FUNCTIONS	4-1
1. Outdoor Unit Control PCB	4-2
2. Indoor Unit Control PCB	4-6
Section 5: SELF-DIAGNOSIS FUNCTION TABLE	5-1
1. Self-Diagnosis Function Table	5-2
Section 6: SERVICE CHECKER	6-1
1. Outdoor Unit Maintenance Remote Controller	6-2

Contents

1. TEST RUN

1. Test Run.....1-2

1. Preparing for Test Run.....1-2

2. Test Run Procedure.....1-3

2. Setting of Unit Control PCB.....1-4

1. Main Outdoor Unit PCB Setting.....1-4

3. Auto Address Setting1-6

1. Auto Address Setting.....1-6

4. Remote Controller Test Run Setting1-12



5. Caution for Pump Down.....1-13

6. Meaning of Alarm Messages1-14

1. Test Run

1. Preparing for Test Run

- Before attempting to start the air conditioner, check the following.
 - (1) All loose matter is removed from the cabinet, especially steel filings, bits of wire, and clips.
 - (2) The control wiring is correctly connected and all electrical connections are tight.
 - (3) The protective spacers for the compressor used for transportation have been removed. If not, remove them now.
 - (4) The transportation pads for the indoor fan have been removed. If not, remove them now.
 - (5) The power has been connected to the unit for at least 5 hours before starting the compressor. The bottom of the compressor should be warm to the touch and the crankcase heater around the feet of the compressor should be hot to the touch.
 - (6) Both the gas and liquid tube service valves are open. If not, open them now.
 - (7) Request that the customer be present for the trial run. Explain the contents of the instruction manual, then have the customer actually operate the system.
 - (8) Be sure to give the instruction manual and warranty certificate to the customer.
 - (9) When replacing the control PCB, be sure to make all the same settings on the new PCB as were in use before replacement.
The existing EEPROM is not changed, and is connected to the new control PCB.

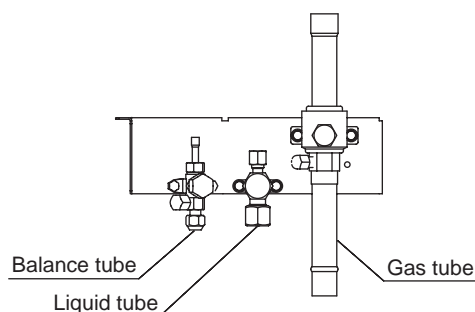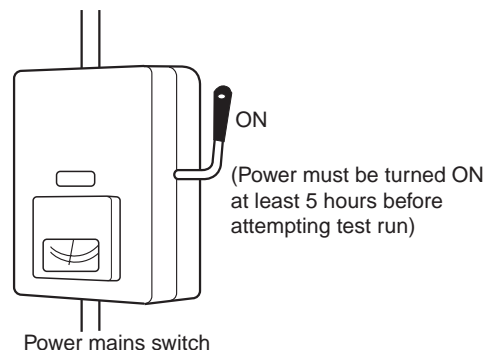


2. Test Run Procedure



1. Turn the remote power switch on at least 5 hours before the test, in order to energize the crankcase heater.
2. After performing the leak inspection, applying vacuum, and performing refrigerant charge for the tubing which is connected on-site, fully open the outdoor unit service valve. However if only one outdoor unit is installed, a balance tube is not used. Therefore, leave the valve fully closed.
3. When replacing the control PCB, be sure that the settings on the new PCB match those on the old PCB.
4. Use caution when making the settings. If there are duplicated system addresses, or if the settings for the Nos. of the indoor units are not consistent, an alarm will occur and the system will not start.
5. These settings are not made on the indoor unit PCB.





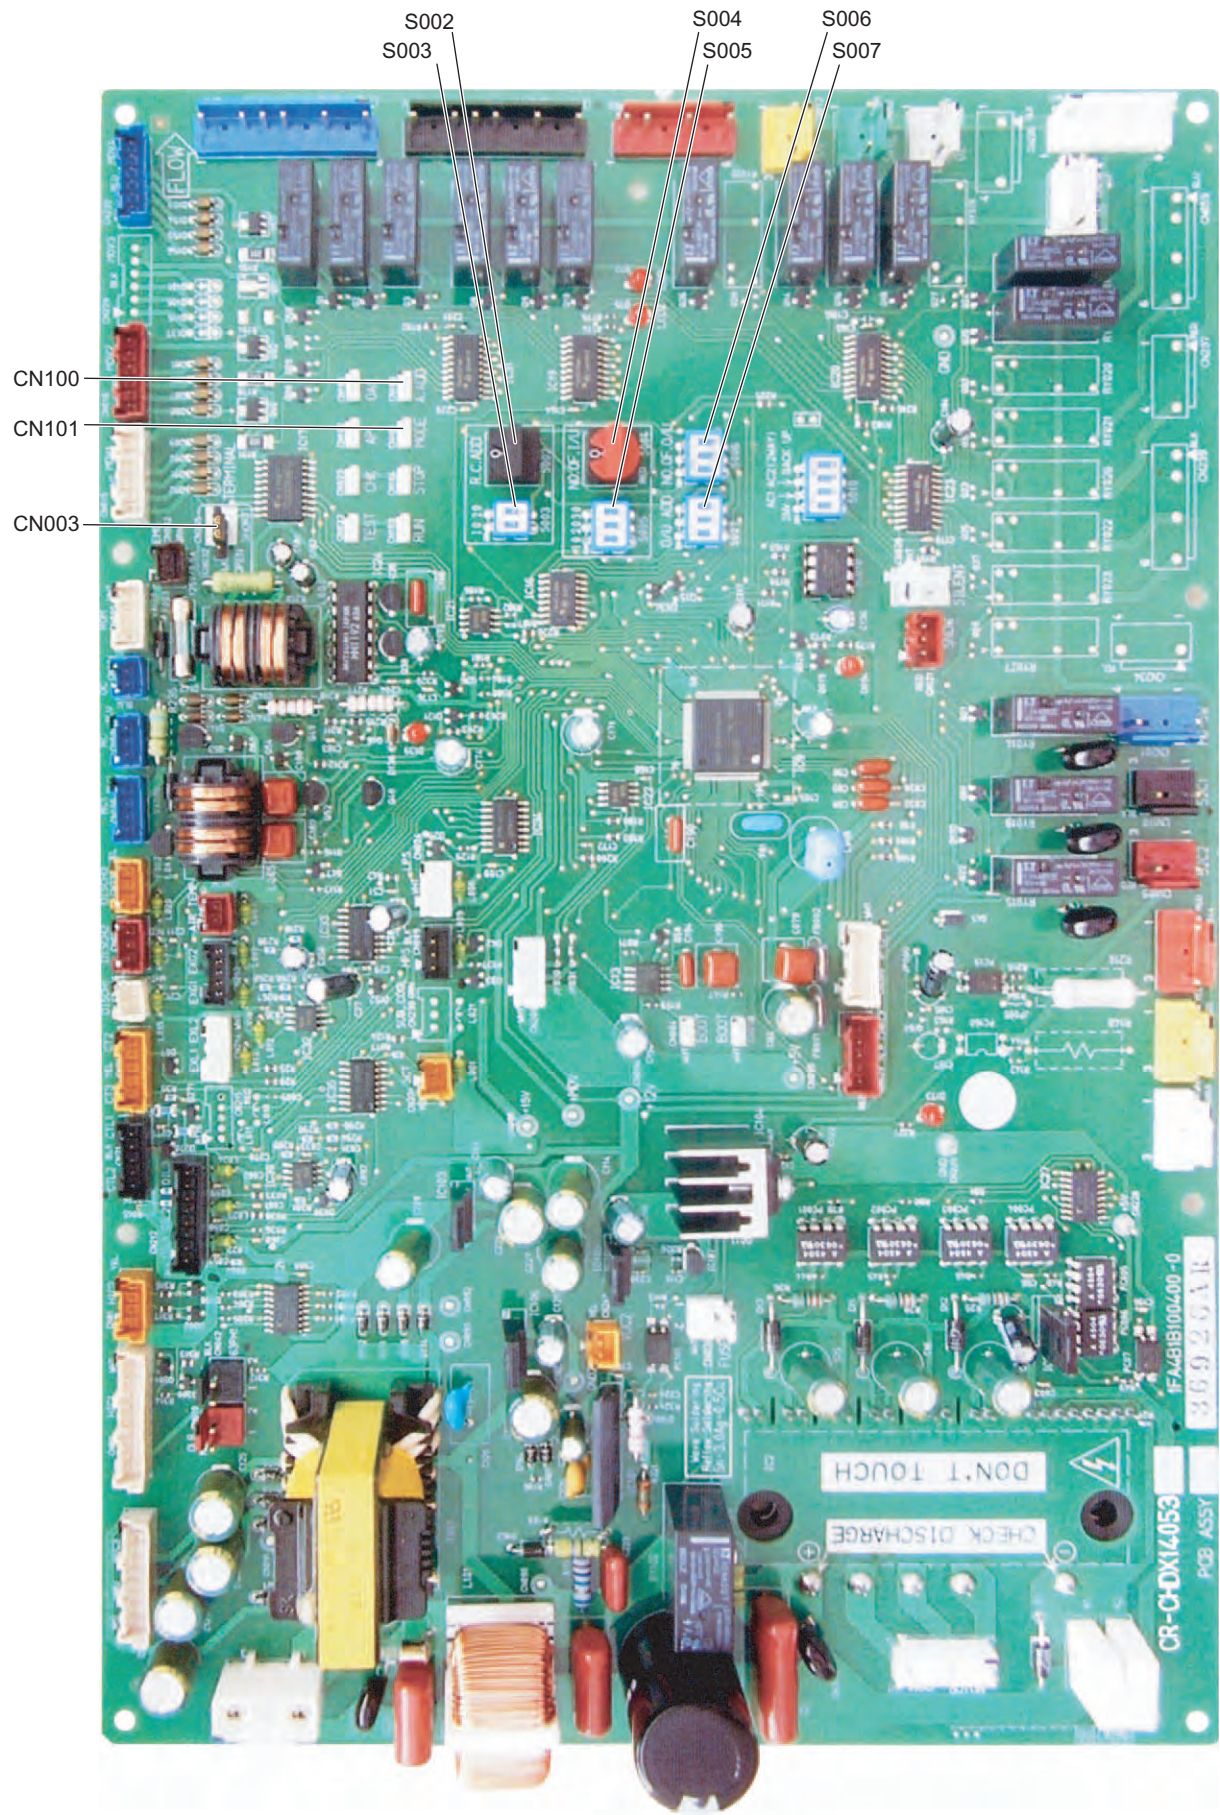





2. Setting of Unit Control PCB

1. Main Outdoor Unit PCB Setting











2. Setting of Unit Control PCB




● Examples of the No. of indoor units settings (S005, S004)

No. of indoor units	Indoor unit setting (S005) (3P DIP switch, blue) 10 20 30	Indoor unit setting (S004) (Rotary switch, red)
1 unit (factory setting)	All OFF 	 Set to 1
11 units	1 ON 	 Set to 1
21 units	2 ON 	 Set to 1
31 units	3 ON 	 Set to 1
40 units	1 & 3 ON 	 Set to 0


● Examples of refrigerant circuit (R.C.) address settings (required when link wiring is used) (S003, S002)

System address No.	System address (S003) (2P DIP switch, blue) 10 20	System address (S002) (Rotary switch, black)
System 1 (factory setting)	Both OFF 	 Set to 1
System 11	1 ON 	 Set to 1
System 21	2 ON 	 Set to 1
System 30	1 & 2 ON 	 Set to 0



● Examples of the No. of outdoor units settings (S006)

No. of outdoor units	Outdoor unit setting (S006) (3P DIP switch, blue)
1 unit (factory setting)	1 ON 
2 units	2 ON 
3 units	1 & 2 ON 

● Address setting of main outdoor unit (S007)

Unit No. setting	Address setting of outdoor unit (S007) (3P DIP switch, blue)
Unit No. 1 (main unit) (factory setting)	

● Address setting of sub outdoor unit

Unit No. setting	Address setting of outdoor unit (S007) (3P DIP switch, blue)
Unit No. 2 (sub unit) (factory setting)	2 ON 
Unit No. 3 (sub unit)	1 & 2 ON 

The sub unit control PCB contains the same switches as the main unit control PCB for No. of indoor units, No. of outdoor units, and system address. However it is not necessary to set these switches.

3. Auto Address Setting


1. Auto Address Setting

Basic wiring diagram: Example (1)

- If link wiring is not used

(The inter-unit control wires are not connected to multiple refrigerant systems.)


Indoor unit addresses can be set without operating the compressors.

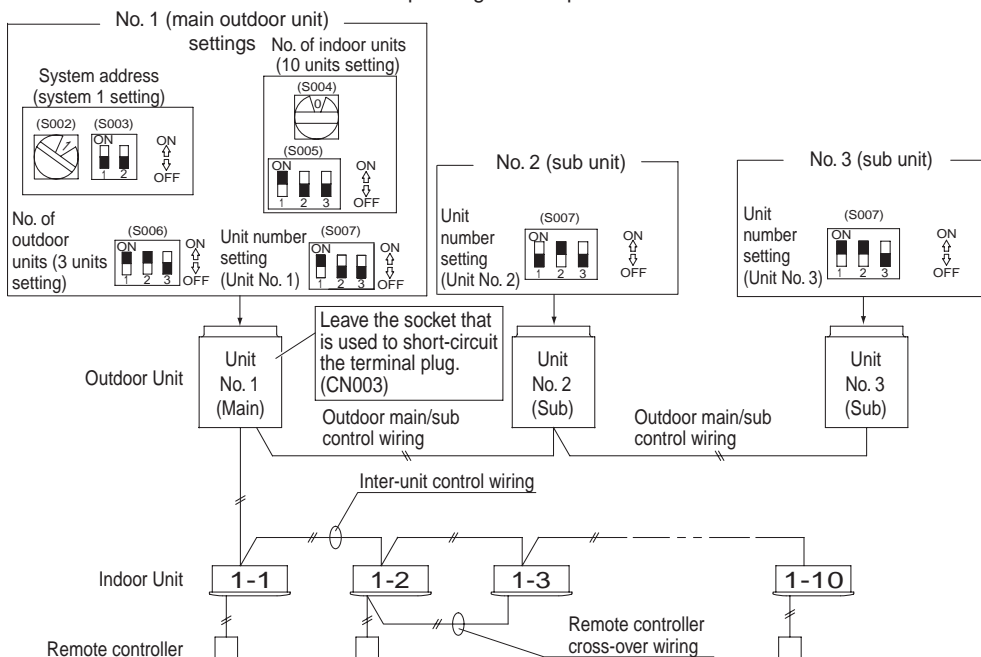


Case 1

(1) Automatic Address Setting from the Outdoor Unit

1. To set the number of outdoor units, on the outdoor main unit control PCB set the No. of outdoor units DIP switch (S006) to




(3 units), and set the unit No. DIP switch (S007) to




(unit No. 1 - main outdoor unit).

2. On the No. 2 (sub) unit control PCB, set the unit No. switch (S007) to




(unit No. 2).

On the No. 3 (sub) unit control PCB, set the unit No. switch (S007) to




(unit No. 3).

3. On the outdoor main unit control PCB, check that the system address rotary switch (S002) is set to "1" and that the DIP switch (S003) is set to



"0." (These are the settings at the time of factory shipment.)

4. To set the number of indoor units that are connected to the outdoor unit to 10, on the outdoor main unit control PCB set the No. of indoor units DIP switch (S005) to



"1." and set the rotary switch (S004) to "0."

5. Turn ON the power to the indoor and outdoor units.

6. On the outdoor main unit control PCB, short-circuit the automatic address pin (CN100) for 1 second or longer, then release it.

(Communication for automatic address setting begins.)

- * To cancel, again short-circuit the automatic address pin (CN100) for 1 second or longer, then release it. The LED that indicates that automatic address setting is in progress turns OFF and the process is stopped. Be sure to perform automatic address setting again.

(Automatic address setting is completed when LEDs 1 and 2 on the outdoor main unit control PCB turn OFF.)


7. Operation from the remote controllers is now possible.

* To perform automatic address setting from the remote controller, perform steps 1 to 5, then use the remote controller and complete automatic address setting.

- Refer to "Automatic Address Setting from the Remote Controller."

3. Auto Address Setting

Basic wiring diagram: Example (2)

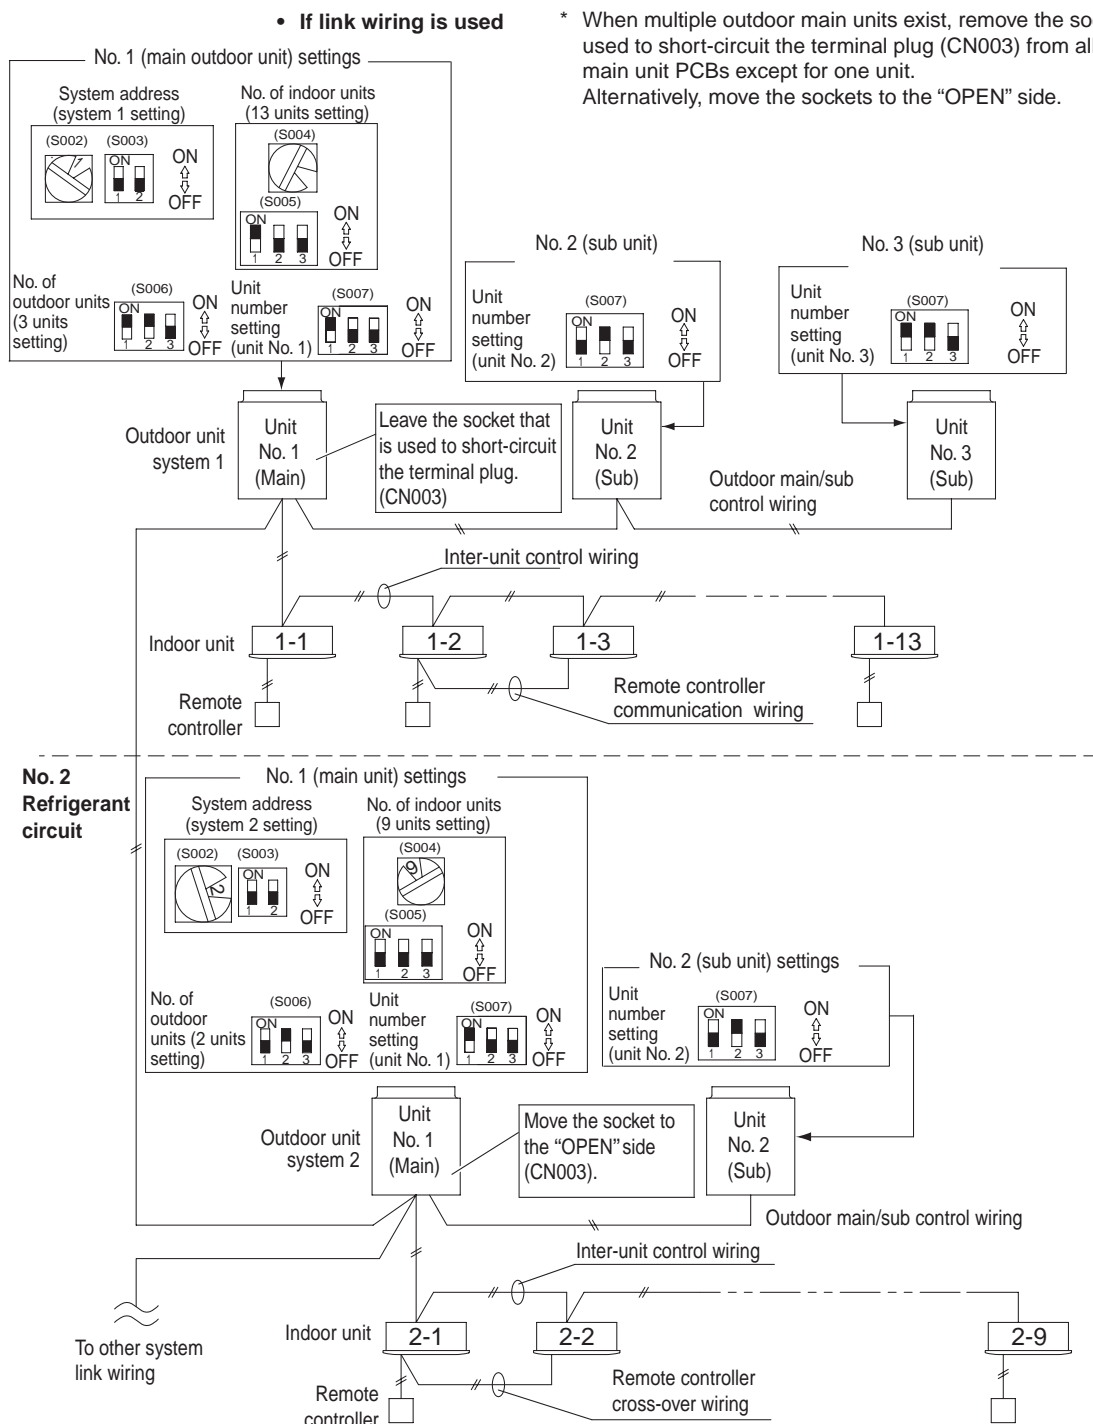

Make settings as appropriate for the cases listed below.
(Refer to the instructions on the following pages.)

- Indoor and outdoor unit power can be turned ON for each system separately. → Case 2
- Indoor and outdoor unit power cannot be turned ON for each system separately.
 - Automatic address setting in Heating mode → Case 3A
 - Automatic address setting in Cooling mode → Case 3B


3. Auto Address Setting


Case 2 Automatic Address Setting (no compressor operation)

- Indoor and outdoor unit power can be turned ON for each system separately.
Indoor unit addresses can be set without operating the compressors.


Automatic Address Setting from Outdoor Unit



- On the No. 1 (main) unit control PCB, set the unit No. switch (S007) to  (unit No. 1).



On the No. 2 (sub) unit control PCB, set the unit No. switch (S007) to  (unit No. 2).

On the No. 3 (sub) unit control PCB, set the unit No. switch (S007) to  (unit No. 3).

- To set the number of outdoor units on the outdoor main unit control PCB, set the No. of outdoor units DIP switch (S006) to



- On the outdoor main unit control PCB, check that the system address rotary switch (S002) is set to "1" and that the DIP switch (S003) is set to "0"  . (These are the settings at the time of factory shipment.)

- To set the number of indoor units that are connected to the outdoor unit to 13, on the outdoor main unit control PCB set the No. of indoor units DIP switch (S005) to "1"  , and set the rotary switch (S004) to "3."

- Turn on power to all indoor and outdoor units in the system.

- Short-circuit the automatic address pin at the outdoor main unit (CN100) for 1 second or longer, then release it.



(Communication for automatic address setting begins.)



* To cancel, again short-circuit the automatic address pin (CN100) for 1 second or longer, then release it.
The LED that indicates automatic address setting is in progress turns OFF and the process is stopped. Be sure to perform automatic address setting again.

(Automatic address setting is completed when LEDs 1 and 2 on the outdoor main unit control PCB turn OFF.)



- Next turn the power ON only for the indoor and outdoor units of the next (different) system. Repeat steps 1 - 5 in the same way to complete automatic address settings for all systems.



- Operation from the remote controllers is now possible.

* To perform automatic address setting from the remote controller, perform steps 1 - 5, then use the remote controller and complete automatic address setting.

- Refer to "Automatic Address Setting from Remote Controller."

3. Auto Address Setting

Case 3A Automatic Address Setting in Heating Mode

- Indoor and outdoor unit power cannot be turned ON for each system separately. In the following, automatic setting of indoor unit addresses is not possible if the compressors are not operating. Therefore perform this process only after completing all refrigerant tubing work.

Automatic Address Setting from Outdoor Unit

1. Perform steps 1 - 4 in the same way as for **Case 2**.
 5. Turn the indoor and outdoor unit power ON at all systems.
- ↓
6. To perform automatic address setting in **Heating mode**, on the outdoor main unit control PCB in the refrigerant system where you wish to set the addresses, short-circuit the automatic address pin (CN100) for 1 second or longer, then release it. (Be sure to perform this process for one system at a time. Automatic address settings cannot be performed for more than one system at the same time.)
- ↓
- (Communication for automatic address setting begins, the compressors turn ON, and automatic address setting in Heating mode begins.)
(All indoor units operate.)
- ↓
- * To cancel, again short-circuit the automatic address pin (CN100) for 1 second or longer, then release it. The LED that indicates automatic address setting is in progress turns OFF and the process is stopped. Be sure to perform automatic address setting again.
- (Automatic address setting is completed when the compressors stop and LED 1 and 2 on the main unit control PCB turn OFF.)
- ↓
7. At the outdoor main unit in the next (different) system, short-circuit the automatic address pin (CN100) for 1 second or longer, then release it.
- ↓
- (Repeat the same steps to complete automatic address setting for all units.)
- ↓
8. Operation from the remote controllers is now possible.
- * To perform automatic address setting from the remote controller, perform steps 1 - 5, then use the remote controller and to complete automatic address setting.
- Refer to "Automatic Address Setting from Remote Controller."

3. Auto Address Setting

Case 3B Automatic Address Setting in Cooling Mode

- Indoor and outdoor unit power cannot be turned ON for each system separately. In the following, automatic setting of indoor unit addresses is not possible if the compressors are not operating. Therefore perform this process only after completing all refrigerant tubing work.

Automatic address setting can be performed during Cooling operation.

Automatic Address Setting from Outdoor Unit

- Perform steps 1 - 4 in the same way as for **Case 2**.

- Turn the indoor and outdoor unit power ON at all systems.



- To perform automatic address setting in **Cooling mode**, on the outdoor main unit control PCB in the refrigerant system where you wish to set the addresses, short-circuit the mode change 2P pin (CN101). At the same time, short-circuit the automatic address pin (CN100) for 1 second or longer, then release it. (Be sure to perform this process for one system at a time. Automatic address settings cannot be performed for more than one system at the same time.)



(Communication for automatic address setting begins, the compressors turn ON, and automatic address setting in Cooling mode begins.)

(All indoor units operate.)



- * To cancel, again short-circuit the automatic address pin (CN100) for 1 second or longer, then release it. The LED that indicates automatic address setting is in progress turns OFF and the process is stopped. Be sure to perform automatic address setting again.

(Automatic address setting is completed when the compressors stop and LED 1 and 2 on the outdoor main unit control PCB turn OFF.)



- At the outdoor main unit in the next (different) system, short-circuit the automatic address pin (CN100) for 1 second or longer, then release it.



(Repeat the same steps to complete automatic address setting for all units.)



- Operation from the remote controllers is now possible.

* Automatic address setting in Cooling mode cannot be done from the remote controller.

Automatic Address Setting* from the Remote Controller

Selecting each refrigerant system individually for automatic address setting

---Automatic address setting for each system: Item code "A1."

- Press the remote controller timer time button and button at the same time.
(Press and hold for 4 seconds or longer.)
- Next, press either the temperature setting or button. (Check that the item code is "A1.")
- Use either the **UNIT** or button to set the system No. to perform automatic address setting.
- Then press the **SET** button.

(Automatic address setting for one refrigerant system begins.)

(When automatic address setting for one system is completed, the system returns to normal stopped status.) <Approximately 4 - 5 minutes is required.>

(During automatic address setting, "NOW SETTING" is displayed on the remote controller. This message disappears when automatic address setting is completed.)

- Repeat the same steps to perform automatic address setting for each successive system.



3. Auto Address Setting

Display during automatic address setting

- On outdoor main unit PCB



Blink alternately

* Do not short-circuit the automatic address setting pin (CN100) again while automatic address setting is in progress. Doing so will cancel the setting operation and will cause LED 1 and 2 to turn OFF.

- * When automatic address setting has been successfully completed, both LED 1 and 2 turn OFF.
- * LED 1 is D72. LED 2 is D75.
- * If automatic address setting is not completed successfully, refer to the table below and correct the problem. Then perform automatic address setting again.


- Display of LED 1 and 2 on the outdoor unit control PCB

(☀: ON ☀: Blinking ●: OFF)

LED1	LED2	Display meaning
☀	☀	After the power is turned ON (and automatic address setting is not in progress), no communication with the indoor units in that system is possible.
●	☀	After the power is turned ON (and automatic address setting is not in progress), 1 or more indoor units are confirmed in that system; however, the number of indoor units does not match the number that was set.
☀	☀	Automatic address setting is in progress.
Alternating	Alternating	
●	●	Automatic address setting completed.
☀	☀	At time of automatic address setting, the number of indoor units did not match the number that was set. "⚠"(when indoor units are operating) indication appears on the display.
Simultaneous	Simultaneous	
☀	☀	Refer to "Table of Self-Diagnostic Functions and Description of Alarm Displays."
Alternating	Alternating	

Note: "⚠" indicates that the solenoid is fused or that there is a CT detection current failure (current is detected when the compressor is OFF).

- Remote controller display

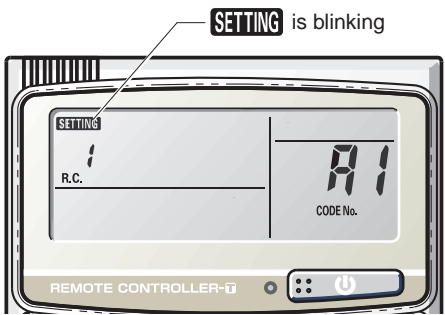

3. Auto Address Setting

4. Remote Controller Test Run Settings

Request concerning recording the indoor/outdoor unit combination Nos.

After automatic address setting has been completed, be sure to record them for future reference.

List the outdoor main unit system address and the addresses of the indoor units in that system in an easily visible location (next to the nameplate), using a permanent marking pen or similar means that cannot be abraded easily.




Example: (Outdoor) 1 - (Indoor) 1-1, 1-2, 1-3... (Outdoor) 2 - (Indoor) 2-1, 2-2, 2-3...

These numbers are necessary for later maintenance. Please be sure to indicate them.




Checking the indoor unit addresses


Use the remote controller to check the indoor unit address.

<If 1 indoor unit is connected to 1 remote controller>

1. Press and hold the  button and  button for 4 seconds or longer (simple settings mode).
2. The address is displayed for the indoor unit that is connected to the remote controller.
(Only the address of the indoor unit that is connected to the remote controller can be checked.)
3. Press the  button again to return to normal remote controller mode.




<If multiple indoor units are connected to 1 remote controller (group control)>

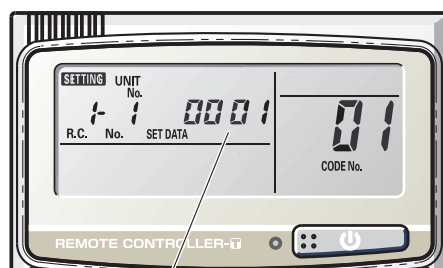1. Press and hold the  button and  button for 4 seconds or longer (simple settings mode).
2. "ALL" is displayed on the remote controller.
3. Next, press the **UNIT** button.
4. The address is displayed for 1 of the indoor units which is connected to the remote controller. Check that the fan of that indoor unit starts and that air is discharged.
5. Press the **UNIT** button again and check the address of each indoor unit in sequence.
6. Press the  button again to return to normal remote controller mode.



Number changes to indicate which indoor unit is currently selected.

4. Remote Controller Test Run Settings

1. Press the remote controller  button for 4 seconds or longer. Then press the  button.
 - "TEST RUN" appears on the LCD display while the test run is in progress.
 - The temperature cannot be adjusted when in Test Run mode.
(This mode places a heavy load on the machines. Therefore use it only when performing the test run.)
 2. The test run can be performed using the HEAT, COOL, or FAN operation modes.
Note: The outdoor units will not operate for approximately 3 minutes after the power is turned ON and after operation is stopped.
 3. If correct operation is not possible, a code is displayed on the remote controller LCD display.
(Refer to "Table of Self-Diagnostic Functions" and correct the problem.)
 4. After the test run is completed, press the  button again. Check that "TEST RUN" disappears from the LCD display. (To prevent continuous test runs, this remote controller includes a timer function that cancels the test run after 60 minutes.)
- * If the test run is performed using the wired remote controller, operation is possible even if the cassette-type ceiling panel has not been installed. ("P09" display does not occur.)

5. Caution for Pump Down

5. Caution for Pump Down

Pump down means refrigerant gas in the system is returned to the outdoor unit. Pump down is used when the unit is to be moved, or before servicing the refrigerant circuit.



CAUTION

- This outdoor unit cannot collect more than the rated refrigerant amount as shown by the nameplate on the back.
- If the amount of refrigerant is more than that recommended, do not conduct pump down. In this case use another refrigerant collecting system.

6. Meaning of Alarm Messages

6. Meaning of Alarm Messages

Table of Self-Diagnostics Functions and Description of Alarm Displays

Alarm messages are indicated by the blinking of LED 1 and 2 (D72, D75) on the outdoor unit PCB. They are also displayed on the wired remote controller.

- Viewing the LED 1 and 2 (D72 and D75) alarm displays

LED1	LED2	Alarm contents
☼	☼	Alarm Display
Alternating		LED 1 blinks M times, then LED 2 blinks N times. The cycle then repeats. M = 2: P alarm 3: H alarm 4: E alarm 5: F alarm 6: L alarm N = Alarm No. Example: LED 1 blinks 2 times, then LED 2 blinks 17 times. The cycle then repeats. Alarm is "P17".

(☼ : Blinking) Connect the outdoor maintenance remote controller to the RC socket on the outdoor main unit control PCB (3P, blue), and check the Alarm Messages on the remote controller display.

Possible cause of malfunction			Alarm Message
Serial communication errors Mis-setting	Remote controller is detecting error signal from indoor unit.	Error in receiving serial communication signal. (Signal from main indoor unit in case of group control) Ex: Auto address is not completed.	<E01>
		Error in transmitting serial communication signal.	<E02>
	Indoor unit is detecting error signal from remote controller (and system controller).		<<E03>>
	Indoor unit is detecting error signal from main outdoor unit.	Error in receiving serial communication signal. When turning on the power supply, the number of connected indoor units does not correspond to the number set. (Except R.C. address is "0.")	E04
		Error of the main outdoor unit in receiving serial communication signal from the indoor unit.	<E06>
	Improper setting of indoor unit or remote controller.	Indoor unit address setting is duplicated.	E08
		Remote controller address connector (RCU. ADR) is duplicated. (Duplication of main remote controller)	<<E09>>
	During auto address setting, number of connected units does not correspond to number set. When turning on the power supply, number of connected units does not correspond to number set. (Except R.C. address is "0.")	Starting auto address setting is prohibited. This alarm message shows that the auto address connector CN100 is shorted while other RC line is executing auto address operation.	E12
		Error in auto address setting. (Number of connected indoor units is less than the number set.)	E15
		Error in auto address setting. (Number of connected indoor units is more than the number set.)	E16
		No indoor unit is connected during auto address setting.	E20
		Main outdoor unit is detecting error signal from sub outdoor unit.	E24
		Error of outdoor unit address setting.	E25
		The number of connected main and sub outdoor units do not correspond to the number set at main outdoor unit PCB.	E26
		Error of sub outdoor unit in receiving serial communication signal from main outdoor unit.	E29
	Indoor unit communication error of group control wiring.	Error of main indoor unit in receiving serial communication signal from sub indoor units.	E18
	Improper setting.	This alarm message shows when an indoor unit for multiple-uses is not connected to the outdoor unit.	L02
		Duplication of main indoor unit address setting in group control.	<L03>
		Duplication of outdoor R.C. address setting.	L04
		There are 2 or more indoor unit controllers that have operation mode priority in refrigerant circuit.	Priority set remote controller
			Non-priority set remote controller
		Group control wiring is connected to individual control indoor unit.	L07
		Indoor unit address is not set.	L08
		Capacity code of indoor unit is not set.	<<L09>>
		Capacity code of outdoor unit is not set.	L10
		Mis-matched connection of outdoor units that have different kinds of refrigerant.	L17
		4-way valve operation failure	L18
Activation of protective device	Protective device in indoor unit is activated.	Thermal protector in indoor unit fan motor is activated.	<<P01>>
		Improper wiring connections of ceiling panel.	<<P09>>
		Float switch is activated.	<<P10>>
		Operation of protective function of fan inverter.	P12
		O ² sensor (detects low oxygen level) activated.	P14

6. Meaning of Alarm Messages

Possible cause of malfunction			Alarm Message
Activation of protective device	Protective device in outdoor unit is activated.	Compressor thermal protector is activated. Power supply voltage is unusual. (The voltage is more than 260 V or less than 160 V between L1 and L2 phase.)	P02
		Incorrect discharge temperature. (Comp. No. 1)	P03
		High pressure switch is activated.	P04
		Negative (defective) phase.	P05
		Compressor running failure resulting from missing phase in the compressor wiring, etc. (Start failure not caused by IPM or no gas.)	P16
		Incorrect discharge temperature. (Comp. No. 2)	P17
		Compressor 3 discharge temp. failure	P18
		Outdoor unit fan motor is unusual.	P22
		Overcurrent at time of compressor runs more than 80Hz (DCCT secondary current or ACCT primary current is detected at a time other than when IPM has tripped.)	P26
		IPM trip (IPM current or temperature)	H31
		Inverter for compressor is unusual. (DC compressor does not operate.)	P29
Thermistor fault	Indoor thermistor is either open or damaged.	Indoor coil temp. sensor (E1)	<<F01>>
		Indoor coil temp. sensor (E2)	<<F02>>
		Indoor coil temp. sensor (E3)	<<F03>>
		Indoor suction air (room) temp. sensor (TA)	<<F10>>
		Indoor discharge air temp. sensor (BL)	<<F11>>
	Outdoor thermistor is either open or damaged.	Comp. No. 1 discharge gas temp. sensor (DISCH1)	F04
		Comp. No. 2 discharge gas temp. sensor (DISCH2)	F05
		Outdoor No. 1 coil gas temp. sensor (EXG1)	F06
		Outdoor No. 1 coil liquid temp. sensor (EXL1)	F07
		Outdoor air temp. sensor (AIR TEMP)	F08
		Compressor intake port temperature sensor (RDT)	F12
		High pressure sensor. Negative (defective) N phase.	F16
		Low-pressure sensor failure	F17
		Compressor 3 discharge temp. sensor failure (DISCH3)	F22
		Outdoor No. 2 coil gas temp. sensor (EXG2)	F23
		Outdoor No. 2 coil liquid temp. sensor (EXL2)	F24
	EEP ROM on indoor unit PCB failure		F29
Protective device for compressor is activated	Protective device for compressor No.1 is activated.	EEP ROM on the main or sub outdoor unit PCB has failed.	F31
		Current is not detected when comp. No. 1 is ON.	H03
		Discharge gas temperature of the comp. No. 1 is not detected. Temp. sensor is not seated at the sensor holder.	H05
	Protective device for compressor No.2 is activated	Overload current is detected.	H11
		Lock current is detected.	H12
		Current is not detected when comp. No.2 is ON.	H13
		Discharge gas temperature of comp. No.2 is not detected.	H15
	Protective device for compressor No.3 is activated.	Compressor No.3 current trouble (overcurrent)	H21
		Compressor No.3 current trouble (locked)	H22
		Compressor No.3 CT sensor disconnected or short circuit	H23
		Compressor No.3 discharge temp. sensor disconnected	H25
	Low pressure switch is activated.		H06
	Low oil level.		H07
	Oil sensor fault. (Disconnection, etc.)	Comp. No.1 oil sensor	H08
		Comp. No.2 oil sensor	H27
		Oil sensor (connection) failure	H28

Continued

6. Meaning of Alarm Messages

Alarm messages displayed on system controller			
Serial communication errors Mis-setting	Error in transmitting serial communication signal	Indoor or main outdoor unit is not operating correctly. Mis-wiring of control wiring between indoor unit, main outdoor unit and system controller.	C05
	Error in receiving serial communication signal	Indoor or main outdoor unit is not operating correctly. Mis-wiring of control wiring between indoor unit, main outdoor unit and system controller.CN1 is not connected properly.	C06
Activation of protective device	Protective device of sub indoor unit in group control is activated	When using wireless remote controller or system controller, in order to check the alarm message in detail, connect wired remote controller to indoor unit temporarily.	P30

NOTE

1. Alarm messages in << >> do not affect other indoor unit operations.
2. Alarm messages in < > sometimes affect other indoor unit operations depending on the fault.

Contents

2. REMOTE CONTROL FUNCTIONS

1.Main Operating Functions	2-2
1. Room Temperature Control	2-2
2. Automatic Control for Heating and Cooling	2-3
2.Wireless Remote Controller	2-4
1. How to Use the Wireless Remote Controller	2-4
2. Receiver	2-7
3. Operation.....	2-8
4. Using the Wireless Remote Control Unit	2-9
5. Address Settings	2-10
6. Emergency Operation.....	2-12
7. Troubleshooting	2-14
3. Timer Remote Controller (RCS-TM80BG)	2-15
1. How to Use the Timer Remote Controller.....	2-15
2. Names and Operations.....	2-16
3. Installation Manual for Timer Remote Controller	2-18
4. How to Install the Remote Controller.....	2-18
5. Group Control Using 2 Remote Controllers.....	2-19
6. Remote Controller Setting Mode	2-19
7. Indoor Unit Setting Mode.....	2-19
8. To Display the Sensor Temperature	2-19
9. To Display the Trouble History	2-19
10. Setting the Present Time	2-21
11. Weekly Program Function	2-22
12. Outing Function	2-27
13. Sleeping Function.....	2-29
14. Wired Remote Controller Test Run Setting.....	2-30
15. Simple Settings Function.....	2-31
16. Detailed Settings Function.....	2-33
17. Remote Controller Servicing Functions.....	2-40

1. Main Operating Functions

1. Room Temperature Control



The thermostat is turned ON/OFF according to ▲ as shown below.

▲ T = Room temperature - Set temperature	
When remote controller sensor is used	Room temperature = Temperature detected by the remote controller sensor
When body sensor is used	Room temperature = Temperature detected by the body sensor - Intake shift temperature*

* Intake shift temperature (enabled only during heating)

During heating, a difference in temperature occurs between the top and bottom of a room. This value is set in consideration for the difference between the temperature detected by the body sensor and the temperature at the bottom of the room.
<Value set for intake shift temperature at time of shipment>: 39°F (4°C)

Note: The shift temperature can be selected in the range of 32 – 50°F (0 – 10°C), by using the remote controller simplified setting mode.

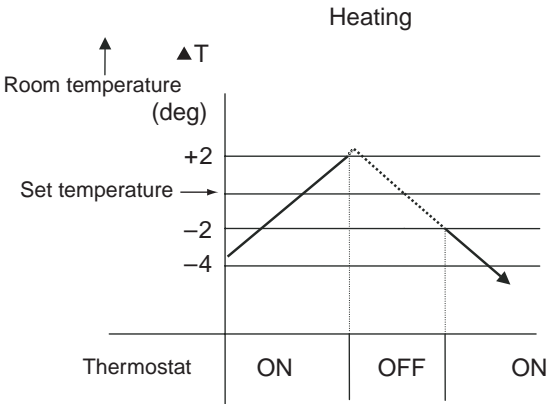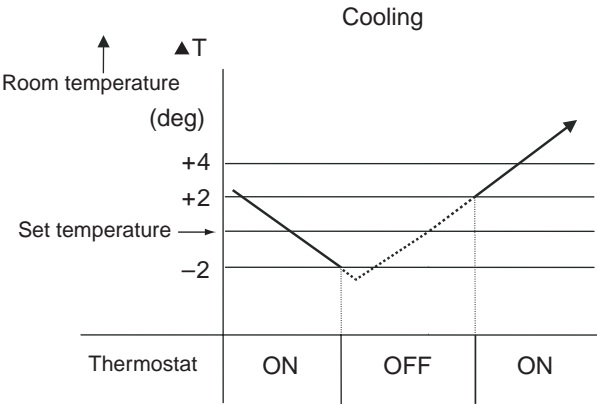

- (1) After the thermostat turns ON, it will not turn OFF again as a result of ▲ for 5 minutes.
- (2) After the thermostat turns OFF, it will not turn ON again for 3 minutes. (It also will not turn ON for 3 minutes after the power is switched ON.)
- (3) The compressor turns OFF if the mode is changed cooling → heating (or heating → cooling) while the compressor is ON.
- (4) If “test run” mode is selected, the thermostat will not turn OFF as a result of ▲ for 60 minutes. (The thermostat is forced ON.)

1. Main Operating Functions

2. Automatic Control for Heating and Cooling

Automatic Heating/Cooling Control

- (1) When operation starts, heating or cooling is selected according to the set temperature and the room temperature.
- Room temperature \geq Set temperature + 2F \rightarrow Cooling
 - Set temperature - 2F < Room temperature \leq Set temperature + 2F \rightarrow Monitoring mode (*1)
 - Room temperature < Set temperature - 2F \rightarrow Heating
- *1: If the difference between the room temperature and set temperature is small when operation starts, the cooling thermostat remains in standby status (OFF) until the temperature difference increases. When the temperature difference increases, either cooling operation or heating operation is selected. This standby status is known as "monitoring mode."
- (2) After operation starts in the selected operating mode, the set temperature is automatically shifted by + 4°F (2°C) (cooling operation) or - 4°F (2°C) (heating operation).

Example: Temperature set on the remote controller is 68°F (20°C).

	Selected operating mode	Shifted set temp.	Remote controller display
1	Cooling	72°F (22°C)	68°F (20°C)
2	Heating	64°F (18°C)	68°F (20°C)


- (3) Operating mode changes (heating \rightarrow cooling, cooling \rightarrow heating) which occur during operation as a result of temperature changes are handled as shown below.
- Heating \rightarrow cooling: Room temperature \rightarrow Shifted set temperature (set temperature + 4F (2°C)) + 1F (0.5°C)
 - Cooling \rightarrow heating: Room temperature \rightarrow Shifted set temperature (set temperature - 4F (2°C)) - 2F (1.0°C)

Example: Temperature set on the remote controller is 68°F (20°C).

	Operating mode change	Shifted set temp.
1	Heating \rightarrow Cooling	$68 + 4 + 1 = 73^{\circ}\text{F}$ or higher ($20 + 2 + 0.5 = 22.5^{\circ}\text{C}$ or higher) (*2)
2	Cooling \rightarrow Heating	$68 - 4 - 2 = 62^{\circ}\text{F}$ or lower ($20 - 2 - 1.0 = 17.0^{\circ}\text{C}$ or lower)

*2: During heating operation when the body sensor is used, a temperature shift is applied to the intake temperature detected by the sensor, in consideration for the difference in temperature at the top and bottom of the room. (Refer to the "Room Temperature Control" item.) If this intake shift temperature is 8°F (- 13°C), then the heating \rightarrow cooling change occurs when the temperature detected by the body sensor is 80°F (26.5°C) or higher.

- (4) Cooling (heating) operation does not change if the room temperature changes from area C \rightarrow A (or A \rightarrow C) within 10 minutes after the compressor turns OFF. (Monitoring mode is excepted.)
- (5) When the heating/cooling change occurs, the 4-way valve switches approximately 30 to 50 seconds after the compressor turns ON.

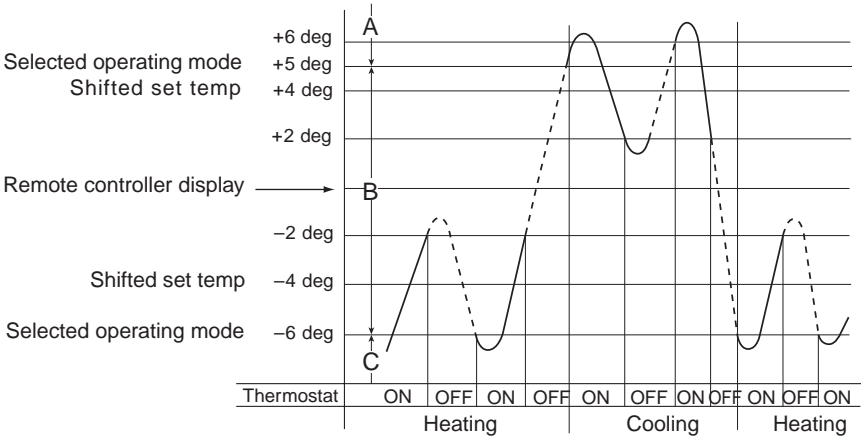


2. Wireless Remote Controller







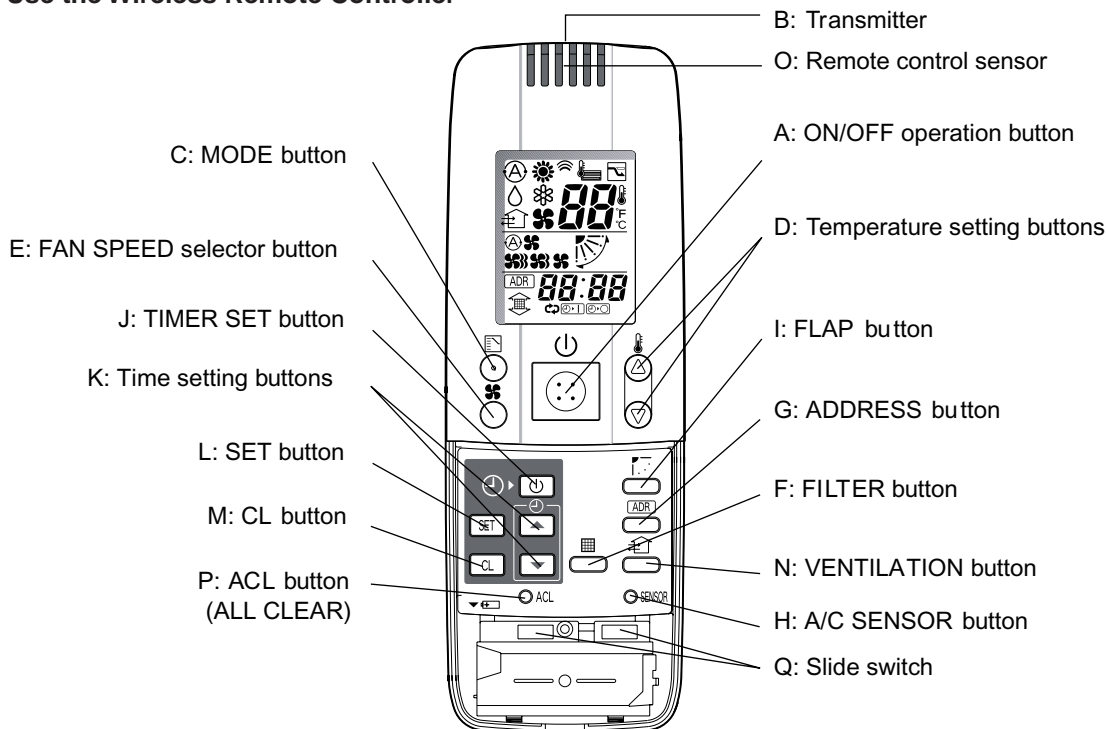























Optional Controller (Remote Controller)

Wireless Remote Controller / RCS-SH80AAB.WL (for X Type) / RCS-TRP80AAB.WL (for A, T Type) / RCS-BH80AAB.WL (for U, D Type) / RCS - SH1AAB (for K Type)

1. How to Use the Wireless Remote Controller




















NOTE The illustration above pictures the wireless remote control unit after the cover has been lowered and removed.

A: ON/OFF operation button	This button is for turning the air conditioner on and off.										
B: Transmitter	When you press the buttons on the wireless remote control unit, the  mark appears in the display to transmit the setting changes to the receiver in the air conditioner.										
C: MODE button	Use this button to select one of the following five operating modes. <table border="0"> <tr> <td>(AUTO)</td><td> : Used to automatically set cooling or heating operation. Only for single heat pump type (Temperature range: 62 ~ 80°F (17 to 27°C))</td></tr> <tr> <td>(HEAT)</td><td> : Used for normal heating operation. Only for heat pump type (Temperature range: 60 ~ 78°F (16 to 26°C))</td></tr> <tr> <td>(DRY)</td><td> : Used for dehumidifying without changing the room temperature. (Temperature range: 64 ~ 86°F (18 to 30°C))</td></tr> <tr> <td>(COOL)</td><td> : Used for normal cooling operation. (Temperature range: 64 ~ 86°F (18 to 30°C))</td></tr> <tr> <td>(FAN)</td><td> : Used to run the fan only, without heating or cooling operation.</td></tr> </table>	(AUTO)	 : Used to automatically set cooling or heating operation. Only for single heat pump type (Temperature range: 62 ~ 80°F (17 to 27°C))	(HEAT)	 : Used for normal heating operation. Only for heat pump type (Temperature range: 60 ~ 78°F (16 to 26°C))	(DRY)	 : Used for dehumidifying without changing the room temperature. (Temperature range: 64 ~ 86°F (18 to 30°C))	(COOL)	 : Used for normal cooling operation. (Temperature range: 64 ~ 86°F (18 to 30°C))	(FAN)	 : Used to run the fan only, without heating or cooling operation.
(AUTO)	 : Used to automatically set cooling or heating operation. Only for single heat pump type (Temperature range: 62 ~ 80°F (17 to 27°C))										
(HEAT)	 : Used for normal heating operation. Only for heat pump type (Temperature range: 60 ~ 78°F (16 to 26°C))										
(DRY)	 : Used for dehumidifying without changing the room temperature. (Temperature range: 64 ~ 86°F (18 to 30°C))										
(COOL)	 : Used for normal cooling operation. (Temperature range: 64 ~ 86°F (18 to 30°C))										
(FAN)	 : Used to run the fan only, without heating or cooling operation.										
D: Temperature setting buttons	 : Press this button to increase the temperature setting.  : Press this button to decrease the temperature setting.										
E: FAN SPEED selector button	<table border="0"> <tr> <td>(AUTO)</td><td> : The air conditioner automatically decides the fan speeds.</td></tr> <tr> <td>(HI)</td><td> : High fan speed</td></tr> <tr> <td>(MED)</td><td> : Medium fan speed</td></tr> <tr> <td>(LO)</td><td> : Low fan speed</td></tr> </table>	(AUTO)	 : The air conditioner automatically decides the fan speeds.	(HI)	 : High fan speed	(MED)	 : Medium fan speed	(LO)	 : Low fan speed		
(AUTO)	 : The air conditioner automatically decides the fan speeds.										
(HI)	 : High fan speed										
(MED)	 : Medium fan speed										
(LO)	 : Low fan speed										

Continued

2. Wireless Remote Controller

F: FILTER button	<p>If a separately installed signal receiver is being employed, this button is used to turn off its filter lamp. When the filter lamp has lighted, first clean the filter, and then press the FILTER button to turn off the filter lamp. When a wired remote control unit and wireless remote control unit are both used, the filter sign on the wired remote control unit will appear. When this happens, first clean the filter, and then press the FILTER button on one of the remote control units to turn off the filter sign.</p>												
G: ADDRESS button	<p>When a multiple number of indoor units that can be operated by the wireless remote control unit have been installed in the same room with a multi-unit or single-unit installation, this button enables addresses to be set in order to prevent the sending of signals to the wrong indoor unit. Each of up to six indoor units can be controlled separately using its own wireless remote control unit by matching the number of the address switch on the operation area of the indoor unit and the number used for the address of its remote control unit. (The indoor units cannot be controlled separately when they are used in a flexible combination format, simultaneous operation of multi units format or any other such format since they will all operate at the same time.)</p> <p>NOTE When the batteries are replaced, the address setting returns to "ALL", so you must make the setting again.</p>												
H: A/C SENSOR button	<p>When you press this button (use a narrow-tipped object such as a ballpoint pen), the  indication will disappear on the display. The room temperature is detected by the sensor which is built into the indoor unit and the air conditioner is controlled accordingly.</p> <p>NOTE If the remote control is located near a heat source, such as a space heater or in direct sunlight, press the A/C SENSOR button to switch to the sensor on the indoor unit.</p>												
I: FLAP button	<p>1. Use this button to set the airflow direction to a specific angle. The airflow direction is displayed on the remote control unit.</p> <table border="1" data-bbox="518 985 1340 1176"> <thead> <tr> <th>Operation mode</th><th>Number of airflow direction settings</th></tr> </thead> <tbody> <tr> <td> (COOL) or  (DRY)</td><td>3</td></tr> <tr> <td> (HEAT) or  (FAN)</td><td>5</td></tr> <tr> <td> (AUTO)</td><td></td></tr> <tr> <td>Cooling mode:</td><td>3</td></tr> <tr> <td>Heating mode:</td><td>5</td></tr> </tbody> </table> <p>CAUTION In the Cool mode and Dry mode, if the flaps are set in a downward position, condensation may form and drip around the vent. Do not move the flap with your hands.</p> <p>NOTE This function is available only for models X, A, T and K.</p> <p>(SWEEP) 2. Use this button to make the airflow direction sweep up and down automatically. Press this button several times until the  symbol appears on the display.</p> <p>To stop the swing operation Press the FLAP button again during the flap swing operation to stop the flap at the desired position. Then, the airflow can be set from the top position by pressing the FLAP button again.</p>	Operation mode	Number of airflow direction settings	 (COOL) or  (DRY)	3	 (HEAT) or  (FAN)	5	 (AUTO)		Cooling mode:	3	Heating mode:	5
Operation mode	Number of airflow direction settings												
 (COOL) or  (DRY)	3												
 (HEAT) or  (FAN)	5												
 (AUTO)													
Cooling mode:	3												
Heating mode:	5												

2. Wireless Remote Controller

	<div>Indicator when swing operation is stopped</div> <table><tr><th>Fan and heating</th><th>Cooling and drying</th></tr><tr><td></td><td></td></tr></table> <p>During cooling and drying, the flap does not stop at the downward position. Even if the flap is stopped at the downward position during the swing operation, it does not stop until it moves to the third position from the top.</p> <div>NOTE</div> <p>This function is available only for models X, A, T and K.</p>	Fan and heating	Cooling and drying		
Fan and heating	Cooling and drying				
J: TIMER SET button (OFF Timer) (OFF Cycle Timer) (ON Timer)	<p>Use this button while the unit is operating to switch between timer settings.</p> <p> : The air conditioner stops after a preset time elapses. : The air conditioner always stops after a preset time elapses. : The air conditioner starts after a preset time elapses.</p>				
K: Time setting buttons	<p> : Press this button to increase the time. : Press this button to decrease the time.</p>				
L: SET button	<p>Use this button to set the timer.</p>				
M: CL button	<p>Use this button to clear the timer setting.</p>				
N: VENTILATION button	<p>This is used when a ventilation fan (available commercially) is connected. Pressing the VENTILATION button turns the fan on and off. The ventilation fan also turns on and off when the air conditioner unit is turned on and off. (The display of the remote control unit shows "風" while the ventilation fan is running.)</p> <p>* If the VENTILATION button is held down for 4 or more seconds when the batteries have been replaced, "風" appears on the display, and the ventilation fan can be used.</p>				
O: Remote control sensor	<p>This detects the temperature around the remote control unit when the remote control unit position has been selected using the sensor button.</p>				
P: ACL button (ALL CLEAR)	<p>Puts the wireless remote control unit into pre-operation status. This is used after the batteries have been replaced or when the slide switch setting has been changed.</p>				
Q: Slide switch	<p>This switch is for setting the operation mode of the indoor unit and setting the flaps.</p>				

NOTE


- The wireless remote control unit sends the temperature signal to the air conditioner regularly at five-minute intervals. If the signal from the wireless remote control unit stops for more than ten minutes due to the loss of the wireless remote control unit or other trouble, the air conditioner will switch to the temperature sensor which is built into the indoor unit and control the room temperature. In these cases, the temperature around the wireless remote control unit may differ from the temperature detected at the air conditioner's position.
- When low fan speed is selected and the air conditioner is in cooling operation at a low outdoor temperature of less than 50°F (10°C), the air conditioner may automatically switch to medium fan speed to prevent freezing.

2. Wireless Remote Controller


2. Receiver

The signal receivers with the exception of the separately installed signal receiver are mounted on the indoor units.


X type

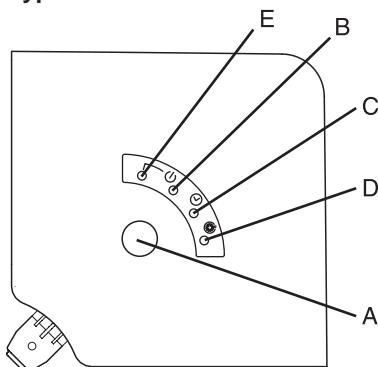


K type



T type

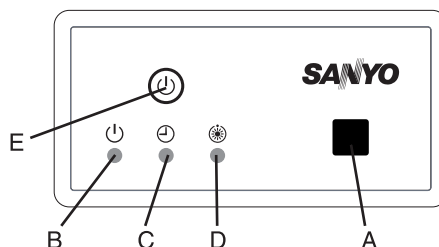

**Separately installed
signal receiver
(A, U, D type)**

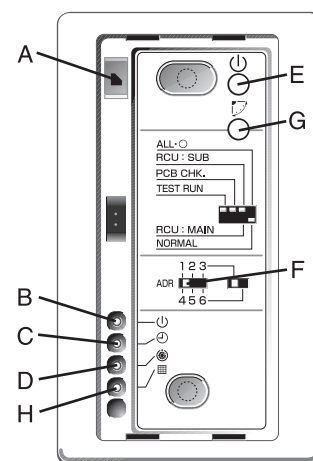


A: Receiver	This section picks up infrared signals from the wireless remote control unit (transmitter).
Indication lamps	One of these lamps will blink when trouble has occurred. When an indicator lamp starts to blink, refer to "Troubleshooting" on page 2-14.
B: Operation lamp	This lamp lights when the appliance is turned on.
C: Timer lamp	This lamp lights when the system is being controlled by the timer.
D: Standby lamp	<ul style="list-style-type: none"> This lamp lights at the following times during heating operations: When operation has started, when the thermostat has been activated, during a defrosting operation. The lamp blinks when trouble has occurred.
E: Emergency operation button	This is used when operation cannot be performed due to trouble with or loss of the wireless remote control unit.
F: ADDRESS switch	This switch is used in order to prevent the sending of signals to the wrong indoor unit when a multiple number of indoor units that can be operated by the wireless remote control units have been installed in the same room.
G: SWING button	When this button is pressed, the airflow sweeps up and down automatically.
H: FILTER lamp	This lamp lights to indicate that it is time to clean the filter.

- If two beeps are heard, the operation lamp among the indication lamps has lighted and the timer lamp and standby lamp blink alternately. In cases where heat pump models are used, this indicates a cooling/heating mode mismatch and, as such, operation in the desired mode cannot be performed. (The same beeps will be heard and the same operation lamps will light when auto cooling/heating has been selected on a model which does not have the auto cooling/heating function.)
- When local operation has been set to disable because the centralized control mode is established, for instance, pressing the ON/OFF operation button, MODE button or temperature setting buttons results in the sounding of five beeps, and the attempted change in the operation will not be accepted.

2. Wireless Remote Controller

3. Operation

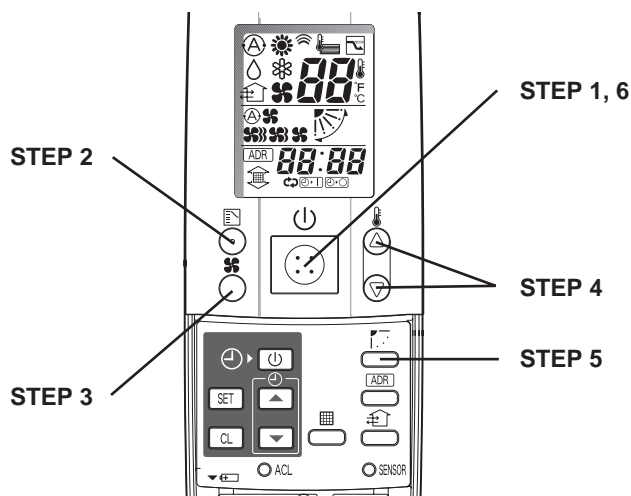

NOTE

- To warm up the system, the power mains must be turned on at least five (5) hours before operation.

- STEP 1 To start the air conditioner:** Press the operation button (ON/OFF button).
- STEP 2 Setting the mode:** Press the MODE button to select the mode of your choice.
[(A) (AUTO), (S) (HEAT), (D) (DRY), (C) (COOL) or (F) (FAN)]
- STEP 3 Setting the fan speed:** Press the FAN SPEED selector button to select the fan speed of your choice.
[(A) (AUTO), (H) (HI.), (M) (MED.) or (L) (LO.)]
If AUTO is selected, the fan speed switches automatically.
- STEP 4 Setting the temperature:** Use the ▼ or ▲ button as appropriate to change the temperature setting as desired.
(▼ reduces the temperature, and ▲ increases the temperature.)
* The temperature cannot be set during FAN mode operation.
- STEP 5 Setting the airflow direction:** When more than one indoor unit is connected, the UNIT button is used first to select a unit. Then use the FLAP button to set the airflow direction to a specific angle or to sweep.
- STEP 6 To stop the air conditioner:** Press the operation button (ON/OFF button) again.


Automatic heating and cooling

The air conditioner automatically performs heating and cooling operation based on the difference between the temperature setting and room temperature. All indoor units in the same refrigerant system can be operated with a single group control.

Simultaneous operation of multiple units (Group control)

Group control is suitable for air conditioning of a large room using multiple air conditioning units.


- One remote control unit can control up to eight indoor units.
- All indoor units have the same settings except for the airflow direction.
- The temperature sensors at the indoor unit side are used.

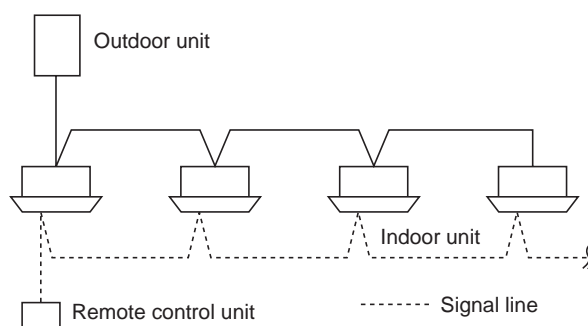







2. Wireless Remote Controller

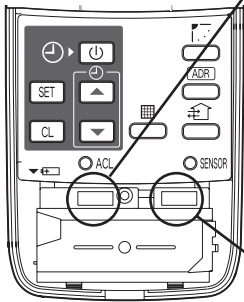





4. Using the Wireless Remote Control Unit

- Slide switch** This is used to set the operation mode of the indoor units and to set the flaps.
- Depending on the indoor unit used, the operation display and airflow direction display settings will differ as shown below.
 - Use a pointed implement to change the switch position.
 - When the switch position has been changed, press the ACL button.
- * For details on the flap functions, refer to the operating instructions of the indoor unit used.



With the battery cover removed


	Model which supports different flap settings	Swing-only model	No-flap model
Slide switch position			
Flap display on wireless remote control unit			

	Heat pump (with auto cooling/heating function)	Heat pump (without auto cooling/heating function)	Cooling only
Operation mode display on wireless remote control unit			
Slide switch position			

- Before use, check that the slide switch has been set to the position shown in the figure above. For details on how to set the slide switch, consult your dealer.

How to install batteries

1. Slide the cover in the direction indicated by the arrow and remove it.
 2. Install two AAA alkaline batteries. Make sure the batteries point in the direction marked in the battery compartment.
 3. Use a pointed implement to press the ACL button.
- The batteries last about a year, depending on how much you use the wireless remote control unit. Replace the batteries when the wireless remote control unit's display fails to light, or when the remote control cannot be used to change the air conditioner's settings.
 - When the batteries are to be replaced, make sure that both batteries are new and that the same kind of battery is used.
 - Remove the batteries if the wireless remote control unit is not going to be used for a prolonged period.
 - Dispose of the used batteries at the designated location.

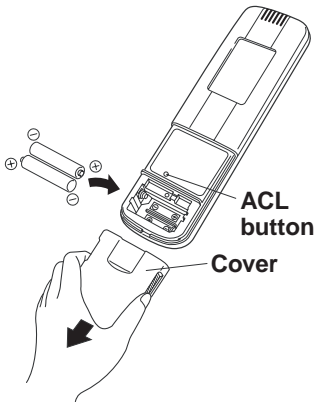

How to use the wireless remote control unit


- Point the wireless remote control unit's transmitter at the signal receiver. If the signal is received properly, a beep is heard. (Two beeps are heard only when operation starts up.)
- Signals can be received over a distance of approximately 26 ft. This distance is approximate: it may be slightly more or less depending on how much charge remains in the batteries and on other factors.
- Ensure that the signals will not be blocked by any objects positioned between the transmitter and signal receiver.
- Avoid placing the wireless remote control unit where it will be exposed to direct sunlight or in the direct path of the air blown out from the air conditioner, near a heating appliance, etc.
- Do not drop, throw or wash the wireless remote control unit.
- Signal reception may not be accepted in rooms with fluorescent lights that use the electronic instantaneous lighting system (rapid start system) or inverter system. For further details, contact your dealer.

2. Wireless Remote Controller

When mounting the wireless remote control unit on a wall for use

- Before mounting the wireless remote control unit on the wall, place the unit at the mounting position, press the ON/OFF operation button and check that the signals are received properly.
- To remove the wireless remote control unit, disengage it by pulling it toward you.

Secure the installation fitting of the wireless remote control unit using the screws.

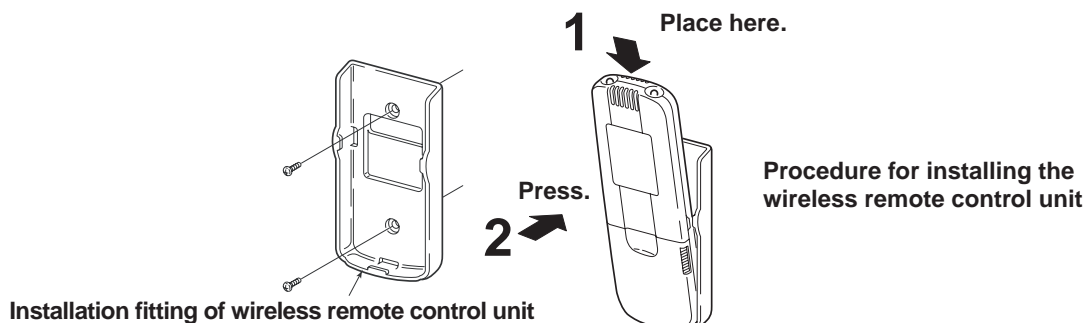

Operating tips

- **Do not operate the wireless remote control unit too far away from the signal receiver.**
Doing so may cause operational errors.
Make absolutely sure that the wireless remote control unit and signal receiver are both in the same room.
- **When operating the wireless remote control unit, point it directly at the signal receiver.**
A beep is heard when a signal is received properly.
- **Avoid places where the wireless remote control unit will be obscured by curtains, etc.**
Remove it before operation.

2

5. Address Settings

When a multiple number of indoor units that can be operated by the wireless remote control unit have been installed in the same room with a multi-unit or single-unit installation, this button enables addresses to be set in order to prevent the sending of signals to the wrong indoor unit. Each of up to six indoor units can be controlled separately using its own wireless remote control unit by matching the number of the address switch on the operation area of the indoor unit and the number used for the address of its wireless remote control unit. (The indoor units cannot be controlled separately when they are used in a flexible combination format, simultaneous operation of multi units format or any other such format since they will all operate at the same time.) The signal receiver has an address switch for signal reception, and the wireless remote control unit has an address switch for signal transmission.

How to check the addresses

When the ADDRESS button on the wireless remote control unit is pressed, the current address appears on the wireless remote control unit's display. The buzzer sounds if the address displayed matches the signal receiver's address. (The buzzer always sounds if "ALL" appears as the address display.)

If "ALL" appears as the address display, operations can be performed irrespective of the signal receiver's address. Point the wireless remote control unit at the signal receiver of the unit to be operated, and send the signal.

How to set the matching address


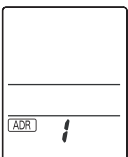
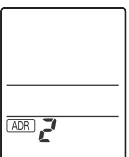

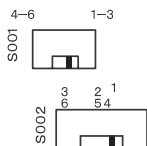
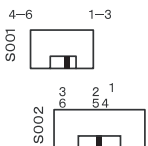
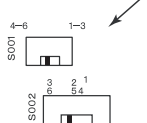
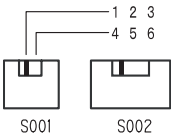
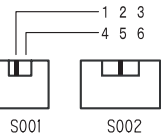

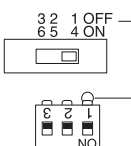
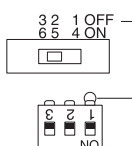
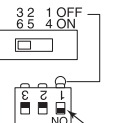



Wireless remote control unit's address setting

1. When the ADDRESS button is held down for 4 or more seconds, " **ADR** " lights on the wireless remote control unit's display, and the current address blinks.
2. Each time the ADDRESS button is now pressed, the address changes by one setting in the following sequence: ALL → 1 → 2 → 3 → 4 → 5 → 6 → ALL.
Select the setting which matches the setting of the address switch in the operation area of the indoor unit to be operated.
3. When the SET button is now pressed, the address stops blinking and lights instead, and it remains on the display for 5 seconds.
The buzzer sounds if the setting matches the setting of the address switch in the operation area of the indoor unit.

NOTE

When the batteries are replaced, the address setting returns to "ALL".

2. Wireless Remote Controller

Wireless remote control unit address displays				
X type Position of address switch on signal receiver (inside indoor unit)	* The address switch in the operation area may be set to any position.			For positions 1, 2 and 3, set the knob to the left; conversely, for 4, 5 and 6, set the knob to the right. 
T type Position of address switch on signal receiver (inside indoor unit)	* The address switch in the operation area may be set to any position.			For positions 1, 2 and 3, set the knob to the left; conversely, for 4, 5 and 6, set the knob to the right. 
K type Position of address switch inside indoor unit	* The address switch in the operation area may be set to any position.			For positions 1, 2 and 3, set the knob upward (1); conversely, for 4, 5 and 6, set the knob downward (ON). 
A, U, D type Position of address switch in signal receiver	* The address switch in the operation area may be set to any position.			For positions 1, 2 and 3, set the knob to the left; conversely, for 4, 5 and 6, set the knob to the right. 


2. Wireless Remote Controller

6. Emergency Operation

In any of the following events, use the Emergency operation button to operate the air conditioner on a makeshift basis.

- When there is no charge remaining in the wireless remote control unit's batteries
- When the wireless remote control unit has failed
- When the wireless remote control unit has been lost or misplaced

X type Initiate operation using the Emergency operation button in the operation area of the indoor unit.

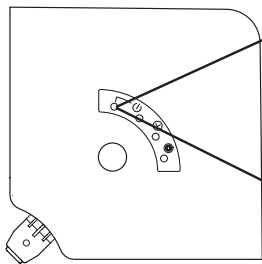

Operation
Press the Emergency operation button. The air conditioner initiates a cooling operation when its operation is started up at a room temperature of 75°F (24°C) or above. Conversely, it initiates a heating operation when its operation is started up at a room temperature below 75°F (24°C).

Shutdown
Press the Emergency operation button once more.


T type Initiate operation using the Emergency operation button in the signal receiver on the indoor unit.



Operation
Press the Emergency operation button. The air conditioner initiates a cooling operation when its operation is started up at a room temperature of 75°F (24°C) or above. Conversely, it initiates a heating operation when its operation is started up at a room temperature below 75°F (24°C).

Shutdown
Press the Emergency operation button once more.

K type Initiate operation using the Emergency operation button in the operation area of the indoor unit.




Operation
Set the ON/OFF operation switch to "OFF" first. Then set it to "ON." If a heat pump is used, the air conditioner initiates a cooling operation when its operation is started up at a room temperature of 75°F (24°C) or above or it initiates a heating operation when its operation is started up at a room temperature below 75°F (24°C).

Shutdown
Set the ON/OFF operation switch to "OFF."

- NOTE**
- TEST is used to initiate a trial run when the air conditioner is first installed. It is not used under normal circumstances.
 - To restart the wireless remote control unit's operation, the ON/OFF operation switch must be set to ON without fail. If it is kept at the OFF setting, the signals from the wireless remote control unit will not be accepted.

2. Wireless Remote Controller

A, U, D type Initiate operation using the Emergency operation button in the signal receiver.

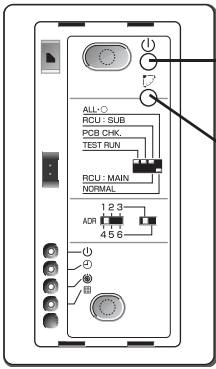






















- 1. Press the Emergency operation button.**
The air conditioner initiates a cooling operation when its operation is started up at a room temperature of 75°F (24°C) or above.
Conversely, it initiates a heating operation when its operation is started up at a room temperature below 75°F (24°C).
- 2. When the SWING button is pressed, the air direction is automatically switched from upward to downward or vice versa.**

Shutdown
Press the Emergency operation button once more.

2. Wireless Remote Controller

7. Troubleshooting

Check out the following points before requesting service.


Trouble		Possible Cause	Remedy	
Check again.	The air conditioner does not run even when the ON/OFF operation switch has been set to ON.	Is the air conditioner in the shutdown mode or was the switch operated after a power failure?	Press the wireless remote control unit's ON/OFF operation button again.	
		How about the local power switch?	If it was off, set it now to on.	
		Have any of the fuses blown?	If a fuse has blown, contact your dealer.	
		Is the ON timer operation mode established?	Clear the timer operation.	
		If the signal receiver's NORMAL/ALL OFF switch set to "ALL OFF"?	If it is, set it to the "NORMAL" position and cancel the operation.	
		Have the wireless remote control unit's batteries run down?	If they have, replace them with new ones.	
		Do the indication lamps show a cooling/heating mismatch or is the auto cooling/heating function not available?	Change the operation mode.	
Auto cooling/heating or heating appears on the display even though the air conditioner is a cooling-only model.			Change the setting of the wireless remote control unit's slide switch. (See page 2-9)	
Trouble		Possible Cause		
Contact your dealer.	(An indicator lamp is blinking.)		<ul style="list-style-type: none">Some kind of trouble has occurred in communication between the signal receiver and indoor unit. Alternatively, the wrong address has been set when a wired remote control unit is used.Some kind of trouble has occurred in communication between the indoor unit and outdoor unit.The indoor unit's protection device has been activated. Alternatively, the auto flap connector of the ceiling panel has been disconnected.The outdoor unit's protection device has been activated.Something is wrong with the temperature sensor.The outdoor unit's compressor has been protected.	
	Operation	Timer		Preparing for operation
				
	Operation	Timer		Preparing for operation
				
	Operation	Timer		Preparing for operation
				
	Operation	Timer	Preparing for operation	
				
	Operation	Timer	Preparing for operation	
				
Operation	Timer	Preparing for operation		
				
Operation	Timer	Preparing for operation		
				
			<ul style="list-style-type: none">A trial run mode is underway. Set the trial run mode to Off.	

If the trouble persists even after performing the checks recommended above, shut down the air conditioner's operation, set the local power switch to OFF, and contact your dealer with the model number and trouble symptoms. You must NOT attempt to make repairs yourself due to the dangers involved. If one or more of the indication lamps is blinking, give this information to the dealer as well.


3.Timer Remote Controller (RCS-TM80BG)

1. How to Use the Timer Remote Controller

Operating buttons

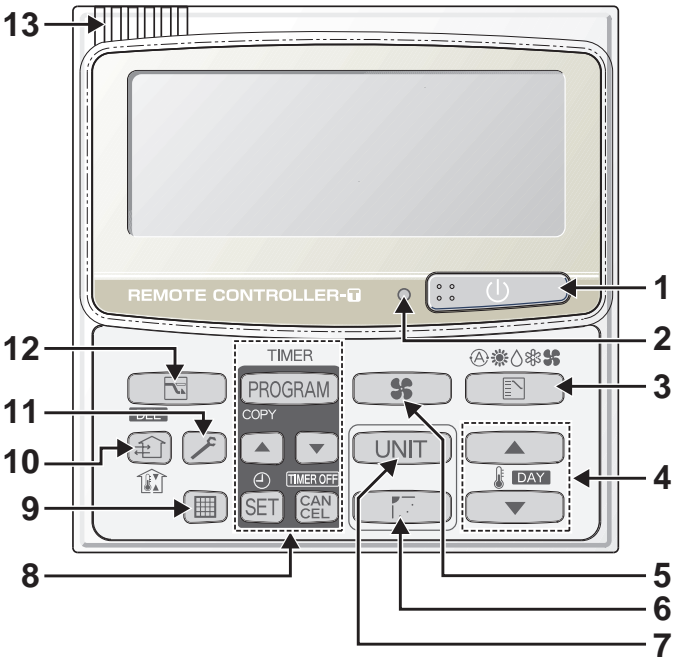



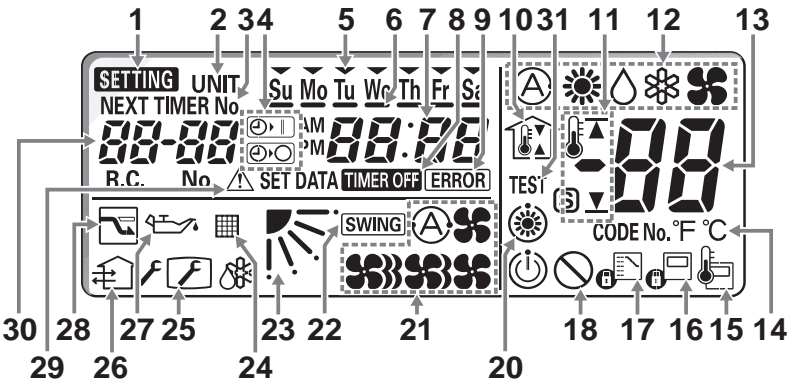









Display



3. Timer Remote Controller (RCS-TM80BG)

2. Names and Operations

Operation Section (Refer to the previous page)

1.  **Start/Stop button**
Pushing this button starts, and pushing again stops the unit.
2. **Operation lamp**
The lamp is turned on when an air conditioner is in operation.
This lamp blinks when an error occurs or a protective device is activated.
3.  **Mode Select button**
Pushing this button to select an operation mode. (AUTO /HEAT /DRY /COOL /FAN).
4. **Temperature setting buttons**
Changing the temperature setting.
5.  **FAN speed button**
Changing the fan speed.
6.  **Swing/Air direction button *1**
Use this button to set the auto swing or air direction to a specific angle.
7.  **Unit Select button**
When more than one indoor unit is operated by one remote control unit, this button is used to select a unit when adjusting the air direction.
8. **Timer setting buttons**
(Weekly Program Function)
9.  **FILTER reset button**
Use this button to reset the filter sign.
When  is displayed, press this button after cleaning the filter.
10.  **Ventilation button**
Use this button when you installed a fan available in the market. Pressing this button turns on and off the fan.
When turning off the air conditioner, the fan will be also turned off.
(While the fan is operating,  will appear in the display.)
*If  is displayed on the LCD of the remote control unit when pressing the ventilation button, no fans are installed.
11.  **Inspection button**
Do not use this button.
12.  **Sleeping button**
(Sleeping Function)
13. **Remote control sensor**
Normally, the temperature sensor of the indoor unit is used to detect the temperature. However, it is also possible to detect the temperature around the remote control unit.

*1 Do not move the flap (vertical airflow adjustment board) with your hand.

- The flap is automatically directed down when the unit is stopped.
- The flap is directed up during the HEAT standby. The flap starts swinging after the HEAT standby is cancelled, although the AUTO flap indication on the remote control unit is displayed during the HEAT standby.

3. Timer Remote Controller (RCS-TM80BG)






Display Section (Refer to the page 2-15)

1. **SETTING SETTING indication**
Appears when the timer program is being set.
2. **UNIT UNIT indication**
Indicates the unit No. of the indoor unit which is selected with the Unit Select button, or the unit in which an abnormality occurs.
3. **TIMER No. TIMER No. indication**
Appears when the time program is being set.
4. **Timer program**
: The indoor unit starts operation at the programmed time.
: The indoor unit stops operation at the programmed time.
5. **▼ Today's day of the week**
Indicates today's day of the week.
6. **▬ Program schedule indication**
Appears under days that are scheduled for program operation.
7. **Present time**
Displays the present time on a 24-hour clock. Also, displays settings in the various setting modes.
8. **TIMER OFF TIMER OFF indication**
Displayed when the timer has been turned OFF.
9. **[ERROR] ERROR indication**
Displayed when a mistake is made during timer setting.
10. **🏠 Outing indication (👉 Outing function)**
Appears when the outing function is set.
11. **Upper and lower limit indication of the outing function**
: Indicates the upper limit of the temperature
: Indicates the lower limit of the temperature
12. **Operation Mode indication**
Displays the selected operation mode. (AUTO / HEAT / DRY / COOL / FAN).
13. **Temperature indication**
Indicates the set temperature.
14. **°F / °C temperature unit indication**
15. **📶 Remote control sensor indication**
Appears when the remote control sensor is used.
16. **📶 Centralized control indication**
Appears when operated in centralized control. If the remote control operation is not permitted to the remote unit, when the Start/Stop button, Mode Select button or Temperature setting button is pressed, flashes and rejects the change.
17. **📶 Operation mode change control indication**
Displays when an operation mode is entered by the remote control unit, while another operation mode has been already selected. This indicates that the operation mode cannot be changed.
18. **⊘ Disabled Feature indication**
Displayed if the selected feature was disabled during installation.
20. **🌀 Heating standby mode indication**
 appears when the fan of the indoor unit is stopped or in low fan speed.
21. **🌀 / 🌀 / 🌀 / 🌀 Fan mode select indication**
The selected fan mode is displayed.
22. **[SWING] SWING indication**
Appears while the flap swings.
23. **🚪 Flap position indication**
Indicates the flap position.
24. **🧼 Filter indication**
Appears when filter needs cleaning. Clean the filter.
25. **🔧 Inspection indication**
Appears when the protective device is activated or when an abnormality occurs.
26. **🏠 Ventilation indication**
Appears when a fan available in the market is installed and is operating.
27. **🛢️ Oil indication**
Appears when the engine oil needs to be changed. (Appears when the gas heat pump air conditioner is used.)
28. **🛌 Sleeping**
Appears during the sleeping function.
29. **⚠️ CAUTION**
Appears when the protective device is activated or when an abnormality occurs.
30. **Unit No. indication**
Indicates the unit No. of the selected indoor unit.
31. **TEST TEST indication**
Appears while in test operation.

3.Timer Remote Controller (RCS-TM80BG)

3. Installation Manual for Timer Remote Controller

Accessories for remote controller switch

① Remote controller	② Wood screws	③ Wire joints	④ Operation manual	⑤ Installation manual
(with 8 in. wire) 				

4. How to install the Remote Controller



CAUTION

- Do not supply power to the unit or try to operate it until the tubing and wiring to the outdoor unit is completed.
- Do not twist the control wiring with the power wiring or run it in the same metal conduit, because this may cause malfunction.
- Install the remote controller away from sources of electrical noise.
- Install wiring correctly(incorrect wiring will damage the equipment).
- Install a noise filter or take other appropriate action if electrical noise affects the power supply circuit of the unit.
- When wiring, do not connect the remote controller wires to the adjacent terminal block for the power wiring. Otherwise, the unit will break down.
- Use shielded wires for remote control wiring and ground the shield on indoor unit sides. (Fig. 2-1) Otherwise misoperation due to noise may occur.

The mounting position for the remote controller should be located in an accessible place for control. Never cover the remote controller or recess it into the wall.

- (1) When you open the decorative cover (Fig. 2-4), you will see 2 gaps under the remote controller. Insert a coin into these gaps and pry off the back case.
- (2) Attach the back case with the 2 wood screws ② provided. Using a screwdriver, push open the cut-outs on the back case. These holes are for screws. (Fig. 2-5)
- (3) Connect the remote controller wiring (2 wires) correctly to the corresponding terminals in the electrical component box of the indoor unit.
- (4) To finish, fit the back tabs of the case into the remote controller and mount it.

- Basic Wiring Diagram
- Connection diagram

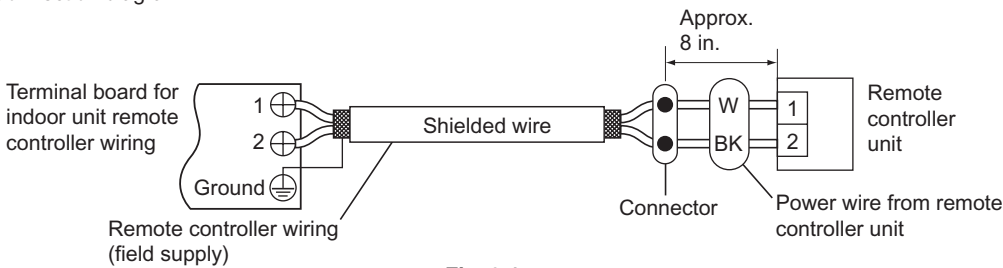


Fig. 2-1

3. Timer Remote Controller (RCS-TM80BG)

- Use AWG#20 to AWG#16 wires.

Remote controller wiring can be extended to a maximum of 1640 ft.

- (1) Strip the insulation to approximately 35/64" from the ends of the wires that will be connected.
- (2) Twist together the 2 wires and create a crimp connection at the wire joint.
- (3) If a special crimping tool is not used, or if the connection is soldered, insulate the wires using insulation tape.

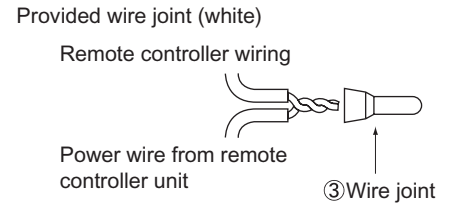


Fig. 2-2

5. Group Control Using 2 Remote Controllers

It does not matter which of the 2 remote controllers you set as the main controller. When using multiple remote controllers (up to 2 can be used), one serves as the main remote controller and the other as the sub-remote controller.

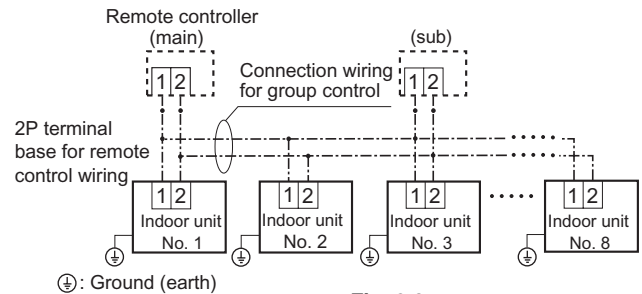


Fig. 2-3

6. Remote Controller Setting Mode

To set the remote controller main/sub setting or change the sensor, follow the steps below.

- ① Press both and buttons on the remote controller for more than 4 seconds together.
 - ② Select CODE No. with / () buttons.
 - ③ Change DATA with / (TIMER) buttons.
 - ④ Press . Finally, press .
- * DATA is memorized in the RCU. (DATA setting will not be changed even when the power is turned off.)
- * Make sure to set [Normal] for RCU. CK.

CODE ITEM	ITEM	DATA	
		00 00	00 0 1
01	RCU. Main/Sub	Sub	Main
02	Clock display	24 hours	12 hours (AM/PM)
08	RCU. CK	RCU. CK	Normal
09	Room temperature sensor	Main unit	RCU

7. Indoor Unit Setting Mode

To select the ventilation setting or change the temperature unit, follow the steps below.

- ① Press + + buttons on the remote controller for more than 4 seconds together.
 - ② Select CODE No. with / () buttons.
 - ③ Change DATA with / (TIMER) buttons.
 - ④ Press . Finally, press .
- * DATA is memorized in the indoor unit. (DATA setting will not be changed even when the power is turned off.)

CODE ITEM	ITEM	DATA	
		00 00	00 0 1
31	Vent. button	No	Yes
33	Temperature unit	°C	°F

8. To Display the Sensor Temperature:

- Press both and buttons on the remote controller for more than 4 seconds together.
- Change the sensor address (CODE No.) with / () buttons.
- Select the UNIT No. which you want to call with the button.
- Press the button to finish service mode.

9. To Display the Trouble History:

- Press both and buttons on the remote controller for more than 4 seconds together.
- Change the alarm message: / () buttons
- Press the button to finish service mode.

CODE No. 01 → 04
(New) (Old)

3.Timer Remote Controller (RCS-TM80BG)

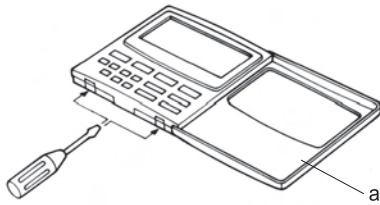


Fig. 2-4

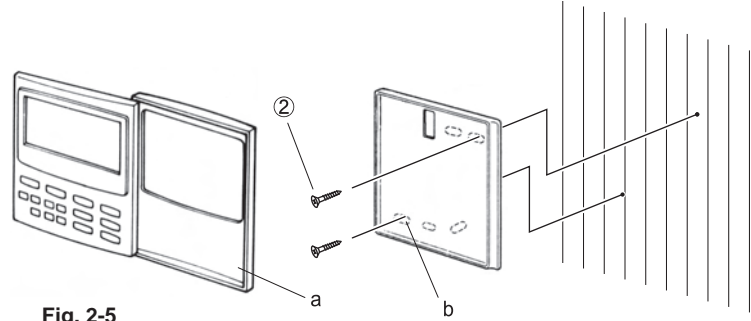





Fig. 2-5

Caution when installing the remote controller

*1 Install the remote controller more than 3-3/8" apart from the wall surface.

*2 To install the remote controllers side-by-side, keep the space between each for more than 4-59/64".

*3 To install the remote controllers one above the other, keep the space between each for more than 1".

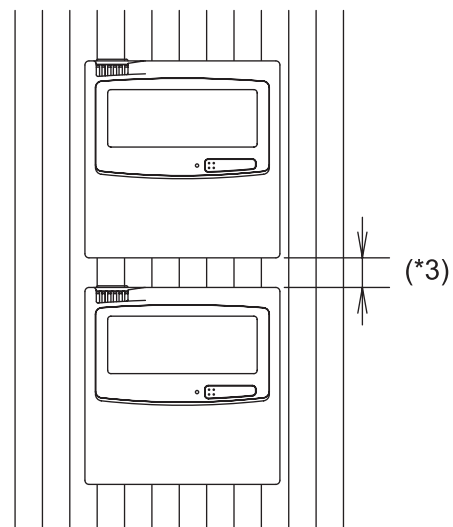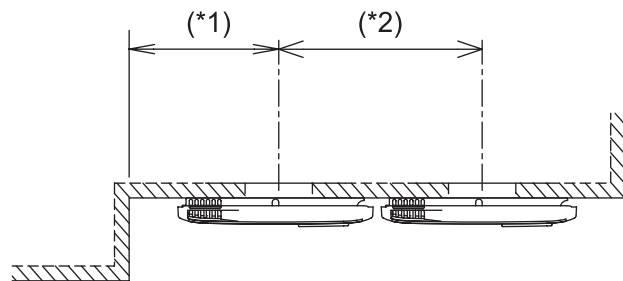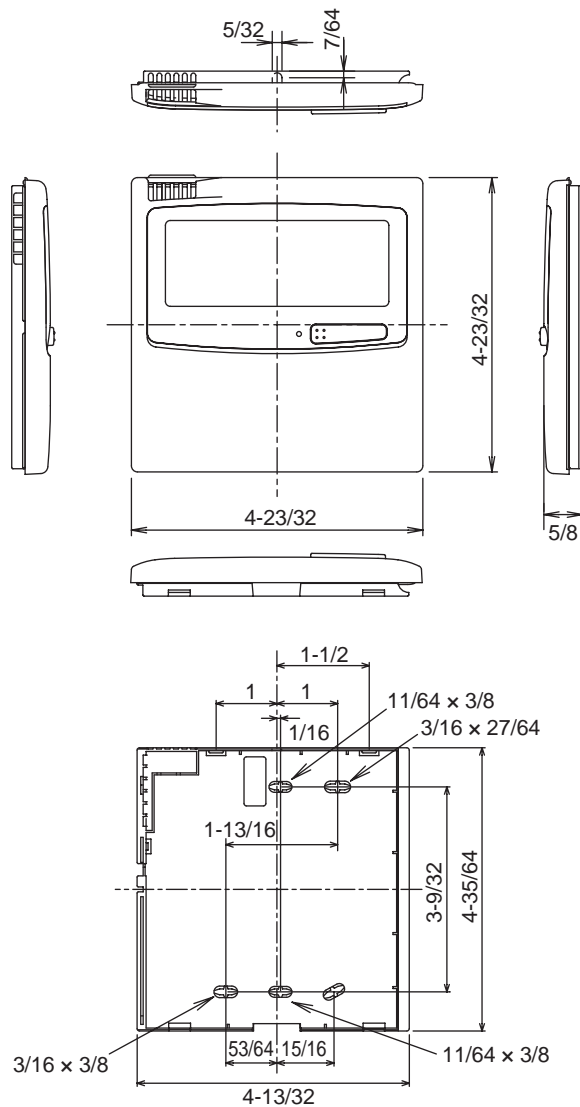

unit :in.



3.Timer Remote Controller (RCS-TM80BG)

10. Setting the Present Time

1. Press and hold  for more than 2 seconds to enter in the present day and time setting mode.


Once you enter in the setting mode, **SETTING**, “▼”(day) and “time” flash.

2. Set “▼” to today’s day of the week.

Press **DAY**  to move “▼” (flashing on the display) in the order of : Su → Mo → Tu → Press  to move it in the order of : Su → St → Fr →

^{*1} While in time setting mode, the temperature setting buttons function as **DAY** (changing day) button.


3. Press   to change the present “hour” in the range of 0 to 23^{*2}.


Set the present hour and press .

The “hour” digits light up, and the “minute” digits start flashing.


^{*2} If the clock uses the 12 hours AM/PM setting, the hour is displayed in the range of AM 0 to 11/PM 0 to 11.

4. Press  , to change the present “minute” in the range of 0 to 59.

Set the present minute and press . The day and time are set and finishes the setting mode.

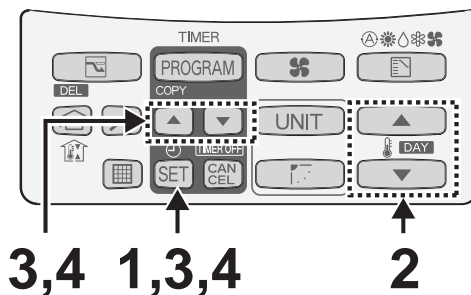

Note

- The unit returns to the normal mode if  is pressed or there is no operation made for 3 minutes during the setting. In this case, all the settings in progress will be lost.
 - If the present time is invalid, “-- : --” is displayed.
- If the power failure for more than 1 hour occurs, check if the set data of day and time are valid.

3.Timer Remote Controller (RCS-TM80BG)

11. Weekly Program Function


Checking Weekly Timer

Set the weekly program assigning a given timer to each day of the week.
Maximum of 6 programs a day and 42 programs a week can be set.
Select the day and the TIMER number you want to program.

Program image diagram

Vertical scale indicates the TIMER No.,
and horizontal scale indicates the day.

* If the day is changed, the TIMER No.
returns to "1".

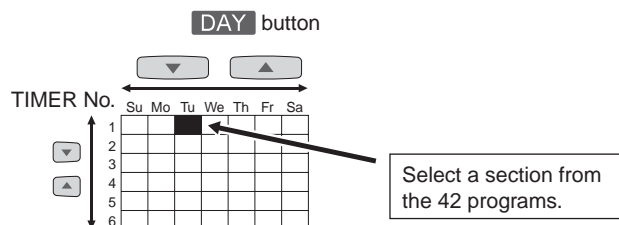

1. Press **PROGRAM** to enter the program confirmation mode "CH" and start setting.

Once you enter the program confirmation mode, the present day is indicated as TIMER No. "1".

2. Select the day.

Press **DAY** and **▲** / **▼** to move the "▼" horizontally on the day to select.

Press **▲** to move "▼" (flashing on the display) in the order of : Su → Mo → Tu....


Press **▼** to move it in the order of : Su → Sa → Fr....
"-- : --" is displayed when the program is not set.

3. Select a Timer number.

Press **▲** / **▼** to select a TIMER No. from 1 to 6.

Press **▲** to move up from 1.

Press **▼** to move down from 6.

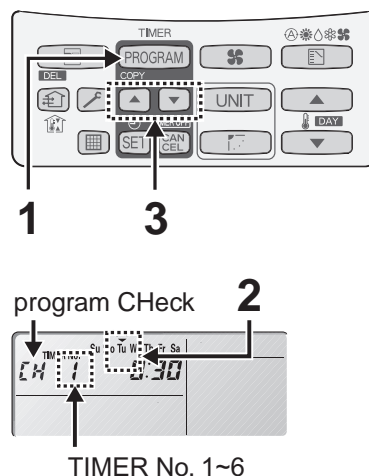


3.Timer Remote Controller (RCS-TM80BG)


● Changing the Program Timer

To set the weekly program, follow the steps below.



- 1. **Select the program you want to set in the program confirmation mode, and press . The enters the setting mode of the program currently displayed.**
* In the program setting mode, **SETTING**, “hour”, “minute” and “item” flash on the display.
- 2. **Set the “hour”. (program step 1)**
Press / to set the “hour”.
Confirm the “hour” and press . The enters the program changing mode **P1** (setting of the “minute”).
- 3. **Set the “minute”. (program step 2)**
Press / to set the “minute”.
Confirm the “minute” and press .The unit enters **P2** (the program pattern selection mode).

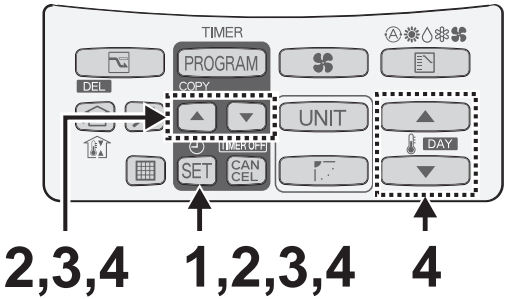

Program step1

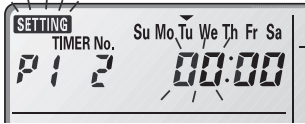

Program step2

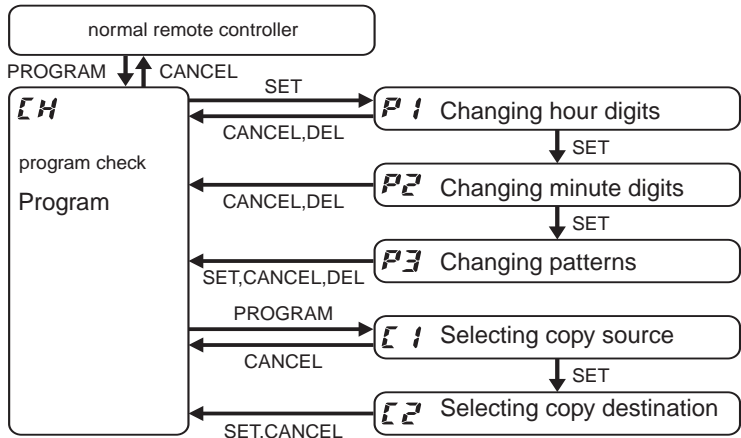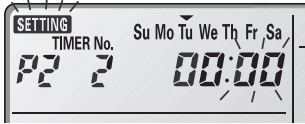

3. Timer Remote Controller (RCS-TM80BG)

4. Set the program pattern. (program step 3)

There are 4 program patterns.

Pressing  /  repeats the following display patterns.

Pattern 1

The indoor unit starts operation at the programmed time.

Pattern 2

The indoor unit stops operation at the programmed time.

Pattern 3


The indoor unit starts operation at the programmed time and changes the temperature settings.

Press  /  to change the temperature setting.

Pattern 4

The indoor unit changes the temperature setting at the programmed time.


Press  /  to change the temperature setting.

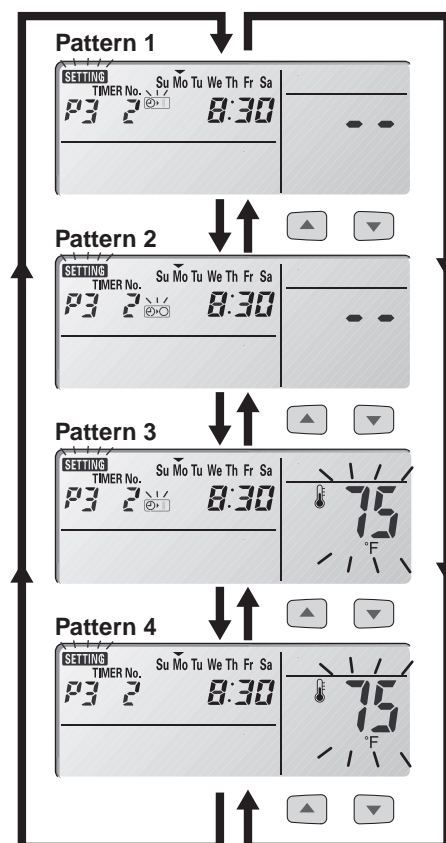

2

Select the program pattern and press . The program timer setting is confirmed and the unit enters the confirmation mode .

Note

- If you press  during the setting, it returns to the program confirmation mode.
- If there is no operation made for 3 minutes during the setting, it returns to the normal mode.
In this case, all the settings in progress will be invalid.

3. Timer Remote Controller (RCS-TM80BG)

● Deleting the Program Timer

To delete the program timer setting, follow the steps below.

1. Press **PROGRAM** to enter the program confirmation mode.
2. Press **▲** / **▼** to select the day of the program you want to delete.
3. Press **▲** / **▼** to select a TIMER No. (from 1 to 6).
4. Press **SET** to display the program setting mode **P 1**.
5. Press **DEL** to delete the program.

Note

- After deleting, the unit returns to the program confirmation mode **P 1**.
- If you press **CAN CEL** during the setting, the unit returns to the program confirmation mode.
- If there is no operation made for 3 minutes during the setting, the unit returns to the normal mode.

● Invalidating Program Timer

If you want to adjourn the program operation for more than 1 week, you can invalidate all the timer settings.

Once the timer settings are invalidated, the program will not be operated until the invalidation is cancelled.

<<How to invalidate the program timer>>

Press and hold **TIMER OFF** for more than 2 seconds.

TIMER OFF is displayed and the programs will be invalidated from the next one.

<<How to cancel the program timer invalidation>>


Press and hold **TIMER OFF** for more than 2 seconds.

TIMER OFF disappears and the programs will be validated from the next one.

If Power Failure Occurred

If the power recovers in a short time period, the program after the recovered time will be valid.

If the power recovered more than 1 hour after the failure, the present time information will be lost. In this case, the program will not be operated.

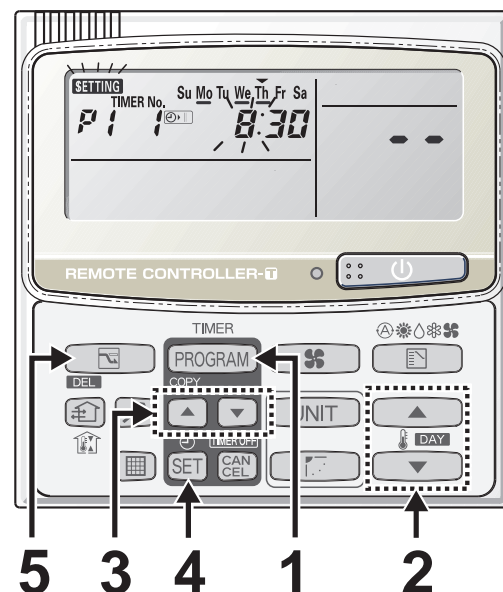


3. Timer Remote Controller (RCS-TM80BG)

● Duplicating the Program Timer

You can duplicate the preset program by day.

Select the copy source.

1. If **PROGRAM** is pressed in program checking mode **1H**, it enters the copy mode (Selecting the copy source **1**) of the program timer.
While in the copy mode of the program timer, **SETTING** and **DAY** of the copy source flash on the display.
2. Press **▲** / **▼** to select the day of the copy source.
Select the copy destination.
3. If **SET** is pressed in the mode of selecting the copy source **1**, it enters the copy mode (Selecting the copy destination **2**) of the program timer.
4. Press **▲** / **▼** to select the day of the copy source.
Then, press **SET** to complete copying and return to the program checking mode.

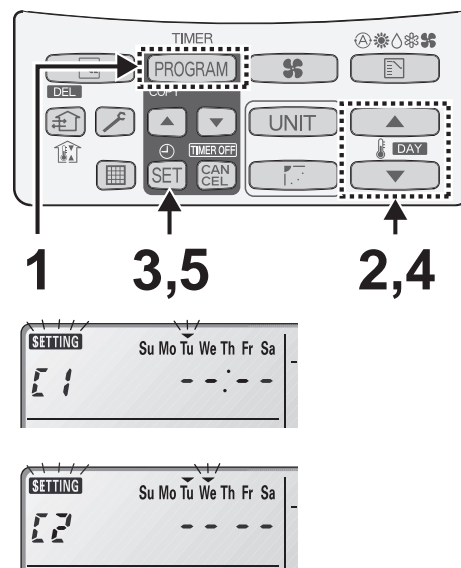

Note

The program will be overwritten if the preprogrammed day is selected as a copy source.

● Before Asking Repair Work

Before asking repair work, please check the followings.

Trouble	Possible Cause/Remedy
"ERROR" is displayed when the minute digits are entered.	If there is another TIMER No. which has the program of the same time and same day, you cannot overlap the setting.
The set data is not stored.	The stored programs are automatically sorted by the time. Check if the data is stored in the other TIMER No.
Program does not function.	Check if the time indication is not "-- : --". When the time is invalid, the program is also invalid.
	Check the remote controller prohibition inside. In that case, the program is invalid.

3. Timer Remote Controller (RCS-TM80BG)

12. Outing Function

Outing function is a function that prevents the room temperature from increasing too much (or decreasing too much) when no one is in the room.

An air conditioner works automatically if this function is set effective.


General Performance of the Outing Function

COOL / DRY

- ① The air conditioner starts operation when the room temperature increases up to $-1.8^{\circ}\text{F}(1^{\circ}\text{C})$ of the upper limit.
- ② The air conditioner stops operation when the room temperature decreases up to $-3.6^{\circ}\text{F}(2^{\circ}\text{C})$ of the upper limit.

■ For Example

- Setting at Outing Temperature $86^{\circ}\text{F}(30^{\circ}\text{C})$

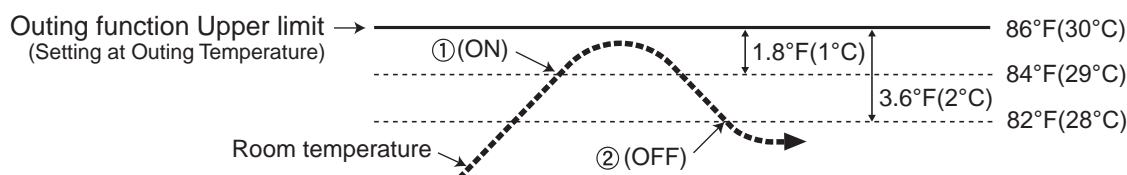


HEAT

- ① The air conditioner starts operation when the room temperature decreases up to $+1.8^{\circ}\text{F}(1^{\circ}\text{C})$ of the lower limit.
- ② The air conditioner stops operation when the room temperature increases up to $+3.6^{\circ}\text{F}(2^{\circ}\text{C})$ of the lower limit.

■ For Example

- Setting at Outing Temperature $53^{\circ}\text{F}(12^{\circ}\text{C})$.

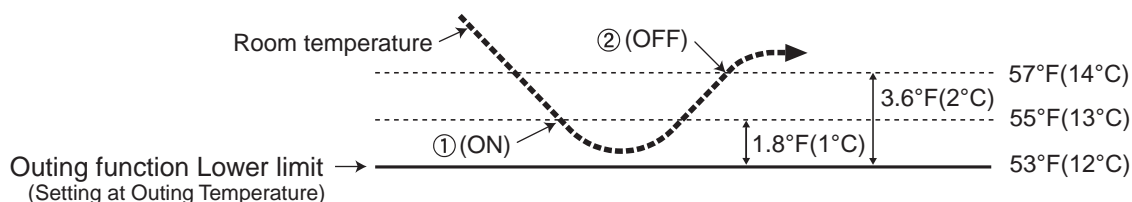


[Precautions]

- The outing control only starts/stops the air conditioner. It does not change the operation mode/temperature setting. Therefore, the operation mode/temperature needs to be set beforehand so that the outing function turns on the air conditioner with your desired operation mode/ temperature setting.
- If the room temperature rapidly changes, the room temperature may get over the upper or lower limit when the outing function is activated.
- The outing function is invalid during FAN/AUTO operation mode.
- The air conditioner's stop order (stated in ② /above) is valid only when the outing function is operated. If operated using other remote control unit (or a centralized control device such as a system control), the outing function does not work.







3. Timer Remote Controller (RCS-TM80BG)


● Setting the Outing Function

1. Press and hold  for more than 2 seconds to display the upper limit temperature setting screen.

 ,  and the upper limit temperature start flashing.

(The default value of the upper limit temperature is 99°F (37°C).)

2. Press  /  to select the upper limit temperature and press  to fix the value. The lower limit temperature setting screen is displayed.
3. Press  /  to select the lower limit temperature, and press  to fix the value. The outing function setting is completed. (The default value of the lower limit temperature is 50°F (10°C).)


* The unit returns to the normal mode if  is pressed or there is no operation made for 3 minutes during the setting. In this case, all the settings in progress will be lost.

● Canceling the outing function

Press and hold  for more than 2 seconds while the outing function is set.



2

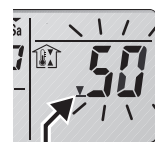

3

● Outing function indication

Outing function indication	Status
Off	The outing function is not set.
Flashing	The outing function is now being set, or under operation.
Lighting	Although the outing function is set, not under operation.


Note

A remote controller loses outing function operation information when it is cut for more than one hour during the outing function operation by electricity. It reverts from the blackout, and an air conditioner does not drive in outing function when operation is started. At this time, an air conditioner does not stop at outing function.

3. Timer Remote Controller (RCS-TM80BG)

13. Sleeping Function


- * This function leads you to a comfortable sleep and changes the room temperature during your sleep.
- * You can set the off timer every one hour from 1 to 10 hours.

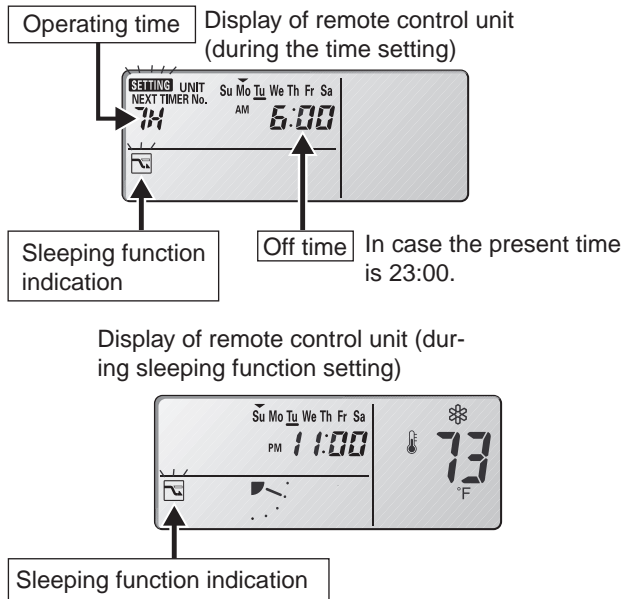

- * If no operation is made for 3 minutes, the time setting mode will be automatically finished.

Ex. In case of 7 hours timer

1. Press .
- Each time the button is pressed, the indication changes in the following order.



2. Press .
- The sleeping operation starts.

When the off time comes:



- The indoor unit stops.
 - * The temperature returns to the setting at the time when sleeping function operation started.

To cancel the sleeping function operation:


- Press .
 - * The temperature setting remains at the time cancelled.
- The following buttons also cancel the sleeping function operation.
 - button
Stop the indoor unit after the sleeping function operation is cancelled.
 - button
Changes the operation mode after the sleeping function operation is cancelled.

3. Timer Remote Controller (RCS-TM80BG)

14. Wired Remote Controller Test Run Settings

1. Press the remote controller  button for 4 seconds or longer.
2. "TEST" appears on the LCD display while the test run is in progress.
3. Then press the  button.
 - The temperature cannot be adjusted when in Test Run mode.
(This mode places a heavy load on the machines. Therefore use it only when performing the test run.)
 - The test run can be performed using the HEAT, COOL, or FAN operation modes.

Note: The outdoor units will not operate for approximately 3 minutes after the power is turned ON and after operation is stopped.

 - If correct operation is not possible, an error code is displayed on the remote controller LCD display.
(Refer to "Table of Self-Diagnostic Functions" and correct the problem.)
4. After the test run is completed, press the  button again. Check that "TEST" disappears from the LCD display.
 - To prevent continuous test runs, this remote controller includes a timer function that cancels the test run after 60 minutes.
 - The operation is possible even if the cassette-type ceiling panel has not been installed. ("P09" display does not occur.)



3. Timer Remote Controller (RCS-TM80BG)


15. Simple Settings Function

- This allows the filter lifetime, operating mode priority change, central control address, and other settings to be made for an individual or group-control indoor unit to which the remote controller used for simple settings is connected.





When this function is engaged, operation stops at the individual or group-control indoor unit to which the remote controller for simple settings is connected.

<Procedure>



- Press and hold the  and  buttons simultaneously for 4 seconds or longer.
- "SETTING," unit No. "1" (or "ALL" in the case of group control), item code "01," and settings data "00XX" are displayed blinking on the remote controller LCD display. At this time, the indoor unit fan (or all indoor unit fans in the case of group control) begins operating.


- If group control is in effect, press the  button and select the address (unit No.) of the indoor unit to set. At this time, the fan at the indoor unit begins operating.

* If unit No. "ALL" is displayed, the same setting will be made for all indoor units.

- Press the temperature setting  /  buttons to select the item code to change.
- Press the timer time  /  buttons to select the desired setting data.

* For item codes and setting data, refer to the following page.

- Press the  button.
(The display stops blinking and remains lit, and setting is completed.)
- Press the  button to return to normal remote controller display.

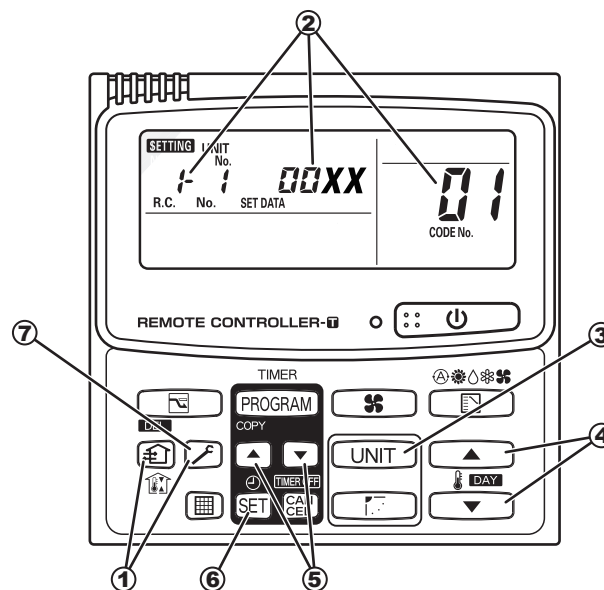

3. Timer Remote Controller (RCS-TM80BG)

List of Simple Setting Items

Item code	Item	Setting data	
		No.	Description
01	Filter sign ON time (filter lifetime)	0000	Not displayed
		0001	150 hours
		0002	2,500 hours
		0003	5,000 hours
		0004	10,000 hours
		0005	Use the filter clogging sensor.
02	Degree of filter fouling	0000	Standard (setting at time of shipping)
		0001	Highly fouled (Filter sign ON time is reduced to one-half the set time.)
03	Central control address	0001	Central control address 1
		0002	Central control address 2
		0003	Central control address 3
		}	}
		0064	Central control address 64
		0099	No central control address set (setting at time of shipping)
04	Operating mode priority change	0000	Normal (setting at time of shipping)
		0001	Priority
05	Fan speed when heating thermostat is OFF		Compressor ON Compressor OFF
		0000	MED 1 min., LO 3 min. LO
		0001	MED LO
		0002	LO LO
		0004	MED 1 min., LO 3 min. MED
		0005	MED MED
		0006	LO MED
06	Heating intake temperature shift	0000	No shift
		0001	Shifts intake temperature 2°F (1°C) down.
		0002	Shifts intake temperature 4°F (2°C) down.
		0003	Shifts intake temperature 6°F (3°C) down.
		0004	Shifts intake temperature 8°F (4°C) down.
		0005	Shifts intake temperature 10°F (5°C) down.
		0006	Shifts intake temperature 12°F (6°C) down.
07	Electric heater installation	0000	No heater
		0001	Heater installed
08	Humidifying when heater thermostat is OFF	0000	No (setting at time of shipping)
		0001	Yes
09	Change to remote controller sensor thermostat differential	0000	Thermostat OFF differential: –2°F (–1°C) (setting at time of shipping)
		0001	Thermostat OFF differential: –1°F (–0.5°C)
0E	Mode dependency	0000	Normal
		0001	
0F	Cooling-only	0000	Normal
		0001	Cooling only




3. Timer Remote Controller (RCS-TM80BG)

16. Detailed Settings Functions






- This allows the system address, indoor unit address, and other settings to be made for the individual or group-control indoor unit to which the remote controller used for detailed settings is connected.

When detailed settings mode is engaged, operation stops at the individual or group-control indoor unit where the remote controller used for detailed settings is connected. Simple settings items can also be set at this time.



<Procedure>


- Press and hold the ,  and  buttons simultaneously for 4 seconds or longer.
- "**SETTING**," unit No. "**1-1**" (or "**ALL**" in the case of group control), item code "**10**," and settings data "**00XX**" are displayed blinking on the remote controller LCD display.

At this time, the indoor unit fan (or all indoor unit fans in the case of group control) begins operating.

- If group control is in effect, press the  button and select the address (unit No.) of the indoor unit to set. At this time, the fan at the indoor unit begins operating.
- Press the temperature setting  /  buttons to select the item code to change.
- Press the timer time  /  buttons to select the desired setting data.

* For item codes and setting data, refer to the following page.

- Press the  button.
(The display stops blinking and remains lit, and setting is completed.)
- Press the  button to return to normal remote controller display.

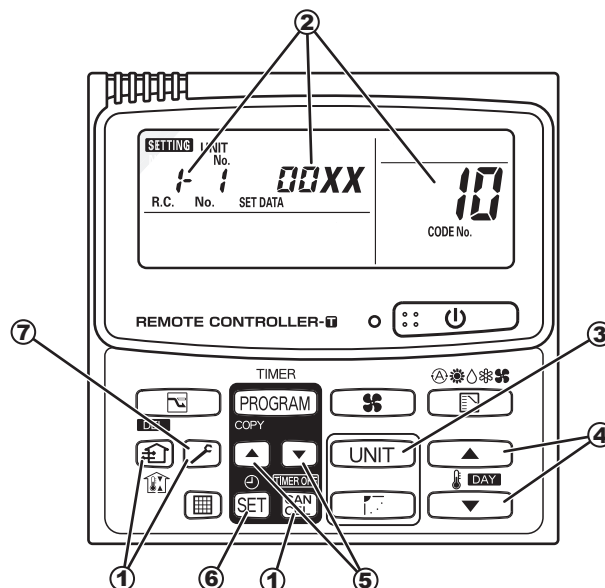

3. Timer Remote Controller (RCS-TM80BG)

List of Detailed Setting Items

Item code	Item	Setting data					
		No.	Description	No.	Description	No.	Description
10	Type	0000	1-Way Air Discharge Semi-Concealed (A)	0001	4-Way Air Discharge Semi-Concealed (X)	0005	Concealed Duct (U)
		0006	Concealed Duct High Static Pressure (D)	0007	Ceiling-Mounted (T)	0008	Wall-mounted (K)
11	Indoor unit capacity	0001	22 (Type 0752)	0003	28 (Type 0952)	0005	36 (Type 1252)
		0009	56 (Type 1852)	0012	80 (Type 2452) (Except FR254, FMR254)	0015	112 (Type 3652)
		0017	140 (Type 4852)				
12	System address	0001	Unit No. 1				
		0002	Unit No. 2				
		0003	Unit No. 3				
		}	{				
		0030	Unit No. 30				
		0099	Not set				
13	Indoor unit address	0001	Unit No. 1				
		0002	Unit No. 2				
		0003	Unit No. 3				
		}	{				
		0064	Unit No. 64				
		0099	Not set				
14	Group control address	0000	Individual (1:1 = Indoor unit with no group wiring)				
		0001	Main unit (One of the group-control indoor units)				
		0002	Sub unit (All group-control indoor units except for main unit)				
		0099	Not set				
17	Cooling intake temperature shift	−010	Shifts intake temperature by −20°F (−10°C).				
		−009	Shifts intake temperature by −18°F (−9°C).				
		}	{				
		−001	Shifts intake temperature by −2°F (−1°C).				
		0000	No intake temperature shift				
		0001	Shifts intake temperature by +2°F (+1°C).				
		}	{				
		0009	Shifts intake temperature by +18°F (+9°C).				
18	Automatic stop time after operation start	0000	Function disabled				
		0001	Stops automatically 5 minutes after operation starts.				
		0002	Stops automatically 10 minutes after operation starts.				
		}	{				
		0123	Stops automatically 615 minutes after operation starts.				
		0124	Stops automatically 620 minutes after operation starts.				
		0125	Stops automatically 625 minutes after operation starts.				

3. Timer Remote Controller (RCS-TM80BG)

Item code	Item		Setting data	
			No.	Description
1b (1B)	Forced thermostat ON time		0000	5 minutes
			0001	4 minutes
1c	Cooling discharge temperature shift		−010	− 20 deg (− 10°C)
			−009	− 18 deg (− 9°C)
			−008	− 16 deg (− 8°C)
			}	}
			0010	+ 20 deg (10°C)
1d	Heating discharge temperature shift		−010	− 20 deg (− 10°C)
			−009	− 18 deg (− 9°C)
			−008	− 16 deg (− 8°C)
			}	}
			0010	+ 20 deg (10°C)
1e	Temperature shift for cooling/heating change in “Auto Heat/Cool” mode		0001	± 2 deg (± 1°C)
			0002	± 4 deg (± 2°C)
			0003	± 6 deg (± 3°C)
			}	}
			0007	± 14 deg (± 7°C)
<div>1f (Upper limit)</div> <div>20 (Lower limit)</div> <div>21 (Upper limit)</div> <div>22 (Lower limit)</div> <div>23 (Upper limit)</div> <div>24 (Lower limit)</div> <div>25 (Upper limit)</div> <div>26 (Lower limit)</div>	Change to remote control temperature setting range	Cooling	0018	64°F (18°C) (Lower limit at time of shipping)
			0019	66°F (19°C)
			}	}
			0029	84°F (29°C)
			0030	86°F (30°C) (Upper limit at time of shipping)
		Heating	0016	60°F (16°C) (Lower limit at time of shipping)
			0017	62°F (17°C)
			}	}
			0029	84°F (29°C)
			0030	86°F (30°C) (Upper limit at time of shipping)
		Drying	0018	64°F (18°C) (Lower limit at time of shipping)
			0019	66°F (19°C)
			}	}
			0029	84°F (29°C)
			0030	86°F (30°C) (Upper limit at time of shipping)
		Auto heat/cool	0017	62°F (17°C) (Lower limit at time of shipping)
			0018	64°F (18°C)
			}	}
			0026	78°F (26°C)
			0027	80°F (27°C) (Upper limit at time of shipping)
29	Humidifier operation		0000	Normal
			0001	Ignore heat exchanger temperature conditions.
2a	Filter (CN70) input switching		0000	Filter input (differential pressure switch input)
			0001	Alarm input (for trouble input about air cleaner or similar device)
			0002	Humidifier input (Operates linked with drain pump when humidifier is ON.)
2c	Indoor unit electronic control valve		0000	Present (Setting at time of shipping)
			0002	None
2e	T10 terminal switching		0000	Normal (Used as optional relay PCB or JEMA standard HA terminal.)
			0001	Used for OFF reminder
			0002	Fire prevention input

3. Timer Remote Controller (RCS-TM80BG)

Item code	Item	Setting data	
		No.	Description
2F	Automatic drain pump operation	0000	No forced operation
		0001	Forced operation for 1 minute
		}	}
		0060	Continuous operation
31	Ventilation fan operation	0000	None
		0001	Ventilation fan operated by remote controller.
32	Wired remote controller sensor	0000	Not used. (Body sensor is used.)
		0001	Remote control sensor is used.
34	"Operation change control in progress" display	0000	Normal (displayed)
		0001	Not displayed
35	OFF reminder function for when weekly timer is used	0000	None
		0001	Only stop time setting is enabled.
3A	Discharge temperature control	0000	Discharge temperature control OFF
		0001	Discharge temperature control ON
3b	RAP valve	0000	RAP valve control OFF
		0001	RAP valve control ON
3C	Heat exchanger temperature for cold air discharge (Heat exchanger control point for control to prevent cold air)	0013	Control temperature 55°F (13°C)
		0014	Control temperature 57°F (14°C)
		}	}
		0025	Control temperature 77°F (25°C)
		0026	Control temperature 78°F (26°C)
3d	Fan output switching	0000	Output linked with fan. (ON when indoor unit fan is operating.)
		0001	Fan mode operation output
3E	Drain pump delayed start time	0000	No delayed start
		0001	1 sec. delayed start
		0002	2 sec. delayed start
		}	}
		0058	58 sec. delayed start
		0059	59 sec. delayed start
		0060	60 sec. delayed start
40	Humidifier setting	0000	Humidifier output OFF. Drain pump stopped.
		0001	Humidifier output ON. Drain pump operates.
		0002	Humidifier output ON. Drain pump operates for 1 minute when total humidifier operating time reaches 60 minutes.
		0003	Humidifier output ON. Drain pump stopped.
45	Flap operation mode	0000	Standard setting
		0001	Draft reduction mode (Flap swing lower-limit position is upwards.)
46	Flap swing mode	0000	Smudging reduction mode (Flap swing upper-limit position is shifted downwards.)
		0001	Normal mode
		0002	Draft reduction mode (Flap lower-limit position is shifted upwards.)

3.Timer Remote Controller (RCS-TM80BG)

Item code	Item	Setting data		
		No.	Description	
5d	Fan tap setting (Fan tap change in order to prevent drop in air discharge caused by filter installation)		DC fan tap operating mode	Purpose
		0000	Standard	Standard (setting at time of shipping)
		0001	High ceiling use	High ceiling setting 1 (with standard panel)
			For low static-pressure filter	Ultra long-life filter, oil guard panel, ammonia deodorizing filter, optical regenerative deodorizing filter
		0003	High ceiling use	High ceiling setting 2 (with standard panel)
			For low static-pressure filter	(Antibacterial) high-performance filter (90%) (Antibacterial) high-performance filter (65%) Air-cleaning unit, air-cleaning unit + optical regenerative deodorizing filter, deodorant (activated charcoal) filter
			For air-blocking material	For 3-way discharge, when discharge duct is connected
5E	Humidifier ON time (ON time per 60 seconds)	0000	For air-blocking material	For 2-way discharge
		0000	No humidifier output	
		0001	1 sec.	
		0002	2 sec.	
		}	}	
		0058	58 sec.	
		0059	59 sec.	
5F	Repeat timer switching	0000	Continuously ON	
		0001	Function disabled	
60	Timer function change prohibit	0000	Function enabled	
		0001	Function disabled	
62	Smudging control	0000	Function enabled	
			No smudging control	

3. Timer Remote Controller (RCS-TM80BG)

Selecting the DC fan motor tap (when setting with the remote controller)

<Procedure>

Stop the system before performing these steps.

- ① Press and hold the , and buttons simultaneously for 4 seconds or longer.
- ② If group control is in effect, press the button and select the address (unit No.) of the indoor unit to set. At this time, the fan at the indoor unit begins operating.
- ③ Use the temperature setting buttons to select item code “5d.”
- ④ Press the timer time / buttons to select the desired setting data.


* For item codes and setting data, refer to Table 1 – Table 4.

- ⑤ Press the button. (The display stops blinking and remains lit, and setting is completed.)

* If air-blocking material is used, use the same procedure as in steps (3) – (5) above and change the setting for item code “62” to “0000.”

To change the selected indoor unit, go to step (2).

- ⑥ Press the button to return to normal remote controller display.

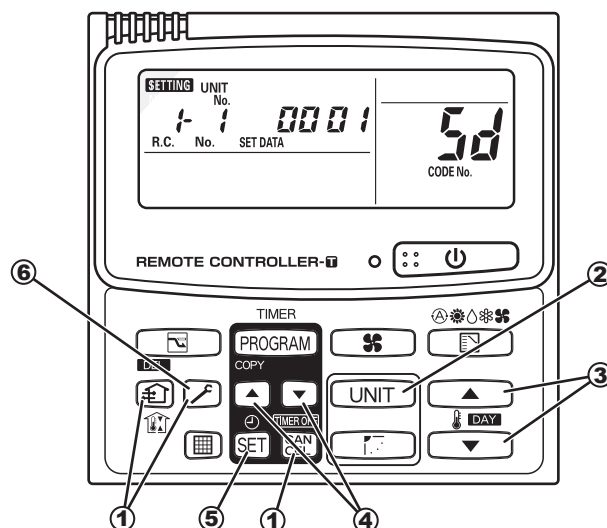

* Failure to make this setting may result in decreased airflow and condensation.

Table 1 Table of DC Fan Motor Tap Settings (4-way Air Discharge Semi-Concealed type)

Setting No.	Remote controller setting data	Purpose of use, names of accessories
	0000	Standard (setting at time of shipping)
(1)	0001	High ceiling setting 1 (for standards panel)
		Super long-life filter
		Oil guard panel
		Oil guard panel with raising / lowering grille
		Ammonia deodorant filter
		Optical regeneration deodorant filter
(3)	0003	High ceiling setting 2 (for standards panel)
		Ceiling panel with special raising / lowering grille for high locations
		High performance filter (90% by JIS colorimetric method)
		High performance filter (65% by JIS colorimetric method)
		Air cleaning unit
		Optical regeneration deodorant filter for air cleaning unit
		Deodorant filter
		Air-blocking material (for 3-way air discharge)
		Air-blocking material (when a discharge duct is connected)
(6)	0006	Air-blocking material (for 2-way air discharge)

Table 2 Table of DC Fan Motor Tap Settings (ceiling-mounted type)

Setting No.	Remote controller setting data	Purpose of use, names of accessories
	0000	Standard (setting at time of shipping)
(1)	0001	High ceiling setting
		Super long-life filter
		Ammonia deodorant filter (65% by JIS colorimetric method)
		Optical regeneration deodorant filter
(3)	0003	High performance filter (65% by JIS colorimetric method)
		Deodorant filter (65% by JIS colorimetric method)

Table 3 Table of DC Fan Motor Tap Settings (1-way Air Discharge Semi-Concealed type)

Setting No.	Remote controller setting data	Purpose of use, names of accessories
	0000	Standard (setting at time of shipping)
(1)	0001	Optical regeneration deodorant filter
(3)	0003	Deodorant filter (65% by JIS colorimetric method)
		Ammonia deodorant filter (65% by JIS colorimetric method)


3. Timer Remote Controller (RCS-TM80BG)

Selecting the DC fan motor tap (when setting from the PCB)

● 4-way Air Discharge Semi-Concealed type

<Procedure> Stop the system before performing these steps.

- ① Open the electrical component box cover, then check the indoor unit control PCB.
- ② Connect the jumper connector (2P: yellow) which was supplied with the accessory to the correct connector pin on the indoor unit control PCB according to the setting number which was confirmed in Table 1 (Table of DC Fan Motor Tap Settings).
 - If the setting No. is (1), then connect the jumper connector to the connector pin TP1 (2P: red) on the indoor unit control PCB.
 - If the setting No. is (3), then connect the jumper connector to the connector pin TP3 (2P: yellow) on the indoor unit control PCB.

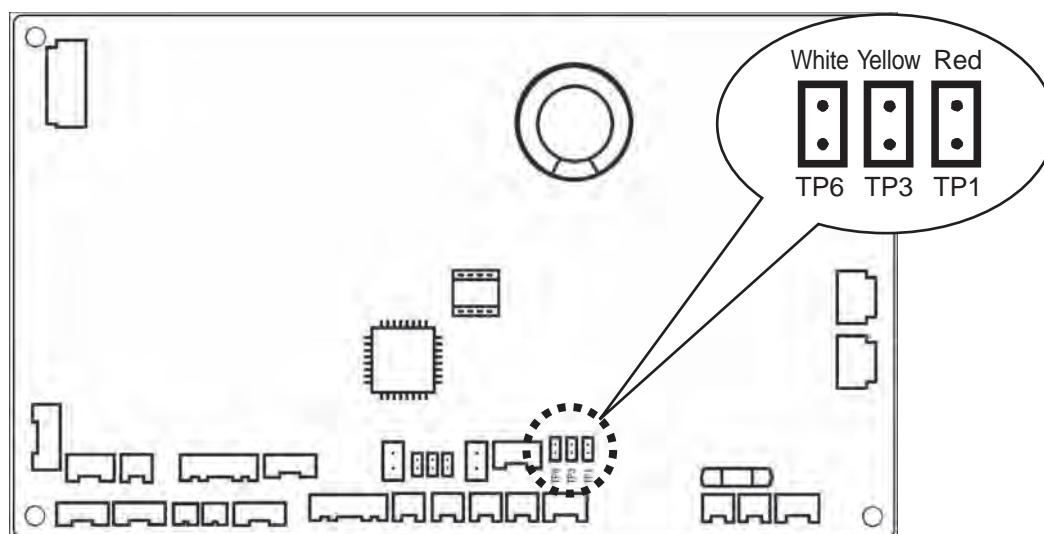

● Suspended type

<Procedure> Stop the system before performing these steps.

- ① Open the electrical component box cover, then check the indoor unit control PCB.
- ② Connect the jumper connector (2P: yellow) which was supplied with the accessory to the correct connector pin on the indoor unit control PCB according to the setting number which was confirmed in Table 2 (Table of DC Fan Motor Tap Settings).
 - If the setting No. is (1), then connect the jumper connector to the connector pin TP1 (2P: red) on the indoor unit control PCB.
 - If the setting No. is (3), then connect the jumper connector to the connector pin TP3 (2P: yellow) on the indoor unit control PCB.

















● 1-way Air Discharge Semi-Concealed type


<Procedure> Stop the system before performing these steps.

- ① Open the electrical component box cover, then check the indoor unit control PCB.
- ② Connect the jumper connector (2P: yellow) which was supplied with the accessory to the correct connector pin on the indoor unit control PCB according to the setting number which was confirmed in Table 3 (Table of DC Fan Motor Tap Settings).
 - If the setting No. is (1), then connect the jumper connector to the connector pin TP1 (2P: red) on the indoor unit control PCB.
 - If the setting No. is (3), then connect the jumper connector to the connector pin TP3 (2P: yellow) on the indoor unit control PCB.

3. Timer Remote Controller (RCS-TM80BG)

17. Remote Controller Servicing Functions

Function	Description	Button operation	Reset operation	Unit status
Test run	Operation with forced thermostat ON	Press and hold the  button for 4 seconds or longer.	Press the  button.	Current operation is maintained.
Sensor temperature display	Temperature display from each sensor	Press and hold the  and  buttons for 4 seconds or longer.		
Servicing check display	Alarm history display	Press and hold the  and  buttons for 4 seconds or longer.		
Simple settings	Filter lifetime, operating mode priority, central control address, and other settings	Press and hold the  and  buttons for 4 seconds or longer.		When settings are made from a remote controller, the indoor unit where that remote controller is connected stops.
Detailed settings	System address, indoor unit address, central control address, and other settings	Press and hold the  ,  , and  buttons for 4 seconds or longer.		
Automatic address	Automatic address setting based on command from the wired remote controller	Press and hold the  and the timer operation  buttons for 4 seconds or longer.	Automatic reset	Entire system stops.
Address change	Change of indoor unit address	Press and hold the  and the timer operation  buttons for 4 seconds or longer.	Press the  button.	

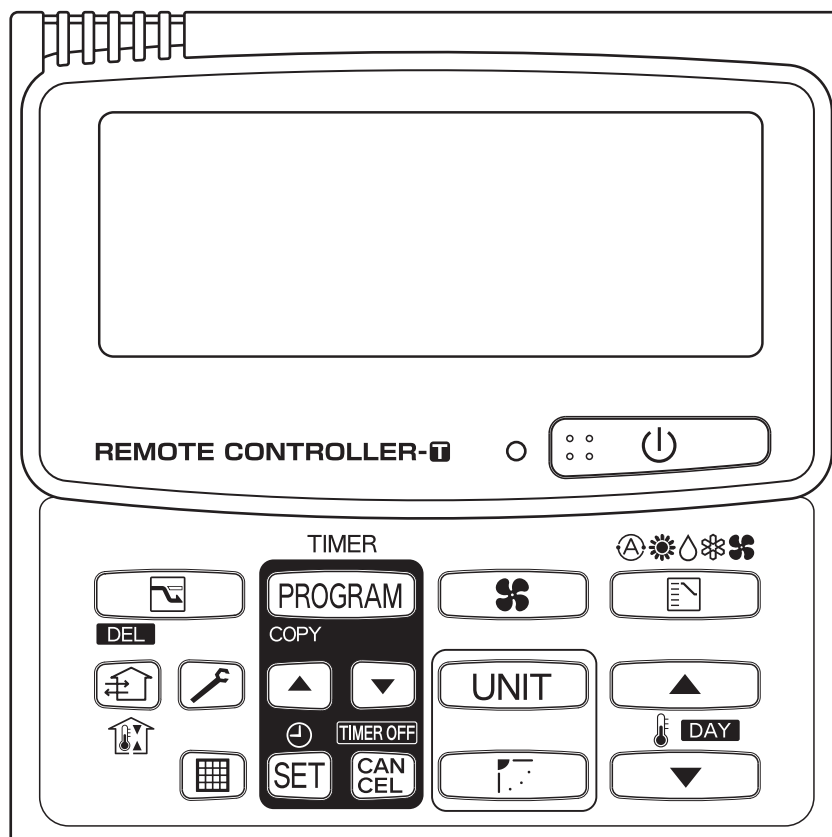




3. Timer Remote Controller (RCS-TM80BG)

Test Run Function

Operates the unit with the thermostat forced ON.

<Procedure>

- ① Press and hold the  button for 4 seconds or longer.
- ② "Test" appears on the remote controller LCD display.
- ③ Start operation.
- ④ Press the  button to return to normal remote controller display.

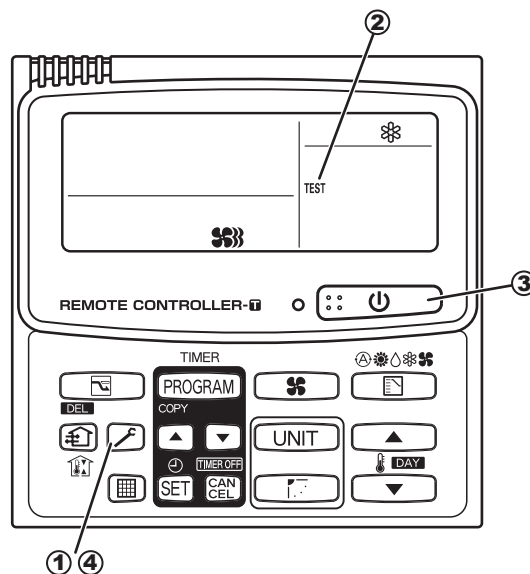







3. Timer Remote Controller (RCS-TM80BG)

■ Sensor Temperature Display Function (displayed regardless of whether unit is operating or stopped)

The procedure below displays the sensor temperatures from the remote controller, indoor unit, and outdoor unit on the remote controller.

<Procedure>

- ① Press and hold the  and  buttons simultaneously for 4 seconds or longer.
- ② The unit No. "X-X" (main unit No.), item code "XX" (sensor address), and servicing monitor "00.XX" (sensor temperature) are displayed on the remote controller LCD display.
- ③ Press the temperature setting  /  buttons and select the item code to the address of the sensor to monitor.
(For the relationships between the sensor addresses and sensor types, refer to the table of temperature sensors and addresses below.)
- ④ If group control is in effect, press the  button to select the unit to monitor.
Press the temperature setting buttons to select the item code to change.
- ⑤ Press the  button to return to normal remote controller display.


NOTE

The temperature display appears as "- - -" for units that are not connected.

* If monitor mode is engaged while normal operation is in progress, only the parts of the LCD display shown in the figure will change. Other parts continue to display the same information as during normal operation.

Indoor unit sensors	
02	Intake temp.
03	E1
04	—
05	E3
06	Discharge temp.
07	Discharge temp. setting
08	Position of indoor unit Motor Operated Valve (MOV)

Sensor Temperature Display

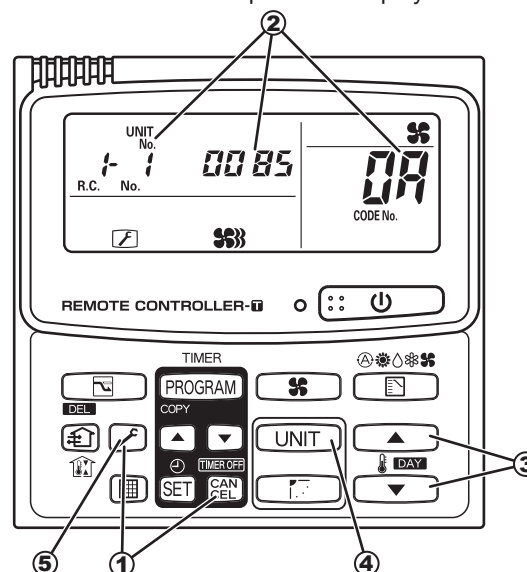

NOTE:

The temperature on the remote controller is displayed in Celsius (C).

Please note that you will not mistakenly read it in Fahrenheit (F) on the display.

Outdoor unit sensors				
Unit No. 1	Unit No. 2	Unit No. 3	Unit No. 4	
0A	2A	4A	6A	Discharge temp. 1
0B	2B	4B	6B	Discharge temp. 2
0C	2C	4C	6C	High-pressure sensor temp.
0D	2D	4D	6D	Heat exchanger gas 1
0E	2E	4E	6E	Heat exchanger liquid 1
0F	2F	4F	6F	Heat exchanger gas 2
10	30	50	70	Heat exchanger liquid 2
11	31	51	71	Outdoor air temp.
12	32	52	72	—
13	33	53	73	—
14	34	54	74	CT2
15	35	55	75	—
16	36	56	76	—
17	37	57	77	Discharge temp. 3
18	38	58	78	CT3
19	39	59	79	—
1A	3A	5A	7A	—
1B	3B	5B	7B	—
1C	3C	5C	7C	—
1D	3D	5D	7D	Low-pressure sensor temp.
1E	3E	5E	7E	Suction temp.
1F	3F	5F	7F	Oil 1
20	40	60	80	Oil 2
21	41	61	81	Oil 3
22	42	62	82	—

Contents

3. TROUBLE DIAGNOSIS

1. Contents of Remote Controller Switch Alarm Display3-2




















2. Outdoor Unit Control PCB LED Display3-4

3. W-2WAY ECO-i Alarm Codes.....3-5

4. Blinking ⚠ (Inspection) Display on the Remote Controller 3-22

1. Contents of Remote Controller Switch Alarm Display

ON: ○ Blinking: ☀ OFF: ●

Possible cause of malfunction			Wired remote control display	Wireless remote controller receiver display		
				Operation	Timer	Standby for heating
Serial communication errors Mis-setting	Remote controller is detecting error signal from indoor unit.	Error in receiving serial communication signal. (Signal from main indoor unit in case of group control) Outdoor system address, indoor unit address, or indoor unit address independent/main/sub unit setting has not been made. (Auto address is not completed.)	<E01>			
		Error in transmitting serial communication signal.	<E02>			
	Indoor unit is detecting error signal from remote controller and system controller.		<<E03>>			
	Indoor unit is detecting error signal from outdoor unit.	•Error in receiving serial communication signal. •When turning on the power supply, the number of connected indoor units does not correspond to the number set. (Except R.C. address is "0.") •Group wiring failure of indoor units in the refrigerant system (occurring when remote controller is operated immediately after automatic address setting)	E04			
	Outdoor unit is detecting error signal from indoor unit.	•Error in receiving serial communication signal. •There is an indoor unit which does not send signals when the power is ON.	E06			
	Improper setting	•Indoor unit address setting is duplicated.	<<E08>>			
		•Duplicated remote controller "main" setting.	<<E09>>			
	Improper setting	Automatic address setting start is prohibited. AP pin was short-circuited at time when automatic address setting was started.	E12			
	Indoor unit communication error of group control wiring.	Error of main indoor unit in receiving serial communication signal from sub indoor units.	E18			
	During auto. address setting, number of connected units does not correspond to number set.	Number of connected indoor units is less than the number set.	E15			
		Number of connected indoor units is more than the number set.	E16			
		No indoor unit is connected during auto. address setting.	E20			
		Main outdoor unit is detecting error signal from sub outdoor unit.	E24			
		Duplicated outdoor unit address.	E25			
		Mismatch in "No. of outdoor units" setting.	E26			
		Error of sub outdoor unit in receiving serial communication signal from main outdoor unit.	E29			
	Improper setting	Connected indoor unit is not a multi unit.	<<L02>>			
		Duplication of main indoor unit address setting in group control.	<L03>			
		Duplicated indoor unit priority (priority indoor unit).	L05			
		Duplicated indoor unit priority (non-priority indoor unit) and outdoor unit.	L06			
		Group control wiring is connected to individual control indoor unit.	L07			
		Indoor unit address is not set.	L08			
		Capacity code of indoor unit is not set.	<<L09>>			
		Mismatch of outdoor unit type.	L17			
		Duplication of outdoor R.C. address setting.	L04			
Capacity code of outdoor unit is not set.		L10				
Thermistor fault	Indoor unit	Indoor coil temp. sensor (E1)	<<F01>>			
		Indoor coil temp. sensor (E3)	<<F03>>			
		Indoor suction air (room) temp. sensor	<<F10>>			
		Indoor discharge air temp. sensor	<<F11>>			

Continued

1. Contents of Remote Controller Switch Alarm Display


ON: ○ Blinking: ☀ OFF: ●













Possible cause of malfunction				Wired remote control display	Wireless remote controller receiver display		
					Operation	Timer	Standby for heating
Thermistor fault	Outdoor unit	Compressor 1 (INV) discharge temp. sensor	F04				
		Compressor 2 (constant speed) discharge temp. sensor	F05				
		Compressor 3 (constant speed) discharge temp. sensor	F22				
		Outdoor air temp. sensor	F08				
		Heat exchanger 1 liquid temp. sensor	F07				
		Heat exchanger 1 gas temp. sensor	F06				
		Compressor intake temp. sensor (suction temp)	F12				
		High-pressure sensor	F16				
		Low-pressure sensor	F17				
		Heat exchanger 2 liquid temp. sensor	F24				
		Heat exchanger 2 gas temp. sensor	F23				
Ceiling panel connection failure			<<P09>>				
Protective device	Indoor unit	Thermal protector in indoor unit fan motor is activated.	<<P01>>				
		Float switch is activated.	<<P10>>				
		Fan inverter protection function activated.	<<P12>>				
		O2 sensor activated	P14				
	Outdoor unit	Compressor 1 (INV) discharge temp. trouble	P03				
		High-pressure switch	P04				
		Reverse phase (missing phase) detected.	P05				
		DCCT, ACCT overcurrent (compressor less than 80 Hz)	P16				
		Compressor 2 (constant speed) discharge temp. trouble	P17				
		Compressor 3 (constant speed) discharge temp. trouble	P18				
		Outdoor unit fan trouble	P22				
		DCCT, ACCT overcurrent (80 Hz or more)	P26				
		Start failure caused by compressor wire missing phase, DCCT failure, or similar problem (INV compressor start failure).	P29				
Failure of nonvolatile memory IC (EEPROM) on indoor unit control PCB			F29	Operating and timer lamp blinking simultaneously 			
Failure of nonvolatile memory IC (EEPROM) on outdoor unit control PCB			F31	Operating and timer lamp blinking simultaneously 			
Protective device	Overload current detected.	Compressor 2 (constant speed)	H11				
		Compressor 3 (constant speed)	H21				
	Lock current detected.	Compressor 2 (constant speed)	H12				
		Compressor 3 (constant speed)	H22				
		No current detected when compressor was ON.	Compressor 1 (INV)				H03
	Compressor 2 (constant speed)		H13				
	Compressor 3 (constant speed)		H23				
	Discharge temp. sensor trouble	Compressor 2 (constant speed)	H15				
		Compressor 3 (constant speed)	H25				
	Outdoor unit protection	Low-pressure trouble	H06				
Outdoor unit protection	HIC trouble alarm	H31					
Connection failure of oil detection sensor		Compressor 1 (INV)	H08				
		Compressor 2 (constant speed)	H27				
		Compressor 3 (constant speed)	H28				
Fusing of electromagnetic contact (Current detected when compressor was OFF)			only blinking	(No display changes)			
Automatic backup operation							

<< >> alarm indication: Does not affect the operation of other indoor units.

< > alarm indication: In some cases may affect the operation of other indoor units.

2. Outdoor Unit Control PCB LED Display

(○ : ON  : Blinking ● : OFF)

LED (RED)		Display meaning
1	2	
		After the power is turned ON (and automatic address setting is not in progress), no communication with the indoor units in that system is possible.
(Both OFF)		
		After power is turned ON (and automatic address setting is not in progress), 1 or more indoor units are confirmed in that system; however, the number of indoor units does not match the number that was set.
(OFF)	(ON)	
		Automatic address setting was completed successfully. (After the power is turned ON, and automatic address setting is not in progress, the number of detected indoor units connected to that system matches the number that was set, and regular communications are occurring.)
(Both OFF)		
		Automatic address setting is in progress.
(Blinking alternately)		
		At time of automatic address setting, the number of indoor units did not match the number that was set.
(Both blinking)		
		Alarm display LED 1 blinks M times, then LED 2 blinks N times. The cycle then repeats. M = 2: P alarm 3: H alarm 4: E alarm 5: F alarm 6: L alarm N = Alarm No. Example: LED 1 blinks 2 times, then LED 2 blinks 17 times. The cycle then repeats. Alarm is “P17.”
(Blinking alternately)		

3. W-2WAY ECO-i Alarm Codes

W-2WAY ECO-i Trouble Diagnosis


Alarm code	Alarm meaning	Page
E06	Outdoor unit failed to receive serial communication signals from indoor unit.	3-6
E12	Automatic address setting start is prohibited.	3-6
E15	Automatic address setting alarm (too few units)	3-6
E16	Automatic address setting alarm (too many units)	3-7
E20	No indoor units at automatic address setting.	3-7
E24	Outdoor unit (INV) failed to receive communications from another outdoor unit (constant-speed).	3-7
E25	Outdoor unit address setting failure (duplication)	3-8
E26	Mismatch in outdoor unit quantity	3-8
E29	Outdoor unit failed to receive communication from relay control unit	3-8

F04	Compressor 1 discharge temperature sensor trouble	3-9
F05	Compressor 2 discharge temperature sensor trouble	3-9
F22	Compressor 3 discharge temperature sensor trouble	3-9
F06	Gas temperature sensor trouble at outdoor heat exchanger 1 (In)	3-10
F07	Liquid temperature sensor trouble at outdoor heat exchanger 1 (Out)	3-10
F08	Outdoor air temperature sensor trouble	3-11
F12	Compressor intake temperature sensor trouble	3-11
F16	High-pressure sensor trouble	3-11
F17	Low-pressure sensor trouble	3-11
F23	Gas temperature sensor trouble at outdoor heat exchanger 2 (In)	3-10
F24	Liquid temperature sensor trouble at outdoor heat exchanger 2 (Out)	3-10
F31	Outdoor unit non-volatile memory (EEPROM) trouble	3-12

H03	Compressor CT sensor disconnected or short-circuit.	3-12
H11	Constant speed compressor 2 overcurrent alarm	3-14
H12	Constant speed compressor 2 lock current alarm	3-14
H05	Compressor 1 discharge temperature sensor disconnected	3-15
H06	Low-pressure trouble in refrigerant circuit.	3-13
H13	Compressor 2 CT sensor disconnected or short-circuit	3-15
H15	Compressor 2 discharge temperature sensor disconnected	3-15
H21	Compressor 3 overcurrent alarm	3-14
H22	Compressor 3 lock current alarm	3-14
H23	Compressor 3 CT sensor disconnected or short-circuit	3-15
H25	Compressor 3 discharge temperature sensor disconnected	3-15
H31	HIC trouble alarm	3-16

L04	Outdoor unit address duplication	3-16
L05	Duplicated indoor unit priority (alarm at priority indoor units)	3-16
L06	Duplicated indoor unit priority (alarm at non-priority indoor units)	3-17
L10	Outdoor unit capacity not set	3-17
L17	Outdoor unit model mismatch	3-17
L18	4-way valve operation failure.	3-17

P03	Compressor 1 discharge temperature trouble	3-18
P04	High-pressure switch activated	3-19
P05	Reverse phase (or missing phase) detected, capacity mismatch	3-20
P16	Compressor 1 overcurrent	3-20
P17	Compressor 2 discharge temp trouble	3-18
P18	Compressor 3 discharge temp trouble	3-18
P22	Fan motor trouble	3-21
P26	Inverter compressor high-frequency overcurrent alarm	3-21
P29	Inverter compressor missing phase or lock alarm	3-21

Blinking  on the wired remote controller	CHECK blinking (1)	3-22
	CHECK blinking (2)	3-23

3. W-2WAY ECO-i Alarm Codes


E06 Alarm

Alarm code	E06
Alarm meaning	Outdoor unit failed to receive serial communication signals from indoor unit.
Alarm conditions	Outdoor unit failed to receive serial communication signals from indoor unit.
Probable cause	(1) The indoor unit power was cut OFF after initial communications were completed. (2) An open circuit or short circuit occurred in the inter-unit control wiring after initial communications were completed.
Check	Check the power at the indoor and outdoor units, and check the inter-unit control wiring.
Correction	—
Example	—
Notes	This alarm is detected after initial communications are completed. Therefore, it does not occur in cases of “disconnected serial connector,” “no terminal unit set,” or other trouble that occurs before initial communications are completed. If initial communications have not been completed, alarm E04 occurs.

E12 Alarm

Alarm code	E12
Alarm meaning	Automatic address setting start is prohibited.
Alarm conditions	Automatic address setting was started when automatic address setting was in progress at another outdoor unit in the same link.
Probable cause	Automatic address setting is in progress at another outdoor unit.
Check	This alarm is not displayed on the remote controller. Therefore check the blinking on the outdoor unit PCB.
Correction	Wait for automatic address setting to be completed at the outdoor unit where it is currently in progress. Then start automatic address setting again.
Example	—
Notes	—

E15 Alarm

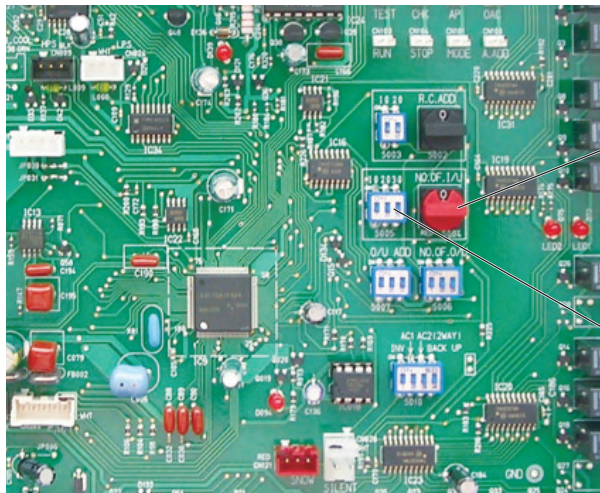
Alarm code	E15
Alarm meaning	Automatic address setting alarm (too few units)
Alarm conditions	The number of indoor units was too few when automatic address setting was performed.
Probable cause	(1) The number of indoor units set at the indoor unit quantity setting SW (No. of I/U: S004, S005) on the outdoor unit PCB is too many. (2) The inter-unit control wiring between indoor units has been cut.
Check	(1) Refer to the test run servicing materials and check the indoor unit quantity setting SW (No. of I/U: S004, S005). (2) Check the inter-unit control wiring at the indoor and outdoor units.
Correction	After correcting the indoor unit quantity setting or the inter-unit control wiring, perform automatic address setting again.
Example	—
Notes	W-2WAY ECO-i switch position 

3. W-2WAY ECO-i Alarm Codes

E16 Alarm

Alarm code	E16
Alarm meaning	Automatic address setting alarm (too many units)
Alarm conditions	<ul style="list-style-type: none"> There were a number of indoor units was too many when Automatic address setting was performed at a number of indoor units. After initial communications were completed, an unrecognized unit was detected.
Probable cause	(1) The SW for setting the number of indoor units is incorrect. (2) The inter-unit control wiring is wired incorrectly.
Check	(1) Refer to the test run servicing materials and check the number of indoor units that is set. (2) Check the inter-unit control wiring at the indoor and outdoor units.
Correction	After correcting the indoor unit quantity setting or the inter-unit control wiring, perform automatic address setting again.
Example	—
Notes	—

E20 Alarm

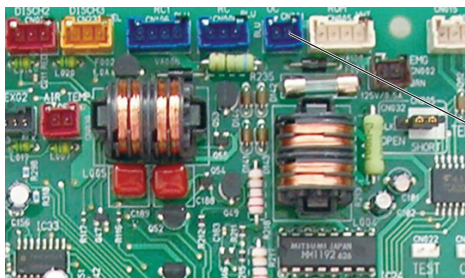Alarm code	E20
Alarm meaning	No indoor units at automatic address setting.
Alarm conditions	When automatic address setting was performed, no indoor units were recognized.
Probable cause	(1) The inter-unit control wiring from the outdoor unit to the indoor units has been cut. (2) Serial connector (OC: CN001) is disconnected at the outdoor unit. (3) The power is OFF at all indoor units in the system.
Check	(1) Check whether the inter-unit control wiring from the outdoor unit to the indoor units is cut. (2) Check whether serial connector (OC: CN001) is disconnected at the outdoor unit. (3) Check the power at the indoor units.
Correction	(1) Reconnect the inter-unit control wire from the outdoor unit to the indoor unit.
Example	—
Notes	Position of serial connector (OC: CN001) on W-2WAY control PCB 

E24 Alarm

Alarm code	E24
Alarm meaning	Outdoor unit (main) failed to receive signal from other outdoor unit (sub).
Alarm conditions	After initial communications were completed, communications from an outdoor unit stopped.
Probable cause	(1) After initial communications were completed, the outdoor unit main/sub control wiring was cut. (2) After initial communications were completed, the outdoor unit power was turned OFF.
Check	—
Correction	—
Example	—
Notes	—

3. W-2WAY ECO-i Alarm Codes

E25 Alarm

Alarm code	E25
Alarm meaning	Outdoor unit address setting failure (duplication)
Alarm conditions	Communication by the outdoor unit main/sub control wiring was received that contained the same address as that unit 5 times or more within 3 minutes.
Probable cause	The unit number is set incorrectly.
Check	Check the unit number again.
Correction	Correct the incorrect unit number setting.
Example	—
Notes	Recovery from this alarm occurs automatically (when communication that contains the same address is not received for 3 minutes).

E26 Alarm

Alarm code	E26
Alarm meaning	Mismatch in outdoor unit quantity
Alarm conditions	After power initialization, the set outdoor unit quantity did not match the number of outdoor units detected on the outdoor unit main/sub control wiring for 3 minutes or longer.
Probable cause	(1) The outdoor unit quantity is set incorrectly. (2) The outdoor unit main/sub control wiring is cut.
Check	(1) Check the outdoor unit quantity setting again. (2) Check the outdoor unit main/sub control wiring.
Correction	(1) Correct the incorrect outdoor unit quantity setting. (2) Repair the outdoor unit main/sub control wiring.
Example	—
Notes	Recovery from this alarm occurs automatically (when the set outdoor unit quantity matches the number of outdoor units detected on the outdoor unit main/sub control wiring).

E29 Alarm

Alarm code	E29
Alarm meaning	Outdoor unit (sub) failed to receive signal from outdoor unit (main).
Alarm conditions	Outdoor unit (sub) communications from outdoor unit (main) were interrupted for 3 minutes or longer.
Probable cause	(1) After initial communications were completed, the outdoor unit main-sub control wiring was cut. (2) After initial communications were completed, the RC connector (CN006) became disconnected. (3) The power at the outdoor unit (main) is turned OFF.
Check	(1) Check the outdoor unit main/sub control wiring. (2) Check the RC connectors. (3) Check the power at the outdoor unit (main/sub).
Correction	(1) Repair the outdoor unit main/sub control wiring. (2) Correct the RC connector connection. (3) Turn ON the outdoor unit (main/sub) power.
Example	—
Notes	—

3. W-2WAY ECO-i Alarm Codes

F04, F05, F22 Alarm

Alarm code	F04, F05, F22
Alarm meaning	Compressor 1 discharge temperature sensor (DISCH1) trouble, compressor 2 discharge temperature sensor (DISCH2) trouble, Compressor 3 discharge temperature sensor (DISCH3) trouble.
Alarm conditions	<p>(1) Discharge temp. of 212°F (100°C) or higher was detected 20 minutes or more after that compressor stopped operating.</p> <p>(2) Discharge temp. of 176°F (80°C) or higher was detected after all compressors had been stopped for 60 minutes or longer.</p> <p>(3) A/D step is 10 steps or less (short circuit).</p>
Probable cause	<p>(1) Sensor malfunction</p> <ul style="list-style-type: none"> • Sensor element malfunction • Sensor wiring is partially disconnected, resulting in increased electrical resistance. <p>☆ This alarm does not occur when the wiring is cut or when the connector is not connected to the outdoor unit control PCB.</p> <p>(2) Crossed wiring or installation error</p> <ul style="list-style-type: none"> • The discharge temperature sensor of that compressor is connected to the discharge tube of the other compressor. • The connector for the discharge temperature sensor of the problem compressor is connected to the outdoor unit PCB connector for the other compressor. <p>(3) Outdoor unit PCB failure</p> <p>(4) The check valve on the discharge tube for that compressor is wet.</p> <p>(5) An air short blockage in the area around the outdoor unit has increased the outdoor unit ambient temperature, reducing the cooling effects after the compressor stops.</p> <p>(6) There is a cause that results in P03, P17, or P18 alarm.</p>
Check	<p>(1) Sensor malfunction and outdoor unit PCB failure</p> <p>Trouble:</p> <ul style="list-style-type: none"> • Constantly indicates a high temperature. • When monitoring software or other means are used for monitoring, the discharge temperature at times fluctuates suddenly and wildly. • In some cases, the precise temperature may not be known, even when monitoring software is used. <p>Check:</p> <ul style="list-style-type: none"> • Wiggle the sensor and check whether the trouble continues. • Check whether the connector is partially disconnected from the PCB. <p>☆ An F04 alarm will not result if the connector is completely disconnected (circuit is open).</p> <ul style="list-style-type: none"> • If the cause is still uncertain, check the following to determine whether a sensor or PCB failure has occurred. <p>Step 1: Connect the other compressor discharge sensor, or a discharge sensor where the F04 alarm has not occurred, to the connector for this compressor on the PCB. Measure the temperature at the same point (a location where temperature fluctuations are small), and check whether there is a temperature difference.</p> <p>Difference → A PCB or sensor failure is possible. No difference → PCB and sensor are normal.</p> <p>Step 2: If an abnormality was found at Step 1, connect the problem compressor sensor to the other compressor connector on the PCB, or to the PCB connector of a device where the F04 alarm has not occurred. Measure the temperature at the same point (a location where temperature fluctuations are small), and check whether there is a temperature difference.</p> <p>Difference → Sensor failure. No difference → PCB failure.</p> <p>☆ It is convenient at this time to have a discharge temperature sensor on hand.</p> <p>(2) Crossed wiring or installation error</p> <p>Trouble: Although the other compressor is operating and this compressor is stopped, the discharge temperature of the other compressor does not increase and the discharge temperature of this compressor rises.</p> <p>* The discharge temperature remains high immediately after the compressor stops. Wait for some time after the compressor stops and observe.</p> <p>Check: Check for crossed wiring and installation errors.</p>

Continued

3. W-2WAY ECO-i Alarm Codes

	<p>(3) Leakage from the discharge tube check valve Trouble: Although the other compressor is operating and this compressor is stopped, the discharge temperature of this compressor rises together with the temperature of the other compressor.</p> <p>(4) The ambient temperature around the outdoor unit when it is stopped is 109°F (43°C) or higher.</p>
Correction	<p>(1) Replace the sensor. (2) Replace the outdoor unit PCB. (3) Repair the refrigerant tubing. (4) Adjust the amount of refrigerant. (5) Correct the trouble.</p>
Example	(1) Sensor wiring is partially cut.
Notes	<p>This alarm does not indicate that the sensor is disconnected. In order to prevent overheating during operation, the outdoor units in this system will not allow a compressor to start if the discharge temperature does not decrease while the compressor is stopped. If a sensor malfunction results in continuous detection of a high discharge temperature, then the compressor may stop for no apparent reason. The purpose of this alarm is to facilitate identification of the problem in this case.</p>

F06, F23 Alarm

Alarm code	F06, F23
Alarm meaning	Gas temperature sensor (EXG1) trouble at outdoor heat exchanger 1; Gas temperature sensor (EXG2) trouble at outdoor heat exchanger 2
Alarm conditions	<p>(1) A/D step is 10 steps or less (short circuit). (2) A/D step is 1014 steps or more (open circuit).</p>
Probable cause	<p>(1) Sensor malfunction (including connector) (2) PCB malfunction</p>
Check	<p>(1) Measure the sensor resistance. Check that the sensor is operating normally. (2) Use a remote controller monitor or PC monitor to check the temperature that is recognized by the microcomputer.</p>
Correction	—
Example	—
Notes	—

F07, F24 Alarm

Alarm code	F07, F24
Alarm meaning	Liquid temperature sensor (EXL1) trouble at outdoor heat exchanger 1; Liquid temperature sensor (EXL2) trouble at outdoor heat exchanger 2
Alarm conditions	<p>(1) A/D step is 10 steps or less (short circuit). (2) A/D step is 1014 steps or more (open circuit).</p>
Probable cause	<p>(1) Sensor malfunction (including connector) (2) PCB malfunction</p>
Check	<p>(1) Measure the sensor resistance. Check that the sensor is operating normally. (2) Use a remote controller monitor or PC monitor to check the temperature that is recognized by the microcomputer.</p>
Correction	—
Example	—
Notes	—

3. W-2WAY ECO-i Alarm Codes

F08 Alarm

Alarm code	F08
Alarm meaning	Outdoor air temperature sensor (AIR TEMP) trouble
Alarm conditions	(1) A/D step is 10 steps or less (short circuit). (2) A/D step is 1014 steps or more (open circuit)
Probable cause	(1) Sensor malfunction (including connector) (2) PCB malfunction
Check	(1) Measure the sensor resistance. Check that the sensor is operating normally. (2) Use a remote controller monitor or PC monitor to check the temperature that is recognized by the microcomputer.
Correction	—
Example	—
Notes	—

F12 Alarm

Alarm code	F12
Alarm meaning	Compressor intake temperature sensor (SCT) trouble
Alarm conditions	(1) A/D step is 10 steps or less (short circuit). (2) A/D step is 1014 steps or more (open circuit)
Probable cause	(1) Sensor malfunction (including connector) (2) PCB malfunction
Check	(1) Measure the sensor resistance. Check that the sensor is operating normally. (2) Use a remote controller monitor or PC monitor to check the temperature that is recognized by the microcomputer.
Correction	—
Example	—
Notes	—

F16 Alarm

Alarm code	F16
Alarm meaning	High-pressure sensor (HPS) trouble
Alarm conditions	(1) Sensor short circuit (2) Sensor open circuit
Probable cause	(1) Sensor malfunction (including connector) (2) PCB malfunction
Check	(1) Measure the sensor resistance. Check that the sensor is operating normally. (2) Use a remote monitor or a PC monitor to check the temperature that is recognized by the microcomputer.
Correction	—
Example	—
Notes	—

F17 Alarm

Alarm code	F17
Alarm meaning	Low-pressure sensor (LPS) trouble
Alarm conditions	(1) Sensor short circuit (2) Sensor open circuit
Probable cause	(1) Sensor malfunction (including connector) (2) PCB malfunction
Check	(1) Measure the sensor resistance. Check that the sensor is operating normally. (2) Use a remote monitor or a PC monitor to check the temperature that is recognized by the microcomputer.
Correction	—
Example	—
Notes	—

3. W-2WAY ECO-i Alarm Codes

F31 Alarm

Alarm code	F31
Alarm meaning	Outdoor unit non-volatile memory (EEPROM) trouble
Alarm conditions	(1) Non-volatile memory is not present when power initialization occurs. (2) Read values do not match after writing to non-volatile memory is complete.
Probable cause	(1) Memory was not inserted after the PCB was replaced. (2) The lifetime of the non-volatile memory has been reached. (3) Non-volatile memory is installed incorrectly (wrong direction, bent pins, etc.).
Check	(1) Check the non-volatile memory on the PCB.
Correction	—
Example	—
Notes	—

H03 alarm

Alarm code	H03
Alarm meaning	Compressor CT sensor disconnected or short-circuit
Alarm conditions	Alarm occurs if the current value is 1.5 A or less when 2 seconds or longer have elapsed after output from that compressor started. * No current is detected even though the compressor is operating.
Probable cause	(1) CT circuit failure (including cut wiring, etc.) (2) Disconnected CT circuit connector (3) This CT circuit is connected to the connector of the other CT circuit. (4) PCB failure (5) Noise
Check	(1) CT circuit failure, PCB failure Trouble: • Current value during compressor operation is below the threshold value. Check: • Check that the connector is not disconnected. • Check the continuity of the CT circuit. Install a normal CT in place of this CT and check. If current is detected, then the PCB can be judged OK. → CT circuit failure • Check that current is flowing in the phase where the CT circuit is connected. → Check voltage and current. (2) Crossed wiring or installation error Trouble: When the compressor is stopped, the current value at the other compressor is high. (3) If the cause is still unknown after checking the above, then it is possible that noise is the cause of the trouble. It is necessary to connect a PC or other instrument.
Correction	(1) Replace the CT circuit. (2) Replace the outdoor unit PCB. (3) Correct the problem.
Example	(1) The connector was not inserted after the PCB was replaced.
Notes	Use a normal CT as a tool to determine whether the trouble is a PCB failure or CT failure.

3. W-2WAY ECO-i Alarm Codes

H06 Alarm

Alarm code	H06
Alarm meaning	Abnormal low-pressure drop
Alarm conditions	<p>A pre-trip occurs during the unit's operation when the low-pressure sensor installed at constant low-pressure parts detects a pressure of 7.25 psi or less continuously for 2 minutes, or an instantaneous pressure of 2.90 psi or less. (These values represent abnormal low pressure which may damage the compressor.)</p> <p>However, the alarm does not actually occur the first 2 times that the above operation takes place. At these times, the outdoor unit is stopped and the conditions are monitored. The alarm occurs when the above operation occurs for the third time. The first 2 times before the alarm occurs are called "pre-trip." After pre-trip occurs, if the low-pressure sensor detects a pressure of 21.8 psi or more for 3 minutes of continuous operation, the pre-trip count is reset to 0.</p> <p>If the low-pressure sensor detects a pressure of 23.2 psi or less continuously for 60 minutes when the compressor is stopped, an alarm occurs immediately (no pre-trip).</p>
Probable cause	<p>The unit low pressure has dropped to a level that does not occur under ordinary conditions.</p> <ol style="list-style-type: none"> (1) The absolute amount of gas in the system is too low (as a result of insufficient refrigerant charge or leak). (2) The refrigerant has accumulated in the circuit and has not returned to the compressor. Refrigerant has accumulated in a location of one-way flow and cannot escape. High-pressure level is low, resulting in poor flow of refrigerant in the circuit. (A lower high-pressure level results in a smaller difference between low pressure and high pressure, that may be insufficient to cause refrigerant flow.) (3) The refrigerant circuit has become closed, and refrigerant has not returned to the compressor. In some cases when moisture enters the refrigerant circuit, it can freeze at the low-pressure locations and the resulting ice can block the circuit.) <p>☆ If the alarm occurs when there is sufficient refrigerant in the system ((1) and (3)), liquid refrigerant has definitely accumulated somewhere in the system. Liquid refrigerant generally accumulates in high-pressure locations. In this case the high pressure gradually increases (however it may not increase if the location where the liquid accumulates is sufficiently large). Depending on the refrigerant saturation temperature, it may also accumulate in low-pressure locations. In this case the high pressure is unlikely to increase.</p>
Check	<ol style="list-style-type: none"> (1) Check that the service valve is open. (2) Check that none of the valves (mechanical valves) in the main refrigerant circuit is closed due to an operation failure. (3) Check that there is no possibility of foreign objects or water having entered the refrigerant circuit. (4) Check that valve leakage at a stopped sub unit has not resulted in accumulation of refrigerant at that sub unit. (5) Check that no refrigerant leakage has occurred.
Correction	<ol style="list-style-type: none"> (1) If there was a valve operation failure, in general it is necessary to replace the valve. (2) If a foreign object or moisture has entered the circuit, install a strainer or dry core (depending on the degree of the problem). (3) If refrigerant has leaked into stopped sub units, it is likely that valve leakage has occurred. The valve must be replaced.
Example	—
Notes	—

3. W-2WAY ECO-i Alarm Codes

H11, H12, H21, H22 Alarm

Alarm code	H11, H12, H21, H22
Alarm meaning	H11: Compressor 2 (constant speed) overcurrent alarm H12: Compressor 2 (constant speed) lock current alarm H21: Compressor 3 (constant speed) overcurrent alarm H22: Compressor 3 (constant speed) lock current alarm
Alarm conditions	H11, H21: During operation, the compressor current value exceeded 12 A for 30 seconds or longer. However this alarm is not detected for 4 seconds after the compressor starts. H12, H22: During operation, the compressor current value exceeded 15 A for 2 seconds or longer. However this alarm is not detected for 4 seconds after the compressor starts.
Probable cause	(1) Compressor failure (locked or partially locked) (2) CT (Current Transformer) circuit failure (including cut wiring) (3) Low power voltage (4) PCB failure
Check	<p>(1) Compressor failure (partially locked) Trouble: Current value during operation greatly exceeds the value shown above. Check: When the current for each phase is measured with a clamp meter or similar instrument, check that the current value for all phases is not high. If MG was forced ON (use caution), check that compressor noise will not occur or the compressor will not run with a groaning sound.</p> <p>(2) CT circuit failure, PCB failure Trouble: Check: <ul style="list-style-type: none"> • Check for poor connector contact. • Check the continuity of the CT circuit. • Install a normal CT in place of this CT and check. If current is detected, then the PCB can be judged OK. → CT circuit failure • Check that current is flowing in the phase where the CT circuit is connected. → Check voltage and current. </p> <p>(3) Low power voltage Trouble: In most cases, this occurs when another constant-speed compressor (including compressors in other units) or other device starts. It also occurs when the power wiring is extremely long. Check: Check the voltage between each of the phases. However if this trouble occurs when other devices or compressors start, then an oscilloscope is required.</p> <p>(4) PCB failure Trouble: Check: Check that the current value measured with the clamp meter is not lower than the value measured with the PC or remote controller.</p>
Correction	<p>(1) Replace the compressor. (2) Replace the CT circuit. (3) Adjust the primary-side power. Repair the power wiring. (4) Replace the outdoor unit PCB. (5) Correct the trouble.</p> <p>* In the case of a compressor failure, it is likely that steps must be taken to correct the cause of the compressor failure (such as liquid back-up) in order to prevent recurrence. Be sure to check that there is no cause which may result in compressor locking.</p>
Example	—

3. W-2WAY ECO-i Alarm Codes

H13, H23 Alarm


Alarm code	H13, H23
Alarm meaning	Compressor 2 CT sensor (CT2) disconnected or short-circuit; Compressor 3 CT sensor (CT3) disconnected or short-circuit.
Alarm conditions	The current is still 1.5 A or less when 2 seconds or longer has elapsed after output from that compressor started. * No current is detected even though the compressor is operating.
Probable cause	(1) CT circuit failure (including cut wiring, etc.) (2) Disconnected CT circuit connector (3) Missing phase where CT circuit is connected (4) This CT circuit is connected to the connector of other CT circuit. (5) PCB failure
Check	(1) CT circuit failure, PCB failure Trouble: • Current value during compressor operation is below the threshold value. Check: • Check that the connector is not disconnected. • Check the continuity of the CT circuit. • Install a normal CT in place of this CT and check. If current is detected, then the PCB can be judged OK. → CT circuit failure • Check that current is flowing in the phase where the CT circuit is connected. → Check voltage and current. (2) Crossed wiring or installation error Trouble: When the compressor is stopped, the current value at the other compressor is high. ☆ When this type of condition occurs, seizing-detection control takes priority.
Correction	(1) Replace the CT circuit. (2) Replace the outdoor unit PCB. (3) Correct the problem.
Example	(1) The connector was not inserted after the PCB was replaced.
Notes	Use a normal CT as a tool to determine whether the trouble is a PCB failure or CT failure.

H05, H15, H25 Alarm

Alarm code	H05, H15, H25
Alarm meaning	Compressor 1 discharge temperature sensor (DISCH1) disconnected; Compressor 2 discharge temperature sensor (DISCH2) disconnected; Compressor 3 discharge temperature sensor (DISCH3) disconnected
Alarm conditions	• This alarm occurs when the discharge sensor temperature detector is not inserted into the tube's sensor holder, or when the sensor itself has suffered some kind of malfunction other than a cut wire. • When outdoor air temperature is 32°F (0°C) or higher: Alarm occurs if the temperature detected by the discharge sensor has changed by less than 4 deg. when the compressor has operated for 10 minutes immediately after start. • When outdoor air temperature is below 32°F (0°C): Alarm occurs if the temperature detected by the discharge sensor has changed by less than 4 deg. when the compressor has operated for 30 minutes immediately after start.
Probable cause	(1) Discharge sensor temperature detector is not inserted into the tube's sensor holder. (2) Discharge sensor itself has suffered some kind of malfunction other than a cut wire.
Check	(1) Check that the discharge temperature sensor is inserted into the sensor holder. (2) Check that sufficient heat-conducting putty is applied. (3) Remove the discharge sensor from the sensor holder and expose the sensor to the outside air for approximately 5 minutes. Check that the temperature detected by the sensor changes to match the outside air temperature. (However the sensor cannot detect temperatures at or below 32°F (0°C).)
Correction	(1) Install the sensor into the holder, and apply sufficient heat-conducting putty. (2) If the sensor is malfunctioning, replace it.
Example	—
Notes	The discharge temperature sensor is generally a sensor intended for accurate detection of high temperatures. Therefore, it will not accurately detect the temperature if the temperature at the measurement point is 68°F (20°C) or below.

3. W-2WAY ECO-i Alarm Codes

H31 Alarm

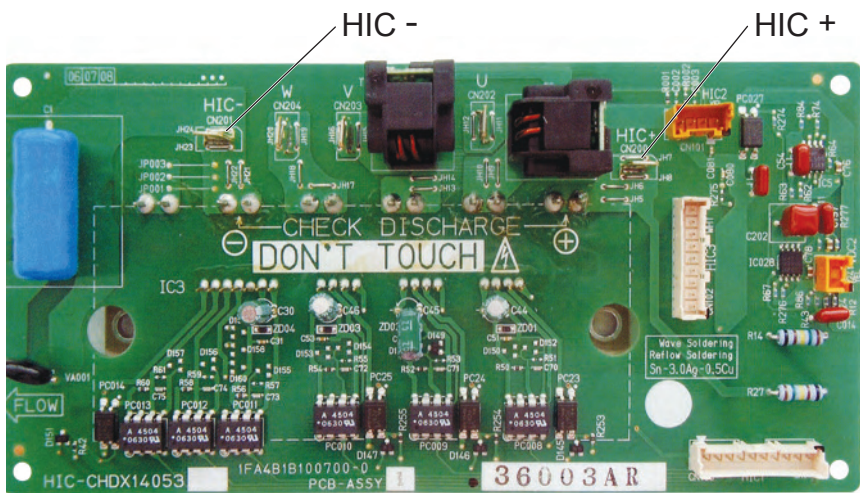Alarm code	H31
Alarm meaning	HIC trouble alarm
Alarm conditions	This alarm occurs when the microcomputer identifies a trouble signal (indicating abnormal HIC temperature or other trouble) from the HIC. The HIC judges the current and temperature, and outputs the trouble signal. In general this indicates trouble with the HIC itself.
Probable cause	Overcurrent in HIC circuit, and resultant abnormal heating, caused by HIC failure
Check	Check the power wiring and connector wiring. If the wiring and connectors are normal, use a tester to measure the resistance between the compressor HIC power (HIC+) and ground (HIC-). If there is a short circuit, there is an HIC malfunction.
 <p style="text-align: center;">HIC PCB</p>	
Correction	If an HIC failure is found, replace the PCB.
Example	—
Notes	Turn OFF the power, and check the continuity of HIC+ and HIC- on the HIC PCB.

L04 Alarm

Alarm code	L04
Alarm meaning	Outdoor unit refrigerant system address duplication
Alarm conditions	Communication by inter-unit control wiring was received that contained the same address as that unit 5 times or more within 3 minutes.
Probable cause	Incorrect outdoor system address settings
Check	Check the system address settings again.
Correction	Correct the system address settings.
Example	—
Notes	Recovery from this alarm occurs automatically (when communication that contains the same address as that unit is not received for 3 minutes after detection).

L05 Alarm

Alarm code	L05
Alarm meaning	Duplicated indoor unit priority (alarm at priority indoor units)
Alarm conditions	Multiple indoor units set as the priority unit were detected.
Probable cause	More than one indoor unit is set as the priority unit.
Check	From the wired remote controller, use the indoor unit EEPROM simple settings mode and check whether or not the value for item code 04 is "0001."
Correction	If the value of indoor unit EEPROM item code 04 is incorrect, set the correct value from the wired remote controller.
Example	—
Notes	This alarm is displayed at the indoor units which are set as the priority unit. At indoor units which are not set as the priority unit, alarm L06 is displayed.

3. W-2WAY ECO-i Alarm Codes

L06 Alarm

Alarm code	L06
Alarm meaning	Duplicated indoor unit priority (alarm at non-priority indoor units and outdoor unit)
Alarm conditions	Multiple indoor units set as the priority unit were detected in the system.
Probable cause	More than one indoor unit is set as the priority unit in the system.
Check	Find the indoor units in the system where alarm L05 has occurred.
Correction	Refer to the description of alarm L05.
Example	—
Notes	Alarm L06 occurs as a result of alarm L05. Therefore, correcting the duplicated priority settings will also correct alarm L06.

L10 Alarm

Alarm code	L10
Alarm meaning	Outdoor unit capacity not set
Alarm conditions	The outdoor unit capacity has not been set, or the setting is not allowed by the system.
Probable cause	This alarm occurs because the capacity has not been set.
Check	Connect the outdoor unit maintenance remote controller. On the outdoor unit EEPROM detailed setting mode screen, check the value for the outdoor unit capacity (item code 81). Check that it is not set to "0" or to a capacity that is not allowed.
Correction	If item code 81 is incorrect, use the outdoor unit maintenance remote controller and set it correctly. * After changing the setting, be sure to reset both the indoor and outdoor power.
Example	—
Notes	The outdoor unit maintenance remote controller is required in order to set the capacity in the outdoor unit EEPROM.

L17 Alarm

Alarm code	L17
Alarm meaning	Outdoor unit model mismatch
Alarm conditions	This alarm occurs when a unit other than a R410A refrigerant model is connected.
Probable cause	(1) A unit that uses R407C refrigerant, or a R22 model unit, was connected by mistake. (2) The connected unit is correct, however the refrigerant type setting in the outdoor unit EEPROM (item code 80) is incorrect.
Check	(1) Check the refrigerant type at the connected unit. (2) Use the outdoor unit maintenance remote controller and check the item code 80 refrigerant type. If the setting is incorrect, change it to R410A.
Correction	—
Example	—
Notes	The outdoor unit maintenance remote controller is required in order to set the refrigerant type in the outdoor unit EEPROM.

L18 alarm

Alarm code	L18
Alarm meaning	4-way valve operation failure
Alarm conditions	During heating operation (Comp. ON), the highest detected temperature at an outdoor unit heat exchanger (EXG 1, EXG 2, EXL1, or EXL2) was 68°F (20°C) or more above the outdoor air temperature (Air Temp.) continuously for 5 minutes or longer, or the detected suction temperature (SCT) was 68°F (20°C) or more above the outdoor air temperature continuously for 5 minutes or longer.
Probable cause	(1) The 4-way valve connector (20S CN060) has become disconnected from the control PCB. (2) The 4-way valve circuit is locked (malfunctioning).
Check	(1) Check the 4-way valve connector (20S CN060). (2) If the connector is normal, check the 4-way valve wiring and the PCB circuit.
Correction	If the connector is normal, correct or replace the problem locations.
Example	—
Notes	—

3. W-2WAY ECO-i Alarm Codes

P03, P17, P18 Alarm

Alarm code	P03, P17, P18
Alarm meaning	Compressor 1 discharge temperature trouble; Compressor 2 discharge temperature trouble; Compressor 3 discharge temperature trouble
Alarm conditions	Pre-trip stop at 222°F (106°C) or higher This alarm occurs when the pre-trip counter reaches 4. However the counter is reset when the compressor has operated continuously for a certain length of time.
Probable cause	(1) Operation failure of mechanical valve 3 (2) Clogging of mechanical valve 3 (3) Insufficient amount of refrigerant (including trouble resulting from an insufficient initial charge and from gas leakage) (4) Blocking of low-pressure parts caused by intrusion of foreign objects (moisture, scale, etc.) (5) Crossing (tubing or PCB connectors) with the other compressor thermistor (6) Expansion valve operation failure (7) Accumulation of refrigerant at stopped outdoor units (8) Compressor discharge sensor failure (9) PCB failure (A/D conversion failure)
Check	(1) Operation failure of mechanical valve 3 Trouble: The compressor discharge temperature does not decrease even when mechanical valve 3 is opened to 480 pulses. Check: Check whether or not mechanical valve 3 makes a grinding sound when the power is reset. (2) Clogging of mechanical valve 3 Trouble: The compressor discharge temperature does not decrease even when mechanical valve 3 is ON. Check: If mechanical valve 3 is open to 480 pulses, then check whether or not the secondary side of the valve is cold. (3) Insufficient refrigerant Trouble: Liquid effectiveness is poor. Check: Check whether or not the superheating temperature is declining if the evaporator mechanical valve is opened to 300 pulses or more (after checking for foreign object intrusion). (4) Foreign object intrusion Trouble: Liquid valve effectiveness is poor. Check: Check that there is no difference in the condensation or frost conditions between the strainer primary-side and secondary-side tubing. (5) Crossed thermistor Trouble: The discharge temperature of the other compressor is high although only this compressor is operating. When the liquid valve turns ON, the discharge temperature of the other compressor decreases. (6) Accumulation of refrigerant in stopped outdoor units Trouble: • System is OK when all outdoor units are operating, however symptoms of insufficient gas occur when a certain outdoor unit is stopped. • Condensation or frost is visible up to the top of the accumulator of the stopped outdoor unit. • After an outdoor unit stops, there is the sound of refrigerant flowing into an outdoor unit that was stopped for a long time. • When an outdoor unit starts after being stopped for a long time, the start is accompanied by much vibration. Check: • In some cases, leakage may be occurring from the evaporator mechanical valve or mechanical valve 3 at a stopped outdoor unit. (7) Sensor failure Check: • This alarm is likely to occur when wiring is partially cut. (It is difficult to identify, even when continuity is checked.) The detected discharge temperature is high. • Although such conditions rarely occur, a P02 alarm is likely if the detected discharge temperature is low. • Replace the sensor with another discharge sensor and compare the temperature conditions.
Correction	(1) Replace the sensor. (2) Replace the outdoor unit PCB. (3) Correct the problem locations.
Example	All of the probable causes
Notes	Operates continuously for a set length of time. Indicates 2.5 minutes or longer for an inverter compressor (compressor 1) and 30 seconds or longer for a constant-speed compressor (compressor 2 and 3).

3. W-2WAY ECO-i Alarm Codes

P04 Alarm

Alarm code	P04
Alarm meaning	High-pressure switch activated.
Alarm conditions	When the electrical circuit of the high-pressure switch is activated, then depending on the pressure, the terminals may be short-circuited. If the pressure is 464 psi or higher, the terminals will be short-circuited. When they have been short-circuited, they remain short-circuited until the pressure decreases to 360 psi.
Probable cause	<ol style="list-style-type: none"> (1) The check valve installed on the compressor discharge-side tubing has malfunctioned. (2) The service valve is closed. (3) The outdoor unit heat exchanger became clogged during cooling operation. (4) An air short circuit occurred in the outdoor unit during cooling operation. (5) The outdoor unit fan malfunctioned during cooling operation. (6) The indoor unit air filter became clogged during heating operation. (7) An air short circuit occurred in the indoor unit during heating operation. (8) The indoor fan failed during heating operation. (9) The refrigerant circuit has become clogged. (10) The mechanical valve failed. (11) The solenoid valve kit failed. (12) Refrigerant overcharge has occurred. (13) The high-pressure switch failed.
Check	<ol style="list-style-type: none"> (1) Check that the high-pressure switch connector is connected securely. (2) If it is connected securely, then connect a pressure gauge to the high-pressure outlet and monitor the high pressure while operating the system. Check the pressure at the time when the high-pressure switch operates. If the pressure is less than 551 psi then it is possible that the check valve has failed. <p>The following concern cases in which the pressure is actually too high.</p> <ol style="list-style-type: none"> (3) If the operation is cooling operation, check that the outdoor heat exchanger has not become clogged or blocked. Remove any objects that impede the flow of air. (4) If the operation is cooling operation, check that an air short circuit has not occurred at the outdoor unit. The status is OK as long as the temperature in the area around the outdoor unit does not become abnormally high during operation. (5) If the operation is cooling operation, check that the outdoor unit fan has not failed. Check that the screws which fasten the fan have not become loose. Check that the fan connector has been securely inserted into the outdoor unit PCB. (6) If the operation is heating operation, check that the indoor unit air filter has not become clogged. If it is clogged, clean it. (7) If the operation is heating operation, check that an air short circuit has not occurred at the indoor unit. The status is OK as long as the temperature in the area around the indoor unit air intake does not become abnormally high during operation. (8) If the operation is heating operation, check that the indoor unit fan has not failed. (9) Check that the refrigerant circuit has not become clogged. Check that all the service valves are fully opened. Check that the welded connections are not clogged. (10) Check that the mechanical valves have not failed. Check whether or not mechanical valve 3 makes a grinding sound when the power is reset. At the indoor unit, the mechanical valve is located at a position where it is difficult to hear, so this check should be made electronically. Check that 4 V is being output to the mechanical valve connector pin on the PCB. Also check that the mechanical valve coil winding resistance is several tens of Ohms. (11) Check that the solenoid valve kit has not failed. Removing the coil when the valve is ON should produce a click sound. Removing the coil when the valve is OFF should produce no sound. (12) Check that refrigerant overcharge has not occurred. If the sub-cool temperature at the condenser discharge is 59°F (15°C) or higher, overcharge has occurred.
Correction	Replace the failed part and correct the amount of refrigerant charge.
Example	—
Notes	—

3. W-2WAY ECO-i Alarm Codes

P05 Alarm


Alarm code	P05
Alarm meaning	Reverse phase (or missing phase) detected
Alarm conditions	This alarm occurs when a reverse phase or missing phase is detected in the L1-L2-L3 phases.
Probable cause	Reverse phase or missing phase in the L1-L2-L3 phases
Check	Check the wiring at the power terminal plate.
Correction	Switch the phases and reinsert. Check if the result is OK.
Example	—
Notes	—

P16 Alarm

Alarm code	P16
Alarm meaning	Compressor 1 (INV) overcurrent alarm
Alarm conditions	This alarm occurs when current trouble or current detection trouble occurs at an inverter frequency of less than 80 Hz after start (when trouble judgment current is detected 13.5 A or higher in the primary or secondary current).
Probable cause	There is a strong possibility of a compressor failure. An alarm occurs for current detection trouble when it is judged that no current is flowing after start (DCCT is damaged). In this case, the cause is a DCCT failure. The cause may be the effects of noise in some cases.
Check	Check the power wiring and connector wiring.
Correction	It is possible to resolve this trouble by limiting the maximum frequency.
Example	—
Notes	—

3. W-2WAY ECO-i Alarm Codes

P22 Alarm

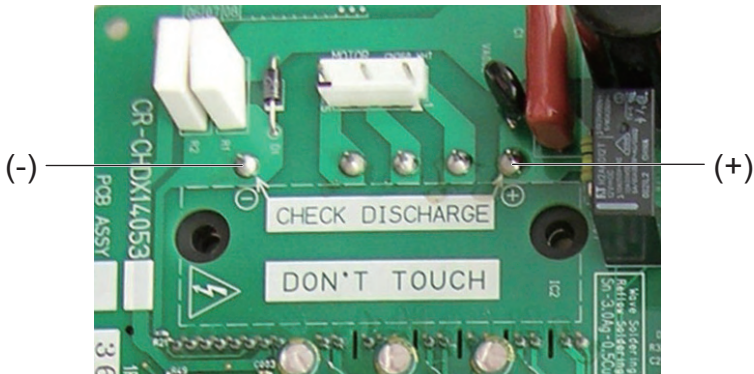Alarm code	P22
Alarm meaning	Fan motor trouble
Alarm conditions	Fan motor start failure, fan motor Hall IC input failure
Probable cause	Possible causes are a Hall IC input circuit failure and a fan HIC failure.
Check	<p>Check the fan motor wiring, the Hall IC wiring, and the connector connections. If the wiring and connectors are normal, then check that the capacitor of the Hall IC input circuit is securely soldered onto the PCB. Also use a tester and measure the resistance between fan HIC power (HIC+) and ground (HIC-). If there is a short circuit, there is an HIC malfunction.</p> 
Correction	<p>If the fan does not start, the below corrections may be effective.</p> <p>(1) If there is a fan HIC failure or circuit failure, replace the PCB.</p> <p>(2) If the fan motor is locked, replace the fan motor.</p>
Example	—
Notes	Turn OFF the power, and check the continuity of “+” and “-” on the fan circuit PCB.

P26 Alarm

Alarm code	P26
Alarm meaning	Inverter compressor high-frequency overcurrent alarm
Alarm conditions	This alarm occurs when current trouble or current detection trouble occurs at an inverter frequency of 80 Hz or higher after start (when trouble judgment current is detected 13.5 A higher in the primary or secondary current).
Probable cause	The detection methods are the same as for P16. However the fact that operation up to high frequencies is possible does not necessarily mean that a compressor failure is the cause of the trouble. Start the compressor several times. If alarm P26 occurs every time and alarm P16 does not occur at all, then the possibility of a compressor failure is low. It is also possible that the cause may be the effects of noise.
Check	Check the power wiring and connector wiring.
Correction	It is possible to resolve this trouble by limiting the maximum frequency.
Example	—
Notes	—

P29 Alarm


Alarm code	P29
Alarm meaning	Inverter compressor missing phase or lock alarm
Alarm conditions	This alarm may occur at start, and occurs when missing phase or lock is detected, and when a DCCT failure occurs.
Probable cause	Generally this alarm occurs when the refrigerant pressure balance is uneven at start, or when inverter compressor lock occurs, there is a missing phase in the inverter compressor wiring, or a DCCT failure occurs. This can be judged to be starting trouble which is not caused by HIC.
Check	Check the power wiring and connector wiring.
Correction	DCCT failure (replace PCB) or compressor failure
Example	—
Notes	Use a tester to measure the voltage between the DCCT output terminal on the rear of the PCB and the ground. If the voltage is not within 2 – 3 V, then the DCCT has malfunctioned.

4. Blinking (Inspection) Display on the Remote Controller


CAUTION


Currently the blinking inspection display can be displayed only on the wired remote controller and system remote controller.

Blinking inspection display (1) (Automatic backup)

Alarm code	(Blinking  inspection display)
Alarm meaning	Automatic backup is in progress. A/C units can be operated. Status: The compressor at one of the outdoor units where the outdoor unit fan is running should be operating. * Blinking inspection display also occurs when seizing of the compressor magnet SW is detected. Because this may also be the case, refer to "Blinking inspection display (2) (compressor magnet SW seizing detection)."
Alarm conditions	When alarm P16, P22, P26, P29, Hx1, Hx2, or H31 has occurred, correcting the control device (remote controller, etc.) input engages this mode.
Probable cause	Because alarm P16, P22, P26, P29, Hx1, Hx2, or H31 has occurred, check the alarm history then refer to the corresponding items.
Correction	Follow the instructions in the corresponding items to correct the trouble.
Recovery	After repairing the malfunctioning locations, reset the power for the system (all outdoor units). Caution: Automatic backup mode will not be canceled until the power is reset.
Notes	Automatic backup mode is not engaged in cases of alarms other than those listed above. Reasons: <ul style="list-style-type: none"> • There is no need for automatic backup if recovery is possible by correcting the remote controller input. • With alarms for which automatic recovery is possible (such as sensor alarms), the presence of electrical noise may result in a new alarm. However, it is believed that this occurs for a comparatively short time only. In these cases, a mode (automatic backup mode) that limits operation may be engaged. • Control is not possible when a communications system alarm has occurred. • Automatic backup mode is not engaged in order to avoid causing secondary damage.

4. Blinking (Inspection) Display on the Remote Controller

Blinking inspection display (2) (compressor magnet SW seizing detection)

Alarm code	(Blinking  inspection display)
Alarm meaning	<p>Compressor magnet SW seizing detected</p> <p>Status: The compressor and outdoor unit fan motor continue to run even though all indoor units within that refrigerant tubing system are stopped.</p> <p>☆ Because the fan is running only at the outdoor unit where seizing was detected, check the corresponding outdoor unit.</p> <p>* The fan may also run on its own when fan cracking prevention control is in effect or when snowfall sensor input is present. Therefore monitor for approximately 10 minutes if the outdoor unit fans are operating at multiple units.</p>
Alarm conditions	<p>Current is detected in the CT circuit when the compressor is stopped.</p> <p>(1) This control is not engaged for the first 30 seconds after the compressor turns ON →OFF.</p> <p>(2) For 1 minute following the first 30 seconds after the compressor turned ON →OFF, the threshold for the detected current is 10 A or more continuing for 2 seconds.</p> <p>(3) All times other than the above:</p> <ul style="list-style-type: none"> • If the low-pressure SW has not activated, the threshold for the detected current is 7 A or more continuing for 5 seconds. • If the low-pressure switch has activated, the threshold for the detected current is 7 A or more continuing for 2 seconds.
Probable cause	<p>(1) Magnet SW malfunction</p> <ul style="list-style-type: none"> • The magnet SW has seized, and the compressor is continuing to run. → Even when the power is turned OFF, the primary side and secondary side contacts remain together. • The conditions of magnet SW operation are poor (difficult to open). → When a magnet SW is used in a DC circuit, it may be difficult for the SW to open at times. In an AC circuit the magnet SW should open instantaneously as long as the current is within the allowable range. However, this kind of trouble can occur if excessive current flows, and may prevent the SW from opening. <p>(2) CT circuit failure or PCB failure (A/D failure)</p> <ul style="list-style-type: none"> • CT circuit contact failure → Check that the connector is not partially disconnected. Wiggle the connector to check the connection.* * These symptoms will not occur if the connector is completely disconnected or the wire is cut. In these cases alarm Hx3 occurs. • Current of 7A or higher was detected although the compressor was stopped, or a higher current was detected at occasional intervals. • The compressor continues to operate at a time when the outdoor unit should be stopped (such as when all indoor units are stopped). → Check whether or not 200 V is output from the PCB to the magnet SW. If the voltage is output, there is a PCB failure. <p>(3) Installation error</p> <ul style="list-style-type: none"> • CT1 connector is connected to the compressor 2 side • CT1 circuit is connected to the compressor 2 side • CT2 connector is connected to the compressor 1 side • CT2 circuit is connected to the compressor 1 side
Correction	<p>(1) Replace the CT circuit.</p> <p>(2) Replace the magnet SW.</p> <p>(3) Replace the PCB.</p> <p>If the above probable causes are not the cause of the alarm, it is possible that in rare cases the alarm may be caused by the effects of noise. See notes.</p>
Notes	—


Contents

4. PCB AND FUNCTIONS

1. Outdoor Unit Control PCB	4-2
1. Outdoor Unit Control PCB CR-CHDX14053.....	4-2
2. Functions (for CR-CHDX14053).....	4-3
2. Indoor Unit Control PCB	4-6
1. Indoor Unit Control PCB Switches and Functions	4-6
1. For AC Fan Motor (CR-UXRP71B-B)	4-7
2. For DC Fan Motor (SXRP56B-B)	4-7
3. CR1 (for CR-KR74GXH56A/KHX0752~KHX1852) (Wall Mounted)	4-8
4. CR1 (for CR-KR254GXH56A/KHX2452) (Wall Mounted)	4-9
5. CR2 (for POW-KR74GXH56/KHX0752~KHX2452) (Wall Mounted)	4-10
6. Explanation of Functions (CR-KXRP56AN, CR-KXRP80AN, POW-KRP50A).....	4-11

1. Outdoor Unit Control PCB

1. Outdoor Unit Control PCB CR-CHDX14053

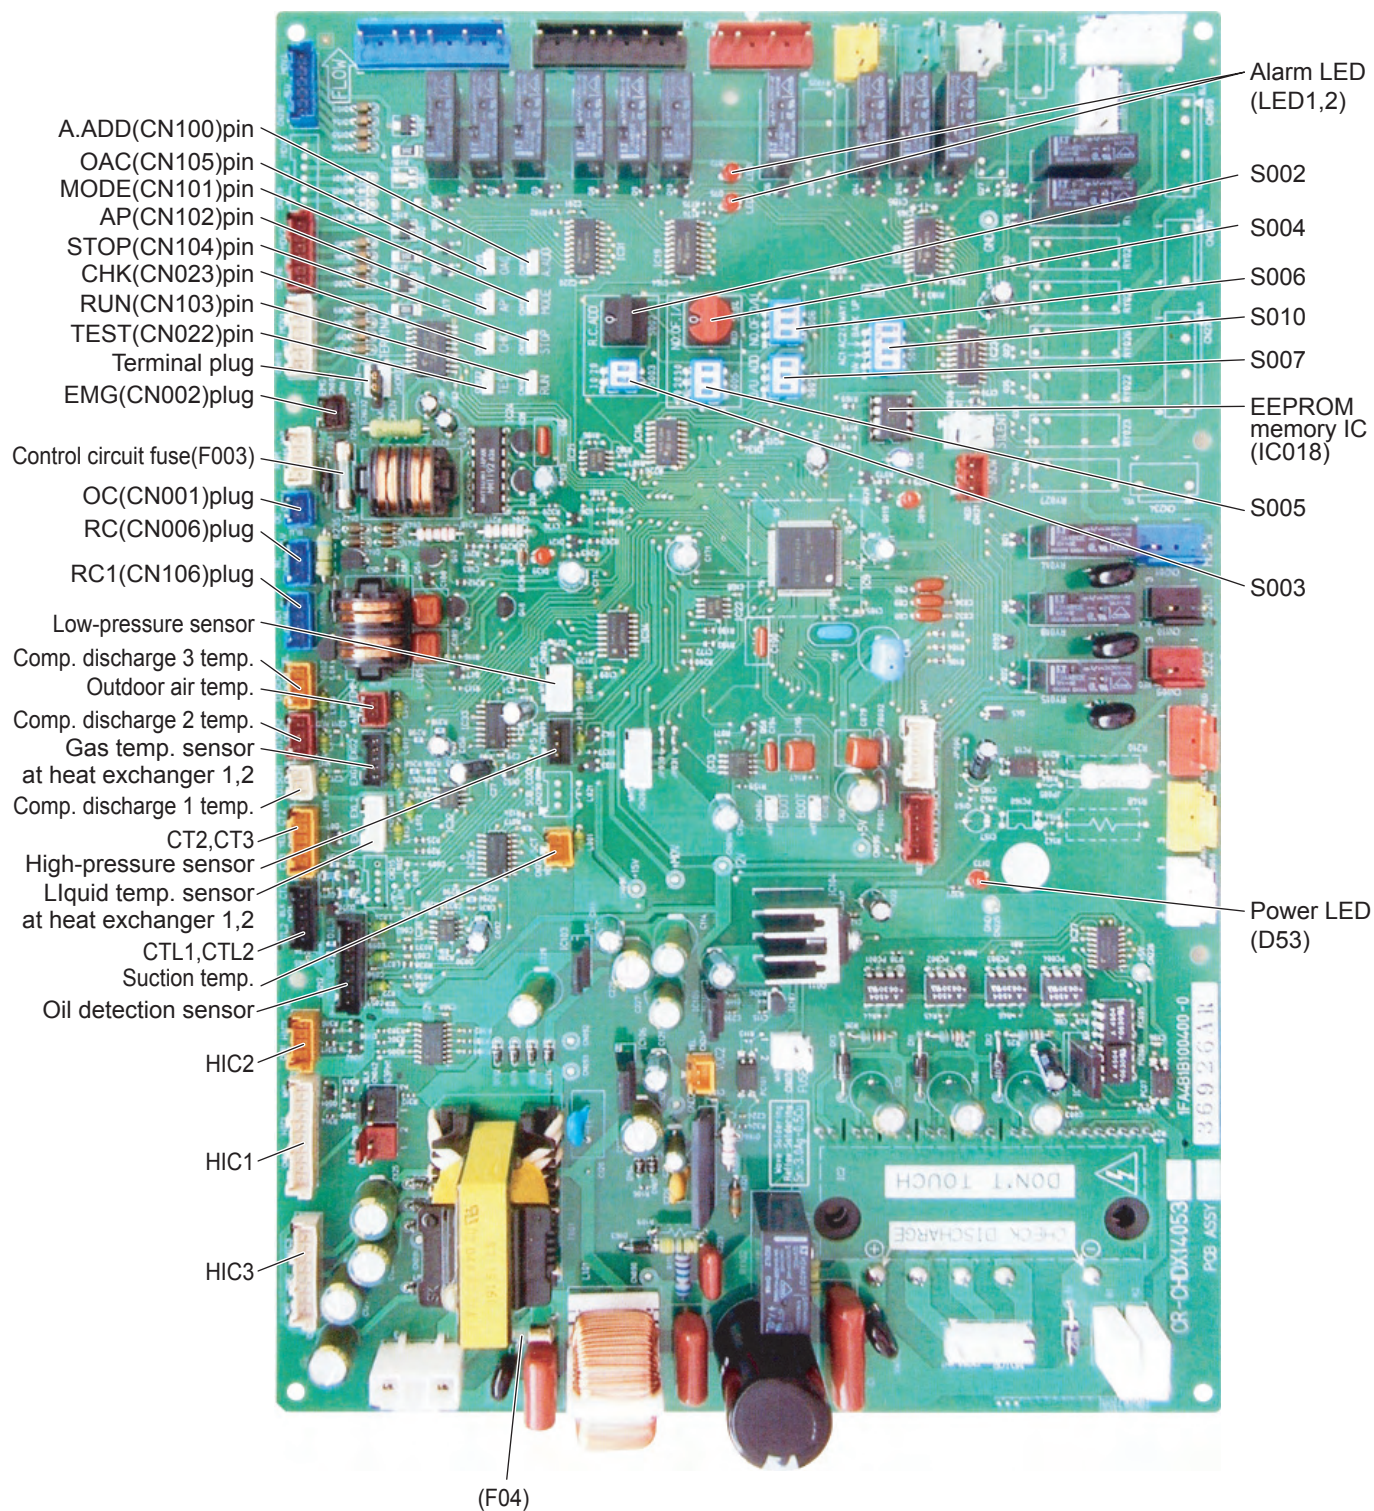

1. Outdoor Unit Control PCB

2. Functions (for CR-CHDX14053)

Automatic address setting (CN100)	<p>2P plug (white): Automatic address setting pin</p> <ul style="list-style-type: none"> Short-circuit this pin for 1 second or longer to automatically set the addresses at the indoor units that are connected to that outdoor unit and are within the same system. The system address is "1" at the time of shipment. Automatic address setting is necessary even for communications lines in a single system where the inter-unit control wiring does not cross to any other systems. While automatic address setting is in progress, the 2 LEDs (LED1, 2: red) on the outdoor unit control PCB blink alternately. (Short-circuiting this pin while automatic address setting is in progress will stop the automatic address setting operation.)
S002	<p>Rotary switch (10 positions, black): Outdoor system address setting switch</p> <ul style="list-style-type: none"> The setting is "1" at the time of shipment. It is not necessary to change the setting if wiring is connected only to an outdoor unit and indoor units in a single system and the inter-unit control wiring does not cross multiple systems. If wiring links the inter-unit control wiring for multiple systems to the same communications lines, then a different address must be set for each refrigerant tubing system. If wiring links multiple systems, a maximum of 30 systems (up to 64 indoor units) can be connected. This setting can be set up to "39," however control will be for 30 systems even if the setting is set to higher than 30. An alarm will be displayed if system addresses are duplicated. (For details, refer to Table 7-1.)
S003	<p>DIP switch (2P, blue): Switches for setting system address 10s digit and 20s digit</p> <ul style="list-style-type: none"> If 10 systems or more are set, the setting is made by a combination of this DIP switch and S002. If 10 - 19 systems are set, set switch 1 (10s digit) to ON. If 20 - 29 systems are set, set switch 2 (20s digit) to ON, and set switch 1 (10s digit) to OFF. If 30 systems are set, set both switch 1 (10s digit) and switch 2 (20s digit) to ON. (For details concerning S002 and S003, refer to Table 7-1.)
S004	<p>Rotary switch (10 positions, red): Switch for setting the number of connected indoor units. In order to allow the outdoor unit to manage indoor units in the same refrigerant system, set the number of connected indoor units. (For details, refer to Table 7-2.)</p>
S005	<p>DIP switch (3P, blue): Switches for setting the 10s, 20s, and 30s digit for the number of connected indoor units</p> <ul style="list-style-type: none"> If 10 systems or more are set, the setting is made by a combination of this DIP switch and S004. If 10 - 19 systems are set, set only switch 1 (10s digit) to ON. If 20 - 29 systems are set, set switch 2 (20s digit) to ON, and set switch 1 (10s digit) to OFF. If 30 - 39 systems are set, set only switch 3 (30s digit) to ON. (For details concerning S004 and S005, refer to Table 7-2.)
S006	<p>DIP switch (3P, blue): Switch for setting the number of outdoor units</p> <ul style="list-style-type: none"> Turn the switches ON according to the number of outdoor units (1 - 4). (For details, refer to Table 7-3.)
S007	<p>DIP switch (3P, blue): Unit No. setting switch</p> <ul style="list-style-type: none"> The setting is "1" at the time of shipment. (For details, refer to Table 7-4.)
S010	<p>DIP switch (3P, blue): Backup operation switch</p> <p>If an INV compressor has malfunctioned, turn CT1 ON and Back Up SW ON to operate the outdoor unit using only the constant-speed compressor.</p> <p>If a constant-speed compressor has malfunctioned, turn CT2 ON and Back Up SW ON to operate the outdoor unit using only the INV compressor. (Disconnect the wiring from the constant-speed compressor.)</p>

1. Outdoor Unit Control PCB

Terminal plug	<p>3P plug (black): For communications circuit impedance matching</p> <ul style="list-style-type: none"> • A connecting socket (3P, black) is attached to the terminal plug at the time of shipment from the factory. • In the case of link wiring which combines the inter-unit control wiring for multiple systems into a single communications circuit, leave the connecting socket in place at only one of the outdoor units, and move the socket from the "SHORT" side to the "OPEN" side at all other outdoor units. If multiple connecting sockets are left in place, communications trouble will occur.
LED1, 2 D72, D75	<p>LED (red × 2)</p> <ul style="list-style-type: none"> • LED 1 and 2 blink alternately while automatic address setting is in progress. • Display the alarm contents for alarms which were detected by the outdoor unit.
Power LED D53	<p>LED (red): Power indicator</p> <p>Indicates the DC 5V power on the outdoor unit control PCB.</p>
Run (CN103)	<p>2P plug (white): Start pin</p> <p>Short-circuit this pin and apply a pulse signal to start all indoor units in that refrigerant system.</p>
Stop (CN104)	<p>2P plug (white): Stop pin</p> <p>Short-circuit this pin and apply a pulse signal to stop all indoor units in that refrigerant system.</p>
AP (CN102)	<p>2P plug (white): Vacuuming pin</p> <ul style="list-style-type: none"> • To perform vacuuming of the outdoor unit, short-circuit this pin and then turn the power ON. All solenoid valves turn ON and vacuuming begins smoothly. (Do not perform automatic address setting at this time.) • Release the short-circuit to return the unit to normal status.
Mode (CN101)	<p>2P plug (white): Indoor unit Heating/Cooling mode change pin</p> <ul style="list-style-type: none"> • When operating the compressors to perform automatic address setting, operation in Heating mode can be normally used. However, short-circuiting this pin performs operation in Cooling mode. (Static signal) • Short-circuiting this pin during ordinary operation changes the mode from Cooling to Heating (if the current mode is Cooling) or from Heating to Cooling (if the current mode is Heating).
Test (CN022)	<p>2P plug (white)</p> <ul style="list-style-type: none"> • This pin is used to test the PCB at the factory. • When the power is turned ON after this pin has been short-circuited, all output signals will be output in sequence. (Sequential output does not occur if this pin is short-circuited when the power is already ON.) Releasing this pin returns the unit to normal control.

1. Outdoor Unit Control PCB

Table 1. Setting the System Address [S002: Rotary switch (black), S003: 2P DIP (blue)]

	Outdoor system address	S002 setting	S003 setting	
			1P (10s digit)	2P (20s digit)
1 refrigerant system only	1	0	OFF	OFF
Link wiring	1	1	OFF	OFF
	2	2	OFF	OFF
	3	3	OFF	OFF
	4	4	OFF	OFF
	5	5	OFF	OFF
	6	6	OFF	OFF
	7	7	OFF	OFF
	8	8	OFF	OFF
	9	9	OFF	OFF
	10	0	ON	OFF
	11	1	ON	OFF
	12	2	ON	OFF
	13	3	ON	OFF
	14	4	ON	OFF
	15	5	ON	OFF
	16	6	ON	OFF
	17	7	ON	OFF
	18	8	ON	OFF
	19	9	ON	OFF
	20	0	OFF	ON
	21	1	OFF	ON
	22	2	OFF	ON
	23	3	OFF	ON
	24	4	OFF	ON
	25	5	OFF	ON
	26	6	OFF	ON
	27	7	OFF	ON
	28	8	OFF	ON
	29	9	OFF	ON
	30	0	ON	ON

Table 2. Setting the Number of Indoor Units [S004: Rotary switch (red), S005: 2P DIP (blue)]

Number of Indoor Units	S004 Setting	S005 Setting		
		1	2	3
1	1	OFF	OFF	OFF
2	2	OFF	OFF	OFF
3	3	OFF	OFF	OFF
9	9	OFF	OFF	OFF
10	0	ON	OFF	OFF
11	1	ON	OFF	OFF
19	9	ON	OFF	OFF
20	0	OFF	ON	OFF
21	1	OFF	ON	OFF
29	9	OFF	ON	OFF
30	0	OFF	OFF	ON
31	1	OFF	OFF	ON
39	9	OFF	OFF	ON
40	0	ON	ON	ON

Table 3. Setting the Number of Outdoor Units [S006: DIP switch (blue)]

Number of Indoor Units	S006 Setting		
	1	2	3
1	ON	OFF	OFF
2	OFF	ON	OFF
3	ON	ON	OFF
4	OFF	OFF	ON

Table 4. Setting the Outdoor Unit address


Outdoor Unit Address	S007 Setting		
	1	2	3
1	ON	OFF	OFF
2	OFF	ON	OFF
3	ON	ON	OFF
4	OFF	OFF	ON

2. Indoor Unit Control PCB

1. Indoor Unit Control PCB Switches and Functions


Indoor unit control PCB

- T10:** **6P plug (yellow):** Used for remote control. (Refer to the remote control section.)
(CN61) Control items: (1) Start/stop input (2) Remote controller prohibit input
(3) Start signal output (4) Alarm signal output
- EXCT:** **2P plug (red):** Can be used for demand control. When input is present, forces the unit to operate with the thermostat OFF.
(CN73)
- DISP:** **2P plug (white):** Short-circuiting this plug allows the unit to be operated by the remote controller, even if it is not connected to an outdoor unit.
(CN72) (In this case, alarm "E04," which indicates trouble in the serial communication between the indoor and outdoor unit, does not occur.)
- CHK:** **2P plug (white):** Test pin. Short-circuiting this pin allows the indoor FM (H fan speed), drain pump, flap motor (F1 position), and electronic expansion valve full-open position to be checked.
However this function turns OFF if the indoor unit protection mechanism is activated. The unit can be operated even if the remote controller and outdoor unit are not connected. However even if the remote controller cannot be connected, it cannot be used to operate the unit. This function can be used for short-term tests.
- JP1:** **Jumper wire:** Allows selection of the T10 terminal start/stop signal. (Refer to the remote control section.) Status at shipment: Pulse signal
(J01) Jumper wire cut: Static signal (continuous signal)
- FAN DRIVE** **2P plug (white):** This terminal sends a signal to the ventilation fan when the FAN button on the wired remote controller is used to operate a commercially-available ventilation fan. (Refer to the remote control section.)
Use a ventilation fan which can accept no-voltage A contact as the external input signal.
- FILTER:** **2P (white):** This terminal is used to connect contact input from the differential pressure switch which detects filter clogging. When the contacts turn ON, "FILTER" is displayed on the wired remote controller.
(CN70)
- Power LED:** **LED (red):** Illuminates when power is supplied. Blinks when there is a failure in the EEPROM (IC10: nonvolatile memory).
- EEPROM:** **Nonvolatile memory:** Memory which stores the unit type data and other information. When the PCB is replaced, remove the EEPROM from the old PCB and install it onto the new PCB. If an IC failure occurs, replace with a new IC which was provided with the service PCB, and set the necessary information from the wired remote controller. (For the procedure, refer to the servicing technical materials.)
(IC10)
- GRL:** ● For AC fan motor (CR-UGRP71B-B: 3P (yellow))
(CN20) ● For DC fan motor (CR-SGRP56B-B: 5P (blue))
- The indoor unit power terminal plate will be a 7P type or may be a 5P type. (Refer to the figure at below.) The basic wiring diagram shows the 7P-type terminal plate. Therefore the terminal plate may differ from the illustrations.

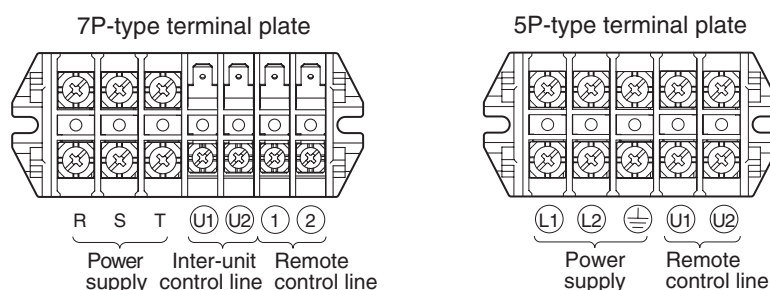


2. Indoor Unit Control PCB

1. For AC Fan Motor (CR-UXXRP71B-B)

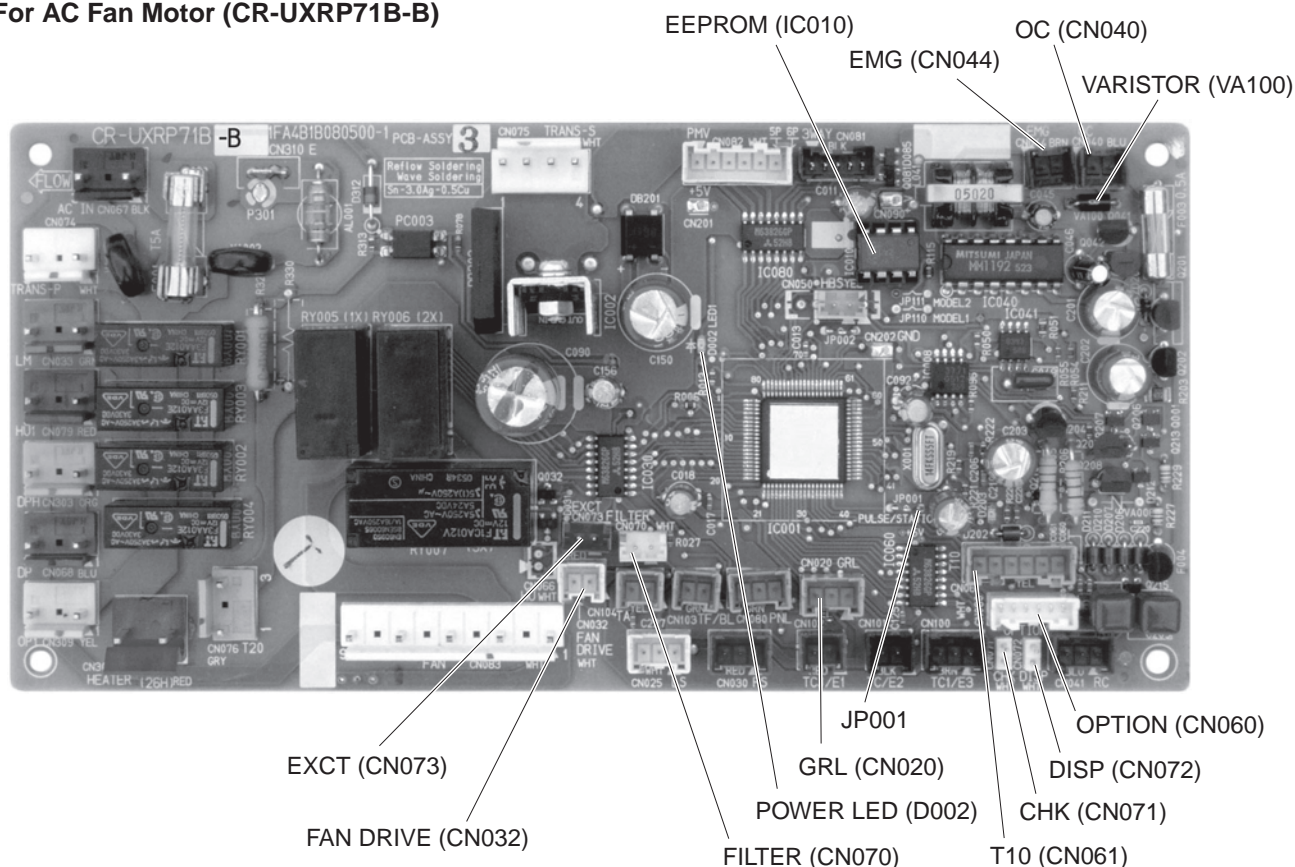


2. For DC Fan Motor (CR-SXRP56B-B)

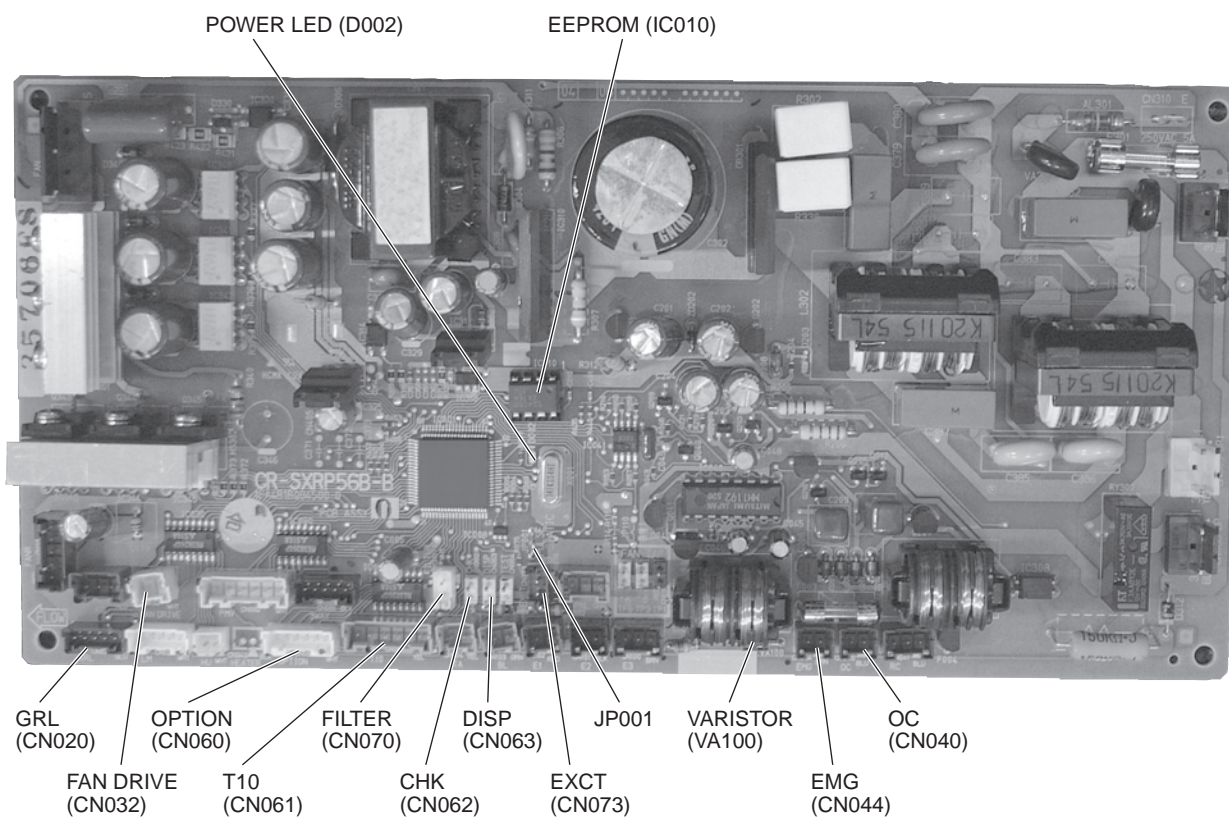

2. Indoor Unit Control PCB


3. CR1 (for CR-KR74GXH56A/KHX0752~KHX1852) (Wall-Mounted)

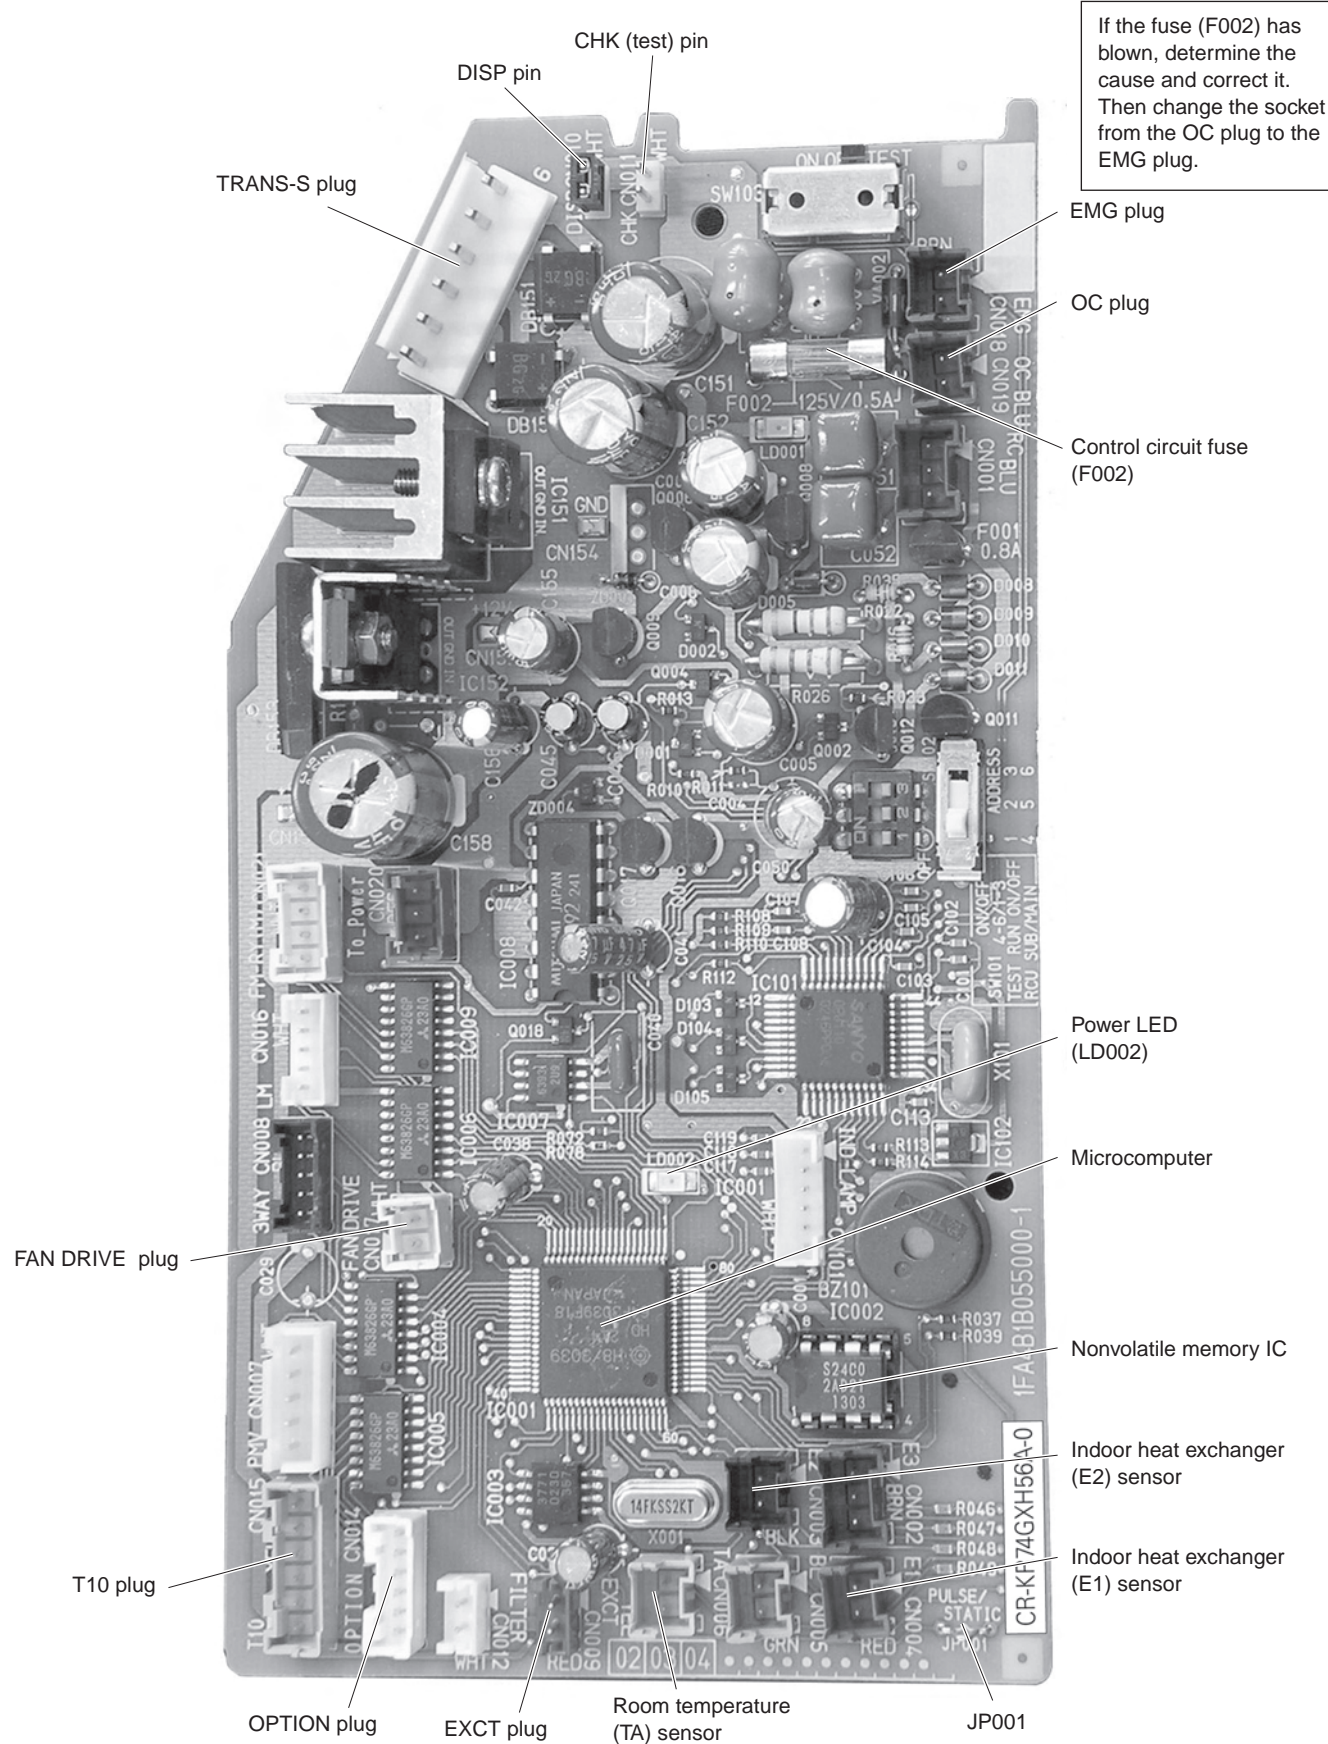

2. Indoor Unit Control PCB


4. CR1 (for CR-KR254GXH56A/KHX2452) (Wall-Mounted)

If the fuse (F002) has blown, determine the cause and correct it. Then change the socket from the OC plug to the EMG plug.

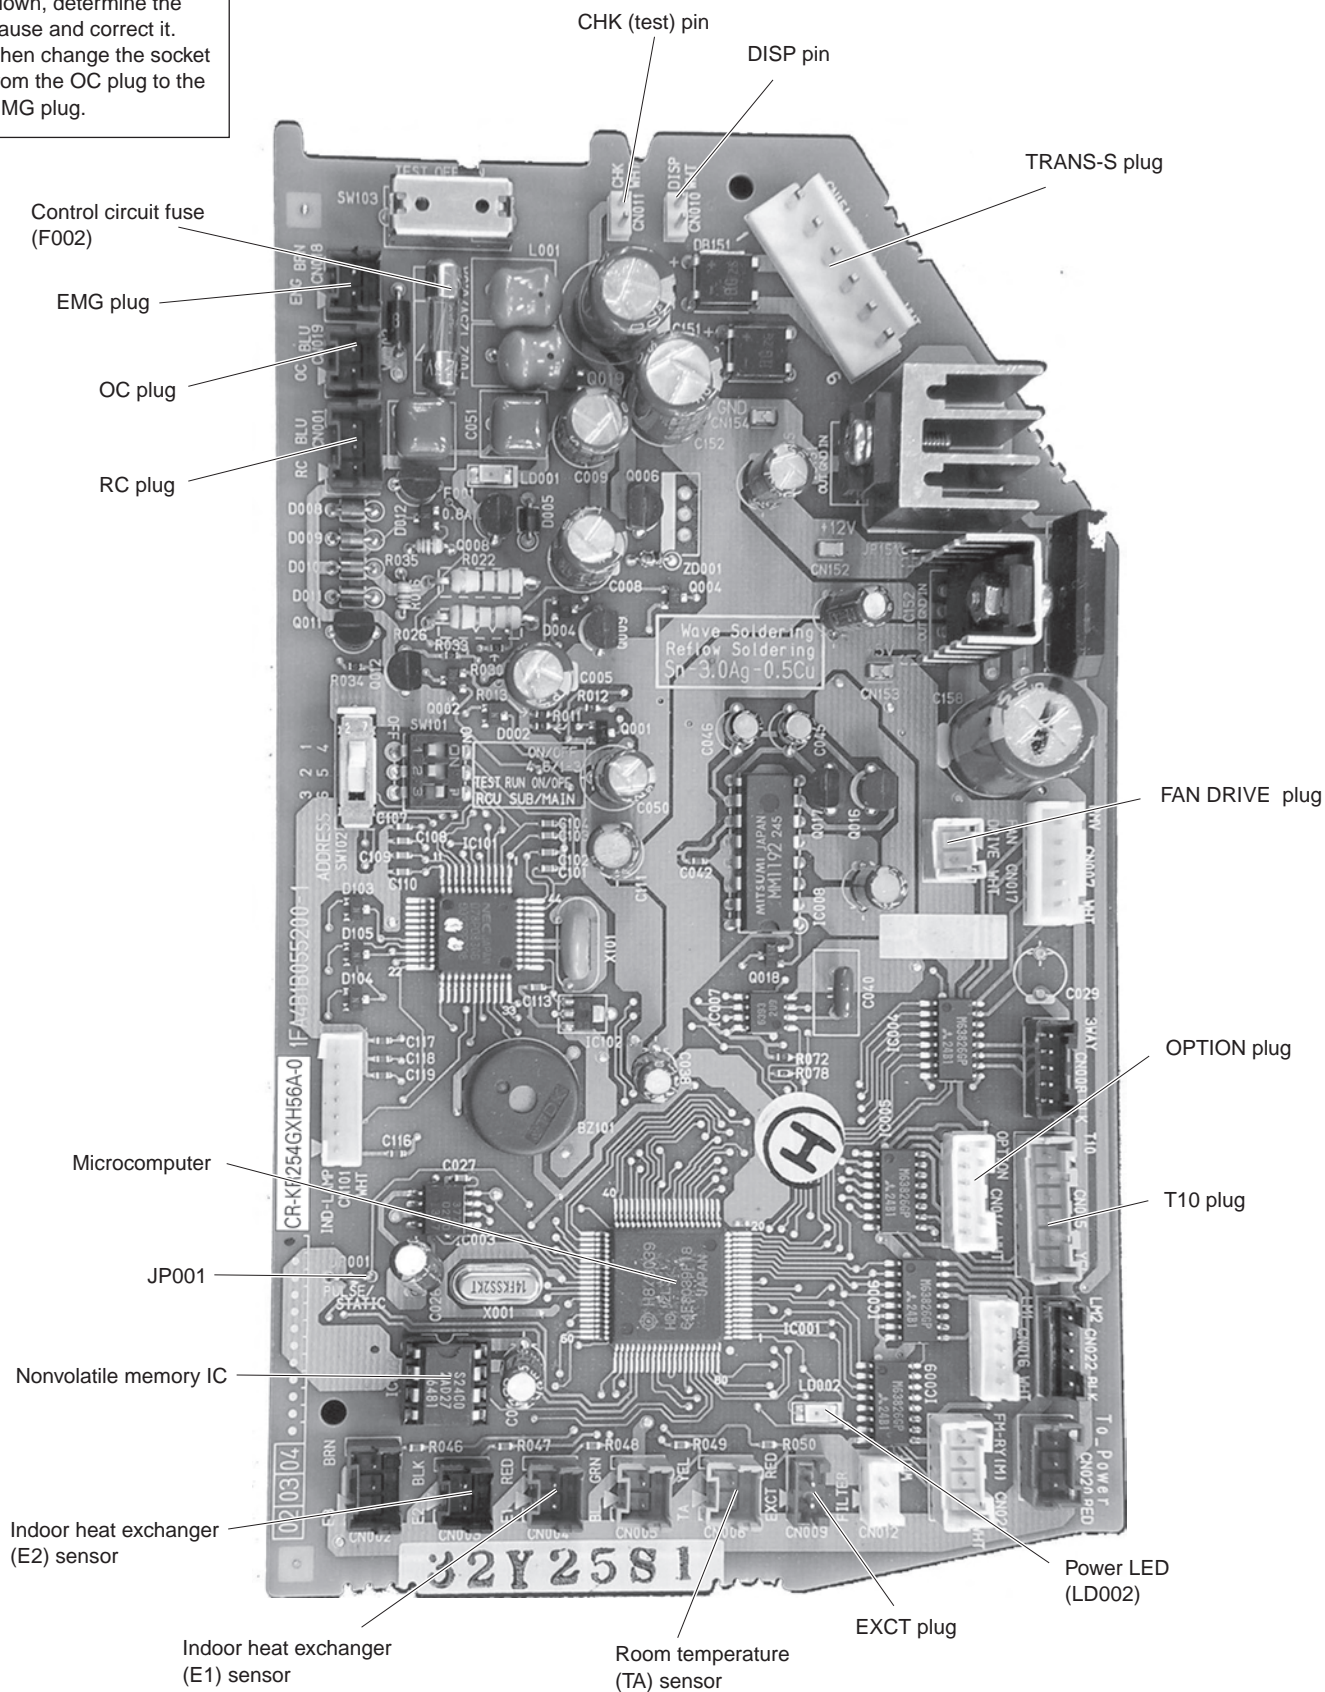



2. Indoor Unit Control PCB

5. CR2 (for POW-KR74GXH56/KHX0752~KHX2452) (Wall-Mounted)

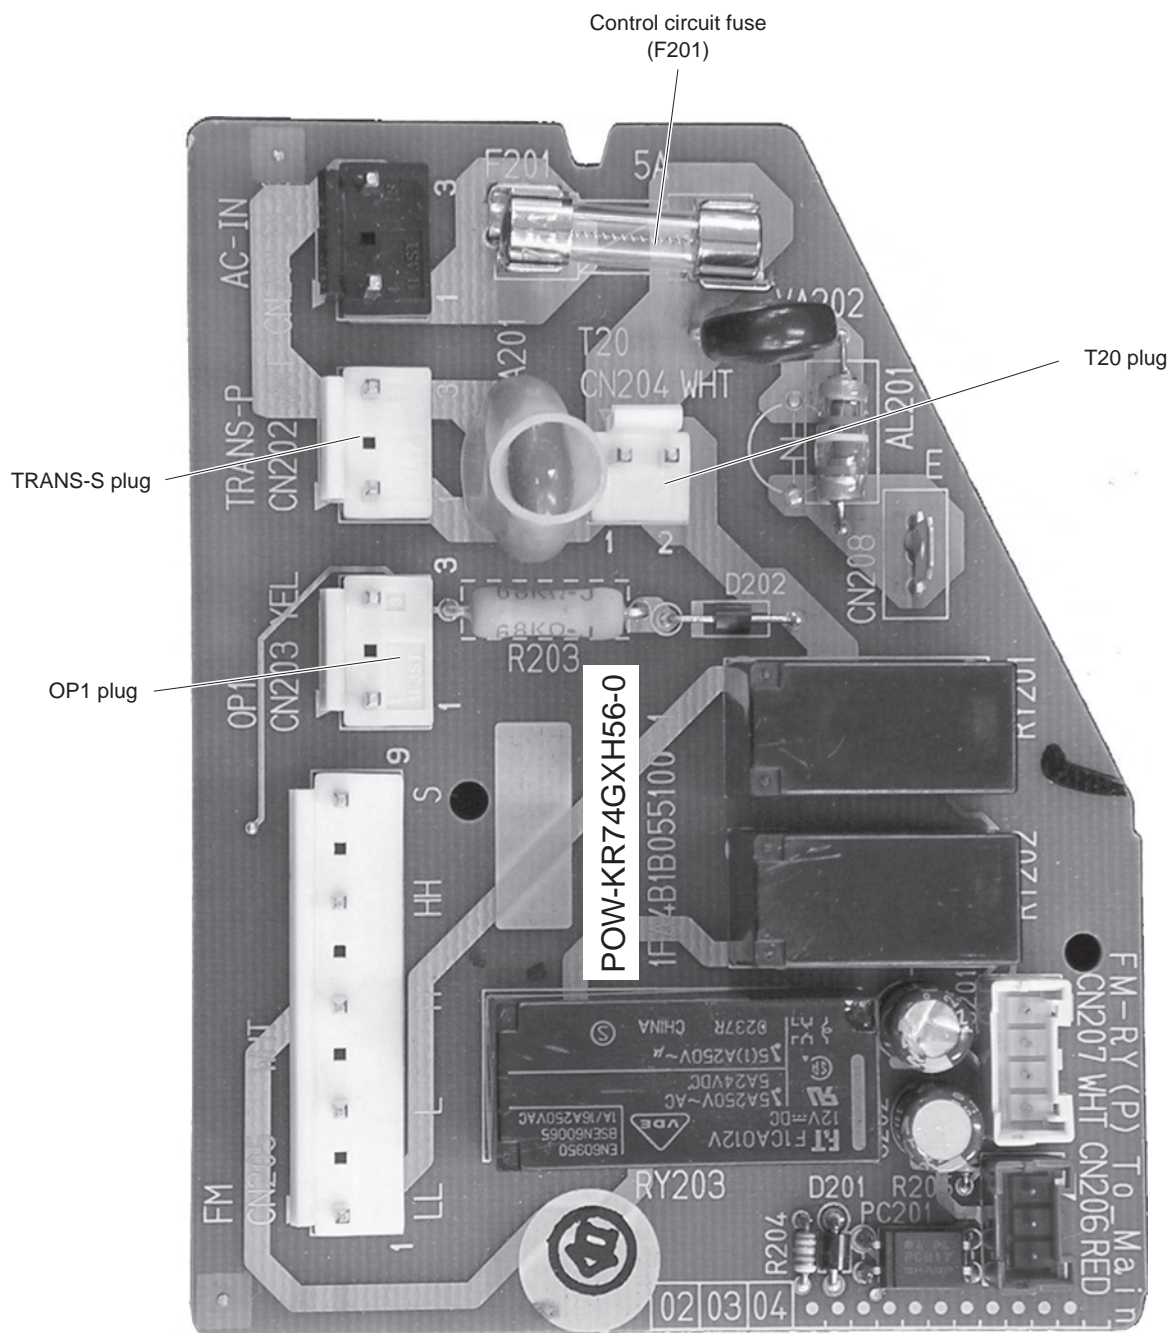

2. Indoor Unit Control PCB


6. Explanation of Functions (CR-KXRP56AN, CR-KXRP80AN, POW-KRP50A)
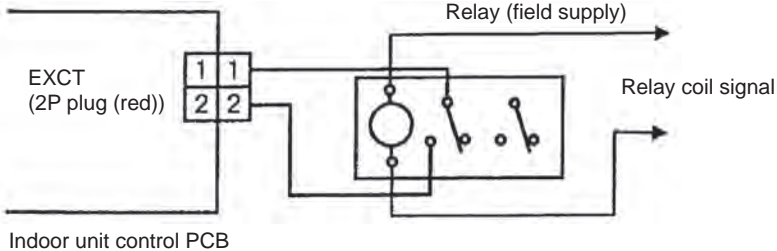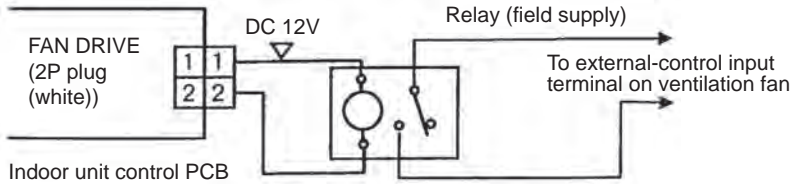
<p>T10 (CN105) (for remote control)</p>	<p>6P flag (yellow): Used for remote control. Control items: ① Start/stop input ② Remote controller prohibit input ③ Start signal output ④ Alarm signal output</p>
<p>EXCT (CN009)</p>	<p>2P plug (red): Can be used for demand control. When input is present, forces the unit to operate with the thermostat OFF.</p> <p>● Examples of wiring</p> <p>* Lead wire with 2P plug (special-order part: WIRE K/854 05280 75300)</p>  <p>Indoor unit control PCB</p> <p>Note: The length of the wiring from the indoor unit control PCB to the relay must be 6-9/16 ft. or less.</p>
<p>DISP (CN010)</p>	<p>2P plug (white): Short-circuiting this plug allows the unit to be operated by the remote controller, even if it is not connected to an outdoor unit. (In this case, alarm "E04," which indicates trouble in the serial communication between the indoor and outdoor unit, does not occur.)</p>
<p>CHK (CN011)</p>	<p>2P plug (white): Test pin. Short circuiting this plug allows the operation of the indoor fan motor (high) and flap motor (F1 position) to be checked. However this test operation stops if the indoor unit protection mechanism is activated. The unit can be operated even if the remote controller and outdoor unit are not connected. However even if the remote controller cannot be connected, it cannot be used to operate the unit. This function can be used for short-term tests.</p>
<p>JP001</p>	<p>Jumper wire: Allows selection of the T10 terminal start/stop signal. Status at shipment: Pulse signal. Jumper wire cut: Static signal (continuous signal)</p>
<p>FAN DRIVE (CN017)</p>	<p>2P plug (white): This terminal sends a signal to the ventilation fan when the FAN button on the wired remote controller is used to operate a commercially-available ventilation fan. Use a ventilation fan that can accept no-voltage A contact as the external input signal.</p> <p>● Examples of wiring</p> <p>* Lead wire with 2P plug (special-order part: WIRE K/854 05280 50600)</p>  <p>Indoor unit control PCB</p> <p>Note: The length of the wiring from the indoor unit control PCB to the relay must be 6-9/16 ft. or less.</p>

2. Indoor Unit Control PCB

OPTION
(CN014)

6P (white): Outputs external signals as shown in the figure below.

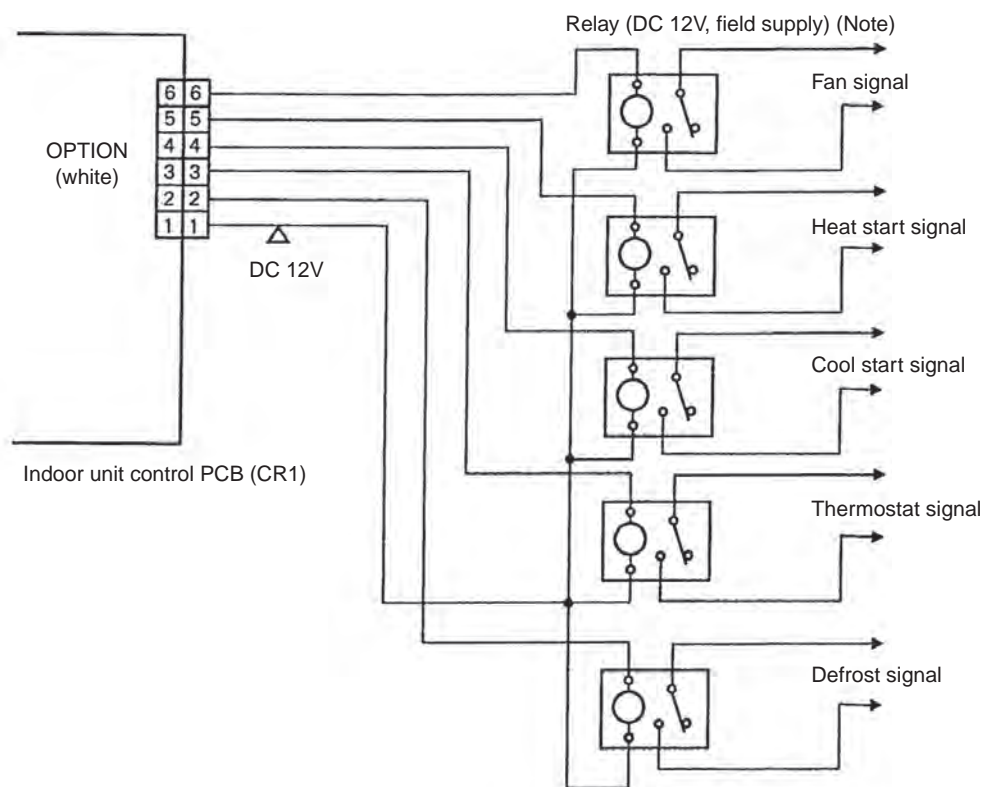

Note: The relay must be installed at a distance of 6-9/16 ft. or less from the PCB.

Contents

5. SELF-DIAGNOSIS FUNCTION TABLE

1. Self-Diagnosis Function Table.....5-2

1. Self-Diagnosis Function Table

1. Self-Diagnosis Function Table

- Causes and corrections in instances when automatic address setting cannot be started

Trouble	Cause and correction
The power LED (D53) on the outdoor unit control PCB does not turn ON.	Check for any errors in the power wiring to the outdoor unit, and check for a missing phase.
LED 1 and 2 on the outdoor unit control PCB do not turn OFF when the outdoor unit power is turned ON, and automatic address setting cannot be started.	Check the "Alarm Display" table and correct the problem. (Refer to Section 3 Trouble Diagnosis)
An alarm appears immediately when automatic address setting is started from the wired remote controller.	
Nothing happens when the operator attempts to start automatic address setting from the wired remote controller.	Check that the wired remote controller wiring and the inter-unit control wiring are connected correctly. Check that the indoor unit power is ON.

- Causes and corrections in instances when automatic address setting starts, but cannot be completed successfully

Trouble	Cause and correction
An alarm appears on the wired remote controller sometime from several seconds to several minutes after automatic address setting is started.	Check the "Alarm Display" table and correct the problem. (Refer to Section 3 Trouble Diagnosis.) Check the alarm details on the "Outdoor Unit Control PCB LED 1 and 2 Alarms", then correct the problem.
LED 1 and 2 on the outdoor unit control PCB indicate that automatic address setting is in progress (the LEDs blink alternately) for several minutes after automatic address setting is started (the compressors may also start and stop several times), however LED 1 and 2 never indicate that automatic address setting is completed (turn OFF).	

- If alarm E15, E16, or E20 appears after automatic address setting is started, check the following items.

Alarm display	Alarm description
E15	The number of indoor units detected during automatic address setting was smaller than the number of indoor units which was set with switch S004 and S005 on the outdoor unit PCB.
E16	The number of indoor units detected during automatic address setting was larger than the number of indoor units which was set with switch S004 and S005 on the outdoor unit PCB.
E20	The outdoor unit received no serial signals from indoor units within 90 seconds after automatic address setting was started.

1. Self-Diagnosis Function Table

Check items	E15	E16	E20
Check that the indoor unit power is turned ON.	○		○
Check that the inter-unit control wiring is connected correctly. (Check that there are no open circuits, short circuits, terminal plugs, incorrect wiring to the remote controller terminals, or similar problems.)	○	○	○
Check that the remote controller wiring is connected correctly. (Check that there are no open circuits, short circuits, incorrect wiring to the inter-unit control wiring terminals, group control crossover wiring, or similar problems.)	○		○
Check that the number of indoor units has been set correctly using switch S004 and S005 on the outdoor unit control PCB.	○	○	
Check that the amount of additional refrigerant charge is correct when performing Auto Address Setting Case 3A or Case 3B in the flow chart described on page 1-3.	○		
Check that the refrigerant tubing connections are correct when performing Auto Address Setting Case 3A or Case 3B in the flow chart described on page 1-3.	○	○	
Check that there are no problems with indoor unit sensors E1 and E3 when performing Auto Address Setting Case 3A or Case 3B in the flow chart described on page 1-3.	○		
Check that there are no indoor units where the system address was already incorrectly set by manual or automatic address setting.		○	

- When automatic address setting is started from the outdoor unit control PCB or from the remote controller, **SETTING** (SETTING) appears on the remote controller at units where the inter-unit control wiring and remote controller wiring are connected correctly. LED 1 and 2 on the outdoor unit control PCB blink alternately.
- In the case of indoor unit group control, if there is a mistake in the group-control wiring, addresses may not be set even if **SETTING** (SETTING) appears.
- Even if alarm E15 or E16 appears, addresses are set at those indoor units which could be verified. The set addresses can be checked using the wired remote controller.
- If one of the below alarms appears when the remote controller is operated after automatic address setting was completed (LED 1 and 2 on the outdoor unit control PCB are turned OFF), follow the instructions in the table below and correct the problem location.

Remote controller display	Cause
Nothing is displayed.	The remote controller is not connected correctly (power trouble). The indoor unit power was cut off after automatic address setting was completed.
E01	The remote controller is not connected correctly (remote controller receiving trouble). The remote controller of an indoor unit where the indoor unit address is not set is inadvertently operated. (Communications with the outdoor unit are not possible.)
E02	The remote controller is not connected correctly (trouble with sending of the signal from the remote controller to the indoor unit).
P09	The indoor unit ceiling panel connector is not connected correctly.

1. Self-Diagnosis Function Table

- The outdoor unit maintenance remote controller can be used to check the alarm display.
The number of times that LED 1 and 2 blink on the outdoor unit control PCB can be used to check the alarm display.
(Refer to "Checking the LED 1 and 2 Alarm Display on the Outdoor Unit Control PCB.")

Alarm code	Alarm meaning
E06	Outdoor unit failed to receive serial communication signals from indoor unit.
E12	Automatic address setting start is prohibited.
E15	Automatic address setting alarm (too few units)
E16	Automatic address setting alarm (too many units)
E20	No indoor units at automatic address setting.
E24	Outdoor unit failed to receive communications from another outdoor unit.
E25	Outdoor unit address setting failure (duplication)
E26	Mismatch in outdoor unit quantity
E29	Outdoor unit failed to receive communication from another outdoor unit.
E30	Outdoor unit serial communications failure
F04	Compressor 1 discharge temperature sensor trouble (DISCH1)
F05	Compressor 2 discharge temperature sensor trouble (DISCH2)
F06	Gas temperature sensor trouble at outdoor heat exchanger 1 (EXG1)
F07	Liquid temperature sensor trouble at outdoor heat exchanger 1 (EXL1)
F08	Outdoor air temperature sensor trouble (AIR TEMP)
F12	Compressor intake temperature sensor trouble (SCT)
F16	High-pressure sensor trouble (HPS)
F17	Low-pressure sensor trouble (LPS)
F22	Compressor 3 discharge temperature sensor trouble (DISCH3)
F23	Gas temperature sensor trouble at outdoor heat exchanger 2 (EXG2)
F24	Liquid temperature sensor trouble at outdoor heat exchanger 2 (EXL2)
F31	Outdoor unit non-volatile memory (EEPROM) trouble
H03	Compressor 1 CT sensor disconnected or short-circuit
H06	Low-pressure trouble
H08	Compressor 1 oil detection sensor (connection) trouble
H11	Constant speed compressor 2 overcurrent alarm
H12	Constant speed compressor 2 lock current alarm
H13	Compressor 2 CT sensor disconnected or short-circuit
H15	Compressor 2 discharge temperature sensor disconnected
H21	Compressor 3 overcurrent alarm
H22	Compressor 3 lock current alarm
H23	Compressor 3 CT sensor disconnected or short-circuit
H25	Compressor 3 discharge temperature sensor disconnected
H27	Compressor 2 lock current alarm
H28	Compressor 3 lock current alarm
H31	HIC trouble alarm
L04	Outdoor unit address duplication
L05	Duplicated indoor unit priority (alarm at priority indoor units)
L06	Duplicated indoor unit priority (alarm at non-priority indoor units and outdoor unit)
L10	Outdoor unit capacity not set
L17	Outdoor unit model mismatch
L18	4-way valve operation failure.
P03	Compressor 1 discharge temperature trouble
P04	High-pressure switch activated
P05	Reverse phase (or missing phase) detected, capacity mismatch
P14	O ₂ sensor is activated.
P16	Compressor 1 overcurrent
P17	Compressor 2 discharge temp trouble
P18	Compressor 3 discharge temp trouble
P22	Fan motor trouble
P26	Inverter compressor high-frequency overcurrent alarm
P29	Inverter compressor missing phase or lock alarm

Contents

6. SERVICE CHECKER

1. Outdoor Unit Maintenance Remote Controller	6-2
1. Over View	6-2
2. Functions	6-2
3. Ordinary Display Controls and Functions	6-3
4. Monitoring Operations	6-7
5. Outdoor Unit Alarm History Monitor	6-8
6. Setting the Outdoor Unit EEPROM Data	6-9

1. Outdoor Unit Maintenance Remote Controller

1. Overview


■ About the outdoor unit maintenance remote controller

The outdoor unit utilizes non-volatile memory (EEPROM) on its PCB. This allows EEPROM data to replace the setting switches that were present on previous PCBs. The outdoor unit maintenance remote controller is used to set and change these EEPROM data.


In addition to setting and checking the outdoor unit EEPROM data, this remote controller can also be used to monitor the outdoor unit alarm history, monitor the various indoor and outdoor temperatures, and check the indoor unit connection status (number of units, operating mode, etc.).

NOTE

Outdoor unit maintenance remote controller does not function as an ordinary remote controller. It is therefore only used for test runs and during servicing.

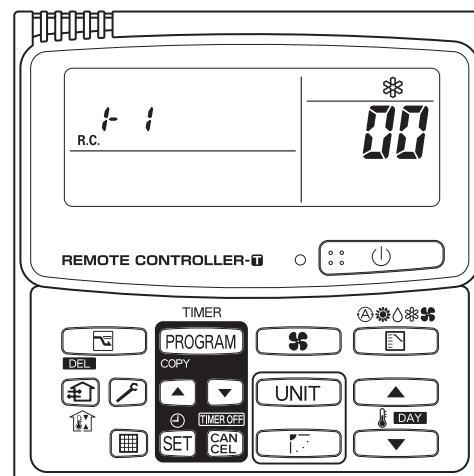

System Diagram

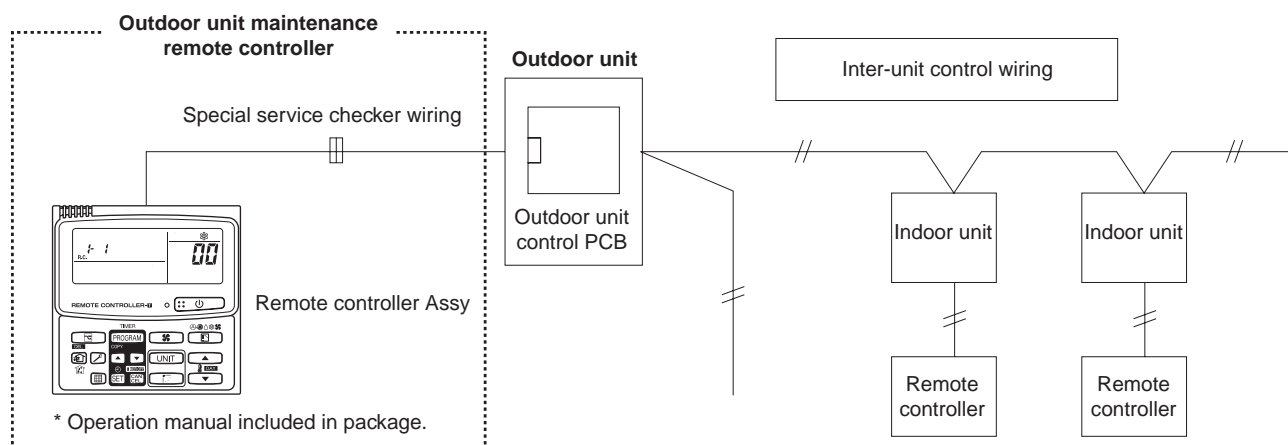

- The special service checker wiring is required in order to connect the outdoor unit maintenance remote controller to the outdoor unit PCB.
- Ordinary remote controllers or other controllers are still required for the indoor units, even when the outdoor unit maintenance remote controller is connected.

2. Functions

■ Functions on the ordinary display

(1) Press the buttons to execute the following functions.

- All indoor units stop/start
- Cooling/heating change
- All indoor units test run

(2) Display: The following displays are possible.

- Alarm display
- No. of indoor/outdoor units
- Unit Nos. of connected indoor/outdoor units
- Operating status of indoor/outdoor units (Blinks when alarm occurs.)
- Indoor thermostat ON
- Display of individual outdoor unit alarms
- Total operating time of outdoor unit compressors
- Oil level of the outdoor unit oil sensor
- Total outdoor unit power ON time
- Outdoor unit microcomputer version, other information.

1. Outdoor Unit Maintenance Remote Controller

■ Temperature monitor

Displays the temperature from each indoor/outdoor sensor.

■ Outdoor unit alarm history monitor

Displays the outdoor unit alarm history.

■ Setting the outdoor unit EEPROM data


Settings mode 1 and settings mode 2 can be used to make outdoor unit EEPROM data settings.

3. Ordinary Display Controls and Functions

■ Functions on the ordinary display

Connect the special service checker wiring to the outdoor unit PCB.


The connection diagram is shown below.

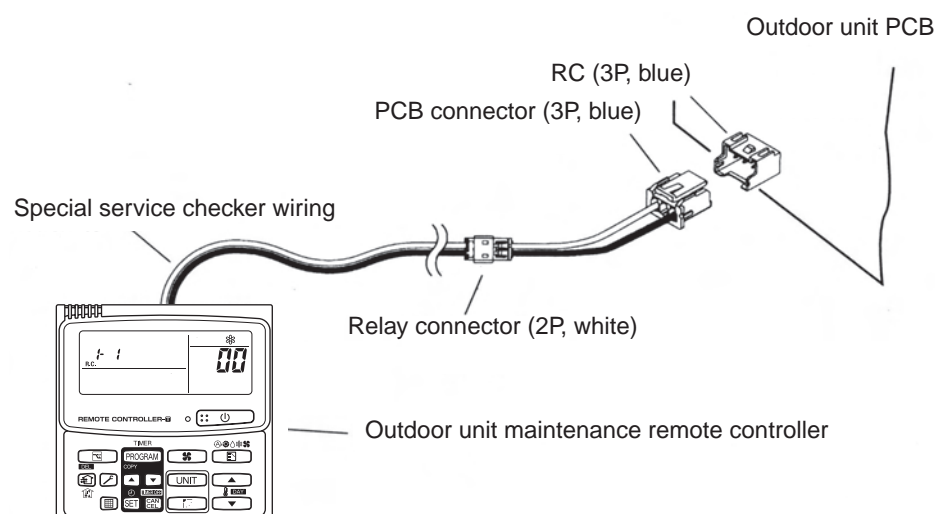

- If the inter-unit control wiring is connected, it can be left as-is.
- In the case of an independent outdoor unit (1 maintenance remote controller connected to 1 outdoor unit, automatic address setting for indoor units not completed), both setting mode 1 and setting mode 2 can be used for outdoor unit EEPROM data settings.
- The overall system status for that refrigerant system is displayed.

All units start/stop (Fig. 6-1)


<Operation>

The  (ON/OFF operation) button can be used to start and stop all indoor units.

- The LED illuminates if any indoor unit is operating.
- The LED blinks if an alarm occurs at any of the operating indoor units.

Cooling/heating change (Fig. 6-1)


<Operation>

The  (MODE) button can be used to change between heating and cooling operation.

- The display indicates the operating mode of the indoor unit with the lowest unit No.

All units test run (Fig. 6-2)

<Operation>

The  (CHECK) button can be used to start and stop a test run for all units.

(To start, press and hold the button for 4 seconds.)

During the test run, "Test" is displayed.

- The status of test runs performed from the indoor unit remote controller is not displayed on the outdoor unit maintenance remote controller.

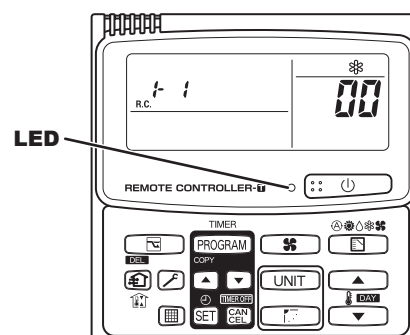


Fig. 6-1

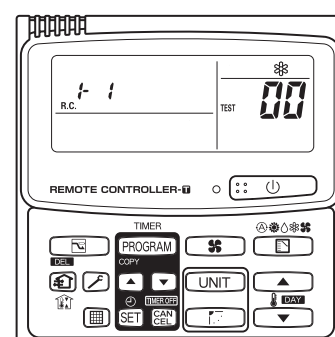


Fig. 6-2

1. Outdoor Unit Maintenance Remote Controller

■ Display (functions)

① The item codes can be changed with the 「▲」 and 「▼」 buttons.

Item code	Item	Remarks
00	Outdoor unit alarm	Alarm code display
01	No. of connected indoor units	Quantity
02	Unit Nos. of connected indoor unit	7-segment display
03	Operating status of indoor unit	7-segment display
04	Thermostat ON status of indoor unit	7-segment display
05	No. of connected outdoor units	1 – 4
06	Unit Nos. of connected outdoor units	7-segment display
07	Operating status of outdoor unit compressor	7-segment display
10	Compressor 1 operating time	0 – 99999999 hrs
11	Compressor 2 operating time	0 – 99999999 hrs
12	Compressor 3 operating time	
13	Compressor 1 oil level	0 = Empty 1 = Insufficient 2 = Sufficient
14	Compressor 2 oil level	0 = Empty 1 = Insufficient 2 = Sufficient
15	Compressor 3 oil level	0 = Empty 1 = Insufficient 2 = Sufficient
16	Outdoor unit power ON time	0 – 99999999 hrs
17	Compressor 1 operation count	0 – 65535 times
18	Compressor 2 operation count	0 – 65535 times
19	Compressor 3 operation count	0 – 65535 times
F0	Alarm history 1 (most recent)	Display only. Alarm code and unit No. of unit where alarm occurred are displayed alternately. 0 = CCU 1 – 4 = Outdoor unit
F1	Alarm history 2	
F2	Alarm history 3	
F3	Alarm history 4	
F4	Alarm history 5	
F5	Alarm history 6	
F6	Alarm history 7	
F7	Alarm history 8 (oldest)	
FE	Firmware version	Displays the version No. × 100.
FF	Program version	Displays the version No. × 100.

① and ② correspond to Fig. 6-3 on the next page.

1. Outdoor Unit Maintenance Remote Controller

③ XX-YY R.C.

Displays the outdoor unit sub-bus address which is currently selected.

XX = Outdoor unit system address (1 – 30)

YY = Outdoor unit address (1 – 4)

The locations where ①, ② and ③ are displayed as shown on Fig. 6-3.


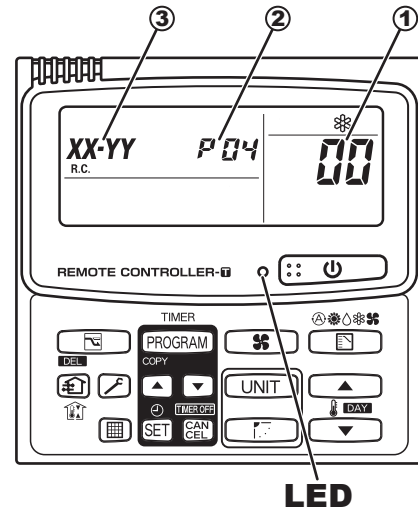



Fig. 6-3

Sample display (Fig. 6-4, Fig. 6-5)

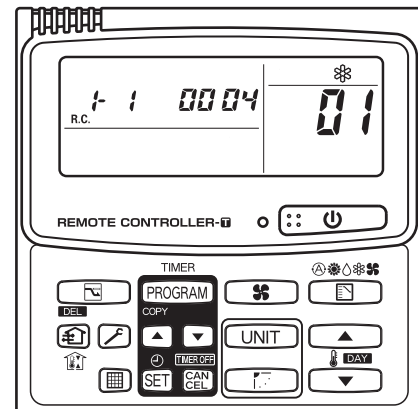

01 : <No. of connected indoor units>
4 units connected

Fig. 6-4

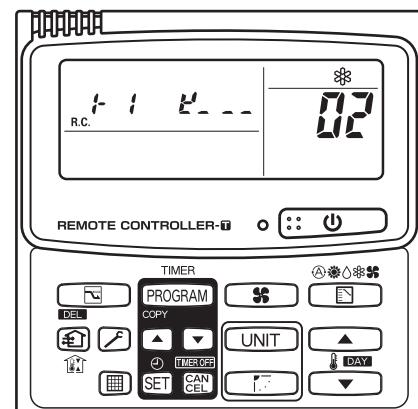

02 : <Unit Nos. 1, 2, 3, 4 connected>


Fig. 6-5

1. Outdoor Unit Maintenance Remote Controller


■ Concerning the 7-segment 4-digit display of remote controller timer time

- The unit Nos. of connected units are indicated by four 7-segment digits (**88 : 88**) and a colon.

① Display of unit Nos. 1 – 20

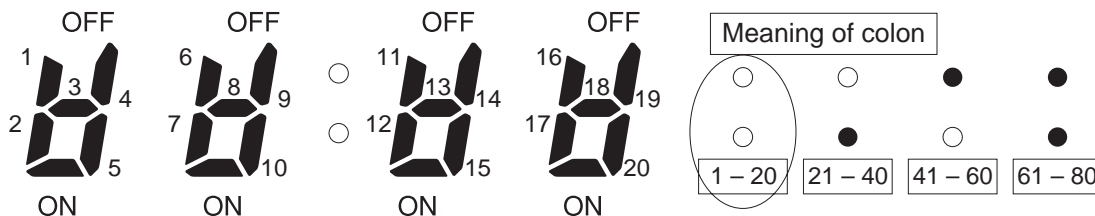


② Display of unit Nos. 21 – 40

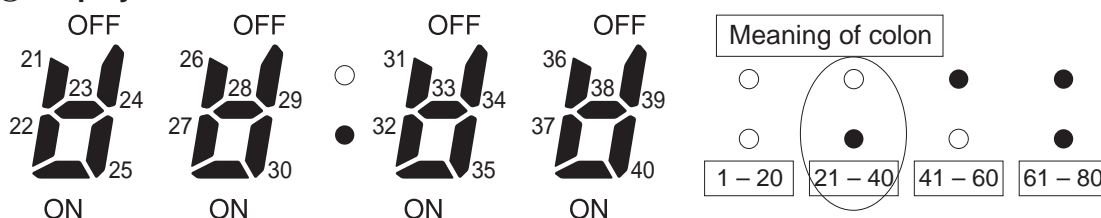

- ③ The meaning of the colon changes in the same way to indicate unit Nos. up to 80.

④ Sample displays of connected indoor unit Nos.

- Display of unit No. 1
- Display of unit Nos. 1 and 2
- Display of unit Nos. 1, 2, and 3
- Display of unit Nos. 1, 2, 3, and 4

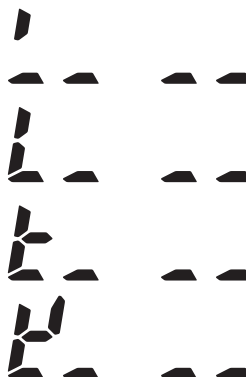


NOTE

The change of the colon display (between unit Nos. 1 – 20 to unit Nos. 21 – 40) occurs automatically every 10 seconds. (However the display does not change if there are no higher-number units connected.) To change the display to the higher-number units before 10 seconds have passed, press the (FLAP) button.

■ An 8-digit display is used for display of the compressor total operating time (in 1-hour units).

- When the first 4 digits are displayed, the bottom dot of the colon is illuminated. (Figure (A))
 - When the last 4 digits are displayed, the colon dot is OFF. (Figure (B))
 - The display of the first 4 digits and last 4 digits changes automatically after 10 seconds.
- The display can also be changed by pressing the (FLAP) button.

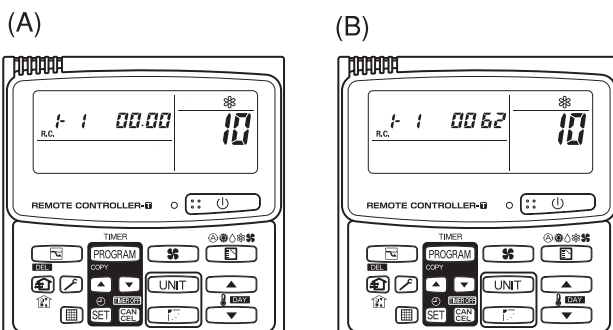

Sample Display (A), (B)








: <Compressor total operating time>
(A) and (B) are displayed alternately
(The example here (0000, 0062) indicates 62 hours.)


1. Outdoor Unit Maintenance Remote Controller

4. Monitoring Operations

Display the indoor unit and outdoor unit sensor temperatures.

<Operating procedure>

- ① Press and hold the  (CHECK) and  (CANCEL) buttons simultaneously for 4 seconds or longer to engage temperature monitor mode.
During temperature monitoring,  illuminates.
(The display and operations are the same as for monitor mode using the indoor unit remote controller.)
- ② Press the  (UNIT) button and select the indoor unit to monitor.
- ③ Press the temperature setting  and  buttons and select the item code of the temperature to monitor.
The unit No. of the selected indoor unit, and the temperature data, are displayed.
- ④ To end monitoring, press the  (CHECK) button.
The display returns to the normal display.

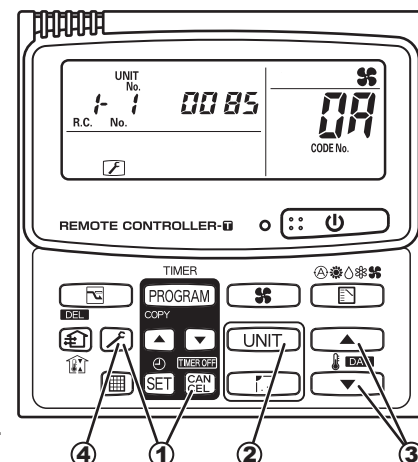

NOTE The display does not blink.

■ Display of unit No. 1 (main unit)

DN	Description	Remarks
02	Intake temp.	Indoor unit
03	E1	
04	E2	
05	E3	
06	Discharge temp.	
07	Discharge temp. setting	
08	Indoor unit electronic control valve position	
0A	Discharge temp. 1 at Compressor 1	
0b	Discharge temp. 2 at Compressor 2	
0c	High-pressure sensor temp.	
0d	Heat exchanger gas 1	Outdoor unit
0E	Heat exchanger liquid 1	
0F	Heat exchanger gas 2	
10	Heat exchanger liquid 2	
11	Outdoor air temp.	
12	Not used	
13	Inverter primary current	
14	Current at Compressor 2 (CT2)	
15	MOV1 pulse	
16	MOV2 pulse	
17	Discharge temp. 3 at Compressor 3	Outdoor unit
18	Current at Compressor 3 (CT3)	
1A	MOV3 pulse	
1b	Heat exchanger gas 3	
1c	Heat exchanger liquid 3	
1d	Low-pressure sensor temp.	
1E	Suction temp.	
1F	Oil 1	
20	Oil 2	
21	Oil 3	
22	Actual operating frequency	

NOTE

0A and subsequent items are outdoor unit data. 0A – 22 are for unit No. 1.
2A – 42 are for unit No. 2. 4A – 62 are for unit No. 3. 62 – 89 are for unit No. 4.









1. Outdoor Unit Maintenance Remote Controller


5. Outdoor Unit Alarm History Monitor

Recalls and displays the outdoor unit alarm history.

- This is for the outdoor unit only. Indoor unit alarms cannot be recalled.
- The indoor unit alarm history can be viewed on the indoor unit remote controller or other controller.

<Operation procedure>

- ① Press and hold the  (CHECK) button and  (SET) button simultaneously for 4 seconds or longer to engage outdoor unit alarm history mode. During temperature monitoring,  illuminates. The display and operations are the same as for the alarm history monitor performed from the indoor unit remote controller. However the “unit No.” display shows the outdoor unit address.
- ② Press the  (UNIT) button, and select the outdoor unit for which to monitor the alarm history.
- ③ Press the temperature setting  and  buttons and select the item code for the alarm history. The selected outdoor unit address, the item code, and the alarm history (alarm data) are displayed.
The outdoor unit address is displayed as R.C.
XX – YY.
(R.C. XX = Outdoor unit system address
YY = Outdoor unit address
Item codes 01 – 08 are displayed. 01 indicates the most recent alarm.
The alarm history displays the alarm code.
(If no alarms are present, then - - - is displayed.)
- ④ To clear the alarm history, press the  (CANCEL) button.
(The outdoor unit alarm history will be cleared.)
- ⑤ To exit, press the  (CHECK) button.
The display returns to the normal display.

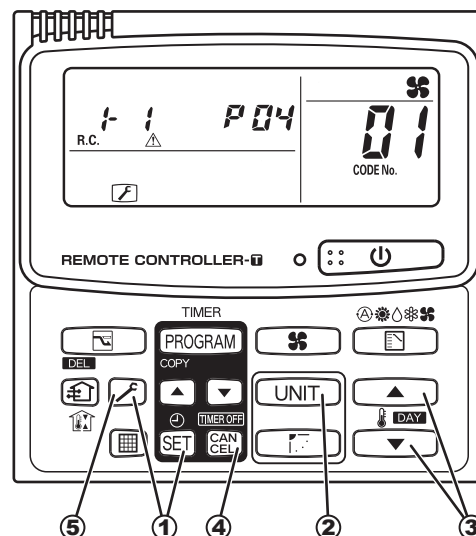








1. Outdoor Unit Maintenance Remote Controller

6. Setting the Outdoor Unit EEPROM Data


This function is used to make the outdoor unit EEPROM data settings.


■ Setting mode 1

- ① Press the  (CHECK) button and the  (VENTILATION) button simultaneously for 4 seconds or longer.
- ② Press the temperature setting  and  buttons to change the item code. The item codes and setting data are shown in the table below.
- ③ Press the timer time  and  buttons to change the setting data.


To confirm the changed setting data, press the  (SET) button.

(At this time, the “SET DATA” display stops blinking and remains lit.)

- ④ “SETTING” blinks when this mode is engaged, and “RLL” appears in the outdoor unit address section. The item code number (values shown in the table below) and the corresponding setting data (6 digits) are also displayed. (The 6 digits of the setting data are displayed by changing between the first 3 digits (Fig. (A)) and the last three digits (Fig. (B)). When the first 3 digits are displayed, the top dot of the colon is illuminated.)
- ⑤ To exit setting mode, press the  (CHECK) button.

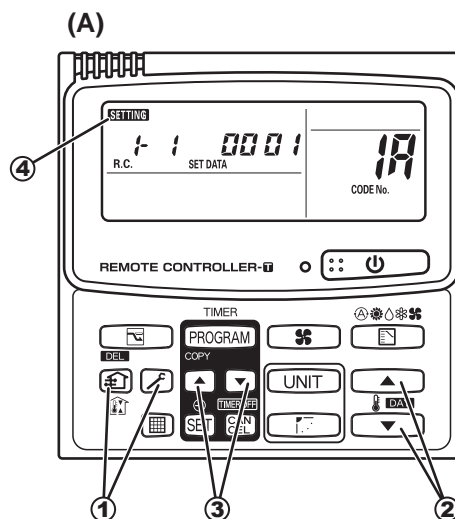



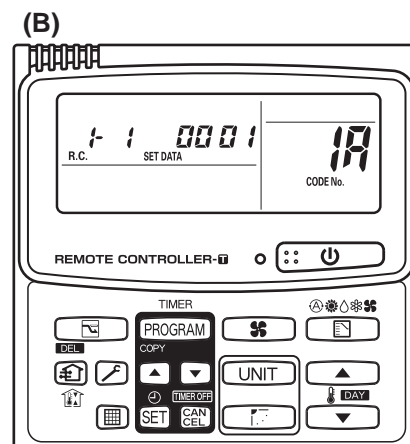




(A) and (B) are displayed alternately.




Code No.	Parameter	Description (SET DATA)
04	Snowfall sensor usage	0000 = Sensor input not present. Control is performed. 0001 = Sensor input present. Control is performed. 0002 = Sensor input not present. Control is not performed. 0003 = Sensor input present. Control is not performed.
05	Outdoor unit fan Quiet mode	0000 = Disabled 0001 = Quiet mode 1 0002 = Quiet mode 2 0003 = Quiet mode 3 0004 = Quiet mode 4
0E	Cooling	0000 Heat pump 0001 Cooling
1A	Demand 1 current	0000 = 0% 0001 = 40 ... 0004 = 70 0007 = 100 0008 = 120 0009 = 140 0010 = 160 0011 = 200 0012 = -1 (no limit)
1b	Demand 2 current	0000 = 0% 0001 = 40 ... 0004 = 70 0007 = 100 0008 = 120 0009 = 140 0010 = 160 0011 = 200 0012 = -1 (no limit)


1. Outdoor Unit Maintenance Remote Controller


■ Setting mode 2

- ① Press the  (CHECK) button,  (SET) button and the  (CANCEL) button simultaneously for 4 seconds or longer.
- ② Press the temperature setting  and  buttons to change the item code. The item codes and setting data are shown in the table below.
- ③ Press the timer time  and  buttons to change the setting data.


To confirm the changed setting data, press the  (SET) button.

(At this time, the SET DATA display stops blinking and remains lit.)


- ④ “**SETTING**” blinks when this mode is engaged, and when this mode is engaged, “Now Setting” is displayed blinking, and the address of the outdoor unit that is being set “System XX-YY” (System XX = System address, YY = Outdoor unit address), the item code No. (values from the table below), and the corresponding settings data (6 digits) are displayed. The item code number (values shown in the table below) and the corresponding setting data (6 digits) are also displayed. (The 6 digits of the setting data are displayed by changing between the first 3 digits (Fig. (C)) and the last three digits (Fig. (D)). When the first 3 digits are displayed, the top dot of the colon is illuminated.)
- ⑤ To exit setting mode, press the  (CHECK) button. Returns to normal display mode.

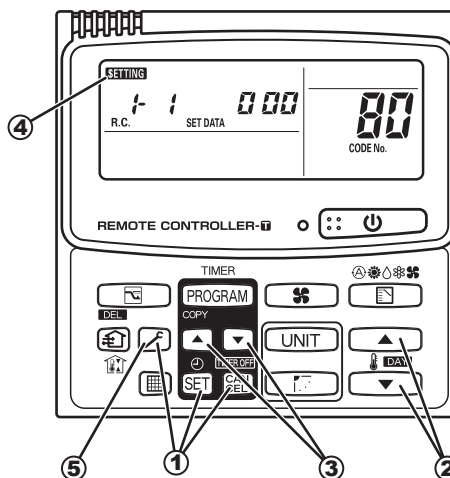

(C) Display of first 3 digits

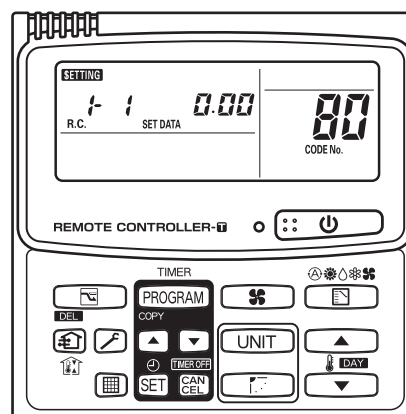

(D) Display of last 3 digits

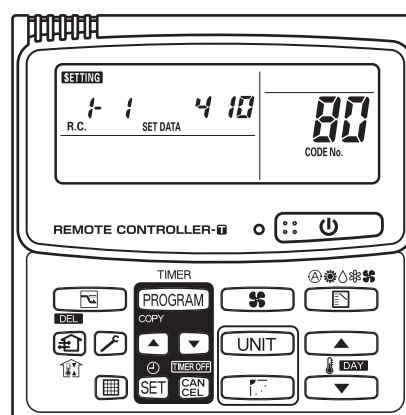

80 : Refrigerant type: (C) and (D) are displayed alternately. The example here (000, 410) indicates R410A.

CODE NO.	Parameter	Description (SET DATA)
81	Outdoor unit capacity	0 = Disabled 112 (36 Type) 160 (60 Type) 280 (90 Type) 450 (140 Type)

