



VCDC08**
VCDC12**
VCDC15**
VCDC20**

Vacuum Cleaner

user manual

- * Before operating this unit, please read the instructions carefully.
- * For indoor use only.

English

imagine the possibilities

Thank you for purchasing a Samsung product.

SAMSUNG

safety information

SAFETY INFORMATION



- Before operating the appliance, please read this manual thoroughly and retain it for your reference.



- Because these following operating instructions cover various models, the characteristics of your vacuum cleaner may differ slightly from those described in this manual.

CAUTION/WARNING SYMBOLS USED


	Indicates that a danger of death or serious injury exists.
	Indicates that a risk of personal injury or material damage exists.

OTHER SYMBOLS USED

	Represents something you must NOT do.
	Represents something you must follow.
	Indicates that you must disconnect the power plug from the socket.

Notes on the energy label

- Declared energy efficiency and cleaning performance class on carpet can be met with the enclosed 2-Step Brush.
- When the hard floor has joints and gaps, please use the enclosed "Eco Hard Floor" brush which is designed to meet the energy efficiency and cleaning performance class on hard floor with joints and gaps.
- The values provided on the energy label have been determined according to the prescribed measuring process (in accordance with EN60312 - 1).

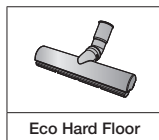

Eco Hard Floor

safety information

IMPORTANT SAFEGUARDS

1. Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
2. **WARNING :** Do not use the vacuum cleaner when rug or floor is wet.
Do not use to suck up water.
3. Do not use the vacuum cleaner without a dust bin. Empty the dust bin before it is full in order to maintain the best efficiency.
4. Slide to the Stop(or Min)position before inserting a plug into the electrical outlet.
5. Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts.
Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit.
6. Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put weight on the hose.
Do not block the suction or the exhaust port.
7. Switch the vacuum cleaner off on the body of the

machine before unplugging from the electrical outlet. Disconnect the plug from the electrical outlet before changing the dust bag or dust container. To avoid damage, please remove the plug by grasping the plug itself, not by pulling on the cord.

8. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
9. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
10. The plug must be removed from the socket outlet before cleaning or maintaining the appliance.
11. The use of an extension cord is not recommended.
12. If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
13. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
14. Don't carry the vacuum cleaner by holding the hose. Use the handle on the vacuum cleaner set.
15. Unplug the cleaner when not in use. Turn off the power switch before unplugging.

contents

ASSEMBLING THE CLEANER

06

OPERATING THE CLEANER

07

- 07 ON/OFF Switch
- 07 Power Cord
- 08 Power-Control

MAINTAIN TOOLS AND FILTER


09

- 09 Using accessory
- 10 Maintain floor tools
- 13 Emptying the dust bin
- 14 When to clean the dust pack
- 15 Cleaning the dust pack
- 16 Cleaning the outlet filter
- 16 Change the battery (option)


TROUBLESHOOTING

17


assembling the cleaner

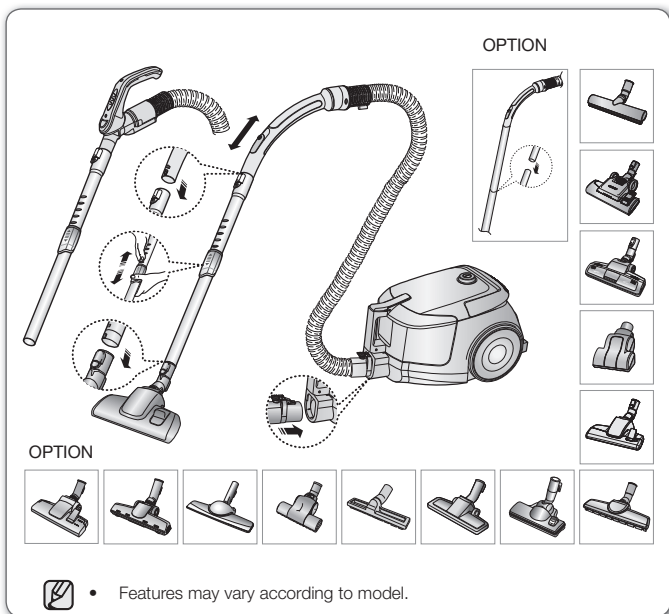

- ★ Please do not press the button of dust bin handle when carrying machine.

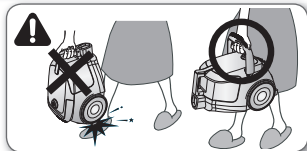


- ★ For storage, park the floor nozzle.

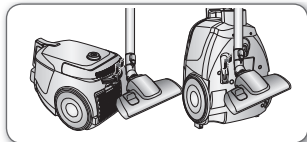


operating the cleaner

ON/OFF SWITCH


1) BODY CONTROL TYPE

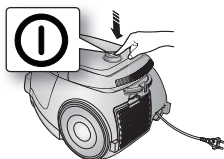


2) HANDLE CONTROL TYPE

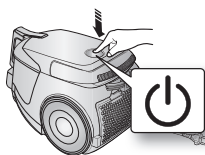

- When removing the plug from the electrical outlet, grasp the plug, not the cord.



POWER CORD

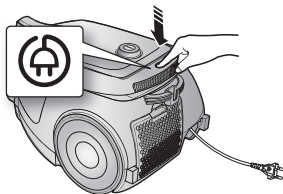


POWER-CONTROL

BODY-CONTROL TYPE / ON/OFF TYPE

- HOSE

To reduce suction for cleaning draperies, small rugs, and other light fabrics, pull the tap air until the hole is open.

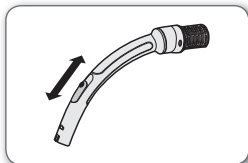

- BODY (BODY-CONTROL TYPE ONLY)

MIN = For delicate surface e.g. net curtains.

MAX = For hard floors and heavily soiled carpets.




HANDLE CONTROL TYPE

- HOSE

Vacuum cleaner MODE (**MIN/MID,MAX**)

Press the MODE button repeatedly to select the correct mode.
(ON) MIN → MID → MAX

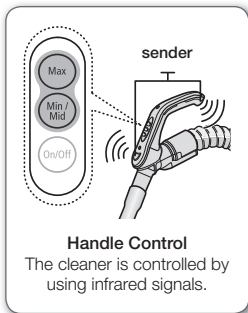


maintain tools and filter


USING ACCESSORY

Pipe (Option)

- Adjust the length of the telescopic pipe by sliding the length control button located in the center of the telescopic pipe back and forth.

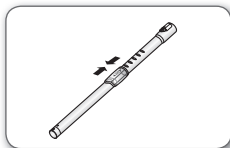


- To check for blockages, separate the telescopic pipe and adjust to shorten. This allows for easier removal of waste clogging the tube.

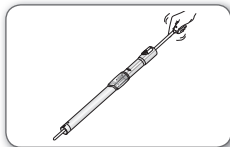


Accessory

- Dusting brush for furniture, shelves, books, etc.

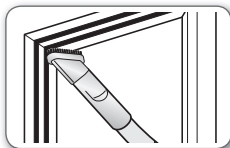

- Crevice tool for radiators, crevices, corners, between cushions.

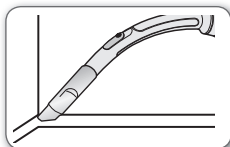

maintain tools and filter


MAINTAIN FLOOR TOOLS

2-Step Brush (Option)

- Adjust the inlet lever according to the floor surface.




Carpet Cleaning

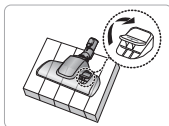


Floor Cleaning

- Remove waste matter completely if the inlet is blocked.

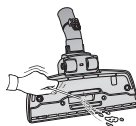

Power Pet Plus Brush (Option)

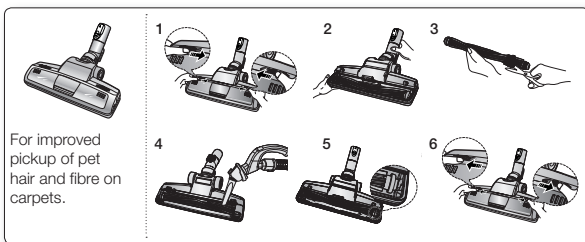

Frequent vacuuming of hair or pet fur may cause a reduction in rotation due to matters tangled around the brush-roller. In this case, clean the brush-roller with care.

1. Push the Open button of the transparent screen cover to separate the cover.
2. Remove the brushbar from the transparent screen.
3. Remove waste matter such as dust and hair tangled around the brushbar using scissors.
4. Remove dust inside the brush housing using a dry duster or crevice tool.
5. Insert brushbar into rotating belt and assemble.
6. Click the transparent screen cover back into place to reassemble.

Pet Brush (Option)

For improved pick-up of pet hair and fibre on carpets. Frequent vacuuming of hair or pet fur may cause a falling-off of the rotation due to matters tangled around the drum. In this case, clean the drum with care.



Blanket brush (Option)


Clogs on turbine keep brush from turning, thus need to be unclogged as follows. For picking up pet hair and fibre on upholstery and bed linen.




Remove waste matter completely when inlet is blocked.



Turn the lock button to 'UNLOCK', and remove waste matter.



To reassemble, align the cover to the front of the main body and close. After closing the cover, ensure that the lock button is turned to the 'LOCK' position.



WARNING


Use for bedclothes only. Be cautious not to damage brush during unclogging.

maintain tools and filter


Mini turbo brush (Option)

- To replace brush-roller

1. If a clog is present or debris is visible, unscrew the two screws on the back of the Mini turbo brush to remove the faceplate and clear any obstructions.




2. Inspect condition of brush-roller.
Replace brush-roller if brushes are worn down.
To remove brush-roller, pull up and out of end slots in nozzle housing.
Insert ends of brush-roller into same slots to replace.

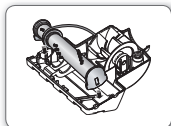



- Inspect belt to ensure that it is in good condition.
If belt is broken or cracked, replace belt according to To Replace Belt instructions.

3. Using at MAX.
Press the MAX button to operate the vacuum at maximum intake.

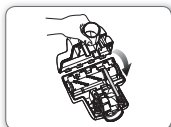

- To replace belt


1. Remove bottom plate.
See figure in To Replace brush-roller instructions.
2. Loop one end of new belt around shaft of pulley.
3. Loop other end of belt around designated area for it on brushroll. Insert brush-roller into slots in nozzle housing.
See figure in To Replace brush-roller instructions.
4. Fit Mini turbo brush back together as described in To Replace brush-roller instructions.

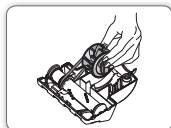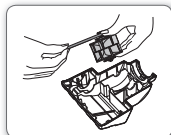

EMPTYING THE DUST BIN



1. Once dust reaches the dust full mark, or suction is noticeably reduced during cleaning, empty the dust bin.

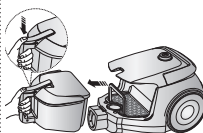

2. Take the dust bin out by pressing the button.




3. Separate the dust bin cover.



4. Throw away dust into the bin.




5. Close the dust bin cover.

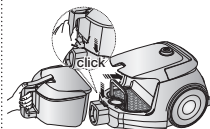


6. Before use, push the dust bin into the main body of the vacuum cleaner until you hear the "click" sound.

- Empty into a plastic bag (recommended for asthma/allergy sufferers)

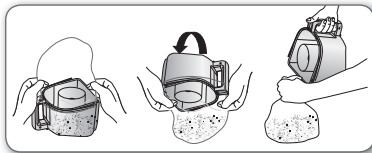

You may rinse the dust bin with cold water.




maintain tools and filter


WHEN TO CLEAN THE DUST PACK

- If suction is noticeably reduced during cleaning, please check the dust pack as indicated below.

Turn the vacuum power to 'MAX'.

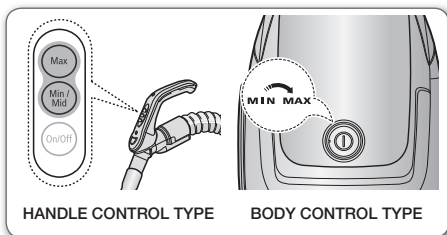


If suction is noticeably reduced with the inlet floating 10cm above flat floor, clean it.

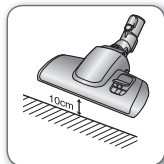


When suction is noticeably reduced continuously, please cleaning the Dust Pack as shown in the following illustration.

CLEANING THE DUST PACK


1. Remove the dust bin and dust pack as shown.

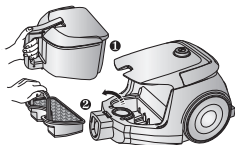


2. Remove the sponge and filter from the dust pack.

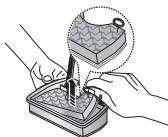

3. Wash the sponge and the filter of the dust pack with water.

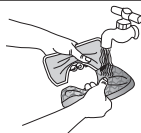


4. Let the sponge and filter dry in the shade for more than 12 hours.

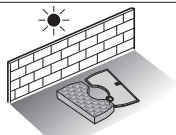

5. Put the sponge and filter into the dust pack.



6. Put the assembled dust pack into the main body.




 Make sure the filter is completely dry before putting it back into the vacuum cleaner. Allow 12 hours for it to dry.




maintain tools and filter

CLEANING THE OUTLET FILTER

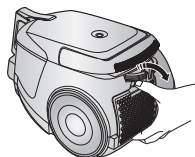

Press the fixed frame part at the back of the main body to remove.


OPTION - MICRO FILTER

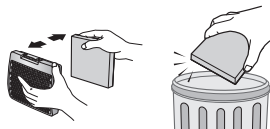

Remove and replace the blocked outlet filter.

 Replacement filters are available at your local Samsung distributor.

OPTION

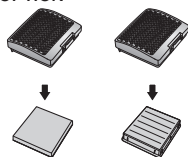

CHANGE THE BATTERY (OPTION)




1. When the vacuum cleaner does not work, replace the batteries. If the problem persists, please contact our authorized dealer.
2. Use 2 batteries of size AA.



WARNING

1. Never disassemble or recharge the batteries.
2. Never heat up the batteries or throw them into fire.
3. Do not reverse (+), (-) poles
4. Dispose of the batteries property.



BATTERY TYPE : AA
Size 

troubleshooting

PROBLEM	SOLUTION
Motor does not start.	• Check cable, plug and socket. • Leave to cool.
Suction force is gradually decreasing.	• Check for blockage and remove.
Cord does not rewind fully.	• Pull the cord out 2-3m and push down the cord rewind button.
Vacuum cleaner does not pick up dirt.	• Check hose and replace if required.
Low or decreasing suction	• Please check filter and, if required, clean as illustrated in the instructions. If filters are out of condition change them to new ones.
Body overheating	• Please check filters, If required clean as illustrated in the instruction.
Static electricity discharge	• Please decrease power suction.

This Vacuum cleaner is approved the following.

EMC Directive : 2004/108/EEC

Low Voltage Directive : 2006/95/EC

product fiche

[English]

According to Commission Regulation (EU) No 665/2013 and No 666/2013

A	Supplier	Samsung Electronics., Co. Ltd			
B	Model	VCDC08RH	VCDC08SH	VCDC15RH	VCDC15SH
C	Energy Efficiency Class	B		E	
D	Annual Energy Consumption (kWh/yr)	34		52	
E	Carpet Cleaning Performance Class	E		C	
F	Hardfloor Cleaning Performance Class	A		C	
G	Dust Re-Emission Class	C		D	
H	Sound Power Level (dBA)	77		82	
I	Rated Input Power (W)	750		1300	
J	Type	General purpose vacuum cleaner			

- 1) Indicative annual energy consumption (kWh per year), based on 50 cleaning tasks.
Actual annual energy consumption will depend on how the appliance is used.
- 2) Measurements for power consumption and performance are based on methods in EN 60312-1 and EN 60704.

memo



If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

COUNTRY	CALL	OR VISIT US ONLINE AT
U.K	0845 SAMSUNG (7267864)	www.samsung.com/uk
SOUTH AFRICA	0860 7267864(SAMSUNG)	www.samsung.com/za



DJ68-00665A-04