


DAIKIN

INSTALLATION MANUAL

R410A Split Series

INVERTER

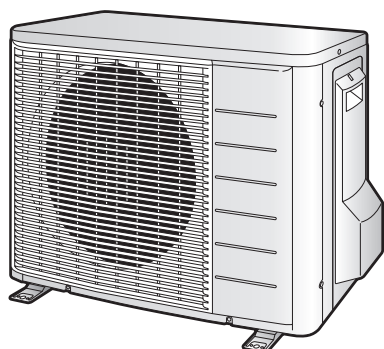

Models

RXS20L2V1B

RXS25L2V1B

RXS35L2V1B

ARXS25L2V1B

ARXS35L2V1B

CE - DECLARATION-DE-CONFORMIDAD
CE - DICHIARAZIONE-DI-CONFORMITA
CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΟΣΗΣ
CE - CONFORMITEITSVERKLARING

Daikin Industries Czech Republic s.r.o.

- 01 (GB) declares under its sole responsibility that the air conditioning models to which this declaration relates:
02 (D) erklärt auf seine alleinige Verantwortung das die Modelle der Klimaanlage für die diese Erklärung bestimmt ist:
03 (F) déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:
04 (NL) verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:
05 (E) declara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:
06 (I) dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:
07 (GB) δηλώνει με αποκλειστική της ευθύνη ότι το προϊόν της κλιματιστικής συσκευής από οποίο αναφέρεται η παρούσα δήλωση:
08 (C) declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere:

RXS20L2V1B, RXS25L2V1B, RXS35L2V1B, RXS42L2V1B,

- 01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:
02 (den folgenden Normen) oder einem anderen Normdokument oder -dokumenten entspricht/entsprechen, unter der Voraussetzung, dass sie gemäß unseren Anweisungen eingesetzt werden:
03 sont conformes à l(au) norme(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:
04 conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:
05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:
06 sono conformi all(i) seguente(i) standard(s) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:
07 είναι σύμφωνα με το(ι) ακόλουθό(ι) πρότυπο(ι) ή άλλο(α) έγγραφο(α) κανονιστικό, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες της:
08 following the provisions of:
09 gemäß den Vorschriften der:
10 under lagt/lagte til bestemmelserne i:
11 enligt villkoren i:
12 gilt i henhold til bestemmelserne i:
13 conformément aux stipulations des:
14 overeenkomstig de bepalingen van:
15 siguiendo las disposiciones de:
16 secondo le prescrizioni per:
17 με τη/των των διατάξεων των/
18 в соответствии с положениями:
19 op overhoder følgende standard(er) eller andtilladte retningsgivende dokument(er), boudst at disse anvendes i henhold til vore instrukser:
11 respektive utstilling år udført i overensstemmelse med och följder följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner:
12 respektive uslyer i i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forudsætning at disse bruges i henhold til våre instruksjer:
13 seuraavaan standardien ja muiden ohjeistettujen dokumenttien vaatimuksien edellytysten, että niitä käytetään ohjeidemme mukaisesti:
14 za predpoklad, že jsou využívány v souladu s našimi pokyny, odpovídají následujícím normám nebo normativním dokumentům:
15 u skladu sa slediacim standardom(ami) ili drugim normativnim dokumentom(ima), uz uvjet da se oni koriste u skladu s našim uputama:

EN60335-2-40,

- 01 Note * as set out in <> and judged positively by <>
02 Hinweis * wie in-<> aufgeführt und von <> positiv beurteilt
03 Remarque * tel que défini dans <> et évalué positivement par <>
04 Bemerk * zoals vermeld in <> en positief beoordeeld door <>
05 Nota * como se establece en <> y es valorado positivamente por <>
06 Nota * delimitado nel <> e giudicato positivamente da <>
07 Inzputuon * tāl kā definēti dans <> ir novērtēti pozitīvi
08 Nota * tāl, como estabelecido em <> e com o parecer positivo de <>
09 Примечание * как указано в <> и в соответствии с положительным решением <>
10 Bemærk * som anført i <> og positivt vurderet af <>
11 Information * enligt <> och godkänns av <> enligt Certifikat <>
12 Merk * som det fremkommer i <> og gennem positiv bedømmelse av <> tilgæ Serifikat <>
13 Huom * jotta on esitetty asiasijassa <> ja jotta <> on hyväksynyt Serifikatin <> mukaisesti.
14 Poznámka * jak bylo uvedeno v <> a pozitivně zjištěno <> v souladu s oveděním <>
15 Napomena * kako je izloženo u <> pozitivno ocijenjeno od strane <> prema Certifikatu <>
16 Megjegyzás * a)(> alapján, a)(> igazolta a megjelölt a)(> tanúsítvány szerint.
17 Uwaga * zgodnie z dokumentacją <> pozytywną opinią <> Swiadczem <>
18 Noiă * așa cum este stabilit în <> și aprobat pozitiv în <> în conformitate cu Certificatul <>
19 Opomba * kol je dočleno v <> in odobreno s strani <> v skladu s ovedenim <>
20 Mikus * nagu on rakuldu dokumentis <> ja heaks kiiteld <> järgi vastavalt sertifikaadile <>
21 Zabeleška * kako je iskloeno s <> i oenevano pozitivno od <> potvrdo Certifikata <>
22 Pastaba * kaip nusatyta <> ir kaip įeigiama nusigeta <> pagal Serifikatą <>
23 Piezimes * kā norādīts <> un atbilstoši <> pozitīvajam vērtējumam saskaņā ar sertifikātu <>
24 Poznámka * ako bolo uvedeno v <> a pozitivne zistené <> v súlade s ovedením <>
25 Not * <> da beifolgt gbi ve <> Serifikatsa göre <> tarafından olumlu olarak değerlendirildi gbi.

CE - DECLARACÃO-DE-CONFORMIDADE
CE - ЗАЯВЛЕНИЕ-О-СОБТВЕТИИ
CE - OVERENSTEMMELSESERKLERING
CE - FÖRSÄKRAN-OM-ÖVERENSTEMMELSE

- 09 (NB) заявляет, исключительно под свою ответственность, что модели кондиционеров воздуха, к которым относится настоящее заявление:
10 (KB) erklærer under enersvar, at klimaatlægningens modeller, som denne deklaration vedrører:
11 (S) deklarerar egenkap av hvaldningsting, att luftkonditioneringsmodellerna som betörs av denna deklaration innebar att:
12 (N) erklærer el fullstendig ansvar for at de luftkonditioneringsmodeller som berøres av denne deklarasjon, innebar at:
13 (NB) ilmoittaa yksinomaan omalla vastuullaan, että lään ilmoluksien laakotilmatilmaistilattien mallit:
14 (CZ) prohlašuje ve své plné odpovědnosti, že modely klimatizace, k nřiz se toto prohlášení vztahuje:
15 (NB) izjavljaje pod skljutno lastnostjo odgovornostjo, da su modeli klima uređaja na koje se ova izjava odnosi:
16 (H) teljes felelőssége tudatában kijelenti, hogy a klímaberendezés modellek, melyekre a nyilatkozat vonatkozik:

- 08 estlo en conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções:
09 соответствует следующим стандартам или другим нормативным документам, при условии их использования согласно нашим инструкциям:
10 overholder følgende standard(er) eller andtilladte retningsgivende dokument(er), boudst at disse anvendes i henhold til vore instrukser:
11 respektive utstilling år udført i overensstemmelse med och följder följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner:
12 respektive uslyer i i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forudsætning at disse bruges i henhold til våre instruksjer:
13 seuraavaan standardien ja muiden ohjeistettujen dokumenttien vaatimuksien edellytysten, että niitä käytetään ohjeidemme mukaisesti:
14 za predpoklad, že jsou využívány v souladu s našimi pokyny, odpovídají následujícím normám nebo normativním dokumentům:
15 u skladu sa slediacim standardom(ima) ili drugim normativnim dokumentom(ima), uz uvjet da se oni koriste u skladu s našim uputama:

Machinery 2006/42/EC **
Electromagnetic Compatibility 2004/108/EC *
Low Voltage 2006/95/EC

- 11 Information * enligt <> och godkänns av <> enligt Certifikat <>
12 Merk * som det fremkommer i <> og gennem positiv bedømmelse av <> tilgæ Serifikat <>
13 Huom * jotta on esitetty asiasijassa <> ja jotta <> on hyväksynyt Serifikatin <> mukaisesti.
14 Poznámka * jak bylo uvedeno v <> a pozitivně zjištěno <> v souladu s oveděním <>
15 Napomena * kako je izloženo u <> pozitivno ocijenjeno od strane <> prema Certifikatu <>
16 Megjegyzás * a)(> alapján, a)(> igazolta a megjelölt a)(> tanúsítvány szerint.
17 Uwaga * zgodnie z dokumentacją <> pozytywną opinią <> Swiadczem <>
18 Noiă * așa cum este stabilit în <> și aprobat pozitiv în <> în conformitate cu Certificatul <>
19 Opomba * kol je dočleno v <> in odobreno s strani <> v skladu s ovedenim <>
20 Mikus * nagu on rakuldu dokumentis <> ja heaks kiiteld <> järgi vastavalt sertifikaadile <>
21 Zabeleška * kako je iskloeno s <> i oenevano pozitivno od <> potvrdo Certifikata <>
22 Pastaba * kaip nusatyta <> ir kaip įeigiama nusigeta <> pagal Serifikatą <>
23 Piezimes * kā norādīts <> un atbilstoši <> pozitīvajam vērtējumam saskaņā ar sertifikātu <>
24 Poznámka * ako bolo uvedeno v <> a pozitivne zistené <> v súlade s ovedením <>
25 Not * <> da beifolgt gbi ve <> Serifikatsa göre <> tarafından olumlu olarak değerlendirildi gbi.

- 13 ** DiCz*** on valituetu laatinaan Teknisen asatijain.
14 ** Společnost DiCz*** má oprávnění ke kompletaci souboru technické konstrukce.
15 ** DiCz*** je ovlašen za zradu Databele o lehmické konstrukci.
16 ** A DiCz*** jogsult a mészak konstrukciós dokumentáció összeállítására.
17 ** DiCz*** má upovázenie do zberania i opracowywania dokumentacji konstrukcyjnej.
18 ** DiCz*** este autorizat să completeze Dosarul Tehnic de construcție.

Takayuki Fujii
Managing Director
Pilsen, 2nd of Dec. 2013

Takayuki Fujii

CE - IZJAVA-O-USKLADENOSTI
CE - MEGFELELŐSÉG-NYILATKOZAT
CE - DEKLARACJA-ZGODNOSCI
CE - DECLARAȚIE-DE-CONFORMITATE

- 17 (EL) deklaruje na vlastní vyjváznou odpovědičnost, že modely klimatyzátorů, kterých dotyczy niniejsza deklaracja:
18 (GB) déclare pe proprie răspundere că aparatele de aer condiționat la care se referă această declarație:
19 (GB) z viso odgovornostjo izjavja, da so modeli klimatskih naprav, na katere se izjava nanaša:
20 (NB) kinnibab oma täieliku vastutuse, et käesoleva deklaratsiooni alla kuuluvad kliimaseadmed mudelid:
21 (GB) декларира на оао отговорност, че коделите климатични системи, за които се отнася тази декларация:
22 (I) viskja savo atsakomybę skelbia, kad oro kondicionavimo prietaisų modeliai, kuriems yra taikoma ši deklaracija:
23 (I) a plini atbildu apeličia, ka tilkai uzskaito modeliu gaisa kondicionėjų, už kuriu atleas ši deklaracija:
24 (SK) vyhlasje na vlastnu zodpovednost, že tieto klimatizačné modely, na ktoré sa vzťahuje toto vyhlásenie:
25 (NB) kinnabeni seomluulugunda oinak izere bu bidirinn igli oduku klima modelleerin asatidat gbi odukuun beyan eder:

- 16 megjeleneek az alábbi szabvány (ok)nak vagy egyéb irányadó dokumentum(ok)nak, ha azok elölis szert használták:
17 spēlējā vinnjo nāstējojojo norm i nnych dokumentōw normalizajojnych, pod warunkiem że używane są zgodnie z naszymi instrukcjami:
18 sunt în conformitate cu următor (umătoarele) standard(e) sau alte (e) documente (e) normative, cu condiția ca acestea să fie utilizate în conformitate cu instrucțiunile noastre:
19 skladni z naslednjimi standardi in drugim normativi, pod pogojem, da se uporabljajo v skladu z našimi navodili:
20 on vastavusse järgimis (is standardile) ga või teiste normaliseeriv dokumentidega, kui need kasutatakse vastavalt meie juhendile:
21 съответстват на средние стандарт или други нормативни документи, при условие, че се използват съгласно нашите инструкции:
22 alitinka žamau nurodylus standartus ir (etab) kitus norminius dokumentus su sąlyga, kad yra naudojami pagal mūsų nurodymus:
23 tad, je leidi atbilstis raždāja norūdinėjimui, atbisti sekiojūsen standartien u citen normatvini dokumentai:
24 su v zbrode s nasledovno(jimi) normo(jami) alebo nym(i) normativnym(i) dokumentom(ami), za predpokladu, že sa používajú v súlade s našimi návodmi:
25 ičinin, laimalamizma gre kulaminasas kosulujas asatidat standartar ve norm beifatin begerleke uyumludur:

- 10 Direktiver, med senere ændringer.
11 Direktiv, med foretagne ændringer.
12 Direktiver, med foretagne ændringer.
13 Direktiver, særlig gennemarbejdet.
14 Direktiver, særlig gennemarbejdet.
15 Snijerica, kako je izmijenjeno.
16 řányev (ek) is modosiřak vereközéssel.
17 z pñzlejšzymi poprawkami.
18 Direktivelor, cu amendamentele respective.
19 Direktive z vsemi spremembami.
20 Direktivd koos muudatustega.
21 Директиви, с ресивте измененя.
22 Direktiivose su papjlymais.
23 Direktivās un to papildinājums.
24 Smeņica, s platām zīmēm.
25 Degširīmš haleylye řoemleikler.

<A>	DAIKIN.TCF.015P.17/09-2013
	DEKRA (NB0344)
<C>	74736-KRQ/EMC97-4957

- 19 ** DiCz*** je pooblaščen za sestavo datoteke s tehničro mapo.
20 ** DiCz*** on voliatud koostama tehnilist dokumentatsiooni.
21 ** DiCz*** e oropijapa da osavam Akta za tehnikosa konstrukciju.
22 ** DiCz*** yra palcio sudaryti šj techninės konstrukcijos failą.
23 ** DiCz*** i autorizats sastaditi tehniko dokumentacijo.
24 ** Spoločnosť DiCz*** je oprávnená vytvoriť súbor technickej konštrukcie.
25 ** DiCz*** Teknik Yapı Dosyasını derlemeye yetkilidir.



DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.

U Nové Hospody 1/1155, 301 00 Pilsen Skvrňany,
Czech Republic

CE - DECLARATION-OF-CONFORMITY
CE - KONFORMITÄTSERKLÄRUNG
CE - DECLARATION-DE-CONFORMITE
CE - CONFORMITEITSVERKLARING

Daikin Industries Czech Republic s.r.o.

01 **GB** declares under its sole responsibility that the air conditioning models to which this Declaration applies:
02 **DE** erklärt auf seine alleinige Verantwortung daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist:
03 **FR** déclare sous sa seule responsabilité que les appareils dits conditionneurs visés par la présente déclaration:
04 **NL** verklaart hierbij op zijn exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring
05 **NL** declareert zijn zijn eigen verantwoordelijkheid voor de modellen van de air conditionering te baseren. Deze referentie is
06 **IT** dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione.
07 **GR** δηλώνει με αποκλειστική της ευθύνη ότι τα ποσά των κλιματιστικών μονοκλιματιστών στα οποία αναφέρεται το παρόν
08 **PT** declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere

ARXS25L2V1B, ARXS35L2V1B

01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:

02 den folgenden Normen) oder einen anderen Normdokument oder dokumenten entspricht/entsprechen, unter der Voraussetzung, dass sie gemäß unseren Anweisungen eingesetzt werden:

03 sont conformes à la/aux norme(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions;

04 conform de volgen de norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies;

05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:

06 sono conformi a(i) seguente(i) standard(s) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:

07 είναι σύμφωνα με το(α) ακόλουθο(α) πρότυπο(α) ή άλλο έγγραφο(α) κανονισμών, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας:

01 following the Vorschriften der:	02 gemäß den Vorschriften der:	03 conformément aux stipulations des:	04 overeenkomstig de bepalingen van:	05 segundo las disposiciones de:	06 secondo le prescrizioni per:	07 по предписаніямъ:	08 de acordo com o previsão em:	09 в соответствии с положеніями:
10 unter der Leitung der:	11 unter der Aufsicht der:	12 githi. Tienhoofd li bestemmelse:	13 routdatten määryksä:	14 za održen ustavom predpisu:	15 prema odredbama:	16 követeli aqiz:	17 zgodnie z postanowieniami Dyrektor:	18 in urma prevederilor:
19 00 upostvorenje doobro:	20 vastarlat nûbelet:	21 chazbaakiv vovzavare na:	22 talants nuostul patelini:	23 leikojai prashas kas:	24 održavajic ustanovljen:	25 bunun keşallama uygun:		

01	Note *	as set out in <A> and judged positively by according to the Certificate <C>	06	Note *	delatati në <A> e gjykuar pozitivisht sipas të sipas Certifikatës <C>
02	Hinweis *	wie in <A> aufgeführt und von positiv beurteilt	07	Титулюм *	описано у <A> и позитивно оцењено од према Титулиуму <C>
03	Remarque *	tel que défini dans <A> et évalué positivement par conformément au Certificat <C>	08	Note *	тако како изложено је у Потписнику <A> и тако оцењено позитивно од у складу са Потписником <C>
04	Bemerk *	zodals vermeld in <A> en positief beoordeeld door overeenkomstig Certificat <C>	09	Примечание *	како изложено је у <A> и у соответствии с положительным решением согласно Сертификату <C>
05	Note *	como se establece en <A> y es valorado positivamente por de acuerdo con el Certificado <C>	10	Bemerk *	својим аргументима <A> позитивно вредује а и метод из Certifikat <C>

01 ** DICZ*** is authorised to compile the Technical Construction File.

02^{xx} DICZ*** hat die Berechtigung die Technische Konstruktionsakte zusammenzustellen.

03 ** DICz*** est autorisé à compiler le Dossier de Construction Technique.

04 ** DICZ*** is bevoegd om het Technisch Constructiedossier samen te stellen

05 ** DÍCZ*** está autorizado a compilar el Archivo de Construcción

06 ** DICZ*** è autorizzata a redigere il File Tecnico di Costruzione.

*** DICz = Daikin Industries Czech Republic s.r.o.

CE - DECLARAÇÃO-DE-CONFORMIDADE
CE - ЗАЯВЛЕНИЕ-О-СООТВЕТСТВИИ
CE - OVERENSSTEMMELSEERKLÆRING
CE - FÖRSÄKRAN-OM-ÖVERENSTÄMMELSE

10 DK erklærer under ernesvar, at klimaanlægsmodelerne, som denne deklaration vedrører:

11 (s) deklarerar i egenskap av huvudansvarig, att luftkonditioneringsmodellerna som berörs av denna deklaration innebär att:

12 (N) erklærer et fullstendig ansvar for at de luftkondisjoneringsmodeller som berøres av denne deklarasjon, innebærer at:

13 (FIN) ilmoittaa yksinomaan omalla vastuullaan, että tämän ilmoituksen tarkoittamat ilmastointilaitteiden mallit:

14 (CZ) prohlašuje ve své plné odpovědnosti, že modely klimatizace, k nimž se toto prohlášení vztahuje:

15 (HR) izjavljuje pod isključivo vlastitom odgovornošću da su modeli klima uređaja na koje se ova izjava odnosi:

16 H teljes felelőssége tudatában kijelenti, hogy a klímaberendezés modellek, melyekre e nyilatkozat vonatkozik:

08 estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções:

99 соответствуют следующим стандартам или другим нормативным документам, при условии их использования согласно нашим инструкциям:

10 overholder følgende standard(er) eller andet/andre retningsgivende dokument(er), forudsat at disse anvendes i henhold til vore instrukser:

11 respektive utrustning är utförd i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner:

22 respektive utstyr er i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forutsetning av at disse brukes i henhold til våre instruksjer:

13 vastaavat seuraavien standardien ja muiden ohjeellisten dokumenttien vaatimuksia edellyttäen, että niitä käytetään ohjeiden mukaisesti:

14 za předpokladu, že jsou využívány v souladu s našimi pokyny, odpovídají následujícím normám nebo normativním dokumentům:

15 u skladu sa sljedećim standardom(ima) ili drugim normativnim dokumentom(ima), uz uvjet da se oni koriste u skladu s našim uputama:

Machinery 2006/42/EC**
Electromagnetic Compatibility 2004/108/EC *
Low Voltage 2006/95/EC

11	Information *	enligt <A> och godkänns av enligt Certifikat <C>
12	Merk *	som det framkommer i <A> och glömsk positiv bedömelse av ifrågas. Sertifikat <C>
13	Huom *	jädra om eslaty asatir/assa <A> ja pöta hyväksyntä Sertifikat <C> mukaisesti
14	Poznańska *	ja <A> ujedno a pozitivno čisteno v skladu s svetločinam <C>
15	Napomena *	kakoj je izloženo u <A> pozitivno ocijenjeno od strane prema Certifikatu <C>

07** Η DIC^{***} είναι εξουσιοδοτημένη να συντάξει τον Τεχνικό φάκελο κατασκευής.

08** A DIC^{***} está autorizada a compilar a documentação técnica de fabrico.

09** Компания DICZ*** уполномочена составить Комплект технической документации.

10** DICz*** er autoriseret til at udarbejde de tekniske konstruktionsdata.

11 ** DICz** är bemyndigade att sammanställa den tekniska konstruktionsfilen.

12** DIC^{***} har tillatelse til å kompilere den Tekniske konstruksjonsfilen.



Takayuki Fujii
Managing Director
Pilsen, 2nd of Dec. 2013

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.

U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany,

Czech Republic

3P327445-16K

Safety Precautions

- The precautions described herein are classified as WARNING and CAUTION. They both contain important information regarding safety. Be sure to observe all precautions without fail.
- Meaning of WARNING and CAUTION notices

 **WARNING Failure to follow these instructions properly may result in personal injury or loss of life.**

 **CAUTION Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.**

- The safety marks shown in this manual have the following meanings:

 Be sure to follow the instructions.	 Be sure to establish an earth connection.	 Never attempt.
---	---	--

- After completing installation, conduct a trial operation to check for faults and explain to the customer how to operate the air conditioner and take care of it with the aid of the operation manual.
- The English text is the original instruction. Other languages are translations of the original instructions.



 WARNING	
• Ask your dealer or qualified personnel to carry out installation work. Do not attempt to install the air conditioner yourself. Improper installation may result in water leakage, electric shocks or fire.	
• Install the air conditioner in accordance with the instructions in this installation manual. Improper installation may result in water leakage, electric shocks or fire.	
• Be sure to use only the specified accessories and parts for installation work. Failure to use the specified parts may result in the unit falling, water leakage, electric shocks or fire.	
• Install the air conditioner on a foundation strong enough to withstand the weight of the unit. A foundation of insufficient strength may result in the equipment falling and causing injury.	
• Electrical work must be performed in accordance with relevant local and national regulations and with instructions in this installation manual. Be sure to use a dedicated power supply circuit only. Insufficiency of power circuit capacity and improper workmanship may result in electric shocks or fire.	
• Use a cable of suitable length. Do not use tapped wires or an extension lead, as this may cause overheating, electric shocks or fire.	
• Make sure that all wiring is secured, the specified wires are used, and that there is no strain on the terminal connections or wires. Improper connections or securing of wires may result in abnormal heat build-up or fire.	
• When wiring the power supply and connecting the wiring between the indoor and outdoor units, position the wires so that the control box lid can be securely fastened. Improper positioning of the control box lid may result in electric shocks, fire or over heating terminals.	
• If refrigerant gas leaks during installation, ventilate the area immediately. Toxic gas may be produced if the refrigerant comes into contact with fire.	
• After completing installation, check for refrigerant gas leakage. Toxic gas may be produced if the refrigerant gas leaks into the room and comes into contact with a source of fire, such as a fan heater, stove or cooker.	
• When installing or relocating the air conditioner, be sure to bleed the refrigerant circuit to ensure it is free of air, and use only the specified refrigerant (R410A). The presence of air or other foreign matter in the refrigerant circuit causes abnormal pressure rise, which may result in equipment damage and even injury.	
• During installation, attach the refrigerant piping securely before running the compressor. If the refrigerant pipes are not attached and the stop valve is open when the compressor is run, air will be sucked in, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.	
• During pump-down, stop the compressor before removing the refrigerant piping. If the compressor is still running and the stop valve is open during pump-down, air will be sucked in when the refrigerant piping is removed, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.	
• Be sure to earth the air conditioner. Do not earth the unit to a utility pipe, lightning conductor or telephone earth lead. Imperfect earthing may result in electric shocks.	
• Be sure to install an earth leakage breaker. Failure to install an earth leakage breaker may result in electric shocks or fire.	

 CAUTION	
• Do not install the air conditioner at any place where there is a danger of flammable gas leakage. In the event of a gas leakage, build-up of gas near the air conditioner may cause a fire to break out.	
• While following the instructions in this installation manual, install drain piping to ensure proper drainage and insulate piping to prevent condensation. Improper drain piping may result in indoor water leakage and property damage.	
• Tighten the flare nut according to the specified method such as with a torque wrench. If the flare nut is too tight, it may crack after prolonged use, causing refrigerant leakage.	

- Make sure to provide for adequate measures in order to prevent that the outdoor unit be used as a shelter by small animals.
Small animals making contact with electrical parts can cause malfunctions, smoke or fire. Please instruct the customer to keep the area around the unit clean.
- The temperature of refrigerant circuit will be high, please keep the inter-unit wire away from copper pipes that are not thermally insulated.
- This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial and household use by lay persons.
- Sound pressure level is less than 70 dB(A).

Accessories

Accessories supplied with the outdoor unit:

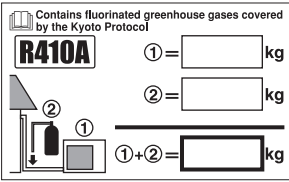(A) Installation manual	1	 It is on the bottom of the packing case.	1
(C) Refrigerant charge label 	1		
(D) Multilingual fluorinated greenhouse gases label 	1		

Precautions for Selecting the Location

- 1) Choose a place solid enough to bear the weight and vibration of the unit, where the operation noise will not be amplified.
- 2) Choose a location where the hot air discharged from the unit or the operation noise will not cause a nuisance to the neighbours of the user.
- 3) Avoid places near a bedroom and the like, so that the operation noise will cause no trouble.
- 4) There must be sufficient spaces for carrying the unit into and out of the site.
- 5) There must be sufficient space for air passage and no obstructions around the air inlet and the air outlet.
- 6) The site must be free from the possibility of flammable gas leakage in a nearby place.
- 7) Install units, power cords and inter-unit wire at least 3m away from television and radio sets. This is to prevent interference to images and sounds. (Noises may be heard even if they are more than 3m away depending on radio wave conditions.)
- 8) In coastal areas or other places with salty atmosphere of sulfate gas, corrosion may shorten the life of the air conditioner.
- 9) Since drain flows out of the outdoor unit, do not place under the unit anything which must be kept away from moisture.

NOTE


Cannot be installed hanging from ceiling or stacked.



CAUTION

When operating the air conditioner in a low outdoor ambient temperature, be sure to follow the instructions described below.

- To prevent exposure to wind, install the outdoor unit with its suction side facing the wall.
- Never install the outdoor unit at a site where the suction side may be exposed directly to wind.
- To prevent exposure to wind, it is recommended to install a baffle plate on the air discharge side of the outdoor unit.
- In heavy snowfall areas, select an installation site where the snow will not affect the unit.

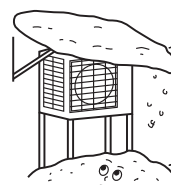

- Construct a large canopy
- Construct a pedestal

Install the unit high enough off the ground to prevent burying in snow.

Outdoor Unit Installation Drawings

Max. allowable piping length	20m
** Min. allowable piping length	1.5m
Max. allowable piping height	15m
* Additional refrigerant required for refrigerant pipe exceeding 10m in length.	20g/m
Gas pipe	O.D. 9.5mm
Liquid pipe	O.D. 6.4mm

- * Be sure to add the proper amount of additional refrigerant. Failure to do so may result in reduced performance.
- ** The suggested shortest pipe length is 1.5m, in order to avoid noise from the outdoor unit and vibration.
(Mechanical noise and vibration may occur depending on how the unit is installed and the environment in which it is used.)
When connecting the FVXS indoor unit, the shortest piping length should be no less than around 2.5m.

Wrap the insulation pipe with the finishing tape from bottom to top.

CAUTION
**Set the piping length from 1.5m to 20m.

Allow 300mm of work space below the ceiling surface.

Allow space for piping and electrical servicing.

In sites with poor drainage, use block bases for outdoor unit. Adjust foot height until the unit is leveled. Otherwise, water leakage or pooling of water may occur.

Stop valve cover

■ **How to remove the stop valve cover**

- Remove the screw on the stop valve cover.
- Slide the lid downward to remove it.

■ **How to attach the stop valve cover**

- Insert the upper part of the stop valve cover into the outdoor unit to install.
- Tighten the screws.


Where there is a danger of the unit falling, use foot bolts, or wires.

unit: mm


Installation Guidelines

- Where a wall or other obstacle is in the path of outdoor unit's inlet or outlet airflow, follow the installation guidelines below.
- For any of the following installation patterns, the wall height on the outlet side should be 1200mm or less.


Wall facing one side

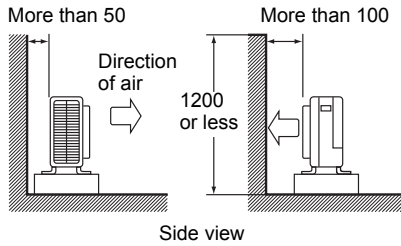

Wall facing two sides

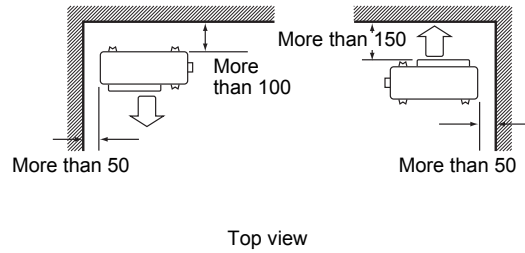


Wall facing three sides

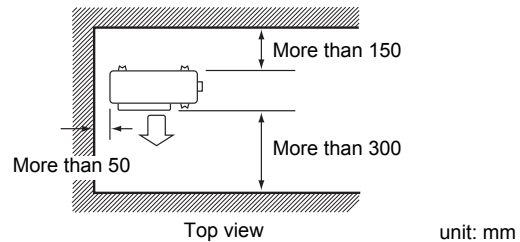

Precautions on Installation

- Check the strength and level of the installation ground so that the unit will not cause any operating vibration or noise after installed.
- In accordance with the foundation drawing, fix the unit securely by means of the foundation bolts. (Prepare 4 sets of M8 or M10 foundation bolts, nuts and washers each which are available on the market.)
- It is best to screw in the foundation bolts until their ends are 20mm from the foundation surface.




Outdoor Unit Installation

1. Installing outdoor unit

- 1) When installing the outdoor unit, refer to "Precautions for Selecting the Location" and the "Outdoor Unit Installation Drawings."
- 2) If drain work is necessary, follow the procedures below.

2. Drain work

- 1) Use drain plug for drainage.
- 2) If the drain port is covered by a mounting base or floor surface, place additional foot bases of at least 30mm in height under the outdoor unit's feet.
- 3) In cold areas, do not use a drain hose with the outdoor unit.
(Otherwise, drain water may freeze, impairing heating performance.)

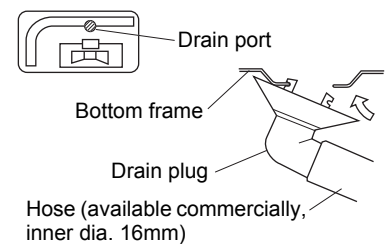

Outdoor Unit Installation

3. Flaring the pipe end

- 1) Cut the pipe end with a pipe cutter.
- 2) Remove burrs with the cut surface facing downward so that the chips do not enter the pipe.
- 3) Put the flare nut on the pipe.
- 4) Flare the pipe.
- 5) Check that the flaring is properly made.

(Cut exactly at right angles.)

Remove burrs.

Flaring

Set exactly at the position shown below.

A	Flare tool for R410A		Conventional flare tool	
	Clutch-type	Clutch-type (Rigid-type)	Wing-nut type (Imperial-type)	
A	0-0.5mm	1.0-1.5mm	1.5-2.0mm	

Check

Flare's inner surface must be flaw-free.

The pipe end must be evenly flared in a perfect circle.

Make sure that the flare nut is fitted.



 WARNING

- Do not use mineral oil on flared part.
- Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
- Never use piping which has been used for previous installations. Only use parts which are delivered with the unit.
- Never install a dryer to this R410A unit in order to guarantee its lifetime.
- The drying material may dissolve and damage the system.
- Incomplete flaring may cause refrigerant gas leakage.

4. Refrigerant piping work

 CAUTION

- Use the flare nut fixed to the main unit. (To prevent cracking of the flare nut by aged deterioration.)
 - To prevent gas leakage, apply refrigeration oil only to the inner surface of the flare. (Use refrigeration oil for R410A.)
 - Use torque wrenches when tightening the flare nuts to prevent damage to the flare nuts and gas leakage.
- Align the centres of both flares and tighten the flare nuts 3 or 4 turns by hand. Then tighten them fully with the torque wrenches.

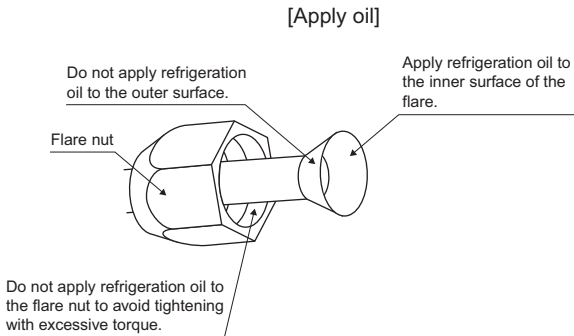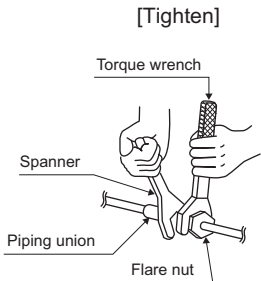


Flare nut tightening torque	
Gas side	Liquid side
3/8 inch	1/4 inch
32.7-39.9N • m (333-407kgf • cm)	14.2-17.2N • m (144-175kgf • cm)

Valve cap tightening torque	
Gas side	Liquid side
3/8 inch	1/4 inch
21.6-27.4N • m (220-280kgf • cm)	21.6-27.4N • m (220-280kgf • cm)

Service port cap tightening torque	
10.8-14.7N • m (110-150kgf • cm)	

4-1 Cautions on pipe handling

- 1) Protect the open end of the pipe against dust and moisture.
- 2) All pipe bends should be as gentle as possible. Use a pipe bender for bending.

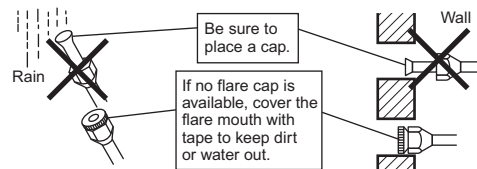


4-2 Selection of copper and heat insulation materials

When using commercial copper pipes and fittings, observe the following:

- 1) Insulation material: Polyethylene foam
Heat transfer rate: 0.041 to 0.052W/mK (0.035 to 0.045kcal/mh°C)
Refrigerant gas pipe's surface temperature reaches 110°C max.
Choose heat insulation materials that will withstand this temperature.
- 2) Be sure to insulate both the gas and liquid piping and to provide insulation dimensions as below.

Gas side	Liquid side	Gas pipe thermal insulation	Liquid pipe thermal insulation
O.D. 9.5mm	O.D. 6.4mm	I.D. 12-15mm	I.D. 8-10mm
Minimum bend radius		Thickness 10mm Min.	
30mm or more			
Thickness 0.8mm (C1220T-O)			

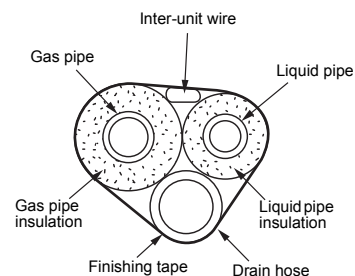

- 3) Use separate thermal insulation for gas and liquid refrigerant pipes.


Outdoor Unit Installation

5. Evacuating the air with a vacuum pump and checking gas leakage

WARNING

- Do not mix any substance other than the specified refrigerant (R410A) into the refrigeration cycle.
- When refrigerant gas leaks occur, ventilate the room as soon and as much as possible.
- R410A, as well as other refrigerants, should always be recovered and never be released directly into the environment.
- Use a vacuum pump for R410A exclusively. Using the same vacuum pump for different refrigerants may damage the vacuum pump or the unit.

- When piping work is completed, it is necessary to evacuate the air and check for gas leakage.
- If using additional refrigerant, perform air evacuating from the refrigerant pipes and indoor unit using a vacuum pump, then charge additional refrigerant.
- Use a hexagonal wrench (4mm) to operate the stop valve rod.
- All refrigerant pipe joints should be tightened with a torque wrench at the specified tightening torque.

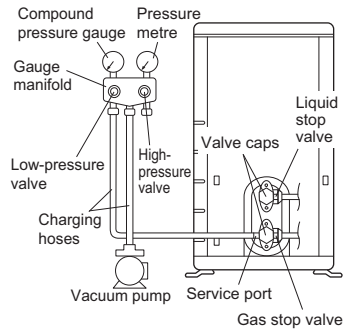

- 1) Connect projection side of charging hose (which comes from gauge manifold) to gas stop valve's service port.
- 2) Fully open gauge manifold's low-pressure valve (Lo) and completely close its high-pressure valve (Hi).
(High-pressure valve subsequently requires no operation.)
- 3) Do vacuum pumping and make sure that the compound pressure gauge reads -0.1MPa (-76cmHg).^{*1}
- 4) Close gauge manifold's low-pressure valve (Lo) and stop vacuum pump.
(Keep this state for a few minutes to make sure that the compound pressure gauge pointer does not swing back.)*2
- 5) Remove caps from liquid stop valve and gas stop valve.
- 6) Turn the liquid stop valve's rod 90 degrees counterclockwise with a hexagonal wrench to open valve.
Close it after 5 seconds, and check for gas leakage.
Using soapy water, check for gas leakage from indoor unit's flare and outdoor unit's flare and valve rods.
After the check is complete, wipe all soapy water off.
- 7) Disconnect charging hose from gas stop valve's service port, then fully open liquid and gas stop valves.
(Do not attempt to turn valve rod beyond its stop.)
- 8) Tighten valve caps and service port caps for the liquid and gas stop valves with a torque wrench at the specified torques.

*1. Pipe length vs. vacuum pump run time.

Pipe length	Up to 15m	More than 15m
Run time	Not less than 10 min.	Not less than 15 min.

*2. If the compound pressure gauge pointer swings back, refrigerant may have water content or a loose pipe joint may exists.
Check all pipe joints and retighten nuts as needed, then repeat steps 2) through 4).

6. Refilling the refrigerant

Check the type of refrigerant to be used on the machine nameplate.


Precautions when adding R410A

Fill from the gas pipe in liquid form.

It is a mixed refrigerant, so adding it in gas form may cause the refrigerant composition to change, preventing normal operation.

- 1) Before filling, check whether the cylinder has a siphon attached or not. (It should have something like "liquid filling siphon attached" displayed on it.)

Filling a cylinder with an attached siphon



Stand the cylinder upright when filling.

(There is a siphon pipe inside, so the cylinder need not be upside-down to fill with liquid.)

Filling other cylinders



Turn the cylinder upside-down when filling.

- Be sure to use the R410A tools to ensure pressure and to prevent foreign objects entering.

Important information regarding the refrigerant used

This product contains fluorinated greenhouse gases covered by the Kyoto Protocol. Do not vent gases into the atmosphere.


Refrigerant type: **R410A**

GWP⁽¹⁾ value: **1975** ⁽¹⁾ GWP = global warming potential

Please fill in with indelible ink,

- ① the factory refrigerant charge of the product,
 - ② the additional refrigerant amount charged in the field and
 - ①+② the total refrigerant charge
- on the refrigerant charge label supplied with the product.

The filled out label must be adhered in the proximity of the product charging port (e.g. onto the inside of the stop valve cover).

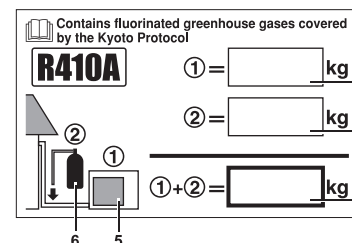

- 1 factory refrigerant charge of the product: see unit name plate
- 2 additional refrigerant amount charged in the field
- 3 total refrigerant charge
- 4 Contains fluorinated greenhouse gases covered by the Kyoto Protocol
- 5 outdoor unit
- 6 refrigerant cylinder and manifold for charging

NOTE

National implementation of EU regulation on certain fluorinated greenhouse gases may require to provide the appropriate official national language on the unit. Therefore an additional multilingual fluorinated greenhouse gases label is supplied with the unit. Sticking instructions are illustrated on the backside of that label.

Standby Electricity Saving

The standby electricity saving function turns off power supply to the outdoor unit and sets the indoor unit into standby electricity saving mode, thus reducing the power consumption of the air conditioner.

The standby electricity saving function works on the following indoor unit.


For all models after the FTXS20/25/35J type

CAUTION


- The standby electricity saving function cannot be used for models other than the specified ones.

Procedure for turning on standby electricity saving function

- 1) Check that the main power supply is turned off. Turn it off if it has not been turned off.
- 2) Remove the stop valve cover.
- 3) Disconnect the selective connector for standby electricity saving.
- 4) Turn on the main power supply.

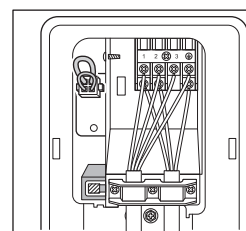

Standby electricity saving function off.

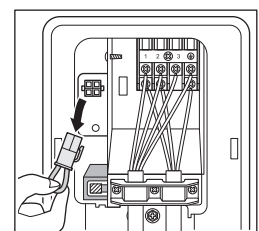

Standby electricity saving function on.

The standby electricity saving function is turned off before shipping.


CAUTION

- Before connecting or disconnecting the selective connector for standby electricity saving, make sure that the main power supply is turned off.
- The selective connector for standby electricity saving is required if an indoor unit other than the above applicable one is connected.

Pump Down Operation

In order to protect the environment, be sure to pump down when relocating or disposing of the unit.

- 1) Remove the valve cap from liquid stop valve and gas stop valve.
- 2) Carry out forced cooling operation.
- 3) After 5 to 10 minutes, close the liquid stop valve with a hexagonal wrench.
- 4) After 2 to 3 minutes, close the gas stop valve and stop forced cooling operation.

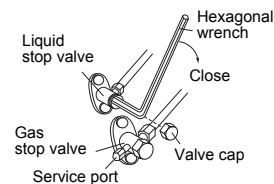

Forced cooling operation

■ Using the indoor unit ON/OFF switch

Press the indoor unit ON/OFF switch for at least 5 seconds. (The operation will start.)

- Forced cooling operation will stop automatically after around 15 minutes.
- To stop the operation, press the indoor unit ON/OFF switch.

■ Using the indoor unit's remote controller


- Please read about the procedure in "Trial operation from remote controller" in the installation manual attached to the indoor unit. Please set the operation mode to "cooling".

■ Using the outdoor unit forced cooling operation switch (with standby electricity saving function turned off)

Forced cooling operation can be performed when the outdoor unit forced cooling operation switch is pressed within around 3 minutes after power is supplied.

Push on "  " (SW1) with a screwdriver. (The operation will start.)

- Forced cooling operation will stop automatically after around 15 minutes.
- To stop the operation, press the switch (SW1).

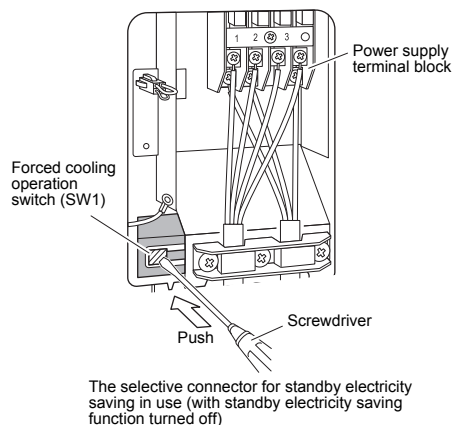

⚠ CAUTION


- When pressing the switch, do not touch the terminal block. It has a high voltage, so doing so may cause electric shock.
- After closing the liquid stop valve, close the gas stop valve within 3 minutes, then stop the forced cooling operation.

Facility Setting (cooling at low outdoor temperature)

For RXS20/25/35 models

This function is designed for facilities such as equipment or computer rooms. It is never to be used in a residence or office where people occupy the space.

- 1) Cutting jumper 4 (J4) on the circuit board will expand the operation range down to -15°C . However it will stop if the outdoor temperature drops below -20°C and start back up once the temperature rises again.

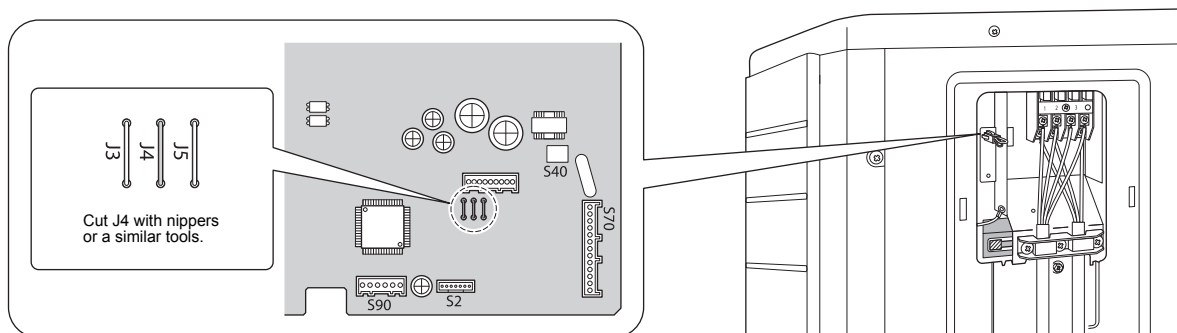

⚠ CAUTION


- If the outdoor unit is installed where the heat exchanger of the unit is exposed to direct wind, provide a windbreak wall.
- Intermittent noises may be produced by the indoor unit due to the outdoor fan turning on and off when using facility settings.
- Do not place humidifiers or other items which might raise the humidity in rooms where facility settings are being used. A humidifier might cause dew condensation from the indoor unit outlet vent.
- Cutting jumper 4 (J4) sets the indoor fan tap to the highest position. Notify the user about this.

Wiring

⚠ WARNING

- Do not use tapped wires, stranded wires, extension cords, or starburst connections, as they may cause overheating, electrical shock, or fire.
 - Do not use locally purchased electrical parts inside the product. (Do not branch the power for the drain pump, etc., from the terminal block.) Doing so may cause electric shock or fire.
 - Be sure to install an earth leak detector. (One that can handle higher harmonics.)
(This unit uses an inverter, which means that an earth leak detector capable of handling higher harmonics must be used, in order to prevent malfunctioning of the earth leak detector itself.)
 - Use an all-pole disconnection type breaker with at least 3mm between the contact point gaps.
 - Do not connect the power wire to the indoor unit. Doing so may cause electric shock or fire.
- Do not turn ON the safety breaker until all work is completed.


- 1) Strip the insulation from the wire (20mm).
- 2) Connect the connection wires between the indoor and outdoor units so that the terminal numbers match. Tighten the terminal screws securely. We recommend a flathead screwdriver be used to tighten the screws. The screws are packed with the terminal block.

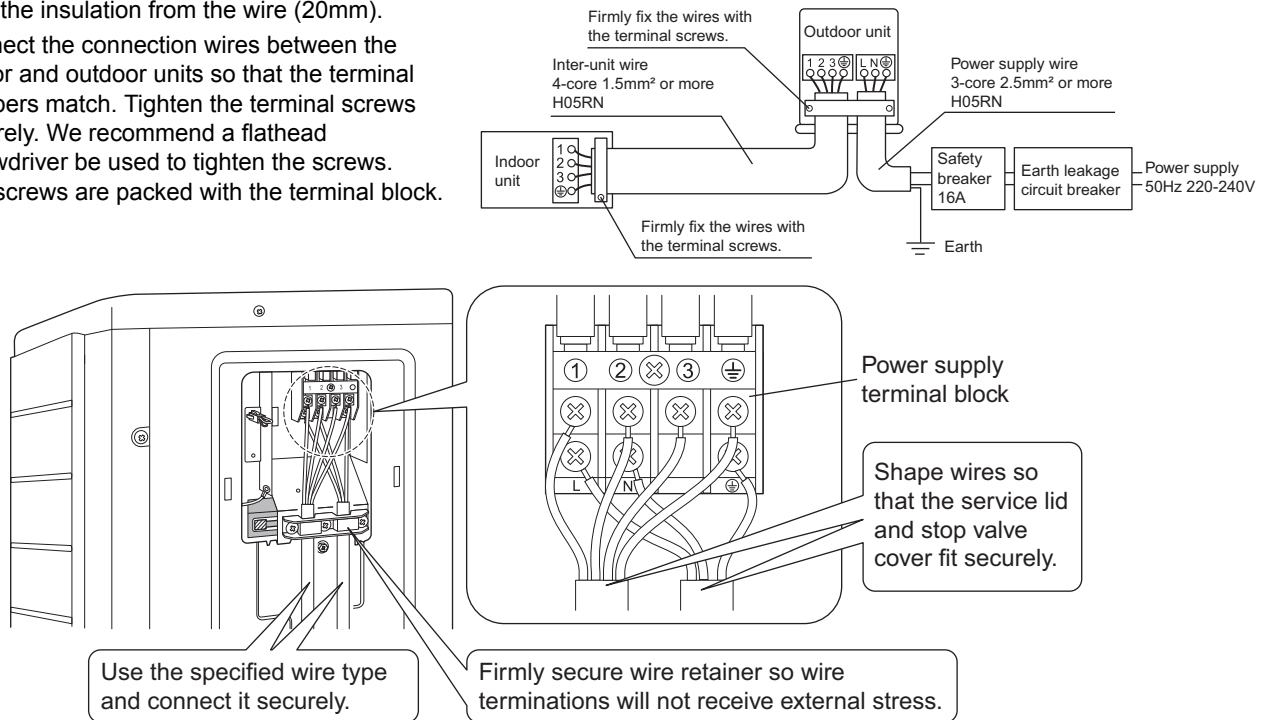


Observe the notes mentioned below when wiring to the power supply terminal block.
Precautions to be taken for power supply wiring.

⚠ CAUTION

- When connecting the connection wires to the terminal block using a single core wire, be sure to perform curling. Problems with the work may cause heat and fires.

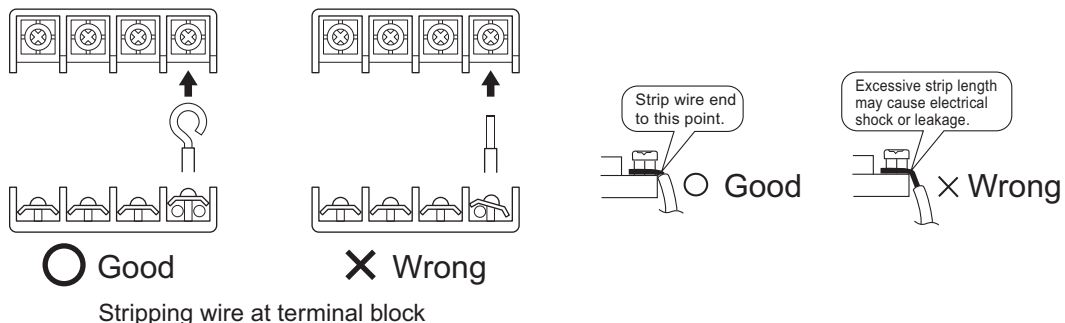

- If the stranded wires must be used, make sure to use the round crimp-style terminal for connection to the power supply terminal block. Place the round crimp-style terminals on the wires up to the covered part and secure in place.



- 3) Pull the wire and make sure that it does not disconnect. Then fix the wire in place with a wire stop.

Wiring diagram

	: Terminal strip		: Field wiring
	: Connector		: Relay connector
	: Connection		: Terminal
BLK	: Black	ORG	: Orange
BLU	: Blue	RED	: Red
BRN	: Brown	WHT	: White
GRN	: Green	YLW	: Yellow

Notes	: Refer to the nameplate of the unit for power requirements.	
	: TO INDOOR UNIT	To indoor unit
	: POWER SUPPLY	Power supply
	: IN CASE OF COOLING ONLY TYPE	In case of cooling only type
	: OUTDOOR	Outdoor
	: CONDENSER	Condenser
	: DISCHARGE	Discharge

Wiring diagram parts table

C7,C8.....	Capacitor	PCB1,PCB2	Printed circuit board
DB1,DB3.....	Diode bridge	S10,S11,S12,S20,	
FU1,FU2,FU3	Fuse	S40,S70,S80,S90,	
FU4	Field fuse	HL3,HN3,X11A.....	Connector
IPM	Intelligent power module	R1T,R2T,R3T	Thermistor
L.....	Live	SA1	Surge absorber
L803,L804.....	Reactor	V1,V2,V3.....	Varistor
M1C	Compressor motor	X1M.....	Terminal strip
M1F.....	Fan motor	Y1E	Electronic expansion valve coil
MRCW,MRM10,		Y1S	Reversing solenoid valve
MRM20,MR30.....	Magnetic relay	Z1C~Z4C	Noise filter (ferrite core)
N	Neutral		Protective earth
Q1L	Overload protector		Earth
Q1DI	Earth leak detector		

Trial Operation and Testing

1. Trial operation and testing

1-1 Measure the supply voltage and make sure that it falls in the specified range.

1-2 Trial operation should be carried out in either cooling or heating mode.

- In cooling mode, select the lowest programmable temperature; in heating mode, select the highest programmable temperature.
 - 1) Trial operation may be disabled in either mode depending on the room temperature.
 - 2) After trial operation is complete, set the temperature to a normal level (26°C to 28°C in cooling mode, 20°C to 24°C in heating mode).
 - 3) For protection, the system disables restart operation for 3 minutes after it is turned off.

1-3 Carry out the test operation in accordance with the operation manual to ensure that all functions and parts, such as louver movement, are working properly.

- The air conditioner requires a small amount of power in its standby mode. If the system is not to be used for some time after installation, shut off the circuit breaker to eliminate unnecessary power consumption.
- If the circuit breaker trips to shut off the power to the air conditioner, the system will restore the original operation mode when the circuit breaker is opened again.

2. Test items

Test items	Symptom	Check
Indoor and outdoor units are installed properly on solid bases.	Fall, vibration, noise	
No refrigerant gas leaks.	Incomplete cooling/heating function	
Refrigerant gas and liquid pipes and indoor drain hose extension are thermally insulated.	Water leakage	
Draining line is properly installed.	Water leakage	
System is properly earthed.	Electrical leakage	
The specified wires are used for inter-unit wiring.	Inoperative or burn damage	
Indoor or outdoor unit's air inlet or air outlet has clear path of air.	Incomplete cooling/heating function	
Stop valves are opened.	Incomplete cooling/heating function	
Indoor unit properly receives remote control commands.	Inoperative	

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.

U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany, Czech Republic

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

Copyright 2013 Daikin



3P360062-2C 2013.11