



Level



Pressure



Flow



Temperature



Liquid  
Analysis



Registration



Systems  
Components



Services




Solutions

## Operating Instructions

# Proline Promass 40

## Coriolis Mass Flow Measuring System

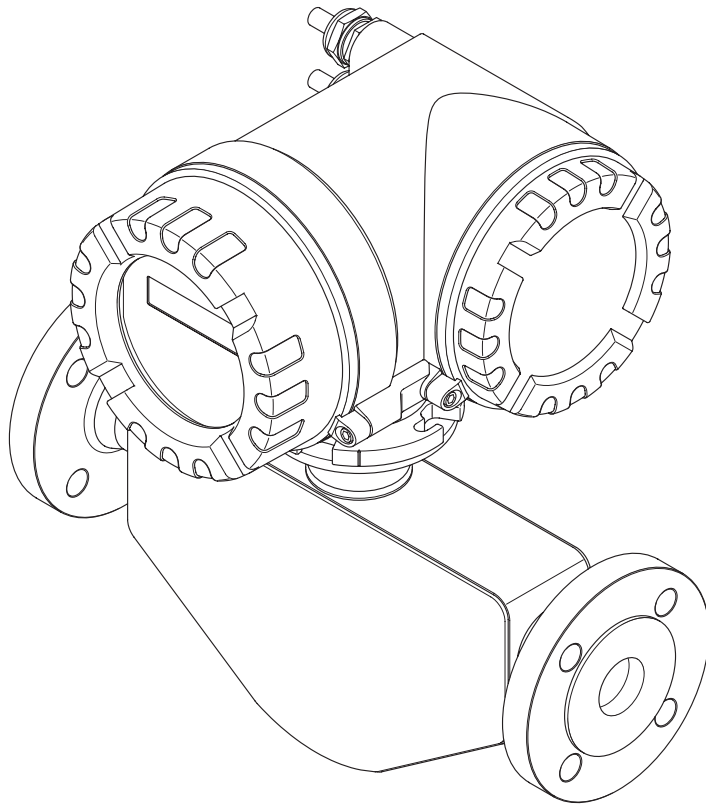

BA 061D/06/en/06.05  
50098508

Valid as of version:  
V 2.00.XX (Device software)

**Endress+Hauser** 

People for Process Automation

# Brief operating instructions

These brief operating instructions show you how to configure your measuring device quickly and easily:

Safety instructions	Page 5
▼	
Installation	Page 11
▼	
Wiring	Page 19
▼	
Display elements	Page 25
▼	
Customer specific configuration	Page 25
Complex measuring operations necessitate additional functions that you can configure with the aid of a function matrix in an operating program, and thereby customize to suit your process parameters. All functions are described in detail, as is the function matrix itself, in the <b>“Description of Device Functions”</b> manual, which is a separate part of this Operating Instruction.	



**Note!**  
Always start trouble-shooting with the checklist on Page 47, if faults occur after start-up or during operation. The routine takes you directly to the cause of the problem and the appropriate remedial measures.

# Table of Contents

<b>1</b>	<b>Safety instructions</b>	<b>5</b>	<b>6</b>	<b>Commissioning</b>	<b>41</b>
1.1	Designated use	5	6.1	Function check	41
1.2	Installation, commissioning and operation	5	6.2	Commissioning	41
1.3	Operational safety	5	6.2.1	Switching on the measuring device	41
1.4	Return	6	6.2.2	Zero point adjustment	41
1.5	Notes on safety conventions and icons	6	6.2.3	Density adjustment	43
<b>2</b>	<b>Identification</b>	<b>7</b>	6.2.4	Current output: active/passive	44
2.1	Device designation	7	<b>7</b>	<b>Maintenance</b>	<b>44</b>
2.1.1	Nameplate of the transmitter	7	<b>8</b>	<b>Accessories</b>	<b>45</b>
2.1.2	Nameplate of the sensor	8	<b>9</b>	<b>Trouble-shooting</b>	<b>47</b>
2.1.3	Nameplate for connections	9	9.1	Trouble-shooting instructions	47
2.2	CE mark, declaration of conformity	9	9.2	System error messages	48
2.3	Registered trademarks	10	9.3	Process error messages	51
<b>3</b>	<b>Installation</b>	<b>11</b>	9.4	Process errors without messages	53
3.1	Incoming acceptance, transport and storage	11	9.5	Response of outputs to errors	54
3.1.1	Incoming acceptance	11	9.6	Spare parts	56
3.1.2	Transport	11	9.7	Removing and installing printed circuit boards	57
3.1.3	Storage	12	9.8	Replacing the device fuse	59
3.2	Installation conditions	12	9.9	Return	60
3.2.1	Dimensions	12	9.10	Disposal	60
3.2.2	Mounting location	12	9.11	Software history	61
3.2.3	Orientation	14	<b>10</b>	<b>Technical data</b>	<b>63</b>
3.2.4	Heating, thermal insulation	15	10.1	Technical data at a glance	63
3.2.5	Inlet and outlet runs	15	10.1.1	Applications	63
3.2.6	Vibrations	15	10.1.2	Function and system design	63
3.2.7	Limiting flow	15	10.1.3	Input	63
3.3	Installation instructions	16	10.1.4	Output	64
3.3.1	Turning the transmitter housing	16	10.1.5	Auxiliary energy	65
3.3.2	Turning the local display	17	10.1.6	Performance characteristics	66
3.4	Post installation check	17	10.1.7	Operating conditions (installation)	67
<b>4</b>	<b>Wiring</b>	<b>19</b>	10.1.8	Operating conditions (environment)	67
4.1	Connecting the measuring unit	19	10.1.9	Operating conditions (process)	68
4.1.1	Connecting the transmitter	19	10.1.10	Mechanical construction	70
4.1.2	HART connection	21	10.1.11	Human interface	70
4.2	Potential equalisation	22	10.1.12	Certificates and approvals	71
4.3	Degree of protection	22	10.1.13	Ordering information	71
4.4	Post connection check	23	10.1.14	Accessories	71
<b>5</b>	<b>Operation</b>	<b>25</b>	10.1.15	Documentation	71
5.1	Display element	25	<b>Index</b>	<b>73</b>	
5.1.1	Configuration of device parameters	25			
5.2	Display of error messages	26			
5.3	Operating via the HART protocol	27			
5.3.1	Operating options	27			
5.3.2	Current device description files	28			
5.3.3	Device and process variables	29			
5.3.4	Universal/Common practice HART commands	29			
5.3.5	Device status / Error messages	35			



# 1 Safety instructions

## 1.1 Designated use

The measuring device described in these Operating Instructions is to be used only for measuring the mass flow rate or volume flow rate of liquids and gases. Fluids with widely differing properties can be measured, for example:

- additives
- oils, fats
- acids, alkalis
- lacquers, paints
- suspensions
- gases.

Resulting from incorrect use or from use other than that designated the operational safety of the measuring devices can be suspended. The manufacturer accepts no liability for damages being produced from this.




## 1.2 Installation, commissioning and operation

Note the following points:

- Installation, connection to the electricity supply, commissioning and maintenance of the device must be carried out by trained, qualified specialists authorized to perform such work by the facility's owner operator. The specialist must have read and understood this Operating Instruction and must follow the instructions it contains.
- The device must be operated by persons authorized and trained by the facility's owner operator. Strict compliance with the instructions in the Operating Instruction is mandatory.
- Endress+Hauser will be happy to assist in clarifying the chemical resistance properties of parts wetted by special fluids, including fluids used for cleaning. However the user is responsible for the choice of fluid wetted materials as regards for their in-process resistance to corrosion. The manufacturer refuses to accept liability.
- The installer must ensure that the measuring system is correctly wired in accordance with the wiring diagrams. The transmitter must be grounded, unless the power supply is galvanically insulated.
- Invariably, local regulations governing the opening and repair of electrical devices apply.

## 1.3 Operational safety

Note the following points:

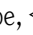- Measuring systems for use in hazardous environments are accompanied by separate "Ex documentation", which is an *integral part* of this Operating Instruction. Strict compliance with the installation instructions and ratings as stated in this supplementary documentation is mandatory. The symbol on the front of this supplementary Ex documentation indicates the approval and the certification body (  Europe,  USA,  Canada).
- The measuring device complies with the general safety requirements in accordance with EN 61010, the EMC requirements of EN 61326/A1, and NAMUR recommendation NE 21, NE 43 and NE 53.
- The manufacturer reserves the right to modify technical data without prior notice. Your E+H distributor will supply you with current information and updates to this Operating Instruction.

## 1.4 Return

The following procedures must be carried out before a flowmeter requiring repair or calibration, for example, is returned to Endress+Hauser:

- Always enclose a duly completed “Declaration of contamination” form. Only then can Endress+Hauser transport, examine and repair a returned device.
- Enclose special handling instructions if necessary, for example a safety data sheet as per EN 91/155/EEC.
- Remove all residues. Pay special attention to the grooves for seals and crevices which could contain residues. This is particularly important if the substance is hazardous to health, e.g. flammable, toxic, caustic, carcinogenic, etc.



**Note!**

You will find a preprinted blank of the “Declaration of contamination” form at the back of this manual.



**Warning!**

- Do not return a measuring device if you are not absolutely certain that all traces of hazardous substances have been removed, e.g. substances which have penetrated crevices or diffused through plastic.
- Costs incurred for waste disposal and injury (burns, etc.) due to inadequate cleaning will be charged to the owner operator.

## 1.5 Notes on safety conventions and icons

The devices are designed to meet state-of-the-art safety requirements, have been tested, and left the factory in a condition in which they are safe to operate. The devices comply with the applicable standards and regulations in accordance with EN 61010 “Protection Measures for Electrical Equipment for Measurement, Control, Regulation and Laboratory Procedures”. They can, however, be a source of danger if used incorrectly or for other than the designated use.

Consequently, always pay particular attention to the safety instructions indicated in this Operating Instruction by the following icons:



**Warning!**

“Warning” indicates an action or procedure which, if not performed correctly, can result in injury or a safety hazard. Comply strictly with the instructions and proceed with care.



**Caution!**

“Caution” indicates an action or procedure which, if not performed correctly, can result in incorrect operation or destruction of the device. Comply strictly with the instructions.



**Note!**

“Note” indicates an action or procedure which, if not performed correctly, can have an indirect effect on operation or trigger an unexpected response on the part of the device.

## 2 Identification

### 2.1 Device designation

The “Promass 40” flow measuring system consists of the following components:

- Promass 40 transmitter
- Promass E sensor

#### 2.1.1 Nameplate of the transmitter

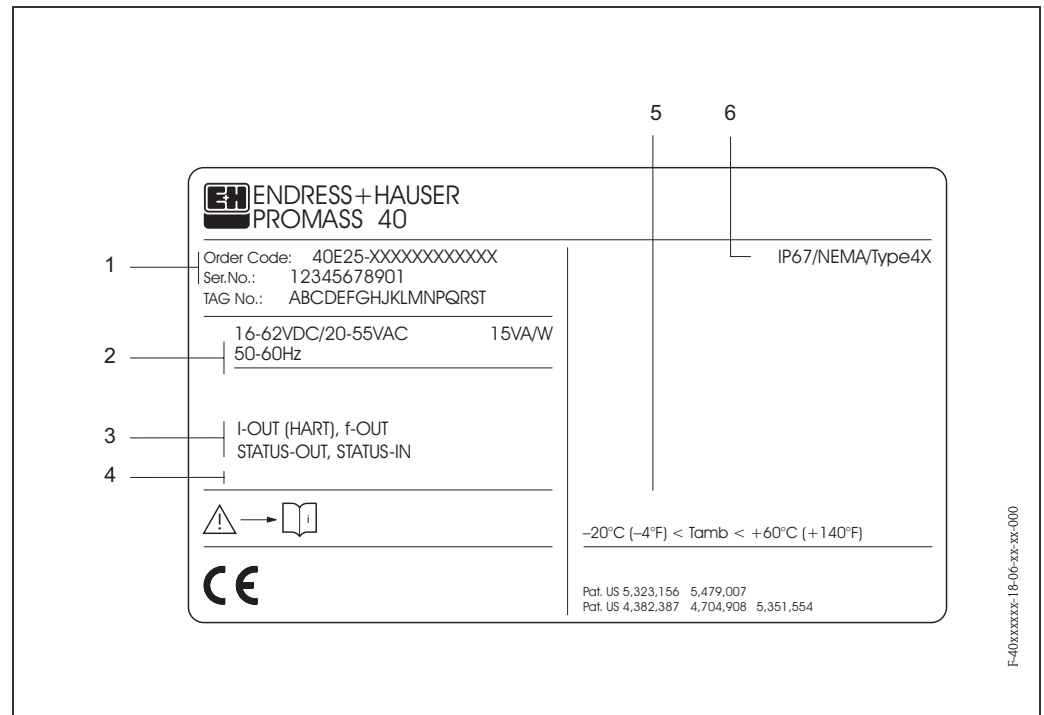


Fig. 1: Nameplate specifications for the “Promass 40” transmitter (example)

- 1 Ordering code/serial number: See the specifications on the order confirmation for the meanings of the individual letters and digits.
- 2 Power supply / frequency: 16...62 V DC / 20...55 V AC / 50...60 Hz  
Power consumption: 15 VA / W
- 3 Available inputs / outputs:  
I-OUT (HART): with current output (HART)  
f-OUT: with pulse/frequency output  
STATUS-IN: with status input (auxiliary input)  
STATUS-OUT: with status output (switching output)
- 4 Reserved for information on special products
- 5 Ambient temperature range
- 6 Degree of protection

### 2.1.2 Nameplate of the sensor

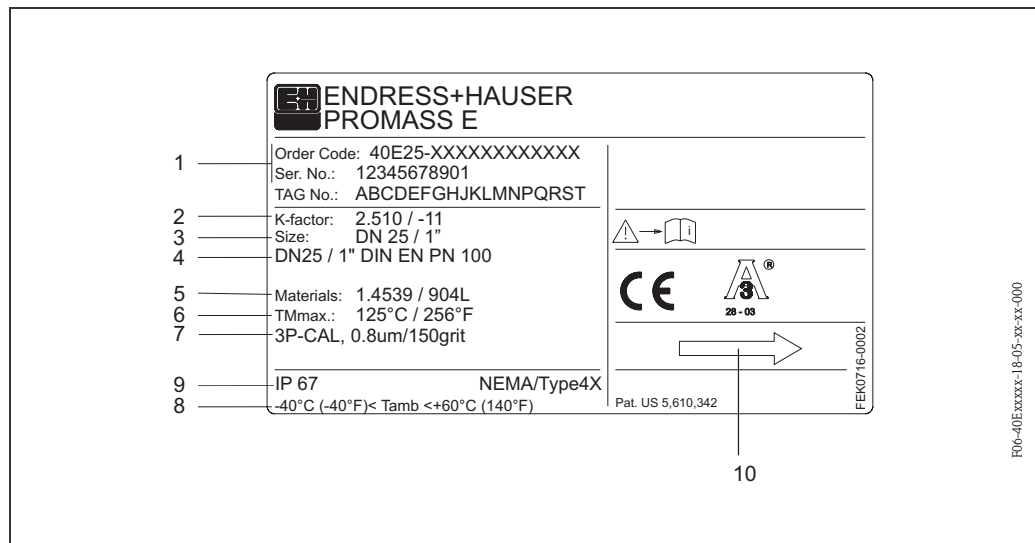


Fig. 2: Nameplate specifications for the "Promass E" sensor (example)

- 1 Ordering code/serial number: See the specifications on the order confirmation for the meanings of the individual letters and digits.
- 2 Calibration factor: 2.510; zero point: -11
- 3 Nominal diameter: DN 25/1"
- 4 Flange nominal diameter: DN 25/1"  
Pressure rating: EN (DIN) PN 100 bar
- 5 Material of measuring tubes: Stainless steel 1.4539/904L
- 6  $TM_{max}$  +125 °C / +256 °F (max. fluid temperature)
- 7 Additional information (example):  
– With 3-point calibration  
– With 3.1 B certification for fluid wetted materials
- 8 Ambient temperature range
- 9 Degree of protection
- 10 Flow direction



### 2.1.3 Nameplate for connections

See operating manual  
Betriebsanleitung beachten  
Observer manuel d'instruction

A: active  
P: passive  
NO: normally open contact  
NC: normally closed contact

1 Ser.No.: 12345678912

4 Supply / Versorgung / Tension d'alimentation

L1/L+  
N/L-  
PE

I-OUT (HART) Active: 0/4...20mA, RL max. = 700 Ohm  
Passive: 4...20mA, max. 30VDC, Ri < 150 Ohm  
(HART: RL.min. = 250 OHM)

f-OUT fmax = 1kHz  
Passive: 30VDC, 250mA

5 STATUS-OUT Passive: 30VDC, 250mA

STATUS-IN 3...30VDC, Ri = 5kOhm

20(+)/21(-)  
22(+)/23(-)  
24(+)/25(-)  
26(+)/27(-)

6 ex-works Version info

7 Device SW: XX.XX.XX

8 Communication: XXXXXXXXXX

9 Revision: XX.XX.XX

Date: DD.MMM.YYYY

Update 1 Update 2

319475-00XX

10

A0000963

Fig. 3: Nameplate specifications for Proline transmitter (example)

- 1 Serial number
- 2 Possible configuration of current output
- 3 Possible configuration of relay contacts
- 4 Terminal assignment, cable for power supply: 85...260 V AC, 20...55 V AC, 16...62 V DC  
Terminal **No. 1**: L1 for AC, L+ for DC  
Terminal **No. 2**: N for AC, L- for DC
- 5 Signals present at inputs and outputs, possible configuration and terminal assignment (20...27), see also "Electrical values of inputs/outputs" → Page 63 ff.
- 6 Version of device software currently installed
- 7 Installed communication type, e.g. HART, PROFIBUS PA, etc.
- 8 Information on current communication software (Device Revision and Device Description), e.g. Dev. 01 / DD 01 for HART
- 9 Date of installation
- 10 Current updates to data specified in points 6 to 9

## 2.2 CE mark, declaration of conformity

The devices are designed in accordance with good engineering practice to meet state-of-the-art safety requirements, have been tested, and left the factory in a condition in which they are safe to operate. The devices comply with the applicable standards and regulations in accordance with EN 61010 "Protection Measures for Electrical Equipment for Measurement, Control, Regulation and Laboratory Procedures" and with the EMC requirements of EN 61326/A1.

The measuring system described in this Operating Instruction thus complies with the statutory requirements of the EC Directives. Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

## 2.3 Registered trademarks

TRI-CLAMP<sup>®</sup>

is a registered trademark of Ladish & Co., Inc., Kenosha, USA

SWAGELOK<sup>®</sup>

is a registered trademark of Swagelok & Co., Solon, USA

HART<sup>®</sup>

is a registered trademark of HART Communication Foundation, Austin, USA

HistoROM<sup>™</sup>, S-DAT<sup>®</sup>, ToF Tool - Fieldtool<sup>®</sup> Package, Fieldcheck<sup>®</sup>, Applicator<sup>®</sup>  
are registered trademarks of Endress+Hauser Flowtec AG, Reinach, CH

## 3 Installation

### 3.1 Incoming acceptance, transport and storage

#### 3.1.1 Incoming acceptance

On receipt of the goods, check the following points:

- Check the packaging and the contents for damage.
- Check the shipment, make sure nothing is missing and that the scope of supply matches your order.

#### 3.1.2 Transport

The following instructions apply to unpacking and to transporting the device to its final location:

- Transport the devices in the containers in which they are delivered.
- The covers or caps fitted to the process connections prevent mechanical damage to the sealing faces and the ingress of foreign matter to the measuring tube during transportation and storage. Consequently, do not remove these covers or caps until immediately before installation.
- Do not lift measuring devices of nominal diameters DN 40...50 by the transmitter housing or the connection housing in the case of the remote version (Fig. 4). Use webbing slings slung round the two process connections (Fig. 4). Do not use chains, as they could damage the housing.



**Warning!**

Risk of injury if the measuring device slips. The center of gravity of the assembled measuring device might be higher than the points around which the slings are slung.

At all times, therefore, make sure that the device does not unexpectedly turn around its axis or slip.

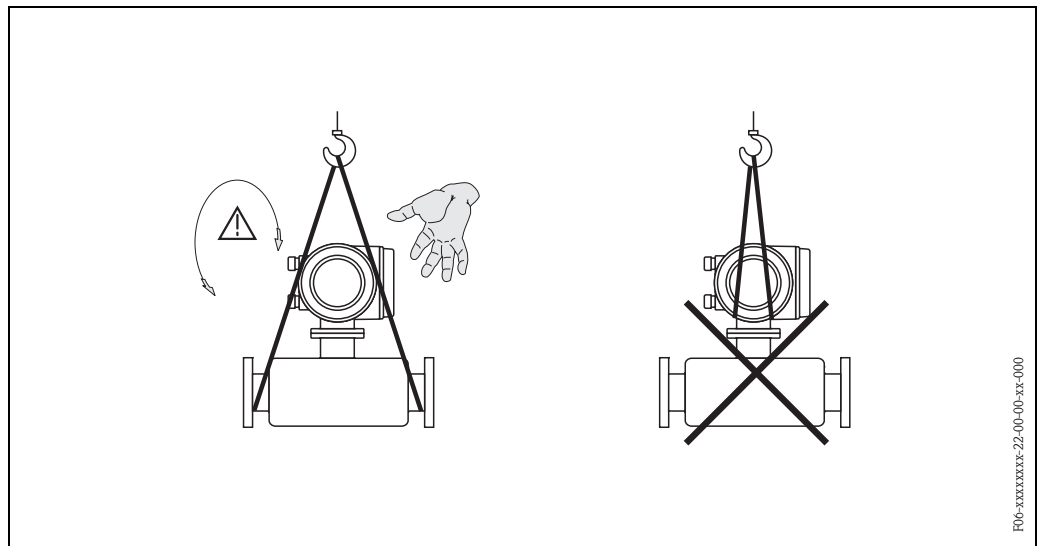


Fig. 4: Instructions for transporting sensors with DN 40...50

### 3.1.3 Storage

Note the following points:

- Pack the measuring device in such a way as to protect it reliably against impact for storage (and transportation). The original packaging provides optimum protection.
- The permissible storage temperature is  $-40...+80\text{ }^{\circ}\text{C}$  (preferably  $+20\text{ }^{\circ}\text{C}$ ).
- Do not remove the protective covers or caps on the process connections until you are ready to install the device.
- The measuring device must be protected against direct sunlight during storage in order to avoid unacceptably high surface temperatures.

## 3.2 Installation conditions

Note the following points:

- No special measures such as supports are necessary. External forces are absorbed by the construction of the instrument.
- The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by pipe vibrations.
- No special precautions need to be taken for fittings which create turbulence (valves, elbows, T-pieces, etc.), as long as no cavitation occurs.

### 3.2.1 Dimensions

Dimensions and fitting lengths of the transmitter and the sensor are provided in the separate documentation "Technical Information" TI055D/06/en.

### 3.2.2 Mounting location

Entrained air or gas bubbles in the measuring tube can result in an increase in measuring errors. Avoid the following locations:

- Highest point in a run. Risk of air accumulating.
- Directly upstream from an open pipe outlet in a vertical pipeline.

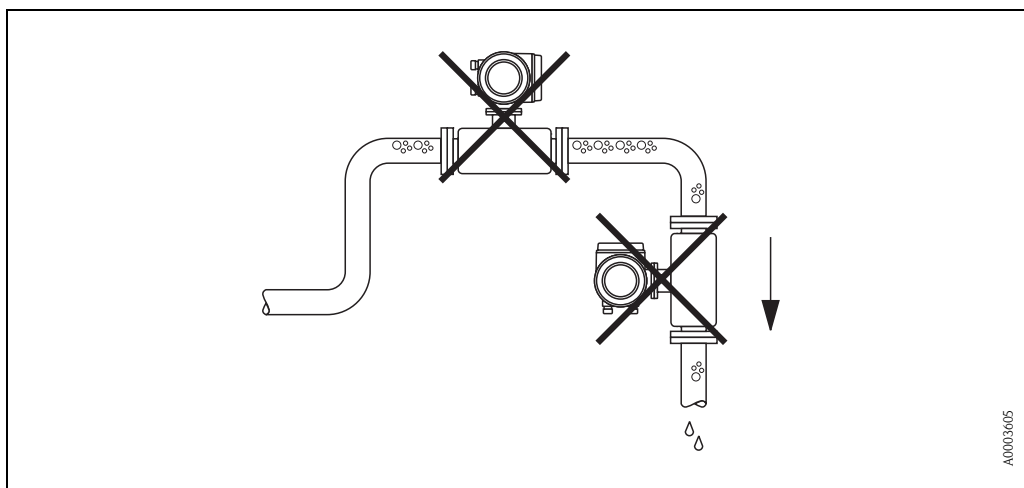


Fig. 5: Mounting location

The proposed configuration in Fig. 6, however, permits installation in an open down pipe. Pipe restrictors or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor from running empty while measurement is in progress.

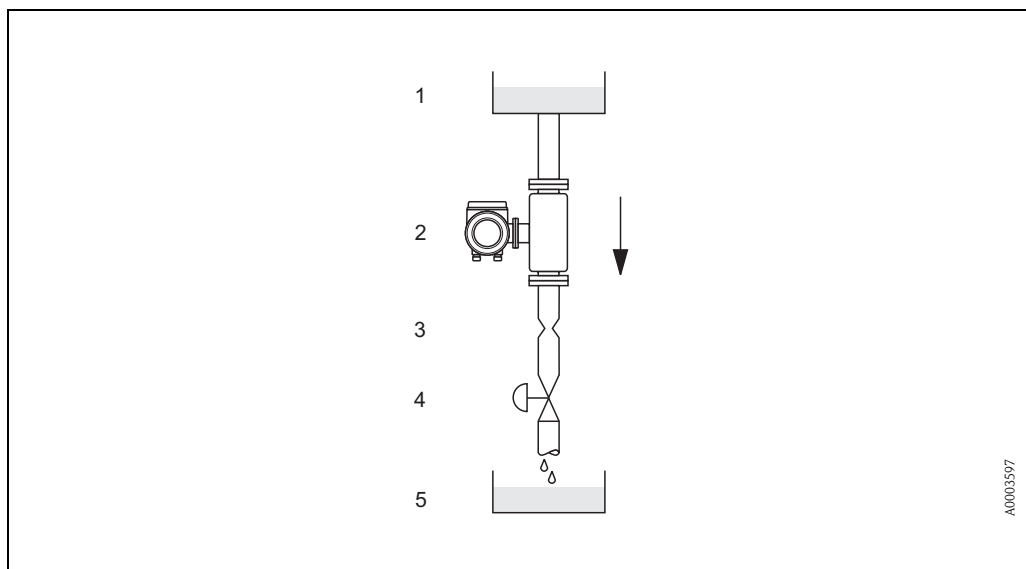


Fig. 6: Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- 3 Choke, restrictor
- 4 Valve
- 5 Batching tank

Promass E / DN	8	15	25	40	50
Ø orifice / pipe restriction	6 mm	10 mm	14 mm	22 mm	28 mm

### System pressure

It is important to ensure that cavitation does not occur, because it would influence the oscillation of the measuring tube. No special measures need to be taken for fluids which have properties similar to water under normal conditions.

In the case of liquids with a low boiling point (hydrocarbons, solvents, liquefied gases) or in suction lines, it is important to ensure that pressure does not drop below the vapor pressure and that the liquid does not start to boil. It is also important to ensure that the gases that occur naturally in many liquids do not outgas. Such effects can be prevented when system pressure is sufficiently high.

Consequently, it is generally best to install the sensor:

- downstream from pumps (no risk of partial vacuum)
- at the lowest point in a vertical pipe

3.2.3 Orientation

Vertical:

Recommended orientation with upward direction of flow (View 1). When fluid is not flowing, entrained solids will sink down and gases will rise away from the measuring tube. The measuring tubes can be completely drained and protected against solids build-up.

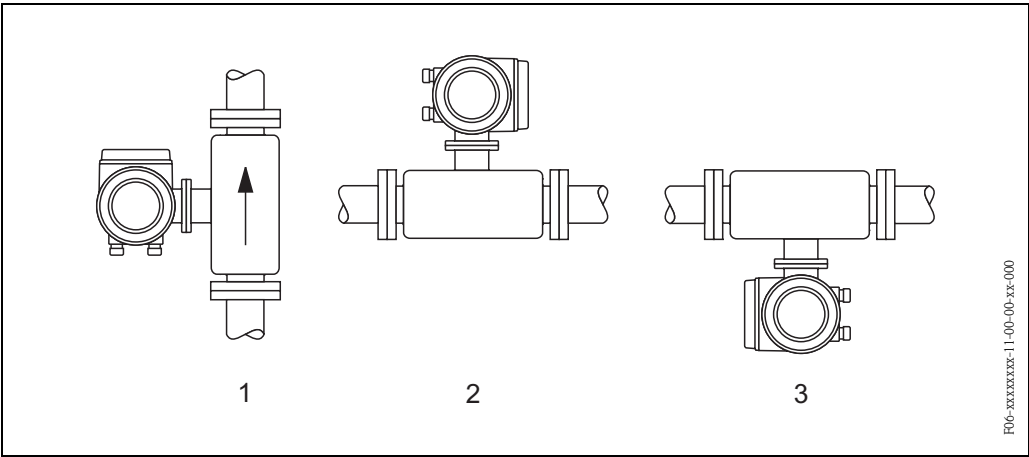


Fig. 7: Orientation Promass E

Horizontal:

The measuring tubes of Promass E must be in the same horizontal plane. When installation is correct the transmitter housing is above or below the pipe (Views 2, 3). Always avoid having the transmitter housing in the same horizontal plane as the pipe.



Caution!

The measuring tubes of Promass E are slightly curved. The position of the sensor, therefore, has to be matched to the fluid properties when the sensor is installed horizontally (Fig. 8).

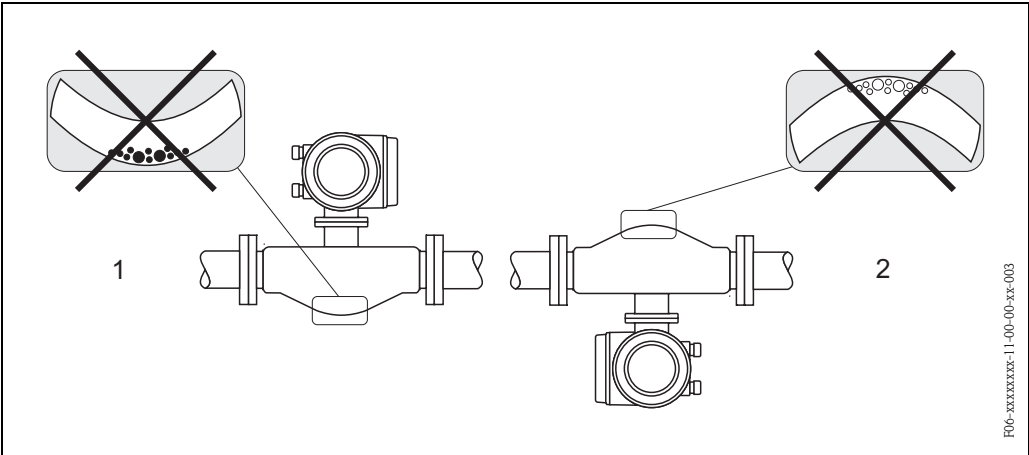


Fig. 8: Promass E installed horizontally

- 1 Not suitable for fluids with entrained solids. Risk of solids accumulating!
- 2 Not suitable for outgassing fluids. Risk of air accumulating!

**Fluid temperature**

In order to ensure that the maximum permissible ambient temperature for the transmitter (−20...+60 °C) is not exceeded, we recommend the following orientations:

*High fluid temperature*

- Vertical piping: installation in accordance with Fig. 7 / View 1
- Horizontal piping: installation in accordance with Fig. 7 / View 3

*Low fluid temperature*

- Vertical piping: installation in accordance with Fig. 7 / View 1
- Horizontal piping: installation in accordance with Fig. 7 / View 2

**3.2.4 Heating, thermal insulation**

Some fluids require suitable measures to avoid heat transfer at the sensor. A wide range of materials can be used to provide the required thermal insulation. Heating can be electric, e.g. with heated elements, or by means of hot water or steam pipes made of copper.

**Note!**

- Do not use any heating elements with thyristor controlled voltage sources.
- When using electrical heat tracing whose heat is regulated using phase control or by pulse packs, it cannot be ruled out that the measured values are influenced by magnetic fields which may occur, i.e. at values greater than those permitted by the EC standard (Sinus 30 A/m). In such cases, the sensor must be magnetically screened.  
The secondary containment can be shielded with tin plates or electric sheets without privileged direction (e.g. V330–35A) with the following properties:
  - Relative magnetic permeability  $\mu_r \geq 300$
  - Plate thickness  $d \geq 0.35$  mm

**Caution!**

Risk of electronics overheating!

- Make sure that the connector between sensor and transmitter always remains free of insulating material.
- Bear in mind that a certain orientation might be required, depending on the temperature of the fluid (see Chap. 3.2.3 “Fluid temperature”).
- Information on permissible temperature ranges → Page 67.

**3.2.5 Inlet and outlet runs**

There are no installation requirements regarding inlet and outlet runs. If possible, install the sensor well clear of fittings such as valves, T-pieces, elbows, etc.

**3.2.6 Vibrations**

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by pipe vibrations. Consequently, the sensors require no special measures for attachment.

**3.2.7 Limiting flow**

See the information on Page 63 and 68.

## 3.3 Installation instructions

### 3.3.1 Turning the transmitter housing



Warning!

The turning mechanism in devices with EEx d/de or FM/CSA Cl. I Div. 1 classification is not the same as that described here. The procedure for turning these housings is described in the Ex-specific documentation.

1. Loosen the two securing screws.
2. Turn the bayonet catch as far as it will go.
3. Carefully lift the transmitter housing as far as it will go.
4. Turn the transmitter housing to the desired position (max. 2 x 90° in either direction).
5. Lower the housing into position and re-engage the bayonet catch.
6. Retighten the two securing screws.

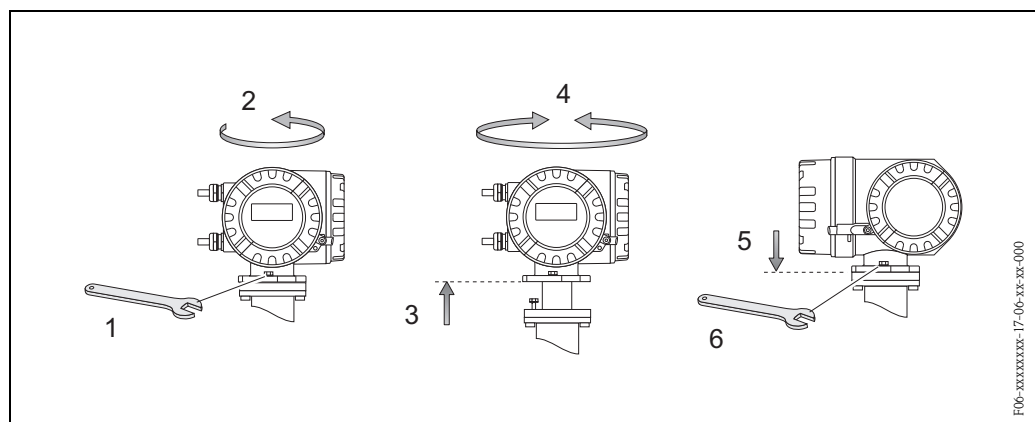


Fig. 9: Turning the transmitter housing (aluminum field housing)



### 3.3.2 Turning the local display

1. Remove the cover of the electronics compartment.
2. Press the side latches on the display module and remove it from the electronics compartment cover.
3. Rotate the display to the desired position (max.  $4 \times 45^\circ$  in each direction), and reset it into the electronics compartment cover.
4. Screw the cover of the electronics compartment firmly onto the transmitter housing.

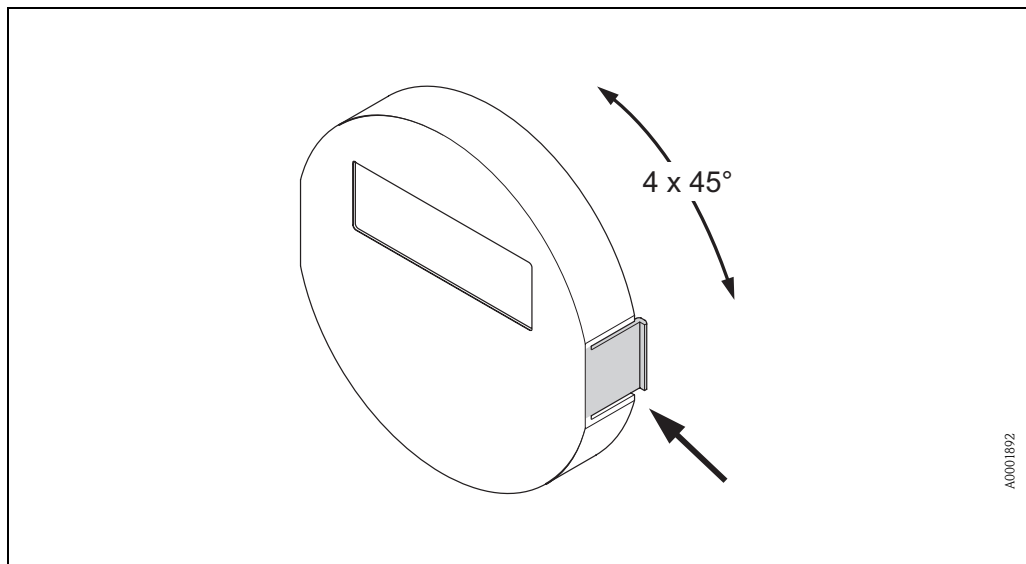


Fig. 10: Turning the local display (field housing)

## 3.4 Post installation check

Perform the following checks after installing the measuring device in the pipe:

Device condition and specifications	Notes
Is the device damaged (visual inspection)?	–
Does the device correspond to specifications at the measuring point, including process temperature and pressure, ambient temperature, measuring range, etc.?	see Page 63 ff.
Installation	Notes
Does the arrow on the sensor nameplate match the direction of flow through the pipe?	–
Are the measuring point number and labeling correct (visual inspection)?	–
Is the orientation chosen for the sensor correct, in other words suitable for sensor type, fluid properties (outgassing, with entrained solids) and fluid temperature?	see Page 12 ff.
Process environment / process conditions	Notes
Is the measuring device protected against moisture and direct sunlight?	–



## 4 Wiring



### Warning!

When connecting Ex-certified devices, see the notes and diagrams in the Ex-specific supplement to this Operating Instruction. Please do not hesitate to contact your E+H representative if you have any questions.

### 4.1 Connecting the measuring unit

#### 4.1.1 Connecting the transmitter



### Warning!

- Risk of electric shock. Switch off the power supply before opening the device. Do not install or wire the device while it is connected to the power supply. Failure to comply with this precaution can result in irreparable damage to the electronics.
- Risk of electric shock. Connect the protective conductor to the ground terminal on the housing before the power supply is applied (not necessary if the power supply is galvanically isolated).
- Compare the specifications on the nameplate with the local voltage supply and frequency. The national regulations governing the installation of electrical equipment also apply.

1. Remove the cover of the connection compartment (f) from the transmitter housing.
2. Feed the power supply cable (a) and signal cables (b) through the appropriate cable entries.
3. Connect the cables:
  - Wiring diagramm → Fig. 11
  - Terminal assignment → Page 20
4. Screw the cover of the connection compartment (g) firmly onto the transmitter housing.

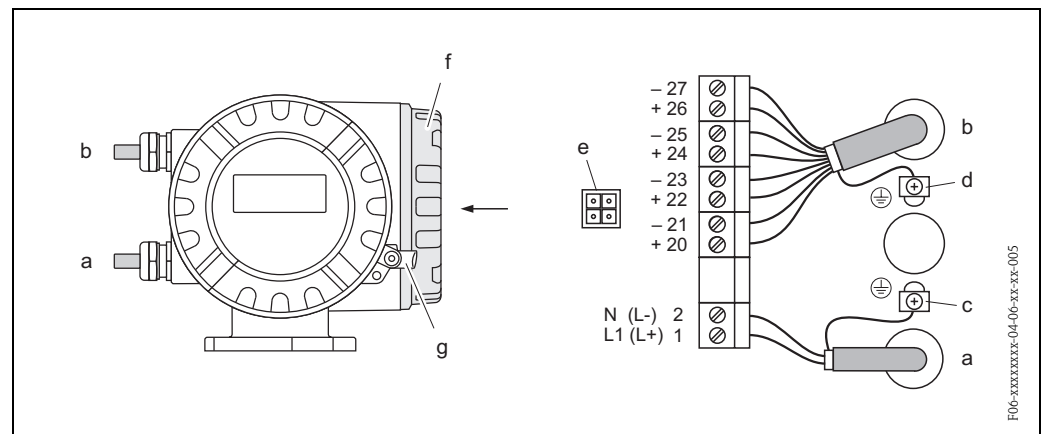

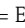



Fig. 11: Connecting the transmitter (aluminium field housing); Cable cross-section: max. 2.5 mm<sup>2</sup>

- a Cable for power supply: 85...260 V AC, 20...55 V AC, 16...62 V DC  
Terminal No. 1: L1 for AC, L+ for DC  
Terminal No. 2: N for AC, L- for DC
- b Signal cable: Terminals Nos. 20–27 → Page 19
- c Ground terminal for protective conductor
- d Ground terminal for signal cable shield
- e Service adapter for connecting service interface FXA 193 (Fieldcheck, ToF Tool – Fieldtool Package)
- f Cover of the connection compartment
- g Securing clamp

Order variant	Terminal Nos. (inputs/outputs)			
	20 – 21	22 – 23	24 – 25	26 – 27
40***- *****A	–	–	Frequency output	Current output HART
40***- *****D	Status input	Status output	Frequency output	Current output HART
40***- *****S	–	–	Frequency output EEx i	Current output EEx i, active, HART
40***- *****T	–	–	Frequency output EEx i	Current output EEx i, passive, HART
<p><i>Status input (Auxiliary input)</i> galvanically isolated, 3...30 V DC, <math>R_i = 5 \text{ k}\Omega</math>, configurable</p> <p><i>Status output</i> Open collector, max. 30 V DC / 250 mA, galvanically isolated, configurable</p> <p><i>Frequency output (passive)</i> Open collector, galvanically isolated, 30 V DC, 250 mA  – Frequency output: full scale frequency 2...1000 Hz (<math>f_{\max} = 1250 \text{ Hz}</math>), on/off ratio 1:1, pulse width max. 10 s  – Pulse output: pulse value and pulse polarity selectable, max. pulse width adjustable (0.5...2000 ms)</p> <p><i>Current output HART (active/passive)</i> galvanically isolated, active: 0/4...20 mA, <math>R_L &lt; 700 \Omega</math>, HART: <math>R_L \geq 250 \Omega</math>, passive: 4...20 mA, supply voltage <math>V_s = 18...30 \text{ V DC}</math>, <math>R_i \geq 150 \Omega</math>, <math>R_L &lt; 700 \Omega</math></p> <p><i>Current output HART EEx i (active, passive)</i> Frequency output EEx i (passive) See the Ex documentation for details on the Ex-relevant data. The Ex documentation is available for the following approvals:   = Europe,  = USA,  = Canada</p>				

### 4.1.2 HART connection

Users have the following connection options at their disposal:

- Direct connection to transmitter by means of terminals 26 / 27
- Connection by means of the 4...20 mA circuit.



Note!

- The measuring loop's minimum load must be at least 250  $\Omega$ .
- See also the documentation issued by the HART Communication Foundation, and in particular HCF LIT 20: "HART, a technical summary".

#### Connection of the HART handheld communicator

See also the documentation issued by the HART Communication Foundation, and in particular HCF LIT 20: "HART, a technical summary".

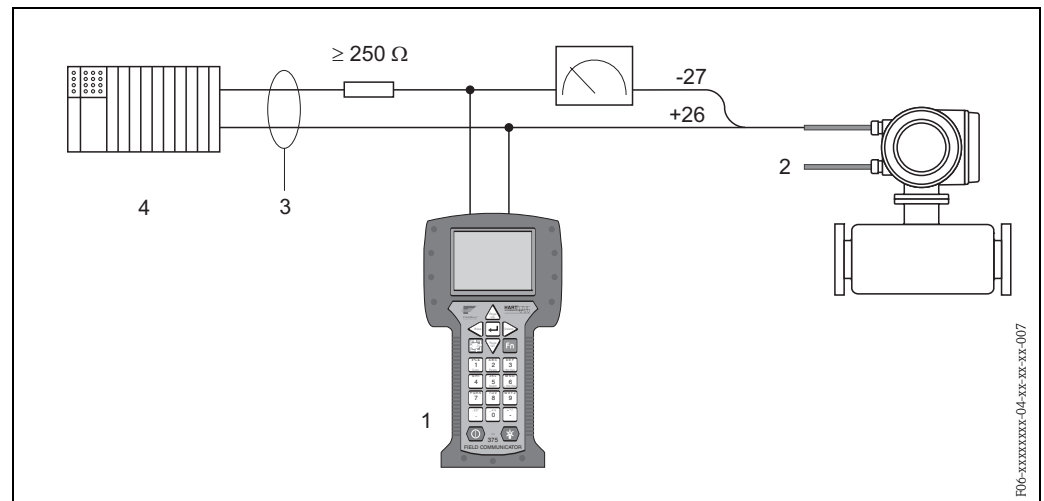


Fig. 12: Electrical connection of the HART handheld communicator:  
1 = HART communicator, 2 = power supply, 3 = shield, 4 = other evaluation devices or PLC with passive input

#### Connecting a PC with operating software

In order to connect a personal computer with a operating software (e.g. "ToF Tool - Fieldtool Package") a HART modem (e.g. Commubox FXA 191) is needed.

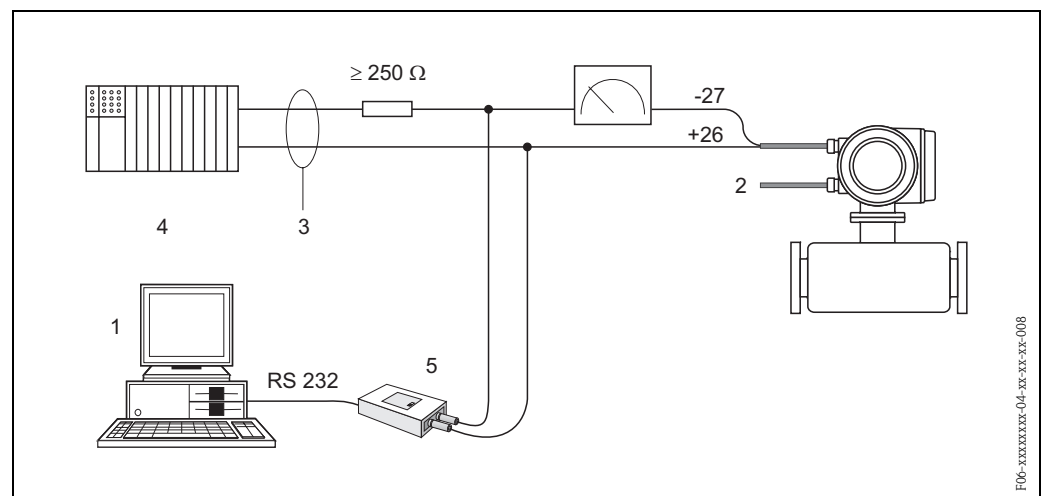


Fig. 13: Electrical connection of a PC with operating software:  
1 = PC with operating software, 2 = power supply, 3 = shield, 4 = other evaluation devices or PLC with passive input, 5 = HART modem, e.g. Commubox FXA 191

## 4.2 Potential equalisation

No special measures for potential equalization are required.



Note!

For instruments for use in hazardous areas, observe the corresponding guidelines in the specific Ex documentation.

## 4.3 Degree of protection

The devices fulfill all the requirements for IP 67. Compliance with the following points is mandatory following installation in the field or servicing, in order to ensure that IP 67 protection is maintained:

- The housing seals must be clean and undamaged when inserted into their grooves. The seals must be dried, cleaned or replaced if necessary.
- All threaded fasteners and screw covers must be firmly tightened.
- The cables used for connection must be of the specified outside diameter (see Page 65).
- Firmly tighten the cable entries (Fig. 14).
- The cables must loop down before they enter the cable entries (“water trap”, Fig. 14). This arrangement prevents moisture from penetrating the entry. Always install the measuring device in such a way that the cable entries do not point up.
- Remove all unused cable entries and insert plugs instead.
- Do not remove the grommet from the cable entry.

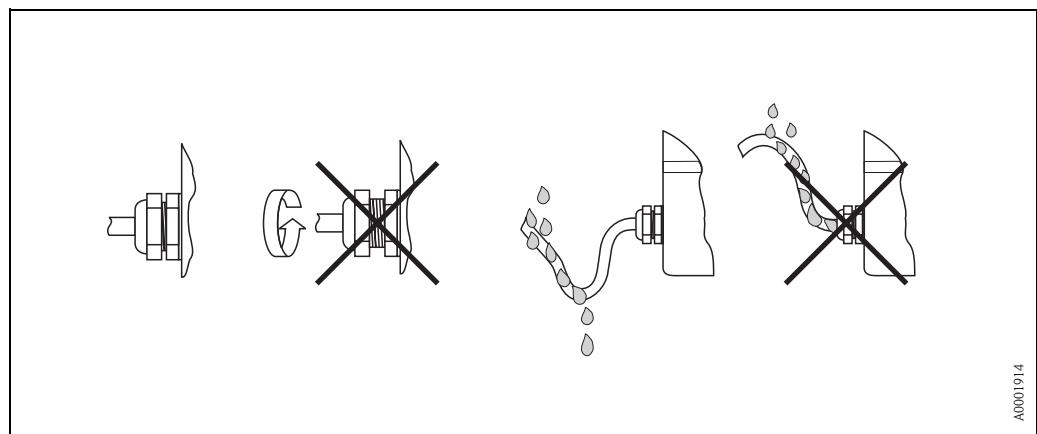


Fig. 14: Installation instructions, cable entries

## 4.4 Post connection check

Perform the following checks after completing electrical installation of the measuring device:

Device condition and specifications	Notes
Are cables or the device damaged (visual inspection)?	–
Electrical connection	Notes
Does the supply voltage match the specifications on the nameplate?	85...260 V AC (45...65 Hz) 20...55 V AC (45...65 Hz) 16...62 V DC
Do the cables have adequate strain relief?	–
Cables correctly segregated by type? Without loops and crossovers?	–
Are the power supply and signal cables correctly connected?	See the wiring diagram inside the cover of the terminal compartment
Are all screw terminals firmly tightened?	–
Are all cable entries installed, firmly tightened and correctly sealed? Cables looped as “water traps”?	see Page 22
Are all housing covers installed and firmly tightened?	–





## 5 Operation

### 5.1 Display element

The local display enables you to read all important parameters directly at the measuring point. The backlit, two-line liquid crystal display shows measured values, dialog texts, fault messages and notice messages. The display as it appears when normal measuring is in progress is known as the HOME position (operating mode).

- Upper display line: shows the primary measured value, mass flow or volume flow.
- Lower display line: shows additional measured variables and status variables, e.g. totalizer reading, bar graph, measuring point designation.

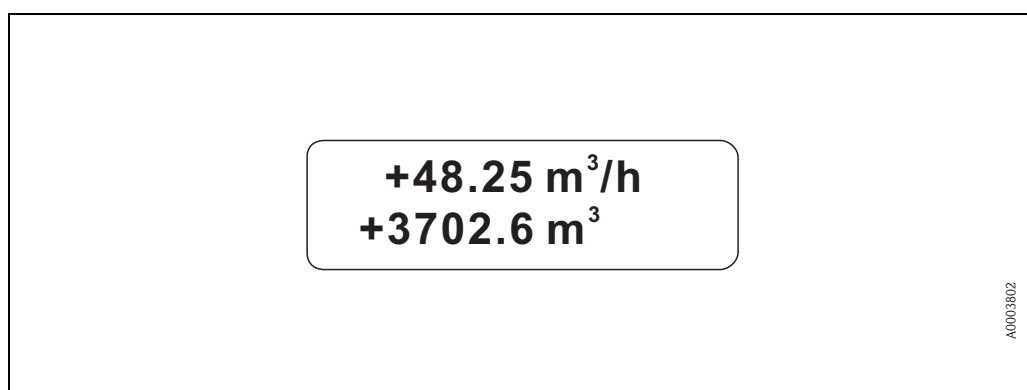


Fig. 15: Display of Promass 40

You can change the assignment of display lines to different variables to suit your needs and preferences by means of the HART interface or using the “ToF Tool – Fieldtool Package” program (→ see “Description of Device Functions” manual).

#### 5.1.1 Configuration of device parameters

The Promass 40 measuring device is parameterized via an operating program. The various operating possibilities are described in more detail on Page 27. Each of the operating programs comprises what is known as a “function matrix”, which contains a large number of configurable functions.



#### Note!

- The transmitter continues to measure while data entry is in progress, i.e. the current measured values are output via the signal outputs in the normal way.
- If the power supply fails all preset and parameterized values remain safely stored in the EEPROM.



#### Caution!

- All functions are described in detail, as is the function matrix itself, in the “**Description of Device Functions**” manual, which is a separate part of this Operating Instruction.
- Changing certain parameters such as all sensor characteristics, for example, influences numerous functions of the entire measuring system, particularly measuring accuracy. There is no need to change these parameters under normal circumstances and consequently, they are protected by a special code known only to the E+H service organization. Please contact Endress+Hauser if you have any questions.

## 5.2 Display of error messages

### Type of error

Errors that occur during commissioning or measuring are displayed immediately. If two or more system or process errors occur, the error with the highest priority is the one shown on the display. The measuring system distinguishes between two types of error:

- *System error*: this group includes all device errors, for example communication errors, hardware errors, etc. → see Page 48
- *Process error*: this group includes all application errors, for example “Fluid inhomogeneous”, etc. → see Page 51

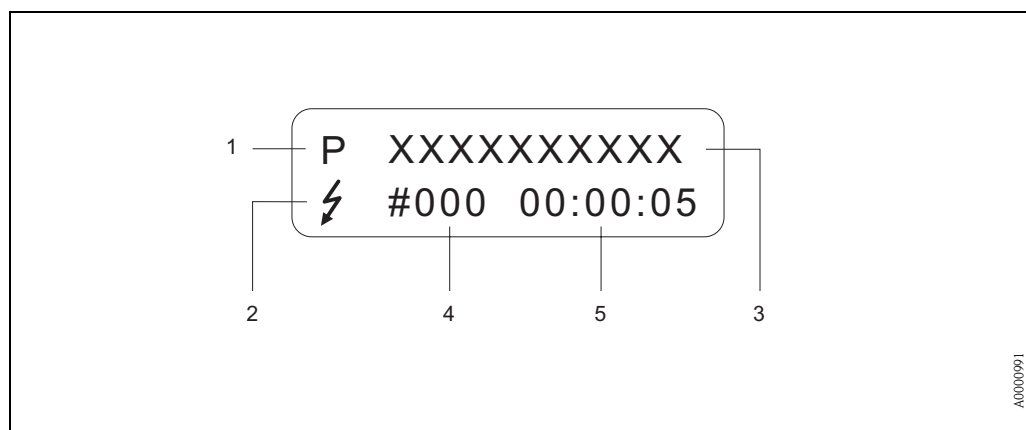


Fig. 16: Error messages on the display (example)

- 1 Error type: P = process error, S = system error
- 2 Error message type: ⚡ = fault message, ! = notice message (definition: see below)
- 3 Error designation: e.g. FLUID INHOM. = fluid is not homogeneous
- 4 Error number: e.g. # 702
- 5 Duration of most recent error occurrence (in hours, minutes and seconds)

### Error message type

Users have the option of weighting system and process errors differently, by defining them as “**Fault messages**” or “**Notice messages**”. You can define messages in this way with the aid of the function matrix (see the “Description of Device Functions” manual).

Serious system errors, e.g. module defects, are always identified and classified as “fault messages” by the measuring device.

#### Notice message (!)

- Displayed as → Exclamation mark (!), error type (S: system error, P: process error).
- The error in question has no effect on the inputs or outputs of the measuring device.

#### Fault message (⚡)

- Displayed as → Lightning flash (⚡), error type (S: system error, P: process error).
- The error in question has a direct effect on the inputs or outputs.  
The response of the inputs or outputs (failsafe mode) can be defined by means of functions in the function matrix (see Page 54).



#### Note!

- For security reasons, error messages should be output via the status output.
- When an error message is present, an upper or lower failure signal level can be output in accordance with NAMUR NE 43 via the current output.

## 5.3 Operating via the HART protocol

In addition to local operation, the measuring device can be configured and measured values can be obtained by means of the HART protocol. Digital communication takes place using the 4–20 mA current output HART (see Page 54).

The HART protocol allows the transfer of measuring and device data between the HART master and the field devices for configuration and diagnostics purposes. The HART master, e.g. a handheld terminal or PC-based operating programs (such as ToF Tool – Fieldtool Package), require device description (DD) files which are used to access all the information in a HART device. Information is exclusively transferred using so-called “commands”. There are three different command groups:

### *Universal commands:*

All HART device support and use universal commands. The following functionalities are linked to them:

- Recognizing HART devices
- Reading digital measured values (mass flow, totalizer, etc.)

### *Common practice commands:*

Common practice commands offer functions which are supported and can be executed by most but not all field devices.

### *Device-specific commands:*

These commands allow access to device-specific functions which are not HART standard. Such commands access individual field device information, amongst other things, such as calibration values, creepage settings, etc.



Note!

Promass 40 has access to all three command classes. On Page 29, you will find a list with all the supported “Universal Commands” and “Common Practice Commands”.

### 5.3.1 Operating options

For the complete operation of the measuring device, including device-specific commands, there are DD files available to the user to provide the following operating aids and programs:



Note!

The HART protocol requires the “4–20 mA setting in the CURRENT SPAN function (individual options see “Description of Device functions” Manual).

### **HART Communicator DXR 375**

Selecting device functions with a HART Communicator is a process involving a number of menu levels and a special HART function matrix. The HART manual in the carrying case of the HART Communicator contains more detailed information on the device.

### **Operating program “ToF Tool – Fieldtool Package”**

Modular software package consisting of the service program “ToF Tool” for configuration and diagnosis of ToF level measuring devices (time-of-flight measurement) and evolution of pressure measuring instruments as well as the “Fieldtool” service program for the configuration and diagnosis of Proline flow measuring devices. The Proline flow measuring devices are accessed via a service interface or via the service interface FXA 193 or the HART protocol.

Contents of the “ToF Tool – Fieldtool Package”:

- Commissioning, maintenance analysis
- Configuring flowmeters
- Service functions
- Visualization of process data
- Trouble-shooting
- Controlling the “Fieldcheck” tester/simulator

**FieldCare**

FieldCare is Endress+Hauser's FDT-based plant Asset Management Tool and allows the configuration and diagnosis of intelligent field devices. By using status information, you also have a simple but effective tool for monitoring devices. The Proline flow measuring devices are accessed via a service interface or via the service interface FXA 193.

**Operating program "SIMATIC PDM" (Siemens)**

SIMATIC PDM is a standardized, manufacturer-independent tool for the operation, configuration, maintenance and diagnosis of intelligent field devices.

**Operating program "AMS" (Emerson Process Management)**

AMS (Asset Management Solutions): program for operating and configuring devices

**5.3.2 Current device description files**

The following table illustrates the suitable device description file for the operating tool in question and then indicates where these can be obtained.

HART protocol:

Valid for device software:	2.00.XX	→ Function "Device software"
Device data HART		
Manufacturer ID:	11 <sub>hex</sub> (ENDRESS+HAUSER)	→ Function "Manufacturer ID"
Device ID:	53 <sub>hex</sub>	→ Function "Device ID"
Device Revision:	6	
Software release:	11.2004	
<b>Operating program:</b>	<b>Sources for obtaining device descriptions:</b>	
Handheld terminal DXR 375	■ Use update function of handheld terminal	
ToF Tool - Fieldtool Package	■ www.tof-fieldtool.endress.com ■ CD-ROM Update (Endress+Hauser order number 50099820)	
FieldCare / DTM	■ www.endress.com (→ Download → Software → Device driver) ■ CD-ROM (Endress+Hauser order number 56004088)	
AMS	■ www.endress.com (→ Download → Software → Device driver)	
SIMATIC PDM	■ www.endress.com (→ Download → Software → Device driver)	

Operation via the service protocol:

<b>Valid for device software:</b>	2.00.XX	→ Function "Device software"
<b>Software release:</b>	11.2004	
<b>Operating program:</b>	<b>Sources for obtaining device descriptions:</b>	
ToF Tool - Fieldtool Package	■ www.tof-fieldtool.endress.com ■ CD-ROM Update (Endress+Hauser order number 50099820)	

<b>Tester/simulator:</b>	<b>Sources for obtaining device descriptions:</b>	
Fieldcheck	■ Update by means of ToF Tool - Fieldtool Package via Fieldflash module	

### 5.3.3 Device and process variables

Device variables:

The following device variables are available using the HART protocol:

Code (decimal)	Device variable
0	OFF (unassigned)
2	Mass flow
5	Volume flow
6	Corrected volume flow
250	Totalizer 1

Process variables:

At the factory, the process variables are assigned to the following device variables:

- Primary process variable (PV) → Mass flow
- Second process variable (SV) → Totalizer 1
- Third process variable (TV) → Volume flow
- Fourth process variable (FV) → Corrected volume flow







Note!





You can set or change the assignment of device variables to process variables using Command 51 (see Page 34).




### 5.3.4 Universal/Common practice HART commands

The following table contains all the universal and common practice commands supported by the device.




Command No. HART command / Access type		Command data (numeric data in decimal form)	Response data (numeric data in decimal form)
<b>Universal Commands</b>			
0	Read unique device identifier  Access type = read	none	<p>Device identification delivers information on the device and the manufacturer. It cannot be changed.</p> <p>The response consists of a 12-byte-device ID:</p> <ul style="list-style-type: none"> <li>– Byte 0: fixed value 254</li> <li>– Byte 1: Manufacturer ID, 17 = E+H</li> <li>– Byte 2: Device type ID, e.g. 83 = Promass 40</li> <li>– Byte 3: Number of preambles</li> <li>– Byte 4: Universal commands rev. no.</li> <li>– Byte 5: Device-specific commands rev. no.</li> <li>– Byte 6: Software revision</li> <li>– Byte 7: Hardware revision</li> <li>– Byte 8: Additional device information</li> <li>– Byte 9-11: Device identification</li> </ul>




Command No. HART command / Access type		Command data (numeric data in decimal form)	Response data (numeric data in decimal form)
1	Read primary process variable  Access type = read	none	<ul style="list-style-type: none"> <li>– Byte 0: HART unit code of the primary process variable</li> <li>– Bytes 1-4: Primary process variable</li> </ul> <p><i>Factory setting:</i> Primary process variable = Mass flow</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ You can set the assignment of device variables to process variables using Command 51.</li> <li>■ Manufacturer specific units are represented using the HART unit code “240”.</li> </ul>
2	Read the primary process variable as current in mA and percentage of the set measuring range  Access type = read	none	<ul style="list-style-type: none"> <li>– Bytes 0-3: Actual current of the primary process variable in mA</li> <li>– Bytes 4-7: Percentage of the set measuring range</li> </ul> <p><i>Factory setting:</i> Primary process variable = Mass flow</p> <p> <b>Note!</b></p> <p>You can set the assignment of device variables to process variables using Command 51.</p>
3	Read the primary process variable as current in mA and four (preset using Command 51) dynamic process variables  Access type = read	none	<p>24 bytes are sent as a response:</p> <ul style="list-style-type: none"> <li>– Bytes 0-3: Primary process variable current in mA</li> <li>– Byte 4: HART unit code of the primary process variable</li> <li>– Bytes 5-8: Primary process variable</li> <li>– Byte 9: HART unit code of the second process variable</li> <li>– Bytes 10-13: Second process variable</li> <li>– Byte 14: HART unit code of the third process variable</li> <li>– Bytes 15-18: Third process variable</li> <li>– Byte 19: HART unit code of the fourth process variable</li> <li>– Bytes 20-23: Fourth process variable</li> </ul> <p><i>Factory setting:</i></p> <ul style="list-style-type: none"> <li>■ Primary process variable = Mass flow</li> <li>■ Second process variable = Totalizer 1</li> <li>■ Third process variable = Volume flow</li> <li>■ Fourth process variable = Corrected volume flow</li> </ul> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ You can set the assignment of device variables to process variables using Command 51.</li> <li>■ Manufacturer specific units are represented using the HART unit code “240”.</li> </ul>
6	Set HART short form address  Access type = write	<p>Byte 0: desired address (0...15) Factory setting: 0</p> <p> <b>Note!</b></p> <p>With an address &gt;0 (multidrop mode), the current output of the primary process variable is set to 4 mA.</p>	Byte 0: active address

Command No. HART command / Access type		Command data (numeric data in decimal form)	Response data (numeric data in decimal form)
11	Read unique device identification using the TAG (measuring point designation)  Access type = read	Bytes 0-5: TAG	Device identification delivers information on the device and the manufacturer. It cannot be changed. The response consists of a 12-byte-device ID if the given TAG agrees with the one saved in the device:  <ul style="list-style-type: none"> <li>– Byte 0: fixed value 254</li> <li>– Byte 1: Manufacturer ID, 17 = E+H</li> <li>– Byte 2: Device type ID, 83 = Promass 40</li> <li>– Byte 3: Number of preambles</li> <li>– Byte 4: Universal commands rev. no.</li> <li>– Byte 5: Device-specific commands rev. no.</li> <li>– Byte 6: Software revision</li> <li>– Byte 7: Hardware revision</li> <li>– Byte 8: Additional device information</li> <li>– Byte 9-11: Device identification</li> </ul>
12	Read user message  Access type = read	none	Bytes 0-24: User message   <b>Note!</b> You can write the user message using Command 17.
13	Read TAG, descriptor and date  Access type = read	none	<ul style="list-style-type: none"> <li>– Bytes 0-5: TAG</li> <li>– Bytes 6-17: Descriptor</li> <li>– Byte 18-20: Date</li> </ul>  <b>Note!</b> You can write the TAG, descriptor and date using Command 18.
14	Read sensor information on primary process variable	none	<ul style="list-style-type: none"> <li>– Bytes 0-2: Sensor serial number</li> <li>– Byte 3: HART unit code of sensor limits and measuring range of the primary process variable</li> <li>– Bytes 4-7: Upper sensor limit</li> <li>– Bytes 8-11: Lower sensor limit</li> <li>– Bytes 12-15: Minimum span</li> </ul>  <b>Note!</b> <ul style="list-style-type: none"> <li>■ The data relate to the primary process variable (= Mass flow).</li> <li>■ Manufacturer specific units are represented using the HART unit code "240".</li> </ul>
15	Read output information of primary process variable  Access type = read	none	<ul style="list-style-type: none"> <li>– Byte 0: Alarm selection ID</li> <li>– Byte 1: Transfer function ID</li> <li>– Byte 2: HART unit code for the set measuring range of the primary process variable</li> <li>– Bytes 3-6: Upper range, value for 20 mA</li> <li>– Bytes 7-10: Start of measuring range, value for 4 mA</li> <li>– Byte 11-14: Attenuation constant in [s]</li> <li>– Byte 15: Write protection ID</li> <li>– Byte 16: OEM dealer ID, 17 = E+H</li> </ul> <i>Factory setting:</i> Primary process variable = Mass flow   <b>Note!</b> <ul style="list-style-type: none"> <li>■ You can set the assignment of device variables to process variables using Command 51.</li> <li>■ Manufacturer specific units are represented using the HART unit code "240".</li> </ul>

Command No. HART command / Access type		Command data (numeric data in decimal form)	Response data (numeric data in decimal form)
16	Read the device production number  Access type = read	none	Bytes 0-2: Production number
17	Write user message  Access = write	You can save any 32-character long text in the device under this parameter:  Bytes 0-23: Desired user message	Displays the current user message in the device:  Bytes 0-23: Current user message in the device
18	Write TAG, descriptor and date  Access = write	With this parameter, you can store an 8 character TAG, a 16 character descriptor and a date:  – Bytes 0-5: TAG – Bytes 6-17: Descriptor – Byte 18-20: Date	Displays the current information in the device:  – Bytes 0-5: TAG – Bytes 6-17: Descriptor – Byte 18-20: Date
<b>Common Practice Commands</b>			
34	Write damping value for primary process variable  Access = write	Bytes 0-3: Damping value of the primary process variable in seconds  <i>Factory setting:</i> Primary process variable = Mass flow	Displays the current damping value in the device:  Bytes 0-3: Damping value in seconds
35	Write measuring range of primary process variable  Access = write	Write the desired measuring range: – Byte 0: HART unit code of the primary process variable – Bytes 1-4: Upper range, value for 20 mA – Bytes 5-8: Start of measuring range, value for 4 mA  <i>Factory setting:</i> Primary process variable = Mass flow   <b>Note!</b> ■ You can set the assignment of device variables to process variables using Command 51. ■ If the HART unit code is not the correct one for the process variable, the device will continue with the last valid unit.	The currently set measuring range is displayed as a response:  – Byte 0: HART unit code for the set measuring range of the primary process variable – Bytes 1-4: Upper range, value for 20 mA – Bytes 5-8: Start of measuring range, value for 4 mA   <b>Note!</b> Manufacturer-specific units are represented using the HART unit code "240".
38	Device status reset (Configuration changed)  Access = write	none	none
40	Simulate output current of primary process variable  Access = write	Simulation of the desired output current of the primary process variable.  An entry value of 0 exits the simulation mode: Byte 0-3: Output current in mA  <i>Factory setting:</i> Primary process variable = Mass flow   <b>Note!</b> You can set the assignment of device variables to process variables with Command 51.	The momentary output current of the primary process variable is displayed as a response:  Byte 0-3: Output current in mA



Command No. HART command / Access type		Command data (numeric data in decimal form)	Response data (numeric data in decimal form)
42	Perform master reset Access = write	none	none
44	Write unit of primary process variable  Access = write	<p>Set unit of primary process variable. Only unit which are suitable for the process variable are transferred to the device:</p> <p>Byte 0: HART unit code</p> <p><i>Factory setting:</i> Primary process variable = Mass flow</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ If the written HART unit code is not the correct one for the process variable, the device will continue with the last valid unit.</li> <li>■ If you change the unit of the primary process variable, this has no impact on the system units.</li> </ul>	<p>The current unit code of the primary process variable is displayed as a response:</p> <p>Byte 0: HART unit code</p> <p> <b>Note!</b> Manufacturer-specific units are represented using the HART unit code "240".</p>
48	Read additional device status  Access = read	none	<p>The device status is displayed in extended form as the response:</p> <p>Coding: see table on Page 35</p>
50	Read assignment of the device variables to the four process variables  Access = read	none	<p>Display of the current variable assignment of the process variables:</p> <ul style="list-style-type: none"> <li>– Byte 0: Device variable code to the primary process variable</li> <li>– Byte 1: Device variable code to the second process variable</li> <li>– Byte 2: Device variable code to the third process variable</li> <li>– Byte 3: Device variable code to the fourth process variable</li> </ul> <p><i>Factory setting:</i></p> <ul style="list-style-type: none"> <li>■ Primary process variable: Code 1 for mass flow</li> <li>■ Second process variable: Code 250 for totalizer 1</li> <li>■ Third process variable: Code 5 for volume flow</li> <li>■ Fourth process variable: Code 6 for corrected volume flow</li> </ul> <p> <b>Note!</b> You can set the assignment of device variables to process variables with Command 51.</p>

Command No. HART command / Access type		Command data (numeric data in decimal form)	Response data (numeric data in decimal form)
51	Write assignments of the device variables to the four process variables  Access = write	<p>Setting of the device variables to the four process variables:</p> <ul style="list-style-type: none"> <li>– Byte 0: Device variable code to the primary process variable</li> <li>– Byte 1: Device variable code to the second process variable</li> <li>– Byte 2: Device variable code to the third process variable</li> <li>– Byte 3: Device variable code to the fourth process variable</li> </ul> <p><i>Code of the supported device variables:</i> See data → Page 29</p> <p><i>Factory setting:</i></p> <ul style="list-style-type: none"> <li>■ Primary process variable = Mass flow</li> <li>■ Second process variable = Totalizer 1</li> <li>■ Third process variable = Volume flow</li> <li>■ Fourth process variable = Corrected volume flow</li> </ul> <p> <b>Note!</b> The totalizer cannot be assigned as the primary process variable.</p>	<p>The variable assignment of the process variables is displayed as a response:</p> <ul style="list-style-type: none"> <li>– Byte 0: Device variable code to the primary process variable</li> <li>– Byte 1: Device variable code to the second process variable</li> <li>– Byte 2: Device variable code to the third process variable</li> <li>– Byte 3: Device variable code to the fourth process variable</li> </ul>
53	Write device variable unit  Access = write	<p>This command sets the unit of the given device variables. Only those units which suit the device variable are transferred:</p> <ul style="list-style-type: none"> <li>– Byte 0: Device variable code</li> <li>– Byte 1: HART unit code</li> </ul> <p><i>Code of the supported device variables:</i> See data → Page 29</p> <p> <b>Note!</b></p> <ul style="list-style-type: none"> <li>■ If the written unit is not the correct one for the device variable, the device will continue with the last valid unit.</li> <li>■ If you change the unit of the device variable, this has no impact on the system units.</li> </ul>	<p>The current unit of the device variables is displayed in the device as a response:</p> <ul style="list-style-type: none"> <li>– Byte 0: Device variable code</li> <li>– Byte 1: HART unit code</li> </ul> <p> <b>Note!</b> Manufacturer-specific units are represented using the HART unit code "240".</p>
59	Write number of preambles in response message  Access = write	<p>This parameter sets the number of preambles which are inserted in the response messages:</p> <p>Byte 0: Number of preambles (2...20)</p>	<p>As a response, the current number of the preambles is displayed in the response message:</p> <p>Byte 0: Number of preambles</p>

### 5.3.5 Device status / Error messages

You can read the extended device status, in this case, current error messages, via Command “48”. The command delivers information which are partly coded in bits (see table below).



Note!

You can find a detailed explanation of the device status and error messages and their elimination in the “System error messages” section → Page 48 ff.

Byte	Bit	Error No.	Short error description ( → Page 48 ff. )
0	0	001	Serious device error
	1	011	Measuring amplifier has faulty EEPROM
	2	012	Error when accessing data of the measuring amplifier EEPROM
	3	not assigned	–
	4	not assigned	–
	5	not assigned	–
	6	not assigned	–
	7	not assigned	–
1	0	not assigned	–
	1	031	S-DAT: defective or missing
	2	032	S-DAT: Error accessing saved values
	3	not assigned	–
	4	not assigned	–
	5	051	I/O board and the amplifier board are not compatible.
	6	not assigned	–
	7	not assigned	–
2	0	not assigned	–
	1	not assigned	–
	2	not assigned	–
	3	not assigned	–
	4	not assigned	–
	5	not assigned	–
	6	not assigned	–
	7	not assigned	–
3	0	not assigned	–
	1	not assigned	–
	2	not assigned	–
	3	111	Totalizer checksum error
	4	121	I/O board and the amplifier board (software versions) are not compatible.
	5	not assigned	–
	6	not assigned	–
	7	not assigned	–

Byte	Bit	Error No.	Short error description ( → Page 48 ff. )
4	0	not assigned	–
	1	not assigned	–
	2	not assigned	–
	3	251	Internal communication fault on the amplifier board.
	4	261	No data reception between amplifier and I/O board
	5	not assigned	–
	6	not assigned	–
	7	not assigned	–
5	0	not assigned	–
	1	not assigned	–
	2	not assigned	–
	3	not assigned	–
	4	not assigned	–
	5	not assigned	–
	6	not assigned	–
	7	not assigned	–
6	0	not assigned	–
	1	not assigned	–
	2	not assigned	–
	3	not assigned	–
	4	not assigned	–
	5	not assigned	–
	6	not assigned	–
	7	not assigned	–
7	0	not assigned	–
	1	not assigned	–
	2	not assigned	–
	3	351	Current output: Flow is out of range.
	4	not assigned	–
	5	not assigned	–
	6	not assigned	–
	7	355	Frequency output: Flow is out of range.
8	0	not assigned	–
	1	not assigned	–
	2	not assigned	–
	3	359	Pulse output: Pulse output frequency is out of range.
	4	not assigned	–
	5	not assigned	–
	6	not assigned	–
	7	not assigned	–

Byte	Bit	Error No.	Short error description ( → Page 48 ff. )
9	0	379	The measuring tube oscillation frequency is outside the permitted range.
	1	380	
	2	381	The temperature sensor on the measuring tube is likely defective.
	3	382	
	4	not assigned	–
	5	not assigned	–
	6	385	One of the measuring tube exciter coils (inlet) is likely defective.
	7	386	One of the measuring tube exciter coils (outlet) is likely defective.
10	0	387	One of the measuring tube exciter coils (inlet or outlet) is likely defective.
	1	388	
	2	389	Amplifier error
	3	390	
	4	not assigned	–
	5	not assigned	–
	6	not assigned	–
	7	not assigned	–
11	0	not assigned	–
	1	not assigned	–
	2	not assigned	–
	3	not assigned	–
	4	not assigned	–
	5	not assigned	–
	6	not assigned	–
	7	not assigned	–
12	0	not assigned	–
	1	not assigned	–
	2	not assigned	–
	3	not assigned	–
	4	not assigned	–
	5	not assigned	–
	6	not assigned	–
	7	501	New amplifier software version is loaded. Currently no other commands are possible.

Byte	Bit	Error No.	Short error description ( → Page 48 ff. )
13	0	502	Upload and download of device files. Currently no other commands are possible.
	1	not assigned	–
	2	not assigned	–
	3	not assigned	–
	4	not assigned	–
	5	586	The fluid properties do not allow normal measuring operation.
	6	587	Extreme process conditions exist. The measuring system can therefore not be started.
	7	588	Overdriving of the internal analog to digital converter. A continuation of the measurement is no longer possible!
14	0	not assigned	–
	1	not assigned	–
	2	not assigned	–
	3	601	Positive zero return active
	4	not assigned	–
	5	not assigned	–
	6	not assigned	–
	7	611	Simulation current output active
15	0	not assigned	–
	1	not assigned	–
	2	not assigned	–
	3	621	Simulation frequency output active
	4	not assigned	–
	5	not assigned	–
	6	not assigned	–
	7	631	Simulation pulse output active
16	0	not assigned	–
	1	not assigned	–
	2	not assigned	–
	3	641	Simulation status output active
	4	not assigned	–
	5	not assigned	–
	6	not assigned	–
	7	not assigned	–

Byte	Bit	Error No.	Short error description ( → Page 48 ff. )
17	0	not assigned	–
	1	not assigned	–
	2	not assigned	–
	3	not assigned	–
	4	not assigned	–
	5	not assigned	–
	6	not assigned	–
	7	671	Simulation status input active
18	0	not assigned	–
	1	not assigned	–
	2	not assigned	–
	3	691	Simulation of response to error (outputs) active
	4	692	Simulation of measured variable active
	5	not assigned	–
	6	not assigned	–
	7	not assigned	–
19	0	700	The process fluid density is outside the upper or lower limit values
	1	701	The maximum current value for the measuring tube exciter coils has been reached, since certain process fluid characteristics are extreme.
	2	702	Frequency control is not stable, due to inhomogeneous fluid.
	3	703	Overdriving of the internal analog to digital converter. A continuation of the measurement is still possible!
	4	704	
	5	705	The electronics' measuring range will be exceeded. The mass flow is too high.
	6	not assigned	–
	7	not assigned	–
20	0	not assigned	–
	1	not assigned	–
	2	not assigned	–
	3	not assigned	–
	4	not assigned	–
	5	731	The zero point adjustment is not possible or has been cancelled.
	6	not assigned	–
	7	not assigned	–





## 6 Commissioning

### 6.1 Function check

Make sure that all final checks have been completed before you start up your measuring point:


- Checklist for “Post installation check” → Page 17
- Checklist for “Post connection check” → Page 23

### 6.2 Commissioning

#### 6.2.1 Switching on the measuring device

Once the function checks have been successfully completed, it is time to switch on the power supply. The device is now operational.

The measuring device performs a number of power on self-tests. As this procedure progresses the following sequence of messages appears on the local display:

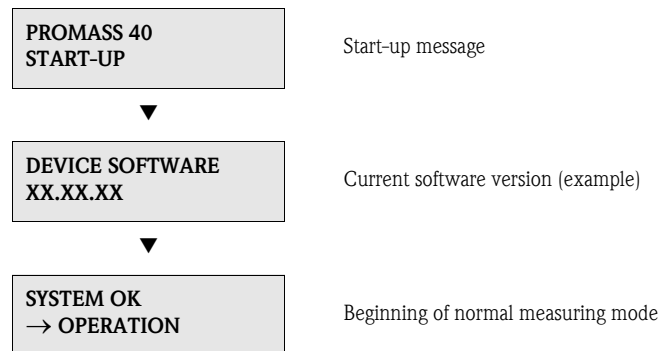

Normal measuring mode commences as soon as start-up completes. Various measured value and/or status variables appear on the display (HOME position).



Note!

If start-up fails, an error message indicating the cause is displayed.

#### 6.2.2 Zero point adjustment

The Promass 40 E is calibrated with state-of-the-art technology. The zero point obtained in this way is printed on the nameplate. Calibration takes place under reference operating conditions (see Page 66). Consequently, zero point adjustment is generally **not** necessary.

Experience shows that the zero point adjustment is advisable only in special cases:

- with very small flow rates
- under extreme process or operating conditions (e.g. very high process pressures or very high viscosity fluids).

#### Preconditions for a zero point adjustment

Note the following before you perform a zero point adjustment:

- A zero point adjustment can be performed only with fluids that contain no gas or solid contents.
- A zero point adjustment is performed with the measuring tubes completely filled and at zero flow ( $v = 0$  m/s). This can be achieved, for example, with shut-off valves upstream and/or downstream of the sensor or by using existing valves and gates (Fig. 17):
  - Normal operation → valves 1 and 2 open
  - Zero point adjustment *with* pump pressure → valve 1 open / valve 2 closed
  - Zero point adjustment *without* pump pressure → valve 1 closed / valve 2 open



- Caution!
- If the fluid is very difficult to measure (e.g. containing entrained solids or gas) it may prove impossible to obtain a stable zero point despite repeated zero point adjustments. In instances of this nature, please contact your E+H service center.
  - You can view the currently valid zero point value using the “ZERO POINT” function (see the “Description of Device Functions” manual).

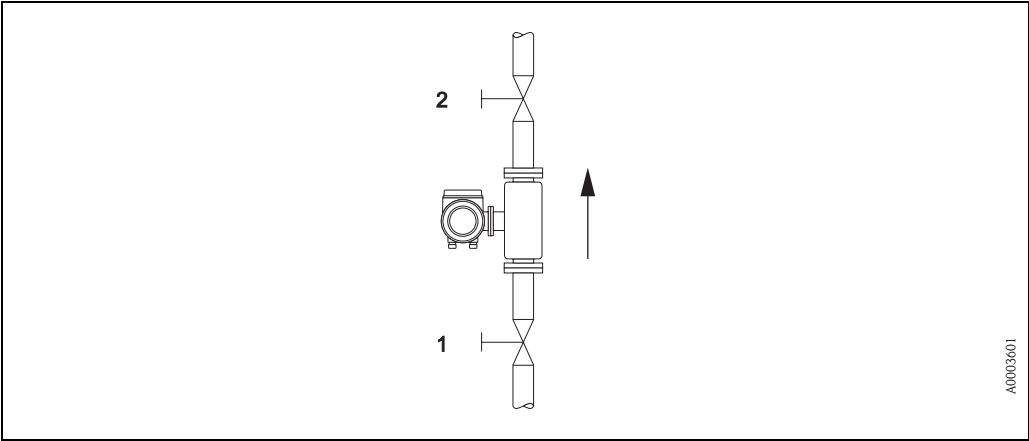


Fig. 17: Zero point adjustment and shut-off valves (1, 2)

Performing a zero point adjustment

1. Operate the system until operating conditions have settled.
2. Stop the flow ( $v = 0 \text{ m/s}$ ).
3. Check the shut-off valves for leaks.
4. Check that operating pressure is correct.
5. Via the function matrix, a zero point adjustment can be performed as follows:

Procedure
HOME position → Enter the function matrix
Select the “PROCESS PARAMETER” function group
Select the “ZERO ADJUST.” function
Select “START”
Zero adjustment now starts. While zero adjustment is in progress, the “Zero adjustment running” message is visible for 30...60 seconds.
If the flow of fluid in the pipe exceeds 0.1 m/s, an error message appears on the display: “A: ZERO ADJUST NOT POSSIBLE”

### 6.2.3 Density adjustment

Accuracy in measuring fluid density (which is proportional to the resonance of the measuring tubes) has a direct effect on calculating volume flow. Density adjustment is not necessary unless the properties of the fluid are outside the reference operating conditions used at calibration.

#### Performing a density adjustment



Caution!

- On-site density adjustment can be performed only if the user has detailed knowledge of the fluid density, obtained for example from detailed laboratory analyses.
- The target density value specified in this way must not deviate from the fluid density measured in the device by more than  $\pm 10\%$ .
- An error in defining the target density affects all calculated volume functions.
- Density adjustment changes the factory density calibration values or the calibration values set by the service technician.

The functions outlined in the instructions below are described in detail in the “Description of Device Functions” manual.

1. Fill the sensor with fluid. Make sure that the measuring tubes are completely filled and that liquids are free of gas bubbles.
2. Wait until the temperature difference between fluid and measuring tube has equalized. The time you have to wait for equalization depends on the fluid and the temperature level.
3. Select the density adjustment function within the function matrix:  
PROCESSPARAMETER → DENSITY SET VALUE  
Enter the fluid's target density and save this value.  
Input range = actual density value  $\pm 10\%$
4. Select the “MEASURE FLUID” function.  
Select the “START” setting. A “MEASURING DENSITY” message appears for approx. 10 seconds on the display. During this time the current density of the fluid (measured density value) is measured.
5. Select the “DENSITY ADJUST” function.  
Select the “DENSITY ADJUST” setting. Promass compares the measured density value with the target density value and calculates the new density coefficient.



Caution!

If density adjustment does not complete correctly, you can select the “RESTORE ORIGINAL” function to reactivate the default density coefficient.

### 6.2.4 Current output: active/passive

The current output is configured as “active” or “passive” by means of various jumpers on the I/O board.



**Warning!**

Risk of electric shock. Exposed components carry dangerous voltages. Make sure that the power supply is switched off before you remove the cover of the electronics compartment.

1. Switch off power supply.
2. Remove the I/O board → see Page 57 ff.
3. Set the jumpers in accordance with Fig. 18.



**Caution!**

Risk of destroying the measuring device. Set the jumpers exactly as shown in Fig. 18. Incorrectly set jumpers can cause overcurrents that would destroy either the measuring device or external devices connected to it.

4. Installation of the I/O board is the reverse of the removal procedure.

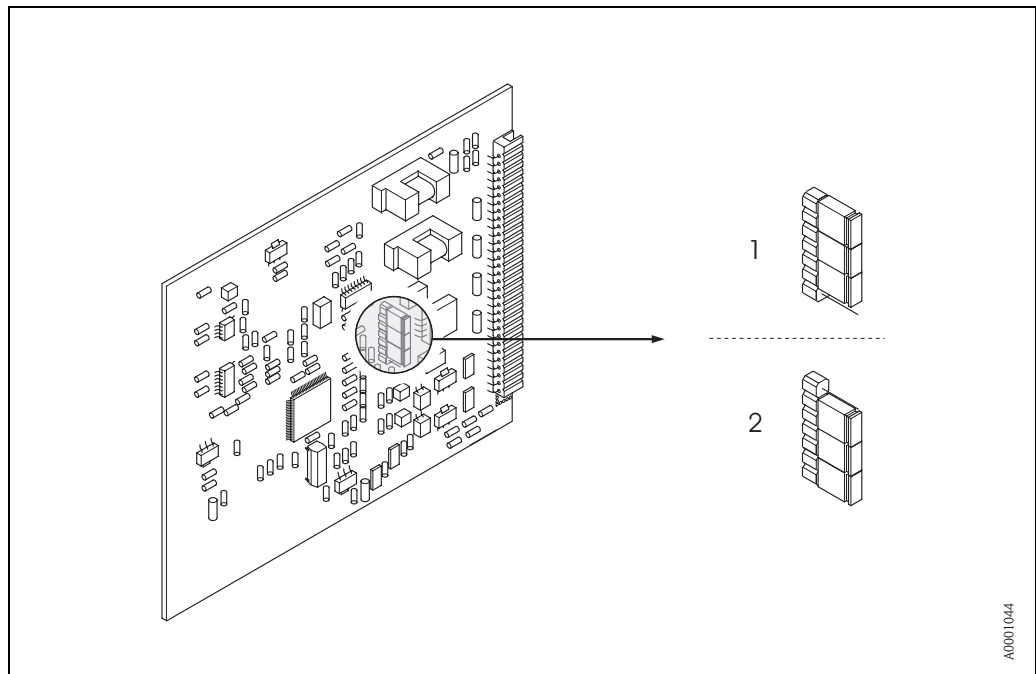


Fig. 18: Configuring the current output (I/O board)

- 1 Active current output (default)
- 2 Passive current output

## 7 Maintenance

The Promass 40 flow measuring system requires no special maintenance.

### Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing and the seals.

## 8 Accessories

Various accessories, which can be ordered separately from Endress+Hauser, are available for the transmitter and the sensor. The E+H service organization can provide detailed information on the order codes of your choice.

Accessory	Description	Ordering code
Transmitter Promass 40	Transmitter for replacement or for stock. Use the order code to define the following specifications: <ul style="list-style-type: none"> <li>– Approvals</li> <li>– Degree of protection / version</li> <li>– Cable entries</li> <li>– Display / power supply / operation</li> <li>– Software</li> <li>– Outputs / inputs</li> </ul>	40XXX – XXXXX * * * * *
HART Communicator DXR 375 handheld terminal	Handheld terminal for remote parameterization and for obtaining measured values via the current output HART (4...20 mA).  Contact your E+H representative for more information.	DXR375 – * * * * *
Applicator	Software for selecting and configuring flowmeters. Applicator can be downloaded from the Internet or ordered on CD-ROM for installation on a local PC.  Contact your E+H representative for more information.	DKA40 – *
ToF Tool-Fieldtool Package	Configuration and service software for flowmeters in the field: <ul style="list-style-type: none"> <li>– Commissioning, maintenance analysis</li> <li>– Configuring flowmeters</li> <li>– Service functions</li> <li>– Visualization of process data</li> <li>– Trouble-shooting</li> <li>– Controlling the “Fieldcheck” tester/simulator</li> </ul> Contact your E+H representative for more information.	DXS10 – * * * * *
Fieldcheck	Tester/simulator for testing flowmeters in the field.  When used in conjunction with the “ToF Tool – Fieldtool Package” software package, test results can be imported into a database, printed and used for official certification.  Contact your E+H representative for more information.	DXC10 – * *





## 9 Trouble-shooting

### 9.1 Trouble-shooting instructions

Always start trouble-shooting with the checklists below, if faults occur after start-up or during operation. The routine takes you directly to the cause of the problem and the appropriate remedial measures.

Check the display	
No display visible and no output signals present.	<ol style="list-style-type: none"> <li>1. Check the power supply → terminals 1, 2</li> <li>2. Check the power line fuse → Page 59 85...260 V AC: 0.8 A slow-blow / 250 V 20...55 V AC and 16...62 V DC: 2 A slow-blow / 250 V</li> <li>3. Measuring electronics defective → order spare parts → Page 56</li> </ol>
No display visible, but output signals are present.	<ol style="list-style-type: none"> <li>1. Check whether the ribbon cable connector of the display module is correctly plugged into the amplifier board → Page 58</li> <li>2. Display module defective → order spare parts → Page 56</li> <li>3. Measuring electronics defective → order spare parts → Page 56</li> </ol>
Measured value indicated, but no signal at the current or pulse output	Measuring electronics defective → order spare parts → Page 56

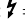

Error messages on display	
<p>Errors which occur during commissioning or measuring operation are displayed immediately. Error messages consist of a variety of icons. The meanings of these icons are as follows:</p> <ul style="list-style-type: none"> <li>– Error type: <b>S</b> = system error, <b>P</b> = process error</li> <li>– Error message type:  = fault message, <b>!</b> = notice message</li> <li>– <b>MEDIUM INHOM.</b> = error designation, e.g. fluid is not homogeneous</li> <li>– <b>03:00:05</b> = duration of error occurrence (in hours, minutes and seconds)</li> <li>– <b># 702</b> = error number</li> </ul> <p> <b>Caution!</b></p> <ul style="list-style-type: none"> <li>■ Also observe the information on Page 26 ff.!</li> <li>■ The measuring system interprets simulations and positive zero return as system errors, but displays them as notice messages only.</li> </ul>	
Error number: No. 001 – 400 No. 601 – 699	System error (device error) has occurred → Page 48
Error number: No. 500 – 600 No. 700 – 750	Process error (application error) has occurred → Page 51



Other error (without error message)	
Some other error has occurred.	Diagnosis and rectification → Page 53

## 9.2 System error messages

Serious system errors are **always** recognized by the instrument as “Fault message”, and are shown as a lightning flash (⚡) on the display! Fault messages immediately affect the inputs and outputs. Simulations and positive zero return, on the other hand, are classed and displayed as “Notice messages”.




### Caution!

In the event of a serious fault, a flowmeter might have to be returned to the manufacturer for repair. The procedures on Page 6 must be carried out before you return a flowmeter to Endress+Hauser. Always enclose a duly completed “Declaration of contamination” form. You will find a preprinted form at the back of this manual.





### Note!

- The listed error message types below correspond to the factory setting.
- Also observe the informations on → Page 26 ff. and 54.

Type	Error message / No.	Cause	Remedy / spare part
S = System error ⚡ = Fault message (with an effect on the outputs) ! = Notice message (without an effect on the outputs)			
S ⚡	CRITICAL FAILURE # 001	Serious device error	Replace the amplifier board. Spare parts → Page 56
S ⚡	AMP HW EEPROM # 011	Amplifier: Defective EEPROM	Replace the amplifier board. Spare parts → Page 56
S ⚡	AMP SW EEPROM # 012	Amplifier: Error accessing EEPROM data	The EEPROM data blocks in which an error has occurred are displayed in the “RESTORE DATA FAILURE” function. Press Enter to acknowledge the errors in question; default values are automatically inserted instead of the errored parameter values.   <b>Note!</b> The measuring device has to be restarted if an error has occurred.
S ⚡	SENSOR HW DAT # 031	Sensor: 1. S-DAT is defective. 2. S-DAT is not plugged into the amplifier board or is missing.	1. Replace the S-DAT. Spare parts → Page 56 Check the spare part set number to ensure that the new, replacement DAT is compatible with the measuring electronics. 2. Plug the S-DAT into the amplifier board → Page 58
S ⚡	SENSOR SW DAT # 032	Sensor: Error accessing the calibration values stored in the S-DAT.	1. Check whether the S-DAT is correctly plugged into the amplifier board → Page 58 2. Replace the S-DAT if it is defective. Spare parts → Page 56 Before replacing the S-DAT, check that the new, replacement S-DAT is compatible with the measuring electronics. Check the: – Spare part set number – Hardware revision code 3. Replace measuring electronics boards if necessary. Spare parts → Page 56



Type	Error message / No.	Cause	Remedy / spare part
S ⚡	A / C COMPATIB. # 051	The I/O board and the amplifier board are not compatible.	Use only compatible modules and boards. Check the compatibility of the modules used. Check the: – Spare part set number – Hardware revision code
S ⚡	CHECKSUM TOTAL # 111	Totalizer checksum error	1. Restart the measuring device 2. Replace the amplifier board if necessary. Spare parts → Page 56
S !	A / C COMPATIB. # 121	Due to different software versions, I/O board and amplifier board are only partially compatible (possibly restricted functionality).   Note! – This message is only listed in the error history. – Nothing is displayed on the display.	Module with lower software version has either to be actualized by ToF Tool – Fieldtool Package with the required software version or the module has to be replaced. Spare parts → Page 56
S ⚡	COMMUNICATION I/O # 251	Internal communication fault on the amplifier board.	Remove the amplifier board. Spare parts → Page 56
S ⚡	COMMUNICATION I/O # 261	No data reception between amplifier and I/O board or faulty internal data transfer.	Check the BUS contacts
S !	CURRENT RANGE # 351	Current output: Flow is out of range.	1. Change the upper or lower limit setting, as applicable. 2. Increase or reduce flow, as applicable.
S !	FREQUENCY RANGE # 355	Frequency output: Flow is out of range.	1. Change the upper or lower limit setting, as applicable. 2. Increase or reduce flow, as applicable.
S !	PULSE RANGE # 359	Pulse output: Pulse output frequency is out of range.	1. Increase the setting for pulse weighting 2. Increase the max. pulse frequency, if the totalizer can handle a higher number of pulses. 3. Reduce flow.
S ⚡	FREQ. LIM # 379 / 380	The measuring tube oscillation frequency is outside the permitted range.  Causes: – Damaged measuring tube – Sensor defective or damaged	Contact your E+H service organization.
S ⚡	FLUIDTEMP. LIM # 381 / 382	The temperature sensor on the measuring tube is likely defective.	Check the following electrical connections before you contact your E+H service organization: – Verify that the sensor signal cable connector is correctly plugged into the amplifier board → Page 58.
S ⚡	INL.SENS.DEF. # 385	One of the measuring tube exciter coils (inlet) is likely defective.	Check the following electrical connections before you contact your E+H service organization: – Verify that the sensor signal cable connector is correctly plugged into the amplifier board → Page 58.

Type	Error message / No.	Cause	Remedy / spare part
S ⚡	OUTL.SENS.DEF. # 386	One of the measuring tube exciter coils (outlet) is likely defective.	Check the following electrical connections before you contact your E+H service organization: – Verify that the sensor signal cable connector is correctly plugged into the amplifier board → Page 58.
S ⚡	SEN.ASY.EXCEED # 387	Measuring pipe excitation coil is probably faulty.	Check the following electrical connections before you contact your E+H service organization: – Verify that the sensor signal cable connector is correctly plugged into the amplifier board → Page 58.
S ⚡	AMP. FAULT # 388 / 389 / 390	Amplifier error	Contact your E+H service organization.
S !	S: SW.-UPDATE ACT. # 501	New amplifier or communication (I/O module) software version is loaded. Currently no other functions are possible.	Wait until process is finished. The device will restart automatically.
S !	S: UP-/DOWNLOAD ACT. # 502	Up- or downloading the device data via configuration program. Currently no other functions are possible.	Wait until process is finished.
S !	POS. ZERO-RET. # 601	Positive zero return active.   Caution! This message has the highest display priority.	Switch off positive zero return
S !	SIM. CURR. OUT. # 611	Simulation current output active	Switch off simulation
S !	SIM. FREQ. OUT # 621	Simulation frequency output active	Switch off simulation
S !	SIM. PULSE # 631	Simulation pulse output active	Switch off simulation
S !	SIM. STAT. OUT. # 641	Simulation status output active	Switch off simulation
S !	SIM. STAT. IN # 671	Simulation status input active	Switch off simulation
S !	SIM. FAILSAFE # 691	Simulation of response to error (outputs) active	Switch off simulation
S !	SIM. MEASURAND # 692	Simulation of measuring variables (e.g. mass flow)	Switch off simulation

### 9.3 Process error messages

Process errors can be defined as either “Fault” or “Notice” messages and can thereby be weighted differently. Determination of this is done via the function matrix (see the “Description of Device Functions” Manual).



Note!

- The error types listed in the following correspond to the factory settings.
- Also observe the information on → Page 26 ff. and 54

Type	Error message / No.	Cause	Remedy
P = Process error ⚡ = Fault message (with an effect on the outputs) ! = Notice message (without an effect on the outputs)			
P ⚡	OSC. AMP. LIMIT # 586	The fluid properties do not allow a continuation of the measurement.  Causes: <ul style="list-style-type: none"> <li>– Extremely high viscosity</li> <li>– Process fluid is very inhomogeneous (gas or solid content)</li> </ul>	Change or improve process conditions.
P ⚡	TUBE NOT OSC # 587	Extreme process conditions exist. The measuring system can therefore not be started.	Change or improve process conditions.
P ⚡	NOISE LIMIT # 588	Overdriving of the internal analog to digital converter.  Causes: <ul style="list-style-type: none"> <li>– Cavitation</li> <li>– Extreme pressure pulses</li> <li>– High gas flow velocity</li> </ul> A continuation of the measurement is no longer possible!	Change or improve process conditions, e.g. by reducing the flow velocity.
P !	EMPTY PIPE # 700	The process fluid density is below the lower limit value set in the “EPD” function.  Causes: <ul style="list-style-type: none"> <li>– Air in the measuring tube</li> <li>– Partly filled measuring tube</li> </ul>	1. Ensure that there is no gas content in the process liquid. 2. Adapt the values in the “EPD RESPONSE TIME” function to the current process conditions.
P !	EXC. CURR. LIM # 701	The maximum current value for the measuring tube exciter coils has been reached, since certain process fluid characteristics are extreme, e.g. high gas or solid content.  The instrument continues to work correctly.	In particular with outgassing fluids and/or increased gas content, the following measures are recommended to increase system pressure: <ol style="list-style-type: none"> <li>1. Install the device at the outlet side of a pump.</li> <li>2. Install the device at the lowest point of an ascending pipeline.</li> <li>3. Install a flow restriction, e.g. reducer or orifice, downstream from the instrument.</li> </ol>

Type	Error message / No.	Cause	Remedy
<b>P</b> <b>!</b>	FLUID INHOM. <b># 702</b>	Frequency control is not stable, due to inhomogeneous process fluid, e.g. entrained gas or solid content.	In particular with outgassing fluids and/or entrained gas content, the following measures are recommended to increase system pressure: 1. Install the device at the outlet side of a pump. 2. Install the device at the lowest point of an ascending pipeline. 3. Install a flow restriction, e.g. reducer or orifice, downstream from the instrument.
<b>P</b> <b>!</b>	NOISE LIMIT <b># 703 / 704</b>	Overdriving of the internal analog to digital converter.  Causes: – Cavitation – Extreme pressure pulses – High gas flow velocity  A continuation of the measurement is still possible!	Change or improve process conditions, e.g. by reducing the flow velocity.
<b>P</b> <b>⚡</b>	FLOW LIMIT <b># 705</b>	The mass flow is too high. The electronics' measuring range will be exceeded.	Reduce flow
<b>P</b> <b>!</b>	ADJ. ZERO FAIL <b># 731</b>	The zero point adjustment is not possible or has been cancelled	Make sure that zero point adjustment is carried out at "zero flow" only (v = 0 m/s) → Page 41

## 9.4 Process errors without messages

Symptoms	Rectification
<p>Remark: You may have to change or correct certain settings of the function matrix in order to rectify faults. The functions outlined below, such as DISPLAY DAMPING, for example, are described in detail in the "Description of Device Functions" manual.</p>	
Measured value reading fluctuates even though flow is steady.	<ol style="list-style-type: none"> <li>1. Check liquids for the presence of gas bubbles.</li> <li>2. In the "TIME CONSTANT" function (CURRENT OUTPUT) → increase value</li> <li>3. In the "DISPLAY DAMPING" function (USER INTERFACE) → increase the value</li> </ol>
Measured value reading shown on display, even though the fluid is at a standstill and the measuring tube is full.	<ol style="list-style-type: none"> <li>1. Check liquids for the presence of gas bubbles.</li> <li>2. Activate the "LOW FLOW CUTOFF" function (PROCESS PARAMETER), i.e. enter or increase the value for the switching point.</li> </ol>
<p>The fault cannot be rectified or some other fault not described above has occurred. In these instances, please contact your E+H service organization.</p>	<p>The following options are available for tackling problems of this nature:</p> <p><b>Request the services of an E+H service technician</b> If you contact our service organization to have a service technician sent out, please be ready with the following information:</p> <ul style="list-style-type: none"> <li>– Brief description of the fault</li> <li>– Nameplate specifications (Page 7 ff.): Order code and serial number</li> </ul> <p><b>Returning devices to E+H</b> The procedures on Page 6 must be carried out before you return a flowmeter requiring repair or calibration to Endress+Hauser. Always enclose a duly completed "Declaration of contamination" form with the flowmeter. You will find a preprinted form at the back of this manual.</p> <p><b>Replace transmitter electronics</b> Components in the measuring electronics defective → order replacement → Page 56</p>

## 9.5 Response of outputs to errors




Note!

The failsafe mode of totalizers, current, pulse and frequency outputs can be customized by means of various functions in the function matrix. You will find detailed information on these procedures in the “Description of Device Functions” manual.

*Positive zero return and failsafe mode:*

You can use positive zero return to set the signals of the current, pulse and frequency outputs to their fallback value, for example when measuring has to be interrupted while a pipe is being cleaned. This function takes priority over all other device functions. Simulations, for example, are suppressed.

Failsafe mode of outputs and totalizers		
	Process/system error is present	Positive zero return is activated
 <b>Caution!</b> System or process errors defined as “Notice messages” have no effect whatsoever on the inputs and outputs. See the information on → Page 26 ff.		
Current output	<p><b>MINIMUM CURRENT</b>  The current output will be set to the lower value of the signal on alarm level depending on the setting selected in the CURRENT SPAN function (see the “Description of Device Functions” manual).</p> <p><b>MAXIMUM CURRENT</b>  The current output will be set to the higher value of the signal on alarm level depending on the setting selected in the CURRENT SPAN function (see the “Description of Device Functions” manual).</p> <p><b>HOLD VALUE</b>  Measured value display on the basis of the last saved value preceding occurrence of the fault.</p> <p><b>ACTUAL VALUE</b>  Measured value display on the basis of the current flow measurement. The fault is ignored.</p>	Output signal corresponds to “zero flow”
Pulse output	<p><b>FALLBACK VALUE</b>  Signal output → no pulses</p> <p><b>HOLD VALUE</b>  Last valid value (preceding occurrence of the fault) is output.</p> <p><b>ACTUAL VALUE</b>  Fault is ignored, i.e. normal measured value output on the basis of ongoing flow measurement.</p>	Output signal corresponds to “zero flow”

Failsafe mode of outputs and totalizers		
	Process/system error is present	Positive zero return is activated
Frequency output	<p><i>FALLBACK VALUE</i> Signal output → 0 Hz</p> <p><i>FAILSAFE LEVEL</i> Output of the frequency specified in the FAILSAFE VALUE function.</p> <p><i>HOLD VALUE</i> Last valid value (preceding occurrence of the fault) is output.</p> <p><i>ACTUAL VALUE</i> Fault is ignored, i.e. normal measured value output on the basis of ongoing flow measurement.</p>	Output signal corresponds to “zero flow”
Totalizer	<p><i>STOP</i> The totalizers are paused until the error is rectified.</p> <p><i>ACTUAL VALUE</i> The fault is ignored. The totalizers continue to count in accordance with the current flow value.</p> <p><i>HOLD VALUE</i> The totalizers continue to count the flow in accordance with the last valid flow value (before the error occurred).</p>	Totalizer stops
Status output	In the event of a fault or power supply failure: Status → non-conductive	No effect on the status output

## 9.6 Spare parts

Chapter 9.1 contains a detailed trouble-shooting guide. The measuring device, moreover, provides additional support in the form of continuous self-diagnosis and error messages.

Fault rectification can entail replacing defective components with tested spare parts. The illustration below shows the available scope of spare parts.



**Note!**

You can order spare parts directly from your E+H service organization by providing the serial number printed on the transmitter's nameplate (see Page 7).

Spare parts are shipped as sets comprising the following parts:

- Spare part
- Additional parts, small items (threaded fasteners, etc.)
- Mounting instructions
- Packaging

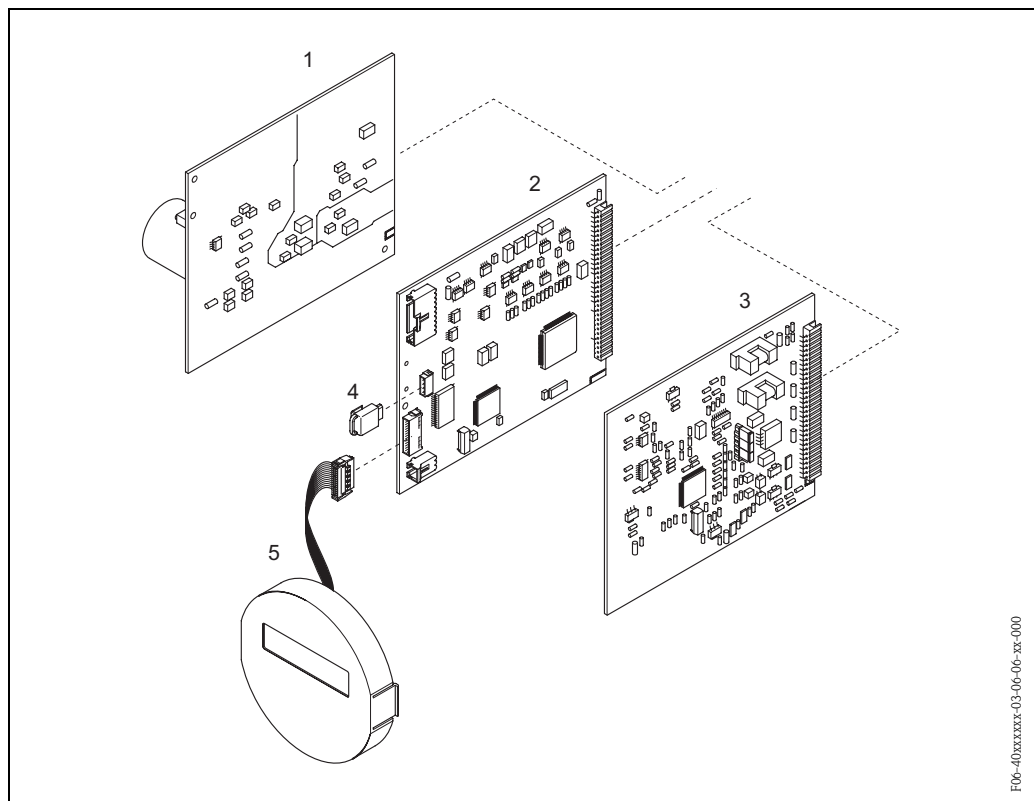


Fig. 19: Spare parts for Promass 40 transmitter

- 1 Power unit board (85...260 V AC, 20...55 V AC, 16...62 V DC)
- 2 Amplifier board
- 3 COM module (I/O board)
- 4 S-DAT (sensor data memory)
- 5 Display module



## 9.7 Removing and installing printed circuit boards



### Warning!

- Risk of electric shock. Exposed components carry dangerous voltages. Make sure that the power supply is switched off before you remove the cover of the electronics compartment.
- Risk of damaging electronic components (ESD protection). Static electricity can damage electronic components or impair their operability. Use a workplace with a grounded working surface purposely built for electrostatically sensitive devices!
- If you cannot guarantee that the dielectric strength of the device is maintained in the following steps, then an appropriate inspection must be carried out in accordance with the manufacturer's specifications.

1. Unscrew cover of the electronics compartment from the transmitter housing (see Fig. 20).
2. Remove the local display (1) as follows:
  - Press in the latches (1.1) at the side and remove the display module.
  - Disconnect the ribbon cable (1.2) of the display module from the amplifier board.
3. Remove the screws and remove the cover (3) from the electronics compartment.
4. Remove power unit board and I/O board (4, 6):  
Insert a thin pin into the hole (3) provided for the purpose and pull the board clear of its holder.
5. Remove amplifier board (5):
  - Disconnect the plug of the sensor signal cable (5.1) including S-DAT (5.3) from the board.
  - Loosen the plug of the excitation current cable (5.2) and gently disconnect the plug from the board, i.e. without moving it back and forth.
  - Insert a thin pin into the hole (3) provided for the purpose and pull the board clear of its holder.
6. Installation is the reverse of the removal procedure.



### Caution!

Use only original Endress+Hauser parts.

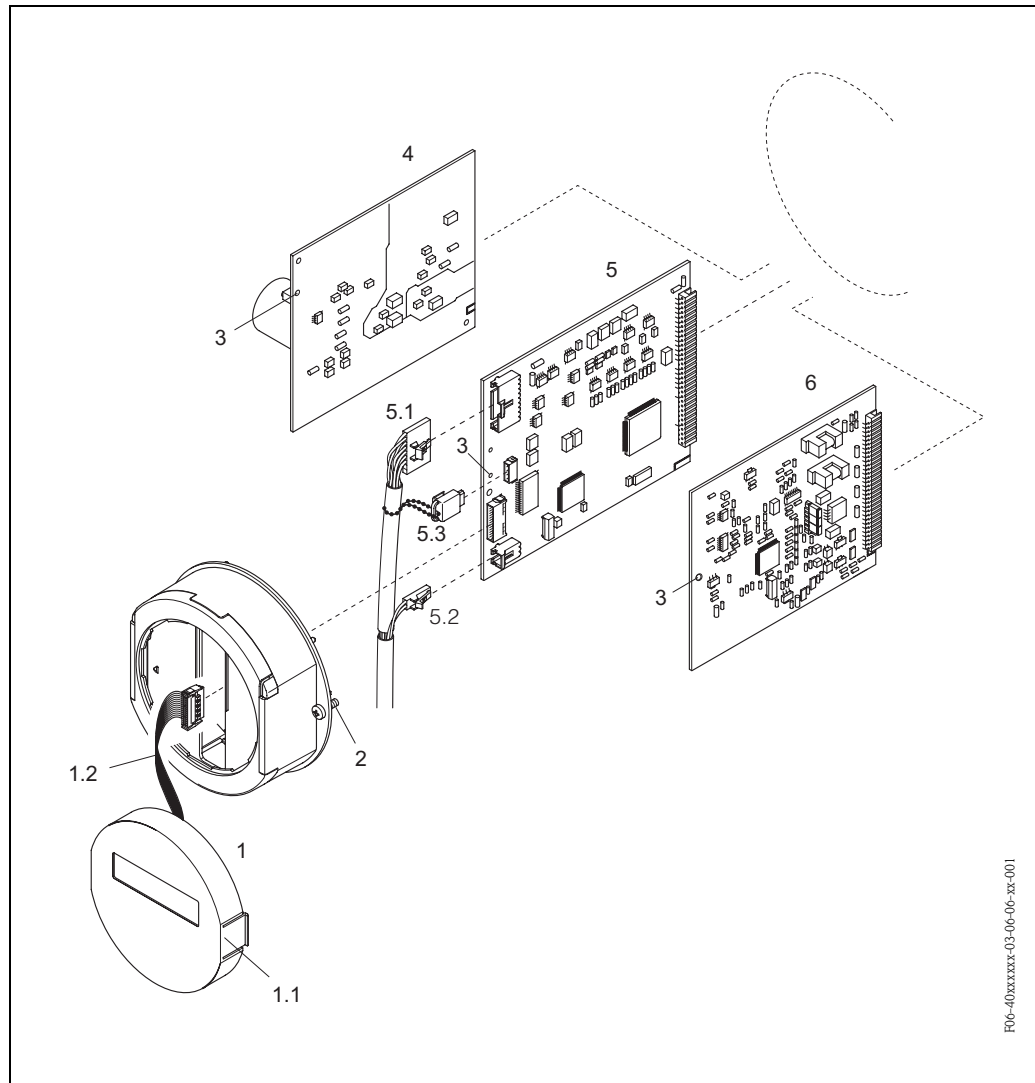


Fig. 20: removing and installing printed circuit boards

- 1 Local display
- 1.1 Latch
- 1.2 Ribbon cable (display module)
- 2 Screws of electronics compartment cover
- 3 Aperture for installing/removing boards
- 4 Power unit board
- 5 Amplifier board
- 5.1 Signal cable (sensor)
- 5.2 Excitation current cable (sensor)
- 5.3 S-DAT (sensor data memory)
- 6 I/O board

## 9.8 Replacing the device fuse



### Warning!

Risk of electric shock. Exposed components carry dangerous voltages. Make sure that the power supply is switched off before you remove the cover of the electronics compartment.

The main fuse is on the power unit board (Fig. 21).

The procedure for replacing the fuse is as follows:

1. Switch off power supply.
2. Remove the power unit board → Page 57
3. Remove cap (1) and replace the device fuse (2).  
Use only fuses of the following type:
  - Power supply 20...55 V AC / 16...62 V DC → 2.0 A slow-blow / 250 V; 5.2 x 20 mm
  - Power supply 85...260 V AC → 0.8 A slow-blow / 250 V; 5.2 x 20 mm
  - Ex-rated devices → see the Ex documentation.
4. Assembly is the reverse of the disassembly procedure.



### Caution!

Use only original Endress+Hauser parts.

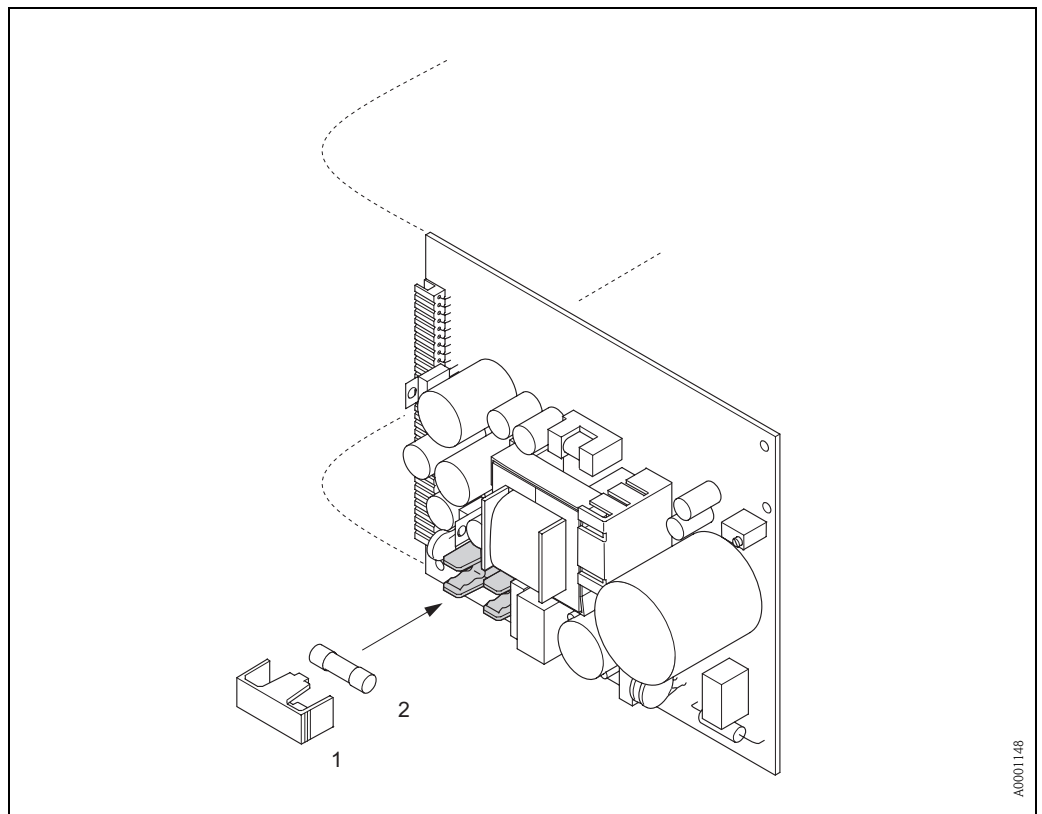


Fig. 21: Replacing the device fuse on the power unit board

- 1 Protective cap  
2 Device fuse

## 9.9 Return

The following procedures must be carried out before a flowmeter requiring repair or calibration, for example, is returned to Endress+Hauser:

- Always enclose a duly completed “Declaration of contamination” form. Only then can Endress+Hauser transport, examine and repair a returned device.
- Enclose special handling instructions if necessary, for example a safety data sheet as per EN 91/155/EEC.
- Remove all residues. Pay special attention to the grooves for seals and crevices which could contain residues. This is particularly important if the substance is hazardous to health, e.g. flammable, toxic, caustic, carcinogenic, etc.



Note!

You will find a preprinted “Declaration of contamination” form at the back of this manual.



Warning!

- Do not return a measuring device if you are not absolutely certain that all traces of hazardous substances have been removed, e.g. substances which have penetrated crevices or diffused through plastic.
- Costs incurred for waste disposal and injury (burns, etc.) due to inadequate cleaning will be charged to the owner-operator.

## 9.10 Disposal

Observe the regulations applicable in your country!

## 9.11 Software history

Date	Software version	Changes to software	Operating Instructions
11.2004	2.00.xx	Software expansion: <ul style="list-style-type: none"> <li>– Corrected volume flow measurement</li> <li>– Adjustments to Fieldcheck and Simubox</li> <li>– Reset error history</li> </ul> New functionalities: <ul style="list-style-type: none"> <li>– Empty pipe detection via exciting current (EPD EXC.CURR. MAX)</li> <li>– DEVICE SOFTWARE→ Device software displayed ( (NAMUR recommendation 53)</li> <li>– Operation hours counter</li> <li>– Intensity of background illumination adjustable</li> <li>– Simulation pulse output</li> <li>– Counter for access code</li> <li>– Up-/Download with ToF-Tool - Fieldtool Package</li> <li>– 2nd totalizer</li> </ul> Configurable via: <ul style="list-style-type: none"> <li>– ToF Tool - Fieldtool Package (the latest SW version can be downloaded under: <a href="http://www.tof-fieldtool.endress.com">www.tof-fieldtool.endress.com</a>)</li> </ul>	50098507/11.04
09.2002	Amplifier: 1.04.00 Communication module: 1.02.00	Software adjustment/expansion: <ul style="list-style-type: none"> <li>– Promass E</li> <li>– Ex i current output, frequency output</li> <li>– General instrument functions</li> <li>– HART operating via Universal Commands and Common Practice Commands</li> </ul> New functionalities: <ul style="list-style-type: none"> <li>– Function PULSE WIDTH</li> <li>– Function CURRENT SPAN</li> <li>– Function FAILSAFE MODE</li> </ul>	50098513/11.01
11.2000	Amplifier: 1.00.xx Communication module: 1.01.xx	Original software  Configurable via: <ul style="list-style-type: none"> <li>– ToF Tool - Fieldtool Package</li> <li>– HART Communicator DXR 275 (OS 4.6 or higher) with Rev. 1, DD 1</li> </ul>	50098507/11.00



### Note!

Usually, an upload or download between the different software versions is only possible with a special service software.



## 10 Technical data

### 10.1 Technical data at a glance

#### 10.1.1 Applications

The measuring device is for mass flow and volume flow measurement of liquids and gases in sealed piping systems. Application examples:

- additives
- oils, fats
- acids, alkalis
- lacquers, paints
- suspensions
- gases

#### 10.1.2 Function and system design

Measuring principle	Mass flow measurement by the Coriolis principle
---------------------	---

Measuring system	The measuring system consists of a transmitter and a sensor:
------------------	--

- Promass 40 transmitter
- Promass E sensor

#### 10.1.3 Input

Measured variable	<ul style="list-style-type: none"> <li>■ Mass flow (proportional to the phase difference between two sensors mounted on the measuring tube to register a phase shift in the oscillation)</li> <li>■ Volume flow (calculated from mass flow and fluid density, which is proportional to the resonance frequency of the measuring tubes)</li> <li>■ Fluid temperature (registered by temperature sensors) for compensating temperature effects.</li> </ul>
-------------------	--

Measuring range	<i>Measuring ranges for liquids:</i>
-----------------	--------------------------------------

DN	Range of full scale values (liquids) $\dot{m}_{\min(F)} \dots \dot{m}_{\max(F)}$
8	0...2000 kg/h
15	0...6500 kg/h
25	0...18000 kg/h
40	0...45000 kg/h
50	0...70000 kg/h

*Measuring ranges for gases:*

The full scale values depend on the density of the gas. Use the formula below to calculate the full scale values:

$$\dot{m}_{\max(G)} = \dot{m}_{\max(F)} \cdot \frac{\rho_{(G)}}{320 \text{ [kg/m}^3\text{]}}$$

$\dot{m}_{\max(G)}$  = Max. full scale value for gas [kg/h]

$\dot{m}_{\max(F)}$  = Max. full scale value for liquid [kg/h]

$\rho_{(G)}$  = Gas density in [kg/m<sup>3</sup>] under process conditions

*Calculation example for gas:*

- Sensor type: Promass E, DN 50
- Gas: air with a density of 60.3 kg/m<sup>3</sup> (at 20 °C and 50 bar)
- Measuring range: 70000 kg/h

Max. possible full scale value:

$$\dot{m}_{\max(G)} = \frac{\dot{m}_{\max(F)} \cdot \rho_{(G)}}{320 \text{ kg/m}^3} = \frac{70000 \text{ kg/h} \cdot 60.3 \text{ kg/m}^3}{320 \text{ kg/m}^3} = 13190 \text{ kg/h}$$

*Recommended full scale values:*

See Page 68 (“Limiting flow”)

Operable flow range	Flowrates above the preset full scale value do not overload the amplifier, i.e. the totalizer values are registered correctly.
---------------------	--

Input signal	Status input (auxiliary input): U = 3...30 V DC, R <sub>i</sub> = 5 kΩ, galvanically isolated. Configurable for: totalizer reset, positive zero return, error message reset, zero point adjustment.
--------------	---

### 10.1.4 Output

Output signal	Current output: Active/passive selectable, galvanically isolated, time constant selectable (0.05...100 s), full scale value selectable, temperature coefficient: typically 0.005% o.f.s./°C; resolution: 0.5 μA <ul style="list-style-type: none"> <li>■ active: 0/4...20 mA, R<sub>L</sub> &lt; 700 Ω (for HART: R<sub>L</sub> ≥ 250 Ω)</li> <li>■ passive: 4...20 mA, supply voltage V<sub>S</sub> = 18...30 V DC, R<sub>i</sub> ≥ 150 Ω, R<sub>L</sub> &lt; 700 Ω</li> </ul> Pulse / frequency output: Passive, open collector, 30 V DC, 250 mA, galvanically isolated. <ul style="list-style-type: none"> <li>■ Frequency output: full scale frequency 2...1000 Hz (f<sub>max</sub> = 1250 Hz), on/off ratio 1:1, pulse width max. 10 s</li> <li>■ Pulse output: pulse value and pulse polarity selectable, max. pulse width adjustable (0.5...2000 ms), max. pulse frequency selectable</li> </ul>
---------------	--

Signal on alarm	<ul style="list-style-type: none"> <li>■ Current output → failsafe mode selectable (e.g. acc. to NAMUR recommendation NE 43)</li> <li>■ Pulse/frequency output → failsafe mode selectable</li> <li>■ Status output → “non-conductive” in the event of fault or power supply failure</li> </ul>
-----------------	--

Load	see “Output signal”
------	---------------------

Switching output	Status output: Open collector, max. 30 V DC / 250 mA, galvanically isolated. Configurable for: error messages, Empty Pipe Detection (EPD), flow direction, limit values
------------------	---

Low flow cutoff	Switch points for low flow cut off are selectable
-----------------	---

Galvanic isolation	All circuits for inputs, outputs, and power supply are galvanically isolated from each other.
--------------------	---



### 10.1.5 Auxiliary energy

Electrical connections	see Page 19 ff.
Supply voltage	85...260 V AC, 45...65 Hz 20...55 V AC, 45...65 Hz 16...62 V DC
Potential equalization	No special measures for potential equalization are required. For instruments for use in hazardous areas, observe the corresponding guidelines in the specific Ex documentation.
Cable entries	Power supply and signal cables (inputs/outputs): <ul style="list-style-type: none"> <li>■ Cable entry M20 x 1.5 (8...12 mm)</li> <li>■ Threads for cable entries, PG 13.5 (5...15 mm), 1/2" NPT, G 1/2"</li> </ul>
Power consumption	AC: <15 VA (including sensor) DC: <15 W (including sensor)  Switch-on current: <ul style="list-style-type: none"> <li>■ max. 13.5 A (&lt; 50 ms) at 24 V DC</li> <li>■ max. 3 A (&lt; 5 ms) at 260 V AC</li> </ul>
Power supply failure	Lasting min. 1 power cycle: <ul style="list-style-type: none"> <li>■ EEPROM saves measuring system data if power supply fails.</li> <li>■ S-DAT is an exchangeable data storage chip with sensor specific data: nominal diameter, serial number, calibration factor, zero point, etc.</li> </ul>

10.1.6 Performance characteristics

Reference operating conditions	Error limits following ISO/DIS 11631: <ul style="list-style-type: none"><li>■ 20...30 °C; 2...4 bar</li><li>■ Calibration systems as per national norms</li><li>■ Zero point calibrated under operating conditions</li><li>■ Density adjustment performed</li></ul>
--------------------------------	---

Maximum measured error	The following values refer to the pulse/frequency output. Measured error at the current output is typically ±5 µA.
------------------------	---

**Mass flow (liquid)**  
±0.5% ± [(zero point stability / measured value) x 100]% o.r.

**Mass flow (gas)**  
±1.0% ± [(zero point stability / measured value) x 100]% o.r.

**Volume flow (liquid)**  
±0.7% ± [(zero point stability / measured value) x 100]% o.r.

o.r. = of reading

Zero point stability, Promass E:

DN	Maximum full scale value [kg/h] or [l/h]	Zero point stability [kg/h] or [l/h]
8	2000	0.20
15	6500	0.65
25	18000	1.8
40	45000	4.5
50	70000	7.0

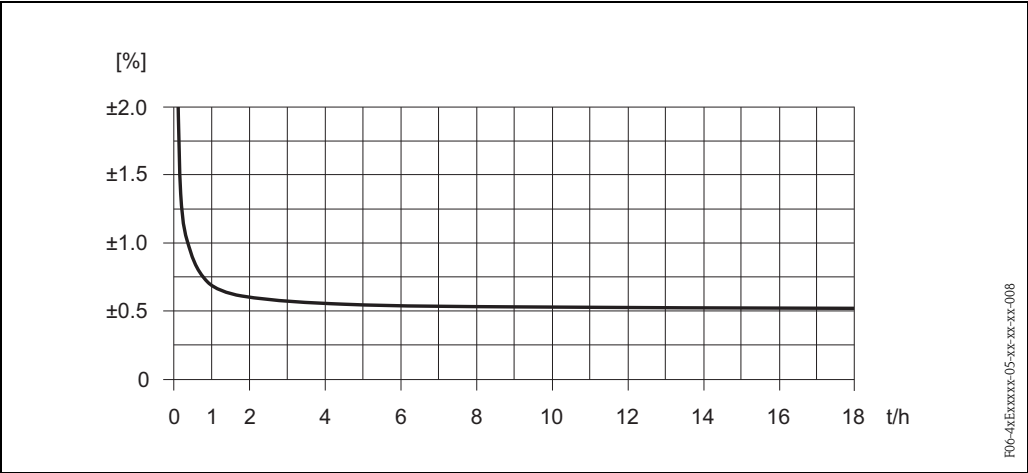


Fig. 22: Maximum measured error in % of reading (example: Promass 40 E / DN 25)

Calculation example (mass flow, liquid):  
Given: Promass 40 E / DN 25, flow = 8000 kg/h  
Measured error: ±0.5% ± [(zero point stability / measured value) x 100]% o.r.

Measured error →  $\pm 0.5\% \pm \frac{1.8 \text{ kg/h}}{8000 \text{ kg/h}} \cdot 100\% = \pm 0.523\%$

## Repeatability

**Flow measurement**

- Mass flow (liquid):  
 $\pm 0.25\% \pm [1/2 \times (\text{zero point stability} / \text{measured value}) \times 100]\% \text{ o.r.}$
- Mass flow (gas):  
 $\pm 0.5\% \pm [1/2 \times (\text{zero point stability} / \text{measured value}) \times 100]\% \text{ o.r.}$
- Volume flow (liquid):  
 $\pm 0.35\% \pm [1/2 \times (\text{zero point stability} / \text{measured value}) \times 100]\% \text{ o.r.}$

o.r. = of reading

Zero point stability: see "Max. measured error"

Calculation example (mass flow, liquid):

Given: Promass 40 E, DN 25, flow = 8000 kg/h

Repeatability:  $\pm 0.25\% \pm [1/2 \times (\text{zero point stability} / \text{measured value}) \times 100]\% \text{ o.r.}$ 

$$\text{Repeatability} \rightarrow \pm 0.25\% \pm 1/2 \cdot \frac{0.9 \text{ kg/h}}{8000 \text{ kg/h}} \cdot 100 \% = \pm 0.261\%$$

## Influence of medium temperature

When there is a difference between the temperature for zero point adjustment and the process temperature, the typical measured error of the Promass sensor is  $\pm 0.0003\%$  of the full scale value / °C.

## Influence of medium pressure

The effect on accuracy of mass flow due to a difference between calibration pressure and process pressure is negligible in the DN 8...40 range.

With DN 50 the effect is  $-0.009\% \text{ o.r./bar}$  (o.r. = of reading).

**10.1.7 Operating conditions (installation)**

## Installation instructions

see Page 12 ff.

## Inlet and outlet runs

There are no installation requirements regarding inlet and outlet runs.

## System pressure

see Page 13

**10.1.8 Operating conditions (environment)**

## Ambient temperature

Standard:  $-20...+60\text{ °C}$  (sensor, transmitter)Optional:  $-40...+60\text{ °C}$  (sensor, transmitter)

Note!

- Install the device in a shady location. Avoid direct sunlight, particularly in warm climatic regions.
- At ambient temperatures below  $-20\text{ °C}$  the readability of the display may be impaired.

## Storage temperature

 $-40...+80\text{ °C}$  (preferably  $+20\text{ °C}$ )

## Degree of protection

Standard: IP 67 (NEMA 4X) for transmitter and sensor

## Shock resistance

According to IEC 68-2-31

## Vibration resistance

Acceleration up to 1 g, 10...150 Hz, following IEC 68-2-6

## Electromagnetic compatibility (EMC)

To EN 61326/A1 and NAMUR recommendation NE 21

### 10.1.9 Operating conditions (process)

Medium temperature range	<p>Sensor:</p> <ul style="list-style-type: none"> <li>■ <math>-40...+125\text{ °C}</math></li> </ul> <p>Seals:</p> <ul style="list-style-type: none"> <li>■ no internal seals</li> </ul>
Fluid pressure limit (nominal pressure)	<ul style="list-style-type: none"> <li>■ Flanges: EN (DIN) PN 40...100 / ANSI Cl 150, Cl 300, Cl 600 / JIS 10K, 20K, 40K, 63K</li> <li>■ The Promass E sensor does not have a secondary containment</li> </ul>
Limiting flow	<p>See Page 63 ff. ("Measuring range")</p> <p>Select nominal diameter by optimizing between required flow range and permissible pressure loss. See Page 63 ff. for a list of maximum possible full scale values.</p> <ul style="list-style-type: none"> <li>■ The minimum recommended full scale value is approx. <math>\frac{1}{20}</math> of the maximum full scale value.</li> <li>■ In most applications, 20...50% of the maximum full scale value can be considered ideal.</li> <li>■ Select a lower full scale value for abrasive substances such as fluids with entrained solids (flow velocity <math>&lt; 1\text{ m/s}</math>).</li> <li>■ For gas measurement the following rules apply:             <ul style="list-style-type: none"> <li>– Flow velocity in the measuring tubes should not be more than half the sonic velocity (0.5 Mach).</li> <li>– The maximum mass flow depends on the density of the gas (see formula on Page 63).</li> </ul> </li> </ul>

Pressure loss

Pressure loss depends on the properties of the fluid and on the flow. The following formulas can be used to approximately calculate the pressure loss:

Pressure loss formulas for Promass E

Reynolds number	$Re = \frac{2 \cdot \dot{m}}{\pi \cdot d \cdot \nu \cdot \rho}$
$Re \geq 2300$ <sup>1)</sup>	$\Delta p = K \cdot \nu^{0.25} \cdot \dot{m}^{1.85} \cdot \rho^{-0.86}$
$Re < 2300$	$\Delta p = K1 \cdot \nu \cdot \dot{m} + \frac{K2 \cdot \nu^{0.25} \cdot \dot{m}^2}{\rho}$
<div><div><math>\Delta p</math> = pressure loss [mbar] <math>\nu</math> = kinematic viscosity [m<sup>2</sup>/s] <math>\dot{m}</math> = mass flow [kg/s]</div><div><math>\rho</math> = fluid density [kg/m<sup>3</sup>] <math>d</math> = inside diameter of measuring tubes [m] K...K2 = constants (depending on nominal diameter)</div></div> <p><sup>1)</sup> To compute the pressure loss for gases, always use the formula for <math>Re \geq 2300</math>.</p>	

Pressure loss coefficient for Promass E

DN	d [m]	K	K1	K2
8	$5.35 \cdot 10^{-3}$	$5.70 \cdot 10^7$	$7.91 \cdot 10^7$	$2.10 \cdot 10^7$
15	$8.30 \cdot 10^{-3}$	$7.62 \cdot 10^6$	$1.73 \cdot 10^7$	$2.13 \cdot 10^6$
25	$12.00 \cdot 10^{-3}$	$1.89 \cdot 10^6$	$4.66 \cdot 10^6$	$6.11 \cdot 10^5$
40	$17.60 \cdot 10^{-3}$	$4.42 \cdot 10^5$	$1.35 \cdot 10^6$	$1.38 \cdot 10^5$
50	$26.00 \cdot 10^{-3}$	$8.54 \cdot 10^4$	$4.02 \cdot 10^5$	$2.31 \cdot 10^4$

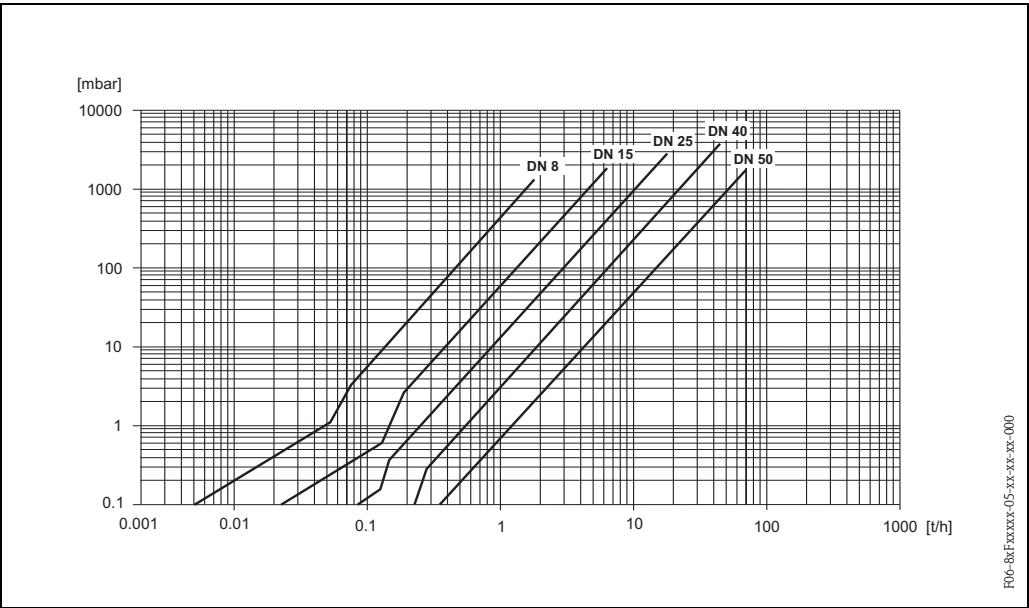


Fig. 23: Pressure loss diagram with water

### 10.1.10 Mechanical construction

Design / dimensions see Technical Information TI055D/06/en

Weight

Promass E / DN	8	15	25	40	50
Weight in [kg]	8	8	10	15	22

Materials

Transmitter housing:

- Compact housing: powder coated die-cast aluminium

Sensor housing:

- Acid- and alkali-resistant outer surface;  
Stainless steel 1.4301/304

Process connections:

- Flanges EN 1092-1 (DIN 2501) / ANSI B16.5 / JIS B2238 → stainless steel 1.4404/316L
- Flange DIN 11864-2 Form A (flat flange) → stainless steel 1.4404/316L
- VCO connection → stainless steel 1.4404 (316L)
- Hygienic coupling DIN 11851 / SMS 1145 → stainless steel 1.4404 (316L)
- Threaded unions ISO 2853 / DIN 11864-1 Form A → stainless steel 1.4404/316L
- Tri-Clamp → stainless steel 1.4404 (316L)

Measuring tubes:

- Stainless steel 1.4539/904L

Seals:

- Welded process connections without internal seals

Material load diagram

The material load curves (pressure-temperature diagrams) for the process connections are to be found in the following documents:

- Technical Information Promass 40 E (TI055D/06/en)

Process connections

- VCO coupling, flanges (EN 1092-1 (DIN 2501), ANSI B16.5, JIS B2238)
- Sanitary connections: Tri-Clamp, threaded unions (DIN 11851, SMS 1145, ISO 2853, DIN 11864-1 Form A), flange DIN 11864-2 Form A (flat flange)

### 10.1.11 Human interface

Display element

- Liquid crystal display (optional): illuminated, two lines with 16 characters per line
- Selectable display of different measured values and status variables
- Display languages: French, Spanish, Italian, Dutch, Portuguese, German

Remote operation

Operation by means of:

- HART protocol (handheld communicator)
- “ToF Tool – Fieldtool Package” configuration and service software or “FieldCare” from Endress+Hauser
- AMS configuration programs (Fisher Rosemount), SIMATIC PDM (Siemens)

### 10.1.12 Certificates and approvals

Ex Approvals	Information about currently available Ex versions (ATEX, FM, CSA) can be supplied by your E+H Sales Center on request. All explosion protection data are given in a separate documentation which is available upon request.
Sanitary compatibility	3A authorization
Pressure device approval	Flowmeters with a nominal diameter smaller or equal DN 25 are covered by Art. 3(3) of the European directive 97/23/EC (Pressure Equipment Directive) and are designed according to sound engineer practice. For larger nominal diameters, optional approvals according to Cat. II/III are available when required (depends on fluid and process pressure).
CE mark	The measuring system is in conformity with the statutory requirements of the EC Directives. Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.
C-Tick mark	The measuring system is in conformity with the EMC requirements of the Australian Communications Authority (ACA).
Other standards and guidelines	<p>EN 60529: Degrees of protection by housing (IP code)</p> <p>EN 61010-1: Protection Measures for Electrical Equipment for Measurement, Control, Regulation and Laboratory Procedures.</p> <p>EN 61326/A1 (IEC 1326) "Emission in accordance with requirements for Class A". Electromagnetic compatibility (EMC- requirements)</p> <p>NAMUR NE 21: Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment.</p> <p>NAMUR NE 43: Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.</p> <p>NAMUR NE 53: Software of field devices and signal-processing devices with digital electronics</p>

### 10.1.13 Ordering information

The E+H service organization can provide detailed ordering information and information on the order codes on request.

### 10.1.14 Accessories

There are no accessories for transmitter and sensor.

### 10.1.15 Documentation

- Technical Information Promass 40 (TI055D/06/en)
- Description of Device Functions Promass 40 (BA062D/06/en)
- Supplementary documentation on Ex-ratings: ATEX, FM, CSA





# Index

## A

Accessories .....	45
Ambient temperature .....	67
Applications .....	63
Applicator (selection and configuration software) .....	45
Auxiliary input	
see Status input	

## B

Boards	
see Spare parts .....	56

## C

Cable entries	
degree of protection .....	22
technical data .....	65
Calibration factor (default) .....	8
CE mark (declaration of conformity) .....	9
Cleaning	
exterior cleaning .....	44
Commissioning	
configuring current output (active/passive) .....	44
density adjustment .....	43
zero point adjustment .....	41
Communication .....	27
Connection	
see electrical connection	
Current output	
configuring for active/passive .....	44
electrical connection .....	20
technical data .....	64

## D

DAT storage chip (S-DAT, sensor) .....	65
Declaration of Contamination form .....	77
Degree of protection .....	22, 67
Density adjustment .....	43
Designated use .....	5
Device Description files (DD) .....	28
Device designation .....	7
Device functions	
see "Description of Device Functions" Manual	
Dimensions .....	12
Display .....	25
Display, turning .....	17
Disposal .....	60
Documentation, additional .....	71
Down pipes .....	13

## E

Electrical connection	
Commubox FXA 191 .....	21
degree of protection .....	22
HART handheld communicator .....	21
post-connection check (checklist) .....	23
potential equalization .....	22
transmitter, terminal assignment .....	19

Electronics boards (replacing, installing) .....	57
Environment conditions .....	67
Error limits	
see Performance characteristics	
Error messages	
display mode .....	26
process errors (application errors) .....	51
system errors (device errors) .....	48
Error response (inputs/outputs) .....	54
Error types (system and process errors) .....	26
Ex certification .....	71
Ex documentation, supplementary .....	5
Exchange	
device fuse .....	59
printed circuit boards .....	57
Exterior cleaning .....	44

## F

FieldCare .....	28
Fieldcheck (tester and simulator) .....	45
Fitting length	
see Dimensions	
Fluid temperature ranges .....	68
Frequency output	
electrical connection .....	20
technical data .....	64
Function check .....	41
Function descriptions	
see "Description of Device Functions" manual	
Fuse, replacing .....	59

## G

Galvanic isolation .....	64
--------------------------	----

## H

HART	
command No. ....	29
commands (universal or common) .....	27
Device Description files (DD) .....	28
device status, error messages .....	35
electrical connection .....	21
error messages .....	29
handheld .....	27
operating possibilities .....	27
Hazardous substances .....	6, 60
Heating (general notes, insulation, etc.) .....	15
HOME position (operating mode) .....	25

## I

Incoming acceptance .....	11
Inlet runs .....	15
Input signal .....	64
Input variables .....	63
Inputs/outputs, response to errors .....	54
Installation conditions	
dimensions, fitting lengths .....	12
down pipes .....	13

fluid temperature .....	15
inlet and outlet runs .....	15
location .....	12
system pressure .....	13
vibrations .....	15
Insulation for sensor, heating .....	15

## L

Limiting flow	
see Measuring range .....	68
Limiting medium pressure range .....	68
Load (outputs) .....	64
Local display	
see Display	
Low flow cutoff .....	64

## M

Maintenance .....	44
Material load curves .....	70
Materials .....	70
Measured variables .....	63
Measuring principle .....	63
Measuring range .....	63
Measuring system .....	63
Mounting the sensor	
see Installation conditions	

## N

Nameplate	
connections (electrical) .....	9
sensor .....	8
transmitter .....	7
Nominal pressure	
see Limiting medium pressure range	
Notice message .....	26

## O

Operable flow range .....	64
Operating conditions .....	67
Operation	
Device Description files (DD) .....	28
Fieldcare .....	28
HART handheld .....	27
operating possibilities .....	27
ToF Tool - Fieldtool Package (configuration software) .	27
Operational safety .....	5
Ordering code	
accessories .....	45
sensor .....	8
transmitter .....	7
Ordering information .....	71
Outlet runs .....	15
Output signal .....	64
Output variables .....	64

## P

Performance characteristics	
influence of fluid pressure .....	67
influence of fluid temperature .....	67
maximum measured error .....	66

reference operating conditions .....	66
repeatability .....	67
Post-installation check (checklist) .....	17
Potential equalization .....	22
Power consumption .....	65
Power supply (voltage supply) .....	65
Power supply failure .....	65
Pressure loss (formulas, pressure loss diagrams) .....	69
Printed circuit boards (removing/installing) .....	57
Process connections .....	70
Process error (definition) .....	26
Process error messages .....	51
Process errors without messages .....	53
Pulse output	
see frequency output	
Pumps, mounting location, system pressure .....	13

## R

Registered trademarks .....	10
Remote operation .....	70
Repair .....	6, 60
Repeatability (measuring accuracy) .....	67
Returning devices .....	6, 60

## S

Safety icons .....	6
Safety instructions .....	5
Safety of operation .....	5
Sanitary compatibility .....	71
Seals	
fluid temperature ranges .....	68
materials .....	70
Sensor installation	
see Installation conditions	
Serial number .....	7, 8, 9
Service protocol .....	28
Shock resistance .....	67
Signal on alarm .....	64
Software	
amplifier .....	41
versions (history) .....	61
Spare parts .....	56
Standards, guidelines .....	71
Status input	
electrical connection .....	20
technical data .....	64
Status output	
electrical connection .....	20
technical data .....	64
Storage .....	12
Supply voltage (power supply) .....	65
Switching output (status output) .....	64
System error (definition) .....	26
System error messages .....	48
System pressure, requirements .....	67

## T

Technical data .....	63
Temperature ranges	
ambient temperature .....	67

fluid temperature .....	68
storage temperature .....	67
ToF Tool - FieldTool Package (configuration software) ...	45
Transmitter	
electrical connection .....	19
turning the transmitter housing .....	16
Transporting the sensor .....	11
Trouble-shooting and remedy .....	47
<b>U</b>	
User interface, display elements .....	25
<b>V</b>	
Vibration resistance .....	67
Vibrations .....	15, 67
<b>W</b>	
Weight .....	70
Wiring	
see electrical connection	
<b>Z</b>	
Zero point adjustment .....	41





[www.endress.com/worldwide](http://www.endress.com/worldwide)

---

**Endress+Hauser**   
People for Process Automation

---