ALLINACES AND CONTENT OF THIS DOCUMENT ARE PROPERTY OF SHOWIES ShowTex User Manual



Table of Contents

Introduction	n		03		
Safety Instru	uction	S	04		
Component	t		05		
Standard As	ssemb	ly options	06		
Assembly			07		
	1	Position all slidable pins in the same direction	07 5		
	2	Attach the hook clamps	07		
	3	Assemble the click profile 10cm	07		
	4	Attach the first brake	07		
	5	Attach the next break/bearing	08		
	6	Attach the first click profile	08		
	7	Attach the first brake Attach the next break/bearing Attach the first click profile Repeat step 6 Join the brakes together with connection cable	08		
	8	Join the brakes together with connection cable	09		
	9	Connect the first brake to the power supply cable	09		
	10	Connect the control unit to the power supply cable	09		
\wedge	11	Connect the control unit to the power source	09		
	12	Activate the control unit	10		
	13	Position the click profiles	10		
	14	Test the Kabuki system without the curtain attached	10		
	15	Attach the curtain	10		
	16	Test the Kabuki system with the curtain	11		
	17	Repeat steps 14-16	11		
Care and Maintenance					
Trouble sho	oting		13		

Introduction

- The Kabuki-system is an easy to use electro-mechanical device used to create spectacular unveilings.
- This system was developed by ShowTex to drop lightweight fabrics, curtains, and objects in order to reveal the stage, performers, or products.
- Kabuki drop systems are used to form a complete fabric or curtain wall and drop the entire piece at once.
- Jestired on the stock of this body with a feet and continued on the stock of the st It's a modular system that can be endlessly extended by simply connecting the desired length of brakes and bearings to Kabuki profiles.
- The unique design will not release curtain in the event of a power outage.

Safety Instructions

- · Read this user manual carefully
- · Profiles may only be used to move or carry light weight fabrics and objects (never people).
- The maximum weight capacity per brake is 30 kg. Overloading the brakes can cause damage to the system and endanger the safety of its users.
- Make sure that the area where the curtain will drop is always visible to the system operator.
- The system must be installed and activated by qualified technicians with knowledge of its capabilities and limitations.
- It is prohibited to stand under the suspended load at any time.
- · The system must be installed in a dry frost free environment.
- The material to be dropped should be in good condition, checked and tested before use. Safety cables must be secured and attached in a way that they can't interfere with the system's movement.

Component Parts

The Kabuki system consists of the following parts:



Component Parts


Click profile 8150 0906 0107 8150 0906 1007 8150 0906 2007 8150 0906 2007 8150 0906 3007 8150 0906 6007 Hook Clamp 8700 0677 0807 Register 8150 0906 0007 Register 8150 0906 0007 Register Register Register 8150 0906 0007 Register Register 8150 0906 0007 Register Register 8150 0906 0007 Register Register 8150 0900 0007 Register 8230 V,50 Hz, 0, 2 A Carrying capacity: 8230 V,50 Hz, 0	ame	Art.nr.	Colour	Weight	Information
## ## ## ## ## ## ## ## ## ## ## ## ##	lick profile				
## ## ## ## ## ## ## ## ## ## ## ## ##					
## ## ## ## ## ## ## ## ## ## ## ## ##					
Hook Clamp 8700 0677 0807 0,62 kg/piece 80 kg capactity Brake 8150 0900 0007 8,96 kg/piece 230 V, 50 Hz, 0.2 A · Carrying capacity: 3 Bearing 8150 0903 0007 4,20 kg/piece Slidable Pin 8150 0909 0005 0,02 kg/piece Power Supply Cable 8150 0912 0027 0,40 kg/piece Length: 2 m Connection cable 8150 0915 0077 0,97 kg/piece Length: 7 m Control Unit 8150 0950 0010 0,82 kg/piece Ktra components:: Socket wrench (nr 17) for M10 (see STEP 2) Extension cable (optional) (see STEP 10)					
Brake 8150 0900 0007		8150 0906 6007		11,10 kg/piece	Length: 600 cm
Carrying capacity: 3 Bearing	ook Clamp	8700 0677 0807		0,62 kg/piece	80 kg capactity
Slidable Pin 8150 0909 0005 NOX 0,02 kg/piece	rake	8150 0900 0007		8,96 kg/piece	
Slidable Pin 8150 0909 0005 NOX 0,02 kg/piece Power Supply Cable 8150 0912 0027 0,40 kg/piece Length: 2 m Connection cable 8150 0915 0077 0,97 kg/piece Length: 7 m Control Unit 8150 0950 0010 0,82 kg/piece Extra components:: Socket wrench (nr 17) for M10 (see STEP 2) Extension cable (optional) (see STEP 10)					Carrying capacity: 30 kg
Power Supply Cable 8150 0912 0027 0,40 kg/piece Length: 2 m Connection cable 8150 0915 0077 0,97 kg/piece Length: 7 m Control Unit 8150 0950 0010 0,82 kg/piece xtra components:: Socket wrench (nr 17) for M10 (see STEP 2) Extension cable (optional) (see STEP 10)	earing	8150 0903 0007		4,20 kg/piece	
Connection cable 8150 0915 0077 0,97 kg/piece Length: 7 m Control Unit 8150 0950 0010 0,82 kg/piece Extra components:: Socket wrench (nr 17) for M10 (see STEP 2) Extension cable (optional) (see STEP 10)	idable Pin	8150 0909 0005	INOX	0,02 kg/piece	
Control Unit 8150 0950 0010 0,82 kg/piece xtra components:: Socket wrench (nr 17) for M10 (see STEP 2) Extension cable (optional) (see STEP 10)	ower Supply Cable	8150 0912 0027		0,40 kg/piece	Length: 2 m
xtra components:: Socket wrench (nr 17) for M10 (see STEP 2) Extension cable (optional) (see STEP 10)	onnection cable	8150 0915 0077		0,97 kg/piece	Length: 7 m
xtra components:: Socket wrench (nr 17) for M10 (see STEP 2) Extension cable (optional) (see STEP 10)	ontrol Unit	8150 0950 0010		0,82 kg/piece	250,
AGES AMIL		7 /./		5	

Extra components::

- Socket wrench (nr 17) for M10 (see STEP 2)
- Extension cable (optional) (see STEP 10)

Standard Assembly Options

The number of brakes and bearings and the length of the click profiles depends on the weight of the chosen fabric.

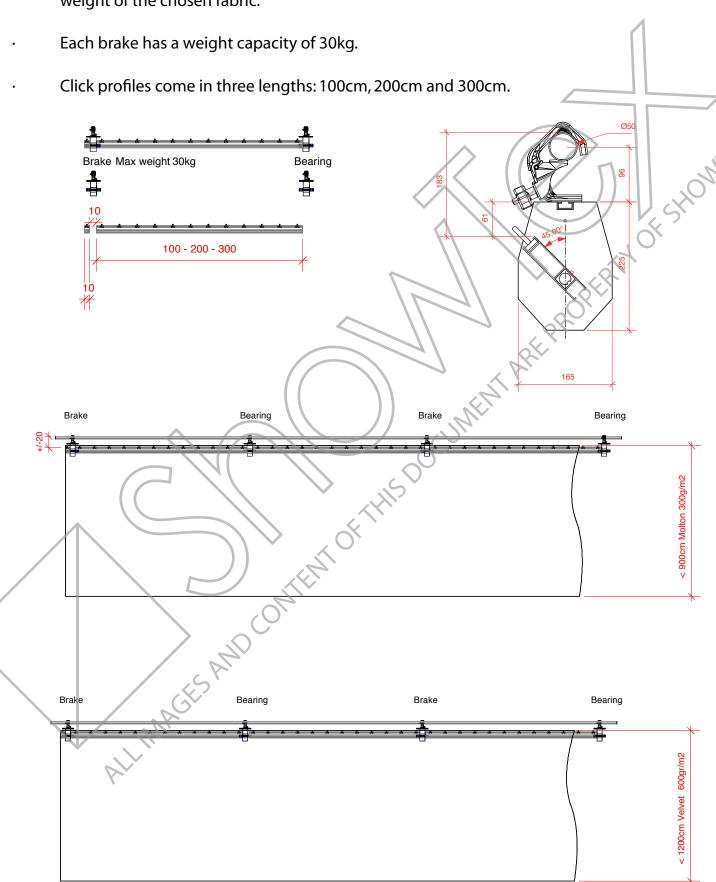

In order for the system to operate correctly the following steps should be taken:

1 Check that all brake axes are in the same position



Make sure all brake axes are in the same position.

Verify by seeing that all safety pins are pointing in the same direction.

Connect each brake with the power supply separately. In this way, the brakes will be unblocked and the axes can be moved to the desired position.

Attention: Afterwards, disconnect the power supply cable. Prolonged tension of the brakes can cause damage to the system.

2 Attach the hook clamps



If the hook clamps are not already attached, fasten the clamp hooks in the middle of each brake and bearing. Use a socket wrench to do this. (see components parts)

Also connect the safety cable

Attention: Other types of hook clamps with bolt M10 can also be used.

3 Attach the 10 cm click profile



If the curtain is used to hide all brakes and bearings, then it's recommended to position a 10 cm click profile at the outside end of the first and last Kabuki brake position. Keep the safety pin pressed in while you do this.

In case the 10cm click profile doesn't apply, go to step 4.

4 Attach the first brake



Mount the first brake (together with the 10cm click profile) on the pipe/batten/truss.

Tighten the hook clamp and attach the safety cable to the pipe/batten/truss.

Attention: Make sure the safety cable isn't hanging in the way of any movable parts of the system.

5 Attach the next break/bearing

Next, attach the following brake/bearing to the pipe/batten/truss at the desired position, depending on the profile that is to be installed between them (1m,2m or3m). The break or bearing should still not be tightened at this phase.



Attention: If required, reposition the hook clamp by using a socket wrench.

6 Attach the first click profile









Attention: 4 slidable pins per running meter click profile are delivered standard for mounting the curtain to the system. (see STEP 15) Depending on how the system is being used, extra pins can be used, however, it's best to add them before installing the profiles. 1 adjustable pin is provided with each 10cm click profile.

- 1 Assemble the first profile by supporting it on one side on the axis of the first brake. Do not slide the profile over the safety pin yet..
- 2 Then pull the second brake or bearing closer.
- 3 slide the other side of the profile over the respective axis. While doing this, keep the safety pin pressed in. (also see STEP 3)
- **4** When the profile is slid over the safety pin on both sides, install the hook clamp of the second brake/bearing and attach the safety cable around your pipe/batten/truss. (also see STEP 4)



7 Repeat STEP 6

Repeat STEP 6 until all the profiles are assembled. Finish off the last profile with a brake or bearing including a click profile of 10cm. (see STEP 3)

8 Join the brakes together with connection cable


Connect the brakes together with a connection cable. When all brakes, bearings, and profiles have been correctly assembled, connect them together with a connection cable.



Attention: Fasten any extra connection cable to the pipe/batten/truss to keep it out of the way by using tape, cable fasteners, or back to back Velcro.

Attention: The connection cables have a maximum length of 7m. Make sure that the brakes are never installed further apart than 7m. Link cables longer than 7m are available on request.

9 Connect the first brake to the power supply cable

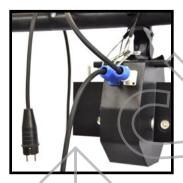

Next, connect the first brake to the power supply cable.

$oldsymbol{10}$ Connect the control unit to the power supply cable



Next, connect the control unit to the power supply cable.

Attention: This cable is maximum 3m long. If necessary, plan on using an extension cord (not included), depending on the desired height of the Kabuki system.

Connect the control unit to the power source



Next, connect the control unit to the power source (220V; 0,2 A).

12 Activate the control unit





The standard setting of the switch is OFF. Switch to ON to activate the control unit. The green DROP switch will then light up JANENT ARE PROPT

Position the ctick profiles



While keeping the DROP button pressed in, position the click profiles at a 45° angle facing upwards. When the profiles are in the desired position, release the DROP button. The brakes will then lock in place.

Attention: Make sure the outer edges of the profiles match the frames of the brakes and bearings.

14 Test the Kabuki system WITHOUT the curtain attached



Test the Kabuki system before installing the curtain by pressing in the DROP button. Check that the system is free and that no obstacles are in the way to block profile movement.

15 Attach the curtain





Attach the curtain to the slidable pins.

Attention: Begin installation of the curtain at the outmost click profile measuring 10 cm if applicable to cover all brakes and bearings.

16 Test the Kabuki system WITH the curtain





Next, test the Kabuki system with the curtain attached by pressing the DROP button.

17 Repeat steps 14 - 16

Please repeat steps 14-16 before every show!

Care and Maintenance

- The Kabuki system has components that must be regularly checked, maintained, and replaced in order to ensure safety and keep it in good condition.
- The best way to maintain the Kabuki system is to use it often. Each mechanical part should be used at least once a week. In this way, residue and dirt can't collect in the bearings and irregular noises can be discovered in time.
- ALLINAGES AND CONTENT OF THIS DOCUMENT ARE PROPERTY OF SHIP More frequent maintenance is recommended in case of frequent use or in case the system is installed in a space with a high degree of moisture, dust, or differences in temperature.
- When necessary, disassemble the system in the same way it was installed.

Trouble Shooting

What to do if the system stops working?

- Verify that the system is correctly connected to the power supply.
- Verify that all cables are connected to the correct outlets and that none of them are damaged.

What to do if the curtain doesn't drop?

- Verify that the curtain can't get stuck on any part of the system.
- Check that the curtain isn't too tightly tensioned on the system (in case the adjustable pins are too far apart). In this case, lightweight fabrics will not drop correctly or at all.
- Verify that the profiles can't get caught on cables or light equipment.

THIS DOCUMENT ARE PROPERTY For more technical assistance please contact your local ShowTex office. (see back cover of manual)





HAVE A GREAT SHOW!

ShowTex België nv

Hoofdkantoor:

Everaertsstraat 69 • B-2060 Antwerpen • België T+32 3 236 84 40 • F+32 3 236 23 02 • info.be@showtex.com ShowTex Belgique sa

T +32 10 24 35 00 • F +32 10 24 36 00 • info.be@showtex.com

ShowTex France

16 Pl Général De Gaulle • F- 59800 Lille • France T+33 (0)3 20 63 73 60 • F+33 (0)3 20 63 73 61 M+33 (0)6 89 62 59 90 • info.fr@showtex.com

ShowTex Nederland by

Energieweg 2b • 3762 ET Soest • Nederland Postbus 31 • 3760 AA Soest • Nederland T+31 35 693 86 92 • F+31 35 693 87 55 info.nl@showtex.com • rental.nl@showtex.com

ShowTex Middle East F.Z.C

Sharjah Airport Free Zone Warehouse Q4 - 79/80 P.O. Box 120226 • United Arab Emirates • T +971 6 557 98 00 F +971 6 557 98 10 • info.me@showtex.com

>> ShowTex Hong Kong Itd Units D - F, 10th Floor • Wing Shan Industrial Building

REPROPERTY OF SHOWIET 428 Cha Kwo Ling Road • Yau Tong • Kowloon • Hong Kong T +852 2727 7558 • F +852 2727 7920 • info.hk@showtex.com

ShowTex South Africa pty

Union Textile Building • Perth Road • Maitland • Cape Town Western Cape • 7451 • South Africa • T +27 82 453 7488 F +27 86 689 1535 • info.sa@showtex.com

Sales Office UK

T +44 170 681 97 46 • M +44 776 534 1878 F +32 3 236 23 02 • UK • info.uk@showtex.com

Sales Office Scandinavia

M +46768 936 632 • F +31 35 693 87 55 info.scan@showtex.com

Sales Office North Africa

M +212 6 4817 6909 • F +32 3 236 23 02 • Morocco info.na@showtex.com

