



CASE 5600 Series
USER Manual

www.rosewill.com

Contents

■ Configuration	P.2
■ Features Descriptions	P.3
■ Installation	
1. Opening Chassis	P.5
2. Installing Motherboard	P.6
3. Installing 3.5" HDD	P.8
4. Installing 5.25" Device	P.9
5. Installing Add on Card	P.10
6. Installing Floppy	P.11
7. Cleaning Filters-Air guide Filter	P.13
8. Cleaning Filters-Front panel Filter	P.13
9. USB port	P.14
10. IEEE1394 Port	P.15
11. Audio Port	P.16
12. System Control Connectors	P.17
■ Information	P.18

Configuration

Dimension (W x H x D) 7.9" x 17.3" x 19.4"

M/B Size ATX, Micro ATX

Drive Bay External : 4 x 5.25" + 2 x 3.5"
Internal : 5 x 3.5"

Expansion Slots 7 Slots


Thermal Solution 1 x 12 cm fan in rear and 1 x 12 cm fan holder in front

Air Filter One air filter on the front panel (only in R6A34)


I/O Port Bracket Supports one I/O port bracket for standard ATX M/B

Megal Material 0.8 mm thickness SECC rustproof & galvanized JIS Steel

Features Descriptions

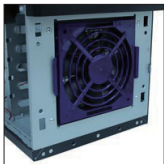

Front 120mm Fan

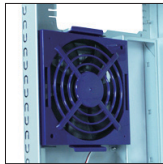

Rear 120mm Fan



Sliding Rails for 5.25"
device



Sliding Rails for 3.5" HDD



Screw-less Add-on Card
assembly



Door opening up to 270
Degree



Easy-clean filter
(in left side panel)



Easy-clean filter
(in front panel)




Screw-less and lockable
left side panel



Adjustable air inflow



Front IO Ports

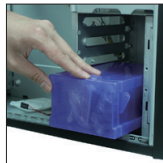

Convenient Accessory box

Installation


1. Opening Chassis



- 1.1
Take off the thumb screws on the back plane
1.2
Push the Key-button



- 1.3
Roll the side cover anticlockwise to open

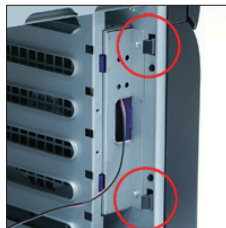

- 1.4
Push hooks marked in red circle to detach the front panel from the chassis

2.Installing Motherboard ATX Motherboard



Special motherboard stand-off


2.1

Due to our special design of motherboard stand-off, copper motherboard stand-off not needed when you install the ATX motherboard.



NOTE : The copper motherboard stand-off not needed when you install the ATX motherboard.


DON'T SCREW THE COPPER MOTHERBOARD STAND-OFF INTO THE SPECIAL MOTHERBOARD STAND-OFF OR MOTHERBOARD INSTALLING CAN'T BE PROCESSED SUCCESSFULLY.

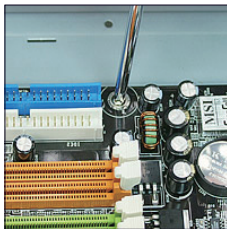

2.2

Sit the motherboard on our special motherboard stand-off and screw in all the screws into the motherboard stand-offs.


Micro ATX Motherboard

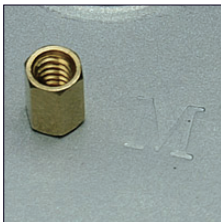

2.1

Locate and align the screw holes on the motherboard and chassis; place the motherboard at the correct position, and then screw copper motherboard stand-offs brass studs onto chassis's metal shell.


Note: Screw holes marked with "M" are motherboard stand-off positions for micro ATX motherboard.

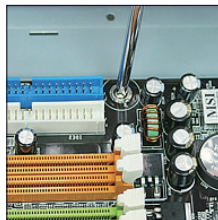

2.2

Sit the motherboard on the motherboard stand-offs and screw in all the screws into the motherboard stand-offs.

3.Installing 3.5" HDD

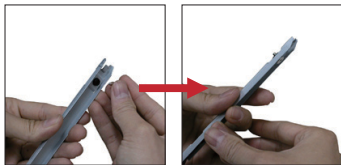

3.1
Insert the screw into the rubber pad hole on the rail



3.2
Attach rails to both sides of your HDD



3.3
Insert the railed HDD into the 3.25" HDD bay and push to the bottom



NOTE : Screws for HDD have no thread, no screwdriver needed when you work step 3.2

4.Installing 5.25" Device



4.1

Disassemble the front panel (please refer to step 1.4)

4.2

Attach rails to both sides of your 5.25" device

PS: You can also fasten rails on your 5.25" device by screws




4.3

Insert the railed 5.25" device into the 5.25" drive bay


5.Installing Add on Card



5.1
Push out to loosen add on card kit

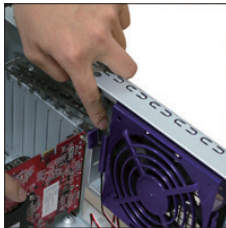

5.2
Insert your add on card into the right slot

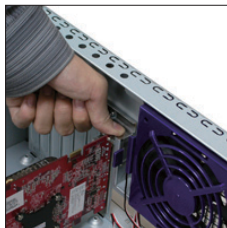

5.3
Push down add on card kit to fasten the add on card

6.Installing Floppy




6.1
Detach the front panel
(Please refer to Step 1.4, Page 5)




6.2
Unscrew the screws holding the
floppy cage



6.3
Slide out the floppy cage

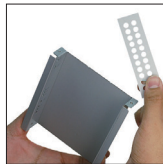

6.4
Remove the metal cover

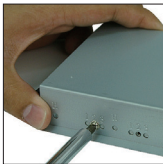

6.5
Secure the floppy on cage by
screws



6.6
Slide the floppy cage back




6.7
Secure the floppy cage by
screws



6.8
Attach the front panel

7.Cleaning Filters - Air Guide Filter

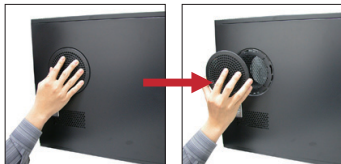

7.1
Turn anticlockwise to take off the filter

8.Cleaning Filters - Front panel Filter



8.1
Push front panel hooks to detach
the front panel from the chassis
(please refer to step 1.4)



8.2
Detach the filter from the front
panel

9.USB Port

NOTE :


- 1.Make sure that your motherboard offers USB interface. NOT every motherboard offers it.
- 2.NEVER connect a IEEE1394 connector to the USB pins. It will damage the motherboard.

9.1 Read your motherboard's user manual to find the pins for the USB connector.

9.2 Find the USB connector and connect it to the pins.



M/B USB PINS

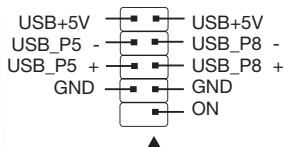


10.IEEE1394 Port


NOTE :

- 1.Make sure that your motherboard offers IEEE1394 interface. NOT every motherboard offers it.
- 2.NEVER connect a USB cable to the IEEE1394 connectors. It will damage the motherboard.

- 10.1 Read your motherboard's user manual to find the pins for the IEEE1394 connector.
- 10.2 Find the IEEE1394 connector and connect it to the pins.

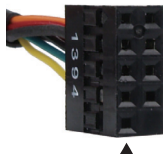

M/B IEEE1394 PINS

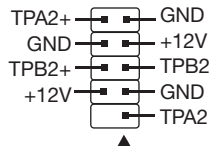


11.Audio Port

NOTE :


Make sure that your motherboard offers Audio interface for front panel. NOT every motherboard offers it.

10.1 Read your motherboard's user manual to find the pins for the Audio connector.

10.2 Find the Audio connector and connect it to the pins.

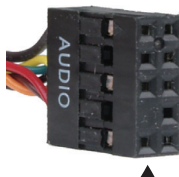

M/B Audio PINS

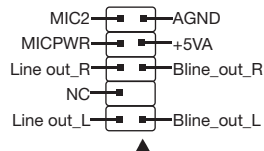

12. System Control Connectors

1. Read your motherboard's user manual to find the pins for these system control connectors.
2. Refer to your motherboard's user manual to connect these connectors correctly.

Connectors



System Warning Speaker



ATX Power Switch




Reset Switch



System Power LED



HDD Activity LED

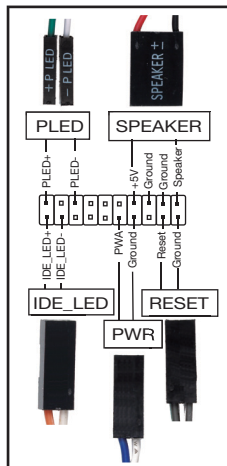

ATTENTION :

The diagram is just an example.
NOT every motherboard has the same layout of these system control pins.
 Please refer to your motherboard user's manual to check the layout before the installation.

Thank you for purchasing a High-Quality Rosewill Product.

Please register your product at : ***www.rosewill.com***

for complete warranty information and future support for your product.

If you have any question while using our products, please visit our website : ***www.rosewill.com***

for latest driver & user manual or feel free to contact us at ***feedback@rosewill.com***

Support Phone Number: 800-575-9885

Support Email: techsupport@rosewill.com

The logo features the word "Rosewill" in a red, elegant script font. The letter "R" is large and stylized, with a long horizontal flourish extending from its base. A small registered trademark symbol (®) is positioned to the upper right of the word.

Rosewill®

www.rosewill.com