

VP306 / VP306P

SIP VoIP Phone



Quick Installation Guide


&

User Manual

January 31, 2007

Quick Installation Guide


Step 1: VP306 Keypads & Backplane

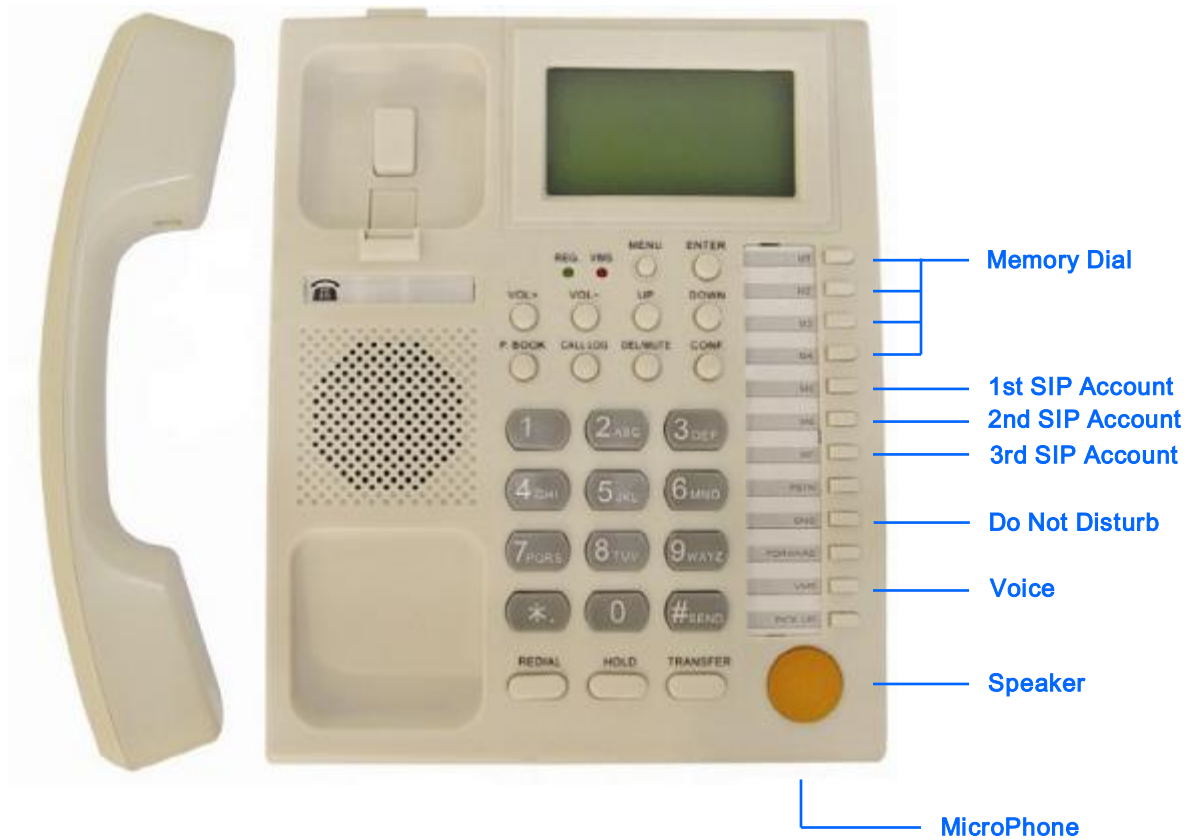

Step 2: Broadband (ADSL/Cable Modem) Connections for VP306

1. Connect VP306 RJ45 WAN port to ADSL NAT Router as the following connection.
2. Connect VP306 RJ45 LAN port to Notebook PC LAN port using a Category 5 LAN cable.
3. Connect DC Power Adaptor. The LCD Panel will start showing **Loading Program!**
4. The LCD panel will show **Date**, **Time** and **No service** without SIP registration, or **<phone number>** after successful SIP registration.
5. Pick up the phone, and the LCD panel will show **IP Dialing.. 1.** Please hang up.
6. Press **Menu_4_5** from the keypad to check the LAN IP address (default: **192.168.123.1**) for VP306.
7. The **Menu** key is used for menu/escape, the **Up Down** keys for arrow and the **Enter** key for selection.

Figure A. ADSL Connections with NAT Router for VP306

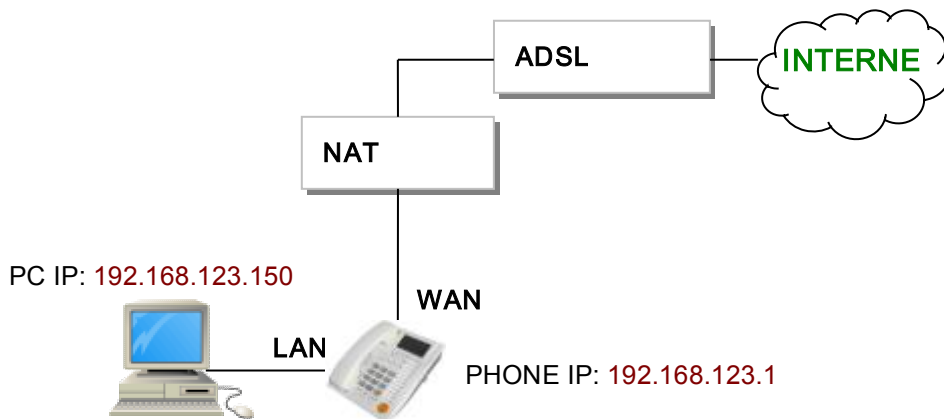

Step 3: Configurations from Keypads

Keypad Settings for Password and SIP Account:

1. Press **Menu_7_4**, the LCD panel will show **Password**:
2. Press **test** (i.e. press **8** two times **_3** three times **_7** five times **_8** two times **Enter**) for password.
Note that you must enter the password first to access the other settings!!
3. Press **Menu_5_Enter** to configure First realm for SIP account.

Keypad Settings for IP Status:

1. IP Addresses for WAN and LAN Ports : Press **Menu_4_5**
2. WAN port Status : Press **Menu_4_1_1**
3. LAN port Status : Press **Menu_4_2**

Example: Network Settings for Fixed IP by Keypad (M=Menu; E=Enter)

For Network Settings, there are three choices for IP type in WAN Settings; Fixed IP, DHCP, and PPPoE. For Fixed IP, the user must key in static fixed IP address, Subnet Mask, and Gateway IP with DNS Server IP address.

1. Fixed IP: Press **M_4_E_1_E_M_M_M** to select Fixed IP and reboot.
2. Set IP Address: Press **M_4_E_2_1** and enter **192*168*101*112** and **E_M_M_M_M_M** to reboot.
3. Set Subnet Mask: Press **M_4_E_2_2** and enter **255*255*255*000** and **E_M_M_M_M_M** to reboot.
4. Set Gateway IP: Press **M_4_E_2_3** and enter **192*168*101*001** and **E_M_M_M_M_M** to reboot.
5. Set DNS Server IP address as the following page if necessary.
6. Power OFF and ON again.

Network Status

This page shows current status of network interfaces of the system.

Interface 0	
Type:	Fixed IP Client
IP:	192.168.101.112
Mask:	255.255.255.0
Gateway:	192.168.101.1
DNS Server 1:	192.168.101.1
DNS Server 2:	168.95.1.1

Step 4: Configurations from PC Web Browser

1. Connect a notebook PC to the LAN port, and click IE to enter for Web configurations.
2. Press **Menu_4_5** from keypad to get WAN and LAN IP addresses.
3. Given the IP address **192.168.123.1** for LAN port, enter <http://192.168.123.1:9999> from IE Web browser to display login page for Web configurations.
4. Login default username and password;
Username: **root**
Password: **test**
Click the “**Login**” button to enter for configurations.



Login VoIP

Enter your username and password to login

VoIP server

Username

Password

5. The IE Web browser will show the following System Information page.

System Information

This page illustrate the system related information.

Model Name:	VoIP Phone
Firmware Version:	Thu Nov 20 15:47:11 2008 (02fa)
Codec Version:	Wed Jul 30 09:43:18 2008.
Call Status	
Protocal	SIP
Realm #1	Not Registered
Realm #2	Not Registered
Realm #3	Not Registered
WAN Status	
MAC address	20092600394c
IP address/Netmask	192.168.62.108 / 255.255.255.0 [DHCP Client]
Gateway	192.168.62.1
DNS	168.95.192.1 / 168.95.1.1
LAN Status	
IP address/Netmask	192.168.123.1 / 255.255.255.0 [DHCP Server]

6. You need to set up the following web configurations: **Phone, Network WAN/LAN Settings, SIP Settings**. Remember to submit, save and reboot for new configurations.

7. For WAN settings

DHCP:

This is for Dynamic IP address and is commonly selected for WAN IP address when NAT is selected. Once selected, the IP address, Subnet mask, and Gateway IP will be automatically assigned. Remember to click Submit button to get effective.

PPPoE:

This is for ADSL IP address when PPPoE protocol is used. Once selected, the user needs to enter the PPPoE username and password, and the WAN port will get an IP automatically.

Bridge LAN mode:

The Bridge LAN mode can be selected when NAT is not needed. In this case, the WAN and LAN port are transparent as Ethernet Bridge Hub. Note that the embedded NAT is enabled at default.

WAN Settings

You could configure the WAN settings in this page.

LAN Mode: ☒ Bridge ☐ NAT

WAN Setting

IP Type: ☐ Fixed IP ☒ DHCP Client ☐ PPPoE

IP: 192.168.1.110

Mask: 255.255.255.0

Gateway: 192.168.1.1

DNS Server1: 168.95.192.1

DNS Server2: 168.95.1.1

MAC: 003100051801

PPPoE Setting

User Name:

Password:

Submit

Reset

8. SIP Settings: You may configure up to 3 SIP registration accounts with the 3 realms in Service Domain Settings.

Realm 1 (Default for 1st SIP registration account)

Active: ON
Display Name: 206
User Name: 206
Register Name: 206
Register Password: 1234
Proxy Server: 220.228.43.172:5070
Domain Server: 220.228.43.172:5070
Outbound Proxy:

Realm 2 & 3 (for 2nd & 3rd SIP registration accounts)

Active: ON
Display Name: 371
User Name: 371
Register Name: 371
Register Password: 1234567
Proxy Server: 210.72.128.106:5060
Domain Server: 210.72.128.106:5060
Outbound Proxy:

Service Domain Settings

You could set information of service domains in this page.

Realm No.:

Realm 1 ▾

Realm

Active: ☒ On ☐ Off

Display Name:

User Name:

Register Name:

Register Password:

Domain Server:

Proxy Server:

Outbound Proxy:

Subscribe for MWI: ☐ On ☒ Off

Status: Not Registered

Service Domain Settings

You could set information of service domains in this page.

Realm No.:

Realm 2 ▾

Realm

Active: ☒ On ☐ Off

Display Name:

User Name:

Register Name:

Register Password:

Domain Server:

Proxy Server:

Outbound Proxy:

Subscribe for MWI: ☐ On ☒ Off

Status: Not Registered

SIP Account Number Selections

With 3 SIP account registered numbers, the VP306 may receive all the incoming calls from the 3 SIP servers. **Realm 1, 2, and 3** are used to configure the registered numbers for the 1st, 2nd, and 3rd SIP servers, respectively. VP306 may register different phone numbers to different SIP servers. You may press function key **LINE-2** to select for the 2nd SIP server, and the LCD will display the **<phone number>** for the SIP server registration. You may also press **2_*_Speaker** to select for the 2nd SIP server. In the same way, you may press **LINE-3** (or **3_*_Speaker**) to select for the 3rd SIP server. The **LINE-1** is used at default. Make sure all the Realm 1, 2 and 3 are all registered and the LED indicator **REG** will be **ON**.

9. The LCD will display the registered **<phone number>** after successful SIP registration to the 1st SIP server at default.

Step 5: Making Point-To-Point SIP Calls

1. Select one of the three SIP servers. Pick up the phone, and you should hear a dial tone.
2. Press **123456#** to call the party with the number **123456** registered in the SIP server. Note **#** is used to send out the call immediately. In a moment, you should hear the ring back tone, and wait for the called party to answer.
3. For more applications, please refer to the user manual for VoIP Applications Examples.

Note: 1) if you have difficulties in configuring VP306, please refer to the last chapter for trouble shootings.

- 2) VP306P is the same as VP306 with additional Power over Ethernet feature. With power supply over Ethernet cable from central Ethernet Switch, VP306 may work without external power adapter.

VP306 / VP306P

SIP VoIP Telephone

User Manual

V2.1f

Table of Content

1. Introductions.....	11
2. Features.....	11
3. Standard Compliances.....	12
4. Packing Contents.....	12
5. LED Indicators.....	12
6. Installations & SIP Configurations.....	13
7. Default Reset by Using Keypads.....	13
8. Configurations by Web Browser.....	14
9. LCD Display with Keypads Settings.....	51
10. VoIP Application Examples.....	55
11. Trouble Shooting for Web Configurations.....	59

1. Introductions

The VP306 is an IP Telephone with SIP Protocols for Voice over IP (VoIP) applications. Connecting to the Internet, the VP306 can make a VoIP call over the Internet. The VP306 provides one WAN port for Internet ADSL connections, and one LAN port for Notebook PC. With an embedded NAT/DHCP server, VP306 can be easily configured for different network diagrams by IE Web browser and telephone keypads. VP306P is the same as VP306 with additional Power over Ethernet feature. With power supply over Ethernet cable from central Ethernet Switch, VP306 may work without external power adapter. It is very convenient for ITSP (Internet Telephony Service Providers) and SOHO users to make VoIP calls with registrations to IP PBX.

Note that VP306 requires an IP address, a subnet mask, and its gateway Router IP address for its own use to connect to Internet. These three are available from your Internet service provider. VP306 may enable PPPoE or DHCP features to automatically get an assigned dynamic IP from the ITSP. Please refer to Section 8 Configurations by Web Browser for detailed information.

2. Features

Equipped with two RJ45 connectors VP306 is featuring as the following

- Two LED Indicators: **REG** for registration, **VMS** for voice mail
- RJ45 x 2 for WAN and LAN ports
- Support Power over Ethernet feature (for VP306P only)
- Configurations by Web Browser and Telephone Keypads
- Embedded NAT/DHCP Server
- PPPoE/DHCP Client for Dynamic IP plus NAT, DNS, and DDNS Clients
- Support STUN server for NAT Traversal
- Support registrations for up to 3 SIP Servers.
- Hot Line Mode
- Support SMS of VOIP (SIP server need to support)
- Dial Plan Settings
- Speaker Phone, Voice Message (VMS) for incoming IP calls
- Call Forward/Transfer/Waiting/Hold, and 3-Way Conference Call features
- Auto Configurations by TFTP, HTTP, or FTP server
- Remote Firmware Upgraded with HTTP or TFTP server by Web PC
- Direct IP/URL Dial without SIP Proxy or Dial number via SIP server
- Telephone features: Volume Adjustment, Phone book, Redial
- Function Keys: Speed Dial, 3 SIP Registration Lines, DND, VMS, and Pickup
- Out-Band DTMF (RFC 2833) / In-Band DTMF / Send DTMF SIP Info

3. Standard Compliances

The VP306 VoIP Phone supports for the following standards

VoIP Protocol:	IETF RFC3261 and RFC 2543 for SIP
SIP Authentication:	IETF RFC2069 and RFC 2617 for MD5
Speech Codec:	ITU-T G.711, G.723, G.729A/B, VAD and CNG
Echo Cancellation:	ITU-T G.165/168

4. Packing Contents

Inside the package you should find:

- (1) One VP306 SIP Phone
- (2) One AC to DC Power Adaptor (9~12VDC/1A)
- (3) One User Manual CD

Please check if the packing is damaged or any component is missing. If so, please contact your distributor.

5. LED Indicators

On the front panel of VP306, there are three LED indicators as the following

REG: “**Green On**” indicates successful registration at SIP server.

VMS: “**Red Flashing**” indicates there are voice messages for incoming VoIP call.

To hear the message you may press the **Speaker Phone** key then **VMS** function key.

6. Installations & SIP Configurations

1. Connect VP306 RJ45 WAN port to NAT Router using a Category 5 LAN cable.
2. Connect RJ45 LAN port to Notebook PC using a Category 5 LAN cable.
3. Connect DC Power Adaptor. The LCD Panel will start displaying "Loading Program" for about 5 seconds, and the LEDs will be ON and start initializations.
4. The LCD panel will show **Date**, **Time** and **No service** without SIP registration, or **<phone number>** after successful SIP registration.
5. Pick up the phone, and you will hear a dial tone and the LCD panel will show **IP Dialing.. 1**. If you hear a busy tone, please check if the WAN port is connected and hang up.
6. Press **Menu_7_4**, and **test** (i.e. press **8** two times **_3** three times **_7** five times **_8** two times **_enter**) to enter password first. Press **Menu_4_5** from keypad to read WAN and LAN IP addresses. The default LAN IP address is **192.168.123.1**.
7. Go to Chapter 8 and you may enter this IP address in IE Web browser for web configurations. Configure and register VP306 into your SIP server. There are more details and examples for VoIP application of SIP registrations in Chapter 10.
8. If VP306 has successfully registered in the SIP server, the LED **REG** will turn ON.
9. Pick up the phone, and press **123456#** to call the party with the number **123456** registered in the SIP server. Note that **#** will dial out the number immediately. Dialing without **#** will not dial out until the auto dial timer (default=5 seconds) elapsed. In a moment, you should hear a ring back tone, and wait for answer.

7. Default Reset by Using Keypads

Press **Menu / 7.Administrator / 3.Default setting / 1.Load default** by using Menu and arrow keys to reset back to factory defaults, and the LCD panel will show **Set Default....** In 5 seconds, the LCD will start showing **Loading Program** and **System Initialized**. The VP306 will reset to default and restart.

Press **Menu / 7.Administrator / 7.Restart** to reboot VP306. In 5 seconds, the LCD will start showing **Loading Program** and **System Initialized**.

8. Configurations by Web Browser

You may enter the IP address from PC Web browser to configure VP306. For example, enter <http://192.168.123.1:9999> from IE web browser to display login page as follows.

- 8.1. Please enter the default IP address <http://192.168.123.1:9999> from PC Web browser.

The following Web page shall be displayed on PC. If you have difficulties accessing the Web page from the PC Web browser, the subnet IP of PC might be different from [192.168.123.xxx](#). In this case, please refer to Chapter 9 for trouble shooting.

A screenshot of a web browser displaying a login page titled "Login VoIP". The page has a yellow background and a red header bar. Below the header, it says "Enter your username and password to login" and "VoIP server". There are two input fields: "Username" and "Password". At the bottom, there are two buttons: "Login" and "Clear".

Login VoIP

Enter your username and password to login

VoIP server

Username

Password

Login Clear

- 8.2. Please enter the username and password into the blank field. The default settings are:

Username: **root**

Password: **test**

- 8.3. Click the "**Login**" button to enter the System information page for web configurations.

Whenever you change the setting in each Web page, remember to click the "Submit" button in the page, and click the "Save" button to save into the non-volatile memory and click the "Reboot" button to activate the new settings.

System Information

- 8.4. The system information shows firmware version, Codec, etc.
- 8.5. You may click the buttons, for example Phone Book, at the left hand side to configure the VP306.

System Information

This page illustrate the system related information.

Model Name:	VoIP Phone
Firmware Version:	Thu Nov 20 15:47:11 2008 (02fa)
Codec Version:	Wed Jul 30 09:43:18 2008.
Call Status	
Protocal	SIP
Realm #1	Not Registered
Realm #2	Not Registered
Realm #3	Not Registered
WAN Status	
MAC address	20092600394c
IP address/Netmask	192.168.62.108 / 255.255.255.0 [DHCP Client]
Gateway	192.168.62.1
DNS	168.95.192.1 / 168.95.1.1
LAN Status	
IP address/Netmask	192.168.123.1 / 255.255.255.0 [DHCP Server]

Phone Book

Phone Book Settings

- 8.6. You may add/delete **Name** up to maximum 140 entries in Phone book list.
- 8.7. To add a phone name, you need to enter the position, the name, and the phone URL. When you finished a new phone list, just click the “Add Phone” button.
- 8.8. To delete a phone name, please select the phone name then click “Delete Selected” button.
- 8.9. To delete all phone names, please click “Delete All” button.
- 8.10. After dialing a phone number, the VP306 will first match with the **Name** in the phone book. If matched, VP306 will send out the corresponding URL instead. If not, the same dialed number will be sent out.

Example 1: Name: 333, URL: 192.168.1.100

Press 333# on telephone, and the phone at 192.168.1.100 will start ringing.

Example 2: Name: 201, URL: 14081234567

Press **201#** on telephone, and VP306 will call the registered number **14081234567**.

Example 3: Name: **301**, URL: **192.168.1.100:5062**

Press **301#** on telephone, and VP306 will call at **192.168.1.100** with port **5062**.

Example 4: No Name **401** in phone book.

Press **401#** on telephone, and VP306 will call the registered number **401**.



Phone Book ▶

Phone Setting ▶

Network ▶

SIP Settings ▶

NAT Trans. ▶

Others ▶

System Auth.

Save Change

Update ▶

Reboot

Phone Book

You could add/delete items in current phone book.

Phone Book Page: page 1 ▼

Phone	Name	URL	Select
0			<input type="checkbox"/>
1	234	james@voip.sipserver.com	<input type="checkbox"/>
2	333	192.168.1.100	<input type="checkbox"/>
3	fwd	612345	<input type="checkbox"/>
4			<input type="checkbox"/>
5			<input type="checkbox"/>
6			<input type="checkbox"/>
7			<input type="checkbox"/>
8			<input type="checkbox"/>
9			<input type="checkbox"/>

Delete Selected

Delete All

Reset

Add New Phone

Position: (0~139)

Name:

URL:

Add Phone

Reset

Speed Dial Phone List

8.11. You can add/delete Speed Dial number up to maximum 10 entries in Speed Dial Phone List.

8.12. If you need to add a phone number into the Speed Dial list, you need to enter the position, the name, and the URL. Click the “Add Phone” button to finish the setting.

8.13. To delete a phone number, please select the phone number you want to delete then click “Delete Selected” button. If you want to delete all phone numbers, please click “Delete All” button.

Example 1: Press **2#** from keypad to Speed Dial the phone number **2** immediately.

Example 2: Press **M2** function key will Speed Dial the phone number **2** immediately.



Speed Dial Phone List

You could set the speed dial phones in this page.

Phone	Name	URL	Select
0			<input type="checkbox"/>
1	james	james@voip.sipserver.com	<input type="checkbox"/>
2	user	192.168.1.100	<input type="checkbox"/>
3	fwd	612345	<input type="checkbox"/>
4			<input type="checkbox"/>
5			<input type="checkbox"/>
6			<input type="checkbox"/>
7			<input type="checkbox"/>
8			<input type="checkbox"/>
9			<input type="checkbox"/>

Add New Phone

Position: (0~9)
Name:
URL:

Phone Setting

Call Forward


8.14. You can select the forward mode and enter the forward URL.

All Forward: All incoming call will forward to the URL you choose.

Busy Forward: The incoming call will forward to the URL when you are busy and on the phone.

No Answer Forward: The incoming call will forward to the URL when no answer.

8.15. You need to set the Time Out ring which will initiate No-Answer forwarding to the number you choose. When you finished the setting, please click the “Submit” button.

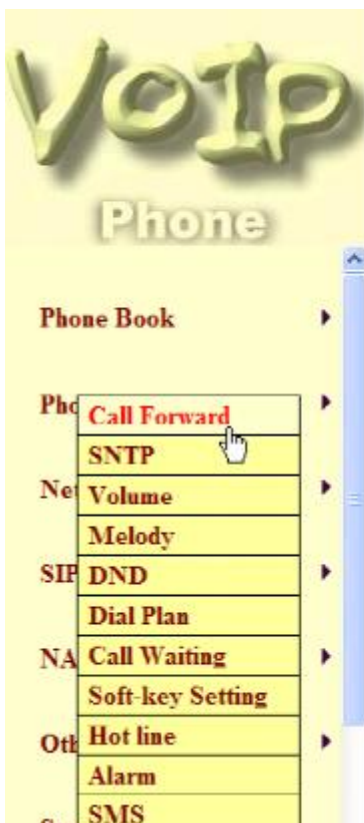

Forward Setting

You could set the forward number of your phone in this page.


All Forward: ☒ Off ☐ On
Busy Forward: ☒ Off ☐ On
No Answer Forward: ☒ Off ☐ On

	Name	Number or URL
All Fwd No.:	<input type="text"/>	<input type="text"/>
Busy Fwd No.:	<input type="text"/>	<input type="text"/>
No Answer Fwd No.:	<input type="text"/>	<input type="text"/>

No Answer Fwd Time Out: (2~8 Ring)

SNTP

8.16. You can setup the primary and the second SNTP Server IP Addresses to get the date/time information. You may also set the Time Zone, and how long need to synchronize again. When you finished the setting, please click the “Submit” button.

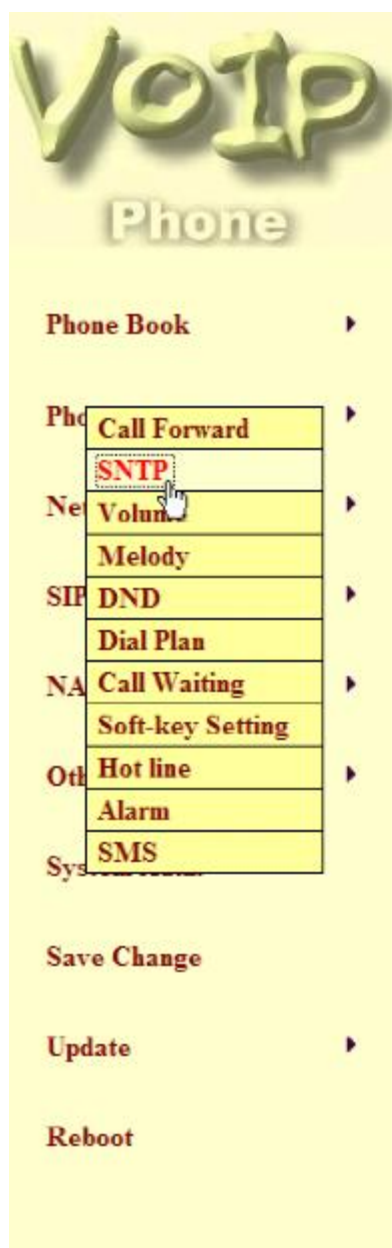

SNTP Settings

You could set the SNTP servers and Daylight Saving Time (DST) in this page.

SNTP: ☒ On ☐ Off

Primary Server:

Secondary Server:

Time Zone: GMT (hh:mm)

Sync. Time: (dd:hh:mm)

Daylight Saving: ☐ On ☒ Off

DST Offset:

DST Start Date:

☒ Day of Month

☐ Week of Month

Start Time:

DST End Date:


☒ Day of Month

☐ Week of Month

End Time:

Volume

8.17. You can setup the Handset Volume/Gain, Ringer Volume, and Speaker Volume/Gain in this page. Handset/Speaker Volume is to set the volume hearing from the handset/Speaker. Handset Gain is to set the volume send out from the handset. Speaker Gain is to set the volume send out from the microphone at the bottom of VP306.

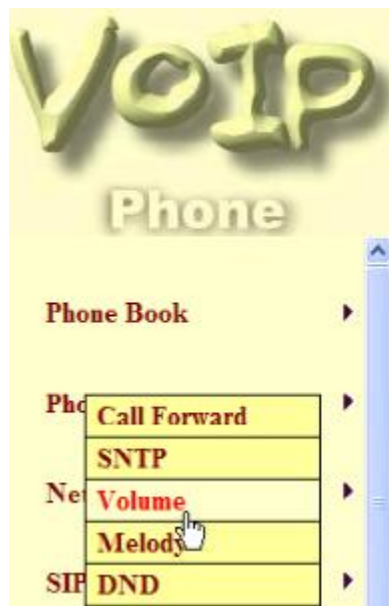

Volume Setting

You could set the volume of your phone in this page.

Handset Volume: (0~14)

Speaker Volume: (0~14)


Ringer Volume: (0~10)

Handset Gain: (0~14)

Speaker Gain: (0~14)

Melody

8.18. You can select the ringer melody type for the incoming call.

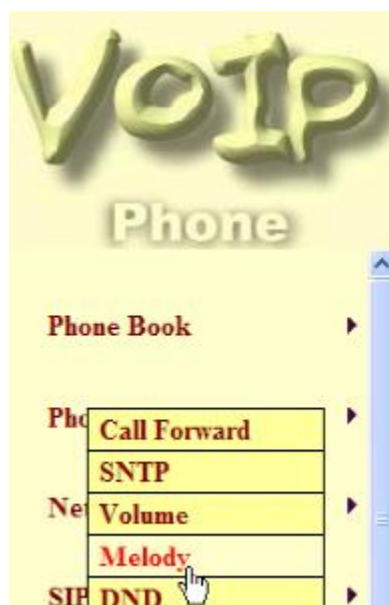

Ringer Settings

You could set your favorite ringer in this page.

Ringer: ☐ On ☒ Off

Ringer Type:

DND

8.19. You can setup the DND (Do Not Disturb) to keep the phone silence. You can choose DND Always or DND period. .

DND Always: All incoming call will be blocked until the feature is disabled.

DND Period: Set a time period and the phone will be blocked during the time period. If the “From” time is large than the “To” time, the block time will from Day 1 to Day 2.

When you finished the setting, please click the Submit button.



DND Setting

You could set the do not disturb period of your phone in this page.

DND Always: ☐ On ☒ Off

DND Period: ☐ On ☒ Off

From: (hh:mm)

To: (hh:mm)

Submit

Reset

Dial Plan

8.20. Dial plan and auto dial timer settings can be set in this page. The dial plan allows you to map the dialing into an easy-to-remember phone number system. The auto dial timer specifies the elapse time between the dialing digits. When Drop prefix is ON and the dialing prefix is matched, the prefix will be dropped and replaced by the rule digits and followed by the rest of dialing digits. When Drop prefix is OFF and the dialing prefix is matched, the rule digits will be added before the dialing digits in accord with the settings.

8.21. Symbol Representations:

Symbol	Representations
x or X	0,1,2,3,4,5,6,7,8,9
+	or

Example 1: Drop Prefix: **No**, Replace rule 1: **002, 8613+8662**

- a) Pressing **8613xxx** will result in dialing out **002+8613+xxx**.
- b) Pressing **8662xxx** will result in dialing out **002+8662+xxx**.

Example 2: Drop Prefix: **Yes**, Replace rule 2: **006, 002+003+004+005+007+009**

- a) Pressing **002xxx** will result in dialing out **006+xxx**.
- b) Pressing **003xxxx** will result in dialing out **006+xxxx**.

Example 3: Drop Prefix: **No**, Replace rule 3: **009, 12**

- a) Pressing **12xxx** will result in dialing out **009+12xxx**.

Example 4: Drop Prefix: **No**, Replace rule 4: **007, 5xxx+35xx+21xx**

- a) Pressing **5xxx** will result in dialing out **007+5xxx**.
- b) Pressing **534** will result in dialing out **534** (not matched for the rest 3 digits).
- c) Pressing **35xx** will result in dialing out **007+35xx**.
- d) Pressing **356** will result in dialing out **356** (not matched for the rest 2 digits).
- e) Pressing **35668** will result in dialing out **35668** (not matched for the rest 2 digits).

Example 5: Dial Now: ***xx+#xx+11x+1[237]xx+xxxxxxxx**

- a) Pressing ***00, *01, *02 .. *99** will result in dialing out the same ***xx immediately**.
- b) Pressing **#00, #01, #02 .. #99** will result in dialing out the same **#xx immediately**.
- c) Pressing **110, 111, .. 119** will result in dialing out the same **11x immediately**.
- d) Pressing **1200,..1299, 1300, ..1399, 1700,..1799** will result in dialing out the same **1[237]xx immediately**.
- e) Pressing **12345678** (8 digits) will result in dialing out **12345678 immediately**. This implies that the phone numbers with 9 or more digits are prohibited.

8.22. Auto Dial Timer: The inter-digit timer. Default is 5 seconds.

8.23. When you finish the setting, please click the Submit button.

8.24. Click the Save button. The changes you have made will be saved and the VP306 will reboot automatically.

Dial Plan

You could the set the dial plan in this page.

Drop prefix :	<input type="radio"/> Yes <input checked="" type="radio"/> No
Replace rule 1:	<input type="text" value="002"/> + <input type="text" value="8613+8662"/>
Drop prefix :	<input checked="" type="radio"/> Yes <input type="radio"/> No
Replace rule 2:	<input type="text" value="006"/> + <input type="text" value="002+003+004+005+007+009"/>
Drop prefix :	<input type="radio"/> Yes <input checked="" type="radio"/> No
Replace rule 3:	<input type="text" value="009"/> + <input type="text" value="12"/>
Drop prefix :	<input type="radio"/> Yes <input checked="" type="radio"/> No
Replace rule 4:	<input type="text" value="007"/> + <input type="text" value="5xxx+35xx+21xx"/>
Dial now:	<input type="text" value="*xx+#xx+11x+1[237]xx+xxxxxxxx"/>
	<input type="text"/>
	<input type="text"/>
	<input type="text"/>
	Exp: 1[137]XX+345XX+45XX67
Auto Dial Time:	<input type="text" value="5"/> (3~9 sec)
Use # as send key:	<input checked="" type="radio"/> Yes <input type="radio"/> No
Use * for IP dialing:	<input checked="" type="radio"/> Yes <input type="radio"/> No
None SIP server mode:	<input type="text"/>

Call Waiting

8.25. When call waiting is set ON, you will hear an interrupt “dodo” tone over the phone to remind that there is an incoming call from the third party.

Call Waiting Setting

You could enable/disable the call waiting setting in this page.

Call Waiting: ☒ On ☐ Off

Submit

Reset

Soft Key

8.26. You can configure the pickup and VMS key setting to co-work with IP PBX in this page.

Soft-key Setting

You could configure the soft-key setting in this page.

Pick up key:

Voice mail key:

Submit

Reset

Pick Up & Voice Mail

8.27. VP306 may pick up the incoming call for another VP306 when registered in the same IP PBX. When you hear other VP306 is ringing, you may pick up you phone and press **Pick Up** function key to answer for that VP306. You may press the **Speaker Phone** key then **Pick Up** function key as well.

8.28. When registered in IP PBX with incoming voice message, the LED **VMS** will start flashing. To hear the message you may press the **Speaker Phone** key then **VMS** function key. You may also pick up the phone and press **VMS** function key.

Hot Line

- 8.29. You can enable/disable and set Hot Line phone number in this page.
- 8.30. When Hot Line mode is enabled, you just pick up the phone and the VP306 will call the Hot line number immediately. The default for Hot Line mode is disabled.
- 8.31. Hot-Line Mode is very convenient for IP calling to Public Switching Telephone Network (PSTN) number through FXO Gateway

Hot line Setting

You could set the hot line in this page.

Use Hot Line : ☐ Enable ☒ Disable

Hot line number:

Alarm

- 8.32. You can configure the Alarm setting in this page.

Alarm Settings

You could set the alarm time in this page.

Alarm: ☐ ON ☒ OFF

Alarm Time: : (hh:mm)

Current time: 2007-01-23 10:06

SMS

8.33. VP301 supports each instant short text message (160 characters) with maximum 30 messages, If received the messages surpass 30 will over-write from first message. The LCD play "Got Message" is indicate have received short text messages, Press Menu / 3. Phone Setting / 8. SMS of Keypad can read the short text message and also can follow the webpage to read, send, replay or delete the short text messages.

Send Message

You could send message to other phone number.

Number:

Message:

Send

Reset

No.	From	Message	Time	Function
No Message				


8.2.

Network

8.34. You can check the Network status, and configure the WAN, LAN, DDNS, and VLAN settings in this section.

Network Status

8.35. You can check and show the current Network setting in this page.

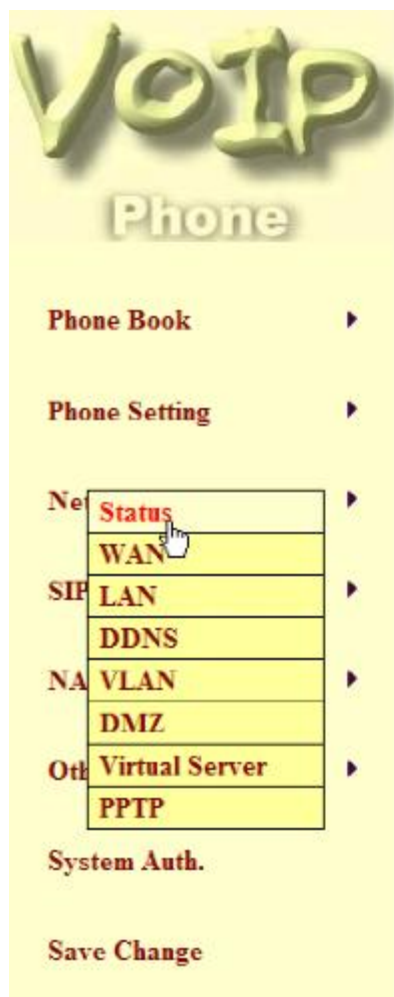

Network Status

This page shows current status of network interfaces of the system.

System Up Time:	0 day(s) 0 hour(s) 45 minute(s)
Network Link Up Time:	0 day(s) 0 hour(s) 45 minute(s)
NAT Type:	Port restricted cone

Interface 0


Type:	DHCP Client
IP:	192.168.62.108
Mask:	255.255.255.0
Gateway:	192.168.62.1
DNS Server 1:	168.95.192.1
DNS Server 2:	168.95.1.1

Interface 1

Type:	DHCP Server
IP:	192.168.123.1
Mask:	255.255.255.0
Gateway:	192.168.123.1
DNS Server 1:	168.95.192.1
DNS Server 2:	168.95.1.1

WAN Settings

- 8.36. The WAN setting is used to configure the Ethernet port connects to the ADSL Modem/Router.
- 8.37. The default setting is NAT mode for IP Phone, and this enables the embedded NAT router between the LAN port and PC port. You may change to Bridge Mode if you need NOT use the embedded NAT router. When setting to Bridge Mode, the WAN and the LAN ports will be bridged.
- 8.38. There are three selections for WAN: Fixed IP, DHCP Client, and PPPoE modes. This WAN setting is for the LAN port when set in NAT mode. The WAN default is at DHCP Client Mode.
- 8.39. For Fix IP Mode, please make sure the IP address, Net Mask, Gateway, and DNS settings are suitable in your current network environment.
- 8.40. For PPPoE Mode, you have to enter correct username and password to get the IP address from your Internet Service Provider.
- 8.41. When you finished the setting, please click the Submit button.

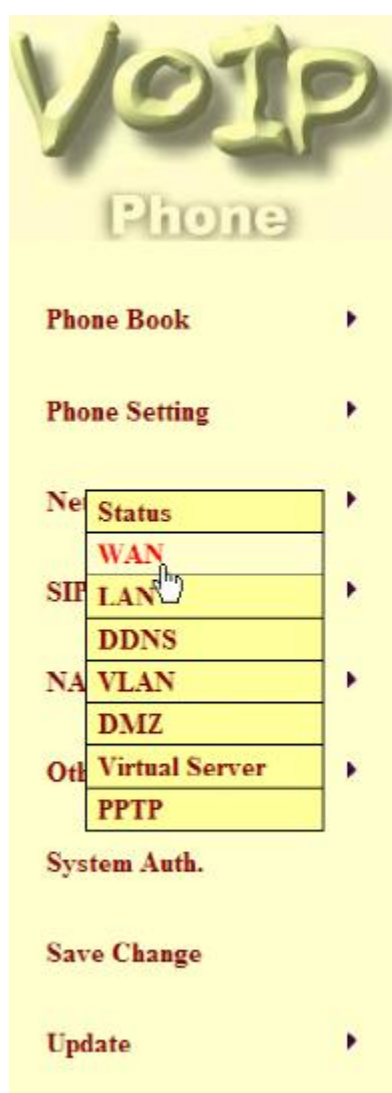

WAN Settings

You could configure the WAN settings in this page.

LAN Mode: ☐ Bridge ☒ NAT

WAN Setting

IP Type: ☐ Fixed IP ☒ DHCP Client ☐ PPPoE

IP:

Mask:

Gateway:

DNS Type: ☒ Fixed ☐ Auto

DNS Server1:

DNS Server2:

MAC:

Host Name:

PPPoE Setting

User Name:

Password:

Service Name:

LAN Settings

8.42. The default IP address is 192.168.123.1 for VP306, with Net Mask 255.255.255.0., and DHCP Server enabled. The IP addresses for DHCP are from 150 to 200.

8.43. Connect your PC to the PC port, set your PC as DHCP Client mode, and then the PC will get an IP address from the VP306 automatically.

8.44. When you finished the setting, please click the Submit button.



LAN Settings

You could configure the LAN settings in this page.

LAN Setting

IP:	<input type="text" value="192.168.123.1"/>
Mask:	<input type="text" value="255.255.255.0"/>
MAC:	<input type="text" value="20092600394c"/>

DHCP Server

DHCP Server:	<input checked="" type="radio"/> On <input type="radio"/> Off
Start IP:	<input type="text" value="150"/>
End IP:	<input type="text" value="200"/>
Lease Time:	<input type="text" value="1"/> <input type="text" value="0"/> (dd:hh)

DDNS Settings

8.45. You can configure the DDNS setting in this page. You need to have the DDNS account and input the informations properly. You need a DDNS account with a public IP address then others can call you via the DDNS account. Most of the VoIP applications are working with a SIP Proxy Server as well as DDNS Server. When you finished the setting, please click the Submit button.

DDNS Settings

You could set the configuration of DDNS in this page.

DDNS:

☒ On ☐ Off

Host Name:	<input type="text" value="voipphone.dyndns.org"/>
User Name:	<input type="text" value="test"/>
Password:	<input type="password" value="••••"/>
E-mail Address:	<input type="text"/>

DDNS Server:	<input type="text"/>
DDNS Server List:	<input type="text" value="members.dyndns.org"/> ▼
Type:	<input type="text" value="dyndns"/> ▼
Wild Card:	<input type="text" value="on"/> ▼

BACKMX:	<input type="radio"/> On <input checked="" type="radio"/> Off
Off Line:	<input type="radio"/> On <input checked="" type="radio"/> Off

VLAN Settings

8.46. The VLAN setting is for VoIP packets related to WAN port.


8.47. VLAN Packets: If you enable VLAN Packets and set the VID, User Priority, and CFI, then all the incoming packets will be checked with the IP Address and the VID.

8.48. VID: Please set your VID in accordance with your service provider.

8.49. User Priority: Defines user priority with eight (2^3) priority levels. IEEE 802.1P defines the operation for these 3 user priority bits. Usually, this will be defined by your service provider.

8.50. CFI: Canonical Format Indicator is always set to zero for Ethernet switches. CFI is used for compatibility between Ethernet type network and Token Ring type network. If a frame received at an Ethernet port has a CFI set to 1, then that frame should not be forwarded as it is to an untagged port.

8.51. When you enable the first VLAN Packets and set the VID, User Priority, and CFI, then all the incoming packets with the IP Phone's IP address and the same VID will be accepted by the IP Phone. If the incoming packets with IP Phone's IP address but different VID then the packets will be discarded by the IP Phone.

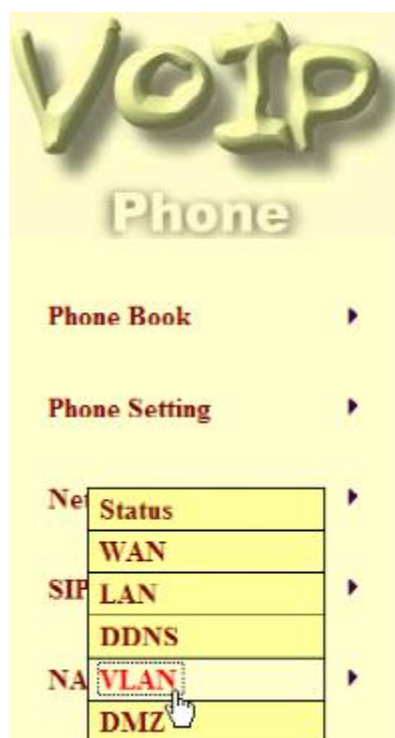

VLAN Settings

You could set the VLAN settings in this page.

VLAN Packets:	<input type="radio"/> On	<input checked="" type="radio"/> Off
VID (802.1Q/TAG):	<input type="text" value="136"/>	(2 ~ 4094)
User Priority (802.1P):	<input type="text" value="0"/>	(0 ~ 7)
CFI:	<input type="text" value="0"/>	(0 ~ 1)


Notes :

When WAN port set to NAT Mode with VLAN enabled, please make sure the PC or network device on LAN port must support the same VLAN function to pass through WAN port.

When WAN port set to Bridge Mode with VLAN enabled, the VLAN will only function on IP Phone. The packets from LAN port, will pass through WAN without VLAN function.

DMZ

8.52. The DMZ can be enabled/disabled and configured in this page.

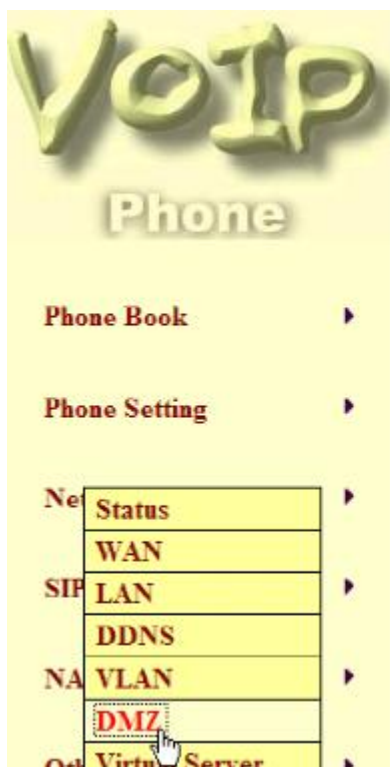

DMZ Setting


You could configure your demilitarized zone setting in this page.

DMZ: ☐ On ☒ Off

DMZ Host IP:

Virtual Server

8.53. The Virtual Server IP and Port numbers can be configured in this page.

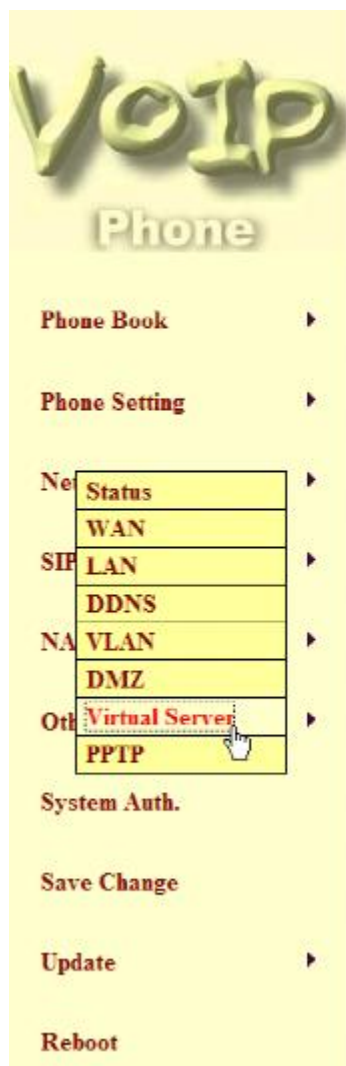

Virtual Server Settings

You could set your virtual servers in this page. The usual port numbers are WEB [TCP 80], FTP (Control) [TCP 21], FTP(Data) [TCP 20], E-mail(POP3) [TCP 110], E-mail(SMTP) [TCP 25], DNS [UDP 53] and Telnet [TCP 23].

Virtual Server Page: page 1

Num	Enable	Protocol	In Port	Ex Port	Server IP	Select
0	<input type="checkbox"/>					<input type="checkbox"/>
1	<input type="checkbox"/>					<input type="checkbox"/>
2	<input type="checkbox"/>					<input type="checkbox"/>
3	<input type="checkbox"/>					<input type="checkbox"/>
4	<input type="checkbox"/>					<input type="checkbox"/>
5	<input type="checkbox"/>					<input type="checkbox"/>
6	<input type="checkbox"/>					<input type="checkbox"/>
7	<input type="checkbox"/>					<input type="checkbox"/>

Add Virtual Server

Server IP:
Protocol:
Internal Port Start: Internal Port End:
External Port Start: External Port End:

PPTP Setting

8.54. The PPTP Server can be set ON/OFF in this page.

PPTP Settings

You could set the PPTP server in this page.

PPTP: ☐ On ☒ Off

PPTP Server:
PPTP Username:
PPTP Password:

SIP Settings

Service Domain Settings

8.55. You can setup the Service Domain, Port Settings, Codec Settings, RTP Setting, RPort Setting and Other Settings for SIP Proxy Server registrations in this page.

8.56. You may register up to three SIP Servers for three Realms in the VP306. You can receive the incoming calls from all the three SIP Servers. For outgoing calls, you may select the registration SIP server first, and then call the associated registration phone number.

Example 1: To select SIP Server 1 (default), please pickup the phone, press **1_***, then hangup.

Example 2: To select SIP Server 2 (or 3), you may press **2_*_Speaker** (or **3_*_speaker**).

8.57. Click “**Active**” ON to enable the Service Domain, then enter the following items:

8.58. **Display Name:** enter the name you want to display.

8.59. **User Name:** enter the User Name given by your ITSP.

8.60. **Register Name:** enter the Register Name given by your ITSP.

8.61. **Register Password:** enter the Register Password given by your ITSP.

8.62. **Domain Server:** enter the Domain Server given by your ITSP.

8.63. **Proxy Server:** enter the Proxy Server given by your ITSP.

8.64. **Outbound Proxy:** enter the Outbound Proxy of ITSP. If not provided, you may skip this.

8.65. When it shows “**Registered**” in the Register Status, it indicates a successful registration to the ITSP, and the “**REG**” LED will turn **ON**. The VP306 is then ready for VoIP call.

8.66. After you finished the setting, please click the “Submit” button.



Service Domain Settings

You could set information of service domains in this page.

Realm No.:

Realm 1

Realm

Active: ☐ On ☒ Off

Display Name:

User Name:

Register Name:

Register Password:

Domain Server:

Proxy Server:

Outbound Proxy:

Subscribe for MWI: ☐ On ☒ Off

Status: Not Registered

Submit

Reset

Realm No.:

Realm 1
Realm 1
Realm 2
Realm 3

Realm

Active:

Click selection?

Port Settings

8.67. The SIP Port and RTP Port numbers are default at 5060 and 60000, respectively. The RTP port number must be even number. If you have more than one VoIP phones under the same NAT router, it is recommended that different RTP port numbers be assigned to each of IP Phones.

Port Settings

You could set the port number in this page.

SIP Port:	<input type="text" value="5060"/>	(0~65533) (Set 0 for auto, range as bellow)
RTP Port:	<input type="text" value="20000"/>	(0~65533) (Set 0 for auto, range as bellow)
SIP Port Range:	<input type="text" value="10000"/>	~ <input type="text" value="10999"/> (1024~40000)
RTP Port Range:	<input type="text" value="20000"/>	~ <input type="text" value="21999"/> (1024~40000)

Codec Settings

8.68. You can setup the Codec priority, RTP packet length, and VAD function in this page. When you finished the setting, please click the Submit button.

Codec Settings

You could set the codec settings in this page.

Codec Priority	
Codec Priority 1:	G.711 u-law ▼
Codec Priority 2:	G.711 a-law ▼
Codec Priority 3:	G.723 ▼
Codec Priority 4:	G.729 ▼
Codec Priority 5:	Not Used ▼
Codec Priority 6:	Not Used ▼
Codec Priority 7:	Not Used ▼
Codec Priority 8:	Not Used ▼
Codec Priority 9:	Not Used ▼

RTP Packet Length	
G.711 & G.729:	20 ms ▼
G.723:	30 ms ▼

G.723 5.3K	
G.723 5.3K:	<input type="radio"/> On <input checked="" type="radio"/> Off

Voice VAD	
Voice VAD:	<input type="radio"/> On <input checked="" type="radio"/> Off

Codec ID Settings

8.69. You can set the Codec ID to meet the other device's requirement. When you finished the setting, please click the Submit button.

Codec ID Setting

You could set the value of Codec ID in this page.

Codec Type	ID	Default Value
G726-16 ID:	<input type="text" value="23"/> (95~255)	<input checked="" type="checkbox"/> 23
G726-24 ID:	<input type="text" value="22"/> (95~255)	<input checked="" type="checkbox"/> 22
G726-32 ID:	<input type="text" value="2"/> (95~255)	<input checked="" type="checkbox"/> 2
G726-40 ID:	<input type="text" value="21"/> (95~255)	<input checked="" type="checkbox"/> 21
RFC 2833 ID:	<input type="text" value="101"/> (95~255)	<input checked="" type="checkbox"/> 101

DTMF Settings

8.70. You can setup the options for DTMF function in this page. The options include RFC2833 (Outband DTMF), Inband DTMF, and Send DTMF SIP info. If you are making two-stage callings for extension to PSTN, you might need to select RFC2833 DTMF option.

DTMF Setting

You could set the DTMF setting in this page.

- ☒ RFC 2833
- ☐ Inband DTMF
- ☐ Send DTMF SIP Info

RPort Function

8.71. You can enable/disable the RPort in this page. To change this setting, please follow your ISP information. When you finished the setting, please click the Submit button.

RPort Setting

You could enable/disable the RPort setting in this page.

RPort:

☒ On ☐ Off

Submit

Reset

Other Settings

8.72. You can setup the Hold by RFC and QoS in this page. To change these settings please follows your ITSP information. When you finished the setting, please click the Submit button. The QoS is used to set the voice packet priority. Higher value other than zero will get higher priority for the voice packets in Internet. However, the QoS function still needs to cooperate with the other Internet devices.

- SIP Expire Time: 60 (15~86400 sec, 0=defined by Server).
- Keep Alives Period: 60 (Default: 60, Range: 15 ~ 250sec) that is send keepalives messages in the RTP stream to keep NAT open.
- Jitter Buffer: 1 (Default: 1, Range: 0~250 packets)
- SIP Server Type: General, Asterisk, BroadWorks, Nortel, Xener, Vodtel.
- SIP VID: 0 (2~4094, 0: disabled). This VLAN ID is for SIP only through WAN.
- RTP VID: 0 (2~4094, 0: disabled). This VLAN ID is for RTP voice packets.



Other Settings

You could set other settings in this page.

Hold by RFC:	<input type="radio"/> On <input checked="" type="radio"/> Off
Voice QoS (Diff-Serv):	<input type="text" value="40"/> (0~63)
SIP QoS (Diff-Serv):	<input type="text" value="40"/> (0~63)
SIP Expire Time:	<input type="text" value="60"/> (15~86400 sec, 0=define by Server)
Use DNS SRV:	<input type="radio"/> On <input checked="" type="radio"/> Off
Send Keep Alives Packet:	<input type="radio"/> On <input checked="" type="radio"/> Off
Keep Alives Period:	<input type="text" value="60"/> (15~250 sec)
Jitter Buffer:	<input type="text" value="1"/> (0~250 packets)
SIP Server type:	<input type="text" value="General"/> <input type="button" value="v"/>
SIP VID (VLAN):	<input type="text" value="0"/> (2~4094, 0:disabled)
RTP VID (VLAN):	<input type="text" value="0"/> (2~4094, 0:disabled)

NAT Trans

STUN

8.73. You can Enable/Disable and configure STUN Server IP address in this page. This function helps IP Phone working properly behind NAT. To change these settings please follow your ISP information. When you finished the setting, please click the Submit button.

STUN Setting

You could set the IP of STUN server in this page.


STUN:	<input type="radio"/> On <input checked="" type="radio"/> Off
STUN Server:	<input type="text" value="stun.xten.com"/>
STUN Port:	<input type="text" value="3478"/> (80~65535)
Force Public IP:	<input type="radio"/> On <input checked="" type="radio"/> Off
Public IP address:	<input type="text"/>
Port:	<input type="text" value="5060"/> (80~65535)
<input type="button" value="Submit"/> <input type="button" value="Reset"/>	

Others

8.74. You can setup Auto Config, MAC Clone, Tone and Some Advanced Settings in this page.

Auto Configuration Setting

8.75. Auto Configuration function can be used to download the configuration file stored in the TFTP, HTTP, or FTP server. This function must co-work with the Auto Config Server. After enabling the function, please click the “Submit” button. Remember to click “Save” in the **Save Change** section. The IP Phone will then reboot and automatically download the configurations from the corresponding server. Note that the TFTP download works only for public IP address.

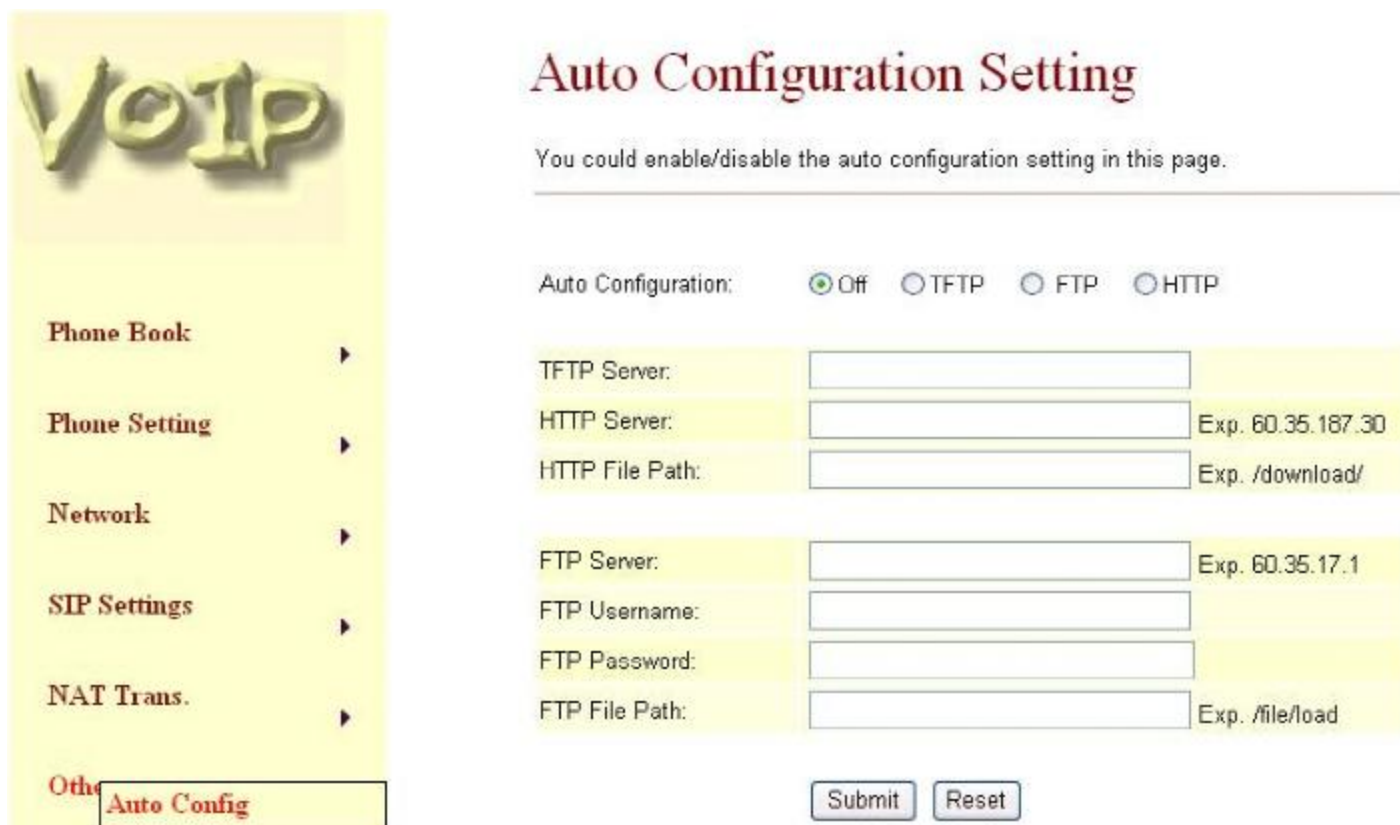

VOIP

Phone Book ▶

Phone Setting ▶

Network ▶

SIP Settings ▶

NAT Trans. ▶

Other

Auto Config

Auto Configuration Setting

You could enable/disable the auto configuration setting in this page.

Auto Configuration: ☒ Off ☐ TFTP ☐ FTP ☐ HTTP

TFTP Server:

HTTP Server: Exp. 60.35.167.30

HTTP File Path: Exp. /download/

FTP Server: Exp. 60.35.17.1

FTP Username:

FTP Password:

FTP File Path: Exp. /file/load

MAC Clone

8.76. The MAC Clone function is to clone the MAC when only one MAC is available from ITSP. This is to share with the PC using the same MAC. When you finished settings, please click the Submit button.

MAC Clone Setting

You could enable/disable the MAC clone setting in this page.

MAC Clone: ☐ On ☒ Off

Tone

8.77. The Tone setting can be adjusted to generate Dial tone, Ring tone, Ring Back tone, and Busy tone for different countries. When you finished with the settings, please click the Submit button.

Tones Settings

You could configure your tones settings in this page.

	Dial Tone	Ring Back Tone	Busy Tone	Congestion Tone	Ring Tone	Call Waiting Tone
Cadence On:	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Hi-Tone Freq.:	<input type="text" value="440"/>	<input type="text" value="480"/>	<input type="text" value="620"/>	<input type="text" value="620"/>	<input type="text" value="480"/>	<input type="text" value="440"/>
Lo-Tone Freq.:	<input type="text" value="350"/>	<input type="text" value="440"/>	<input type="text" value="480"/>	<input type="text" value="480"/>	<input type="text" value="440"/>	<input type="text" value="350"/>
Hi-Tone Gain:	<input type="text" value="4522"/>	<input type="text" value="2261"/>	<input type="text" value="2261"/>	<input type="text" value="2261"/>	<input type="text" value="15360"/>	<input type="text" value="2261"/>
Lo-Tone Gain:	<input type="text" value="4522"/>	<input type="text" value="2261"/>	<input type="text" value="2261"/>	<input type="text" value="2261"/>	<input type="text" value="15360"/>	<input type="text" value="1130"/>
On Time 1:	<input type="text" value="0"/>	<input type="text" value="200"/>	<input type="text" value="50"/>	<input type="text" value="30"/>	<input type="text" value="200"/>	<input type="text" value="30"/>
Off Time 1:	<input type="text" value="0"/>	<input type="text" value="400"/>	<input type="text" value="50"/>	<input type="text" value="20"/>	<input type="text" value="400"/>	<input type="text" value="20"/>
On Time 2:	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="30"/>
Off Time 2:	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="400"/>
On Time 3:	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>
Off Time 3:	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>

Advanced Setting

8.78. The advanced settings might be useful for some network requirements. The ICMP function is to echo when someone ping this device. This can prevent from hacker attacking the device by not echoing. When you finished the setting, please click the Submit button.

- IP Dialing format (P2P dialing): There are 3 options.
- Type 1(xx@x.x.x), by default when you dialed 192.168.1.100 , VS110 will auto prefix userip@ in your dialed IP address and send out to remote end.
- Type 2 (x.x.x.), when you dialed 192.168.1.100 , it will send 192.168.1.100 out to remote end without appending anything.
- Disable: disable IP dialing function.
- Encryption Type: Must be disabled for standard SIP protocol. Please consult your ITSP for encryption type when registered in ITSP.
- Encryption Key: Special key for encryption need.



Advanced Setting

You could change advanced setting in this page.

ICMP Not Echo:	<input type="radio"/> Yes <input checked="" type="radio"/> No
Send Anonymous CID:	<input type="radio"/> Yes <input checked="" type="radio"/> No
Management from WAN:	<input checked="" type="radio"/> Yes <input type="radio"/> No
IP Dialing format:	Type 1 (xx@x.x.x.x) ▼
Send Flash event:	Disabled ▼
Encryption Type:	Disabled ▼
Encryption Key:	●●●●●●●●●●
PPPoE retry period:	5 Seconds
System Log Server:	
System Log Type:	None ▼
<input type="button" value="Submit"/> <input type="button" value="Reset"/>	

Syslog

8.79. You can check system status log .




Status Log

```
<2005-01-01 00:00>Application starting ...
<2005-01-01 00:00>Init Wan Interface!
<2005-01-01 00:00>Iface type : DHCP_CLIENT
<2005-01-01 00:00>Init Lan Interface!
<2005-01-01 00:00>Enable DHCP_SERVER
<2005-01-01 00:00>Iface type : FIXED_IP
<2005-01-01 00:00>DHCP_SendDiscover()
<2005-01-01 00:00>Rx OFFER from 192.168.62.1
<2005-01-01 00:00>DHCP_SendRequest()
<2005-01-01 00:00>Got DHCP Ip=192.168.62.108
<2005-01-01 08:00>Get SNTP server IP=65.255.217.202
<2006-11-27 15:11>Get Time from SNTP server, Succeed!
```

System Authority

8.80. The user login name and password can be changed in this page.

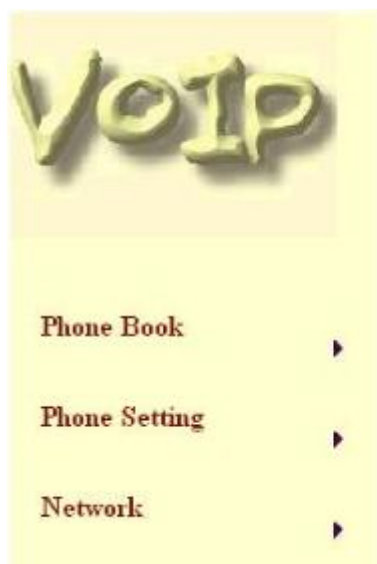


System Authority

You could change the login username/password in this page.

New username:	<input type="text"/>
New password:	<input type="password"/>
Confirmed password:	<input type="password"/>
<input type="button" value="Submit"/> <input type="button" value="Reset"/>	

Save Change

8.81. If you want to save the changes you have made for new setting in the VoIP Phone, You have to click the Save button. After you click the Save button, the VoIP Phone will automatically restart and the new setting will get effective.

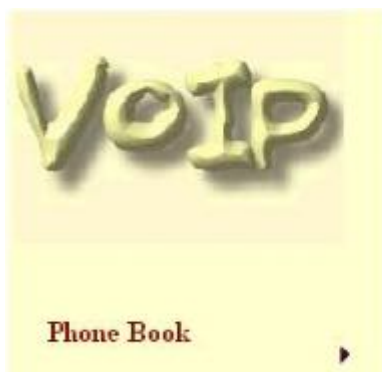

Save Changes

You have to save changes to effect them.

Save Changes:

Update

Update Firmware

8.82. The IP Phone provides two methods, HTTP or TFTP, to update new firmware as the following steps:

8.83. Select the firmware code type, Risc or DSP code. (mostly for Risc code)

8.84. Click the “Browse” button to choose the updated file location for HTTP download, or

8.85. Select TFTP and enter the IP address of TFTP server for firmware download, then click the “Update” button.



Update Firmware

You could update the newest firmware.

Method: ☒ Local PC ☐ TFTP

Local PC

Code Type: CPU xxxx.gz(.gzh) ▼

File Location: 浏览...

TFTP

TFTP Server:

Update

Reset

Auto Update Settings

8.86. The IP Phone provides two methods, HTTP or TFTP, to update new firmware as the following steps:



Auto Update Settings

You could set auto update settings in this page.

Update via: ☒ Off ☐ TFTP ☐ FTP ☐ HTTP

TFTP Server:
TFTP File Path: Exp. download

HTTP Server: Exp. 60.35.187.30
HTTP File Path: Exp. download

FTP Server: Exp. 60.35.17.1
FTP Username:
FTP Password:
FTP File Path: Exp. file/load

Check new firmware: ☐ Power ON and Scheduling ☒ Scheduling only

Scheduling (Date): (1~30 days)

Scheduling (Time): ▼

Automatic Update: ☒ Notify only ☐ Automatic

Firmware File Prefix:

Next update time:

Restore Default Settings

8.87. You can restore the VoIP Phone to factory default in this page. Click the Restore button, then the IP Phone will restore to default and automatically restart again.

Restore Default Settings

You could click the restore button to restore the factory settings.

Restore default settings:

Reboot

8.88. If you want to restart the VoIP Phone, you can just click the Reboot button, and then the VoIP Phone will restart automatically.

Reboot System

You could press the reboot button to restart the system.

Reboot system:

9. LCD Display with Keypads Settings

Keypad Descriptions:

Key Name	Descriptions
1	"1", "-", ";", "!", "?"
2	"2", "a", "b", "c", "A", "B", "C"
3	"3", "d", "e", "f", "D", "E", "F"
4	"4", "g", "h", "i", "G", "H", "I"
5	"5", "j", "k", "l", "J", "K", "L"
6	"6", "m", "n", "o", "M", "N", "O"
7	"7", "p", "q", "r", "s", "P", "Q", "R", "S"
8	"8", "t", "u", "v", "T", "U", "V"
9	"9", "w", "x", "y", "z", "W", "X", "Y", "Z"
0	"0", "space"
*	"*", "•", ":", "@"
#	Start dialing process.
REDIAL	"REDIAL" the last previous number again.
HOLD	"HOLD" the current call.
TRANSFER	"Transfer" to the other phone number.
MENU	The "Menu" key is to set the IP Phone
ENTER	The "Enter" is for setting selections.
VOL +/-	This is for phone volume settings.
UP/DOWN	Up↑ and Down↓ keys for LCD display.
P. BOOK	To show the phone book list.
CALL LOG	To show Incoming/outgoing calls history.
DEL/MUTE	To delete or to mute IP phone.
CONF.	For 3-Way Conference Calls.
M1~M5	These are for 5 speed dial numbers.
LINE1~LINE 3	For Realm 1 to Realm 3 SIP registrations.
DND	To enable/disable DND for call reject.
FORWARD	This is for forward function.
VMS	This is for voice messages.
PICK UP	To pick up incoming call for other IP Phones.
SPK	This is for Speaker Phone.

LCD Display with Keypad Settings:

1. Phone Book

- 1.1 Search: Search Phone Book.
- 1.2 Add entry: Add new phone number to phone book.
- 1.3 Speed dial: Add speed dial phone number to speed dial list.
- 1.4 Erase all: Erase all phone number from Phone Book.

2. Call history

- 2.1 Incoming calls: Show all incoming call.
- 2.2 Dialed numbers: Show all dialed call.
- 2.3 Erase record: Delete call history.
 - 2.3.1 All: Delete all call history.
 - 2.3.2 Incoming: Delete all incoming call.
 - 2.3.3 Dialed: Delete all dialed out call.

3. Phone setting

- 3.1 Call forward:
 - 3.1.1 All Forward:
 - 3.1.1.1 Activation: To Enabled/Disabled this function.
 - 3.1.1.2 Number: Forward to a registered or URL Number.
 - 3.1.2 Busy Forward.
 - 3.1.2.1 Activation: To Enabled/Disabled this function.
 - 3.1.2.2 Number: Forward to a registered or URL Number.
 - 3.1.3 No Answer Forward.
 - 3.1.3.1 Activation: To Enabled/Disabled this function.
 - 3.1.3.2 Number: Forward to a registered or URL Number.
 - 3.1.4 Ring Timeout: Set the Ring times to start the No Answer Forward function.
- 3.2 Do not Disturb
 - 3.2.1 Allways: Block all calls
 - 3.2.2 By Period: Block calls by the period time
 - 3.2.3 Period Time: Set the start time and end time to Block calls.
- 3.3 Alarm Setting:
 - 3.3.1 Activation: Enable/Disable alarm
 - 3.3.2 Alarm Time: Set the alarm time
- 3.4 Date/Time setting:
 - 3.4.1 Date & Time: Set the IP Phone Date and Time.
 - 3.4.2 SNTP setting:
 - 3.4.2.1 SNTP: Enabled / Disable SNTP.
 - 3.4.2.2 Primary SNTP: Set Primary SNTP server IP address or URL.
 - 3.4.2.3 Secondary SNTP: Set Secondary SNTP server IP address or URL.
 - 3.4.2.4 Time zone: Set Time zone.
 - 3.4.2.5 Adjustment Time: Set adjustment time period.
- 3.5 Volume and Gain
 - 3.5.1 Handset volume: Set Handset volume from 0~15 (max.) for you to hear.
 - 3.5.2 Speaker volume: Set Speaker phone volume from 0~15 (max.) for you to hear.
 - 3.5.3 Handset Gain: Set Handset Gain from 0~15 (max.) for remote site to hear.
 - 3.5.4 Speaker Gain: Set Speakerphone Gain from 0~15 (max.) for remote site to hear.
- 3.6 Ringer:
 - 3.6.1 Ringer volume: Ringer volume selection from 0~15 (max.).
 - 3.6.2 Ringer type: Ringer tone selection from 1~4.
- 3.7 Auto Dial: Auto Dial time selection from 3~9 seconds.
- 3.8 SMS
 - 3.8.1 Got [N] Message : Shows you have got messages press enable to show , press down to delete the message for yes or not confirmed to press enter key or cancel to press menu key.

4. Network

4.1 WAN Setup:

4.1.1 IP Type:

4.1.1.1 Fixed IP client

4.1.1.2 DHCP client:

4.1.1.3 PPPoE client:

4.1.2 Fixed IP setting:

4.1.2.1 Host IP

4.1.2.2 Subnet mask

4.1.2.3 Gateway IP

4.1.3 PPPoE setting:

4.1.3.1 User name

4.1.3.2 Password

4.2 LAN Setup:

4.2.1 Bridge

4.2.2 NAT

4.3 DNS Server:

4.3.1 Primary DNS

4.3.2 Secondary DNS

4.4 VLAN:

4.4.1 Activation

4.4.2 VID

4.4.3 Priority

4.4.4 CFI

4.5 Status: Show IP addresses of WAN, LAN and MAC address (use UP/Down keys).

5. SIP Settings

To set the SIP setting from keypad, you have to press **Menu_7_4** to input the password first, or the SIP setting may not be allowed to access.

5.1 Service Domain

5.1.1 First realm

5.1.1.1 Activation:

5.1.1.2 User name:

5.1.1.3 Display name:

5.1.1.4 Register name:

5.1.1.5 Register password:

5.1.1.6 Proxy server: Proxy Server IP Address

5.1.1.7 Domain server: Domain Server IP Address

5.1.1.8 Outbound proxy: Outbound Proxy IP Address

5.2 Codec

5.2.1 Codec type

5.2.1.1 G.711 uLaw: G.711 uLaw

5.2.1.2 G.711 aLaw: G.711 aLaw

5.2.1.3 G.723: G.723.1

5.2.1.4 G.729: G.729A

5.2.1.5 G.726-16: G.726 16Kbps

5.2.1.6 G.726-24: G.726 24Kbps

5.2.1.7 G.726-32: G.726 32Kbps

5.2.1.8 G.726-40: G.726 40Kbps

5.2.2 VAD: Voice Activity Detection Enable/Disable.

- 5.3 RTP Setting:
 - 5.3.1 Outband DTMF: Outband DTMF Enabled/Disabled.
 - 5.3.2 Duplicate RTP
 - 5.3.2.1 No duplicate: No resend voice packets.
 - 5.3.2.2 One duplicate: Resend voice packets once.
 - 5.3.2.3 Two duplicate: Resend voice packets twice.
- 5.4 RPort Setting: RPort Enabled/Disabled.
- 5.5 Hold by RFC: Hold by RFC3261 Enabled/Disabled.
- 5.6 Status: Use Up/Down keys to show the SIP Proxy register status.

6. NAT Transversal

- 6.1 STUN setting
 - 6.1.1 STUN: STUN Enabled/Disabled.
 - 6.1.2 STUN server: Server IP Address or URL.


7. Administrator

- 7.1 Auto Config
 - 7.1.1 Config Mode: Select Disable/TFTP/FTP/HTTP for auto config function with server.
 - 7.1.2 TFTP server: Set the TFTP server IP address.
 - 7.1.3 FTP server: Set the FTP server IP address.
 - 7.1.4 FTP Login Name: Set the login name to the FTP server.
 - 7.1.5 FTP Password: Set the Password to the FTP server.
- 7.2 Upgrade System: You can restore to the default setting.
 - 7.2.1 Upgrade Now: Select Yes/No to upgrade with the upgrade Server.
 - 7.2.2 Upgrade via: Select Disable/TFTP/FTP/HTTP to do upgrade.
 - 7.2.3 Status:
 - 7.2.4 Reset Time: Set Yes/No to reset time.
- 7.3 Default setting: To load/abort the default setting.
- 7.4 System Authority: Must enter the password first for SIP setting. Default is "test".
- 7.5 Version: This shows the firmware version.
- 7.6 Watch Dog: This enables Watch Dog function for debugging.
- 7.7 Restart: This function will restart your IP Phone.
- 7.8 Auto Reboot
 - 7.8.1 Enable: Enable Auto reboot functions.
 - 7.8.2 Disable: Disable Auto reboot functions.


10. VoIP Application Examples

You can use PC Web browser to configure VP306. For example, enter <http://192.168.123.1:9999> from PC web browser.

A. ADSL Connections without NAT Router for VP306

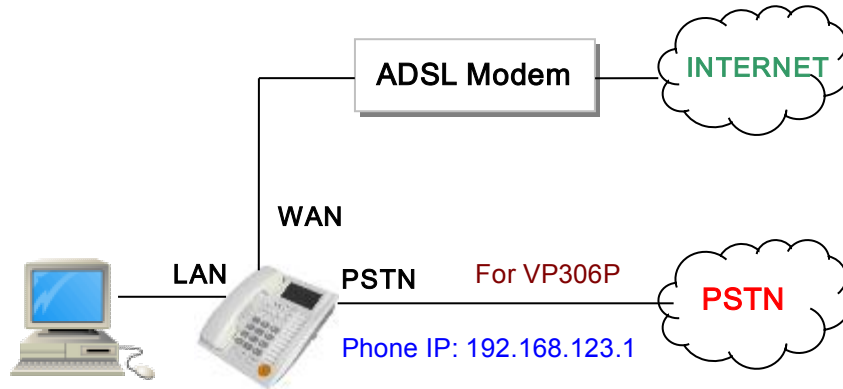

B. ADSL Connections with NAT Router for VP306

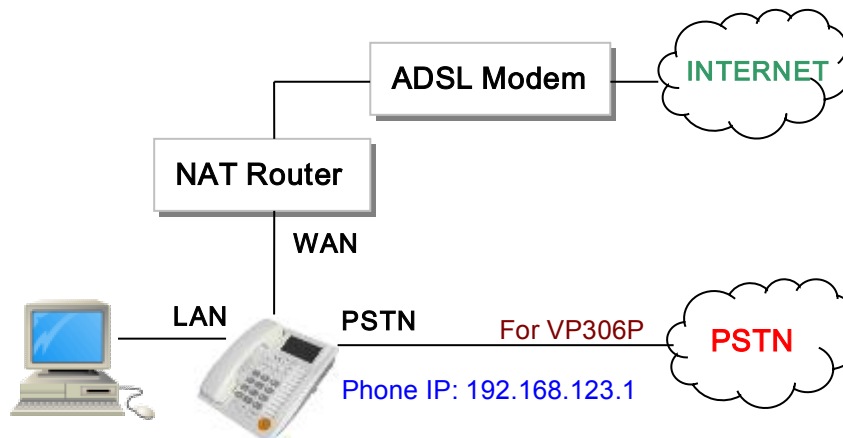

Example 1: SIP-to-SIP Calling/Answering

Applications:

The SIP-to-SIP calling works when both calling and answering parties are registered to SIP server with given registered phone numbers. The ADSL connections can be as in either Diagrams A or B. Both parties are registered to SIP server under NAT router. For Diagram A without NAT router, you may select NAT mode to enable the embedded NAT router. For Diagram B with external NAT router, you may select Bridge mode to disable the embedded NAT.

Configurations:

1. Select either “**NAT**” or “**Bridge**” in accord with your network in “**WAN settings**” page,
2. Select “**DHCP Client**” to automatically get an IP address from NAT router.
3. Remember to click the “**Submit**” button,
4. Select Active “**ON**” in the “**SIP settings / Service Domain**” page,
5. Enter the **Register Name, Register Password, Proxy Server, and Outbound Proxy**,
6. Select “**ON**” in the “**STUN setting**”, if Outbound Proxy is NOT available.
7. Upon successful SIP registration, the **REG** LED indicator will be **ON** and the LCD will show registered <phone number>.

Callings:

8. Pick up the phone, and you should hear a dial tone for VoIP mode.
9. Press **1688#** or **1688** to call the party with the registered SIP phone number **1688**. Note that **#** key will dial out the number immediately. Dialing without **#** will not dial out until the auto dial timer (default=5 seconds) elapsed.

Example 2: SIP to Direct IP Calling

Applications:

The application is for the calling party with ADSL connection as in either Diagrams A or B. The calling party is registered to SIP server with either fixed real IP or private IP under NAT router. The answering party is with fixed real IP. You may also use the Phone Book to call Direct IP Address.

Configurations:

1. Same as in **Example 1**.
2. Select “**ON**” in “**STUN setting**” page, if Outbound Proxy is NOT available.
3. Upon successful SIP registration, the LCD will show registered <phone number>.

Callings:

4. Press Speakerphone key, and you should hear a dial tone.
5. Press **211*21*191*4#** or **211*21*191*4** to call the party with the real IP address of **211.21.191.4**. In a moment, you should hear a ring back tone, and wait for the VoIP called party to answer.

Example 3: Direct IP to Direct IP Calling/Answering

Applications:

The applications are for ADSL connection without NAT router as in Diagram A. Both parties are with fixed real IP. The Direct IP calling works when both calling and answering parties are with known fixed IP. SIP server registrations are not required in this application.

Configurations:

1. Select **Fixed IP** in the **Network / WAN settings** page,
2. Enter the items of **IP, Subnet Mask, Gateway IP**,
3. Click the **Submit** button.

Callings:

4. Pick up the phone, and you should hear a dial tone.
5. Press **211*21*191*4#** or **211*21*191*4** to call the party with the real IP address of 211.21.191.4. Note that # key will dial out the number immediately. Dialing without # will not dial out until the auto dial timer (default=5 seconds) elapsed. In a moment, you should hear a ring back tone, and wait for the VoIP called party to answer.

Example 4: Direct IP to Direct IP Calling within NAT Router

Applications:

For the calling party in ADSL connection with NAT router as in Diagram B, this Direct IP calling can work when the answering parties are with fixed **private** IP addresses within the same VPN network, or with fixed **real** IP addresses.

Configurations:

1. Select **Fixed IP** in the **Network / WAN settings** page,
2. Enter the items of **IP, Subnet Mask, Gateway IP**,
3. Click the **Submit** button.

Callings:

4. Pick up the phone, and you should hear a dial tone
5. Press **192*168*1*51#** or **192*168*1*51** to call the party with the private IP address of 192.168.1.51. Press **211*21*191*4** to call the party with the real IP address of 211.21.191.4. In a moment, you should hear a ring back tone, and wait for the called party to answer.

Example 5: 3-Way Conference Call, Call Transfer, Call Waiting, Hold

Applications:

The Call Transfer and 3-Way Conference Call applications are for calls among Parties A, B, and C. Three parties are registered to SIP server with either fixed real IP or private IP. There are two kinds of call transfer; Blind Transfer and Attendant Transfer.

Blind Transfer:

1. Party A calls Party B.
2. While in conversation, Party B may press **Transfer** key, and should hear a dial tone.
3. Party B press **[Party C number] #** and hang up to transfer to Party C.

Attendant Transfer:

1. Party A calls Party B.
2. While in conversation, Party B may press **Transfer** key, and should hear a dial tone.
3. Party B press **[Party C number] #** and talk to Party C.
4. Hang up from Party B, and then Party A will transfer and connect to Party C.

3-Way Conference Call:

1. Party A calls Party B.
2. While in conversation, Party B may press **Hold** key to hold the call, and should hear a dial tone.
3. Party B calls Party C.
4. While in conversation, Party may press **Conf.** key to join in Party A for three-way conference.

Call Waiting Application:

When a new call is coming while you are talking, you will hear an interrupt “dodo” tone and you can press **Hold** key to answer the new incoming call. You may press **Hold** key to switch back to the previous call.

Call Hold Application:

You may press **Hold** key to hold the current call for a while, then press **Hold** key again to resume conversations.


11. Trouble Shooting for Web Configurations

11.1. DO NOT HEAR DIAL TONE?

When you pick up the phone and hear a busy tone, it indicates the WAN port is NOT connected. The LCD will show **Ethernet Error!** Make sure the ADSL Ethernet cable is connected to the WAN port of VP306 and Power Reset again.

11.2. CAN NOT ACCESS WEB PAGE?

IE Web Browser is a useful tool to configure VP306. When you have difficulties in accessing the default IP address <http://192.168.123.1> of VP306 as in the following figure, the most possibility is that the PC might have different subnet IP settings from 192.168.123.xxx. In this case, you must change VP306 IP address to the same subnet as PC and NAT router.

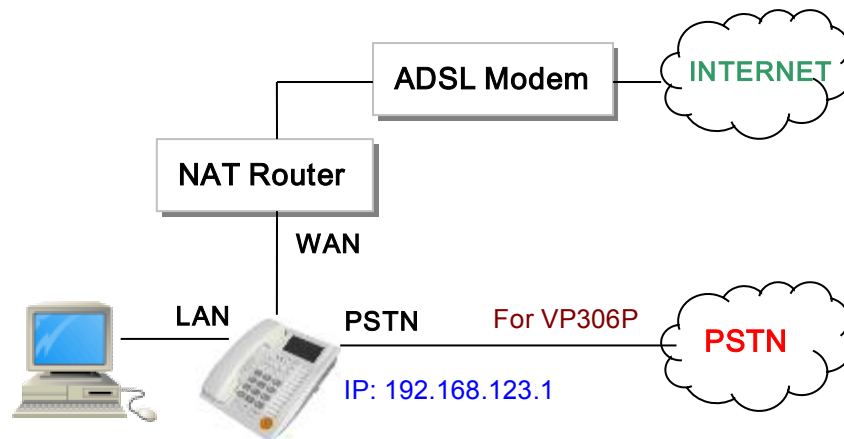


Example: To change VP306 IP address to the same subnet as PC and NAT router

1. Press the menu to enable DHCP Client mode. VP306 will reboot, and LED will start flashing to get an IP address from NAT DHCP server.
2. Press **Menu_4_5** to read IP Addresses for WAN and LAN Ports, for example, 192.168.62.51.
3. Enter from IE web browser <http://192.168.62.51:9999> to login VP306 web page for configurations.

11.3. CONFIGURE PC'S IP SETTINGS FOR VP306 EMBEDDED NAT FUNCTION?

If you don't have a router to connect both PC and VP306 for sharing the only one IP address from ADSL/Cable modem, you should enable the embedded NAT function inside VP306. You need to change your PC's IP settings to recognize VP306 as the default gateway. In this case, you should enable the embedded NAT router of VP306 to provide more than one IP addresses for PC and VP306.

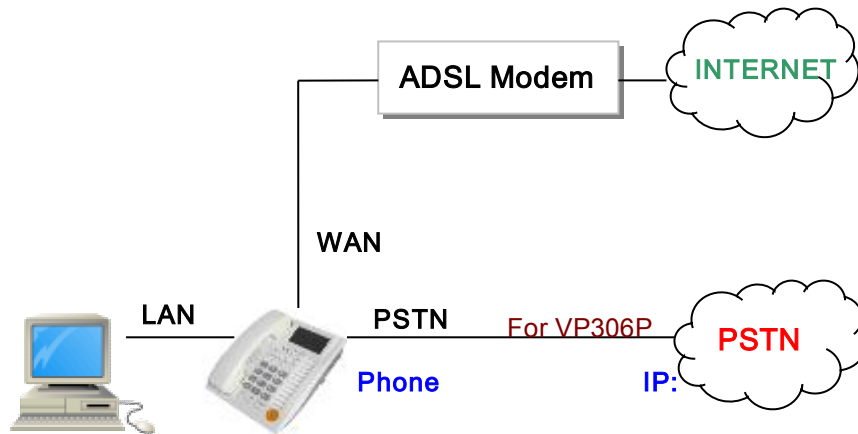

Example: To change PC IP address to the same subnet as **192.168.123.1** for VP306

1. As in Window 2000 (my computer),
 - At "Network and Dialup Connections", right click on "Local Area Connection", then click on property.
 - The "Local Area Connection Properties" window will pop up.
 - Double click on "Internet Protocol (TCP/IP)".
 - The "Internet Protocol (TCP/IP) Properties" window will pop up.
 - Click on "Use the following IP Address".
 - Enter IP: **192.168.123.50** (50 can be any number other than 1, which is used by VP306).
 - Enter Subnet mask: **255.255.255.0**
 - Enter Default gateway: **192.168.123.1**
 - Click on OK button.
3. You will lose internet connection at this time.
4. At IE browser, type <http://192.168.123.1>
5. Follow the example in "Advanced Settings for Embedded NAT" for web login.
6. At LAN setting, turn on DHCP server.
7. At WAN setting, choose "DHCP client" to work with your ADSL/Cable modem.
8. Save change, wait for VP306 to reboot.
9. Change your PC's "Internet Protocol (TCP/IP) Properties" back to "obtain an IP address automatically".
10. You may press **Menu_4_5** to read IP Addresses for WAN and LAN Ports.