



MODEL: GWC09KF-K3DNA5A GWC12KF-K3DNA5A GWH09KF-K3DNA5A GWH12KF-K3DNA5A GWH09KF-K3DNA6A GWH12KF-K3DNA6A GWH09KF-K3DNB1A GWH12KF-K3DNB1A (Refrigerant R410A)

	Summary and features	1
Part 1	Safety Precautions	2
Part 2	Specifications	3
	2.1 Unit Specifications	3
	2.2 Operation Characteristic Curve	11
	2.3 CapacityVariation Ratio AccordingtoTemperature	11
	2.4 Operation Date	12
	2.5 Noise criteria curve tables for both models	12
Part 3	Construction Views	13
	3.1 Indoor Unit	13
	3.2 Outdoor Unit	14
Part 4	Refrigerant System Diagram	15
Part 5	Schematic Diagram	16
	5.1 Electrical Data	16
	5.2 Electrical Wiring	16
	5.3 Printed Circuit Board	18
Part 6	Function and Control	23
	6.1 Remote Control Operations	23
	6.2 Changing Batteries and Notices	25
	6.3 Description of Each Control Operation	26
	6.4 Troubleshooting of Temp Sensor Malfunction ·····	28
	6.5 Frequency Control	
	6.6 3-minutes Standby	
	6.7 Compressor Protection Function	
	6.8 Discharge Pipe Control	
	6.9 Input Current Control	
	6.10 Freeze-up Protection Control.	
	6.11 Heating Peak-cut Control	
	6.12 Defrost Control	
	6.13 Fan Control	31

Part 7	Installation Manual	32
	7.1 Tools Required for Installation	32
	7.2 Installation Position Selection	32
	7.3 Install Indoor Unit	32
	7.4 Install Outdoor Unit	36
	7.5 Test Operation	37
Part 8	Exploded Views and Parts List	38
	8.1 Indoor unit	38
	8.2 Outdoor unit	45
Part 9	Troubleshooting	53
	9.1 Precautions Before Performing Inspection or Repair	53
	9.2 Confirmation	53
	9.3 Judgement by Flashing LED of Indoor/Outdoor Unit	53
	9.4 How to Check Simply the Main Part	55
	9.5 2-way, 3-way Valve Appearance	59
Part10	Removal Procedure	66
	10.1 Removal Procedure of Indoor Unit	66
	10.2 Removal Procedure of Outdoor Unit	80


Summary and features


Indoor Unit


GWC09KF-K3DNA5A/I GWH09KF-K3DNA5A/I GWC12KF-K3DNA5A/I GWH12KF-K3DNA5A/I

GWH09KF-K3DNA6A/I GWH12KF-K3DNA6A/I

GWH09KF-K3DNB1A/I GWH12KF-K3DNB1A/I

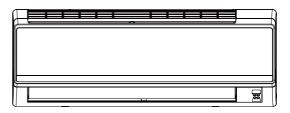


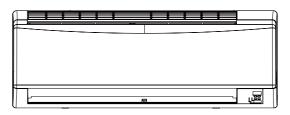

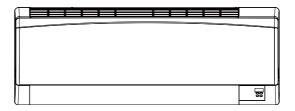

Outdoor Unit

GWC09KF-K3DNA5A/O GWH09KF-K3DNA5A/O GWC12KF-K3DNA5A/O GWH12KF-K3DNA5A/O

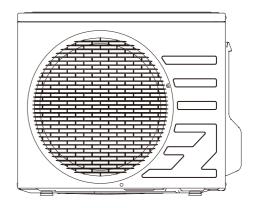

Remote control window

YB1F2



1. Safety Precautions

Important!

Please Read Before Starting

This air conditioning system meets strict safety and operating standards. As the installer or service person, it is an important part of your job to install or service the system so it operates safely and efficiently.

To prevent injury to the user or other people and property damage, the following instructions must be followed.

- Follow each installation or repair step exactly as shown.
- Observe all local, state, and national electrical codes.
- Pay close attention to all warning and caution notices given in this manual.

About the pictures:



Erroneous handing gives a high possibility to induce serious results such as death or heavy injury.



Erroneous handing may induce serious injury depending on the situation.



Warning

All electric work must be performed by licensed technician, according to local regulations and the instructions given in this manual.

- Do not supply power to the unit until all wiring and tubing are completed or reconnected and checked.
- Highly dangerous electrical voltages are used in this system. Carefully refer to the wiring diagram and these instructions when wiring. Improper connections and inadequate grounding can cause accidental injury or death.
- Ground the unit following local electrical codes.
- Connect all wiring tightly. Loose wiring may cause overheating at connection points and a possible fire hazard.

There is risk of fire, electric shock, explosion, or injury.

Ask your dealer or specialized subcontractor for installation or repair work.

- Make sure the ceiling/wall is strong enough to hold the unit's weight. The outdoor unit should be installed in a location where air and noise emitted by the unit will not disturb the neighbors.
- Properly insulate any tubing run inside a room to prevent "sweating" that can cause dripping and water damage to walls and floors.
- The outdoor unit must be installed on stable, level surface, in a place where there is no accumulation of snow, leaves

or rubbish.

- The unit should be installed according to the instructions in order to minimize the risk of damage from earthquakes, typhoons or strong winds.
- When the refrigerant touches the fire etc., it was decomposed and a poisonous gas is generated.
- Use only the specified refrigerant to charge the refrigerant circuit.
- Do not mix it with any other refrigerant and do not allow air to remain in the circuit.
- Air enclosed in the circuit can cause high pressure resulting in a rupture and other hazards.
- After completing installation work, make sure that refrigerant gas has not leaked.
- The limit density is made not to be exceeded even if the refrigerant leaks by any chance.
- Turn the power off at the main power box (mains) before opening the unit to check or repair electrical parts and wiring.
- Keep your fingers and clothing away from any moving parts.
- Clean up the site after you finish, remembering to check that no metal scraps or bits of wiring have been left inside the unit being serviced.
- The unit must be properly earth connected.



Caution

- Never install on the place where a combustible gas might leak. The gas may ignite or explode when the gas leaks and collects in surround of the unit.
- When the unit is installed at telecommunication centers or hospitals, take a proper provision against noise.
- When installing at a watery place, provide an electric leak breaker.
- Do not wash the unit with water.
- Be very careful about unit transportation. The unit should not be carried by only one person if it is more than 20kg. It occasionally causes the damage of the unit and health to be impaired.
- Do not touch the heat exchanger fins with your hands.
 Doing so may cut your hands.
- Do not touch the compressor or refrigerant piping without wearing glove on your hands. Touching directly such part can cause a burn or frostbite as it becomes high or low temperature according to the refrigerant state.
- Do not operate the air conditioner without the air filter set place. Dust may accumulate, and cause a failure.
- At emergency (if you smell something burning), stop operation and turn the power source switch off.

2. Specifications

2.1 Unit Specifications

Models GWC09KF-K3DNA5A, GWH09KF-K3DNA5A

Model			T	GWC09KF-K3DNA5A	GWH09KF	-K3DNA5A
Product Co	de			CB14600050 CB14600051		CB14600063
Function				COOLING	COOLING HEATING	
Rated Volta	iae			220-240V~	220-240V~	
Frequency	<u> </u>	High	Hz	78	78 98	
	ferent Compressor	Standard	Hz	53	53	72
speed)	, , , , , , , , , , , , , , , , , , ,	Low	Hz	15	15	24
Total Capa	city	High	W / Btu/h	3230 / 11000	3230 / 11000	4100 / 14000
	ferent Compressor	Standard	W / Btu/h	2650 / 9000	2650 / 9000	3520 / 12000
speed)	·	Low	W / Btu/h	450 / 1500	450 / 1500	450 / 1500
Power Inpu	t	High	W	1350	1350	1450
(Inverter diff	ferent Compressor	Standard	W	800	800	950
speed)		Low	W	200	200	200
Rated Input	t	•	W	1420	1420	1550
Rated Curre			Α	6.3	6.3	6.8
Air Flow Vol	lume	Н	m³/h	600	6	00
		М	m³/h	370	3	70
		L	m³/h	280	280	
Dehumidify	ing Volume		I/h	0.8	C	0.8
EER / C.O.F			W/W	3.3	3.3/3.7	
Energy Clas	SS			A/A	A/A	
Indoor unit				GWC09KF-K3DNA5AI	GWH09KF-K3DNA5A/I	
Fan Motor		Н	r/min	1100	1100	
	Speed	М	r/min	900	9	00
		L	r/min	700	700	
	Output		W	10	10	
	Capacitor		μF	1.2	1.2	
	RLA		Α	0.16	0.	16
Fan	Туре			Cross flow fan	Cross	flow fan
	Diameter-Length		mm	Ф92Х594	Ф92Х594	
Evaporator				Aluminum fin-copper tube	Aluminum fin-copper tube	
	Pipe Diameter		mm	7	7	
	Row-Fin Gap		mm	2-1.4	2-1.4	
	Coil length (I)Xheighth (H)Xcoil width (L)	ght	mm	610X294X24	610X294X24	
Swing	Model			MP24BA	MP24BA	
Motor	Output		W	1.5	1	.5
Fuse (A)	-		Α	PCB 3.15A	PCB	3.15A
Sound Pres	ssure Level	Н	dB (A)	38	3	38
		М	dB (A)	30	3	30
		L	dB (A)	24	2	24
Sound Pow	er Level	Н	dB (A)	48		l8
		М	dB (A)	40		10
		L	dB (A)	34		34
	(WXHXD)(mm)		mm	770X283X201		83X201
	of Package (LXWXI	H)	mm	844X342X261		42X261
Net Weight	/Gross Weight		kg	8/11	8/	11

Remarks:

Rated conditions are:

Cooling: Indoor air temperature 27°C D.B. / 19°C W.B.

Outdoor air temperature 35°C D.B. / 24°C W.B.

Heating: Indoor air temperature 20°C D.B.

Outdoor air temperature 7°C D.B. / 6°C W.B.

Outdoor Unit	t		GWC09KF-K3DNA5A/O	GWH09KF-K3DNA5A/O	
	Manufacturer/trademark		DIT/daikin	DIT/daikin	
	Model		1YC23AEXD	1YC23AEXD	
	Туре		Rotary type	Rotary type	
Compressor	L.R.A. (A)	Α	4	4	
	RLA(A)	Α	4	4	
	Power Input(W)	W	600	600	
	Overload Protector		CS-7SA	CS-7SA	
Throttling Me	thod		Capillary	Capillary	
Starting Meth	nod		Transducer starting	Transducer starting	
Working Ten	np Range	$^{\circ}$	10~48	-15~48	
Heat	Coil		Aluminum fin-copper tube	Aluminum fin-copper tube	
EXchanger	Pipe Diameter	mm	7	7	
Coil	Rows-Fin Gap	mm	1-1.4	1-1.4	
Coil length (I) X height (H) X coil width (L)	mm	647X528X19.05	647X528X19.05	
	Speed	rpm	930	930	
	Output of Fan Motor	W	30	30	
Fan Motor	RLA	Α	0.236	0.236	
	Capacitor	μF	2	2	
Air Flow Volu	me of Outdoor Unit	m ³ /h	1600	1600	
_	Туре		AXial fan	AXial fan	
Fan	Diameter	mm	370	370	
Defrosting M	lethod		1	Auto defrosting	
Climate Type			T1	T1	
Isolation			I	I	
Moisture Pro	tection		IP24	IP24	
Permissible	EXcessive Operating	Maa	3.8	3.8	
	the Discharge Side	Мра	3.8	3.6	
	EXcessive Operating	Мра	1.2	1.2	
Sound Press	the Suction Side	The state of the s	51	51	
Sound Powe		dB (A)	61	61	
Dimension (dB (A)			
•	•	mm	710X550X275 771X348X592	710X550X275 771X348X592	
	of Package (LXWXH) Gross Weight	mm	27/31		
net weight /	· ·	kg		28/32	
Refrigerant	Name of refrigerant	le cr	R410A	R410A	
	Weight Length (m)	kg	0.74	0.74	
0	• , ,	m a/m	5	5	
Connection	Gas additional charge	g/m	15	20	
Pipe	Liquid Pipe Diameter	mm	Ф6	Ф6	
	Gas Pipe Diameter	mm	Ф9.52	Ф9.52	
	it Height Difference	m	10	10	
MaX. Interuni	it Piping Length	m	15	15	

The above data is subject to change without notice. Please refer to the nameplate of the unit.

Models GWC12KF-K3DNA5A, GWH12KF-K3DNA5A

Model				GWC12KF-K3DNA5A	GWH12KF-K3DNA5A	
Product Co	de			CB14600070 CB14600072	CB14600080 CB14600083	
Function				COOLING	COOLING	HEATING
Rated Volta	ge			220-240V \sim	220-240V~	
Frequency	<u> </u>	High	Hz	92	92	108
	erent Compressor	Standard	Hz	72	72	78
speed)	·	Low	Hz	15	15	24
Total Capac	city	High	W / Btu/h	3960 / 13500	3960 / 13500	5130 / 17500
	erent Compressor	Standard	W / Btu/h	3530 / 12000	3530 / 12000	4100 / 13990
speed)	·	Low	W / Btu/h	600 / 2000	600 / 2000	600 / 2000
Power Input	t	High	W	1450	1450	1550
	erent Compressor	Standard	W	1100	1100	1135
speed)	·	Low	W	220	220	220
Rated Input			W	1550	1550	1650
Rated Curre			A	6.5	6.5	7.8
Air Flow Vo		Н	m ³ /h	680		80
		М	m³/h	410		10
		L	m³/h	300		00
Dehumidify	ing Volume	_	I/h	1.5		.5
EER / C.O.I			W/W	3.21	3.21/3.61	
Energy Clas			****	A/A	A/A	
Indoor uni				GWC12KF-K3DNA5A/I	GWH12KF-K3DNA5A/I	
Fan Motor	1	Н	r/min	1150	1150	
	Speed	M	r/min	950		50
		L	r/min	750	750	
	Output	utput		10	10	
	Capacitor		W μF	1.2	1.2	
	RLA		A	0.16	0.16	
Fan	Туре			Cross flow fan	Cross flow fan	
	Diameter-Length		mm	Ф92Х594	Ф92Х594	
Evaporator				Aluminum fin-copper tube	Aluminum fin-copper tube	
•	Pipe Diameter	l mm		7	7	
	Row-Fin Gap		mm	2-1.4	2-1.4	
	Coil length (I)Xheig	ght (H)Xcoil	mm	610X294X24	610X294X24	
Swing	Model			MP24BA	MP2	24BA
Motor	Output		W	1.5	1	.5
Fuse (A)			Α	PCB 3.15A	PCB	3.15A
Sound Pres	sure Level	Н	dB (A)	39	3	9
		М	dB (A)	31	3	1
		L	dB (A)	25	2	:5
Sound Pow	er Level	Н	dB (A)	49	4	.9
		М	dB (A)	41		.1
		L	dB (A)	35		5
	(WXHXD) (mm)		mm	770X283X201		83X201
	of Package (LXWXI	H)	mm	844X342X261		42X261
Net Weight	/Gross Weight		kg	9/12	9/	12

Remarks:

Rated conditions are:

Cooling: Indoor air temperature 27°C D.B. / 19°C W.B.

Outdoor air temperature 35°C D.B. / 24°C W.B.

Heating: Indoor air temperature 20°C D.B.

Outdoor air temperature 7°C D.B. / 6°C W.B.

Outdoor Unit			GWC12KF-K3DNA5A/O	GWH12KF-K3DNA5A/O
	Manufacturer/trademark		DIT/daikin	DIT/daikin
	Model		1YC23AEXD	1YC23AEXD
	Туре		Rotary type	Rotary type
Compressor	L.R.A. (A)	Α	4	4
	RLA(A)	Α	4	4
	Power Input(W)	W	600	600
	Overload Protector	1	CS-7SA	CS-7SA
Throttling Me	thod		Capillary	Capillary
Starting Meth	od		Transducer starting	Transducer starting
Working Tem	ıp Range	$^{\circ}$	10~48	-15~48
Heat	Coil		Aluminum fin-copper tube	Aluminum fin-copper tube
Exchanger	Pipe Diameter	mm	7	7
Coil	Rows-Fin Gap	mm	2-1.4	2-1.4
Coil length (I	x height (H) x coil width (L)	mm	647X528X38.1	647X528X38.1
	Speed	rpm	930	930
	Output of Fan Motor	W	30	30
Fan Motor	RLA	Α	0.236	0.236
	Capacitor	μF	2	2
Air Flow Volu	me of Outdoor Unit	m ³ /h	1600	1600
_	Type-Piece	1	Axial fan	Axial fan
Fan	Diameter mm		370	370
Defrosting M	ethod	!	/	Auto defrosting
Climate Type				T1
Isolation			Γ	I
Moisture Pro	tection		IP24	IP24
	Excessive Operating	Мра	3.8	3.8
	the Discharge Side Excessive Operating			
	the Suction Side	Мра	1.2	1.2
Sound Press		dB (A)	53	53
Sound Powe	r Level	dB (A)	63	63
Dimension (WXHXD)	mm	710X550X275	710X550X275
	f Package (LXWXH)	mm	771X348X592	771X348X592
	Gross Weight	kg	29/33	30/34
- ·	Name of refrigerant	<u> </u>	R410A	R410A
Refrigerant	Weight	kg	1.0	1.0
	Length (m)	m	5	5
Connection	Gas additional charge	g/m	15	20
Pipe	Liquid Pipe Diameter	mm	Ф6	Ф6
	Gas Pipe Diameter	mm	Ф9.52	Ф9.52
Max. Interunit	t Height Difference	m	10	10
	Piping Length	m	20	20

The above data is subject to change without notice. Please refer to the nameplate of the unit.

Models GWH09KF-K3DNA6A, GWH12KF-K3DNA6A

		GWH09KF-K3DNA6A	GWH12KF-K3DNA6A
		CB14600110	CB14600120
Rated Voltage	V~	220-240	220-240
Rated Frequency	Hz	50	50
Phases		1	1
Mode		Indoor	Indoor
city (Min~Max)	W	2650(450~3230)	3530(600~3960)
city (Min~Max)	W	3520(450~4100)	4100(600~5130)
r Input (Min~Max)	W	800(200~1350)	1100(220~1450)
r Input (Min~Max)	W	950(200~1450)	1135(220~1550)
r Current	Α	3.55	4.88
r Current	Α	4.21	5.04
	W	1550	1650
	Α	6.88	7.32
ne(SH/H/M/L/SL)		600/520/370/280/-	680/560/410/300/-
Volume	L/h	1	1.2
	W/W	•	3.21
			3.61
			1
			,
ea		·	16-24
1	111		GWH12KF-K3DNA6B/I
			Cross-flow
• • • • • • • • • • • • • • • • • • • •	mm		Ф92Х594
Fan Motor Cooling Speed	r/min	1300/1100/900/700/-	1350/1150/950/750/-
Fan Motor Heating Speed	r/min	1300/1140/980/820/-	1350/1190/1020/850/-
,	W	10	10
Fan Motor RLA	Α	0.16	0.16
Fan Motor Capacitor	μF		1.2
	W	0	0
•		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
•	mm	Ф7	Ф7
Row-fin Gap	mm	2-1.4	2-1.4
Coil Length (LXDXW)	mm		610X294X24
			MP24BA
	W		1.5
	Α		PCB 3.15A
Sound Pressure Level	dB (A)	41/38/30/24/-	42/39/31/25/-
	dB (A)	51/48/40/34/-	52/49/41/35/-
·			770X283X201
Dimension of Carton Box (L/W/H)	mm	841X339X246	841X339X246
			844X342X261
Dimension of Package (L/W/H)	mm	844X342X261	044/042/201
Dimension of Package (L/W/H) Net Weight	mm kg	844X342X261 8	9
rrr	Rated Frequency Phases Mode City (Min~Max) City (Min~Max) Input (Min~Max) Inp	Rated Frequency Phases Mode ity (Min~Max) r Input (Min~Max) r Current A Current A A Me(SH/H/M/L/SL) Model of indoor unit Fan Type Diameter Length(DXL) Fan Motor Cooling Speed (SH/H/M/L/SL) Cutput of Fan Motor Fan Motor RLA Fan Motor Capacitor Input of Heater Evaporator Form Pipe Diameter Row-fin Gap Coil Length (LXDXW) Puse A Rated Frequency W W W W W W M W W W W W W	Rated Voltage

	Model of Outdoor Unit		GWH09KF-K3DNA5A/O	GWH12KF-K3DNA5A/O
	Compressor Manufacturer/Trademark		Daikin Compressor Industries /daikin	Daikin Compressor Industries/daikin
	Compressor Model		1YC23AEXD	1YC23AEXD
	Compressor Oil		DAPHEN FVC50K	DAPHEN FVC50K
	Compressor Type		Rotary	Rotary
	L.R.A.	Α	4	4
	Compressor RLA	Α	4	4
	Compressor Power Input	W	600W	600W
	Overload Protector		CS-7SA	CS-7SA
	Throttling Method		Capillary	Capillary
	Operation temp	$^{\circ}\mathbb{C}$	16~30	16~30
	Ambient temp (cooling)	$^{\circ}\!\mathbb{C}$	10~48	10~48
	Ambient temp (heating)	$^{\circ}\!\mathbb{C}$	-15~24	-15~24
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	mm	Ф7	Ф7
	Rows-fin Gap	mm	1-1.4	2-1.4
	Coil Length (LXDXW)	mm	647X528X19.05	647X528X38.1
	Fan Motor Speed	rpm	930	930
	Output of Fan Motor	W	30	30
Outdoor Unit	Fan Motor RLA	Α	0.236	0.236
Catagor Criit	Fan Motor Capacitor	μF	2	2
	Air Flow Volume of Outdoor Unit	m ³ /h	1600	1600
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	mm	370	370
	Defrosting Method		Automatic Defrosting	Automatic Defrosting
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IP24	IP24
	Permissible Excessive Operating Pressure for the Discharge Side	MPa	3.8	3.8
	Permissible Excessive Operating Pressure for the Suction Side	MPa	1.2	1.2
	Sound Pressure Level (H/M/L)	dB (A)	51/-/-	53/-/-
	Sound Power Level (H/M/L)	dB (A)	61/-/-	63/-/-
	Dimension (WXHXD)	mm	658X550X275	658X550X275
	Dimension of Carton Box (L/W/H)	mm	768X345X577	768X345X577
	Dimension of Package (L/W/H)	mm	771X348X592	771X348X592
	Net Weight	kg	28	30
	Gross Weight	kg	32	34
	Refrigerant		R410A	R410A
	Refrigerant Charge	kg	0.74	1
	Length	m	5	5
	Gas Additional Charge	g/m	30	20
Connection	Outer Diameter Liquid Pipe	mm	Ф6	Ф6
Pipe	Outer Diameter Gas Pipe	mm	Ф9.52	Ф9.52
	Max Distance Height	m	10	10
	Max Distance Length	m	15	20

The above data is subject to change without notice. Please refer to the nameplate of the unit.


Models GWH09KF-K3DNB1A,GWH12KF-K3DNB1A

Model			GWH09KF-K3DNB1A	GWH12KF-K3DNB1A
Product Code			CB14600760	CB14600770
	Rated Voltage	V~	220-240	220-240
Power Supply	Rated Frequency	Hz	50	50
	Phases		1	1
Power Supply	Mode		Indoor	Indoor
Cooling Capac	city (Min~Max)	W	2650(450~3230)	3530(600~3960)
Heating Capac	city (Min~Max)	W	3520(450~4100)	4100(600~5130)
Cooling Power	r Input (Min∼Max)	W	800(200~1350)	1100(220~1450)
Heating Power	r Input (Min∼Max)	W	950(200~1450)	1135(220~1550)
Cooling Power	r Current	Α	3.55	4.88
Heating Power	r Current	Α	4.21	5.04
Rated Input		W	1550	1650
Rated Current		Α	6.88	7.32
Air Flow Volun	ne(SH/H/M/L/SL)	m ³ /h	600/520/370/280/-	680/560/410/300/-
Dehumidifying	Volume	L/h	1	1.2
EER		W/W	3.3	3.21
COP		W/W	3.7	3.61
SEER		W/W		/
HSPF		W/W	1	1
Application Are	ea	m ²	12-18	16-24
- фр. остол. 7 п.	Model of indoor unit		GWH09KF-K3DNB1A/I	GWH12KF-K3DNB1A/I
	Fan Type		Cross-flow	Cross-flow
	Diameter Length(DXL)	mm	Ф92Х594	Ф92Х594
	Fan Motor Cooling Speed (SH/H/M/L/SL)	r/min	1300/1100/900/700/-	1350/1150/950/750/-
	Fan Motor Heating Speed (SH/H/M/L/SL)	r/min	1300/1140/980/820/-	1350/1190/1020/850/-
	Output of Fan Motor	W	10	10
	Fan Motor RLA	Α	0.16	0.16
	Fan Motor Capacitor	μF	1.2	1.2
	Input of Heater	W	0	0
	Evaporator Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	mm	Ф7	Ф7
Indoor Unit	Row-fin Gap	mm	2-1.4	2-1.4
	Coil Length (LXDXW)	mm	610X294X24	610X294X24
	Swing Motor Model		MP24BA	MP24BA
	Output of Swing Motor	W	1.5	1.5
	Fuse	Α	PCB 3.15A	PCB 3.15A
	Sound Pressure Level (SH/H/M/L/SL)	dB (A)	41/38/30/24/-	42/39/31/25/-
	Sound Power Level (SH/H/M/L/SL)	dB (A)	51/48/40/34/-	52/49/41/35/-
	Dimension (WXHXD)	mm	770X283X201	770X283X201
	Dimension of Carton Box (L/W/H)	mm	844X342X261	844X342X261
	Dimension of Package (L/W/H)	mm	847X345X276	847X345X276
	Net Weight	kg	8	9
	List Worgint	۳9	<u> </u>	J


	Model of Outdoor Unit		GWH09KF-K3DNA5A/O	GWH12KF-K3DNA5A/O
	Compressor Manufacturer/Trademark		Daikin Compressor Industries /daikin	Daikin Compressor Industries/daikin
	Compressor Model		1YC23AEXD	1YC23AEXD
	Compressor Oil		DAPHEN FVC50K	DAPHEN FVC50K
	Compressor Type		Rotary	Rotary
	L.R.A.	Α	4	4
	Compressor RLA	Α	4	4
	Compressor Power Input	W	600W	600W
	Overload Protector		CS-7SA	CS-7SA
	Throttling Method		Capillary	Capillary
	Operation temp	$^{\circ}\mathbb{C}$	16~30	16~30
	Ambient temp (cooling)	$^{\circ}\mathbb{C}$	18~43	18~43
	Ambient temp (heating)	°C	-15~24	-15∼24
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	mm	Ф7	Ф7
	Rows-fin Gap	mm	1-1.4	2-1.4
	Coil Length (LXDXW)	mm	647X528X19.05	647X528X38.1
	Fan Motor Speed	rpm	930	930
	Output of Fan Motor	W	30	30
Outdoor Unit	Fan Motor RLA	Α	0.236	0.236
outdoor Offic	Fan Motor Capacitor	μF	2	2
	Air Flow Volume of Outdoor Unit	m³/h	1600	1600
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	mm	370	370
	Defrosting Method		Automatic Defrosting	Automatic Defrosting
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IP24	IP24
	Permissible Excessive Operating Pressure for the Discharge Side	MPa	3.8	3.8
	Permissible Excessive Operating Pressure for the Suction Side	MPa	1.2	1.2
	Sound Pressure Level (H/M/L)	dB (A)	51/-/-	53/-/-
	Sound Power Level (H/M/L)	dB (A)	61/-/-	63/-/-
	Dimension (WXHXD)	mm	710X318X550	710X318X550
	Dimension of Carton Box (L/W/H)	mm	771X348X592	771X348X592
	Dimension of Package (L/W/H)	mm	774X351X607	774X351X607
	Net Weight	kg	28	30
	Gross Weight	kg	32	34
	Refrigerant		R410A	R410A
	Refrigerant Charge	kg	0.74	1
	Length	m	5	5
	Gas Additional Charge	g/m	30	20
Connection	Outer Diameter Liquid Pipe	mm	Ф6	Ф6
Pipe	Outer Diameter Gas Pipe	mm	Ф9.52	Ф9.52
	Max Distance Height	m	10	10
	Max Distance Length	m	15	20

The above data is subject to change without notice. Please refer to the nameplate of the unit.

2.2 Operation Characteristic Curve

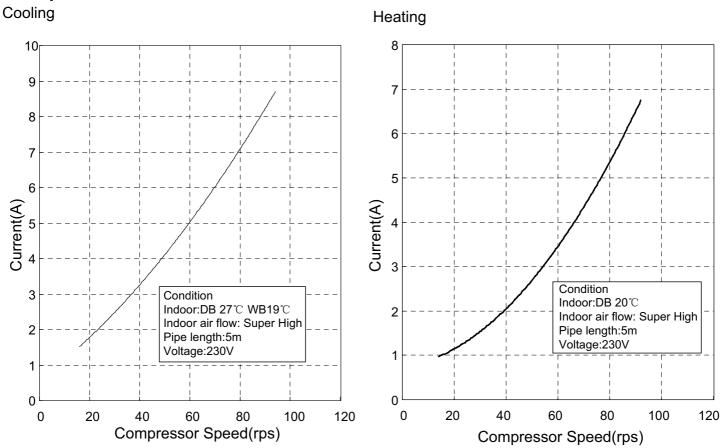

2.3 Capacity Variation Ratio According to Temperature

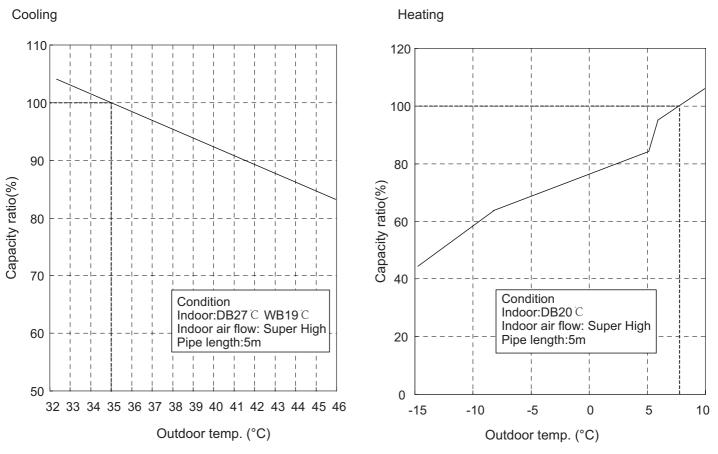

2.4 Operation Date

Cooling

Temp. Condition(℃)		Model	Standard	Indoor Fan	Outdoor	Compressor
Indoor	Outdoor	Woder	Pressure(Mpa)	Mode	Fan Mode	Revolution(rps)
27/19	35/24	35/24 09K 0.9 to 1.1 Supp	Super High	930rpm	53	
			0.8 to 1.0	Super riigir	93010111	72

Heating

Temp. Condition(°C)		Model	Standard	Indoor Fan	Outdoor	Compressor
Indoor	Outdoor	Woder	Pressure(Mpa)	Mode	Fan Mode	Revolution(rps)
20/-	7/6	09K	2.3 to 2.5	Super High	930rpm	72
20/-	770	12K	2.4 to 2.6	ouper riigir	Jooipin	78


NOTES:


(1) Measure surface temperature of heat exchanger pipe around center of heat exchanger path U bent. (Thermistor themometer)

(2) Connecting piping condition: 5 m

2.5 Noise Criteria Curve Tables for Both Models

Indoor side noise when blowing

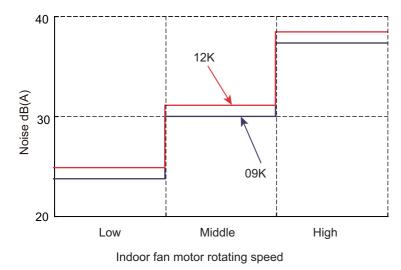


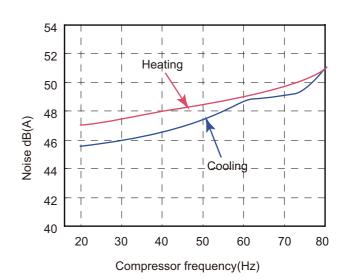



3. Construction Views

3.1 Indoor Unit

Models:GWC09KF-K3DNA5A/I,GWH09KF-K3DNA5A/I,GWC12KF-K3DNA5A/I,GWH12KF-K3DNA5A/I

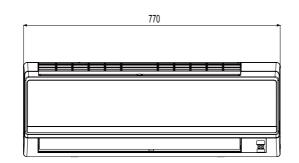


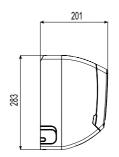


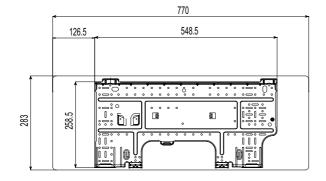


Unit:mm


Models:GWH09KF-K3DNA6A/I,GWH12KF-K3DNA6A/I

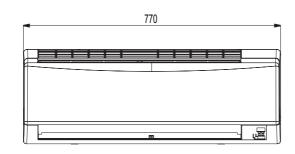


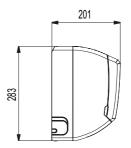

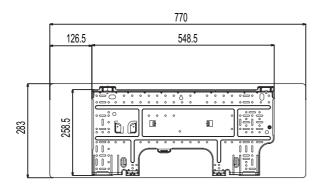


Models:GWH09KF-K3DNB1A/I,GWH12KF-K3DNB1A/I

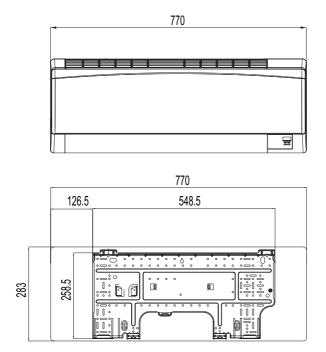

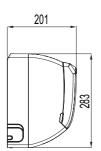


3.2 Outdoor Unit

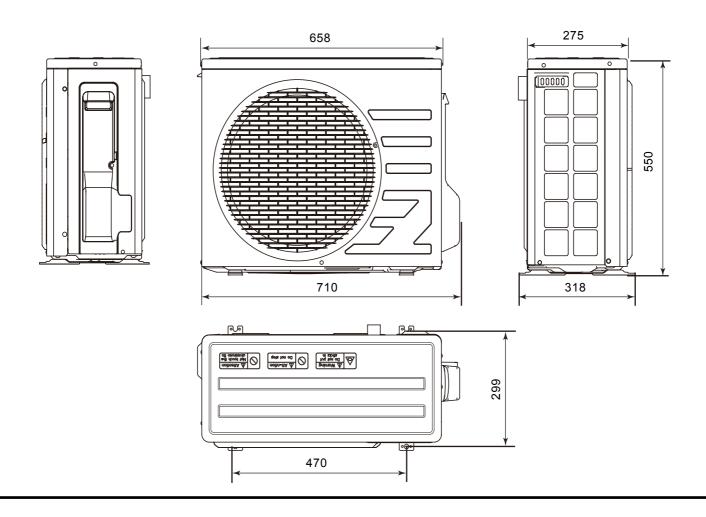


4. Refrigerant System Diagram

(1)Cooling Only Models

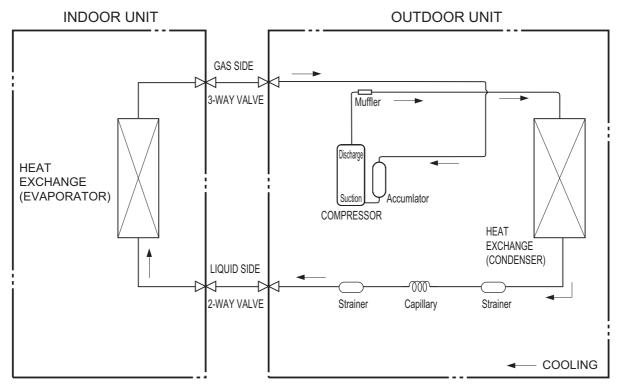

(2)Cooling & Heating Models

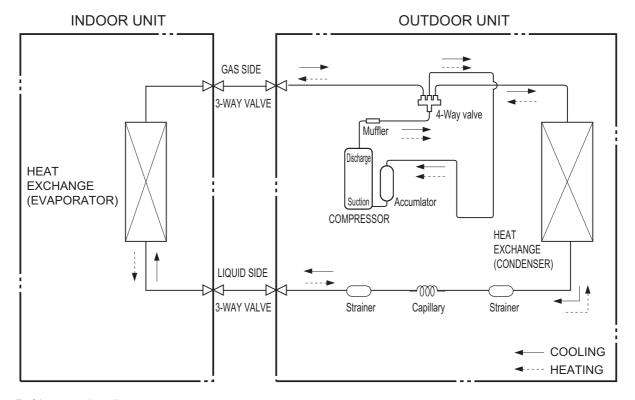

Refrigerant pipe diameter

Liquid: 1/4" (6 mm) Gas: 3/8" (9.52 mm)

5. Schematic Diagram

5.1 Electrical Data

Meaning of marks

• Indoor Unit


Symbol	Color symbol	Symbol	Color symbol
WH	WHITE	BN	BROWN
YE	YELLOW	BU	BLUE
RD	RED	BK	BLACK
YEGN	YELLOW GREEN		PROTECTIVE EARTH

Outdoor Unit

Symbol	Parts name	Symbol	Color symbol
L1	REACTOR	WH	WHITE
PCB1~PCB2	PRINTED CIRCUIT BOARD	YE	YELLOW
S10/S11S40/S70/S80/S90	CONNECTOR	RD	RED
SAT	OVERLOAD	BN	BROWN
COMP	COMPRESSOR	BU	BLUE
	PROTECTIVE EARTH	BK	BLACK
OG	ORANGE	YEGN	YELLOW GREEN


5.2 Electrical wiring

Indoor Unit

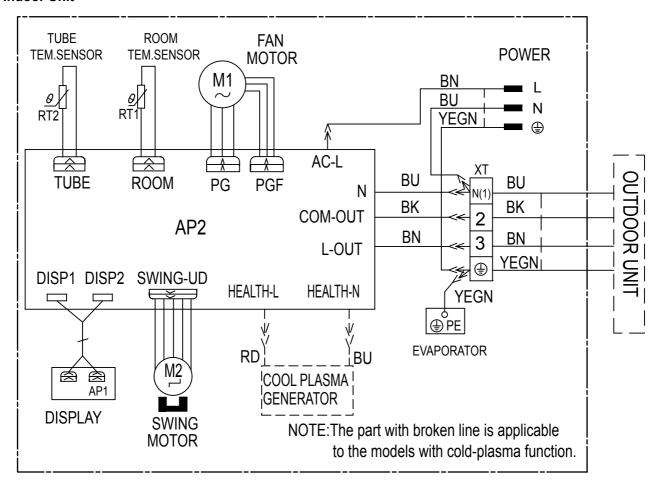


Outdoor Unit

Models GWC09KF-K3DNA5A/O,GWC12KF-K3DNA5A/O

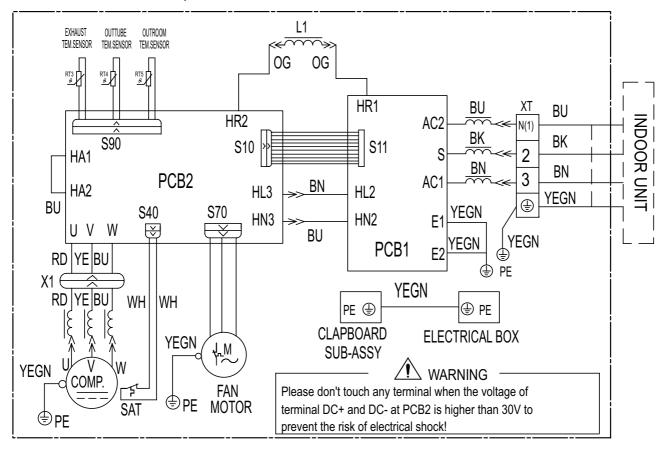

Models GWH09KF-K3DNA5A/O ,GWH12KF-K3DNA5A/O ,GWH09KF-K3DNA6A/O , GWH12KF-K3DNA6A/O , GWH09KF-K3DNB1A/O ,GWH12KF-K3DNB1A/O

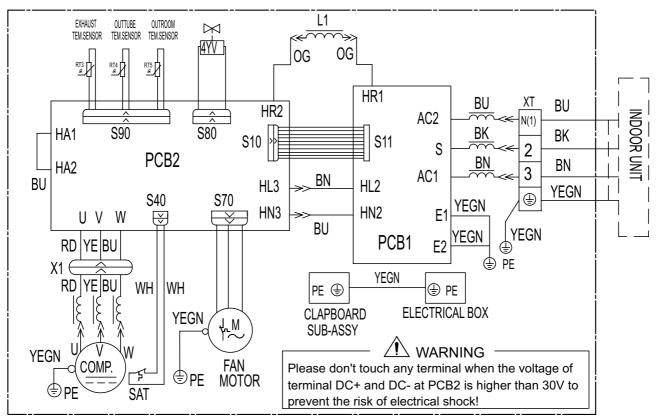


These circuit diagrams are subject to change without notice, please refer to the one supplied with the unit.


5.3 Printed Circuit Board

Indoor Unit
(1)Control PCB


• TOP VIEW

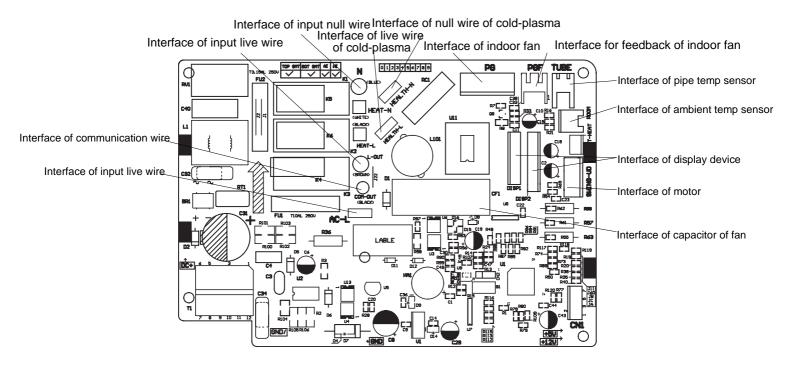

BOTTOM VIEW

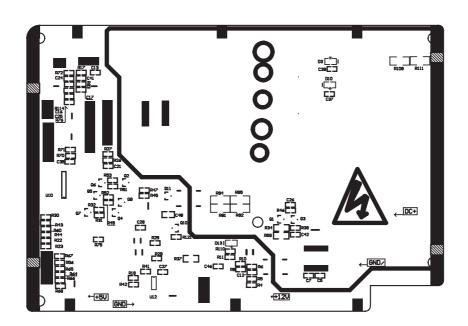


(2)Display PCB & Power Supply PCB

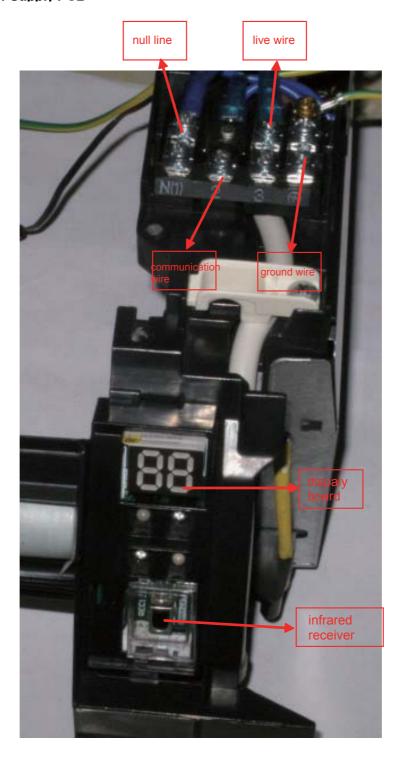


Outdoor Unit (1)Control PCB

• TOP VIEW

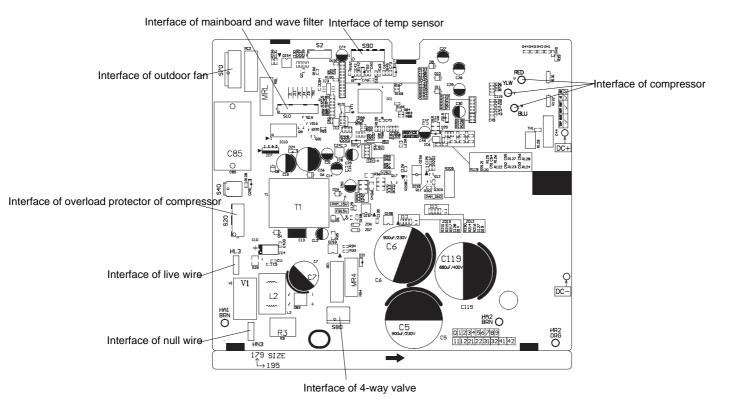

BOTTOM VIEW

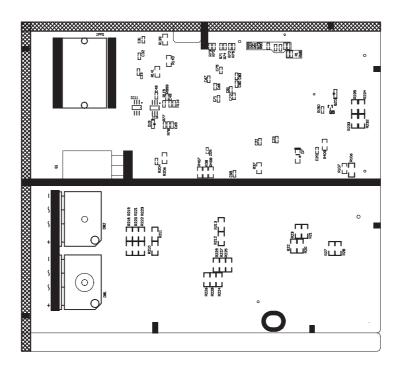

(2)Power Supply PCB

• FRONT VIEW




• BOTTOM VIEW




(3)Rejector PCB

• TOP VIEW

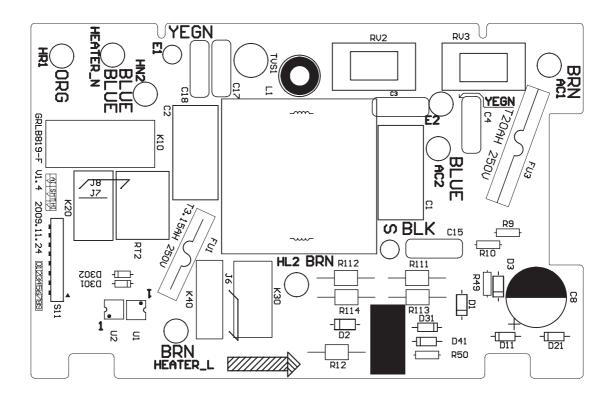


BOTTOM VIEW

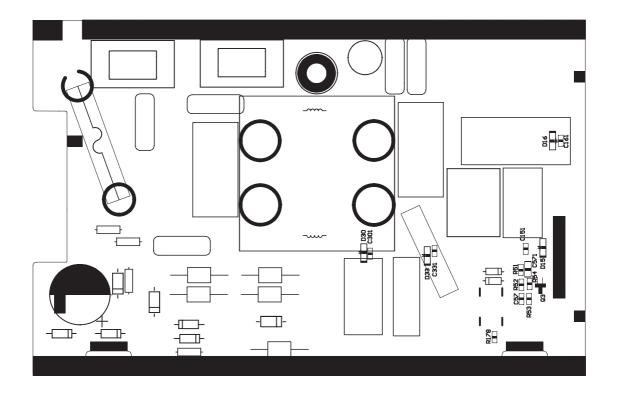

6. Function and Control

6.1 Remote Control Operations

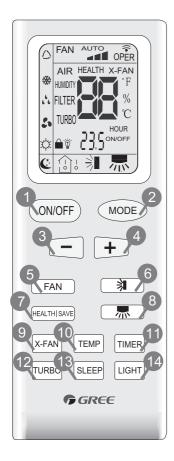

1 ON/OFF

Press this button to start or stop operation.

² MODE

Press it to select operation mode(AUTO/COOL/DRY/FAN/HEAT).

- : Press it to decrease temperature setting.
- + : Press it to increase temperature setting.
- FAN Press it to set fan speed.
- 7 HEALTH | SAVE

 Press it to select health mode on or off.
- 8 Press it to set left & right swing angle.
- Y-FAN(X-FAN is the alternative expression of BLOW for the purpose of understanding.)
- 10 TEMP
- 11 TIMER
 Press it set auto-on timer/auto-off timer.
- 12 TURBO
- 13 SLEEP
- LIGHT Press it to turn on/off the light.

Remote controller description

1 ON/OFF :

Press this button to start the unit operation .Press this button again to stop the unit operation.

2 MODE :

Each time you press this button,a mode is selected in a sequence that goes from AUTO, COOL,DRY, FAN, and HEAT*, as the following



*Note:Only for models with heating function.

After energization, AUTO mode is defaulted. In AUTO mode, the set temperature will not be displayed on the LCD, and the unit will automatically select the suitable operation mode in accordance with the room temperature to make indoor room comfortable.

3 —:

Press this button to decrease set temperature. Holding it down above 2 seconds rapidly decreases set temperature. In AUTO mode, set temperature is not adjustable.

4 + :

Press this button to increase set temperature. Holding it down above 2 seconds rapidly increases set temperature. In AUTO mode, set temperature is not adjustable.

5 FAN:

This button is used for settingfan speed in the sequence that goes from AUTO, , , to , then back to Auto.




- 6
- Press 🗦 button to start or stop up & down swing function. The remote controller defaults to simple swing condition.
- Press + button and just button at the same time at unit OFF to switch between simple swing and static swing, blinking 2 seconds.
- In static swing condition, press button, the swing angle of up & down louver changes as below:

- If the unit is turned off during swing operation, the louver will stop at present position.
- 7 HEALTH SAVE:

Press HEALTH part of this button to turn on or off HEALTH function. Pressing SAVE part of this button, \$\frac{1}{5}\$ is displayed and the unit goes into SAVE operation mode. Press SAVE part of the button again to cancel SAVE function .During SAVE operation, the tmperature and fan speed is not adjustable.

- 8 流:
- Press ___ button to start or stop left & right swing function. The remote controller defaults to simple swing condition.
- Press + button and button at the same time at unit OFF to switch between simple swing and static swing,
 blinking 2 seconds..
- In static swing condition, press ____ button, the swing angle of left & right louver changes as below:

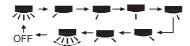

- If the unit is turned off during swing operation, the louver will stop at present position.
- 9 X-FAN:

Pressing X-FAN button in COOL or DRY mode, the icon "X-FAN" is displayed and the indoor fan will continue operation for 10 minutes in order to dry the indoor unit even though you have turned off the unit.

After energization, X-FAN OFF is defaulted. X-FAN is not available in AUTO,FAN or HEAT mode.

- 10 TEMP:

- Press this button to select displaying indoor set temp or indoor ambient temp. Set temp will be displayed after first energization o indoor unit; When temp display changes to " \bigcirc " from other state, the ambient temp will be displayed and then set temp will be displayed after receiving other remote signals. When turning off the unit, temp display setting will be set temp. If the user has not set the state of temp display, the set temp will be displayed.
- 11 TIMER:

Press TIMER button at unit ON to set TIMER OFF, HOUR OFF blinking. Press TIMER button at unit OFF to set TIMER ON, HOUR ON blinking. In this case, pressing + or - button changes time setting. Holding down either button rapidly changes time setting (time setting range 0.5-24hours). Press TIMER button again to confirm setting, HOUR ON/OFF stopping blink. If there is not any operation of button within 5 seconds during HOUR ON/OFF blinking, TIMER setting will be canceled.

12 TURBO:

Press this button to activate / deactivate the Turbo function which enables the unit to reach the preset temperature in shortest time. In COOL mode, the unit will blow strong cooling air at super high fan speed. In HEAT mode, the unit will blow strong heating air at super high fan speed. (This function is not applicable for some models).

13 SLEEP:

Press this button to go into the SLEEP operation mode. Press it again to cancel. This function is available in COOL, HEAT (Only for models with heating function) or DRY mode to maintain the most comfortable temperature for you.

14 LIGHT:

Press LIGHT button to turn on the display's light and press this button again to turn off the display's light. If the light is tunrned on, is displayed. If the light is tunrned off disappears.

4 and 3 About lock:

Press "+ " and "=" buttons simultaneously to lock or unlock the keypad. If the remote controller is locked, is displayed. In this case, pressing any button, blinks three times.


3 and 2 About switch between fahrenheit and cenrigrade

6.2 Changing batteries and notices

- 1. Remove the battery cover plate from the rear of the remote controller. (As shown in the figure).
- 2. Take out the old batteries.
- 3.Insert two new AAA1.5V dry batteries, and pay attention to the polarity.
- 4. Replace the battery cover plate.

Notes:


- When replacing the batteries, do not use old or different batteries, otherwise, it may cause malfunction.
- If the wireless remote controller will not be used for a long time, please remove batteries to prevent damage from leaking batteries.
- The operation should be performed in its receiving range.
- It should be kept 1m away from the TV set or stereo sound sets.
- If the wireless remote controller does not operate normally, please take the batteries out and replace them after 30 seconds. If still not operating properly, replace the batteries.

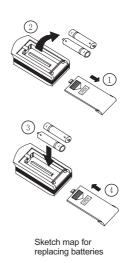

6.3 Description of Each Control Operation

(1)Cooling Mode

- When room temp-set temp $\leq -2^{\circ}\mathbb{C}$, cooling will stop; Outdoor fan will stop later and indoor fan will operate at set
- When room temp -set temp $> -2^{\circ}$ C, if such situation continues for a period of time, cooling operation will be started. In that case, indoor fan, outdoor fan and compressor will operate and the indoor fan will operate at set speed.
- * In this mode, fan and swing motor will operate at set status and the temp range setting is $16~30^{\circ}$ C (61~86°F).
- If there is malfunction of outdoor unit or the unit stops for protection, the indoor unit will keep its operation status but the error will be displayed.

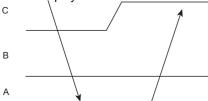

Indoor temperature- set temperature

(2)Dry Mode


- 1. In this mode, the fan motor runs at low fan speed while swing works according to setting state. The range of setting temperature is 16~30 °C
- 2. When outdoor unit has malfunction or stopped for protection, the indoor fan will keep the original running state and the error will be displayed.

(3)Fan Mode

1. In this mode, the indoor fan may run at high, medium, low and automatic speed. The compressor, outdoor fan and 4-way valve all stop running. □□ 2. In this mode, the range of setting temperature is 16~30 °C (61~86"H). □□

(4)Heating Mode

- 1. Heating mode □ □
 - When setting temperature-indoor temperature<= -1.5°C, the unit will stop heating. Both outdoor fan and indoor fan will stop later. When setting temperature-indoor temperature>-1.5 °C and it lasts for a certain period, the unit will start heating. In that case, indoor fan, outdoor fan and compressor will start running. The indoor fan works according to the operation of cold air prevention.
- * In this mode, the range of setting temperature is 16~30 °C (61~86"H).

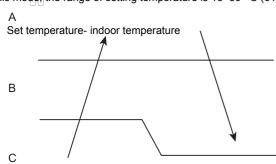

- 2. Protection function: in heating mode, when the compressor stops as a result of malfunction, the indoor fan blows residual heat. $\Box\,\Box$
- 3. Defrosting control: when the defrosting signal is received, the defrosting mark H1 will be shown. The e-heater and indoor fan stop. □

* Cold air prevention function

The rotational speed of indoor motor is decided based on the indoor pipe temperature. The indoor fan can run at low speed or stop running. This function will terminate after the unit runs for 3min or the pipe temperature reached certain value.

During heating, if the indoor pipe temperature is lower than certain value.

The running speed of indoor fan will decrease automatically based on the pipe temperature to ensure that the outlet air is hot.


* X-Fan function

During heating, when conditions for stop of the compressor is reached, the compressor and the outdoor fan stop running while the horizontal louver rotates to level L. the indoor fan will stop after running for 60s at setting speed.

(5) Auto Changeover Mode

In this mode, the system selects the operation mode (cooling, heating, and fan) automatically according to the ambient temperature. The display shows the actual operation mode and setting temperature. There will be 30s delay for mode conversion. The protection function is the same as that of other modes.

- 2. for heat pump unit: when Tamb =22 $^{\circ}$ C , the unit runs in heating mode 3. for cooling only unit: when Tamb < 22 $^{\circ}$ C , the unit runs in fan mode. .
- enter auto mode and run in automatic fan mode. If the other mode changes to auto mode, the previous operation mode will remain.

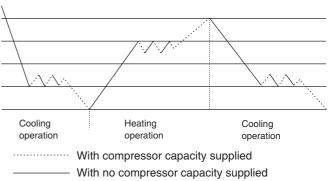

(6) Auto fan speed Mode

In auto fan mode, the rotational speed of the fan for indoor unit is decided by the differential temperature between ambient temperature and setting temperature. In dry mode, the automatic fan speed is forced to be low.

Indoor Fan control


	No. of jumper cap	unit type	mode	Super-high fan speed	High fan speed	Medium fan speed	Low fan
	1	09K	Rotational speed during cooling	1300	1100	900	700
			Rotational speed during heating	1300	1140	980	820
	2	12K	Rotational speed during cooling	1350	1150	950	750
2	Z		Rotational speed during heating	1350	1190	1020	850

(7)Louver Control

After energization, the swing motor will open the horizontal louver to be open and then be close completely. And the air outlet is close. In heating mode, if the swing function is not set, the horizontal louver will rotate to maximum in clockwise direction. Then it will rotate to place D. Under other state, the horizontal louver will rotate to level L. If the swing function is set when starting the unit, the horizontal louver will swing between place L and D. there are 7 states for the louver: in Place L, Place A, Place B, Place C, Place D, and swing between Place L and place D, stop in any place between Place L and place D. When the unit is turned off, the louver will stay in place 0. The swing is available only

Note: When place L to B, place A to C, and place B and D is set, the horizontal louver will swing between place L to D.


$$L \longleftrightarrow A \longleftrightarrow B \longleftrightarrow C \longleftrightarrow D$$

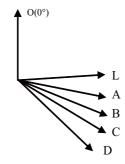


when the swing function is set and the indoor fan is running.

(8)Sleep Function

- 1. It is applicable to cooling mode, dry mode and heating mode.
- 2. In cooling mode or dry mode, 1 hour after the sleep curve is set, the setting temperature will rise by 1 $^{\circ}$ C . 2 hours later, the setting temperature will rise by 2 $^{\circ}$ C . After that, the setting temperature will not change any more

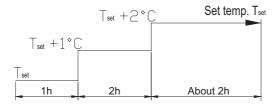

3. In heating mode, 1 hour after the sleep curve is set, the set temperature will decrease by 1°C. 2 hours later, the set temperature will decrease by 2°C. After that, the set temperature will not change any more.

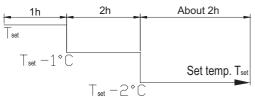

(9)Timer Function

The main board has general timer function and clock timer function. The timer function can be selected by remote controller.

(1) General timer (timer-on and timer-off of the unit can be set. The accuracy is minute.E.g.: timer on for 1 hour; timer off for 1.5 hours.) Timer on: after setting timer on, the unit will run at set time according to the original set mode. The timing interval is 0.5hour, and the set range is 0.5~24hours.

Timer off: the timer off function can be set when the unit is on. When the set time for timer off is reached, the unit will stop. The timing interval is 0.5hour, and the set range is 0.5~24hours.

(2)Clock Timer (timer-on and timer-off of the unit can be set. The accuracy is minute. E.g.: timer on at 8:00a.m.; timer off at 17:30p.m.)

Timer on: if the timer on function is set when the system is on, the unit will keep running. If the timer on function is set when the unit is off, the unit will start running at the previously set mode when the set time is

Timer off: if the timer off function is set when the unit is off, the unit will keep off state even though the setting time is reached. If the timer off function is set when the unit is on, the unit will stop running when the set time is reached.

Timer modification: when the unit is under timer state, start or stop of the unit can be set via remote ON/OFF button and the timer can be reset. The unit runs according to the latest set state.

When both the timer on and timer off are set: the system runs according to the current set state. When the set time is reached, the unit will start and stop running. In that case, the unit will run according to the previously set mode when the set time for timer on is reached. The unit will stop running while the set time for timer off is reached.

If the setting time for timer on and timer off is the same, the unit will stop running no matter what the current state is.

(10)Auto-Restart Function

Memory: mode, vertical swing, light, set temperature, set fan speed, general timer (not clock), Fahrenheit / Celsius. After de-energized, the unit can operate according to the memory if it is energized again. If the timer function is not set in the last remote control, the unit will operate according to the last remote control. If the timer function is set in the last control before it is de-energized, the unit will memorize the last timer setting. The set time is recalculated since the energization of the unit. If the timer function is set in the last control and the setting time is reached before the unit is deenergized, the unit will operate according to the previous running mode after it is energized again. But the timer function will terminate. The clock will not be memorized.

(11) Turbo function

In cooling and heating mode (not available in auto, dry, fan mode), press the Turbo button, the super high speed will be displayed in the remote controller and the indoor fan changes to super high speed as well.

(12) Health function

When the indoor fan is running, the Health function is set by pressing remote controller (If there is no Health button on the remote controller, the start of Health function is defaulted).

(13) I Feel function

If the remote controller receives the I Feel order, the controller will work according to the ambient temp which is sent by remote controller (Except the defrosting and cool air prevention, which still adopt the sampling value from AC itself ambient temp sensor), the remote controller will send ambient temperature value to controller at intervals. If the controller hasn't received the ambient temperature value from the remote controller for long time, then it will run accroding to the current ambient temperature of AC. If the function has not been set, the ambient temperature will adopt the sensor sampling value of AC itself. If power off happens, this function will not be memorized.

6. 4 Troubleshooting of Temperature Sensor

(1) Indoor temperature sensor □□

Detect malfunctions of temperature sensor at any time. □

(2) Indoor pipe temperature sensor \Box

In defrosting period, the temperature sensor malfunction will not be detected. 5 min after finishing defrosting, the system begins to detect the temperature sensor malfunction. In other times, the temperature sensor malfunction will be detected.

1. When short-circuit occurs to the temperature sensor for 30s: □□

The temperature sensor overheats. In this case, the complete unit will stop for protection. At the same time, the temperature protection and temperature sensor malfunction will be shown.

2. When break-circuit occurs to the temperature sensor for 30s: □□

The unit will stop and the temperature sensor malfunction will be displayed \Box

6.5 Frequency Control

Frequency Initial Setting

<Outline>

When starting the compressor, or when conditions are varied due to the change of the room, the frequency must be initialized according to the $\triangle D$ value of the indoor unit and the Q value of the indoor unit.

Q value: Indoor unit output determined from indoor unit volume, air flow rate and other factors.

PI Control (Determine Frequency Up / Down by \triangle D Signal)

1. P control

Calculate $\triangle D$ value in each sampling time (20 seconds), and adjust the frequency according to its difference from the frequency previously calculated.

2. I control

If the operating frequency is not change more than a certain fixed time, adjust the frequency up and down according to the $\triangle D$ value, obtaining the fixed $\triangle D$ value.

When the $\triangle D$ value is small...lower the frequency.

When the $\triangle D$ value is large...increase the frequency.

3. Frequency management when other controls are functioning

When frequency is drooping;

Frequency management is carried out only when the frequency droops.

For limiting lower limit

Frequency management is carried out only when the frequency rises.

4. Upper and lower limit of frequency by PI control

The frequency upper and lower limits are set depending on indoor unit.


When low noise commands come from the indoor unit or when outdoor unit low noise or quiet commands come from indoor unit, the upper limit frequency must be lowered than the usual setting.


6.6 3-minutes Standby

Prohibit to turn ON the compressor for 3 minutes after turning it off.(except when defrosting)

6.7 Compressor Protection Function

When turning the compressor from OFF to ON, the upper limit of frequency must be set as follows. (The function must not be used when defrosting.)

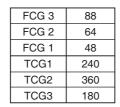

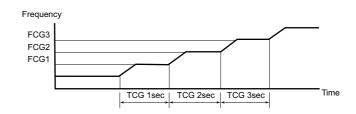


6.8 Discharge Pipe Control

Outline

The discharge pipe temperature is used as the compressor's internal temperature. If the discharge pipe temperature rises above a certain level, the operating frequency upper limit is set to keep this temperature from going up further.

Detail

Divide the Zone

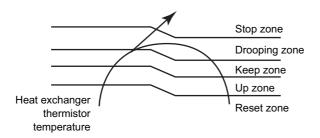

Management within the Zones

Zone	Control contents
Stop zone	When the temperature reaches the stop zone, stop the compressor and correct abnormality.
Drooping zone	Start the timer, and the frequency will be drooping.
Keep zone	Keep the upper limit of frequency.
Return / Reset zone	Cancel the upper limit of frequency.

6.9 Input Current Control


Outline

Detect an input current by the CT during the compressor is running, and set the frequency upper limit from such input current.

In case of heat pump model, this control is the upper limit control function of the frequency which takes priority of the lower limit of four way valve activating compensation.

Detail

The frequency control will be made within the following zones.

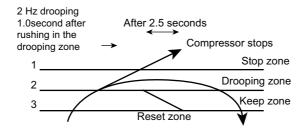

When a "stop current" continues for 2.5 seconds after rushing on the stop zone, the compressor operation stops.

If a "drooping current" is continues for 1.0 second after rushing on the drooping zone, the frequency will be 2 Hz drooping.

Repeating the above drooping continues until the current rushes on the drooping zone without change.

In the keep zone, the frequency limit will remain.

In the return / reset zone, the frequency limit will be cancelled.

Limitation of current drooping and stop value according to the outdoor air temperature

- 1. In case the operation mode is cooling
- * The current droops when outdoor air temperature becomes higher than a certain level (model by model).
- 2. In case the operation mode is heating
- * The current droops when outdoor air temperature becomes higher than a certain level (model by model).

6.10 Freeze-up Protection Control

Outline


During cooling operation, the signals being sent from the indoor unit allow the operating frequency limitation and then prevent freezing of the indoor heat exchanger. (The signal from the indoor unit must be divided into the zones as the followings.)

Detail

Conditions for Start Controlling

Judge the controlling start with the indoor heat exchanger temperature after 2 sec from operation start.

Control in Each Zone

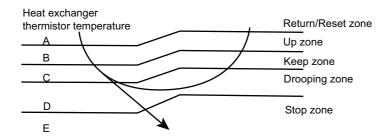

6.11 Heating Peak-cut Control

Outline

Heat Pump Only

During heating operation, the signals being sent from the indoor unit allow the operating frequency limitation and prevent abnormal high pressure. (The signal from the indoor unit must be divided as follows.)


Detail

Conditions for Start Controlling

Judge the controlling start with the indoor heat exchanger temperature after 2 sec. from operation start.

Control in Each Zone

The heat exchange intermediate temperature of indoor unit controls the following.

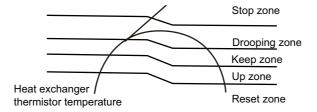

6.12 Defrost Control

Outline

Heat Pump Only

Defrosting is carried out by the cooling cycle (reverse cycle). The defrosting time or outdoor heat exchanger temperature must be more than its fixed value when finishing.


Detail

Conditions for Starting Defrost

The starting conditions must be made with the outdoor air temperature and heat exchanger temperature. Under the conditions that the system is in heating operation, 6 minutes after the compressor is started and more than 44 minutes of accumulated time pass since the start of the operation or ending the defrosting.

Conditions for Canceling Defrost

The judgment must be made with heat exchanger temperature. (39°F~72°F)

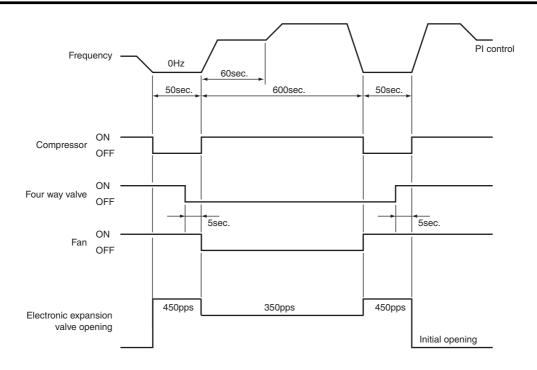

6.13 Fan Control

Outline

Fan control is carried out according to the following priority.

- 1. Fan ON control for electric component cooling fan
- 2. Fan control when defrosting
- 3. Fan OFF delay when stopped
- 4. ON/OFF control in cooling operation
- 5. Tap control when drooping function is working
- 6. Fan control in forced operation
- 7. Fan control in indoor/outdoor unit silent operation
- 8. Fan control in powerful mode
- 9. Fan control in normal operation

Detail

Fan OFF Control when Stopped

* Fan OFF delay for 60 seconds must be made when the compressor is stopped.

Tap Control in indoor/outdoor unit silent operation

1. When Cooling Operation

When the outdoor air temperature is lower than 99°F, the fan tap must be set to L.

2. When Heating Operation

When the outdoor air temperature is higher than 39°F, the fan tap must be turned to L (only for heat pump model).

7. Installation Manual



Important Notices

- 1. The unit installation work must be done by qualified personnel according to the local rules and this manual.
- 2. Before installating, please contact with local authorized maintenance center, if unit is not installed by the authorized maintenance center, the malfunction may not solved, due to discommodious contacts.
- 3. When removing the unit to the o.ther place, please firstly contact with the authorized Maintenance Center in the local area.

Basic Requirements For Installation Position

Install in the following place may cause malfunction. If it is unavoidable contact with service center please:

- * Place where strong heat sources, vapors, flammable gas or volatile object are emitted.
- * Place where high-frequency waves are generated by radio equipment, welders and medical equipment.
- * Place where a lot of salinities such as coast exists.
- * Place where the oil (machine oil) is contained in the air.
- * Place where a sulfured gas such as the hot spring zones is generated.
- * Other place with special circumstance.

7.1 Tools Required for Installation (not supplied)

- 1. Gauge manifold
- 2. Electronic balance for refrigerant charging
- 3. Phillips head screwdriver
- 4. Knife or wire stripper
- 5. Carpenter's level
- 9. Hammer
- 10. Drill
- 11. Tube cutter
- 12. Tube flaring tool
- 13. Torque wrench
- 14. Adjustable wrench
- 15. Reamer (for deburring)
- 16. Vacuum pump (For R410A)
- 17. Gas leakage detector

7.2 Installation Position Selection

1. Indoor Unit

- (1)The air inlet and outlet vent should be far from the obstruction, make sure that the air can be blown through the whole room.
- (2)Select a position where the condensing water can be easily drained out, and the place is easily connected for outdoor unit.
- (3)Select a location where the children can not reach.
- (4)Can select the place where is strong enough to withstand the full weight and vibration of the unit. And will not increase the noise.
- (5)Be sure to leave enough space to allow access for routine maintenance. The height of the installed location should be 250cm or more from the floor.
- (6)Select a place about 1m or more away from TVset or any other electric appliances.
- (7)Select a place where the filter can be easily taken out.
- (8)Make sure that the indoor unit installation should accord with installation dimension diagram requirements.
- (9)Do not use the unit in the immediate surroundings of a laundry a bath a shower or a swimming pool.

2. Outdoor Unit

- (1)Select a location from which noise and outflow air emitted by unit will not inconvenience neighbors, animals, plants.
- (2) Select a location where there should be sufficient ventilation.
- (3)Select a location where there should be no obstructions cover the inlet and outlet vent.
- (4)The location should be able to withstand the full weight and vibration of the outdoor unit and permit safe installation.
- (5)Select a dry place, but do not expose under the direct sunlight or strong wind.
- (6)Make sure that the outdoor unit installation dimension should accord with installation dimension diagram, convenient for maintenance, repair.
- (7)The height difference of connecting the tubing within 5m, the length of connecting the tubing within 10m.
- (8) Select a place where it is out of reach for the children.
- (9) Select a place where will not block the passage and do not influence the city appearance.


7.3 Installation of Indoor Unit

1.Installing the mounting plate

The mounting plate should be installed on a wall which can support the weight of the indoor unit.


- 1) Temporarily secure the mounting plate to the wall, make sure that the panel is completely level, and mark the boring points on the wall.
- 2) Secure the mounting plate to the wall with screws.

Recommended mounting plate retention spots and dimensions

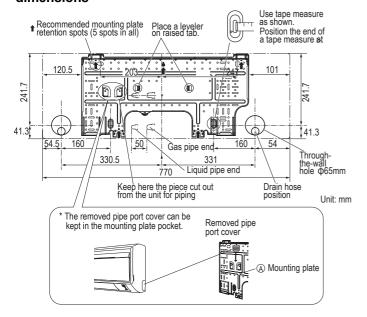

2. Boring a wall hole and installing wall embedded pipe

- 1.Make the piping hole ($\Phi\,55)$ in the wall at a slight downward slant to the outdoor side.
- 2.Insert the piping-hole sleeve into the hole to prevent the connection piping and wiring from being damaged when passing through the hole.

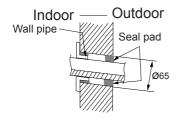

3. Flaring work and connection of piping


3.1 Flaring work

Flaring work

Main cause for refrigerant leakage is due to defect in theflaring work. Carry out correct flaring work using the follow-ing procedure.

Cut the pipes and the cable

- 1. Use the piping kit accessory or pipes purchased locally.
- 2. Measure the distance between the indoor and the outdoor unit.
- 3. Cut the pipes a little longer than the measured distance.
- 4. Cut the cable 1.5m longer than the pipe length.

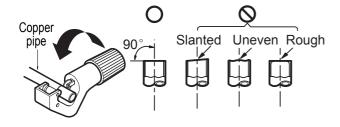


Burr removal

- 1.Completely remove all burrs from the cut cross section of pipe/tube.
- 2. Put the end of the copper tube/pipe in a downward direction as you remove burrs in order to avoid dropping burrs into the tubing.




Putting nut on

Remove flare nuts attached to indoor and outdoor unit, then put them on pipe/tube having completed burr removal. (not possible to put them on after flaring work)

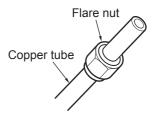

Flaring work

Firmly hold copper pipe in a die in the dimension shown in the table above.

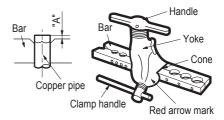


Carry out flaring work using flaring tool as shown below.

Outside diameter		Α
mm	inch	mm
Ø6.35	1/4	0~0.5
Ø9.52	3/8	0~0.5
Ø12.7	1/2	0~0.5
Ø15.88	5/8	0~1.0
Ø19.05	3/4	1.0~1.3


Chack

- 1. Compare the flared work with figure below.
- 2.If flare is noted to be defective, cut off the flared section and reflare it.

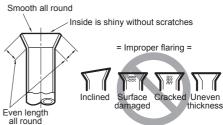


3.2 Connection of piping

1. Align the center of the pipes and sufficiently tighten the flare nut by hand.

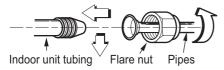

2. Tighten the flare nut with a wrench.

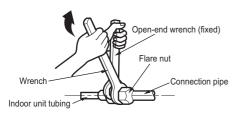


Outside	Torque			
mm	mm inch			
Ø6.35	1/4	1.8		
Ø9.52	3/8	4.2		
Ø12.7	1/2	5.5		
Ø15.88	5/8 6.6			
Ø19.05	3/4	6.6		

4. Drain hose junction

If drain hose extension or embedded drain piping is required, use appropriate parts that match the hose front end.


Insert drain hose into the handle of drain pan, and join drain hose and connecting hose according to the figure by.

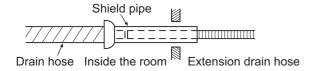

A CAUTION

Insert the drain hose and drain cap into the drain port, making sure that it comes in contact with the back of the drain port, and then mount it. If the drain hose is not connected properly, leaking will occur.

· Attach the Insulation (Drain hose) to the drain hose.

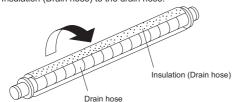

5.Wiring Connection


Wiring the connecting cable can be carried out without removing the front panel.

- 1. Remove the air inlet grille. Open the air inlet grille upward and pull it toward you.
- 2. Remove the terminal cover and cord clamp.
- 3. Insert the connecting cable (or as according to local regulations/codes) into the pipe hole on the wall.
- 4. Pull the connecting cable through the cable slot on the rear panel so that it protrudes about 15 cm out of the front.

- 5. Insert the connecting cable fully into the terminal block and secure it tightly with screws.
- 6. Tightening torque: 1.2 N·m (0.12 kgf·m).
- 7. Secure the connecting cable with the cord clamp.
- 8. Attach the terminal cover, rear plate bushing and air inlet grille on the indoor unit.

CAUTION

- Be sure to refer to the wiring system diagram labeled inside the front panel.
- Check local electrical regulations for any specific wiring instructions or limitations.

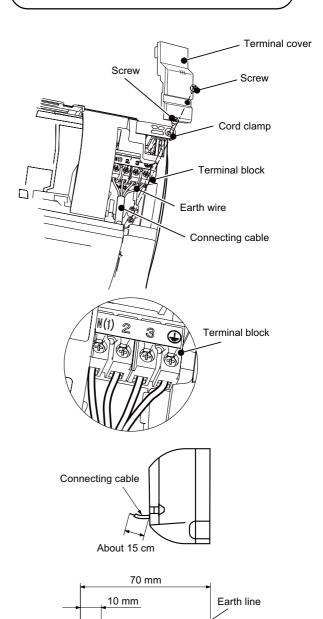

10 mm


50 mm

5.Installing indoor unit

In the case of bending or curing refrigerant pipes, keep the following precautions in mind.

Abnormal sound may be generated if improper work is conducted.

- 1) Do not strongly press the refrigerant pipes onto the bottom frame.
- 2) Do not strongly press the refrigerant pipes on the front grille, either.

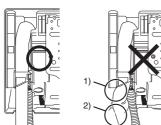


The piping can be lead out from right, right rear, left left rear.

Right-side, right-back, or right-bottom piping

1)After making slits on the front panel with a knife or similar tool, cut them out with a pair of nippers or an equivalent tool.

Attach the drain hose to the underside of the refrigerant pipes with an adhesive vinyl tape.

2) Wrap the refrigerant pipes and drain hose together with an insulation tape.

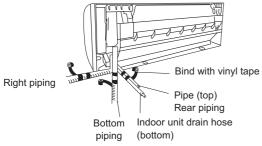

Left-side, left-back, or left-bottom piping

· Interchange the drain cap and the drain hose.

CAUTION

- In order to align the drain hose and drain cap, be sure to insert securely and vertically. Incline insertion will cause water leakage.
- (2) When inserting, be sure not to attach any material besides water. If any other material is attached, it will cause deterioration and water leakage.
- (3) After removing drain hose, be sure not to forget mounting drain cap.
- (4) Be sure to fix the drain hose with tape to the bottom of piping.
- (5) Prevent drain water frozen under low temperature environment.

When installing indoor unit's drain hose outdoors, necessary measure for frost protection should be taken to prevent drain water frozen.


Under low temperature environment (when outdoor temperature under 32 °F), after cooling operation is executed, water in the drain hose could be frozen.

Once drain water is frozen, the drain hose will be blocked and water leakage may be resulted for indoor unit.




For left outlet piping, cut off the piping outlet cutting groove with a hacksaw.


Remove the drain cap by pulling at the projection at the end of the cap with pliers, etc.

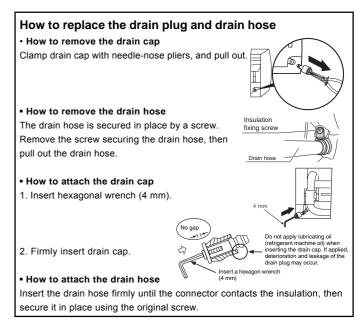


1. After making slits on the front panel with a knife or similar tool, cut them out with a pair of nippers or an equivalent tool.

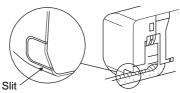

2. Overlap the connection pipe insulation material and the indoor unit pipe insulation material. Bind them together with vinyl tape so that there is no gap.

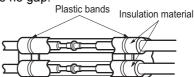


3. Wrap the area which accommodates the rear piping housing section with vinyl tape.

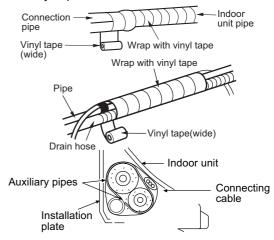

4.Bundle the piping and drain hose together by wrapping them with vinyl tape for enough to cover where they fit into the rear piping housing section.

Indoor unit installation


1) Pass the drain hose and refrigerant pipes through the wall hole, then set the indoor unit on the mounting plate hooks by using the markings at the top of the indoor unit as a guide.

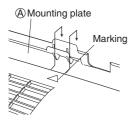


- 2) Swing the indoor unit to right and left to confirm that it is firmly hooked on the installation plate.
- 3)While pressing the indoor unit onto the wall, hook it at the lower part on the installation plate.

Pull the indoor unit toward you to confirm that it is firmly hooked on the installation plate.

For detaching the indoor unit from the installation plate pull the indoor unit toward you while pushing the bottom up at the specified places.

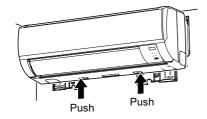

4)Run the drain hose at a downward sloped angle.

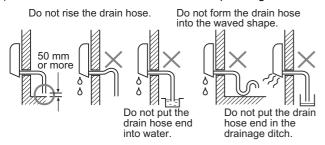

5)Put water in the drain pan and make sure that the water is being drained outside.


Caution:

Install the drain pipe for proper drainage. Improper drainage can result in water dripping inside the room.

7.4 Installation of Outdoor Unit

4.1 Draining the Water


- * Holes are provided on the base plate of the outdoor unit to ensure that the defrost water produced during heating operations is drained off efficiently.
- * If a centralized drain is required when installing the unit on a balcony or wall.
- * If the drain port is covered by a mounting base or floor surface, place additional foot bases of at least 30mm in height under the outdoor unit's feet.
- * In cold areas, do not use a drain hose with the outdoor unit. (Otherwise, drain water may freeze, impairing heating performance.)

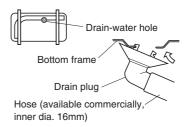

4.2 Refrigerant Piping Connection

Remove the Valve cover from the unit by loosening the screw. Align the center of the pipings and sufficiently tighten the flare nut by hand.



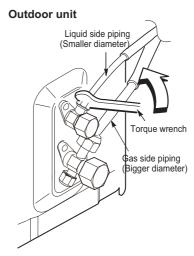

4.3 Evacuation

After the piping has been connected to the indoor unit, perform the air purge.

AIR PURGE

Evacuate the air in the connecting pipes and in the indoor unit using a vacuum pump.


Do not use the refrigerant in the outdoor unit.

For details, see the vacuum pump manual.

Air purging with vacuum pump

Be sure to use a vacuum pump with counter-flow prevention function so that oil inside the pump does not flow back into the air conditioner pipes when the pump stops. (If oil inside the vacuum pump enters into the air conditioner circuit which uses R410A, trouble with the refrigeration system may develop.)

- 1. Connect the charge hose from the manifold valve to the service port of the gas side packed valve.
- 2. Connect the charge hose to the port of the vacuum pump.
- 3. Open fully the low pressure side handle of the gauge manifold valve.
- 4. Operate the vacuum pump to begin evacuating. Perform evacuating for about 15 minutes if the piping length is 20 meters (15 minutes for 20 meters) (assuming a pump capacity of 27 liters per minute). Confirm that the compound pressure gauge reading is –101 kPa (–76 cmHg).
- 5. Close the low pressure valve handle of gauge manifold.
- 6. Open fully the valve stem of the packed valves (both sides of Gas and Liquid).
- 7. Remove the charging hose from the service port.
- 8. Securely tighten the caps on the packed valves.

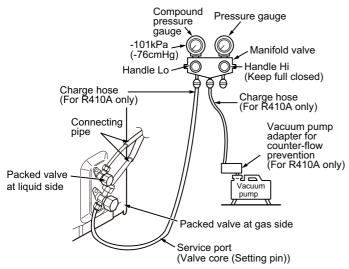

CAUTION


• IMPORTANT POINTS FOR PIPING WORK

- 1. Keep dust and moisture from entering the pipes.
- 2. Tighten connections carefully (between pipes and unit).
- 3. Evacuate the air in the connecting pipes using a VACUUM PUMP.
- 4. Check for gas leaks at all connections.

Packed Valve handling precautions

- Open the valve stem all the way; but do not try to open it beyond the stopper.
- Securely tighten the valve stem cap with torque in the following table:


Gas side (Ø9.52 mm)	33 to 42 N•m (3.3 to 4.2 kgf•m)
Liquid side (Ø6.35 mm)	14 to 18 N•m (1.4 to 1.8 kgf•m)
Service port	14 to 18 N•m (1.4 to 1.8 kgf•m)

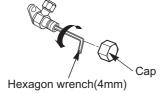

4.4 Wiring Connection

- 1) Strip the insulation from the wire (20mm).
- 2) Connect the connection wires between the indoor and outdoor units so that the terminal numbers match. Tighten the terminal screws securely.

The screws are packed with the terminal board.

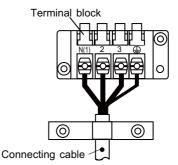


7.5 Test Operation

- 1. Check that all tubing and wiring have been properly connected.
- 2. Check that the gas and liquid side service valves are fully open.

5.1 Gas Leak Test

Check the flare nut connections for gas leaks with a gas leak detector and/or soapy water.

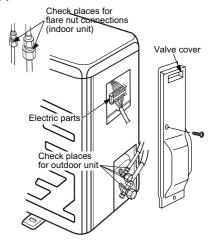

5.2 Test Runing

- 1)Switch on power, press "ON/OFF" button on the wireless remote control to start the operation.
- 2)Press MODE button, to select the COOL, HEAT (Cooling only unit is not available), FAN to check whether the operation is normal or not.

Perform test operation and check items 1 and 2 below.

1. INDOOR UNIT


- (1) Is operation of each button on the remote control unit normal?
- (2) Does each lamp light normally?
- (3) Do the air flow-direction louver operate normally?
- (4) Is the drain normal?

2. OUTDOOR UNIT

- (1) Is there any abnormal noise and vibration during operation?
- (2) Will noise, wind, or drain water from the unit disturb the neighbors?
- (3) Is there any gas leakage?

8. Exploded Views and Parts List


8.1 Indoor Unit

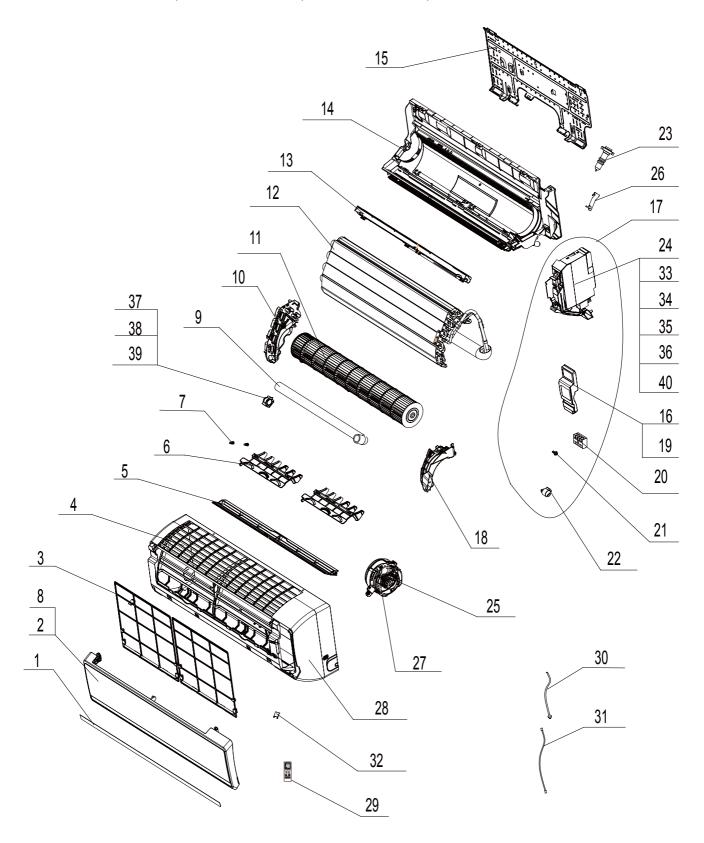

	Description	Part Code			
No.	Description	GWC09KF-K3DNA5A/I	GWH09KF-K3DNA5A/I	Qty	
	Product Code	CB146N0050	CB146N0060		
1	Decorative Strip	20192292	20192292	1	
2	Front Panel	2001232501T	2001232501T	1	
3	Filter Sub-Assy	1112208201	1112208201	2	
4	Front Case	20012324	20012324	1	
5	Guide Louver	10512119	10512119	1	
6	Air Louver	10512160	10512160	2	
7	Shaft of guide louver	1054202001	1054202001	2	
8	Front Panel Assy	2001237601	2001237601	1	
9	Drainage Pipe Sub-assy	0523204101	0523204101	1	
10	Evaporator Support			1	
11	Cross Flow Fan	10352423	24212108 10352423	1	
12	Evaporator Assy				
13	Helicoid tongue	26112486	26112486	1	
14	Rear Case assy	2220211901	2220211901	1	
15	Wall Mounting Frame	0125201801	0125201801	1	
16	Electric Box Cover	20122106	20122106	1	
17	Electric Box Assy	2020225303	2020225302	1	
18	Motor Press Plate	26112191	26112191	1	
19	Electric Box Cover Sub-Assy	20122109	20122109	1	
20	Terminal Board	42011233	42011233	1	
21	Crank	73012005	73012005	1	
22	Step Motor	1521210701	1521210701	1	
23	Pipe plug (outlet)	76712020	76712020	1	
24	Electric Box	20112086	20112086	1	
25	Motor Sub-Assy	15002002	15002002	1	
26	Baffle Plate	26112218 26112218			
27	Fan Motor	15012093	15012093	1	
28	Front Case Assy	2001237501	2001237501	1	
29	Remote Controller	30510061	30510061	1	
30	Power Cord	400204643 400		1	
31	Connecting Cable			1	
32	Screw Cover	24252019	24252019	1	
33	Main Board 30138124 30138120		1		
34	XY Capacitor 33030013 33030013		1		
35	Ambient Temperature Sensor 390000453 390000453			1	
36	Relay 44020386		44020386	1	
37	Fan Bearing 76512210 76512210			1	
38	Damping washer sub-assy	76512011	76512011	1	
39	Axile Bush sub-assy	10542024	10542024	1	
40	Electric Box Sub-Assy	2020225703	2020225702	1	


	Description	Part Code				
No.	Description	GWC12KF-K3DNA5A/I	GWH12KF-K3DNA5A/I	Qty		
	Product Code	CB146N0070	CB146N0080			
1	Decorative Strip	20192292	20192292	1		
2	Front Panel	2001232501T	2001232501T	1		
3	Filter Sub-Assy	1112208201	1112208201	2		
4	Front Case	20012324	20012324	1		
5	Guide Louver	10512119	10512119	1		
6	Air Louver	10512160	10512160	2		
7	Shaft of guide louver	1054202001	1054202001	2		
8	Front Panel Assy	2001237601	2001237601	1		
9	Drainage Pipe Sub-assy	0523204101	0523204101	1		
10	Evaporator Support	24212108	24212108	1		
11	Cross Flow Fan					
12	Evaporator Assy	01002745	01002745	1		
13	Helicoid tongue	26112486	26112486	1		
14	Rear Case assy	2220211901	2220211901	1		
15	Wall Mounting Frame	0125201801	0125201801	1		
16	Electric Box Cover	Electric Box Cover 20122106 2				
17	Electric Box Assy	2020225301	20202253	1		
18	Motor Press Plate	26112191	26112191	1		
19	Electric Box Cover Sub-Assy	20122109	20122109	1		
20	Terminal Board	42011233	42011233	1		
21	Crank	73012005	73012005	1		
22	Step Motor	1521210701	1521210701	1		
23	Pipe plug (outlet)	76712020	76712020	1		
24	Electric Box	20112086	20112086	1		
25	Motor Sub-Assy			1		
26	Baffle Plate	Plate 26112218 26112218				
27	Fan Motor	15012093	15012093	1		
28	Front Case Assy	2001237501	2001237501	1		
29	Remote Controller	,		1		
30	Power Cord	400204643	400204643	1		
31	Connecting Cable	400205236	400205236	1		
32	Screw Cover	24252019	24252019	1		
33	Main Board	30138125	30138121	1		
34	XY Capacitor	33030013	33030013	1		
35	Relay	44020386	44020386	1		
36	Ambient Temperature Sensor	390000453	390000453	1		
37	Fan Bearing	76512210	76512210	1		
38	Damping washer sub-assy	76512011	76512011	1		
39	Axile Bush sub-assy	10542024	10542024	1		

Models GWH09KF-K3DNA6A/I,GWH12KF-K3DNA6A/I

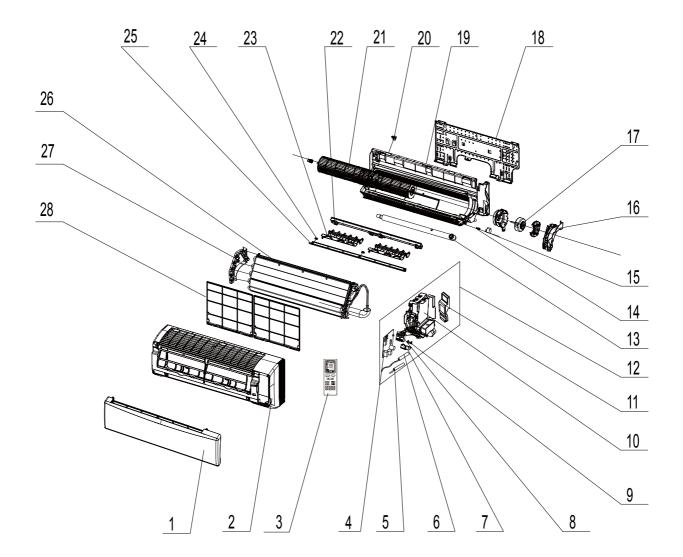

Description GWH09KF-K3DNA6AI GWH12KF-K3DNA6AI Oty		Description	Part	Code			
1 Front Danel 2 20012443S 2001243S 1 2 Front Case Assy 2001237501 2001237501 1 3 Remote Controller 30510061 30510061 1 4 Main Board 30138120 30138121 1 5 Ambient Temperature Sensor 390000453 390000453 1 6 Temperature Sensor 39000305 39000305 1 7 Indicator Light Cover 22242084 22242084 1 8 Terminal Board 42011233 42011233 1 9 Indicator shield cover 22242083 22242083 1 10 Electric Box Sub-Assy 2020225702 20202257 1 11 Electric Box Cover Sub-Assy 20122109 20122109 1 12 Electric Box Assy 2020225302 20202253 1 13 Drainage Pipe Sub-assy 0523204101 0523204101 1 14 Crank 73012005 73012005 1 <th>No.</th> <th>Description</th> <th>GWH09KF-K3DNA6A/I</th> <th>GWH12KF-K3DNA6A/I</th> <th>Qty</th>	No.	Description	GWH09KF-K3DNA6A/I	GWH12KF-K3DNA6A/I	Qty		
2 Front Case Assy 2001237501 2001237501 1 3 Remote Controller 30510061 30510061 1 4 Main Board 30138120 30138121 1 5 Ambient Temperature Sensor 390000453 390000453 1 6 Temperature Sensor 39000305 39000305 1 7 Indicator Light Cover 22242084 22242084 1 8 Terminal Board 42011233 42011233 1 9 Indicator Shield cover 22242083 22242083 1 10 Electric Box Sub-Assy 2020225702 20202257 1 11 Electric Box Cover Sub-Assy 20122109 20122109 1 12 Electric Box Assy 2020225302 20202253 1 13 Drainage Pipe Sub-assy 0523204101 0523204101 1 14 Crank 73012005 73012005 1 15 Step Motor 1521210701 1521210701 1 <td></td> <td>Product Code</td> <td>CB146N0110</td> <td>CB146N0120</td> <td></td>		Product Code	CB146N0110	CB146N0120			
3 Remote Controller 30510061 30510061 1 4 Main Board 30138120 30138121 1 5 Ambient Temperature Sensor 390000453 390000453 1 6 Temperature Sensor 39000305 39000305 1 7 Indicator Light Cover 22242084 22242084 1 8 Terminal Board 42011233 42011233 1 9 Indicator shield cover 22242083 22242083 1 10 Electric Box Sub-Assy 2020225702 20202257 1 11 Electric Box Cover Sub-Assy 20122109 20122109 1 12 Electric Box Assy 2020225302 20202253 1 13 Drainage Pipe Sub-assy 0523204101 0523204101 1 14 Crank 73012005 73012005 1 15 Step Motor 1521210701 1521210701 1 16 Motor Press Plate 26112191 26112191 1 <td>1</td> <td>Front panel 2</td> <td>20012443S</td> <td>20012443S</td> <td>1</td>	1	Front panel 2	20012443S	20012443S	1		
4 Main Board 30138120 30138121 1 5 Ambient Temperature Sensor 390000453 390000453 1 6 Temperature Sensor 39000305 39000305 1 7 Indicator Light Cover 22242084 22242084 1 8 Terminal Board 42011233 42011233 1 9 Indicator shield cover 22242083 22242083 1 10 Electric Box Sub-Assy 2020225702 20202257 1 11 Electric Box Cover Sub-Assy 20122109 20122109 1 12 Electric Box Assy 2020225302 20202253 1 13 Drainage Pipe Sub-assy 0523204101 0523204101 1 14 Crank 73012005 73012005 1 15 Step Motor 1521210701 1521210701 1 16 Motor Press Plate 26112191 26112191 1 17 Fan Motor 15012093 15012093 1 <	2	Front Case Assy	2001237501	2001237501	1		
5 Ambient Temperature Sensor 390000453 390000453 1 6 Temperature Sensor 39000305 39000305 1 7 Indicator Light Cover 22242084 22242084 1 8 Terminal Board 42011233 42011233 1 9 Indicator shield cover 22242083 22242083 1 10 Electric Box Sub-Assy 2020225702 20202257 1 11 Electric Box Cover Sub-Assy 20122109 20122109 1 12 Electric Box Assy 2020225302 20202253 1 13 Drainage Pipe Sub-assy 0523204101 0523204101 1 14 Crank 73012005 73012005 1 15 Step Motor 1521210701 1521210701 1 16 Motor Press Plate 26112191 26112191 1 17 Fan Motor 15012093 15012093 1 18 Wall Mounting Frame 0125201801 0125201801 1	3	Remote Controller	30510061	30510061	1		
6 Temperature Sensor 39000305 39000305 1 7 Indicator Light Cover 22242084 22242084 1 8 Terminal Board 42011233 42011233 1 9 Indicator shield cover 22242083 22242083 1 10 Electric Box Sub-Assy 2020225702 20202257 1 11 Electric Box Cover Sub-Assy 20122109 20122109 1 12 Electric Box Assy 2020225302 20202253 1 13 Drainage Pipe Sub-assy 0523204101 05233204101 1 14 Crank 73012005 73012005 1 15 Step Motor 1521210701 1521210701 1 16 Motor Press Plate 26112191 26112191 1 17 Fan Motor 15012093 15012093 1 18 Wall Mounting Frame 0125201801 0125201801 1 19 Rear Case assy 2220211901 2220211901 1	4	Main Board	30138120	30138121	1		
7 Indicator Light Cover 22242084 22242084 1 8 Terminal Board 42011233 42011233 1 9 Indicator shield cover 22242083 22242083 1 10 Electric Box Sub-Assy 2020225702 20202257 1 11 Electric Box Cover Sub-Assy 20122109 20122109 1 12 Electric Box Assy 2020225302 20202253 1 13 Drainage Pipe Sub-assy 0523204101 0523204101 1 14 Crank 73012005 73012005 1 15 Step Motor 1521210701 1521210701 1 16 Motor Press Plate 26112191 26112191 1 17 Fan Motor 15012093 15012093 1 18 Wall Mounting Frame 0125201801 0125201801 1 19 Rear Case assy 2220211901 2220211901 1 20 Pipe plug (outlet) 76712020 76712020 1	5	Ambient Temperature Sensor	390000453	390000453	1		
8 Terminal Board 42011233 42011233 1 9 Indicator shield cover 22242083 22242083 1 10 Electric Box Sub-Assy 2020225702 20202257 1 11 Electric Box Cover Sub-Assy 20122109 20122109 1 12 Electric Box Assy 2020225302 20202253 1 13 Drainage Pipe Sub-assy 0523204101 0523204101 1 14 Crank 73012005 73012005 1 15 Step Motor 1521210701 1521210701 1 16 Motor Press Plate 26112191 26112191 1 17 Fan Motor 15012093 15012093 1 18 Wall Mounting Frame 0125201801 0125201801 1 19 Rear Case assy 2220211901 2220211901 1 20 Pipe plug (outlet) 76712020 76712020 1 21 Cross Flow Fan 10352423 10352423 1 <	6	Temperature Sensor	39000305	39000305	1		
9 Indicator shield cover 22242083 22242083 1 10 Electric Box Sub-Assy 2020225702 20202257 1 11 Electric Box Cover Sub-Assy 20122109 20122109 1 12 Electric Box Assy 2020225302 20202253 1 13 Drainage Pipe Sub-assy 0523204101 0523204101 1 14 Crank 73012005 73012005 1 15 Step Motor 1521210701 1521210701 1 16 Motor Press Plate 26112191 26112191 1 17 Fan Motor 15012093 15012093 1 18 Wall Mounting Frame 0125201801 0125201801 1 19 Rear Case assy 2220211901 2220211901 1 20 Pipe plug (outlet) 76712020 76712020 1 21 Cross Flow Fan 10352423 10352423 1 22 Helicoid tongue 26112486 26112486 1	7	Indicator Light Cover	22242084	22242084	1		
10 Electric Box Sub-Assy 2020225702 20202257 1 11 Electric Box Cover Sub-Assy 20122109 20122109 1 12 Electric Box Assy 2020225302 20202253 1 13 Drainage Pipe Sub-assy 0523204101 0523204101 1 14 Crank 73012005 73012005 1 15 Step Motor 1521210701 1521210701 1 16 Motor Press Plate 26112191 26112191 1 17 Fan Motor 15012093 15012093 1 18 Wall Mounting Frame 0125201801 0125201801 1 19 Rear Case assy 2220211901 2220211901 1 20 Pipe plug (outlet) 76712020 76712020 1 21 Cross Flow Fan 10352423 10352423 1 22 Helicoid tongue 26112486 26112486 1 23 Air Louver 10512160 10512160 2 24 Shaft of guide louver 1054202001 1054202001 2	8	Terminal Board 42011233 42011233					
11 Electric Box Cover Sub-Assy 20122109 20122109 1 12 Electric Box Assy 2020225302 20202253 1 13 Drainage Pipe Sub-assy 0523204101 0523204101 1 14 Crank 73012005 73012005 1 15 Step Motor 1521210701 1521210701 1 16 Motor Press Plate 26112191 26112191 1 17 Fan Motor 15012093 15012093 1 18 Wall Mounting Frame 0125201801 0125201801 1 19 Rear Case assy 2220211901 2220211901 1 20 Pipe plug (outlet) 76712020 76712020 1 21 Cross Flow Fan 10352423 10352423 1 22 Helicoid tongue 26112486 26112486 1 23 Air Louver 10512160 10512160 2 24 Shaft of guide louver 1054202001 1054202001 2 25 Guide Louver 10512119 10512119 1	9	Indicator shield cover	22242083	22242083	1		
12 Electric Box Assy 2020225302 20202253 1 1 1 1 1 1 1 1 1	10	Electric Box Sub-Assy	ox Sub-Assy 2020225702 20202257				
13 Drainage Pipe Sub-assy 0523204101 0523204101 1 14 Crank 73012005 73012005 1 15 Step Motor 1521210701 1521210701 1 16 Motor Press Plate 26112191 26112191 1 17 Fan Motor 15012093 15012093 1 18 Wall Mounting Frame 0125201801 0125201801 1 19 Rear Case assy 2220211901 2220211901 1 20 Pipe plug (outlet) 76712020 76712020 1 21 Cross Flow Fan 10352423 10352423 1 22 Helicoid tongue 26112486 26112486 1 23 Air Louver 10512160 10512160 2 24 Shaft of guide louver 1054202001 1054202001 2 25 Guide Louver 10512119 10512119 1 26 Evaporator Assy 01002270 01002745 1 27	11	Electric Box Cover Sub-Assy	20122109	20122109	1		
14 Crank 73012005 73012005 1 15 Step Motor 1521210701 1521210701 1 16 Motor Press Plate 26112191 26112191 1 17 Fan Motor 15012093 15012093 1 18 Wall Mounting Frame 0125201801 0125201801 1 19 Rear Case assy 2220211901 2220211901 1 20 Pipe plug (outlet) 76712020 76712020 1 21 Cross Flow Fan 10352423 10352423 1 22 Helicoid tongue 26112486 26112486 1 23 Air Louver 10512160 10512160 2 24 Shaft of guide louver 1054202001 1054202001 2 25 Guide Louver 10512119 10512119 1 26 Evaporator Assy 01002270 01002745 1 27 Evaporator Support 24212108 24212108 1	12	Electric Box Assy	2020225302	20202253	1		
15 Step Motor 1521210701 1521210701 1 16 Motor Press Plate 26112191 26112191 1 17 Fan Motor 15012093 15012093 1 18 Wall Mounting Frame 0125201801 0125201801 1 19 Rear Case assy 2220211901 2220211901 1 20 Pipe plug (outlet) 76712020 76712020 1 21 Cross Flow Fan 10352423 10352423 1 22 Helicoid tongue 26112486 26112486 1 23 Air Louver 10512160 10512160 2 24 Shaft of guide louver 1054202001 1054202001 2 25 Guide Louver 10512119 10512119 1 26 Evaporator Assy 01002270 01002745 1 27 Evaporator Support 24212108 24212108 1	13	Drainage Pipe Sub-assy 0523204101 052320410		0523204101	1		
16 Motor Press Plate 26112191 26112191 1 17 Fan Motor 15012093 15012093 1 18 Wall Mounting Frame 0125201801 0125201801 1 19 Rear Case assy 2220211901 2220211901 1 20 Pipe plug (outlet) 76712020 76712020 1 21 Cross Flow Fan 10352423 10352423 1 22 Helicoid tongue 26112486 26112486 1 23 Air Louver 10512160 10512160 2 24 Shaft of guide louver 1054202001 1054202001 2 25 Guide Louver 10512119 10512119 1 26 Evaporator Assy 01002270 01002745 1 27 Evaporator Support 24212108 24212108 1	14	Crank	73012005	73012005	1		
17 Fan Motor 15012093 15012093 1 18 Wall Mounting Frame 0125201801 0125201801 1 19 Rear Case assy 2220211901 2220211901 1 20 Pipe plug (outlet) 76712020 76712020 1 21 Cross Flow Fan 10352423 10352423 1 22 Helicoid tongue 26112486 26112486 1 23 Air Louver 10512160 10512160 2 24 Shaft of guide louver 1054202001 1054202001 2 25 Guide Louver 10512119 10512119 1 26 Evaporator Assy 01002270 01002745 1 27 Evaporator Support 24212108 24212108 1	15	Step Motor	1521210701	1521210701	1		
18 Wall Mounting Frame 0125201801 0125201801 1 19 Rear Case assy 2220211901 2220211901 1 20 Pipe plug (outlet) 76712020 76712020 1 21 Cross Flow Fan 10352423 10352423 1 22 Helicoid tongue 26112486 26112486 1 23 Air Louver 10512160 10512160 2 24 Shaft of guide louver 1054202001 1054202001 2 25 Guide Louver 10512119 10512119 1 26 Evaporator Assy 01002270 01002745 1 27 Evaporator Support 24212108 24212108 1	16	Motor Press Plate	26112191	26112191	1		
19 Rear Case assy 2220211901 2220211901 1 20 Pipe plug (outlet) 76712020 76712020 1 21 Cross Flow Fan 10352423 10352423 1 22 Helicoid tongue 26112486 26112486 1 23 Air Louver 10512160 10512160 2 24 Shaft of guide louver 1054202001 1054202001 2 25 Guide Louver 10512119 10512119 1 26 Evaporator Assy 01002270 01002745 1 27 Evaporator Support 24212108 24212108 1	17	Fan Motor	15012093	15012093	1		
20 Pipe plug (outlet) 76712020 76712020 1 21 Cross Flow Fan 10352423 10352423 1 22 Helicoid tongue 26112486 26112486 1 23 Air Louver 10512160 10512160 2 24 Shaft of guide louver 1054202001 1054202001 2 25 Guide Louver 10512119 10512119 1 26 Evaporator Assy 01002270 01002745 1 27 Evaporator Support 24212108 24212108 1	18	Wall Mounting Frame	0125201801	0125201801	1		
21 Cross Flow Fan 10352423 1 22 Helicoid tongue 26112486 26112486 1 23 Air Louver 10512160 10512160 2 24 Shaft of guide louver 1054202001 1054202001 2 25 Guide Louver 10512119 10512119 1 26 Evaporator Assy 01002270 01002745 1 27 Evaporator Support 24212108 24212108 1	19	Rear Case assy	2220211901	2220211901	1		
22 Helicoid tongue 26112486 26112486 1 23 Air Louver 10512160 10512160 2 24 Shaft of guide louver 1054202001 1054202001 2 25 Guide Louver 10512119 10512119 1 26 Evaporator Assy 01002270 01002745 1 27 Evaporator Support 24212108 24212108 1	20	Pipe plug (outlet)	76712020	76712020	1		
23 Air Louver 10512160 10512160 2 24 Shaft of guide louver 1054202001 1054202001 2 25 Guide Louver 10512119 10512119 1 26 Evaporator Assy 01002270 01002745 1 27 Evaporator Support 24212108 24212108 1	21	Cross Flow Fan	Cross Flow Fan 10352423		1		
24 Shaft of guide louver 1054202001 1054202001 2 25 Guide Louver 10512119 10512119 1 26 Evaporator Assy 01002270 01002745 1 27 Evaporator Support 24212108 24212108 1	22	Helicoid tongue	26112486	26112486	1		
25 Guide Louver 10512119 10512119 1 26 Evaporator Assy 01002270 01002745 1 27 Evaporator Support 24212108 24212108 1	23	Air Louver 10512160 10512160		2			
26 Evaporator Assy 01002270 01002745 1 27 Evaporator Support 24212108 24212108 1	24	Shaft of guide louver 1054202001 1054202001		2			
27 Evaporator Support 24212108 24212108 1	25	Guide Louver 10512119 10512119		1			
	26	Evaporator Assy 01002270 01002745					
28 Filter Sub-Assy 1112208201 1112208201 2	27	Evaporator Support	24212108	24212108	1		
	28	Filter Sub-Assy	1112208201	1112208201	2		

Models GWH09KF-K3DNB1A/I,GWH12KF-K3DNB1A/I

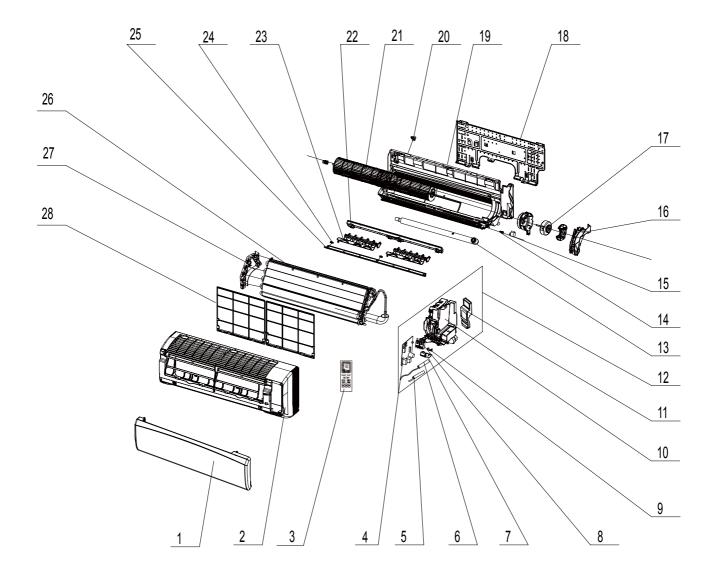

No.	Description	Part Code				
	Description	GWH09KF-K3DNB1A/I	GWH12KF-K3DNB1A/I	Qty		
	Product Code	CB146N0760	CB146N0770			
1	Front panel	20012688S	20012688S	1		
2	Front Case Assy	2001237501	2001237501	1		
3	Remote Controller	30510061	30510061	1		
4	Main Board	30138120	30138121	1		
5	Ambient Temperature Sensor	390000453	390000453	1		
6	Temperature Sensor	39000305	39000305	1		
7	Indicator Light Cover	ndicator Light Cover 22242084 22242084				
8	Terminal Board	42011233	42011233	1		
9	Indicator shield cover	22242083	22242083	1		
10	Electric Box Sub-Assy	Electric Box Sub-Assy 2020225702		1		
11	Electric Box Cover Sub-Assy	Electric Box Cover Sub-Assy 20122109		1		
12	Electric Box Assy	2020225302	20202253	1		
13	Drainage Pipe Sub-assy	0523204101 052320410				
14	Crank	Crank 73012005				
15	Step Motor	1521210701	1521210701	1		
16	Motor Press Plate	26112191	26112191	1		
17	Fan Motor	15012093	15012093	1		
18	Wall Mounting Frame	0125201801	0125201801	1		
19	Rear Case assy	2220211901	2220211901	1		
20	Pipe plug (outlet)	Pipe plug (outlet) 76712020		1		
21	Cross Flow Fan	10352423	10352423	1		
22	Helicoid tongue	26112486	26112486	1		
23	Air Louver 10512160 1		10512160	2		
24	Shaft of guide louver 1054202001 1054202001		1054202001	2		
25	Guide Louver 10512119 10512119		1			
26	Evaporator Assy 01002270 01002745		01002745	1		
27	Evaporator Support	24212108	24212108	1		
28	Filter Sub-Assy	1112208201	1112208201	2		


8.2 Outdoor Unit

(1) Cooling Only Models

Round grill 36 33]34 133 ลลลลลลลลคคค 12 13 14 1 TIME เกลิกหลาเหลดหล


	Description	Part Code			
No.	Description —	GWC09KF-K3DNA5A/O	GWC12KF-K3DNA5A/O	Qty	
	Product Code	CB146W0050	CB146W0070		
1	Front Grill	22413017	22413017	1	
2	Cabinet	01433044P	01433044P	1	
3	Fan fixed nut	70313001	70313001	1	
4	Axial Flow Fan Sub-Assy	1033300901	1033300901	1	
5	Fan Motor	15013073	15013073	1	
6	Motor Support	01703111	01703111	1	
7	Chassis Sub-assy	0120390901P	0120390901P	1	
8	Sound insulation Cotton 2	75013543	75013543	1	
9	Sound insulation Cotton Assy	75013533	75013533	1	
10	Left Side Plate	20053001	20053001	1	
11	Damping Block	76713015	76713015	3	
12	Valve Support	01713089	01713089	1	
13	Cut-off Valve Assy	07133163	07133163	1	
14	Capillary Sub-Assy	03103937	03103937	1	
15	Compressor and fittings	00103761	00103761	1	
16	Overload Protector	00181067	00181067	1	
17	Overload Support	01743008	01743008	1	
18	Terminal cap	22243001	22243001	1	
19	Compressor fixed Bolt	01742005	01742005	3	
20	Handle assy	26233046	26233046	1	
21	Thermal baffle	26113005	26113005	1	
22	Right Side Plate Sub-Assy			1	
23	Condenser Assy	01113501	01113501	1	
24	Temp sensor Support	24213042	24213042	1	
25	Discharge Tube				
26	Temperature Sensor clamp	02143022	02143022	1	
27	Cut-off valve Sub-Assy	07133189	0710306001	1	
28	Clapboard	01233088	01233088	1	
29	Sound insulation Cotton 3	75013557	75013555	1	
30	Sound insulation Cotton 4	75013556	75013556	1	
31	Top Cover Sub-Assy	0125304001	0125304001	1	
32	Electric Box Assy	0260325603	0260325601	1	
33	Radiator	49013023	49013023	1	
34	Electric Box 2	01413155	01413155	1	
35	Electric Box	20113010	20113010	1	
36	Filter Plate	30033069	30033069	1	
37	Wiring	4011001930	4011001930	1	
38	Temperature Sensor	39000304	39000304	1	
39	Main Board	Board 30138099		1	
40	Magnetic Ring	49010109	49010109	1	
41	Electric Box 1	ric Box 1 01413154		1	
42	Reactor				
43	Terminal Board	42010312	42010312	1	
44	Insulation Gasket	70413007	70413007	1	
45	Cable clamp	26113010	26113010	1	

Square grill

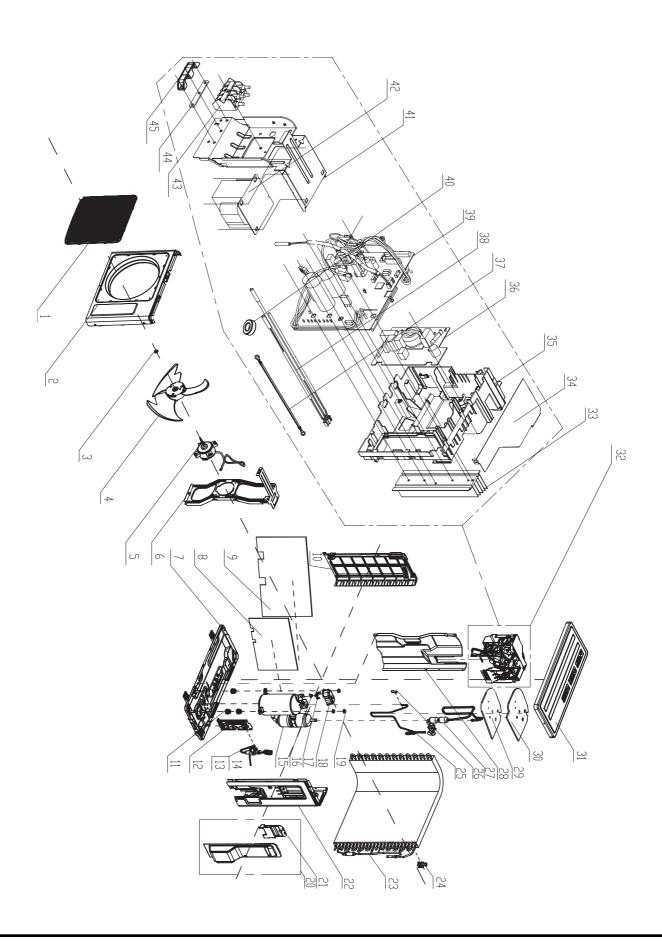


	Decembra	Part Code			
No.	Description	GWC09KF-K3DNA5A/O	GWC12KF-K3DNA5A/O	Qty	
	Product Code	CB146W0051	CB146W0072		
1	Front Grill	22413018	22413018	1	
2	Cabinet	01433418P	01433418P	1	
3	Fan fixed nut	70313001	70313001	1	
4	Axial Flow Fan Sub-Assy	1033300901	1033300901	1	
5	Fan Motor	15013073	15013073	1	
6	Motor Support	0170311101	01703111	1	
7	Chassis Sub-assy	0120390901P	0120390901P	1	
8	Sound insulation Cotton 2	75013543	75013543	1	
9	Sound insulation Cotton Assy	75013533	75013533	1	
10	Left Side Plate	20053001	20053001	1	
11	Damping Block	76713015	76713015	3	
12	Valve Support	01713089	01713089	1	
13	Cut-off Valve Assy	t-off Valve Assy 07133164		1	
14	Capillary Sub-Assy	03103936	03063056	1	
15	Compressor and fittings	00103763	00103763	1	
16	Overload Protector	00181067	00181067	1	
17	Overload Support	01743008	01743008	1	
18	Terminal cap	22243001	22243001	1	
19	Compressor fixed Bolt	01742005	01742005	3	
20	Handle assy			1	
21	Thermal baffle	paffle 26113005		1	
22	Right Side Plate Sub-Assy	0130318001	0130318001	1	
23	Condenser Assy	01113463	01113501	1	
24	Temp sensor Support	24213042	24213042	1	
25	Discharge Tube			1	
26	Temperature Sensor clamp	rature Sensor clamp 02143022		1	
27	Cut-off valve Sub-Assy	07133189	07133189	1	
28	Clapboard	01233088	01233088	1	
29	Sound insulation Cotton 3	75013557	75013557	1	
30	Sound insulation Cotton 4	1	75013556	1	
31	Top Cover Sub-Assy	0125304001	0125304001	1	
32	Electric Box Assy	0260325603	0260325602	1	
33	Radiator	49013023	49013023	1	
34	Electric Box 2	01413155	01413155	1	
35	Electric Box	20113010	20113010	1	
36	Filter Plate	30033069	30033069	1	
37	Wiring	4011001930	4011001930	1	
38	Temperature Sensor	39000304	39000304	1	
39	Main Board	30138099	30138100	1	
40	Magnetic Ring	49010109	49010109	1	
41	Electric Box 1	01413154	154 01413154		
42	Reactor	43130182	43130182	1	
43	Terminal Board	42010312	42010312	1	
44	Insulation Gasket	70413007	70413007	1	
45	Cable clamp	26113010	26113010	1	
_					

(2) Cooling & Heating Models

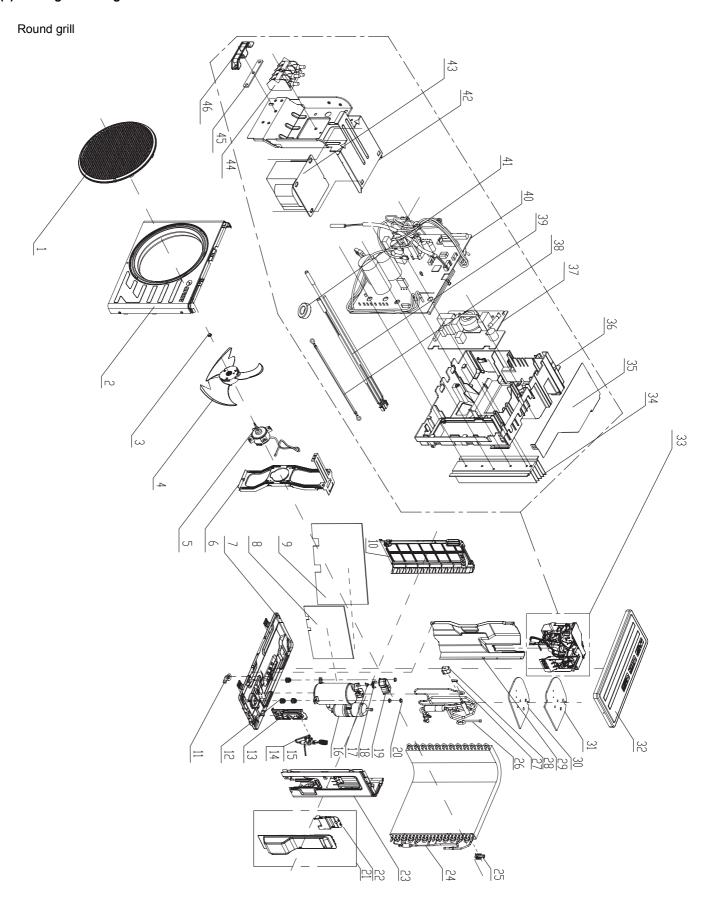

No. GWH09KF-K3DNASA/O GWH12KF-K3DNASA/O Ophymorodic Code CB146W0060 CB146W0060 CB146W0060		Description	Part Code					
Front Grill	No.	Description	GWH09KF-K3DNA5A/O	GWH12KF-K3DNA5A/O	Qty			
2 Cabinet 01433044P 01433044P 1 3 Fan fixed nut 70313001 70313001 70313001 1 4 Axial Flow Fan Sub-Assy 1033300901 1033300901 1 033300901 1 5 Fan Motor 15013073 15013073 1 0 1 6 Moto Support 0170311101 017031111 1 0 0 0 0 0 0 1 0 1 0 1 0 1 0 0 0 0 0 0 0 0 0 0 1 0 0 0		Product Code	CB146W0060	CB146W0080	7			
3 Fan fixed nut 70313001 70313001 1 4 Axala Flow Fan Sub-Assy 1033300901 1033300901 1 5 Fan Motor 15013073 1 15013073 1 6 Motor Support 0170311101 01703111 1 7 Chassi Sub-assy 0120390901P 0120390901P 1 8 Sound insulation Cotton 2 75013543 75013543 1 9 Sound insulation Cotton Assy 75013533 75013533 1 10 Left Side Plate 20053001 20053001 1 11 Drainage Joint 06123024 06123024 1 12 Compressor Gasket 76713015 76713015 36713089 1 13 Valve Support 01713089 0713163 1 14 Cut-off Valve Assy 07133164 07133163 1 15 Capillary Sub-Assy 03103936 03103937 1 16 Campressor and fittings 00103761 00	1	Front Grill	22413017	22413017	1			
4 Avail Flow Fan Sub-Assy 1033300901 1033300901 1 5 Fan Motor 15013073 15013073 1 6 Motor Support 0170311101 017031111 1 7 Chassis Sub-assy 0120390901P 0120390901P 1 8 Sound insulation Cotton 2 75013543 75013543 1 9 Sound insulation Cotton Assy 75013543 75013533 1 10 Left Side Plate 20053001 20053001 1 11 Drainage Joint 06123024 06123024 1 12 Compressor Gasket 76713015 76713015 3 13 Valve Support 01713089 01713089 1 14 Cut-Off Valve Assy 07133164 07133163 1 15 Capillary Sub-Assy 03103936 03103937 1 16 Compressor and fittings 00103761 00103761 1 17 Overload Protector 00181067 00181067 00181067 <td>2</td> <td>Cabinet</td> <td>01433044P</td> <td>01433044P</td> <td>1</td>	2	Cabinet	01433044P	01433044P	1			
5 Fan Motor 15013073 15013073 1 6 Motor Support 0170311101 01703111 1 7 Chassis Sub-assy 0120390901P 0120390901P 1 8 Sound insulation Cotton 2 75013543 75013543 1 9 Sound insulation Cotton Assy 75013543 75013533 1 10 Left Side Plate 20053001 20053001 1 11 Drainage Joint 06123024 06123024 1 12 Compressor Gasket 76713015 76713015 3 13 Valve Support 07133089 01713089 1 14 Cut-off Valve Assy 07133164 07133163 1 15 Capillary Sub-Assy 03103936 03103937 1 16 Compressor and fittings 0013761 0013761 1 17 Overload Protector 00181067 00181067 1 18 Overload Support 01743008 01743008 1	3		70313001	70313001	1			
6 Motor Support 0170311101 017031111 1 7 Chassis Sub-assy 0120390901P 0120390901P 1 8 Sound insulation Cotton 2 75013543 1 9 Sound insulation Cotton Assy 75013533 75013533 1 10 Left Side Plate 20053001 20053001 1 11 Drainage Joint 06123024 06123024 1 12 Compressor Gasket 76713015 76713015 3 13 Valve Support 07133089 01713089 1 14 Cut-off Valve Assy 07133164 077133163 1 15 Capillary Sub-Assy 03103937 1 1 16 Compressor and fittings 00103761 010103761 1 17 Overload Protector 00181067 00181067 0181067 1 18 Overload Support 01743008 01743008 1 1 20 Compressor fixed Bolt 01742005 01742005	4	Axial Flow Fan Sub-Assy	1033300901	1033300901	1			
7 Chassis Sub-assy 0120390901P 0120390901P 1 8 Sound insulation Cotton 2 75013543 75013543 1 9 Sound insulation Cotton Assy 75013533 1 10 Left Side Plate 20053001 20053001 1 11 Drainage Joint 06123024 06123024 1 12 Compressor Gasket 76713015 76713015 3 13 Valve Support 01713089 01713089 1 14 Cut-off Valve Assy 07133164 07133163 1 15 Capillary Sub-Assy 03103936 03103937 1 16 Compressor and fittings 00103761 00103761 1 17 Overload Protector 00181067 00181067 1 18 Overload Support 01743008 01743008 1 19 Terminal cap 22243001 22243001 1 20 Compressor fixed Bolt 01742005 01742005 01742005	5	Fan Motor	15013073	15013073	1			
8 Sound insulation Cotton 2 75013543 75013543 1 9 Sound insulation Cotton Assy 75013533 75013533 1 10 Left Side Plate 20053001 20053001 1 11 Drainage Joint 06123024 06123024 1 12 Compressor Gasket 76713015 76713015 3 13 Valve Support 01713089 01713089 1 14 Cut-off Valve Assy 07133164 07133163 1 15 Capillary Sub-Assy 03103936 03103937 1 16 Compressor and fittings 00103761 00103761 1 17 Overload Protector 00181067 00181067 1 18 Overload Support 01743008 01743008 1 19 Terminal cap 222243001 22243001 1 20 Compressor fixed Bolt 01742005 01742005 3 21 Handle assy 26233046 1 1	6	Motor Support	0170311101	01703111	1			
9 Sound insulation Cotton Assy 75013533 75013533 1 10 Left Side Plate 20053001 20053001 1 11 Drainage Joint 06123024 06123024 1 12 Compressor Gasket 76713015 76713015 3 13 Valve Support 01713089 01713089 1 14 Cut-off Valve Assy 07133164 07133163 1 15 Capillary Sub-Assy 03103936 03103937 1 16 Compressor and fittings 00103761 00103761 1 17 Overload Protector 00181067 00181067 1 18 Overload Support 01743008 01743008 1 19 Terminal cap 22243001 22243001 1 20 Compressor fixed Bolt 01742005 01742005 3 21 Handle assy 26233046 26233046 1 22 Thermal baffle 26113005 26113005 1 23 Right Side Plate Sub-Assy 01113463 01113501 1 24 Condenser Assy 01113463 01113501 1 25 Temp sensor Support 24213042 24213042 1 26 4-way Valve Assy 0312332701 0312327201 1 27 Temperature Sensor clamp 02143022 02143022 1 28 Magnet Coil 4300040050 4300040050 1 29 Clapboard 01233088 1 30 Sound insulation Cotton 4 75013556 75013556 1 31 Sound insulation Cotton 4 75013556 75013556 1 32 Fletric Box Assy 01233089 30033069 1 34 Radiator 49013023 49013023 1 39 Temperature Sensor 3900304 39000304 1 30 Filter Plate 30033069 30033069 1 31 Filter Plate 30033069 30033069 1 31 Filter Plate 30033069 30033069 1 32 Flectric box 1 01413154 01413154 1 34 Raget Coil 430004009 4901009 1 36 Electric box 1 01413154 01413154 1 37 Filter Plate 30033069 30033069 1 38 Wiring 401100199 4901009 1 39 Temperature Sensor 39000304 39000304 1 40 Main Board 42010312 42010312 1 45 Insulation Gasket 70413007 70413007 1	7		0120390901P	0120390901P	1			
10	8	Sound insulation Cotton 2	75013543	75013543	1			
11 Drainage Joint 06123024 06123024 1 1 1 2 Compressor Gasket 76713015 76713015 3 3 1 1 2 3 1 2 2 3 1 3 2 2 3 3 2 2 3 3 3	9	Sound insulation Cotton Assy	75013533	75013533	1			
12 Compressor Gasket 76713015 76713015 3 13 Valve Support 01713089 01713089 1 14 Cut-off Valve Assy 07133164 07133163 1 15 Capillary Sub-Assy 03103936 03103937 1 16 Compressor and fittings 00103761 00103761 1 17 Overload Protector 00181067 00181067 1 18 Overload Protector 00181067 0181067 1 18 Overload Support 01743008 01743008 1 19 Terminal cap 22243001 22243001 1 20 Compressor fixed Bolt 01742005 01742005 3 21 Handle assy 26233046 26233046 1 22 Thermal baffle 26113005 26113005 1 23 Right Side Plate Sub-Assy 130318001 0130318001 1 24 Condenser Assy 01113463 01113501 1	10	Left Side Plate	20053001	20053001	1			
13	11	Drainage Joint	06123024	06123024	1			
14 Cut-off Valve Assy 07133164 07133163 1 15 Capillary Sub-Assy 03103936 03103937 1 16 Compressor and fittings 00103761 00103761 1 17 Overload Protector 00181067 00181067 1 18 Overload Support 01743008 01743008 1 19 Terminal cap 22243001 22243001 1 20 Compressor fixed Bolt 01742005 01742005 3 21 Handle assy 26233046 26233046 1 22 Thermal baffle 26113005 26113005 1 23 Right Side Plate Sub-Assy 130318001 0130318001 1 24 Condenser Assy 01113463 01113501 1 25 Temp sensor Support 24213042 24213042 1 26 4-way Valve Assy 0312323701 0312327201 1 27 Temperature Sensor clamp 02143022 02143022 1 </td <td>12</td> <td>Compressor Gasket</td> <td>76713015</td> <td>76713015</td> <td>3</td>	12	Compressor Gasket	76713015	76713015	3			
15	13		01713089	01713089	1			
16 Compressor and fittings 00103761 00103761 1 17 Overload Protector 00181067 0181067 1 18 Overload Support 01743008 01743008 1 19 Terminal cap 22243001 1 22243001 1 20 Compressor fixed Bolt 01742005 01742005 3 21 Handle assy 26233046 26233046 1 22 Thermal baffle 26113005 26113005 1 23 Right Side Plate Sub-Assy 130318001 0130318001 1 24 Condenser Assy 01113463 01113501 1 25 Temp sensor Support 24213042 24213042 1 26 4-way Valve Assy 0312323701 0312327201 1 27 Temperature Sensor clamp 02143022 02143022 1 28 Magnet Coil 4300040050 4300040050 1 29 Clapboard 01233088 01233088 1	14		07133163	1				
17 Overload Protector 00181067 00181067 1 18 Overload Support 01743008 01743008 1 19 Terminal cap 22243001 22243001 1 20 Compressor fixed Bolt 01742005 01742005 3 21 Handle assy 26233046 26233046 1 22 Thermal baffle 26113005 26113005 1 23 Right Side Plate Sub-Assy 130318001 0130318001 1 24 Condenser Assy 01113463 01113501 1 25 Temp sensor Support 24213042 24213042 1 26 4-way Valve Assy 0312323701 0312327201 1 27 Temperature Sensor clamp 02143022 02143022 1 28 Magnet Coil 4300040050 4300040050 1 29 Clapboard 01233088 01233088 1 30 Sound insulation Cotton 3 75013556 75013556 1 <t< td=""><td>15</td><td>Capillary Sub-Assy</td><td>03103936</td><td>03103937</td><td>1</td></t<>	15	Capillary Sub-Assy	03103936	03103937	1			
18 Overload Support 01743008 01743008 1 19 Terminal cap 22243001 22243001 1 20 Compressor fixed Bolt 01742005 01742005 3 21 Handle assy 2623046 26233046 1 22 Thermal baffle 26113005 26113005 1 23 Right Side Plate Sub-Assy 130318001 0130318001 1 24 Condenser Assy 01113463 01113501 1 25 Temp sensor Support 24213042 24213042 1 26 4-way Valve Assy 0312323701 0312327201 1 27 Temp sensor Clamp 02143022 02143022 1 28 Magnet Coil 430040050 430040050 1 29 Clapboard 01233088 01233088 01233088 1 30 Sound insulation Cotton 3 75013556 75013556 1 31 Sound insulation Cotton 4 75013556 75013556	16	Compressor and fittings	00103761	00103761	1			
19 Terminal cap 22243001 22243001 1 20 Compressor fixed Bolt 01742005 01742005 3 3 21 Handle assy 26233046 26233046 1 22 Thermal baffle 26113005 26113005 1 23 Right Side Plate Sub-Assy 130318001 0130318001 1 24 Condenser Assy 01113463 01113501 1 25 Temp sensor Support 24213042 24213042 1 264 4-way Valve Assy 0312323701 0312327201 1 27 Temperature Sensor clamp 02143022 02143022 1 28 Magnet Coil 430040050 4300040050 1 29 Clapboard 01233088 01233088 1 30 Sound insulation Cotton 3 75013555 75013555 1 31 Sound insulation Cotton 4 75013556 75013556 1 32 Top Cover Sub-Assy 0125304001 0125304001 1 1 1 1 1 1 1 1 1	17	Overload Protector	00181067	00181067	1			
20 Compressor fixed Bolt 01742005 01742005 3 21 Handle assy 26233046 26233046 1 22 Thermal baffle 26113005 26113005 1 23 Right Side Plate Sub-Assy 130318001 0130318001 1 24 Condenser Assy 01113463 01113501 1 25 Temp sensor Support 24213042 24213042 1 26 4-way Valve Assy 0312323701 0312327201 1 27 Temperature Sensor clamp 02143022 02143022 1 28 Magnet Coil 4300040050 4300040050 1 29 Clapboard 01233088 01233088 01233088 1 30 Sound insulation Cotton 3 75013555 75013556 1 31 Sound insulation Cotton 4 75013556 75013556 1 32 Top Cover Sub-Assy 0125304001 0125304001 1 33 Electric Box Assy 02603256 02603	18	Overload Support	01743008	01743008	1			
21 Handle assy 26233046 26233046 1 22 Thermal baffle 26113005 26113005 1 23 Right Side Plate Sub-Assy 130318001 0130318001 1 24 Condenser Assy 01113463 01113501 1 25 Temp sensor Support 24213042 24213042 1 26 4-way Valve Assy 0312323701 0312327201 1 27 Temperature Sensor clamp 02143022 02143022 1 28 Magnet Coil 4300040050 4300040050 1 29 Clapboard 01233088 01233088 1 30 Sound insulation Cotton 3 75013555 75013555 1 31 Sound insulation Cotton 4 75013556 75013556 1 32 Top Cover Sub-Assy 0125304001 0125304001 1 33 Electric Box Assy 02603256 0260325601 1 34 Radiator 49013023 49013023 1	19	Terminal cap	22243001	22243001	1			
22 Thermal baffle 26113005 26113005 1 23 Right Side Plate Sub-Assy 130318001 0130318001 1 24 Condenser Assy 01113463 01113501 1 25 Temp sensor Support 24213042 24213042 1 26 4-way Valve Assy 0312323701 0312327201 1 27 Temperature Sensor clamp 02143022 02143022 1 28 Magnet Coil 430040050 430040050 1 29 Clapboard 01233088 01233088 1 30 Sound insulation Cotton 3 75013555 75013555 1 31 Sound insulation Cotton 4 75013556 75013556 1 32 Top Cover Sub-Assy 0125304001 0125304001 1 33 Electric Box Assy 02603256 0260325601 1 34 Radiator 49013023 49013023 1 35 Electric box 2 01413155 01413155 1 <td>20</td> <td>Compressor fixed Bolt</td> <td>01742005</td> <td>01742005</td> <td>3</td>	20	Compressor fixed Bolt	01742005	01742005	3			
23 Right Side Plate Sub-Assy 130318001 0130318001 1 24 Condenser Assy 01113463 01113501 1 25 Temp sensor Support 24213042 24213042 1 26 4-way Valve Assy 0312323701 0312327201 1 27 Temperature Sensor clamp 02143022 02143022 1 28 Magnet Coil 4300040050 4300040050 1 29 Clapboard 01233088 01233088 1 30 Sound insulation Cotton 3 75013555 75013555 1 31 Sound insulation Cotton 4 75013556 75013556 1 32 Top Cover Sub-Assy 0125304001 0125304001 1 33 Electric Box Assy 02603256 0260325601 1 34 Radiator 49013023 49013023 1 35 Electric box 2 01413155 01413155 1 36 Electric box 20113010 20113010 1 <td>21</td> <td>Handle assy</td> <td>26233046</td> <td>26233046</td> <td>1</td>	21	Handle assy	26233046	26233046	1			
24 Condenser Assy 01113463 01113501 1 25 Temp sensor Support 24213042 24213042 1 26 4-way Valve Assy 0312323701 0312327201 1 27 Temperature Sensor clamp 02143022 02143022 1 28 Magnet Coil 4300040050 4300040050 1 29 Clapboard 01233088 01233088 1 30 Sound insulation Cotton 3 75013555 75013555 1 31 Sound insulation Cotton 4 75013556 75013556 1 32 Top Cover Sub-Assy 0125304001 0125304001 1 32 Top Cover Sub-Assy 02603256 0260325601 1 34 Radiator 49013023 49013023	22	Thermal baffle	26113005	26113005	1			
25 Temp sensor Support 24213042 24213042 1 26 4-way Valve Assy 0312323701 0312327201 1 27 Temperature Sensor clamp 02143022 02143022 1 28 Magnet Coil 4300040050 4300040050 1 29 Clapboard 01233088 01233088 1 30 Sound insulation Cotton 3 75013555 75013555 1 31 Sound insulation Cotton 4 75013556 75013556 1 32 Top Cover Sub-Assy 0125304001 0125304001 1 33 Electric Box Assy 02603256 0260325601 1 34 Radiator 49013023 49013023 1 34 Radiator 49013023 49013023 1 35 Electric box 2 01413155 01413155 1 36 Electric box 2 01413010 20113010 1 37 Filter Plate 30033069 30033069 1 <	23	Right Side Plate Sub-Assy	ght Side Plate Sub-Assy 130318001					
26 4-way Valve Assy 0312323701 0312327201 1 27 Temperature Sensor clamp 02143022 02143022 1 28 Magnet Coil 4300040050 4300040050 1 29 Clapboard 01233088 01233088 1 30 Sound insulation Cotton 3 75013555 75013555 1 31 Sound insulation Cotton 4 75013556 75013556 1 32 Top Cover Sub-Assy 0125304001 0125304001 1 33 Electric Box Assy 02603256 0260325601 1 34 Radiator 49013023 49013023 1 35 Electric box 2 01413155 01413155 1 36 Electric box 2 01413155 01413100 1 37 Filter Plate 30033069 30033069 1 38 Wiring 4011001930 4011001930 1 39 Temperature Sensor 39000304 39000304 1	24	Condenser Assy	01113463	01113501	1			
27 Temperature Sensor clamp 02143022 02143022 1 28 Magnet Coil 4300040050 4300040050 1 29 Clapboard 01233088 01233088 1 30 Sound insulation Cotton 3 75013555 75013555 1 31 Sound insulation Cotton 4 75013556 75013556 1 32 Top Cover Sub-Assy 0125304001 0125304001 1 33 Electric Box Assy 02603256 0260325601 1 34 Radiator 49013023 49013023 1 35 Electric box 2 01413155 01413155 1 36 Electric box 2 0143010 20113010 1 37 Filter Plate 30033069 30033069 1 38 Wiring 4011001930 4011001930 1 39 Temperature Sensor 39000304 39000304 1 40 Main Board 30138087 30138096 1 41	25	Temp sensor Support	24213042	24213042	1			
28 Magnet Coil 4300040050 4300040050 1 29 Clapboard 01233088 01233088 1 30 Sound insulation Cotton 3 75013555 75013555 1 31 Sound insulation Cotton 4 75013556 75013556 1 32 Top Cover Sub-Assy 0125304001 0125304001 1 33 Electric Box Assy 02603256 0260325601 1 34 Radiator 49013023 49013023 1 35 Electric box 2 01413155 01413155 1 36 Electric box 20113010 20113010 1 37 Filter Plate 30033069 30033069 1 38 Wiring 4011001930 4011001930 1 39 Temperature Sensor 3900304 39000304 1 40 Main Board 30138087 30138096 1 41 Magnetic Ring 49010109 49010109 1 42	26	4-way Valve Assy	0312323701	0312327201	1			
29 Clapboard 01233088 01233088 1 30 Sound insulation Cotton 3 75013555 75013555 1 31 Sound insulation Cotton 4 75013556 75013556 1 32 Top Cover Sub-Assy 0125304001 0125304001 1 33 Electric Box Assy 02603256 0260325601 1 34 Radiator 49013023 49013023 1 35 Electric box 2 01413155 01413155 1 36 Electric box 20113010 20113010 1 37 Filter Plate 30033069 30033069 1 38 Wiring 4011001930 4011001930 1 39 Temperature Sensor 39000304 39000304 1 40 Main Board 30138087 30138096 1 41 Magnetic Ring 49010109 49010109 1 42 Electric box 1 01413154 01413154 1 43	27	Temperature Sensor clamp	02143022	02143022	1			
30 Sound insulation Cotton 3 75013555 75013555 1 31 Sound insulation Cotton 4 75013556 75013556 1 32 Top Cover Sub-Assy 0125304001 0125304001 1 33 Electric Box Assy 02603256 0260325601 1 34 Radiator 49013023 49013023 1 35 Electric box 2 01413155 01413155 1 36 Electric box 20113010 20113010 1 37 Filter Plate 30033069 30033069 1 38 Wiring 4011001930 4011001930 1 39 Temperature Sensor 39000304 39000304 1 40 Main Board 30138087 30138096 1 41 Magnetic Ring 49010109 49010109 1 42 Electric box 1 01413154 01413154 1 43 Reactor 43130182 43130182 1 44 Te	28	Magnet Coil	4300040050	4300040050	1			
31 Sound insulation Cotton 4 75013556 75013556 1 32 Top Cover Sub-Assy 0125304001 0125304001 1 33 Electric Box Assy 02603256 0260325601 1 34 Radiator 49013023 49013023 1 35 Electric box 2 01413155 01413155 1 36 Electric box 20113010 20113010 1 37 Filter Plate 30033069 30033069 1 38 Wiring 4011001930 4011001930 1 39 Temperature Sensor 39000304 39000304 1 40 Main Board 30138087 30138096 1 41 Magnetic Ring 49010109 49010109 1 42 Electric box 1 01413154 01413154 1 43 Reactor 43130182 43130182 1 44 Terminal Board 42010312 42010312 1 45 Insulation Ga	29	Clapboard	01233088	01233088	1			
32 Top Cover Sub-Assy 0125304001 0125304001 1 33 Electric Box Assy 02603256 0260325601 1 34 Radiator 49013023 49013023 1 35 Electric box 2 01413155 01413155 1 36 Electric box 20113010 20113010 1 37 Filter Plate 30033069 30033069 1 38 Wiring 4011001930 4011001930 1 39 Temperature Sensor 39000304 39000304 1 40 Main Board 30138087 30138096 1 41 Magnetic Ring 49010109 49010109 1 42 Electric box 1 01413154 01413154 1 43 Reactor 43130182 43130182 1 44 Terminal Board 42010312 42010312 1 45 Insulation Gasket 70413007 70413007 1	30	Sound insulation Cotton 3	75013555	75013555	1			
33 Electric Box Assy 02603256 0260325601 1 34 Radiator 49013023 49013023 1 35 Electric box 2 01413155 01413155 1 36 Electric box 20113010 20113010 1 37 Filter Plate 30033069 30033069 1 38 Wiring 4011001930 4011001930 1 39 Temperature Sensor 39000304 39000304 1 40 Main Board 30138087 30138096 1 41 Magnetic Ring 49010109 49010109 1 42 Electric box 1 01413154 01413154 1 43 Reactor 43130182 43130182 1 44 Terminal Board 42010312 42010312 1 45 Insulation Gasket 70413007 70413007 1	31	Sound insulation Cotton 4						
34 Radiator 49013023 49013023 1 35 Electric box 2 01413155 01413155 1 36 Electric box 20113010 20113010 1 37 Filter Plate 30033069 30033069 1 38 Wiring 4011001930 4011001930 1 39 Temperature Sensor 39000304 39000304 1 40 Main Board 30138087 30138096 1 41 Magnetic Ring 49010109 49010109 1 42 Electric box 1 01413154 01413154 1 43 Reactor 43130182 43130182 1 44 Terminal Board 42010312 42010312 1 45 Insulation Gasket 70413007 70413007 1	32	Top Cover Sub-Assy						
35 Electric box 2 01413155 01413155 1 36 Electric box 20113010 20113010 1 37 Filter Plate 30033069 30033069 1 38 Wiring 4011001930 4011001930 1 39 Temperature Sensor 39000304 39000304 1 40 Main Board 30138087 30138096 1 41 Magnetic Ring 49010109 49010109 1 42 Electric box 1 01413154 01413154 1 43 Reactor 43130182 43130182 1 44 Terminal Board 42010312 42010312 1 45 Insulation Gasket 70413007 70413007 1	33	Electric Box Assy	02603256	0260325601	1			
36 Electric box 20113010 20113010 1 37 Filter Plate 30033069 30033069 1 38 Wiring 4011001930 4011001930 1 39 Temperature Sensor 39000304 39000304 1 40 Main Board 30138087 30138096 1 41 Magnetic Ring 49010109 49010109 1 42 Electric box 1 01413154 01413154 1 43 Reactor 43130182 43130182 1 44 Terminal Board 42010312 42010312 1 45 Insulation Gasket 70413007 70413007 1	34	Radiator	49013023	49013023	1			
37 Filter Plate 30033069 30033069 1 38 Wiring 4011001930 4011001930 1 39 Temperature Sensor 39000304 39000304 1 40 Main Board 30138087 30138096 1 41 Magnetic Ring 49010109 49010109 1 42 Electric box 1 01413154 01413154 1 43 Reactor 43130182 43130182 1 44 Terminal Board 42010312 42010312 1 45 Insulation Gasket 70413007 70413007 1	35	Electric box 2	01413155	01413155	1			
38 Wiring 4011001930 4011001930 1 39 Temperature Sensor 39000304 39000304 1 40 Main Board 30138087 30138096 1 41 Magnetic Ring 49010109 49010109 1 42 Electric box 1 01413154 01413154 1 43 Reactor 43130182 43130182 1 44 Terminal Board 42010312 42010312 1 45 Insulation Gasket 70413007 70413007 1	36	Electric box	20113010	20113010	1			
39 Temperature Sensor 39000304 39000304 1 40 Main Board 30138087 30138096 1 41 Magnetic Ring 49010109 49010109 1 42 Electric box 1 01413154 01413154 1 43 Reactor 43130182 43130182 1 44 Terminal Board 42010312 42010312 1 45 Insulation Gasket 70413007 70413007 1	37	Filter Plate	30033069	30033069	1			
40 Main Board 30138087 30138096 1 41 Magnetic Ring 49010109 49010109 1 42 Electric box 1 01413154 01413154 1 43 Reactor 43130182 43130182 1 44 Terminal Board 42010312 42010312 1 45 Insulation Gasket 70413007 70413007 1	38	Wiring	4011001930	4011001930	1			
41 Magnetic Ring 49010109 49010109 1 42 Electric box 1 01413154 01413154 1 43 Reactor 43130182 43130182 1 44 Terminal Board 42010312 42010312 1 45 Insulation Gasket 70413007 70413007 1	39	Temperature Sensor						
42 Electric box 1 01413154 01413154 1 43 Reactor 43130182 43130182 1 44 Terminal Board 42010312 42010312 1 45 Insulation Gasket 70413007 70413007 1	40	Main Board	30138087	30138096	1			
43 Reactor 43130182 43130182 1 44 Terminal Board 42010312 42010312 1 45 Insulation Gasket 70413007 70413007 1	41		49010109	49010109	1			
44 Terminal Board 42010312 42010312 1 45 Insulation Gasket 70413007 70413007 1	42	Electric box 1						
45 Insulation Gasket 70413007 70413007 1	43	Reactor						
	44	Terminal Board	42010312	42010312	1			
46 Cable clamp 26113010 26113010 1	45	Insulation Gasket	70413007	70413007	1			
	46	Cable clamp	26113010	26113010	1			

Square grill

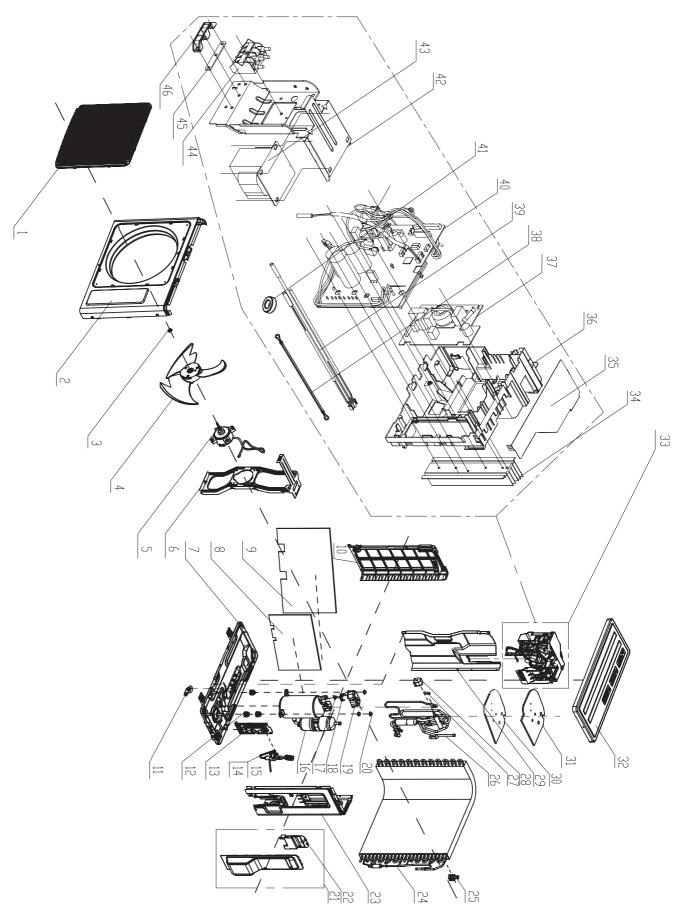

	Description	Part Code					
No.	Description	GWH09KF-K3DNA5A/O	GWH12KF-K3DNA5A/O	Qty			
	Product Code	CB146W0063	CB146W0083				
1	Front Grill	22413018	22413018	1			
2	Cabinet	01433418P	01433418P	1			
3	Fan fixed nut	70313001	70313001	1			
4	Axial Flow Fan Sub-Assy	1033300901	1033300901	1			
5	Fan Motor	15013073	15013073	1			
6	Motor Support	0170311101	01703111	1			
7	Chassis Sub-assy	0120390901P	0120390901P	1			
8	Sound insulation Cotton 2	75013543	75013543	1			
9	Sound insulation Cotton Assy	75013533	75013533	1			
10	Left Side Plate	20053001	20053001	1			
11	Drainage Joint	06123024 06					
12	Compressor Gasket	76713015	76713015	3			
13	Valve Support	01713089	1				
14	Cut-off Valve Assy	01713089 07133164	07133163	1			
15	Capillary Sub-Assy	03103936	03103937	1			
16	Compressor and fittings	00103763	00103763	1			
17	Overload Protector	00181067	00181067	1			
18	Overload Support	01743008	01743008	1			
19	Terminal cap	22243001	22243001	1			
20	Compressor fixed Bolt	01742005	01742005	3			
21	Handle assy	26233046	26233046	1			
22	Thermal baffle	26113005	26113005	1			
23	Right Side Plate Sub-Assy	0130318001	0130318001	1			
24	Condenser Assy	01113463	01113501	1			
25	Temp sensor Support	24213042	24213042	1			
26	4-way Valve Assy	0312323701	0312327201	1			
27	Temperature Sensor clamp	0312323701 0312327201 02143022		1 1			
28	Magnet Coil	4300040050	4300040050	1 1			
29	Clapboard		01233088 01233088				
30	Sound insulation Cotton 3	75013555	75013555	1			
31	Sound insulation Cotton 4	75013556	1 1				
32	Top Cover Sub-Assy	0125304001	1 1				
33	Electric Box Assy	0125304001 02603256	0260325601	1			
34	Radiator	49013023	49013023	1 1			
35							
36	Electric box 2	01413155	01413155	1			
36	Electric box	20113010	20113010	1			
	Filter Plate 30033069 30033069		1				
38	Wiring 4011001930 4011001930 Tomporature Sensor 20000304 30000304		1				
39	Temperature Sensor	39000304	39000304	1			
40	Main Board	30138087	30138096	1			
41	Magnetic Ring	49010109	49010109	1			
42	Electric box 1	01413154	01413154	1			
43	Reactor	43130182	43130182	1			
44	Terminal Board	42010312	42010312	1 1			
45	Insulation Gasket 70413007 70413007						
46	Cable clamp	26113010	26113010	1			

9. Troubleshooting

9.1 Precautions before Performing Inspection or Repair

Be cautious during installation and maintenance. Do operation following the regulations to avoid electric shock and casualty or even death due to drop from high attitude.

* Static maintenance is the maintenance during de-energization of the air conditioner.

For static maintenance, make sure that the unit is de-energized and the plug is disconnected.

*dynamic maintenance is the maintenance during energization of the unit.

Before dynamic maintenance, check the electricity and ensure that there is ground wire on the site. Check if there is electricity on the housing and connection copper pipe of the air conditioner with voltage tester. After ensure insulation place and the safety, the maintenance can be performed.

Take sufficient care to avoid directly touching any of the circuit parts without first turning off the power.

At times such as when the circuit board is to be replaced, place the circuit board assembly in a vertical position.

Normally, diagnose troubles according to the trouble diagnosis procedure as described below. (Refer to the check points in servicing written on the wiring diagrams attached to the indoor/outdoor units.)

No.	Troubleshooting procedure
1	Confirmation
2	Judgement by Flashing LED of Indoor/Outdoor Unit
3	How to Check simply the main part

Precautions when inspecting the control section of the outdoor unit:

A large-capacity electrolytic capacitor is used in the outdoor unit controller (inverter). Therefore, if the power supply is turned off, charge (charging voltage DC280V to 380V) remains and discharging takes a lot of time.. After turning off the power source, if touching the charging section before discharging, an electrical shock may be caused.

The outdoor unit can be turned on after 20 min since the deenergization.

9.2 Confirmation

(1)Confirmation of Power Supply

Confirm that the power breaker operates(ON) normally;

(2)Confirmation of Power Voltage

Confirm that power voltage is AC 220-230-240 ± 10%.

If power voltage is not in this range, the unit may not operate normally.

9.3 Judgement by Flashing LED of Indoor/Outdoor Unit

code	malfunct	o Error displa	у	Repair method	CC	malfunction	Error dis	splay	Repair method
	n	Dual 8 display	LED		de		Dual 8 display	LED	
1	Storage slug	EE	Heating LED-pause 3s and blink 15 times	Replace indoor main board	15	Sync failure	H7	Heating LED-pause 3s and blink 7 times	Check if the resistance of compressor and resistance to ground is normal. If the compressor is normal the outdoor main board may be wrong.
2	Indoor PCB malfunctio	EE	Heating LED-pause 3s and blink 15 times	Replace indoor main board	16	Current diction malfunction of complete unit	U5	Cooling LED-pause 3s and blink 13 times	Replace outdoor main board
3	Anti-freezi ng protection	E2	Running LED- pause 3s and blink 2 times	Outdoor ambient temperature is too low	17	Outdoor ambient temperature sensor malfunction	F3	Cooling LED-pause 3s and blink 3 times	Is it loose? Measure the resistance value with universal meter
4	Overload of system	H4	Heating LED-pause 3s and blink 4 times	System is abnormal, check if the evaporator and condenser is dirty and blocked	18	Discharge protection of compressor	E4	Running LED-pause 3s and blink 4 times	Is it loose? Measure the resistance valu with universal meter
5	No motor of indoor unit feedback	H6	Running LED- pause 3s and blink 11 times	Is electromotor mounted normally?	19	Break-circuit and short-circuit of outdoor discharge temperature sensor	F5	cooling LED- pause 3s and blink 5 times	Is it loose? Measure the resistance value with universal meter
6	Indoor pipe temperatur e sensor malfunctio n	F2	cooling LED- pause 3s and blink 2 times	Is it loose? Measure the resistance value with universal meter	20	Break-circuit and short-circuit of outdoor condenser temperature sensor	F4	cooling LED- pause 3s and blink 18 times	Is it loose? Measure the resistance value with universal meter
7	Internal ambient temperatur e sensor malfunctio	F1	Cooling LED- pause 3s and blink 1 times	Is it loose? Measure the resistance value with universal meter	21	Overheat of carbon fin	P8	heating LED- pause 3s and blink 19 times	Is outdoor ambient temperature is too high? Is radiator mounted correctly?
8	Zero passage abnormal	UF	Heating and cooling LED blinks 7 times at the same time	Replace indoor main board	22	DC overcurrent	UU	Heating and cooling LED blink 11 times at the same time	I
9	Overload of compresso r	НЗ	heating LED- pause 3s and blink 3 times	Inspect connection state of the overload wire.	23	Temperature senso malfunction of carbon fin	r P7	heating LED- pause 3s and blink 18 times	Replace outdoor main board.
10	Startup failure	Lc	heating LED- pause 3s and blink 11 times	Check if the resistance of compressor and resistance to ground is normal. If the compressor is normal, the outdoor main board may be wrong.	24	Lack of Freon or block protection	F0	cooling LED- pause 3s and blink 10 times	
11	No motor of outdoor unit feedback	UH	Heating and cooling LED blink 8 times at the same time	This malfunction may happen when outdoor DC electromotor is used.	25	DC input voltage is too high	PH	cooling LED- pause 3s and blink 11 times	Is voltage of AC power supply normal?
12	Overcurren t protection	E5	Running LED- pause 3s and blink 5 times	Is electric network variable?	26	DC input voltage is too low	PL	Heating LED- pause 3s and blink 21 times	Is voltage of AC power supply normal?
13	4-way valve conversion abnormal	U7	cooling LED- pause 3s and blink 20 times	Replace 4-way valve.	27	Communication malfunction	E6	Running LED- pause 3s and blink 6 times	Is outdoor connecting wire reliably connected?
14	Phase current detection malfunctio n of compresso r	U1	Heating LED- pause 3s and blink 13 times	Replace outdoor main board.	28	Setting error, indoor and outdoor unit abnormal	UA	Heating and cooling LED blink 12 times at the same time	Outdoor unit is not matched with indoor unit.
remarks	4min after p 6 times with		o of compressor, the ma	alfunction is shown in erro	r code.	In other situation, the	malfunction	will be displayed by p	ress the light button for


9.4 How to simply check the main part

(1) \square Malfunction of power supply from indoor unit to outdoor unit

Main inspection point:

- □Inspect the power supply plug seat with AC voltage gauge to check if the voltage between L and N is within 200VAC~240VAC;□□
- □Check with AC voltage gauge if the voltage between N 1and 3 of indoor wiring block is within 200VAC~240VAC;□□

Flow chart of Malfunction diagnosis

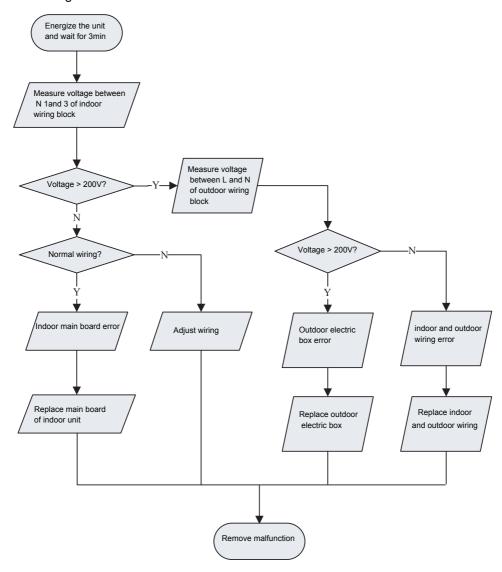


(2) Indoor fan does not rotate and there is no feedback

Main detection point:

- Is the control panel reliably connected with the motor? Is it loose? Is the connecting sequence correct?
- Is the input voltage within the normal range (measure the voltage between L and N of the wiring block XT with AC voltage gauge.)?

Malfunction diagnosis process:

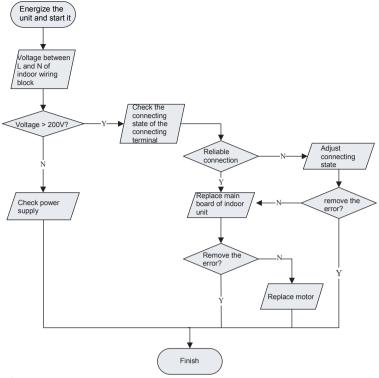


(3) Temperature sensor malfunction

Main detection points:


- Is outdoor ambient temperature within the normal range?
- Is indoor and outdoor fan running normally?
- Is the radiating environment inside and outside the unit good enough?

Malfunction diagnosis process:

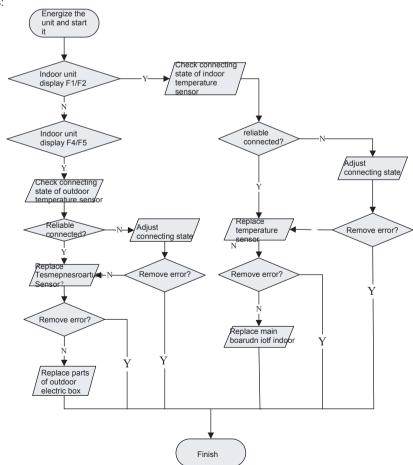

- (4) Malfunction diagnosis of startup failure Main detection points:
- Is wiring of compressor correct.
- Is the stop time of compressor enough?
- Is compressor damaged?

Malfunction diagnosis process:

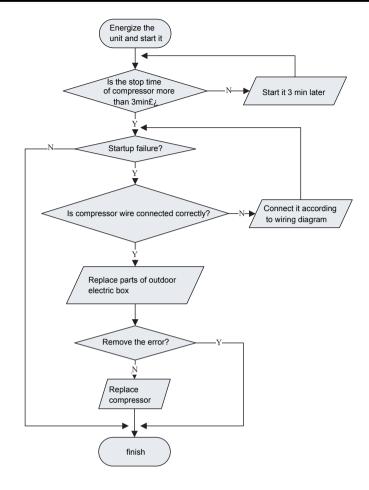


(5) Diagnosis of losing synchronism for compressor

Main detection points:

- Is pressure of the system too high?
- Is voltage too low?

Malfunction diagnosis process:

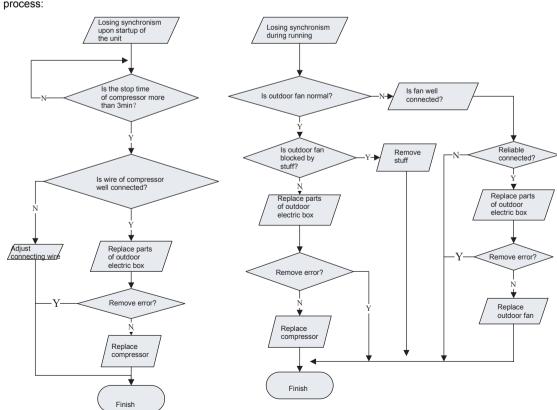


(6) Diagnosis of overload and discharge malfunction


Main detection points:

- Is electric expansion valve well connected? Is it damaged?
- Is refrigerant leaked?
- Is overload wire connection normal?

Malfunction diagnosis process:

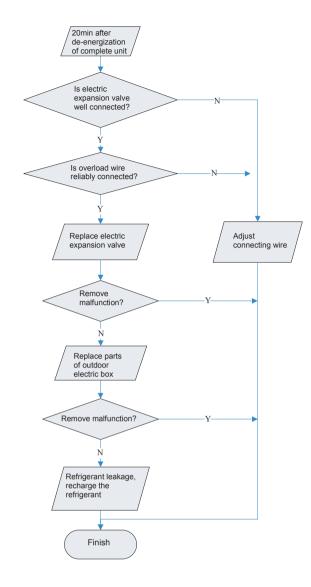

(7) Detection process of communication circuit of outdoor unit

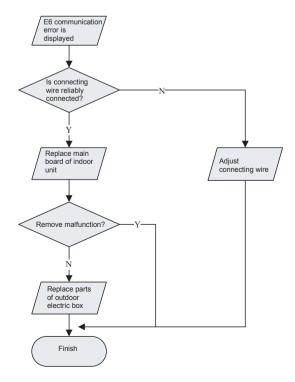


9.5 2-way, 3-way Valve Appearance

		2-way Valve (Liquid Side)	3-way Valve (Gas Side)	
		Hexagonal wrench (4mm) Open position Closed position To piping connection To outdoor unit	Flare nut To piping connection To outdo	Open position Closed position Pin Service Service port cap port
	Works	Shaft position	Shaft position	Service port
	Shipping	Closed (with valve cap)	Closed (with valve cap)	Closed (with cap)
1.	Air purging (Installation)	Closed (clockwise)	Closed (clockwise)	Open (with vacumm pump)
	Operation	Open (with valve cap)	Open (with valve cap)	Closed (with cap)
2.	Pumping down (Transfering)	Closed (clockwise)	Open (counter-clockwise)	Open (connected manifold gauge)
3.	Evacuation (Servicing)	Open	Open	Open (with charging cylinder)
4.	Gas charging (Servicing)	Open	Open	Open (with charging cylinder)
5.	Pressure check (Servicing)	Open	Open	Open (with charging cylinder)
6.	Gas releasing (Servicing)	Open	Open	Open (with charging cylinder)

Air puraina

CAUTION: Do not leak the gas in the air during Air purging.

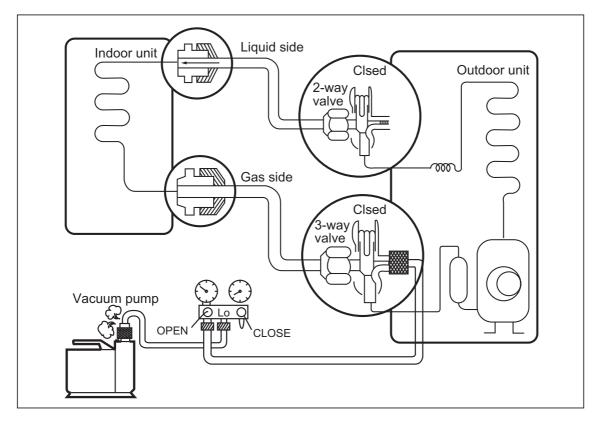

* Procedure

- (1)Connect the charge hose from the manifold valve to the service port of the gas side packed valve.
- (2)Connect the charge hose to the port of the vacuum pump.
- (3) Open fully the low pressure side handle of the gauge manifold valve.
- (4)Operate the vacuum pump to begin evacuating. Perform evacuating for about 15 minutes if the piping length is 20 meters (15 minutes for 20 meters) (assuming a pump capacity of 27 liters per minute). Confirm that the compound pressure gauge reading is –101 kPa (–76 cmHg).
- (5)Close the low pressure valve handle of gauge manifold.
- Check the flare connections for gas leakage.
- (6)Use torque wrench to tighten the service port nut to a torque of 1.8kg.cm.
- (7)Set the 3-way valve to the back seat.
- (8) Mount the valve stem nuts to the 2-way and 3-way valves.

(9)Check for gas leakage.


 At this time, especially check for gas leakage from the 2-way and 3-way valve's stem nuts, and from the service port nut.

CAUTION:

If gas leakage are discovered in step 5 above, take the following mesures :

If the gas leaks stop when the piping connections are tightened further, continue working from step 6. If the gas leaks do not stop when the connections are retightened, repair the location of the leak, discharge all of the gas through the service port, and then recharge with the specified amount of gas from a gas cylinder.

Pumping Down

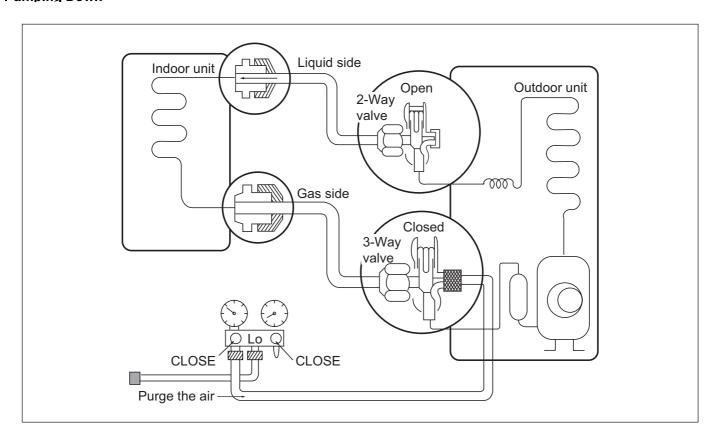


• Procedure

- (1) Confirm that both the 2-way and 3-way valves are set to the open position.
- Remove the valve stem caps and confirm that the valve stems are in the raised position.
- Be sure to use a hexagonal wrench to operate the valve stems.
- (2) Operate the unit for 10 to 15 minutes.
- (3) Stop operation and wait for 3 minutes, then connect the charge set to the service port of the 3-way valve.
- Connect the charge hose with the push pin to the service port.
- (4) Air purging of the charge hose.
- Open the low-pressure valve on the charge set slightly to air purge from the charge hose.
- (5) Set the 2-way valve to the closed position.
- (6) Operate the air conditioner at the cooling cycle and stop it when the gauge indicates 1kg/cm²g.

- (7) Immediately set the 3-way valve to the closed position.
- Do this quickly so that the gauge ends up indicating 3 to 5kg/ $\rm cm^2 g$.
- (8) Disconnect the charge set, and mount the 2-way and 3-way valve's stem nuts and the service port nut.
- Use torque wrench to tighten the service port nut to a torque of 1.8 kg.m.
- Be sure to check for gas leakage.

Re-air Purging

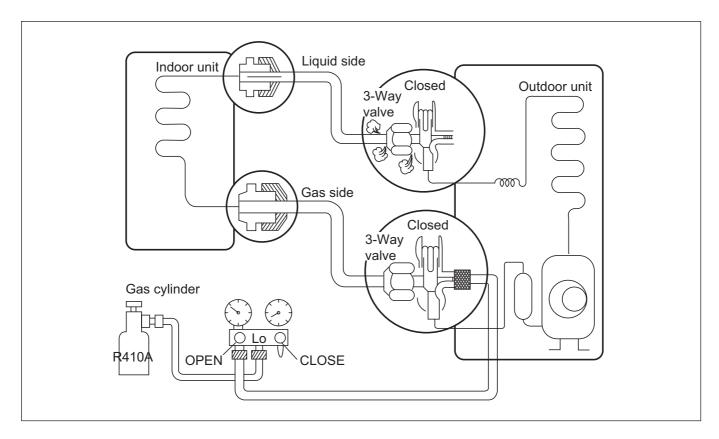

• Procedure

- (1) Confirm that both the liquid side valve and the gas side valve are set to the closed position.
- (2) Connect the charge set and a gas cylinder to the service port of the Gas side valve.
- Leave the valve on the gas cylinder closed.

(3) Air purging.

- Open the valves on the gas cylinder and the charge set. Purge the air by loosening the flare nut on the liquid side valve approximately 45° or 3 seconds then closing it for 1 minute; repeat 3 times.
- After purging the air, use a torque wrench to tighten the flare nut on liquid side valve.

(4) Check for gas leakage.

- Check the flare connections for gas leakage.


(5) Discharge the refrigerant.

– Close the valve on the gas cylinder and discharge the refrigerant until the gauge indicates 3 to 5 kg/cm²g.

- (6) Disconnect the charge set and the gas cylinder, and set the Liquid side and Gas side valves to the open position.
- Be sure to use a hexagonal wrench to operate the valve stems.
- (8) Mount the valve stem nuts and the service port nut.
- Use torque wrench to tighten the service port nut to a torque of 1.8 kg.m.
- Be sure to check for gas leakage.

CAUTION: Do not leak the gas in the air during Air Purging.

Balance Refrigerant of the 3-way Valve (Gas leakage)

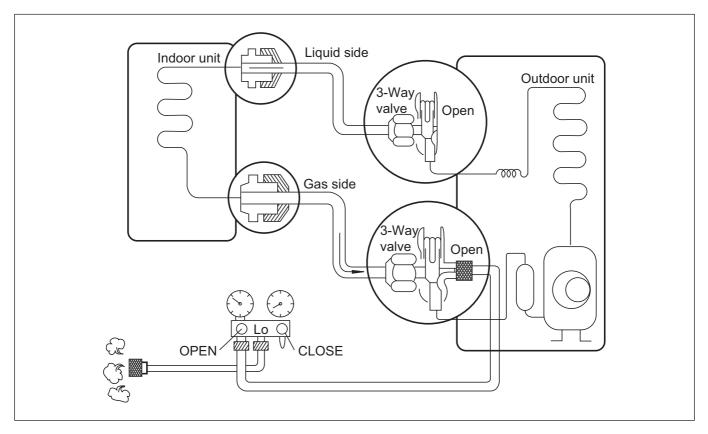


Procedure

- (1) Confirm that both the 2-way and 3-way valves are set to the back seat.
- (2) Connect the charge set to the 3-way valve's port.
 - Leave the valve on the charge set closed.
 - Connect the charge hose to the service port.
- (3) Open the valve (Lo side) on the charge set and discharge the refrigerant until the gauge indicates 0 kg/cm ²G.
 - If there is no air in the refrigerant cycle (the pressure when the air conditioner is not running is higher than 1 kg/cm²G), discharge the refrigerant until the gauge indicates 0.5 to 1 kg/cm²G. if this is the case, it will not be necessary to apply a evacuatin.
 - Discharge the refrigerant gradually; if it is discharged too suddenly, the refrigeration oil will also be discharged.

Evacuation

(All amount of refrigerant leaked)

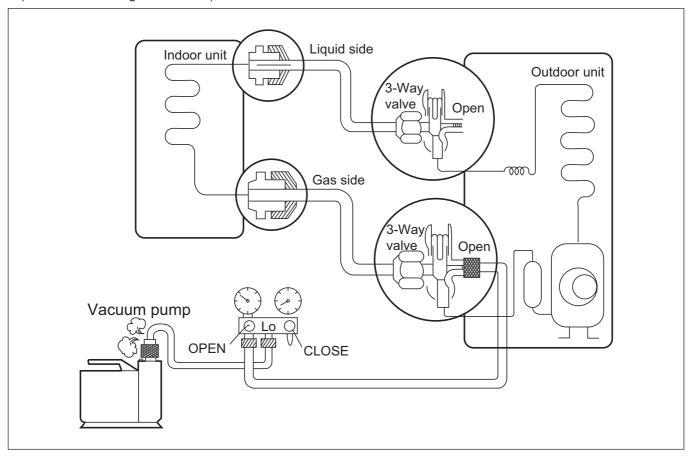


• Procedure

- (1) Connect the vacuum pump to the center hose of charge set center hose
- (2) Evacuation for approximately one hour.
 - Confirm that the gauge needle has moved toward -76 cmHg (vacuum of 4 mmHg or less).
- (3) Close the valve (Lo side) on the charge set, turn off the vacuum pump, and confirm that the gauge needle does not move (approximately 5 minutes after turning off the vacuum pump).
- (4) Disconnect the charge hose from the vacuum pump.
 - Vacuum pump oil.
 If the vacuum pump oil becomes dirty or depleted, replenish as needed.

Gas Charging

(After Evacuation)

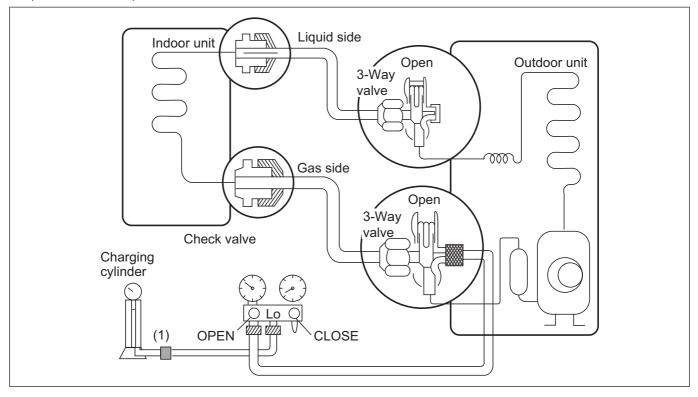

Procedure


- Connect the charge hose to the charging cylinder.
 - Connect the charge hose which you dis-connected from the vacuum pump to the valve at the bottom of the cylinder.
 - If you are using a gas cylinder, also use a scale and reverse the cylinder so that the system can be charged with liquid.
- (2) Purge the air from the charge hose.
 - Open the valve at the bottom of the cylinder and press the check valve on the charge set to purge the air. (Be careful of the liquid refrigerant). The procedure is the same if using a gas cylinder.
- (3) Open the valve (Lo side on the charge set and charge the system with liquid refrigerant.
 - If the system can not be charged with the specified amount of refrigerant, it can be charged with a little at a time (approximately 150g each time) while operating the air conditioner in the cooling cycle; however, one time is not sufficient, wait approximately 1 minute and then repeat the procedure (pumping down-pin).

This is different from previous procedures. Because you are charging with liquid refrigerant from the gas side, absolutely do not attempt to charge with larger amounts of liquid refrigerant while operating the air conditioner.

- (4) Immediately disconnect the charge hose from the 3-way valve 's service port.
 - Stopping partway will allow the gas to be discharged.
 - If the system has been charged with liquid refrigerant while operating the air conditioner turn off the air conditioner before disconnecting the hose.
- (5) Mount the valve stem nuts and the service port nut.
 - Use torque wrench to tighten the service port nut to a torque of 1.8 kg.m.
 - Be sure to check for gas leakage.

Note: The information above is for reference only.

Re-air Purging

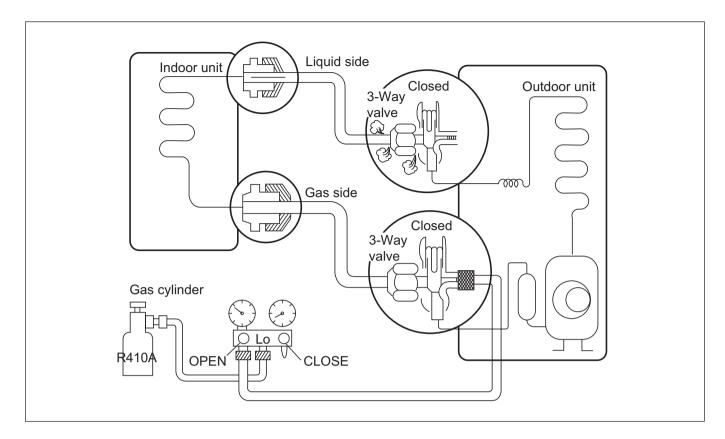

• Procedure

(1) Confirm that both the liquid side valve and the gas side

alve are set to the closed position.

- (2) Connect the charge set and a gas cylinder to the service port of the Gas side valve.
- Leave the valve on the gas cylinder closed.

(3) Air purging.


- Open the valves on the gas cylinder and the charge set. Purge the air by loosening the flare nut on the liquid side valve approximately 45° or 3 seconds then closing it for 1 minute; repeat 3 times.
- After purging the air, use a torque wrench to tighten the flare nut on liquid side valve.
- (4) Check for gas leakage.
- Check the flare connections for gas leakage.

(5) Discharge the refrigerant.

 Close the valve on the gas cylinder and discharge the refrigerant until the gauge indicates 3 to 5 kg/cm²g.

- (6) Disconnect the charge set and the gas cylinder, and set the Liquid side and Gas side valves to the open position.
- Be sure to use a hexagonal wrench to operate the valve stems.
- (8) Mount the valve stem nuts and the service port nut.
- Use torque wrench to tighten the service port nut to a torque of 1.8 kg.m.
- Be sure to check for gas leakage.

CAUTION: Do not leak the gas in the air during Air Purging.

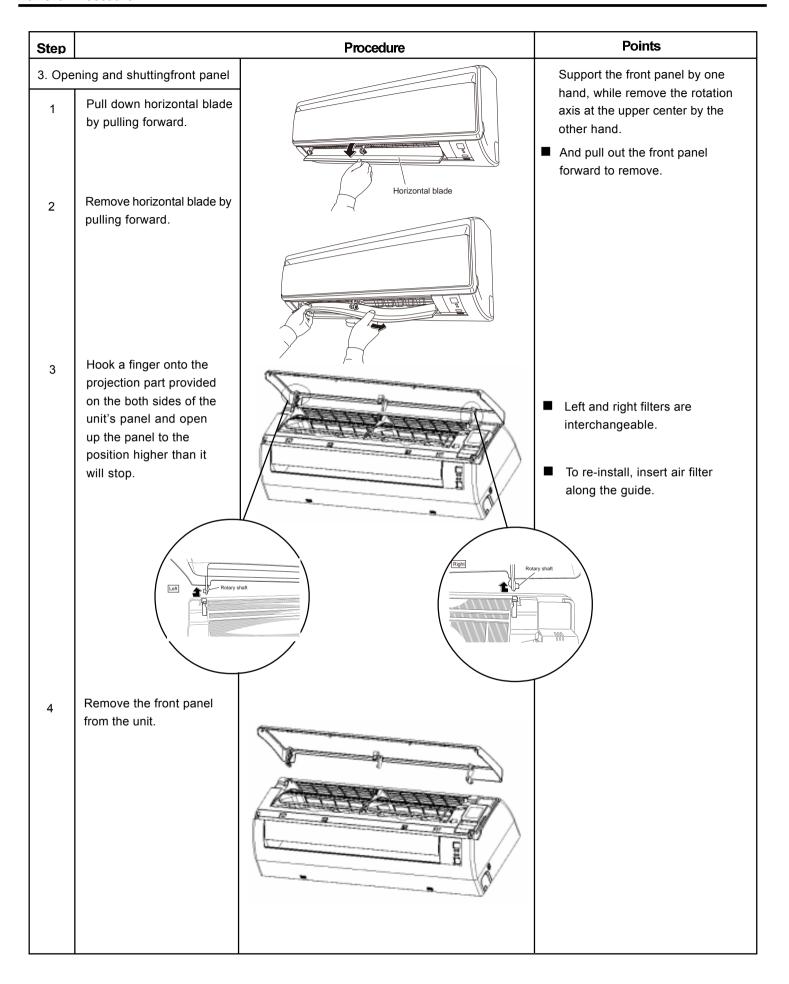

Step		Procedure	Points		
4. Oper	ning and closing of service cover	screws			
	cover mounting screw. Open service cover upward.				
			A switch for field setting is not provided in particular.		
5. Rem	5. Removal of front grille assembly				
1	Remove the 3 screws, in the right and the left, which fix the main body with the front grille.		Screw stoppers inside the flap which were equipped in the existing models are not provided.		
			piovided.		
2	Disengage the 3 hooks on the upper part. In case that the hooks are not pressed from above, remove the front panel and then remove the grille while pushing the hook through a clearance between the	Hooks Left Center	At the upper part there are 2 hooks in the left and the		
	front grille and the heat exchanger.	Center Right	right.		
3	The front grille can be removed in a manner to pull out the upper part forward and lift up the lower part.		Disengage the hooks by pressing knobs with a screwdriver.		

Step		Procedure	Points	
6. Remove the Vertical blade				
1	Unfasten the hooks at the upper 2 positions.	Hook	 A set of vertical blade has 6 fins as on ASSY. (It is impossible to replace only one fin.) The set of vertical blades is not marked for difference between right and left. 	
2	Unfasten the 3 hooks at the shaft mounting part by pressing them with a flat screwdriver.			
		Hook	■ Repeat the same procedure to remove the vertical blade on the other side.	
3	Remove the vertical blade.	Vertical blade		

Step		Procedure	Points
7. Rem	ove electrical box		
1	Disconnect the Cable clamp		■ Pay attention to the direction of the retainer of the thermistor so that the retainer will not touch the harness (same as the existing models.)
2	Disconnect the connection wires.	Terminal board Connecting wires	
3	Remove Temperature Sensor	Heat exchanger thermistor (R11244)	■ Take care not to lose the clip of thermistor. Clip Heat exchanger thermistor (R11288)
4	Remove the screw on the terminal board.	Screw Earth wire	■ The electrical box can be removed instead of disengaging the terminal board.

Step		Procedure	Points
5	Remove fan motor Signal Wire	fan motor Signal Wire	
6	Remove a screw on the electrical box.		
7	Pull up the electrical box forward to remove.	Bottom frame Hook	

Step		Procedure	Points
8. Ren	nove the shield plate.		
1	Unfasten the hooks at the upper 2 positions of the shield plate.	Hook Shield plate (1)	■ Remove the electrical box according to the "Removal of Electrical Box".
2	Unfasten the hook at the lower position, and remove the shield plate (1).	Hook	
3	Lift the shield plate (2) and unfasten the 2 hooks.	Hook	
4	Slide the shield plate (2) and remove it.	Shield plate (2)	

Step		Procedure	Points
5	Take off Wiring terminal		
6	Remove Display PCB Sub-Assy.	Display PCB ASSY	
7	Remove Swing motor.		
		Swing motor (R8036)	

Step		Procedure	Points
8	To remove the control PCB, unfasten the 2 hooks at the upper part from the rear side.		■ The control PCB is integrated with the power supply PCB.
9	Lift up the upper part of the control PCB, and remove it.	Control PCB	

Step		Procedure	Points
9. Disc	onnect the refrigerant piping.		CAUTION
1	Lift the indoor unit by a wooden base.	Wooden base	If gas leaks, repair the spot of leaking, then collect all refrigerant from the unit. After conducting vacuum drying, recharge proper amount of refrigerant. CAUTION Do not contaminate any gas
2	Place a plastic sheet under the drain pan as remaining drain may leak.	Drain hose Extension drain hose Connecting wires	(including air) other than the specified refrigerant (R-410A) into refrigerant cycle. (Contaminating of air or other gas causes abnormal high pressure in refrigerating cycle, and this results in pipe breakage or personal injuries.)
3	Disconnect the flare nut for gas piping by 2 wrenches.		 Pay attention so that the residual water in the drain will not make the floor wet. In case that a drain hose is buried inside a wall, remove it after the drain hose in the wall is pulled out.
4	Disconnect the flare nut for liquid piping by 2 wrenches.		 Use two wrenches to disconnected pipes. When disconnecting pipes, cover every nozzle with caps so as not to let dust and moisture in.

Step		Procedure	Points
9. Rem	nove the indoor unit.		
1	Remove the indoor unit from the installation plate.	Gas piping (R8019)	 When the pipings are disconnected, protect the both openings from entering moisture.
2	Release the hook of the piping fixture on the back of the unit.	Auxiliary piping Piping fixture	

Step		Procedure	Points
3	Loosen the 2 screws, in the right and the left, which fix the Evaporator Assy.		
4	Widen the auxiliary piping to the extent of 10°~20°.	Auxiliary piping (R8040)	
5	Pull the heat exchanger to the front side to undo the hooks completely, and then lift it.	Heat exchanger	

Step		Procedure	Points
	nove Cross Flow Fan Fan		
1	Remove Cross Flow Fan Fan Motor		
11. Remove Ring of Bearing		Bearing	
		(R8050)	
1	nove Cross Flow Fan and or Sub-Assy screw.		

Step		Procedure	Points
13. Rer	move Motor Sub-Assy		
1	Remove Motor Sub-Assy		
14. Rer	move Fan Motor		

10.2 Removal Procedure of Outdoor Unit

Warning

Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step		Procedure	Points
1. Fea	tures	Handle	■ The stop valve cover has 6 hooks.
1	Loosen the screw of the stop valve cover. Pull down the stop valve cover and remove it.	Stop valve cover	
2. Ren	noving air filters		
1	Loosen the 3 screws (front, right, left) and lift the top panel.	Top panel	

Step		Procedure	Points
2	Loosen the 1 screws and remove the discharge grille.	discharge grille	
3	Loosen the 5 screws of the front panel.	Front panel.	■ Lift the front panel and remove it while pushing the right side panel inwards. StepProcedure Points
4	Remove screws on right side plate and valve support Then remove the right side plate by lifting it.	Right side plate	
3.Ren	nove the fan motor		■ The screw has reverse
1	Remove the screws of the fan an then remove the propeller fan.	fan propeller	winding. Remove the propeller fan.

Step		Procedure	Points
2	Remove the 4 tapping screws fixing the motor. Pull out the lead-out wire and remove the motor. Remove the 2 tapping screws fixing the motor support. Lift motor support to remove it.	Fan motor fixing frane Fan motor	■ M4×16 ■ DC fan motor
4.Remove the electrical box.		Electrical box	
1	Remove the 2 screws fixing the cover of electric box. Lift to remove the cover. Loosen the wire and disconnect the terminal. Lift to remove the electric box subassembly.		
5.Remove the partition plate.			
1	Loosen the 2 screws.		■ The partition plate is fixed to the bottom frame with a hook.
2	The partition plate has a hook on the lower side. Lift and pull the partition plate to remove.	Partition plate	

Step		Procedure	Points
6.Remove the sound blanket.		sound blanket	
1	Lift and remove the sound blanket (top).	1	Since the piping ports on the sound blanket are torn easily, remove the blanket carefully.
2	Untie the strings and open the sound blanket.		
3	Lift and remove the sound blanket (body) as it is opened.		
4	Pull the sound blanket (inner) out.	Sound blanket.	■ Since the piping ports on the sound blanket are torn easily, remove the blanket carefully.
7.Rem	ove the partition plate.		■ Provide a protective sheet or a
1	Loosen the screw of the four way valve coil.	screw	steel plate so that the brazing flame cannot influence peripheries. Be careful so as not to break the pipes by pressing it excessively by pliers when withdrawing it. Caution Be careful about the four way valve, pipes and so on, which were heated up by a gas brazing machine, so as not to get burnt your hands.

Step		Procedure	Points
8. Re	move the compressor		
1	Unsolder weld point of capillary, valve and outlet pipe of condensator. Then remove the capillary. Don't block the capillary when unsoldering it. (Note: before unsoldering, discharge refrigerants completely)		
2	Remove the 2 screws fixing the gas valve. Unsolder the welding spot connecting gas valve and air return pipe and remove the gas valve. (Note: it is necessary to warp the gas valve when unsoldering the welding spot.) Remove the 2 screws fixing liquid valve. Unsolder the welding spot connecting liquid valve and remove the liquid valve.	4-way valve assy	
3	Unsolder the pipe connected with the compressor. Remove the 3 footing screws of the compressor and remove the compressor.	Compressor	
4	Remove the 3 footing screws of the compressor and remove the compressor.	Nut	





GREE ELECTRIC APPLIANCES,INC.OF ZHUHAI

Add:Jinji west Rd.Qianshan Zhuhai Guangdong China

Tel:86-756-8522219 (After sale Service Dept)

Post code:519070