



# SERVOSTAR 300

## Digital Servo Amplifier

### Instructions Manual

Translation of the original instructions.

Edition 09/2011

Valid for Hardware Revision 04.00



Keep all manuals as a product component during the life span of the product.  
Pass all manuals to future users / owners of the product.

File sr300\_e.\*\*\*

**KOLLMORGEN**

## Record of Document Revisions:

| Revision | Remarks                                                                                                                                                                                                                                                                                                                                                              |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 06/2004  | First edition                                                                                                                                                                                                                                                                                                                                                        |
| 04/2005  | Restart lock -AS-, UL-listing, new pinning for X8, several corrections                                                                                                                                                                                                                                                                                               |
| 04/2005a | order numbers 400V types for NA updated                                                                                                                                                                                                                                                                                                                              |
| 11/2005  | Chapter 1 updated, ComCoder wiring corrected, Acuro(BISS)-Interface new, max. station address changed to 127, motor choke changed, SynqNet and EtherCAT expansion cards added, chapter 6 restructured, order codes restructured                                                                                                                                      |
| 12/2005  | Feedback section, termination resistors X1/X5, CE section                                                                                                                                                                                                                                                                                                            |
| 02/2006  | Error messages and warnings updated, additional information (SERCOS), AWG cross-sections added, inch dimensions added, analog-in circuit updated, cross section (awg)                                                                                                                                                                                                |
| 05/2006  | CAN baud rate coding updated, LED display structure updated, input analog-in updated, BISS interface updated, hardware revision added, Errors/Warnings updated                                                                                                                                                                                                       |
| 09/2006  | New document structure, new cover design, warning n24, Quickstart integrated                                                                                                                                                                                                                                                                                         |
| 03/2007  | New part number scheme, termination resistors CAN interface and X5 corrected, branding updated, chapter leakance current new, chapter "servo system graphics" expanded and moved, chapter "various mains supply networks" moved, trouble shooting reduced, Feedback expanded and restructured, enc emulation, DC-Link expanded, AS restructured, accessories removed |
| 07/2007  | Timing diagram motor brake, standards updated (EMC and LVD)                                                                                                                                                                                                                                                                                                          |
| 10/2007  | Target group, use as directed, standards                                                                                                                                                                                                                                                                                                                             |
| 05/2008  | Safety symbols acc. to ANSI Z535.6, repair, deinstallation, dU/dt info, syntax: "regen" => "brake", techn. data connectors, cable requirements, data brake circuit                                                                                                                                                                                                   |
| 06/2008  | EC Declaration new, Hiperface corrected, option FAN new                                                                                                                                                                                                                                                                                                              |
| 10/2008  | SCCR -> 42kA                                                                                                                                                                                                                                                                                                                                                         |
| 02/2009  | Product brand, single phase operation, repair/disposal request form                                                                                                                                                                                                                                                                                                  |
| 05/2010  | SSI input clock signal inverted, Gost-R, CE, FAN, AS->STO, Emergency Stop samples=>WIKI                                                                                                                                                                                                                                                                              |
| 07/2010  | Wiki links updated                                                                                                                                                                                                                                                                                                                                                   |
| 11/2010  | New CPU, Ethercat Interface                                                                                                                                                                                                                                                                                                                                          |
| 12/2010  | New company name and address, CE certificate, name plate, fax form                                                                                                                                                                                                                                                                                                   |
| 05/2011  | Option EF new, BiSS C, BiSS analog/digital separated, nameplate, front label                                                                                                                                                                                                                                                                                         |
| 09/2011  | Permitted switch on/off frequency defined, unsupported Feedbacks 25/26 removed, certificates                                                                                                                                                                                                                                                                         |

## Hardware Revision (HR) History

| Hardware Revision | usable<br>Firmware Revision | usable<br>DRIVEGUI.EXE Revision | Remarks                   |
|-------------------|-----------------------------|---------------------------------|---------------------------|
| 02.01             | ≥ 2.18                      | ≥ 1.30 Build 0056               | Start HWR                 |
| 02.10 (03.01)     | ≥ 3.75                      | ≥ 2.00 Build 0074               | AS->STO, new approval     |
| 04.00             | ≥ 5.18                      | ≥ 2.20 Build 0004               | New CPU, front label S300 |

WINDOWS is a registered trademark of Microsoft Corp.

HIPERFACE is a registered trademark of Max Stegmann GmbH

EnDat is a registered trademark of Dr. Johannes Heidenhain GmbH

EtherCAT is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH

**Technical changes which improve the performance of the device may be made without prior notice!**

Printed in the Federal Republic of Germany

All rights reserved. No part of this work may be reproduced in any form (by photocopying, microfilm or any other method) or stored, processed, copied or distributed by electronic means without the written permission of Kollmorgen Europe GmbH.

|                                                                 | page |
|-----------------------------------------------------------------|------|
| <b>1 General</b>                                                |      |
| 1.1 About this manual                                           | 7    |
| 1.2 Target group                                                | 7    |
| 1.3 Hints for the online edition (PDF format)                   | 7    |
| 1.4 Abbreviations used                                          | 8    |
| 1.5 Symbols used                                                | 9    |
| 1.6 Standards used                                              | 9    |
| <b>2 Safety</b>                                                 |      |
| 2.1 Safety Instructions                                         | 10   |
| 2.2 Use as directed                                             | 11   |
| 2.3 Prohibited use                                              | 12   |
| <b>3 Approvals</b>                                              |      |
| 3.1 Conformance with UL and cUL                                 | 13   |
| 3.2 EC Conformance                                              | 14   |
| 3.2.1 European Directives and Standards for the machine builder | 14   |
| 3.2.2 EC Declaration of Conformity                              | 15   |
| 3.3 GOST-R conformance                                          | 16   |
| <b>4 Handling</b>                                               |      |
| 4.1 Transport                                                   | 17   |
| 4.2 Packaging                                                   | 17   |
| 4.3 Storage                                                     | 17   |
| 4.4 Maintenance, Cleaning                                       | 17   |
| 4.5 Disassembling                                               | 18   |
| 4.6 Repair                                                      | 18   |
| 4.7 Disposal                                                    | 18   |
| <b>5 Package</b>                                                |      |
| 5.1 Package supplied                                            | 19   |
| 5.2 Nameplate                                                   | 19   |
| 5.3 Part number scheme                                          | 20   |
| <b>6 Technical description</b>                                  |      |
| 6.1 The S300 family of digital servo amplifiers                 | 21   |
| 6.2 Technical data                                              | 23   |
| 6.2.1 Technical data for 110/230 V (types S3__6_)               | 23   |
| 6.2.2 Technical data for 400/480 V (types S3__0_)               | 24   |
| 6.2.3 Inputs / outputs, Auxiliary voltage                       | 25   |
| 6.2.4 Connectors                                                | 25   |
| 6.2.5 Recommended tightening torques                            | 25   |
| 6.2.6 Fusing                                                    | 25   |
| 6.2.7 Ambient conditions, ventilation, mounting position        | 26   |
| 6.2.8 Conductor cross-sections                                  | 26   |
| 6.3 Motor holding brake                                         | 27   |
| 6.4 LED display                                                 | 28   |
| 6.5 Grounding system                                            | 28   |
| 6.6 Dynamic braking (brake circuit)                             | 28   |
| 6.7 Switch-on and switch-off behavior                           | 30   |
| 6.7.1 Behavior in standard operation                            | 31   |
| 6.7.2 Behavior in the event of an error (with standard setting) | 32   |
| 6.8 Stop- / Emergency Stop- Function to IEC 60204               | 33   |
| 6.8.1 Stop: Standards                                           | 33   |
| 6.8.2 Emergency Stop: Standards                                 | 34   |
| 6.9 Safety function STO                                         | 35   |
| 6.9.1 Safety characteristic data                                | 35   |
| 6.9.2 Safety instructions                                       | 36   |
| 6.9.3 Use as directed                                           | 36   |
| 6.9.4 Prohibited Use                                            | 36   |
| 6.9.5 Technical data and pinning                                | 37   |
| 6.9.6 Enclosure                                                 | 37   |
| 6.9.7 Wiring                                                    | 37   |
| 6.9.8 Functional description                                    | 38   |
| 6.9.8.1 Signal diagram (sequence)                               | 39   |
| 6.9.8.2 Control circuit                                         | 40   |
| 6.9.8.3 Functional test                                         | 41   |
| 6.9.8.4 Mains supply circuit                                    | 41   |

|                                                                              | page |
|------------------------------------------------------------------------------|------|
| 6.10 Shock-hazard protection. . . . .                                        | 42   |
| 6.10.1 Leakage current . . . . .                                             | 42   |
| 6.10.2 Residual current protective device (RCD). . . . .                     | 42   |
| 6.10.3 Isolating transformers . . . . .                                      | 42   |
| <b>7 Mechanical Installation</b>                                             |      |
| 7.1 Safety Instructions . . . . .                                            | 43   |
| 7.2 Guide to mechanical installation. . . . .                                | 43   |
| 7.3 Assembly . . . . .                                                       | 44   |
| 7.4 Dimensions. . . . .                                                      | 45   |
| <b>8 Electrical installation</b>                                             |      |
| 8.1 Safety Instructions . . . . .                                            | 47   |
| 8.2 Guide to electrical installation. . . . .                                | 48   |
| 8.3 Wiring . . . . .                                                         | 49   |
| 8.3.1 Safety instructions . . . . .                                          | 49   |
| 8.3.2 Shielding connection to the front panel. . . . .                       | 50   |
| 8.3.3 Technical data for connecting cables . . . . .                         | 51   |
| 8.4 Components of a servo system . . . . .                                   | 52   |
| 8.5 Block diagram. . . . .                                                   | 53   |
| 8.6 Connector assignments . . . . .                                          | 54   |
| 8.7 Connection diagram (Overview). . . . .                                   | 55   |
| 8.8 Electrical supply . . . . .                                              | 56   |
| 8.8.1 Connection to various mains supply networks . . . . .                  | 56   |
| 8.8.2 24V auxiliary supply (X4). . . . .                                     | 57   |
| 8.8.3 Mains supply connection (X0), three phase . . . . .                    | 57   |
| 8.8.4 Mains supply connection (X0), two phase without neutral . . . . .      | 57   |
| 8.8.5 Mains supply connection (X0), single phase with neutral . . . . .      | 58   |
| 8.9 External brake resistor (X8) . . . . .                                   | 59   |
| 8.10 DC bus link (X8) . . . . .                                              | 59   |
| 8.11 Motor connection with brake (X9). . . . .                               | 60   |
| 8.12 Feedback systems . . . . .                                              | 61   |
| 8.13 Primary and secondary feedback types . . . . .                          | 62   |
| 8.13.1 Resolver (X2) . . . . .                                               | 63   |
| 8.13.2 Sine Encoder with BiSS analog (X1). . . . .                           | 64   |
| 8.13.3 Sine Encoder with BiSS digital (X1) . . . . .                         | 65   |
| 8.13.4 Sine Encoder with EnDat 2.1 (X1) . . . . .                            | 66   |
| 8.13.5 Sine Encoder with EnDat 2.2 (X1) . . . . .                            | 67   |
| 8.13.6 Sine Encoder with HIPERFACE (X1) . . . . .                            | 68   |
| 8.13.7 Sine Encoder with SSI (X5, X1) . . . . .                              | 69   |
| 8.13.8 Sine Encoder without data channel (X1). . . . .                       | 70   |
| 8.13.9 Sine Encoder with Hall (X1) . . . . .                                 | 71   |
| 8.13.10 ROD (AquadB) 5V, 1.5 MHz (X1) . . . . .                              | 72   |
| 8.13.11 ROD (AquadB) 5V, 350 kHz (X1) . . . . .                              | 73   |
| 8.13.12 ROD (AquadB) 5V with Hall (X1) . . . . .                             | 74   |
| 8.13.13 ROD (AquadB) 5V (X5). . . . .                                        | 75   |
| 8.13.14 ROD (AquadB) 5V with Hall (X5, X1) . . . . .                         | 76   |
| 8.13.15 ROD (AquadB) 24V (X3). . . . .                                       | 77   |
| 8.13.16 ROD (AquadB) 24V with Hall (X3, X1) . . . . .                        | 78   |
| 8.13.17 SSI Encoder (X5, X1) . . . . .                                       | 79   |
| 8.13.18 Hall sensors (X1). . . . .                                           | 80   |
| 8.14 Electronic Gearing, Master-slave operation . . . . .                    | 81   |
| 8.14.1 Signal source. . . . .                                                | 81   |
| 8.14.2 Connection to stepper motor controllers (step and direction). . . . . | 82   |
| 8.14.2.1 Step/Direction 5V, 1.5 MHz (X1). . . . .                            | 82   |
| 8.14.2.2 Step/Direction 24V, 100 kHz (X3). . . . .                           | 82   |
| 8.14.2.3 Step/Direction 5V, 1.5 MHz (X5). . . . .                            | 83   |
| 8.14.3 Master-Slave Connection . . . . .                                     | 84   |
| 8.14.3.1 Master Slave 5V (X1) . . . . .                                      | 84   |
| 8.14.3.2 Master Slave 5V (X5) . . . . .                                      | 84   |
| 8.15 Encoder emulation . . . . .                                             | 85   |
| 8.15.1 Incremental encoder output - A quad B (X5) . . . . .                  | 85   |
| 8.15.2 SSI encoder output (X5) . . . . .                                     | 86   |

|                                                                      | page |
|----------------------------------------------------------------------|------|
| 8.16 Digital and analog inputs and outputs . . . . .                 | 87   |
| 8.16.1 Analog inputs (X3) . . . . .                                  | 87   |
| 8.16.2 Digital inputs (X3/X4) . . . . .                              | 88   |
| 8.16.3 Digital outputs (X3) . . . . .                                | 89   |
| 8.17 RS232 interface, PC connection (X6) . . . . .                   | 90   |
| 8.18 CANopen interface (X6) . . . . .                                | 91   |
| <b>9 Setup</b>                                                       |      |
| 9.1 Safety Instructions . . . . .                                    | 93   |
| 9.2 Setup software . . . . .                                         | 94   |
| 9.2.1 General . . . . .                                              | 94   |
| 9.2.1.1 Use as directed . . . . .                                    | 94   |
| 9.2.1.2 Software description . . . . .                               | 94   |
| 9.2.1.3 Hardware requirements . . . . .                              | 95   |
| 9.2.1.4 Operating systems . . . . .                                  | 95   |
| 9.2.2 Installation under WINDOWS . . . . .                           | 95   |
| 9.3 Quickstart . . . . .                                             | 96   |
| 9.3.1 Preparation . . . . .                                          | 96   |
| 9.3.1.1 Unpacking, Mounting and Wiring the Servo Amplifier . . . . . | 96   |
| 9.3.1.2 Documents . . . . .                                          | 96   |
| 9.3.1.3 Minimum Wiring for Drive Test . . . . .                      | 97   |
| 9.3.2 Connect . . . . .                                              | 98   |
| 9.3.3 Important Screen Elements . . . . .                            | 99   |
| 9.3.4 Setup Wizard . . . . .                                         | 100  |
| 9.3.4.1 Basic Setup . . . . .                                        | 100  |
| 9.3.4.2 Units/Mechanical . . . . .                                   | 101  |
| 9.3.4.3 Motor (rotary) / Feedback . . . . .                          | 102  |
| 9.3.4.4 Motor (linear) / Feedback (Encoder) . . . . .                | 102  |
| 9.3.4.5 Save Parameters and Restart . . . . .                        | 103  |
| 9.3.5 Motion Service (Jog Mode) . . . . .                            | 103  |
| 9.3.6 More Setup Screens . . . . .                                   | 104  |
| 9.4 Multi-axis system . . . . .                                      | 105  |
| 9.4.1 Station address for CAN-bus . . . . .                          | 105  |
| 9.4.2 Baud rate for CAN-bus . . . . .                                | 105  |
| 9.5 Keypad operation / LED display . . . . .                         | 105  |
| 9.5.1 Keypad operation . . . . .                                     | 106  |
| 9.5.2 Status display . . . . .                                       | 106  |
| 9.5.3 Standard menu . . . . .                                        | 106  |
| 9.5.4 Advanced menu . . . . .                                        | 107  |
| 9.6 Error messages . . . . .                                         | 108  |
| 9.7 Warning messages . . . . .                                       | 109  |
| 9.8 Trouble Shooting . . . . .                                       | 110  |

**10 Expansions Cards**

|        |                                                                        |     |
|--------|------------------------------------------------------------------------|-----|
| 10.1   | Guide to installation of expansion cards . . . . .                     | 111 |
| 10.2   | Expansion card -I/O-14/08- . . . . .                                   | 112 |
| 10.2.1 | Technical data . . . . .                                               | 112 |
| 10.2.2 | LEDs . . . . .                                                         | 112 |
| 10.2.3 | Entering a motion block number (example) . . . . .                     | 112 |
| 10.2.4 | Connector assignments . . . . .                                        | 113 |
| 10.2.5 | Connection diagram (default) . . . . .                                 | 114 |
| 10.3   | Expansion card -PROFIBUS- . . . . .                                    | 115 |
| 10.3.1 | Connection technology . . . . .                                        | 115 |
| 10.3.2 | Connection diagram . . . . .                                           | 115 |
| 10.4   | Expansion card -SERCOS- . . . . .                                      | 116 |
| 10.4.1 | LEDs . . . . .                                                         | 116 |
| 10.4.2 | Connection technology . . . . .                                        | 116 |
| 10.4.3 | Connection diagram . . . . .                                           | 117 |
| 10.4.4 | Modifying the station address . . . . .                                | 117 |
| 10.4.5 | Modifying the baud rate and optical power . . . . .                    | 117 |
| 10.5   | Expansion card -DEVICENET- . . . . .                                   | 118 |
| 10.5.1 | Connection technology . . . . .                                        | 118 |
| 10.5.2 | Connection diagram . . . . .                                           | 118 |
| 10.5.3 | Combined module/network status-LED . . . . .                           | 119 |
| 10.5.4 | Setting the station address (device address) . . . . .                 | 119 |
| 10.5.5 | Setting the transmission speed . . . . .                               | 119 |
| 10.5.6 | Bus cable . . . . .                                                    | 120 |
| 10.6   | Expansion card -SYNQNET- . . . . .                                     | 121 |
| 10.6.1 | NODE ID Switch . . . . .                                               | 121 |
| 10.6.2 | Node LED table . . . . .                                               | 121 |
| 10.6.3 | SynqNet Connection, Connector X21B/C (RJ-45) . . . . .                 | 121 |
| 10.6.4 | Digital inputs/outputs, connector X21A (SubD 15-pin, socket) . . . . . | 122 |
| 10.6.5 | Connection diagram digital inputs/outputs, connector X21A . . . . .    | 122 |
| 10.7   | Expansion module -2CAN- . . . . .                                      | 123 |
| 10.7.1 | Installation . . . . .                                                 | 123 |
| 10.7.2 | Connection technology . . . . .                                        | 123 |
| 10.7.3 | Connector assignments . . . . .                                        | 124 |
| 10.7.4 | Connection diagram . . . . .                                           | 124 |
| 10.8   | Option "EtherCAT" . . . . .                                            | 125 |
| 10.8.1 | Node LED tabl . . . . .                                                | 125 |
| 10.8.2 | Connection diagram . . . . .                                           | 125 |
| 10.9   | Option "FAN", ventilator control . . . . .                             | 126 |
| 10.10  | Option "EF", ventilator control and EtherCAT . . . . .                 | 126 |

**11 Appendix**

|        |                                                 |     |
|--------|-------------------------------------------------|-----|
| 11.1   | Glossary . . . . .                              | 127 |
| 11.2   | Order codes . . . . .                           | 129 |
| 11.2.1 | Servo amplifiers . . . . .                      | 129 |
| 11.2.2 | Expansion cards . . . . .                       | 129 |
| 11.2.3 | Mating connectors . . . . .                     | 129 |
| 11.3   | Repair-/Disposal request Telefax form . . . . . | 130 |
| 11.4   | Index . . . . .                                 | 131 |

# 1 General

## 1.1 About this manual

This manual describes the S300 series of digital servo amplifiers SERVOSTAR 300 (S300 standard version, 1.5A ...10A rated current).

A more detailed description of the expansion cards that are currently available and the digital connection to automation systems can be found, together with our applications notes, in Acrobat-Reader format on the accompanying CD-ROM (system requirements: WINDOWS, Internet Browser, Acrobat Reader) in different languages.

Technical data and dimensional drawings of accessories such as cables, brake resistors, mains supplies, etc., can be found in the accessories manual.

This documentation can be printed out on any standard commercial printer. A printed copy of the documentation is available from us at extra cost.

More background information can be found in the "Product WIKI", please check [www.wiki-kollmorgen.eu](http://www.wiki-kollmorgen.eu).

## 1.2 Target group

This manual addresses personnel with the following qualifications:

Transport : only by personnel with knowledge of handling electrostatically sensitive components.

Unpacking: only by electrically qualified personnel.

Installation : only by electrically qualified personnel.

Setup : only by qualified personnel with extensive knowledge of electrical engineering and drive technology

The qualified personnel must know and observe the following standards:

IEC 60364 and IEC 60664

national accident prevention regulations

**⚠ WARNING** During operation there are deadly hazards, with the possibility of death, severe injury or material damage. The operator must ensure that the safety instructions in this manual are followed. The operator must ensure that all personnel responsible for working with the servo amplifier have read and understood the Instructions Manual.

## 1.3 Hints for the online edition (PDF format)

### Bookmarks:

Table of contents and index are active bookmarks.

### Table of contents and index in the text:

The lines are active cross references. Click on the desired line and the appropriate page is accessed.

### Page/chapter numbers in the text:

Page/chapter numbers with cross references are active. Click at the page/chapter number to reach the indicated target.

## 1.4

## Abbreviations used

| Abbrev.                    | Meaning                                               |
|----------------------------|-------------------------------------------------------|
| AGND                       | Analog ground                                         |
| BTB/RTO                    | Ready to operate                                      |
| CAN                        | Fieldbus (CANopen)                                    |
| CE                         | Communauté Européenne                                 |
| CLK                        | Clock signal                                          |
| COM                        | Serial interface for a PC-AT                          |
| DGND                       | Digital ground (for 24V and digital I/O)              |
| DIN                        | German Institute for Industrial Standards             |
| Disk                       | Magnetic storage (diskette, hard disk)                |
| EEPROM                     | Electrically erasable programmable memory             |
| EMC                        | Electromagnetic compatibility                         |
| EMI                        | Electromagnetic interference                          |
| EN                         | European Standard                                     |
| ESD                        | Electrostatic discharge                               |
| F-SMA                      | Fiber Optic Cable connector according to IEC 60874-2  |
| IEC                        | International Electrotechnical Commission             |
| IGBT                       | Insulated-gate bipolar transistor                     |
| INC                        | Incremental interface                                 |
| ISO                        | International Organization for Standardization        |
| LED                        | Light-emitting diode                                  |
| MB                         | Megabyte                                              |
| NI                         | Zero pulse                                            |
| PC                         | Personal computer                                     |
| PELV                       | Protected low voltage                                 |
| PLC                        | Programmable logic controller                         |
| PWM                        | Pulse-width modulation                                |
| RAM                        | Volatile memory                                       |
| RBallast / R <sub>BR</sub> | Ballast resistor (= brake resistor or regen resistor) |
| RBext                      | External brake resistor                               |
| RBint                      | Internal brake resistor                               |
| RES                        | Resolver                                              |
| ROD                        | digital encoder                                       |
| S1                         | continuous operation                                  |
| S3                         | Intermittent operation                                |
| SRAM                       | Static RAM                                            |
| SSI                        | Synchronous serial interface                          |
| STO                        | Safe torque off, restart lock                         |
| UL                         | Underwriters Laboratories                             |
| V AC                       | Alternating voltage                                   |
| V DC                       | DC voltage                                            |
| VDE                        | Society of German Electrical Technicians              |

## 1.5 Symboles used

| Symbol                                                                                           | Indication                                                                                       |
|--------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
|  <b>DANGER</b>  | Indicates a hazardous situation which, if not avoided, will result in death or serious injury.   |
|  <b>WARNING</b> | Indicates a hazardous situation which, if not avoided, could result in death or serious injury.  |
|  <b>CAUTION</b> | Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. |
|  <b>NOTICE</b>  | Indicates situations which, if not avoided, could result in property damage.                     |
|  <b>NOTE</b>    | This is not a safety symbol.<br>This symbol indicates important notes.                           |

## 1.6 Standards used

| Standard  | Content                                                                                                                  |
|-----------|--------------------------------------------------------------------------------------------------------------------------|
| ISO 4762  | Hexagon socket head cap screws                                                                                           |
| ISO 11898 | Road vehicles — Controller area network (CAN)                                                                            |
| ISO 13849 | Safety of machinery: Safety-related parts of control systems                                                             |
| ISO 12100 | Safety of machinery: Basic concepts, general principles for design                                                       |
| IEC 60085 | Electrical insulation - Thermal evaluation and designation Maintenance                                                   |
| IEC 60204 | Safety of Machinery: Electrical equipment of machinery                                                                   |
| IEC 60364 | Low-voltage electrical installations                                                                                     |
| IEC 60439 | Low-Voltage Switchgear and Controlgear Assemblies                                                                        |
| IEC 60529 | Protection categories by housing (IP Code)                                                                               |
| IEC 60664 | Insulation coordination for equipment within low-voltage systems                                                         |
| IEC 60721 | Classification of environmental conditions                                                                               |
| IEC 61000 | Electromagnetic compatibility (EMC)                                                                                      |
| IEC 61131 | Programmable controllers                                                                                                 |
| IEC 61491 | Electrical equipment of industrial machines – Serial data link for real-time communications between controls and drives. |
| IEC 61508 | Functional safety of electrical/electronic/programmable electronic safety-related systems                                |
| IEC 61800 | Adjustable speed electrical power drive systems                                                                          |
| IEC 62061 | Functional safety of electrical/electronic/programmable electronic safety-related systems                                |
| IEC 62079 | Preparation of instructions - Structuring, content and presentation                                                      |
| ANSI Z535 | Product safety (symbols, colors, information)                                                                            |
| UL 840    | UL Standard for Safety for Insulation Coordination Including Clearances and Creepage Distances for Electrical Equipment  |
| UL 508C   | UL Standard for Safety Power Conversion Equipment                                                                        |

ANSI American National Standard Institute, Inc.

IEC International Electrotechnical Commission

ISO International Organization for Standardization

UL Underwriters Laboratories

## 2 Safety

### 2.1 Safety Instructions

#### **⚠ DANGER**

During operation there are deadly hazards, with the possibility of death, severe injury or material damage. Do not open or touch the equipment during operation. Keep all covers and cabinet doors closed during operation. Touching the equipment is allowed during installation and commissioning for properly qualified persons only.

- During operation, servo amplifiers may have uncovered live components, depending on their level of enclosure protection.
- Control and power connections may be live, even though the motor is not rotating.
- Servo amplifiers may have hot surfaces during operation. Surface can reach temperatures above 80°C.

#### **⚠ WARNING**

There is a danger of electrical arcing with damage to contacts and personal injury. Never undo any electrical connections to the servo amplifier while it is live. Wait at least five minutes after disconnecting the servo amplifier from the main supply power before touching potentially live sections of the equipment (e.g. contacts) or undoing any connections. Capacitors can still have dangerous voltages present up to five minutes after switching off the supply power. To be sure, measure the voltage in the DC Bus link and wait until it has fallen below 40V.

#### **⚠ CAUTION**

Incorrect handling of the servo amplifier can lead to personal injury or material damage. Read this documentation before carrying out the installation and commissioning. It is vital that you keep to the technical data and information on connection requirements (nameplate and documentation). Only properly qualified personnel are permitted to carry out activities such as transport, installation, commissioning and maintenance. Properly qualified persons are those who are familiar with the transport, assembly, installation, commissioning and operation of the product, and who have the appropriate qualifications for their job. The qualified personnel must know and observe the following standards:

- IEC 60364 and IEC 60664
- national accident prevention regulations

#### **⚠ CAUTION**

The manufacturer of the machine must produce a risk assessment for the machine and take appropriate measures to ensure that unforeseen movements do not result in personal injury or material damage.

#### **NOTICE**

Check the Hardware Revision Number of the product (see product label). This revision number must match the Hardware Revision Number on the cover page of the manual.

#### **NOTICE**

The servo amplifiers contain electrostatically sensitive components which may be damaged by incorrect handling. Discharge your body before touching the servo amplifier. Avoid contact with highly insulating materials (artificial fabrics, plastic film etc.). Place the servo amplifier on a conductive surface.

## 2.2 Use as directed

Servo amplifiers are safety components that are built into electrical plant or machines, and can only be operated as integral components of such plant or machines.

The manufacturer of the machine must generate a risk assessment for the machine, and take appropriate measures to ensure that unforeseen movements cannot cause injury or damage to any person or property.

If the servo amplifiers are used in residential areas, in business/commercial areas, or in small industrial operations, then additional filter measures must be implemented by the user.

### Cabinet and Wiring

The servo amplifiers must **only** be operated in a closed control cabinet, taking into account the ambient conditions defined on page 26. Ventilation or cooling may be necessary to keep the temperature within the cabinet below 40°C.

Use only copper conductors for wiring. The conductor cross-sections can be derived from the standard IEC 60204 (alternatively for AWG cross-sections: NEC Table 310-16, 60°C or 75°C column).

### Power supply

Servo amplifiers in the S300 series (overvoltage category III acc. to EN 61800-5-1) can be supplied from 3-phase grounded (earthed) industrial supply networks (TN-system, TT-system with grounded neutral point, no more than 42kA symmetrical rated current at 110-10%...230V<sup>+10%</sup> or 208-10%...480V<sup>+10%</sup> depending on the amplifier type). Connection to other types of supply networks (with an additional isolating transformer) is described on page 56.

Periodic overvoltage between phases (L1, L2, L3) and the housing of the servo amplifier must not exceed 1000V crest. In accordance with IEC 61800, voltage spikes (< 50µs) between phases must not exceed 1000V. Voltage spikes (< 50µs) between a phase and the housing must not exceed 2000V.

### Motors

The S300 family of servo amplifiers is **exclusively** intended for driving suitable brush less synchronous servomotors or asynchronous motors with control of torque, speed and/or position.

The rated voltage of the motors must be at least as high as the DC bus link voltage divided by  $\sqrt{2}$  produced by the servo amplifier ( $U_{nMotor} \geq U_{DC}/\sqrt{2}$ ).

### Safety

Observe the chapter "use as directed" on page 36 when you use the safety function STO.

**2.3****Prohibited use**

Other use than described in chapter 2.2 is not intended and can lead to damage of persons, equipment or things.

The use of the servo amplifier in the following environments is prohibited:

- potentially explosive areas
- environments with corrosive and/or electrically conductive acids, alkaline solutions, oils, vapors, dusts
- directly on non-grounded supply networks or on asymmetrically grounded supplies with a voltage >230V.
- on ships or off-shore applications

Commissioning the servo amplifier is prohibited if the machine in which it was installed,

- does not meet the requirements of the EC Machinery Directive
- does not comply with the EMC Directive or with the Low Voltage Directive
- does not comply with any national directives

The control of holding brakes by the S300 alone may not be used in applications, where personnel security is to be ensured with the brake.

## 3 Approvals

Certificates can be found in our Product Wiki on page [Approvals](#).

### 3.1 Conformance with UL and cUL

This servo amplifier is listed under UL file number **E217428**.

UL (cUL)-certified servo amplifiers (Underwriters Laboratories Inc.) fulfil the relevant U.S. and Canadian standard (in this case UL 840 and UL 508C).

This standard describes the fulfillment by design of minimum requirements for electrically operated power conversion equipment, such as frequency converters and servo amplifiers, which is intended to eliminate the risk of fire, electric shock, or injury to persons, being caused by such equipment. The technical conformance with the U.S. and Canadian standard is determined by an independent UL (cUL) inspector through the type testing and regular checkups.

Apart from the notes on installation and safety in the documentation, the customer does not have to observe any other points in direct connection with the UL (cUL)-certification of the equipment.

#### UL 508C

UL 508C describes the fulfillment by design of minimum requirements for electrically operated power conversion equipment, such as frequency converters and servo amplifiers, which is intended to eliminate the risk of fire being caused by such equipment.

#### UL 840

UL 840 describes the fulfillment by design of air and insulation creepage spacings for electrical equipment and printed circuit boards.

#### UL Markings

- Use 60/75°C copper wire only for every model of this section.
- Tightening torque for field wiring terminals see page 25
- Use in a pollution degree 2 environment.
- Use Class 1 wire only or equivalent.
- Suitable for use on a circuit capable of delivering not more than 42kA rms symmetrical amperes for a max. voltage of 480 V.

## 3.2 EC Conformance

Conformance with the EC Machine Directive 2006/42/EC, the EC EMC Directive 2004/108/EC and the Low Voltage Directive 2006/95/EC is mandatory for the supply of servo amplifiers within the European Community.

The servo amplifier meets the noise immunity requirements to the 2nd environmental category (industrial environment). For noise emission the amplifier meets the requirement to a product of the category C2 (motor cable  $\leq 10\text{m}$ ).

### NOTICE

**This product can cause high-frequency interferences in non industrial environments which can require measures for interference suppression.**

With a motor cable length of 10m or longer, the servo amplifier meets the requirement to the category C3.

The servo amplifiers have been tested by an authorized testing laboratory in a defined configuration, using the system components that are described in this documentation. Any divergence from the configuration and installation described in this documentation means that you will be responsible for carrying out new measurements to ensure conformance with regulatory requirements.

### 3.2.1 European Directives and Standards for the machine builder

Servo amplifiers are safety components that are intended to be incorporated into electrical plant and machines for industrial use. When the servo amplifiers are built into machines or plant, the amplifier must not be used until it has been established that the machine or equipment fulfills the requirements of the

- EC Machinery Directive (2006/42/EC)
- EC EMC Directive (2004/108/EC)
- EC Low Voltage Directive (2006/95/EC)

Standards to be applied for conformance with the EC Machinery Directive (2006/42/EC)  
EN 60204-1 (Safety and Electrical Equipment in Machines)  
EN 12100 (Safety of Machines)

### CAUTION

**The manufacturer of the machine must generate a risk assessment for the machine, and must implement appropriate measures to ensure that unforeseen movements cannot cause injury or damage to any person or property. The machine/plant manufacturer must check whether other standards or EC Directives must be applied to the machine/plant.**

Standards to be applied for conformance with the Low Voltage Directive (2006/95/EC):  
EN 60204-1 (Safety and Electrical Equipment in Machines)  
EN 60439-1 (Low-voltage switchgear and controlgear assemblies)

Standards to be applied for conformance with the EMC Directive (2004/108/EC):  
EN 61000-6-1 / 2 (Interference Immunity in Residential & Industrial Areas)  
EN 61000-6-3 / 4 (Interference Generation in Residential & Industrial Areas)

The manufacturer of the machine/plant is responsible for ensuring that it meets the limits required by the EMC regulations. Advice on the correct installation for EMC can be found in this documentation.

We only guarantee the conformance of the servo system with the standards cited in this chapter if the components (motor, cables, chokes etc.) are those supplied by us.

## 3.2.2


## EC Declaration of Conformity

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                                                                      |                                 |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|---------------------------------|
| <b>EC Declaration of Conformity</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                      | <b>KOLLMORGEN</b> <sup>TM</sup> |
| Document No.: GL-11/22/48/10                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                      |                                 |
| We, the company                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                                                                      |                                 |
| Kollmorgen Europe GmbH<br>Pempelfurtstraße 1<br>D-40880 Ratingen                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                                                      |                                 |
| hereby in sole responsibility declare the conformity of the product series                                                                                                                                                                                                                                                                                                                                                                                                                   |                                                                                      |                                 |
| <b>Servo drive SERVOSTAR 300 (S300)</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                                                                                      |                                 |
| with the following standards:                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                                                                                      |                                 |
| <ul style="list-style-type: none"><li>- EC Directive 2006/42/EG<br/>Directive for machinery<br/>Used harmonized standards<br/>EN 61800-5-2 (04/2008)<br/>EN ISO 13849-1 (07/2007)<br/>EN ISO 13849-2 (12/2003)</li><li>- EC Directive 2004/108/EC<br/>Electromagnetic compatibility<br/>Used harmonized standard EN61800-3 (07/2005)</li><li>- EC Directive 2006/95/EC<br/>Electrical devices for use in special voltage limits<br/>Used harmonized standard EN61800-5-1 (04/2008)</li></ul> |                                                                                      |                                 |
| Year of EC-Declaration                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | 2004                                                                                 |                                 |
| Issued by:                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Product Manager Drives Europe<br>Holger Goergen<br>Ratingen, 01.12.2010              |                                 |
| Legally valid signature                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |  |                                 |
| The above-mentioned company has the following technical documentation for examination:                                                                                                                                                                                                                                                                                                                                                                                                       |                                                                                      |                                 |
| <ul style="list-style-type: none"><li>- Proper operating instructions</li><li>- Setup Software</li><li>- Diagrams / software source codes (for EU authority only)</li><li>- Test certificates (for EU authority only)</li><li>- Other technical documentation (for EU authority only)</li></ul>                                                                                                                                                                                              |                                                                                      |                                 |
| The special technical product documentation has been created.                                                                                                                                                                                                                                                                                                                                                                                                                                |                                                                                      |                                 |
| Responsible person for documentation: Lars Lindner, Phone: +49(0)2102/9394-0                                                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                      |                                 |

## 3.3

## GOST-R conformance

Certificate for servo amplifier and accessories (cover page, page 1 of 3).

|                                                                                                                                                                                                                                                                                |                                                                                                                                                                                                         |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>СИСТЕМА СЕРТИФИКАЦИИ ГОСТ Р</b><br><b>ФЕДЕРАЛЬНОЕ АГЕНТСТВО ПО ТЕХНИЧЕСКОМУ РЕГУЛИРОВАНИЮ И МЕТРОЛОГИИ</b>                                                                                                                                                                  |                                                                                                                                                                                                         |
|                                                                                                                                                                                               | <b>СЕРТИФИКАТ СООТВЕТСТВИЯ</b>                                                                                                                                                                          |
| № РОСС DE.AГ26.H00028                                                                                                                                                                                                                                                          |                                                                                                                                                                                                         |
| Срок действия с 04.07.2011                                                                                                                                                                                                                                                     | по 03.07.2014                                                                                                                                                                                           |
| № <b>0630022</b>                                                                                                                                                                                                                                                               |                                                                                                                                                                                                         |
| <b>ОРГАН ПО СЕРТИФИКАЦИИ</b><br>РОСС RU.0001.11AГ26<br>"РЕГИОНАЛЬНЫЙ ЦЕНТР СЕРТИФИКАЦИИ, ЭКСПЕРТИЗЫ И ДЕКЛАРИРОВАНИЯ"<br>121099, г.Москва, Новинский бульвар, д.8. тел. (495) 792-99-80 доп.130                                                                                |                                                                                                                                                                                                         |
| <b>ПРОДУКЦИЯ</b><br>преобразователи частоты (сервоусилители) серий Servostar 6xx-yy, Servostar S40zy-yy, S3xxxx-yy, S7xxxx-yy, yzyz-yz и AKD-P0xx0x-NAyy-yxxx с комплектующими согласно приложению к сертификату на двух листах, бланки № 0473018 - № 0473019, серийный выпуск |                                                                                                                                                                                                         |
| код ОК 005 (ОКП):<br>340000                                                                                                                                                                                                                                                    |                                                                                                                                                                                                         |
| <b>СООТВЕТСТВУЕТ ТРЕБОВАНИЯМ НОРМАТИВНЫХ ДОКУМЕНТОВ</b><br>ГОСТ 12.2.007.0-75, ГОСТ 12.2.007.11-75, ГОСТ 26830-86                                                                                                                                                              |                                                                                                                                                                                                         |
| код ТН ВЭД России:<br>8504                                                                                                                                                                                                                                                     |                                                                                                                                                                                                         |
| <b>ИЗГОТОВИТЕЛЬ</b><br>"Kollmorgen Europe GmbH", Pempelfurtstr. 1, 40880 Ratingen, Германия<br>(Заводы изготовители согласно приложению к сертификату.)                                                                                                                        |                                                                                                                                                                                                         |
| <b>СЕРТИФИКАТ ВЫДАН</b><br>"Kollmorgen Europe GmbH",<br>Pempelfurtstr. 1, 40880 Ratingen, Германия                                                                                                                                                                             |                                                                                                                                                                                                         |
| <b>НА ОСНОВАНИИ</b><br>протокола испытаний ИЛЭ ОАО "ВНИИС"<br>(аттестат аккредитации РОСС RU.0001.21MJ55)<br>№ 215/11 от 22.06.2011г.                                                                                                                                          |                                                                                                                                                                                                         |
| <b>ДОПОЛНИТЕЛЬНАЯ ИНФОРМАЦИЯ</b><br>Схема сертификации 3. Продукция маркируется знаком соответствия. Форма и размеры знака по ГОСТ Р 50460-92. Сертификат без приложений не действителен.                                                                                      |                                                                                                                                                                                                         |
|                                                                                                                                                                                             | Руководитель органа <br>Эксперт  |
| Б.А.Третьяков<br>инициалы, фамилия<br>С.Н.Абрамова<br>инициалы, фамилия                                                                                                                                                                                                        |                                                                                                                                                                                                         |
| Сертификат не применяется при обязательной сертификации                                                                                                                                                                                                                        |                                                                                                                                                                                                         |

Бланк разработан ЗАО "СПЕЦИМ", www.specim.ru, разрешение № 05-09-003 ФНС РФ ул.Вильгельм-Бауэри, 51 тел. (495) 726-4742, г. Москва, 2011 г.

## 4 Handling

### 4.1 Transport

- Transport by qualified personnel in the manufacturer's original recyclable packaging
- Avoid shocks while transporting
- Transport temperature: -25 to +70°C, max. rate of change 20K / hour, class 2K3 acc. to EN61800-2
- Transport humidity: max. 95% relative humidity, no condensation, class 2K3 acc. to EN61800-2

#### NOTICE

- **The servo amplifiers contain electrostatically sensitive components, that can be damaged by incorrect handling. Discharge yourself before touching the servo amplifier. Avoid contact with highly insulating materials, such as artificial fabrics and plastic films. Place the servo amplifier on a conductive surface.**
- If the packaging is damaged, check the unit for visible damage. In such an event, inform the shipper and the manufacturer.

### 4.2 Packaging

- Recyclable cardboard with inserts
- Dimensions: (HxWxD) 115x365x275mm
- Labeling: instrument label on outside of box

### 4.3 Storage

- Storage only in the manufacturer's original recyclable packaging
- Max. stacking height 8 cartons
- Storage temperature -25 to +55°C, max. rate of change 20K / hour, class 1K4 acc. to EN61800-2
- Storage humidity 5 ... 95% relative humidity, no condensation, class 1K3 acc. to EN61800-2
- Storage duration:  
Less than 1 year: without restriction.  
More than 1 year: capacitors must be **re-formed** before setting up and operating the servo amplifier. To do this, remove all electrical connections and apply single-phase 230V AC for about 30 minutes to the terminals L1 / L2.

### 4.4 Maintenance, Cleaning

The instruments do not require any maintenance, opening the instruments invalidates the warranty.

**Cleaning :** — if the casing is dirty: clean with Isopropanol or similar

**NOTICE: do not immerse or spray**

— Dirt inside the unit: must be cleaned by the manufacturer

— For dirty protective grill on fan: clean with a dry brush

## 4.5 Disassembling

Observe the sequence below, if a servo amplifier has to be disassembled (e.g. for replacement).

### 1. Electrical disconnection



#### **WARNING**

Switch off the main switch of the switchgear cabinet and the fuses that supply the system.

Wait at least five minutes after disconnecting the servo amplifier from the main supply power before touching potentially live sections of the equipment (e.g. contacts) or undoing any connections. To be sure, measure the voltage in the DC Bus link and wait until it has fallen below 40V.

Remove the connectors. Disconnect the earth (ground) connection at last.

### 2. Check temperature



#### **CAUTION**

During operation the heat sink of the servo amplifier may reach temperatures above 80°C (176°F). Before touching the device, check the temperature and wait until it has cooled down below 40°C (104°F).

### 3. Disassembling

Disassemble the servo amplifier (reverse of the procedure described in chapter "Mechanical installation").

## 4.6 Repair

Repair of the servo amplifier must be done by the manufacturer. Opening the devices means loss of the guarantee. Use the telefax form on page 130 for repair request. You'll receive the current dispatch information.

Disassemble the equipment as described in chapter 4.5 and send it in the original packaging to the address given in the dispatch information.

## 4.7 Disposal

In accordance to the WEEE-2002/96/EC-Guidelines we take old devices and accessories back for professional disposal. Transport costs are the responsibility of the sender. Use the telefax form on page 130 for disposal request. You'll receive the current dispatch information.

Disassemble the equipment as described in chapter 4.5 and send it in the original packaging to the address given in the dispatch information.

## 5 Package

### 5.1 Package supplied

When an amplifier from the S300 series is ordered (order numbers ⇒ p.129), the following is supplied:

- S3xx
- Mating connectors X0, X3, X4, X8
- Mating connector X9 only with SERVOSTAR 303-310 (S3xx6)
- Instructions Manual
- Online documentation on CD-ROM
- Setup software DRIVEGUI.EXE on CD-ROM

#### NOTE

The mating SubD connectors are not part of the package!

**Accessories :** (must be ordered separately, if required; description see accessories manual)

- motor cable (prefabricated) with special shield clamp, or both power connectors separately, with the motor cable as a cut-off length
- feedback cable (prefabricated)  
or both feedback connectors separately, with the feedback cable as a cut-off length
- motor choke 3YL, for motor cables longer than 25 meters
- external brake resistor BAR(U)
- communication cable to the PC (⇒ p.90) for setting parameters from a PC
- power cable, control cables, fieldbus cables (as cut-off lengths)


### 5.2 Nameplate

The nameplate depicted below is attached to the side of the servo amplifier.  
The information described below is printed in the individual fields.

| Servo amplifier type                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Serial number                       | Comments                          | Enclosure Rating     |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------|-----------------------------------|----------------------|
| <div style="display: flex; justify-content: space-between;"> <div>           Kollmorgen Europe GmbH<br/>           Pempelfurtstraße 1<br/>           D-40880 Ratingen<br/>           www.kollmorgen.com<br/> <b>Typenbezeichnung</b> </div> <div> <b>Customer Support</b><br/>           Europe Tel. +49 (0)2102 / 93940<br/>           Italy Tel. +39 0362 / 594260<br/>           North America Tel. +1 540 633 3545<br/> <b>Model Number</b> </div> <div> <b>Ser. Nr</b><br/>           123456789         </div> <div> <b>Ser. No.</b><br/>           S31061-NA         </div> <div> <b>Bemerkung</b><br/>           Comment         </div> </div> |                                     |                                   |                      |
| <div style="display: flex; justify-content: space-between;"> <div> <b>SERVOSTAR™ 310</b> </div> <div> <b>123456789</b> </div> <div> <b>S31061-NA</b> </div> </div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                                     |                                   |                      |
| <div style="display: flex; justify-content: space-between;"> <div> <b>Spannungsversorgung</b><br/>           1x110-230V, 3x115-230V 50/60Hz 4kVA         </div> <div> <b>Power Supply</b><br/>           10A         </div> <div> <b>Nennstrom</b><br/>           10A         </div> <div> <b>Nom. Current</b><br/>           10A         </div> <div> <b>Schutzart</b><br/>           IP20         </div> <div> <b>Encl. Rating</b><br/>           IP20         </div> </div>                                                                                                                                                                        |                                     |                                   |                      |
| <div style="display: flex; justify-content: space-between;"> <div> <b>Umgebungstemp.</b><br/>           Ambient temp. 40°C         </div> <div> <b>Hardware Revision</b><br/>           04.00         </div> </div>                                                                                                                                                                                                                                                                                                                                                                                                                                   |                                     |                                   |                      |
| <div style="display: flex; justify-content: space-between;"> <div> </div> <div> </div> </div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                     |                                   |                      |
| max. ambient temperature                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Electrical supply<br>Installed load | Output current<br>in S1 operation | Hardware<br>Revision |

## 5.3

## Part number scheme

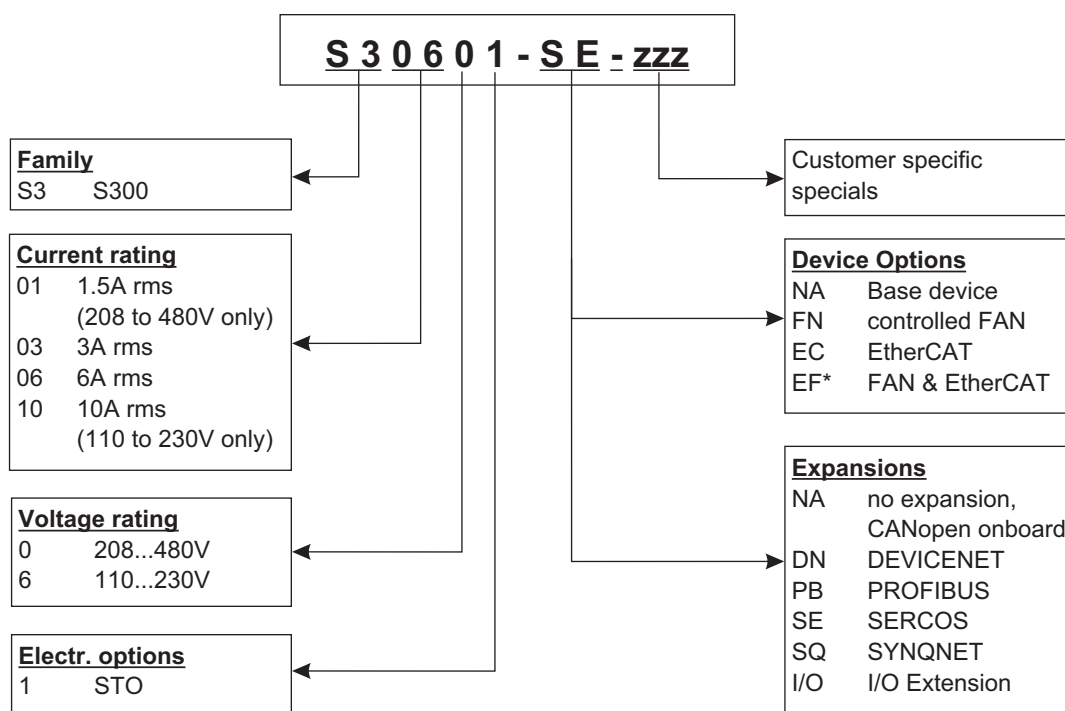

\*= in process

**NOTE**

Expansions and Device Options cannot be combined.

Comparison device name -> part number

| Device Name   | Part Number |
|---------------|-------------|
| SERVOSTAR 303 | S30361-NA   |
| SERVOSTAR 306 | S30661-NA   |
| SERVOSTAR 310 | S31061-NA   |
| SERVOSTAR 341 | S30101-NA   |
| SERVOSTAR 343 | S30301-NA   |
| SERVOSTAR 346 | S30601-NA   |

## 6 Technical description

### 6.1 The S300 family of digital servo amplifiers

#### Standard version

- Two voltage classes with large nominal voltage range  
1 x 110V<sub>-10%</sub> ... 3 x 230V<sup>+10%</sup> (SERVOSTAR 303-310, S3xx6)  
3 x 208V<sub>-10%</sub> ... 3 x 480V<sup>+10%</sup> (SERVOSTAR 341-346, S3xx0)
- Overvoltage category III acc. to EN 61800-5-1
- Shielding connection directly on the servo amplifier
- Two analog inputs onboard
- CANopen onboard (default: 500 kBaud), for integration in CAN-bus systems and for setting parameters for several drives via the PC interface of one of the amplifiers
- Slot for an expansion card
- RS232 and pulse direction interface onboard
- Restart lock STO for personnel safety onboard, ⇨ p. 35
- Intelligent position controller onboard
- Multi feedback support
- Synchronous servomotors, linear motors, asynchronous motors, high frequency spindles and DC motors can be used

#### Power section

- Directly on grounded 3-phase supply, 110V<sub>-10%</sub> or 230V<sub>-10%</sub> up to 480V<sup>+10%</sup>  
TN-network or TT-network with grounded neutral point, 42kA max. symmetrical current rating, connection to other supply types only via isolating transformer, ⇨ p.56
- B6 bridge rectifier, integral supply filter and soft-start circuit
- Single-phase supply operation possible (e.g. for setup)
- Fusing (e.g. fusible cutout) to be provided by the user
- Shielding All shielding connections are made directly on the amplifier
- Output stage IGBT module with floating current measurement
- Brake circuit with dynamic distribution of the regenerated power between several amplifiers on the same DC bus link circuit. Internal brake resistor as standard, external brake resistors if required.
- DC bus link voltage 135 ... 450 V DC or 260 ... 900 V DC,  
can be connected in parallel.
- Interference suppression filters are integrated for the electrical supply feed and the 24V auxiliary supply voltage (with motor cable ≤ 10m for C2 as per EN 61800-3, with motor cable > 10m for C3 as per EN 61800-3).

#### Integrated safety

- Appropriate insulation/creepage distances and electrical isolation ensure safe electrical separation, as per EN 61800-5-1, between the power input / motor connections and the signal electronics.
- Soft-start, overvoltage detection, short-circuit protection, phase-failure monitoring.
- Temperature monitoring of the servo amplifier and motor (if our motors and prefabricated cables are used).

**Auxiliary supply voltage 24V DC**

- Electrically isolated, internal fusing, from an external 24V DC power supply unit with, for instance, isolating transformer or uninterruptible power supply.

**Operation and parameter setting**

- With our user-friendly setup software, for setup via the serial interface of a PC.
- If no PC is available: direct operation by two keys on the servo amplifier and a 3-character LED display.
- Fully programmable via RS232 interface.

**Completely digital control**

- Digital current controller (space vector, pulse-width modulation, 62.5  $\mu$ s)
- Adjustable digital speed controller (62.5  $\mu$ s)
- Integrated position controller, with adaptation possibilities for all applications (250  $\mu$ s)
- Integrated step/direction interface for connecting a servomotor to a stepper controller
- Evaluation of resolver signals and sine-cosine signals of high-resolution encoders
- Encoder emulation (incremental, compatible with A quad B or SSI)

**Comfort functions**

- 2 programmable analog inputs
- 4 programmable digital inputs
- 2 programmable digital outputs
- programmable logical combinations of digital signals

**Device Options**

- Option EtherCAT, cannot be inserted later,  $\Rightarrow$  p. 125
- Option FAN, ventilator control, cannot be inserted later,  $\Rightarrow$  p.126
- Option EF, EtherCAT&FAN, cannot be inserted later,  $\Rightarrow$  p. 126

**Expansions**

- I/O-14/08 expansion card,  $\Rightarrow$  p.112
- PROFIBUS DP expansion card,  $\Rightarrow$  p.115
- SERCOS expansion card,  $\Rightarrow$  p.116
- DeviceNet expansion card,  $\Rightarrow$  p.118
- SynqNet expansion card,  $\Rightarrow$  p. 121
- -2CAN- expansion module, separated connectors for CAN-bus and RS232,  $\Rightarrow$  p.123
- Several third-party expansion cards (ModBus, LightBus, FIP-IO etc. please contact the manufacturer for further information)

## 6.2 Technical data

### 6.2.1 Technical data for 110/230 V (types S3\_ \_6\_)

|                                                                                       |       | SERVOSTAR                                                                                                                  |        |        |
|---------------------------------------------------------------------------------------|-------|----------------------------------------------------------------------------------------------------------------------------|--------|--------|
| Electrical data                                                                       | DIM   | 303                                                                                                                        | 306    | 310    |
| Order Code                                                                            | —     | S30361                                                                                                                     | S30661 | S31061 |
| Rated supply voltage<br>(grounded supply, phase to phase)                             | V~    | 1 x 110V <sup>-10%</sup> ... 1 x 230V <sup>+10%</sup><br>3 x 110V <sup>-10%</sup> ... 3 x 230V <sup>+10%</sup><br>50/60 Hz |        |        |
| Rated input power for S1 operation                                                    | kVA   | 1.1                                                                                                                        | 2.4    | 4      |
| Permitted switch on/off frequency                                                     | 1/h   | 30                                                                                                                         |        |        |
| Max. DC bus link voltage                                                              | V=    | 450                                                                                                                        |        |        |
| Rated output current (rms value, ± 3%)                                                |       |                                                                                                                            |        |        |
| at 1x115V (observe p. 58)                                                             | Arms  | 3,5*                                                                                                                       | 8*     | 10*    |
| at 1x230V (observe p. 58)                                                             | Arms  | 3*                                                                                                                         | 6*     | 10*    |
| at 3x115V                                                                             | Arms  | 3.5                                                                                                                        | 8      | 10     |
| at 3x230V                                                                             | Arms  | 3                                                                                                                          | 6      | 10     |
| Peak output current (current for approx. 5s, ± 3%)                                    |       |                                                                                                                            |        |        |
| at 1x115V (observe p. 58)                                                             | Arms  | 9*                                                                                                                         | 15*    | 20*    |
| at 1x230V (observe p. 58)                                                             | Arms  | 9*                                                                                                                         | 15*    | 20*    |
| at 3x115V                                                                             | Arms  | 9                                                                                                                          | 15     | 20     |
| at 3x230V                                                                             | Arms  | 9                                                                                                                          | 15     | 20     |
| Switching frequency of the output stage                                               | kHz   | 8                                                                                                                          |        |        |
| at reduced current (50%)                                                              | kHz   | 16 (in process)                                                                                                            |        |        |
| Voltage rise speed dU/dt (see hints on page 60!)                                      |       |                                                                                                                            |        |        |
| at 1x115V                                                                             | kV/μs | 3,0                                                                                                                        |        |        |
| at 1x230V                                                                             | kV/μs | 3,3                                                                                                                        |        |        |
| at 3x115V                                                                             | kV/μs | 3,0                                                                                                                        |        |        |
| at 3x230V                                                                             | kV/μs | 3,3                                                                                                                        |        |        |
| Technical data for brake circuit                                                      | —     | ⇒ p.28                                                                                                                     |        |        |
| Threshold for overvoltage switch-off                                                  |       |                                                                                                                            |        |        |
| at 115V                                                                               | VDC   | 235                                                                                                                        |        |        |
| at 230V                                                                               | VDC   | 455                                                                                                                        |        |        |
| Motor inductance min.                                                                 |       |                                                                                                                            |        |        |
| at 1x115V                                                                             | mH    | 3.7                                                                                                                        | 3.7    | 3.7    |
| at 1x230V                                                                             | mH    | 4.3                                                                                                                        | 4.3    | 4.3    |
| at 3x115V                                                                             | mH    | 2.1                                                                                                                        | 1.3    | 1.0    |
| at 3x230V                                                                             | mH    | 4.3                                                                                                                        | 2.6    | 1.9    |
| Motor inductance max.                                                                 | mH    | Consult our customer support                                                                                               |        |        |
| Form factor of the output current<br>(rated conditions, min. load inductance)         | —     | 1.01                                                                                                                       |        |        |
| Bandwidth of current controller                                                       | kHz   | > 1.2                                                                                                                      |        |        |
| Residual voltage drop at rated current                                                | V     | 4                                                                                                                          |        |        |
| Thermal dissipation, output stage disabled                                            | W     | 12                                                                                                                         |        |        |
| Thermal dissipation at rated current<br>(incl. PSU losses, without brake dissipation) | W     | 35                                                                                                                         | 60     | 90     |
| Noise emission max.                                                                   | dB(A) | 25                                                                                                                         | 45     |        |
| Mechanical data                                                                       |       |                                                                                                                            |        |        |
| Weight                                                                                | kg    | approx. 2.6                                                                                                                |        |        |
| Height, without connectors                                                            | mm    | 270                                                                                                                        | 279    |        |
| Width                                                                                 | mm    | 70                                                                                                                         |        |        |
| Depth, without connectors                                                             | mm    | 171                                                                                                                        |        |        |
| Depth, with connectors                                                                | mm    | < 200                                                                                                                      |        |        |

\* in single-phase applications nom./peak current is limited to value below nominal value dependent on the motor constant Kt and the motor speed (see p.58).

## 6.2.2

## Technical data for 400/480 V (types S3\_ \_0\_)

|                                                                                       |       | SERVOSTAR                           |        |        |
|---------------------------------------------------------------------------------------|-------|-------------------------------------|--------|--------|
| Electrical data                                                                       | DIM   | 341                                 | 343    | 346    |
| Order Code                                                                            | —     | S30101                              | S30301 | S30601 |
| Rated supply voltage<br>(grounded supply, phase to phase)                             | V~    | 3 x 208V-10% ... 480V+10%, 50/60 Hz |        |        |
| Rated input power for S1 operation                                                    | kVA   | 1.2                                 | 2.5    | 5      |
| Permitted switch on/off frequency                                                     | 1/h   | 30                                  |        |        |
| Max. DC bus link voltage                                                              | V=    | 900                                 |        |        |
| Rated output current (rms value, ± 3%)                                                |       |                                     |        |        |
| at 3x208V                                                                             | Arms  | 2                                   | 5      | 6      |
| at 3x230V                                                                             | Arms  | 2                                   | 5      | 6      |
| at 3x400V                                                                             | Arms  | 1.5                                 | 4      | 6      |
| at 3x480V                                                                             | Arms  | 1.5                                 | 3      | 6      |
| Peak output current (max. approx. 5s, ± 3%)                                           |       |                                     |        |        |
| at 3x208V                                                                             | Arms  | 4.5                                 | 7.5    | 12     |
| at 3x230V                                                                             | Arms  | 4.5                                 | 7.5    | 12     |
| at 3x400V                                                                             | Arms  | 4.5                                 | 7.5    | 12     |
| at 3x480V                                                                             | Arms  | 4.5                                 | 7.5    | 12     |
| Switching frequency of the output stage                                               | kHz   | 8                                   |        |        |
| at reduced current (50%)                                                              | kHz   | 16 (in process)                     |        |        |
| Voltage rise speed dU/dt (see hints on page 60!)                                      |       |                                     |        |        |
| at 3x208V                                                                             | kV/μs | 3,0                                 |        |        |
| at 3x230V                                                                             | kV/μs | 3,3                                 |        |        |
| at 3x400V                                                                             | kV/μs | 5,7                                 |        |        |
| at 3x480V                                                                             | kV/μs | 6,9                                 |        |        |
| Technical data for brake circuit                                                      | —     | ⇒ p.28                              |        |        |
| Threshold for overvoltage switch-off                                                  |       |                                     |        |        |
| a 230V                                                                                | VDC   | 455                                 |        |        |
| a 400V                                                                                | VDC   | 800                                 |        |        |
| a 480V                                                                                | VDC   | 900                                 |        |        |
| Motor inductance min.                                                                 |       |                                     |        |        |
| at 3x208V                                                                             | mH    | 7.7                                 | 4.6    | 2.9    |
| at 3x230V                                                                             | mH    | 8.5                                 | 5.1    | 3.2    |
| at 3x400V                                                                             | mH    | 14.8                                | 8.9    | 5.6    |
| at 3x480V                                                                             | mH    | 17.8                                | 10.7   | 6.7    |
| Motor inductance max.                                                                 | mH    | Consult our customer support        |        |        |
| Form factor of the output current<br>(rated conditions, min. load inductance)         | —     | 1.01                                |        |        |
| Bandwidth of subordinate current controller                                           | kHz   | > 1.2                               |        |        |
| Residual voltage drop at rated current                                                | V     | 5                                   |        |        |
| Thermal dissipation, output stage disabled                                            | W     | 12                                  |        |        |
| Thermal dissipation at rated current<br>(incl. PSU losses, without brake dissipation) | W     | 40                                  | 60     | 90     |
| Noise emission max.                                                                   | dB(A) | 25                                  | 45     |        |
| Mechanical data                                                                       |       |                                     |        |        |
| Weight                                                                                | kg    | approx. 2.7                         |        |        |
| Height, without connectors                                                            | mm    | 270                                 | 279    |        |
| Width                                                                                 | mm    | 70                                  |        |        |
| Depth, without connectors                                                             | mm    | 171                                 |        |        |
| Depth, with connectors                                                                | mm    | < 230                               |        |        |

### 6.2.3 Inputs / outputs, Auxiliary voltage

| Interface                                                                | electr. data                          |
|--------------------------------------------------------------------------|---------------------------------------|
| Analog inputs 1, 2 (resolution 14/12 bit)                                | ±10V                                  |
| Max. common-mode voltage                                                 | ±10V                                  |
| Digital control inputs                                                   | as per IEC 61131-2 Type 1, max. 30VDC |
| Digital control outputs, active high                                     | open Emitter, max. 30VDC, 10mA        |
| BTB/RTO output, relay contacts                                           | max. 30VDC, max 42VAC                 |
|                                                                          | 500mA                                 |
| Auxiliary supply voltage, electrically isolated, without motor brake/fan | 20V - 30V                             |
|                                                                          | 1A                                    |
| Auxiliary supply voltage, electrically isolated, with motor brake/fan    | 24V (-0% +15%)                        |
|                                                                          | 2.5A ( <b>check voltage drop !</b> )  |
| Min./max. output current to brake                                        | 0.15A / 1.5A                          |

### 6.2.4 Connectors

| Connector                       | Type                 | max. cross section* <sup>1</sup> | permitted current* <sup>2</sup> | permitted tension* <sup>3</sup> |
|---------------------------------|----------------------|----------------------------------|---------------------------------|---------------------------------|
| Control signals X3, X4          | Combicon connector   | 1,5mm <sup>2</sup>               | 4A                              | 160V                            |
| S303-310 Power signals X0,X8,X9 | Combicon connector   | 2,5mm <sup>2</sup>               | 12A                             | 630V                            |
| S341-346 Power signals X0,X8,X9 | Combicon connector   | 4mm <sup>2</sup>                 | 16A                             | 1000V                           |
| Resolver input X2               | SubD 9-pin (socket)  | 0,5mm <sup>2</sup>               | 1A                              | <100V                           |
| Encoder input X1                | SubD 15-pin (socket) | 0,5mm <sup>2</sup>               | 1A                              | <100V                           |
| PC interface, CAN X6            | SubD 9-pin (plug)    | 0,5mm <sup>2</sup>               | 1A                              | <100V                           |
| Encoder emulation, ROD/SSI X5   | SubD 9-pin (plug)    | 0,5mm <sup>2</sup>               | 1A                              | <100V                           |

\*1 single-line connection

\*2 single-line connection with recommended conductor cross section (chapt. 6.2.8)

\*3 rated voltage with pollution level 2

### 6.2.5 Recommended tightening torques

| Connector      | Tightening torque |
|----------------|-------------------|
| X0, X8, X9     | 0.5..0.6 Nm       |
| Grounding bolt | 3.5 Nm            |

### 6.2.6 Fusing

#### Internal fusing

| Circuit               | Internal fuse |
|-----------------------|---------------|
| Auxiliary voltage 24V | 3.15 AT       |
| Brake resistor        | electronic    |

#### External fusing

| Wire fuses or similar                    | SERVOSTAR<br>303*, 341*, 343* | SERVOSTAR<br>306*, 310*, 346* |
|------------------------------------------|-------------------------------|-------------------------------|
| AC supply feed $F_{N1/2/3}$ (X0/1; 2; 3) | 6 AT                          | 10 AT                         |
| 24V feed $F_{H1/2}$                      | max. 8 AF                     |                               |
| Brake resistor $F_{B1/2}$ (X8/2; 4)      | 6 AT**                        | 6 AT**                        |

EU fuses: types gRL or gL, 400V/500V, T means time-delay, F means fast

US fuses: class RK5 or CC or J or T, 600VAC 200kA, time-delay

\* order code reference see p. 20

\*\* Bussmann FWP-xx

### 6.2.7 Ambient conditions, ventilation, mounting position

|                                                                                                 |                                                                                                                                                                            |
|-------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Storage hints</b>                                                                            | ⇒ p.17                                                                                                                                                                     |
| <b>Transport hints</b>                                                                          | ⇒ p.17                                                                                                                                                                     |
| <b>Supply voltage</b>                                                                           | 303-310*: 1x110V-10% ...1x230V <sup>+10%</sup> , 50/60 Hz<br>3x110V-10% ...3x230V <sup>+10%</sup> , 50/60 Hz<br>341-346*: 3x208V-10% ...3x 480V <sup>+10%</sup> , 50/60 Hz |
| <b>Auxiliary voltage</b><br>without brake and fan<br>with brake or fan                          | 20 V DC ... 30 V DC<br>24 V DC (-0% +15%), check voltage drop !                                                                                                            |
| <b>Ambient temperature in operation</b>                                                         | 0...+40°C under rated conditions<br>+40...+55°C with power derating 2.5% / °C                                                                                              |
| <b>Humidity in operation</b>                                                                    | rel. humidity 85%, no condensation                                                                                                                                         |
| <b>Site altitude</b>                                                                            | up to 1000 meters a.m.s.l. without restriction<br>1000...2500 meters a.m.s.l. with power derating<br>1.5% / 100meters                                                      |
| <b>Pollution level</b>                                                                          | Pollution level 2 as per IEC 60664-1                                                                                                                                       |
| <b>Vibrations</b>                                                                               | Class 3M2 according to IEC 60721-3-3                                                                                                                                       |
| <b>Enclosure protection</b>                                                                     | IP 20 according to IEC 60529                                                                                                                                               |
| <b>Mounting position</b>                                                                        | vertical ⇒ p.44                                                                                                                                                            |
| <b>Ventilation 1 A and 3 A types</b><br><b>all other types</b>                                  | <b>natural convection</b><br><b>built-on fan (optionally controlled, ⇒ p.126)</b>                                                                                          |
| <b>NOTICE</b> Make sure that there is sufficient forced ventilation within the control cabinet. |                                                                                                                                                                            |

\* order code reference see p. 20

### 6.2.8 Conductor cross-sections

Following IEC 60204, we recommend for **single-axis systems**:

|                                                                                                                                                                                   |                                                |                                                  |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------|--------------------------------------------------|
| <b>AC connection</b>                                                                                                                                                              | 1.5 mm <sup>2</sup> (14awg)                    | 600V, 80°C                                       |
| <b>DC bus link</b><br><b>Brake resistor</b>                                                                                                                                       | 1.5 mm <sup>2</sup> (14awg)                    | 1000V, 80°C,<br>shielded for lengths<br>>20cm    |
| <b>Motor cables up to 25 m</b>                                                                                                                                                    | 1 - 1.5 mm <sup>2</sup> (14awg)                | 600V, 80°C, shielded,<br>capacitance <150pF/m    |
| <b>Motor cables 25m to 50 m,<br/>with motor choke 3YL</b>                                                                                                                         | 1 mm <sup>2</sup> (14awg)                      | 600V, 80°C, shielded,<br>capacitance <150pF/m    |
| <b>Resolver, motor thermal<br/>control</b>                                                                                                                                        | 4x2x0.25 mm <sup>2</sup> (22awg),<br>max. 100m | twisted pairs, shielded,<br>capacitance <120pF/m |
| <b>Encoder, motor thermal<br/>control</b>                                                                                                                                         | 7x2x0.25 mm <sup>2</sup> (22awg),<br>max.50m   | twisted pairs, shielded                          |
| <b>ComCoder, motor thermal<br/>control</b>                                                                                                                                        | 8x2x0.25 mm <sup>2</sup> (22awg),<br>max.25m   | twisted pairs, shielded                          |
| <b>Setpoints, AGND</b>                                                                                                                                                            | 0.25 mm <sup>2</sup> (22awg), max 30m          | twisted pairs, shielded                          |
| <b>Control signals, BTB, DGND</b>                                                                                                                                                 | 0.5 mm <sup>2</sup> (20awg), max 30m           |                                                  |
| <b>Holding brake (motor)</b>                                                                                                                                                      | min. 0.75 mm <sup>2</sup> (18awg)              | 600V, 80°C, shielded,<br>check voltage drop      |
| <b>+24 V / DGND</b>                                                                                                                                                               | max. 2.5 mm <sup>2</sup> (12awg)               | check voltage drop                               |
| <b>NOTICE</b> For multi-axis systems, observe the specific operating conditions for your system.<br>To reach the max. permitted cable length, observe cable requirements ⇒ p. 51. |                                                |                                                  |

\* Kollmorgen North America supplies cables up to 39 meters  
Kollmorgen Europe supplies cables up to max. length

### 6.3 Motor holding brake


A 24V / max.1.5A holding brake in the motor can be controlled directly by the amplifier.

**CAUTION** This function does not ensure personnel safety! Hanging load (vertical axes) require an additional mechanical brake which must be safely operated.

#### NOTICE

The brake only works with sufficient voltage level ( $\Rightarrow$  p.25). Check voltage drop, measure the voltage at brake input and check brake function (brake and no brake).

The brake function must be enabled through the BRAKE setting (screen page: Motor). In the diagram below you can see the timing and functional relationships between the ENABLE signal, speed setpoint, speed and braking force. All values can be adjusted with parameters, the values in the diagram are default values.

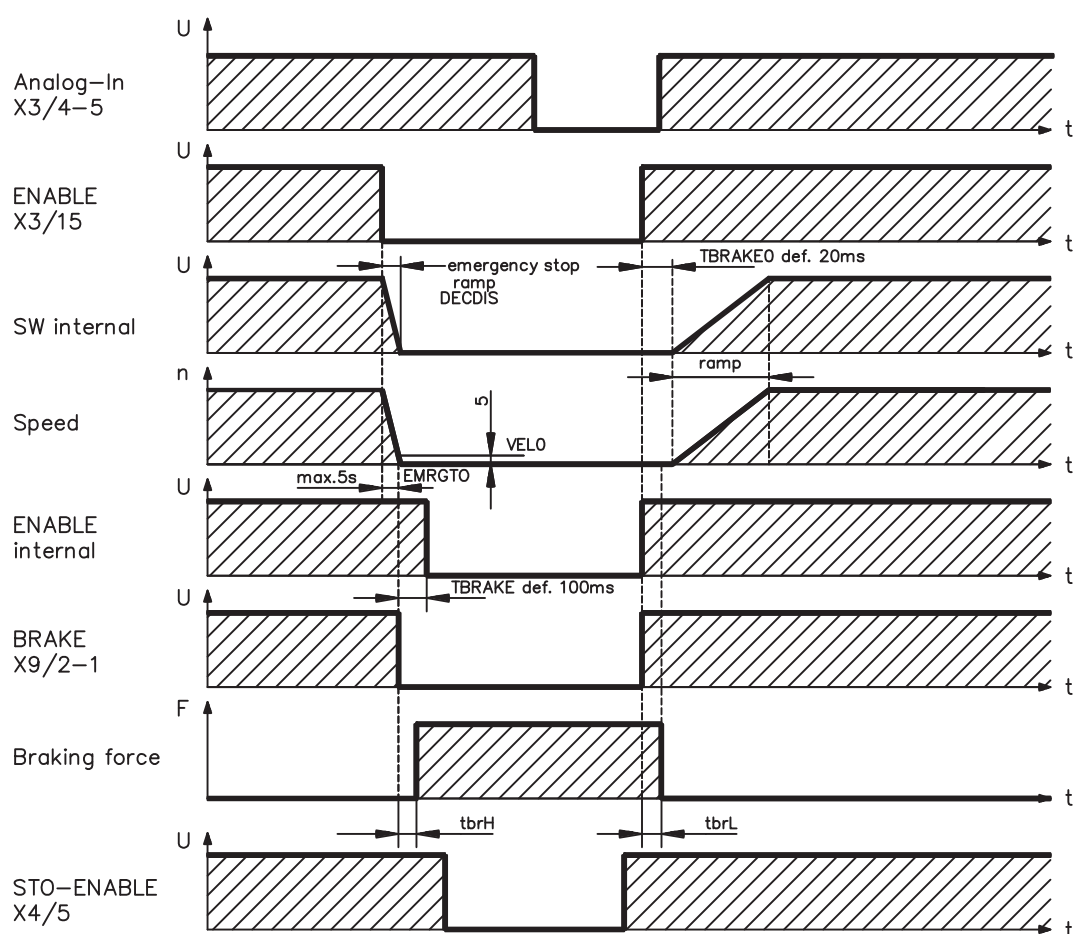

During the internal ENABLE delay time of 100ms (DECDIS), the speed setpoint of the servo amplifier is internally driven down an adjustable ramp to 0V. The output for the brake is switched on when the speed has reached 5 rpm (VELO), at the latest after 5 seconds (EMRGTO).

The rise ( $f_{brH}$ ) and fall ( $f_{brL}$ ) times of the holding brake that is built into the motor are different for the various types of motor (see motor manual).

A description of the interface can be found on page 60.

## 6.4 LED display

A 3-character LED display indicates the status of the amplifier after switching on the 24V supply (⇒ p.107). When the keys on the front panel are used, the parameter and function numbers are shown, as well as the numbers for any errors that may occur (⇒ p.108).

## 6.5 Grounding system

AGND — analog inputs, internal analog ground, encoder emulation, RS232, CAN  
DGND — digital inputs/outputs and the 24V supply, optically isolated.

## 6.6 Dynamic braking (brake circuit)

During dynamic braking with the aid of the motor, energy is fed back into the servo amplifier. This regenerative energy is dissipated as heat in the brake resistor. The brake resistor is switched in by the brake circuit.

The setup software can be used to adapt the brake circuit (thresholds) according to the electrical supply voltage.

Our customer service can help you with the calculation of the brake power that is necessary for your system. A [simple method](#) is described in the "Product Wiki" which is accessible at [www.wiki-kollmorgen.eu](http://www.wiki-kollmorgen.eu).

A description of the interface can be found on page 59.

### Functional description:

1.- Individual amplifiers, **not coupled** through the DC bus link circuit (DC+, DC-)

When the energy fed back from the motor has an average or peak power that exceeds the preset level for the brake power rating, then the servo amplifier generates the warning "n02 brake power exceeded" and the brake circuit is switched off.

The next internal check of the DC bus link voltage (after a few milliseconds) detects an overvoltage and the output stage is switched off, with the error message "Overvoltage F02" (⇒ p.108).

The BTB/RTO contact (terminals X3/2,3) will be opened at the same time (⇒p.89)

2.- Several servo amplifiers **coupled** through the DC bus link (DC+, DC-)

Using the built-in brake circuit, several amplifiers (even with different current ratings) can be operated off a common DC bus link, without requiring any additional measures.

The **combined (peak and continuous) power** of all amplifiers is always available. The switch-off on overvoltage takes place as described under 1. (above) for the amplifier that has the lowest switch-off threshold (resulting from tolerances).

Technical data of the brake circuits dependent on the amplifiers type and the mains voltage situation see table on the next page.

## Technical Data:

| Brake circuit                |                                                |     | Supply voltage / V |      |      |      |
|------------------------------|------------------------------------------------|-----|--------------------|------|------|------|
| Type                         | Rated data                                     | DIM | 115                | 230  | 400  | 480  |
| 303<br>(S30361)              | Switch-on (upper) threshold of brake circuit   | V   | 200                | 400  | —    |      |
|                              | Overvoltage F02                                | V   | 235                | 455  |      |      |
|                              | Internal brake resistor (RBint)                | Ohm | 66                 | 66   |      |      |
|                              | Continuous power for internal resistor (RBint) | W   | 20                 | 20   |      |      |
|                              | Max. brake power (average for 1s)              | kW  | 0,4                | 0,35 |      |      |
|                              | Pulse brake power                              | kW  | 0,84               | 3    |      |      |
|                              | External brake resistor (RBext), optional      | Ohm | 66                 | 66   |      |      |
|                              | Continuous power for external resistor (RBext) | kW  | 0,3                | 0,3  |      |      |
| 306 / 310<br>(S30661/S31061) | Switch-on (upper) threshold of brake circuit   | V   | 200                | 400  | —    |      |
|                              | Overvoltage F02                                | V   | 235                | 455  |      |      |
|                              | Internal brake resistor (RBint)                | Ohm | 66                 | 66   |      |      |
|                              | Continuous power for internal resistor (RBint) | W   | 50                 | 50   |      |      |
|                              | Max. brake power (average for 1s)              | kW  | 0,84               | 0,88 |      |      |
|                              | Pulse brake power                              | kW  | 0,84               | 3    |      |      |
|                              | External brake resistor (RBext), optional      | Ohm | 66                 | 66   |      |      |
|                              | Continuous power for external resistor (RBext) | kW  | 1                  | 1    |      |      |
| 341<br>(S30101)              | Switch-on (upper) threshold of brake circuit   | V   | —                  | 400  | 720  | 840  |
|                              | Overvoltage F02                                | V   |                    | 455  | 800  | 900  |
|                              | Internal brake resistor (RBint)                | Ohm |                    | 91   | 91   | 91   |
|                              | Continuous power for internal resistor (RBint) | W   |                    | 20   | 20   | 20   |
|                              | Max. brake power (average for 1s)              |     |                    | 0,35 | 0,33 | 0,34 |
|                              | Pulse brake power                              | kW  |                    | 2,1  | 7    | 9    |
|                              | External brake resistor (RBext), optional      | Ohm |                    | 91   | 91   | 91   |
|                              | Continuous power for external resistor (RBext) | kW  |                    | 0,3  | 0,3  | 0,3  |
| 343 / 346<br>(S30301/S30601) | Switch-on (upper) threshold of brake circuit   | V   | —                  | 400  | 720  | 840  |
|                              | Overvoltage F02                                | V   |                    | 455  | 800  | 900  |
|                              | Internal brake resistor (RBint)                | Ohm |                    | 91   | 91   | 91   |
|                              | Continuous power for internal resistor (RBint) | W   |                    | 50   | 50   | 50   |
|                              | Max. brake power (average for 1s)              |     |                    | 0,91 | 0,86 | 0,85 |
|                              | Pulse brake power                              | kW  |                    | 2,1  | 7    | 9    |
|                              | External brake resistor (RBext), optional      | Ohm |                    | 91   | 91   | 91   |
|                              | Continuous power for external resistor (RBext) | kW  |                    | 1,0  | 1,0  | 1,0  |

**NOTE**

Suitable external brake resistors can be found in our accessories manual.

## 6.7 Switch-on and switch-off behavior

This chapter describes the switch-on and switch-off behavior of the S300 and the steps required to achieve operational stopping or emergency stop behavior that complies with standards.

### NOTE

The servo amplifier's 24 V supply must remain constant. The ASCII commands **ACTFAULT** (error response) and **STOPMODE** (ENABLE signal response) dictate how the drive will behave.

| ACTFAULT / STOPMODE | Behavior (see also ASCII reference in the <a href="#">online help</a> of the setup software) |
|---------------------|----------------------------------------------------------------------------------------------|
| 0                   | Motor coasts to a standstill in an uncontrolled manner                                       |
| 1 (default)         | Motor is braked in a controlled manner                                                       |

#### Behavior during a power failure

The servo amplifiers use an integrated circuit to detect if one or more input phases (power supply feed) fail. The behavior of the servo amplifier is set using the setup software: Under "**Response to Loss of Input Phase**" (PMODE) on the **Basic Setup** screen, select:

- **Warning** if the higher-level control system is to bring the drive to a standstill: Warning n05 is output if an input phase is missing, and the motor current is limited to 4 A. The servo amplifier is not disabled. The higher-level control system can now selectively end the current cycle or start bringing the drive to a standstill. Therefore, the error message "MAINS BTB, F16" is output on a digital output of the servo amplifier and evaluated by the control system, for instance.
- **Error message** if the servo amplifier is to bring the drive to a standstill: Error message F19 is output if an input phase is missing. The servo amplifier is disabled and the BTB contact opens. Where the factory setting is unchanged (ACTFAULT=1), the motor is braked using the set "EMERGENCY STOP RAMP".

#### Behavior when undervoltage threshold is reached

If the undervoltage threshold is undershot in the DC bus link (the threshold value depends on the type of servo amplifier), the error message "UNDERVOLTAGE, F05" is displayed. The drive response depends on the ACTFAULT/STOPMODE setting.

#### Behavior with enabled "holding brake" function

Servo amplifiers with an enabled holding brake function have a special procedure for switching off the output stage (⇒ p. 27). Removing the ENABLE signal triggers electrical braking. As with all electronic circuits, the general rule applies that there is a possibility of the internal "holding brake" module failing. Bringing a motor to a standstill using a holding brake in a way that is personnel safe also requires an electromechanical "make" contact for the holding equipment and a suppressor device for the brake.


#### Behavior of the safety function STO

With the personnel safe, certified safety function STO, the drive can be secured on standstill using its internal electronics so that even when power is being supplied, the drive shaft is protected against unintentional restart. The chapter "Safety Function STO" describes how to use the STO function. See page 35 onwards.

## 6.7.1

## Behavior in standard operation

The behavior of the servo amplifier always depends on the current setting of a number of different parameters (e.g., ACTFAULT, VBUSMIN, VELO, STOPMODE, etc.; see [online help](#)). The diagram below illustrates the correct functional sequence for switching the servo amplifier on and off.

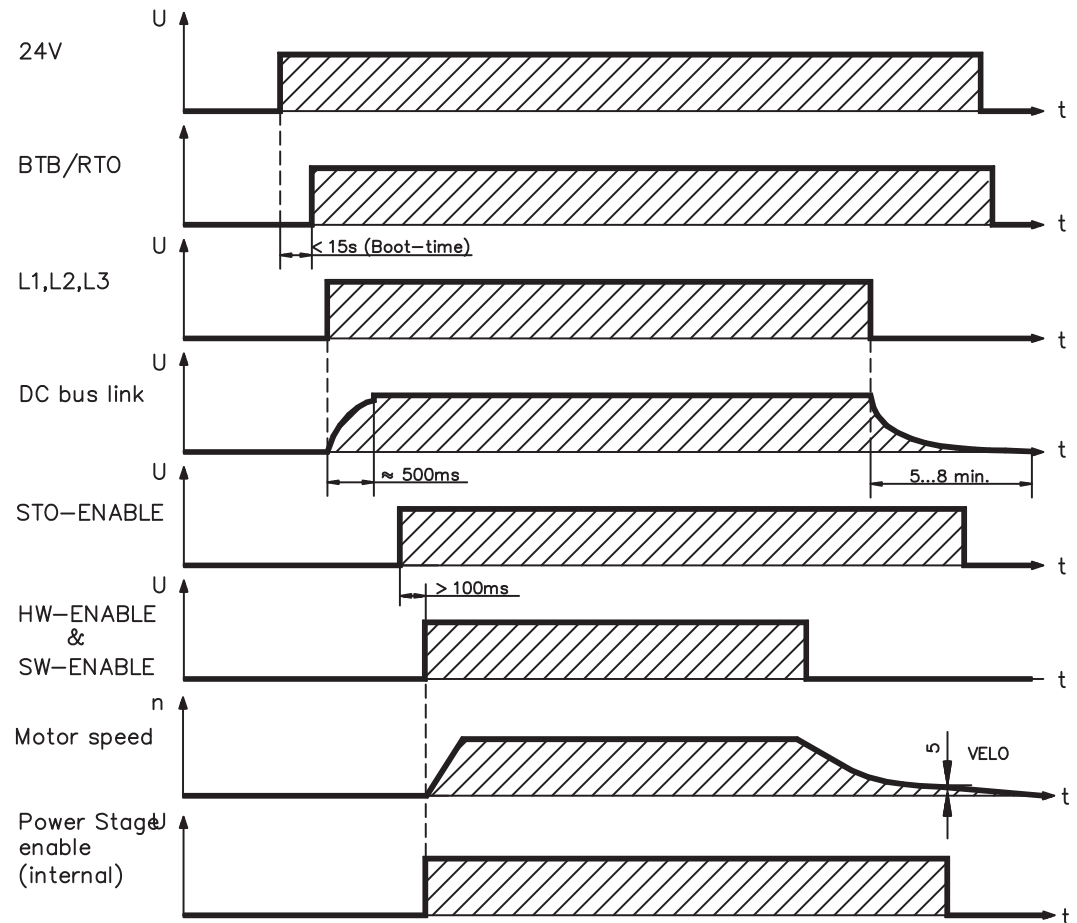


Devices which are equipped with a selected "Brake" function use a special sequence for switching off the output stage ( $\Rightarrow$  p.27).

The safety function STO can be used to switch off the drive, so that personnel safety is ensured at the drive shaft ( $\Rightarrow$  p. 35).

## 6.7.2

### Behavior in the event of an error (with standard setting)

The behavior of the servo amplifier always depends on the current setting of a number of different parameters (e.g., ACTFAULT, VBUSMIN, VELO, STOPMODE, etc.; see [online help](#)). The diagram shows the startup procedure and the procedure that the internal control system follows in the event of one or more electrical supply phases failing, assuming that the standard parameter settings apply.

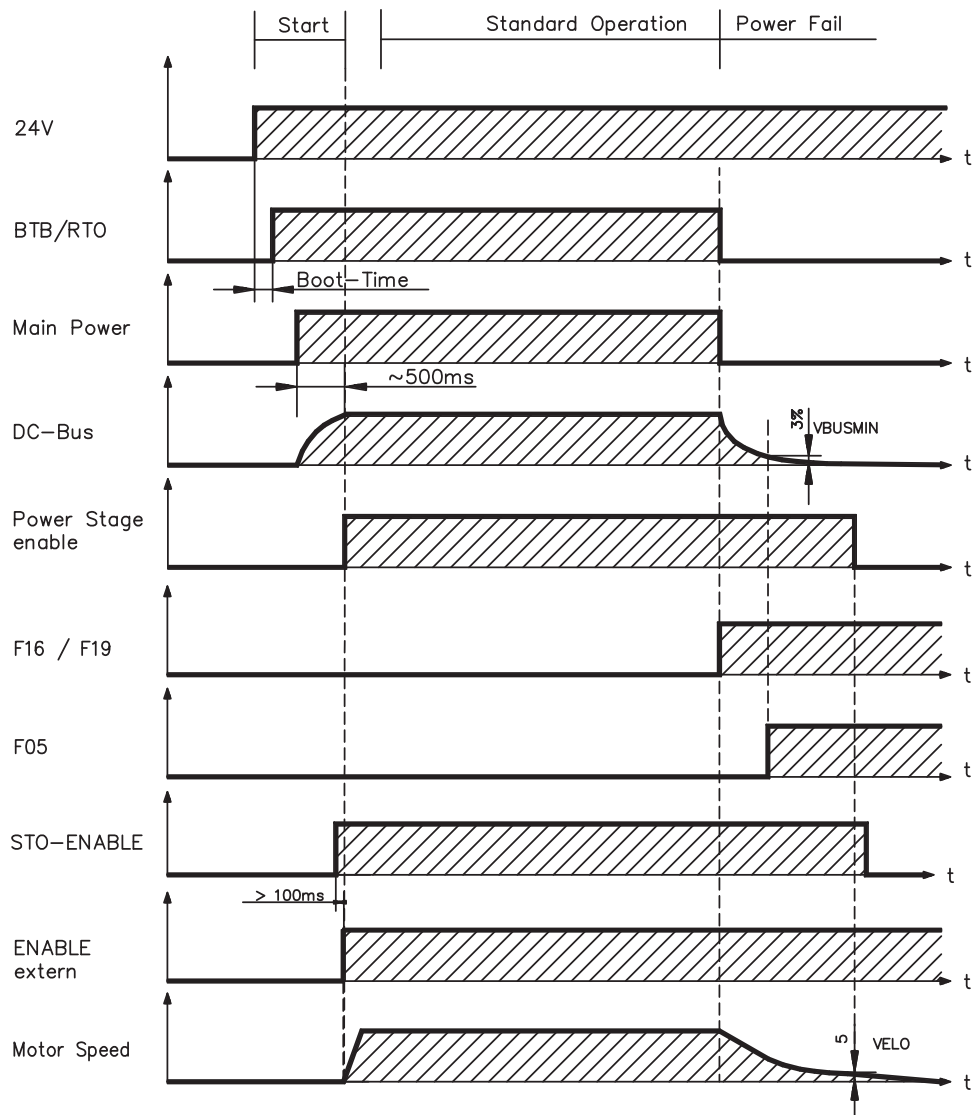

(F16/F19 = error messages Mains BTB /input phase, F05 = error message Undervoltage)

Even if there is no intervention from an external control system (in the example, the ENABLE signal remains active), the motor is immediately braked using the emergency stop ramp if an input phase error is detected and assuming that no changes have been made to the factory setting (ACTFAULT=1).

## 6.8 Stop- / Emergency Stop- Function to IEC 60204

**NOTE**

With the personnel safe, certified safety function STO (see page 35 onwards) the drive can be secured on standstill (torque-free) using its internal electronics so that even when power is being supplied, the drive shaft is protected against unintentional restart.

**NOTE**

The parameters "STOPMODE" and "ACTFAULT" must be set to 1 in order to implement the stop categories. If necessary, change the parameters via the terminal screen of the setup software and store the data in the EEPROM.

Examples for implementation can be found in the Product WIKI on page "[Stop and Emergency Stop Function](#)".

### 6.8.1 Stop: Standards

The Stop function is used to shut down the machine in normal operation. The Stop functions are defined by IEC 60204.

- Category 0:** Shut-down by immediate switching-off of the energy supply to the drive machinery (i.e. an uncontrolled shut-down);
- Category 1:** A controlled shut-down, whereby the energy supply to the drive machinery is maintained to perform the shut-down, and the energy supply is only interrupted when the shut-down has been completed;
- Category 2:** A controlled shut-down, whereby the energy supply to the drive machinery is maintained.

The Stop Category must be determined by a risk evaluation of the machine. In addition, suitable means must be provided to guarantee a reliable shut-down.

Category 0 and Category 1 Stops must be operable independently of the operating mode, whereby a Category 0 Stop must have priority. Stop functions must be implemented by **disconnection** of the appropriate circuitry, and have priority over assigned start functions.

If necessary, provision must be made for the connection of protective devices and lock-outs. If applicable, the Stop function must signal its status to the control logic. A reset of the Stop function must not create a hazardous situation.

Examples for implementation can be found in the Product WIKI on page "[Stop and Emergency Stop Function](#)".

## 6.8.2 Emergency Stop: Standards

The emergency Stop function is used for the **fastest possible shut-down** of the machine in a dangerous situation. The Emergency Stop function can be triggered by the actions of a single person. It must be fully functional and available at all times. The user must not have to work out how to operate this mechanism.

The Emergency Stop function is defined by IEC 60204.

**In addition** to the requirements for Stop, the emergency Stop must fulfil the following requirements:

- emergency stop must have priority over all other functions and controls in all operating situations;
- the energy supply to any drive machinery that could cause dangerous situations must be switched off as fast as possible, without causing any further hazards (e.g. by using mechanical latching devices that do not require an external supply of energy, by counter-current braking in Stop Category 1);
- the reset must not initiate a restart.

If necessary, provision must be made for the additional connection of emergency stop devices (see IEC 60204, "Requirements for emergency stop devices"). The Emergency Stop must be effective as a stop of either Category 0 or Category 1.

The Emergency Stop Category must be determined by a risk evaluation of the machine.

### Category 0

Only hard-wired, electromechanical components may be used for the Category 0 Emergency Stop function. It must not be triggered using switching logic (hardware or software), by transferring commands via a communication network, or via a data link.

The drive must be shut down using an electromechanical circuit. If the connected servo motor has an integrated brake, this must always be controlled by an electromechanical circuit as well.

### Category 1

With the Category 1 Emergency Stop function, there must be absolute certainty in terms of the power supply for the machine drives being switched off (i.e., secured) using electromechanical components. Additional Emergency Stop equipment may be connected. Bringing the motor to a standstill by interrupting the mains supply and using controlled electronic braking. The 24 V supply for the servo amplifier must remain constant. The issue of which circuit should be used is highly dependent on the requirements of the application at hand.

In most servo motors a brake has only the function of a holding brake. To ensure an emergency stop function, the braking torque that is required must be checked. If the holding brake fulfills the dynamic requirements, it must be taken into account that this application will cause increased wear.

Examples for implementation can be found in the Product WIKI on page "[Stop and Emergency Stop Function](#)".

## 6.9 Safety function STO

A frequently required application task is the protection of personnel against the restarting of drives. The S300 servo amplifier offers, even in the basic version, a single channel STO function (**Safe Torque Off**) that can be used as a personnel safe restart lock.

The safety function STO can be operated from a safe external control (semiconductor output or driven contact).

The safety concept is certified. The safety circuit concept for realizing the safety function "Safe Torque Off" in the servo amplifiers S300 is suited for SIL CL 2 according to IEC 62061 and PLd according to ISO 13849-1.

### Advantages of the restart lock STO :

- the DC bus link remains charged up, since the mains supply line remains active
- only low voltages are switched, so there is no contact wear
- very little wiring is required

### 6.9.1 Safety characteristic data

The subsystems (servo amplifiers) are totally described for safety technics with the characteristic data SIL CL, PFH<sub>D</sub> and SFF.

| Device     | Operation mode     | EN<br>13849-1 | EN 62061 | PFH <sub>D</sub><br>[1/h] | SFF<br>[%] | MTTF <sub>d</sub><br>[Year] |
|------------|--------------------|---------------|----------|---------------------------|------------|-----------------------------|
| STO-Enable | STO single channel | PLd           | SIL CL 2 | 0                         | 100        | 311                         |

### 6.9.2 Safety instructions

**⚠ WARNING**

Drives with a suspended load must have an additional safe mechanical blocking (e.g. by a motor-holding brake). The amplifier cannot hold the load when STO is active. That could result in serious injury.

**⚠ CAUTION**

When STO is engaged during operation by separating input STO-Enable from 24VDC, the motor runs down out of control and the servo amplifier displays the error F27. There is no possibility of braking the drive controlled. If a controlled braking before the use of STO is necessary, the drive must be braked and the input STO-ENABLE has to be separated from +24 VDC time-delayed.

**⚠ CAUTION**

If the safety function STO is automatically activated by a control system, then make sure that the output of the control is monitored for possible malfunction. This can be used to prevent a faulty output from unintentionally activating the safety function STO. Since the restart lock is a single-channel system, erroneous engaging will not be recognized.

**⚠ CAUTION**

The safety function STO does not provide an electrical separation from the power output. If access to the motor power terminals is necessary, the servo amplifier must be disconnected from mains supply considering the discharging time of the DC bus link (intermediate circuit).

**NOTICE**

Keep to the following functional sequence when the restart lock STO is used :

1. Brake the drive in a controlled manner (speed setpoint = 0V)
2. When speed = 0 rpm, disable the servo amplifier (enable = 0V)
3. If there is a suspended load, block the drive mechanically
4. Activate the restart lock STO

### 6.9.3 Use as directed

The safety function STO is **exclusively** intended to provide safety for personnel, by preventing the restart of a system. To achieve this personnel safety, the wiring of the safety circuits must meet the safety requirements of IEC 60204, ISO 12100, IEC 62061 SIL CL2 respectively ISO 13849-1 PLd.

If STO is automatically activated by a control system, then make sure that the output of the control is monitored for possible malfunction.


### 6.9.4 Prohibited Use

The safety function STO must **not** be used if the drive is to be made inactive for the following reasons:

1. - cleaning, maintenance and repair operations  
- long inoperative periods  
In such cases, the entire system should be disconnected from the supply by the personnel, and secured (main switch).
2. - emergency-stop situations  
In an emergency-stop situation, the main contactor is switched off (by the emergency-stop button).

### 6.9.5 Technical data and pinning

|                      |                                   |
|----------------------|-----------------------------------|
| <b>Input voltage</b> | 20 V..30 V                        |
| <b>Input current</b> | 33 mA – 40 mA (I <sub>eff</sub> ) |
| <b>Peak current</b>  | 100 mA (I <sub>s</sub> )          |

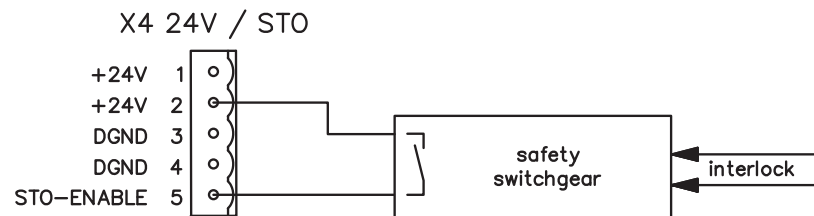

### 6.9.6 Enclosure

Since the servo amplifier meets enclosure IP20, you must select the environment ensuring a safe operation of the servo amplifier. The enclosure must meet IP54 at least.

### 6.9.7 Wiring

When using STO wiring leads outside the control cabinet, the cables must be laid durably (firmly), protected from outside damage (e.g. laying in a cable duct), in different sheathed cables or protected individually by grounding connection.

Wiring remaining within the demanded enclosure must meet the requirements of the standard IEC 60204-1.

### 6.9.8 Functional description

In case of use of the STO function the input STO-Enable must be connected to the exit of a security control or a safety relay, which meets at least to the requirements of the SIL CL2 according to IEC 62061 and PL d according to ISO 13849-1 (see the connection diagram on page 40).

Possible states of the servo amplifier in connection with STO function:

| STO-ENABLE | ENABLE | Display                | Motor has torque | SIL CL2 / PL d |
|------------|--------|------------------------|------------------|----------------|
| 0 V        | 0 V    | -S-                    | no               | yes            |
| 0 V        | +24 V  | F27                    | no               | yes            |
| +24 V      | 0 V    | normal status e.g. 06  | no               | no             |
| +24 V      | +24 V  | normal status e.g. E06 | yes              | no             |

**⚠ CAUTION** When STO function is engaged during operation by separating input STO-Enable from 24 VDC, the motor runs down out of control and the servo amplifier displays the error F27. There is no possibility of braking the drive controlled. If a controlled braking before the use of the restart lock is necessary, the drive must be braked and the input STO-ENABLE has to be separated from +24 VDC time-delayed.

**⚠ CAUTION** Because restart lock is a single-channel system, erroneous engaging will not be recognized. Therefore the output of the control must be supervised for possible malfunction.

**NOTE** If the STO function is not needed in the application, then the input STO-ENABLE must be connected directly with +24VDC. The STO function is passed by now and cannot be used. The servo amplifier cannot be used as a safety component referring to the EC Machine Directive now.


When wiring the input STO-ENABLE within one enclosure it must be paid attention to the fact that the used cables and the enclosure meet the requirements of IEC 60204-1.

If the wiring leads outside the demanded enclosure, the cables must be laid durably (firmly), and protected from outside damage (see chapter "Wiring").

### 6.9.8.1 Signal diagram (sequence)

The diagram shows how to use STO function to ensure a safe stop of the drive and error free operation of the servo amplifier.

1. Brake the drive in a controlled manner (speed setpoint = 0 V)
2. When speed = 0 rpm, disable the servo amplifier (Enable = 0 V)
3. Activate the STO function (STO-Enable = 0 V)

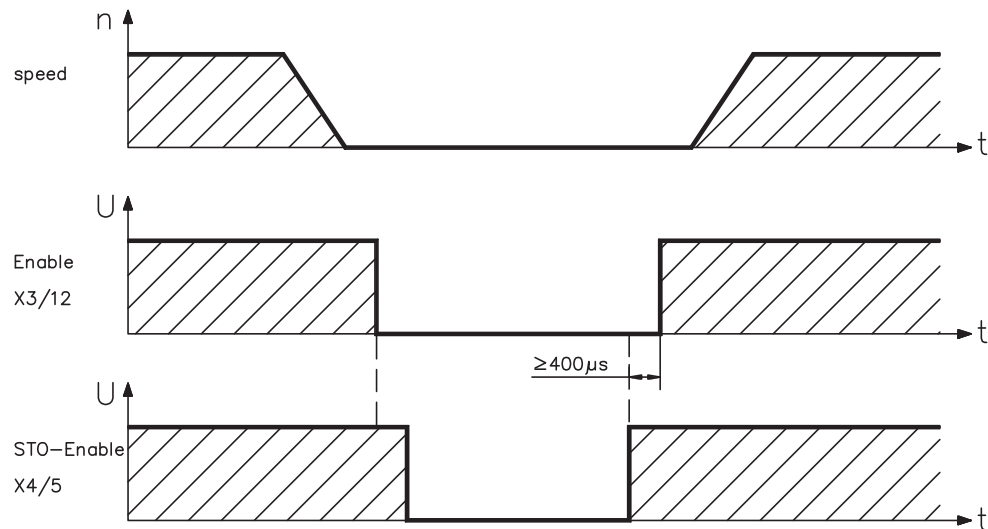**⚠ WARNING**


Suspended loads can set themselves to motion on motors without brake, because the motor loses all torque when STO is engaged (STO-Enable open and/or 0 V). Use motors with built-in holding brake.

### 6.9.8.2

### Control circuit

The example shows a circuit diagram with two separated work areas connected to one emergency stop circuit. For each work area individually "safe stop" of the drives is switched by a protective screen.

The safety switch gears used in the example are manufactured by Pilz and fulfill at least the PL d acc. to ISO 13849-1. Further information to the safety switch gears is available from Pilz. The use of safety switch gears of other manufacturers is possible, if these also fulfill the SIL CL 2 according to IEC 62061 and PL d according to ISO 13849-1.

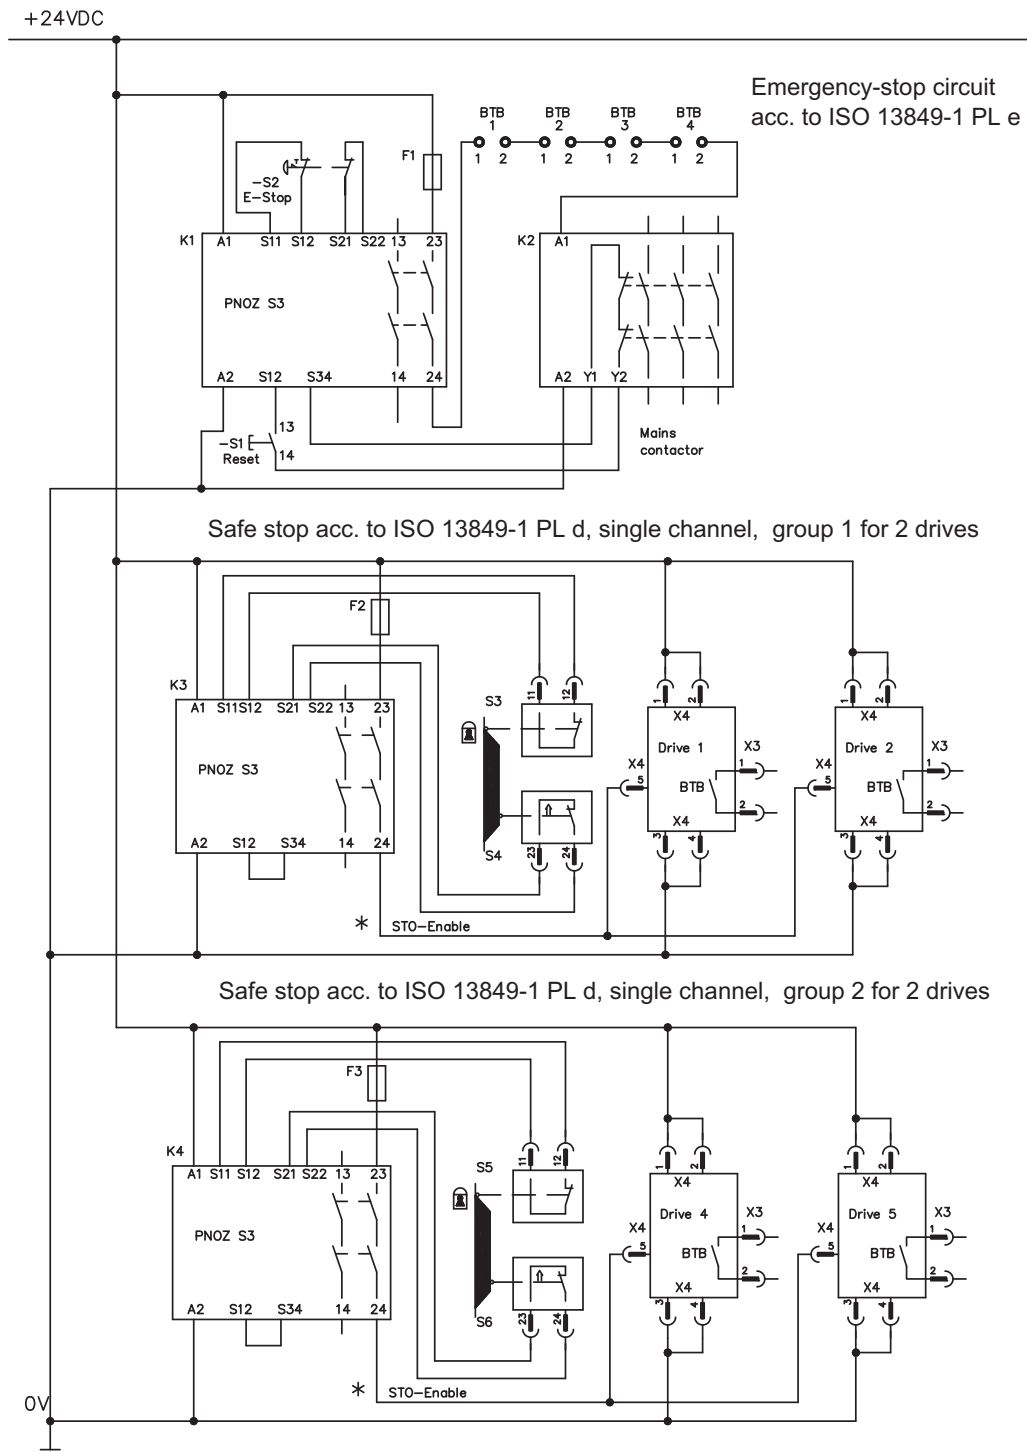

### NOTE

Consider the wiring instructions on page 37.

### 6.9.8.3 Functional test



**CAUTION** With initial starting and after each interference into the wiring of the drive or after exchange of one or several components of the drive the STO function must be tested.

#### 1. Method:

1. Stop drive, with setpoint 0V, keep servo amplifier enabled.

**DANGER: Do not enter hazardous area!**

2. Activate STO e.g. by opening protective screen. (voltage at X4/5 0 V)


Now the BTB/RTO contact opens, the net contactor releases and the servoamplifier displays error F27.

#### 2. Method:

1. Stop all drives, with setpoint 0V, disable servo amplifier.
2. Activate STO e.g. by opening protective screen. (voltage at X4/5 0 V)

Now the servo amplifier displays **-S-**.

### 6.9.8.4 Mains supply circuit

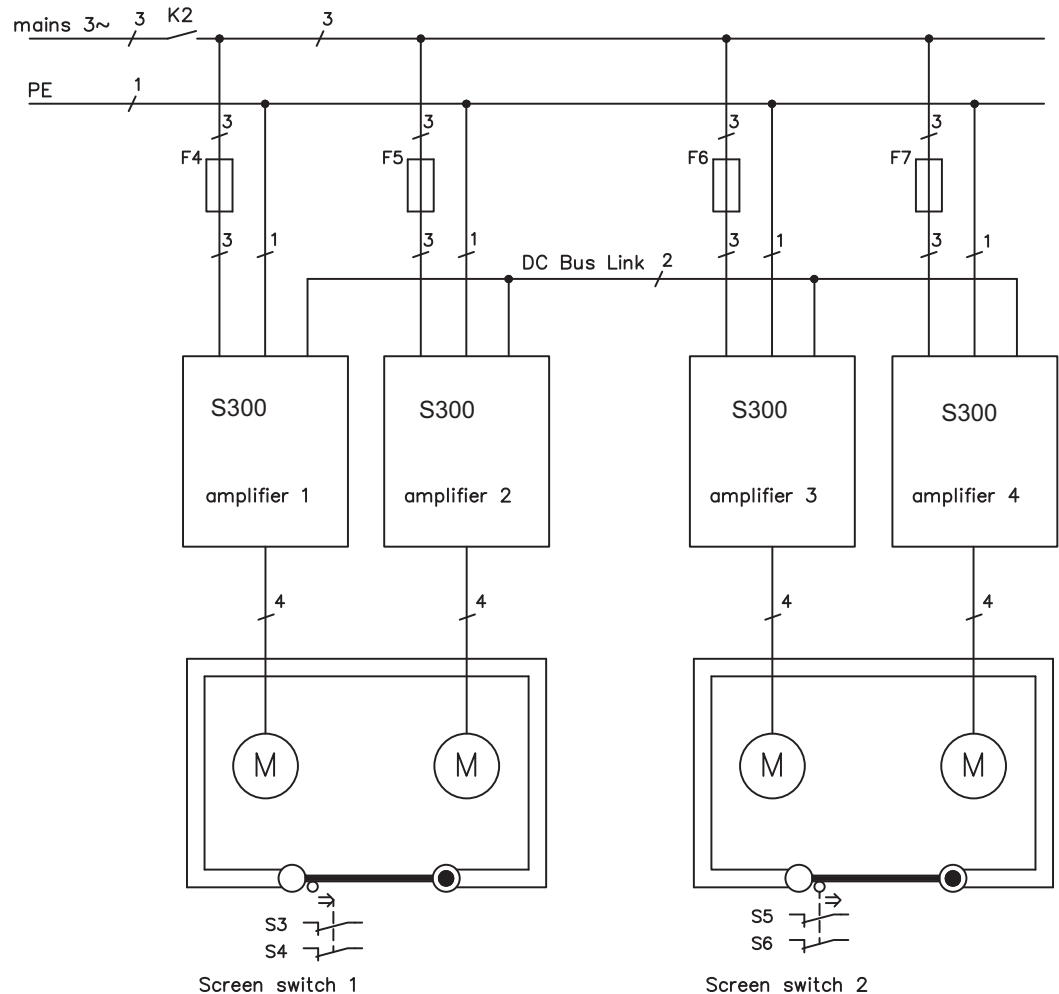

## 6.10 Shock-hazard protection

### 6.10.1 Leakage current

Leakage current via the PE conductor results from the combination of equipment and cable leakage currents. The leakage current frequency pattern comprises a number of frequencies, whereby the residual-current circuit breakers definitively evaluate the 50Hz current. As a rule of thumb, the following assumption can be made for leakage current on our low-capacity cables at a mains voltage of 400 V, depending on the clock frequency of the output stage:

$I_{\text{leak}} = n \times 20\text{mA} + L \times 1\text{mA/m}$  at 8kHz clock frequency at the output stage

$I_{\text{leak}} = n \times 20\text{mA} + L \times 2\text{mA/m}$  at a 16kHz clock frequency at the output stage

(where  $I_{\text{leak}}$ =leakage current,  $n$ =number of amplifiers,  $L$ =length of motor cable)

At other mains voltage ratings, the leakage current varies in proportion to the voltage.

Example: 2 x servo amplifiers + a 25m motor cable at a clock frequency of 8kHz:  
 $2 \times 20\text{mA} + 25\text{m} \times 1\text{mA/m} = 65\text{mA}$  leakage current.

#### NOTE

Since the leakage current to PE is more than 3.5 mA, in compliance with IEC 61800-5-1 the PE connection must either be doubled or a connecting cable with a cross-section  $>10\text{mm}^2$  must be used. Use the PE terminals and the PE bolt in order to fulfil this requirement.

The following measures can be used to minimise leakage currents.

- Reduce the length of the engine cable
- Use low-capacity cables (see p.51)
- Remove external EMC filters (radio-interference suppressors are integrated)

### 6.10.2 Residual current protective device (RCD)

In conformity with IEC 60364-4-41 – Regulations for installation and IEC 60204 – Electrical equipment of machinery, residual current protective devices (called RCD below) can be used provided the requisite regulations are complied with. The S300 is a 3-phase system with a B6 bridge. Therefore, **RCDs which are sensitive to all currents** must be used in order to detect any D.C. fault current.

Rated residual currents in the RCD

|                   |                                                                                                             |
|-------------------|-------------------------------------------------------------------------------------------------------------|
| <b>10 -30 mA</b>  | Protection against "indirect contact" for stationary and mobile equipment, as well as for "direct contact". |
| <b>50 -300 mA</b> | Protection against "indirect contact" for stationary equipment                                              |

#### NOTE

**Recommendation: In order to protect against direct contact (with motor cables shorter than 5 m) we recommend that each servo amplifier be protected individually using a 30mA RCD which is sensitive to all currents.**

If you use a selective RCD, the more intelligent evaluation process will prevent spurious tripping of the RCD.

### 6.10.3 Isolating transformers

When protection against indirect contact is absolutely essential despite a higher leakage current, or when an alternative form of shock-hazard protection is sought, the S300 can also be operated via an isolating transformer (schematic connection see p.56). A ground-leakage monitor can be used to monitor for short circuits.

#### NOTE

**Be advised to keep the length of wiring between the transformer and the servo amplifier as short as possible.**

## 7 Mechanical Installation

### 7.1 Safety Instructions

**⚠ CAUTION** There is a danger of electrical shock by high EMC level which could result in injury, if the servo amplifier (or the motor) isn't properly EMC-grounded. Do not use painted (i.e. non-conductive) mounting plates.

**NOTICE** Protect the servo amplifier from impermissible stresses. In particular, do not let any components become bent or any insulation distances altered during transport and handling. Avoid contact with electronic components and contacts.

**NOTICE** The servo amplifier will switch-off itself in case of overheating. Ensure that there is an adequate flow of cool, filtered air into the bottom of the control cabinet, or use a heat exchanger. Please refer to page 26.

**NOTICE** Don't mount devices, which produce magnetic fields, directly beside the servo amplifier. Strong magnetic fields could directly affect internal components. Install devices which produce magnetic field with distance to the servo amplifiers and/or shield the magnetic fields.

### 7.2 Guide to mechanical installation

The following notes should help you to carry out the mechanical installation.


|                            |                                                                                                                                                                                                     |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Site</b>                | In a closed control cabinet. Please refer to page 26.<br>The site must be free from conductive or corrosive materials.<br>For the mounting position in the cabinet ⇒ p.44.                          |
| <b>Ventilation</b>         | Check that the ventilation of the servo amplifier is unimpeded, and keep within the permitted ambient temperature ⇒ p.26. Keep the required space clear above and below the servo amplifier ⇒ p.44. |
| <b>Assembly</b>            | Assemble the servo amplifier and power supply close together, on the conductive, <b>grounded</b> mounting plate in the cabinet.                                                                     |
| <b>Grounding Shielding</b> | For EMC-compliant shielding and grounding ⇒ p.55.<br>Ground the mounting plate, motor housing and CNC-GND of the control system. Notes on connection techniques ⇒ p.50.                             |

## 7.3

## Assembly


Material: 3 x M5 hexagon socket screws to ISO 4762

Tool required : 4 mm Allen key

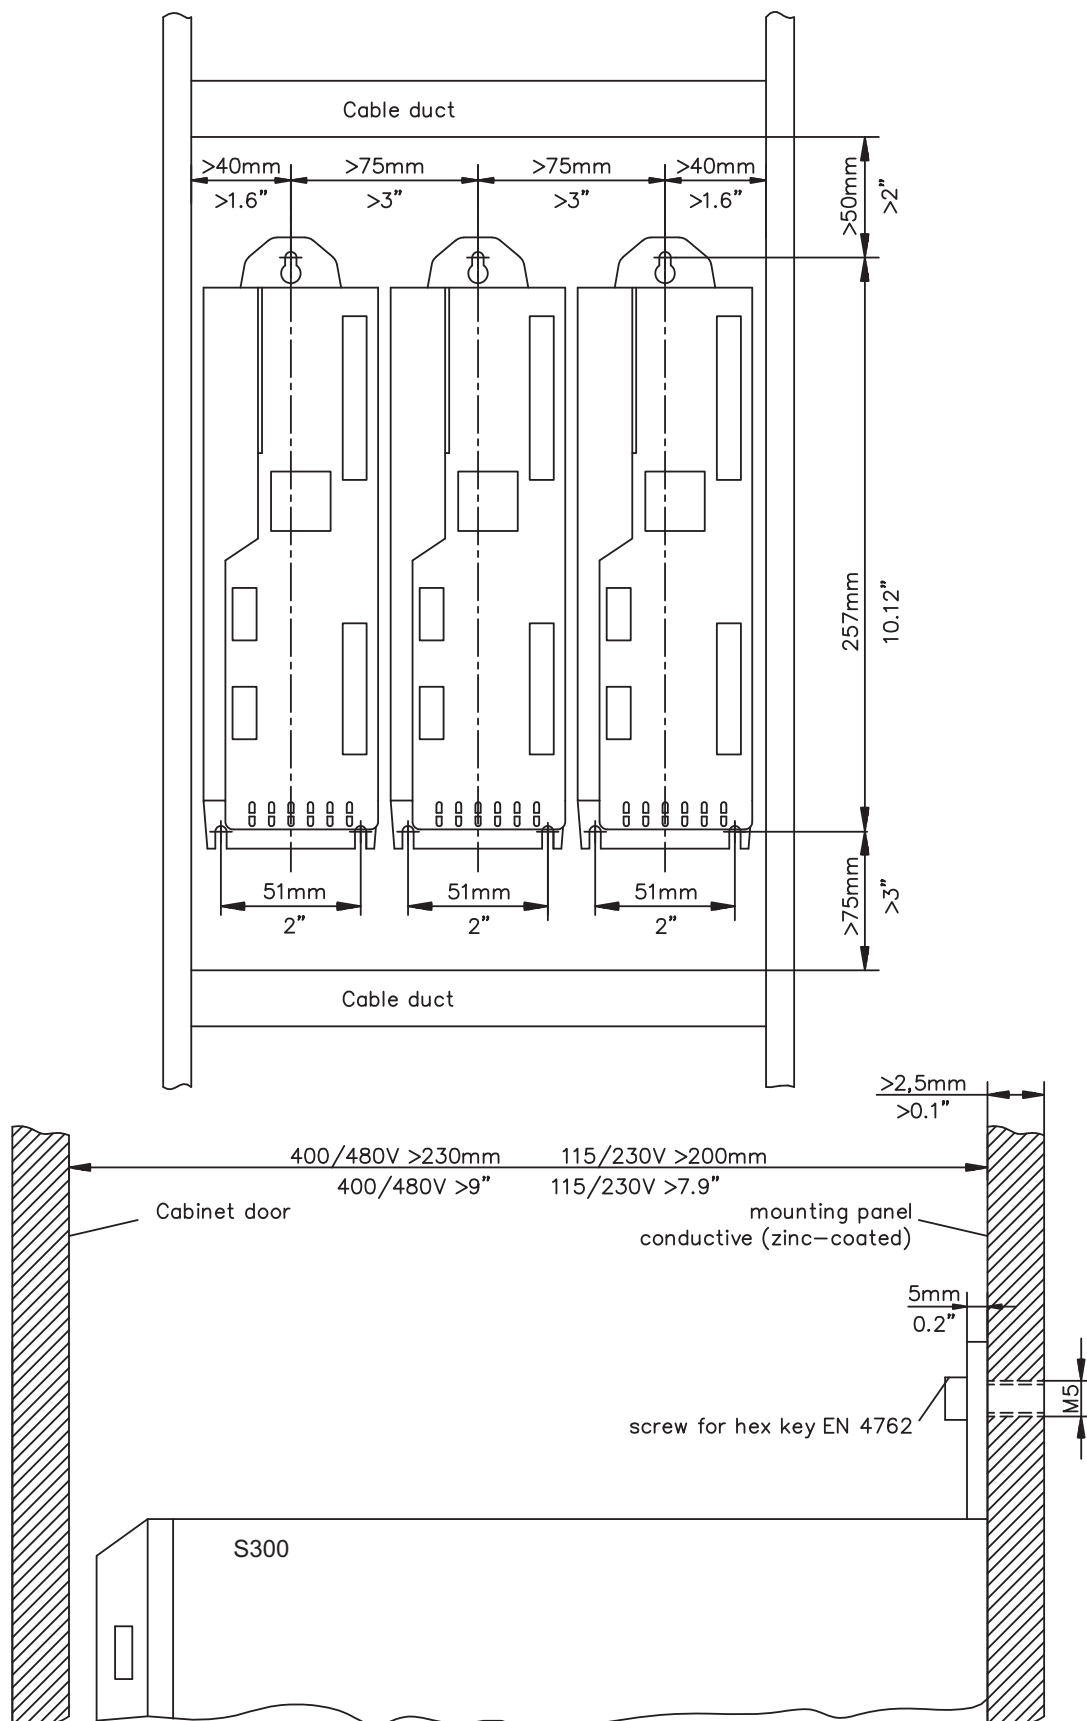

## 7.4

## Dimensions

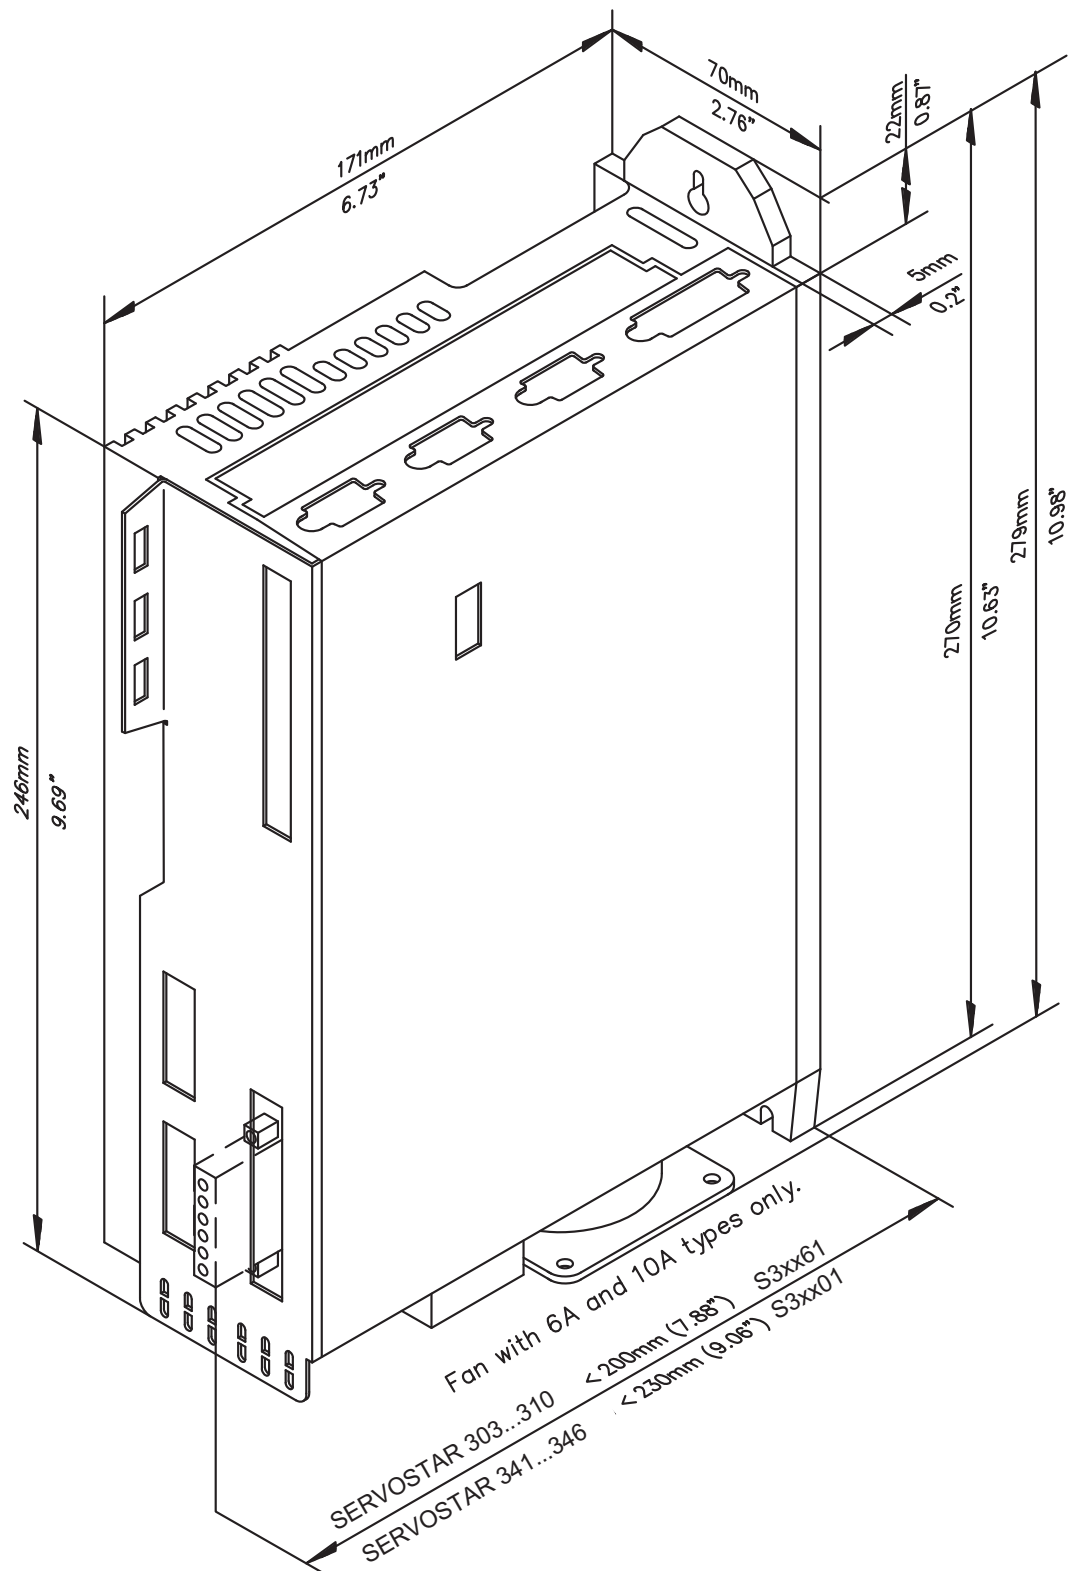

This page has been deliberately left blank.

## 8 Electrical installation

### 8.1 Safety Instructions

**⚠ DANGER** Never undo any electrical connections to the servo amplifier while it is live. There is a danger of electrical arcing with damage to contacts and serious personal injury. Wait at least five minutes after disconnecting the servo amplifier from the main supply power before touching potentially live sections of the equipment (e.g. contacts) or undoing any connections. Capacitors can still have dangerous voltages present up to five minutes after switching off the supply power. To be sure, measure the voltage in the DC Bus link and wait until it has fallen below 40V. Control and power connections can still be live, even if the motor is not rotating.

**NOTICE** Wrong mains voltage, unsuitable motor or wrong wiring will damage the amplifier. Check the combination of servo amplifier and motor. Compare the rated voltage and current of the units. Implement the wiring according to the connection diagram on page 49. Make sure that the maximum permissible rated voltage at the terminals L1, L2, L3 or +DC, -DC is not exceeded by more than 10% even in the most unfavorable circumstances (see IEC 60204-1).

**NOTICE** Excessively high external fusing will endanger cables and devices. The fusing of the AC supply input and 24V supply must be installed by the user, best values are given on p.25. Hints for use of Residual-current circuit breakers (FI) ⇒ p.42.

**NOTICE** Correct wiring is the basis for reliable functioning of the servo system. Route power and control cables separately. We recommend a distance of at least 200mm. This improves the interference immunity. If a motor power cable is used that includes cores for brake control, the brake control cores must be separately shielded. Ground the shielding at both ends. Ground all shielding with large areas (low impedance), with metalized connector housings or shield connection clamps wherever possible. Notes on connection techniques can be found on page 50.

**NOTICE** Feedback lines may not be extended, since thereby the shielding would be interrupted and the signal processing could be disturbed. Lines between amplifiers and external brake resistor must be shielded. Install all power cables with an adequate cross-section, as per IEC 60204 (⇒ p.26) and use the requested cable material (⇒ p. 51) to reach max. cable length.

**NOTICE** The servo amplifier's status must be monitored by the PLC to acknowledge critical situations. Wire the BTB/RTO contact in series into the emergency stop circuit of the installation. The emergency stop circuit must operate the supply contactor.

**NOTE** It is permissible to use the setup software to alter the settings of the servo amplifier. Any other alterations will invalidate the warranty.

## 8.2 Guide to electrical installation

The following notes should help you to carry out the electrical installation.

**Cable selection** Select cables in accordance with IEC 60204 ⇒ p.26.

### Grounding Shielding

For EMC-compliant shielding and grounding ⇒ p.55.  
Ground the mounting plate, motor housing and CNC-GND of the control system. Notes on connection techniques ⇒ p.50.

### Wiring

**Route power leads and control cables separately.**  
**Wire the BTB/RTO contact in series into the emergency stop circuit of the system.**

- Connect the digital control inputs and outputs.
- Connect up AGND (also if fieldbuses are used).
- Connect the analog input source, if required.
- Connect the feedback device.
- Connect the encoder emulation, if required.
- Connect the expansion card  
(see corresponding notes from page 111).
- Connect the motor cable  
Connect shielding to EMC connectors (shield connection) at both ends. Use the motor choke (3YL) if cable > 25 meters.
- Connect motor-holding brake, connect shielding to EMC connector/shield connection at both ends.
- If required, connect the external brake resistor (with fusing).
- Connect the auxiliary supply  
(maximum permissible voltage values ⇒ p.26).
- Connect the main electrical supply  
(maximum permissible voltage values ⇒ p.26).
- Connect the PC (⇒ p.90).

### Final check

- Final check of the implementation of the wiring against the wiring diagrams that have been used.

## 8.3 Wiring

The installation procedure is described as an example. A different procedure may be appropriate or necessary, depending on the application of the equipments.  
We provide further know-how through **training courses** (on request).

### 8.3.1 Safety instructions

#### **⚠ DANGER**

There is a danger of electrical arcing with serious personal injury. Only install and wire up the equipment when it is not live, i.e. when neither the electrical supply nor the 24 V auxiliary voltage nor the supply voltages of any other connected equipment is switched on.

Take care that the cabinet is safely disconnected (with a lock-out, warning signs etc.). The individual voltages will be switched on for the first time during setup.

#### **⚠ CAUTION**

Only professional staff who are qualified in electrical engineering are allowed to install the servo amplifier.

#### **NOTE**

The ground symbol , which you will find in all the wiring diagrams, indicates that you must take care to provide an electrically conductive connection with the largest feasible surface area between the unit indicated and the mounting plate in the control cabinet. This connection is for the effective grounding of HF interference, and must not be confused with the PE-symbol  (PE = protective earth, safety measure as per IEC 60204).


#### **NOTE**

Use the following connection diagrams :

|                                       |             |
|---------------------------------------|-------------|
| Safety Function STO                   | : page 40   |
| Overview                              | : page 55   |
| Mains power                           | : page 57   |
| Motor                                 | : page 60   |
| Feedback                              | : page 61ff |
| Electronic Gearing / Master Slave     |             |
| Master-Slave                          | : page 81   |
| Pulse-Direction                       | : page 82   |
| Encoder Emulation                     |             |
| ROD (A quad B)                        | : page 85   |
| SSI                                   | : page 86   |
| Digital and analog inputs and outputs | : page 87ff |
| RS232 / PC                            | : page 90   |
| CAN Interface                         | : page 91   |
| Expansion cards                       |             |
| I/O-14/08                             | : page 114  |
| PROFIBUS                              | : page 115  |
| SERCOS                                | : page 117  |
| DeviceNet                             | : page 118  |
| SynqNet                               | : page 122  |
| 2CAN                                  | : page 124  |
| Options                               |             |
| EtherCAT                              | : page 125  |
| FAN                                   | : page 126  |
| EtherCAT&FAN                          | : page 126  |

## 8.3.2

## Shielding connection to the front panel

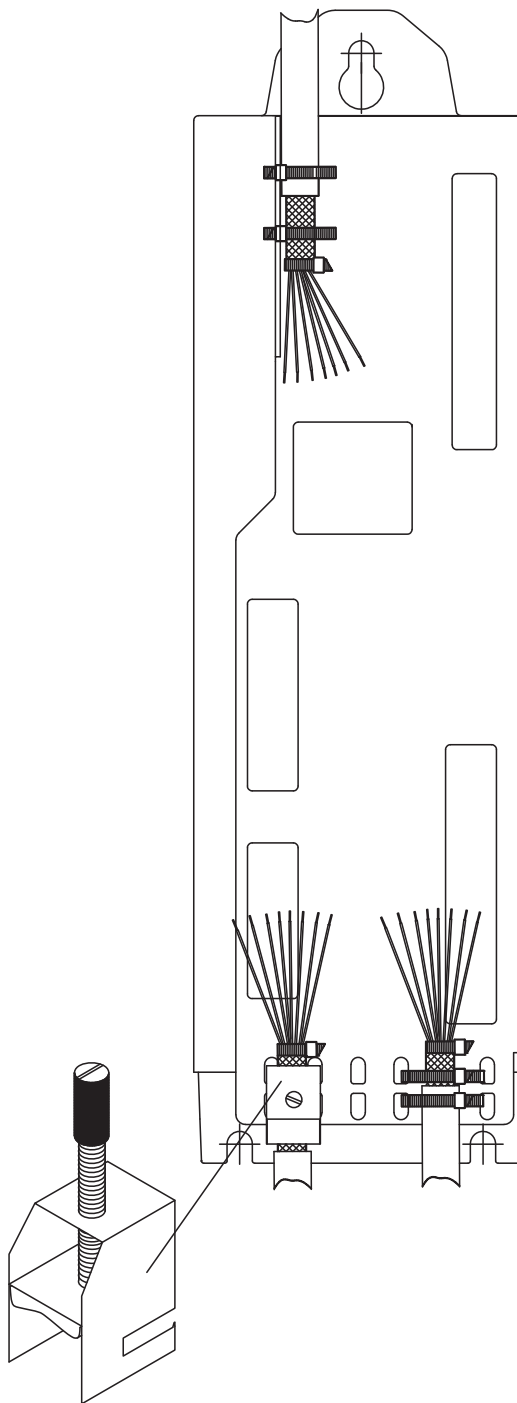

Remove the outside shroud of the cable and the shielding braid on the desired core length. Secure the cores with a cable tie.

Remove the outside shroud of the line on a length from for instance 30mm without damaging the shielding braid.

Pull a cable tie by the slot in the shielding rail on the front panel of the servo amplifier.

Press the shielding of the cable firmly against the front panel with the cable tie.

Use the shield clamp that is delivered with the motor cable for the shield connection of the motor cable. The clamp must be hooked in the lower shroud and guarantees optimal contact between shield and shroud.

### 8.3.3 Technical data for connecting cables

Further information on the chemical, mechanical and electrical characteristics of the cables can be obtained from our customer service.

#### **NOTE**


Observe the rules in the section "Conductor cross-sections" on page 26. To reach the max. permitted cable length, you must use cable material that matches the capacitance requirements listed below.

#### Capacitance (phase to shield)

Motor cable less than 150 pF/m

Resolver/Encoder cable less than 120 pF/m

Example: Motor cable

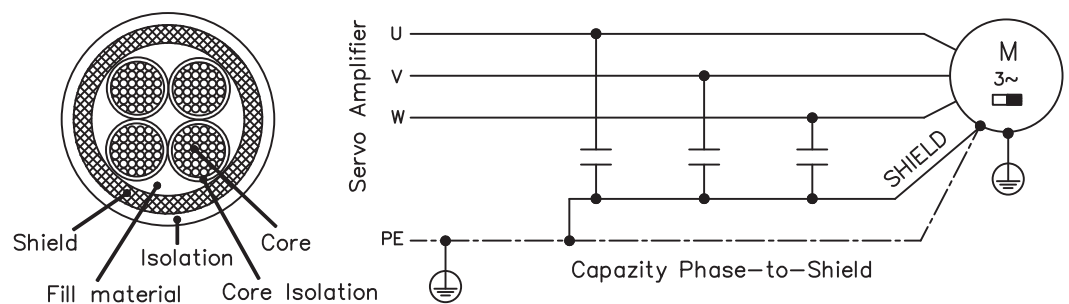


#### Technical data

For a detailed description of cable types and how to assemble them, please refer to the accessories manual.

#### **NOTE**

Motor cables longer than 25m require the use of a motor choke 3YL or 3YLN.

## 8.4 Components of a servo system

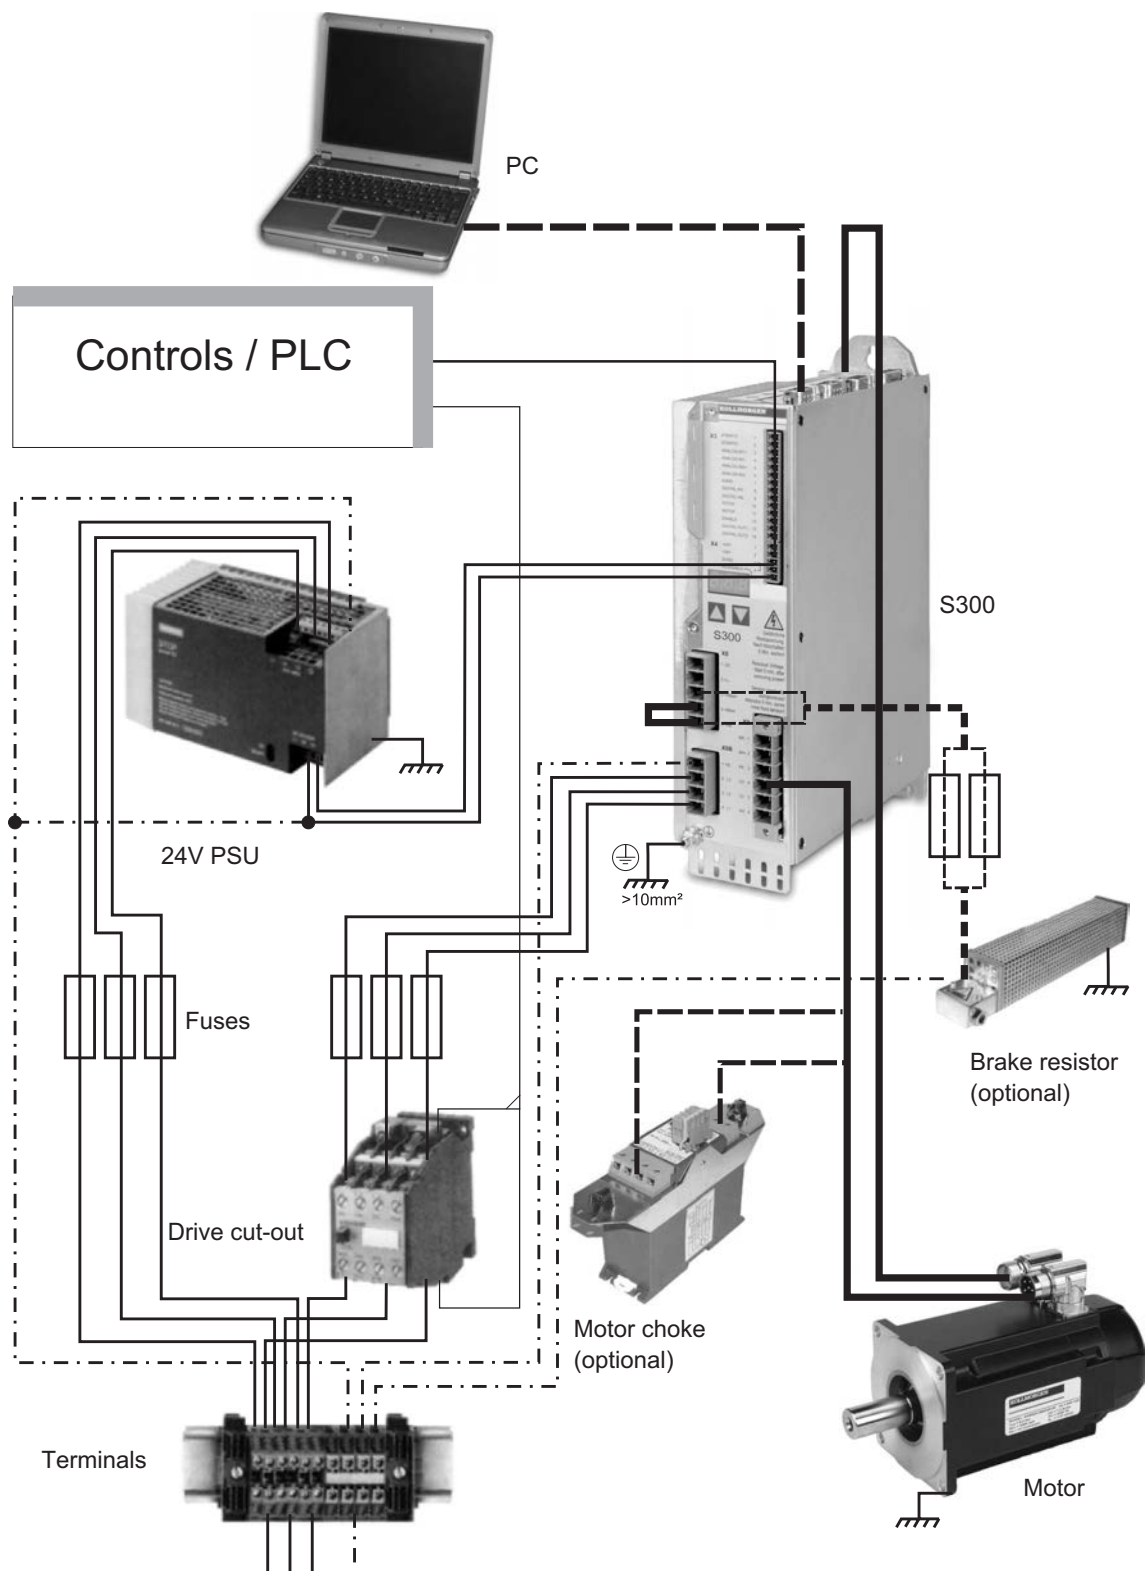


### NOTE


Cables drawn bold are shielded. Electrical ground is drawn with dash-dotted lines. Optional devices are connected with dashed lines to the servo amplifier. The required accessories are described in our accessories manual.

## 8.5 Block diagram

The block diagram below just provides an overview.

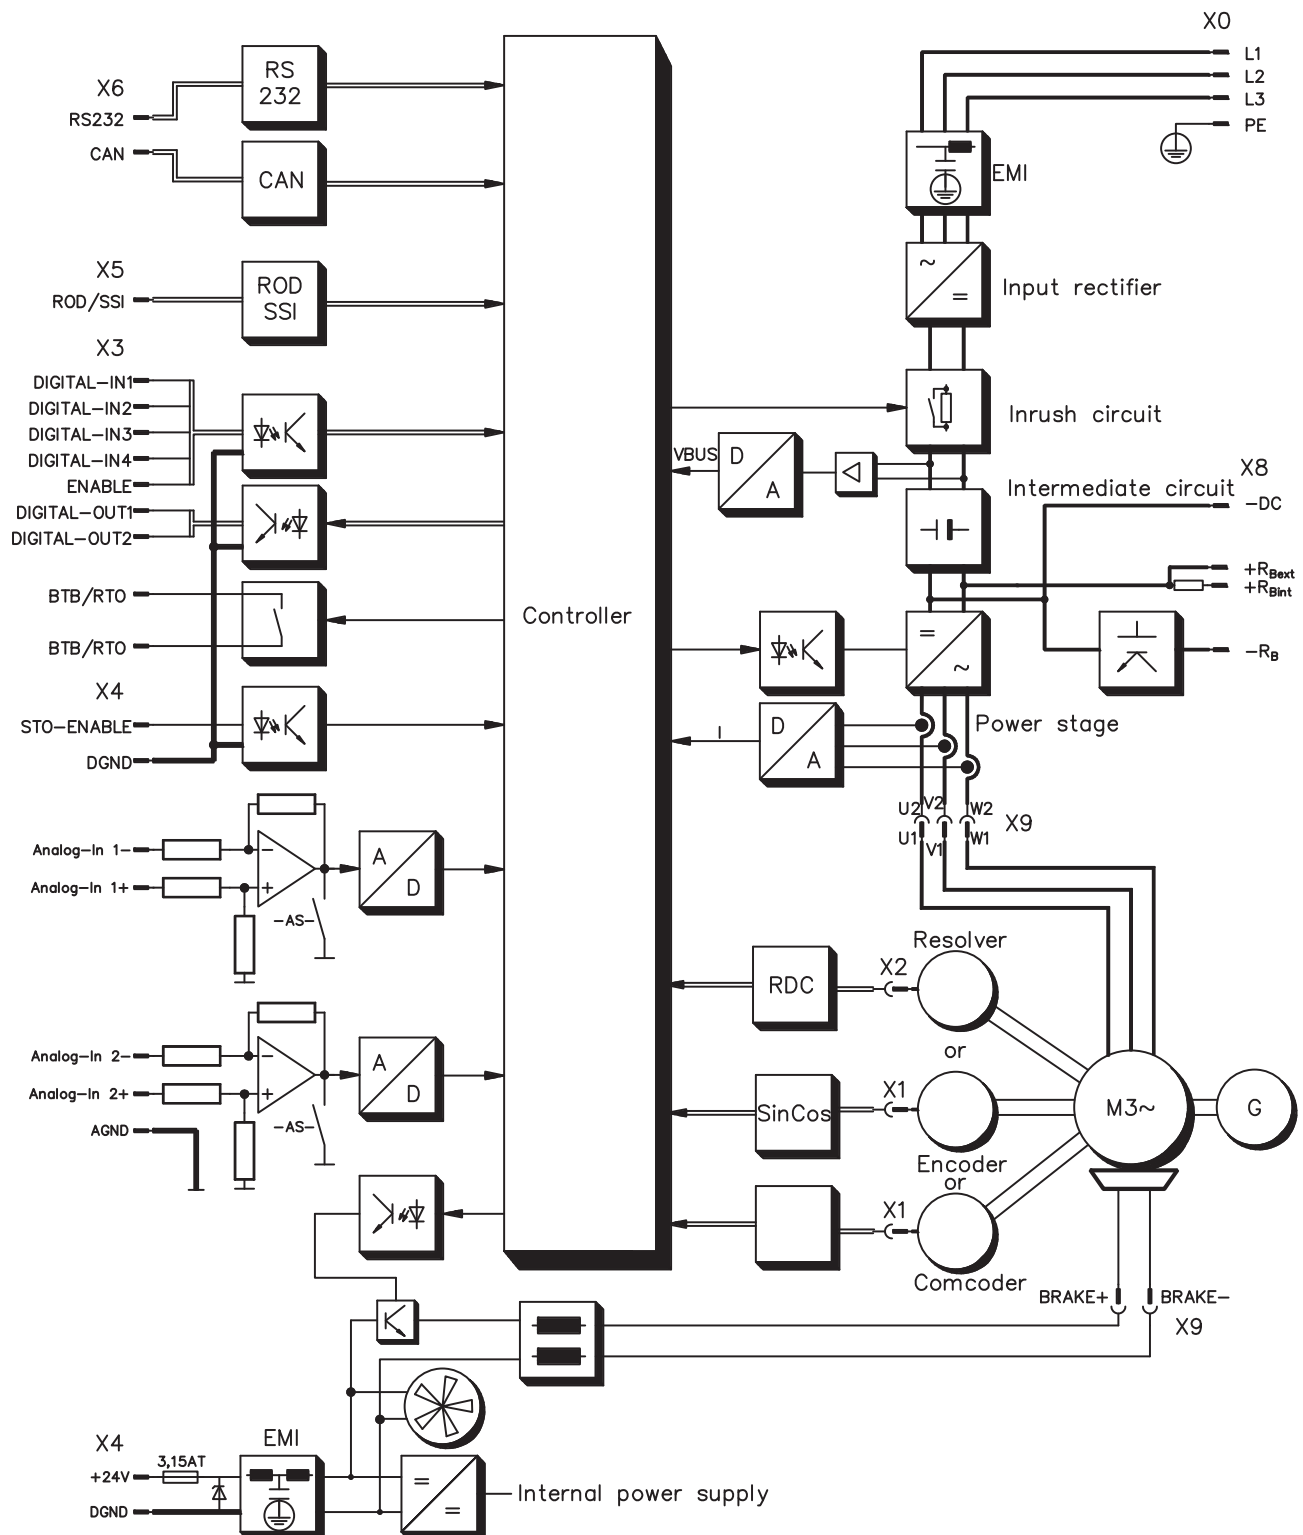


## 8.6 Connector assignments

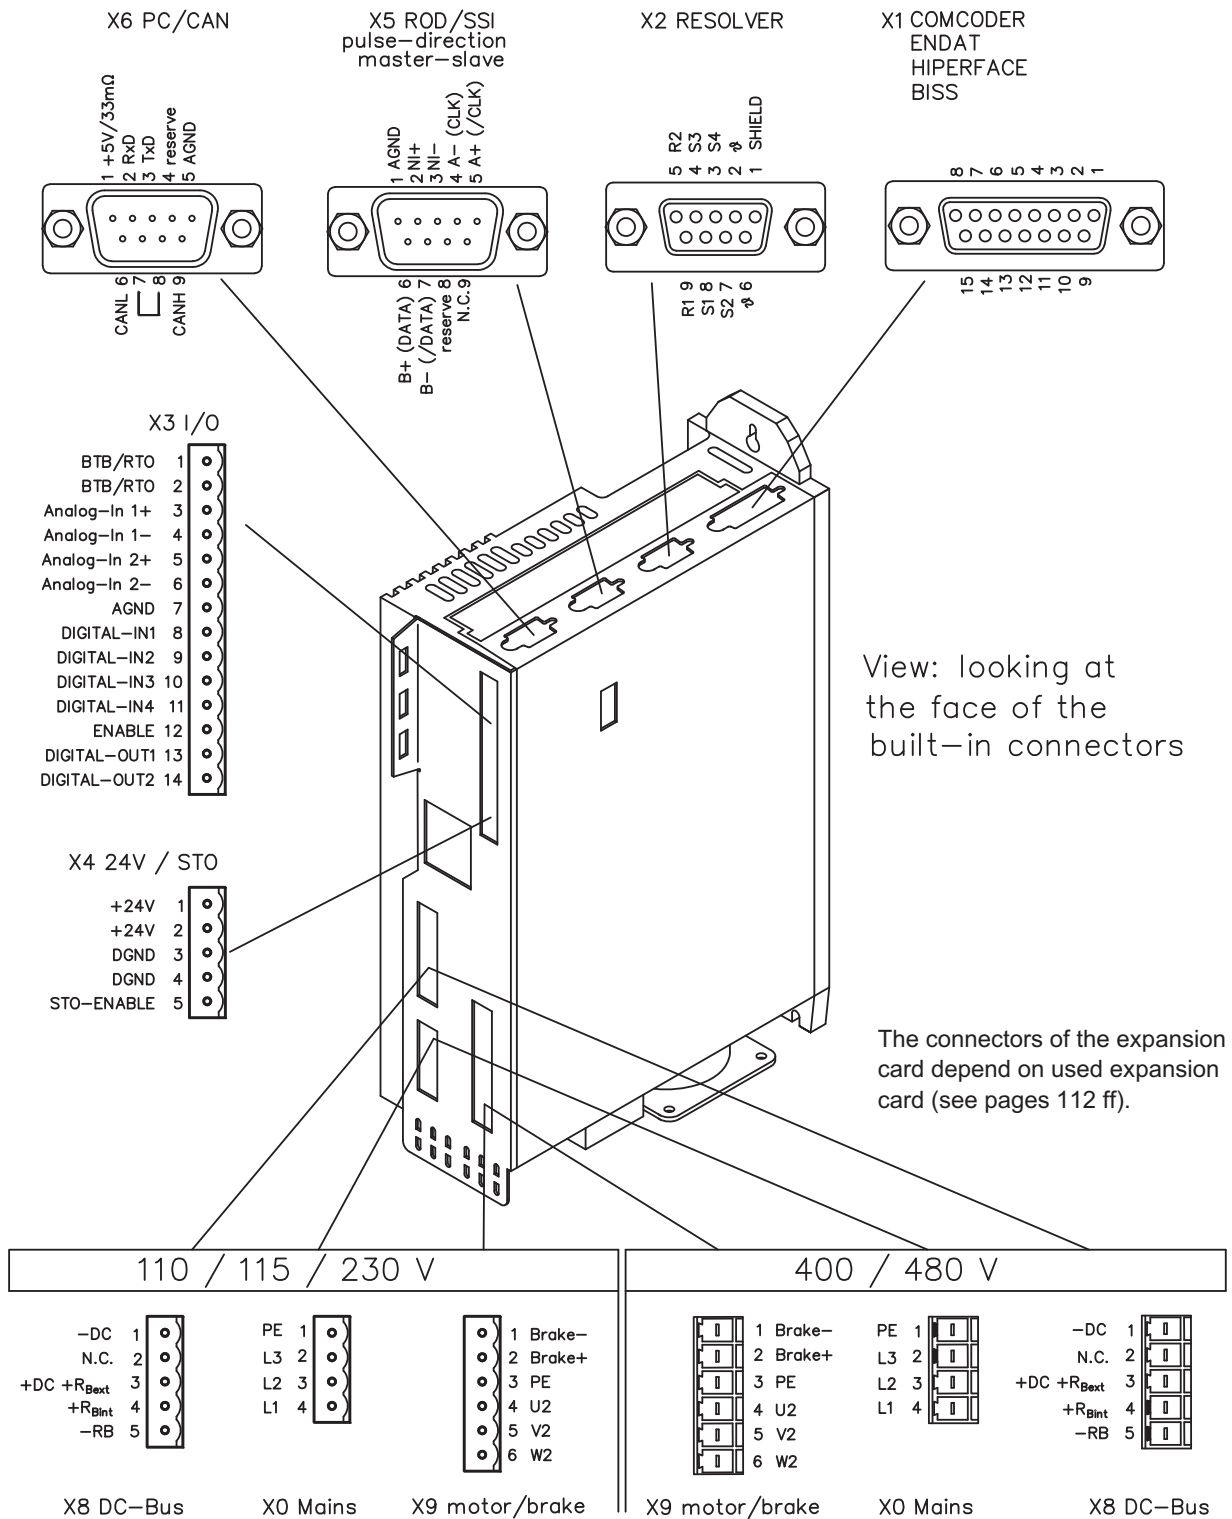

■ Coding Keys

## 8.7 Connection diagram (Overview)

Refer to the Safety Instructions (⇒ p.10)  
and Use as Directed (⇒ p.11) !

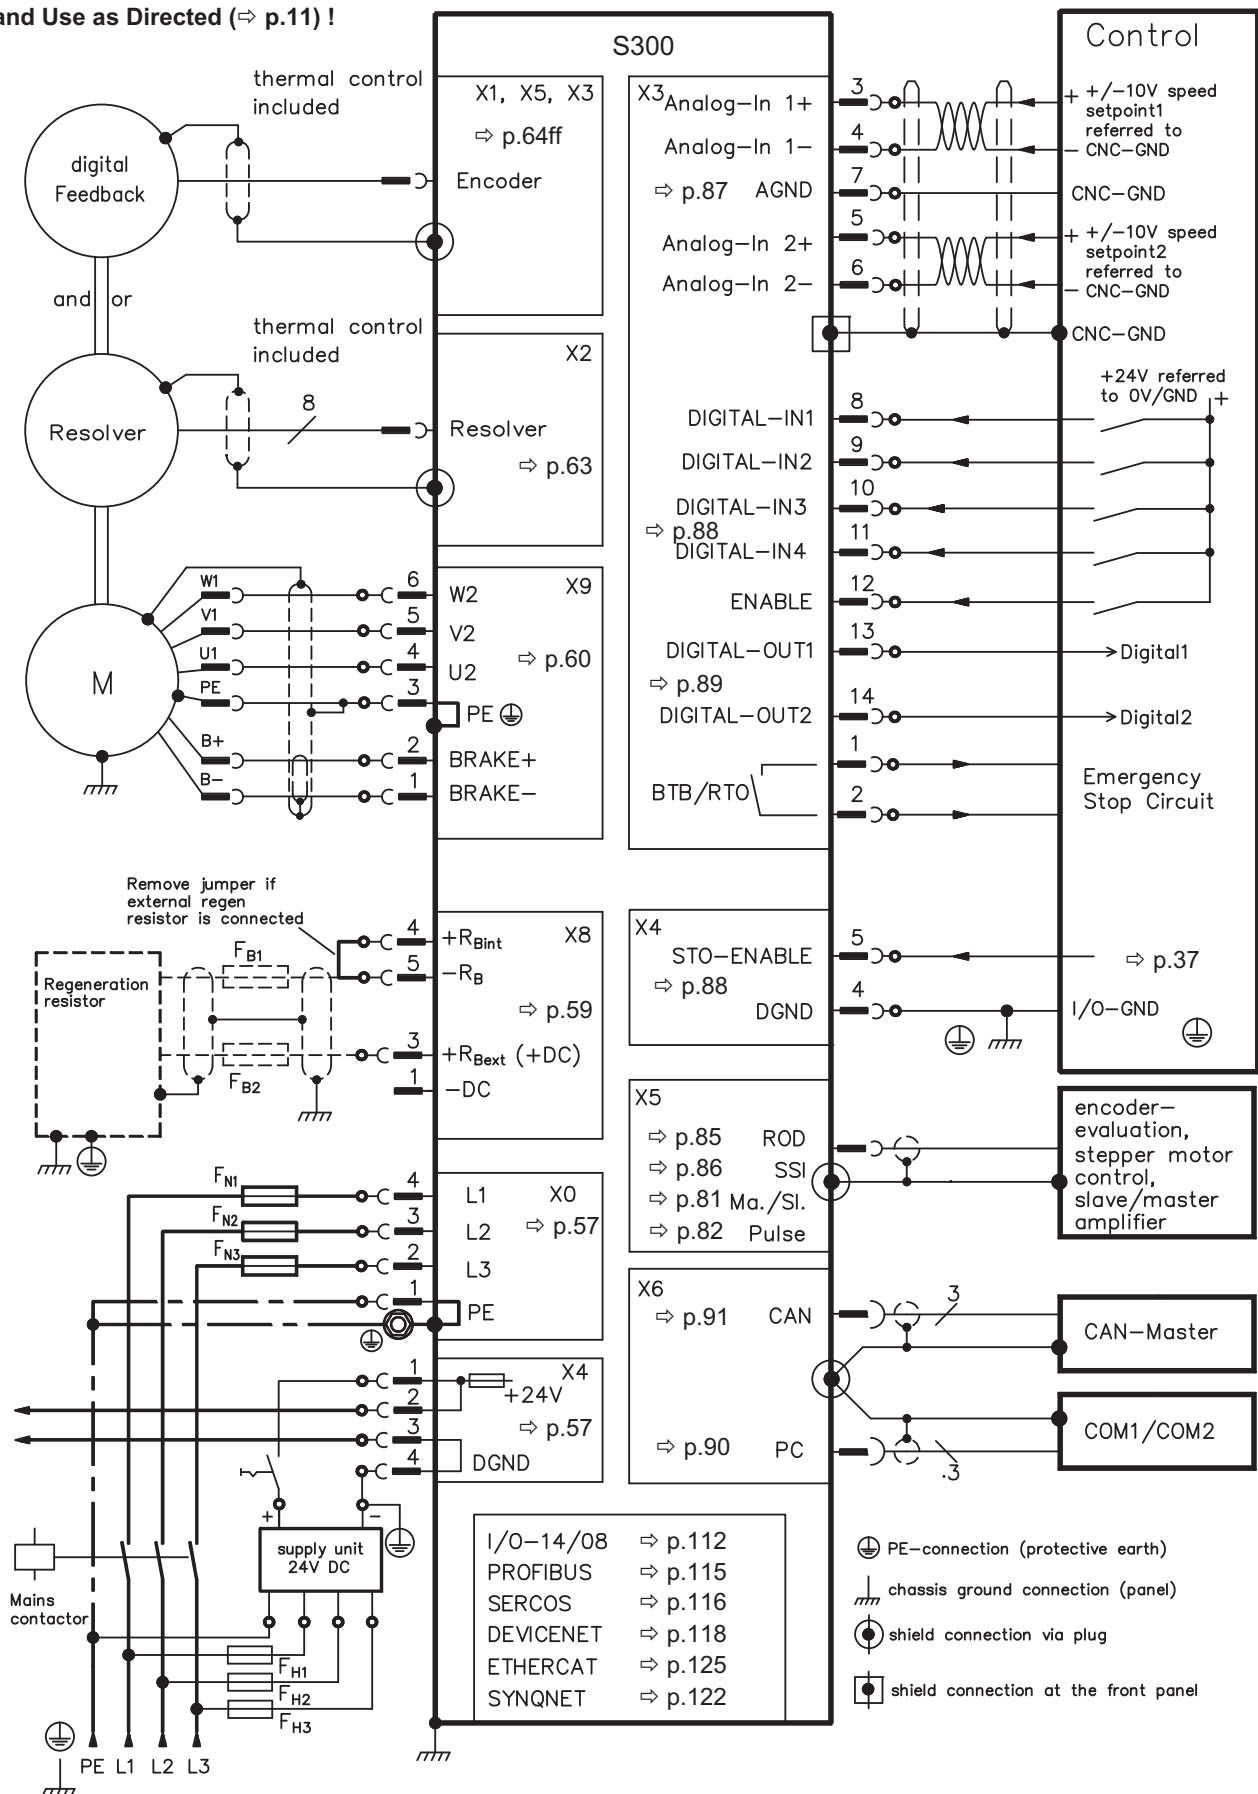


## 8.8 Electrical supply

### 8.8.1 Connection to various mains supply networks




**WARNING** There is a danger of electrical shock with serious personal injury if the servo amplifier isn't properly grounded. An isolating transformer is always required for 400 ... 480V networks that are asymmetrically grounded or not grounded.

110V : SERVOSTAR 303-310\*  
230V : all types

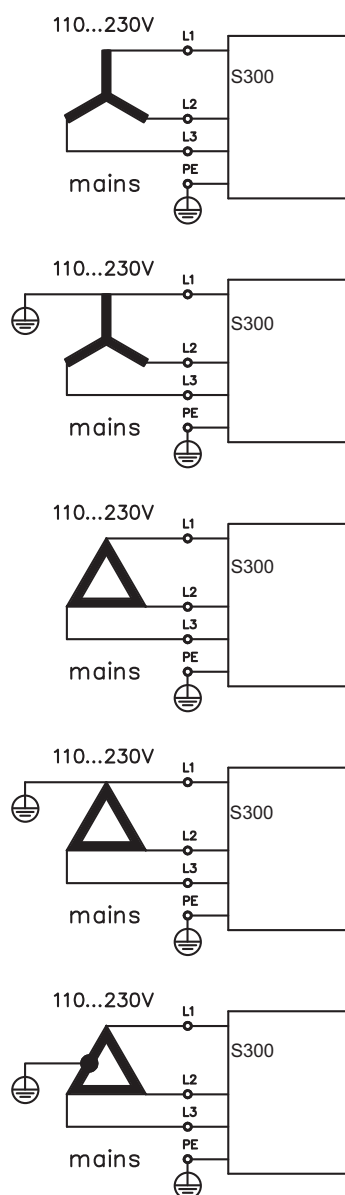

400V / 480V : SERVOSTAR 341-346\*

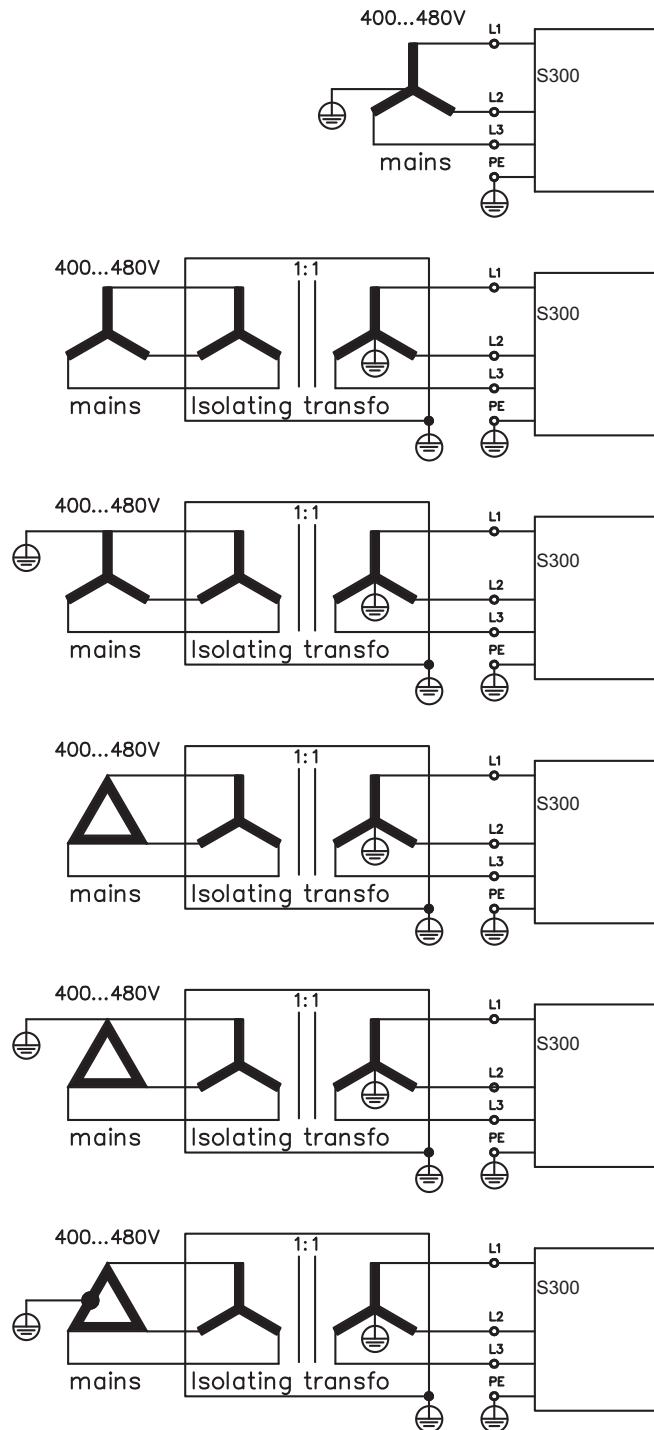


\* Order code reference see p. 129

## 8.8.2

**24V auxiliary supply (X4)**


- External 24V DC power supply, electrically isolated, e.g. via an isolating transformer
- Required current rating ⇒ p.23
- Integrated EMC filter for the 24V auxiliary supply

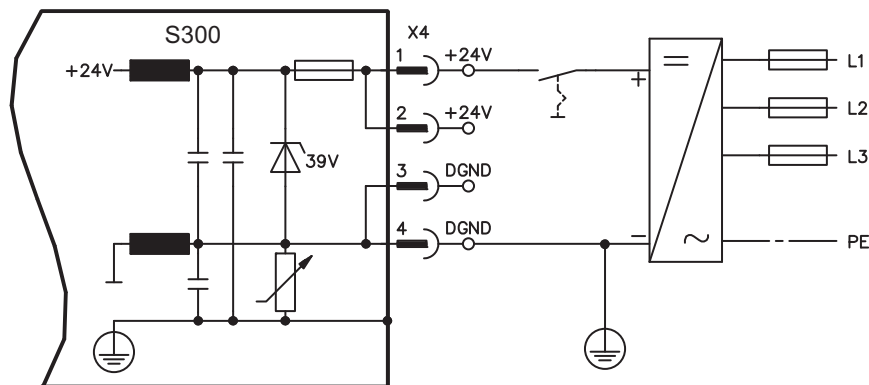


## 8.8.3

**Mains supply connection (X0), three phase**

- Directly to 3-phase supply network, filter is integrated
- Fusing (e.g. fusible cut-outs) to be provided by the user ⇒ p.25

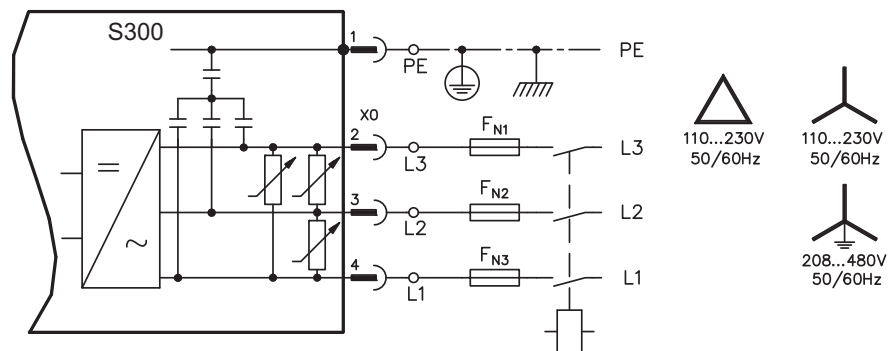

## 8.8.4

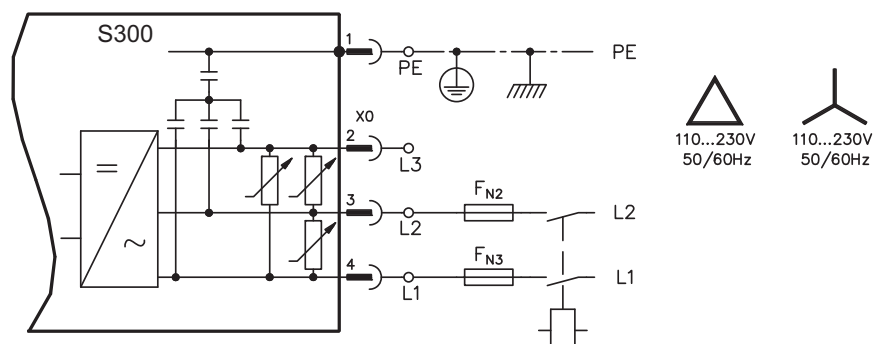
**Mains supply connection (X0), two phase without neutral**

## 8.8.5

**Mains supply connection (X0), single phase with neutral**

S300 with 230V version (SERVOSTAR 303-310) can be operated with a single phase mains supply. In single phase operation the electrical power of the amplifier is limited.

The table below shows the maximum rated power ( $P_n$ ) and peak power ( $P_p$ ) with single phase operation:

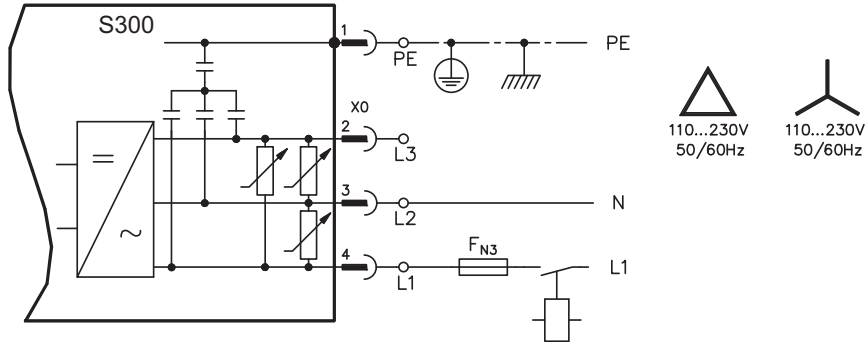

|                       | SERVOSTAR 303 |           | SERVOSTAR 306 |           | SERVOSTAR 310 |           |
|-----------------------|---------------|-----------|---------------|-----------|---------------|-----------|
| max. electrical power | $P_n$ / W     | $P_p$ / W | $P_n$ / W     | $P_p$ / W | $P_n$ / W     | $P_p$ / W |
| VBUSBAL0 (115V)       | 423           | 704       | 423           | 704       | 423           | 704       |
| VBUSBAL1 (230V)       | 845           | 2535      | 1127          | 2535      | 1127          | 2535      |


The maximum possible current depends on the motor torque constant  $k_T$  and on the maximum speed of the connected motor:

$$\text{Continuous current: } I_{rms} = \frac{P_n \cdot 60}{2 \cdot \pi \cdot k_T \cdot n} \quad \text{peak current: } I_{peak} = \frac{P_p \cdot 60}{2 \cdot \pi \cdot k_T \cdot n}$$

**Speed can be limited with the ASCII parameter VLIM to reach the necessary current for the required torque.**


**NOTE**

With a special motor type ( $k_T$  = constant depending on the motor type) the possible output current depending on speed is similar to the diagram below:

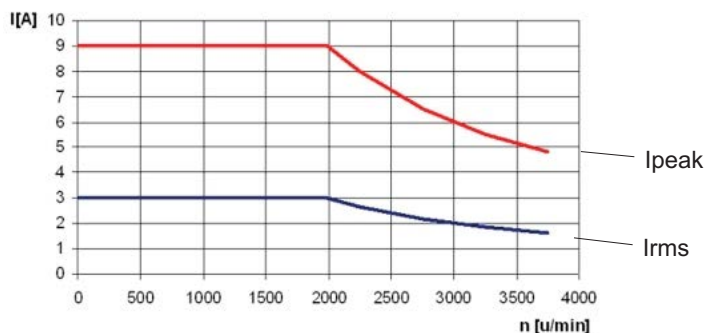


## 8.9 External brake resistor (X8)

Remove the plug-in link between the terminals X8/5 ( $-R_B$ ) and X8/4 ( $+R_{bint}$ ).

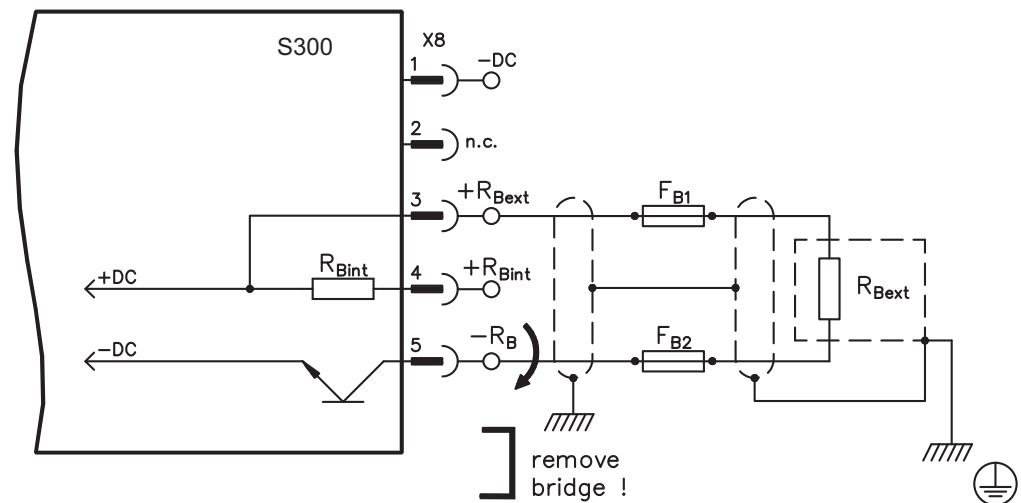

## 8.10 DC bus link (X8)

Terminals X8/1 ( $-DC$ ) and X8/3 ( $+R_{Bext}$ ). Can be connected in parallel, whereby the brake power is divided between all the amplifiers that are connected to the same DC bus link circuit.

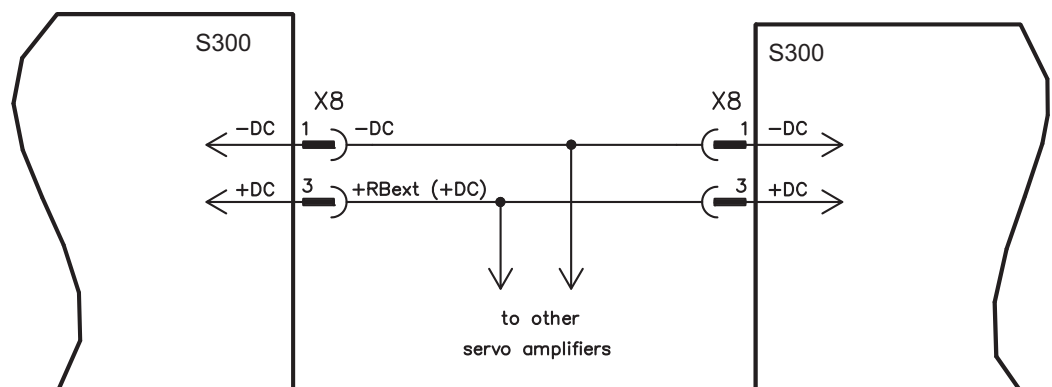

### NOTICE

The servo amplifiers can be destroyed, if DC bus link voltages are different. Only servo amplifiers with mains supply from the same mains (identical mains supply voltage) may be connected by the DC bus link. Use unshielded single cores (2.5mm<sup>2</sup>) with a max. length of 200 mm. Use shielded cables for longer lengths.

|      | S701...724 with<br>HWR* < 2.00 | S701...724 with<br>HWR* ≥ 2.00 | S300 |
|------|--------------------------------|--------------------------------|------|
| S300 | no                             | ⊗                              | ⊗    |

\*HWR = Hardware Revision (see nameplate)

### SERVOSTAR 303-310

The sum of the rated currents for all of the servo amplifiers connected in parallel to an SERVOSTAR 303-310 must not exceed 24 A.

### SERVOSTAR 341-346

The sum of the rated currents for all of the servo amplifiers connected in parallel to an SERVOSTAR 341-346 must not exceed 40A.

Information for fusing can be found in the "Product WIKI", check [www.wiki-kollmorgen.eu](http://www.wiki-kollmorgen.eu).

## 8.11 Motor connection with brake (X9)

Together with the motor supply cable and motor winding, the power output of the servo amplifier forms an oscillating circuit. Characteristics such as cable capacity, cable length, motor inductance, frequency and voltage rise speed (see Technical Data, p. 23) determine the maximum voltage in the system.

### NOTICE


The dynamic voltage rise can lead to a reduction in the motor's operating life and, on unsuitable motors, to flashovers in the motor winding.

- Only install motors with insulation class F (acc. to IEC60085) or above
- Only install cables that meet the requirements on p.26 and p.51.

### CAUTION

The brake function does not ensure personnel safety! Hanging load (vertical axes) require an additional mechanical brake which must be safely operated


#### Cable length $\leq 25$ meters

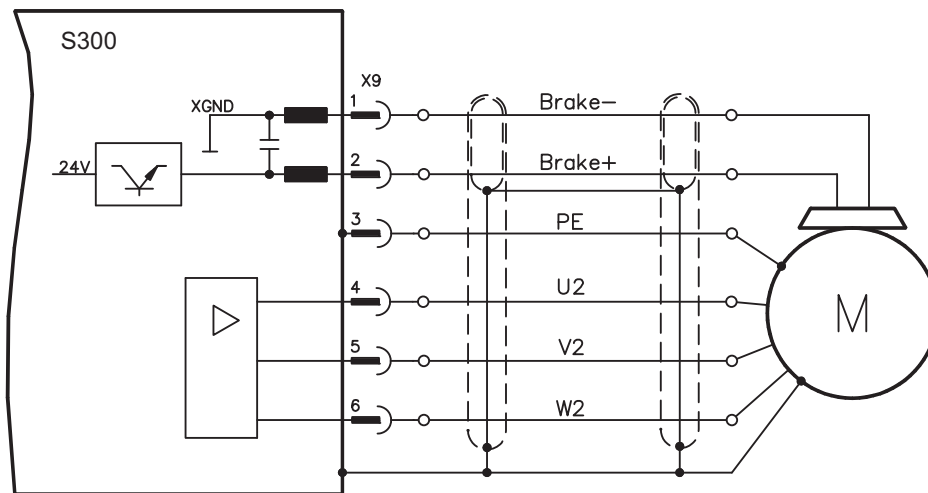

#### Cable length $>25$ meters

### NOTICE

With long motor cables leakage currents endanger the output stage of the S300. For cable lengths above 25m up to max. 50m, a motor choke 3YL or 3YLN (see accessories manual) must be wired into the motor cable, close to the amplifier.

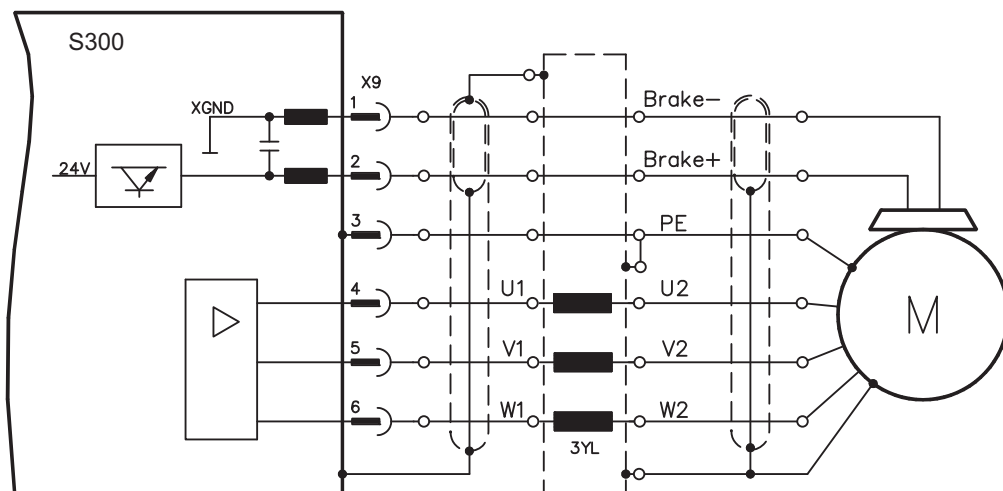

## 8.12

## Feedback systems

Every closed servo system will normally require at least one feedback device for sending actual values from the motor to the servo drive. Depending on the type of feedback device used, information will be fed back to the servo amplifier using digital or analog means. Up to three feedback devices can be used at the same time. S300 supports the most common types of feedback device whose functions must be assigned with the parameters

**FBTYPE** set on DRIVEGUI.EXE screen page FEEDBACK, primary Feedback, wiring ⇒ p.61ff

**EXTPOS** set on DRIVEGUI.EXE screen page POSITION CONTROLLER, secondary Feedback, wiring ⇒ p.61ff


**GEARMODE** set on DRIVEGUI.EXE screen page ELECTRONIC GEARING, encoder for electronic gearing, wiring ⇒ p.81

in the setup software. Scaling and other settings must always be made here.


For a detailed description of the ASCII parameters, please refer to the [online help](#) of the setup software.

**Some possible configurations:**


**Motor Feedback**

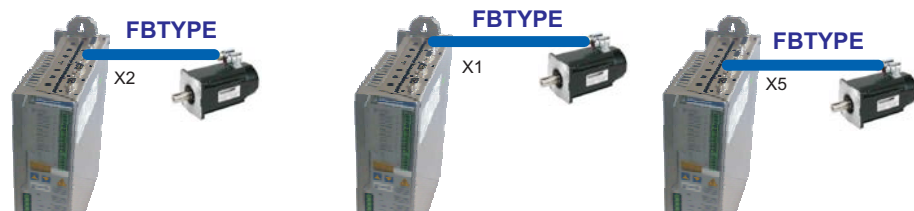


**Motor Feedback & External Position Feedback**

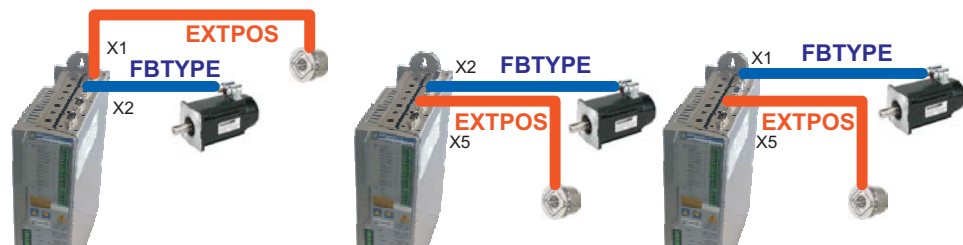

**Motor Feedback & Master Slave**

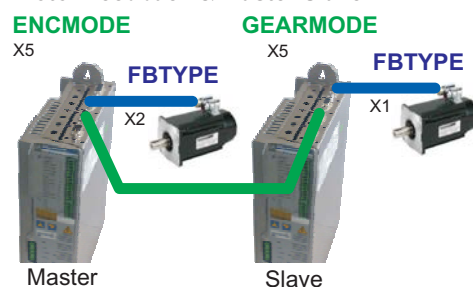

**Motor Feedback & Master Slave & External Position Feedback**

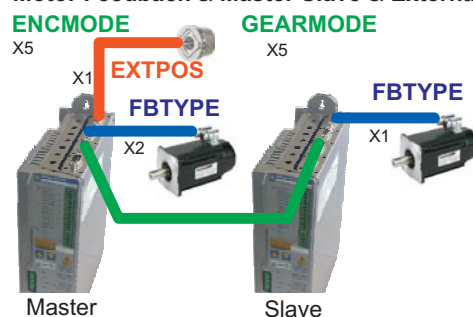

## 8.13 Primary and secondary feedback types

The table below provides an overview of the supported feedback types, their corresponding parameters and a reference to the relevant connection diagram in each case.

**FBTYPE** set on DRIVEGUI.EXE screen page FEEDBACK, primary Feedback

**EXTPOS** set on DRIVEGUI.EXE screen page POSITION CONTROLLER, secondary Feedback

For a detailed description of the ASCII parameters, please refer to the [online help](#) of the setup software.

| Feedback type                      | Connector | Wiring diagram | primary    | secondary |
|------------------------------------|-----------|----------------|------------|-----------|
|                                    |           |                | FBTYPE     | EXTPOS    |
| Resolver                           | X2        | ⇒ p.63         | 0          | -         |
| SinCos Encoder BiSS (B) analog     | X1        | ⇒ p.64         | 23, 24     | -         |
| SinCos Encoder BiSS (B, C) digital | X1        | ⇒ p.65         | 20, 22, 33 | 11, 12    |
| SinCos Encoder ENDAT 2.1           | X1        | ⇒ p.66         | 4, 21      | 8         |
| SinCos Encoder ENDAT 2.2           | X1        | ⇒ p.67         | 32         | -         |
| SinCos Encoder HIPERFACE           | X1        | ⇒ p.68         | 2          | 9         |
| SinCos Encoder SSI (linear)        | X5/X1     | ⇒ p.69         | 28         | -         |
| SinCos Encoder w/o data channel    | X1        | ⇒ p.70         | 1, 3, 7, 8 | 6, 7      |
| SinCos Encoder + Hall              | X1        | ⇒ p.71         | 5, 6       | -         |
| ROD* 5V w/o zero, 1.5MHz           | X1        | ⇒ p.72         | 30, 31     | 30        |
| ROD* 5V with zero                  | X1        | ⇒ p.73         | 17, 27     | 10        |
| ROD* 5V with zero, with Hall       | X1        | ⇒ p.74         | 15         | -         |
| ROD* 5V with zero                  | X5        | ⇒ p.75         | 13, 19     | 3         |
| ROD* 5V with zero, with Hall       | X5/X1     | ⇒ p.76         | 18         | -         |
| ROD* 24V w/o zero                  | X3        | ⇒ p.77         | 12, 16     | 2         |
| ROD* 24V w/o zero, with Hall       | X3/X1     | ⇒ p.78         | 14         | -         |
| SSI                                | X5        | ⇒ p.79         | 9          | 5         |
| Hall                               | X1        | ⇒ p.80         | 11         | -         |
| Sensorless (w/o Feedback)          | -         | -              | 10         | -         |
| Step/Direction 5V, 1.5 MHz         | X1        | ⇒ p.82         | -          | 27        |
| Step/Direction 5V, 1.5 MHz         | X5        | ⇒ p.83         | -          | 4         |
| Step/Direction 24V, 100 kHz        | X3        | ⇒ p.82         | -          | 1         |

\* ROD is an abbreviation for "incremental encoder".


## 8.13.1

**Resolver (X2)**

Connection of a Resolver (2 to 36-poles) as a feedback system (primary, ⇒ p.62). The thermal control in the motor is connected via the resolver cable to X2 and evaluated there.

If cable lengths of more than 100m are planned, please consult our customer service.

FBTYPE: 0

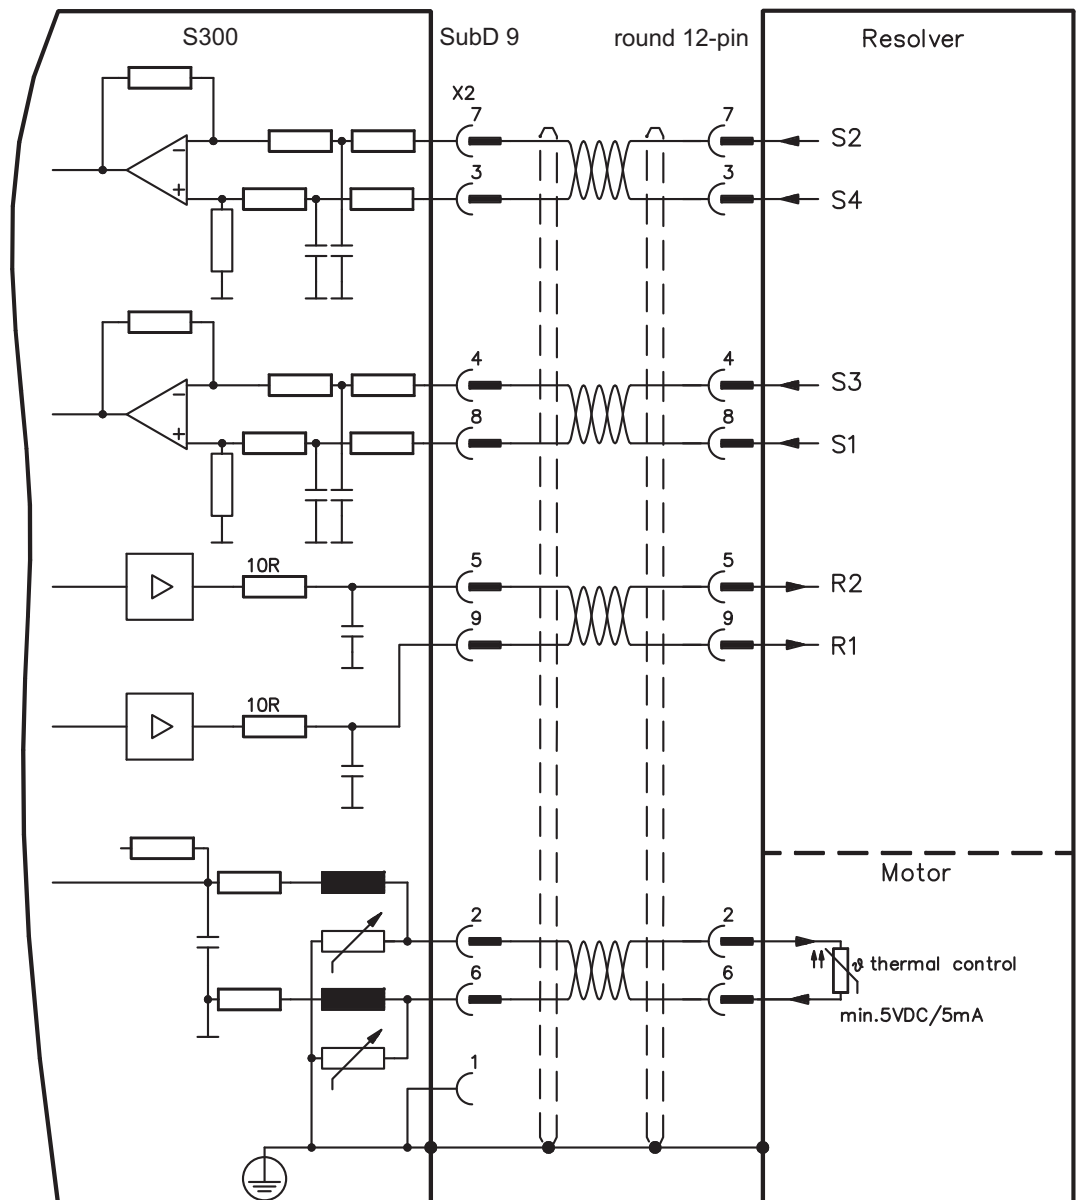

The pin assignment shown on the encoder side relates to the Kollmorgen motors.


### 8.13.2 Sine Encoder with BiSS analog (X1)

Wiring of a single-turn or multi-turn sine-cosine encoder with BiSS interface as a feed-back system (primary and secondary, ⇒ p.62). The thermal control in the motor is connected via the encoder cable to X1 and evaluated there.

If cable lengths of more than 50m are planned, please consult our customer service.

Frequency limit (sin, cos): 350 kHz

| Type                | FBTYPE | EXTPOS | GEARMODE | Up        |
|---------------------|--------|--------|----------|-----------|
| 5V analog (BiSS B)  | 23     | -      | -        | 5V +/-5%  |
| 12V analog (BiSS B) | 24     | -      | -        | 7,5...11V |

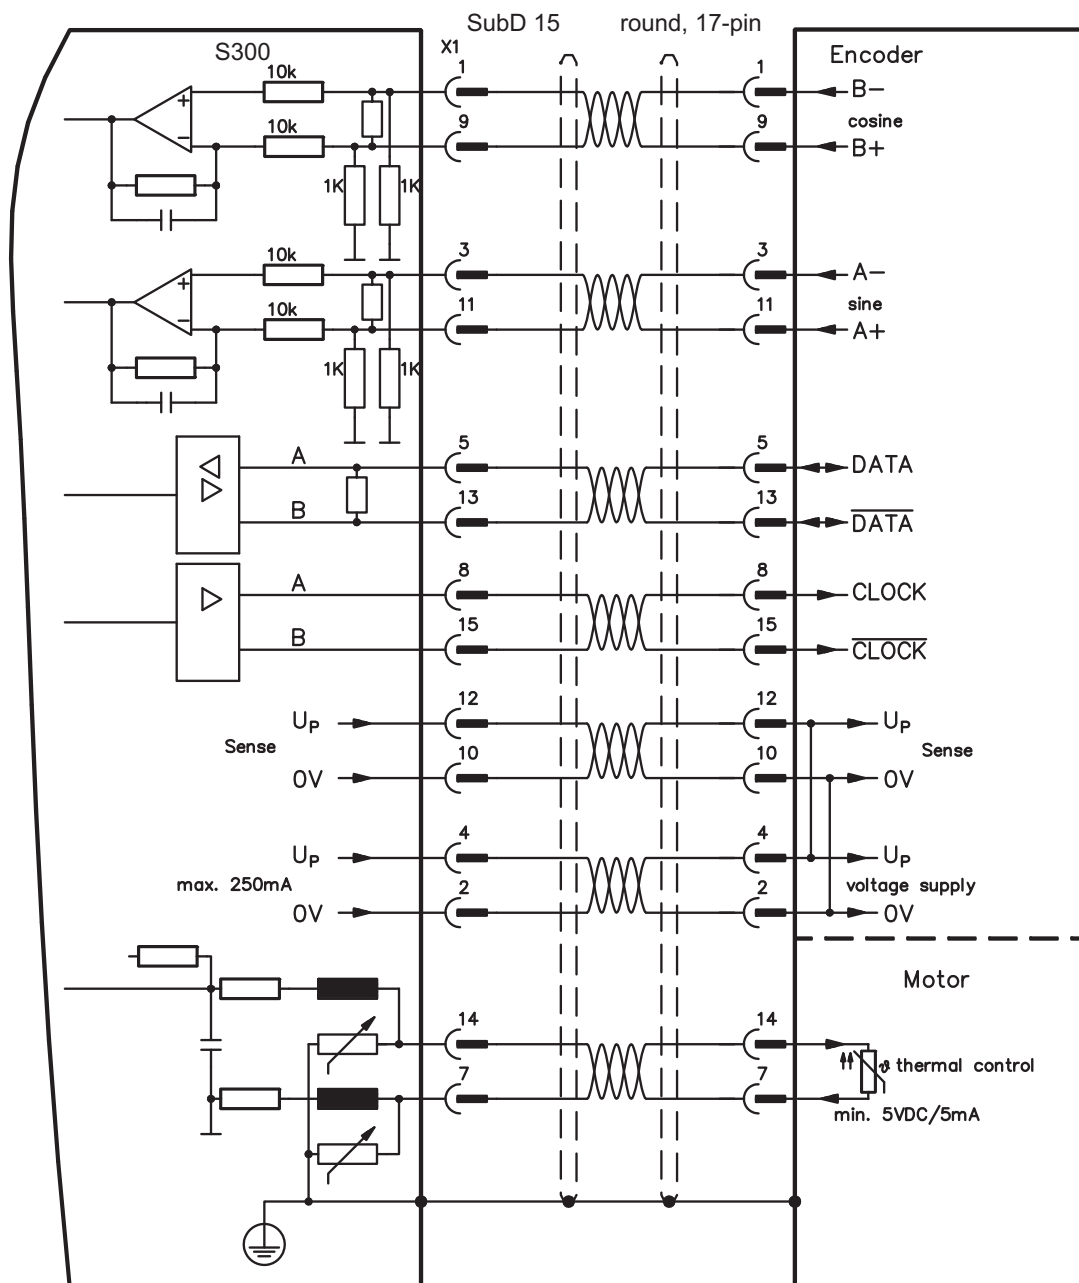

The pin assignment shown on the encoder side relates to the Kollmorgen motors.

## 8.13.3


## Sine Encoder with BiSS digital (X1)

Wiring of a single-turn or multi-turn digital encoder with BiSS interface as a feedback system (primary and secondary, ⇒ p.62). The thermal control in the motor is connected via the encoder cable to X1 and evaluated there.

If cable lengths of more than 50m are planned, please consult our customer service.

Frequency limit: 1,5 MHz

| Type                 | FBTYP | EXTPOS | GEARMODE | Up        |
|----------------------|-------|--------|----------|-----------|
| 5V digital (BiSS B)  | 20    | 11     | 11       | 5V +/-5%  |
| 12V digital (BiSS B) | 22    | 11     | 11       | 7,5...11V |
| 5V digital (BiSS C)  | 33    | 12     | 12       | 5V +/-5%  |

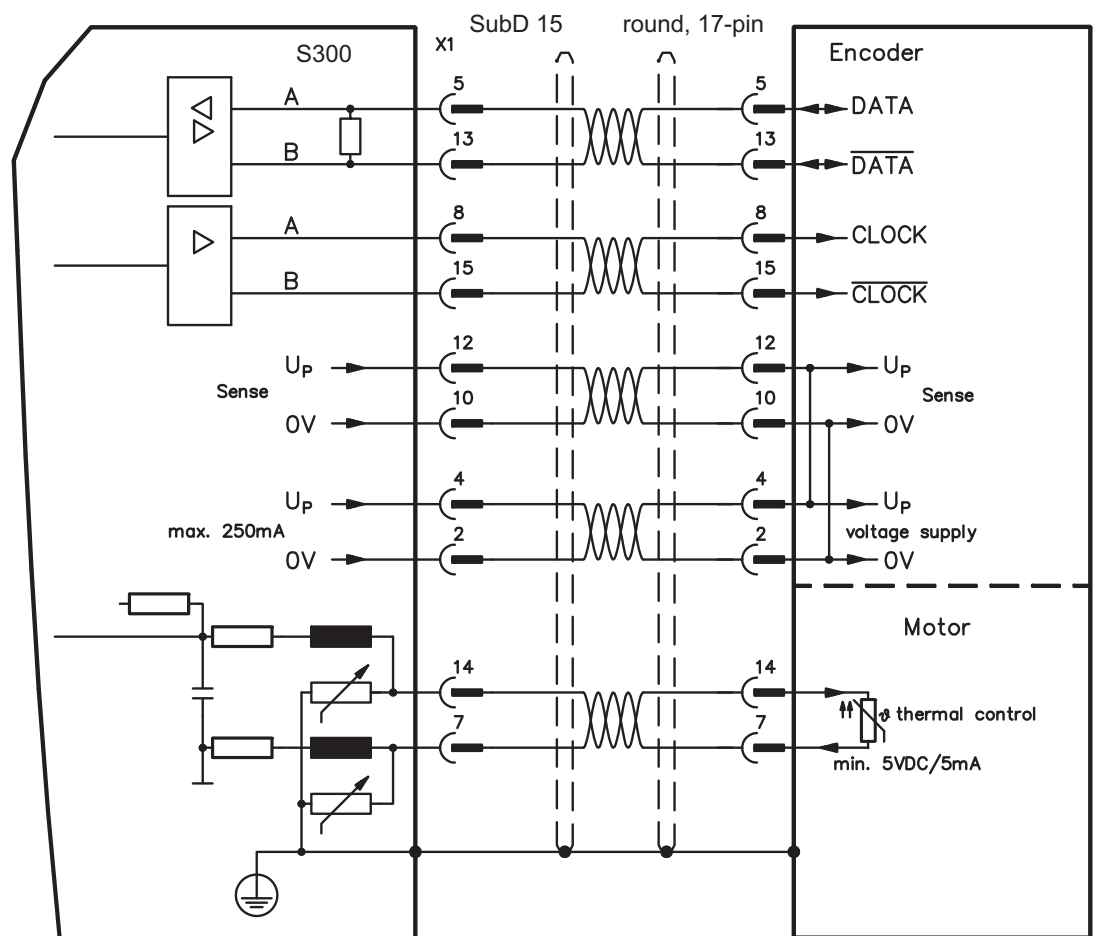


The pin assignment shown on the encoder side relates to the Kollmorgen motors.

8.13.4 Sine Encoder with EnDat 2.1 (X1)

Wiring of a single-turn or multi-turn sine-cosine encoder with EnDat 2.1 interface as a feedback system (primary and secondary, ⇨ p.62). Preferred types are the optical encoder ECN1313 / EQN1325 and the inductive encoder ECI 1118/1319 or EQI 1130/1331.

The thermal control in the motor is connected via the encoder cable to X1 and evaluated there. All signals are connected using our pre-assembled encoder connection cable. If cable lengths of more than 50m are planned, please consult our customer service. Frequency limit (sin, cos): 350 kHz

| Type                   | FBTYP | EXTPOS | GEARMODE |
|------------------------|-------|--------|----------|
| ENDAT 2.1              | 4     | 8      | 8        |
| ENDAT 2.1 + Wake&Shake | 21    | 8      | 8        |

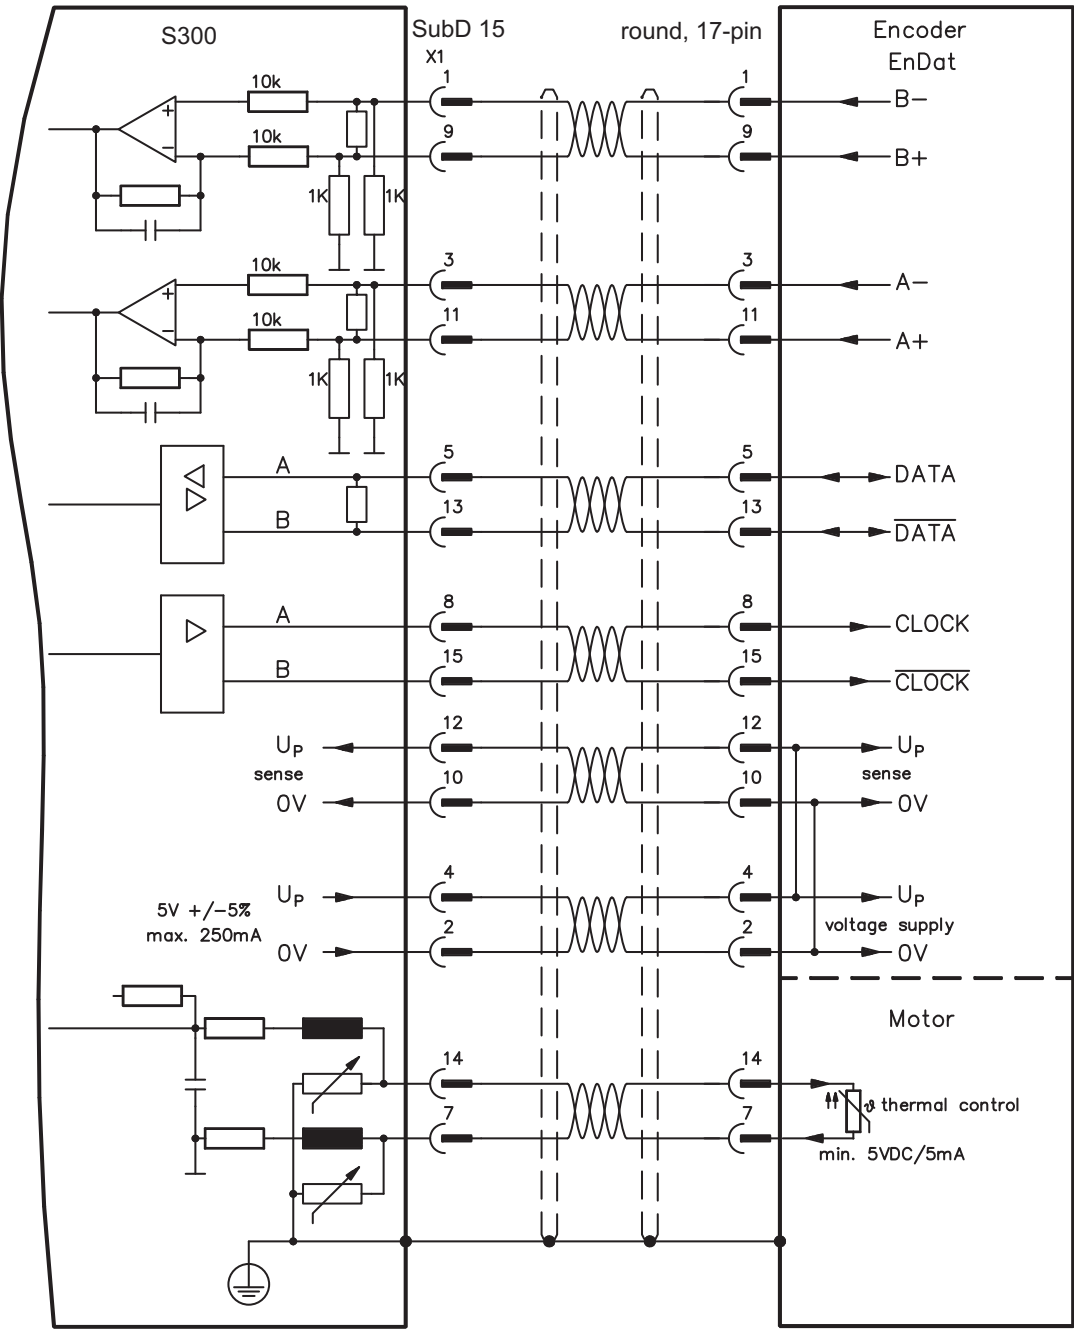

The pin assignment shown on the encoder side relates to the Kollmorgen motors.

## 8.13.5


## Sine Encoder with EnDat 2.2 (X1)

Wiring of a single-turn or multi-turn sine-cosine encoder with EnDat 2.2 interface as a feedback system (primary, ⇒ p.62). The thermal control in the motor is connected via the encoder cable to X1 and evaluated there. All signals are connected using our pre-assembled encoder connection cable.

If cable lengths of more than 50m are planned, please consult our customer service.

Frequency limit: 1.5 MHz

| Type      | FBTYP | EXTPOS | GEARMODE |
|-----------|-------|--------|----------|
| ENDAT 2.2 | 32    | 13     | 13       |

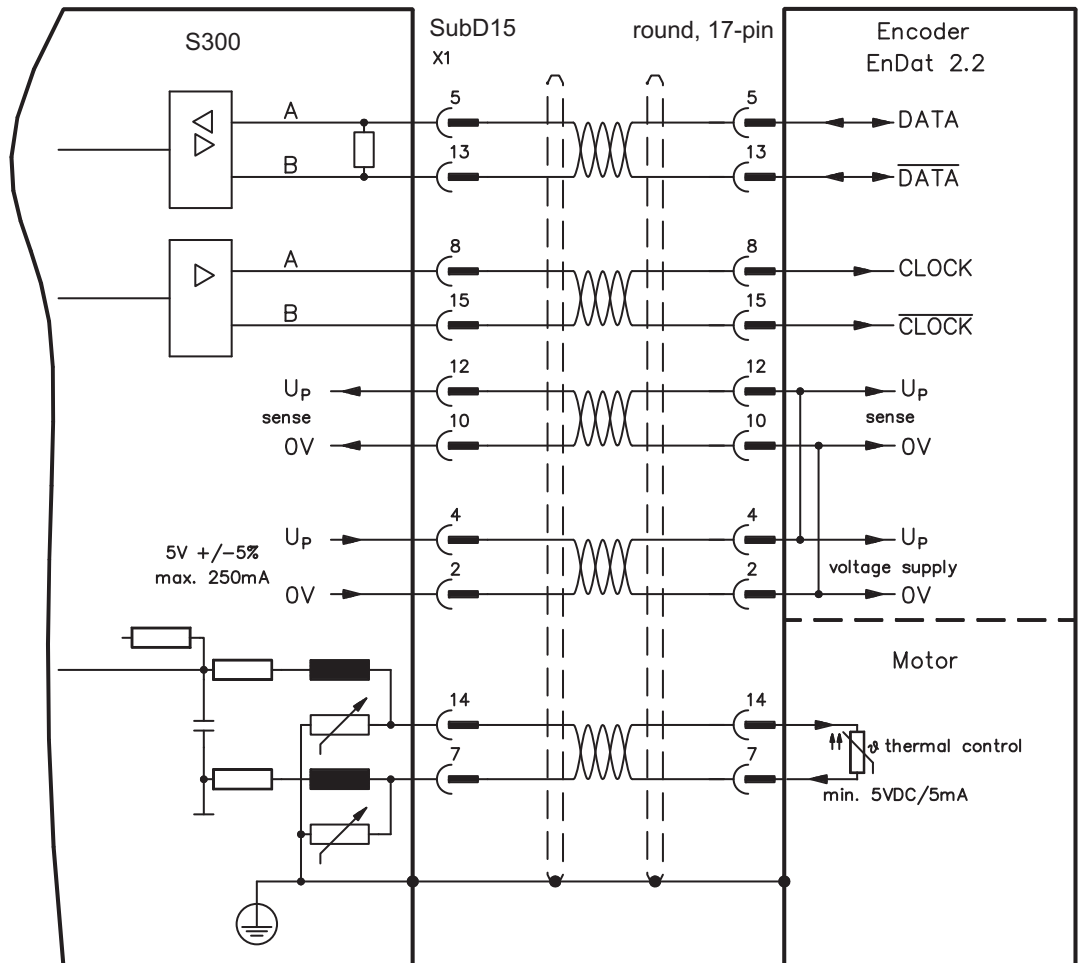

The pin assignment shown on the encoder side relates to the Kollmorgen motors.

### 8.13.6 Sine Encoder with HIPERFACE (X1)


Wiring of a single-turn or multi-turn sine-cosine encoder with HIPERFACE interface as a feedback system (primary and secondary, ⇒ p.62).

The thermal control in the motor is connected via the encoder cable to X1 and evaluated there. All signals are connected using our pre-assembled encoder connection cable.

If cable lengths of more than 50m are planned, please consult our customer service.

Frequency limit (sin, cos): 350 kHz

| Type      | FBTYP | EXTPOS | GEARMODE |
|-----------|-------|--------|----------|
| HIPERFACE | 2     | 9      | 9        |

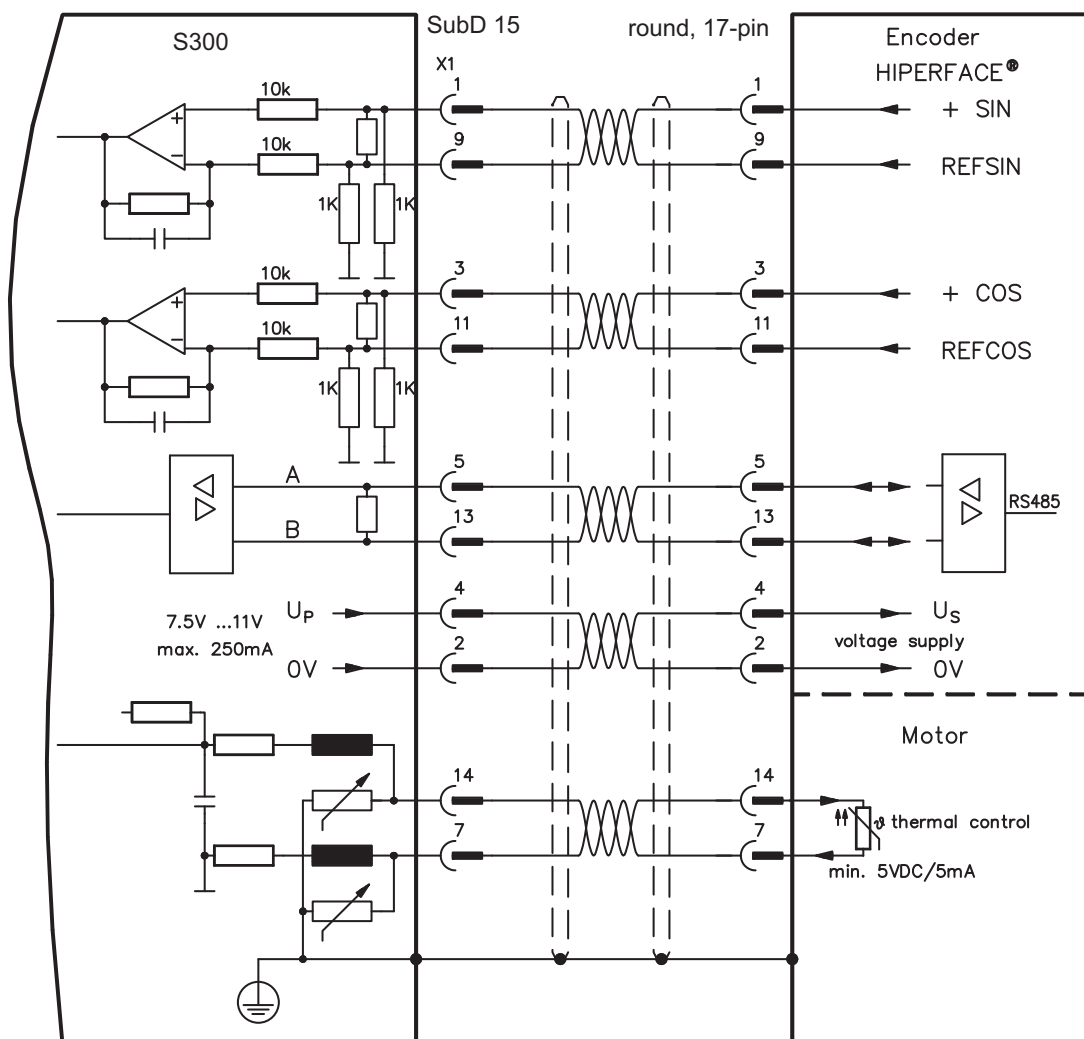

The pin assignment shown on the encoder side relates to the Kollmorgen motors.

## 8.13.7


## Sine Encoder with SSI (X5, X1)

Wiring of sine-cosine encoder with SSI interface as a linear feedback system (primary, ⇒ p.62) to X5.

The thermal control in the motor is connected via the encoder cable to X1 and evaluated there. All signals are connected using our pre-assembled encoder connection cable. If cable lengths of more than 50m are planned, please consult our customer service.

Frequency limit (sin, cos): 350 kHz

| Type                 | FSTYPE | EXTPOS | GEARMODE |
|----------------------|--------|--------|----------|
| SinCos SSI 5V linear | 28     | -      | -        |

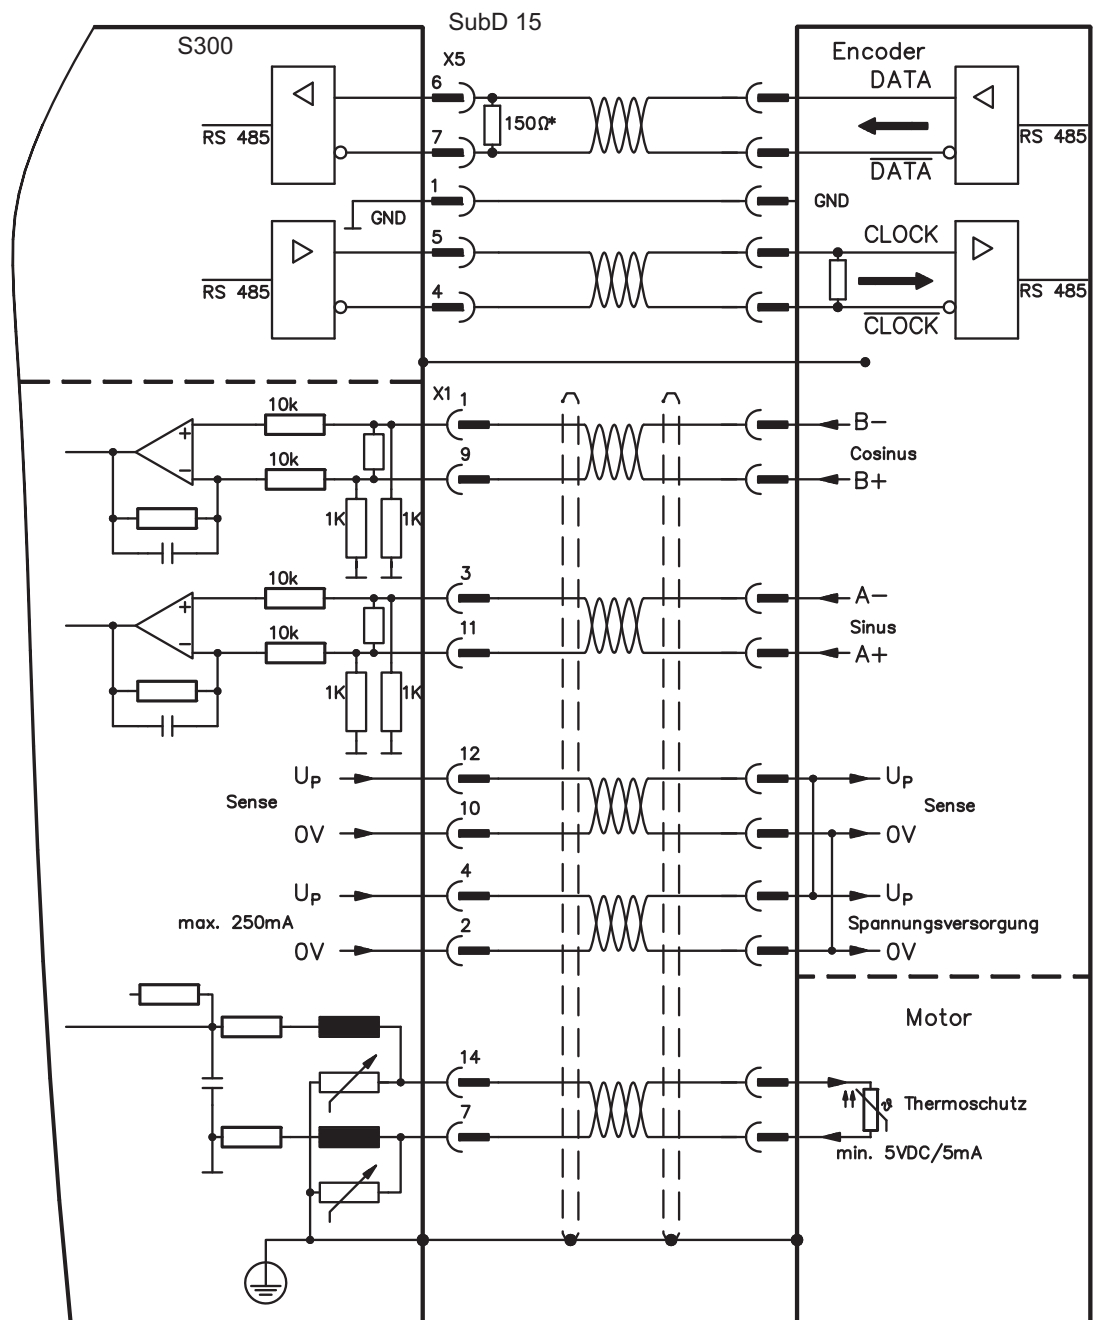

## 8.13.8

## Sine Encoder without data channel (X1)


Wiring of a sine-cosine encoder without data channel as a feedback (primary and secondary, ⇒ p.62). The thermal control in the motor is connected via the encoder cable to X1 and evaluated there. Every time the 24V auxiliary voltage is switched on, the amplifier needs start-up information for the position controller (parameter value MPHASE). Depending on the feedback type either wake&shake is executed or the value for MPHASE is read out of the amplifier's EEPROM.



**WARNING** With vertical load the load could fall during wake&shake, because the brake is not active and torque is not sufficient to hold the load. Don't use this feedback type with vertical load (hanging load).

If lead lengths of more than 50m are planned, please consult our customer service.  
Frequency limit (sin, cos): 350 kHz

| Type       | FBTYP | EXTPOS | GEARMODE | Up        | Remarks             |
|------------|-------|--------|----------|-----------|---------------------|
| SinCos 5V  | 1     | 6      | 6        | 5V +/-5%  | MPHASE EEPROM       |
| SinCos 12V | 3     | 7      | 7        | 7,5...11V | MPHASE EEPROM       |
| SinCos 5V  | 7     | 6      | 6        | 5V +/-5%  | MPHASE wake & shake |
| SinCos 12V | 8     | 7      | 7        | 7,5...11V | MPHASE wake & shake |

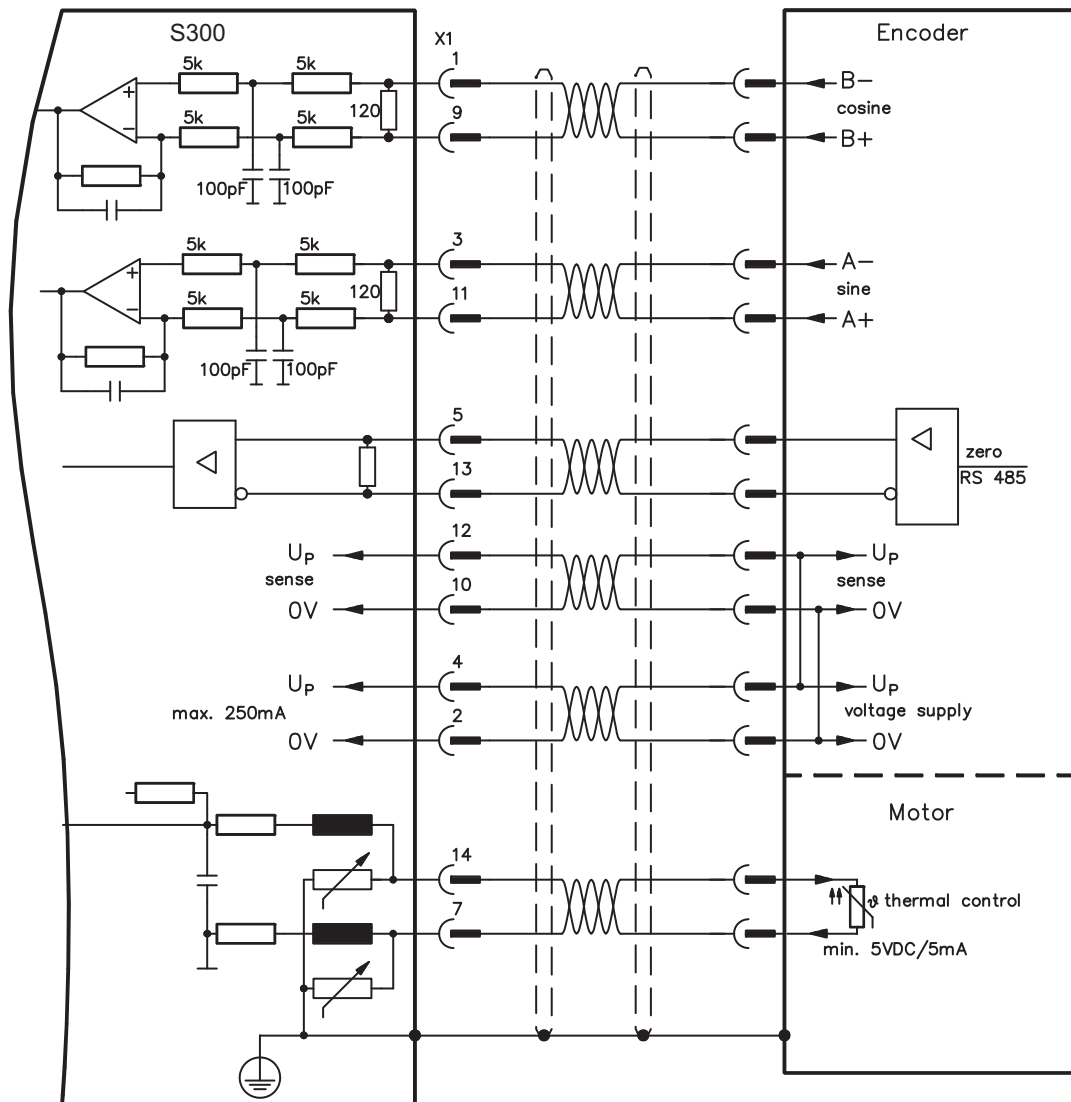

## 8.13.9


## Sine Encoder with Hall (X1)

Feedback devices (incremental or sine-cosine), which don't deliver an absolute information for commutation, can be used as complete feedback system combined with an additional Hall encoder (primary, ⇒ p.62).

All signals are connected to X1 and evaluated there. If cable lengths of more than 25m are planned, please consult our customer service.

Frequency limit (sin, cos): 350 kHz

| Type                 | FbTYPE | EXTPOS | GEARMODE | Up        |
|----------------------|--------|--------|----------|-----------|
| SinCos 5V with Hall  | 5      | -      | -        | 5V +/-5%  |
| SinCos 12V with Hall | 6      | -      | -        | 7,5...11V |

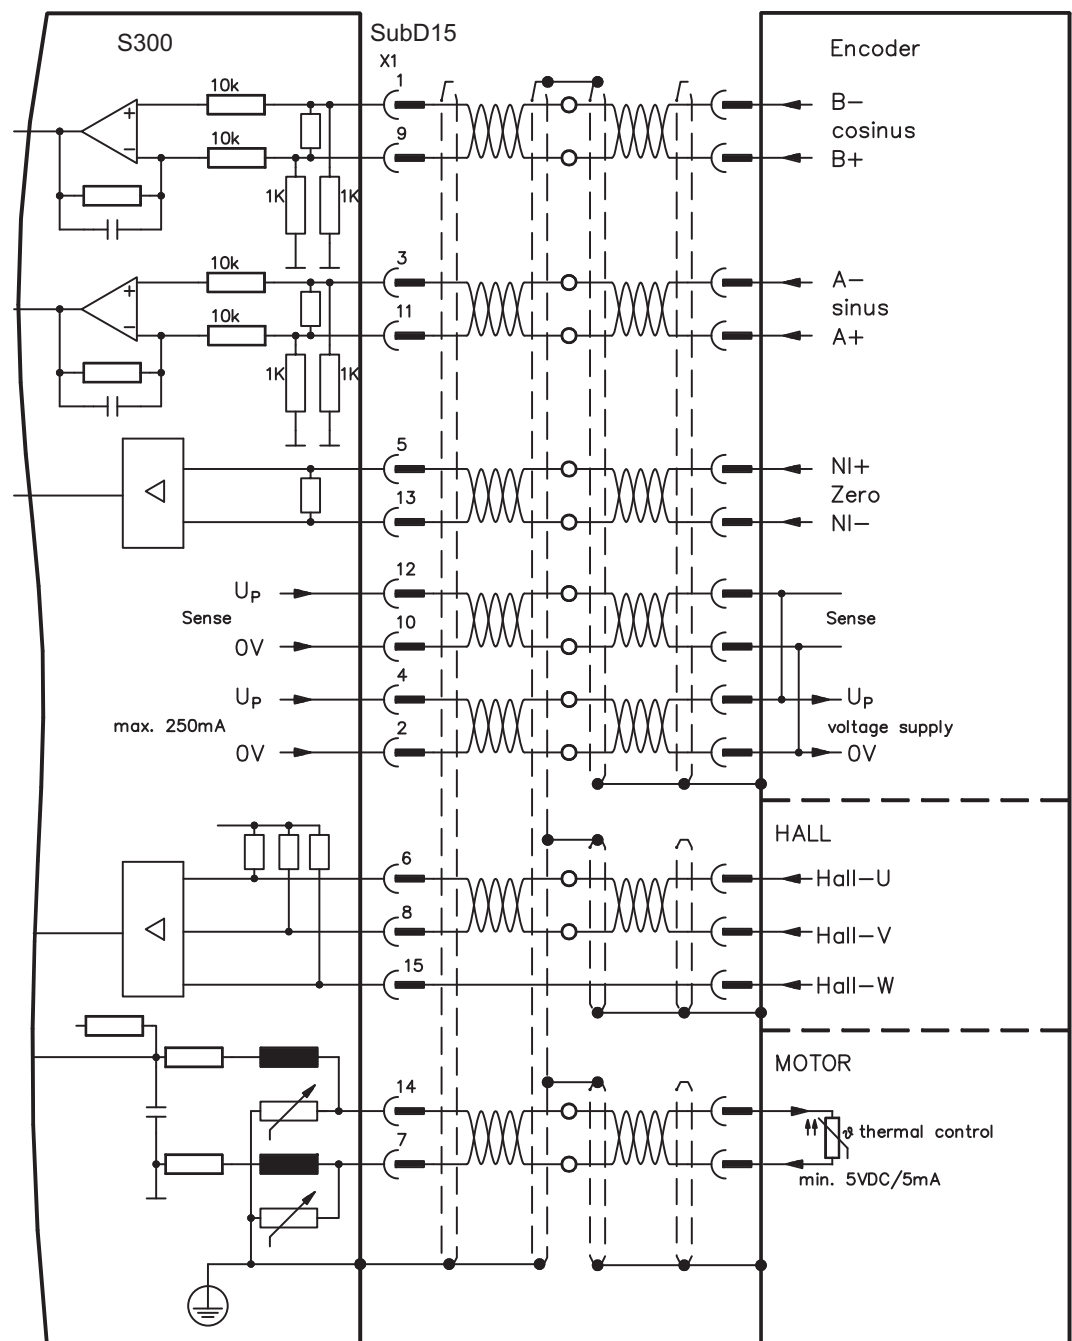

## 8.13.10

## ROD (AquadB) 5V, 1.5 MHz (X1)

Wiring of a 5V incremental encoder (ROD, AquadB) as a feedback (primary or secondary, ⇒ p.62). Every time the 24V auxiliary voltage is switched on, the amplifier need start-up information for the position controller (parameter value MPHASE). Depending on the setting of FBTYPE a wake&shake is executed or the value for MPHASE is taken out of the servo amplifier's EEPROM.


The thermal control in the motor is connected via the encoder cable to X1 and evaluated there. All signals are connected using our pre-assembled encoder connection cable. If cable lengths of more than 50m are planned, please consult our customer service.

**⚠ WARNING**

**With vertical load the load could fall during wake&shake, because the brake is not active and torque is not sufficient to hold the load. Don't use this feedback type with vertical load (hanging load).**

Frequency limit (A, B): 1,5MHz

| Type      | FBTYPE | EXTPOS | GEARMODE | Remarks             |
|-----------|--------|--------|----------|---------------------|
| AquadB 5V | 31     | 30     | 30       | MPHASE from EEPROM  |
| AquadB 5V | 30     | 30     | 30       | MPHASE wake & shake |

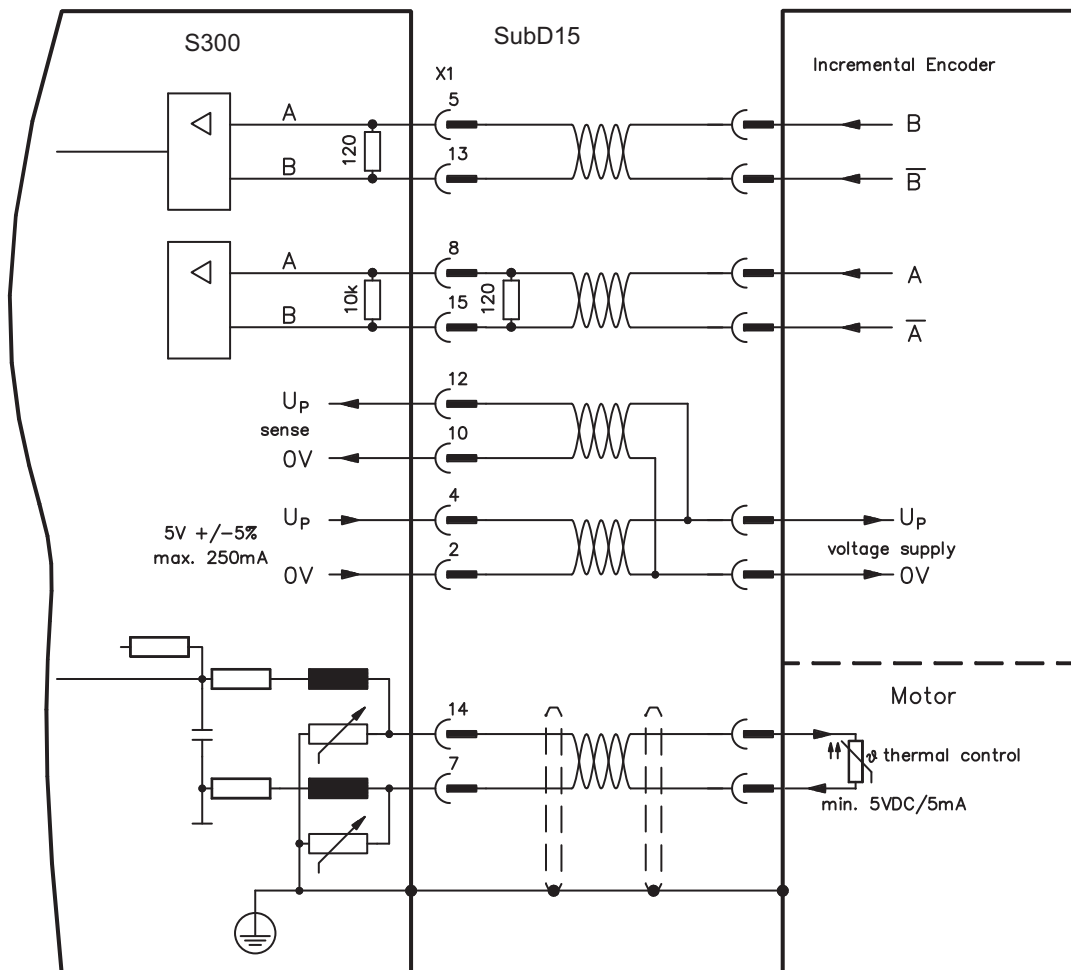

## 8.13.11

## ROD (AquadB) 5V, 350 kHz (X1)


Wiring of a 5V incremental encoder (ROD, AquadB) as a feedback ((primary or secondary, ⇒ p.62). The thermal control in the motor is connected to X1 and evaluated there. Every time the 24V auxiliary voltage is switched on, the amplifier need start-up information for the position controller (parameter value MPHASE). With this feedback type the amplifier executes a wake&shake every time the 24V auxiliary voltage is switched on.



**WARNING** With vertical load the load could fall during wake&shake, because the brake is not active and torque is not sufficient to hold the load. Don't use this feedback type with vertical load (hanging load).

If lead lengths of more than 50m are planned, please consult our customer service.  
Frequency limit (A, B): 350 kHz

| Type      | FBTYP | EXTPOS | GEARMODE | Remarks             |
|-----------|-------|--------|----------|---------------------|
| AquadB 5V | 27    | 10     | 10       | MPHASE EEPROM       |
| AquadB 5V | 17    | 10     | 10       | MPHASE wake & shake |

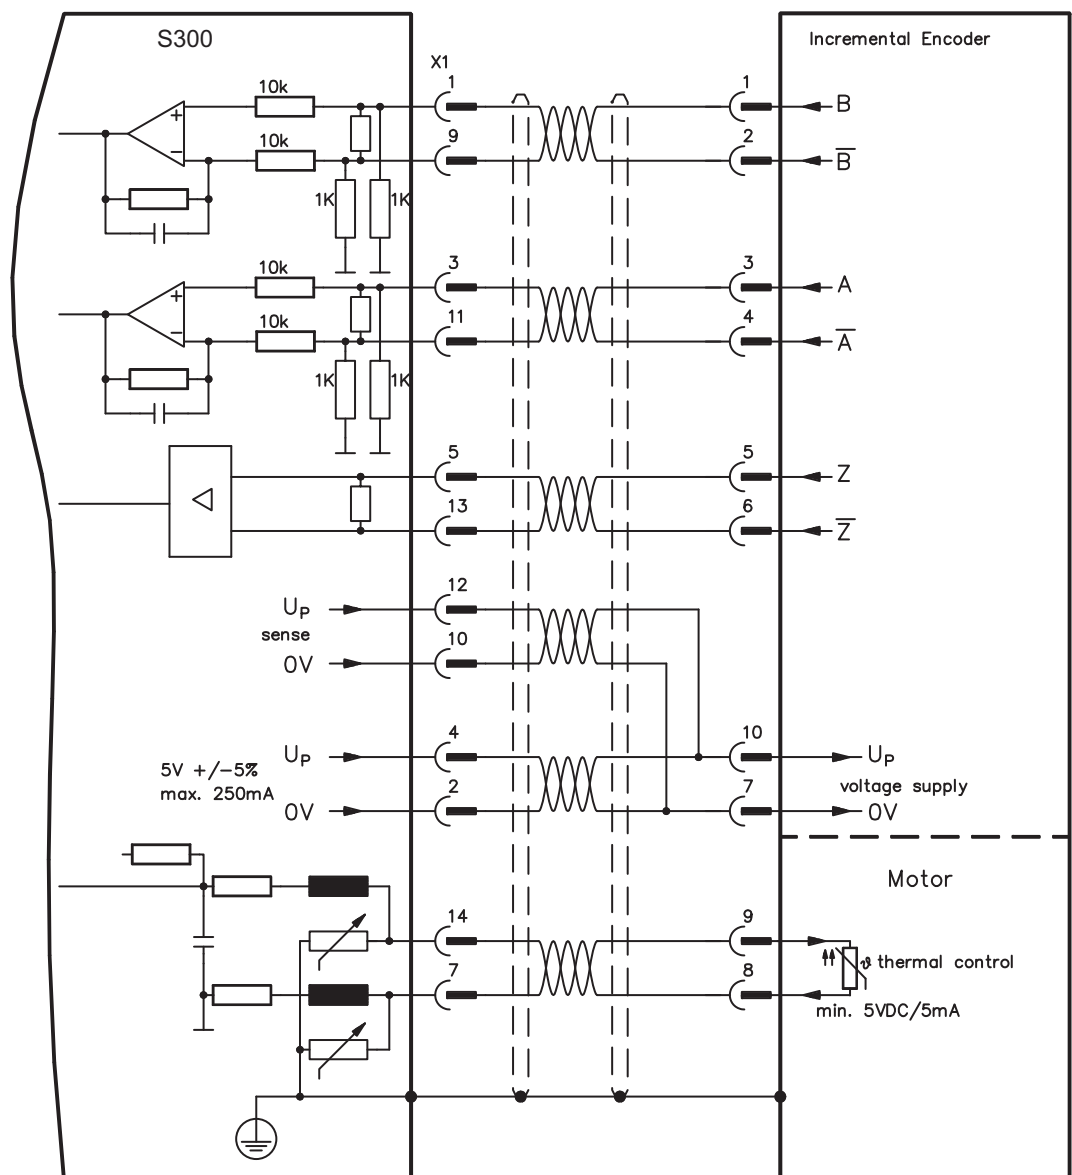

The pin assignment shown on the encoder side relates to the Kollmorgen motors.

## 8.13.12


## ROD (AquadB) 5V with Hall (X1)

Wiring of a ComCoder as a feedback unit (primary, ⇒ p.62). For the commutation hall sensors are used and for the resolution an incremental encoder. The thermal control in the motor is connected to X1 and evaluated there. With our ComCoder cable all signals are connected correctly. With separate feedback devices (Encoder and Hall are two devices) the wiring must be done similar to chapter 8.13.9, but the amplifier's pinout is identical to the wiring diagram shown below.

If cable lengths of more than 25m are planned, please consult our customer service.

Frequency limit (A,B): 350 kHz

| Type                | FBTYPE | EXTPOS | GEARMODE |
|---------------------|--------|--------|----------|
| AquadB 5V with Hall | 15     | -      | -        |

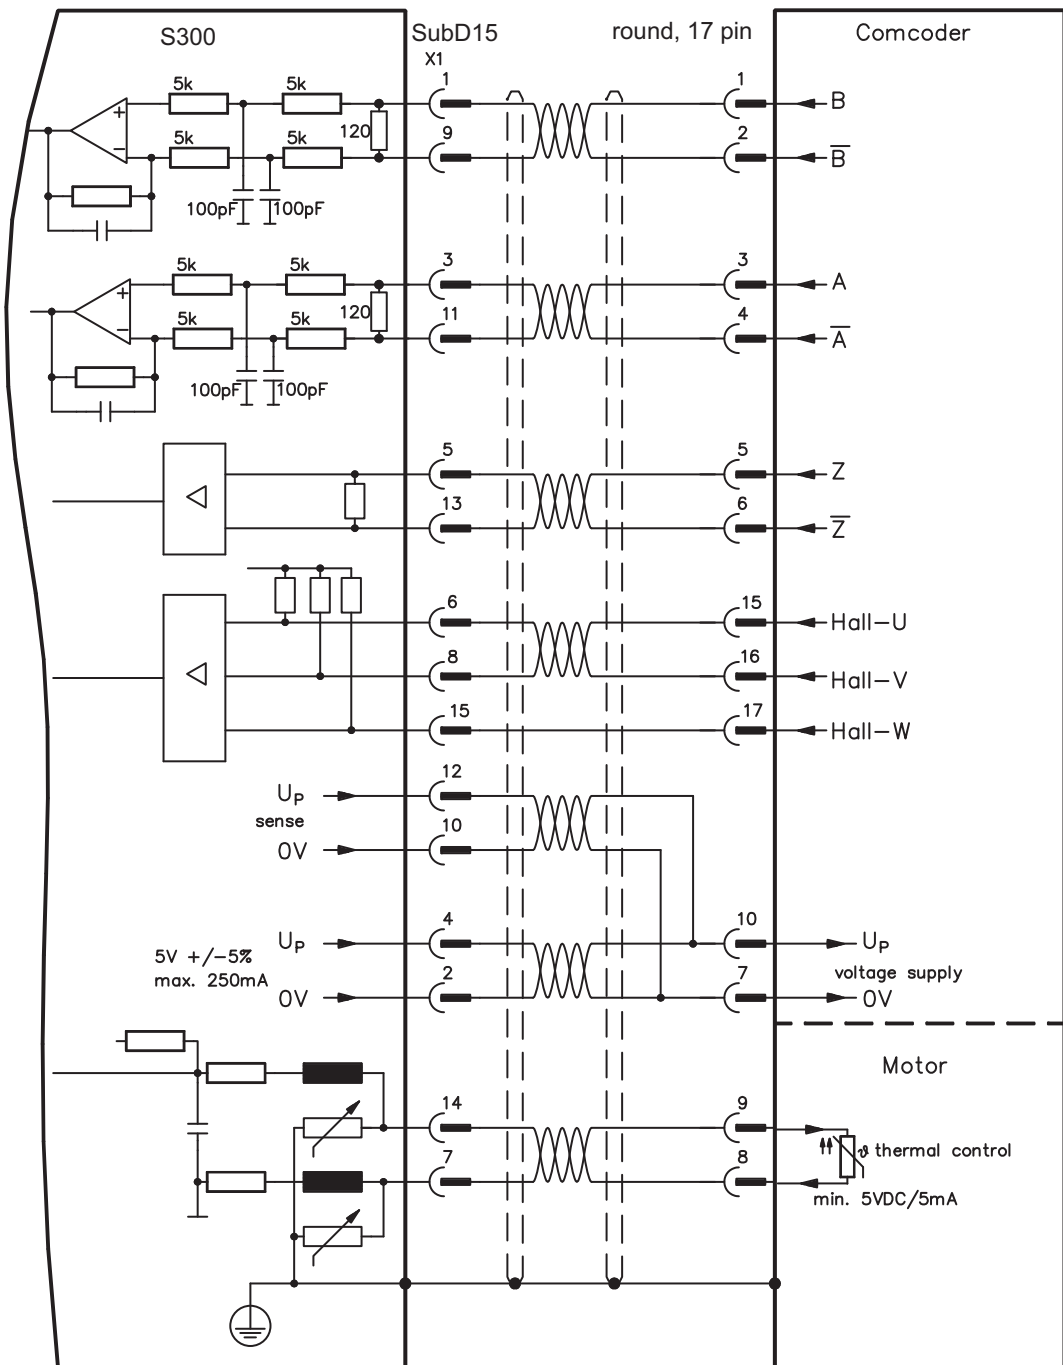

The pin assignment shown on the encoder side relates to the Kollmorgen motors.

## 8.13.13

## ROD (AquadB) 5V (X5)

A 5V incremental encoder (AquadB) can be used as standard motor feedback (primary and secondary, ⇒ p.62). The thermal control in the motor is connected to X1. Every time the 24V auxiliary voltage is switched on, the amplifier need start-up information for the position controller (parameter value MPHASE). Depending on the feedback type either wake&shake is executed or the value for MPHASE is read out of the amplifier's EEPROM.


**⚠ WARNING**

With vertical load the load could fall during wake&shake, because the brake is not active and torque is not sufficient to hold the load. Don't use this feedback type with vertical load (hanging load).

If lead lengths of more than 50m are planned please consult our customer service.

Frequency limit (A, B, N): 1.5 MHz

| Type      | FBTYPE | EXTPOS | GEARMODE | Remarks             |
|-----------|--------|--------|----------|---------------------|
| AquadB 5V | 13     | 3      | 3        | MPHASE EEPROM       |
| AquadB 5V | 19     | 3      | 3        | MPHASE wake & shake |

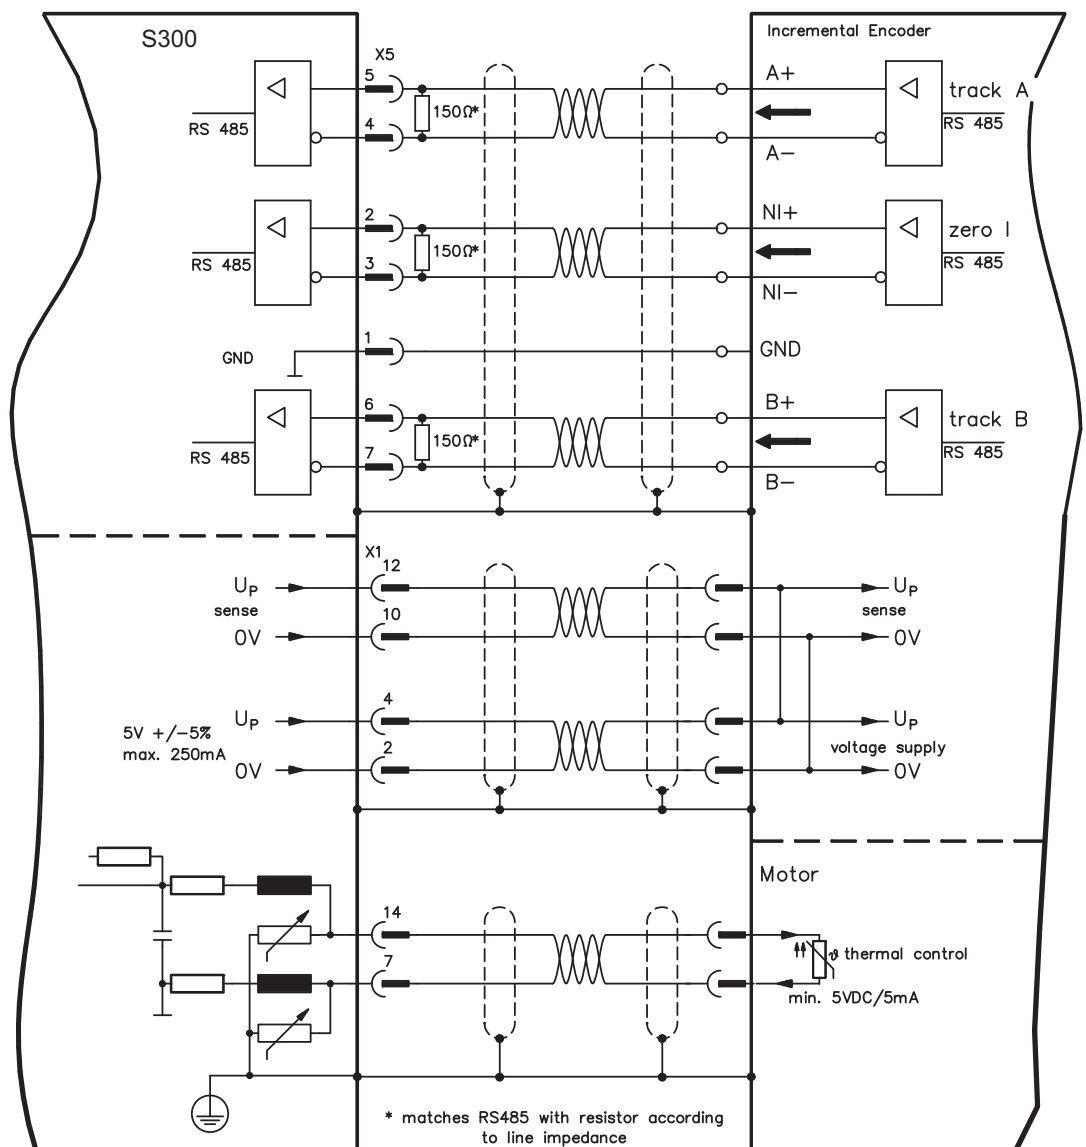


## 8.13.14 ROD (AquadB) 5V with Hall (X5, X1)

Wiring of a 5V incremental encoder (ROD, AquadB) with Hall sensors as a feedback unit (primary, ⇒ p.62). For the commutation hall sensors are used and for the resolution an incremental encoder. The thermal control in the motor is connected to X1 and evaluated there.

If cable lengths of more than 25m are planned, please consult our customer service.  
Frequency limit X5: 1.5 MHz, X1: 350 kHz

| Type                | FBTYP | EXTPOS | GEARMODE |
|---------------------|-------|--------|----------|
| AquadB 5V with Hall | 18    | -      | -        |

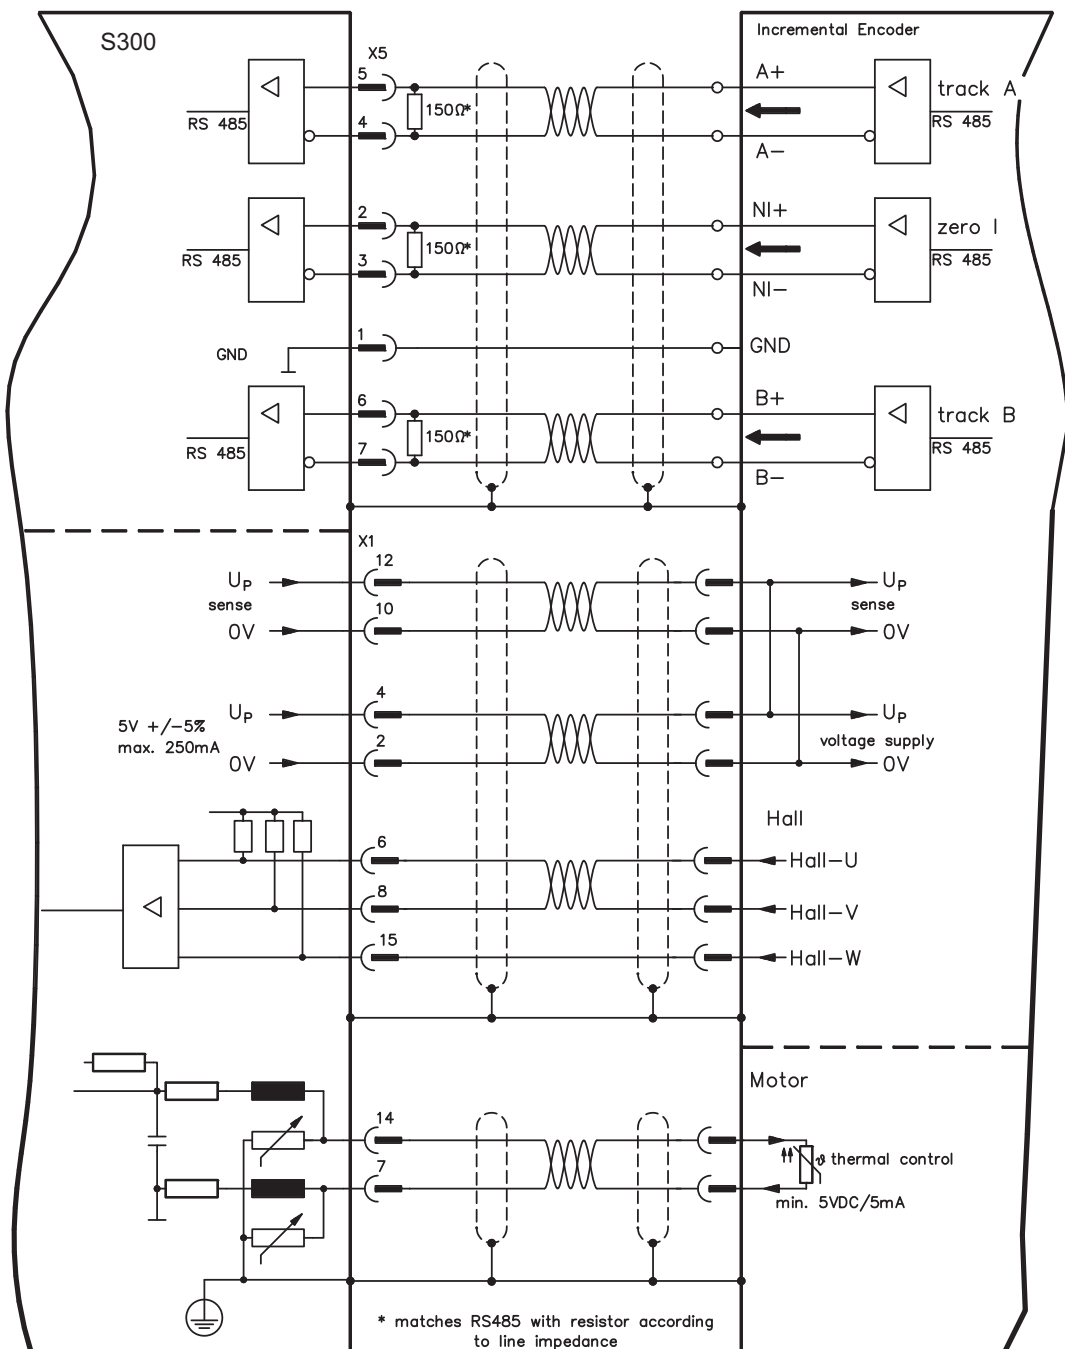

## 8.13.15

## ROD (AquadB) 24V (X3)

Wiring of a 24V incremental encoder (ROD AquadB) as a feedback system (primary or secondary, ⇒ p.62). The thermal control in the motor is connected to X1 or X2. Every time the 24V auxiliary voltage is switched on, the amplifier need start-up information for the position controller (parameter value MPHASE). With this feedback type the amplifier executes a wake&shake is executed every time the 24V auxiliary voltage is switched on.




**WARNING** With vertical load the load could fall during wake&shake, because the brake is not active and torque is not sufficient to hold the load. Don't use this feedback type with vertical load (hanging load).

This uses the digital inputs DIGITAL-IN 1 and 2 on connector X3.

If cable lengths of more than 25m are planned, please consult our customer service.

Frequency limit: 100 kHz, transition time  $t_v \leq 0,1\mu s$

| Type       | FBTYPE | EXTPOS | GEARMODE | Remarks             |
|------------|--------|--------|----------|---------------------|
| AquadB 24V | 12     | 2      | 2        | MPHASE EEPROM       |
| AquadB 24V | 16     | 2      | 2        | MPHASE wake & shake |

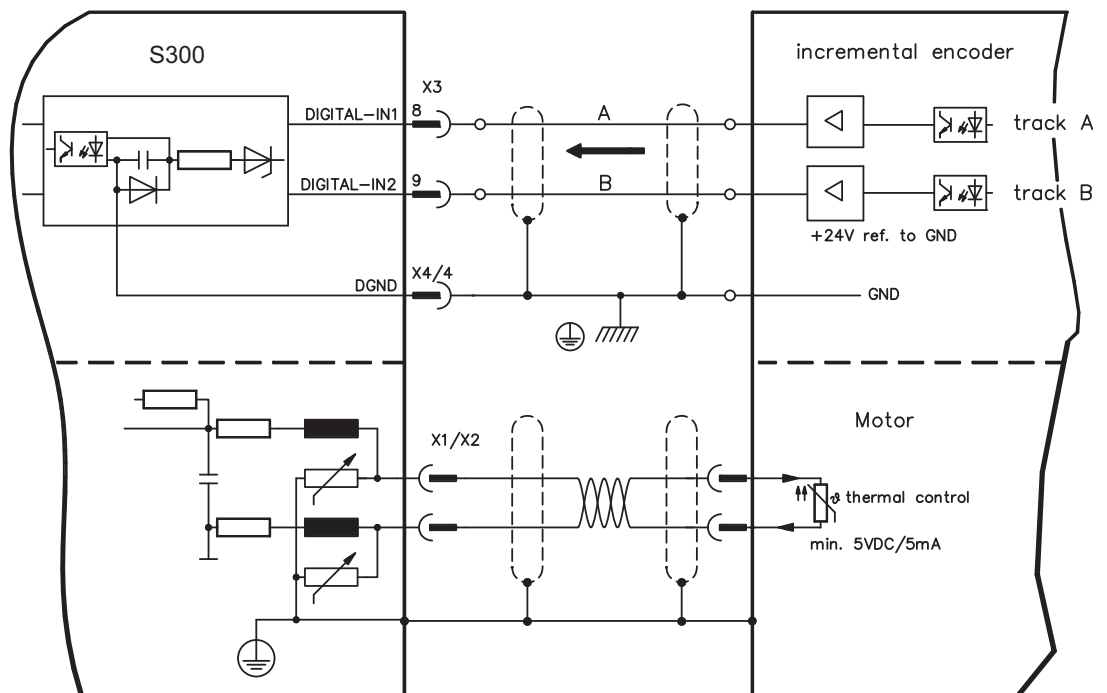


## 8.13.16 ROD (AquadB) 24V with Hall (X3, X1)

Wiring of a 24V incremental encoder (ROD, AquadB) and Hall sensors as a feedback unit (primary, ⇒ p.62). For the commutation hall sensors are used and for the resolution an incremental encoder.

The thermal control in the motor is connected to X1 and evaluated there. If cable lengths of more than 25m are planned, please consult our customer service.

Frequency limit X3: 100 kHz, X1: 350 kHz

| Type                 | FBTYPE | EXTPOS | GEARMODE |
|----------------------|--------|--------|----------|
| AquadB 24V with Hall | 14     | -      | -        |

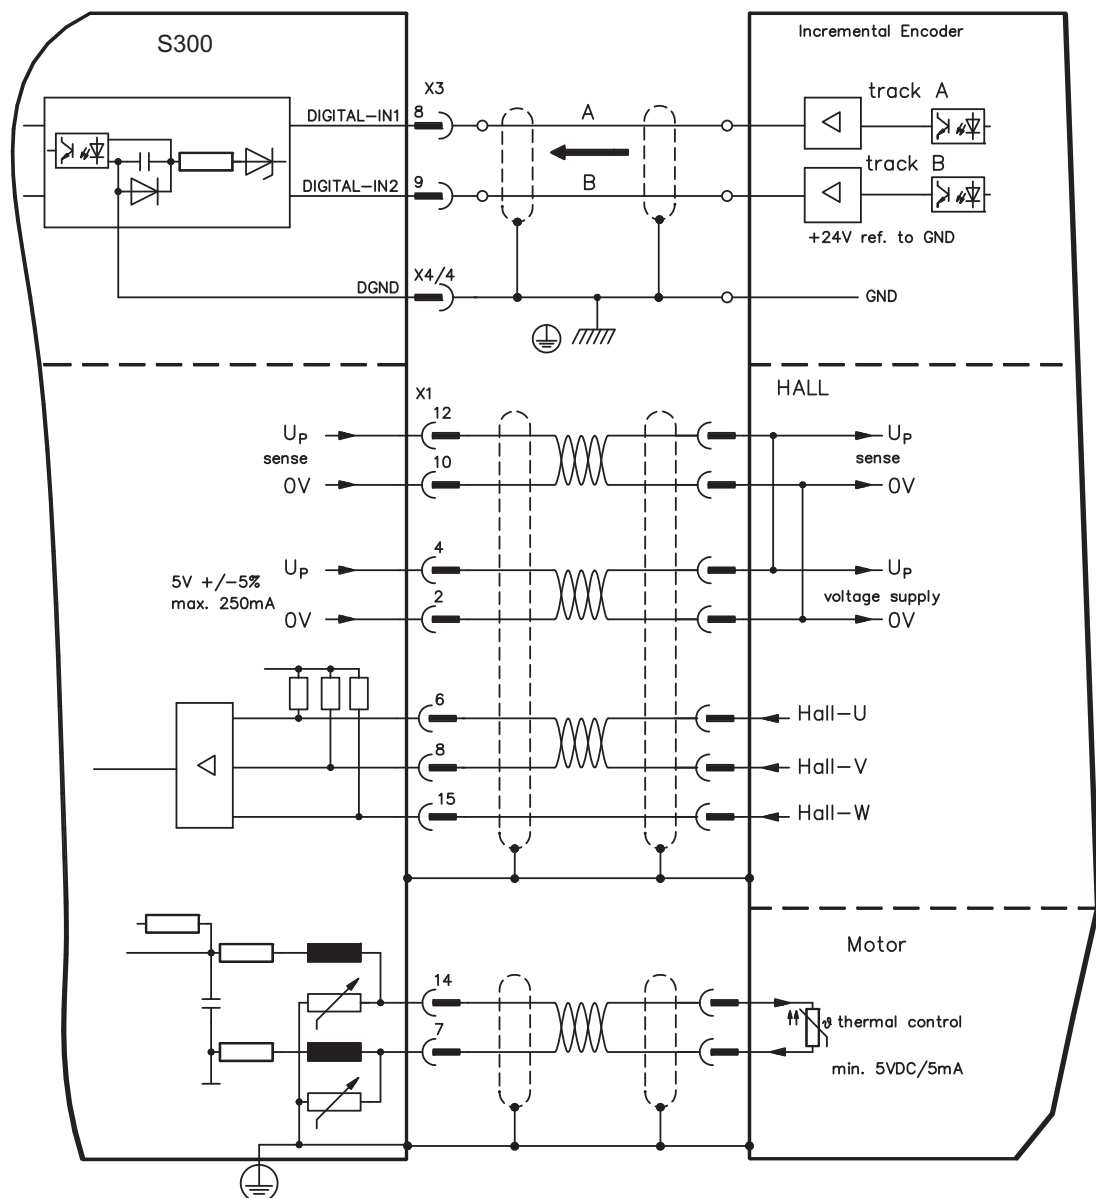

## 8.13.17

## SSI Encoder (X5, X1)


Wiring of a synchronous serial absolute encoder as a feedback system (primary or secondary, ⇒ p.62). The signal sequence can be read in Gray code or in Binary (standard) code.

The thermal control in the motor is connected to X1 and evaluated there.

If cable lengths of more than 50m are planned, please consult our customer service.

Frequency limit: 1.5 MHz

| Type | FBTYPE | EXTPOS | GEARMODE |
|------|--------|--------|----------|
| SSI  | 9      | 5      | 5        |

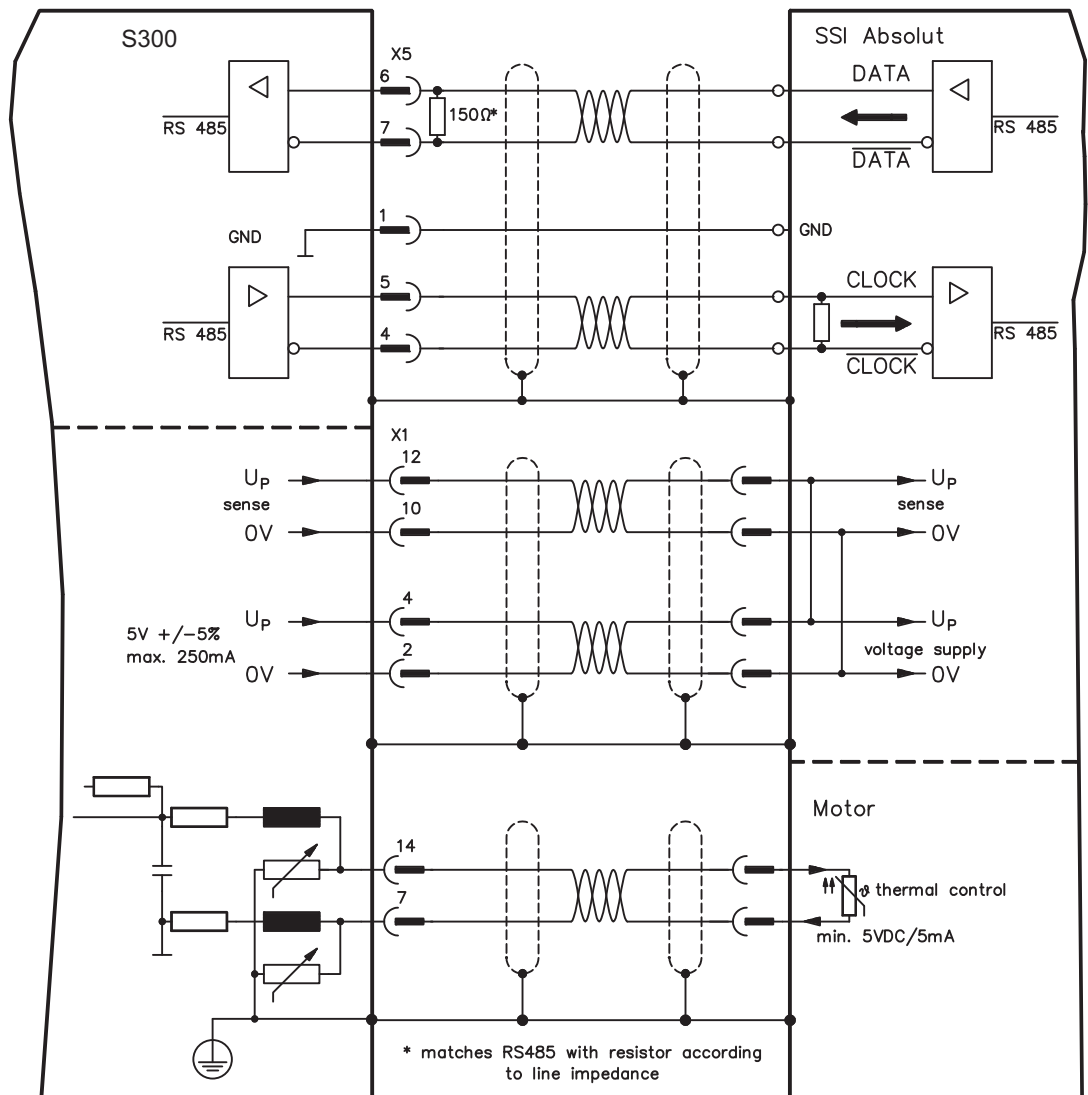


## 8.13.18 Hall sensors (X1)

Wiring of Hall sensors as a feedback unit (primary, ⇒ p.62).

The thermal control in the motor is connected to X1 and evaluated there. If cable lengths of more than 25m are planned, please consult our customer service.

Frequency limit: 350 kHz

| Type | FBTYPE | EXTPOS | GEARMODE |
|------|--------|--------|----------|
| Hall | 11     | -      | -        |

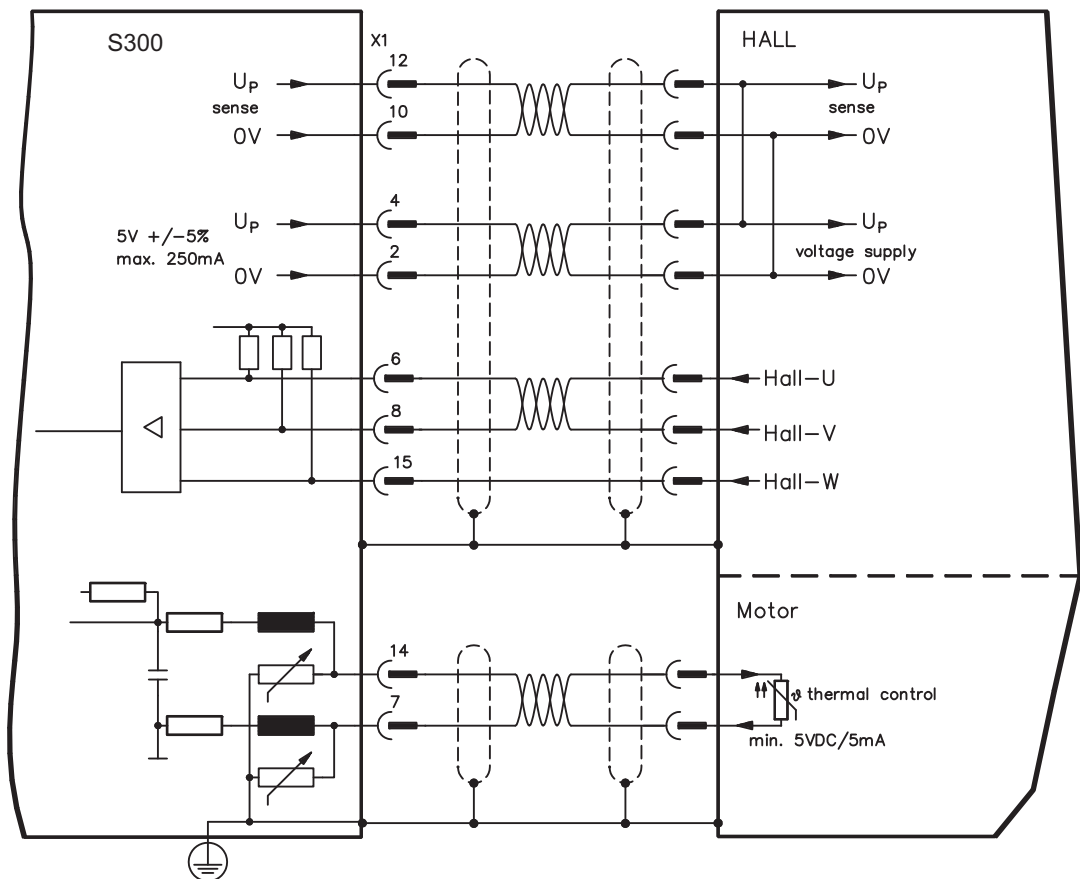

## 8.14 Electronic Gearing, Master-slave operation

In the case of the “electronic gearing” functionality (see setup software and description of GEARMODE parameter), the servo amplifier is controlled by a secondary feedback device as a slave.

It is possible to set up master/slave systems, use an external encoder as a setpoint encoder or connect the amplifier to a stepper motor control.

The amplifier is parameterized using the setup software (electronic gearing).

The resolution (number of pulses per revolution) can be adjusted.

### NOTE

If input X1 is used without the X1 power supply (pins 2, 4, 10, 12), e.g. master-slave operation with other servoamplifiers, the monitoring of this power supply must be switched off in order to prevent error message F04 from appearing. To do this, you must change Bit 20 of the DRVCNFG2 parameter (see ASCII object reference in the online help).

### 8.14.1 Signal source

The following types of external encoders can be used for electronic gearing:

| secondary Feedback type         | Fre-<br>quency<br>limit | Connector | Wiring<br>diagram | GEARMODE |
|---------------------------------|-------------------------|-----------|-------------------|----------|
| SinCos Encoder BiSS digital     | 1.5MHz                  | X1        | ⇒ p.65            | 11, 12   |
| SinCos Encoder ENDAT 2.1        | 350kHz                  | X1        | ⇒ p.66            | 8        |
| SinCos Encoder ENDAT 2.2        | 1.5MHz                  | X1        | ⇒ p.67            | 13       |
| SinCos Encoder HIPERFACE        | 350kHz                  | X1        | ⇒ p.68            | 9        |
| SinCos Encoder w/o data channel | 350kHz                  | X1        | ⇒ p.70            | 6, 7     |
| ROD* (AquadB) 5V                | 1.5MHz                  | X1        | ⇒ p.72            | 30       |
| ROD* (AquadB) 5V                | 350kHz                  | X1        | ⇒ p.73            | 10       |
| ROD* (AquadB) 5V                | 1.5MHz                  | X5        | ⇒ p.75            | 3        |
| ROD* (AquadB) 24V               | 100kHz                  | X3        | ⇒ p.77            | 2        |
| SSI 5V                          | 1.5MHz                  | X5        | ⇒ p.79            | 5        |
| Step/direction 5V               | 1.5MHz                  | X1        | ⇒ p.82            | 27       |
| Step/direction 24V              | 100kHz                  | X3        | ⇒ p.82            | 1        |
| Step/direction 5V               | 1.5MHz                  | X5        | ⇒ p.83            | 4        |

\* ROD is an abbreviation for incremental encoder

8.14.2 Connection to stepper motor controllers (step and direction)


You can connect the servo amplifier to a third-party stepper-motor controller. Parameter setting for the slave amplifier is carried out with the aid of the setup software (electronic gearing). The number of steps can be adjusted, so that the servo amplifier can be adapted to match the step-direction signals of any stepper controller. Various monitoring signals can be generated.

NOTE

Observe the frequency limit!  
Using an A quad B encoder provides better EMC noise immunity.


8.14.2.1 Step/Direction 5V, 1.5 MHz (X1)

Wiring of the servo amplifier (SubD connector X1) to a stepper-motor controller with a 5 V signal level. Frequency limit: 1.5 MHz

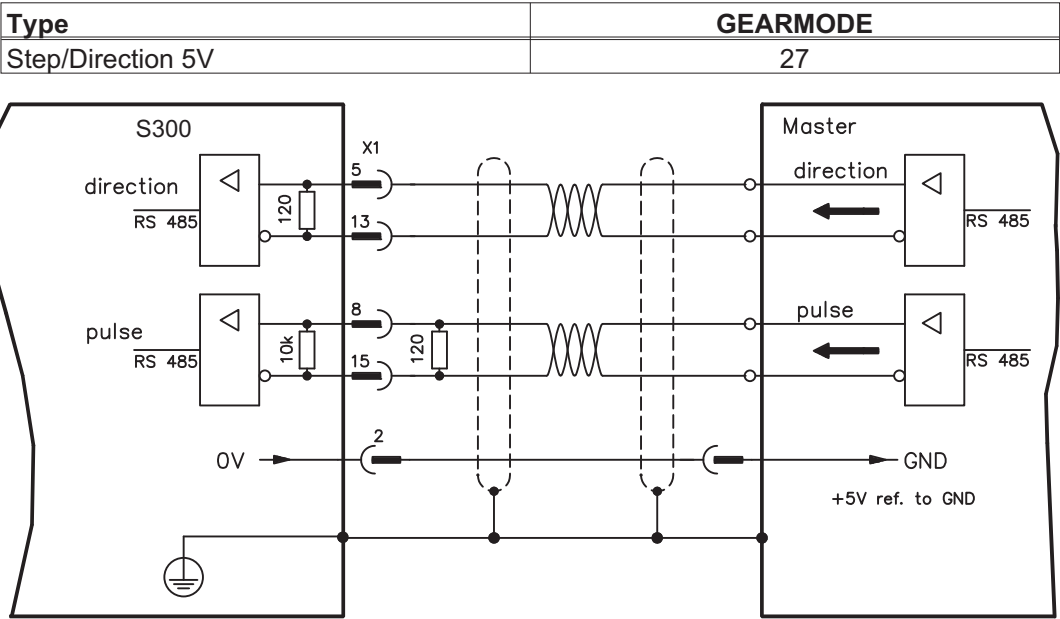

8.14.2.2 Step/Direction 24V, 100 kHz (X3)

Wiring of the servo amplifier to a stepper-motor controller with a 24 V signal level. Used are the digital inputs DIGITAL-IN 1 and 2 on connector X3. Frequency limit: 100 kHz

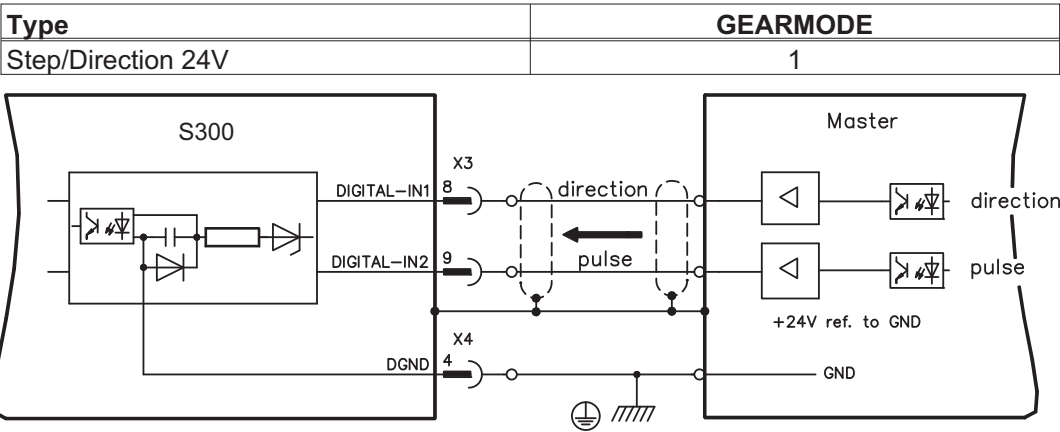


**8.14.2.3 Step/Direction 5V, 1.5 MHz (X5)**

Wiring of the servo amplifier (SubD connector X5) to a stepper-motor controller with a 5 V signal level.

Frequency limit: 1.5 MHz

| Type              | GEARMODE |
|-------------------|----------|
| Step/Direction 5V | 4        |

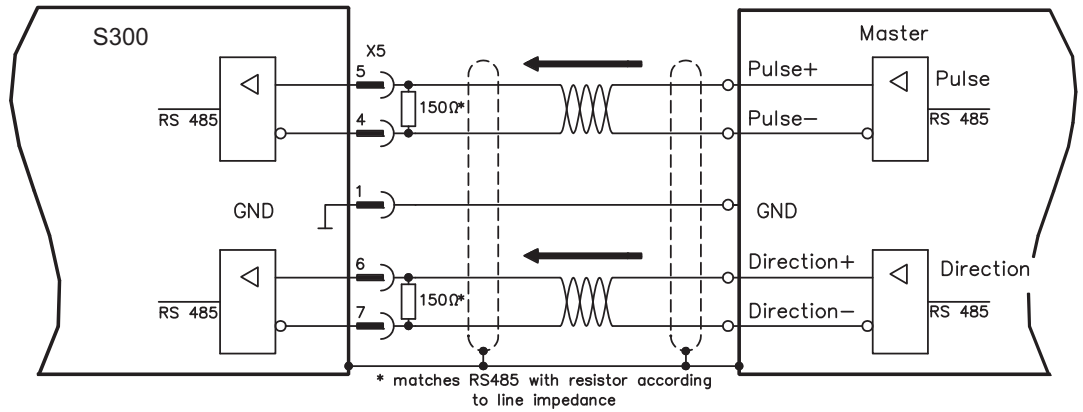

### 8.14.3 Master-Slave Connection

You can, for example, link several S300 amplifiers together in master-slave operation. Up to 16 slave amplifiers can be controlled by the master, via the encoder output.

#### 8.14.3.1 Master Slave 5V (X1)

Functionality not available.

#### 8.14.3.2 Master Slave 5V (X5)

Master: position output to X5 (screen page "Encoder emulation")


Slave: screen page "Electronic gearing" (GEARMODE)

Frequency limit X5: 1.5 MHz

Example for Master-Slave operation with two S300 amplifiers:

Slave **GEARMODE: 3**

Master **ENCMODE:1**

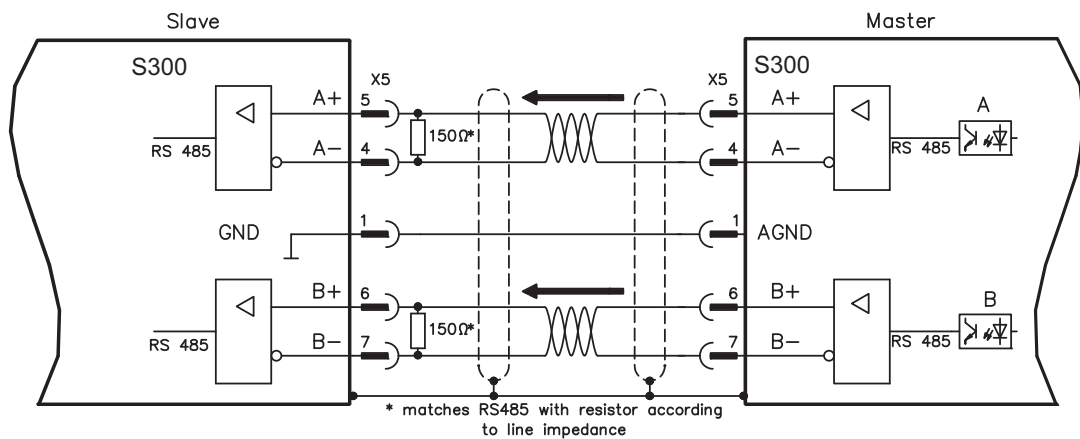

## 8.15 Encoder emulation

### 8.15.1 Incremental encoder output - A quad B (X5)

The incremental-encoder interface is part of the standard package. Select encoder function ROD (A Quad B) Encoder ("Encoder Emulation" screen page). The servo amplifier calculates the motor shaft position from the cyclic- absolute signals of the resolver or encoder, generating incremental-encoder compatible pulses from this information. Pulse outputs on the SubD connector X5 are 2 signals, A and B, with 90° phase difference (i.e. in quadrature, hence the alternative term "A quad B" output), with a zero pulse.

The resolution (before multiplication) can be set by the RESOLUTION function:

| Enc. function (ENCMODE) | Feedback system (FBTYPE) | Resolution (lines) (ENCOUT)                                       | Zero pulse (NI)                                   |
|-------------------------|--------------------------|-------------------------------------------------------------------|---------------------------------------------------|
| 1, ROD                  | 0, Resolver              | 32...4096                                                         | once per turn<br>(only at A=B=1)                  |
|                         | 2,4 Encoder              | 256...524288<br>( $2^8 \dots 2^{19}$ )                            |                                                   |
| 3, ROD interpolation    | Encoder                  | $2^4 \dots 2^7$ (multiplication) TTL<br>line x encoder resolution | encoder signal<br>passed through<br>from X1 to X5 |



Use the NI-OFFSET parameter to adjust + save the zero pulse position within one mechanical turn. The drivers operate off an internal supply voltage.

#### NOTE

The maximum permissible cable length is 100 meters.

Connections and signals for the incremental encoder interface :

Default count direction: UP when the motor shaft is rotating clockwise (looking at the shaft's end)

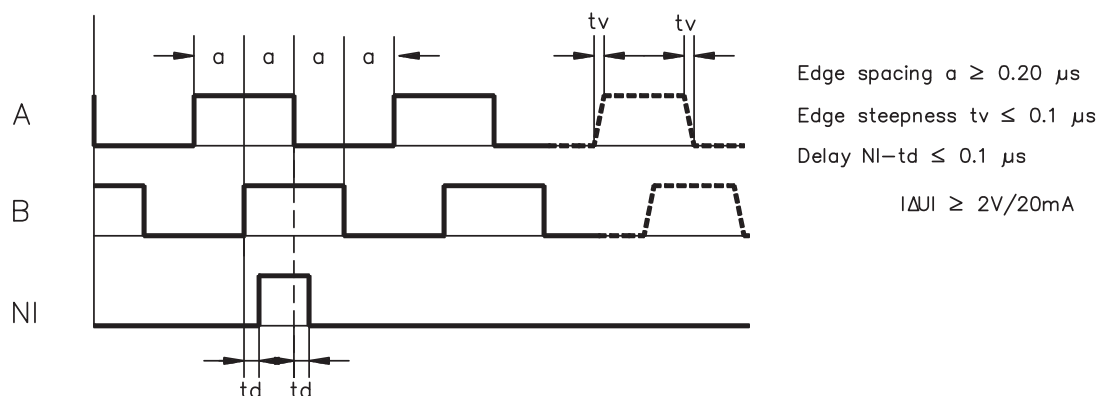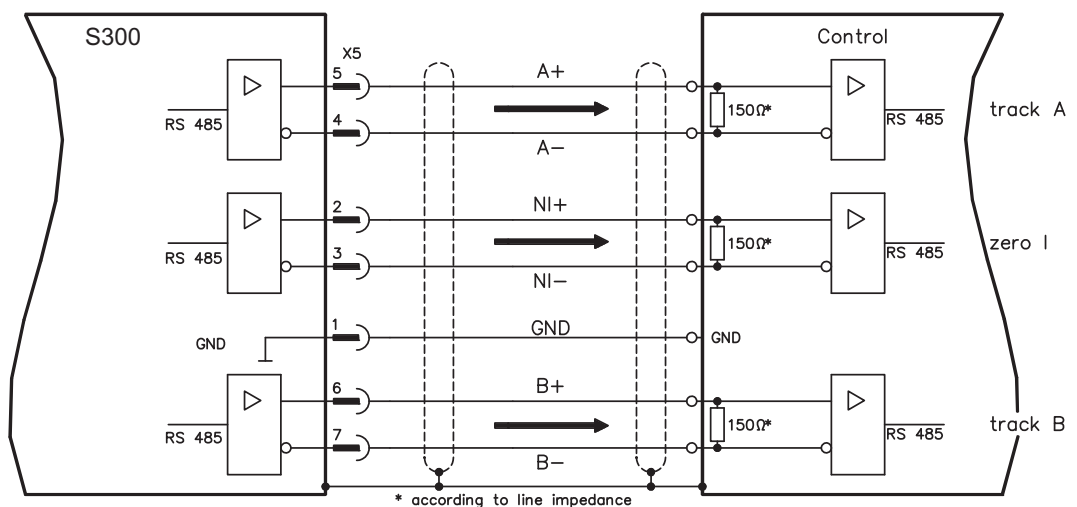

### 8.15.2 SSI encoder output (X5)

The SSI interface (synchronous serial absolute-encoder emulation) is part of the standard package. Select encoder function SSI ("Encoder Emulation" screen page, ENCMODE 2). The servo amplifier calculates the motor shaft position from the cyclic-absolute signals of the resolver or encoder. From this information a SSI date (Stegmann patent specification DE 3445617C2) is provided. Max 32 bits are transferred. The leading data bit contains the number of revolutions and are selectable from 12 to 16 bits. The following max. 16 bits contain the resolution and are not variable.

The following table shows the allocation of the SSI date depending upon selected number of revolutions:

|     |    | Revolution |    |    |    |    |   |   |   |   |   |   |   |   |   |   | Resolution (variable) |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |    |
|-----|----|------------|----|----|----|----|---|---|---|---|---|---|---|---|---|---|-----------------------|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|----|
|     |    | SSIREVOL   |    |    |    |    |   |   |   |   |   |   |   |   |   |   |                       |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |    |
| Bit | 15 | 14         | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |                       |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  | </ |



The signal sequence can be output in **Gray** code or in **Binary** (standard) code.

The servo amplifier can be adjusted to the clock frequency of your SSI-evaluation with the setup software (cycle time 1,3  $\mu$ s or 10  $\mu$ s).

The drivers operate off an internal supply voltage.

Connection and signals for the SSI interface :

Default count direction: UP when the motor shaft is rotating clockwise (looking at the end of the motor shaft)

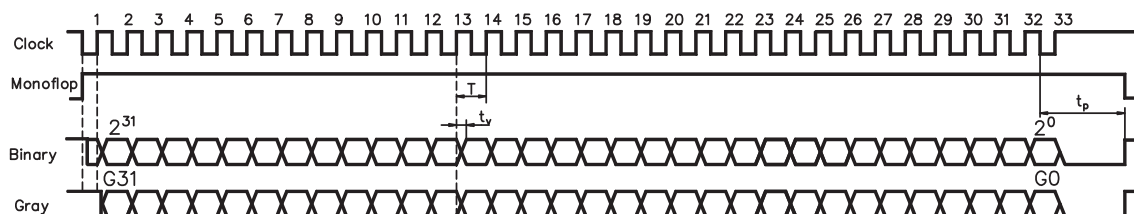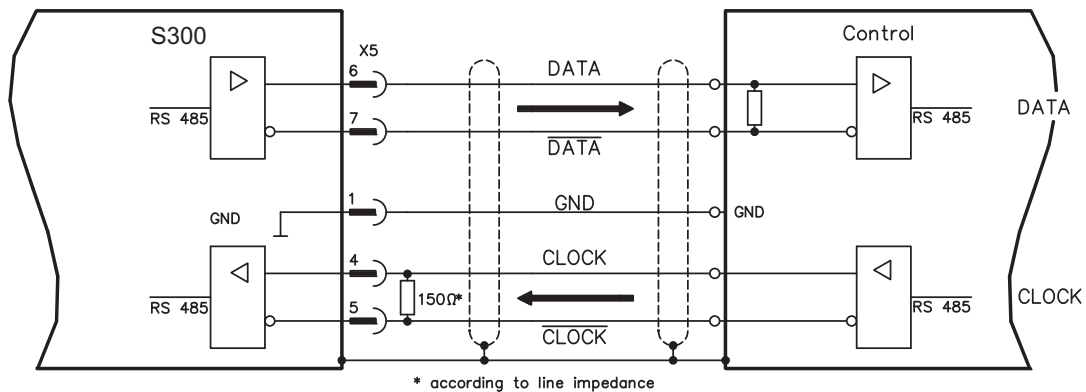

Switch over time Data  $t_v \leq 300\text{nsec}$   
 Period  $T = 600\text{ ns}$   
 Time Out  $t_p = 1.3\mu\text{s}/10\mu\text{s}$  (SSITOUT)

Output  $I_{\Delta UI} \geq 2\text{V}/20\text{mA}$   
 Input  $I_{\Delta UI} \geq 0.3\text{V}$


## 8.16 Digital and analog inputs and outputs

### 8.16.1 Analog inputs (X3)

The servo amplifier is fitted with two **programmable** differential inputs for analog setpoints. AGND (X3/7) must always be joined to the GND of the controls as a ground reference.

#### Technical characteristics

- Differential-input voltage max.  $\pm 10$  V
- Ground reference AGND, terminal X3/7
- Input resistance  $2.4\text{ k}\Omega$
- Common-mode voltage range for both inputs  $\pm 10$  V
- Update rate  $62,5\text{ }\mu\text{s}$

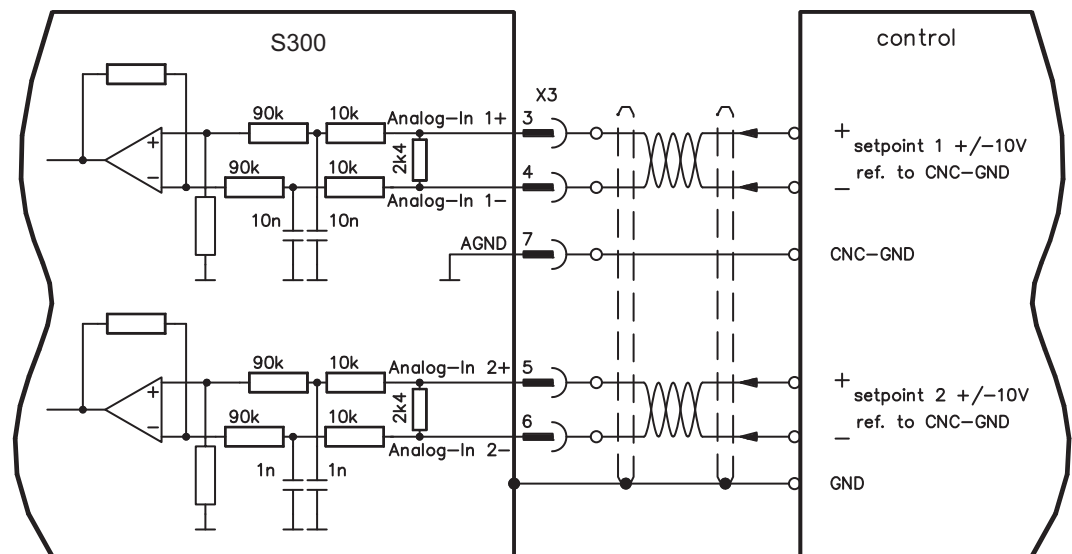

#### Analog-In 1 input (terminals X3/3-4)

Differential input voltage max.  $\pm 10$  V, resolution 14-bit, scalable.  
Standard setting : speed setpoint

#### Analog-In 2 input (terminals X3/5-6)

Differential input voltage max.  $\pm 10$  V, resolution 12-bit, scalable.  
Standard setting : torque setpoint

Application examples for setpoint input Analog-In 2:

- adjustable external current limit
- reduced-sensitivity input for setting-up/jog operation
- pre-control / override

#### Defining the direction of rotation

Standard setting : clockwise rotation of the motor shaft (looking at the shaft end)

- Positive voltage between terminal X3/3 (+) and terminal X3/4 (-) or
- Positive voltage between terminal X3/5 (+) and terminal X3/6 (-)

To reverse the direction of rotation, swap the connections to terminals X3/3-4 or X3/5-6 respectively, or change the ROTATION DIRECTION parameter in the "Speed controller" screen page.


## 8.16.2

## Digital inputs (X3/X4)

All digital inputs are **electrically isolated** via optocouplers.

Technical characteristics

- Ground reference is **Digital-GND** (DGND, terminals X4/3 and X4/4)
- The inputs at X3 are **PLC-compatible** (IEC 61131-2 Type 1)  
High: 11...30 V / 2...11 mA , Low: -3...5 V / <1 mA
- Update rate Software: 250 µs / Hardware: 2 µs

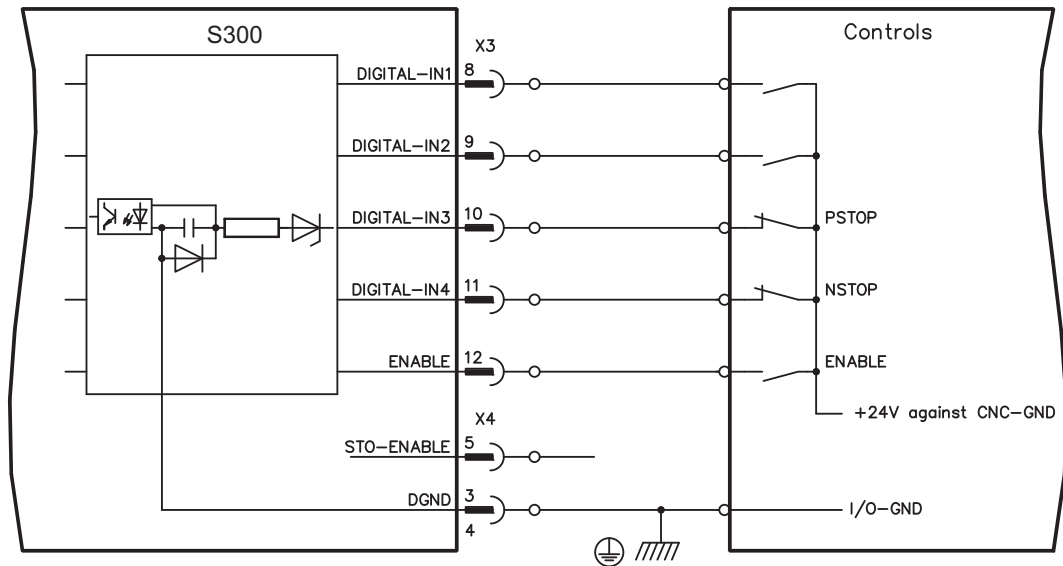ENABLE input

The output stage of the servo amplifier is enabled by applying the ENABLE signal (terminal X3/12, 24 V input, **active high**). Enable is possible only if input STO-Enable has a 24 V signal (see page 35ff).

In the disabled state (low signal) the connected motor has no torque.

STO-ENABLE input

An additional digital input (STO-Enable) releases the power output stage of the amplifier as long as a 24 V signal is applied to this input. If the STO-Enable input goes open-circuit, then power will no longer be supplied to the motor, **the drive will lose all torque and coast down to a stop**. A fail-safe brake function for the drive, if one is required, must be ensured through a mechanical brake since electrical braking with the aid of the drive is no longer possible.

You can thus achieve a restart lock-out for personnel safety by using the STO-Enable input in conjunction with an external safety circuit.

You can find further information and connection examples on page 35.

**NOTE**

The STO-Enable input is not compatible with IEC 61131-2.

Programmable digital inputs


You can use the DIGITAL-IN1 to DIGITAL-IN4 digital inputs to initiate pre-programmed functions that are stored in the servo amplifier. A list of these pre-programmed functions can be found on the "Digital I/O" screen page of our setup software.

If an input was freshly assigned to a pre-programmed function, then the data set must be saved in the EEPROM of the servo amplifier and a reset has to be carried out (with the amplifier setup software for example).

### 8.16.3 Digital outputs (X3)

#### Technical characteristics

- Ground reference is Digital-GND (DGND, terminals X4/3 and X4/4)
- All digital outputs are floating
- DIGITAL-OUT1 and 2 : Open Emitter, max. 30 V DC, 10 mA
- BTB/RTO : Relay output, max. 30 V DC or 42 V AC, 0.5 A
- Update rate 250  $\mu$ s

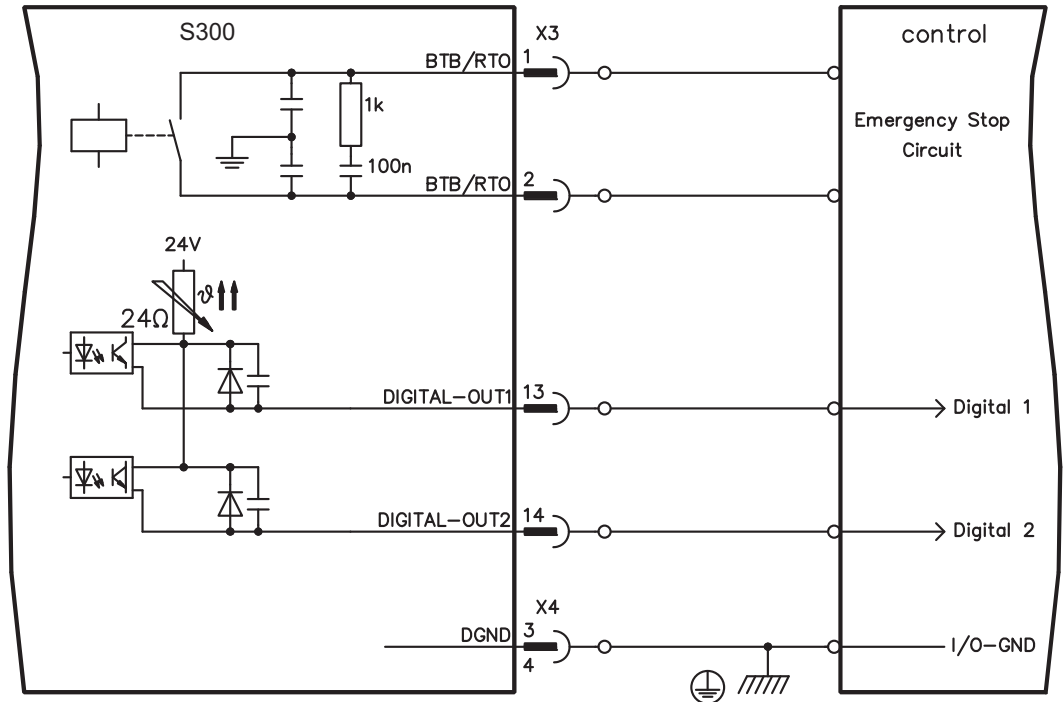

#### Ready-to-operate contact BTB/RTO

Operational readiness (terminals X3/1 and X3/2 ) is signaled by a **floating** relay contact. The contact is **closed** when the servo amplifier is ready for operation, and the signal is **not** influenced by the enable signal, the I<sup>2</sup>t-limit, or the brake threshold.

#### NOTE

All faults cause the BTB/RTO contact to open and the output stage to be switched off (if the BTB/RTO contact is open, the output stage is inhibited -> no power output). A list of the error messages can be found on page 108.

#### Programmable digital outputs DIGITAL-OUT 1 / 2:

You can use the digital outputs DIGITAL-OUT1 (terminal X3/13) and DIGITAL-OUT2 (terminal X3/14) to output messages from pre-programmed functions that are stored in the servo amplifier.

A list of these pre-programmed functions can be found on the "I/O digital" screen page of our setup software.

If an output is to be freshly assigned to a pre-programmed function, then the parameter set must be saved in the EEPROM of the servo amplifier and a reset has to be carried out (with the amplifier setup software for example).

## 8.17 RS232 interface, PC connection (X6)

Operating, position control, and motion-block parameters can be set up by using the setup software on an ordinary commercial PC.


Connect the PC interface (X6) of the servo amplifier to a serial interface on the PC via a null-modem cable, **while the supply to the equipment is switched off**.

**NOTE** Do not use a null-modem power link cable!

This interface has the same electrical potential as the CANopen interface.


The interface is selected and set up in the setup software. Further notes on page 94.

With the optional -2CAN- expansion card, the two interfaces for RS232 and CAN, which would otherwise use the same connector X6, are separated out onto three connectors (⇒ p.123).

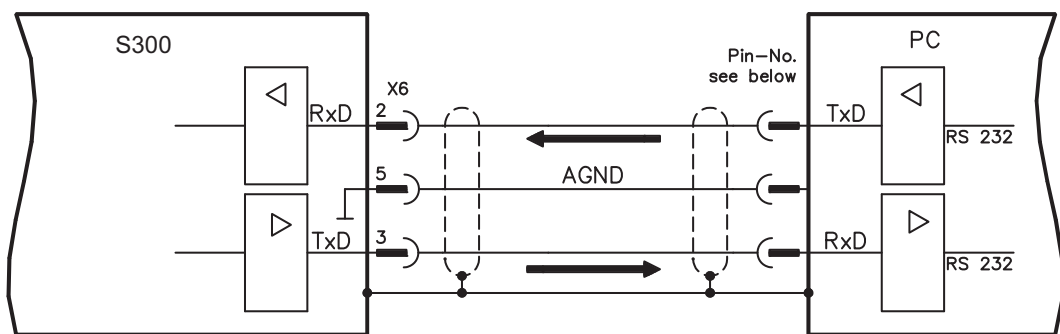

Interface cable between the PC and servo amplifiers of the S300 series:

(View : looking at the solder side of the SubD sockets on the cable)

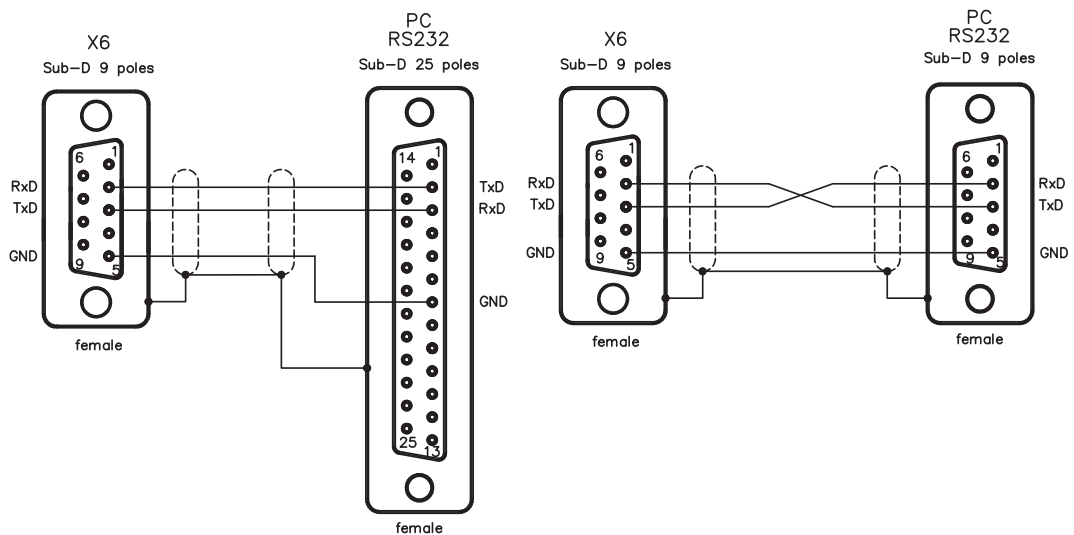

## 8.18

## CANopen interface (X6)


The interface for connection to the CAN-bus (default : 500 kBaud). The integrated profile is based on the CANopen DS301 communication profile and the DS402 drive profile.

The following functions are available in connection with the position controller:

Jogging with variable speed, homing run (zeroing to reference), start motion task, start direct task, digital setpoint provision, data transmission functions and many others.

Detailed information can be found in the CANopen manual. The interface is at the same electrical potential as the RS232 interface. The analog setpoint inputs can still be used.

With the optional -2CAN- expansion card, the two interfaces for RS232 and CAN, which otherwise use the same connector X6, are separated out onto three connectors (with termination, ⇒ p.123).

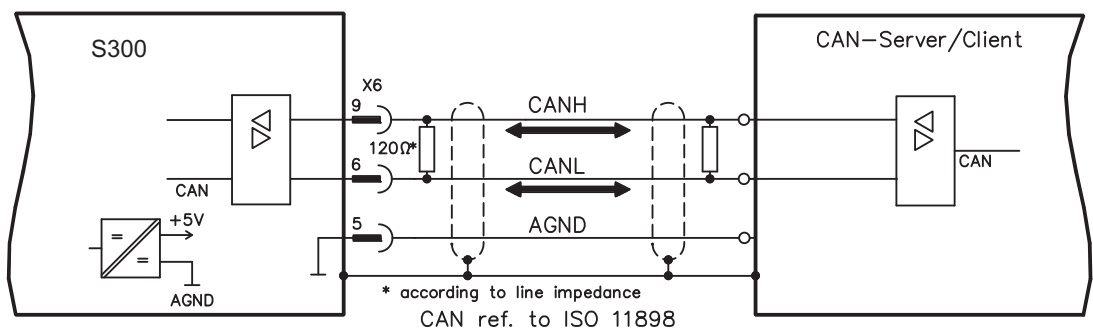**CAN-bus cable**

To meet ISO 11898, a bus cable with a characteristic impedance of 120 Ω should be used. The maximum usable cable length for reliable communication decreases with increasing transmission speed. As a guide, you can use the following values which we have measured, but they are not to be taken as assured limits:

|                    |                          |               |
|--------------------|--------------------------|---------------|
| <b>Cable data:</b> | Characteristic impedance | 100-120 Ω     |
|                    | Cable capacitance        | max. 60 nF/km |
|                    | Lead loop resistance     | 159.8 Ω/km    |


**Cable length, depending on the transmission rate**

| Transmission rate (kBaud) | max. cable length (m) |
|---------------------------|-----------------------|
| 1000                      | 10                    |
| 500                       | 70                    |
| 250                       | 115                   |

Lower cable capacitance (max. 30 nF/km) and lower lead resistance (loop resistance, 115 Ω/km) make it possible to achieve greater distances. (Characteristic impedance  $150 \pm 5 \Omega \Rightarrow$  terminating resistor  $150 \pm 5 \Omega$ ).

For EMC reasons, the SubD connector housing must fulfill the following requirements:

- metal or metalized housing
- provision for cable shielding connection on the housing, large-area connection

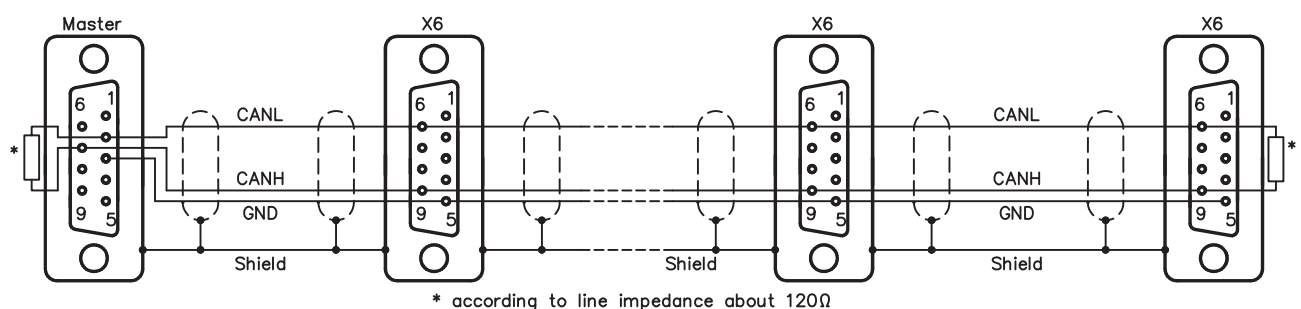

This page has been deliberately left blank.

## 9 Setup

The procedure for setup is described as an example. Depending on the application, a different procedure may be appropriate or necessary. In multi-axis systems, set up each servo amplifier individually.

### 9.1 Safety Instructions

**⚠ DANGER** The equipment produces potentially lethal voltages up to 900 V. Check that all connection components that are live in operation are safely protected against bodily contact.

**⚠ WARNING** Never undo the electrical connections to the servo amplifier while it is live. Capacitors can still have dangerous residual charges up to 300 seconds after switching off the supply voltage.

**⚠ CAUTION** The heat sink and front panel of the amplifier can reach temperatures up to 80°C in operation. Check the heat sink temperature. Wait until the heat sink has cooled down to 40°C before touching it.

**⚠ CAUTION** Before setting up, the manufacturer of the machine must generate a risk assessment for the machine, and take appropriate measures to ensure that unforeseen movements cannot cause injury or damage to any person or property.

**⚠ CAUTION** Only professional personnel with extensive knowledge in the fields of electrical engineering and drive technology are allowed to setup the servo amplifier.

**NOTICE** If the servo amplifier has been stored for more than 1 year, it will be necessary to re-form the capacitors in the DC bus link circuit. To do this, disconnect all electrical connections and apply single-phase 208...240 V AC to terminals L1 / L2 of the servo amplifier for about 30 minutes. This will re-form the capacitors.

**NOTE** Additional information on setting up the equipment:  
The adaptation of parameters and the effects on the control loop behavior are described in the [online help](#) of the setup software.  
The setting up of any expansion card that may be fitted is described in the corresponding manual on the CD-ROM.  
We can provide further know-how through training courses (on request).

## 9.2 Setup software

### 9.2.1 General

This chapter describes the installation of the setup software DRIVEGUI.EXE for the S300 digital servo amplifiers.

We offer training and familiarization courses on request.

#### 9.2.1.1 Use as directed

The setup software is intended to be used for altering and saving the operating parameters for the S300 series of servo amplifiers. The attached servo amplifier can be set up with the help of this software, and during this procedure the drive can be controlled directly by the service functions.



**WARNING** Only professional personnel who have the relevant expertise described on page 7 are permitted to carry out online parameter setting for a drive that is running. Sets of data that have been stored on data media are not safe against unintended alteration by other persons. After loading a set of data you must therefore always check all parameters before enabling the servo amplifier.

#### 9.2.1.2 Software description

The servo amplifiers must be adapted to the requirements of your machine. Usually you will not have to carry out this parameter setting yourself on the amplifier, but on a PC, with the assistance of the setup software. The PC is connected to the servo amplifier by a null-modem cable (serial, see p.90). The setup software provides the communication between the PC and S300.

You can find the setup software on the accompanying CD-ROM and in the download area of our website.

With very little effort you can alter parameters and instantly observe the effect on the drive, since there is a continuous (online) connection to the amplifier. At the same time, important actual values are read out from the amplifier and displayed on the monitor of the PC (oscilloscope functions).

Any interface modules (expansion cards) which may be built into the amplifier are automatically recognized, and the additional parameters which are required for position control or motion-block definition are made available.

You can save sets of data on data media (archiving) and load them again. You can also print out the data sets.

We supply you with motor-specific default sets of data for the most common combinations of servo amplifier and motor. In most applications you will be able to use these default values to get your drive running without any problems.

An extensive [online help](#) with integrated description of all variables and functions supports you in each situation.

### 9.2.1.3 Hardware requirements

The PC interface (X6, RS232) of the servo amplifier is connected to the serial interface of the PC by a null-modem cable (**not a null-modem link cable!**) (⇒ p.90).

#### NOTICE

**Connect / disconnect the interface cable only when the electrical supply is switched off for both the PC and the servo amplifier.**

The interface in the servo amplifier has the same potential level as the CANopen interface.

#### Minimum requirements for the PC:

|                  |   |                                                          |
|------------------|---|----------------------------------------------------------|
| Processor        | : | at least Pentium® II or comparable                       |
| Operating system | : | WINDOWS 2000 / XP                                        |
| Graphics adapter | : | Windows compatible, color                                |
| Drives           | : | hard disk with at least 10 MB free space<br>CD-ROM drive |
| Interface        | : | one free serial interface (COM1 ... COM10)               |

### 9.2.1.4 Operating systems

#### WINDOWS 2000 / XP / Vista / 7

DRIVEGUI.EXE will run under WINDOWS 2000, XP, Vista and 7.

Emergency operation is feasible through an ASCII terminal emulation (without graphical user interface).

Interface settings : 38400 bps, databit 8, no parity, stopbit 1, no flow control

#### Unix, Linux

The functioning of the software has **not** been tested for WINDOWS running within Unix or Linux.

### 9.2.2 Installation under WINDOWS

The CD-ROM includes an installation program for the setup software.

#### Installation

Autostart function activated:

Insert the CD-ROM into a free drive. A window with the start screen opens. There you find a link to the setup software DRIVEGUI.EXE. Click it and follow the instructions.

Autostart function deactivated:

Insert the CD-ROM into a free drive. Click on **START** (task bar), then on **Run**. Enter the program call: **x:index.htm** (x = correct CD drive letter).

Click **OK** and proceed as described above.

#### Connection to the serial interface of the PC:

Connect the interface cable to a serial interface on your PC (COM1 to COM10) and to the serial interface of the servo amplifier S300 (⇒ p.90).

## **9.3 Quickstart**

### **9.3.1 Preparation**

#### **9.3.1.1 Unpacking, Mounting and Wiring the Servo Amplifier**

1. Unpack servo amplifier and accessories
2. **Observe safety instructions in the manuals**
3. Mount the servo amplifier as described in chapter 7
4. Wire the servo amplifier as described in chapter 8 or apply the minimum wiring for drive testing as described in chapter 9.3.1.3
5. Install the software as described in chapter 9.2

#### **9.3.1.2 Documents**

You need access to these documents (located on the product CD-ROM, you can download the latest editions from our website):

- Instructions Manual (this manual)
- Accessories Manual
- CANopen communication profile Manual

Depending on the installed expansion card you need one of these documents:


- PROFIBUS DP communication profile Manual
- DeviceNet communication profile Manual
- SERCOS communication profile Manual
- EtherCAT communication profile Manual

You need Acrobat Reader to read the PDFs, an installation link is on every screen of the product CD-ROM.

### 9.3.1.3 Minimum Wiring for Drive Test



**CAUTION** This wiring does not fulfill any requirements to safety or functionality of your application, it just shows the required wiring for drive testing without load.

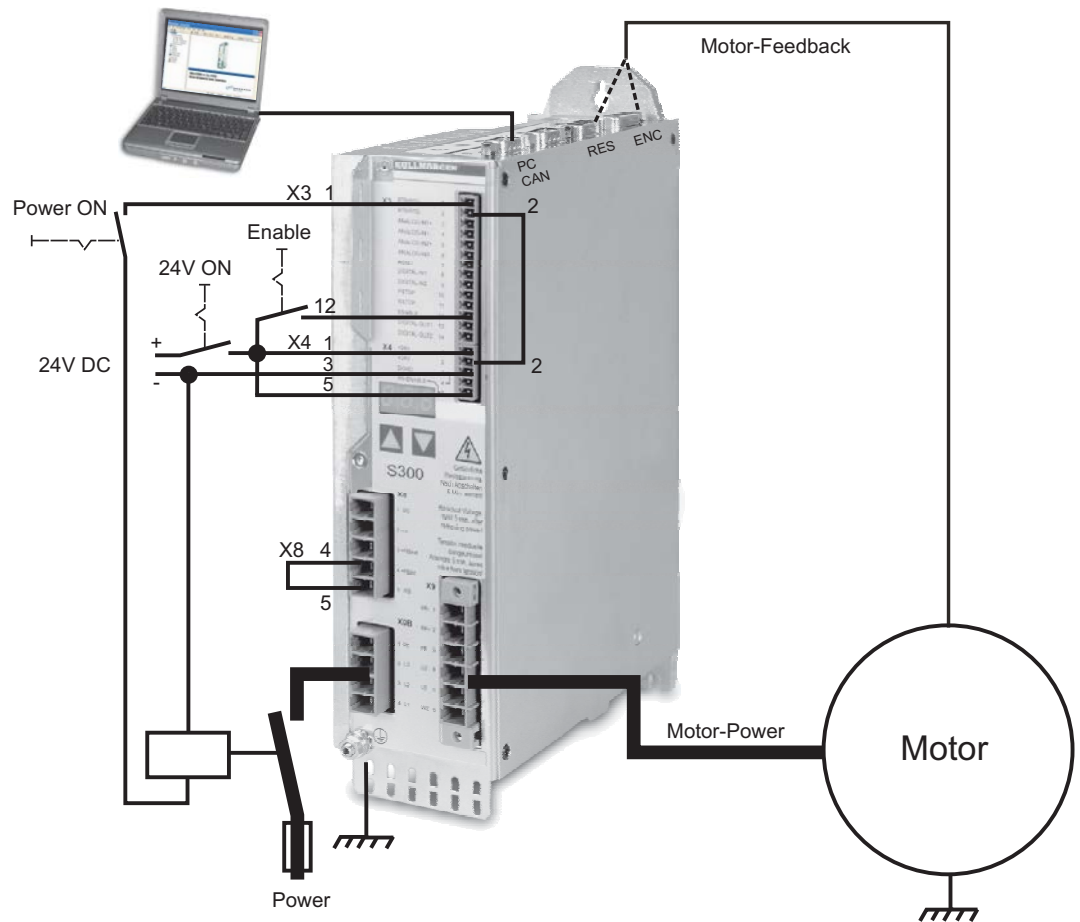

## 9.3.2

## Connect


- Connect the interface cable to a serial interface on your PC and to the serial interface X6 of the servo amplifier. USB to serial converter can be used optionally.
- Switch on the 24 V power supply for the servo amplifier.
- Wait about 30 seconds, until the front display of the servo amplifier displays the current class (e.g.  for 3 A). If the power supply voltage is switched on, too, a leading P is displayed (e.g.  for Power, 3 A).

**NOTE**



If a fault code () or a warning () or a status message (./\_ / E/S) appears in the display, you will find the description on page 108 / 109. If there is fault, fix the problem.



Double-Click the DRIVEGUI.EXE icon on your Windows desktop to start the software.

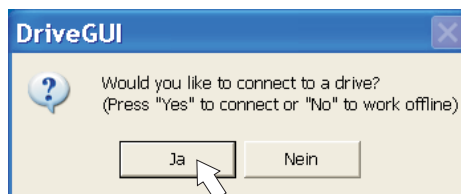

You can work offline or online with DRIVEGUI.EXE. Work ONLINE now.

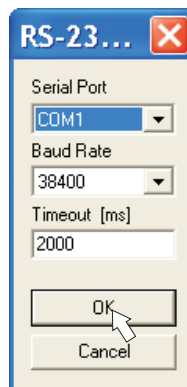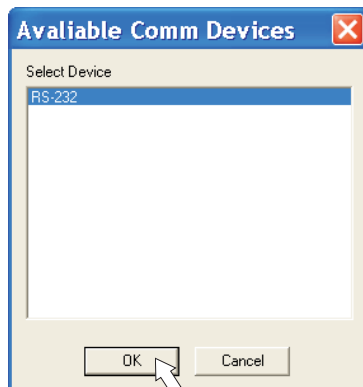

If the communication is started for the first time, you have to setup the communication parameters. Choose the communication system and the interface, where the servo amplifier is connected to. Click OK.

The software tries to communicate with these parameters. If it's not successful, you receive this error message:




Frequent causes:

- wrong interface chosen
- wrong connector chosen at the servo amplifier
- interface is used by another software
- 24 V auxiliary voltage for the servo amplifier not working
- interface cable broken or wrong wiring

Quit the error message. The software starts in the offline mode now, that requires the manual selection of the amplifier's type. Quit this selection by closing the window. Fix the communication problem. Restart the software in Online mode.

If communication works, you see the start screen. Select "Setup Wizard" in the navigation frame.

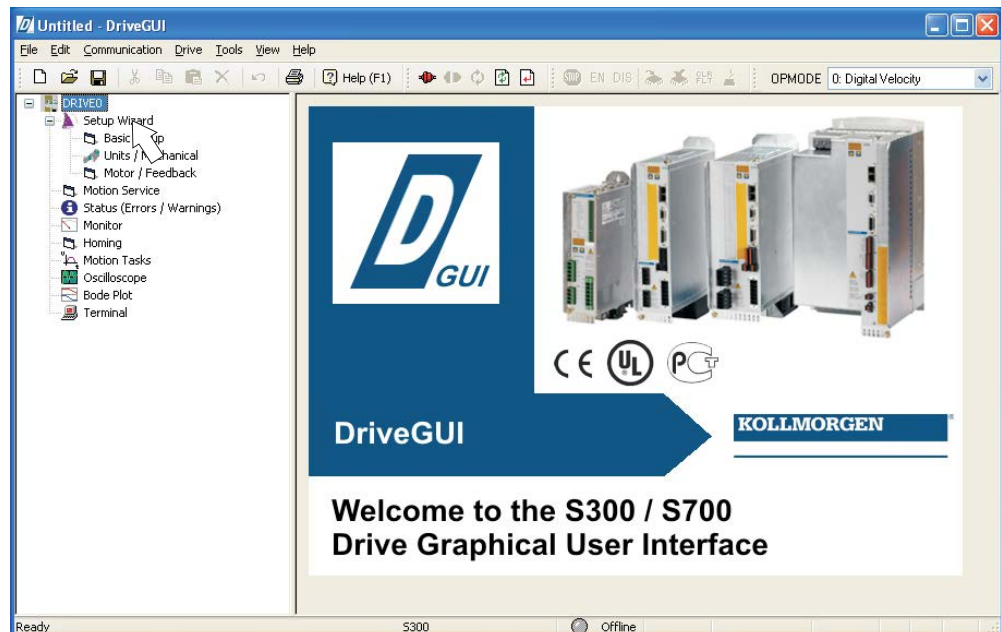

### NOTICE

Make sure, that the amplifier is disabled (Input Enable connector X3 pin 12 must be 0 V or open)!

## 9.3.3

### Important Screen Elements

#### Help Function

The [online help](#) gives detailed information to all parameters the servo amplifier can work with.

|                                                                                     |                                                                                             |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
| <b>Key F1</b>                                                                       | Starts <a href="#">online help</a> for the actual screen page.                              |
| <b>Menu bar Help</b>                                                                | Starts <a href="#">online help</a> with the first page.                                     |
|  | Context Help. Click the help symbol first. Then click the function for which you need help. |

#### Tool Bar

|                                                                                      |                                                                   |
|--------------------------------------------------------------------------------------|-------------------------------------------------------------------|
|  |                                                                   |
|   | Save to EEPROM, required if you changed parameters.               |
|   | Reset, required if you changed configuration parameters.          |
| OPMODE: 0: Digital Velocity                                                          | Operation Mode, use "0: Digital Velocity" mode for drive testing. |

#### Status Bar

|       |                                                                                     |        |          |         |           |  |  |  |
|-------|-------------------------------------------------------------------------------------|--------|----------|---------|-----------|--|--|--|
| Ready |  | Online | Disabled | Warning | not homed |  |  |  |
|-------|-------------------------------------------------------------------------------------|--------|----------|---------|-----------|--|--|--|

The status bar shows a green Online symbol, indicating that the communication works.

### 9.3.4 Setup Wizard

The Setup Wizard leads you through the necessary steps for configuring your servo amplifier. Depending on the selected application, only the active screen pages are necessary.

For a quick setup / drive test, select the setup type "Quick Motor/Drive Setup".

**Start the Wizard.**

#### 9.3.4.1 Basic Setup

Basic parameters are setup here.

**Response to Loss of Input Phase:** Select Single-Phase or Three-Phase operation. With three-phase operation you can select either warning "n05" or error "F19" in case of phase loss. The reaction "F19" disables the output stage, "n05" is just a message.

**Name:** You can enter a name for the servo amplifier (up to 8 characters). This simplifies the drive identification in the system.

**Set Software Enable on Bootstrap:** Don't select this option for the quick test.

**Click NEXT.**

## 9.3.4.2

## Units/Mechanical

The user units for all input fields in the setup software can be pre-selected here.

**Position, Velocity, Acceleration**

Select usable units for your application referring to the moved load.

**Mechanical Conversion**

The relationship between motor shaft revolution (pole pair pitch with linear motors) and motion distance of the load is specified here. Gear ratio can be calculated here as well. Detailed information can be found in the [online help](#).

Use the tool based on sample applications for calculating the resolution value:

**Calculate PGEARI/PGEARO for..." button**

If your application does not correspond to any of the listed examples, enter the required parameters directly in the fields on the "Units" screen.

First, select the application that corresponds to your own. Next, set the position unit. Select the position unit that provides you with the required accuracy for your application. Set the mechanical data for your application now. If a gearhead is flange-mounted on the motor, you must also enter the gearhead data (either the number of teeth or the ratio of the revolutions).

Then click the "Calculate conversion factors and return" button.

**Click NEXT.**

### 9.3.4.3 Motor (rotary) / Feedback

Simplified setting of the motor related parameters.

#### NOTE

**Feedback:** Select the feedback system used in the motor.

**Attention: Resolver is fixed to 2 pole in the Quick Motor/Drive Setup.**

Change "pole n°" on feedback screen in Complete Setup later, if required.

**Motor type:** Click the button "Select from Database...".

Open the database file (mdb\_...csv) and select the used motor out of the list. Special motors must be defined in the "Complete Setup".

**Brake:** If the amplifier shall control a brake, change the Brake parameter to "With"

**Calculated quick tuning:** If you know the Load-to-motor inertia ratio (0 is for no load), enter the number here and select the desired servo performance. If you don't know the inertia ratio, select "Do not tune". **Click FINISH.**

### 9.3.4.4 Motor (linear) / Feedback (Encoder)

Simplified setting of the motor related parameters.

**Feedback:** Select the feedback system used.

**Motor type:** Click the button "Select from Database..".

Open the database file (mdb\_...csv) and select the used motor. Special motors must be defined in the "Complete Setup".

**Encoder Lines** (appears with Feedback Type Sine Encoder):

Click "Calculate" and fill in the Encoder signal period.

**Brake:** If the amplifier shall control a brake, change the Brake parameter to "With"

**Calculated quick tuning:** If you know the Load-to-motor inertia ratio, enter the number here and select the desired servo performance. Otherwise select "Do not tune".


**Click FINISH.**

### 9.3.4.5 Save Parameters and Restart

You are going to finish the Setup Wizard and you have changed several basic parameters. Depending on the parameters you changed, two possible reactions will occur now:

#### Configuration parameters changed

A warning appears, that you have to restart the amplifier, this is called "coldstart".

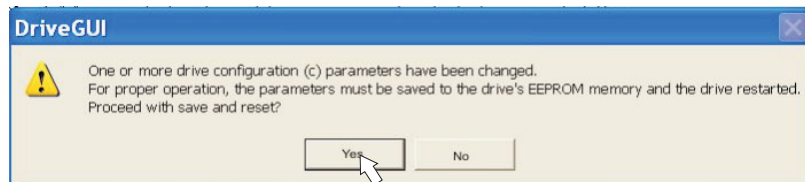

Click "YES".

The parameters are saved to the amplifier's EEPROM automatically and a reset command restarts

the amplifier (takes some seconds).

#### Other parameters changed

No warning appears. Save the parameters to the EEPROM of the servo amplifier manually by clicking the symbol  in the tool bar. A coldstart of the amplifier is not necessary. Select the screen "Motion Service" in the navigation frame.


### 9.3.5

#### Motion Service (Jog Mode)

#### NOTICE

**Be aware that the actual position of the load permits the subsequent moving operations. The axis could move to the hardware limit-switch or the mechanical stop. Make sure that a jerk or a fast acceleration of the load cannot cause any damage.**

- Switch on the power supply for the drive.
- **STO-Enable:** Apply +24 V to the input STO-Enable [X4/5]
- **Hardware-Enable:** Apply +24 V to the input Enable [X3/12]. If STO-Enable is missed or the sequence was wrong, the front display shows .
- **Software-Enable:** Click the symbol  in the tool bar. Now the front display shows an E and the current class (e.g.  for Enable, 3 A). Click the symbol  to switch off the output stage (disable).

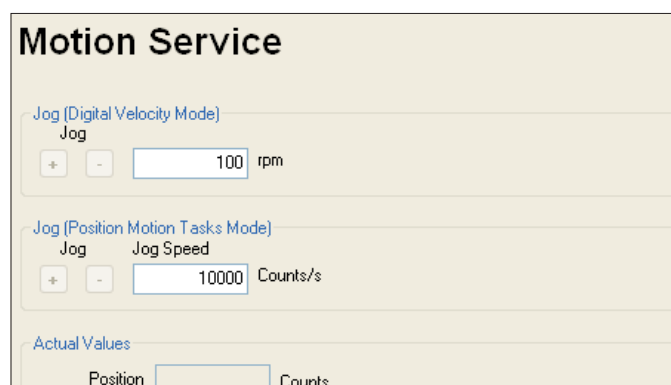

#### Jog

##### (Digital Velocity Mode):

You can move the drive with constant speed. Enter the desired speed.

**CAUTION: Observe the "safe reduced speed" requirements for your application!**

The drive moves with the preset speed when the + or – button is pressed. It stops when the button is released.

Actual errors and warnings are listed on the screen "Status". A description of errors/warnings can be found in the [online help](#) or on p.108ff.

Now you have setup and tested the basic functions of the drive successfully.

### 9.3.6 More Setup Screens



Observe the safety instructions in the manuals and in the [online help](#) before you change parameters in the additional setup screens.


For all setup functions detailed information can be found in the [online help](#) system and the integrated command reference.

Select "Complete Setup" in the Setup-Wizard. Now you have access to:

- **Feedback:** Adjust the used feedback unit
- **Motor:** Adjust the used motor
- **Control Loops:** Current-, Velocity- and Position-Loops can be optimized
- **Position Data:** Adjust the position control for the requirements of your application.
- **Position Registers:** up to 16 position values in the motion way can be monitored.
- **Electronic Gearing:** If the servo amplifier will follow a setpoint as a slave with a gear ratio, you can select the gearing source here and define the gear ratio.
- **Encoder Emulation:** select the encoder emulation (position output)
- **Analog I/O:** setup the analog inputs
- **Digital I/O:** setup the digital inputs and outputs
- **Status (Errors/Warnings):** displays amplifiers data with history, actual faults/warnings
- **Monitor:** displays the drive data (actual values)
- **Homing:** definition and start of homing
- **Motion task:** definition and start of motion task
- **Oscilloscope:** 4 channel oscilloscope with multiple functionality
- **Bode Plot:** tool for optimizing the drive
- **Terminal:** setup the servo amplifier with ASCII commands
- **Expansion Card:** depending on the built-in expansion card a menu appears
- **Autotuning:** fast tuning of the velocity controller

## 9.4 Multi-axis system

With a special cable you can connect up to 255 servo amplifiers to your PC: cable type -SR6Y- (for four amplifiers) or -SR6Y6- (for six amplifiers) see Accessories Manual.

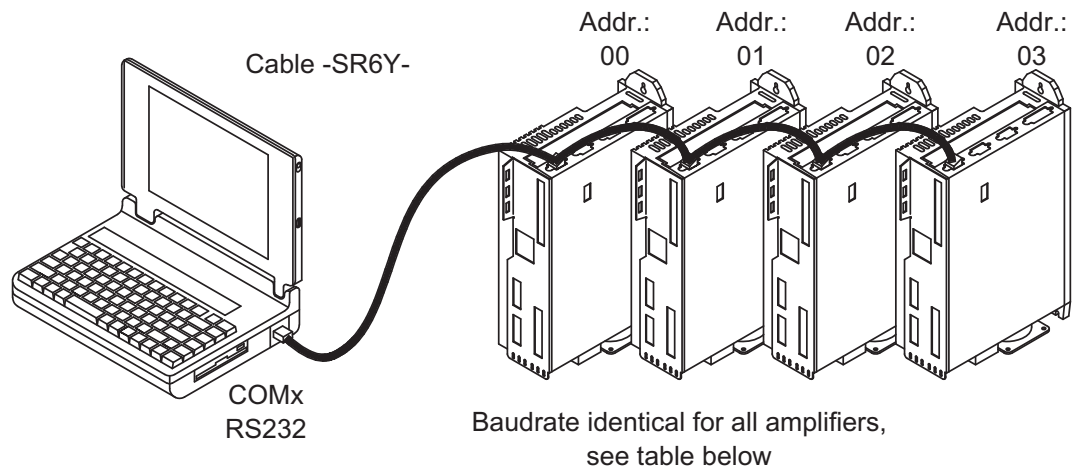

With the PC connected to only one amplifiers you can select every amplifier in the system via the set station address with the setup software.

### 9.4.1 Station address for CAN-bus

You can use the keypad on the front panel to preset the station addresses for the individual amplifiers and the baud rate for communication (⇒ p.107). Usually the setup software is used to set all parameters.

### 9.4.2 Baud rate for CAN-bus

#### **NOTE**

After changing the station address and baud rate you must turn the 24V auxiliary supply for the servo amplifier off and on again.

Coding of the Baud rate in the LED display :

| Coding | Baud rate in kbit/s | Coding | Baud rate in kbit/s |
|--------|---------------------|--------|---------------------|
| 1      | 10                  | 25     | 250                 |
| 2      | 20                  | 33     | 333                 |
| 5      | 50                  | 50     | 500                 |
| 10     | 100                 | 66     | 666                 |
| 12     | 125                 | 80     | 800                 |
|        |                     | 100    | 1000                |


## 9.5 Keypad operation / LED display

This section illustrates the two possible operating menus and the use of the keys on the front panel. Normally, the S300 only presents the standard menu for your use. If you want to operate the amplifier via the detailed menu, you must keep the right key pressed while switching on the 24V supply.

9.5.1 Keypad operation

The two keys can be used to perform the following functions:


| Key symbol                                                                                                                                                          | Functions                                                                                                                            |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                    | <b>press once</b> : move up one menu item, increase number by one<br><b>press twice in rapid succession</b> : increase number by ten |
|                                                                                    | <b>press once</b> : decrease number by one<br><b>press twice in rapid succession</b> : decrease number by ten                        |
|   | <b>hold right key pressed, and then press left key as well</b> :<br>to enter a number, "Return" function                             |

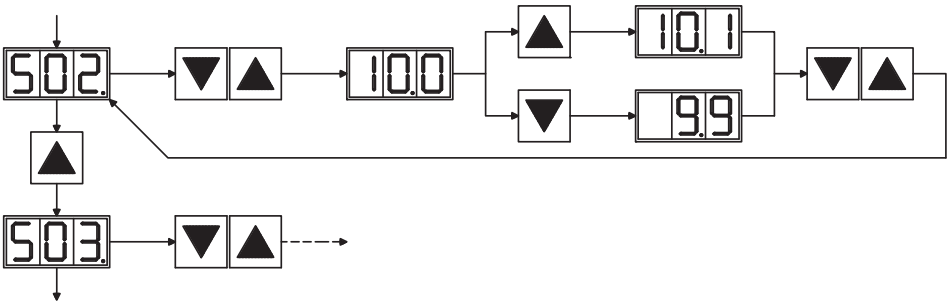

9.5.2 Status display



9.5.3 Standard menu

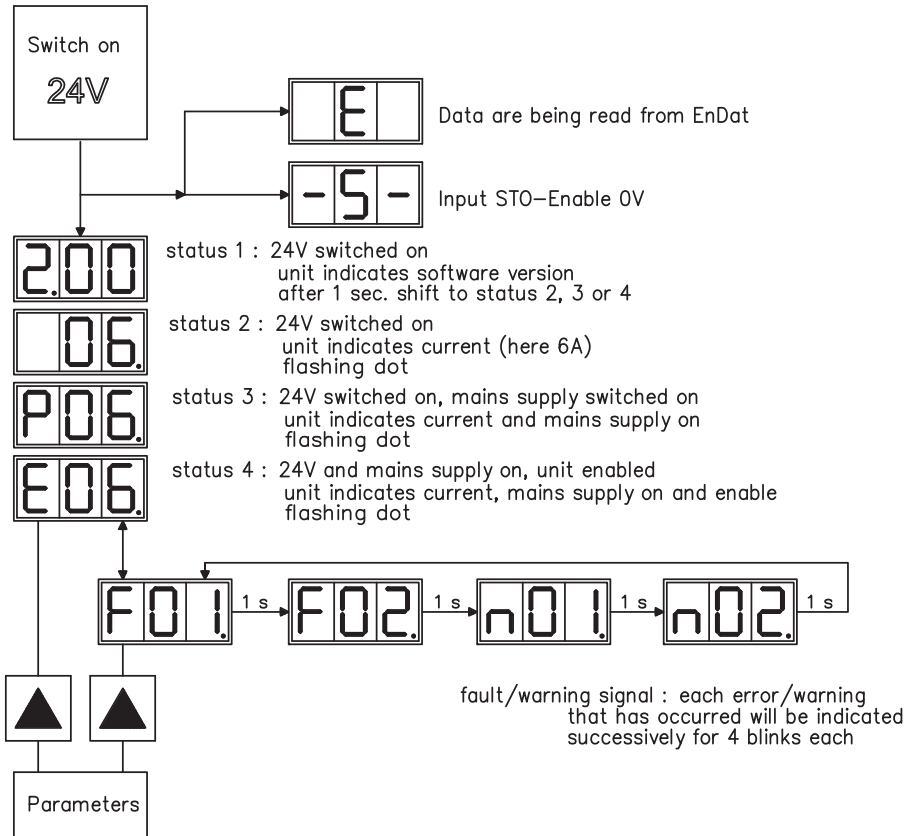


## 9.5.4

## Advanced menu

**NOTE**

To operate the amplifier via the advanced menu, you must keep the right key pressed while switching on the 24 V supply.

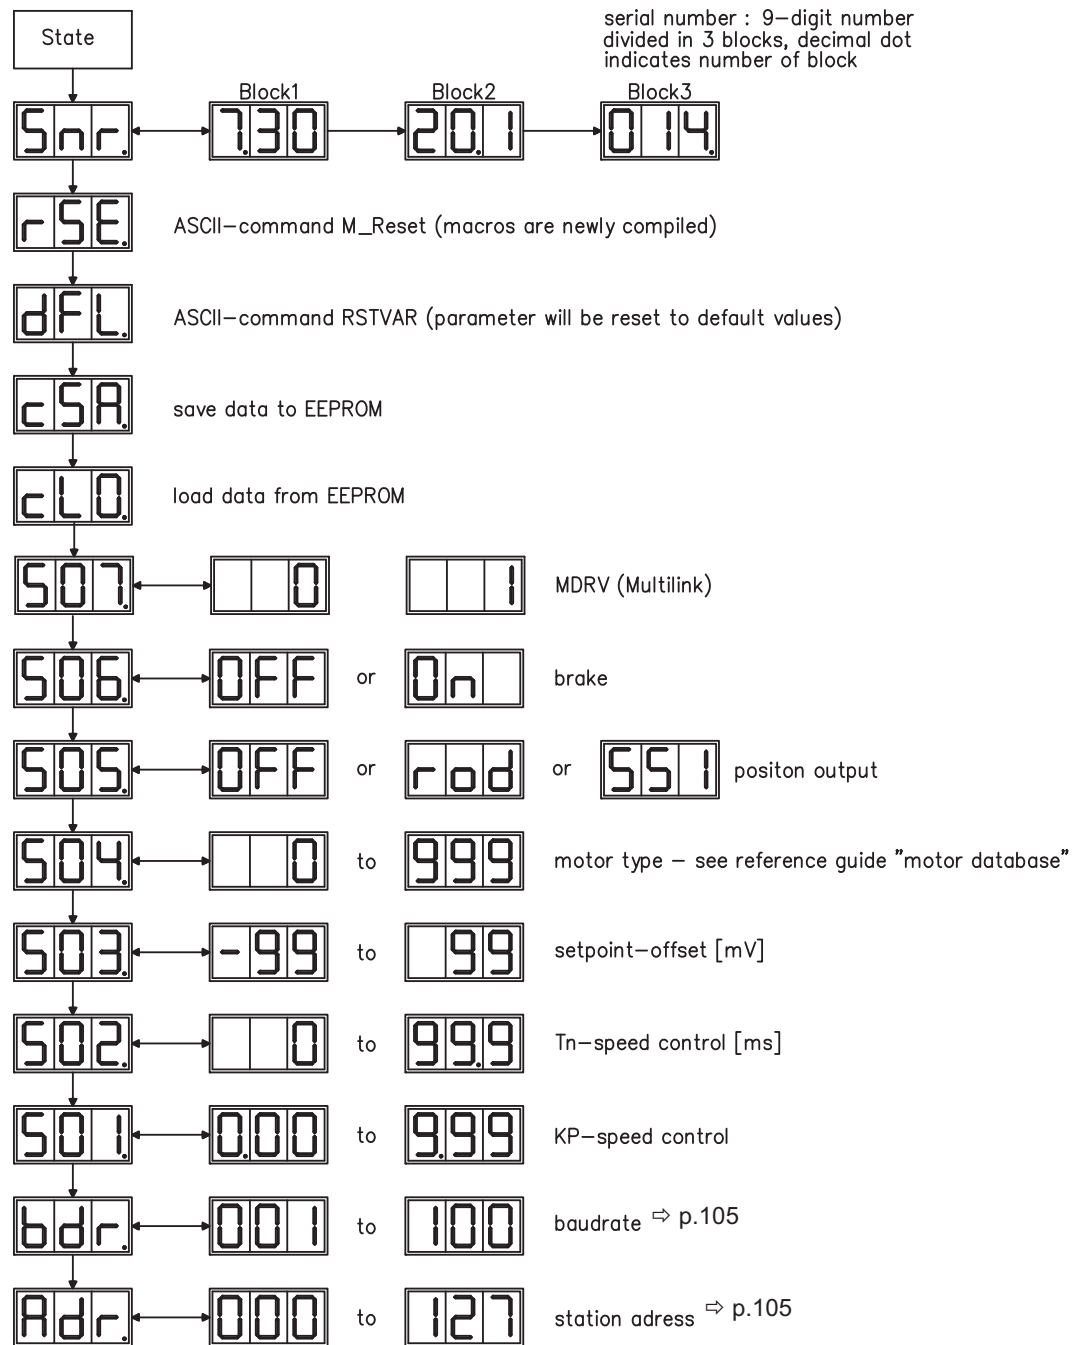

## 9.6

## Error messages

Any errors that occur are shown in coded form by an error number in the LED display on the front panel. All error messages result in the BTB/RTO contact being opened, the output stage being switched off (motor loses all torque), and the holding brake is activated.

| Number | Explanation           |                                                                                                 |
|--------|-----------------------|-------------------------------------------------------------------------------------------------|
| E / P  | Status Messages       | Status messages, no error, see p. 106                                                           |
| . . .  | Status Message        | Amplifier is updating the startup configuration                                                 |
| -      | Status Message        | Status message, no error, programming mode                                                      |
| - S -  | STO-Enable            | STO-Enable input is 0V (with disabled drive only)                                               |
| F01    | Heat Sink Temperature | Heat sink temperature too high (default: 80°C)                                                  |
| F02    | Overvoltage           | Overvoltage in DC bus link. Limit depends on the electrical supply voltage                      |
| F03    | Following Error       | Message from the position controller                                                            |
| F04*   | Feedback              | Cable break, short-circuit, short to ground                                                     |
| F05    | Undervoltage          | Undervoltage in DC bus link (default: 100 V)                                                    |
| F06    | Motor Temperature     | Motor temperature too high or temp. sensor defect                                               |
| F07*   | Internal Voltages     | Internal supply voltages not ok                                                                 |
| F08*   | Overspeed             | Motor runs away, speed is too high                                                              |
| F09*   | EEPROM                | Checksum error                                                                                  |
| F10    | Signal Failure X5     | Signal failure X5 (cable break or similar)                                                      |
| F11*   | Brake                 | Cable break, short-circuit, short to ground                                                     |
| F12    | Motor Phase           | Motor phase missing (cable break or similar)                                                    |
| F13    | Ambient Temperature   | Ambient temperature too high                                                                    |
| F14*   | Output Stage          | Fault in the power output stage, also with wrong motor cable or insufficient cable shielding    |
| F15    | I <sup>2</sup> t max. | I <sup>2</sup> t maximum value exceeded                                                         |
| F16    | Mains BTB/RTO         | 2 or 3 phases missing in the mains supply feed                                                  |
| F17*   | A/D Converter         | Error in the analog-digital conversion, normally caused by extreme electromagnetic interference |
| F18*   | Brake Circuit         | Brake circuit faulty or incorrect setting                                                       |
| F19    | DC Bus Link           | DC bus link breakdown                                                                           |
| F20*   | Slot Error            | Slot error, depends on the type of expansion card (see ASCII object reference)                  |
| F21*   | Handling Error        | Handling error on the expansion card                                                            |
| F22    | Reserved              | Reserved                                                                                        |
| F23*   | CAN-Bus Off           | Severe CAN bus communication error                                                              |
| F24    | Warning               | Warning is displayed as fault                                                                   |
| F25*   | Commutation Error     | Commutation error                                                                               |
| F26    | Limit Switch          | Hardware limit switch error on homing move                                                      |
| F27*   | STO                   | Operational error with STO, input for STO-Enable and ENABLE have been set at the same time      |
| F28    | Fieldbus Error        | see ASCII command reference                                                                     |
| F29    | Slot/Fieldbus Error   | see ASCII command reference                                                                     |
| F30    | Emergency Timeout     | Timeout emergency stop                                                                          |
| F31    | Reserve               | Reserve                                                                                         |
| F32*   | System Error          | System software not responding correctly                                                        |

\* = Fault reset by hardware reset of the servo amplifier. All other faults can be reset by ASCII command CLRFAULT.

**NOTE**

More information to the messages can be found in the ASCII Object Reference ([online help](#)), see parameter ERRCODE. Hints for removal can be found in the Online help chapter "Trouble-Shooting".

## 9.7 Warning messages

Faults which occur, but which do not cause a switch-off of the amplifier output stage (BTB/RTO contact remains closed), are indicated in the LED display on the front panel by a coded warning number.

| Number  | Designation                   | Explanation                                                                                                                         |
|---------|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| E / P   | Status Messages               | Status messages, no error, see p. 106                                                                                               |
| ...     | Status Message                | Amplifier is updating the startup configuration                                                                                     |
| - S -   | STO-Enable                    | STO-Enable input is 0V (with disabled drive only)                                                                                   |
| -       | Status Message                | Status message, no error, programming mode                                                                                          |
| n01     | I <sup>2</sup> t              | I <sup>2</sup> t threshold exceeded                                                                                                 |
| n02     | Brake power                   | Reached preset brake power limit                                                                                                    |
| n03*    | S fault                       | Exceeded preset following error limit                                                                                               |
| n04*    | Response monitoring           | Response monitoring (fieldbus) has been activated                                                                                   |
| n05     | Supply phase                  | Mains supply phase missing                                                                                                          |
| n06*    | SW limit switch 1             | Software limit switch 1 underrun                                                                                                    |
| n07*    | SW limit switch 2             | Software limit switch 2 overrun                                                                                                     |
| n08     | Motion task error             | A faulty motion task was started                                                                                                    |
| n09     | No reference point            | No reference point (Home) set at start of motion task                                                                               |
| n10*    | PSTOP                         | PSTOP limit-switch activated                                                                                                        |
| n11*    | NSTOP                         | NSTOP limit-switch activated                                                                                                        |
| n12     | Motor default values loaded   | Only for ENDAT or HIPERFACE® : discrepancy between motor number saved in the encoder and the amplifier, motor default values loaded |
| n13*    | Expansion card                | 24V DC supply for I/O expansion card not ok                                                                                         |
| n14     | SinCos feedback               | SinCos commutation (wake & shake) not completed, will be canceled when amplifier is enabled and wake & shake carried out            |
| n15     | Reserve                       | Reserve                                                                                                                             |
| n16     | Summarized warning            | Summarized warning for n17 to n31                                                                                                   |
| n17     | Fieldbus-sync                 | CAN sync is not logged in                                                                                                           |
| n18     | Multiturn overflow            | Max. number of motor turns exceeded                                                                                                 |
| n19     | Motion task ramps are limited | Range overflow on motion task data                                                                                                  |
| n20     | Invalid motion task           | Invalid motion task                                                                                                                 |
| n21     | PLC program error             | For details see PLC code                                                                                                            |
| n22     | Max. motortemperatur reached  | The user can shut down the process before the temperature error will interrupt the process immediately                              |
| n23     | Sin Cos feedback              | Warning level reached                                                                                                               |
| n24     | Digital I/O                   | Configuration is not logical                                                                                                        |
| n25-n31 | Reserve                       | Reserve                                                                                                                             |
| n32     | Firmware beta version         | Firmware is an unreleased beta version                                                                                              |

\* = these warning messages result in a controlled shut-down of the drive (braking by emergency stop ramp)

### NOTE

More information to the messages can be found in the ASCII Object Reference ([online help](#)), see parameter STATCODE. Hints for removal can be found in the Online help chapter "Trouble-Shooting".

## 9.8 Trouble Shooting

There may be a wide variety of reasons for the fault, depending on the conditions in your installation. In multi-axis systems there may be further hidden causes of a fault.

### NOTE

Detailed hints for removal of faults can be found in the [online help](#) chapter "Trouble-Shooting".

Our customer service can give you further assistance with problems.


| Fault                                       | Possible causes                                                                                                                                                                                                                                                                                                                               | Measures                                                                                                                                                                                                                                                                                                    |
|---------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>HMI message:<br/>Communication fault</b> | <ul style="list-style-type: none"> <li>— wrong cable used</li> <li>— cable plugged into wrong position on servo amplifier or PC</li> <li>— wrong PC interface selected</li> </ul>                                                                                                                                                             | <ul style="list-style-type: none"> <li>— use null-modem cable</li> <li>— plug cable into the correct sockets on the servo amplifier and PC</li> <li>— select correct interface</li> </ul>                                                                                                                   |
| <b>Motor does not rotate</b>                | <ul style="list-style-type: none"> <li>— servo amplifier not enabled</li> <li>— software enable not set</li> <li>— break in setpoint cable</li> <li>— motor phases swapped</li> <li>— brake not released</li> <li>— drive is mechanically blocked</li> <li>— motor pole no. set incorrectly</li> <li>— feedback set up incorrectly</li> </ul> | <ul style="list-style-type: none"> <li>— apply ENABLE signal</li> <li>— set software enable</li> <li>— check setpoint cable</li> <li>— correct motor phase sequence</li> <li>— check brake control</li> <li>— check mechanism</li> <li>— set motor pole no.</li> <li>— set up feedback correctly</li> </ul> |
| <b>Motor oscillates</b>                     | <ul style="list-style-type: none"> <li>— gain is too high (speed controller)</li> <li>— feedback cable shielding broken</li> <li>— AGND not wired up</li> </ul>                                                                                                                                                                               | <ul style="list-style-type: none"> <li>— reduce Kp (speed controller)</li> <li>— replace feedback cable</li> <li>— join AGND to CNC-GND</li> </ul>                                                                                                                                                          |
| <b>Drive reports following error</b>        | <ul style="list-style-type: none"> <li>— I<sub>rms</sub> or I<sub>peak</sub> set too low</li> <li>— accel/decel ramp is too long</li> </ul>                                                                                                                                                                                                   | <ul style="list-style-type: none"> <li>— increase I<sub>rms</sub> or I<sub>peak</sub> (keep within motor ratings!)</li> <li>— shorten ramp +/-</li> </ul>                                                                                                                                                   |
| <b>Motor over-heating</b>                   | <ul style="list-style-type: none"> <li>— I<sub>rms</sub>/I<sub>peak</sub> is set too high</li> </ul>                                                                                                                                                                                                                                          | <ul style="list-style-type: none"> <li>— reduce I<sub>rms</sub>/I<sub>peak</sub></li> </ul>                                                                                                                                                                                                                 |
| <b>Drive too soft</b>                       | <ul style="list-style-type: none"> <li>— Kp (speed controller) too low</li> <li>— Tn (speed controller) too high</li> <li>— ARLPF / ARHPF too high</li> <li>— ARLP2 too high</li> </ul>                                                                                                                                                       | <ul style="list-style-type: none"> <li>— increase Kp (speed controller)</li> <li>— use motor default value for Tn (speed controller)</li> <li>— reduce ARLPF / ARHPF</li> <li>— reduce ARLP2</li> </ul>                                                                                                     |
| <b>Drive runs roughly</b>                   | <ul style="list-style-type: none"> <li>— Kp (speed controller) too high</li> <li>— Tn (speed controller) too low</li> <li>— ARLPF / ARHPF too low</li> <li>— ARLP2 too low</li> </ul>                                                                                                                                                         | <ul style="list-style-type: none"> <li>— reduce Kp (speed controller)</li> <li>— use motor default value for Tn (speed controller)</li> <li>— increase ARLPF / ARHPF</li> <li>— increase ARLP2</li> </ul>                                                                                                   |
| <b>Axis drifts at setpoint = 0V</b>         | <ul style="list-style-type: none"> <li>— offset not correctly adjusted for analog setpoint provision</li> <li>— AGND not joined to the controller-GND of the controls</li> </ul>                                                                                                                                                              | <ul style="list-style-type: none"> <li>— adjust offset (analog I/O)</li> <li>— join AGND and controller-GND</li> </ul>                                                                                                                                                                                      |

## 10 Expansions Cards


You can find information about availability and order numbers on page 129.  
**Expansions cards can only be built into amplifiers without option FAN!**

### 10.1 Guide to installation of expansion cards


- Use a suitable screwdriver to lever off the cover of the option slot.

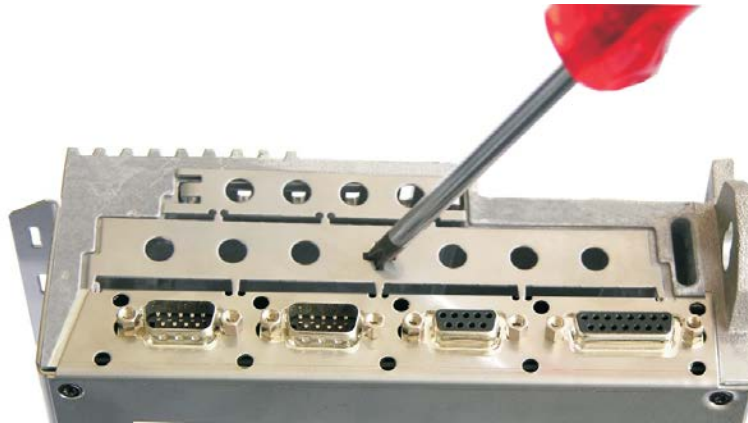

- Take care that no small items (such as screws) fall into the open option slot.
- Lever off the small metall sheet and push it back to the small slot. Dispose the big metall sheet.

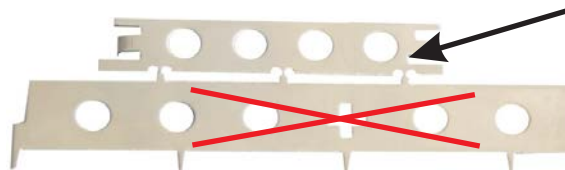

- Push the expansion card carefully into the provided guide rails of the main slot, without twisting it.
- Press the expansion card firmly into the slot.

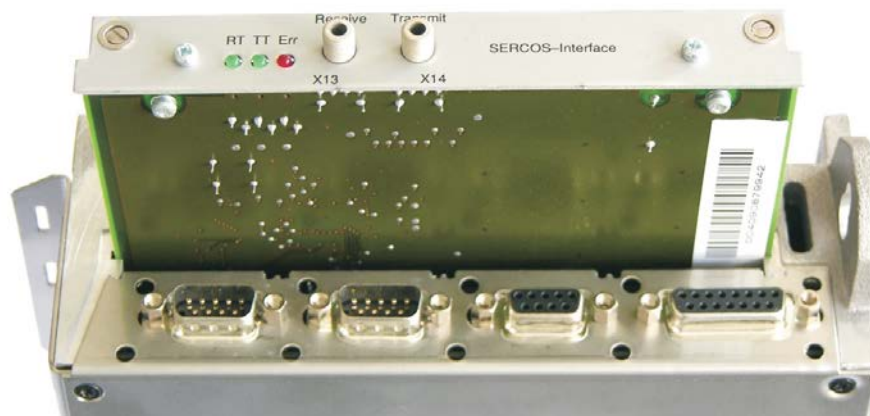

- Screw the screws on the front cover into the threads in the fixing lugs. This ensures that the connectors make good contact.

## 10.2 Expansion card -I/O-14/08-

This section describes the additional features that the expansion card -I/O-14/08- provides for the S300. If you ordered the expansion card together with the servo amplifier, then it will be delivered already inserted into the expansion slot of the servo amplifier and screwed in place.

The -I/O-14/08- provides you with 14 additional digital inputs and 8 digital outputs. The functions of the inputs and outputs are adjustable with the setup software.

The I/Os are used to initiate the motion tasks that are stored in the servo amplifier and to evaluate signals from the integrated position control in the higher-level control system.

The functions of the inputs and signal outputs correspond to the functions that can be assigned to the digital I/Os on connector X3. All inputs and outputs are electrically isolated from the servo amplifier by optocouplers.



### 10.2.1 Technical data

|                                            |                                                                                                                                                                                                                                          |
|--------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Control inputs</b>                      | 24V / 7mA , PLC-compatible, IEC 61131                                                                                                                                                                                                    |
| <b>Signal output</b>                       | 24V / max. 500mA , PLC-compatible, IEC 61131                                                                                                                                                                                             |
| <b>Supply inputs, to IEC 61131</b>         | 24V (18 ... 36V) / 100mA plus total current of the outputs (depends on the input wiring of the controls)<br><b>INFO: The 24V DC voltage must be supplied by an electrically isolated power supply (e.g. with isolating transformer).</b> |
| <b>Fusing (external)</b>                   | 4 AT                                                                                                                                                                                                                                     |
| <b>Connectors</b>                          | MiniCombicon, 12-pin, coded on PIN1 and 12                                                                                                                                                                                               |
| <b>Cables</b>                              | Data – up to 50m long : 22 x 0.5 mm <sup>2</sup> , unshielded,<br>Supply– 2 x 1mm <sup>2</sup> , check voltage drop                                                                                                                      |
| <b>Waiting time between 2 motion tasks</b> | depends on the response time of the control system                                                                                                                                                                                       |
| <b>Addressing time (minimum)</b>           | 4ms                                                                                                                                                                                                                                      |
| <b>Starting delay (maximum)</b>            | 2ms                                                                                                                                                                                                                                      |
| <b>Response time of digital outputs</b>    | max. 10ms                                                                                                                                                                                                                                |

### 10.2.2 LEDs

Two LEDs are mounted next to the terminals on the expansion card. The green LED signals that the 24V auxiliary supply is available for the expansion card. The red LED signals faults in the outputs from the expansion card (overload of switching components, short-circuit).

### 10.2.3 Entering a motion block number (example)

| <b>Motion block number</b> | <b>A7</b> | <b>A6</b> | <b>A5</b> | <b>A4</b> | <b>A3</b> | <b>A2</b> | <b>A1</b> | <b>A0</b> |
|----------------------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| binary 1010 1110           | 1         | 0         | 1         | 0         | 1         | 1         | 1         | 0         |
| decimal 174                | 128       | -         | 32        | -         | 8         | 4         | 2         | -         |

### 10.2.4 Connector assignments


The functions are adjustable with the setup software. In the table below the default values are described.

| Connector X11A |     |                  |                                                                                                                                                                                                                                                                                                          |
|----------------|-----|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Pin            | Dir | Default function | Description                                                                                                                                                                                                                                                                                              |
| 1              | In  | A0               | Motion block number, LSB                                                                                                                                                                                                                                                                                 |
| 2              | In  | A1               | Motion block number, $2^1$                                                                                                                                                                                                                                                                               |
| 3              | In  | A2               | Motion block number, $2^2$                                                                                                                                                                                                                                                                               |
| 4              | In  | A3               | Motion block number, $2^3$                                                                                                                                                                                                                                                                               |
| 5              | In  | A4               | Motion block number, $2^4$                                                                                                                                                                                                                                                                               |
| 6              | In  | A5               | Motion block number, $2^5$                                                                                                                                                                                                                                                                               |
| 7              | In  | A6               | Motion block number, $2^6$                                                                                                                                                                                                                                                                               |
| 8              | In  | A7               | Motion block number, MSB                                                                                                                                                                                                                                                                                 |
| 9              | In  | Reference        | Polls the home switch. If a digital input on the base unit is used as a home input, then the input on the expansion card will <b>not</b> be evaluated.                                                                                                                                                   |
| 10             | In  | F_error_clear    | Clears the warning of a following error (n03) or the response monitoring (n04)                                                                                                                                                                                                                           |
| 11             | In  | Start_MT_Next    | The following task, that is defined in the motion task by "Start with I/O" is started. The target position of the present motion task must be reached before the following task can be started. The next motion block can also be started by an appropriately configured digital input on the base unit. |
| 12             | In  | Start_Jog v= x   | Starts the "Jog Mode" with a defined speed. "x" is the speed saved in the servo amplifier for the function "Jog Mode". A rising edge starts the motion, a falling edge cancels the motion.                                                                                                               |

| Connector X11B |     |                              |                                                                                                                                                                                                                                                                                              |
|----------------|-----|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1              | In  | MT Restart                   | Continues the motion task that was previously interrupted.                                                                                                                                                                                                                                   |
| 2              | In  | Start_MT I/O                 | Starts the motion task that is addressed by A0-A7 (connector X11A/1...8).                                                                                                                                                                                                                    |
| 3              | Out | InPos                        | When the target position for a motion task has been reached (the InPosition window), this is signaled by the output of a HIGH signal. <b>A cable break will not be detected.</b>                                                                                                             |
| 4              | Out | Next-InPos                   | The start of each motion task in an automatically executed sequence of motion tasks is signaled by an inversion of the output signal. The output produces a LOW signal at the start of the first motion task of the sequence. The form of the message can be varied by using ASCII commands. |
|                |     | PosReg 0                     | Can only be adjusted by ASCII commands/setup software.                                                                                                                                                                                                                                       |
| 5              | Out | $\overline{\text{F\_error}}$ | A LOW signal indicates that the position has gone outside the acceptable following error window.                                                                                                                                                                                             |
| 6              | Out | PosReg1                      | default: SW limit 1, indicated by a HIGH signal                                                                                                                                                                                                                                              |
| 7              | Out | PosReg2                      | default: SW limit 2, indicated by a HIGH signal                                                                                                                                                                                                                                              |
| 8              | Out | PosReg3                      | Can only be adjusted by ASCII commands/setup software.                                                                                                                                                                                                                                       |
| 9              | Out | PosReg4                      | Can only be adjusted by ASCII commands/setup software.                                                                                                                                                                                                                                       |
| 10             | Out | PosReg5                      | Can only be adjusted by ASCII commands/setup software.                                                                                                                                                                                                                                       |
| 11             | -   | 24V DC                       | Supply voltage for output signals.                                                                                                                                                                                                                                                           |
| 12             | -   | I/O-GND                      | Digital GND for the control system.                                                                                                                                                                                                                                                          |

10.2.5

Connection diagram (default)

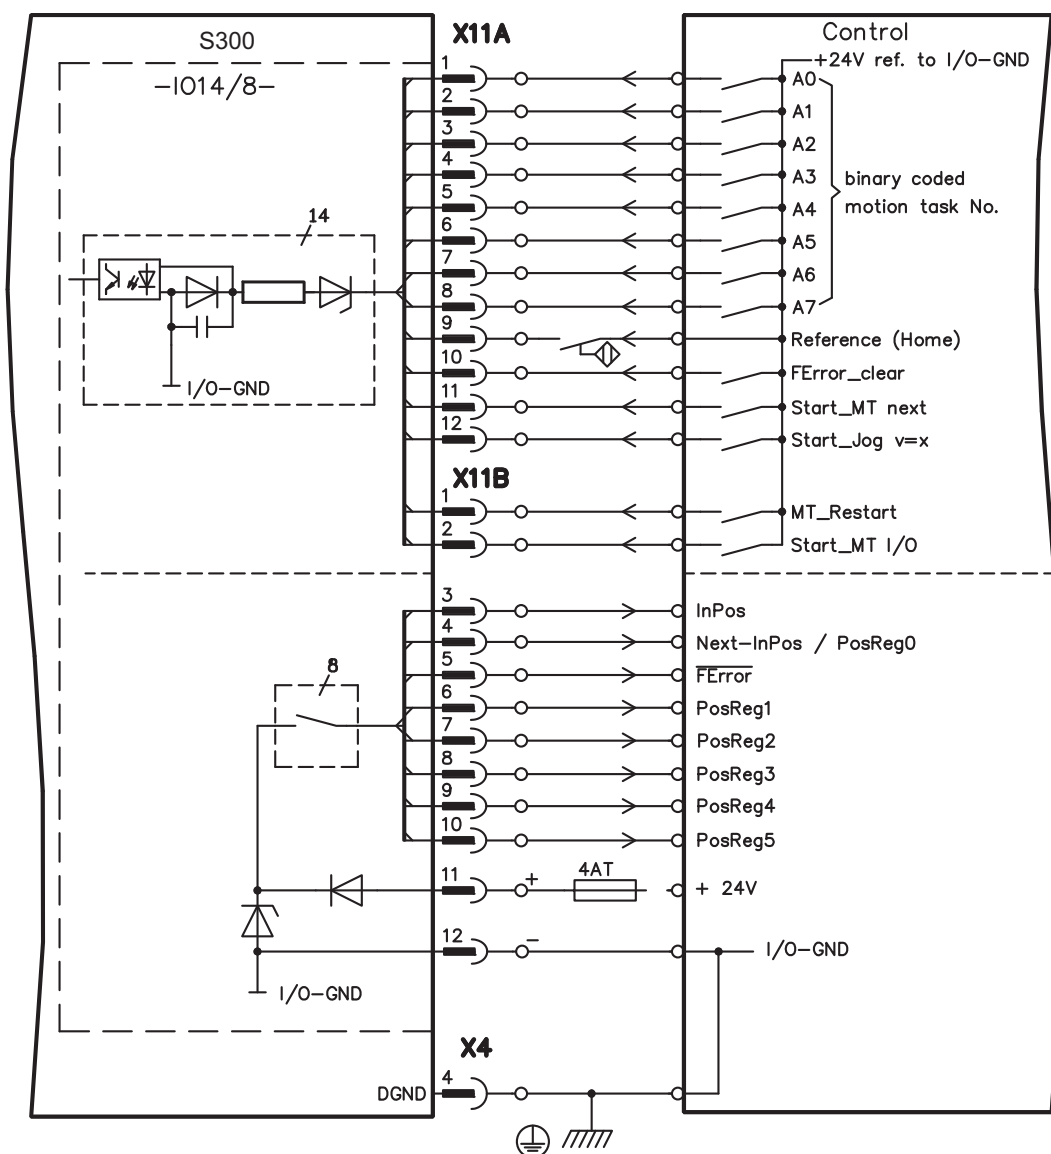

### 10.3 Expansion card -PROFIBUS-

This section describes the PROFIBUS expansion card for the S300.

Information on the range of functions and the software protocol can be found in our manual "Communication Profile PROFIBUS DP"..

The PROFIBUS expansion card has two 9-pin SubD sockets wired in parallel.


The supply voltage for the expansion card is provided by the servo amplifier.



#### 10.3.1 Connection technology

Cable selection, cable routing, shielding, bus connector, bus termination and transmission times are all described in the "Installation Guidelines for PROFIBUS-DP/FMS" from PNO, the PROFIBUS User Organization.

#### 10.3.2 Connection diagram

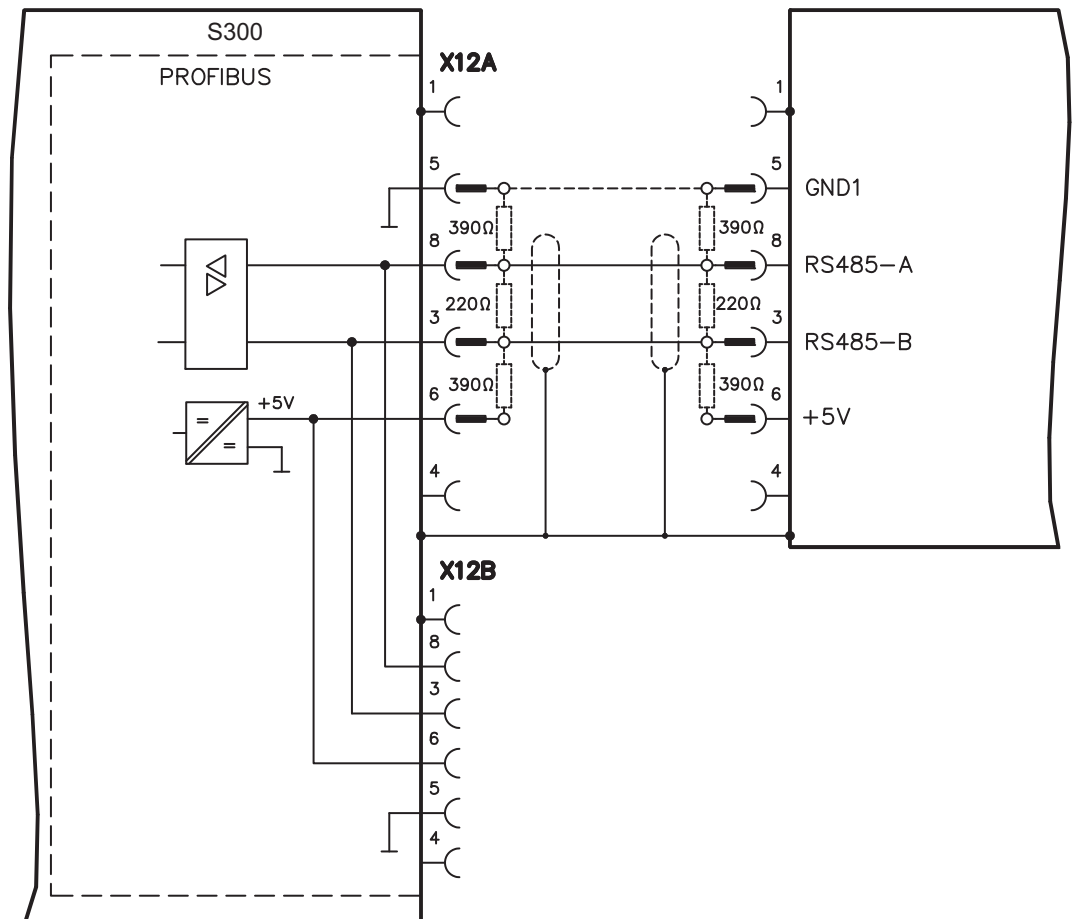

## 10.4 Expansion card -SERCOS-

This section describes the SERCOS expansion card for S300. Information on the range of functions and the software protocol can be found in our manual "Communication Profile SERCOS".



### 10.4.1 LEDs

|            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>RT</b>  | Indicates whether SERCOS telegrams are being correctly received. In the final Communication Phase 4 this LED should flicker, since cyclical telegrams are being received.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>TT</b>  | Indicates that SERCOS telegrams are being transmitted. In the final Communication Phase 4 this LED should flicker, since cyclical telegrams are being transmitted. Check the station addresses for the controls and the servo amplifier if:<br>- the LED never lights up in SERCOS Phase 1 or<br>- the axis cannot be operated, although the RT LED is lighting up cyclically.                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>ERR</b> | Indicates that SERCOS communication is faulty or suffering from interference.<br><br>If this LED is very bright, then communication is suffering strong interference, or is non-existent. Check the SERCOS transmission speed for the controls and the servo amplifier (BAUD RATE) and the fiber-optic connection.<br><br>If this LED fades or flickers, this indicates a low level of interference for SERCOS communication, or the optical transmitting power is not correctly matched to the length of cable. Check the transmitting power of the (physically) previous SERCOS station. The transmitting power of the servo amplifier can be adjusted in the setup software DRIVEGUI.EXE on the SERCOS screen page, by altering the length parameter for the cable length. |

### 10.4.2 Connection technology

For the fiber optic cable connection, only use SERCOS components to the SERCOS Standard IEC 61491.

#### Receive data


The fiber optic cable carrying receive data for the drive in the ring structure is connected to X13 with an F-SMA connector.

#### Transmit data

Connect the fiber optic cable for the data output to X14 by F-SMA connector.

### 10.4.3 Connection diagram

Layout of the SERCOS bus system in ring topology, with optical fiber cables (schematic).

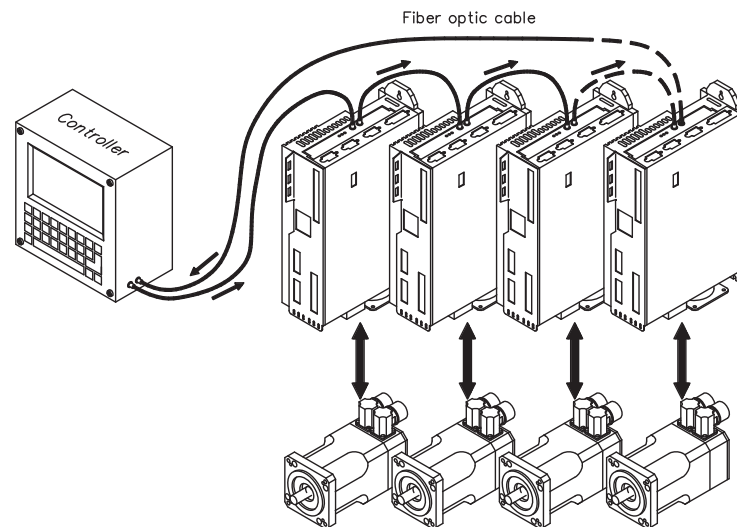

### 10.4.4 Modifying the station address

The drive address can be set to a value between 0 and 63. With address 0, the drive is assigned as an amplifier in the SERCOS ring. Set the station address with the:

#### Keys on the front of the servo amplifier

The SERCOS address can be modified using the keys on the front of the amplifier (p. 106).

#### Setup software

The address can also be modified in the setup software, "CAN/Fieldbus" screen (please refer to the setup software [online help](#)). Alternatively, enter the command **ADDR #** in the "Terminal" screen, where # is the new address of the drive.

### 10.4.5 Modifying the baud rate and optical power

If the baud rate is not set correctly, communication is not possible.

The **SBAUD #** parameter can be used to set the baud rate, where # is the baud rate. If the optical power is not set correctly, errors occur in telegram transmission and the red LED on the drive lights up. During normal communication, the green send and receive LEDs flash, giving the impression that the relevant LED is on.

The **SLEN #** parameter can be used to specify the optical range for a standard 1 mm<sup>2</sup> glass fibre cable, where # is the length of the cable in metres.

| SBAUD |          | SLEN      |                                                                 |
|-------|----------|-----------|-----------------------------------------------------------------|
| 2     | 2 Mbaud  | 0         | Very short connection                                           |
| 4     | 4 Mbaud  | 1...< 15  | Length of the connection with a 1 mm <sup>2</sup> plastic cable |
| 8     | 8 Mbaud  | 15...< 30 | Length of the connection with a 1 mm <sup>2</sup> plastic cable |
| 16    | 16 Mbaud | ≥ 30      | Length of the connection with a 1 mm <sup>2</sup> plastic cable |

#### Setup software

The parameters can be modified in the setup software, "SERCOS" screen (please refer to the setup software the [online help](#)). Alternatively, the commands **SBAUD #** and **SLEN #** can be entered in the "Terminal" screen.

## 10.5 Expansion card -DEVICENET-

This section describes the DeviceNet expansion card for S300.


Information on the range of functions and the software protocol can be found in our manual "DeviceNet Communication Profile".



### 10.5.1 Connection technology

Cable selection, cable routing, shielding, bus connector, bus termination and transmission times are all described in the "DeviceNet Specification, Volume I, II, Edition 2.0", published by ODVA.

### 10.5.2 Connection diagram

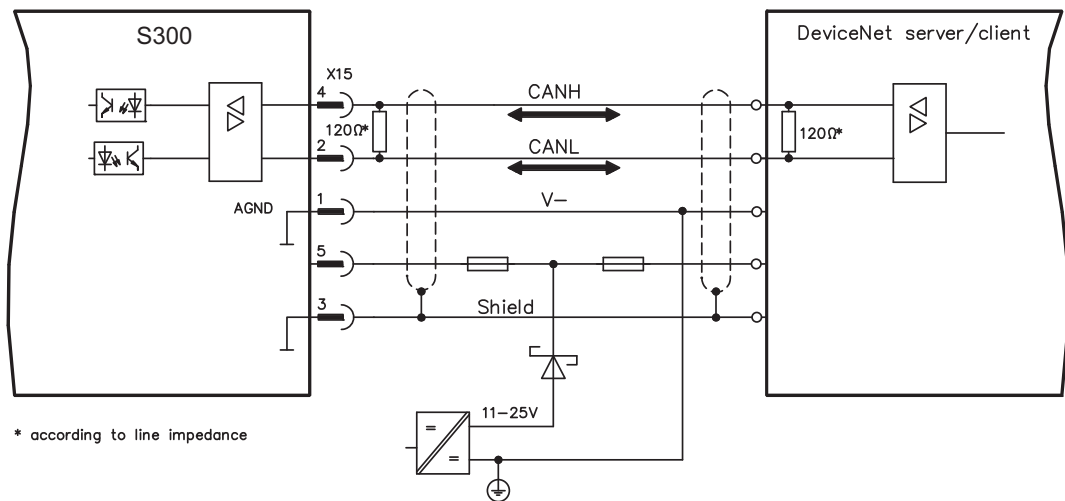

### 10.5.3 Combined module/network status-LED

| LED                   | Meaning                                                                                                                                                                                                                                                                                                                      |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>off</b>            | The device is not online.<br>- The device has not yet finished the Dup_MAC_ID test.<br>- The device is possibly not yet switched on.                                                                                                                                                                                         |
| <b>green</b>          | The device is operating as normal, is online, and the connections have been established. The device has been assigned to a master.                                                                                                                                                                                           |
| <b>blinking green</b> | The device is operating as normal, is online, but the connections have not been established.<br>- The device has passed the Dup_MAC_ID test and is online, but the connection to other nodes have not been established.<br>- This device has not been assigned to a master.<br>- Missing, incomplete or wrong configuration. |
| <b>blinking red</b>   | An error that can be cleared and/or at least one I/O connection are in a waiting state.                                                                                                                                                                                                                                      |
| <b>red</b>            | - An error has occurred that cannot be cleared; it may be necessary to replace the device.<br>- Communication device failure. The device has detected a fault that prevents communication with the network (for instance, a MAC ID appears twice or BUSOFF).                                                                 |

### 10.5.4 Setting the station address (device address)

The station address for the servo amplifier can be set in three different ways:

- Set the rotary switches at the front of the expansion card to a value between 0 and 63. Each switch represents a decimal figure. For example, to set the address for the drive to 10, set MSD to 1 and LSD to 0.
- Set the rotary switches at the front of the expansion card to a value higher than 63. Now you can set up the station address by using the ASCII commands DNMACID x, SAVE, COLDSTART, whereby "x" stands for the station address.
- Set the rotary switches at the front of the expansion card to a value higher than 63. Now you can set up the station address by using the DeviceNet Object (Class 0x03, Attribute 1). This is normally carried out with the help of a DeviceNet software setup tool. You must save the parameters in non-volatile memory (Class 0x25, Attribute 0x65) and then restart the drive after setting/altering the address.

### 10.5.5 Setting the transmission speed

The DeviceNet transmission speed can be set in three different ways:


- Set the rotary switch for Baud rate (at the front of the option card) to a value between 0 and 2. 0 = 125 kbit/s, 1 = 250 kbit/s, 2 = 500 kbit/s.
- Set the rotary switch for Baud rate (at the front of the option card) to a value higher than 2. Now you can set the Baud rate by using the terminal commands DNBAUD x, SAVE, COLDSTART, whereby "x" stands for 125, 250 or 500 .
- Set the rotary switch for Baud rate (at the front of the option card) to a value higher than 2. Now you can set the Baud rate by using the DeviceNet Object (Class 0x03, Attribute 2) to a value between 0 and 2. This is normally carried out with the help of a DeviceNet software setup tool. You must save the parameters in non-volatile memory (Class 0x25, Attribute 0x65) and then restart the drive after altering the baud rate.

## 10.5.6

## Bus cable

To meet ISO 11898, a bus cable with a characteristic impedance of  $120\ \Omega$  should be used. The maximum usable cable length for reliable communication decreases with increasing transmission speed. As a guide, you can use the following values which we have measured, but they are not to be taken as assured limits.

| General characteristic                                 | Specification                                                                                                                                                                                                                                                      |
|--------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Bit rates                                              | 125 kbit, 250 kbit, 500 kbit                                                                                                                                                                                                                                       |
| Distance with larger bus connections                   | 500 meters at 125 kBaud<br>250 meters at 250 kBaud<br>100 meters at 500 kBaud                                                                                                                                                                                      |
| Number of nodes                                        | 64                                                                                                                                                                                                                                                                 |
| Signal environment                                     | CAN                                                                                                                                                                                                                                                                |
| Modulation                                             | Basic bandwidth                                                                                                                                                                                                                                                    |
| Coupling medium                                        | DC-coupled differential transmit/receive operation                                                                                                                                                                                                                 |
| Isolation                                              | 500 V (option: optocoupler on the transceiver's node side)                                                                                                                                                                                                         |
| Typical differential input impedance (recessive state) | Shunt C = 5pF<br>Shunt R = 25K $\Omega$ (power on)                                                                                                                                                                                                                 |
| Min. differential input impedance (recessive state)    | Shunt C = 24pF + 36 pF/m of the permanently attached stub cable<br>Shunt R = 20K $\Omega$                                                                                                                                                                          |
| Absolute max. voltage range                            | -25 V to +18 V (CAN_H, CAN_L)<br>The voltages for CAN_H and CAN_L refer to the ground pin of the transceiver. The voltage is higher than that on the V-terminal by the amount of the forward voltage drop of the Schottky diode. This voltage drop must be < 0.6V. |

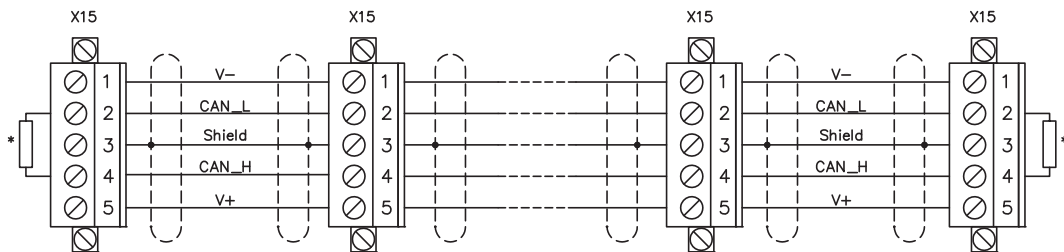

\* according to line impedance about  $120\ \Omega$

**Grounding:**

The DeviceNet network must only be grounded at one point, to avoid ground loops. The circuitry for the physical layer in all devices are referenced to the V-bus signal. The ground connection is made via the power supply for the bus system. The current flowing between V- and ground must not flow through any device other than the power supply.

**Bus topology:**

The DeviceNet medium utilizes a linear bus topology. Termination resistors are required at each end of the connecting cable. Stub cables are permitted up to a length of 6 meters, so that at least one node can be connected.

**Termination resistors:**


DeviceNet requires a termination **at each end** of the connecting cable.

These resistors must meet the following requirements:  $120\ \Omega$ , 1% metal-film, 1/4 W

## 10.6 Expansion card -SYNQNET-

This section describes the SynqNet expansion card for S300.

Information on the range of functions and the software protocol can be found in the SynqNet documentation.

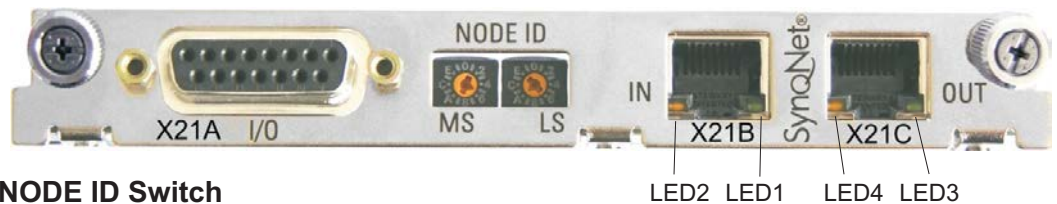

### 10.6.1 NODE ID Switch

With these hexadecimal switches you can set the main and low significant bytes of the Node ID separately. SynqNet does not require an address for correct operation in the network, however in some machines this can be a convenient way of identifying build options to the application program.

### 10.6.2 Node LED table

| LED#         | Name     | Function                                                                                                               |
|--------------|----------|------------------------------------------------------------------------------------------------------------------------|
| LED1, green  | LINK_IN  | ON = receive valid (IN port)<br>OFF= not valid, power off, or reset.                                                   |
| LED2, yellow | CYCLIC   | ON = network cyclic<br>BLINK = network not cyclic<br>OFF = power off, or reset                                         |
| LED3, green  | LINK_OUT | ON = receive valid (OUT port)<br>OFF = not valid, power off, or reset                                                  |
| LED4, yellow | REPEATER | ON = repeater on, network cyclic<br>BLINK = repeater on, network not cyclic<br>OFF = repeater off, power off, or reset |

### 10.6.3 SynqNet Connection, Connector X21B/C (RJ-45)

Connection to the SynqNet network via RJ-45 connectors (IN and OUT ports) with integrated LEDs.

## 10.6.4


**Digital inputs/outputs, connector X21A (SubD 15-pin, socket)**

Inputs (In): 24V (20...28V), opto-isolated, one high-speed input (Pin 4)

Outputs (Out): 24V, opto-isolated, Darlington driver

| Pinout connector X21A (SubD 15 pin) |      |             |                                   |     |      |              |                                  |
|-------------------------------------|------|-------------|-----------------------------------|-----|------|--------------|----------------------------------|
| Pin                                 | Type | Description |                                   | Pin | Type | Description  |                                  |
| 1                                   | In   | +24V        | power supply                      | 9   | In   | GND          | power supply                     |
| 2                                   | Out  | NODE-ALARM  | indicates a problem with the node | 10  | Out  | OUT_00       | digital output                   |
| 3                                   | Out  | OUT_01      | digital output                    | 11  | Out  | OUT_02       | digital output                   |
| 4                                   | In   | IN_00       | capture input (fast)              | 12  | In   | IN_02        | digital input                    |
| 5                                   | In   | IN_04       | digital input                     | 13  | In   | IN_03        | digital input                    |
| 6                                   | In   | IN_01       | digital input                     | 14  | In   | NEGLIM       | limit switch, negative direction |
| 7                                   | In   | HOME        | reference switch                  | 15  | In   | NODE-DISABLE | disables Node                    |
| 8                                   | In   | POSLIM      | limit switch, positive direction  |     |      |              |                                  |

## 10.6.5

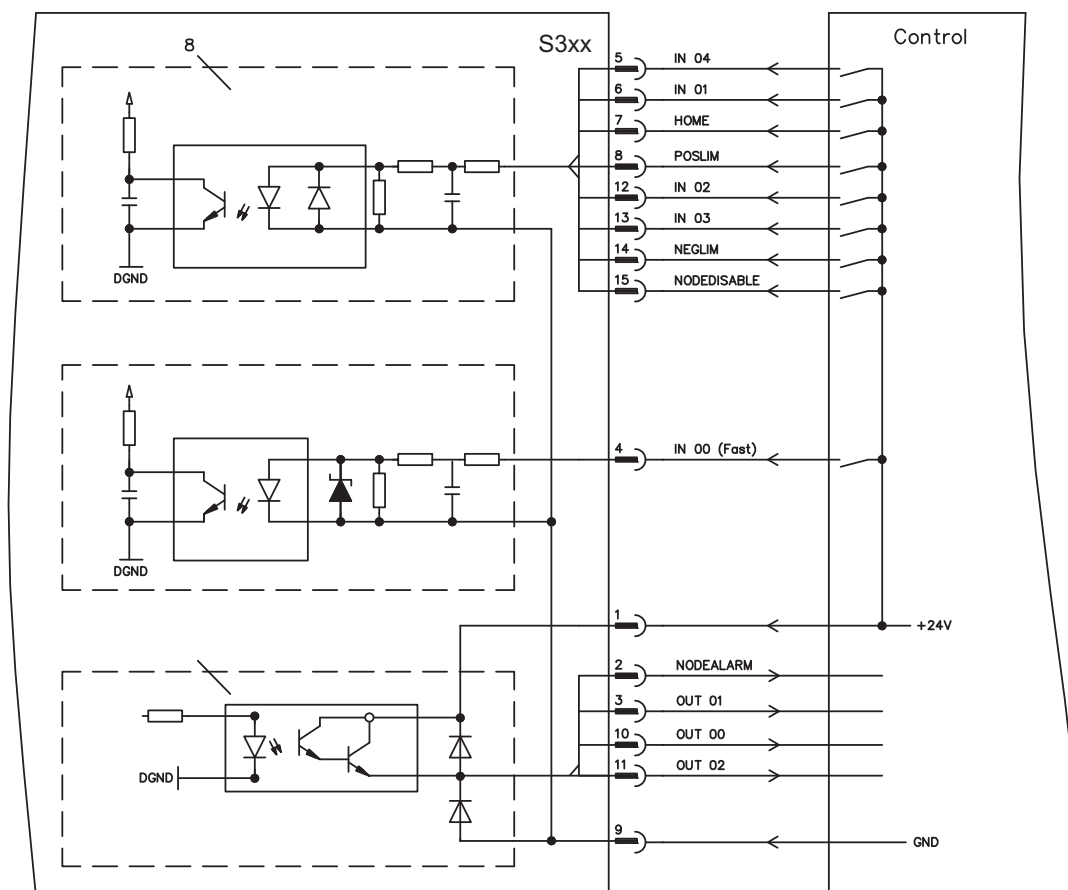**Connection diagram digital inputs/outputs, connector X21A**

## 10.7 Expansion module -2CAN-

Connector X6 of the S300 is assigned to the signals for the RS232 interface and the CAN interface. It is therefore not the standard pin assignment for these interfaces, and a special cable is required to be able to use both interfaces simultaneously.

The -2CAN- expansion module provides the interfaces on separate Sub-D connectors.

The two CAN connectors are wired in parallel. A termination resistor (120  $\Omega$ ) for the CAN bus can be switched into circuit if the S300 is at the end of the bus.



### 10.7.1 Installation

The modul must be placed onto the option slot after levering off the cover of the option slot and replacing the small cover (see p. 111):

**NOTE**

- Screw the distance pieces into the fixing lugs of the option slot.
- Place the expansion module onto the option slot.
- Screw the screws into the threads of the distance pieces.
- Plug the Sub-D9 socket into connector X6 on the S300

### 10.7.2 Connection technology

Standard shielded cables can be used for the RS232 and CAN interfaces.

**NOTE**

If the servo amplifier is the last device on the CAN bus, then the switch for the bus termination must be set to ON.  
Otherwise, the switch must be set to OFF (condition as delivered).


## 10.7.3

## Connector assignments

| RS232   |        | CAN1=CAN2   |          |
|---------|--------|-------------|----------|
| X6A Pin | Signal | X6B=X6C Pin | Signal   |
| 1       | Vcc    | 1           |          |
| 2       | RxD    | 2           | CAN-Low  |
| 3       | TxD    | 3           | CAN-GND  |
| 4       |        | 4           |          |
| 5       | GND    | 5           |          |
| 6       |        | 6           |          |
| 7       |        | 7           | CAN-High |
| 8       |        | 8           |          |
| 9       |        | 9           |          |

## 10.7.4

## Connection diagram

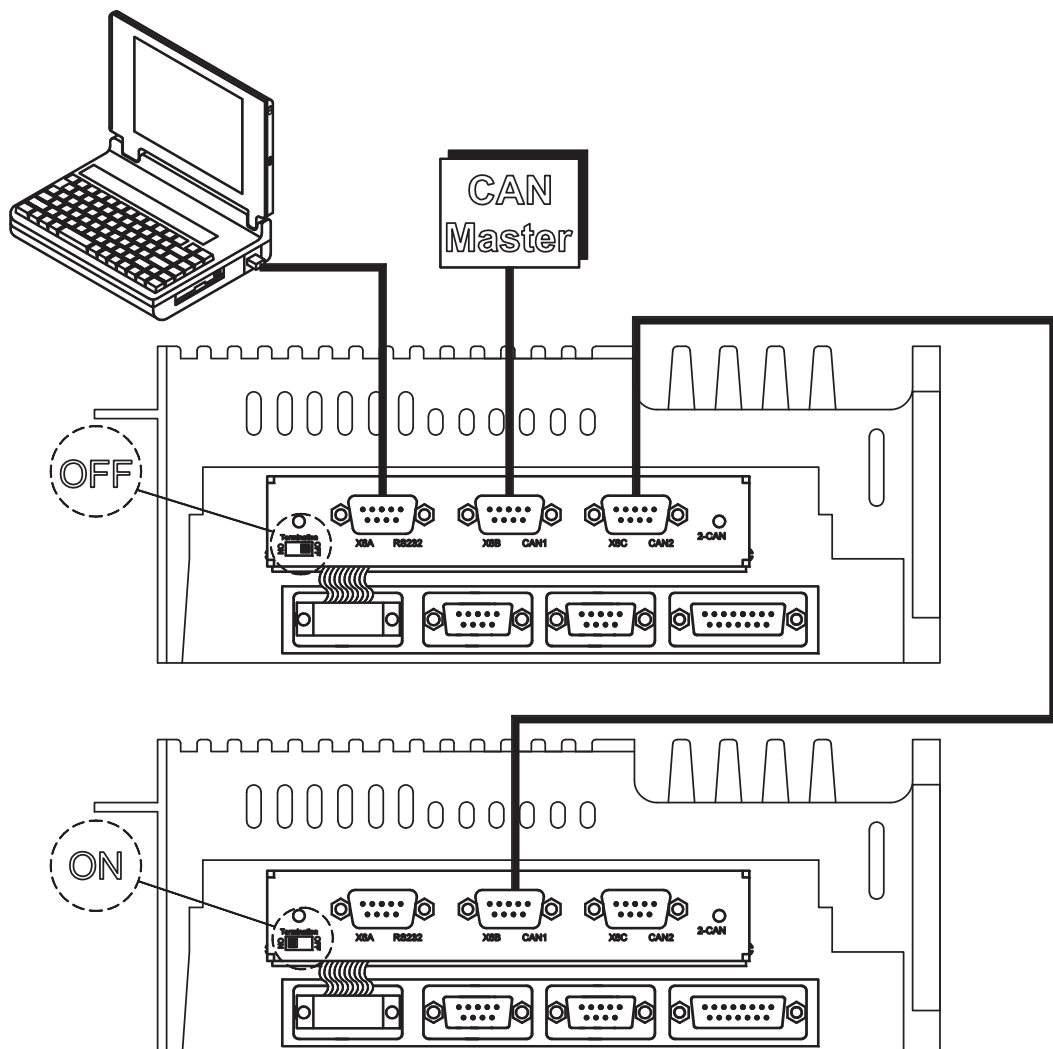


## 10.8 Option "EtherCAT"

Offers EtherCAT interface to the S300. This option uses the expansion slot. Information on the range of functions and the software protocol can be found in the EtherCAT documentation. This option enables the S300 to be connected to the EtherCAT network via RJ-45 connectors (IN and OUT ports).

### **NOTE**


The option EtherCAT cannot be inserted later. Order the amplifier with built-in EtherCAT option.

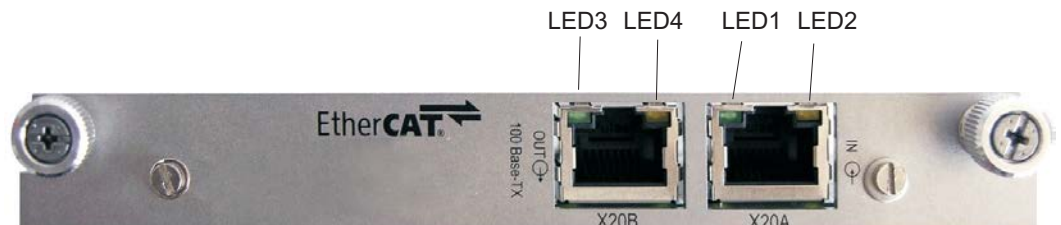

### 10.8.1 Node LED tabl

| LED#         | Name     | Function                                                                                                               |
|--------------|----------|------------------------------------------------------------------------------------------------------------------------|
| LED1, green  | LINK_IN  | ON = receive valid (IN port)<br>OFF = not valid, power off, or reset.                                                  |
| LED2, yellow | CYCLIC   | ON = network cyclic<br>BLINK = network not cyclic<br>OFF = power off, or reset                                         |
| LED3, green  | LINK_OUT | ON = receive valid (OUT port)<br>OFF = not valid, power off, or reset                                                  |
| LED4, yellow | REPEATER | ON = repeater on, network cyclic<br>BLINK = repeater on, network not cyclic<br>OFF = repeater off, power off, or reset |

### 10.8.2 Connection diagram

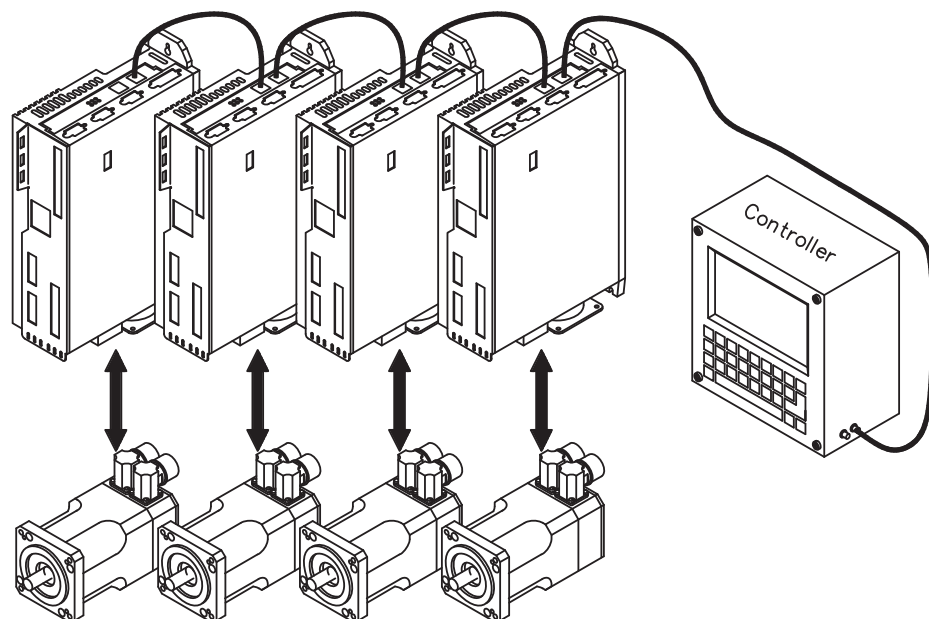

**10.9 Option "FAN", ventilator control**

To reduce the average noise emission of servo amplifiers with fan, these amplifiers can be ordered with built-in fan option card (ventilator control). This option uses (invisible from the outside) the expansion slot.

**NOTE**

The option FAN cannot be inserted later. Order the amplifier with built-in FAN option.

**Function**

The fan is switched on and off depending on measured temperature values and brake power. That reduces the average noise emission.

**Switching temperature**

| Monitoring                | Fan off | Fan on |
|---------------------------|---------|--------|
| Internal temperature      | < 55°C  | > 58°C |
| Heat sink temperature     | < 60°C  | > 65°C |
| Brake resistor (internal) | < 20W   | > 30W  |

**10.10 Option "EF", ventilator control and EtherCAT**

In process.

These devices combine option "FAN" (see top of this page) and option "EtherCAT" (see p.125).

**NOTE**

The option EF cannot be inserted later. Order the amplifier with built-in EF option.

## 11 Appendix

### 11.1 Glossary

|          |                                      |                                                                                                                                                                                                        |
|----------|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>B</b> | Brake circuit                        | Converts superfluous energy fed back by the motor during braking (regenerated energy) into heat.                                                                                                       |
| <b>C</b> | Clock                                | Clock signal                                                                                                                                                                                           |
|          | Common-mode voltage                  | The maximum amplitude of a disturbance (on both inputs) which a differential input can eliminate                                                                                                       |
|          | Counts                               | Internal count pulses, 1 pulse = $1/2^{20}$ turn <sup>-1</sup>                                                                                                                                         |
|          | Continuous power of brake circuit    | Mean power that can be dissipated in the brake circuit                                                                                                                                                 |
|          | Current controller                   | Regulates the difference between the current setpoint and the actual value to 0<br>Output : power output voltage                                                                                       |
| <b>D</b> | DC bus link                          | Rectified and smoothed power voltage                                                                                                                                                                   |
|          | Disable                              | Removal of the ENABLE signal                                                                                                                                                                           |
| <b>E</b> | Earth short                          | electrical connection between a phase and the protective earth (PE)                                                                                                                                    |
|          | Enable                               | Enable signal for the servo amplifier, Hardware-Enable with 24V signal to X3, Software-Enable command by setup Software, fieldbus or permanently set.<br>Both are required for enabling the amplifier. |
|          | ENABLE                               | Enable signal for the servo amplifier (+24 V)                                                                                                                                                          |
| <b>F</b> | Fieldbus interface                   | CANopen, PROFIBUS, SERCOS etc.                                                                                                                                                                         |
|          | Final speed (limit speed)            | Maximum value for the speed normalization at $\pm 10$ V                                                                                                                                                |
| <b>G</b> | GRAY-code                            | Special format for representing binary numbers                                                                                                                                                         |
| <b>H</b> | Holding brake                        | Brake in the motor, that can only be used when the motor is at standstill                                                                                                                              |
| <b>I</b> | I <sup>2</sup> t threshold           | Monitoring of the r.m.s. current that is actually required                                                                                                                                             |
|          | Input drift                          | Temperature and age-dependent alteration of an analog input                                                                                                                                            |
|          | Incremental encoder interface        | Position signaling by 2 signals with 90° phase difference (i.e. in quadrature), is not an absolute position output                                                                                     |
|          | I <sub>peak</sub> , peak current     | The effective value of the peak current                                                                                                                                                                |
|          | I <sub>rms</sub> , effective current | The r.m.s. value of the continuous current                                                                                                                                                             |
| <b>K</b> | K <sub>p</sub> , P-gain              | Proportional gain of a control loop                                                                                                                                                                    |
| <b>L</b> | Limit speed (final speed)            | Maximum value for speed normalization at $\pm 10$ V                                                                                                                                                    |
|          | Limit switch                         | Switch limiting the traverse path of the machine; implemented as n.c. (break) contact                                                                                                                  |

|          |                                  |                                                                                                               |
|----------|----------------------------------|---------------------------------------------------------------------------------------------------------------|
| <b>M</b> | Machine                          | The complete assembly of all connected parts or devices, of which at least one is movable                     |
|          | Motion block                     | Data packet with all the position control parameters which are required for a motion task                     |
|          | Multi-axis system                | Machine with several independently driven axes                                                                |
| <b>N</b> | Natural convection               | Free movement of air for cooling                                                                              |
| <b>O</b> | Optocoupler                      | Optical connection between two electrically independent systems                                               |
| <b>P</b> | P-controller                     | Control loop with purely proportional behavior                                                                |
|          | Phase shift                      | Compensation for the lag between the electro-magnetic and magnetic fields in the motor                        |
|          | PI-controller                    | Control loop with proportional and differential behavior                                                      |
|          | Position controller              | Regulates the difference between the position setpoint and the actual position to 0<br>Output: speed setpoint |
|          | Potential isolation              | electrically decoupled, electrical isolation                                                                  |
|          | Power contactor                  | System protection device with phase monitoring                                                                |
|          | Pulse power of the brake circuit | Maximum power which can be dissipated in the brake circuit                                                    |
| <b>R</b> | Reset                            | New start of the microprocessor                                                                               |
|          | Resolver/digital converter       | Conversion of the analog resolver signals into digital information                                            |
|          | Reversing mode                   | Operation with a periodic change of direction                                                                 |
|          | Ring core                        | Ferrite rings for interference suppression                                                                    |
|          | ROD-interface                    | Incremental position output                                                                                   |
| <b>S</b> | Servo amplifier                  | Control device for regulating the speed, torque and position of a servomotor                                  |
|          | Setpoint ramps                   | Limits for the rate of change of the speed setpoint                                                           |
|          | Short-circuit                    | here: electrically conductive connection between two phases                                                   |
|          | Speed controller                 | Regulates the difference between the speed setpoint and the actual value to 0<br>Output : current setpoint    |
|          | SSI-interface                    | Cyclically absolute, serial position output                                                                   |
|          | Supply filter                    | Device to divert interference on the power supply cables to PET                                               |
|          | Tachometer voltage               | Voltage proportional to the actual speed                                                                      |
|          | Thermal control                  | Temperature-sensitive device built into the motor winding (usually a PTC)                                     |
|          | Tn, I-integration time           | Integral component of a control loop                                                                          |
| <b>Z</b> | Zero pulse                       | Output once per turn from incremental encoders, used to zero the machine                                      |

## 11.2 Order codes

The order numbers of accessories such as cables, brake resistors, mains supplies, etc., can be found in the accessories manual.

### 11.2.1 Servo amplifiers

| Article                  | Rated voltage | Order code* |
|--------------------------|---------------|-------------|
| <b>SERVOSTAR 303</b>     | 110-230 V AC  | S30361-NA   |
| <b>SERVOSTAR 303-EC</b>  | 110-230 V AC  | S30361-EC   |
| <b>SERVOSTAR 306</b>     | 110-230 V AC  | S30661-NA   |
| <b>SERVOSTAR 306-EC</b>  | 110-230 V AC  | S30661-EC   |
| <b>SERVOSTAR 306-FAN</b> | 110-230 V AC  | S30661-FN   |
| <b>SERVOSTAR 306-EF</b>  | 110-230 V AC  | S30661-EF*  |
| <b>SERVOSTAR 310</b>     | 110-230 V AC  | S31061-NA   |
| <b>SERVOSTAR 310-EC</b>  | 110-230 V AC  | S31061-EC   |
| <b>SERVOSTAR 310-FAN</b> | 110-230 V AC  | S31061-FN   |
| <b>SERVOSTAR 310-EF</b>  | 110-230 V AC  | S31061-EF*  |
| <b>SERVOSTAR 341</b>     | 208-480 V AC  | S30101-NA   |
| <b>SERVOSTAR 341-EC</b>  | 208-480 V AC  | S30101-EC   |
| <b>SERVOSTAR 343</b>     | 208-480 V AC  | S30301-NA   |
| <b>SERVOSTAR 343-EC</b>  | 208-480 V AC  | S30301-EC   |
| <b>SERVOSTAR 343-FAN</b> | 208-480 V AC  | S30301-FN   |
| <b>SERVOSTAR 343-EF</b>  | 208-480 V AC  | S30301-EF*  |
| <b>SERVOSTAR 346</b>     | 208-480 V AC  | S30601-NA   |
| <b>SERVOSTAR 346-EC</b>  | 208-480 V AC  | S30601-EC   |
| <b>SERVOSTAR 346-FAN</b> | 208-480 V AC  | S30601-FN   |
| <b>SERVOSTAR 346-EF</b>  | 208-480 V AC  | S30601-EF*  |

\* NA : without built-in expansion card

FN : built-in FAN option, uses expansion slot

EC : built-in EtherCAT option, uses expansion slot

EF : in process, built-in FAN and EtherCAT options, uses expansion slot

### 11.2.2 Expansion cards

| Article                           | EU order code | US order code |
|-----------------------------------|---------------|---------------|
| <b>Expansion card DeviceNet</b>   | DE-103571     | OPT-DN        |
| <b>Expansion card PROFIBUS DP</b> | DE-106712     | OPT-PB3       |
| <b>Expansion card SERCOS</b>      | DE-90879      | OPT-SE        |
| <b>Expansion card I/O-14/08</b>   | DE-90057      | OPT-EI        |
| <b>Expansion card EtherCAT</b>    | DE-108350     | OPT-EC        |
| <b>Expansion card SynqNet</b>     | DE-200073     | OPT-SN        |
| <b>Expansion module 2CAN</b>      | DE-101174     | not available |

Expansion cards can be inserted into -NA servo amplifiers.

### 11.2.3 Mating connectors

| Article                                 | EU order code | US order code |
|-----------------------------------------|---------------|---------------|
| <b>Mating connector X3</b>              | DE-107554     | CON-S3X3      |
| <b>Mating connector X4</b>              | DE-107555     | CON-S3X4      |
| <b>Mating connector X0 (110...230V)</b> | DE-105856     | CON-S3X0L     |
| <b>Mating connector X8 (110...230V)</b> | DE-107556     | CON-S3X8L     |
| <b>Mating connector X9 (110...230V)</b> | DE-107631     | CON-S3X9L     |
| <b>Mating connector X0 (208...480V)</b> | DE-107557     | CON-S3X0H     |
| <b>Mating connector X8 (208...480V)</b> | DE-107558     | CON-S3X8H     |
| <b>Mating connector X9 (208...480V)</b> | DE-107467     | CON-S3X9H     |

### 11.3 Repair-/Disposal request Telefax form

To

Kollmorgen Europe GmbH  
Pempelfurtstraße 1  
D-40880 Ratingen  
Germany

Fax: +49 (0) 2102 9394 3444

Please advise dispatch information for (please select)

- ☐ **Repair**
- ☐ **Disposal**

of these products:

| Product | Serial number | Reason ("fault", "return" or similar) |
|---------|---------------|---------------------------------------|
|         |               |                                       |
|         |               |                                       |
|         |               |                                       |
|         |               |                                       |
|         |               |                                       |

to this address:

|                        |  |
|------------------------|--|
| <b>Company</b>         |  |
| <b>Street</b>          |  |
| <b>Zip / Town</b>      |  |
| <b>Country</b>         |  |
| <b>Specialist Name</b> |  |
| <b>Telephone</b>       |  |
| <b>Telefax</b>         |  |
| <b>E-Mail</b>          |  |

City, Date

Signature

## 11.4 Index

|          |                                               |     |          |                                      |     |
|----------|-----------------------------------------------|-----|----------|--------------------------------------|-----|
| <b>I</b> | 24V aux. supply, interface . . . . .          | 57  | <b>H</b> | Hardware requirements . . . . .      | 95  |
| <b>A</b> | Abbreviations . . . . .                       | 8   |          | Hiperface encoder interface. . . . . | 68  |
|          | Ambient temperature . . . . .                 | 26  |          | Humidity                             |     |
|          | Assembly . . . . .                            | 44  |          | In operation . . . . .               | 26  |
| <b>B</b> | Baud rate . . . . .                           | 105 |          | Storage . . . . .                    | 17  |
|          | BiSS interface analog . . . . .               | 64  | <b>I</b> | Inputs                               |     |
|          | BiSS interface digital . . . . .              | 65  |          | Analog . . . . .                     | 87  |
|          | Block diagram (overview) . . . . .            | 53  |          | Digital . . . . .                    | 88  |
|          | Brake resistor                                |     |          | Installation                         |     |
|          | Interface, ext. . . . .                       | 59  |          | Electrical . . . . .                 | 47  |
|          | Technical data . . . . .                      | 28  |          | Expansion cards . . . . .            | 111 |
|          | Brake, see also motor-holding brake . . . . . | 27  |          | Mechanical. . . . .                  | 43  |
|          | BTB/RTO . . . . .                             | 89  |          | Software . . . . .                   | 95  |
| <b>C</b> | CAN-bus cable . . . . .                       | 91  | <b>K</b> | Keypad operation . . . . .           | 105 |
|          | CANopen interface . . . . .                   | 91  | <b>L</b> | Leakage current. . . . .             | 42  |
|          | CE conformance . . . . .                      | 14  |          | LED display . . . . .                | 105 |
|          | ComCoder. . . . .                             | 74  | <b>M</b> | Maintenance . . . . .                | 17  |
|          | Conductor cross-sections . . . . .            | 26  |          | Master-slave . . . . .               | 81  |
|          | Connection diagram. . . . .                   | 55  |          | Master-Slave . . . . .               | 84  |
|          | Connection technology . . . . .               | 50  |          | Motor interface . . . . .            | 60  |
|          | Connector assignments. . . . .                | 54  |          | Mounting position . . . . .          | 26  |
|          | Connectors . . . . .                          | 25  | <b>N</b> | Nameplate. . . . .                   | 19  |
| <b>D</b> | DC bus link, interface . . . . .              | 59  |          | Noise emission . . . . .             | 26  |
|          | Disassembling. . . . .                        | 18  | <b>O</b> | Operating systems . . . . .          | 95  |
|          | Disposal . . . . .                            | 18  |          | Optical power, SERCOS. . . . .       | 117 |
|          | Dynamic Braking . . . . .                     | 28  |          | Option EF . . . . .                  | 126 |
| <b>E</b> | Electronic Gearing . . . . .                  | 81  |          | Option FAN . . . . .                 | 126 |
|          | ENABLE. . . . .                               | 88  |          | Order codes . . . . .                | 129 |
|          | Enclosure protection . . . . .                | 26  |          | Outputs                              |     |
|          | Encoder emulation . . . . .                   | 85  |          | BTB/RTO . . . . .                    | 89  |
|          | EnDat 2.2 Encoder Interface . . . . .         | 67  |          | DIGI-OUT 1/2 . . . . .               | 89  |
|          | EnDat encoder interface . . . . .             | 66  | <b>P</b> | Package supplied . . . . .           | 19  |
|          | Error messages . . . . .                      | 108 |          | Packaging . . . . .                  | 17  |
|          | Expansion card                                |     |          | Part number scheme . . . . .         | 20  |
|          | -2CAN-. . . . .                               | 123 |          | PC cable . . . . .                   | 90  |
|          | -DeviceNet-. . . . .                          | 118 |          | PC connection. . . . .               | 90  |
|          | -EtherCat-. . . . .                           | 125 |          | Pollution level . . . . .            | 26  |
|          | Guide to installation . . . . .               | 111 | <b>Q</b> | Quickstart . . . . .                 | 96  |
|          | -I/O-14/08-. . . . .                          | 112 | <b>R</b> | RCD . . . . .                        | 42  |
|          | -PROFIBUS-. . . . .                           | 115 |          | Re-forming . . . . .                 | 93  |
|          | -SERCOS-. . . . .                             | 116 |          | Repair . . . . .                     | 18  |
|          | -SynqNet-. . . . .                            | 121 |          | Reparaturanfrage . . . . .           | 130 |
|          | External fusing . . . . .                     | 25  |          | Resolver, interface . . . . .        | 63  |
| <b>F</b> | Feedback systems . . . . .                    | 61  |          | ROD 5V, 1.5MHz . . . . .             | 72  |
|          | Feedback types . . . . .                      | 62  |          | ROD, interface . . . . .             | 85  |
| <b>G</b> | Glossary . . . . .                            | 127 |          | RS232/PC, interface . . . . .        | 90  |
|          | Ground symbol . . . . .                       | 49  |          |                                      |     |
|          | Grounding                                     |     |          |                                      |     |
|          | Connection diagram . . . . .                  | 55  |          |                                      |     |
|          | Installation . . . . .                        | 48  |          |                                      |     |

|          |                                          |     |
|----------|------------------------------------------|-----|
| <b>S</b> | Safety characteristic data . . . . .     | 35  |
|          | Safety Function STO . . . . .            | 35  |
|          | Safety instructions. . . . .             | 10  |
|          | Setup . . . . .                          | 93  |
|          | Shielding                                |     |
|          | Connection diagram,. . . . .             | 55  |
|          | Installation . . . . .                   | 48  |
|          | Shock-hazard protection . . . . .        | 42  |
|          | SinCos+SSI to X5. . . . .                | 69  |
|          | Site . . . . .                           | 43  |
|          | Site altitude . . . . .                  | 26  |
|          | SSI, interface . . . . .                 | 86  |
|          | Stacking height . . . . .                | 17  |
|          | Standards. . . . .                       | 9   |
|          | Station address, CAN-bus . . . . .       | 105 |
|          | STO-ENABLE . . . . .                     | 88  |
|          | Storage . . . . .                        | 17  |
|          | Supply connection, interface . . . . .   | 57  |
|          | Supply networks. . . . .                 | 56  |
|          | Supply voltage . . . . .                 | 26  |
|          | Switch-on/switch-off behavior. . . . .   | 30  |
|          | Symbols . . . . .                        | 9   |
|          | System components, overview . . . . .    | 52  |
| <b>T</b> | Target group . . . . .                   | 7   |
|          | Technical data. . . . .                  | 23  |
|          | Tightening torques, connectors . . . . . | 25  |
|          | Transport . . . . .                      | 17  |
| <b>U</b> | Use as directed                          |     |
|          | Restart lock STO . . . . .               | 36  |
|          | Servo amplifiers . . . . .               | 11  |
|          | Setup software. . . . .                  | 94  |
| <b>V</b> | Ventilation                              |     |
|          | Installation . . . . .                   | 43  |
|          | Technical data . . . . .                 | 26  |
|          | Vibrations . . . . .                     | 26  |
| <b>W</b> | Warning messages . . . . .               | 109 |
|          | Wiring . . . . .                         | 48  |

This page has been deliberately left blank.

## **Service**

We are committed to quality customer service. In order to serve in the most effective way, please contact your local sales representative for assistance.  
If you are unaware of your local sales representative, please contact the Customer Support.

### **Europa**

#### **Kollmorgen Customer Support Europe**

Internet [www.kollmorgen.com](http://www.kollmorgen.com)

E-Mail [technik@kollmorgen.com](mailto:technik@kollmorgen.com)

Tel.: +49 (0)2102 - 9394 - 0

Fax: +49 (0)2102 - 9394 - 3155

### **North America**

#### **Kollmorgen Customer Support North America**

Internet [www.kollmorgen.com](http://www.kollmorgen.com)

E-Mail [support@kollmorgen.com](mailto:support@kollmorgen.com)

Tel.: +1 - 540 - 633 - 3545

Fax: +1 - 540 - 639 - 4162

---

**KOLLMORGEN**

®