



Instructions for use

ADP 5300

Whirlpool Switzerland, www.whirlpool.ch

Bauknecht AG, Industriestrasse 36, 5600 Lenzburg, www.bauknecht.ch

Verkauf	Telefon 0848 801 002	Fax 0848 801 017	verkauf@bauknecht.ch
Kundendienst	Telefon 0848 801 001	Fax 0848 801 003	service@bauknecht.ch
Ersatzteile	Telefon 0848 801 005	Fax 0848 801 004	ersatzteilverkauf@bauknecht.ch



(see at right for options description)

PROGRAM SELECTION BUTTON

Push "Programs" button (repeatedly) until the indicator of the required program lights up (see "Table of programs" below).

START/RESUME BUTTON

Push this button to start the selected program; the indicator lights up and goes off at the end of the program. When the door is opened during a washing cycle, the cycle is temporarily paused; the Start indicator blinking. To restart the cycle close the door and push Start button again.

CANCEL/OFF BUTTON

Push this button to switch off the control panel. If pressed when a program is running it cancels the program ongoing draining water for 1 minute. If pressed when the dishwasher is switched off it drains any possible liquids from dishwasher (1 minute process). If the indicator flashes repeatedly, see page 6 - chapter "What to do if ...".

Table of programs

P	Programs	Available options	Loading instructions	Detergent	Consumption	
					Litres	kWh Minutes ¹⁾
1	Pre-Wash cold	Delay	Crockery to be washed later.	—	4.0	0.03 14
2	Glasses 40°C	Delay	Light soiling, for example glasses and cups.	X	10.0	0.85 100
3	Quickwash 45°C	Delay	Lightly soiled crockery, with no dried-on food.	X	11.0	0.80 30
4	Eco²⁾ 50°C	Delay Half load	Normally soiled crockery.	X	12.0	1.05 150
5	Intensive 70°C	Delay	Recommended program for heavily soiled crockery, especially suitable for pans and saucepans.	X	14.0	1.55 155

1) Program data obtained in conformity with European standard EN 50242, obtained under normal conditions (without additional options) and may vary depending on conditions. Differences of up to 20 minutes are possible with sensor programs as a result of the appliance's automatic calibration system.
 2) Reference program for energy label in compliance with EN 50242 regulations. - Note for Testing Institutes: for detailed information on the EN/Standard loading comparison test and other tests, contact the following address: "nk_customer@whirlpool.com".

Options and display description

SALT INDICATOR

When lit (at the end of the cycle), the salt reservoir needs to be refilled.




RINSE AID INDICATOR

When lit (at the end of the cycle), the rinse aid dispenser needs to be refilled.

HALF LOAD BUTTON

Half load cycle can be used for the upper or lower rack. Select their required program then press the "Half Load" button - the light comes on. Turns off at the end of the program. The "Half Load" option can be used with the programs indicated in the table of programs.



TABLET SETTING

This setting allows to optimize the cycle performances according to the type of detergent used. Push the Tablet button for 3 seconds (until the indicator lights up) if you are using the combined detergents in tablet (rinse aid, salt and detergent in 1 dose). If you are using powder detergent or liquid detergent, the Tablet indicator on the control panel has to be off.

DELAYED START BUTTON

The wash cycle can be programmed to start after 2, 4 or 8 hours. Then press the Start button. The wash program will start after the set time.

ADP 5300


5019 396 01857

How to set water hardness in order to always assure the best cleaning results

First time use

Water hardness should be set only before the first wash or if water hardness has been changed

- Press and hold together **Programs** and **CANCEL/Off** buttons for minimum 3 seconds.
- Programs LEDs will indicate the water hardness setting.
- Press the **Programs** button to increase setting (when the level reaches 7, the next key press will set the level back to 1).
- Wait 30 seconds (control panel switches off) or press **START/Resume** button to save setting.

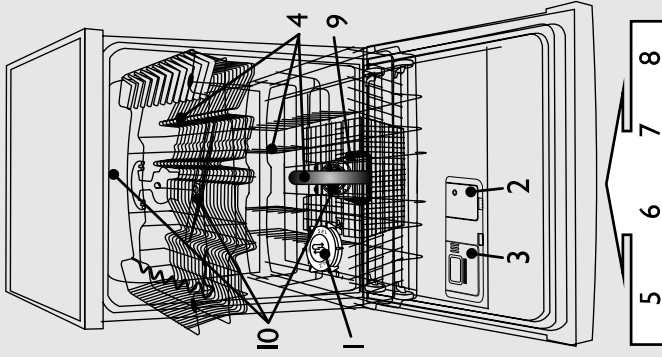

- 1- salt reservoir
- 2- rinse aid dispenser
- 3- detergent dispenser
- 4- racks system
- 5, 6, 7, 8- available functions on the panel
- 9- filters
- 10- spray arms

1. Ask your water supply company what the water hardness is...		2. ...enter this value on your dishwasher		Suggestions for detergent use	
German degrees °dH	French degrees °fH	English degrees °eH	Water hardness level	Gel or Powder (rinse aid and salt)	Tablets
0 - 5	0 - 9	0 - 6.3	Soft	1 ● ○ ○ ○ ○	
6 - 10	10 - 18	7 - 12.6	Medium	2 ○ ● ○ ○ ○ ○	
11 - 15	19 - 27	13.3 - 18.9	Average	3 ● ● ○ ○ ○ ○	
16 - 21	28 - 37	19.6 - 25.9	Medium-hard	4 ○ ○ ● ● ○ ○	go to step 1 (see "Daily check")
22 - 28	38 - 50	26.6 - 35	Hard	5 ● ● ○ ○ ○ ○	
29 - 35	51 - 63	35.7 - 44.1	Very hard	6 ○ ● ● ● ●	
36 - 60	64 - 107	44.8 - 74.9	Extremely hard	7 ● ● ● ● ●	



Water hardness level is factory set for medium-hard water (level 4).




Even if you use tablets which include salt functionality, you must still add regeneration salt since such detergents are not effective enough at softening hard water.




At first time use, the salt reservoir has to be filled independently from water hardness level (see description below in step 1 "Daily check").


Filling the salt reservoir - Dissolve limescale (not necessary if water hardness level is set to "soft")

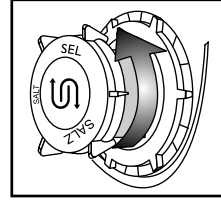


Visual indicator (depending on the model). Unscrew cap.

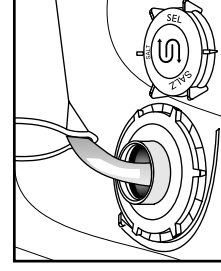

Fill the salt reservoir with water before the first wash only (depending on the model)

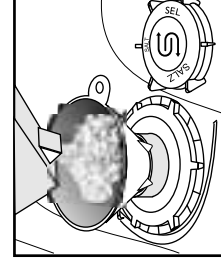

Add salt (never add detergent!) min. 1.5 kg / max. 2 kg

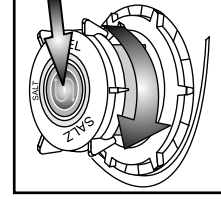

Screw on the cap. Salt residual around the cap need to be removed. Some salt reservoir have a level indicator integrated in the cap (see below how to check).

Daily check



The salt level indicator lamp may remain lit at the end of several wash cycles. If the water hardness level falls within category (soft), no salt is required.



The indicator lamp lights up when SALT NEEDS TO BE ADDED.



The indicator lamp lights up when SALT NEEDS TO BE ADDED.




orange: OK.




clear: NEEDS TO BE ADDED

Salt indicator on the salt reservoir cap


2

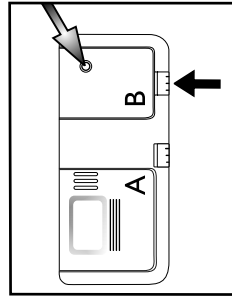


Visual indicator
If required, open the cover B (press the dedicated button).

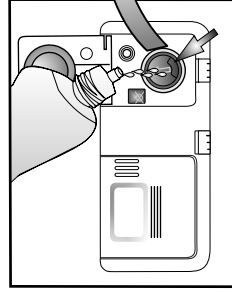

Add rinse aid to the max. line ~ 150 ml

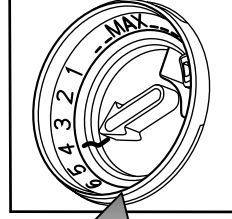

The rinse aid dosage can be adjusted to the detergent used. The lower the setting, the less rinse aid is dispensed (factory setting: position 4). Press the button to open the cover B. Using a coin or similar object, turn the arrow to the desired setting. After adjusting the rinse aid setting, shut the cover again.

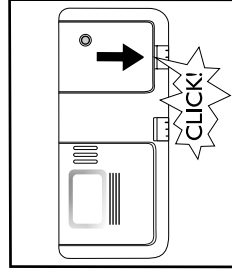

(depending on the model)

i Check the rinse aid indicator to check the level into the dispenser.

Rinse aid indicator on the control panel
▲ The indicator lamp lights up when RINSE AID NEEDS TO BE ADDED.

Rinse aid indicator on the dispenser
▲ dark: OK. ● clear: NEEDS TO BE ADDED

! Only use rinse aids recommended for use in domestic dishwashers. **Immediately** wipe away any rinse aid spill accidentally. This prevents the formation of excess suds which can cause a fault function of the appliance.


i If there are streaks: reduce the dosage by turning the dial to a lower setting (1-3). If crockery is not perfectly dry: increase the dosage by turning the dial to a higher setting (5-6). Plastic dishes have more difficulty drying and a higher rinse aid setting will not improve the situation.

i Detergents with rinse aid incorporated may be effective only with longer programs. In the case of shorter programs, detergent residue may be a problem (if necessary, use powder detergent). Detergents with rinse aid incorporated tend to form excess suds.


Adding detergent - Use only detergent specifically for dishwashers in accordance with the supplier's recommendations

Daily use

Open the cover A (press the dedicated button).

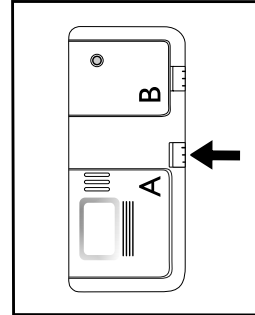


Insert detergent: Tablet / powder / liquid into the big chamber

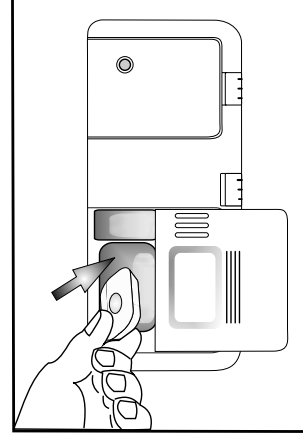

Only fill the detergent dispenser prior to starting a wash program.

Shut the cover by pressing dedicated ribs.

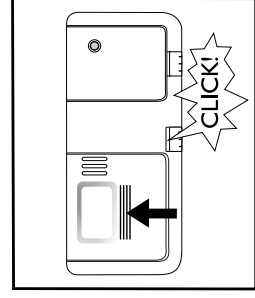

Use only one tablet per one cycle, only placed in detergent dispenser.


All types of tablets can be used, but for 2 in 1 type adding of salt is mandatory

3

How to load UPPER RACK


4

- A - Glass-holder for long stem glasses:** it can be adjusted in 2 different positions according glasses shape.
- B - Adjustable flaps:** in horizontal position for cups/long utensils, in raised position for plates.

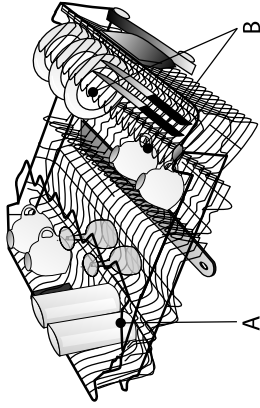

(in some models only)


- C - Cutlery basket:** it can be placed in the upper rack when the "Half load/Multizone" option is selected.

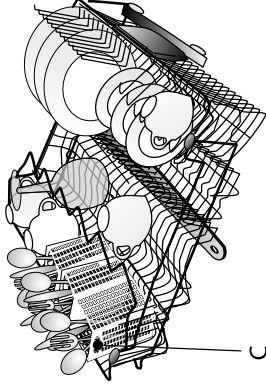

How to load the racks


How to adjust upper rack height (if available). It could be useful to lift up the upper rack to have more space in lower rack or bring it down to load long stem glasses.

- Grasp and take out the two lateral handles (D), (they must be on the same level), and lift up or take down the upper rack.

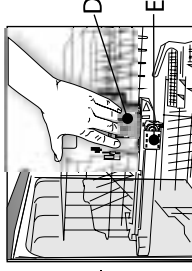

How to remove the upper rack (if available)

- It could be useful to remove the upper rack to load bulky items in the lower rack.
- Open the two retainers (E) to take off the upper rack (when the upper rack is in place, the retainers must always be closed).

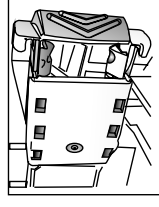



E - CLOSED

E - OPEN

How to load LOWER RACK

(depending on the model)

- F - Foldable plate holders:** They can be folded down to load pots or
- G - Fixed plate holders**
- H - Cutlery basket** (or I model)
- J - Grid:** Helps to keep the cutlery separate for better washing results.

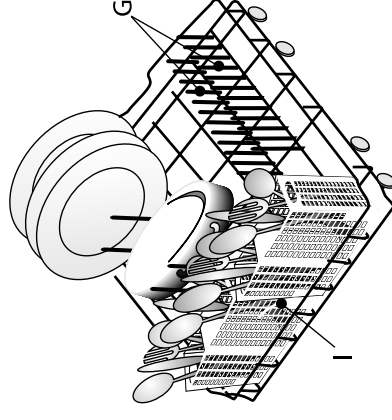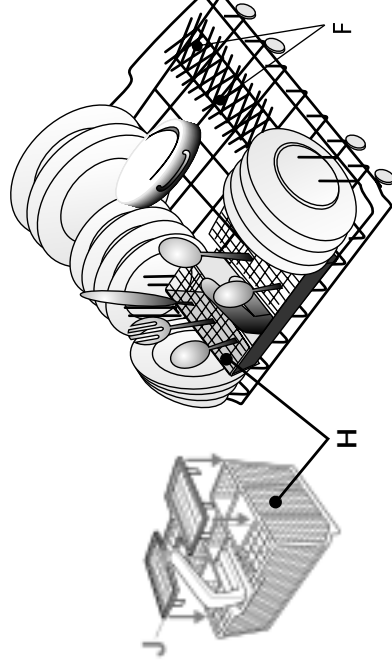

Arrange crockery so that water does not collect in cavities, ensuring that the spray arms turn freely. Only use dishwasher-proof crockery and dishes. Do not use the dishwasher for washing wooden items, aluminium, tin, silver cutlery or decorated crockery (unglazed). In the baskets, dishes (e.g. plates, bowls, pots) must be placed in a correct way to let water flow down!

5

Switching on the appliance. Press any button except CANCEL/Off button to exit Standby and enter program selection mode.

Select program

6 Overview of programs

The max. possible number of programs is illustrated in the chapter "Chart". The corresponding programs for your appliance can be found on the panel (page 1).



Choose program according to the attached table of programs (page 1).
Duration of the program depends on the external conditions in the apartment, temperature and pressure etc.

Wash cycle

7

The dishwasher door must be closed and the water tap open.

To pause the program (e.g. if you want to insert an item):

- Open the door with caution (the program pauses) and insert the items,
(beware of **HOT steam!**).
- Close the door and press the **START** button again to restart the cycle (the program resumes the cycle from where it was interrupted).

To Cancel the program on running:

- Press the **CANCEL/Off** button.
- (Water drains for up to 1 minute then the appliance switches off).

To change the program in progress:

- Press the **CANCEL/Off** button to cancel the program on running.
- (Water drains for up to 1 minute then the appliance switches off).
- Press any button except **CANCEL/Off** button to switch on the appliance.
- Select a new program.
- Press the **START** button.

Switch off the appliance Everything o.k. ...

Exercise caution when opening the door: beware of hot steam.


Press the **CANCEL/Off** button once to turn the appliance into Standby mode.

All the indicator lamps switch off. Unload the appliance, starting from the lower rack in order to avoid any residual drips of water falling onto crockery below.


Maintenance and care

9


Filters
Check and clean if necessary

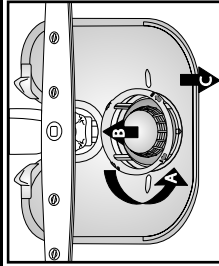


Unscrew filter cylinder, remove it and fine sieve...

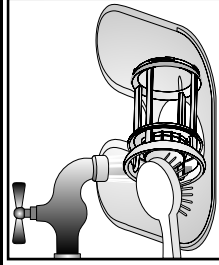

Rinse under running water ...

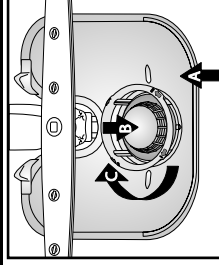

Insert

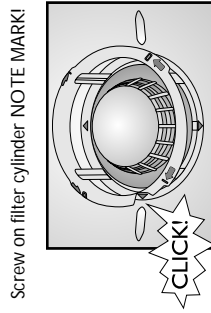


Screw on filter cylinder NOTE MARK!


Rectifying minor faults your-self ...

10


Spray arms
Remove blockages/deposits.

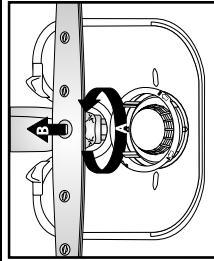


Unscrew and remove lower arm ...

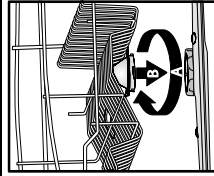


Unscrew and remove upper arm ...

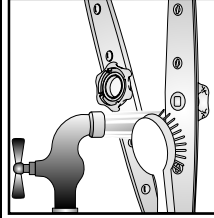


Clean spray nozzles under running water (use toothpicks if necessary) ...

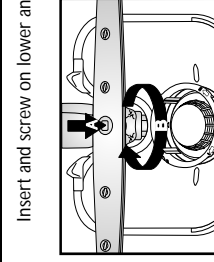

Insert and screw on lower and upper arms tightly

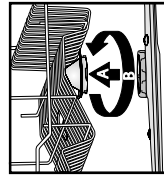

 <p>If a fault occurs, before contacting the After-sales Service, make the following checks to try and remedy the problem. Most faults can be remedied by taking the courses of action, quickly restoring normal appliance operation.</p>	
<p>The appliance... ...is not working/will not start</p>	<p>Possible causes...</p> <ul style="list-style-type: none"> - The appliance must be switched on. - The dishwasher door doesn't close. - "Delayed start" option is ON. - Water tap closed. - Kinked water inlet hose or clogged inlet filters. - Water pressure too low. - Dirty or clogged filters. - Too little water in the dishwasher's water system. - Drain hose incorrectly fitted. - High level of foam inside. - Dirty filters. - Kinked drain hose. - Syphon hose connection closed. <p>Solutions...</p> <ul style="list-style-type: none"> - Check the household circuit fuse if there is no power supply. - Check if the dishwasher's door is closed. - Check whether the "Delayed start" option (if available) has been selected. If it has, the appliance will only start once the set time has elapsed. If necessary, set the delayed start to "0" (RESET the appliance). - The water tap must be open. - The water inlet hose must not be kinked and the relative inlet filter in the water tap connector must not be dirty or clogged. - The water tap must be fully open during water inlet (minimum capacity: 0.5 litres per minute). - The filters must not be dirty or clogged. - Concave items (e.g. bowls, cups) must be arranged facing downwards in the rack. - The drain hose must be fitted correctly (for high mounted appliances, leave min. 200-400 mm from the lower edge of the appliance) - see Assembly instructions. - Repeat without detergent or wait until foam disappears. - Clean the filters. - The drain hose must not be kinked. - The closure disk of the syphon hose connection must be removed.
<p>...the CANCEL/Off indicator lamp blinks 6 times</p> <p>...the CANCEL/Off indicator lamp blinks 6 times/wash program ended too early (dishes are dirty and wet)</p> <p>...the CANCEL/Off indicator lamp blinks 8 times</p>	<p>Possible causes...</p> <ul style="list-style-type: none"> - Too little space between dishes (incorrect arrangement of the concave items in the rack). - Too little detergent: detergent too old or incorrectly stored. - Temperature not high enough for heavily soiled crockery. - Loading of the dishwasher using lower and upper rack at the same time with "Half load/Multizone" option. - Frequent use of Eco 50°C. - Clogged spray arms, dirty filters or not fitted correctly. - Spray arms stuck impeded by crockery or cutlery. <p>Solutions...</p> <ul style="list-style-type: none"> - Arrange crockery so that items do not touch each other. Concave items (e.g. bowls, cups) must be arranged facing downwards in the rack. - If necessary, use more detergent, observing the manufacturer's indications as regards dosage. Always store detergent in a dry place and do not store it for excessively long periods of time. - For heavily soiled crockery, select a wash program with a higher temperature (see table of programs - page 1). - If you select the "Half load/Multizone" option (if available), remember to load only the upper rack or only the lower rack to increase washing power and thus obtain optimum wash results. - In the event of frequent use of the Eco 50°C program (if available), from time to time select the Intensive 70°C program (if available). - The spray arms must not be clogged, the filters must not be dirty and must be fitted correctly (see page 5, "Maintenance and care"). - The spray arms must be able to turn freely and must not be impeded by crockery or cutlery.
<p>...are not perfectly clean/have food residues</p>	<p>Possible causes...</p> <ul style="list-style-type: none"> - Too little space between dishes (incorrect arrangement of the concave items in the rack). - Too little detergent: detergent too old or incorrectly stored. - Temperature not high enough for heavily soiled crockery. - Loading of the dishwasher using lower and upper rack at the same time with "Half load/Multizone" option. - Frequent use of Eco 50°C. - Clogged spray arms, dirty filters or not fitted correctly. - Spray arms stuck impeded by crockery or cutlery. <p>Solutions...</p> <ul style="list-style-type: none"> - Arrange crockery so that items do not touch each other. Concave items (e.g. bowls, cups) must be arranged facing downwards in the rack. - If necessary, use more detergent, observing the manufacturer's indications as regards dosage. Always store detergent in a dry place and do not store it for excessively long periods of time. - For heavily soiled crockery, select a wash program with a higher temperature (see table of programs - page 1). - If you select the "Half load/Multizone" option (if available), remember to load only the upper rack or only the lower rack to increase washing power and thus obtain optimum wash results. - In the event of frequent use of the Eco 50°C program (if available), from time to time select the Intensive 70°C program (if available). - The spray arms must not be clogged, the filters must not be dirty and must be fitted correctly (see page 5, "Maintenance and care"). - The spray arms must be able to turn freely and must not be impeded by crockery or cutlery.
<p>Crockery and cutlery...</p>	<p>RESET:</p> <ul style="list-style-type: none"> ➔ Press the CANCEL/Off button. ➔ Close the door. ➔ Water drains automatically for up to 1 minute. ➔ The appliance is now ready to be restarted. <p>After taking the above course of action, the fault message must be reset. In the majority of cases the fault is thus eliminated.</p> <p>Crockery and cutlery...</p> <ul style="list-style-type: none"> - Arrange crockery so that items do not touch each other. Concave items (e.g. bowls, cups) must be arranged facing downwards in the rack. - If necessary, use more detergent, observing the manufacturer's indications as regards dosage. Always store detergent in a dry place and do not store it for excessively long periods of time. - For heavily soiled crockery, select a wash program with a higher temperature (see table of programs - page 1). - If you select the "Half load/Multizone" option (if available), remember to load only the upper rack or only the lower rack to increase washing power and thus obtain optimum wash results. - In the event of frequent use of the Eco 50°C program (if available), from time to time select the Intensive 70°C program (if available). - The spray arms must not be clogged, the filters must not be dirty and must be fitted correctly (see page 5, "Maintenance and care"). - The spray arms must be able to turn freely and must not be impeded by crockery or cutlery.

Crockery and cutlery...	Possible causes...	Solutions...
...salt indicator lit	<ul style="list-style-type: none"> - Use tablets for soft water. 	<ul style="list-style-type: none"> - Set "Tablet" option: if this option is not available, it is normal for the salt indicator to light up.
...have deposits: regeneration salt residue	<ul style="list-style-type: none"> - Water too hard. - Salt reservoir cap open. 	<ul style="list-style-type: none"> - In areas with very hard water, more regeneration salt needs to be added (see page 2, "How to set water hardness"). - Close the salt reservoir cap properly.
...are not dry	<ul style="list-style-type: none"> - Not enough rinse aid. - Plastic containers dry badly - Clean dishes left in dishwasher for a long time after end of cycle (e.g. when using "Delayed start" option). - Incorrect arrangement of the concave items in the rack. - Incorrect dosage the rinse aid. 	<ul style="list-style-type: none"> - If you use a combined action detergent, try adding more rinse aid. - Synthetic materials do not dry well: if wet at end of cycle, wipe dry. - In this situation, the presence of drops of water on dishes and on the sides of the dishwasher is normal. Try releasing the door 5 minutes before removing the dishes. - Arrange crockery so that water does not collect in cavities.
...have discoloured plastic parts	<ul style="list-style-type: none"> - Tomato/Carrot juice. 	<ul style="list-style-type: none"> - Increase the dosage of rinse aid (see page 3, "Adding rinse aid"). - The rapid program is intended for quickly washing lightly soiled dishes. If used for a full load of medium/heavy soiled dishes, the dishes may not dry completely. If so, select a standard-length program. For best results, open the door after the end of the program and wait 15 minutes before unloading the dishwasher. - Tomato sauce, for example, can lead to discolouring of plastic parts. Powder detergent is recommended as it allows slightly higher doses to be used for improved whitening. Programs with higher wash temperatures should be used.
...opaque glasses, etc.	<ul style="list-style-type: none"> - Dishes unsuitable for washing in dishwashers (porcelain). 	<ul style="list-style-type: none"> - Only use dishwasher-proof crockery and dishes.
...removable deposits on glasses	<ul style="list-style-type: none"> - Usage of incorrect programs for glasses. 	<ul style="list-style-type: none"> - Dishes should be put together, to avoid touching each other. Do not put glassware together in baskets. Use suitable program for glass.
...glasses not sparkling	<ul style="list-style-type: none"> - Not conform of glasses to washing in dishwashers (porcelain). 	<ul style="list-style-type: none"> - Some kinds of glass cannot be washed in the dishwasher.
...permanent deposits on glasses	<ul style="list-style-type: none"> - Rainbow effect. 	<ul style="list-style-type: none"> - This phenomenon is irreversible. We recommend in future: <ul style="list-style-type: none"> - Change the control of system of dosage of softener. - Be careful – follow recommended detergent dosage. - For combined action tablets see detergent producer's recommendations.
...tea cups darken and dirt does not disappear after washing in dishwasher	<ul style="list-style-type: none"> - Not known. 	<ul style="list-style-type: none"> - This phenomenon is inevitable. Theine alters colour's permanently.
...rust marks	<ul style="list-style-type: none"> - Pre-wash program not used. 	<ul style="list-style-type: none"> - Salty or acidic food residues can cause rust marks even on stainless steel cutlery. To avoid this, always use the pre-wash program if the dishes are to be washed later.
...other marks	<ul style="list-style-type: none"> - Rinse aid dosage too low. 	<ul style="list-style-type: none"> - In the presence of marks, increase the rinse aid dosage (see page 3, "Adding rinse aid"). - If you use a combined action detergent, possibly add more rinse aid.
...streaks	<ul style="list-style-type: none"> - Rinse aid dosage too high. 	<ul style="list-style-type: none"> - In the presence of streaks, reduce the rinse aid dosage (see page 3, "Adding rinse aid"). - If you use a combined action detergent which includes rinse aid, do not add any additional rinse aid.
...suds	<ul style="list-style-type: none"> - Unsuitable dosage of detergent/rinse aid. 	<ul style="list-style-type: none"> - Only use the amount of detergent/rinse aid required, since excessive amounts can lead to excess suds.


Disconnect the mains plug

If, after carrying out the above checks, the fault persists, disconnect the mains plug and turn off the water tap. Contact the After-sales Service (see warranty). Before contacting our After-Sales Service, take note of the following:

- the description of the fault,
- the appliance type and model,
- the service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side:



Precautions and general recommendations

- 1. Packing**
The packaging materials are 100% recyclable and marked with the recycling symbol .
After unpacking, make sure that the dishwasher is undamaged and that the door closes correctly. If in doubt, contact a qualified technician or your local retailer.
 - 2. Removing the packaging and inspecting the contents**
This dishwasher has been tested by the manufacturer to ensure it functions correctly. Such testing may leave slight drips/water marks which will disappear with the first wash.
 - 3. Before using the dishwasher for the first time**
The appliance is designed to operate at ambient temperatures of between 5°C and 45°C.
- This dishwasher has been tested by the manufacturer to ensure it functions correctly. Such testing may leave slight drips/water marks which will disappear with the first wash.
 - 4. Energy and water savings**
 - Do not rinse crockery under running water.
 - Always fully load the dishwasher before running it or select the "Half load/Multizone" option (if available).
 - If ecological energy sources are available such as solar panel heating, heat pumps or centralised heating systems, the appliance may be connected to the hot water mains up to a maximum temperature of 60°C. Make sure the water inlet hose is of the correct type ("70°C Max" or "90°C Max").
 - 5. Child safety**
 - Keep the packaging materials out of the reach of children.
 - Children must not be allowed to play with the dishwasher.
 - Store the detergent, rinse aid and salt out of the reach of children.
 - 6. Safety warnings**
 - The appliance is not intended for use by children or physically or mentally impaired persons, unless adequately supervised by a responsible adult capable of guaranteeing safe use of the appliance.
 - Do not operate the appliance in the open air.
 - Do not store flammable materials in close proximity to the dishwasher.
 - The water in the dishwasher is not potable.
 - Do not use solvents inside the dishwasher: **risk of explosion!**
 - Be careful when the door is open: **risk of tripping!**
 - The open dishwasher door can only support the weight of the loaded rack when pulled out. Do not rest objects on the open door or sit or stand on it.
 - Sharp items that might cause injury (e.g. knives), must be placed in the cutlery basket with the sharp end facing downwards. Long-handled utensils must be arranged horizontally in the upper rack, with the sharp end facing away from the front of the appliance.
- The guarantee is not applicable if faults are caused by incorrect use of the appliance.



What to do if...

Before contacting our After-Sales Service, take note of the following:

- the description of the fault,
- the appliance type and model,
- the service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side:



Precautions and general recommendations

- 1. Before cleaning or carrying out maintenance**, disconnect the mains plug and turn off the water tap: also in the event of any malfunction.
 - 2. Repairs and technical modifications** must be carried out exclusively by a qualified technician.
 - 3. Resistance to frost**
If the appliance is placed in surroundings exposed to the risk of frost, it must be drained completely. Turn off the water tap, remove the inlet and outlet hoses, and let all the water drain away. Make sure there is at least 1 kg of dissolved regeneration salt in the salt reservoir, to protect the appliance from temperatures of up to -20°C. When the program resumes, an error message may be indicated (see page 6).
CANCEL/OFF indicator blinks 6 times - the appliance must remain at an ambient temperature of min. 5°C for at least 24 hours.
After eliminating these faults, RESET the appliance (see chapter "What to do if...").
 - 8. Disposal**
 - The appliance is manufactured using recyclable materials. If you decide to scrap the dishwasher, it must be disposed of in compliance with local waste disposal regulations. Make it unusable by cutting off the power cord. To prevent situations of potential danger to children (e.g. danger of suffocation), break the lock of the door so that it can no longer be closed.
 - This appliance is marked according to the European directive 2002/96/CE on Waste Electrical and Electronic Equipment (WEEE). By ensuring that this appliance is scrapped suitably, you can help prevent potentially damaging consequences for the environment and health. Unsuitable disposal of an appliance of this type as household waste could have detrimental effects on the environment. The symbol  on the appliance, or on documentation enclosed with the appliance, indicates that this product must not be treated as household waste, but must be delivered to the nearest collection centre for the recycling of electrical and electronic appliances. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For further information on the treatment, recovery and recycling of this appliance, contact your competent local authority, the collection service for household waste or the shop where you purchased the appliance.
- EC Declaration of conformity**
This appliance has been designed, constructed and distributed in compliance with the safety requirements of EC Directives:  2006/95/CE, 89/336/CE, 93/68/CE and 2002/95/CE (RoHS Directive).
- Loading Capacity:** 12 place settings.

The guarantee is not applicable if faults are caused by incorrect use of the appliance.

We reserve the right to make technical modifications.