

# EL705 OEM Series™



*Board Version*



*Enclosed Version*

## **220 MHz and 450 MHz Data Transceivers**

MDS 05-3624A01, Rev. B  
JANUARY 2001



Microwave Data Systems Inc.

---

# QUICK START GUIDE

---

Below are the basic steps for installing the transceiver. Detailed instructions are given in “Installation Steps” on page 6 of this guide.

## 1. Mount the transceiver (see Figure 6 or Figure 7 for mounting dimensions)

---

## 2. Install and connect the antenna system to the radio

---

- Use only good quality, low loss coaxial cable. Keep the feedline as short as possible.
- Preset directional antennas in the direction of desired transmission/reception.

## 3. Apply DC power to the radio (10–30 Vdc @ 500 mA minimum)

---

- Measure the voltage source before connection.
- Observe proper polarity.
- Connect power to the power connector.

## 4. Set the radio’s basic configuration with a terminal (PC or HHT) connected to the INTERFACE port


---

- Pin 23 of the INTERFACE port must be grounded to place the radio in the control and programming mode. (See **Figure 12 on page 16** for a cable wiring diagram.)
- Set the transmit frequency (**TX xxx.xxx**).
- Set the receive frequency (**RX xxx.xxx**).
- Set the network address (**ADDR xxx**). All radios in a given network must have the same address.
- Set/verify the data rate using the **BAUD** command. The default setting is **BAUD 9600 8N1**. (Refer to “TRANSCEIVER PROGRAMMING” on page 14 for command details.)

## 5. Connect the data equipment to the radio’s INTERFACE connector

---

- Connection to the radio must be made with a DB-25 Male connector. Connections for typical systems are shown below.
- Connect only the required pins. Do not use a straight-through RS-232 cable with all pins wired.
- Verify the data equipment is configured as DTE. (By default, the radio is configured as DCE.)

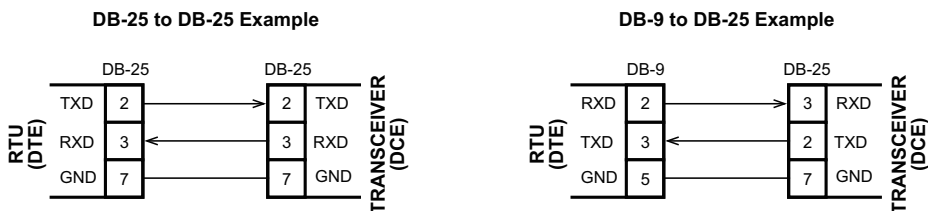

**NOTE:** Additional connections may be needed in some installations. See “Installation” for details.

## 6. Verify proper operation by observing the LED display

---

- See Table 5 on page 13 for a description of the status LEDs.
- Refine directional antenna headings for maximum receive signal strength using the **RSSI** command.

---

# TABLE OF CONTENTS

---

1.0 INTRODUCTION .....	1
1.1 Differences Among Models .....	1
Modem Speeds .....	2
Frequency Coverage .....	2
1.2 Applications .....	2
Point-to-Multipoint, Multiple Address Systems (MAS) .....	2
Point-to-Point System .....	3
Switched Carrier Operation .....	4
Single Frequency (Simplex) Operation .....	4
1.3 Model Number Codes .....	4
1.4 Accessories .....	5
2.0 INSTALLATION .....	6
2.1 Installation Steps .....	6
2.2 Mounting the Transceiver .....	8
Transceiver Board .....	8
Enclosed Transceiver .....	8
2.3 Antennas and Feedlines .....	9
Antennas .....	9
Feedlines .....	9
2.4 Power Connection .....	10
Conservation (Sleep Mode) .....	11
2.5 Data Interface Connections .....	11
3.0 OPERATION .....	13
3.1 Initial Startup .....	13
3.2 LED Indicators .....	13
4.0 TRANSCEIVER PROGRAMMING .....	14
4.1 Radio Programming Methods .....	14
PC with Radio Configuration Software .....	14
À PC in Terminal Mode .....	14
Ã Handheld Terminal (HHT) .....	14
4.2 PC Connection and Startup .....	14
4.3 Keyboard Commands .....	16
Entering Commands .....	16
Error Messages .....	16
4.4 Detailed Command Descriptions .....	18
ADDR [NONE   1–255] .....	18
AMASK [0000 0000–FFFF FFFF] .....	18
BAUD [xxxxx abc] .....	19
CTS [0–255] .....	19
CTSHOLD [0–60000] .....	19

DEVICE [DCE   CTS KEY] .....	20
DKEY .....	20
INIT .....	20
KEY .....	21
OWM [XXX...] .....	21
OWN [XXX...].....	21
PWR [L   M   H].....	21
RSSI and RSSI!.....	22
RX [xxx.xxx].....	22
RXTOT [NONE   1–255] .....	22
SER .....	22
SREV .....	22
STAT .....	22
TOT [1–255   ON   OFF] .....	23
TX [xxx.xxx] .....	23
<b>5.0 TROUBLESHOOTING .....</b>	<b>24</b>
5.1 LED Indicators .....	24
5.2 Event Codes .....	24
Checking for Alarms—STAT command.....	24
Major Alarms vs. Minor Alarms.....	25
Event Code Definitions .....	25
<b>6.0 TECHNICAL REFERENCE .....</b>	<b>26</b>
6.1 OEM Series™ Transceiver Specifications .....	26
6.2 Bench Testing Setup .....	28
6.3 Helical Filter Adjustment .....	28
6.4 Upgrading the Radio's Software .....	29
Using Radio Configuration Software.....	30
6.5 dBm-Watts-Volts Conversion Chart .....	31
<b>7.0 GLOSSARY OF TERMS.....</b>	<b>32</b>

## Copyright Notice

This Installation and Operation Guide and all software described herein are protected by **copyright: 2001 Microwave Data Systems Inc.** All rights reserved.

Microwave Data Systems Inc. reserves its right to correct any errors and omissions in this publication.

## Antenna Installation Warning

1. All antenna installation and servicing is to be performed by **qualified technical personnel** only. When servicing the antenna, or working at distances closer than those listed below, *ensure the transmitter has been disabled.*
2. Typically, the antenna connected to the transmitter is a directional (high gain) antenna, fixed-mounted on the side or top of a building, or on a tower. Depending upon the application and the gain of the antenna, the total composite power could exceed 90 watts EIRP. The antenna location should be such that only qualified technical personnel can access it, and that under normal operating conditions no other person can touch the antenna or approach within **2.3 meters** of the antenna.

### RF Exposure



Separation distances required for FCC RF Exposure compliance

**Antenna Gain vs. Recommended Safety Distance  
(EL705 OEM Series)**

	Antenna Gain (EL705 OEM Series)		
	0–5 dBi	5–10 dBi	10–16.5 dBi
<b>Minimum RF Safety Distance</b>	0.6 meter	1.06 meters	2.3 meters

## ISO 9001 Registration

Microwave Data Systems adheres to this internationally accepted quality system standard.

## MDS Quality Policy Statement

We, the employees of Microwave Data Systems Inc., are committed to understanding and exceeding our customer's needs and expectations.

- We appreciate our customer's patronage. They are our business.
- We promise to serve them and anticipate their needs.
- We are committed to providing solutions that are cost effective, innovative and reliable, with consistently high levels of quality.
- We are committed to the continuous improvement of all of our systems and processes, to improve product quality and increase customer satisfaction.

## FM/UL/CSA Notice

This product is available for use in Class I, Division 2, Groups A, B, C & D Hazardous Locations. Such locations are defined in Article 500 of the National Fire Protection Association (NFPA) publication NFPA 70, otherwise known as the National Electrical Code.

The transceiver has been recognized for use in these hazardous locations by three independent agencies —Underwriters Laboratories (UL), Factory Mutual Research Corporation (FMRC) and the Canadian Standards Association (CSA). The UL certification for the transceiver is as a Recognized Component for use in these hazardous locations, in accordance with UL Standard 1604. The FMRC Approval is in accordance with FMRC Standard 3611. The CSA Certification is in accordance with CSA STD C22.2 No. 213-M1987.

### FM/UL/CSA Conditions of Approval:

The transceiver is not acceptable as a stand-alone unit for use in the hazardous locations described above. It must either be mounted within another piece of equipment which is certified for hazardous locations, or installed within guidelines, or conditions of approval, as set forth by the approving agencies. These conditions of approval are as follows:

1. The transceiver must be mounted within a separate enclosure which is suitable for the intended application.
2. The antenna feedline, DC power cable and interface cable must be routed through conduit in accordance with the National Electrical Code.
3. Installation, operation and maintenance of the transceiver should be in accordance with the transceiver's installation manual, and the National Electrical Code.
4. Tampering or replacement with non-factory components may adversely affect the safe use of the transceiver in hazardous locations, and may void the approval.

5. When installed in a Class I, Div. 2, Groups A, B, C or D hazardous location, observe the following:

**WARNING —EXPLOSION HAZARD—** Do not disconnect equipment unless power has been switched off or the area is known to be non-hazardous.

Refer to Articles 500 through 502 of the National Electrical Code (NFPA 70) for further information on hazardous locations and approved Division 2 wiring methods.

## ESD Notice (*Board version only*)

To prevent malfunction or damage to this product, which may be caused by Electrostatic Discharge (ESD), the radio should be properly grounded at the time of installation. In addition, the installer or maintainer should follow proper ESD precautions, such as touching a bare metal object to dissipate body charge, prior to touching components or connecting/disconnecting cables.

## Cable Length Recommendation

MDS recommends a maximum cable length of 3.0 meters for *DC power* and *data* connections to this product.

## Revision Notice

While every reasonable effort has been made to ensure the accuracy of this manual, product improvements may result in minor differences between the manual and the product shipped to you. If you have additional questions or need an exact specification for a product, please contact our Customer Service Team using the information at the back of this guide. In addition, manual updates can often be found on the MDS Web site at [www.microwavedata.com](http://www.microwavedata.com).

## Distress Beacon Warning

In the U.S.A., the 406 to 406.1 MHz band is reserved for use by distress beacons. Since the MDS 4710A radio is capable of transmitting in this band, take precautions to prevent the radio from transmitting between 406 to 406.1 MHz. This notice applies *only* to MDS 4710A Transceivers used in the U.S.A.






## 1.0 INTRODUCTION

This guide presents installation and operating instructions for the MDS OEM Series™ of digital radio transceivers. The radios can be purchased as compact, modular boards for direct mounting inside remote terminal units (RTUs), programmable logic controllers (PLCs), automatic banking machines, or similar equipment. They are also available as standalone units packaged in their own enclosures (see lower cover illustration).

Although this manual focuses on the board-level product, the operating specifications and user connections are identical for both versions of the radio. Only the visual appearance and mounting details differ between the two. These differences are explained in the text where necessary.

The transceiver (Figure 1) is a data telemetry radio designed to operate in a point-to-multipoint environment, such as electric utility Supervisory Control and Data Acquisition (SCADA) and distribution automation, gas field automation, water and wastewater SCADA, and on-line transaction processing applications. The radio employs microprocessor control to provide highly reliable communications, even under adverse conditions.

MDS OEM Series™ radios use continuous-phase frequency shift keying (CPFSK) modulation. Domestic models employ a 4-level modem; ETSI models, a 2-level modem.

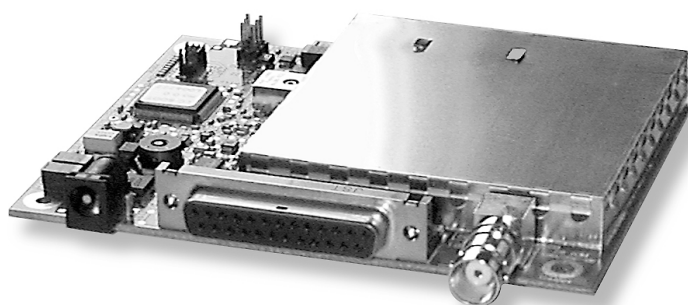

**Figure 1. OEM Series™ Series Data Transceiver**  
*(Board version shown—enclosed unit similar)*

### 1.1 Differences Among Models

All OEM Series™ models are very similar in appearance and functionality. The major differences are over-the-air modem speed and frequency coverage.

## Modem Speeds

Domestic models are capable of 9600 bps transmission over the air; ETSI models, 4800 bps. This does *not* affect the local DATA INTERFACE port speed, which will accept asynchronous data between 1200 and 19200 bps.

## Frequency Coverage

OEM Series radios are available for operation in the 200 MHz or 400 MHz frequency bands. The exact frequency coverage of each model is listed in the Specifications chart on Page 26.

---

**NOTE:** The radio's frequency range (band) cannot be set or changed by the user; it is set at the factory.


---

## 1.2 Applications

### Point-to-Multipoint, Multiple Address Systems (MAS)

Point-to-multipoint (MAS) is the most common application of the transceiver. It consists of a central master station and several associated remote units as shown in Figure 2. An MAS network provides communications between a central host computer and remote terminal units (RTUs) or other data collection devices. The operation of the radio system is "transparent" to the computer equipment. That is, the radio system transports the data in its original form, making no changes to the data format.


Often, the radio system is used to replace a network of remote monitors currently linked to a central location by leased telephone lines. At the central office of such a system, there is usually a large mainframe computer and some means of switching between individual lines coming from each remote monitor. In this type of system, there is a modulator/demodulator (modem) at the main computer and at each remote site, usually built into the remote monitor itself. Since the cost of leasing a dedicated-pair telephone line is quite high, radio is frequently used as an alternative communication medium.

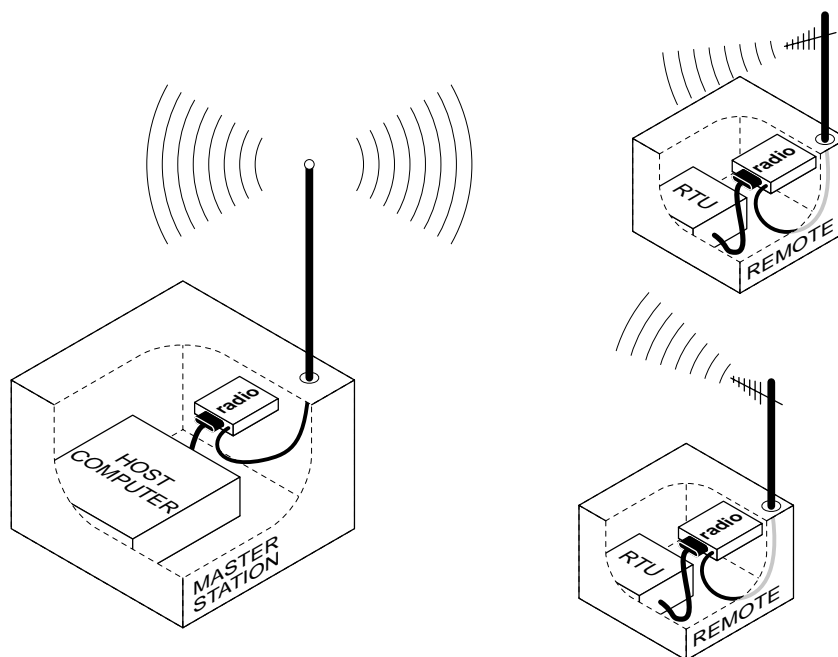

**Figure 2. MAS Point-to-Multipoint Network**  
*(Two remote stations shown—four or more are typically used)*

### Point-to-Point System

Where permitted, the transceiver may also be used in a point-to-point arrangement. A point-to-point system consists of just two radios—one serving as a master and the other as a remote—as shown in Figure 3. It provides a simplex or half-duplex communications link for the transfer of data between two locations.

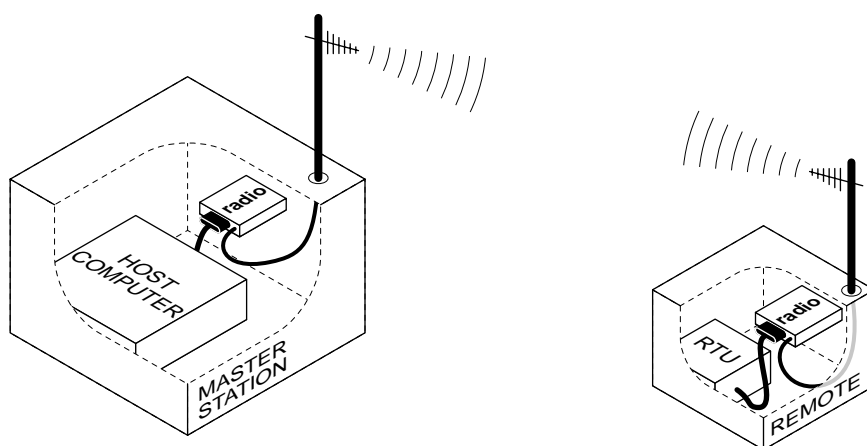

**Figure 3. Typical Point-to-Point Link**

## Switched Carrier Operation

Switched Carrier operation is a half-duplex mode where the master station transmitter is keyed to send data and unkeyed to receive. MDS OEM Series™ radios operate in switched carrier mode and are keyed when data is present.

**NOTE:** MDS OEM Series™ radios do not support full-duplex operation (i.e., transmitting and receiving at the same time). For information on other MDS products that provide this capability, contact your sales representative.

## Single Frequency (Simplex) Operation


Single frequency operation (also known as simplex) is a special case of switched carrier operation. Single frequency operation is *automatically* selected whenever the transmit and receive frequencies are set to the same value.

### 1.3 Model Number Codes

The radio model number is printed on the PC board or on the radio enclosure, and provides key information about how the radio was configured when was shipped from the factory. See Figure 4 for an explanation of the model number characters.

**THIS INFORMATION IS SUBJECT TO CHANGE.**

**DO NOT USE FOR PRODUCT ORDERING.**

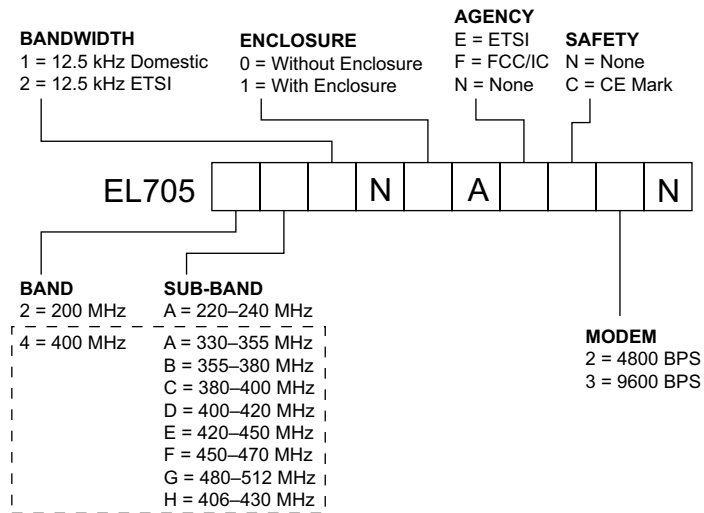

**Figure 4. MDS OEM Series™ Model Number Codes**

## 1.4 Accessories


The transceiver can be used with one or more of the accessories listed in Table 1. Contact the factory for ordering information.

**Table 1. Optional Accessories**

Accessory	Description	MDS P/N
Hand-Held Terminal Kit (HHT)	Keypad terminal for programming, diagnostics, and control. Includes carrying case, cable set and an instruction booklet. (Accessory Power Adapter 03-3722A01 required for use with OEM radios—see below).	02-1501A01
Accessory Power Adapter	DB-25 male-to-female adapter that attaches to the radio's DATA INTERFACE connector. Provides regulated 10 Vdc for powering an HHT or other low power accessory. If not used, accessories could be damaged by excessive voltage (equal to the radio's DC input voltage).	03-3722A01
RTU Simulator Assy.	Test unit that simulates data from a remote terminal unit. Comes with polling software that runs on a PC. Used for testing OEM radio operation. (NOTE: Older MDS RTU Simulators will <i>not</i> work with the OEM radio as they require a higher input voltage.)	03-2094A01
DB-9 to DB-25 adapter	Used to connect a PC with a 9-pin serial port to the radio's DATA INTERFACE port.	01-3683A01
Radio Configuration Software (EL705)	Radio programming software for use with a Windows-based PC. This program is available on 3.5" disks, and is included on the MDS' InSite 6.4 (or higher) CD.	03-3649A01
PC Programming Adapter Kit	Required when programming the radio with a personal computer operating in terminal mode. The adapter asserts the auto-open signal (ground) on pin 23 of the DATA INTERFACE port. A scratch-built cable may also be used for this purpose (see Figure 12 on Page 16).	01-3683A01

## 2.0 INSTALLATION

There are three main requirements for installing the transceiver—adequate and stable primary power, a good antenna system, and the correct data connections between the transceiver and the data device. Figure 5 shows the external connections for the transceiver.

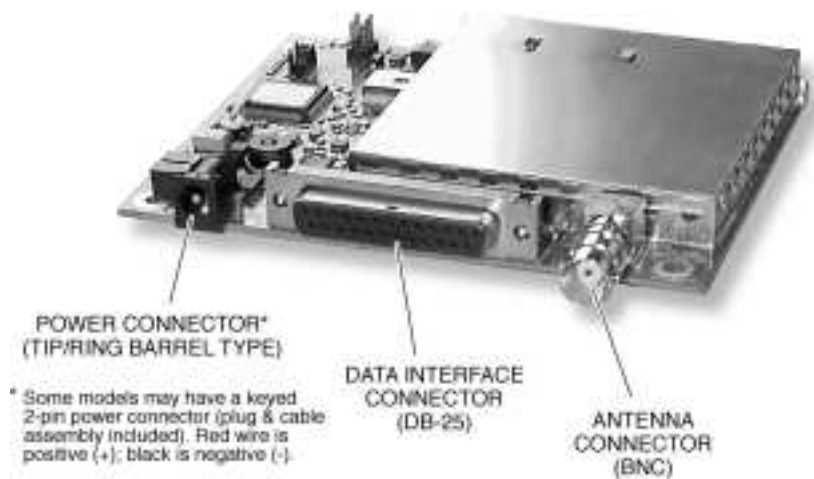

**Figure 5. External Connections to the Transceiver Board  
(Connector locations identical to enclosed radio)**

### 2.1 Installation Steps

Below are the basic steps for installing the transceiver. In many cases, these steps alone are sufficient to complete the installation. More detailed explanations appear at the end of these steps.

1. Mount the transceiver to a stable surface using the appropriate hardware.
2. Install the antenna and antenna feedline for the station. Preset directional antennas in the desired direction of transmission and reception.
3. Measure and install the primary power for the radio. The primary power must be between 10 and 30 Vdc and be capable of supplying at least 600 milliamperes. (600 mA requirement assumes a 2 watt RF output. Lower current consumption is possible if lower output power may be used in your application—see *OEM Series™ Transceiver Specifications* on Page 26 for details.)

---

**NOTE:** Use the radio in negative ground systems only.

---

4. Set the radio configuration. The transceiver is designed for quick installation with a minimum of software configuration in most cases. The selections that *must* be made or verified for new installations are:

- Transmit frequency
- Receive frequency
- Network address (factory-set to **NONE**)

The operating frequencies are not set at the factory unless they are specified at the time of order. Determine the transmit and receive frequencies to be used, and follow the steps below to program them.

5. Connect a terminal interface (personal computer or a hand-held terminal) to the DATA INTERFACE connector. (See *PC Connection and Startup* on Page 14 for details.)

6. Press **ENTER** to receive the ready “>” prompt.

a. Set the transmit frequency with the **TX xxx.xxx** command.

Press **ENTER** after the command.

b. Set the receive frequency with the **RX xxx.xxx** command.

Press **ENTER** after the command.

c. Set the network address with the **ADDR xxx** command.

Press **ENTER** after the command. After programming, the terminal interface reads **PROGRAMMED OK** to indicate successful entry.

7. Disconnect the terminal interface from the DATA INTERFACE connector.


8. Connect the data equipment to the transceiver’s DATA INTERFACE connector. Use only the required pins for the application—do *not* use a fully pinned (25 conductor) cable. Basic applications often require only the use of Pin 2 (Transmitted Data—TXD), Pin 3 (Received Data—RXD), and Pin 7 (Signal Ground).

Additional connections may be required in some installations. Refer to the complete list of pin functions in Table 4 on Page 11.

## 2.2 Mounting the Transceiver

### Transceiver Board


Figure 6 shows the mounting dimensions of the transceiver PC board. The board should be secured to the mounting surface using the holes provided at each corner of the assembly. (Fasteners are not supplied.) Note that the lower left mounting hole in the board is a threaded ferrule.

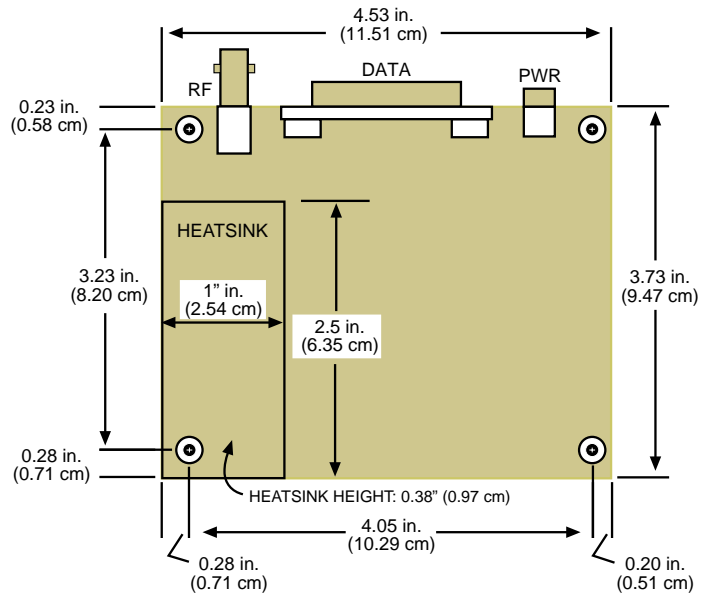

**Figure 6. Transceiver Mounting Dimensions (Board Version)**

### Enclosed Transceiver

Figure 7 shows the mounting dimensions of the enclosed transceiver. Two cutout slots are provided on each side of the enclosure for mounting screws. (Fasteners are not supplied.)

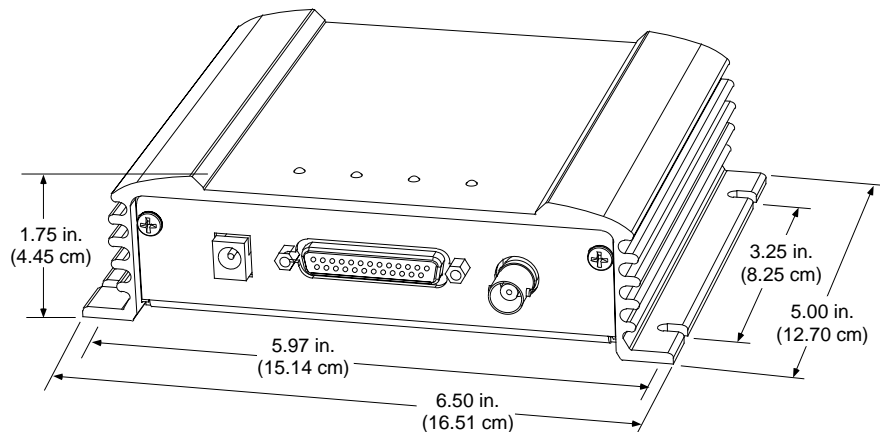

**Figure 7. Transceiver Mounting Dimensions (Enclosed Version)**




## 2.3 Antennas and Feedlines

### Antennas


The transceiver can be used with a number of antennas. The exact style depends on the physical size and layout of the radio system. Suitable antennas are available from several manufacturers, including MDS.

At master stations, omni-directional antennas (Figure 8) are typically used to provide equal coverage to all remote sites in the network.

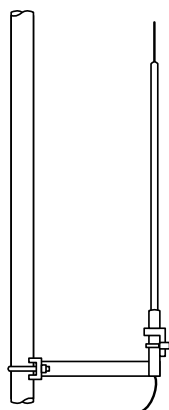

**Figure 8. Typical Omni-directional Antenna for Master Stations  
(Shown mounted to mast)**

At remote sites, a directional Yagi (Figure 9) or corner reflector antenna is generally recommended to minimize interference to and from other users.

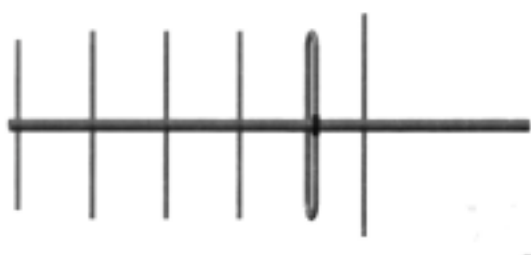

**Figure 9. Typical Yagi Antenna for Remote Sites**

### Feedlines

The selection of antenna feedline is very important. Poor quality cables should be avoided as they result in power losses that may reduce the range and reliability of the radio system.

Tables 2 and 3 show the losses that occur when using various lengths and types of cable at 200 and 400 MHz, respectively. Regardless of the type of cable used, it should be kept as short as possible to minimize signal loss.

**Table 2. Length vs. Loss in Coaxial Cables at 200 MHz**

Cable Type	3 Meters (10 Feet)	15 Meters (46 Feet)	30 Meters (91 Feet)	150 Meters (525 Feet)
RG-8A/U	0.32 dB	1.6 dB	3.2 dB	16 dB
1/2 inch HELIAX	0.10 dB	0.49 dB	0.98 dB	4.9 dB
7/8 inch HELIAX	0.05 dB	0.27 dB	0.54 dB	2.7 dB
1-1/4 inch HELIAX	0.04 dB	0.20 dB	0.40 dB	2.0 dB
1-5/8 inch HELIAX	0.03 dB	0.17 dB	0.33 dB	1.65 dB

**Table 3. Length vs. Loss in Coaxial Cables at 400 MHz**

Cable Type	10 Feet (3.05 Meters)	50 Feet (15.24 Meters)	100 Feet (30.48 Meters)	500 Feet (152.4 Meters)
RG-8A/U	0.51dB	2.53 dB	5.07 dB	25.35 dB
1/2 inch HELIAX	0.12 dB	0.76 dB	1.51 dB	7.55 dB
7/8 inch HELIAX	0.08 dB	0.42 dB	0.83 dB	4.15 dB
1-1/4 inch HELIAX	0.06 dB	0.31 dB	0.62 dB	3.10 dB
1-5/8 inch HELIAX	0.05 dB	0.26 dB	0.52 dB	2.60 dB

## 2.4 Power Connection

The transceiver can be operated from any well-filtered 10 to 30 Vdc power source. The power supply must be capable of providing at least 600 milliamperes if 2 watt output is planned. Supply the power to the power connector (see Figure 5 on Page 6).



Do *not* power the radio through Pin 18 of the DB-25 Interface connector, as this does not provide over-current input protection for the radio. **Pin 18 is intended only as an auxiliary output for powering a low-current (1.0 Amp max.) device, such as an RTU.**

---

**NOTE:** The radio is designed for use in negative ground systems only.

---

## Conservation (Sleep Mode)


In some installations, such as at solar-powered sites, it may be necessary to keep the transceiver’s power consumption to an absolute minimum. This can be accomplished by configuring the data device (RTU, PLC, etc.) to ground Pin 12 of the DATA INTERFACE connector, which removes power from the radio. When the ground is removed, the radio is ready to operate within 75 milliseconds.

## 2.5 Data Interface Connections

The transceiver’s DATA INTERFACE connector is configured as a DCE (modem) and is normally connected to an EIA-232 device. The transceiver supports over-the-air asynchronous data rates up to 19200 bps. Refer to Figure 10 and Table 4 for a detailed description of each pin on the DATA INTERFACE connector.



Do not use a 25 wire (fully pinned) cable for connection to the DATA INTERFACE connector. Use *only* the required pins for the application. Damage may result if improper connections are made. For EIA-232 signaling, typical applications require the use of Pins 2, 3, and 7 *only*.

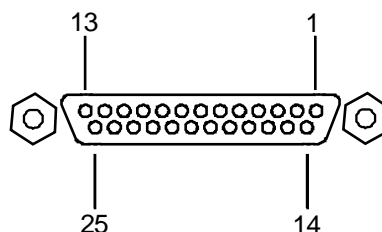

**Figure 10. Data Interface Connector Pinouts  
(As viewed from the front of the radio)**

**Table 4. DATA INTERFACE Connector Pinouts**

Pin Number	Input/ Output	Pin Description
1	--	<b>Protective Ground.</b> Connects to ground (negative supply potential) on the radio's PC board and chassis.
2	IN	<b>TXD—Transmitted Data.</b> Accepts TX data from the connected device.
3	OUT	<b>RXD—Received Data.</b> Outputs received data to the connected device.
4	IN	<b>RTS—Request-to-Send Input.</b> Causes CTS to go "high."
5	OUT	<b>CTS—Clear-to-Send Output.</b> Behavior depends on DEVICE command setting: When DEVICE is set to DCE, this pin follows RTS and will provide "buffer full" flow control. When DEVICE is set to CTS KEY, this pin provides a keyline output when receive data is present.

**Table 4. DATA INTERFACE Connector Pinouts (Continued)**

Pin Number	Input/Output	Pin Description
6	OUT	<b>DSR—Data Set Ready.</b> Active when radio is powered on.
7	--	<b>Signal Ground.</b> Connects to ground (negative supply potential) at radio's PC board.
8	OUT	<b>DCD—Data Carrier Detect.</b> Active when receiving data from another OEM Series radio with the same network address.
11	OUT	<b>Receive Audio Output.</b> For test purposes only.
12	--	<b>Sleep Mode.</b> A logic low on this pin removes power from the radio. The radio is ready to operate 75 milliseconds after the ground is removed.
18	IN/OUT	<b>Accessory Power.</b> Unregulated Output. Provides a source of output power for low current (1 Amp max.) accessories. Excessive drain on this connection causes the on board fuse (2 ampere) to open. The voltage at this pin matches the input voltage to the transceiver. <i>Do not use this pin for powering the radio.</i>
19	OUT	<b>5.8 Vdc Regulated Output.</b> Provides a source of regulated voltage at 100 mA for low power accessories.
23	IN	<b>Auto-Open.</b> A logic low (less than 0.5 volts or ground) on this pin opens the diagnostic channel and disables normal data operation. A logic high (greater than 4 volts or open) enables the DATA INTERFACE for normal data operation.
25	OUT	<b>Alarm.</b> A logic low (less than 0.5 volts) on this pin indicates normal operation. A logic high (greater than 4 volts) indicates that some alarm condition is present. This pin can be used as an alarm output, provided the internal series resistance of 1 k $\Omega$ is considered.

## 3.0 OPERATION

In-service operation of the transceiver is completely automatic. Once the unit has been properly installed and configured, operator actions are limited to observing the radio’s LED status indicators for proper operation.


### 3.1 Initial Startup

If all parameters are set correctly, operation of the radio can be started with these steps:

1. Apply DC power to the transceiver.
2. Observe the LED status panel for the proper indications (see Table 5).
3. If not done earlier, refine the antenna heading of the station to maximize the received signal strength (RSSI) from the master station. Use the **RSSI** command from a terminal interface connected to the radio’s DATA INTERFACE connector.—See *Section 4.0, TRANSCEIVER PROGRAMMING*.

### 3.2 LED Indicators

The transceiver includes four status LEDs visible from the top of the unit, behind the Data Interface connector. Table 5 describes the function of each status LED.



**Table 5. LED Status Indicators**

LED Name	Description
<b>PWR</b> (Power)	<ul style="list-style-type: none"> <li>• Continuous—Power is applied to the radio, no problems detected.</li> <li>• Rapid flash (five times-per-second)—Fault indication.</li> <li>• Flashing once every second—Unit is not programmed. Radio is in Bootloader mode.</li> </ul>
<b>DCD</b> (Data Carrier Detect)	Flashing—Indicates another radio (with the same network address) is transmitting at the radio’s receive frequency.
<b>RXD</b> (Receive Data)	Receive data is present on DATA INTERFACE connector.
<b>TXD</b> (Transmit Data)	Transmit data is present on DATA INTERFACE connector.

## 4.0 TRANSCEIVER PROGRAMMING

Programming and set-up of the transceiver is performed through the radio's DATA INTERFACE connector with a terminal interface—either a personal computer or a hand-held terminal (HHT). This section contains a reference chart of commands (Table 6) followed by detailed descriptions for each entry.

### 4.1 Radio Programming Methods

#### ① PC with Radio Configuration Software

PC-based Radio Configuration software is available for use with the radio (MDS P/N 03-3649A01). This software is normally supplied on 3.5" disks, but can also be found on the MDS InSite disk (version 6.4 or higher) under the title of "EL705." On-line instructions are included with the configuration software.

---

**NOTE:** When using radio configuration software, click on the opening screen or press a key to activate the program.

---

#### ② PC in Terminal Mode

A PC may also be used *without* the Radio Configuration software by operating it in a basic terminal mode (e.g., HyperTerminal session) and entering the radio commands listed in Table 6. **The terminal communication parameters must be set to 9600 bps, with 8 data bits, no parity, and 1 stop bit (8N1).**


#### ③ Handheld Terminal (HHT)

A Hand-Held Terminal kit (MDS P/N 02-1501A01) may be used to enter the radio commands listed in Table 6. **The HHT communication parameters must be set to 9600 bps, with 8 data bits, no parity, and 1 stop bit (8N1).**


### 4.2 PC Connection and Startup

Follow the steps below to prepare the radio for PC programming. For information about connecting and setting up a hand-held terminal, refer to the instructions provided with each HHT kit.:

1. Connect a PC to the radio's DATA INTERFACE port as shown in Figure 11. Pin 23 of the interface cable must be grounded to activate the control and programming mode. This can be done with a Programming Adapter (MDS P/N 01-3683A01), or with a scratch-built cable as shown in Figure 12.
2. Press **ENTER** to obtain the ready ">" prompt.

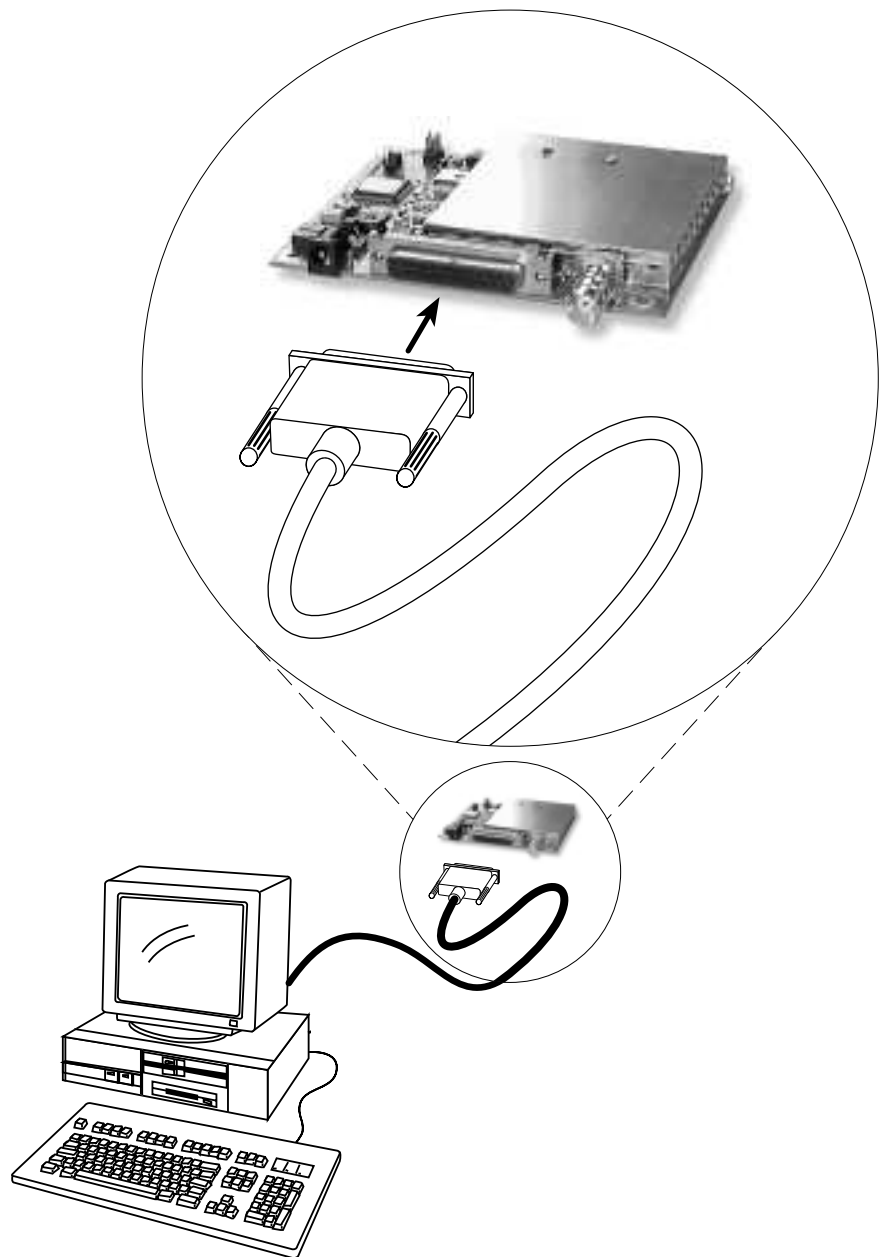

**Figure 11. Terminal Interface (PC) Connected to the Transceiver**  
*(Pin 23 on cable must be grounded—see Figure 12)*

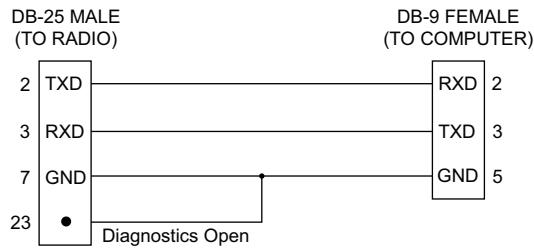

**Figure 12. DB-25 to DB-9 Adapter Cable  
(For PC control and programming)**

### 4.3 Keyboard Commands

Table 6 is a reference chart of software commands for the transceiver. Programmable information is shown in brackets [ ] following the command name. See section 4.4 following the table for detailed command descriptions.

#### Entering Commands

To enter a command, type the command, followed by an **ENTER** keystroke. For programming commands, the command is followed by **SPACE** and the appropriate information or values, then **ENTER**.

#### Error Messages

Listed below are some possible error messages that may be encountered when using the terminal interface:

**UNKNOWN COMMAND**—The command was not recognized. Refer to the command description for command usage information.

**INCORRECT ENTRY**—The command format or its associated values were not valid. Refer to the command description for command usage information.

**COMMAND FAILED**—The command was unable to successfully complete. This may indicate an internal software problem.

**NOT PROGRAMMED**—Software was unable to program the internal radio memory or the requested item was not programmed. This is a serious internal radio error. Contact MDS for assistance.

**TEXT TOO LONG**—Response to **OWN** or **OWM** command when too many characters have been entered. Refer to the command description for command usage information.

**NOT AVAILABLE**—The entered command or parameter was valid, but it referred to a currently unavailable choice. Refer to the command description for command usage information.



**ACCESS DENIED**—The command is unavailable to the user. Refer to the command descriptions for command information.

**EEPROM FAILURE**— The **INIT** command was unable to write to EEPROM. This usually indicates a hardware error. Contact MDS for assistance.

**Table 6. Command summary**

<b>Command name</b>	<b>Function</b>
<b>ADDR [NONE   1–255]</b> <i>Details page 18</i>	Set or display the network address of the radio.
<b>AMASK [0000 0000–FFFF FFFF]</b> <i>Details page 18</i>	Set or display hex code identifying which events trigger an alarm.
<b>BAUD [xxxxx abc]</b> <i>Details page 19</i>	Set or display the DATA INTERFACE data rate and format.
<b>CTS [0–255]</b> <i>Details page 19</i>	Set or display the Clear-to-Send delay in milliseconds.
<b>CTSHOLD [0–60000]</b> <i>Details page 19</i>	Set or display the delay, in milliseconds, at the end of a CTS line response; CTS Key operation only.
<b>DEVICE [DCE   CTS KEY]</b> <i>Details page 20</i>	Set or display the CTS options.
<b>DKEY</b> <i>Details page 20</i>	Dekey the radio (transmitter OFF) following a KEY command.
<b>INIT</b> <i>Details page 20</i>	Set radio parameters to factory defaults.
<b>KEY</b> <i>Details page 21</i>	Key the radio (transmitter ON). Provides a carrier for testing.
<b>OWM [XXX...]</b> <i>Details page 21</i>	Set or display the owner's message.
<b>OWN [XXX...]</b> <i>Details page 21</i>	Set or display the owner's name.
<b>PWR [L   M   H]</b> <i>Details page 21</i>	Set or display the transmit power setting.
<b>RSSI and RSSI!</b> <i>Details page 22</i>	Display the Received Signal Strength Indication.
<b>RX [xxx.xxx]</b> <i>Details page 22</i>	Set or display the receive frequency.
<b>RXTOT [NONE   1–255]</b> <i>Details page 22</i>	Set or display the value of the receive time-out timer.
<b>SER</b> <i>Details page 22</i>	Display the radio serial number.
<b>SREV</b> <i>Details page 22</i>	Display the software revision level.

**Table 6. Command summary (Continued)**

Command name	Function
<b>STAT</b> <i>Details page 22</i>	Display the current alarm status.
<b>TOT [1–255   ON   OFF]</b> <i>Details page 23</i>	Set or display the time-out timer status and the timer delay in milliseconds.
<b>TX [xxx.xxx]</b> <i>Details page 23</i>	Set or display the transmit frequency.

## 4.4 Detailed Command Descriptions

The only essential commands for most applications are transmit frequency (**TX xxx.xxx**), receive frequency (**RX xxx.xxx**), and network address (**ADDR xxx**). However, proper use of the additional commands allows you to tailor the transceiver for a specific use or conduct basic diagnostics on the radio. This section gives more detailed information for the user commands previously listed in [Table 6](#).

In many cases, the commands shown here can be used in two ways. First, you can type *only* the command name to view the currently programmed data. Secondly, you can set or change the existing data by typing the command, followed by a space, and then the desired entry. In the list below, allowable data values, if any, are shown in brackets following the command name. The separator symbol (|) indicates that you can enter *one* of the values in the list.

### **ADDR [NONE | 1–255]**

The **ADDR** command displays or sets the network address of the radio. In order for all the radios in a network to communicate, their network addresses must be identical, or set to **NONE**. (The radio is shipped from the factory with **ADDR** set to **NONE**.)

### **AMASK [0000 0000–FFFF FFFF]**

The **AMASK** (alarm mask) command displays or sets which events cause the alarm output signal to be active. Normally, the mask is **FFFF FFFF**, meaning that any of the 32 possible events activate the alarm output signal. No special configuration is required for typical applications.

Entering the **AMASK** command alone displays the current setting of alarm events in hexadecimal format.

Entering the **AMASK** command followed by an eight-digit hexadecimal number reprograms the specified events to trigger an alarm.

Each bit that is a '1' identifies an associated alarm condition that can trigger the alarm output status line. Each bit that is a '0' treats the associated alarm as irrelevant when deciding whether or not to assert the alarm output status line.

Thus, an eight-digit hexadecimal number can classify up to 32 events as alarm triggers for the alarm output status line. See [Table 7 on Page 25](#) for a list of the event codes and their hex values. The hex value of the mask is simply the sum of the hex values of the event codes corresponding to the alarm triggering events.

### **BAUD [xxxxx abc]**

This command sets (or displays) the communication attributes for the DATA INTERFACE port.

The first parameter (**xxxxx**) is baud rate. Baud rate is specified in bits-per-second (bps) and must be one of the following speeds: 1200, 2400, 4800, 9600, or 19200.

The second parameter of the **BAUD** command (**abc**) is a three-character block indicating how the data is formatted:

- a** = Data bits (7 or 8)
- b** = Parity (N for None, O for Odd, E for Even)
- c** = Stop bits (1 or 2)

The factory default setting is 9600 baud, 8 data bits, no parity, 1 start bit, and 1 stop bit (Example: **9600 8N1**).

---

**NOTE:** 7N1, 8O2, and 8E2 are invalid communication settings and are not supported by the transceiver.

---

### **CTS [0–255]**

The **CTS** (clear-to-send) command sets or displays the timer value associated with the CTS line response. The command parameter ranges from 0 to 255 milliseconds.

For DCE operation (see **DEVICE** command), the timer specifies how long to wait after the RTS line goes high, before the radio asserts CTS. A **CTS** value of zero asserts the CTS line immediately after the RTS line goes high.

For CTS Key operation (see **DEVICE** command), the timer specifies how long to wait after asserting the CTS, before data becomes available. A timer value of zero means that data is available as soon as received

### **CTSHOLD [0–60000]**

For CTS Key operation (see **DEVICE** command), the **CTSHOLD** command sets or displays the timer value associated with the end of a CTS line response. The timer value specifies the length of time that CTS remains active following the last byte from the RXD pin of the DATA INTERFACE port. The time is in milliseconds. The default value is 0, which means that CTS drops immediately after the last byte.

For DCE operation (see **DEVICE** command), this command has no effect. The response **CTSHOLD n/a** is displayed.

## **DEVICE [DCE | CTS KEY]**

The **DEVICE** command sets or displays the device behavior of the radio. The command parameter is either **DCE** or **CTS KEY**.

The default selection is **DCE**. In this mode, **CTS** goes high following **RTS**, subject to the **CTS** programmable delay time. Hardware flow control is implemented by signaling the **CTS** line if data arrives faster than it can be buffered and transmitted. The transceiver does not require an **RTS/CTS** handshake. Data is transmitted whenever there is data to send.

If **CTS KEY** is selected, the **CTS** line transforms to a Receive Data indicator (with programmable delays) in order to provide a control line for use by other devices. The **RTS** line is ignored. **CTS** is asserted immediately following the receipt of RF data, but data is not sent out the **DATA INTERFACE** port until the **CTS** programmable delay time has expired. (See **CTSHOLD** description for the delay available following the data.)

A typical use of **CTSKEY** is to provide a keyline (or **RTS** signal) for a half-duplex modem or other radio.

## **DKEY**

This command deactivates the transmitter after it has been keyed with the **KEY** command.

---

**NOTE:** The **DKEY** and **KEY** commands are *not* intended for normal operation. They are tools for field testing and installation.

---

## **INIT**

The **INIT** command is used to re-initialize the radio's operating parameters to the factory defaults. This may be helpful when trying to resolve configuration problems that may have resulted from the entry of one or more improper command settings. Entry of this command allows you to get back to a known working state. The following changes to the radio are made when **INIT** is entered:

- **AMASK** is set to **FFFF FFFF**
- **BAUD** is set to 9600 baud, 8 data bits, no parity, and 1 stop bit (**9600 8N1**)
- **CTS** is set to **0**
- **CTSHOLD** is set to **0**
- **DEVICE** is set to **DCE**

- **PWR** is set to **H** [+33 dBm (2 watts)]
- **RXTOT** is set to **NONE**
- **TOT** is set to **OFF**

All other commands stay at their previously established settings.

## KEY

This command activates the transmitter. The transmitter stays keyed until either the **DKEY** command is entered, or the transmitter time-out timer is enabled and times out. See also the **DKEY** and **TOT** commands.

---

**NOTE:** The **KEY** and **DKEY** commands are *not* intended for normal operation. They are tools for field testing and installation.

---

## OWM [XXX...]

This is a command to display or set an owner's message. To program the owner's message, type **OWM** then the message, followed by **ENTER**. The maximum number of characters that can be entered is 30.

To display the owner's message, type **OWM** then **ENTER**. The owner's message appears on the display.

## OWN [XXX...]

This is a command to display or set an owner's name. To program the owner's name, type **OWN** then the name, followed by **ENTER**. The maximum number of characters that can be entered is 30.

To display the owner's name, type **OWN** then **ENTER**. The owner's name appears on the display.

## PWR [L | M | H]

---

**NOTE:** This function may not be available, depending on certification requirements for a particular region.

---

This command displays or sets the desired RF forward output power setting of the radio. The **PWR** command parameter is specified as **L** (low), **M** (medium), or **H** (high). The default setting is **H**. The values of **L**, **M**, and **H** are:

**L** = 20 dBm (100 mW)

**M** = 30 dBm (1 W)

**H** = 33 dBm (2 W)

## **RSSI and RSSI!**

These commands continuously display the radio's Received Signal Strength Indication (RSSI) in dBm units. Incoming signal strengths from -50 dBm to -120 dBm are displayed.

The **RSSI** command causes display of received signal strength, updated once every second. Press **ENTER** to terminate the display.

The **RSSI!** command displays a one-time reading of the RSSI at the diagnostic port.

## **RX [xxx.xxx]**

This command sets or displays the radio's receive frequency in MHz. The frequency must be an integer multiple of the step size and must be in the valid range. If the entered frequency is invalid, the terminal interface displays the message **INCORRECT ENTRY**.

---

**NOTE:** The frequency must be in the valid range for the sub-band purchased, and may not be programmed "between" channels.

---

## **RXTOT [NONE | 1-255]**

The **RXTOT** command sets or displays the receive time-out timer value in minutes. This timer triggers an alarm (event 12) if data is not detected within the specified time.

Entering the **RXTOT** command without a parameter displays the timer value in minutes. Entering the **RXTOT** command with a parameter ranging from 1 to 255 resets the timer in minutes. Entering the **RXTOT** command with the parameter **NONE** disables the timer.

## **SER**

This command displays the radio's serial number as recorded at the factory.

## **SREV**

This command displays the software revision level of the transceiver firmware.

## **STAT**

This command displays the current alarm status of the transceiver.

If no alarms exist, the message **NO ALARMS PRESENT** appears at the top of the terminal display.

If an alarm does exist, a two-digit code (00–31) is displayed and the alarm is identified as **MAJOR** or **MINOR**. A brief description of the alarm code is also given. Detailed descriptions of event codes are provided in Table 7 on Page 25.

If more than one alarm exists, the word **MORE** appears at the bottom of the screen and additional alarms are viewed by pressing the **ENTER** key. Alarms are displayed in ascending order, major alarms before minor ones.

### **TOT [1–255 | ON | OFF]**

This command sets or displays the transmitter time-out timer value (1–255 seconds), as well as the timer status (**ON** or **OFF**). The command parameter can be either the timer value or the status, but not both. The parameter **ON** enables the timer; **OFF** disables the timer.

If the timer is on, and the radio remains keyed for a longer duration than the **TOT** value, the transmitter is automatically unkeyed. When this happens, the radio must be commanded back to an unkeyed state before a new keying command is accepted.

By default the timer is **ON** and set to 30 seconds.

### **TX [xxx.xxx]**

This command sets or displays the radio's transmit frequency in MHz. The frequency must be an integer multiple of the step size and must be in the valid range. If the entered frequency is invalid, the terminal interface displays the message **INCORRECT ENTRY**.

---

**NOTE:** The frequency must be in the valid range for the sub-band purchased, and may not be programmed “between” channels.

---

## 5.0 TROUBLESHOOTING

Successful troubleshooting of the radio system is not difficult, but it requires a logical approach. It is best to begin troubleshooting at the master station, as the rest of the system depends on the master for polling commands. If the master station has problems, the operation of the entire network can be compromised.

It is good practice to start by checking the simple things. For proper operation, all radios in the network must meet these basic requirements:

- Adequate and stable primary power.
- Secure connections (RF, data, and power).
- An efficient and properly aligned antenna system with a good received signal strength (at least  $-90$  dBm). It is possible for a system to operate with weaker signals, but reliability may be degraded.
- Proper programming of the transceiver's operating parameters (see *Section 4.0, TRANSCIVER PROGRAMMING*).
- The correct interface between the transceiver and the connected data equipment (correct cable wiring, proper data format, timing, etc.).

### 5.1 LED Indicators

The LED status indicators are an important troubleshooting tool and should be checked whenever a problem is suspected. Table 5 on Page 13 describes the function of each status LED.

### 5.2 Event Codes

When an alarm condition exists, the transceiver creates a code that can be read on a terminal connected to the DATA INTERFACE port. These codes can be very helpful in resolving many system difficulties. Table 7 lists the definitions of the event codes.

#### Checking for Alarms—*STAT* command

To check for alarms, enter **STAT** on the terminal interface. If no alarms exist, the message **NO ALARMS PRESENT** appears at the top of the display.

If an alarm does exist, the **STAT** command displays a two-digit alarm code (00–31) and the event is identified as a Major or Minor Alarm. A brief description of the alarm is also given.

If more than one alarm exists, the word **MORE** appears at the bottom of the screen. To view additional alarms, press **[ENTER]**.



## Major Alarms vs. Minor Alarms

**Major Alarms**—report serious conditions that generally indicate a hardware failure, or other abnormal conditions that prevent (or seriously degrade) further operation of the transceiver. Major alarms generally indicate the need for factory repair. Contact MDS for further assistance.

**Minor Alarms**—report conditions that, under most circumstances do not prevent transceiver operation. These include out-of-tolerance conditions, baud rate mismatches, etc. The cause of these alarms should be investigated and corrected to prevent possible system failure.

## Event Code Definitions

Table 7 contains a listing of the event codes that may be reported by the transceiver.

**Table 7. Event Codes**

Event Code	Hex Value	Event Class	Description	STATUS Message
00	0000 0000	--	No alarms present.	No Alarms Present
1–3	--	--	Not used.	--
04	0800 0000	Major	One or both of the internal programmable synthesizer loops is reporting an out-of-lock condition.	Synthesizer Out-of-Lock
5–7	--	--	Not used.	--
08	0080 0000	Major	The system is reporting that it has not been calibrated. Factory calibration is required for proper radio operation.	Radio Not Calibrated
09	--	--	Not used.	--
10	0020 0000	Major	The internal microcontroller was unable to properly program the system to the appropriate EEPROM defaults. A hardware problem may exist.	EEPROM Write Failure
11	--	--	Not used.	--
12	0008 0000	Major	Receiver time-out. No data received within the specified receiver time-out time.	Receiver time-out
13	0004 0000	Major	Transmitter time-out. The radio was keyed for a duration exceeding the time-out timer setting. (This alarm clears the next time the radio keys.)	Transmitter time-out
14–16	--	--	Not used.	--
17	0000 4000	Minor	A data parity fault has been detected on the DATA INTERFACE connector. This usually indicates a parity setting mismatch between the radio and the RTU.	Data Parity Error
18	0000 2000	Minor	A data framing error has been detected on the DATA INTERFACE connector. This may indicate a baud rate mismatch between the radio and the RTU.	Data Framing Error
19–30	--	--	Not used.	--

## 6.0 TECHNICAL REFERENCE

### 6.1 OEM Series™ Transceiver Specifications

#### MODELS

---

MDS OEM Series™ 200:	Licensed 200 MHz Transceiver
MDS OEM Series™ 400:	Licensed 400 MHz Transceiver

#### RADIO TYPE

---

Synthesized, half duplex, 12.5 kHz channel spacing, split frequency, or simplex

#### ENVIRONMENTAL

---

Temperature Range:	-30 to +60 degrees C
Humidity:	0 to 95% at 40 degrees C
Board Dimensions:	4.53" W x 0.75" H x 3.73" D 11.51 cm W x 1.90 cm H x 9.47 cm D
Enclosed Dimensions:	6.5" W x 1.75" H x 5.00" D 16.51 cm W x 4.45 cm H x 12.70 cm D
Weight:	(Board version) 4.5 oz. (0.13 kg) (Enclosed version) 1 lb. (0.45 kg)
RF Connector:	BNC
Enclosure Type (if furnished):	Aluminum

#### TRANSMITTER

---

Frequency Ranges (200 MHz):	220 to 240 MHz
Frequency Ranges (400 MHz):	330 to 355 MHz 355 to 380 MHz 380 to 400 MHz 400 to 420 MHz 420 to 450 MHz 450 to 480 MHz 480 to 512 MHz 406 to 430 MHz (Canadian Plan)
Frequency Increments:	6.25 kHz (Standard) 5 kHz (Special)
Modulation Type:	4 level CPFSK
Carrier Power:	100 mW, 1 W, 2 W programmable (+20 DBM, +30 dBM, +33 dBM)
Duty Cycle:	50% (100% with additional heatsinking)
Output Impedance:	50 ohms
Frequency Stability:	1.5 ppm, -30 to +60 degrees C
Channel Spacing:	12.5 kHz
Spurious and Harmonics:	-65 dBc
Time-out Timer:	1 to 255 seconds
Transmitter Keying:	On data
Key-up Time:	2 ms

## RECEIVER

---

Type:	Double conversion superheterodyne (84 MHz and 450 MHz IF)
Frequency Ranges (200 MHz):	220 to 240 MHz
Frequency Ranges (400 MHz):	330 to 355 MHz 355 to 380 MHz 380 to 400 MHz 400 to 420 MHz 420 to 450 MHz 450 to 480 MHz 480 to 512 MHz 406 to 430 MHz (Canadian Plan)
Frequency Increments:	6.25 kHz (Standard) 5 kHz (Special)
Frequency Stability:	1.5 ppm, -30 to +60 degrees C
Spurious and Image Rejection:	-70 dB
Sensitivity:	12 dB Sinad @ -116 dBm
Data Performance:	$1 \times 10^{-6}$ @ -108 dBm
Intermodulation Rejection:	-70 dB minimum
Selectivity:	60 dB typical at adjacent channel (EIA)
Bandwidth:	12.5 kHz

## DATA INTERFACE

---

RS-232 through DB-25 Connector	
Baud Rates at Interface Port:	1200, 2400, 4800, 9600, and 19200* bps
Over-the-Air Data Rate:	9600 bps 4800 bps (ETSI)
Data Latency:	< 20 ms typical

## DIAGNOSTICS

---

Self Test:	Yes
Local RS-232 RSSI and Setup:	Yes
4 LED Display:	PWR, DCD, TXD, and RXD

## PRIMARY POWER

---

Voltage:	10 to 30 Vdc through a 5.5 mm pin plug or 2-pin MDS connector
RX Current at 13.8 Vdc (typical):	75 mA
TX Current at 13.8 Vdc (typical):	575 mA @ high power (2W) 435 mA @ medium power (1W) 260 mA @ low power (100 mW)
TX Current at 24 Vdc (typical):	325 mA @ high power (2W) 250 mA @ medium power (1W) 150 mA @ low power (100 mW)
:Circuit Protection:	2 amp fuse, surface mount
Reverse Polarity Protection:	Diode across primary input

\* At 19200 bps, the radio operates in a buffered mode, storing 50 characters at a time.

## 6.2 Bench Testing Setup

Figure 13 shows a sample test setup that can be used to verify the basic operation of transceivers in a shop setting. The test can be performed with any number of remote radios by using a power divider with the required number of output connections.

The RTU simulator (MDS Part No. 03-2094A01) is a microcontroller that emulates a remote terminal unit operating at 1200, 2400, 4800, or 9600 bps. Custom software is supplied with the RTU simulator that allows continuous polling of remote radios using an IBM-compatible personal computer. The software reports the number of polls sent, polls received, and the number of errors detected.

**NOTE:** It is very important to use attenuation between all units in the test setup. The amount of attenuation required depends on the number of units being tested and the desired signal strength (RSSI) at each transceiver during the test.

A maximum level of -50 dBm is recommended at each transceiver, because the radio's RSSI reporting will not be accurate above this level. In no case should a signal stronger than +10 dBm be applied to any transceiver in the test setup, or damage may result.


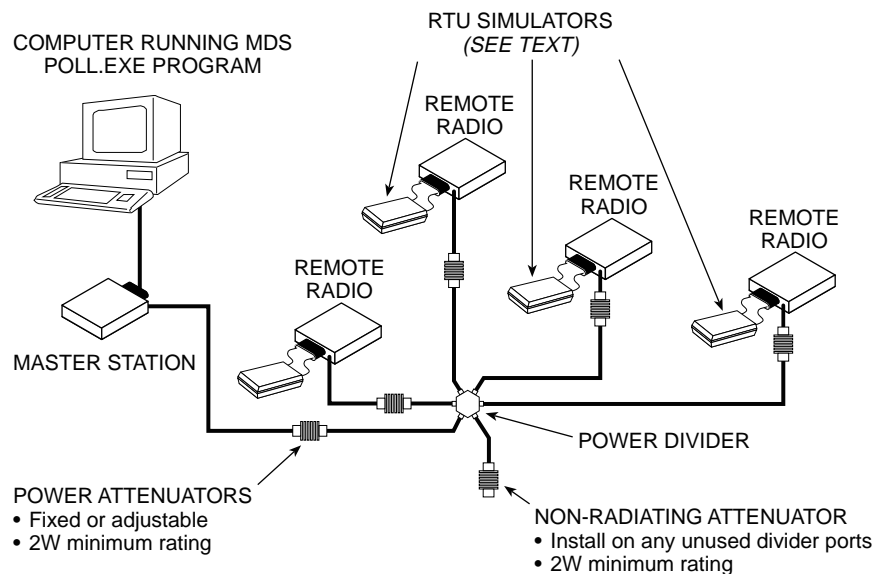


Figure 13. Typical setup for bench testing of radios

## 6.3 Helical Filter Adjustment

If the operating frequency of the radio is changed more than 5 MHz, the helical filters should be adjusted for maximum received signal strength (RSSI). If adjustment is required, follow these steps:

1. For enclosed units, remove the top cover from the transceiver by loosening the eight screws and lifting straight up.
2. Carefully remove the shield cover from the PC board.
3. Locate the helical filters. See Figure 14.
4. Apply a steady signal to the radio at the programmed receive frequency ( $-80$  dBm level recommended; no stronger than  $-60$  dBm). This can be done with a signal generator or an over-the-air signal.
5. Measure the radio's RSSI using a terminal interface. See *Section 4.0, TRANSCEIVER PROGRAMMING* on Page 14.
6. With a non-metallic tool, carefully adjust each section of the helical filter for maximum RSSI. Re-install the cover to the transceiver.

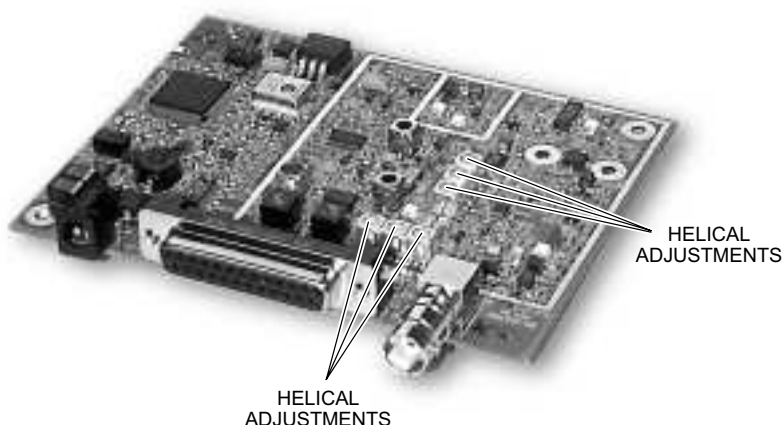

**Figure 14. Helical Filter Location  
(Shield cover removed)**

## 6.4 Upgrading the Radio's Software

From time to time, new product features or software maintenance files become available from MDS. This section describes the steps necessary to install new software into the transceiver using a PC connected to the radio's DATA INTERFACE port.

When software upgrades become available, they can be obtained on the MDS Web site at [www.microwavedata.com](http://www.microwavedata.com), or you can contact MDS to request radio software.

---


**NOTE:** Software upgrades are distributed as ASCII files with a ".S28" extension. These files use the Motorola S-record format.

---

## Using Radio Configuration Software

If you already have software that you wish to download into the transceiver, Radio Configuration Software (MDS P/N 03-3649A01) may be used to perform the installation. (This software is referred to as “EL705” on the InSite 6.4 or higher CD.) To use this method, proceed as follows:

1. Connect a PC to the radio’s DATA INTERFACE port via a DB-9 to DB-25 adapter (MDS P/N 01-3683A01 or equivalent). If desired, an adapter cable may be constructed from scratch using the wiring diagram shown in Figure 15.

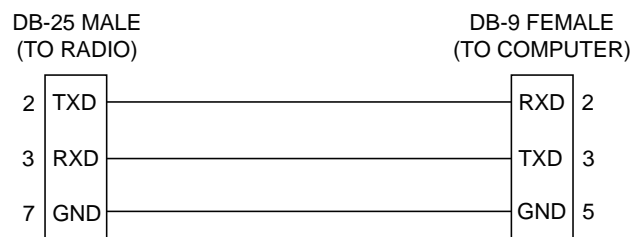

**Figure 15. DB-25 to DB-9 Adapter Cable**

2. Run the Radio Configuration software. (Click on the opening screen or press a key to activate the program.)
3. Under the **SYSTEM** menu, select **RADIO SOFTWARE UPGRADE**. Follow the prompts and online instructions to locate the desired software and complete the upgrade. The radio’s PWR LED flashes rapidly to confirm that a download is in progress. The download takes about two minutes.

---

**NOTE:** If a software download fails, the radio is left unprogrammed and inoperative. This is indicated by the PWR LED flashing slowly (1 second on, 1 second off). This condition is only likely if a power failure occurred to the computer or radio during the downloading process. The download can be attempted again when the fault has been corrected.

---

## 6.5 dBm-Watts-Volts Conversion Chart

Table 8 is provided as a convenience for determining the equivalent wattage or voltage of an RF power expressed in dBm.

**Table 8. dBm-Watts-Volts Conversion—for 50 Ohm Systems**

dBm	V	Po	dBm	V	Po	dBm	mV	Po	dBm	µV	Po
+53	100.0	200W	0	.225	1.0mW	-49	0.80		-98	2.9	
+50	70.7	100W	-1	.200	.80mW	-50	0.71	.01µW	-99	2.51	
+49	64.0	80W	-2	.180	.64mW	-51	0.64		-100	2.25	.1pW
+48	58.0	64W	-3	.160	.50mW	-52	0.57		-101	2.0	
+47	50.0	50W	-4	.141	.40mW	-53	0.50		-102	1.8	
+46	44.5	40W	-5	.125	.32mW	-54	0.45		-103	1.6	
+45	40.0	32W	-6	.115	.25mW	-55	0.40		-104	1.41	
+44	32.5	25W	-7	.100	.20mW	-56	0.351		-105	1.27	
+43	32.0	20W	-8	.090	.16mW	-57	0.32		-106	1.18	
+42	28.0	16W	-9	.080	.125mW	-58	0.286				
+41	26.2	12.5W	-10	.071	.10mW	-59	0.251				
+40	22.5	10W	-11	.064		-60	0.225	.001µW	dBm	nV	Po
+39	20.0	8W	-12	.058		-61	0.200		-107	1000	
+38	18.0	6.4W	-13	.050		-62	0.180		-108	900	
+37	16.0	5W	-14	.045		-63	0.160		-109	800	
+36	14.1	4W	-15	.040		-64	0.141		-110	710	.01pW
+35	12.5	3.2W	-16	.0355					-111	640	
+34	11.5	2.5W				dBm	µV	Po	-112	580	
+33	10.0	2W	dBm	mV	Po	-65	128		-113	500	
+32	9.0	1.6W	-17	31.5		-66	115		-114	450	
+31	8.0	1.25W	-18	28.5		-67	100		-115	400	
+30	7.10	1.0W	-19	25.1		-68	90		-116	355	
+29	6.40	800mW	-20	22.5	.01mW	-69	80		-117	325	
+28	5.80	640mW	-21	20.0		-70	71	.1nW	-118	285	
+27	5.00	500mW	-22	17.9		-71	65		-119	251	
+26	4.45	400mW	-23	15.9		-72	58		-120	225	.001pW
+25	4.00	320mW	-24	14.1		-73	50		-121	200	
+24	3.55	250mW	-25	12.8		-74	45		-122	180	
+23	3.20	200mW	-26	11.5		-75	40		-123	160	
+22	2.80	160mW	-27	10.0		-76	35		-124	141	
+21	2.52	125mW	-28	8.9		-77	32		-125	128	
+20	2.25	100mW	-29	8.0		-78	29		-126	117	
+19	2.00	80mW	-30	7.1	.001mW	-79	25		-127	100	
+18	1.80	64mW	-31	6.25		-80	22.5	.01nW	-128	90	
+17	1.60	50mW	-32	5.8		-81	20.0		-129	80	.1fW
+16	1.41	40mW	-33	5.0		-82	18.0		-130	71	
+15	1.25	32mW	-34	4.5		-83	16.0		-131	61	
+14	1.15	25mW	-35	4.0		-84	11.1		-132	58	
+13	1.00	20mW	-36	3.5		-85	12.9		-133	50	
+12	.90	16mW	-37	3.2		-86	11.5		-134	45	
+11	.80	12.5mW	-38	2.85		-87	10.0		-135	40	
+10	.71	10mW	-39	2.5		-88	9.0		-136	35	
+9	.64	8mW	-40	2.25	.1µW	-89	8.0		-137	33	
+8	.58	6.4mW	-41	2.0		-90	7.1	.001nW	-138	29	
+7	.500	5mW	-42	1.8		-91	6.1		-139	25	
+6	.445	4mW	-43	1.6		-92	5.75		-140	23	.01fW
+5	.400	3.2mW	-44	1.4		-93	5.0				
+4	.355	2.5mW	-45	1.25		-94	4.5				
+3	.320	2.0mW	-46	1.18		-95	4.0				
+2	.280	1.6mW	-47	1.00		-96	3.51				
+1	.252	1.25mW	-48	0.90		-97	3.2				

## 7.0 GLOSSARY OF TERMS

If you are new to digital radio systems, some of the terms used in this guide may be unfamiliar. The following glossary explains many of these terms and is helpful in understanding the operation of the transceiver.

**Antenna System Gain**—A figure, normally expressed in dB, representing the power increase resulting from the use of a gain-type antenna. System losses (from the feedline and coaxial connectors, for example) are subtracted from this figure to calculate the total antenna system gain.

**Bit**—The smallest unit of digital data, often represented by a one or a zero. Eight bits (plus start, stop, and parity bits) usually comprise a byte.

**Bits-per-second**—See *BPS*.

**BPS**—Bits-per-second. A measure of the information transfer rate of digital data across a communication channel.

**Byte**—A string of digital data usually made up of eight data bits and start, stop and parity bits.

**Data Circuit-terminating Equipment**—See *DCE*.

**Data Communications Equipment**—See *DCE*.

**Data Terminal Equipment**—See *DTE*.

**dBi**—Decibels referenced to an “ideal” isotropic radiator in free space. Frequently used to express antenna gain.

**dBm**—Decibels referenced to one milliwatt. An absolute unit used to measure signal power, as in transmitter power output, or received signal strength.

**DCE**—Data Circuit-terminating Equipment (or Data Communications Equipment). In data communications terminology, this is the “modem” side of a computer-to-modem connection. The MDS OEM Series™ is a DCE device.

**Decibel (dB)**—A measure computed from the ratio between two signal levels. Frequently used to express the gain (or loss) of a system.

**DTE**—Data Terminal Equipment. A device that provides data in the form of digital signals at its output. Connects to the DCE device.

**ETSI**—European Telecommunications Standards Institute. A non-profit group that produces and approves standards for use throughout Europe and other locations pertaining to communications equipment and systems.



**Fade Margin**—The greatest tolerable reduction in average received signal strength that is anticipated under most conditions. Provides an allowance for reduced signal strength due to multipath, slight antenna movement, or changing atmospheric losses. A fade margin of 20 is usually sufficient in most systems.

**Hardware Flow Control**—A transceiver feature used to prevent data buffer overruns when handling high-speed data from the RTU or PLC. When the buffer approaches overflow, the radio drops the clear-to-send (CTS) line, which instructs the RTU or PLC to delay further transmission until CTS again returns to the high state.

**Host Computer**—The computer installed at the master station site, which controls the collection of data from one or more remote sites.

**Latency**—The delay (usually expressed in milliseconds) between when data is applied to TXD (Pin 2) at one radio, until it appears at RXD (Pin 3) at the other radio.

**MAS**—Multiple Address System. A radio system where a central master station communicates with several remote stations for the purpose of gathering telemetry data.

**Master (Station)**—Radio which is connected to the host computer. It is the point at which polling enters the network.

**Multiple Address System**—See *MAS*.

**PLC**—Programmable Logic Controller. A dedicated microprocessor configured for a specific application with discrete inputs and outputs. It can serve as a host or as an RTU.

**Point-to-Multipoint System**—A radio communications network or system designed with a central control station that exchanges data with a number of remote locations equipped with terminal equipment.

**Poll**—A request for data issued from the host computer (or master PLC) to a remote radio.

**Programmable Logic Controller**—See *PLC*.

**Received Signal Strength Indication**—See *RSSI*.

**Redundant Operation**—A station arrangement where *two* transceivers and two power supplies are available for operation, with automatic switchover in case of a failure.

**Remote (Station)**—A radio in a network that communicates with an associated master station.

**Remote Terminal Unit**—See *RTU*.

**RSSI**—Received Signal Strength Indication. A measure, in dBm, of the strength of the signal received by a radio from an antenna. The radio must be properly calibrated for the RSSI value to be meaningful.

**RTU**—Remote Terminal Unit. A data collection device installed at a remote radio site.

**SCADA**—Supervisory Control And Data Acquisition. An overall term for the functions commonly provided through an MAS radio system.

**Supervisory Control And Data Acquisition**—See *SCADA*.

---

# INDEX

---

## A

ACCESS DENIED error message 17  
 Accessories 5  
 Accessory power adapter 5  
 Accessory Power pinout (Pin 18) 12  
 Adapters  
   accessory power adapter 5  
   DB-9 to DB-25 5  
   PC programming adapter kit 5  
 Alarms  
   alarm code definitions 25  
   major vs. minor 25  
   pinout (Pin 25) 12  
   using STAT command to display 22  
 AMASK command 18  
 Antenna  
   installation 6  
   RSSI command used to refine heading 13  
   system gain, defined 32  
   Yagi, illustrated 9  
 Applications 2  
   Multiple Address Systems (MAS) 2  
   point-to-multipoint system 2  
   point-to-point system 3  
 Auto-Open, pinout (Pin 23) 12

## B

BAUD command 19  
 Bench testing (radio performance) 28  
 Bit, defined 32  
 Bits-per-second. See BPS  
 BPS (bits-per-second), defined 32  
 Byte, defined 32

## C

Cable, loss due to length of coaxial 10  
 COMMAND FAILED error message 16  
 Command summary, table 17  
 Commands  
   AMASK (set/display alarm triggers) 18  
   BAUD (set/display rate, encoding) 19  
   CTS (set/display CTS line response timer) 19  
   descriptions 18  
   DEVICE (set/display radio behavior) 20  
   DKEY (deactivate transmitter after KEY command) 20  
   entering on terminal interface 16  
   INIT (reinitialize radio to factory defaults) 20  
   KEY (activate transmitter) 21  
   OWM (set/display owner's message) 21  
   OWN (set/display owner's name) 21  
   PWR (set/display RF forward output power) 21  
   RSSI (display RSSI) 22  
   RX (set/display receive frequency) 22  
   RXTOT (set/display receive time-out timer value) 22

SER (display radio serial number) 22  
 SREV (display software revision level) 22  
 STAT (display current alarm status) 22  
 terminal interface 16  
 TOT (set/display time-out value and timer status) 23  
 TX (set/display transmit frequency) 23  
 Connections to radio, illustrated 6  
 Conversions, dBm-Watts-Volts 31  
 CTS command 19  
 CTS pinout (Pin 5) 11

## D

Data interface  
   connector pinouts 11  
   installing connection 11  
   specifications 27  
 dB. See Decibel 32  
 DB-9 to DB-25 adapter 5  
   illustrated 16, 30  
 dBi, defined 32  
 dBm, defined 32  
 DCD  
   pinout (Pin 8) 12  
 DCD LED  
   description 13  
 DCE (Data Circuit-terminating Equipment), defined 32  
 Decibel (dB), defined 32  
 Description, product 1  
 DEVICE command 20  
 Diagnostic Channel Enable, pinout (Pin 23) 12  
 Diagnostics  
   interface specifications 27  
 Differences among models 1  
 Display  
   alarm status (STAT command) 22  
   alarm triggers (AMASK command) 18  
   baud rate and encoding (BAUD command) 19  
   CTS line response timer (CTS command) 19  
   owner's message (OWM command) 21  
   owner's name (OWN command) 21  
   radio behavior (DEVICE command) 20  
   radio serial number (SER command) 22  
   receive frequency (RX command) 22  
   receive time-out timer value (RXTOT command) 22  
   RF forward output power (PWR command) 21  
   RSSI (RSSI command) 22  
   software revision level (SREV command) 22  
   time-out value and timer status (TOT command) 23  
   transmit frequency (TX command) 23  
 DKEY command 20  
 Downloading new software 29  
 DSR pinout (Pin 6) 12  
 DTE (Data Terminal Equipment), defined 32

## E

- EEPROM FAILURE error message 17
- Enable/disable
  - diagnostic channel, pinout (Pin 23) 12
- Environment specifications 26
- Error messages 16
  - access denied 17
  - command failed 16
  - EEPROM failure 17
  - incorrect entry 16
  - not available 16
  - not programmed 16
  - text too long 16
  - unknown command 16

## F

- Fade margin, defined 33
- Feedlines 9
- Filter, helical, adjustment 28
- Frequency
  - adjusting helical filter when changed 28
  - setting. See TX and RX commands

## G

- Glossary 32
- Ground
  - protective (Pin 1) 11
  - signal (Pin 7) 12

## H

- Half-duplex 3
  - switched carrier operation 4
- Hand-Held Terminal (HHT) 5
- Hardware flow control, defined 33
- Helical filter
  - adjusting 28
  - locations, illustrated 29
- Host computer, defined 33

## I

- Illustrations
  - antenna, Yagi 9
  - board version 1
  - connections to radio 6
  - DB-25 to DB-9 adapter cable 16, 30
  - helical filter locations 29
  - MDS OEM Series™ model number codes 4
  - point-to-point link 3
  - terminal interface connected to transceiver 15
  - transceiver mounting dimensions, enclosed version 8
- INCORRECT ENTRY error message 16
- INIT command 20
- Installation 6–12
  - antenna 6
  - configuring transceiver 7
  - DATA INTERFACE connection 7
  - data interface connections 11
  - power 6
  - power connection 10

steps 6

## K

- KEY command 21
- Keying
  - on data (DKEY command) 20
  - switched carrier operation 4
  - switched carrier, defined 4

## L

- Latency, defined 33
- LEDs
  - DCD 13
  - indicators, described 13
  - PWR 13
  - RXD 13
  - RXD, Pin 3 11
  - status indicators, illustrated 13
  - TXD 13
  - TXD, Pin 2 11
- Loss. See Signal

## M

- MAS (Multiple Address System) 2
  - defined 33
- Master Station
  - defined 33
  - keying behavior 4
- Model number codes 4
  - MDS OEM Series™, illustrated 4
- Models
  - system specifications 26

## N

- NOT AVAILABLE error message 16
- NOT PROGRAMMED error message 16

## O

- Operation 13
  - environment, specifications for 26
- Output, 5.8 Vdc regulated, pinout (Pin 19) 12
- OWM command 21
- OWN command 21
- Owner's message, set/display. See OWM command
- Owner's name, set/display. See OWN command

## P

- PC Programming Adapter Kit 5
- Performance
  - testing 28
- Pinouts on data interface 11
- PLC (Programmable Logic Controller), defined 33
- Point-to-multipoint
  - defined 33
  - system 2
- Point-to-point
  - link, illustrated 3
  - system 3

Poll, defined 33

Power

- connection 10
- installing 6
- LED status indicator (PWR LED) 13
- RF, chart for converting dBm-Watts-Volts 31

Power attenuators, use of in testing 28

Power conservation 10

Primary power

- specifications 27

Procedures

- checking for alarms (STAT command) 24
- connecting terminal interface 14
- downloading new software 29
- entering commands using a terminal interface 16
- helical filter adjustment 28
- installation 6
- operation 13
- performance optimization 13
- reading LED status indicators 13
- troubleshooting 24

Product

- accessories 5
- description 1
- display radio serial number (SER command) 22
- model number codes 4

Programming, transceiver 14–17

PWR

- command 21

PWR LED

- description 13

## R

Radio

- configuration software 5, 29
- serial number, displaying (SER command) 22

Radio type

- system specifications 26

Receive Audio Output pinout (Pin 11) 12

Received signal strength indication *See* RSSI 34

Receiver

- specifications 27

Redundant operation, defined 33

Remote

- Station, defined 33

Resetting

- transceiver (INIT command) 20

Revision level

- display software (SREV command) 22

RSSI

- adjusting helical filter for increased signal strength 28
- command 22
- command, used to refine antenna heading 13
- defined 34

RTS pinout (Pin 4) 11

RTU (Remote Terminal Unit)

- defined 34

RTU simulator 5, 28

RX command 22

RXD LED

- description 13
- Pin 3 11

RXTOT command 22

## S

SCADA (Supervisory Control And Data Acquisition), defined 34

SER command 22

Set

- alarm triggers (AMASK command) 18
- receive time-out timer value (RXTOT command) 22

Signal

- ground (Pin 7) 12
- loss due to coaxial cable length, table 10

Simplex 3

- single-frequency operation 4
- special case of switched carrier operation 4

Software

- control from PC 29
- display revision level 22
- upgrades (.S28 files) 29
- upgrading 29

Specifications

- data interface 27
- diagnostics interface 27
- environment 26
- models 26
- primary power 27
- radio type 26
- receiver 27
- transceiver 26–27
- transmitter 26

SREV command 22

STAT command 22

Switched carrier operation 4

## T

Tables

- accessories 5
- alarm code definitions 25
- command summary 17
- conversions, dBm-Watts-Volts 31
- data interface connector pinouts 11
- LED status indicators 13
- length vs. loss in coaxial cables 10

Technical reference 26–31

- bench test setup 28

Terminal Interface

- connected to transceiver, illustrated 15
- connection and startup 14
- entering commands 16
- error messages displayed on 16
- keyboard commands 16

Testing. *See* bench testing

TEXT TOO LONG error message 16

Timer, set/display time-out value and status (TOT command) 23

TOT command 23

Transceiver

- applications 2
- board version, illustrated 1
- configuring for operation 7
- dimensions, mounting enclosed version, illustrated 8
- mounting 6
- mounting board version 8
- mounting enclosed version 8
- programming 14–17

- specifications 26–27
- upgrading software 29
- Transmitter
  - specifications 26
- Troubleshooting 24–25
  - connecting terminal interface for displaying alarm codes 14
  - STAT command (Status) 24
- TX command 23
- TXD LED
  - description 13
  - Pin 2 11

## **U**

- UNKNOWN COMMAND error message 16
- Upgrading software 29

## IN CASE OF DIFFICULTY...

---

MDS products are designed for long life and trouble-free operation. However, this equipment, as with all electronic equipment may have an occasional component failure. The following information will assist you in the event that servicing becomes necessary.

### FACTORY TECHNICAL ASSISTANCE

---

Technical assistance for MDS products is available from our Customer Support Team during business hours (8:00 A.M.–5:30 P.M. Eastern Time). When calling, please give the complete model number of the radio, along with a description of the trouble symptom(s) that you are experiencing. In many cases, problems can be resolved over the telephone, without the need for returning the unit to the factory.

Please use the following telephone numbers for product assistance:

716-242-9600 (Phone)

716-242-9620 (Fax)

### FACTORY REPAIRS

---

Component-level repair of radio equipment is *not* recommended in the field. Many components are installed using surface mount technology, which requires specialized training and equipment for proper servicing. For this reason, the equipment should be returned to the factory for any PC board repairs. The factory is best equipped to diagnose, repair and align your radio to its proper operating specifications.

If return of the equipment is necessary, you will be issued a Returned Material Authorization (RMA) number. The RMA number will help expedite the repair so that the equipment can be repaired and returned to you as quickly as possible. Please be sure to include the RMA number on the outside of the shipping box, and on any correspondence relating to the repair. *No equipment will be accepted for repair without an RMA number.*

A statement should accompany the radio describing, in detail, the trouble symptom(s), and a description of any associated equipment normally connected to the radio. It is also important to include the name and telephone number of a person in your organization who can be contacted if additional information is required.

The radio must be properly packed for return to the factory. The original shipping container and packaging materials should be used whenever possible. All factory returns should be addressed to:

Microwave Data Systems Inc.  
Customer Service Department  
(RMA No. XXXX)  
175 Science Parkway  
Rochester, NY 14620 USA

When repairs have been completed, the equipment will be returned to you by the same shipping method used to send it to the factory. Please specify if you wish to make different shipping arrangements.



**Microwave Data Systems Inc.**

175 Science Parkway, Rochester, New York 14620  
General Business: +1 (716) 242-9600  
FAX: +1 (716) 242-9620  
Web: [www.microwavedata.com](http://www.microwavedata.com)