EKI-6311GN

IEEE 802.11 b/g/n Wireless Access Point/Client Bridge

User Manual

Copyright

The documentation and the software included with this product are copyrighted 2010 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties, which may result from its use.

Acknowledgements

Intel and Pentium are trademarks of Intel Corporation.

Microsoft Windows and MS-DOS are registered trademarks of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

Product Warranty (2 years)

Advantech warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Advantech, or which have been subject to misuse, abuse, accident or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

- 1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used other hardware and software used, etc.) Note anything abnormal and list any onscreen messages you get when the problem occurs.
- 2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
- 3. If your product is diagnosed as defective, obtain an RMA (return merchandize authorization) number from your dealer. This allows us to process your return more quickly.
- 4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
- 5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. To avoid the possibility of exceeding radio frequency exposure limits, you shall beep a distance of at least 100cm between you and the antenna of the installed equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

Technical Support and Assistance

- Step 1. Visit the Advantech web site at www.advantech.com/support where you can find the latest information about the product.
- Step 2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Safety Instructions

- 1. Read these safety instructions carefully.
- 2. Keep this User's Manual for later reference.
- 3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
- 4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
- 5. Keep this equipment away from humidity.
- 6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
- 7. The openings on the enclosure are for air convection. Protect the equipment from overheating. DO NOT COVER THE OPENINGS.
- 8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
- 9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
- 10. All cautions and warnings on the equipment should be noted.
- 11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient over voltage.
- 12. Never pour any liquid into an opening. This may cause fire or electrical shock.
- 13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
- 14. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.

 - c. The equipment has been exposed to moisture.d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of breakage.
- 15. DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -40°C (-40°F) OR ABOVE 85°C (185°F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.

Safety Precaution - Static Electricity

Follow these simple precautions to protect yourself from harm and the products from damage.

- 1. To avoid electrical shock, always disconnect the power from your PC chassis before you work on it. Don't touch any components on the CPU card or other cards while the PC is on.
- 2. Disconnect power before making any configuration changes. The sudden rush of power as you connect a jumper or install a card may damage sensitive electronic components.

Contents

CHAPTER	R 1 OVERVIEW	4			
1.1	INTRODUCTION	Λ			
1.2	FEATURES				
1.3	SPECIFICATION				
1.4	PACKING LIST				
1.5	SAFETY PRECAUTION				
CHAPTER					
2.4					
2.1	PREPARATION BEFORE INSTALLATION				
2.2	Installation Precautions	_			
2.3	HARDWARE INSTALLATION	_			
2.4	POLE MOUNTING	13			
CHAPTER	R 3 BASIC SETTINGS	17			
3.1	FACTORY DEFAULT SETTINGS	17			
3.2	System Requirements	17			
3.3	HOW TO LOGIN THE WEB-BASED INTERFACE	18			
3.4	BASIC SYSTEM SETTINGS	19			
TIME SE	ETTINGS	22			
3.5	RADIUS SETTINGS	23			
3.6	FIREWALL SETTINGS	24			
3.7	BASIC WIRELESS SETTINGS	26			
3.8	SITE SURVEY	29			
VAP PR	ROFILE SETTINGS	29			
VLAN T	Гав	31			
CHAPTER	R 4 ADVANCED SETTINGS	33			
4.4	Assessed Manager Communication	22			
4.1	ADVANCED WIRELESS SETTINGS				
4.2	WIRELESS SECURITY SETTINGS.				
	a Encryption and Authentication Settings				
	ess Control				
WDS	S Settings	38			
CHAPTER	R 5 MANAGEMENT	40			
Rемоте	E MANAGEMENT	40			
5.1	SNMP Management	40			
Cont	figure SNMPv3 User Profile	41			
-	CHILLI SETTINGS	43			
	DE FIRMWARE				
	P/ RETRIEVE SETTINGS				
	, se factory Default Settings				
	Γ				
	ORD	_			
	CATE SETTINGS				
	ORING TOOLS	_			
	LOG				
	RVEY	_			
	/ATCH DOG				
	Date Rate Test				
	NA ALIGNMENT				
	TEST	_			
CHAPTER					
6.1	VIEW EKI-6311GN BASIC INFORMATION	54			

6.2 VIEW ASSOCIATION LIST	54	
VIEW NETWORK FLOW STATISTICS		
VIEW ARP TABLE	56	
VIEW BRIDGE TABLE	57	
VIEW ACTIVE DHCP CLIENT TABLE		
VIEW NETWORK ACTIVITIES		
	C4	
CHAPTER 7 TROUBLE SHOOTING		
APPENDIX A. ASCII	_	
	63	

Overview

Chapter 1 Overview

1.1 Introduction

EKI-6311GN is a feature rich wireless AP/ CPE which provides a reliable wireless connectivity for industrial environments. The PoE injector enhances flexibility in deployment of this AP/ CPE even where the DC power supply is hard to fulfill. As an 802.11n compliant device, EKI-6311GN provides 3 times higher data rates than legacy 802.11g devices. With the support of STP, WMM and IGMP snooping protocols, EKI-6311GN effectively improves the reliability of wireless connectivity, especially in applications that need high reliability and high throughput data transmission. To secure wireless connections, EKI-6311GN encrypts data through 64/128/152-bit WEP data encryption and also supports WPA2/WPA/802.1x for powerful security authentication.

1.2 Features

- Compliant with IEEE 802.11b/g and IEEE 802.11n
- Support Power-through-Ethernet which is supplied with 12V.
- IP55 waterproof certification
- Four operating modes including AP, Wireless Client, WDS and AP Repeater
- Support 64/128/152-bit WEP and 802.1X, WPA, WPA2, WPA&WPA2,WPA-PSK, WPA2-PSK, and WPA-PSK&WPA2-PSK etc
- User-friendly Web and SNMP-based management interface
- Embedded 8dBi directional antenna with external N-type connector for optional antenna
- Support distances up to 5Km
- Spanning Tree and IGMP snooping protocol support



Figure 1 EKI-6311GN

1.3 Specification

Standard Support

Wireless IEEE802.11b/g/n

• Ethernet IEEE802.3u MDI / MDIX 10/100 Fast Ethernet

LAN IEEE802.11b/g/n wireless LAN interface

Passive 12V PoE, max. Distance: 20 meters

Certifications

US FCC Part 15 Class B & C & E Europe ETSI 300 328, ETSI 301 489-1&17 EN 60950 compliant and CE Mark

Data Rates

802.11b 11, 5.5, 2, 1 Mbps, auto-fallback 802.11g 54, 48, 36, 24, 18, 12, 9, 6 Mbps, auto-fallback **802.11n:**

6M, 6.5M, 13M, 13.5M, 19.5M, 26M, 27M, 39M,40.5M, 53M, 54M, 58.5M, 65M, 78M, 81M, 104M,108M, 117M, 121.5M, 130M, 135M, 150Mbps

Physical Specifications

- Power DC 12Volt / 1.0A; AC Adapter 100V~240V
- **Dimensions (L x W x H)** 228 x 64 x 61 mm
- Weight 500g

Interface Operation Modes

- Access Point (AP)
- Customer Premise Equipment (CPE)

Antenna

- Antenna Configuration 1x1 (1 Tx, 1 Rx)
- Default embedded 8dBi directional antenna (Vertical-Polarity)
- Reserve N-type Connector (Plug) *Switchable by software
- Equipped N-to-RSMA adaptor and 5dBi dipole antenna for indoor AP application.

Other Features

- Telnet, FTP, SNMP, Password Changes, Firmware updates, Configuration Files
- Radio on/off, WMM/Regatta Mode, Output Power Control, Fragmentation Length, Beacon Interval
- RTS/CTS threshold, DTIM Interval

Modulation Techniques

- 802.11b DSSS (DBPSK, DQPSK, CCK)
- 802.11g OFDM, DSSS (BPSK, QPSK, 16-QAM, 64-QAM)
- **802.11n** OFDM (BPSK, QPSK, 16-QAM, 64-QAM)

Channel Support

- 802.11b/g/ gn HT20
 - o FCC: CH1 ~ CH11; ETSI: CH1 ~ CH13
- 802.11gn HT40
 - o FCC: CH3 ~ CH9; ETSI: CH3 ~ CH11

Wireless Transmission Rates

Transmitted Power

- o 802.11b: 26dBm
- o 802.11g: 26dBm @ 6Mbps, 24dBm @ 54Mbps
- o 802.11gn HT20: 26dBm @ MCS0, 22dBm@ MCS7
- o 802.11gn HT40: 26dBm @ MCS0, 21dBm@ MCS7

Receiver Sensitivity

- 802.11b Sensitivity -93dBm @ 1Mbps; -88dBm @ 11Mbps
- **802.11g Sensitivity** -89dBm @ 6Mbps; -73dBm @ 54Mbps
- 802.11n HT20 -88dBm @ MCS0; -70dBm @ MCS7
- 802.11n HT40 -84dBm @ MCS0; -67dBm @ MCS7

1.4 Packing List

The product package you have received should contain the following items. If any of them are not included or damaged, please contact your local vendor for support.

•	EKI-6311GN	x 1
•	Pole Mounting Ring	× 1
•	Power Cord & PoE Injector	× 1
•	Start up manual	× 1
•	User's manual CD	× 1
•	N-to-RSMA adaptor	× 1
•	RSMA Omni antenna	× 1

Pole Mounting Ring



Power Cord & PoE Injector



Start up manual & User's manual CD





N-to-RSMA adaptor



RSMA Omni Antenna



Figure 2 Accessories



• Users MUST use the "Power cord & PoE Injector" shipped in the box with the EKI-6311GN. Use of other options will cause damage to the EKI-6311GN.

1.5 Safety Precaution

Attention

IF DC voltage is supplied by other power injector, please check the voltage and use a protection device on the power supply input.

Installation

Chapter 2 Installation

This chapter describes safety precautions and product information you have to know and check before installing EKI-6311GN.

2.1 Preparation before Installation

Professional Installation Required

Please seek assistance from a professional installer who is well trained in the RF installation and knowledgeable in the local regulations.

Safety Precautions

- To keep you safe and install the hardware properly, please read and follow these safety precautions.
- If you are installing EKI-6311GN for the first time, for your safety as well as others', please seek
 assistance from a professional installer who has received safety training on the hazards
 involved.
- 3. Keep safety as well as performance in mind when selecting your installation site, especially where there are electric power and phone lines.
- 4. When installing EKI-6311GN, please note the following things:
 - Do not use a metal ladder;
 - Do not work on a wet or windy day;
 - Wear shoes with rubber soles and heels, rubber gloves, long sleeved shirt or jacket.
- 5. When the system is operational, avoid standing directly in front of it. Strong RF fields are present when the transmitter is on.

2.2 Installation Precautions


To keep the EKI-6311GN well while you are installing it, please read and follow these installation precautions.

- Users MUST use a proper and well-installed surge arrestor with the EKI-6311GN; otherwise, a random lightening could easily cause fatal damage to EKI-6311GN.
 - EMD (Lightning) DAMAGE IS NOT COVERED UNDER WARRNTY.
- Users MUST use the "Power cord & PoE Injector" shipped in the box with the EKI-6311GN. Use of other options will cause damage to the EKI-6311GN.
- Users MUST power off the EKI-6311GN first before connecting the external antenna to it. Do
 not switch from built-in antenna to the external antenna from WEB management without
 physically attaching the external antenna onto the EKI-6311GN; otherwise, damage might be
 caused to the EKI-6311GN itself.

2.3 Hardware Installation

Connect up

 The bottom of the EKI-6311GN is a movable cover. Grab the cover and pull it back harder to take it out as the figure shown below.

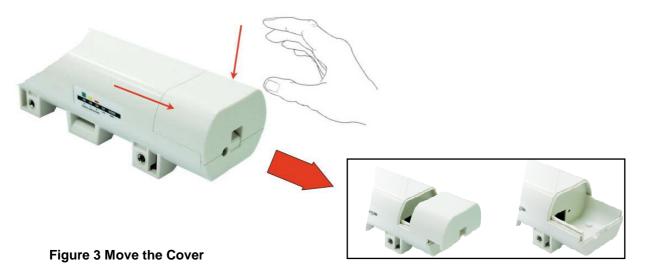

2. Plug a standard Ethernet cable into the RJ45 port.



Figure 4 Cable Connection

3. Slide the cover back to seal the bottom of the EKI-6311GN.



Figure 5 Seal the Bottom

4. Plug the power cord into the DC port of the PoE injector as the following right picture shows.





Figure 6 Connect to PoE Injector

 Plug the other side of the Ethernet cable as shown in Step 3 into the PoE port of the PoE injector and get the complete set ready.



Figure 7 Complete Set

2.4 Pole Mounting

Pole Mounting

Turn the EKI-6311GN over. Put the pole mounting ring through the middle hole of it. Note that you should unlock the pole mounting ring with a screw driver before putting it through EKI-6311GN as the following right picture shows.



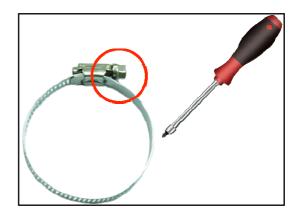


Figure 8 Pole Mounting - Step 1

2. Mount EKI-6311GN steadily to the pole by locking the pole mounting ring tightly.



Figure 9 Pole Mounting - Step 2

3. Now you have completed the hardware installation of EKI-6311GN.

Using the External Antenna

If you prefer to use the external antenna for your application instead of the built-in directional antenna, please follow the steps below.

 Grab the black rubber on the top of EKI-6311GN, and slightly pull it up. The metal N-type connector will appear.

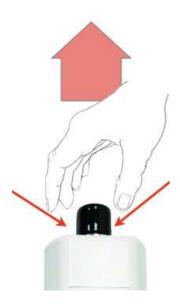


Figure 10 Move the Rubber

 Connect your antenna with the N-type to RSMA adaptor on the top of EKI-6311GN. The following picture shows the full set of EKI-6311GN:







Figure 12 Full set with antenna

Note:

- If you are going to use an external antenna on EKI-6311GN, get some cable in advance.
- Be aware of the force you use while connecting to the N-type connector, inappropriate force may damage the N-type connector!



A Warning:

 Users MUST power off the EKI-6311GN first before connecting the external antenna to it. Do not switch from built-in antenna to the external antenna from WEB management without physically attaching the external antenna onto the EKI-6311GN; otherwise, damage might be caused to the EKI-6311GN itself.

Basic Settings

Chapter 3 Basic Settings

3.1 Factory Default Settings

We'll elaborate the EKI-6311GN factory default settings. You can re-acquire these parameters by default. If necessary, please refer to the "Restore Factory Default Settings".

Table 1 EKI-6311GN Factory Default Settings

Features		Factory Default Settings	
Username		admin	
Password		password	
Wireless Device Name		apXXXXXX (X represents the last 6 digits of Ethernet MAC address)	
Operating Mode		AP	
Data Rate		Auto	
	IP Address	192.168.1.1	
	Subnet Mask	255.255.255.0	
LAN	Gateway	0.0.0.0	
	Primary DNS Server	0.0.0.0	
	Secondary DNS Server	0.0.0.0	
Spanning Tree		Enable	
802.11 Mode		802.11b/g/n	
Channel	Number	6	
SSID		Wireless	
Broadcast SSID		Enable	
HT Protect		Disable	
Data Rate		Auto	
Output Power		Full	
Channel Mode		20MHz	
WMM		Enabled	
RTS Threshold (byte)		2346	
Fragmentation Length (byte)		2346	
Beacon Interval		100	
DTIM Interval		1	
Space in Meter		0	
Flow Control by AP		Disable	
Security		Open System	
Encryption		None	
Wireless Separation		Disable	
Access Control		Disable	
	Enable/Disable	Enable	
SNMP	Read Community Name	Public	
SINIVIP	Write Community Name	Private	
	IP Address	0.0.0.0	

3.2 System Requirements

Before configuration, please make sure your system meets the following requirements:

A computer coupled with 10/ 100 Base-TX adapter;

- Configure the computer with a static IP address of 192.168.1.x, as the default IP address of EKI-6311GN is 192.168.1.1. (X cannot be 0, 1, nor 255);
- A Web browser on PC for configuration such as Microsoft Internet Explorer 6.0 or above,
 Netscape, Firefox or Google Chrome.

3.3 How to Login the Web-based Interface

The EKI-6311GN provides you with user-friendly Web-based management tool.

 Open Web browser and enter the IP address (Default: 192.168.1.1) of EKI-6311GN into the address field. You will see the login page as below.



Figure 13 Login Page

• Enter the username (Default: admin) and password (Default: password) respectively and click "Login" to login the main page of EKI-6311GN. As you can see, this management interface provides five main options in the black bar above, which are Status, System, Wireless, Management and Tools.



Figure 14 Main Page



 The username and password are case-sensitive, and the password should be no more than 19 characters!

3.4 Basic System Settings

For users who use the EKI-6311GN for the first time, it is recommended that you begin configuration from "Basic Settings" in "System" shown below:



Figure 15 Basic System Settings

Basic Settings

<u>Device Name</u>: Specify the device name, which is composed of no more than 15 characters with (0-9), (A-Z), (a-z) or (-).

<u>Network Mode</u>: Specify the network mode, including Bridge and Router. It is easy to configure parameters in Bridge Mode; however, users must pay extra attention to the way they configure the device when it is set to Router Mode. For details, please refer to **TCP/IP Settings**".

Ethernet Data Rate: Specify the transmission rate of data for Ethernet. Default is **Auto**. **Country Region**: The availability of some specific channels and/or operational frequency bands

is country dependent.

Spanning Tree: Spanning Tree Protocol (STP) is a link management protocol for AP which provides path redundancy while preventing loops in a network. STP allows only one active path at a time between the access points but establish the redundant link as a backup if the initial link fails.

STP Forward Delay: STP Forward Delay is the time spent in detecting and learning network tree topology state before entering the forward state. Default time value is 1 sec.

GPS Coordinate Settings

The GPS Coordinate Setting helps you mark the latitude and longitude of EKI-6311GN. Just enter the coordinates and click the **Apply** button.

TCP/IP Settings

Open "TCP/IP Settings" in "System" as below to configure the parameters for LAN which connects to the LAN port of the CPE. In this page, users may change the settings for IP Address, Subnet Mask, and DHCP Server.



Figure 16 IP Settings (Bridge)

<u>Obtain IP Address Automatically</u>: If a DHCP server exists in your network, you can check this option, thus the IEEE 802.11b/g/n Wireless Outdoor CPE is able to obtain IP settings automatically from that DHCP server.



- When the IP address of the CPE is changed, the clients on the network often need to wait for a while or even reboot before they can access the new IP address. For an immediate access to the bridge, please flush the netbios cache on the client computer by running the "nbtstat –r" command before using the device name of the CPE to access its Web Management page.
- In case the IEEE 802.11b/g/n Wireless Outdoor CPE is unable to obtain an IP address from a valid DHCP server, it will fall back to default static IP address.

<u>Use Fixed IP Address</u>: Check this option. You have to specify a static IP address, subnet mask, default gateway and DNS server for the CPE manually. Make sure the specified IP address is unique on your network in order to prevent IP conflict.

If the IEEE 802.11b/g/n Wireless Outdoor CPE is configured as Router mode, you need to configure some additional TCP/IP parameters for accessing the Internet.

IP Settings (Router)

This is available only under Router mode. Open "**IP Settings (Router)**" in "**System**" below to configure the parameters of EKI-6311GN for accessing the Internet.



Figure 17 IP Settings (Router)

<u>WAN Settings</u>: Specify the Internet access method to Static IP, DHCP or PPPoE. Users must enter WAN IP Address, Subnet Mask, Gateway settings provided by your ISPs.

LAN Settings: When DHCP Server is disabled, users can specify IP address and subnet mask for the CPE manually. Make sure the specified IP address is unique on your network in order to prevent IP conflict. When DHCP Server is enabled, users may specify DHCP IP Address Range,

DHCP Subnet Mask, DHCP Gateway and Lease Time (15-44640 minutes). A DHCP relay agents is used to forward DHCP requests and replies between clients and servers when they are not on the same physical subnet. To enable the DHCP relay agent, check the "Enable DHCP Relay" checkbox and enter the IP address of the DHCP server.



- In AP mode, the IEEE 802.11b/g/n Wireless Outdoor CPE must establish connection with another wireless device before it is set to Router mode. To access the unit in Router mode via wired port, please type the WAN IP address to enter the web page for WAN is on wired port and LAN is on wireless port. Or, you can access device through the wireless device connected with the CPE.
- In wireless client mode, users can access the CPE via its wired port, for WAN is on wireless port and LAN is on wired port when device is set to Router mode.
- Bridge mode and AP Repeater mode are similar to AP mode when device is set to Router mode; WAN is on wired port and LAN is on wireless port. Thus users must also connect the CPE with another wireless device before it is set to Router mode and access the CPE via the connected wireless device.

Time Settings

Compliant with NTP, the IEEE 802.11b/g/n Wireless Outdoor CPE is capable of keeping its time in complete accord with the Internet time. Make configuration in "**Time Settings**" from "**System**". To use this feature, check "**Enable NTP Client Update**" in advance.



Figure 28 Time Settings

Current Time

Display the present time in Yr, Mon, Day, Hr, Min and Sec.

Time Zone Select

Select the time zone from the dropdown list.

NTP Server

Select the time server from the "NTP Server" dropdown list or manually input the IP address of available time server into "Manual IP".

Hit "Apply" to save settings.

3.5 RADIUS Settings

RADIUS (Remote Authentication Dial-In User Service) is a server for remote user authentication and accounting; playing a central role in the network in providing the capabilities of authenticating, authorizing, accounting, auditing, alarming and etc. It allows an organization to maintain user profiles in a central database that all remote servers can share.

Open "RADIUS Settings" in "System" to make RADIUS configuration.



Figure 39 RADIUS Settings

Authentication RADIUS Server

This is for RADIUS authentication. It can communicate with RADIUS through IP Address, Port and Shared Secret.

IP Address: Enter the IP address of the Radius Server;

Port: Enter the port number of the Radius Server;

Shared Secret: This secret, which is composed of no more than 31 characters, is shared by the EKI-6311GN and RADIUS during authentication.

Global-Key Update: Check this option and specify the time interval between two global-key updates.

3.6 Firewall Settings

The firewall is a system or group of systems that enforce an access control policy between two networks. It may also be defined as a mechanism used to protect a trusted network from an untrusted network. EKI-6311GN has capabilities of Source IP Filtering, Destination IP Filtering, Source Port Filtering, Destination Port Filtering, Port Forwarding as well as DMZ. This is available only under Router Mode.

Source IP Filtering: The source IP filtering gives users the ability to restrict certain types of data packets from your local network to Internet through EKI-6311GN. Use of such filters can be helpful in securing or restricting your local network.



Figure 20 Source IP Filtering

<u>Destination IP Filtering</u>: The destination IP filtering gives you the ability to restrict the computers in LAN from accessing certain websites in WAN according to specified IP addresses. Check the "Enable Source IP Filtering" checkbox and enter the IP address of the clients to be restricted. Hit Apply to make the setting take effect.



Figure 21 Destination IP Filtering

<u>Source Port Filtering</u>: The source port filtering enable you to restrict certain ports of data packets from your local network to Internet through EKI-6311GN. Use of such filters can be helpful in securing or restricting your local network.



Figure 22 Source Port Filtering

<u>Destination Port Filtering</u>: The destination port filtering enables you to restrict certain ports of data packets from your local network to Internet through EKI-6311GN. Use of such filters can be helpful in securing or restricting your local network.



Figure 23 Destination Port Filtering

<u>Port Forwarding</u>: The port forwarding allows you to automatically redirect common network services to a specific machine behind the NAT firewall. These settings ne are only necessary if you wish to host some sort of server like a web server or mail server on the private local network behind EKI-6311GN's NAT firewall.



Figure 24 Port Forwarding

3.7 Basic Wireless Settings

Open "Basic Settings" in "Wireless" as below to make basic wireless configuration.



Figure 25 Basic Wireless Settings

Disable Wireless LAN Interface

Check this option to disable WLAN interface, then the wireless module of EKI-6311GN will stop working and no wireless device can connect to it.

Wireless Mode

Four operating modes are available in EKI-6311GN.

<u>AP</u>: The EKI-6311GN establishes a wireless coverage and receives connectivity from other wireless devices.

<u>Wireless Client</u>: The EKI-6311GN is able to connect to the AP and thus join the wireless network around it.

<u>Bridge</u>: The EKI-6311GN establishes wireless connectivity with other APs by keying in remote MAC address. Please refer to the "**WDS Setting**" for detailed configuration.

<u>AP Repeater</u>: The EKI-6311GN servers as AP and Bridge concurrently. In other words, the EKI-6311GN can provide connectivity services for CPEs under Bridge mode.

Wireless Network Name (SSID)

This wireless network name is shared among all associated devices in your wireless network. Keep it identical on all those devices. Note that the SSID is case-sensitive and can not exceed 32 characters.

Broadcast SSID

Under AP mode, hiding network name is necessary when you are in a wireless environment that may have potential risk. By disabling broadcast SSID, the STA can not scan and find EKI-6311GN, so that malicious attack by some illegal STA could be avoided.

802.11 Mode

The EKI-6311GN can communicate with wireless devices of 802.11b/g or 802.11b/g/n.

HT Protect

Enable HT (High Throughput) protect to ensure HT transmission with MAC mechanism. Under 802.11n mode, wireless client can be divided into HT STA and Non-HT STA, among which the one with HT protect enabled gets higher throughput.

Note:

• STA stands for Station which is referred to wireless clients connecting to Access Point.

Frequency/Channel

Channel varies much as the available band differs from country to country. Select a proper operating channel in the drop-down list according to your situation.

Extension Channel

Only applicable to AP, AP Repeater, and 40MHz channel width indicates the use of channel bonding that allows the EKI-6311GN to use two channels at once. Two options are available: Upper Channel and Lower Channel.

Channel Mode

Four levels are available: 5MHz, 10MHz, 20MHz and 40MHz. The last one can enhance data throughput, but it takes more bandwidth, thus it might cause potential interference.

Antenna

By default, EKI-6311GN uses its built-in antenna for directional transmission; however, if you prefer to use an external antenna for your case-dependent applications, you can switch from "Internal (8 dBi)" to "External (N-Type)".

When **External (N-Type)** is selected, an Antenna Gain bar will appear to allow you specify the gain of the external antenna. The antenna gain calculates the TX power back off needed to remain in compliance with regulations.



- You are able to choose "External (N-Type)" only when you have well done installing the external antenna; otherwise, it might damage EKI-6311GN itself.
- The maximum output power will vary depending on the country selected in order to comply with the local regulation.
- The output power here is counted from the RF single chain only not including the 8dBi internal antenna.

Maximum Output Power (per chain):

Specify the signal transmission power. The higher the output power is, the wider the signal can cover, but the power consumption will be greater accordingly.

Data Rate

Usually "**Auto**" is preferred. Under this rate, the EKI-6311GN will automatically select the highest available rate to transmit. In some cases, however, like where there is no great demand for speed, you can have a relatively-low transmit rate for compromise of a long distance.

Extension Channel Protection Mode

This is to avoid conflict with other wireless network and boost the ability of your device to catch all 802.11g transmissions. However, it may decrease wireless network performance. Compared to CTS-Self; the transmission amount of CTS-RTS is much lower.

Enable MAC Clone

Available only under wireless client mode, it hides the MAC address of the AP while displays the one of associated wireless client or the MAC address designated manually.

3.8 Site Survey

Under wireless client mode, the EKI-6311GN is able to perform site survey, through which, information on the available access points will be detected.

Open "Basic Settings" in "Wireless", by clicking the "Site Survey" button beside "Wireless Mode" option, the wireless site survey window will pop up with a list of available AP in the vicinity. Select the AP you would like to connect and click "Selected" to establish connection.

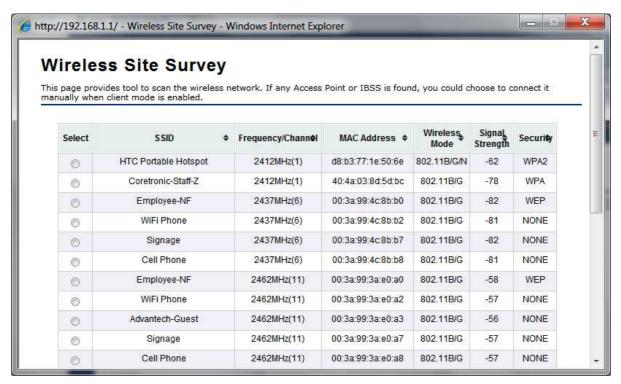


Figure 26 Site Survey

VAP Profile Settings

Available in AP mode, the IEEE 802.11b/g/n Wireless Outdoor CPE allows up to 16 virtual SSIDs on a single BSSID and to configure different profile settings such as security and VLAN ID to each SSID. To create a virtual AP, you may check the **Enable** box of the profile and click on the profile (eg. Profile 2) to configure wireless and security settings. Hit **Apply** to active the profile.



Figure 4 VAP Profile Settings



Figure 28 VAP Profile Settings

Basic Setting

Profile Name: Name of the VAP profile

Wireless Network Name: Enter the virtual SSID for the VAP

Broadcast SSID: In AP mode, hiding network name is necessary when you are in a wireless environment that may have potential risk. By disabling broadcast SSID, the STA cannot scan and

find the IEEE 802.11b/g/n Wireless Outdoor CPE, so that malicious attack by some illegal STA could be avoided.

<u>Wireless Separation</u>: Wireless separation is an ideal way to enhance the security of network transmission. Under the mode except wireless client mode, enable "Wireless Separation" can prevent the communication among associated wireless clients.

<u>WMM Support</u>: WMM (Wi-Fi Multimedia) is a subset of 802.11e. It allows wireless communication to define a priority limit on the basis of data type under AP mode only, thus those time-sensitive data, like video/audio data, may own a higher priority than common one. To enable WMM, the wireless client should also support it

<u>Max. Station Number:</u> By checking the "Max. Station Num" the CPE will only allow up to 32 wireless clients to associate with for better bandwidth for each client. By disabling the checkbox the CPE will allow up to 128 clients to connect, but it is likely to cause network congestion or poor performance.

Security Setting:

To prevent unauthorized radios from accessing data transmitting over the connectivity, the IEEE 802.11a/n Wireless Outdoor CPE provides you with rock solid security settings.

VLAN Tab

If your network uses VLANs, you can assign one SSID to a VLAN, and client devices using the SSID are grouped in that VLAN.

To allow users on the VLAN to access the WEB page of the IEEE 802.11a/n Wireless Outdoor CPE, you need to enable "Enable 802.1Q VLAN" and assign a management VLAN ID for your device. Make sure the assigned management VLAN ID is identical to your network VLAN ID to avoid failures of accessing the Web page of the EKI-6311GN.



Figure 5 Management VLAN ID

Advanced Settings

Chapter 4 Advanced Settings

4.1 Advanced Wireless Settings

Open "Advanced Settings" in "Wireless" to make advanced wireless settings.



Figure 6 Advanced Wireless Settings

A-MPDU/A-MSDU Aggregation

The data rate of your AP except wireless client mode could be enhanced greatly with this option enabled; however, if your wireless clients don't support A-MPDU/A-MSDU aggregation, it is not recommended to enable it.

Short GI

Under 802.11n mode, enable it to obtain better data rate if there is no negative compatibility issue.

RTS Threshold

The EKI-6311GN sends RTS (Request to Send) frames to certain receiving station and negotiates the sending of a data frame. After receiving an RTS, that STA responds with a CTS (Clear to Send) frame to acknowledge the right to start transmission. The setting range is 0 to 2346 in byte. Setting it too low may result in poor network performance. Leave it at its default of 2346 is recommended.

Fragmentation Length

Specify the maximum size in byte for a packet before data is fragmented into multiple packets. Setting it too low may result in poor network performance. Leave it at its default of 2346 is recommended.

Beacon Interval

Specify the frequency interval to broadcast packets. Enter a value between 20 and 1024.

DTIM Interval

DTIM, which stands for Delivery Traffic Indication Message, is contained in the data packets. It is for enhancing the wireless transmission efficiency. The default is set to 1. Enter a value between 1 and 255.

Preamble Type

It defines some details on the 802.11 physical layer. "Long" and "Auto" are available.

IGMP Snooping

Available in AP/Router mode, IGMP snooping is the process of listening to IGMP network traffic. By enabling IGMP snooping, the AP will listen to IGMP membership reports, queries and leave messages to identify the ports that are members of multicast groups. Multicast traffic will only be forwarded to ports identified as members of the specific multicast group or groups.

RIFS

RIFS (Reduced Interframe Spacing) is a means of reducing overhead and thereby increasing network efficiency.

Link Integration

Available under AP/Bridge/AP repeater mode, it monitors the connection on the Ethernet port by checking "**Enabled**". It can inform the associating wireless clients as soon as the disconnection occurs.

TDM Coordination

Stands for "Time-Division Multiplexing Technique", this resource reservation control mechanisms can avoid packet collisions and send the packets much more efficiently allowing for higher effective throughput rates. This function is only available in AP/CPE mode. It is highly recommended to enable TDM coordination when there are multiple CPEs needed to connect to the AP in your application.

LAN2LAN CPE

LAN2LAN CPE mode enables packet forwarding at layer 2 level. It is fully transparent for all the Layer2 protocols.

Space in Meter

To decrease the chances of data retransmission at long distance, the EKI-6311GN can automatically adjust proper ACK timeout value by specifying distance of the two nodes.

Flow Control

It allows the administrator to specify the incoming and outgoing traffic limit by checking "**Enable Traffic Shaping**". This is only available in Router mode.



 We strongly recommend you leave most advanced settings at their defaults except "Distance in Meters" adjusted the parameter for real distance; any modification on them may negatively impact the performance of your wireless network.

4.2 Wireless Security Settings

To prevent unauthorized radios from accessing data transmitting over the connectivity, the EKI-6311GN provides you with rock solid security settings.

Data Encryption and Authentication Settings

Open "Profile Setting" in "Wireless" and enter "VAP Profile 1 Settings" as below.

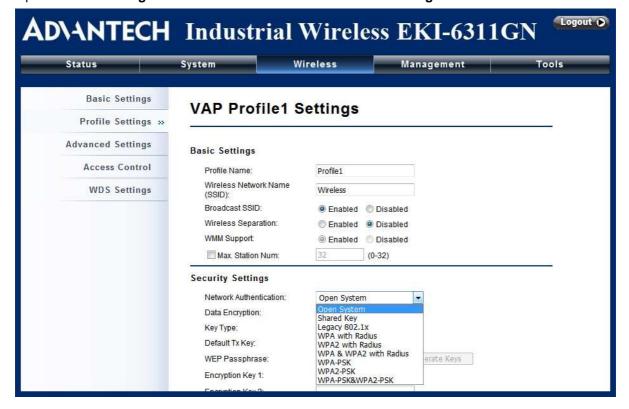


Figure 7 Security Settings

Network Authentication

<u>Open System</u>: It allows any device to join the network without performing any security check. <u>Shared Key</u>: Data encryption and key are required for wireless authentication (Not available in Bridge/AP Repeater mode).

<u>Legacy 802.1x</u>: Available in AP/Wireless Client mode, it provides the rights to access the wireless network and wired Ethernet. With User and PC identity, centralized authentication as well as dynamic key management, it controls the security risk of wireless network to the lowest. To serve the 802.1x, at least one EAP type should be supported by the RADIUS Server, AP and wireless client.

Note:

• For first time users, if EAP type "TLS" is selected, you need to import valid user certificate given by CA in prior. To import user certificates, please refer to Chapter 5 Management/Certificate Settings for more details.

<u>WPA with RADIUS</u>: Available in AP/Wireless Client mode, with warrant (username, password and etc.) offered by user, this kind of authentication can be realized with specific RADIUS server. This is the common way to be adopted in large enterprise network.

<u>WPA2 with RADIUS</u>: Available in AP/Wireless Client mode, as a new version of WPA, only all the clients support WPA2, can it be available. If it is selected, AES encryption and RADIUS server is required. It is only available in AP/Wireless Client mode.

<u>WPA&WPA2 with RADIUS</u>: Available in AP mode, it provides options of WPA (TKIP) or WPA2 (AES) for the client. If it is selected, the data encryption type must be TKIP + AES and the RADIUS server must be set.

<u>WPA-PSK</u>: It is a simplified WPA mode with no need for specific authentication server. In this so-called WPA Pre-Shared Key, all you have to do is just pre-enter a key in each WLAN node and this is the common way to be adopted in large and middle enterprise as well as residential network.

<u>WPA2-PSK</u>: As a new version of WPA, only all the clients support WPA2, can it be available. If it is selected, the data encryption can only be AES and the passphrase is required.

<u>WPA-PSK&WPA2-PSK</u>: Available in AP mode, it provides options of WPA (TKIP) or WPA2 (AES) encryption for the client. If it is selected, the data encryption can only be TKIP + AES and the passphrase is required.

Data Encryption

If data encryption is enabled, the key is required and only sharing the same key with other wireless devices can the communication be established.

None: Available only when the authentication type is open system.

64 bits WEP: It is made up of 10 hexadecimal numbers.

128 bits WEP: It is made up of 26 hexadecimal numbers.

152 bits WEP: It is made up of 32 hexadecimal numbers.

TKIP: Temporal Key Integrity Protocol, which is a kind of dynamic encryption, is co-used with WPA-PSK, etc.

AES: Advanced Encryption Standard, it is usually co-used with WPA2-PSK, WPA, WPA2, etc.

TKIP + AES: It allows for backwards compatibility with devices using TKIP.



- We strongly recommend you enable wireless security on your network!
- Only setting the same Authentication, Data Encryption and Key in the EKI-6311GN and other associated wireless devices, can the communication be established!

Access Control

The Access Control appoints the authority to wireless client on accessing EKI-6311GN, thus a further security mechanism is provided. This function is available only under AP mode.

Open "Access Control" in "Wireless" as below.



Figure 8 Access Control

Access Control Mode

If you select "**Allow Listed**", only those clients whose wireless MAC addresses are in the access control list will be able to connect to your AP. While when "**Deny Listed**" is selected, those wireless clients on the list will not be able to connect the AP.

MAC Address

Enter the MAC address of the wireless client that you would like to list into the access control list, click "**Apply**" then it will be added into the table at the bottom.

Delete Selected/All

Check the box before one or more MAC addresses of wireless client(s) that you would like to cancel, and click "**Delete Selected**" or "**Delete All**" to cancel that access control rule.

WDS Settings

Extend the range of your network without having to use cables to link the Access Points by using the Wireless Distribution System (WDS): Simply put, you can link the Access Points wirelessly. Open "WDS Settings" in "Wireless" as below:



Figure 33 WDS Settings

Enter the MAC address of another AP you wirelessly want to connect to into the appropriate field and click "**Apply**" to save settings.



- WDS Settings is available only under Bridge and AP Repeater Mode.
- Bridge uses the WDS protocol that is not defined as the standard thus compatibility issues between equipment from different vendors may arise. Moreover, Tree or Star shape network topology should be used in all WDS use-cases (i.e. if AP2 and AP3 are specified as the WDS peers of AP1, AP2 should not be specified as the WDS peer of AP3 and AP3 should not be specified as the WDS peer of AP2 in any case). Mesh and Ring network topologies are not supported by WDS and should be avoided in all the use cases.

Management

Chapter 5 Management

Remote Management

The IEEE 802.11b/g/n Wireless Outdoor CPE provides a variety of remotes managements including Telnet, SNMP, FTP, SSH, HTTPS and exclusive WISE tool, making configuration more convenient and secure.

With **Normal** selected, Telnet, SNMP and FTP are activated as default remote management options. To use secure management tools such as SSH, HTTPS and WISE, please select "**Secure**". You may also choose "**Customized**" to enable any methods as desired.



Figure 34 Remote Settings

5.1 SNMP Management

The EKI-6311GN supports SNMP for convenient remote management. Open "**SNMP Configuration**" in "**Management**" shown below. Set the SNMP parameters and obtain MIB file before remote management.



Figure 35 SNMP Configuration

Protocol Version

Select the SNMP version, and keep it identical on the EKI-6311GN and the SNMP manager. The EKI-6311GN supports SNMP v2/v3.

Server Port

Change the server port for a service if needed; however you have to use the same port to use that service for remote management.

Get Community

Specify the password for the incoming Get and GetNext requests from the management station. By default, it is set to public and allows all requests.

Set Community

Specify the password for the incoming Set requests from the management station. By default, it is set to private.

Trap Destination

Specify the IP address of the station to send the SNMP traps to.

Trap Community

Specify the password sent with each trap to the manager. By default, it is set to public and allows all requests.

Configure SNMPv3 User Profile

For SNMP protocol version 3, you can click "Configure SNMPv3 User Profile" in blue to set the details of SNMPv3 user. Check "Enable SNMPv3 Admin/User" in advance and make further configuration.



Figure 9 Configure SNMPv3 User Profile

User Name

Specify a user name for the SNMPv3 administrator or user. Only the SNMP commands carrying this user name are allowed to access the EKI-6311GN.

Password

Specify a password for the SNMPv3 administrator or user. Only the SNMP commands carrying this password are allowed to access the EKI-6311GN.

Confirm Password

Input that password again to make sure it is your desired one.

Access Type

Select "Read Only" or "Read and Write" accordingly.

Authentication Protocol

Select an authentication algorithm. SHA authentication is stronger than MD5 but is slower.

Privacy Protocol

Specify the encryption method for SNMP communication. None and DES are available.

None: No encryption is applied.

DES: Data Encryption Standard, it applies a 58-bit key to each 64-bit block of data.

Coovachilli Settings

Coovachilli is a captive portal management which allows WLAN users to easily and securely access the Internet. Under Router mode, when Coovachilli is enabled, the IEEE 802.11b/g/n Wireless Access Point will force an HTTP client on a network to see a special web page (usually for authentication purposes) before using the Internet normally. At that time the browser is redirected to a web page which may require authentication. Captive portals are used at most Wi-Fi hotspots. Therefore, to use Coovachilli, you need to find Coovachilli service providers that have the additional services needed to make Coovachilli work.



Figure 10 Coovachilli Settings

Radius Settings

Primary Radius Server

Enter the name or IP address of the primary radius server

Secondary Radius Server

Enter the name or IP address of the primary radius server if any.

Radius Auth Port:

Enter the port number for authentication

Radius Acct Port:

Enter the port number for billing

Radius Shared Secret:

Enter the secret key of the radius server

Radius NAS ID:

Enter the name of the radius server if any

Radius Administrative-User

Radius Admin Username:

Enter the username of the Radius Administrator

Radius Admin Password:

Enter the password of the Radius Administrator

Captive Portal

UAM Portal URL:

Enter the address of the UAM portal server

UAM Secret:

Enter the secret password between the redirect URL and the Hotspot.

Upgrade Firmware

Open "Firmware Upload" in "Management" and follow the steps below to upgrade firmware locally or remotely through EKI-6311GN's Web:



Figure 11 Upgrade Firmware

Click "Browse" to select the firmware file you would like to load;

- Click "Upload" to start the upload process;
- Wait a moment, the system will reboot after successful upgrade.

Note:

Do NOT cut the power off during upgrade, otherwise the system may crash!

Backup/ Retrieve Settings

It is strongly recommended you back up configuration information in case of something unexpected. If tragedy hits your device, you may have an access to restore the important files by the backup. All these can be done by the local or remote computer.

Open "Configuration File" in "Management" as below:



Figure 12 Backup/Retrieve Settings

Save Setting to File

By clicking "Save", a dialog box will pop up. Save it, then the configuration file ap.cfg will be generated and saved to your local computer.

Load Settings from File

By clicking "**Browse**", a file selection menu will appear, select the file you want to load, like **ap.cfg**; Click "**Upload**" to load the file. After automatically rebooting, new settings are applied.

Restore Factory Default Settings

The EKI-6311GN provides two ways to restore the factory default settings:

Restore factory default settings via Web

From "Configuration File", clicking "Reset" will eliminate all current settings and reboot your device, then default settings are applied.



Figure 13 Restore Settings

Restore factory default settings via Reset Button

If software in EKI-6311GN is unexpectedly crashed and no longer reset the unit via Web, you may do hardware reset via the reset button. Press and hold the button for at least 5 seconds and then release it until the PWR LED gives a blink.

Reboot

You can reboot your EKI-6311GN from "Configuration File" in "Management" as below: Click "Reboot" and hit "Yes" upon the appeared prompt to start reboot process. This takes a few minutes.



Figure 14 Reboot

Password

From "Password Settings" in "Management", you can change the password to manage your EKI-6311GN.

Enter the new password respectively in "New Password" and "Confirm Password" fields; click "Apply" to save settings.



Figure 15 Password



The password is case-sensitive and its length cannot exceed 19 characters!

Certificate Settings

Under Client mode, when EAP-TLS is used, the RADIUS server must know which user certificates to trust. The Server can trust all certificates issued by a given CA.

To import a user certificate, from Import User Certificates, click "**Browse**" and specify the location where the user certificate is placed. Click "**Import**".



Figure 16 Certificate Settings

Monitoring Tools

System Log

System log is used for recording events occurred on the EKI-6311GN, including station connection, disconnection, system reboot and etc.

Open "System Log" in "Tools" as below.



Figure 17 System Log

Remote Syslog Server

Enable Remote Syslog: Enable System log to alert remote server.

IP Address: Specify the IP address of the remote server.

Port: Specify the port number of the remote server.

Site Survey

Only available under Wireless Client mode, site survey allows you to scan all the APs within coverage. Open "Site Survey" in "Tools" as below and select the desired AP to connect.



Figure 18 Site Survey

Ping Watch Dog

If you mess your connection up and cut off your ability the log in to the unit, the ping watchdog has a chance to reboot due to loss of connectivity.



Figure 19 Ping Watchdog

Ping Watchdog

Enable Ping Watchdog: To activate ping watchdog, check this checkbox.

<u>IP Address to Ping</u>: Specify the IP address of the remote unit to ping.

Ping Interval: Specify the interval time to ping the remote unit.

Startup Delay: Specify the startup delay time to prevent reboot before the EKI-6311GN is fully initialized.

<u>Failure Count To Reboot</u>: If the ping timeout packets reached the value, the EKI-6311GN will reboot automatically.

Date Rate Test

The Data Rate Test allows you test the current RSSI at each data rate between your EKI-6311GNs.



Figure 20 Data Rate Test

Antenna Alignment

Under Bridge mode, when the bridges are not easily visible from the location where the dish will be installed, the antenna alignment tool can help you evaluate the position of the unit and adjust the angle of the antenna more precisely. Keep it that in real circumstances a lot of additional factors should be taken into account when your unit is installed. These factors include various obstacles (buildings, trees), the landscape, the altitude, transponder orientation, polarization, etc.

To use the tool, select the desired remote WDS bridge and click "Start", the web page will display the measured signal strength, RSSI and transmit/receive packets. If the signal quality is not quite good, try to adjust the antenna and see if the quality improves or not.



Figure 21 Antenna Alignment

Speed Test

The speed test is to monitor the current data transmission (TX) and data reception (RX) rate with the remote 802.11an Wireless Outdoor CPE. Enter the IP address of the remote CPE, type in the user name/password and click "**Test**". The result will display in the bottom **STATUS**. You may test single TX/RX or bi-direction.



Figure 22 Speed Test

Status

Chapter 6 Status

6.1 View EKI-6311GN Basic Information

Open "Information" in "Status" to check the basic information of EKI-6311GN, which is read only. Click "Refresh" at the bottom to have the real-time information.



Figure 50 Basic Information

6.2 View Association List

Open "Association List" in "Connection" from "Status" to check the information of associated wireless clients. All is read only. Click "Refresh" at the bottom to view the current association list.

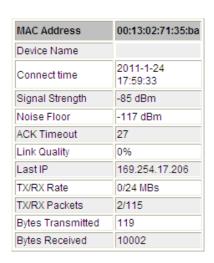



Figure 51 Connection

By clicking on the MAC address of the selected device on the web you may see more details including device name, connection time, signal strength, noise floor, ACK timeout, link quality, IP information, current data rate, current TX/RX packets.

Association Node Details

The details information of association node:



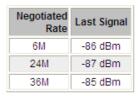

View Network Flow Statistics

Open "Statistics" in "Status" to check the data packets received on and transmitted from the wireless and Ethernet ports. Click "Refresh" to view current statistics.



Figure 23 Network Flow Statistics

Poll Interval

Specify the refresh time interval in the box beside "**Poll Interval**" and click "**Set Interval**" to save settings. "**Stop**" helps to stop the auto refresh of network flow statistics.

View ARP Table

Open "ARP Table" in "Status" as below. Click "Refresh" to view current table.

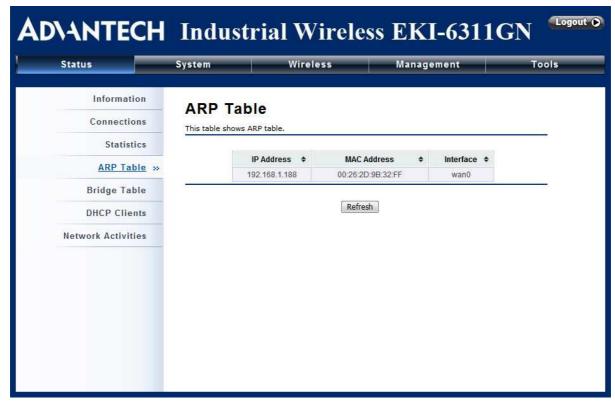


Figure 24 ARP Table

View Bridge Table

Open "Bridge Table" in "Status" as below. Click "Refresh" to view current connected status..



Figure 25 Bridge Table

View Active DHCP Client Table

Open "**DHCP Clients**" in "**Status**" as below to check the assigned IP address, MAC address and time expired for each DHCP leased client. Click "**Refresh**" to view current table.



Figure 26 DHCP Client Table

View Network Activities

The network activities allows you to monitor the current Wireless and Ethernet TX/RX data traffic in graphical and numerical form on the Web of the Skyport. The chart scale and throughput dimension (Bps, Kbps, Mbps) changes dynamically according to the mean throughput value. Throughput statistics can be updated manually using the "**Refresh**" button.

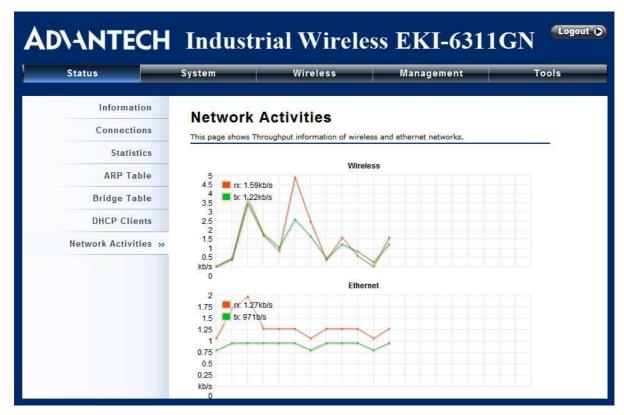


Figure 27 Network Activities

Trouble Shooting

Chapter 7 Trouble shooting

This chapter provides trouble shooting procedures for basic problems with the EKI-6311GN. For warranty assistance, contact your service provider or distributor for the process.

Q 1. How to know the MAC address of EKI-6311GN?

MAC Address distinguishes itself by the unique identity among network devices. There are two ways available to know it.

• Each device has a label posted with the MAC address. Please refer below.

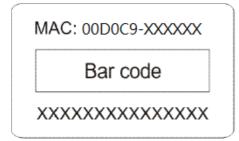


Figure 47 MAC Address

Q 2. What if I would like to reset the unit to default settings?

You may restore factory default settings in "Configuration File" from "Management".

Q 3. What if I would like to backup and retrieve my configuration settings?

You may do the backup by generating a configuration file or retrieve the settings you have backed up previously in "Configuration File" from "Management".

Q 4. What if I cannot access the Web-based management interface?

Please check the followings:

- Check whether the power supply is OK; Try to power on the unit again.
- Check whether the IP address of PC is correct (in the same network segment as the unit);
- Login the unit via other browsers such as Firefox.
- Hardware reset the unit.

Q 5. What if the wireless connection is not stable after associating with an AP under wireless client mode?

• Since the EKI-6311GN comes with a built-in directional antenna, it is recommended make the

EKI-6311GN face to the direction where the AP is to get the best connection quality.

• In addition, you can start "Site Survey" in "Wireless Basic Settings" to check the signal strength. If it is weak or unstable (The smaller the number is, the weaker the signal strength is.), please join other available AP for better connection.

Appendix A. ASCII

WEP can be configured with a 64-bit, 128-bit or 152-bit Shared Key (hexadecimal number or ACSII). As defined, hexadecimal number is represented by 0-9, A-F or a-f; ACSII is represented by 0-9, A-F, a-f or punctuation. Each one consists of two-digit hexadecimal.

Table 2 ACSII

ASCII	Hex	ASCII	Hex	ASCII	Hex	ASCII	Hex
Character	Equivalent	Character	Equivalent	Character	Equivalent	Character	Equivalent
!	21	9	39	Q	51	i	69
"	22	:	3A	R	52	j	6A
#	23	•	3B	S	53	k	6B
\$	24	<	3C	Т	54	1	6C
%	25	=	3D	U	55	m	6D
&	26	>	3E	V	56	n	6E
ſ	27	?	3F	W	57	0	6F
(28	@	40	Χ	58	р	70
)	29	Α	41	Υ	59	q	71
*	2A	В	42	Z	5A	r	72
+	2B	С	43		5B	S	73
,	2C	D	44	\	5C	t	74
-	2D	Е	45]	5D	u	75
	2E	F	46	٨	5E	V	76
/	2F	G	47		5F	W	77
0	30	Н	48	`	60	х	78
1	31	1	49	а	61	У	79
2	32	J	4A	b	62	Z	7A
3	33	K	4B	С	63	{	7B
4	34	L	4C	d	64	Ì	7C
5	35	М	4D	е	65	}	7D
6	36	N	4E	f	66	~	7E
7	37	0	4F	g	67		
8	38	Р	50	h	68		

Appendix B. SSH Settings

Table 3 CLI Commands

1			Commands				Baraning trans
get √	set √	del	Keyword	l	T T	T	Descriptions
	٧		time				time setting
√ /	- 1			-now			current system time
√	√ 			-zone			time zone
√	√			-NTPUpdate			NTP Update
√	√			-servertype			server type
$\sqrt{}$	√			-IP			-IP
$\sqrt{}$	√			-Manual IP			-Manual IP
√	√		system				system setting
√				-swversion			system firmware version
$\sqrt{}$	$\sqrt{}$			-systemmac			system MAC address
\checkmark	\checkmark			-devname			system name
\checkmark	V			-country			country/region
	$\sqrt{}$			-ethernet1DataRate			ether port 1 data rate
\checkmark	V			-ethernet2DataRate			ether port 2 data rate
\checkmark	$\sqrt{}$			-macclone			mac clone enable
\checkmark	V			-clonedmac			cloned mac address
\checkmark	V			-poepower			secondary RJ45 power
√	V			-stp			Spanning Tree
√	V			-stpForwardDelay			STP forward delay
√	V			-gpslatitude			gps latitude
√	V			-gpslongitude			gps longitude
\checkmark	V		ipset				
V	√			-networkmode			network mode select (bridge or router)
√	V			-bridge			bridge mode ip settings
√	V				-iptype		fixed/dynamical ip(dhcp client)
\checkmark	$\sqrt{}$				-ipaddr		ip address
\checkmark	V				-netmask		subnet mask
\checkmark	V				-gateway		gateway ip address
\checkmark	V				-dns1		dns1
\checkmark	V				-dns2		dns2
\checkmark	V			-router			router mode ip settings
\checkmark	V				-wan		wan ip settings
V	√					- accesstype	router mode access type
V	√					- staticipaddr	static ip address
√	√					- staticnetma sk	static subnet mask
√	√					- staticgatew ay	static gateway ip address
\checkmark	$\sqrt{}$					-staticdns1	static dns1
\checkmark	V					-staticdns2	static dns2

1		1 1			1 -	
√	√				dhcpclienth ostname	dhcp client hostname
V					- pppoeconn ectstatus	pppoe connect status
√					- pppoelocali p	obtains IP from pppoe server
√	V				- pppoestatic ipaddr	pppoe static ip address
√	V				- pppoeuser name	pppoe username
√	V				- pppoepass word	pppoe password
√	V				- pppoeserv ername	pppoe server name
√	V				- pppoeconn ectmode	pppoe connect mode
$\sqrt{}$	√				- pppoeidleti me	pppoe idle time
$\sqrt{}$	V			-lan		lan ip settings
V	V				-ipaddr	lan ip address
V	1				-netmask	lan subnet mask
V	V				- dhcpserver enable	dhcp server enable
√	V				dhcpserveri pstart	dhcp server ip start
√	√				dhcpserveri pend	dhcp server ip end
V	√				dhcpserverl easetime	dhcp server leasetime
√	√				dhcprelaye nable	dhcp relay enable
V	√				dhcpserveri p	dhcp server ip
$\sqrt{}$	√	wlan				wlan setting
1	V		-operationmode			operation mode
$\sqrt{}$	√		-ssid			wireless network name
√	√		-ssidhided			wireless SSID broadcast
√	√		-radio			radio switch
√	√		-wirelessmode			wireless mode
√	√					
$\sqrt{}$	√		-HTprotect			HT protect
$\sqrt{}$	V		-frequency/channel			-wireless frequency/channel (depends on country and wireless mode)

√	V	1	-powe	er			power
1	1 V		-rate				rate
√	1		-ante	nna			antenna type
√	1			nnaGain			antenna gain setings
√ √	1		-wmn				wmm settings
	<u>'</u>			•			wireless isolate
$\sqrt{}$	\checkmark		-Isola	tion			communication between
							clients
\checkmark	\checkmark		-max	StaNum			max sta connection number
,	,						Whether manually limit
$\sqrt{}$	√		-StaN	lumLmt			the number of station
√	V		-snac	elnMeter			wireless bwa space in
· '	'		эрис				meter setting
\checkmark	\checkmark		-Link	ntegration			wireless bwa coverage class setting
	1		-char	ınelMode			channel mode
1	V			nelOffset			channel offset of 40MHz
1	1		-exte				extension
V	1		-A-M				A-MPDU
V	1		-A-M				A-MSDU
1	1		-shor				short GI
1	1		-RIFS				rifs
1	1		-RTS				RTS
1	1		-fragr				fragment
1	\ \ √		-bead				hagment
1	\ \ \		-beac				DTIM
1	1		-prea				preamble
1	1		-prea				IGMP
1	-						
1	√ √		-stdm				stdm setting CPE Type
	1		-cpe1	ype			wireless authentication
\checkmark			-auth	entication			type
√	√		-encr	yption			wireless data encryption
√	√	√	-key				wireless wep key setting
√	V				-type		wireless wep key type
V	1				-default		wireless wep default key
							index
√	√ ,	√			-1		wireless wep key 1
√	√	√			-2		wireless wep key 2
√	1	√			-3		wireless wep key 3
√	√	√			-4		wireless wep key 4
\checkmark	√	V	-wpa				wireless WPA setting
$\sqrt{}$	V	$\sqrt{}$			-psk		wireless pre-shared key
	<u> </u>						(PSK) for WPA-PSKwireless WPA re-auth
\checkmark					-reauthtime		period (in seconds)
V	V				-keyupdate		enable wireless WPA
					-keyupuate		global key update
√	√ ,	√	-eap				WPA EAP setting
$\sqrt{}$	√	√			-eaptype		WPA EAP Type
√	√	$\sqrt{}$			innorcents		WPA inner EAP Type
	1				innereapty	L	

[ре	
√	V			-username	WPA user name
√	V			-loginname	WPA login name
√	V			-password	WPA password
V	V			-usercert	WPA cert file
V	V			- privatekeyp assword	WPA private key password
$\sqrt{}$	\checkmark		-trafficshaping		traffic shaping
$\sqrt{}$				-enable	enable Traffic Shaping
\checkmark				-downlimit	Incoming Traffic Limit
$\sqrt{}$				-downburst	Incoming Traffic Burst
$\sqrt{}$	V			-uplimit	Outgoing Traffic Limit
$\sqrt{}$	√			-upburst	Outgoing Traffic Burst
√	V		-wdsMac		WDS Remote Mac
√				-local	local macAddr
√	V			-remote1	remote macAddr1
√	V			-remote2	remote macAddr2
	V			-remote3	remote macAddr3
	V			-remote4	remote macAddr4
V	V		-wdsSeparation		WDS Separation
√			-association		list of associated wireless clients
√	√	vapprofile 1(2, 3,etc)			VAP setting
√	√		-active		on/off this vap
√	√		-profileName		Name of profile
V	√		-ssid		ssid of this vap
√	√		-ssidhided		Broadcast SSID Enable or Disable
√	1		-vlanID		vlanID of this vap
√ 	V		-Isolation		wireless separation
√	√ /		-wmm		WMM Support
√	√		-MaxStaNum		Max Station Number
√	√		-StaNumLmt		Whether manually limit the number o f station wireless authentication
√	√		-authentication		type
√	√		-encryption		wireless data encryption
√	√		-default		wireless wep default key index
√	√		-wpa		wireless WPA setting
√			-association		list of associated wireless clients
√	√	vlan			vlan setting
√	√		-active		enable 802.1Q VLAN
√	√		-manageID		Management VLAN ID
√	√	radius			radius setting
√	√		-IPaddr		IP address
√	V		-port		port
	√		-shared secret		Shared Secret
√	1	firewall			firewall setting
$\sqrt{}$			-srcipfilter		source ip filter settings

$\sqrt{}$	$\sqrt{}$			-enable	source ip filter enable
V	√			-addrule	add a source ip filter rule
	√			-delerule	delete source ip filter rule
V				-rulelist	show source ip filter rule lists
V	√		-destipfilter		destination ip filter settings
√	√			-enable	destination ip filter enable
V	√			-addrule	add a destination ip filter rule
	√			-delerule	delete destination ip filter rule
V				-rulelist	show destination ip filter rule lists
	√		-srcportfilter		source port filter settings
√	$\sqrt{}$			-enable	source port filter enable
V	√			-addrule	add a source port filter rule
	√			-delerule	delete source port filter rule
V				-rulelist	show source port filter rule lists
√	√		-destportfilter		destination port filter settings
√	√			-enable	destination port filter enable
V	√			-addrule	add a destination port filter rule
	√			-delerule	delete destination port filter rule
V				-rulelist	show destination port filter rule lists
√	√		-portforward		port forward settings
√	V			-enable	port forward enable
1	√			-addrule	add a port forward rule
	√			-delerule	delete port forward rule
√				-rulelist	show port forward rule lists
√	√		-dmzenable		dmz enable
\checkmark	V		-dmzipaddr		dmz ip address
V	√	remote			remote management setting
1	√ /		-privacy		radius IP address
√	√		-telnet		enable telnet
√	V		-snmp		enable snmp
√	V		-ftp		enable ftp
√	V		-ssh		enable ssh
$\sqrt{}$	√		-forcehttps		force https
$\sqrt{}$	√		-wise		enable wise tools
V	√	snmp			SNMP setting
V	√		-version		Protocol Version
V	V		-port		Server Port
V	√		-getCommunity		SNMP Read Community
V	√		-setCommunity		SNMP Write Community

$\sqrt{}$			-trapdestination		Trap Destination
1	V		-trapcommunity		Trap Community
1	V		-v3Admin		v3Admin
1	1		VO/TGITIIIT	-on	Enable SNMPv3Admin
√ √	V			-name	name
	V			-password	password
	'			-	paccincia
$\sqrt{}$	\checkmark			accessTyp	access type
				е	
$\sqrt{}$				- authenticati	Authentication Protocol
,	,			on	, idinomication i rotocol
	V			-Privacy	privacy protocol
√	V		-v3User		-v3User
	V			-on	Enable SNMPv3User
	V			-name	name
	V			-password	password
,	,				
	√			accessTyp	access type
				e -	
\checkmark	\checkmark			authenticati	Authentication Protocol
,	,			on	
√	√			-Privacy	privacy protocol
√	√	coovachilli			CoovaChilli setting
√	√		-coovaChilliEnable		Coovachilli Enable
			- primaryRadiusServe		Primary RADIUS Server
,	,		r		Timary to Bio Corre
,	,		-		Secondary RADIUS
√	√	secondaryRadiusS ver			Server
.1	.1		VOI		RADIUS Authentication
√	V		-radiusAuthPort		Port
√	√		-radiusAcctPort		RADIUS Accounting Port
√	√		-radiusSharedSecret		RADIUS Shared Secret
√	√		-radiusNasid		RADIUS Nasid
			- radiusAdminUserna		RADIUS Admin Username
\ \	\ \ \		me		NADIOS Admin Osemanie
,	,		-		
\checkmark	√		radiusAdminPasswo		RADIUS Admin Password
√	√		rd		LIAMA Dortol LIDI
√ √	\ \ \		-uamPortalUrl		UAM Portal URLUAM Secret
1	\ \ \	syclog	-uamSecret		
\ √	\ \ √	syslog	aliant		syslog enable syslog client
\ √	\ √		-client		syslog server IP address
√ √	\ √		-ipaddr		syslog server port number
٧	1		-port -clear		syslog clear
√	\ \ \	pingwdg	-Ultai		ping watchdog
√ √	\ \ \	pingwag	anabla		ping watchdog enable
\ √	\ √		-enable		interval
\ √	\ √		-interval		startup delay
√ √	\ \ \		-startdelay		startup delay
٧	٧		-failcount		iailule coulit

\checkmark	\checkmark			-ip		ip address	
	V	$\sqrt{}$	acl			access control	
√	V			-mode		enable wireless access control (ACL)	
		V		-delete		delete a local ACL address	
√		V		-list		delete or display all local ACL address	
	V			-MacAddr		add mac address to Current Access Control List	
			statistics			statistics	
$\sqrt{}$				-Wireless		Wireless LAN	
				-Ethernet		Ethernet LAN	
\checkmark		$\sqrt{}$	log list			syslog list	
	1		password			system password	
	1		reset			restore factory	
	1		reboot			reboot system	
	V		exit			logout from CLI	

Appendix C. GPL Declamation

PUBLIC SOFTWARE DECLAMATION

In the software we delivered, there may contains some public software, if it is, please read below carefully:

1. Definition

"Public Software", when applicable, shall mean that portion of the Licensed Software, in source code form, set forth in the below Table, and provided under the terms set forth in the Section 5, the indicated website, the complete license terms can be found.

"Public Software" shall mean each of:

- (a) any computer code that contains, or is derived in any manner (in whole or in part) from, any computer code that is distributed as open source software (e.g. Linux) or similar licensing or distribution models; and
- (b) any software that requires as a condition of use, modification and/or distribution of such software that such software or other software incorporated into, derived from or distributed with such software (i) be disclosed or distributed in source code form, (ii) be licensed for the purpose of making derivative works, or (iii) be redistributable at no charge.

Public Software includes, without limitation, software licensed or distributed under any of the following licenses or distribution models, or licenses or distribution models similar to any of the following: (1) GNU's General Public License (GPL) or Lesser/Library GPL (LGPL); (2) the Artistic License (e.g., PERL); (3) the Mozilla Public License; (4) the Netscape Public License; (5) the Sun Community Source License (SCSL); (6) the Sun Industry Source License (SISL); and (7) the Apache Software license.

2. Limited Use

Any Public Software provided under the agreement shall be subject to the licenses, terms and conditions of its model. Licensee hereby agrees to comply with the terms and conditions applicable to any such Public Software, as set forth in its presentation on website.

3. Limited Liability

The supplier hereby express that the supplier shall have no liability for any costs, loss or damages resulting from Licensee's breach of the terms and conditions applicable to use, conversion or combination of the licensed software with or into Public Software.

4. NO WARRANTY

This program or licensed software is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY. THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH LICENSEE.

5. Public Software Name and Description

Table 4 Public Software Name and Description

Program Name	Copy Right Description	Origin Sour Code	Licenses or Distribution Models or its special license terms	License Terms Website Reference
Redboot	Copyright (C) 1998, 1999, 2000, 2001, 2002, 2003 Red Hat, Inc.	ftp://ftp.ge s.redhat.c om/private /gnupro- xscale- 030422/red boot-intel- xscale- 030630.tar. Z	eCos License	http://sources.re dhat.com/ecos/e cos-license/
Busybox		http://www .busybox. net/downl oads/busy box- 1.01.tar.bz 2	GNU GENERAL PUBLIC LICENSE Version 2	http://www.gnu.o rg/licenses/old- licenses/gpl- 2.0.html
brctl	Copyright (C) 2000 Lennert Buytenhek	http://nchc .dl.sourcef orge.net/s ourceforg e/bridge/br idge-utils- 1.0.6.tar.gz	GNU GENERAL PUBLIC LICENSE Version 2	http://www.gnu.o rg/licenses/old- licenses/gpl- 2.0.html
dropbear	Copyright (c) 2002- 2006 Matt Johnston Portions copyright (c) 2004 Mihnea Stoenescu	http://matt. ucc.asn.au /dropbear/ dropbear- 0.51.tar.bz	GNU GENERAL PUBLIC LICENSE Version 2	http://www.gnu.o rg/licenses/old- licenses/gpl- 2.0.html
hostapd	Copyright (c) 2002- 2006, Jouni Malinen <jkmaline@cc.hut.fi> and contributors</jkmaline@cc.hut.fi>	http://host ap.epitest. fi/releases/ hostapd- 0.4.8.tar.gz	GNU GENERAL PUBLIC LICENSE Version 2	http://www.gnu.o rg/licenses/old- licenses/gpl- 2.0.html
wpa_supp licant	Copyright (c) 2003- 2005, Jouni Malinen <jkmaline@cc.hut.fi> and contributors</jkmaline@cc.hut.fi>	http://host ap.epitest. fi/releases/ wpa_suppl icant- 0.4.7.tar.gz	GNU GENERAL PUBLIC LICENSE Version 2	http://www.gnu.o rg/licenses/old- licenses/gpl- 2.0.html
mtdutil		ftp://ftp.uk. linux.org/p ub/people/ dwmw2/mt d/cvs/mtd/ util/	GNU GENERAL PUBLIC LICENSE Version 2	http://www.gnu.o rg/licenses/old- licenses/gpl- 2.0.html
ntpclient	Copyright 1997, 1999, 2000, 2003 Larry Doolittle	http://dooli ttle.icarus. com/ntpcli ent/ntpclie nt_2003_1	GNU GENERAL PUBLIC LICENSE Version 2	http://www.gnu.o rg/licenses/old- licenses/gpl- 2.0.html

		94.tar.gz		
procps	Author: Albert Cahalan, Michael K. Johnson, Jim Warner, etc.	http://proc ps.sourcef orge.net/p rocps- 3.2.7.tar.gz	GNU GENERAL PUBLIC LICENSE Version 2 GNU LIBRARY GENERAL PUBLIC LICENSE Version 2	http://www.gnu.o rg/licenses/old- licenses/gpl- 2.0.html http://www.gnu.o rg/licenses/old- licenses/library.h tml
vsftpd	Author: Chris Evans	ftp://vsftpd .beasts.or g/users/ce vans/vsftp d- 1.1.2.tar.gz	GNU GENERAL PUBLIC LICENSE Version 2	http://www.gnu.o rg/licenses/old- licenses/gpl- 2.0.html
linux		ftp://ftp.ker nel.org/pu b/linux/ker nel/v2.6/lin ux- 2.6.20.3.tar .bz2	GNU GENERAL PUBLIC LICENSE Version 2	http://www.gnu.o rg/licenses/old- licenses/gpl- 2.0.html