


SERVICE MANUAL & PARTS LIST (without price)

QV-2400UX

(KX-785)

JUN. 2001

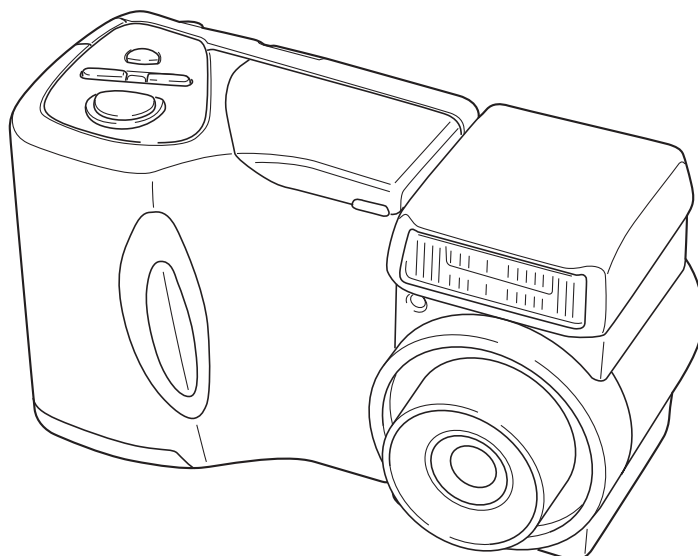

CASIO®

CONTENTS

SPECIFICATIONS	1
BLOCK DIAGRAM	3
ADJUSTMENT	4
■ Preparation	4
1. PROGRAM LOADING	5
1-1. Important notice	5
1-2. To load the program	5
2. Program version upgrading	7
2-1. How to confirm the program (graphic menu) version	7
2-2. Upgrading using CF card	8
3. Test mode	9
3-1. Booting	9
3-2. Item for testing	9
4. Adjustment	11
4-1. Color adjustment data writing	11
4-1-1. Note	11
4-1-2. The example which must be adjusted	11
4-1-3. To replace the lens ass'y	11
4-1-4. To replace CMD-PCB	13
4-2. Flash adjustment	15
4-3. Flash operation and recharge operation	16
4-4. Current consumption	17
4-5. VCOM DC adjustment	18
4-6. Operation check	20
5. D-PCB Assy	21
5-1. VCO free run frequency adjustment	21
5-2. VCOM AC adjustment and VCOM DC coarse adjustment	21
5-3. RGB AMP and Sub-Brightness voltage setting adjustment	22
5-4. Contrast and Brightness voltage setting adjustment	23
5-5. TINT setting adjustment	24
6. PW-PCB Assy	25
6-1. VCC3, VCC3-MD, VCC5, VCC7.5, EVCC3 Voltage check	25
6-2. VCC15, VEE7.5 Adjustment	25
DISASSEMBLY/ASSEMBLY	26
EXPLODED VIEW	36
PARTS LIST	37
PRINTED CIRCUIT BOARDS	40
SCHEMATIC DIAGRAMS	45


SPECIFICATIONS

File Format	Still images (including panoramas): JPEG (Exif. Ver. 2.1) / TIFF, DCF standard (Design rule for Camera File system), DPOF compatible Movies: AVI (Motion JPEG)																																											
Recording Medium	CompactFlash card (Type I/II), IBM Microdrive																																											
Recorded Image Size	1600 x 1200 pixels, 800 x 600 pixels																																											
Standard Memory Capacity, Number of Image Files, Computer Output Image Size																																												
<table><tr><th colspan="5">Still</th></tr><tr><th rowspan="3">Image size (pixels)</th><th rowspan="3">Quality</th><th rowspan="3">File size</th><th colspan="2">Number of images</th></tr><tr><th>8MB</th><th>340MB</th></tr><tr><th>Compact Flash card</th><th>Microdrive</th></tr><tr><td rowspan="3">1600 x 1200</td><td>FINE</td><td>850KB/image</td><td>8 images</td><td>401 images</td></tr><tr><td>NORMAL</td><td>600KB/image</td><td>11 images</td><td>562 images</td></tr><tr><td>ECONOMY</td><td>350KB/image</td><td>19 images</td><td>943 images</td></tr><tr><td rowspan="3">800 x 600</td><td>FINE</td><td>200KB/image</td><td>33 images</td><td>1587 images</td></tr><tr><td>NORMAL</td><td>150KB/image</td><td>43 images</td><td>2054 images</td></tr><tr><td>ECONOMY</td><td>120KB/image</td><td>53 images</td><td>2494 images</td></tr></table>					Still					Image size (pixels)	Quality	File size	Number of images		8MB	340MB	Compact Flash card	Microdrive	1600 x 1200	FINE	850KB/image	8 images	401 images	NORMAL	600KB/image	11 images	562 images	ECONOMY	350KB/image	19 images	943 images	800 x 600	FINE	200KB/image	33 images	1587 images	NORMAL	150KB/image	43 images	2054 images	ECONOMY	120KB/image	53 images	2494 images
Still																																												
Image size (pixels)	Quality	File size	Number of images																																									
			8MB	340MB																																								
			Compact Flash card	Microdrive																																								
1600 x 1200	FINE	850KB/image	8 images	401 images																																								
	NORMAL	600KB/image	11 images	562 images																																								
	ECONOMY	350KB/image	19 images	943 images																																								
800 x 600	FINE	200KB/image	33 images	1587 images																																								
	NORMAL	150KB/image	43 images	2054 images																																								
	ECONOMY	120KB/image	53 images	2494 images																																								
<table><tr><th colspan="2">Movie (320 x 240 pixels)</th></tr><tr><td>Storage Capacity</td><td>Approximately 300KB/second</td></tr><tr><td>Recording Time</td><td>16 seconds per movie</td></tr></table>					Movie (320 x 240 pixels)		Storage Capacity	Approximately 300KB/second	Recording Time	16 seconds per movie																																		
Movie (320 x 240 pixels)																																												
Storage Capacity	Approximately 300KB/second																																											
Recording Time	16 seconds per movie																																											
• The above figures are approximations only.																																												
Image Deletion	Single image; all images in a folder; all images in memory (with image protection)																																											
Imaging Element	1/2.7-inch CCD (Total Pixels: 2.11 million, Effective Pixels: 2.02 million)																																											
Lens	QV-2400UX : F2.8 to 4.5; f = 6.2 to 18.6mm (equivalent to 41 to 123mm lens for 35mm film) QV-2900UX : F3.2 to 3.5; f = 6 to 48mm (equivalent to 40 to 320mm lens for 35mm film)																																											
Zoom	QV-2400UX : Optical zoom: 3X Digital zoom: 12X (in combination with optical zoom) QV-2900UX : Optical zoom: 8X Digital zoom: 32X (in combination with optical zoom) Image size is 800 x 600 pixels when 4X digital zoom is used.																																											
Focusing	Contrast-detect Auto Focus; manual focus with macro mode and focus lock																																											
Focus Range	QV-2400UX : Normal focus: 10cm to ∞ (1X zoom) 50cm to ∞ (3X zoom) Macro focus: 1cm to 50cm (1X zoom) Manual focus: 1cm to ∞ (1X zoom) 50cm to ∞ (3X zoom) QV-2900UX : Normal focus: 40cm to ∞ (1X zoom) 1m to ∞ (8X zoom) Macro focus: 1cm to 50cm (1 to 1.6X zoom) Manual focus: 1cm to ∞ (1X zoom) 1m to ∞ (8X zoom) The focusing range is the distance from the lens surface to the subject.																																											
Exposure Control	Light Metering: Multi-pattern, center point, spot by CCD Exposure: Program AE, Aperture priority AE, Shutter priority AE Exposure Compensation: -2EV to +2EV (1/3EV units)																																											
Shutter	CCD electronic shutter; mechanical shutter, BULB, 60 to 1/2000 second																																											
Aperture	QV-2400UX : F2.8, F5.6, auto switching or manual switching QV-2900UX : F3.2, F4.8, F8, auto switching or manual switching																																											

White Balance	Automatic, fixed (4 modes), manual switching														
Self-timer	10 seconds, 2 seconds														
Built-in Flash	Flash Modes: AUTO, OFF, ON, Red eye reduction Flash Range: QV-2400UX : Approximately 0.5 to 2 meters QV-2900UX : Approximately 0.5 to 2.5 meters														
Recording Functions	Normal, movie, panorama, landscape, night scene, portrait, self-timer, macro, Best Shot, Interval														
Monitor	1.8" TFT, low-glare color HAST LCD (122,100 pixels, 555 x 220)														
Viewfinder	LCD Monitor or optical viewfinder														
Clock	Built-in quartz digital timepiece for time and date recording and storage with image data; auto calendar up to 2049														
Input/Output Terminals	DIGITAL IN/OUT, USB port (special mini port), AC adaptor connector, VIDEO OUT (NTSC, PAL), External flash sync terminal (QV-2900UX)														
Power Supply	Four AA-size alkaline or lithium batteries Four AA-size nickel-metal hydride rechargeable batteries (NP-H3) AC adaptor (AD-C620) AC adaptor charger (BC-3HA)														
Battery Life	The values noted below indicate the number of hours before battery failure under normal operating temperature (25°C). These values are for reference only, and do not guarantee that any particular set of batteries actually will provide the service life indicated. Low temperatures shorten battery life. <table><tr><th>Type of Operation</th><th>Continuous Playback</th><th>Continuous Recording</th></tr><tr><td>AA-size Alkaline Batteries LR6</td><td>170 minutes</td><td>80 minutes (480 shots)</td></tr><tr><td>AA-size Lithium Batteries FR6</td><td>300 minutes</td><td>200 minutes (1200 shots)</td></tr><tr><td>AA-size Ni-MH Batteries NP-H3</td><td>180 minutes</td><td>120 minutes (720 shots)</td></tr></table> • The above figures are approximations only. • The above guidelines are based on the following battery types: Alkaline: MX1500 (AA) DURACELL ULTRA Lithium: Energizer • Battery life varies with brand. Continuous recording values show the number of shots without using the flash. The number of shots depends on use of the flash and whether flash is turned on or off.			Type of Operation	Continuous Playback	Continuous Recording	AA-size Alkaline Batteries LR6	170 minutes	80 minutes (480 shots)	AA-size Lithium Batteries FR6	300 minutes	200 minutes (1200 shots)	AA-size Ni-MH Batteries NP-H3	180 minutes	120 minutes (720 shots)
Type of Operation	Continuous Playback	Continuous Recording													
AA-size Alkaline Batteries LR6	170 minutes	80 minutes (480 shots)													
AA-size Lithium Batteries FR6	300 minutes	200 minutes (1200 shots)													
AA-size Ni-MH Batteries NP-H3	180 minutes	120 minutes (720 shots)													
Power Consumption	QV-2400UX : Approximately 5.3W QV-2900UX : Approximately 5.8W														
Dimensions	QV-2400UX : 118(W) x 67(H) x 54(D) mm QV-2900UX : 121(W) x 80.5(H) x 66(D) mm														
Weight	QV-2400UX : Approximately 245g QV-2900UX : Approximately 295g (excluding batteries)														
Standard Accessories	8MB CompactFlash memory card, Strap; lens cap; cap holder; soft case (QV-2400UX); special USB cable; special video cable; data transfer cable; CD-ROM; four LR6 alkaline batteries; Basic Reference, Bundled Software User's Manual; Best Shot scene List														

- This camera does not have a separate battery to power its clock. Clock settings are cleared whenever power to the camera is cut off (by batteries going dead while the camera is not connected to an AC power outlet with the AC adaptor) for about 24 hours. After power is resumed, either by loading fresh batteries or connecting to an AC power outlet, you will have to set the correct time and date again.
- The liquid crystal panel built into this camera is the product of precision engineering, with a pixel yield of 99.99%. This also means, however that 0.01% of the pixels can be expected to fail to light or to remain lit at all times.

BLOCK DIAGRAM


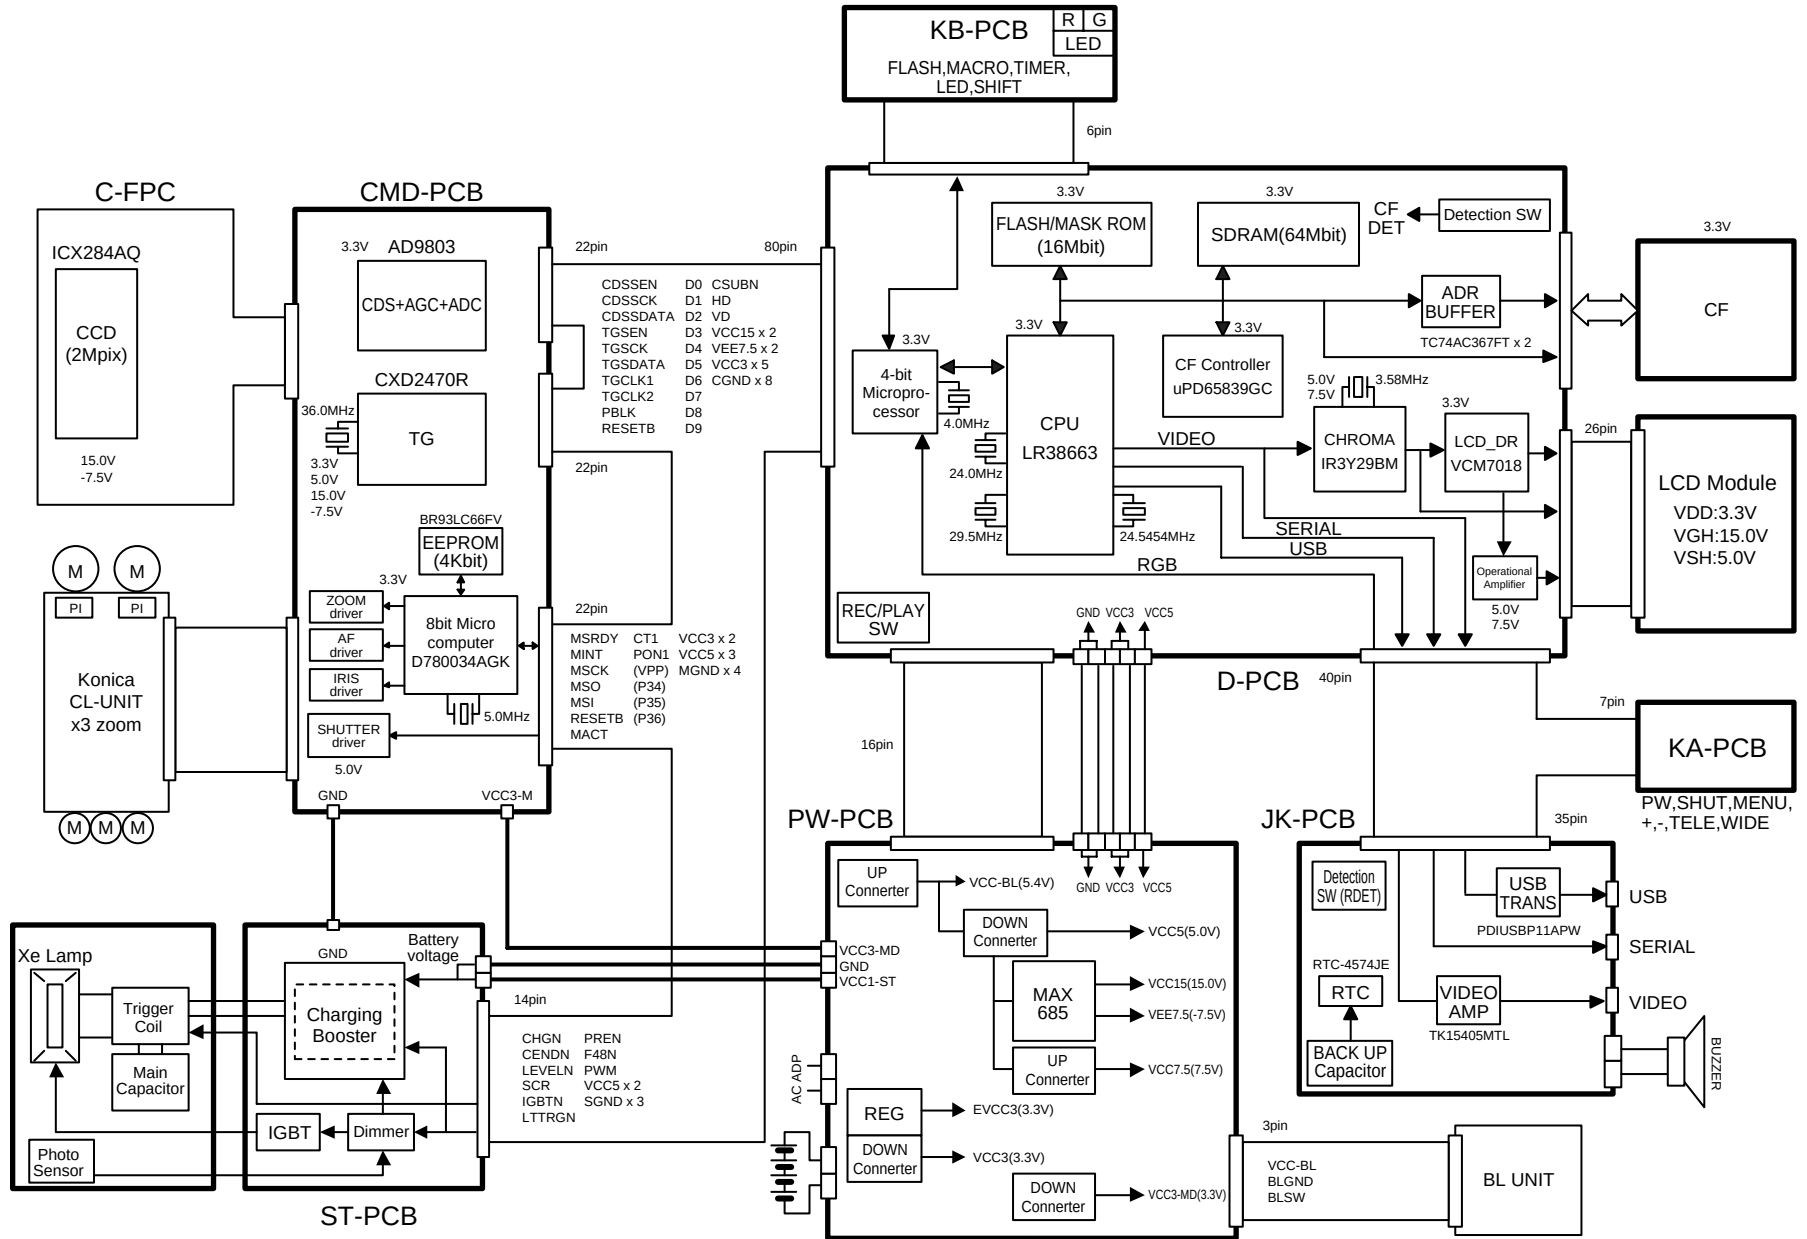


ADJUSTMENT

■ Preparation

1. PC (IBM Compatible)/OS:Windows 95/98
2. Link cable.
3. Adjustment program
 - 1) adj715.exe (Color adjustment data transfer program)
 - 2) fload.exe (Data transfer program for PC)
 - 3) _romxxxx.bin (Program data)
 - 4) _gmenuxxxx.bin (Graphic menu data)
4. AC adaptor or stabilizer
5. Digital oscilloscope
6. Multimeter
7. Ammeter
8. Frequency counter
9. TV (with video terminal)
10. Video cable
11. Battery (battery operation/battery cover lock)
12. PC link program : Photo Loader (Communication function confirmation)
13. USB cable/USB driver (USB function confirmation)
14. Test chart (for photography check)

That which carried out color printing of picture data "CHART1.JPG" and the "CHART2.JPG".

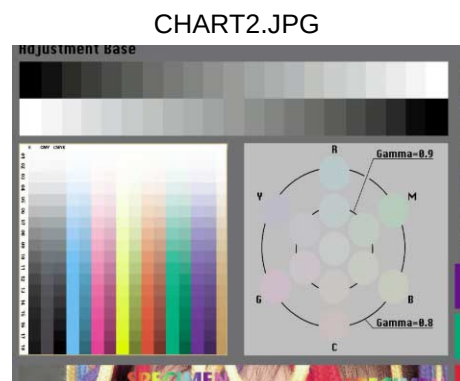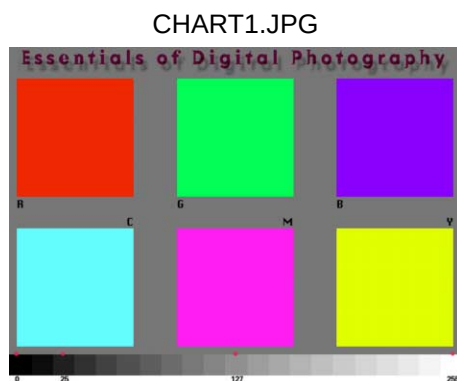

■ Notes

Normally power is supplied using AC adaptor.
When error occurs, use a voltage regulator, and supply the specified power.
Make sure to confirm video output specifications (NTSC or PAL) after exchanging the CMD-PCB.

1. PROGRAM LOADING

1-1. Important notice

Flash ROM on the D PCB contains camera's operating program and graphic menu. The D PCB is used in the models QV-2400UX and QV-2900UX however, the programs are different. Therefore, the PCB provided as a spare part cannot be discriminated which program is recorded.

(Or old program may be recorded.)

Be sure to load the program after you replace the D PCB.

Moreover, when you fail in raising the version of a program with CF card, a program breaks and a camera cannot be powered, please perform this method for loading program.

(You can upgrade the program by this loading method.)

Note: If QV-2900UX program is loaded in QV-2400UX, display indicates "NOT717 MOTOR" and the camera does not function.


1-2. To load the program

1. Turn the camera off and remove the CF card then close the CF cover. Disconnect the power source.
2. Connect the PC link cable.
3. Boot transferring program fload.exe. At this time, leave the camera's power off.
4. Choose the program data "_romXXXX.bin."

Notes:


*XXXX is 4-digit number depending upon the program version.

*When loading file is chosen, "loaded XXXXXX bytes" is indicated on Status screen.

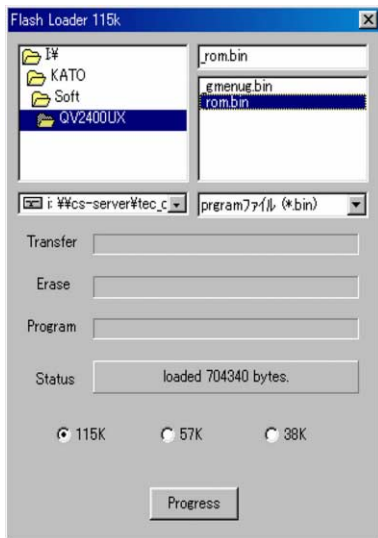

5. Choose the transfer speed 115K, 57K or 38K. If an error occurs, choose slow transfer speed.
6. Click Progress button on the fload.exe.

7. Connect an AC adaptor and turn the camera on within 5 seconds. Camera may be turned on automatically when an AC adaptor is connected. If not, use the power switch. Display shows “read time out” on Status screen and program data cannot be loaded if it takes too long time between clicking Progress button and turning camera on.
8. Program data is transferred. Program executes Transfer, Erase, Program in order.

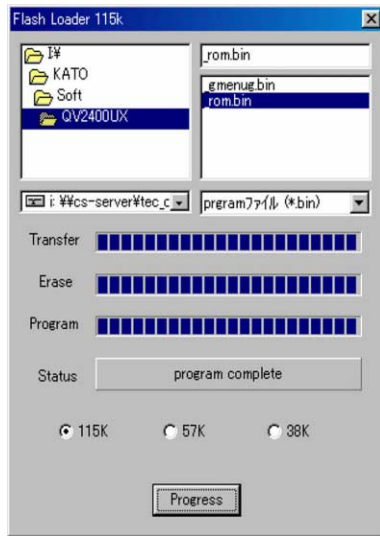

9. Program is loaded properly if Status screen shows “program completed”.
10. Disconnect the AC adaptor. (Power switch cannot turn the camera off.)
11. Choose graphic menu data “_gmenuXXXX.bin” on the above step 4 and perform steps 5 to 10.
12. Turn the camera off and insert CF card.
13. While pressing down SHIFT and MENU keys, turn the power on to set the camera in test mode and check the version number.
14. Turn the camera off then on again and perform the final check by shooting, playing back and erasing.

2. Program version upgrading

Please check the version and update it if the version is not updated.

Note: Be sure to use AC adaptor.

2-1. How to confirm the program (graphic menu) version

1. Boot the test mode.
Turn the power on while pushing SHIFT and MENU keys.
2. Check the LCD display.

(Example)

TEST MODE						
PROG	01.	04.	16.	10.	51	← Program version
GMENU	01.	04.	06.	10.	39	← Graphic menu version
. . . .						

(Latest version as of May 14, 2001.)

2-2 Upgrading using CF card

1. Copy the latest upgrade program (_romXXXX.bin) and graphic menu (_gmenuXXXX.bin) on CF card's root directory and set the CF card in the camera.
2. Connect an AC adaptor to the camera.
3. Set the camera in PLAY mode and turn the power on while pushing MENU key.


The following screen will be shown.



This time "VER1.000" will be shown.

4. Press [+] key to select "YES" and push the shutter button.

The following screen will be shown and loading starts.

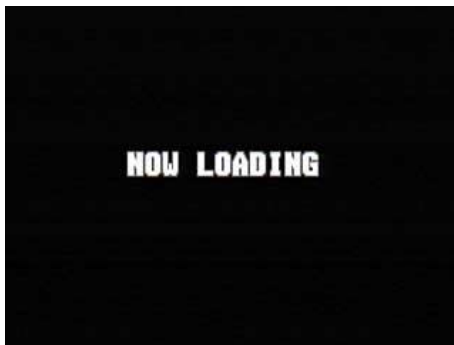

5. After about 1 minute, display shows "COMPLETE!" and camera is set in the PLAY mode.
6. Turn the camera off and change CF card to the one for shootings.
7. Set the camera in the test mode by turning power on while pushing down SHIFT and MENU keys and check the version number.
8. Turn the power off then on again and perform the final check by shooting, playing back and erasing.

3. Test mode

Note: Do not perform the menu item unless explained here.

(It may damage the internal data and camera becomes unusable.)

3-1. Booting

To boot the test mode;

Turn the camera on while pressing SHIFT and MENU buttons.

To boot MENU1 (Must be done in the test mode)

Press SHIFT → SHIFT → MENU keys in order rapidly.

To boot MENU2 (Must be done in the test mode)

Press FLASH → FLASH → MENU keys in order rapidly.

To boot MENU3 (Must be done in the test mode)

Press SELF → SELF → MENU keys in order rapidly.

* To execute

Use + or – keys to select a test item then press shutter button to execute it.

3-2. Item for testing

① TEST MODE

	→ • TEST MODE → • PROGRAM Version → • Graphic Menu Version → • Loader Version → • Motor MCU Version → • Power MCU Version → • CCD ADJUST 1 (Yes/No/NG) → • CCD ADJUST 2 (Yes/No/NG) → • STROBE ADJUST (Yes/No/NG) → • KIZU ADJUST (Yes/No/NG) → • ZOOM ADJUST (Yes/No/NG) → • FOCUS ADJUST (Yes/No/NG)	Indicates in green-color if all items have been adjusted. Indicates "YES" if adjustments have been completed. Indicates "NO" if adjustments have not been proceeded. Indicates "NG" if an adjustments failure occurred.
---	--	---

② MENU1



③ MENU2

```
MENU2
1. CCD ADJ ALL
2. ZOOM ADJUST
3. CCD1 (AWB)
4. CCD2 (SHUTTER)
5. KIZU
6. FOCUS ADJUST
7. STROBE ADJUST
```

④ MENU3

```
MENU3 1/3
1. DISPLAY LENS ADJ
2. REC INFO
3. BATT. TEST
4. PROG+GMENU UPDATE
5. PROG UPDATE
6. GMENU UPDATE
7. CHECK SUM
8. OSD DATA CHECK
9. ERROR MESSAGE CHECK
10. SDRAM CHECK
```

```
MENU3 2/3
11. KEY CHECK
12. LED CHECK (CONTROL)
13. CF CHECK
14. CF WRITE TEST
15. AF DATA SAVE
16. EEPROM TEST
17. ADJ CLEAR
18. NOISE CAPTURE
19. BAYER CAPTURE
20. SHUTTER CLOSE REC
```


```
MENU3 3/3
21. SHUTTER SPEED CONST
22. WHITE
23. BLACK
```

4. Adjustment

4-1. Color adjustment data writing

4-1-1. Note

- (1) Set of lens ass'y adjusted in the factory and a floppy disc containing the lens' adjustment data are provided as a spare part.
- (2) These adjustment data are stored in the EEPROM on CMD-PCB.
- (3) Help command on adjustment window cannot be used as it uses Japanese system.



4-1-2. The example which must be adjusted


It is necessary to write color adjustment data for the replacements of the following units.

- (1) Lens ass'y : [4-1-3]
- (2) CMD-PCB : [4-1-4]

4-1-3. To replace the lens ass'y

- (1) Replace the lens ass'y.
- (2) Connect an AC adaptor and PC link cable to the camera.
- (3) Turn the camera on to set it on PLAY mode.
- (4) Boot adjustment program adj715.exe.

At this time, each adjustment data are 0.

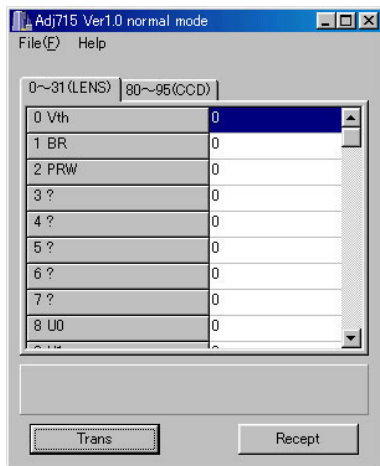

- (5). Insert the adjustment data floppy disc which comes with the lens ass'y in a PC and load the adjustment data.

File (F) -> Open (O)

Select floppy disc drive

Select adjustment data which has extension "adj" and load it. If there is no extension "adj", the file will not be shown. In such a case, put the extension utilizing windows' explorer.




Adjustment data file name; 715XXXXX.adj

(XXXXXX; 5-digit serial number)

* This number is printed on a seal stuck on the side of the lens unit.

- (6). Transfer the adjustment data to the camera.
Click Trans button on the adjustment program.
Send OK will be shown.

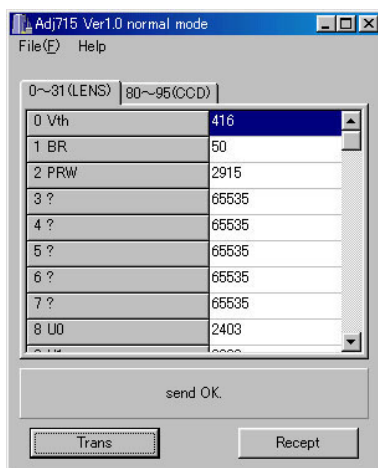

- (7). Turn the camera on.
(8). While pushing SHIFT and MENU keys, turn the power on to set the camera in the test mode and make sure that all the adjustment items are "YES".

CCD1	YES	STROBE	YES
CCD2	YES	KIZU	YES
		ZOOM	YES
		FOCUS	YES

- (9). Check the performance by shooting, playing back, and erasing pictures.
(10). Perform the flash adjustment (important).

4-1-4. To replace CMD-PCB


- (1) Connect AC adaptor and PC link cable to the camera.

Note: Connect the link cable to serial port COM1.

- (2) Turn the camera on to set it on PLAY mode.


- (3) Boot adjustment program adj715.exe.

At this time, each adjustment data are 0.

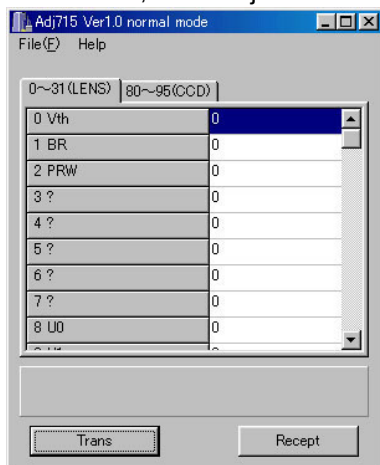

- (4) Read the adjustment data of before repairs.

Click the Recept button. "receive OK" will be indicated and adjustment data are shown.

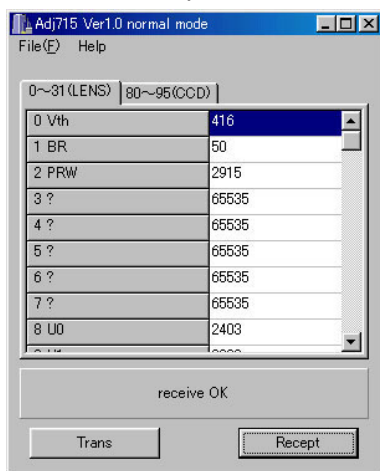

- (5) Save the adjustment data in the PC.

File (F) -> Save as (A)

Select a drive to save data.


Name a file name then save the data.

(It is better to name the camera's serial number as the file name.)


XXXXXXXXX.ADJ (Note: do not forget the extension code .ADJ.)

- (6) Replace the CMD-PCB.
- (7) Connect AC adaptor and PC link cable to the camera.
- (8) Turn the camera on and set it on PLAY mode.
- (9) Boot the adjustment program (adj715.exe).

- (10) Load the saved data of the lens unit.

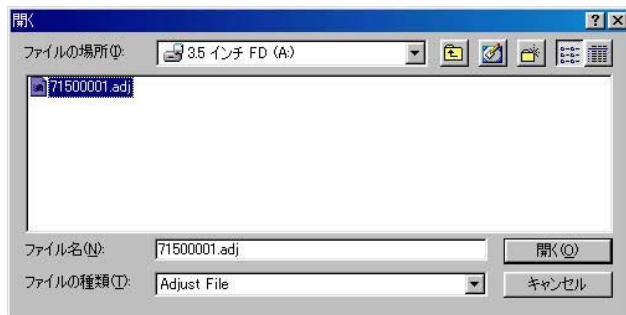

- (11) Transfer the data to the camera.
Click Trans button on ADJ window.
“send OK” will be shown.

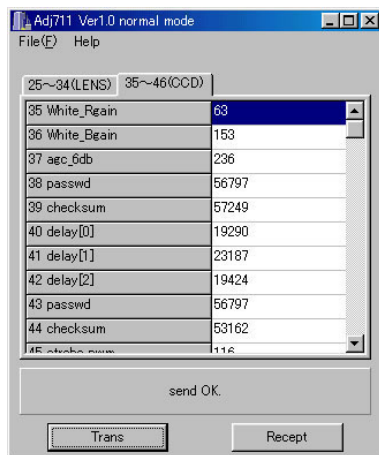

- (12) Turn the camera off.
(13) Booting the test mode, be sure that each adjustment item is YES.
Power on while pressing DISP and MENU keys simultaneously.

CCD1	YES	STROBE	YES
CCD2	YES	KIZU	YES
		ZOOM	YES
		FOCUS	YES

- (14) Check the performance by shooting, playing back, and erasing pictures.

4-2. Flash adjustment

1. General

When you exchange a flash unit, please perform this adjustment.

2. Necessary equipment

- (1) Dark room
- (2) AC adaptor
- (3) Gray paper (Superior's oxford gray No. 22)

The following sizes are available from us (also available from camra shop).

Parts code	Parts name	Specifications
1904 5411	Superior photographing background paper	No. 22 (1.75 x 2.7m)
1904 5412	Sperior photographing background paper	No. 22 (2.72 x 11m)

3. Condition

- (1) Perform in a dark room.
- (2) Distance between flash lens and gray paper should be 70 ± 5 cm.
- (3) Use lighter color of the gray paper.


Paper should be larger enough to fit in a picture taken from 70 cm distance.

(Reference; more than 1.5m x 2.0m)

4. Adjustment

- (1) Connect an AC adaptor to the camera.
- (2) Set the camera in REC mode.
- (3) Boot MENU 2 in the test mode by the following operations;
Turn the power on while pushing SHIFT and MENU keys.
Push FLASH, FLASH, and MENU keys rapidly in order.
- (4) Using + and – keys, select STROBE ADJ and push the shutter release button.
- (5) Adjustment is completed after emitting flash 5 times.
1st flashing; Checking amount of light in normal shooting
(Emitting 4 times maximum changing PWM value.)
2nd flashing; Confirming amount of light of the 1st flashing.
3rd flashing; Checking brightness after changing PWM value.
4th flashing; Checking the circuit for changing aperture (F2.8 -> F5.6).

5. Block diagram

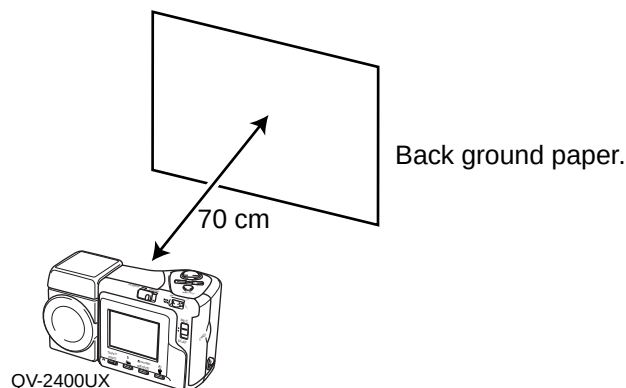

4-3. Flash operation and recharge operation

1. General

When you exchange a flash unit, please perform this adjustment.

2. Necessary equipment

- (1) Dark room
- (2) AC adaptor
- (3) Gray paper (Superior's oxford gray No. 22)

The following sizes are available from us (also available from camra shop).

Parts code	Parts name	Specifications
1904 5411	Superior photographing background paper	No. 22 (1.75 x 2.7m)
1904 5412	Sperior photographing background paper	No. 22 (2.72 x 11m)

3. Condition

- (1) Perform in a dark room.
- (2) Distance between flash lens and gray paper should be 70 ± 5 cm.
- (3) Use lighter color of the gray paper.


Paper should be larger enough to fit in a picture taken from 70 cm distance.

(Reference; more than 1.5m x 2.0m)

4. Adjustment

- (1) Connect an AC adaptor to the camera.
- (2) Set the camera in red-eye reduction mode.
- (3) Shoot a back ground paper (confirm pre-flashing and actual flashing.)
- (4) Connect the camera and TV's video terminal with a video cable and check the picture.
Should not be too white, too dark, or colored.
- (5) Flash charging current should not exceed 1.3 A.
- (6) Shoot in non-flash mode and confirm flash does not emit light.

5. Block diagram

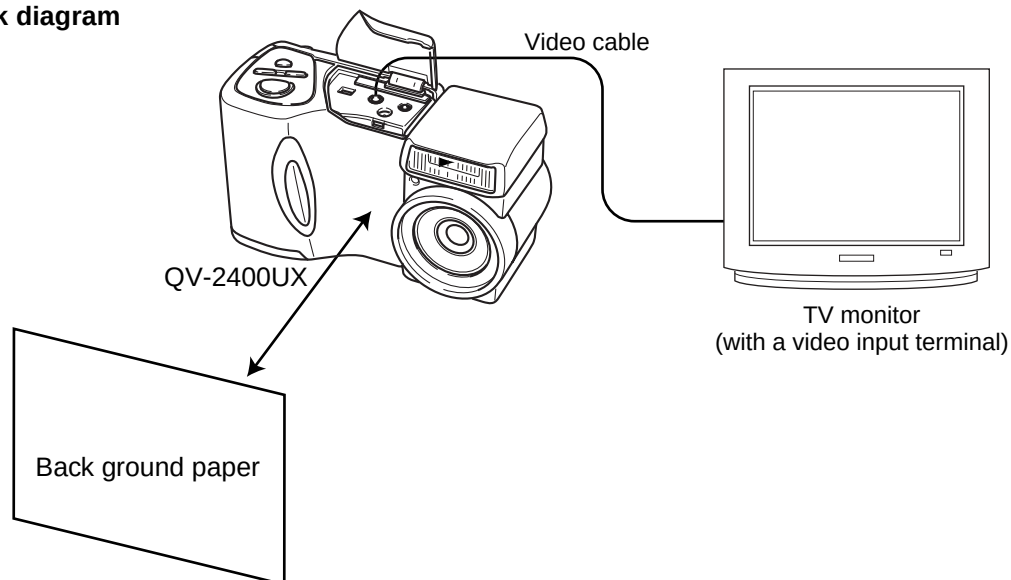

4-4. Current consumption

1. General

When consumption of a battery is early, check.

2. Conditions

- Set QV-2400UX to “PLAY” mode.


3. Preparation

- (1) Voltage regulator.
- (2) Ammeter.


4. Adjustment procedure

- (1) Current consumption (DC in = 6.0 ± 0.1 [V])
 - Make sure that current consumption is less than 500 mA in PLAY mode.
 - Make sure that current consumption is less than 650 mA in REC mode.
(Flash charge current is not included)
- (2) Lower the voltage from 6 V as shown below then make sure the battery warning indicator changes.

DC in = 5.0 ± 0.05 [V] (one indicator is off)



DC in = 4.65 ± 0.05 [V] (two indicators are off)



DC in = 4.35 ± 0.05 [V] (All the indicators are off)



4-5. VCOM DC adjustment

1. General

Perform these adjustments when you replace LCD module or D-PCB.

2. Preparation

- (1) AC adaptor or stabilizer.
- (2) Photo sensor (S1153)/ Photo sensor amp (C2719)
- (3) Digital oscilloscope.
- (3) B. P. F

NTSC: Center frequency; approx. 60 ± 5 Hz


PAL: Center frequency; approx. 50 ± 5 Hz

3. Adjustment and checking

- (1) Boot MENU 1 on the test mode.
 1. Turn the camera on while pushing SHIFT and MENU keys.
 2. Push SHIFT keys twice then MENU keys rapidly.
- (2) Select and execute 50 PERCENT GRAY.
- (3) Monitor the Photo Sensor Amp output via a bypass filter with an AC meter and adjust VR321 so that the meter needle swing is minimum.


Instead of an AC meter, you can use an oscilloscope. In that case, adjust VR321 for minimum ripple component.

4. Block diagram

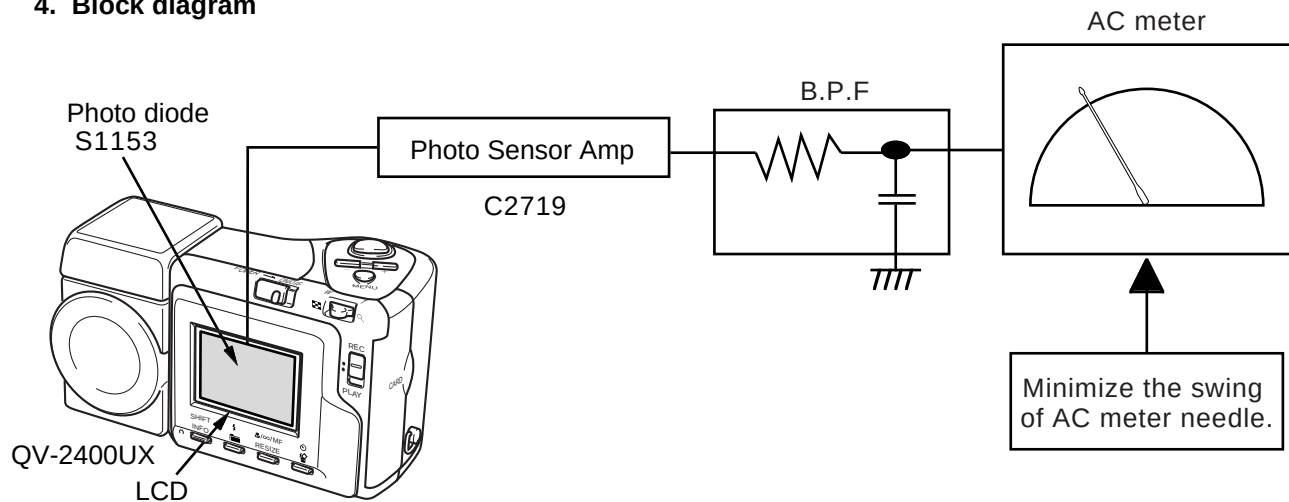

Note: Easy adjustment

- (1) Boot MENU 1 on the test mode.
 1. Turn the camera on while pushing SHIFT and MENU keys.
 2. Push SHIFT keys twice then MENU keys rapidly.
- (2) Select and execute GRAY SCALE (10 STEP).
- (3) Adjust VR321 for distinctive 10 gray steps.

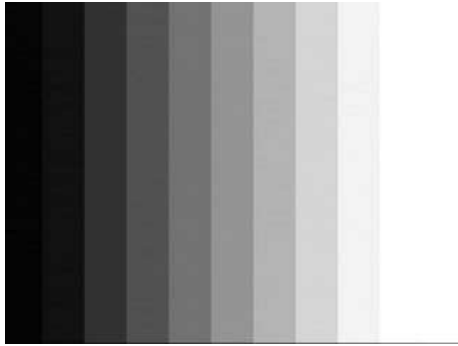

4-6. Operation check

1. General

After repairs, please check if needed.

2. Preparation

- (1) Batteries.
- (2) AC adaptor.
- (3) PC (IBM compatible)/OS:Windows 95/98.
- (4) Link cable.
- (5) Photo loader (program).
- (6) TV (with video terminal).
- (7) Video cable.
- (8) USB cable/USB driver
- (9) Test chart (for photography check)

(That which carried out color printing of picture data "CHART1.JPG" and the "CHART2.JPG".)



3. Check matter

- (1) Shock and flash check (essential)
 - ① Shoot the test chart without flashing.
 - ② Shoot the test chart with flashing.
 - ③ Confirm the result (compare with properly functioning camera) for;
 - Color
 - Focus and resolution
- (2) Anti-shock, Battery operations, AC Adaptor check
- (3) Power jack, switch, buttons operations
- (4) CompactFlash insertion/eject operation, Cover open/close operation, battery cover open/close operation. Lens block rotation
- (5) Image reversing, Normal/Macro switching, ZOOM operation, AE operation, AF operation, Self-timer count down display, exposure adjustment function, flash display function, self-timer function.
- (6) Video output, serial communication, USB function.
- (7) Appearance check (Dust on the lens, scratch, dirt, damage, etc.)

4. Note

- (1) Make sure Video out setting are appropriate to your country.
(i.e. Japan=NTSC, England = PAL)

5. Test chart picture

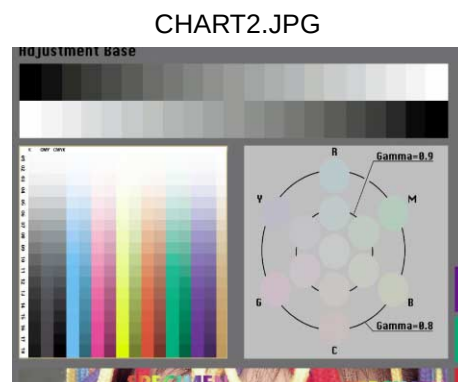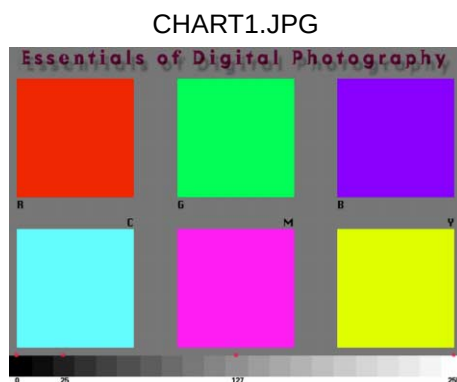

5. D-PCB Assy

5-1. VCO free run frequency adjustment

Room temperature should be 20 ± 10 °C

1. Preparation

- AC adaptor or voltage regulator
- Frequency counter

2. Adjustment procedure

- (1) Connect SYF (CP355) and GND (CP344).
- (2) Monitor HDB (CP301) with frequency counter and adjust VR320 so that frequency becomes 15.734 ± 0.1 KHz.
- (3) After completing adjustment, disconnect SYF (CP355) and GND (CP344).

5-2. VCOM AC adjustment and VCOM DC coarse adjustment

1. General

Perform these adjustments after D PCB or LCD module is replaced.


2. Preparation

- AC adaptor or voltage regulator
- Digital oscilloscope

3. Adjustment procedure

- (1) Make sure amplitude of VCOM output (CP340) is 5.15 ± 0.30 Vp-p.
- (2) Adjust VR321 so that maximum VCOM output (CP340) will be 3.60 ± 0.20 V.

4. Connection diagram

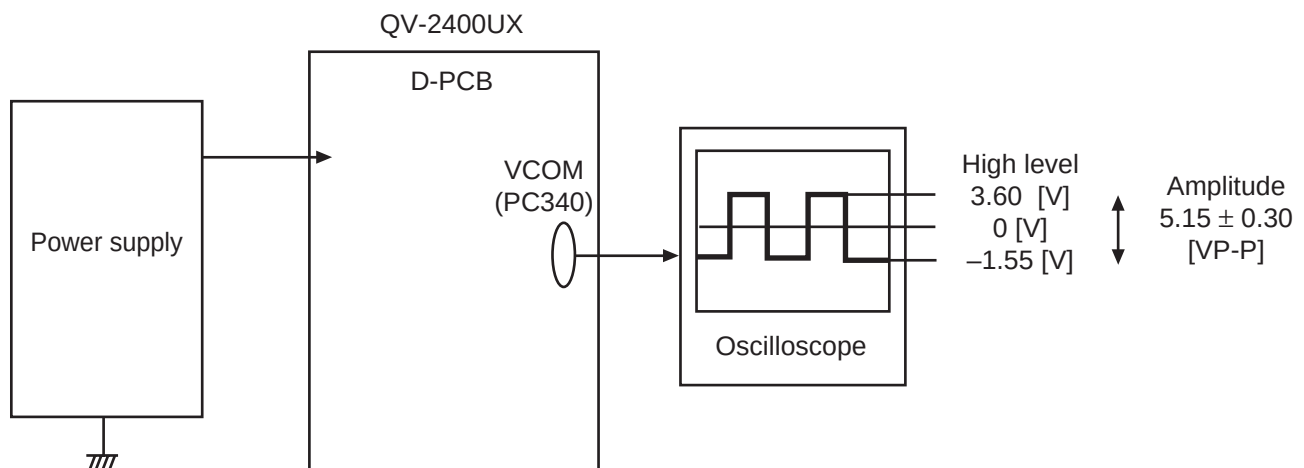

5-3. RGB AMP and Sub-Brightness voltage setting adjustment

1. General

Perform the following adjustments in order.

5-3. RGB AMP and Sub-Brightness voltage setting adjustment

5-4. Contrast and Brightness voltage setting adjustment

5-5. TINT setting adjustment

2. Preparation

- AC adaptor or voltage regulator
- Digital oscilloscope

3. Adjustment procedure

- (1) Start up Test mode Menu1.
 1. Turn POWER on while pressing SHIFT key and MENU button simultaneously
 2. Quickly press keys in the order of SHIFT key, SHIFT key and MENU key.
- (2) Select / Execute GRAY SCALE (10 step). (NTSC)
- (3) Impress the killer terminal (CP308) with VCC5 (CP520) voltage through a 22 k Ω resistance.
- (4) Trigger VG waveform (CP322) by FRP (CP300) signal to adjust as noted below.
- (5) Adjust RGB-AMP VR (VR302) so that pedestal-pedestal voltage of VG(CP322) signal is 4.70 ± 0.05 Vp-p.
- (6) Adjust SUB R BRIGHT VR (VR305) so that potential between VR (CP320) signal's pedestal and pedestal is 4.70 ± 0.05 Vp-p.
- (7) Adjust SUB B BRIGHT VR (VR304) so that potential between VB (CP324) signal's pedestal and pedestal is 4.55 ± 0.05 Vp-p.

3. Notes

- Consecutively, execute **5-4. Contrast and Brightness voltage setting adjustment**.
- Make sure that waveforms are not distorted.

4. Connection diagram

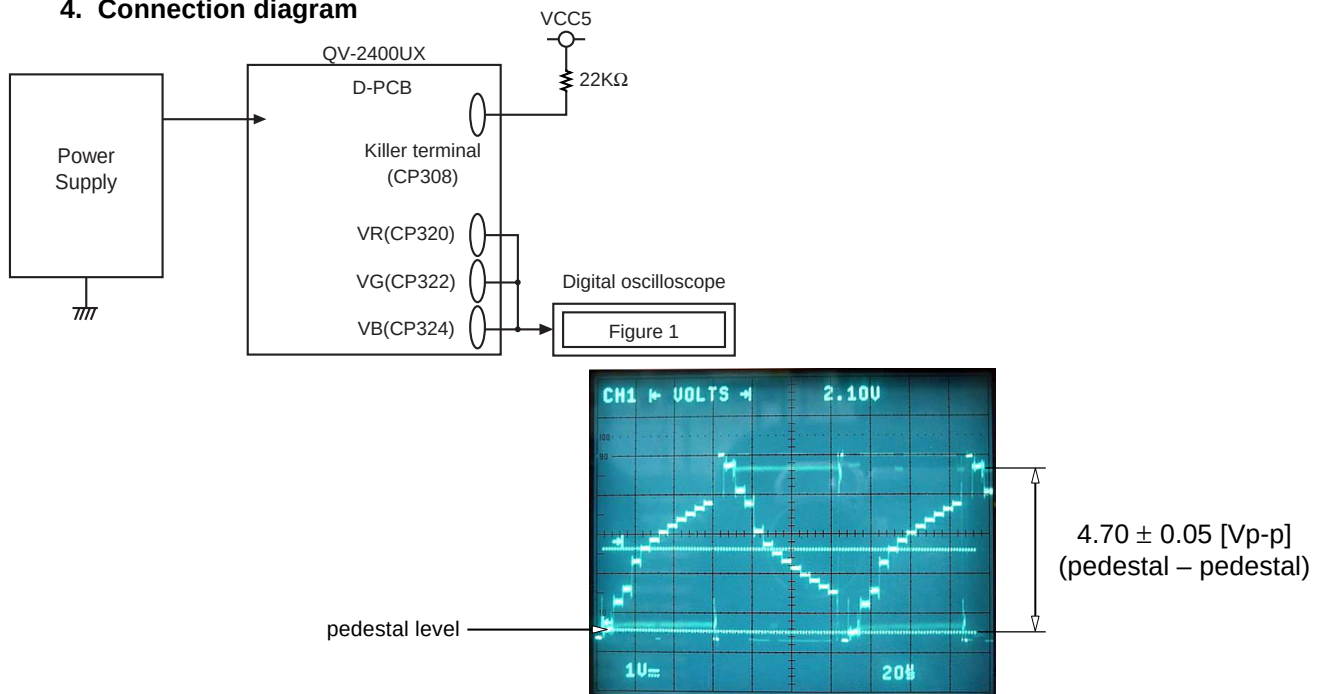


Figure 1

5-4. Contrast and Brightness voltage setting adjustment

1. Preparation

- AC adaptor or voltage regulator
- Digital oscilloscope

2. Adjustment procedure

- (1) Start up Test mode Menu1.
 1. Turn POWER on while pressing SHIFT key and MENU button simultaneously
 2. Quickly press keys in the order of SHIFT key, SHIFT key and MENU key.
- (2) Select / Execute GRAY SCALE (10 step). (NTSC)
- (3) Trigger VG waveform (CP322) by FRP (CP300) signal to adjust as noted below.
- (4) Adjust CONTRAST VR (VR306) so that contrast terminal voltage(CP302) signal is 1.50 ± 0.05 V.
- (5) Adjust BRIGHT VR (VR303) so that potential between signal's pedestal and 4 step is 2.25 ± 0.05 Vp-p.
- (6) Adjust CONTRAST VR (VR306) so that potential between signal's pedestal and 10 step is 2.85 ± 0.05 Vp-p.
- (7) Remove the resistance set between the killer terminal (CP308) and the VCC5 (CP520).

3. Notes

- Consecutively, execute **5-5. TINT setting adjustment**.
- Make sure that waveforms are not distorted.

4. Connection diagram

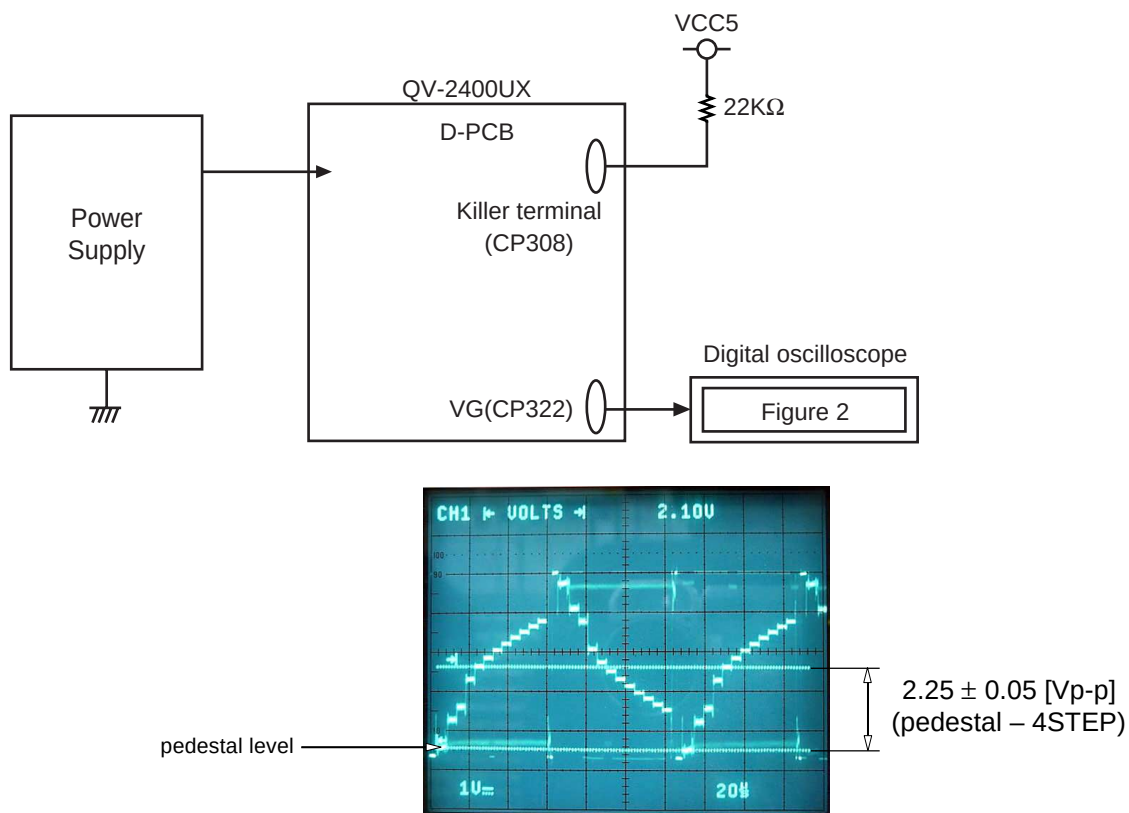


Figure 2

5-5. TINT setting adjustment

1. Preparation

- AC adaptor or voltage regulator
- Digital oscilloscope


2. Adjustment procedure

- (1) Start up Test mode Menu1.
 1. Turn POWER on while pressing SHIFT key and MENU button simultaneously
 2. Quickly press keys in the order of SHIFT key, SHIFT key and MENU key.
- (2) Select / Execute COLOR BAR. (NTSC)
- (3) Trigger FRP (CP300) signal to adjust as noted below.
- (4) Adjust the VR301 in order to set the potential difference of the fourth pulse height B (between a pedestal and the peak) and the second pulse height A (between a pedestal and the peak) of the four pulses of the VB wave form (CP324) to be less than 0.1 [Vp-p].

3. Notes

- Perform the adjustment consecutively after RGB AMP, Sub brightness, Brightness adjustments.

4. Connection diagram

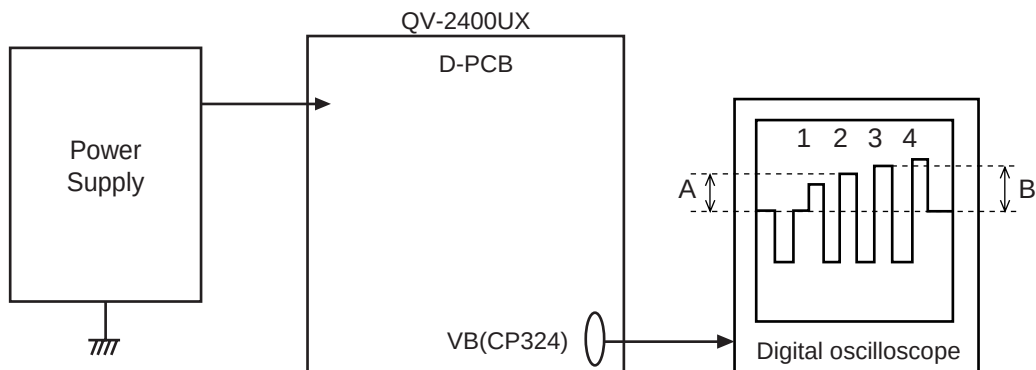

6. PW-PCB Assy

6-1. VCC3, VCC3-MD, VCC5, VCC7.5, EVCC3 Voltage check

1. Preparation

- AC adaptor or voltage regulator
- Multimeter

2. Adjustment procedure

Confirm the following voltages.

VCC3 (CP110) = 3.30 ± 0.10 [V]

VCC3 -MD (CP115) = 3.30 ± 0.10 [V]

VCC5 (CP125) = 5.00 ± 0.15 [V]

VCC7.5 (CP130) = 7.50 ± 0.50 [V]

EVCC3 (CP140) = 3.30 ± 0.10 [V]

6-2. VCC15, VEE7.5 Adjustment

1. Preparation

- AC adaptor or voltage regulator
- Multimeter

2. Adjustment procedure


• Adjust VR135 so that VCC15 (CP136) = 15.0 ± 0.10 V.

• Adjust VR136 so that VEE7.5 (CP135) = -7.5 ± 0.10 V.

DISASSEMBLY



1. Remove two screws at the bottom.

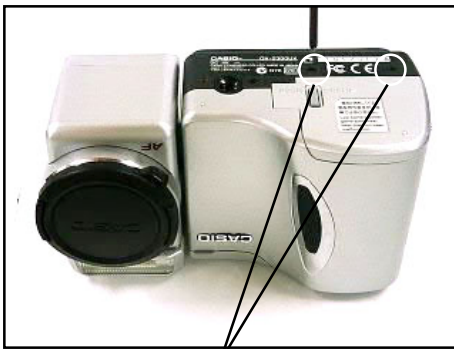

2. Rotate the CAM case and unscrew one screw on the side.



3. Rotate the CAM case to the other side and unscrew one screw on the side.




4. Open the Case.



5. Remove the connector (CN530).




6. Remove the connector (CN522).

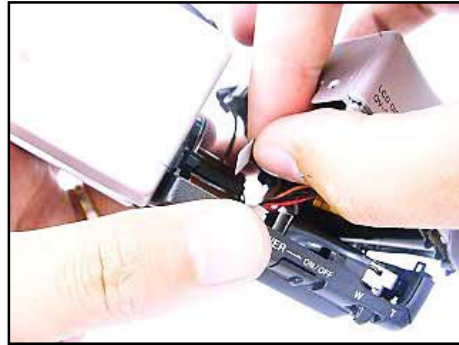


7. Remove the connector (CN521).



8. Remove the connector (CN900).

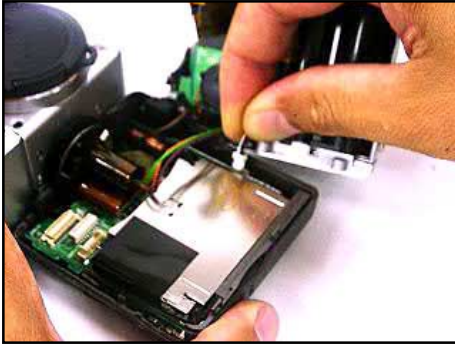


12. Remove two screws affixing the lens block.

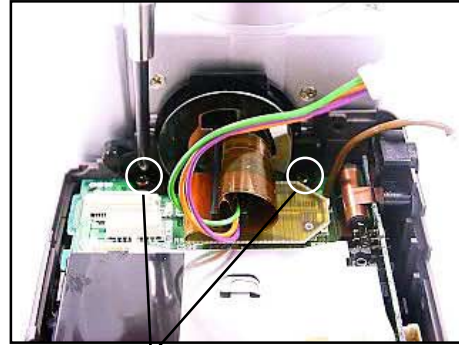

Screws


9. Remove the connector (CN101).

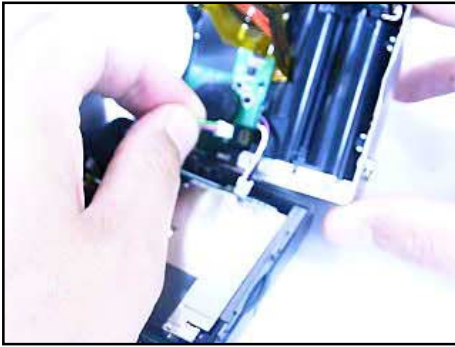


13. Remove the connector (CN510).




10. Lift up the bending of solderless terminal.

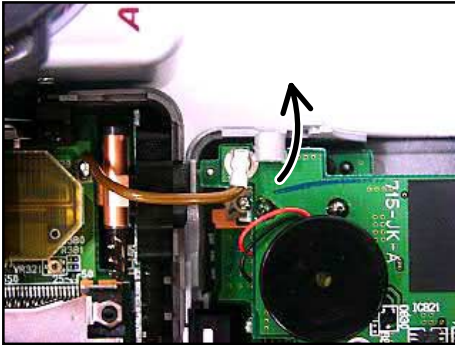


14. Separated in three blocks.

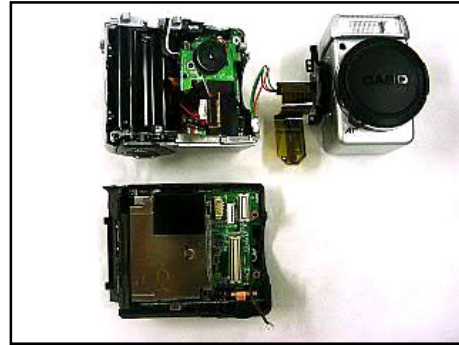


11. Remove the Screw.

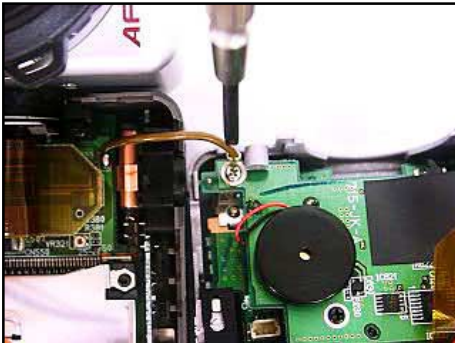


15. Remove the Screw.

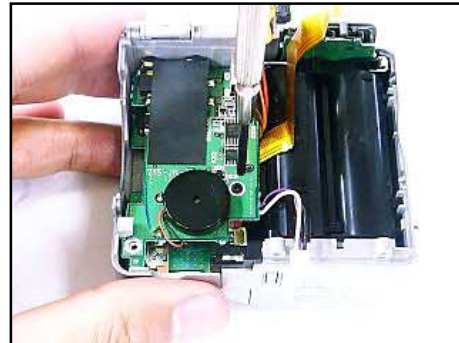


16. Remove the JK-PCB.

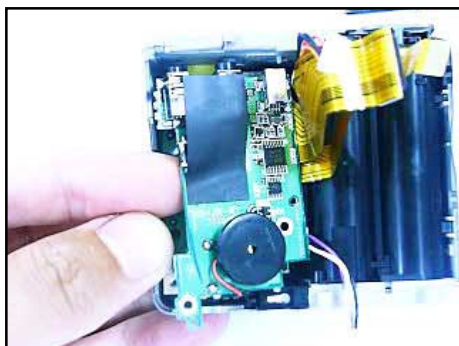

20. Open the case.

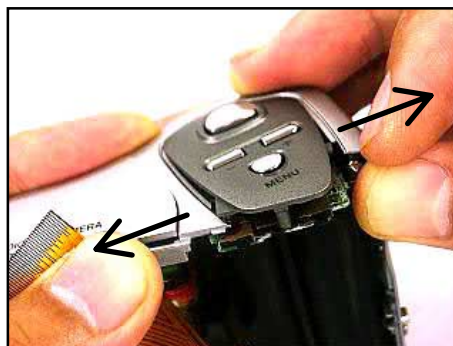


17. Remove the connector (CN800).

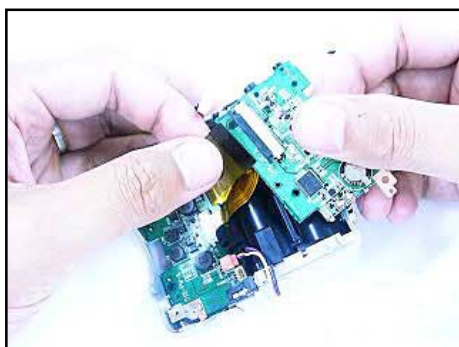


21. Remove the upper case.



18. Remove the Battery cover.

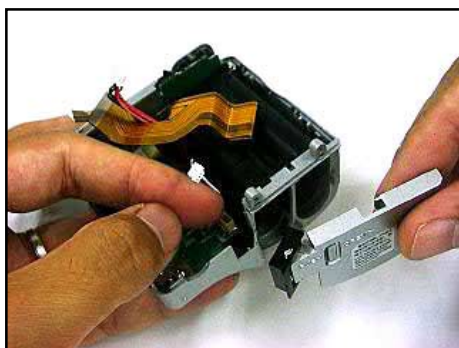


22. Remove the connector (CN100).

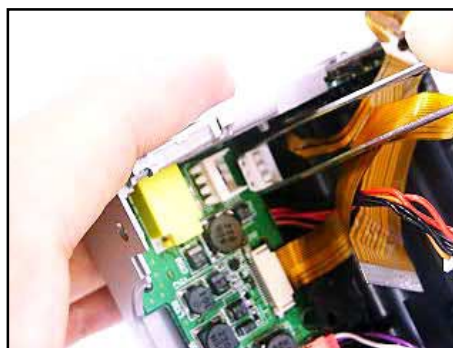


19. Remove the screw at the bottom.




23. Remove the battery holder.

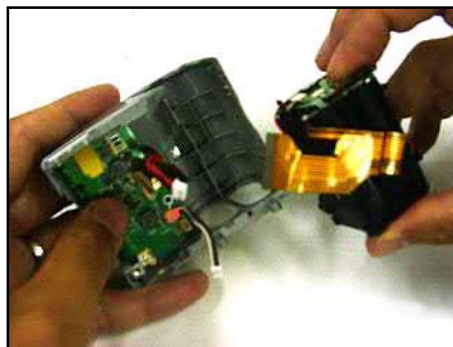

24. Remove the screw.

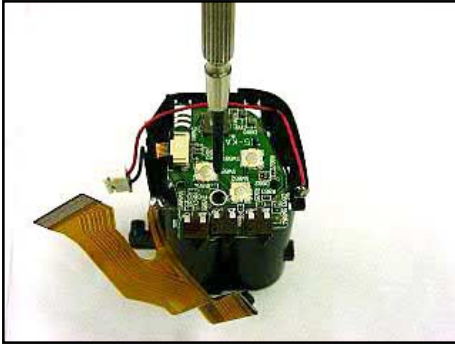


25. Remove the KA-PCB.

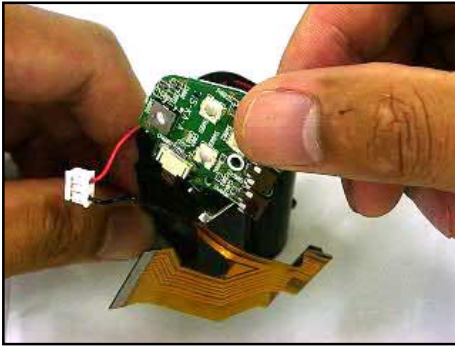


28. Remove the screw.



29. Remove the D-PCB.

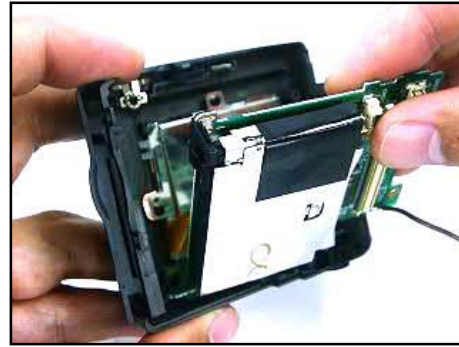


26. Remove two screws.

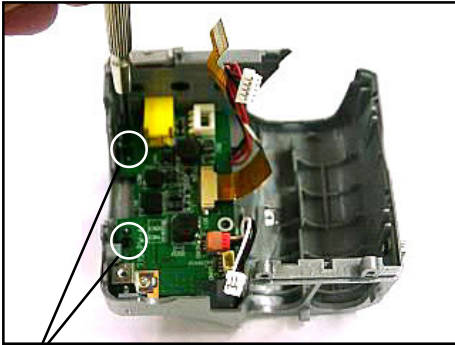

Screws


30. Remove the connector (CN540).

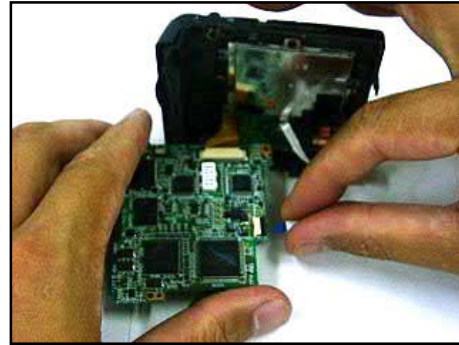

27. Remove the PW-PCB.



31. Remove three screws.

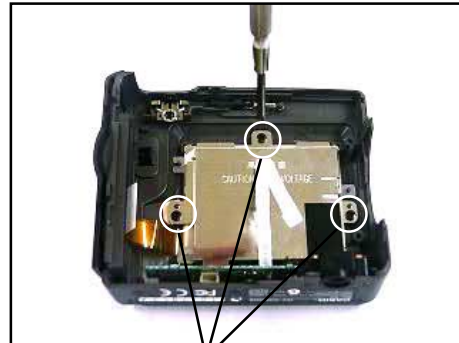


Screws


32. Remove the Back Light.




33. Remove the LCD.

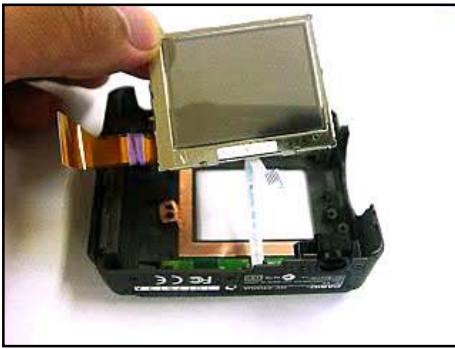

34. Remove two screws.

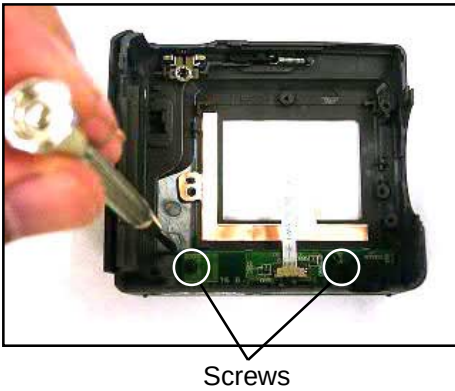


35. Remove the KB-PCB.

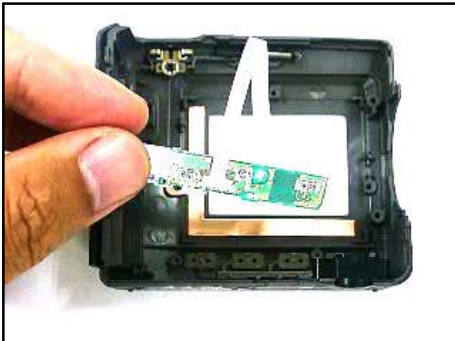



LENS BLOCK

1. As you push a hook from a top, fit a driver over the slot of the lens side.


NOTE: Be careful not scratch the case.

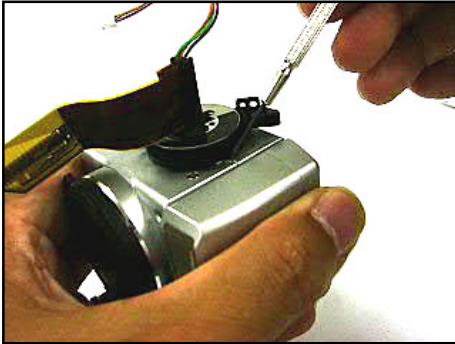


2. Lift the screw driver so that the hook goes under the case.

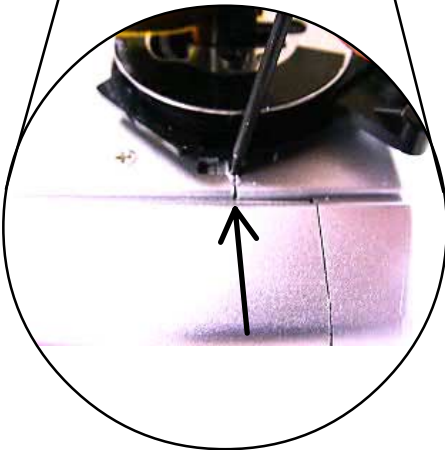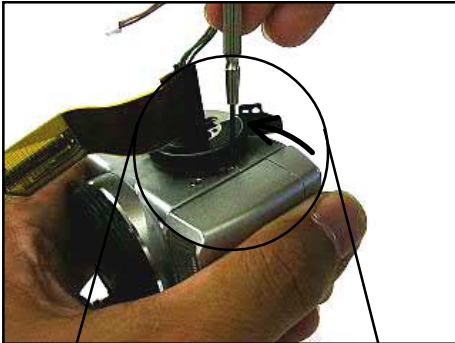


3. Do the same thing on the other side.

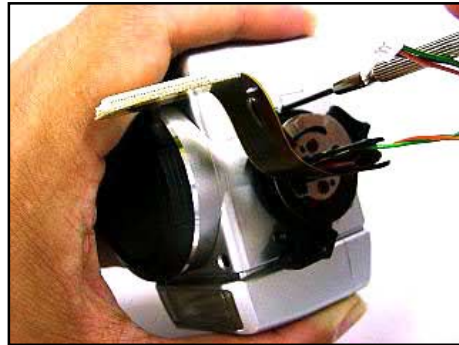


4. Open the case from the flash side.

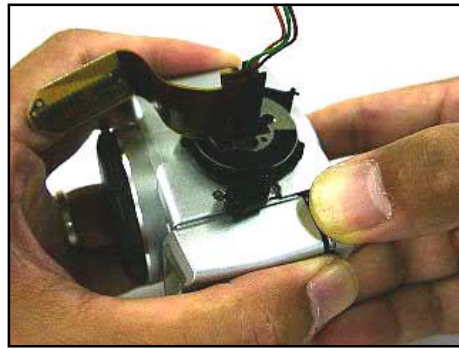

5. Remove the Case.

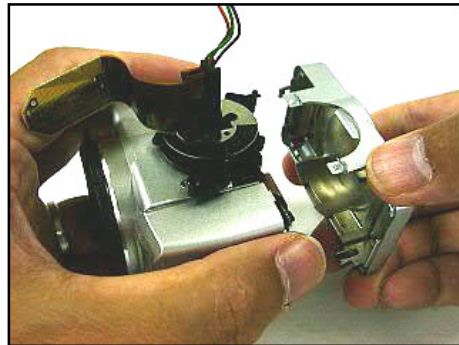


6. Unsolder the lead wire.

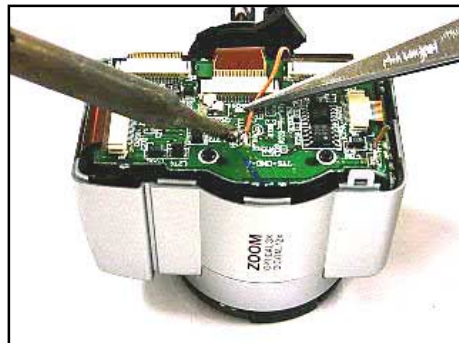


8. Unsolder the lead wire.




12. Remove the connector (CN250).

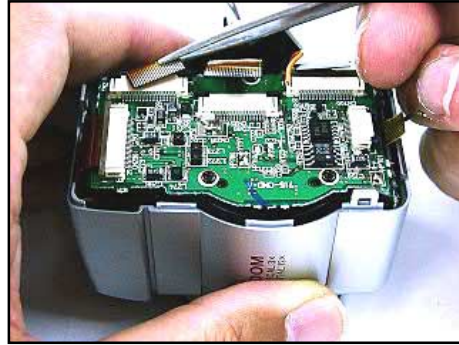

9. Remove the connector (CN761).

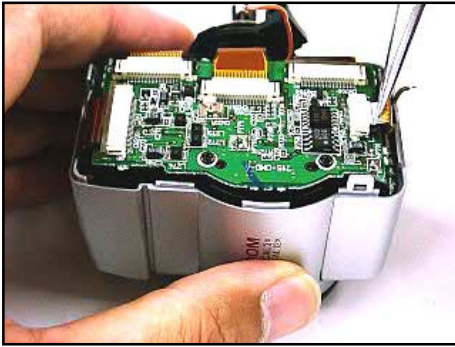


13. Remove the connector (CN290).

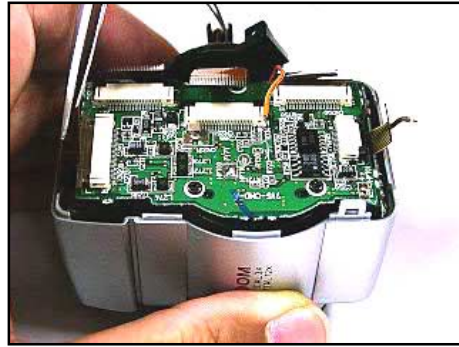

10. Remove the connector (CN700).




14. Remove three screws.

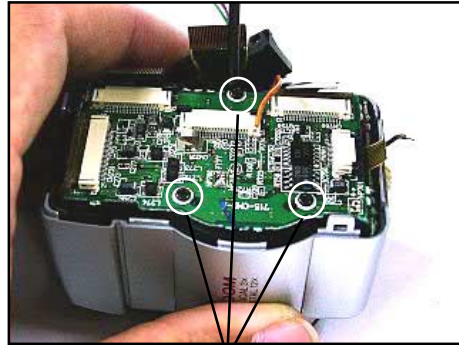


Screws


11. Remove the connector (CN251).

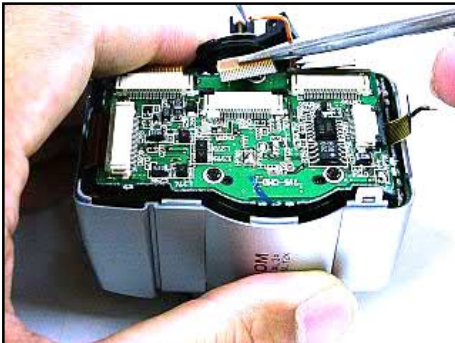


15. Open the CMD-PCB.

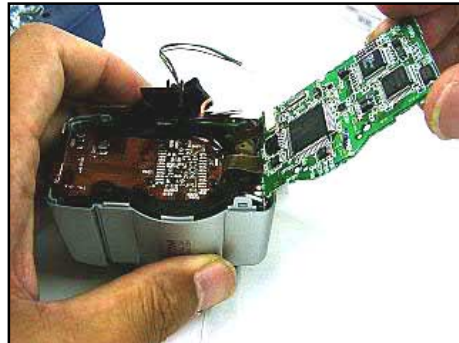


16. Disconnect the connector CN760 and remove CMD-PCB.

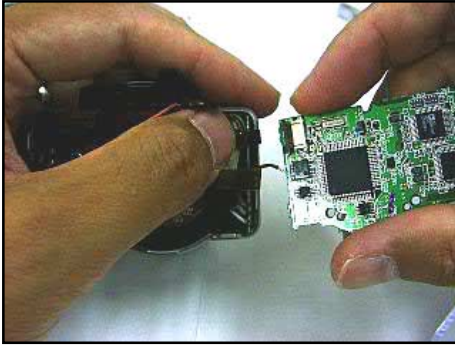

20. Remove the Lnes block.

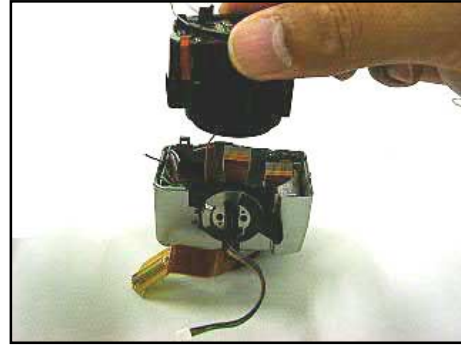


17. Remove the screw on Lens block.

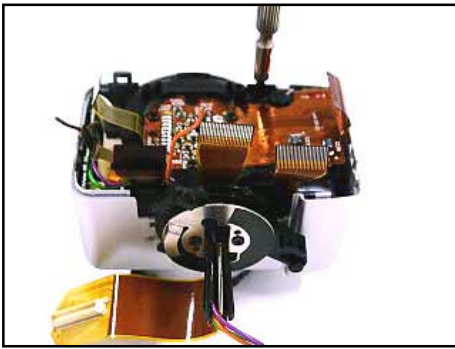


21. Discharge flash capacitor by discharging tool.



18. Remove the screw on Lens block.

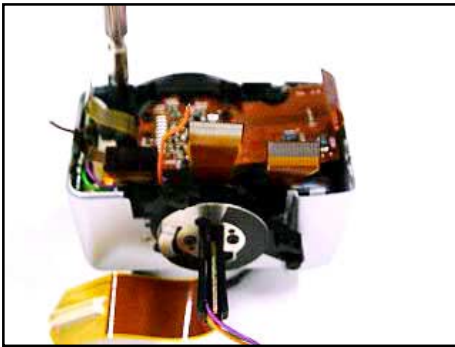


22. Remove two screws at the other side.

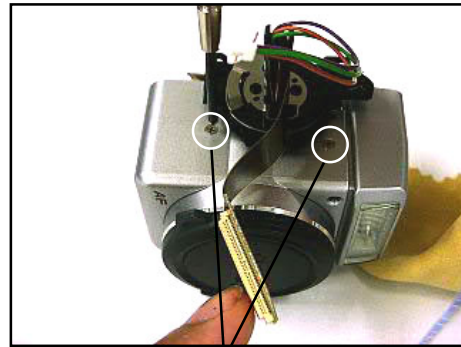

Screws


19. Remove the screw (1.7 x 9 black) on Lens block.

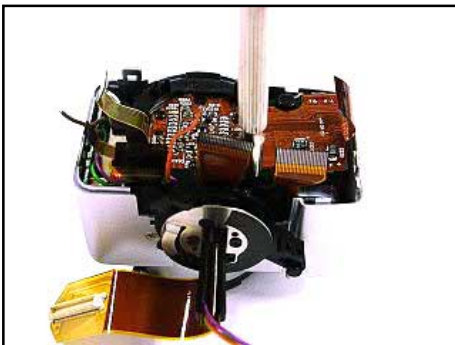

11. Remove the connector (CN400).



24. Remove the L-case block.

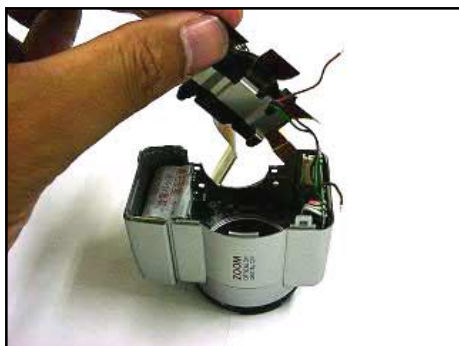


27. It is easier if you push the front of the flash.



25. Remove a screw (1.7 x 5 black).



28. Unhook the other side of the flash unit.

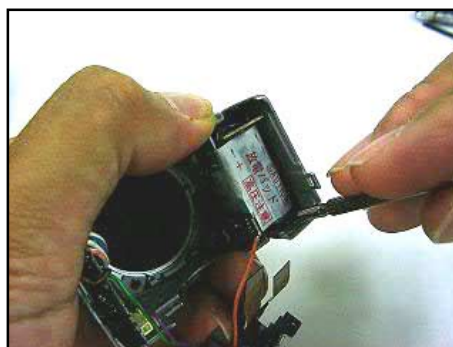


26. Disengage the hook on the flash unit using a screw driver.


NOTE: Make sure to discharge the capacitor for the flash fully otherwise it sparks.



29. Open the case and remove the flash unit.

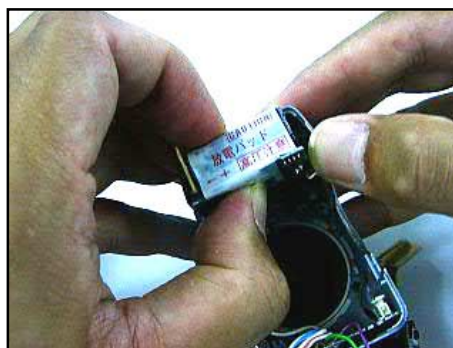


30. After the disassembly

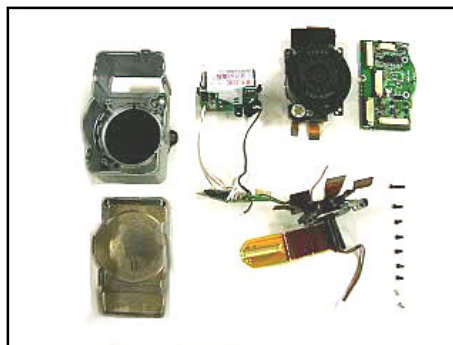


Hints for the assembly

1. Put the cable of a flash unit into the slot on the case.

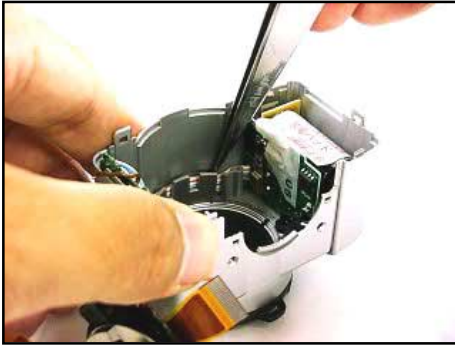

2. Also put the other cable into the slot.

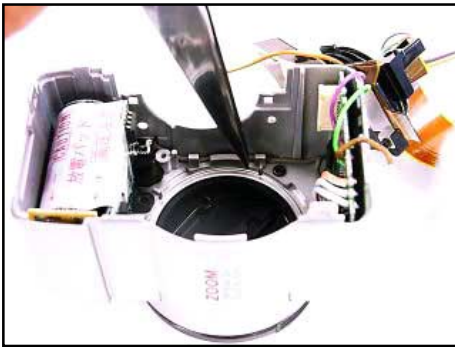

Tool

Soldering iron / solder / desoldering wire
precision screwdrivers / Tweezers
Discharge tool (Resistor 1.5 k Ω 5 W)



[illegible]

QV-2400UX
MAIN BODY COMPONENT

N	Item	Code No.	Parts Name	Specificaion	Applicable	Q	Price Code	R
-	1	1003 4054	BACK LIGHT ASSY	K342253*1 TK(K715)	Common	1	CR	A
-	2	1002 8729	CABLE/BACK LIGHT	K442243-1	Common	1	AF	X
N	3	1005 5360	COVER/BATTERY	K342255*005V01TK	Common	1	AX	A
-	4	1003 4056	HOLDER/BATTERY	K342254*1 TK(K715)	Common	1	BI	X
N	5	1005 5352	CASE/FRONT/LENS	K342251*004V01TK	Common	1	CV	X
N	6	1005 5354	LENS BLOCK	K241468*004V01TK	Common	1	EK	A
N	7	1005 4001	CASE/REAR/LENS	K241414-004V01	Common	1	BB	X
N	8	1005 3987	COVER/CF	K342115-004V01	Common	1	AF	A
-	9	1002 8714	COVER/LED	K342138-1	Common	1	AB	X
-	10	1003 4795	CABLE/KEY	K442309-001V02	Common	1	AC	X
-	11	1002 8700	LABEL/COVER/CF	K441492-4	Common	1	AA	A
-	12	1003 4076	LENS&CCD ASSY	RJK501421*001V01TK	Common	1	EG	A
-	13	1005 3988	COVER/CONNECTOR	K342116-005V01	Common	1	AI	B
-	14	1003 4065	PCB UNIT/DIGITAL	RJK501405*001V01TK	Common	1	EG	A
-	15	1002 8715	SPACER/LCD	K442235-1	Common	1	AA	X
-	16	1003 4068	CASE/LENS UNIT	K241465*2 TK(K715)	Common	1	CQ	X
-	17	1002 8712	BUTTON/MENU	K342135-1	Common	1	AH	X
-	18	1002 8775	BUTTON/MODE	K342114-1	Common	1	AH	X
-	19	1003 4369	PCB ASSY/KEY(KA)	K241459*2 TK(K715)	Common	1	CF	B
-	20	1003 4066	PCB ASSY/KEY(KB)	K241459*3 TK(K715)	Common	1	CF	B
-	21	1003 4048	PCB ASSY/BACK LIGHT	K442325*1 TK(K715)	Common	1	CI	B
-	22	1003 4071	PCB ASSY/CMD	K140771*1 TK(K715)	Common	1	CZ	A
-	23	1003 4072	PCB ASSY/STROBE	K140771*2 TK(K715)	Common	1	CZ	A
-	24	1003 4049	PCB ASSY/JACK	K442328*1 TK(K715)	Common	1	CX	A
-	25	1003 4046	PCB ASSY/POWER	K442323*1 TK(K715)	Common	1	CX	A
-	26	1002 8724	PLATE/METAL	K342117-1	Common	1	AA	X
-	27	1003 4794	CABLE/POWER	K442252-001V02	Common	1	AJ	X
-	28	1003 4556	SPRING/POWER	K442207-001V02	Common	1	AA	X
N	29	1005 3993	KNOB/POWER	K342134-004V01	Common	1	AA	X
N	30	1005 3991	KNOB/REC	K342132-004V02	Common	1	AA	X
-	31	1002 8777	SPRING/SHUTTER	K442212-1	Common	1	AA	X
-	32	1002 8706	LCD MODULE/TFT	COD18T1029FN	Common	1	DE	A
-	33	1003 9678	BUZZER	PKM35-4A44	Common	1	AG	C
N	34	1005 3992	KNOB/ZOOM	K342133-004V01	Common	1	AA	X
-	35	1004 2653	SPRING/ZOOM	RJK501745-001V01	Common	1	AA	X
-	36	3851 2113	LAMP/FLUORESCENT	CAS-1.8JS1.8-1	Common	1	AW	A
N	37	1005 3983	PLAE/RATING	K442274-005V01	Common	1	AA	X
N	38	1005 3990	CASE/UPPER	K140742-005V01	Common	1	AY	X
N	39	1005 5361	PANEL ASSY/UPPER	K342256*005V01TK	Common	1	CG	X
-	40	1002 8742	STROBE UNIT	CO-715	Common	1	CE	A
-	41	6611 0460	PLATE/NAME	C441170-1	Common	1	AG	X
-	42	6400 9740	WASHER	A412353-1	Common	1	AA	C
-	43	1002 8725	CABLE/B-K715	K342165-1	Common	1	AG	X
-	44	1002 8723	CABLE/C-K715	K241412-1	Common	1	AZ	X
-	45	1003 0070	TRIPOD NUT	K342112-2	Common	1	AC	C
N	46	1005 5358	CASE/LOWER	RJK501402*005V01 TK	Common	1	CM	X
-	47	1002 8774	BUTTON/SHUTTER	K342113-1	Common	1	AG	X
-	48	6613 1330	HOOK/STRAP	R340181-2	Common	1	AE	C
-	49	1004 0721	PLATE/SHIELD	RJK501493-001V03	Common	1	AA	X
-	50	1003 4799	CABLE	RJK501530-001V01	Common	1	AA	X
-	51	1000 1733	CUSHION	K441962-1	Common	1	AA	X
-	52	1003 4797	TAPE/INSULATION	RJK501511-001V01	Common	1	AA	X
-	53	1004 0278	PALTE/INSULATION	RJK501655-001V02	Common	1	AA	X
-	54	1002 8728	TAPE/ADHESIVE	K442226-1	Common	1	AA	X

Notes: N : New registration parts
Q : Quantity used per unit
R : Rank

N	Item	Code No.	Parts Name	Specificaion	Applicable	Q	Price Code	R
-	S1	1003 6886	SCREW	BT3 1.4X3.0 BK	Common	3	AA	X
-	S2	1002 8722	SCREW	BT3 1.7X12.0BK	Common	1	AA	X
-	S3	1002 8704	SCREW	BT3 1.7X3.0 BK	Common	3	AA	X
-	S4	1001 2551	SCREW	BT3 1.7X3.5 BK	Common	7	AA	X
-	S5	1002 8705	SCREW	BT3 1.7X4.5 BK	Common	2	AA	X
-	S6	5861 4345	SCREW	PS3 1.7X3.5 NI	Common	3	AA	X
-	S7	1002 8702	SCREW	PS3 1.7X3.5 BK	Common	0	AA	X
-	S8	5861 3551	SCREW	M1.7X3.0 BK	Common	2	AA	X
-	S9	1002 8744	SCREW	M1.7X5.0 BK	Common	1	AA	X
-	S10	1002 8693	SCREW	BT3 1.7X5.5 BK	Common	2	AA	X
-	S11	1002 5765	SCREW	BT3 1.7X4.0 BK	Common	0	AA	X
-	S12	1003 6882	SCREW	BT3 1.7X4.0 NI	Common	6	AA	X

ACCESSORY

N	Item	Code No.	Parts Name	Specificaion	Applicable	Q	Price Code	R
N	-	1005 5570	CD-ROM	CK785DCA01R	Except for US	1	AK	X
-	-	3816 0259	BATTERY/ALKALINE	LR6G/2ST	Except for US	2	AG	X
N	-	1005 1462	HOLDER/CAP	CH-K786	Common	1	AF	C
N	-	1005 5585	STRAP	ST-K785	Common	1	AG	C
N	-	1005 5586	CASE/SOFT	SC-785	Common	1	AY	C
-	-	1014 8773	CABLE/VIDEO	VC-K723-FC	Common	1	AL	C
N	-	1003 1611	CAP/LENS	LC-K715-A	Common	1	AG	C
-	-	1015 1524	CARD/CF(8MB)	HB289008C4XA	Except for US	1	DF	X
-	-	3502 2744	CABLE/USB	59204-2301	Common	1	BK	C
-	-	1015 1471	CABLE/PC-LINK	LC9F-DOS-K740-L	Except for US	1	BU	C

PCB


N	Item	Code No.	Parts Name	Specification	Applicable	Q	Price Code	R
BL-PCB								
-	CN900	3502 2230	CONNECTOR	SM03B-SRSS-TB	Common	1	AC	X
-	Q902	2259 2744	TRANSISTOR/DIGITAL	DTA143EETL	Common	1	AA	X
-	Q903	2259 2789	TRANSISTOR/ARRAY	IMX17T110	Common	1	AA	X
-	T900	3012 1624	TRANSFORMER/INVERTER	BLT1.8K713	Common	1	AT	X
CMD-PCB								
-	CN250	3502 2214	CONNECTOR	52435-2291	Common	1	AD	X
-	CN251	3502 2214	CONNECTOR	52435-2291	Common	1	AD	X
-	CN760	3502 2600	CONNECTOR	52746-0790	Common	1	AB	X
-	IC752	2105 6398	IC	LB1846M-TE-L	Common	1	AH	X
-	IC753	2105 6398	IC	LB1846M-TE-L	Common	1	AH	X
D-PCB								
-	CN340	3501 8491	CONNECTOR	52435-2691	Common	1	AE	X
-	D340	2390 1379	DIODE/SCHOTTKY	MA729-(TX)	Common	1	AB	X
-	D350	2390 1820	DIODE/CHIP	1SS355TE-17	Common	1	AA	X
-	D351	2360 3060	DIODE/ZENER CHIP	MA8100-H(TX)	Common	1	AA	X
-	D352	2390 1358	DIODE/VARICAP	MA329-(TX)	Common	1	AC	X
-	H520	2590 2707	OSCILLATOR/CRYSTAL	CSTCC4.00MG-TC	Common	1	AC	X
-	IC330	2114 5805	IC	NJM3414AV-TE1	Common	1	AI	X
-	IC521	2105 6486	IC	S-80835ANNP-EDZ-T2	Common	1	AB	X
-	IC522	2105 6485	IC	S-80830ANNP-EDT-T2	Common	1	AB	X
N	SW510	1002 1883	SWITCH/SLIDE	SSSS812-B-2B	Common	1	AB	A
-	SW520	2254 0555	SWITCH	ESE22MH4	Common	1	AC	C
-	VR301	2775 3464	RESISTOR/SEMIFIXED CHIP	POZ2AN-1-203N-T00	Common	1	AA	X
-	VR302	2775 3465	RESISTOR/SEMIFIXED CHIP	POZ2AN-1-503N-T00	Common	1	AA	X
-	VR303	2775 3464	RESISTOR/SEMIFIXED CHIP	POZ2AN-1-203N-T00	Common	1	AA	X
-	VR304	2775 3464	RESISTOR/SEMIFIXED CHIP	POZ2AN-1-203N-T00	Common	1	AA	X
-	VR305	2775 3464	RESISTOR/SEMIFIXED CHIP	POZ2AN-1-203N-T00	Common	1	AA	X
-	VR306	2775 3465	RESISTOR/SEMIFIXED CHIP	POZ2AN-1-503N-T00	Common	1	AA	X
-	VR320	2775 3464	RESISTOR/SEMIFIXED CHIP	POZ2AN-1-203N-T00	Common	1	AA	X

Notes: N : New registration parts
Q : Quantity used per unit
R : Rank


N	Item	Code No.	Parts Name	Specification	Applicable	Q	Price Code	R
JK-PCB								
-	C860	2845 6624	CAPACITOR/BACK-UP	EECS0HD104H	Common	1	AF	X
-	D810	2390 1379	DIODE/SCHOTTKY	MA729-(TX)	Common	1	AB	X
-	D811	2390 1379	DIODE/SCHOTTKY	MA729-(TX)	Common	1	AB	X
-	D830	2390 1477	DIODE/CHIP	MA142WA-(TX)	Common	1	AA	X
-	IC800	2105 6490	IC	TK15405MTL	Common	1	AH	X
-	IC810	2105 5712	IC	TC7S04FU(TE85L)	Common	1	AB	X
-	IC821	6571 0037	IC/L-MOS	TC7W00FU(TE12L)	Common	1	AD	X
-	JK800	3025 1937	JACK	HSJ1636-011020	Common	1	AE	A
-	JK810	3501 8197	JACK/MINI	HSJ1169-019010	Common	1	AF	A
N	JK820	3502 2717	CONNECTOR	55427-0428	Common	1	AJ	A
-	Q424	2259 2731	TRANSISTOR/DIGITAL	DTA114EE-TL	Common	1	AA	X
-	Q426	2259 2731	TRANSISTOR/DIGITAL	DTA114EE-TL	Common	1	AA	X
-	Q801	2259 2715	TRANSISTOR/DIGITAL	DTC144EETL	Common	1	AA	X
-	Q810	2795 8150	FET/CHIP	2SK2035(TE85L)	Common	1	AA	X
-	Q820	7911 3830	FET	2SJ347(TE85L)	Common	1	AA	X
-	Q840	2259 2745	TRANSISTOR/DIGITAL	DTC143EETL	Common	1	AA	X
N	SW850	1002 8209	SWITCH/SLIDE	SPVG31-T	Common	1	AB	A
KA-PCB								
-	SW880	1001 4578	SWITCH/TOUCH	TSW-3D-T50	Common	1	AC	A
-	SW881	3412 1995	SWITCH/TACT	SKQRAA-T	Common	1	AB	A
-	SW882	3412 1995	SWITCH/TACT	SKQRAA-T	Common	1	AB	A
-	SW883	3412 1995	SWITCH/TACT	SKQRAA-T	Common	1	AB	A
-	SW884	2254 0555	SWITCH	ESE22MH4	Common	1	AC	C
-	SW885	2254 0555	SWITCH	ESE22MH4	Common	1	AC	C
-	SW886	2254 0555	SWITCH	ESE22MH4	Common	1	AC	C
KB-PCB								
-	SW895	3412 1995	SWITCH/TACT	SKQRAA-T	Common	1	AB	A
-	SW896	3412 1995	SWITCH/TACT	SKQRAA-T	Common	1	AB	A
-	SW897	3412 1995	SWITCH/TACT	SKQRAA-T	Common	1	AB	A
-	SW898	3412 1995	SWITCH/TACT	SKQRAA-T	Common	1	AB	A
PW-PCB								
-	CN100	3501 7091	CONNECTOR/PCB	53254-0310	Common	1	AA	X
-	CN103	3502 2437	CONNECTOR	52745-1690	Common	1	AC	X
-	D100	2390 2506	DIODE	RB060L-40-TE25	Common	1	AD	X
N	FU100	1001 2479	FUSE/CHIP	434.750	Common	1	AB	A
N	FU101	1000 9214	FUSE/CHIP	434001	Common	1	AB	A
N	FU102	1000 9214	FUSE/CHIP	434001	Common	1	AB	A
N	FU103	1003 4689	FUSE/CHIP	43401.5	Common	1	AB	A
-	JK100	3501 6755	JACK/POWER	HEC3600-010120	Common	1	AD	A
-	Q110	2254 0570	FET	SI2301DS-T1	Common	1	AE	X
-	Q115	2254 0570	FET	SI2301DS-T1	Common	1	AE	X
-	Q120	2795 8157	FET/CHIP	CPH6401-TL	Common	1	AE	X
-	Q121	2259 2715	TRANSISTOR/DIGITAL	DTC144EETL	Common	1	AA	X
-	Q130	2250 1596	TRANSISTOR/CHIP	SI2302DS-T1	Common	1	AE	X
-	VR135	2775 3465	RESISTOR/SEMIFIXED CHIP	POZ2AN-1-503N-T00	Common	1	AA	X
-	VR136	2775 3465	RESISTOR/SEMIFIXED CHIP	POZ2AN-1-503N-T00	Common	1	AA	X
ST-PCB								
-	D402	2390 3100	DIODE/ZENER	02DZ13-Y(TPH3)	Common	1	AA	X
-	D411	2390 3102	DIODE/ZENER	F1C2300TP	Common	1	AD	X
-	D412	2390 3101	DIODE/ZENER	02DZ8.2-Y(TPH3)	Common	1	AA	X
-	IC420	2105 4158	COMPARATOR	TA75S393F(TE85L)	Common	1	AC	X
-	Q422	2795 8150	FET/CHIP	2SK2035(TE85L)	Common	1	AA	X
-	Q424	7101 5791	TRANSISTOR/CHIP	DTA144EETL	Common	1	AA	X
-	Q425	2252 0637	TRANSISTOR/CHIP	2SC4081-T106R	Common	1	AA	X

Notes: N : New registration parts
Q : Quantity used per unit
R : Rank


DIGITAL-PCB (PCB 715-D)

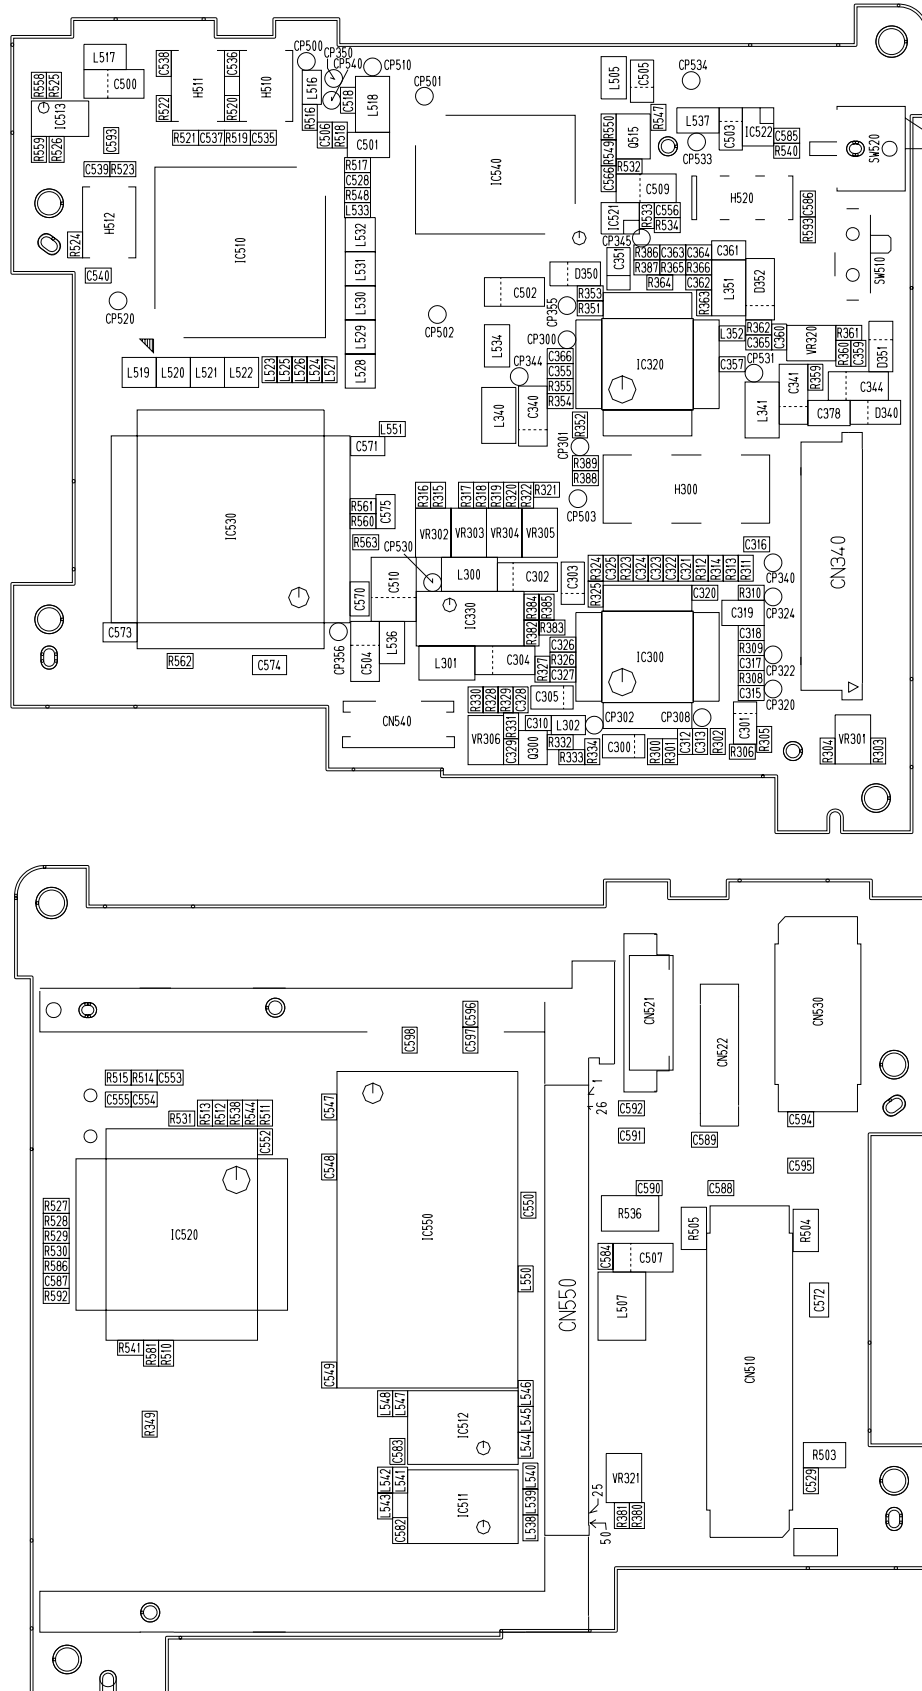


POWER-PCB (PCB 715-PW)

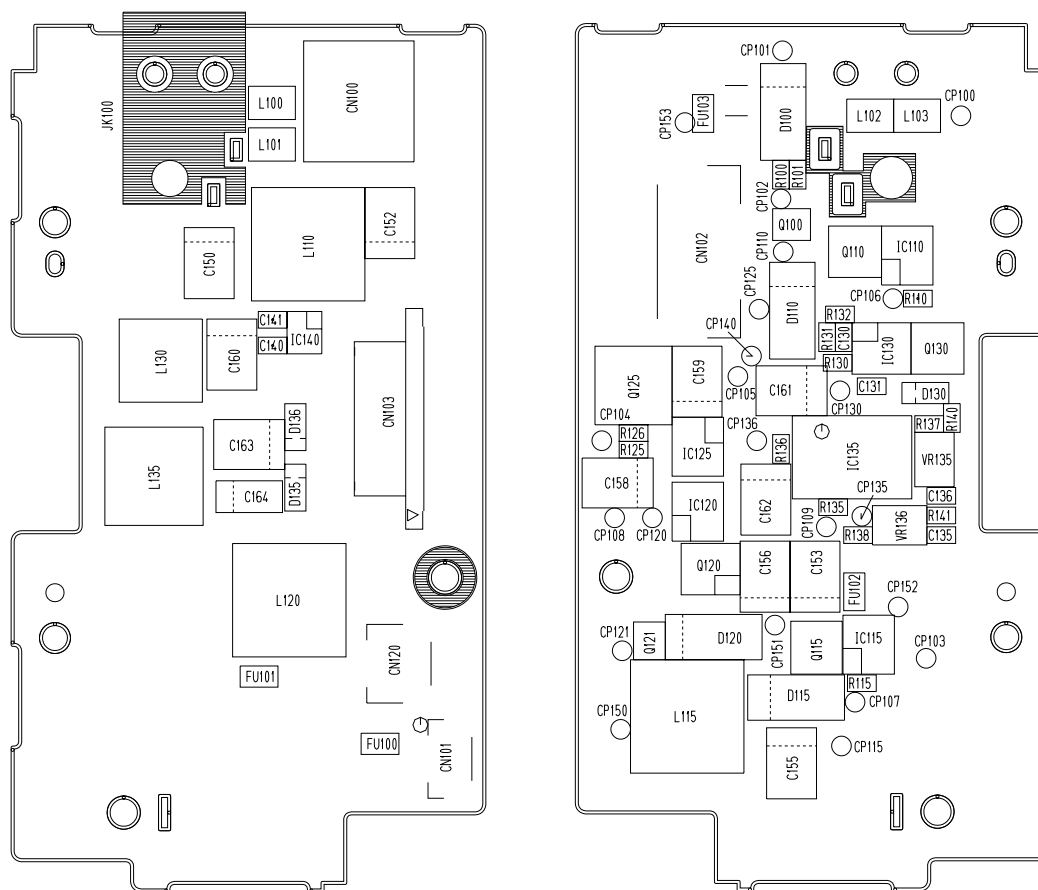


BACK LIGHT-PCB (PCB 715-BL)

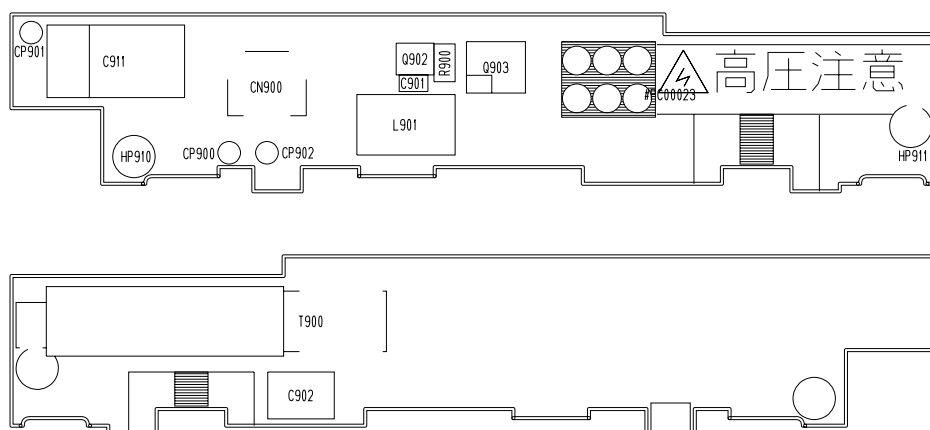


KB-PCB (PCB 715-KB)

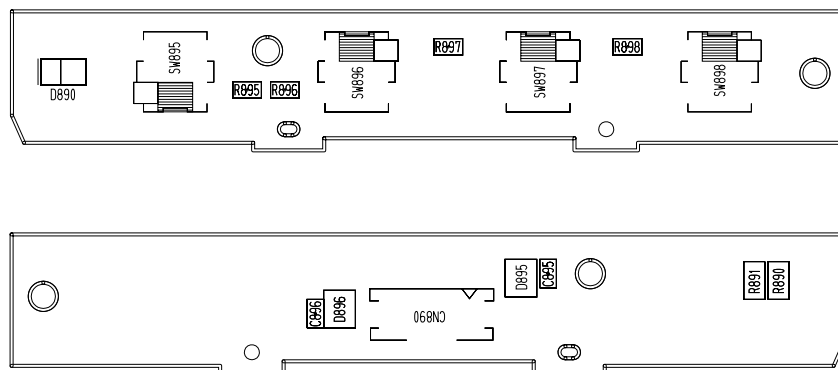


CMD-PCB (PCB 715-CMD)

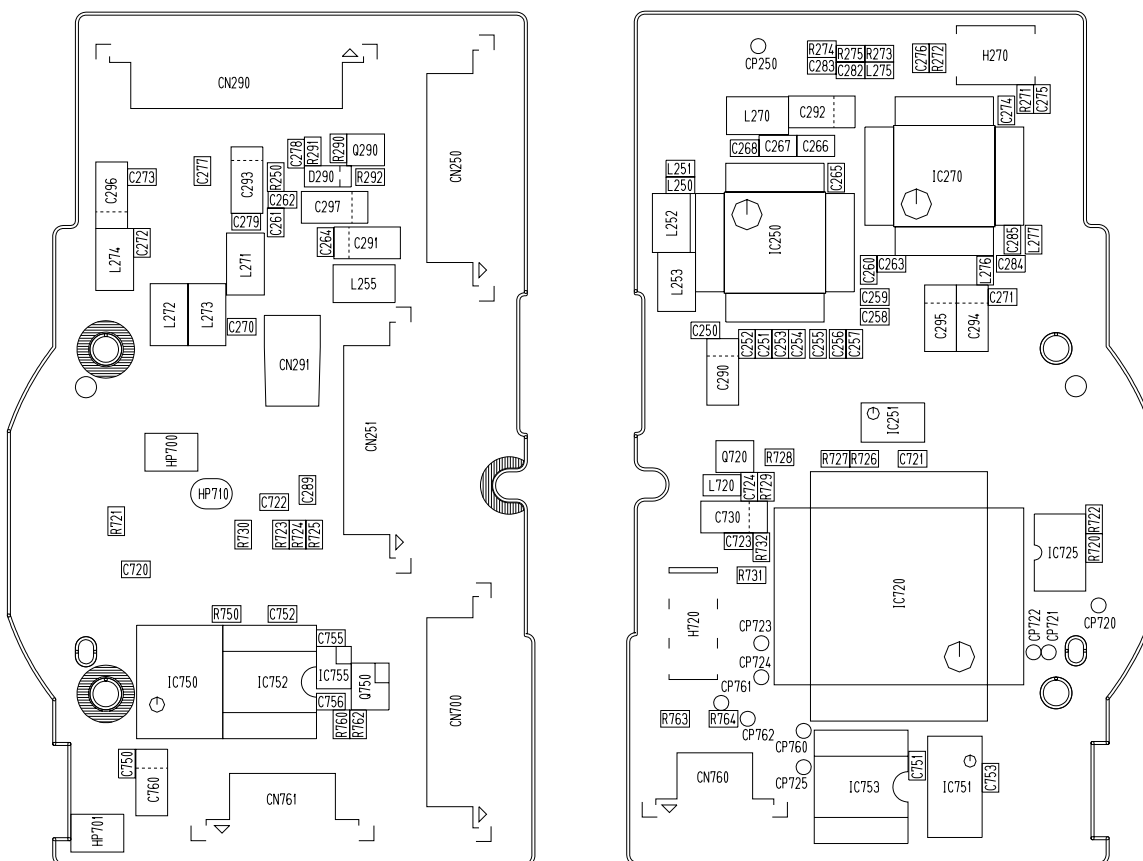

CCD-PCB (PCB 715-CCD)

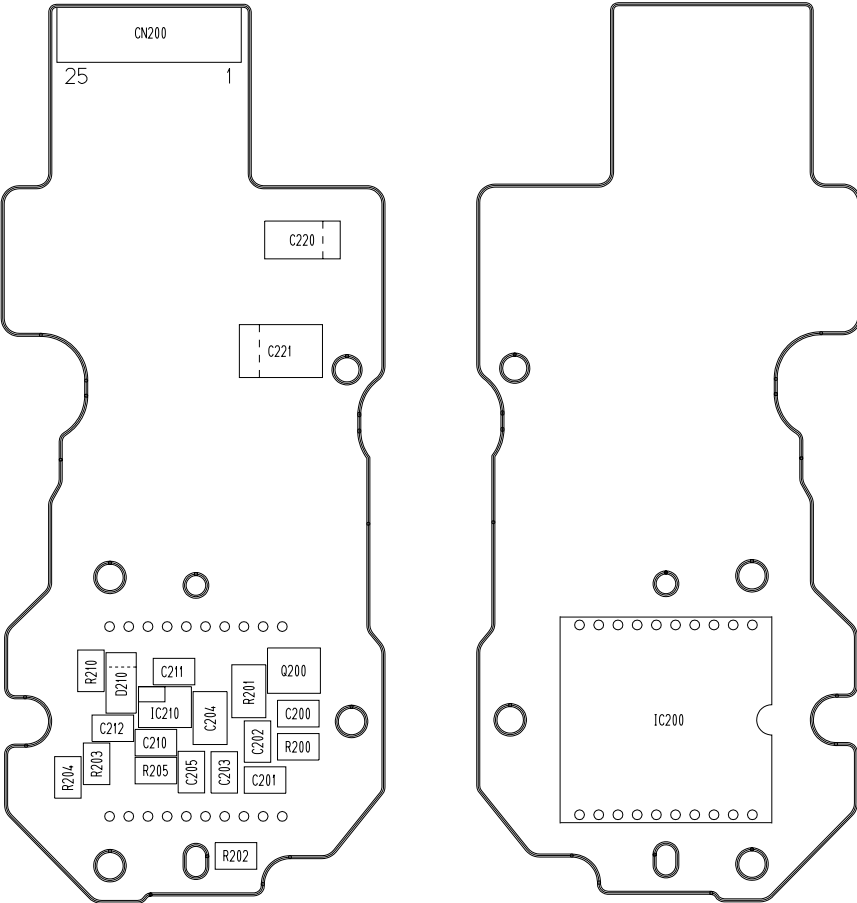


ST-PCB (PCB 715-ST)

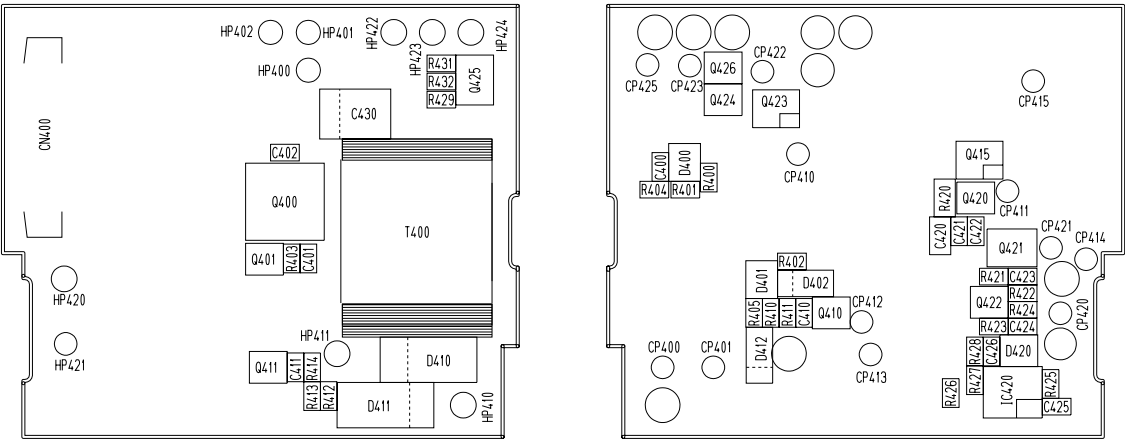


SCHEMATIC DIAGRAMS


DIGITAL-PCB (PCB-715A-D)

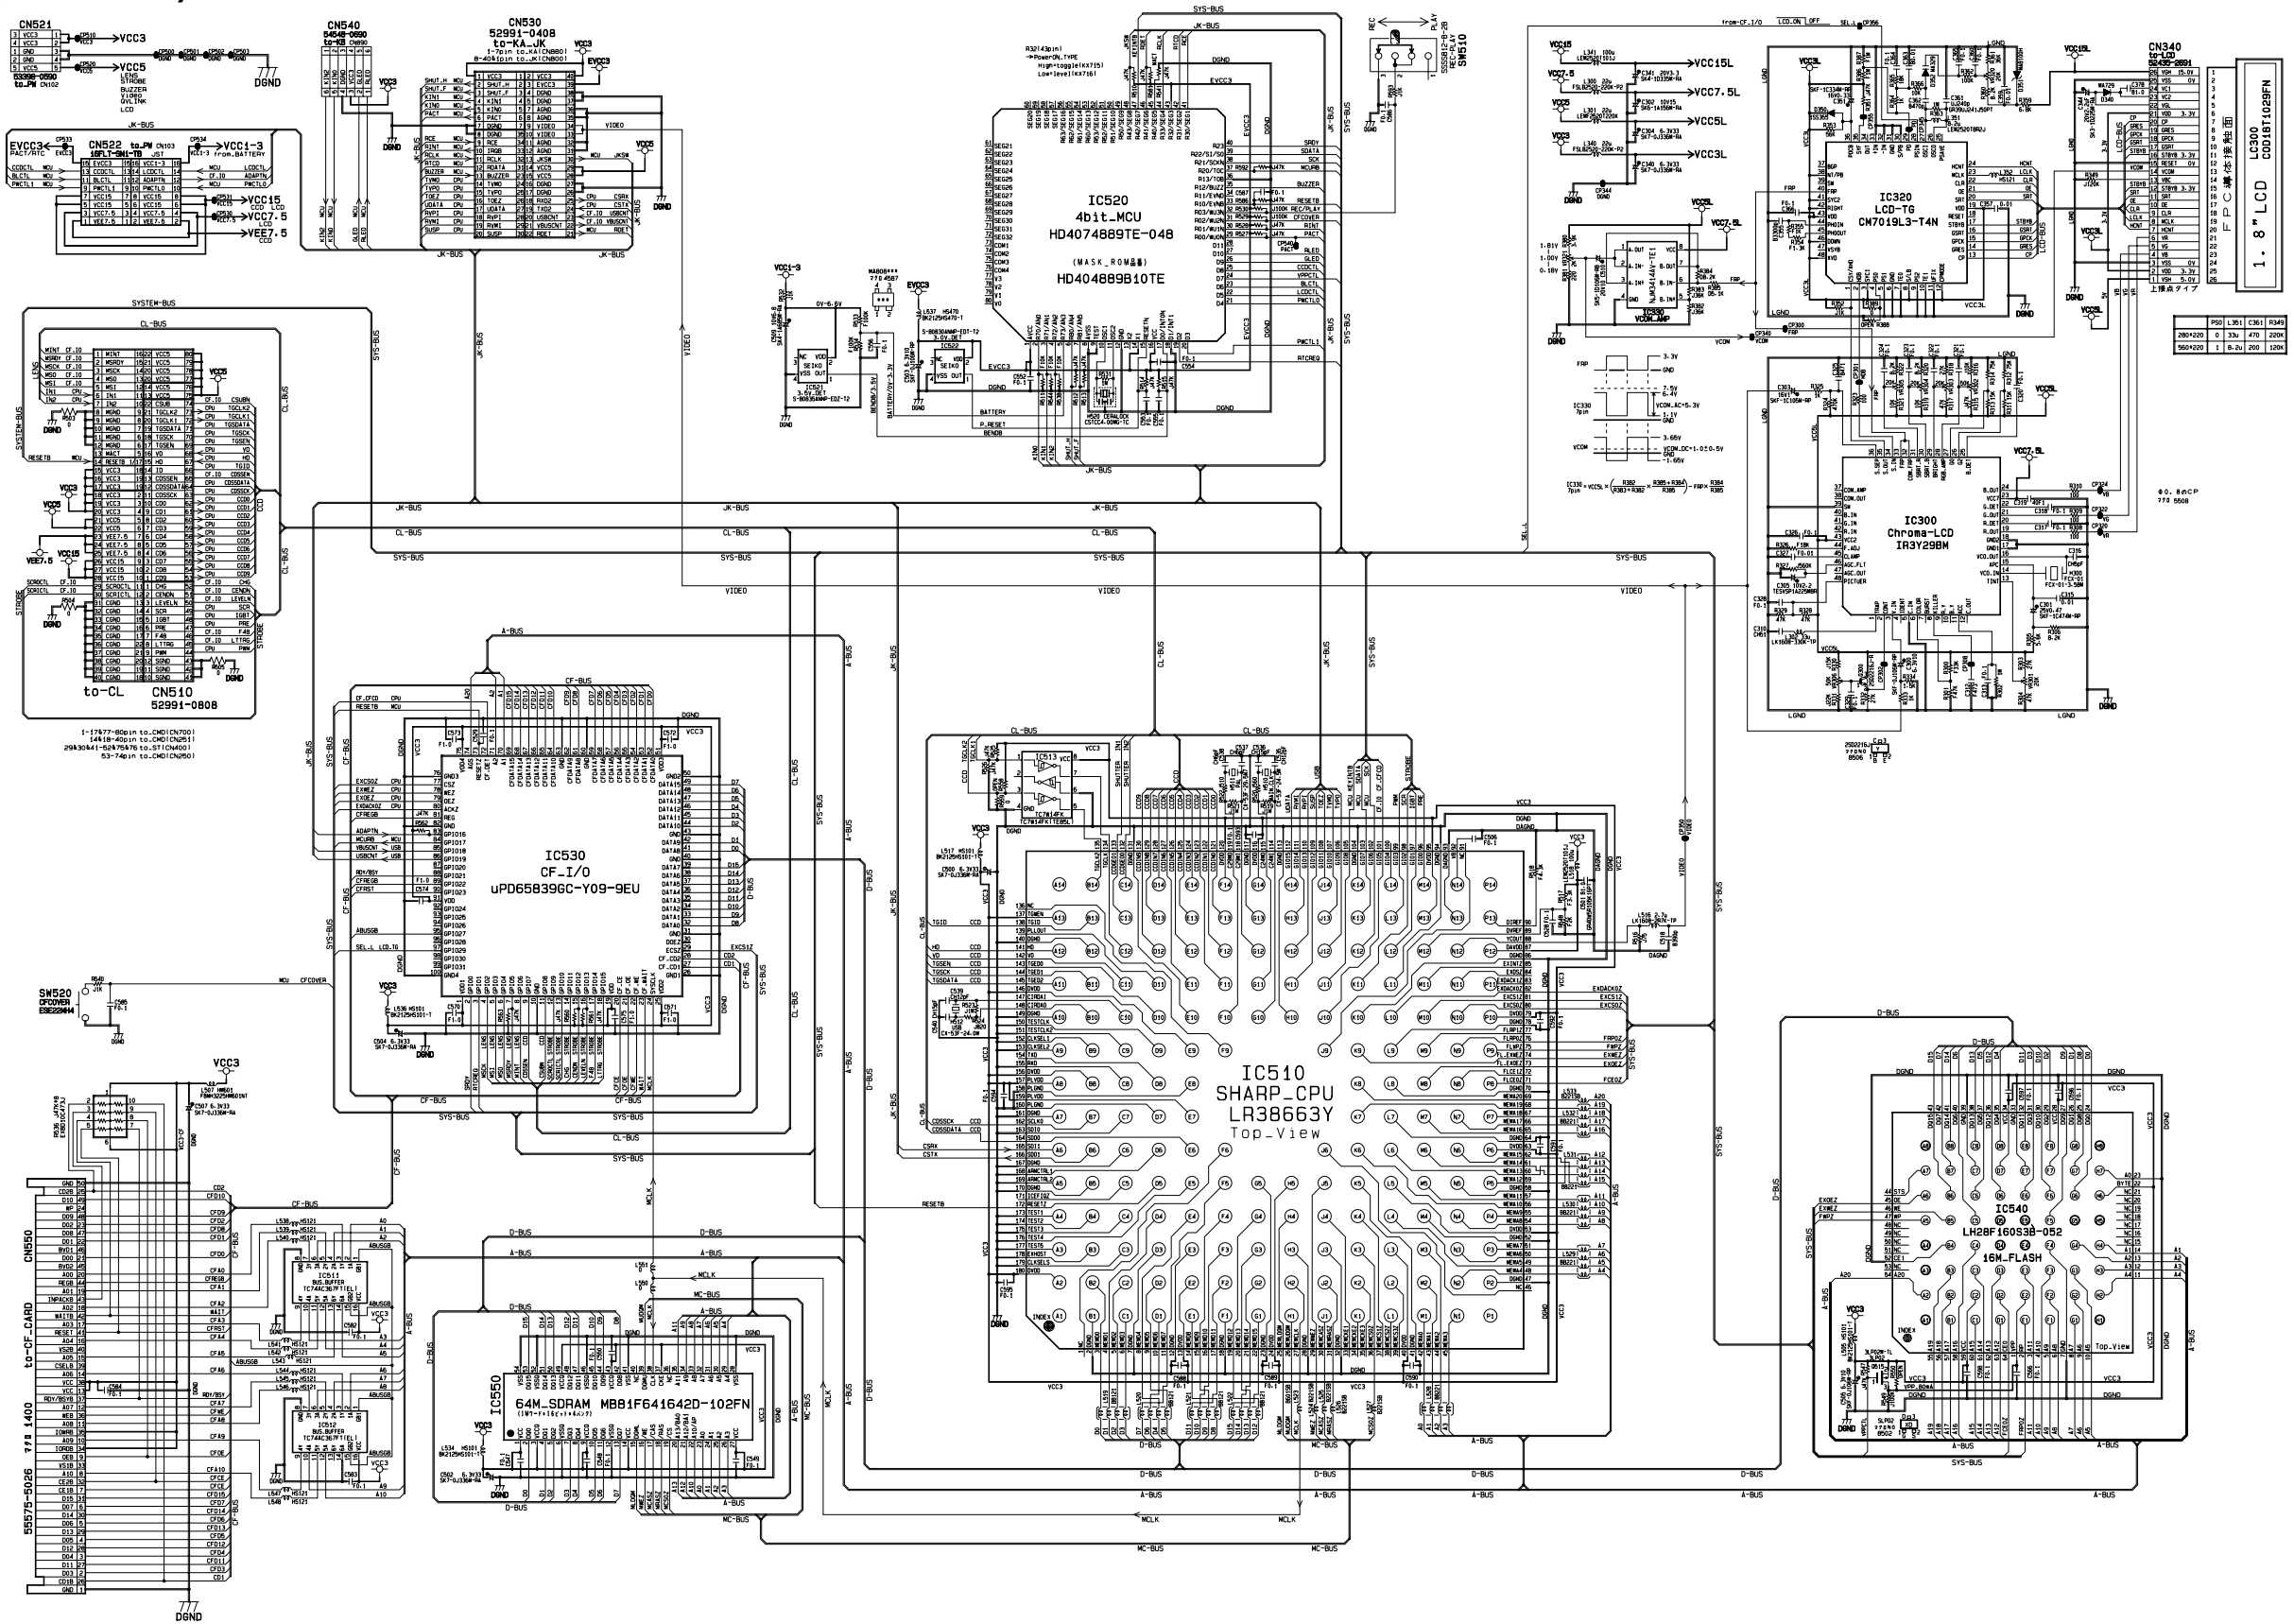


POWER-PCB (PCB-715A-PW)

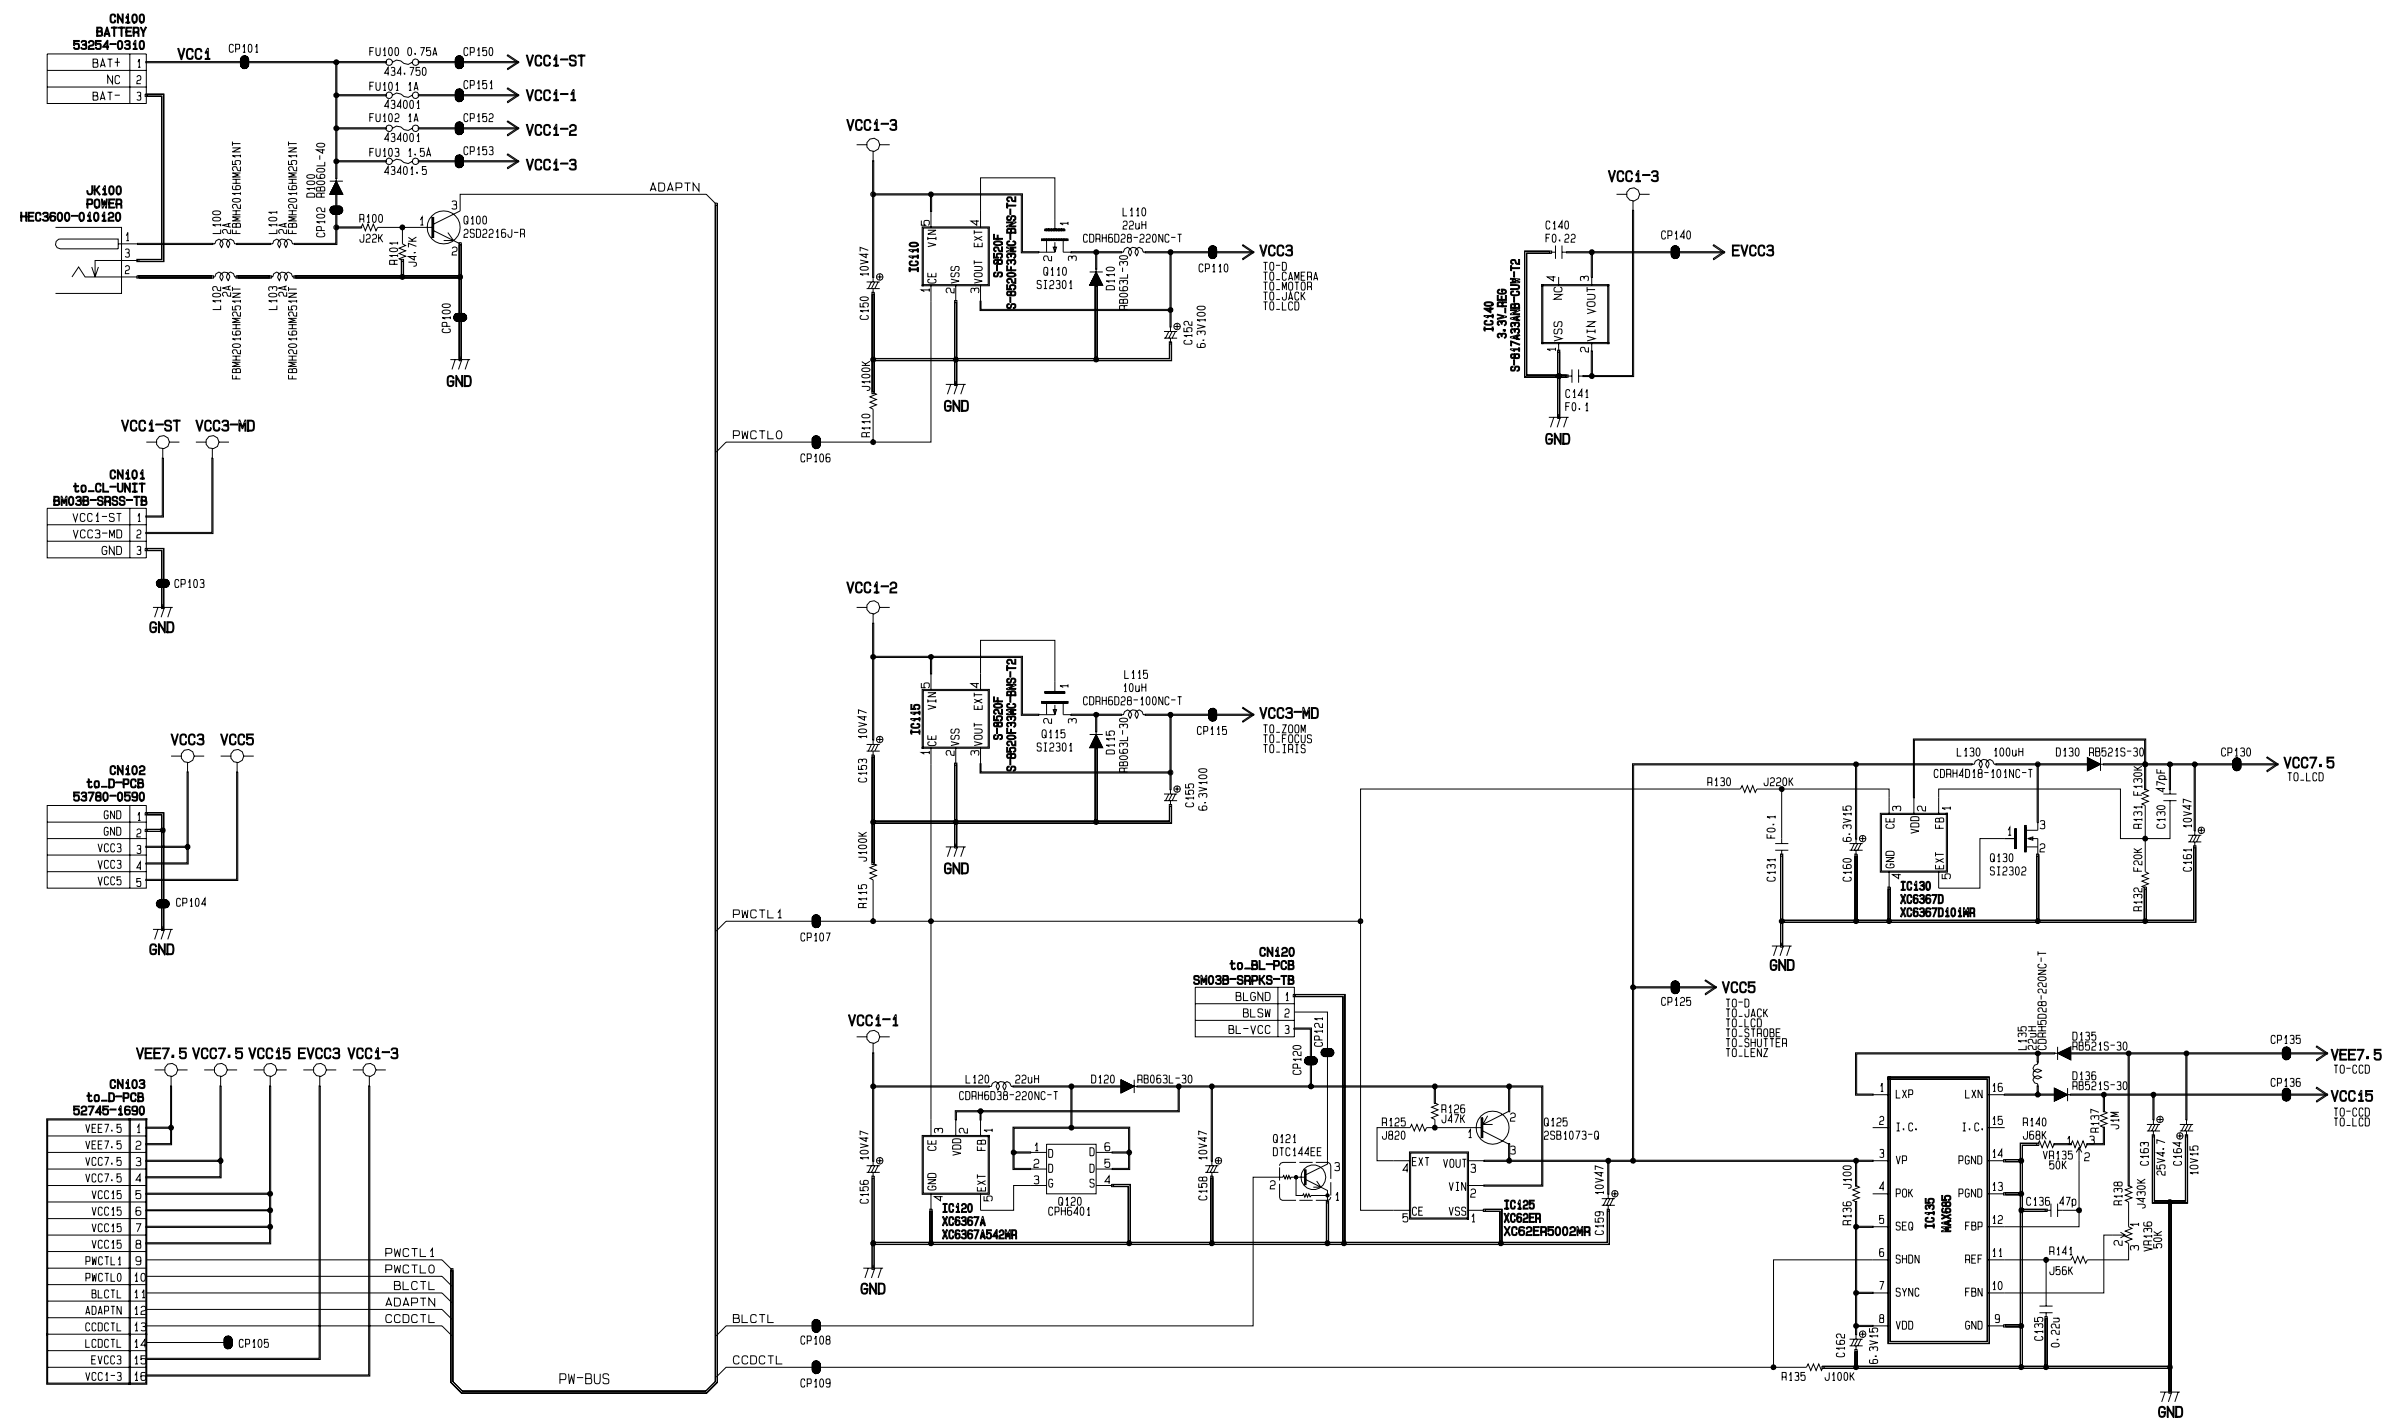


BACK LIGHT-PCB (PCB-715A-BL)

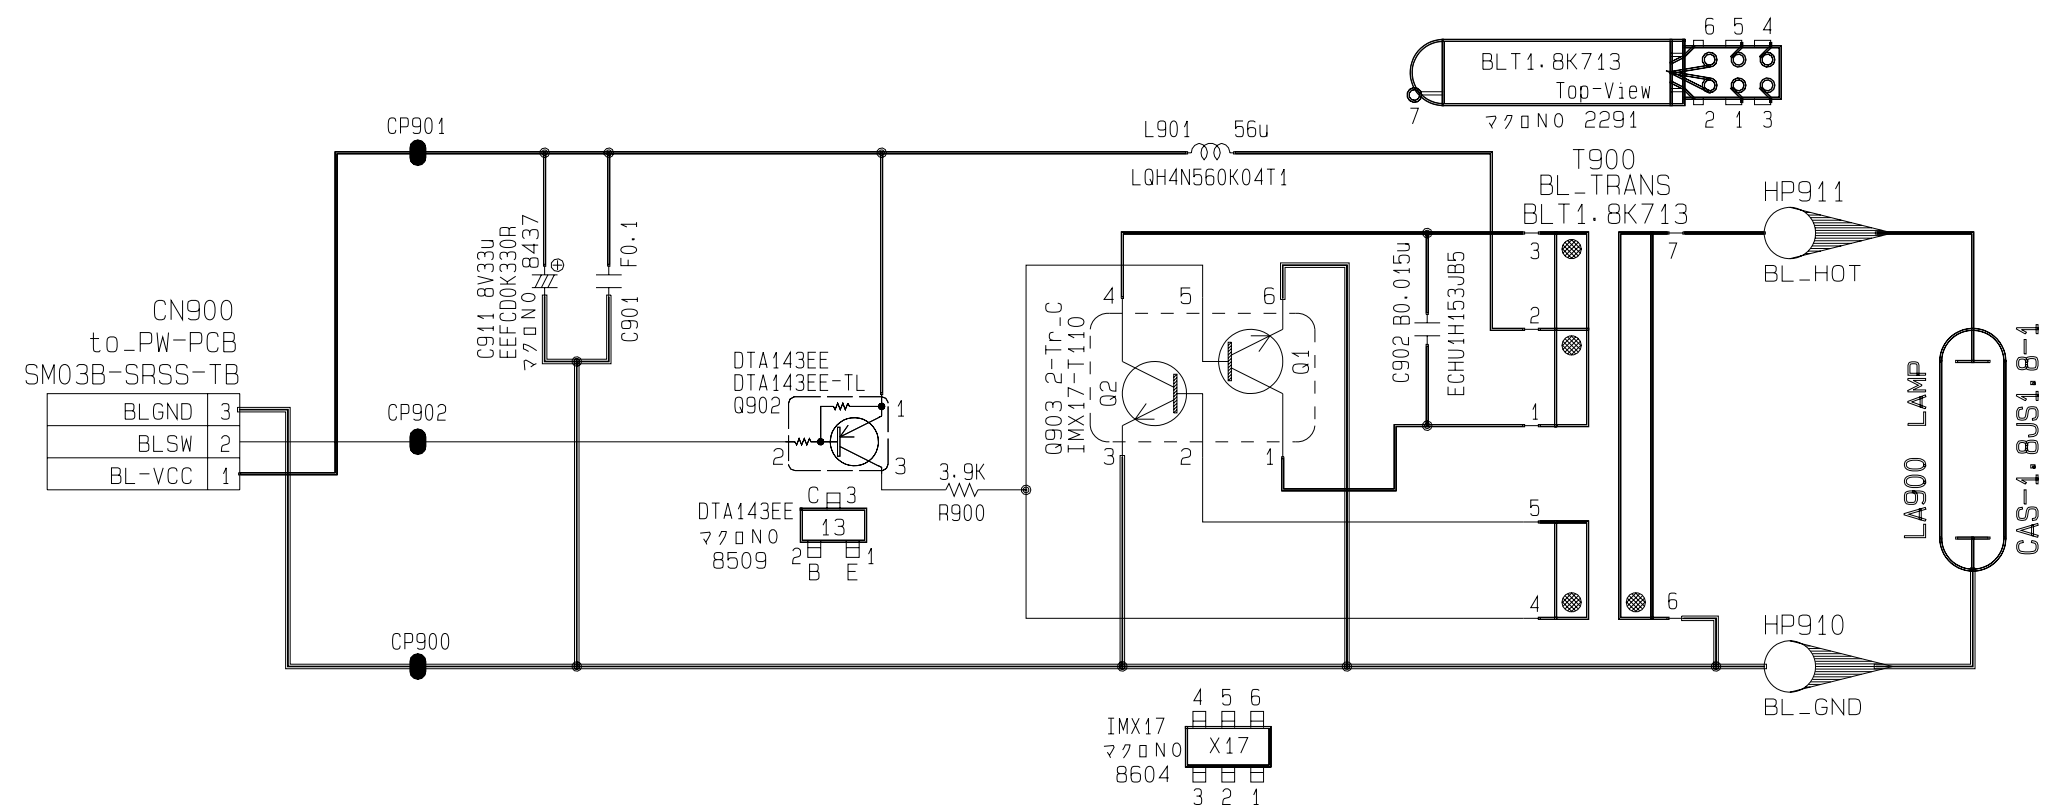


JACK-PCB (PCB-715A-JK)

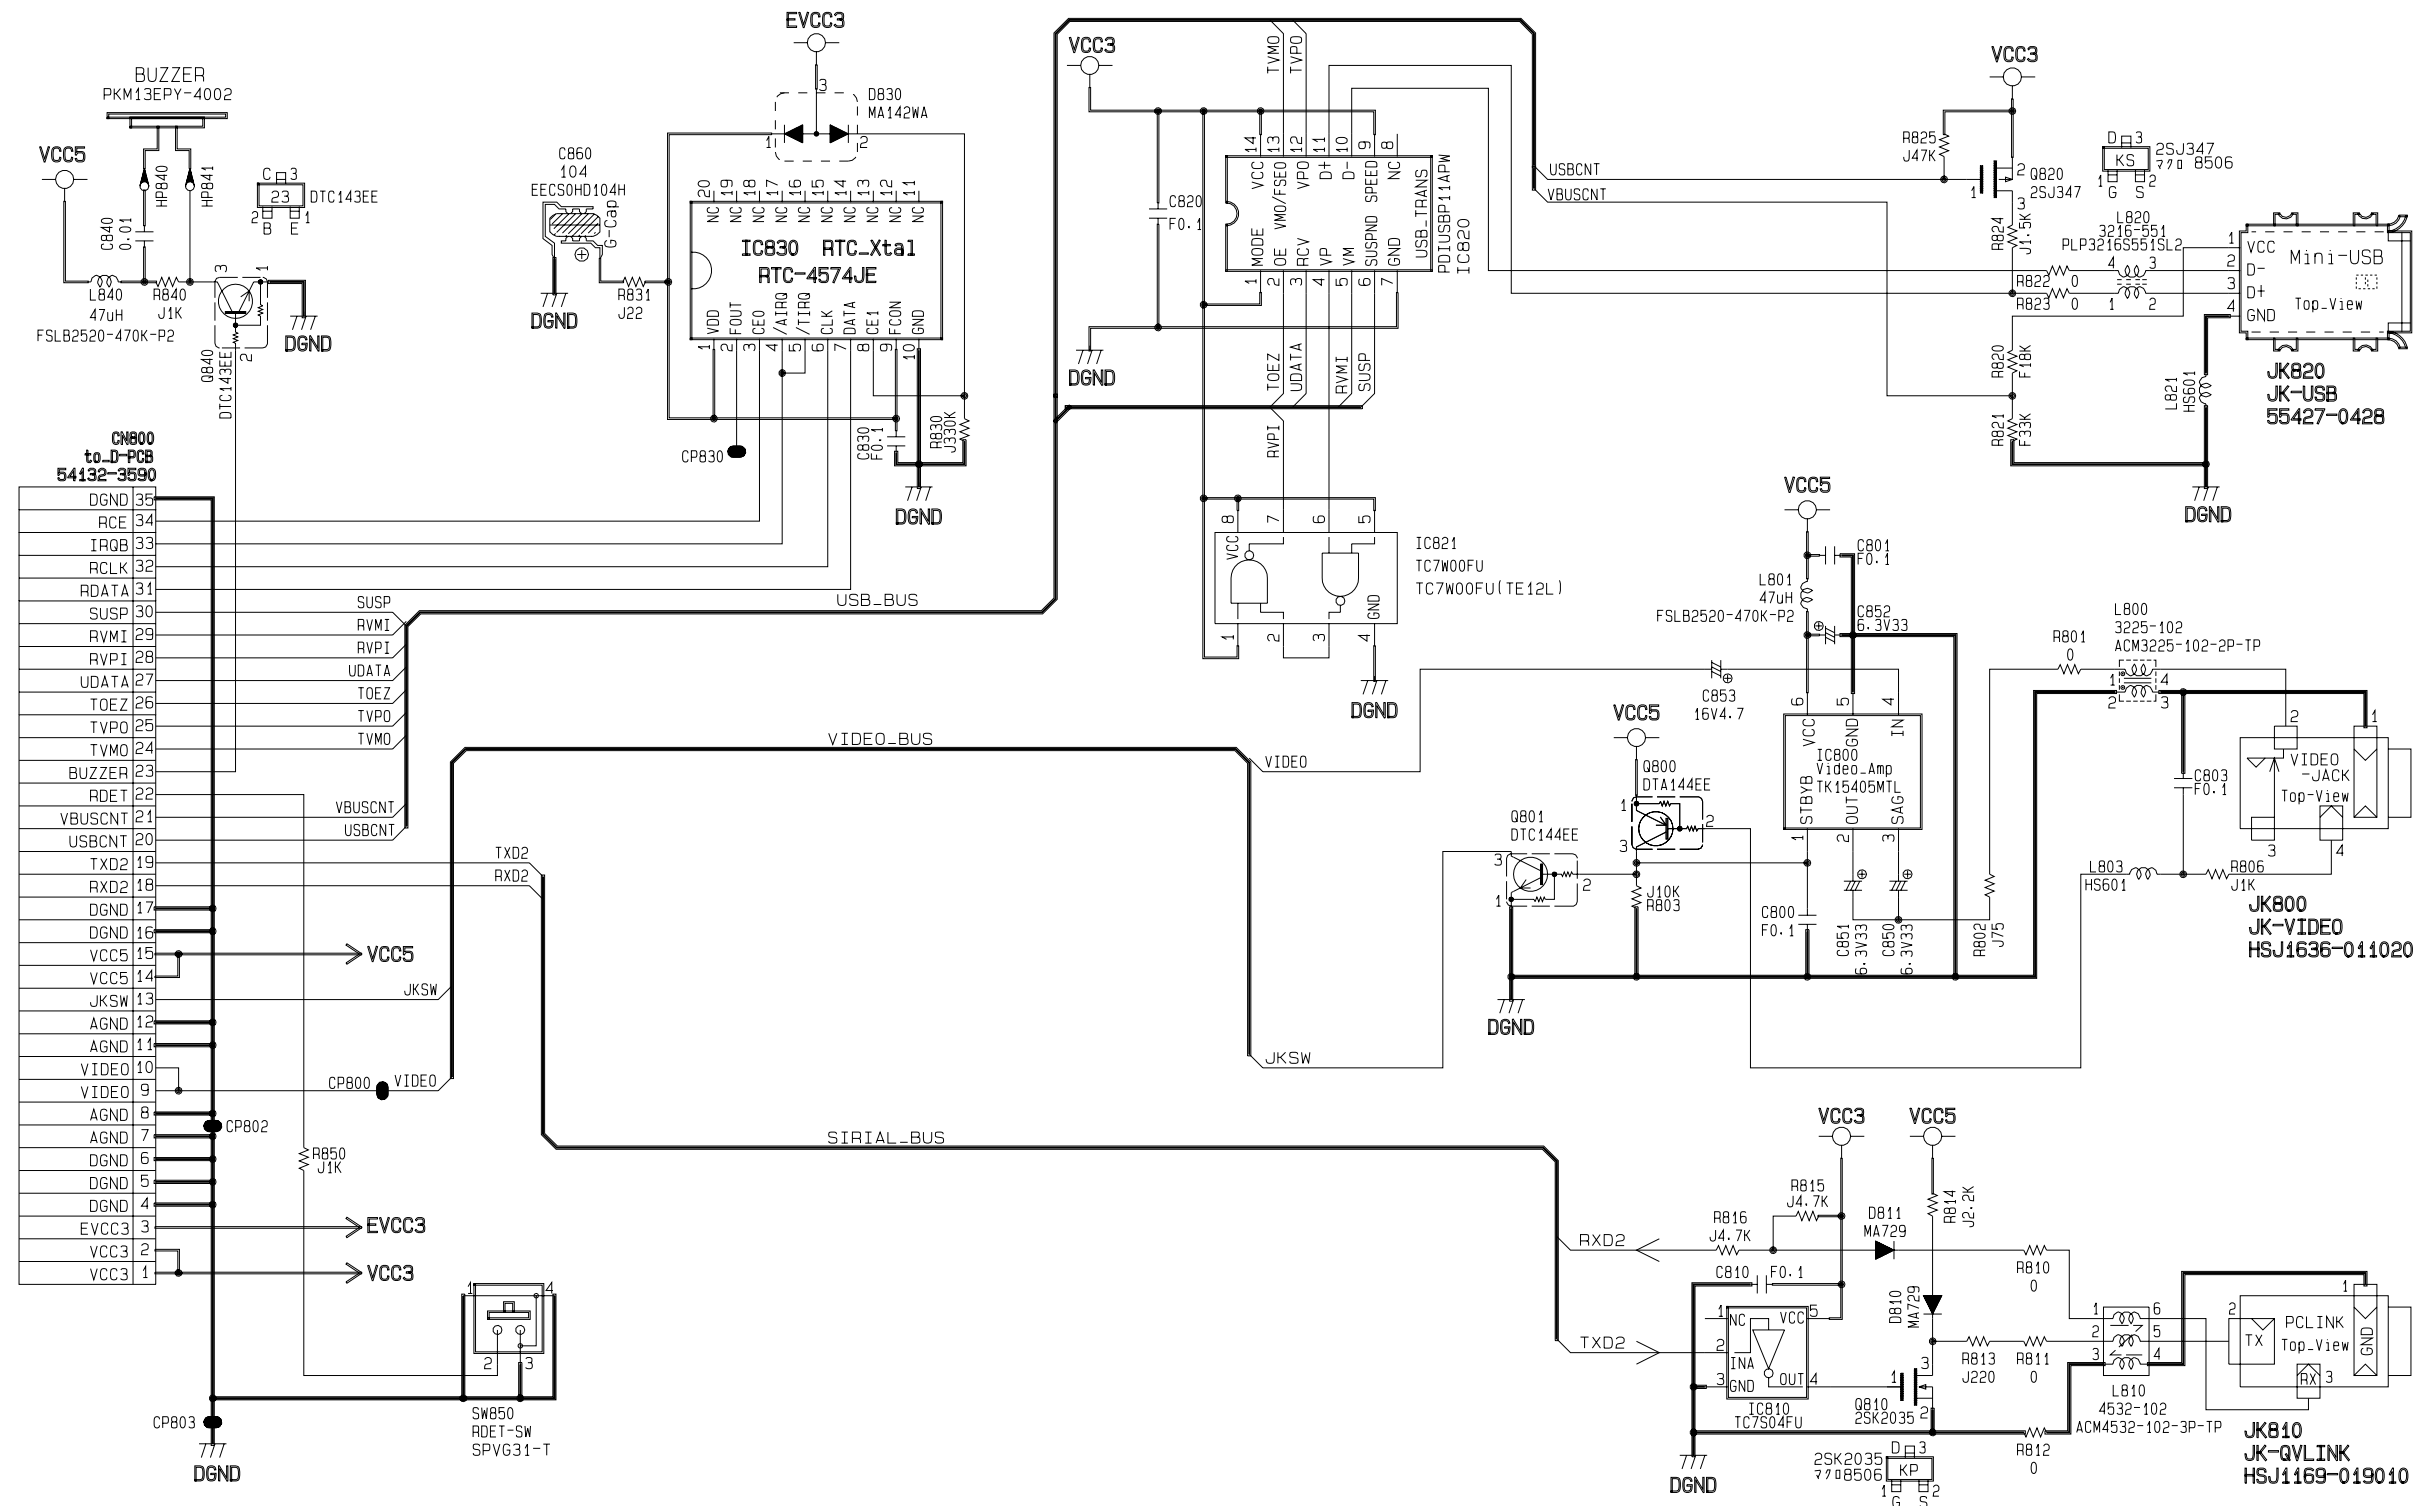


KEY-PCB (PCB-715A-KA)

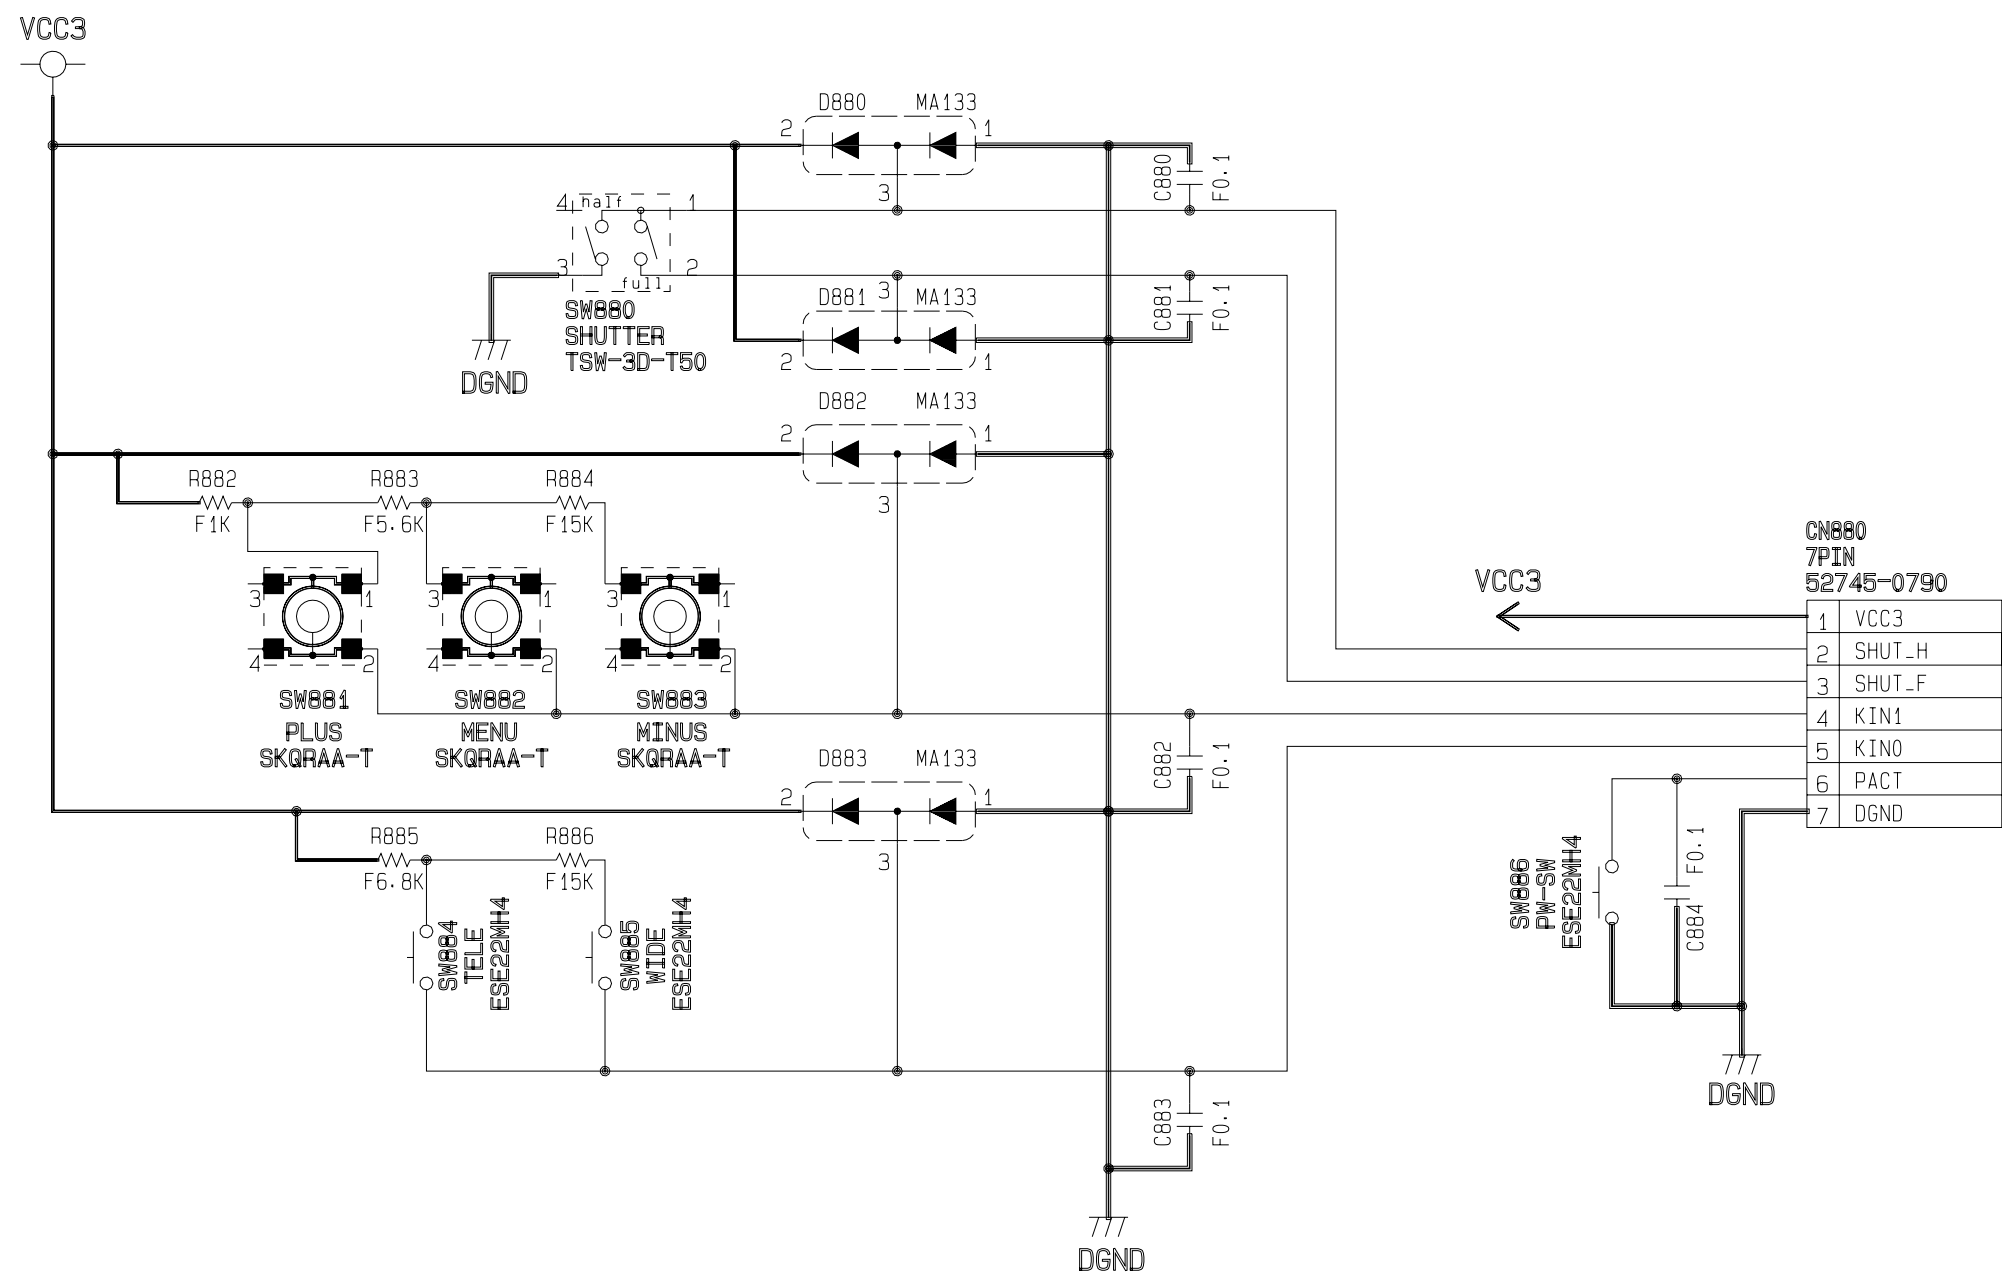


KEY-PCB (PCB-715A-KB)

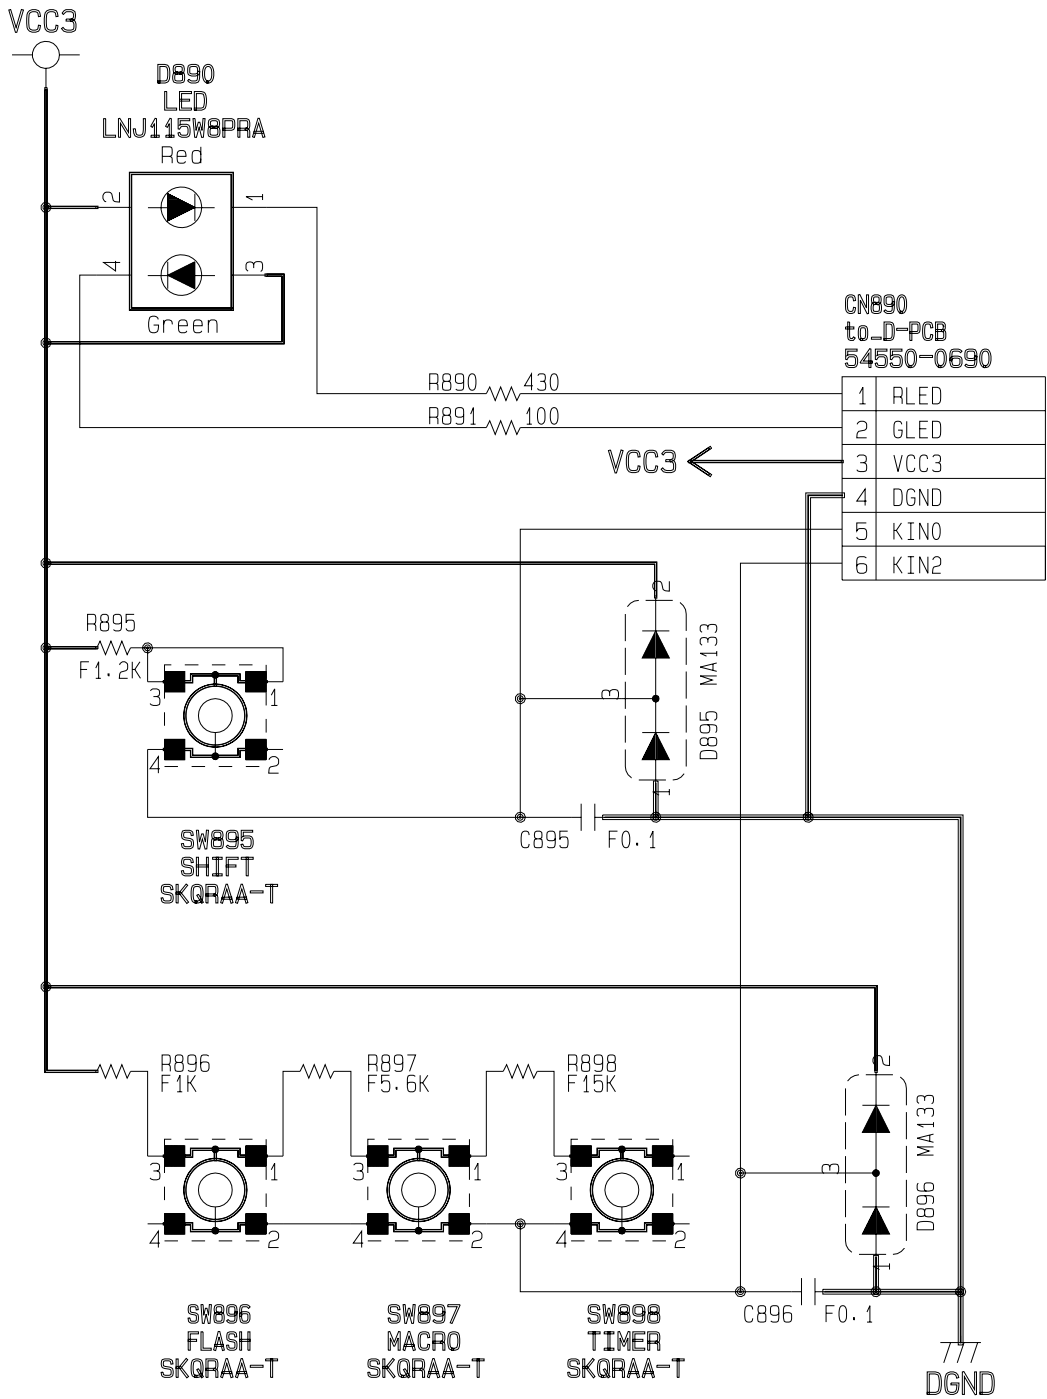


CMD-PCB (PCB-715CMD)

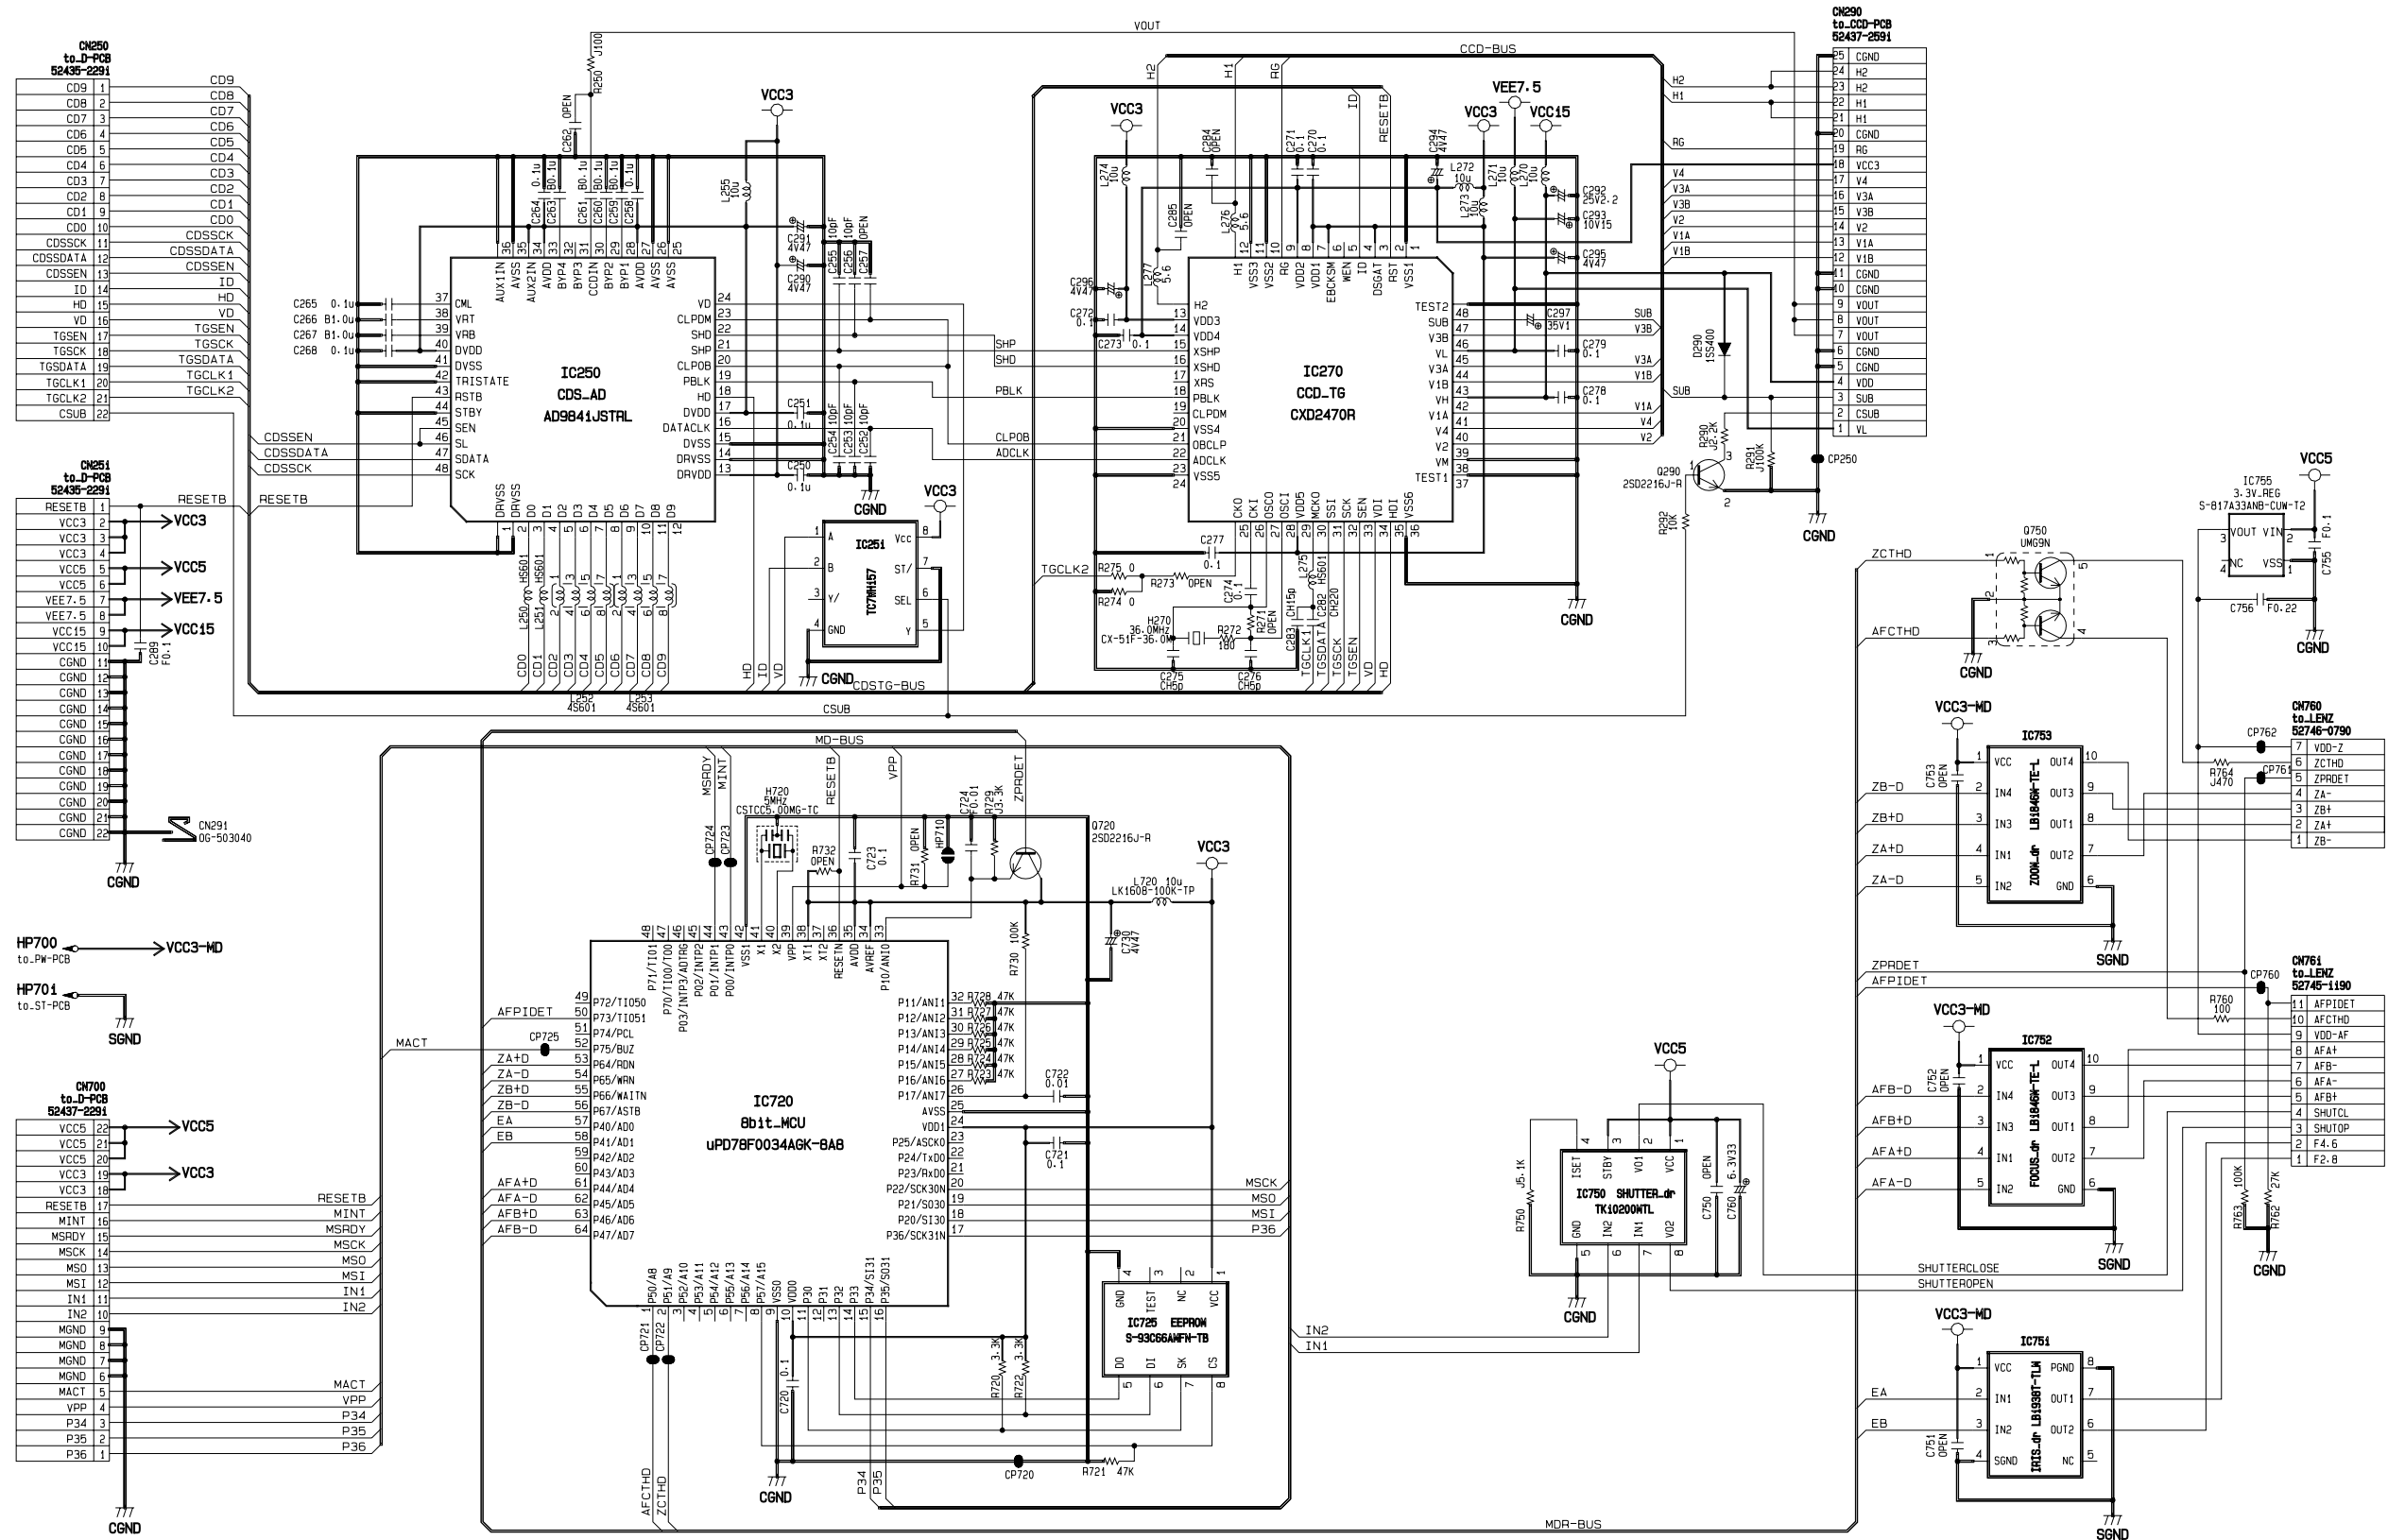

CCD-PCB (PCB-715CCD)

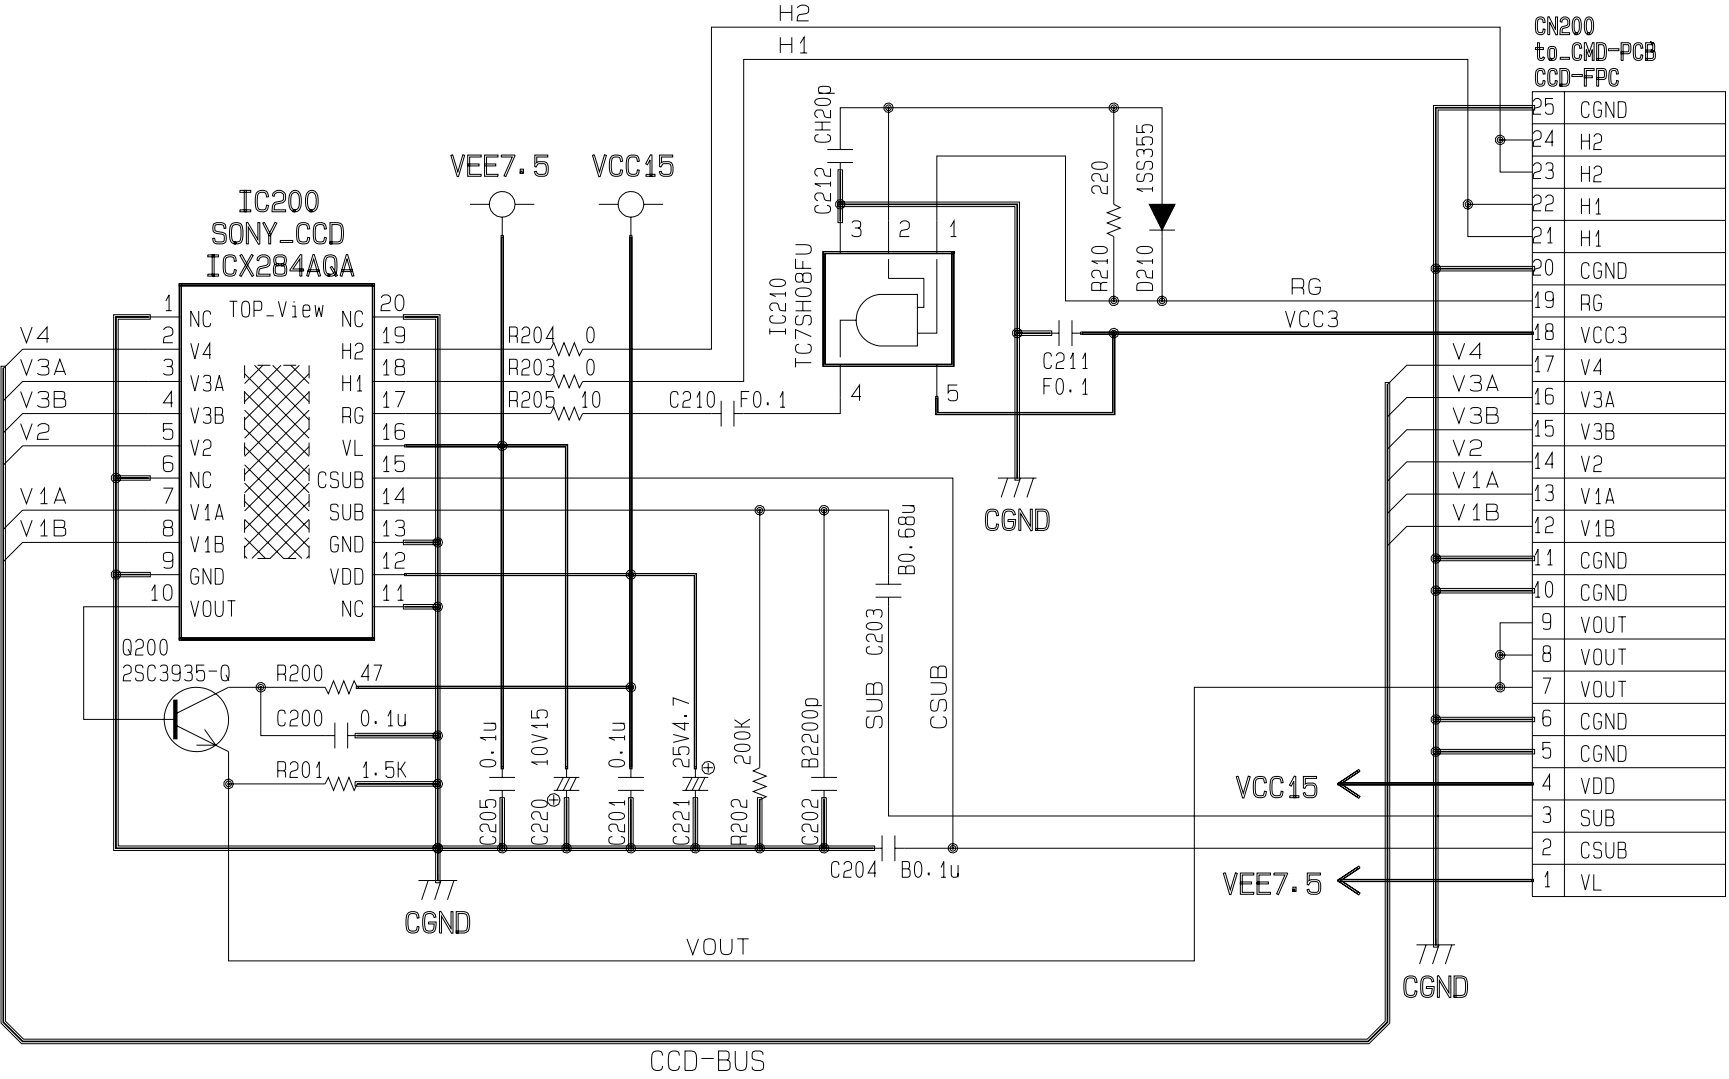

ST-PCB (PCB-715A-ST)

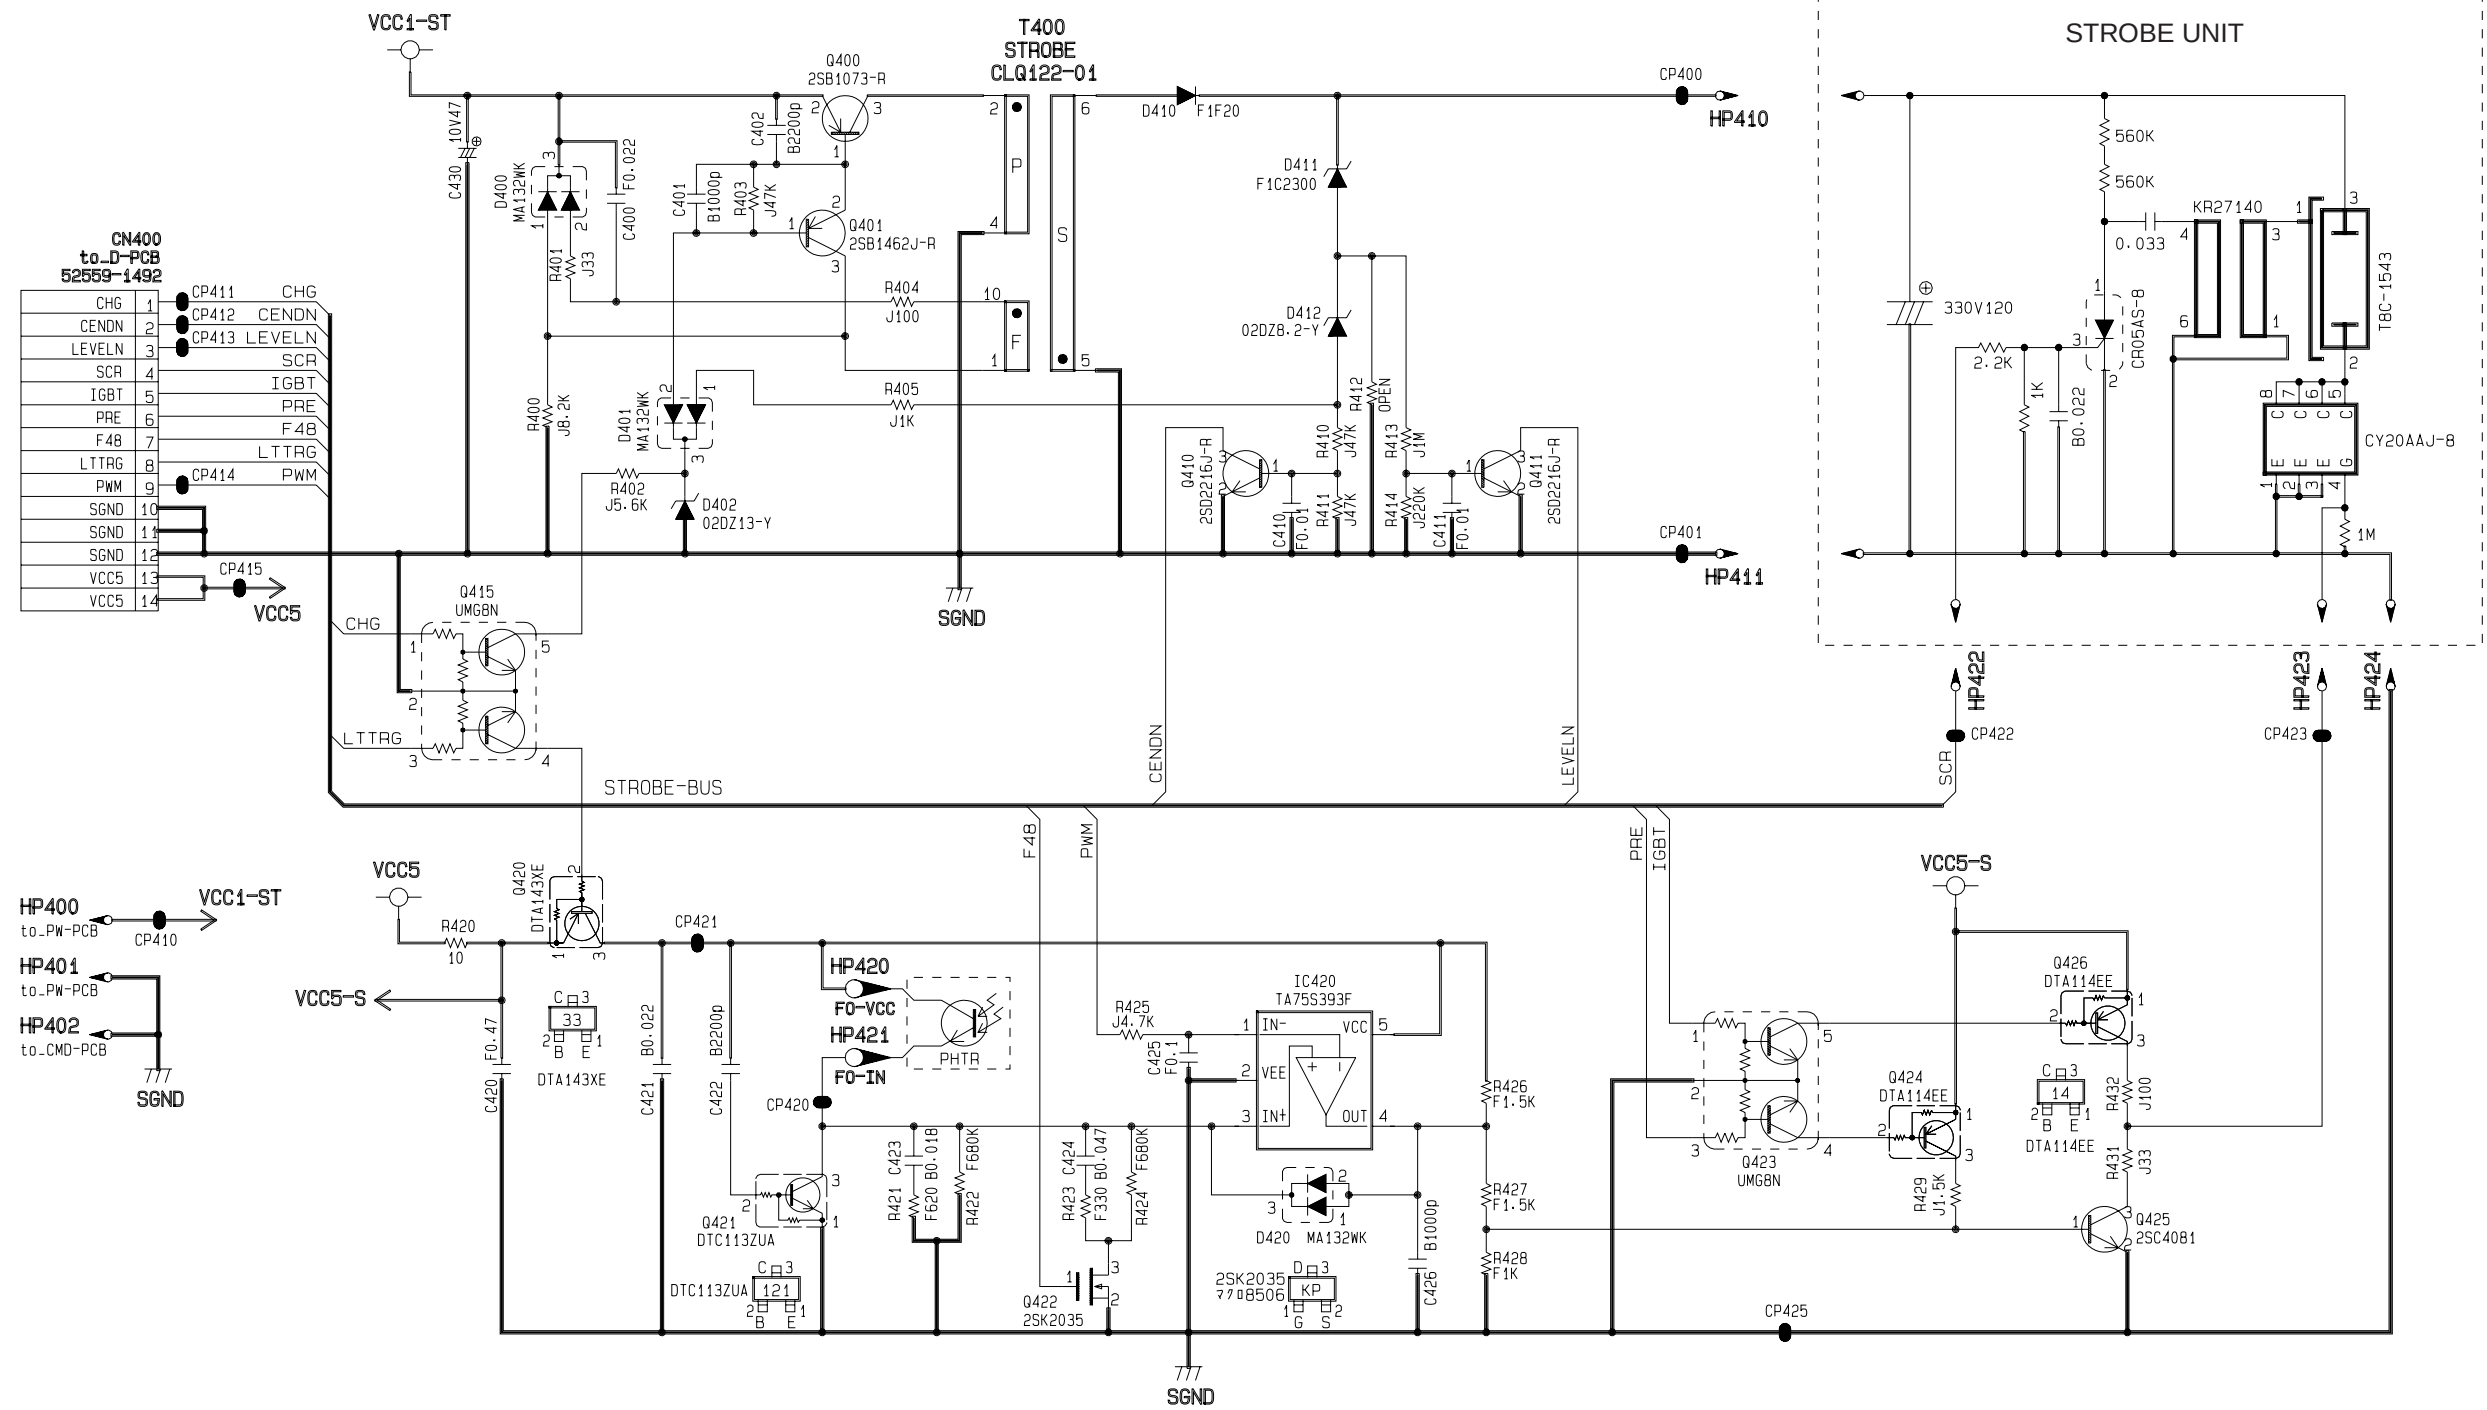

CASIO TECHNO CO.,LTD.
Overseas Service Division

Nishi-Shinjuku Kimuraya Bldg. 1F
5-25, Nishi-Shinjuku 7-Chome
Shinjuku-ku, Tokyo 160-0023, Japan