

Front & rear
Parking assist system

PTS800V7

Top front windshield display



Contents

User's Manual

Important notice	01
Disclaimer	01
About the product	02
Key features	02
Technical specifications	02
LCD display	03
Voice and volume adjustment	04
Self-test function	05
Learning function for cars with tow-bar or spare wheel	06
How does the system work	07
Attention	11
Sensor maintenance	11

Installation Manual

Brief installation diagram	13
Packing list	14
Installation tools	14
Sensor installation	15
Display installation	21
Wire connection	22
Function test after installation	23
Troubleshooting	24

Important notice

Parking assist systems help to provide assistance when reversing and parking. Driving skills, such as slowing down, use of mirrors etc. is always essential.

1. This unit is for vehicles with 12V DC only.
2. Unit should be installed by a professional auto technician.
3. Route wiring harness away from heat sources and electrical components.
4. It is strongly recommended to check the position of the sensors before the actual drilling of the holes.
5. Perform a test after installation.

Disclaimer

The parking assist system is designed as a driver assistance device, and should not be used as a substitute for safe parking practices. The area into which the vehicle is to be reversed must be constantly visually monitored while parking.

The manufacturer and its distributors do not guarantee or assume liability for collisions or damages while reversing your vehicle.

About the product

Parking assist system is an ultrasonic distance monitoring system. It electronically detects the area in front of and/or at rear of your vehicle while parking, and alerts you with audio and visual warnings. It assists the driver when parking and in manoeuvring situation.

PTS800V7 is a front and rear parking assist system with blue wide LCD display. All the detachable sensors are water-resistance and can be easily changed. Combined with the anti-interference and anti-false alert technology, the system can detect obstacles in any weather conditions and response quickly. The system has intelligent detection, which is ideal for cars with tow-bar or spare tire.

Every piece of our products has passed the most stringent test before releasing to the market. It is reliable at a wide temperature range (-40°C ~ +85°C/-40°F~+185°F) and becomes very useful when you are parking at a raining day, snowing day or at night etc. With the help of parking assist system, you can enjoy a comfortable, relaxed and safer parking experience.



Key features

- 1 Complete front & rear protection
- 1 0.08s response time
- 1 Display installed on top of front windshield
- 1 Anti-false alert technology
- 1 Blue wide screen display
- 1 Self-test function
- 1 Voice / beep alert selectable
- 1 Intelligent detection, supper for cars with tow-bar, spare tire or other protrusion

Technical specifications


- 1 Input voltage: 9 ~ 16VDC
- 1 Working current: < 300mA
- 1 Static current: < 80mA
- 1 Operation temperature: -40°C ~ +80°C/
-40°F ~ +176°F
- 1 Beep volume: 50~70dB
- 1 Detection range:
 - Front: 0.10~0.99m/0.33~3.25ft
 - 0.10~0.69m/0.33~2.26ft (reversing)
 - Rear: 0.10~2.59m/0.33~8.50ft
- 1 Display range:
 - Front: 0.3~0.99m/0.98~3.25ft
 - 0.3~0.69m/0.98~2.26ft (reversing)
 - Rear: 0.3~2.59m/0.98~8.50ft

Display

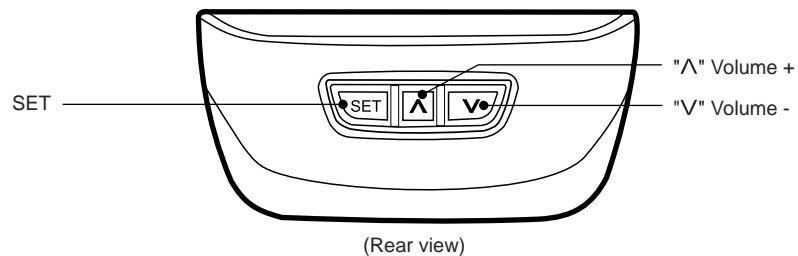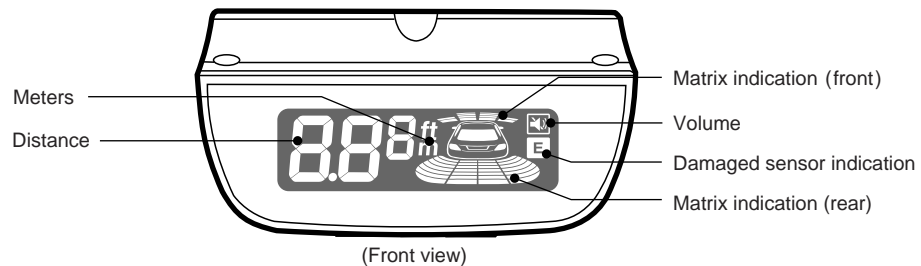


Voice and volume adjustment

Turning ON/OFF voice alert

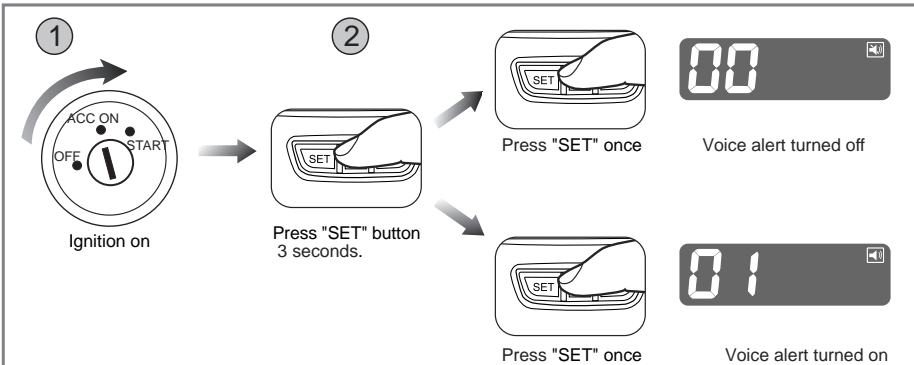


Volume adjusting

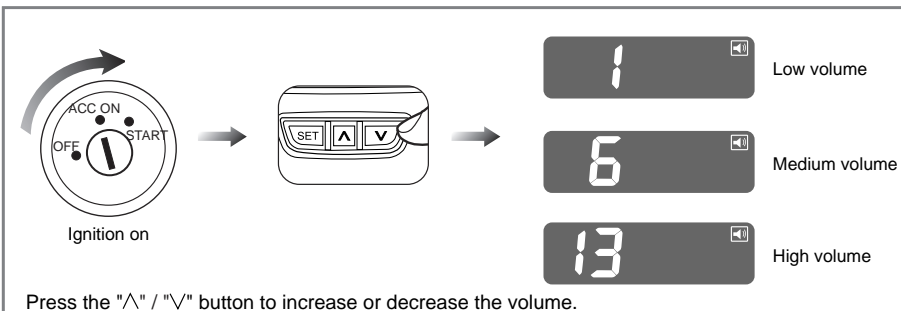

Self-test function

1. Once the ignition is turned on, the system will test the 4 front sensors E, F, G and H automatically.


1) All sensors are working. 2) Damaged sensors are detected.

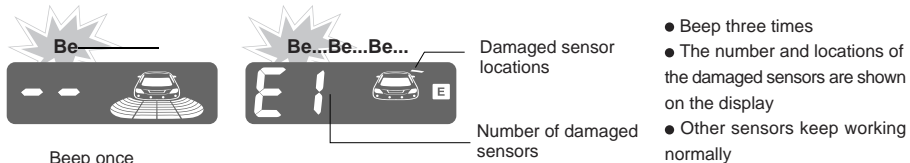


3) Once the self-test procedure is completed, the system will detect the obstacle in front of the car for 5 seconds.

2. When the reverse gear is selected, the system will test the 4 rear sensors A, B, C, D and 2 front sensors E and H automatically.

1) All sensors are working. 2) Damaged sensors are detected.

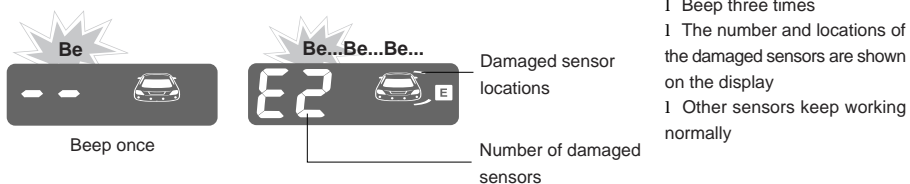

Learning function for cars with tow-bar or spare wheel

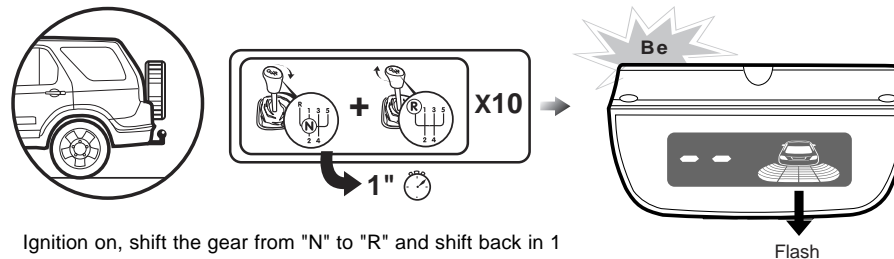


Ignition on, shift the gear from "N" to "R" and shift back in 1 second and repeat for 10 times. At the 10th time stay at "R" position for 6 seconds to achieve the learning function.

Ignition on, shift the gear from "N" to "R" and shift back in 1 second and repeat for 12 times. At the 12th time stay at "R" position for 8 seconds to clean the learning function.

Note: If you forget the shift-times, please stay at "R" position for 2 seconds to clean the memory and next time will be the first time.

The display will flash 3 times then beep once, this indicates that the learning function is successful and the system will not warn for tow-bar or spare wheel.

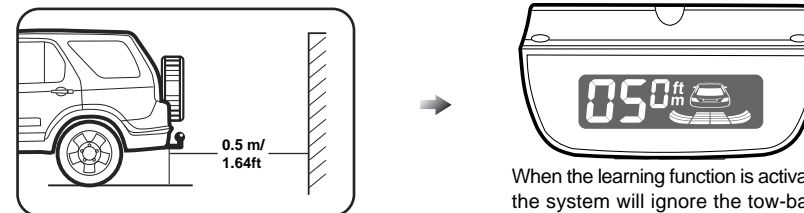


When the learning function is activated, the system will ignore the tow-bar or spare wheel and only detect other objects behind the vehicle.

Note: If the vehicle does not have tow-bar or spare wheel, you do not need to use this function.

How does the system work

Driving forward (6 sensor)

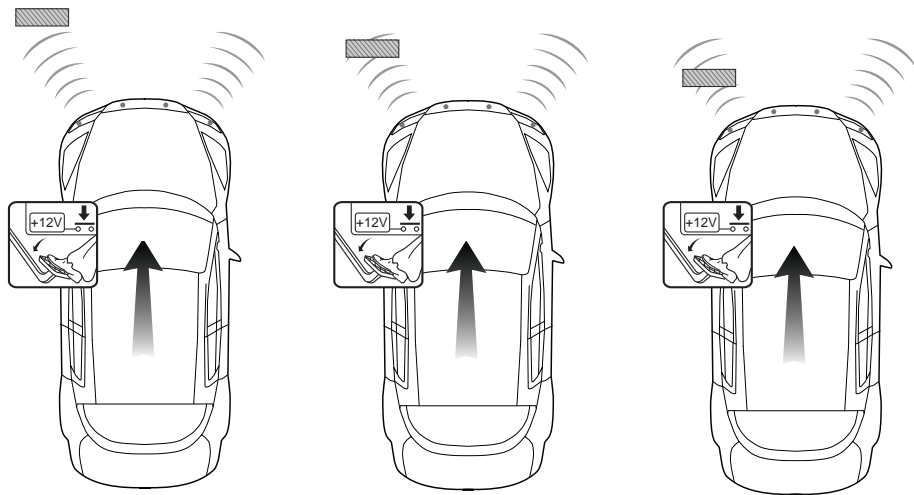

0.81m/2.6ft

0.8 1m 

No beep

0.35m/1.1ft

0.35 m 


Be — Be —

Stop(<0.30m/1.0ft)

-P 

Be —

Driving forward (8 sensor)

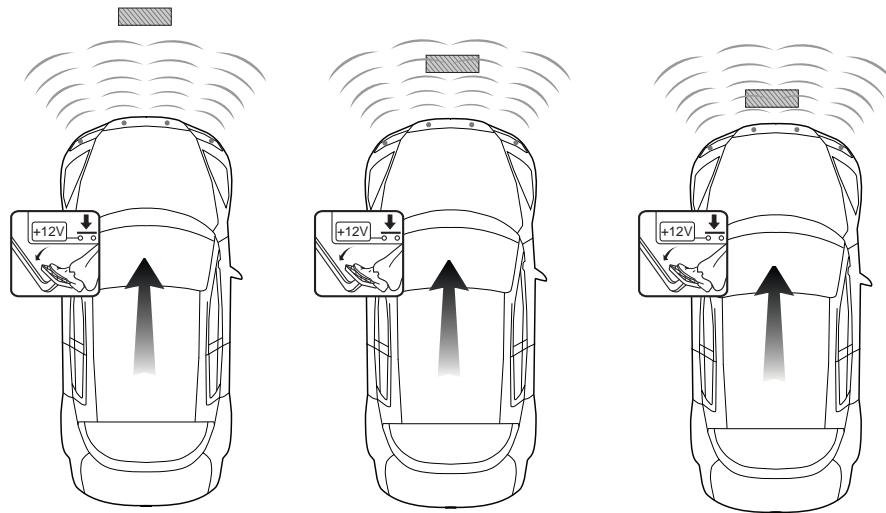

0.81m/2.6ft

0.8 1m 

No beep

0.40m/1.3ft

0.40 m 


Be — Be —

Stop(<0.30m/1.0ft)

-P 

Be —


Reversing

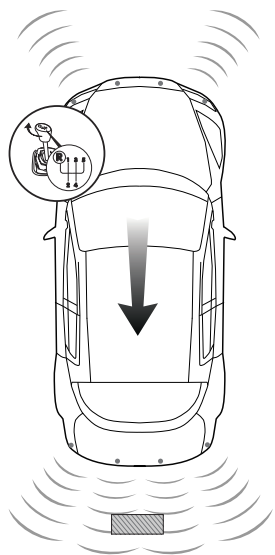

1.21m/4.0ft




Be---

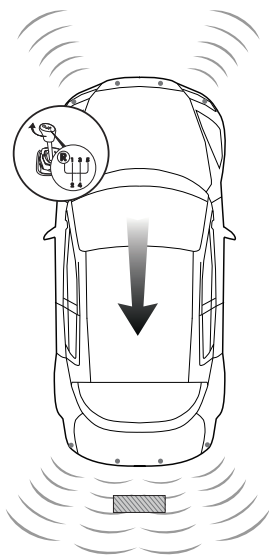

0.60m/2.0ft



Be--Be---


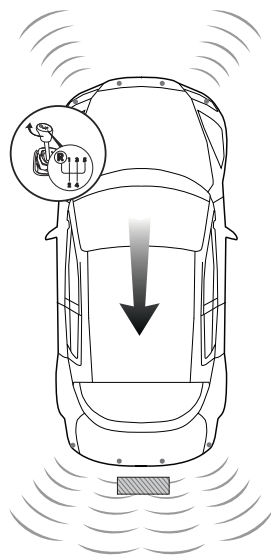


Stop(<0.30m/1.0ft)



Be_____


Zigzag reversing

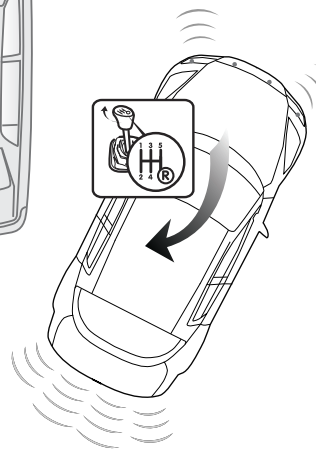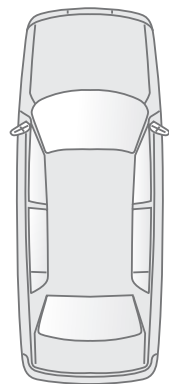

0.30m/1.0ft



Be-Be-Be-Be-

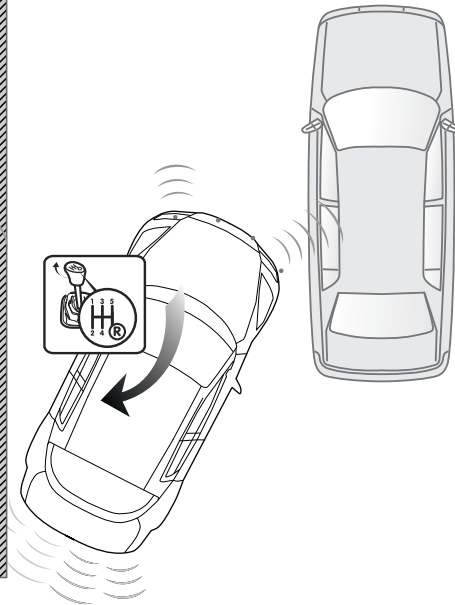






Stop! (<0.30m/1.0ft)



Be_____



Attention

False detection may occur in the following situations:





- After installation, please fully test the system before use.
- Dirty or damaged sensors can cause incorrect detection.
- Ensure that the self-test procedure is completed and all sensors are functioning before use.



Sensor maintenance

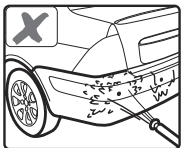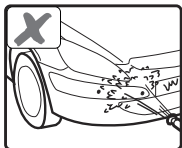



Do not wash the sensor with squirt gun or swab them forcibly.

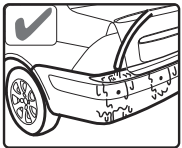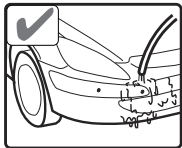

Please wash car with low-pressure water.

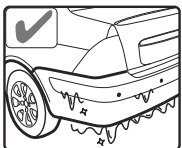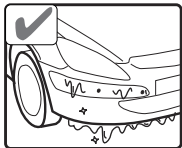


Please melt the ice with warm water when the sensors are covered by ice.

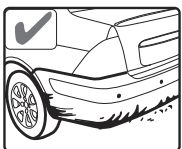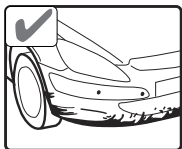


Please clean the sensors with cloth or low-pressure water when the sensors are covered by mud or snow.

Installation Manual


Brief installation diagram

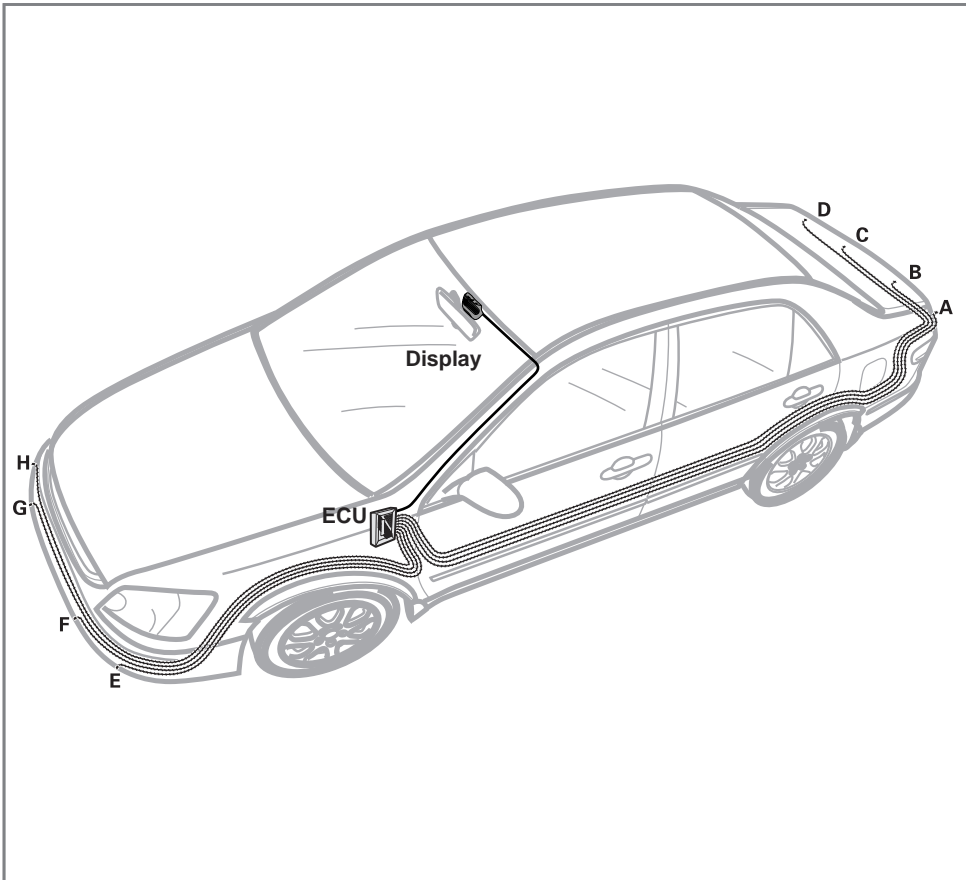

Packing list

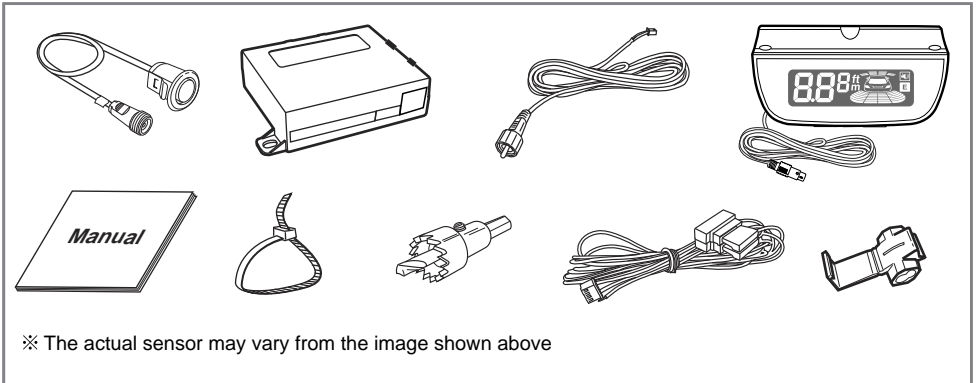

Installation tools

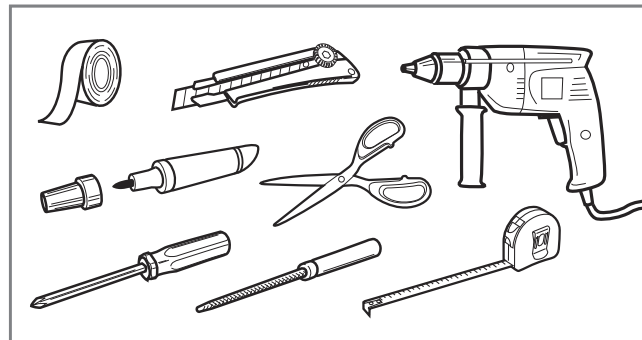

60' ~ 80'

Sensor installation

Pls adjust the sensor angle according to sensor height and bumper angle, avoid detecting to ground.

$H > 40\text{cm}/1.3\text{ft}$
 $H < 60\text{cm}/2.0\text{ft}$

0.9m / 3.0ft

$H < 40\text{cm}/1.3\text{ft}$
 $H > 60\text{cm}/2.0\text{ft}$

0.6m / 2.0ft

1

$35\text{cm}/1.1\text{ft} < L1 < 45\text{cm}/1.5\text{ft}$
 $50\text{cm}/1.6\text{ft} < L2 < 76\text{cm}/2.5\text{ft}$
 $40\text{cm}/1.3\text{ft} < H < 60\text{cm}/2.0\text{ft}$

$H > 45\text{cm}/1.5\text{ft}$
 $H < 65\text{cm}/2.1\text{ft}$


2.5m / 0.8ft

$H < 45\text{cm}/1.5\text{ft}$
 $H > 65\text{cm}/2.1\text{ft}$

1.5m / 0.5ft


$a = 1/8L$
 $b = 2/8L$
 $c = 1/8L$

2

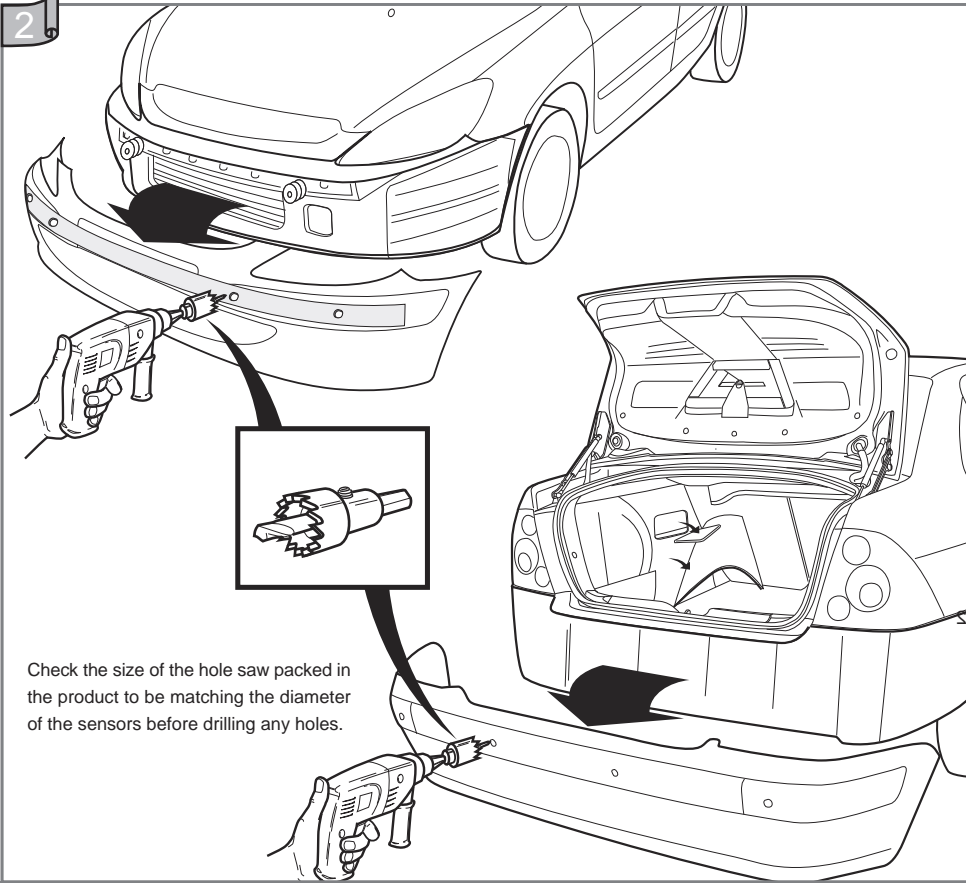


Check the size of the hole saw packed in the product to be matching the diameter of the sensors before drilling any holes.


3

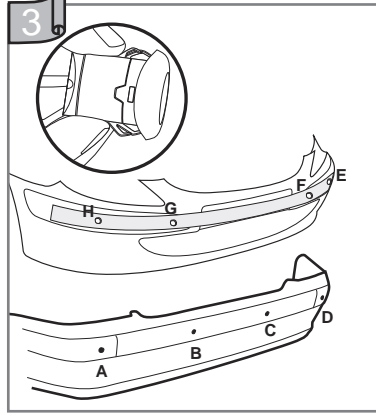


4

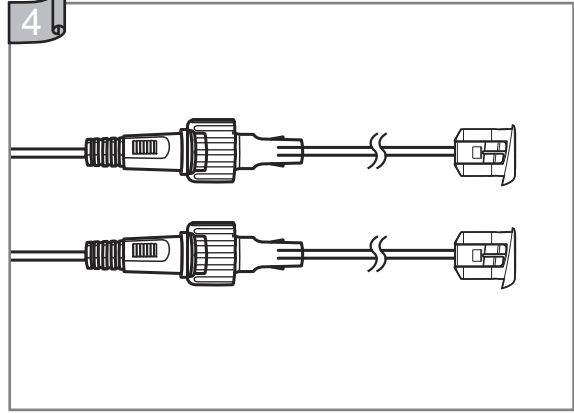


5

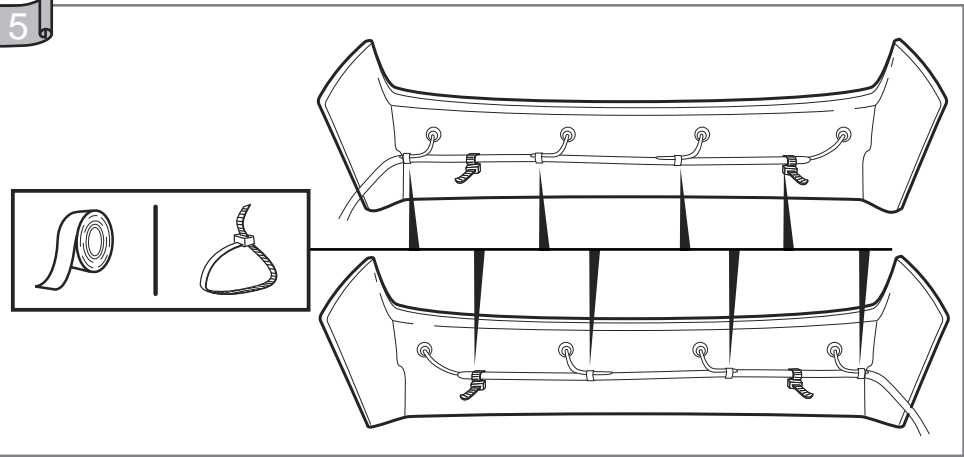


6

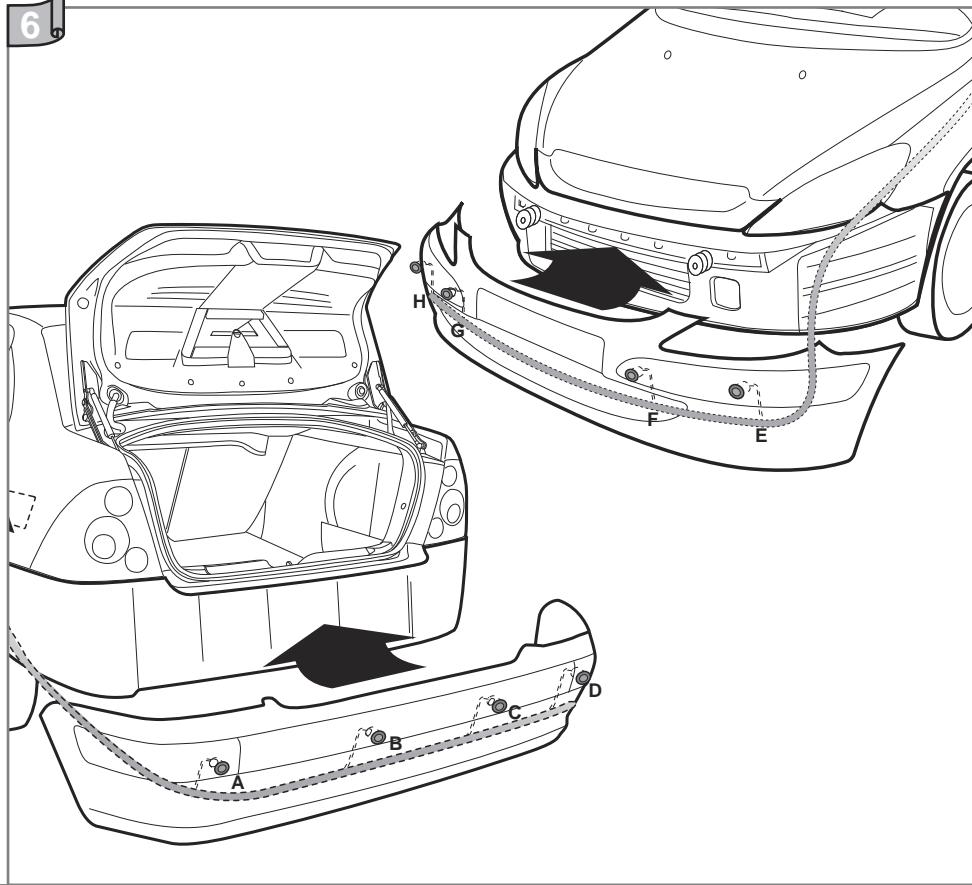


7

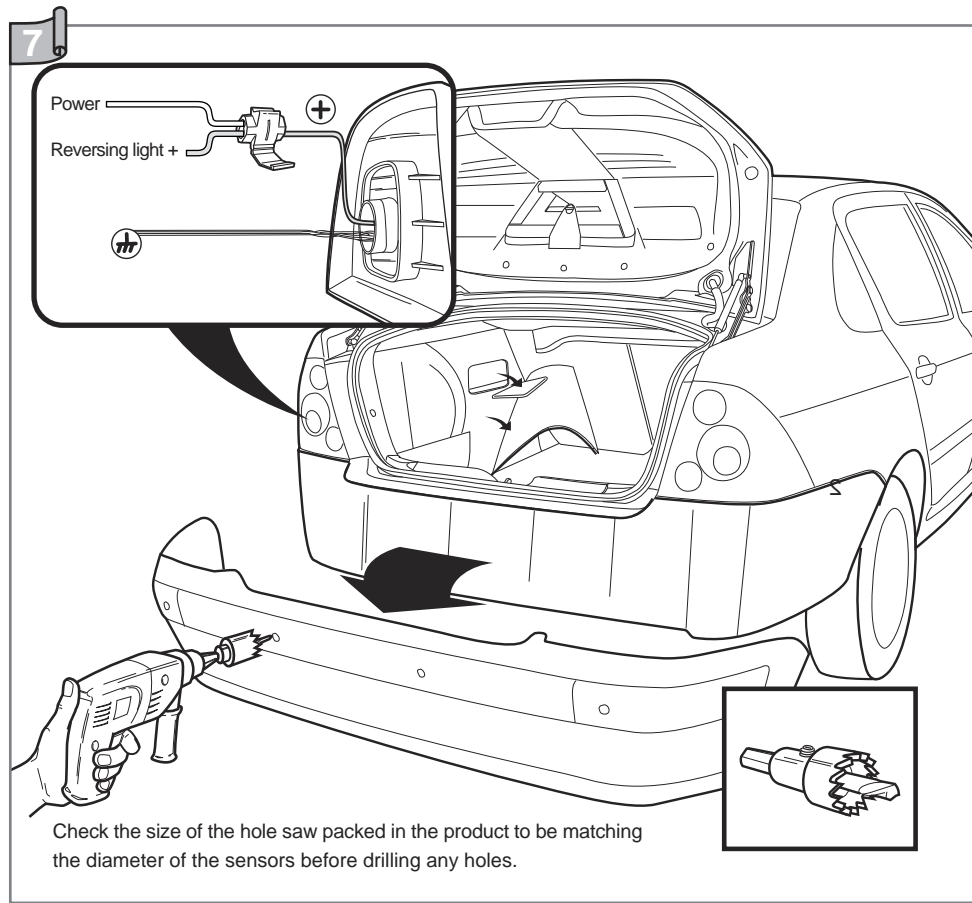


Display installation

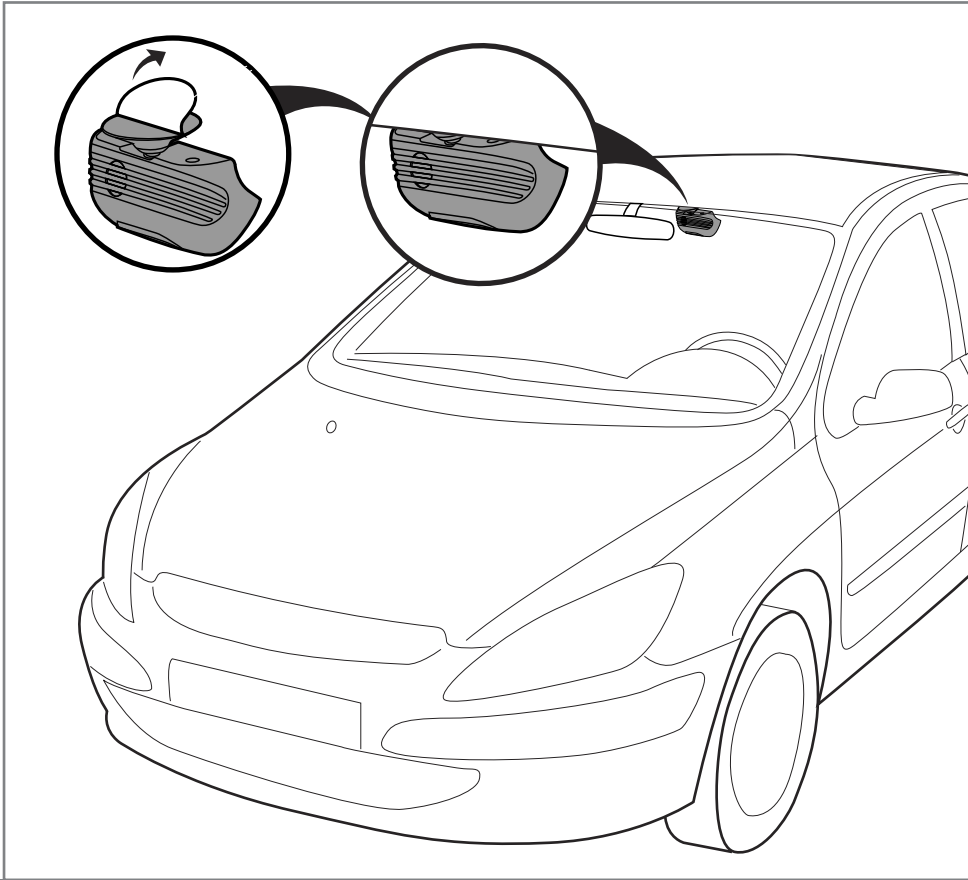

Wire connection

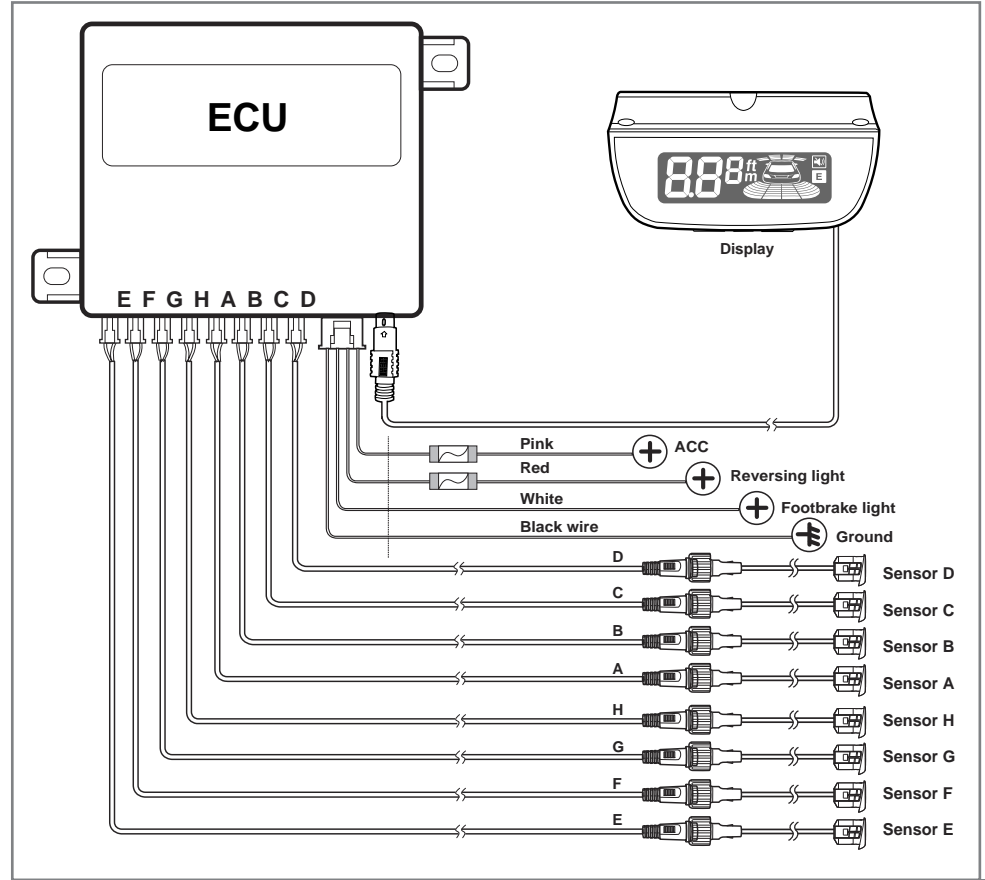

Function test after installation

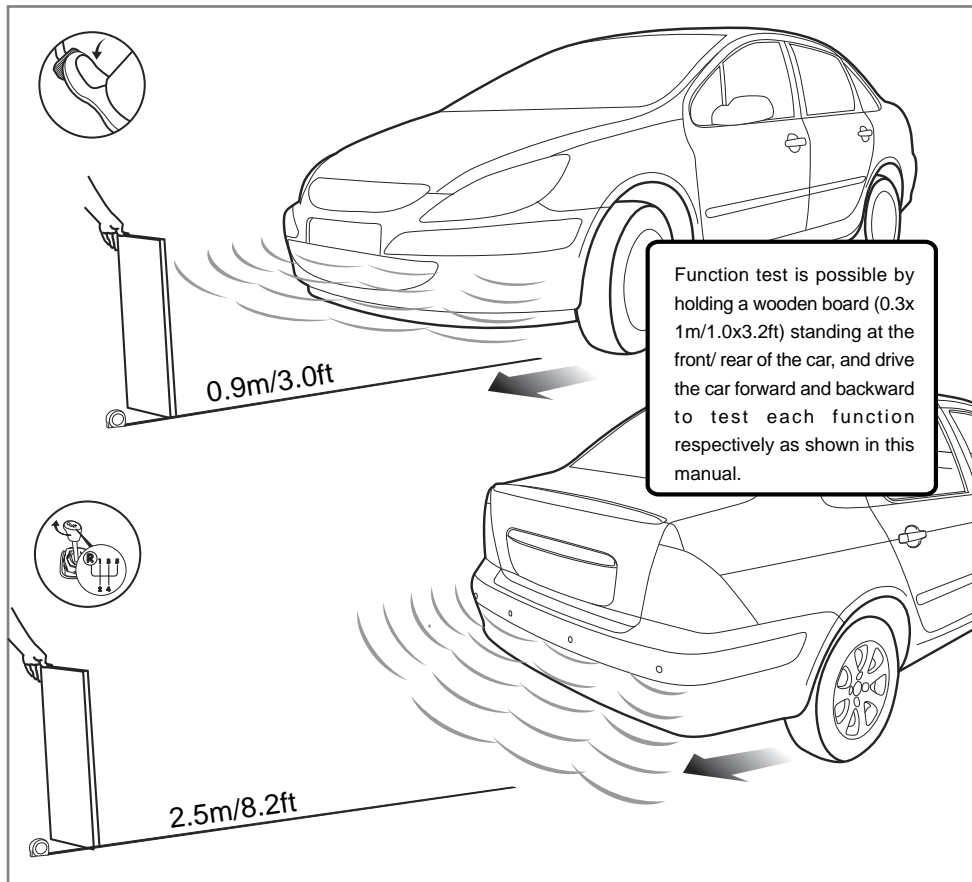

Troubleshooting

❶ After installation, the display doesn't work

- Are all wires connected properly?
- Is the ignition turned on?
- Is the reverse gear selected or is the footbrake pressed?

❷ Damaged sensor detected

- Are all sensors plugged into the ECU correctly and tightly?
- Is the sensor wire broken?
- Is the sensor covered by mud or snow?
- Is the sensor damaged?

❸ The object position does not correspond to the correct indicator on the blue digital display.

- Are the sensor cables connected to the control unit (ECU) in the correct position?

❹ False warning

- Are all sensors plugged into the ECU in the correct position tightly?
- Does any sensor detect the ground?

❺ Warning sound is too low or too high

- Press the "Volume" buttons to adjust the volume to a suitable level.

❻ No voice warning

- Check whether the voice warning is switched on.

❽ The display always shows 0.4/15.7ft-0.6m/23.6ft.

- Are sensors mounted too low or detecting the ground?
- Check whether the sensor is installed up-side-down.
- Unplug 1 sensor at a time to check for root cause.

❾ If the problem persists, please follow these steps

- For consumers: contact your dealer or nearby service centre.
- For installer or dealer: check system according to "Checking flow chart" from.