

19" LCD TV/DVD

chassis FL11.8

SERVICE MANUAL

Contents

TYPE A

LD190SS2	SYLVANIA	(Serial No.: DS1)
19MD301B/F7	MAGNAVOX	(Serial No.: DS1)
LD190EM2	EMERSON	(Serial No.: DS1)
LD190EM2	EMERSON	(Serial No.: DS2)
19MD311B/F7	MAGNAVOX	(Serial No.: DS1)

© 2011 Funai Electric Co., Ltd.

All rights reserved. No part of this manual may be reproduced, copied, transmitted, disseminated, transcribed, downloaded or stored in any storage medium, in any form or for any purpose without the express prior written consent of Funai. Furthermore, any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Funai reserves the right to change the content herein without the obligation to notify any person or organization of such changes.

FUNAI with the  design is a registered trademark of Funai Electric Co., Ltd and may not be used in any way without the express written consent of Funai. All other trademarks used herein remain the exclusive property of their respective owners. Nothing contained in this manual should be construed as granting, by implication or otherwise, any license or right to use any of the trademarks displayed herein. Misuse of any trademarks or any other content in this manual is strictly prohibited. Funai shall aggressively enforce its intellectual property rights to the fullest extent of the law.

IMPORTANT SAFETY NOTICE

Proper service and repair is important to the safe, reliable operation of all Funai Equipment. The service procedures recommended by Funai and described in this service manual are effective methods of performing service operations. Some of these service special tools should be used when and as recommended.

It is important to note that this service manual contains various CAUTIONS and NOTICES which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It also is important to understand that these CAUTIONS and NOTICES ARE NOT EXHAUSTIVE. Funai could not possibly know, evaluate and advice the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, Funai has not undertaken any such broad evaluation. Accordingly, a servicer who uses a service procedure or tool which is not recommended by Funai must first use all precautions thoroughly so that neither his safety nor the safe operation of the equipment will be jeopardized by the service method selected.

The LCD panel is manufactured to provide many years of useful life. Occasionally a few non active pixels may appear as a tiny spec of color. This is not to be considered a defect in the LCD screen.

Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.

TABLE OF CONTENTS

Specifications	1-1
Laser Beam Safety Precautions	2-1
Important Safety Precautions	3-1
Standard Notes for Servicing	4-1
Cabinet Disassembly Instructions	5-1
Electrical Adjustment Instructions	6-1
How to Initialize the LCD TV/DVD	7-1
Firmware Renewal Mode	8-1
Troubleshooting	9-1
Block Diagrams	10-1
Schematic Diagrams / CBA and Test Points	11-1
Waveforms	12-1
Wiring Diagram	13-1
System Control Timing Charts	14-1
Lead Identifications	15-1
Exploded Views	16-1
Parts List	17-1
Revision History	18-1

SPECIFICATIONS

< LCD TV Section >

< TUNER / NTSC >

ANT. Input ----- 75 Ω Unbal., F type

Description	Condition	Unit	Nominal	Limit
1. AFT Pull-In Range	---	MHz	± 2.3	± 2.1
2. Synchronizing Sens.	TV.ch.4	dB μ	18	20
	CA.ch.31	dB μ	18	20
	CA.ch.87	dB μ	18	23

< TUNER / ATSC >

Description	Condition	Unit	Nominal	Limit
1. Received Freq. Range (-28dBm)	---	kHz	---	± 100
2. ATSC Dynamic Range (min / max)	ch.4	dBm	---	-76/0
	ch.10	dBm	---	-76/0
	ch.41	dBm	---	-76/+4

< LCD PANEL >

Description	Condition	Unit	Nominal	Limit
1. Native Pixel Resolution	Horizontal	pixels	1366	---
	Vertical	pixels	768	---
2. Brightness (w / filter)	---	cd/m ²	230	---
3. Viewing Angle	Horizontal	°	-85 to 85	---
	Vertical	°	-80 to 80	---

< VIDEO >

Description	Condition	Unit	Nominal	Limit
1. Over Scan	Horizontal	%	5	5 $\pm$ 5
	Vertical	%	5	5 $\pm$ 5
2. Color Temperature	---	°K	12000	---
	x		0.272	$\pm 3\%$
	y		0.278	$\pm 3\%$
3. Resolution (composite video)	Horizontal	line	400	---
	Vertical	line	350	---

< AUDIO >

All items are measured across 8 Ω load at speaker output terminal with L.P.F.

Description	Condition	Unit	Nominal	Limit
1. Audio Output 10% Distortion (ATSC 0 dBfs)	Lch/Rch	W	1.5/1.5	1.3/1.3
2. Audio Distortion (NTSC)	500mW: Lch/Rch	%	0.5/0.5	2.0/2.0
3. Audio Freq. Response (NTSC)	-6dB: Lch	Hz	70 to 10 k	---
	-6dB: Rch	Hz	70 to 10 k	---

<DVD Section>

< DVD >

Description	Condition	Unit	Nominal	Limit
1. Horizontal Resolution (TDV-540 TIT.2 CHP.16)	---	Line	350	330
2. Audio Distortion (LPCM 48 kHz, W/LPF) (PTD 1-NOR TIT.1 CHP.1)	L R	%	0.03	0.07
3. Audio freq. response (LPCM 48 kHz) (PTD 1-NOR TIT.1 CHP.5 -- 10)	L, 20 Hz R, 20 Hz L, 20 kHz R, 20 kHz	dB	0	+4/-5
4. Audio S/N (LPCM 48 kHz, W/LPF, A-WTD) (PTD 1-NOR TIT.1 CHP.1 -- 2)	L R	dB	85	75

Note: Nominal specifications represent the design specifications. All units should be able to approximate these. Some will exceed and some may drop slightly below these specifications. Limit specifications represent the absolute worst condition that still might be considered acceptable. In no case should a unit fail to meet limit specifications.

Precautions during Servicing

- A.** Parts identified by the **▲** symbol are critical for safety.
Replace only with part number specified.
- B.** In addition to safety, other parts and assemblies are specified for conformance with regulations applying to spurious radiation. These must also be replaced only with specified replacements.
Examples: RF converters, RF cables, noise blocking capacitors, and noise blocking filters, etc.
- C.** Use specified internal wiring. Note especially:
 - 1) Wires covered with PVC tubing
 - 2) Double insulated wires
 - 3) High voltage leads
- D.** Use specified insulating materials for hazardous live parts. Note especially:
 - 1) Insulation Tape
 - 2) PVC tubing
 - 3) Spacers
 - 4) Insulators for transistors.
- E.** When replacing AC primary side components (transformers, power cord, etc.), wrap ends of wires securely about the terminals before soldering.
- F.** Observe that the wires do not contact heat producing parts (heat sinks, oxide metal film resistors, fusible resistors, etc.)
- G.** Check that replaced wires do not contact sharp edged or pointed parts.
- H.** When a power cord has been replaced, check that 11~13 lb (5~6 kg) of force in any direction will not loosen it.
- I.** Also check areas surrounding repaired locations.
- J.** Use care that foreign objects (screws, solder droplets, etc.) do not remain inside the set.
- K.** When connecting or disconnecting the internal connectors, first, disconnect the AC plug from the AC supply outlet.
- L.** When installing parts or assembling the cabinet parts, be sure to use the proper screws and tighten certainly.

Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts and wires have been returned to original positions. Afterwards, perform the following tests and confirm the specified values in order to verify compliance with safety standards.

1. Clearance Distance

When replacing primary circuit components, confirm specified clearance distance (d) and (d') between soldered terminals, and between terminals and surrounding metallic parts. (See Fig. 1)

Table 1: Ratings for selected area

AC Line Voltage	Region	Clearance Distance (d), (d')
110 to 130 V	U.S.A. or Canada	≥ 3.2 mm (0.126 inches)

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.

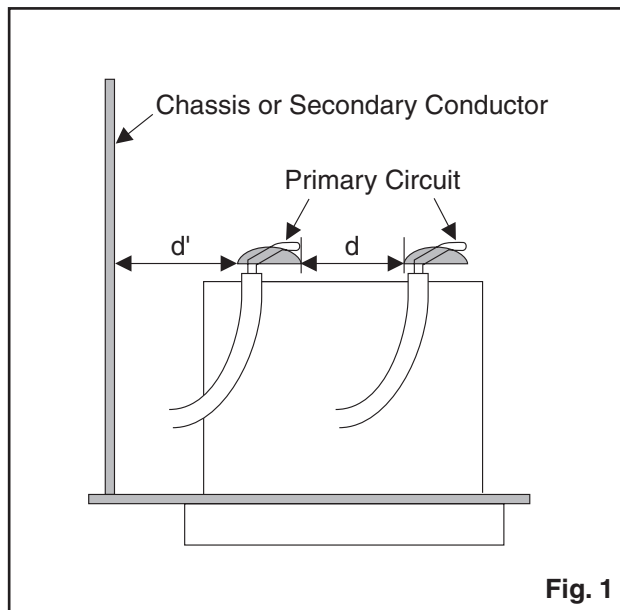


Fig. 1

2. Leakage Current Test

Confirm the specified (or lower) leakage current between B (earth ground, power cord plug prongs) and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.) is lower than or equal to the specified value in the table below.

Measuring Method: (Power ON)

Insert load Z between B (earth ground, power cord plug prongs) and exposed accessible parts. Use an AC voltmeter to measure across both terminals of load Z. See Fig. 2 and following table.

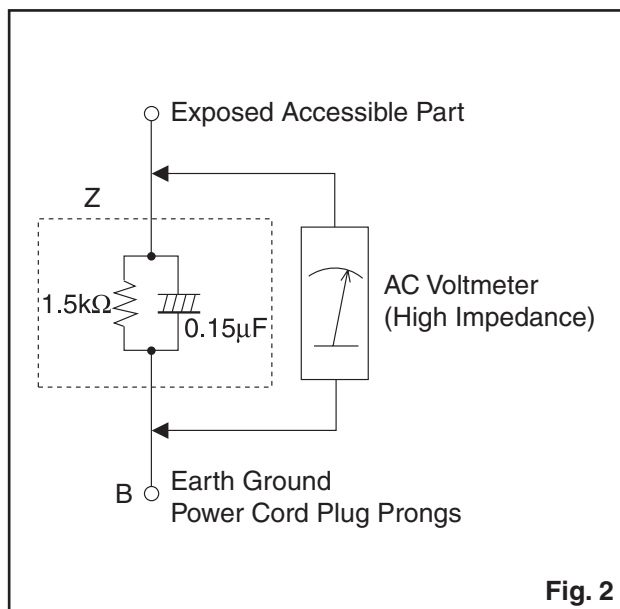


Fig. 2

Table 2: Leakage current ratings for selected areas


AC Line Voltage	Region	Load Z	Leakage Current (i)	Earth Ground (B) to:
110 to 130 V	U.S.A. or Canada	0.15 μ F CAP. & 1.5 kΩ RES. Connected in parallel	$i \leq 0.5$ mA rms	Exposed accessible parts

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.


STANDARD NOTES FOR SERVICING

Circuit Board Indications


1. The output pin of the 3 pin Regulator ICs is indicated as shown.

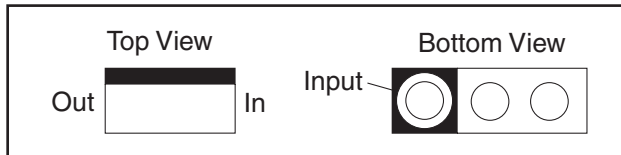

2. For other ICs, pin 1 and every fifth pin are indicated as shown.

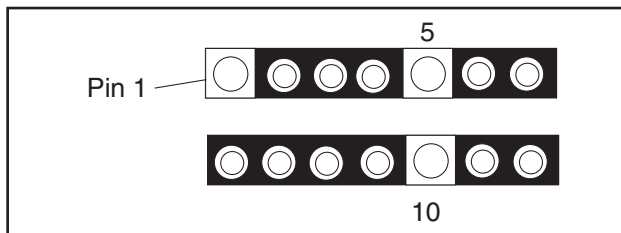


3. The 1st pin of every male connector is indicated as shown.




Instructions for Connectors

1. When you connect or disconnect the FFC (Flexible Foil Connector) cable, be sure to first disconnect the AC cord.
2. FFC (Flexible Foil Connector) cable should be inserted parallel into the connector, not at an angle.

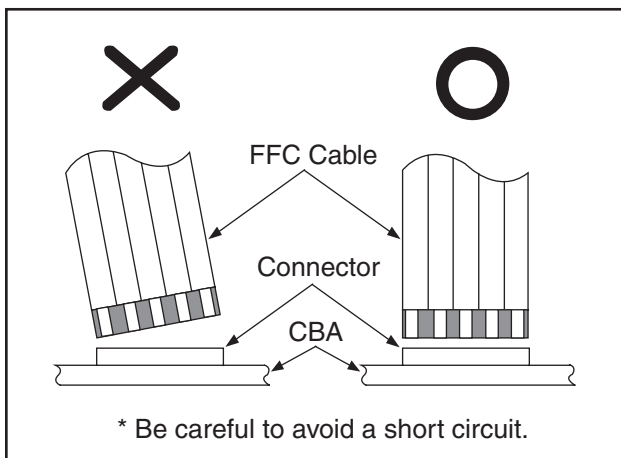

Pb (Lead) Free Solder

Pb free mark will be found on PCBs which use Pb free solder. (Refer to figure.) For PCBs with Pb free mark, be sure to use Pb free solder. For PCBs without Pb free mark, use standard solder.

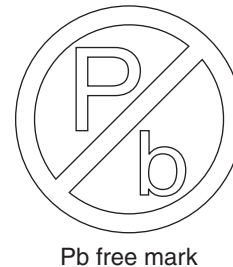


How to Remove / Install Flat Pack-IC

1. Removal

With Hot-Air Flat Pack-IC Desoldering Machine:

1. Prepare the hot-air flat pack-IC desoldering machine, then apply hot air to the Flat Pack-IC (about 5 to 6 seconds). (Fig. S-1-1)

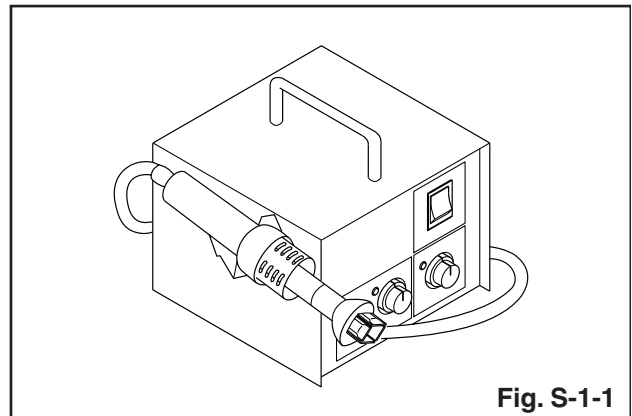


2. Remove the flat pack-IC with tweezers while applying the hot air.
3. Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)
4. Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)

CAUTION:

1. The Flat Pack-IC shape may differ by models. Use an appropriate hot-air flat pack-IC desoldering machine, whose shape matches that of the Flat Pack-IC.
2. Do not supply hot air to the chip parts around the flat pack-IC for over 6 seconds because damage to the chip parts may occur. Put masking tape


around the flat pack-IC to protect other parts from damage. (Fig. S-1-2)

3. The flat pack-IC on the CBA is affixed with glue, so be careful not to break or damage the foil of each pin or the solder lands under the IC when removing it.

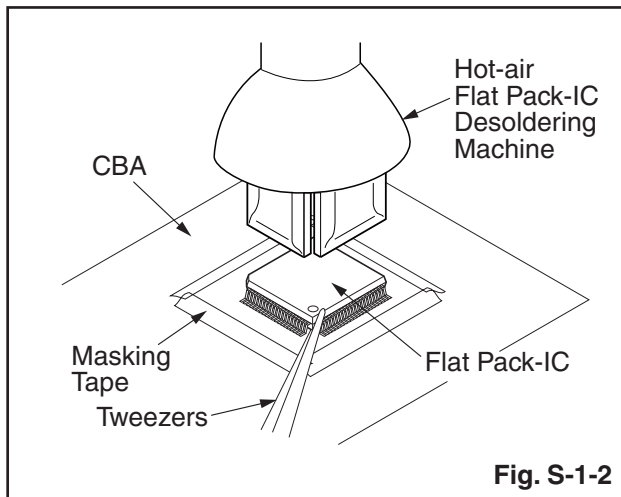


With Soldering Iron:

1. Using desoldering braid, remove the solder from all pins of the flat pack-IC. When you use solder flux which is applied to all pins of the flat pack-IC, you can remove it easily. (Fig. S-1-3)

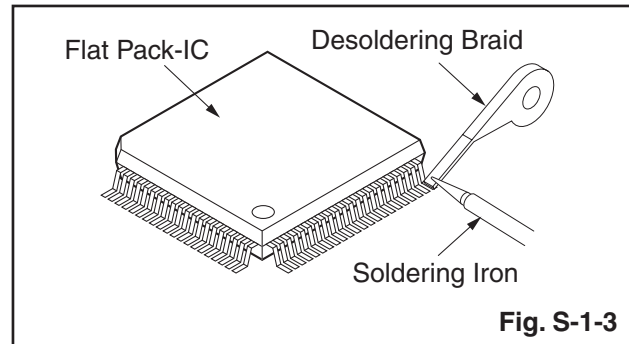

2. Lift each lead of the flat pack-IC upward one by one, using a sharp pin or wire to which solder will not adhere (iron wire). When heating the pins, use a fine tip soldering iron or a hot air desoldering machine. (Fig. S-1-4)


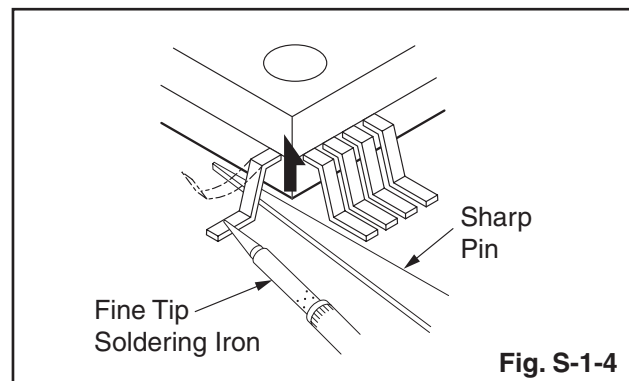


3. Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)
4. Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)

With Iron Wire:



1. Using desoldering braid, remove the solder from all pins of the flat pack-IC. When you use solder flux which is applied to all pins of the flat pack-IC, you can remove it easily. (Fig. S-1-3)
2. Affix the wire to a workbench or solid mounting point, as shown in Fig. S-1-5.
3. While heating the pins using a fine tip soldering iron or hot air blower, pull up the wire as the solder melts so as to lift the IC leads from the CBA contact pads as shown in Fig. S-1-5.
4. Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)
5. Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)

Note: When using a soldering iron, care must be taken to ensure that the flat pack-IC is not being held by glue. When the flat pack-IC is removed from the CBA, handle it gently because it may be damaged if force is applied.

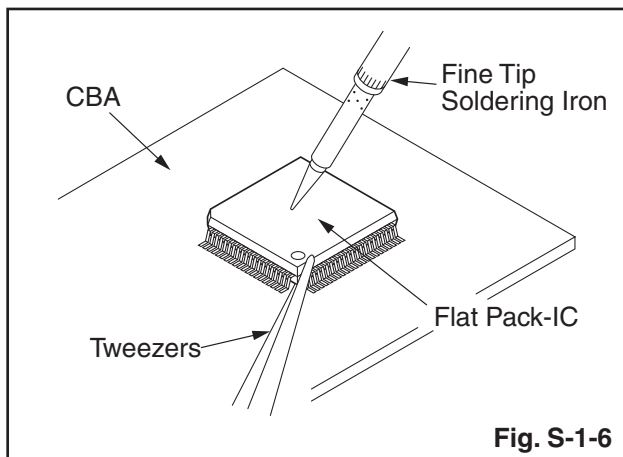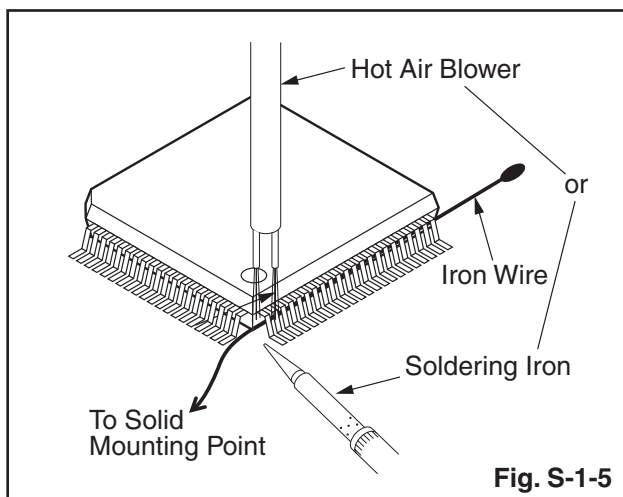

2. Installation

1. Using desoldering braid, remove the solder from the foil of each pin of the flat pack-IC on the CBA so you can install a replacement flat pack-IC more easily.
2. The "●" mark on the flat pack-IC indicates pin 1. (See Fig. S-1-7.) Be sure this mark matches the pin 1 on the PCB when positioning for installation. Then presolder the four corners of the flat pack-IC. (See Fig. S-1-8.)
3. Solder all pins of the flat pack-IC. Be sure that none of the pins have solder bridges.

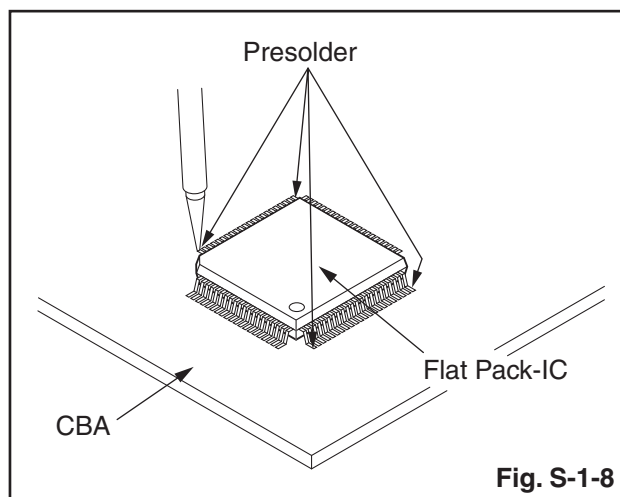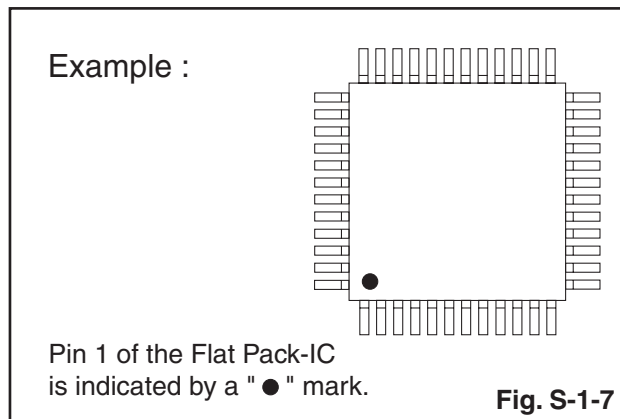

Instructions for Handling Semi-conductors



Electrostatic breakdown of the semi-conductors may occur due to a potential difference caused by electrostatic charge during unpacking or repair work.

1. Ground for Human Body

Be sure to wear a grounding band ($1\text{ M}\Omega$) that is properly grounded to remove any static electricity that may be charged on the body.

2. Ground for Workbench


Be sure to place a conductive sheet or copper plate with proper grounding ($1\text{ M}\Omega$) on the workbench or other surface, where the semi-conductors are to be placed. Because the static electricity charge on clothing will not escape through the body grounding band, be careful to avoid contacting semi-conductors with your clothing.

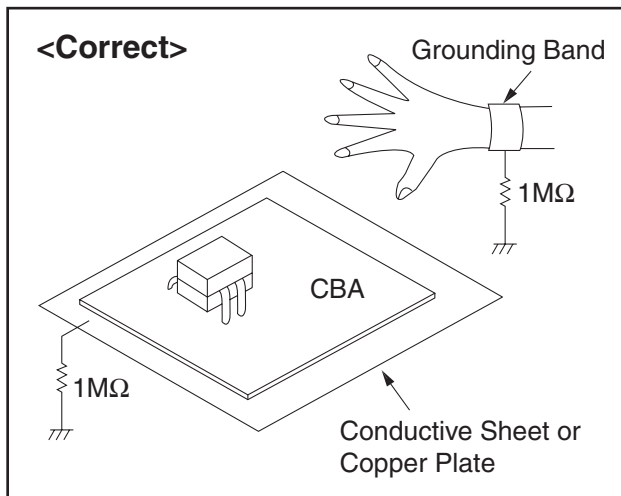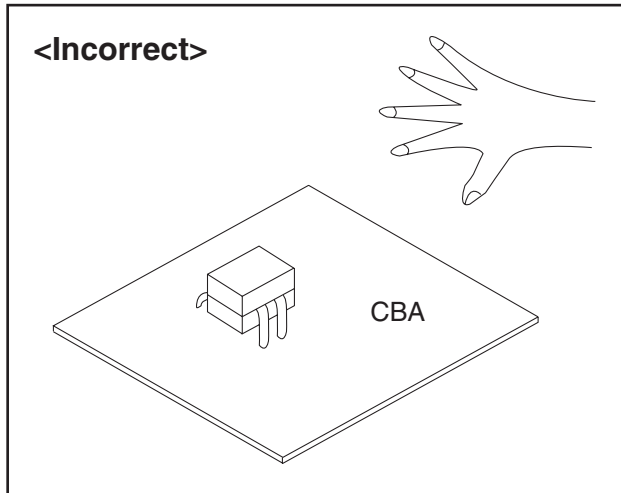

CABINET DISASSEMBLY INSTRUCTIONS

1. Disassembly Flowchart

This flowchart indicates the disassembly steps for the cabinet parts, and the CBA in order to gain access to items to be serviced. When reassembling, follow the steps in reverse order. Bend, route and dress the cables as they were.

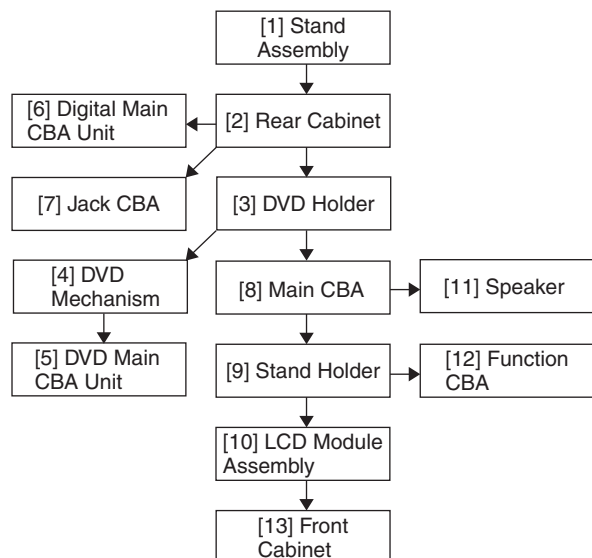

Step/ Loc. No.	Part	Fig. No.	Removal	Note
[8]	Main CBA	D4 D6	7(S-14), CN102, CN201, CN872, CN1001, CN1002	---
[9]	Stand Holder	D4	2(S-15), (S-16)	---
[10]	LCD Module Assembly	D5	-----	---
[11]	Speaker	D5	4(S-17), Speaker Holder	---
[12]	Function CBA	D5 D6	2(S-18), LED Lens ^{*2} , Function Knob ^{*2} , Shield Plate ^{*2}	---
[13]	Front Cabinet	D5	-----	---
	↓	↓	↓	↓
	(1)	(2)	(3)	(4)
				(5)

***1: Refer to the following "Reference Notes in the Table."**


***2: LD190EM2, 19MD311B/F7**

Note:

- (1) Order of steps in procedure. When reassembling, follow the steps in reverse order. These numbers are also used as the Identification (location) No. of parts in figures.
- (2) Parts to be removed or installed.
- (3) Fig. No. showing procedure of part location
- (4) Identification of parts to be removed, unhooked, unlocked, released, unplugged, unclamped, or desoldered.
P = Spring, L = Locking Tab, S = Screw,
H = Hex Screw, CN = Connector
e.g. 2(S-2) = two Screws of (S-2),
2(L-2) = two Locking Tabs of (L-2)
- (5) Refer to the following "Reference Notes in the Table."

2. Disassembly Method

Step/ Loc. No.	Part	Fig. No.	Removal	Note
[1]	Stand Assembly	D1	3(S-1)	---
[2]	Rear Cabinet	D1	10(S-2), 2(S-3), (S-4)	---
[3]	DVD Holder	D2 D6	4(S-5), 3(S-6), CN901, CN902	---
[4]	DVD Mechanism	D2 D6	(S-7a), 2(S-7b) ^{*1} , CN201, CN301, CN801	1 2 3 4 5 6
[5]	DVD Main CBA Unit	D2 D6	-----	---
[6]	Digital Main CBA Unit	D3 D6	4(S-8), (S-9), (S-10), 4(S-11), 2(H-1), CN301, CN302, CN303, CN3005, Shield Box, Jack Holder(D)	---
[7]	Jack CBA	D3 D6	4(S-12), (S-13), CN702, CN871, Jack Holder(A)	---

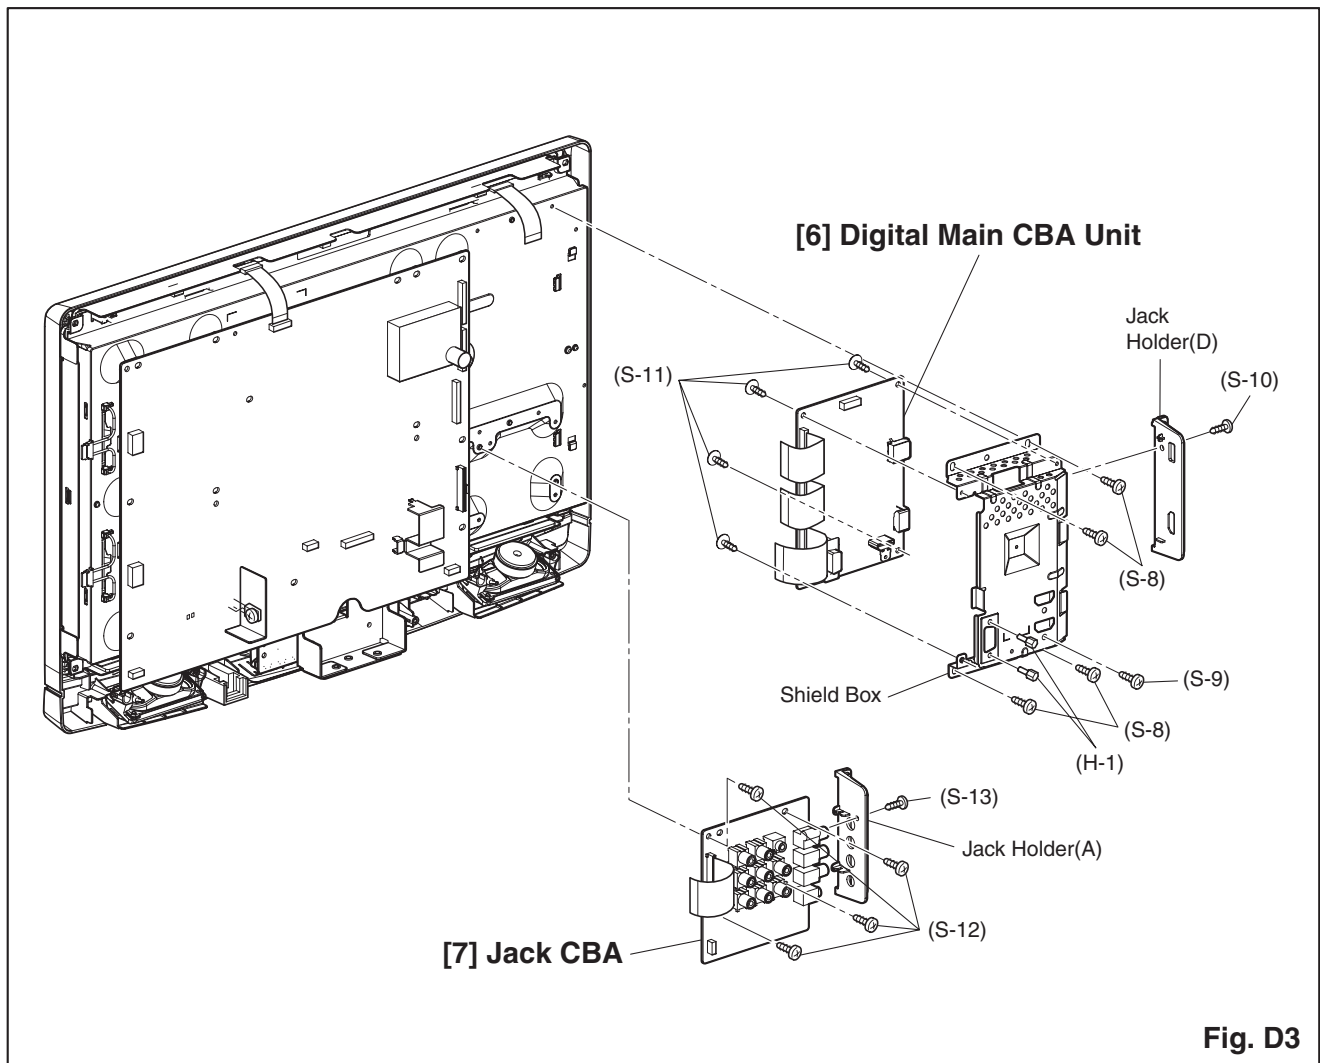

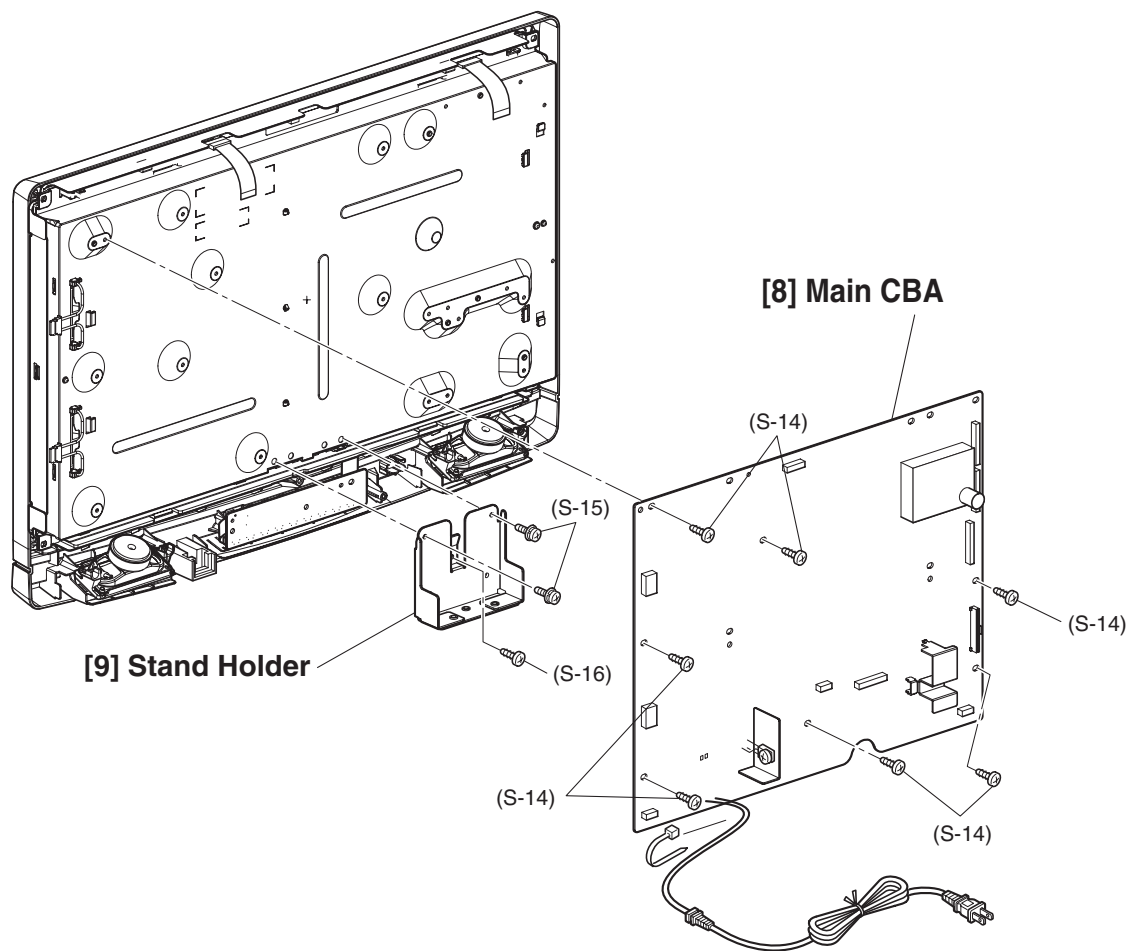


Fig. D4

TV Cable Wiring Diagram

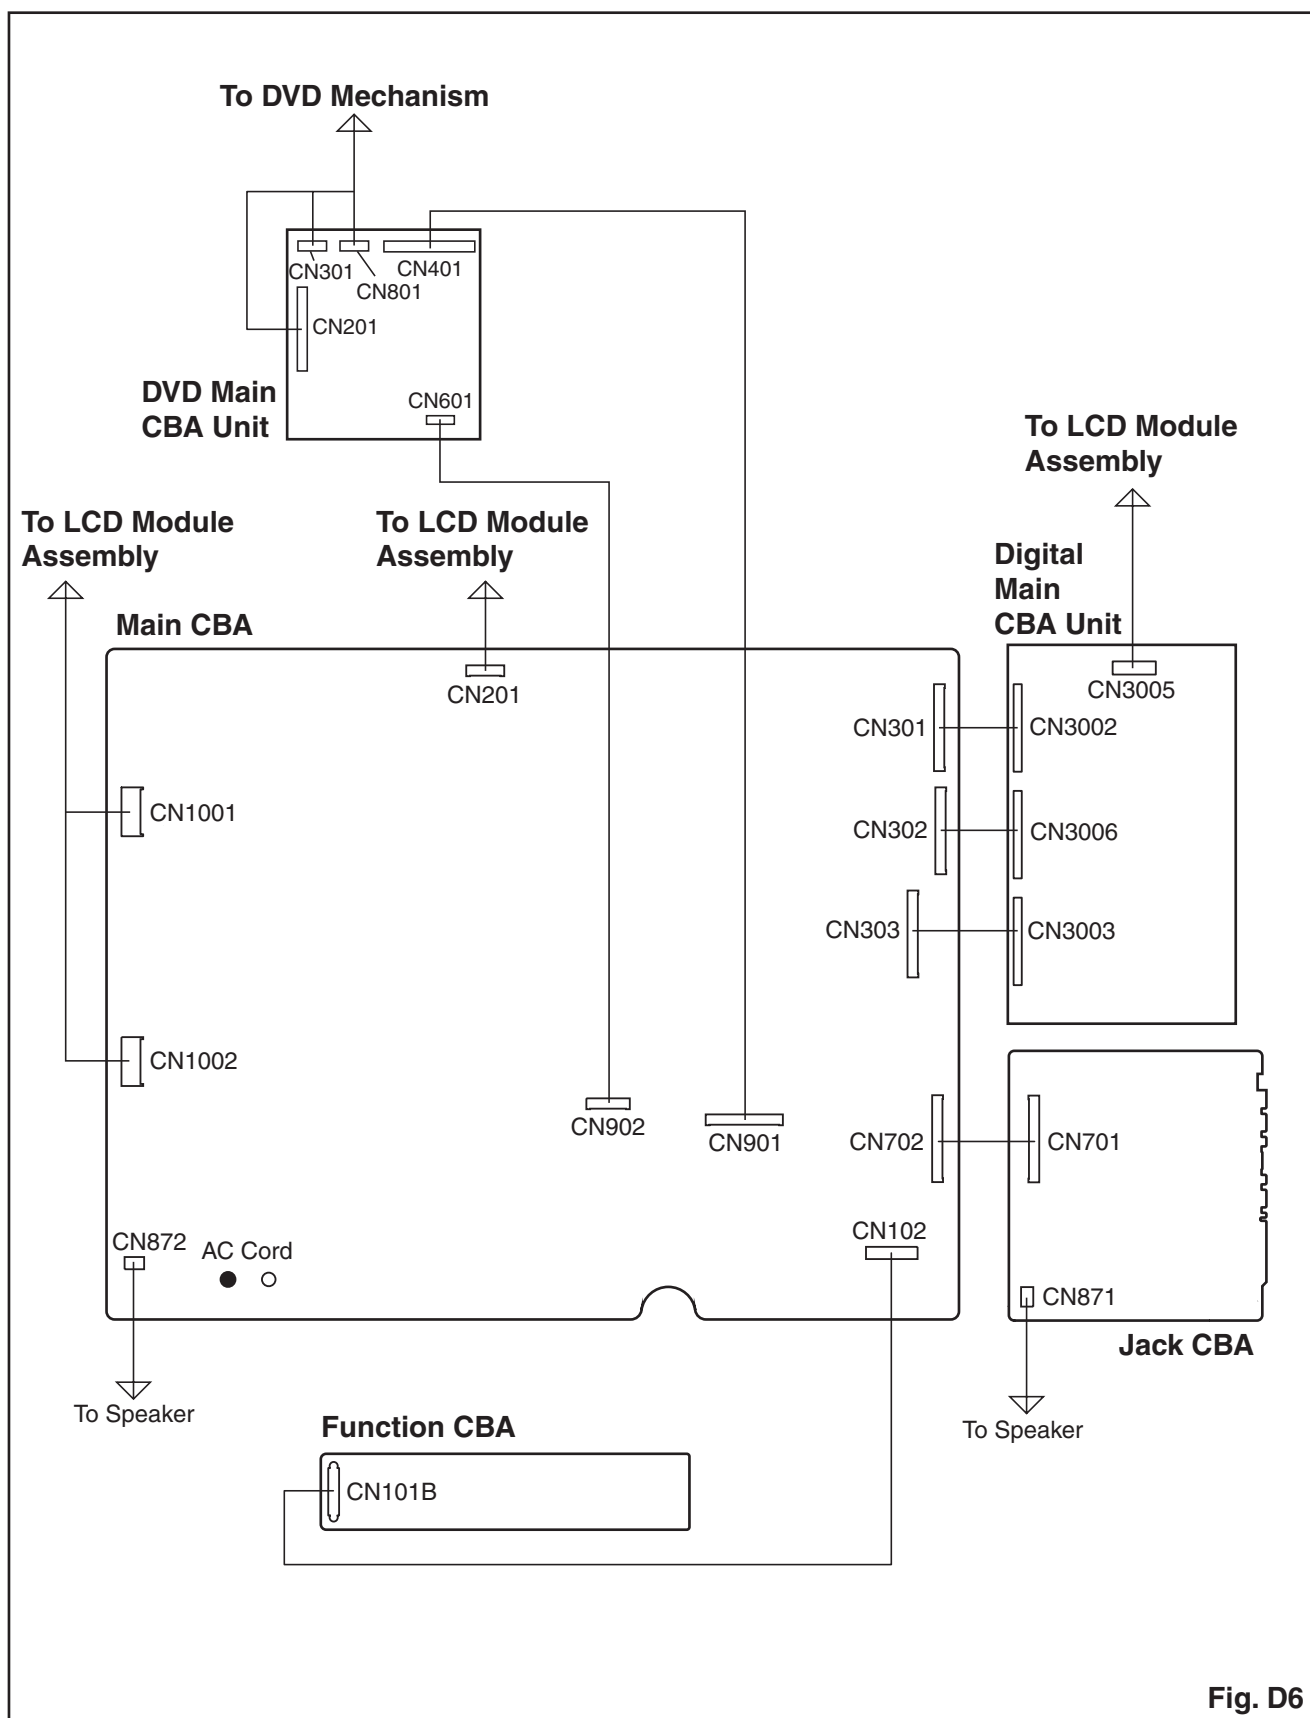


Fig. D6

ELECTRICAL ADJUSTMENT INSTRUCTIONS

General Note: “CBA” is abbreviation for “Circuit Board Assembly.”

Note: Electrical adjustments are required after replacing circuit components and certain mechanical parts. It is important to perform these adjustments only after all repairs and replacements have been completed. Also, do not attempt these adjustments unless the proper equipment is available.

Test Equipment Required

1. NTSC Pattern Generator (Color Bar W/White Window, Red Color, Dot Pattern, Gray Scale, Monoscope, Multi-Burst)
2. Remote control unit
3. Color Analyzer

How to set up the service mode:

Service mode:

1. Turn the power on.
2. Press [MENU] button to display Setup menu.
3. Select “Features”.
4. Select “Current Software Info”.
5. Press [0], [4], [2], [5], [7], [4] and [INFO] buttons on the remote control unit in this order. The following screen appears.

“*” differs depending on the models.

Code : *****_***_*_*****_****
Pic code : **_*****_*****_**
MIPS : Push 0key


Press “POWER” key to exit.

Tuner : ****_*****_****
Safety : safety_Non

1. Purity Check Mode

This mode cycles through full-screen displays of red, green, blue, and white to check for non-active pixels.

1. Enter the Service mode.
2. Each time the [7] button on the remote control unit is pressed, the display changes as follows.

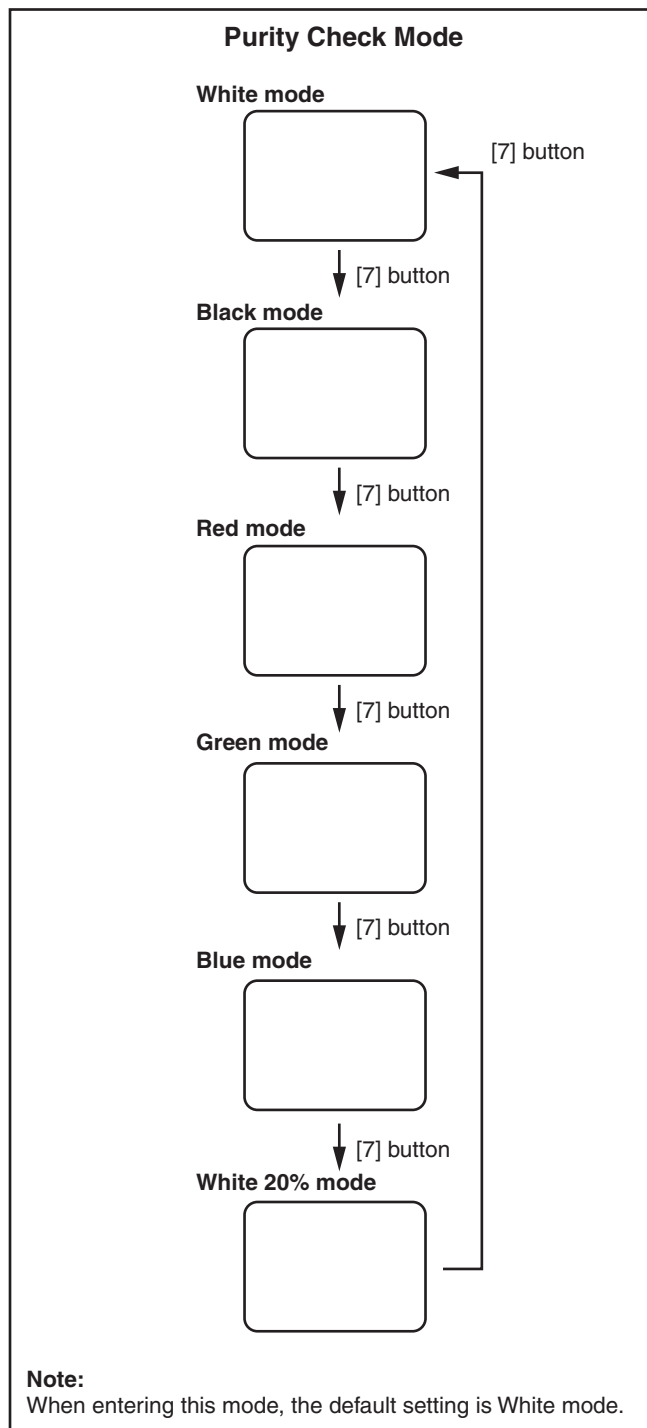


3. To cancel or to exit from the Purity Check Mode, press [CH RETURN] or [PREV CH] button.

2. VCOM Adjustment

Test Point	Adj. Point
Screen	[CHANNEL UP/DOWN] buttons
M. EQ.	Spec.
Color analyzer	See below

Figure

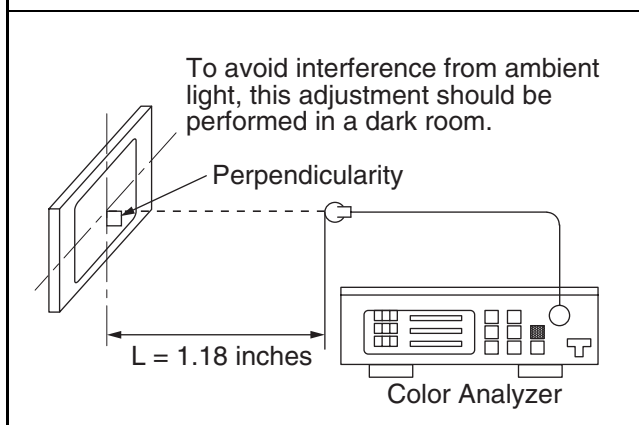

1. Operate the unit for more than 60 minutes.
2. Set the color analyzer at the zero point calibration and bring the optical receptor pointing at the center of the LCD-Panel at a distance of 1.18 inches(3cm) away from the LCD-Panel surface.
Note: The optical receptor must be set perpendicularly to the LCD Panel surface.
3. Enter the Service mode.
4. Press [3] button on the remote control unit.
5. Press [CHANNEL UP/DOWN] buttons on the remote control unit so that the color analyzer value becomes minimum.
6. To cancel or to exit from the VCOM Adjustment, press [CH RETURN] or [PREV CH] button.


HOW TO INITIALIZE THE LCD TV/DVD

The purpose of initialization is to place the set in a new out of box condition. The customer will be prompted to select a language and program channels after the set has been initialized.

To put the program back at the factory-default, initialize the LCD TV/DVD using the following procedure.

< DVD Section >

1. Turn the power on.
2. To enter the service mode, press the service button on the service remote control unit.
 - To cancel the service mode, press [POWER] button on the service remote control unit.
3. To put the LCD TV/DVD into the DVD mode, press [CH RETURN] or [PREV CH] on the remote control unit.
4. To put the LCD TV/DVD into the Flash clear mode, press [INPUT SELECT] or [SOURCE] buttons on the remote control unit within five seconds.
The following screen appears.

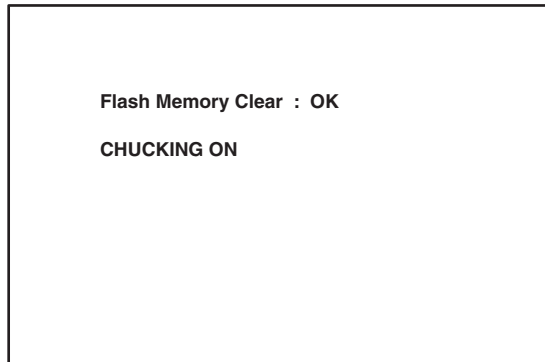

When "OK" appears on the screen, the factory default will be set.


5. To exit this mode, press [CHANNEL UP/DOWN] button to go to TV mode, or press [POWER] button to turn the power off.

Note: The name of buttons may vary with the brand of unit.


< LCD TV Section >

1. Turn the power on.
2. Enter the service mode.
 - To cancel the service mode, press [POWER] button on the remote control unit.
3. Press [INFO] button on the remote control unit to initialize the LCD television.
4. "INITIALIZED" will appear in the upper right of the screen. "INITIALIZED" color will change to green from red when initializing is completed.


FLOW CHART NO.6

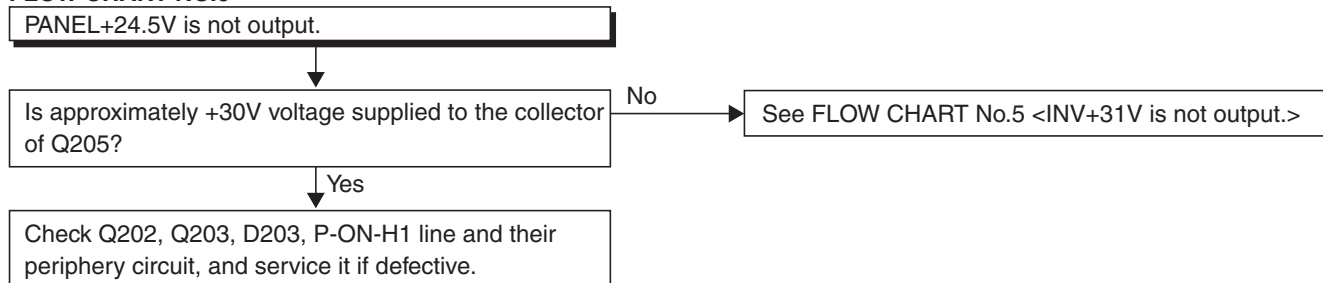


FLOW CHART NO.7

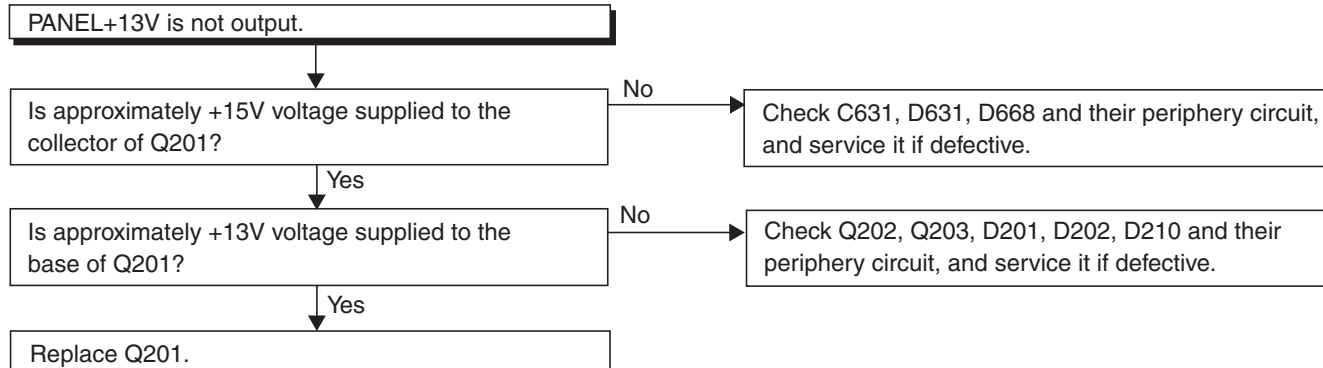

FLOW CHART NO.8

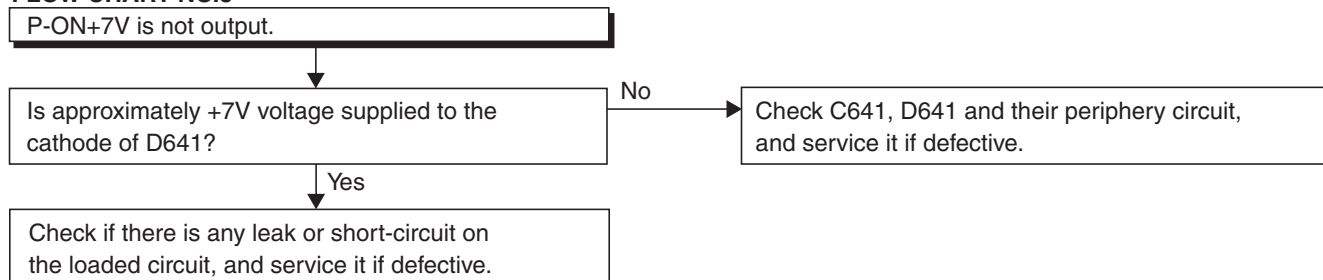


FLOW CHART NO.9

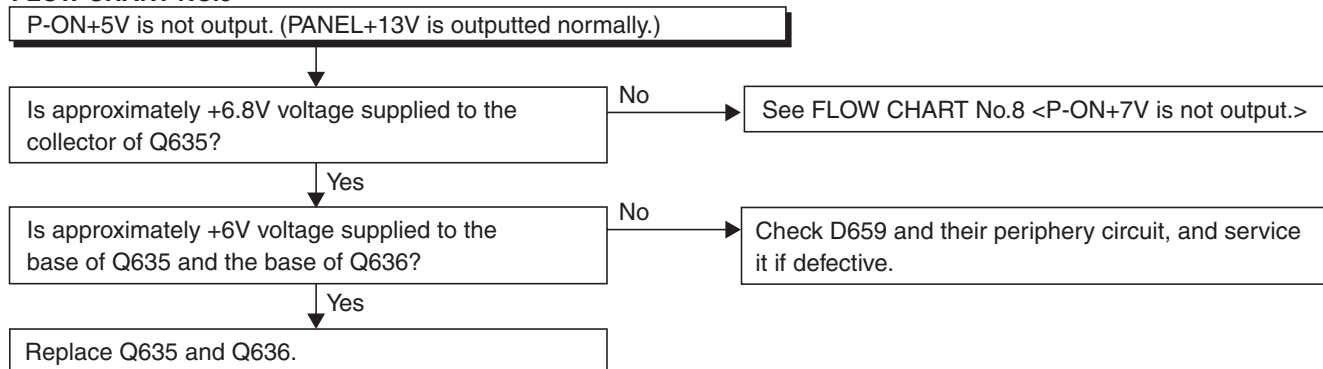


FLOW CHART NO.10

TUNER+5V is not output. (PANEL+13V is outputted normally.)

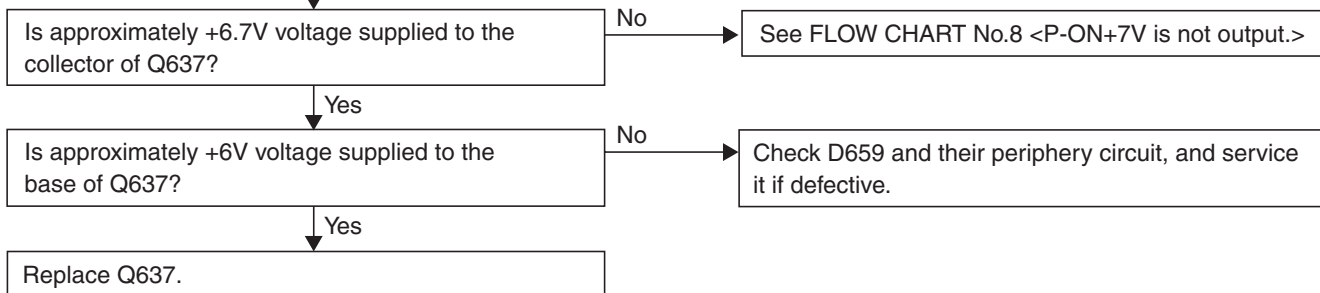


FLOW CHART NO.11

P-ON+3V is not output.

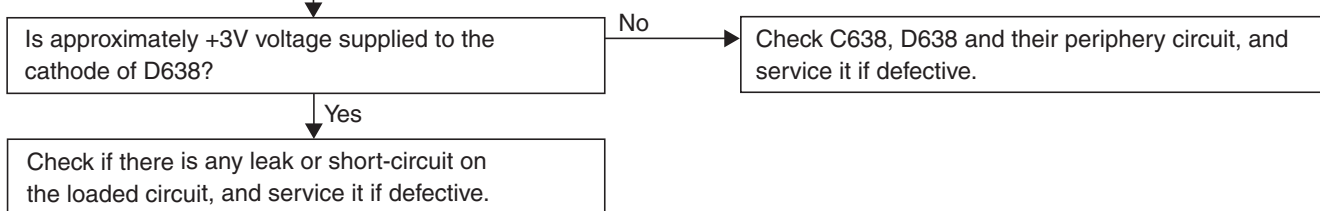


FLOW CHART NO.12

P-ON+3.3V(PANEL+3.3V) is not output.

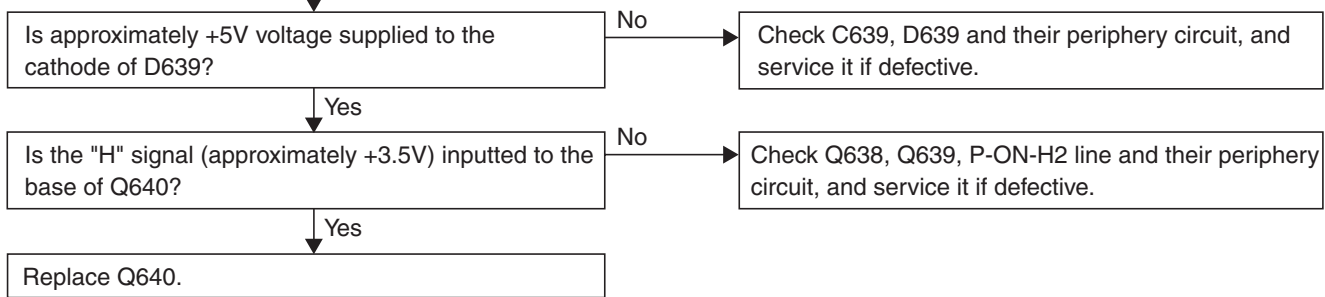


FLOW CHART NO.13


EV+3.3V is not output.

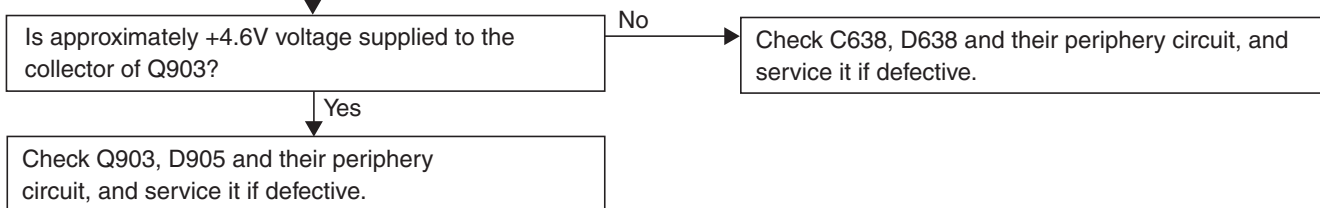


FLOW CHART NO.14

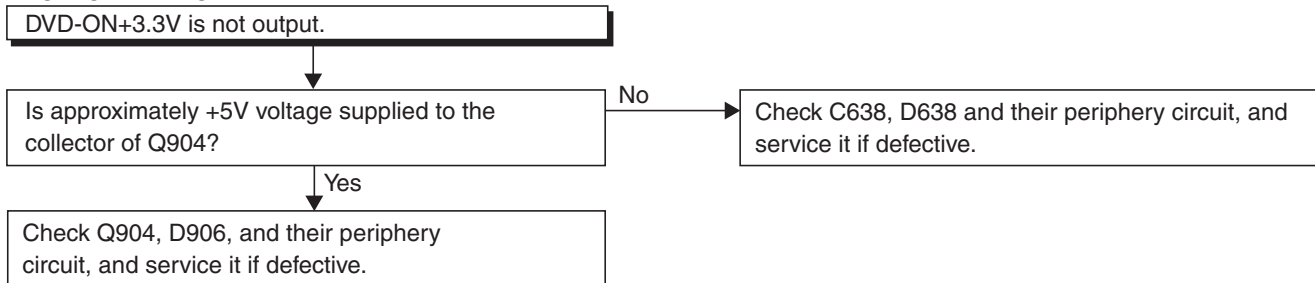


FLOW CHART NO.15

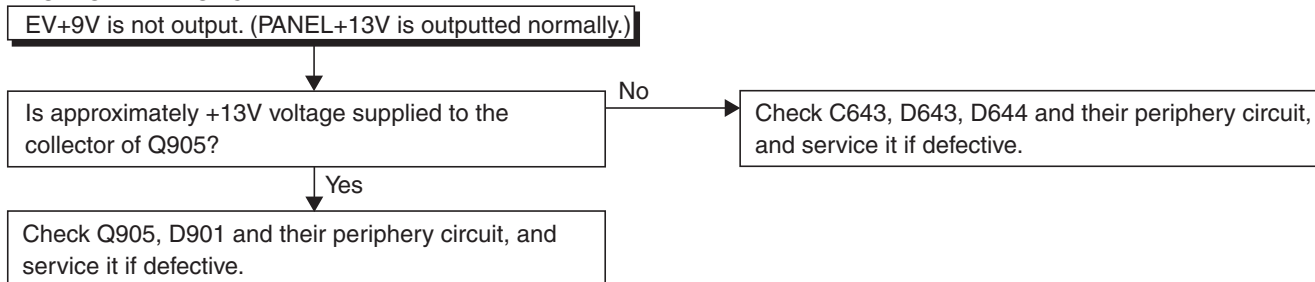


FLOW CHART NO.16

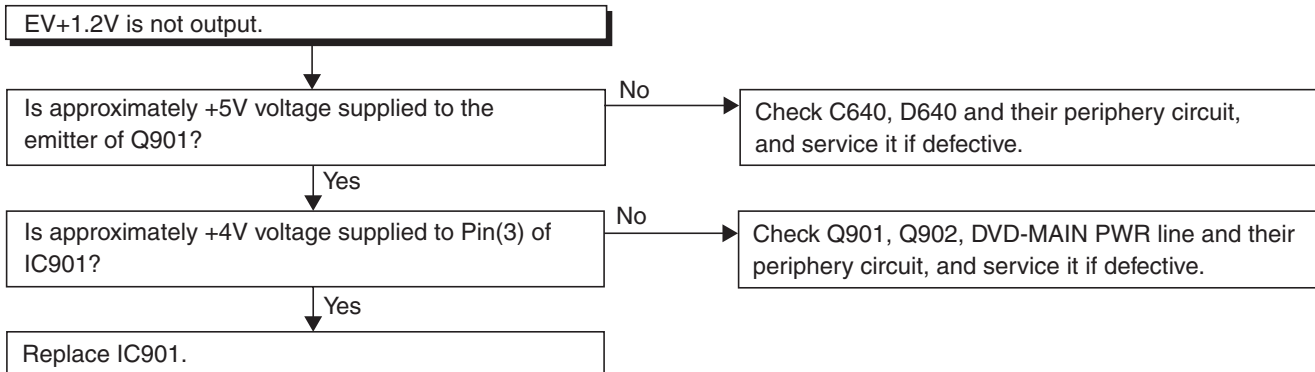


FLOW CHART NO.17

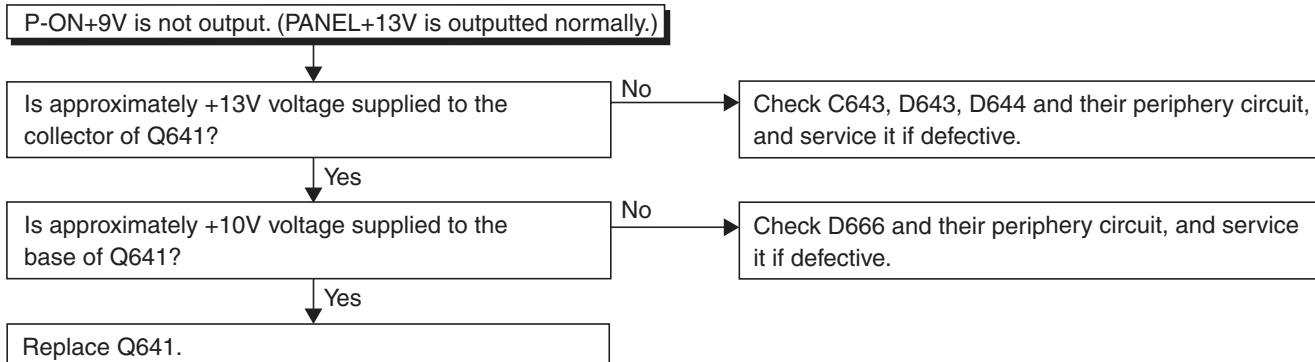

FLOW CHART NO.18

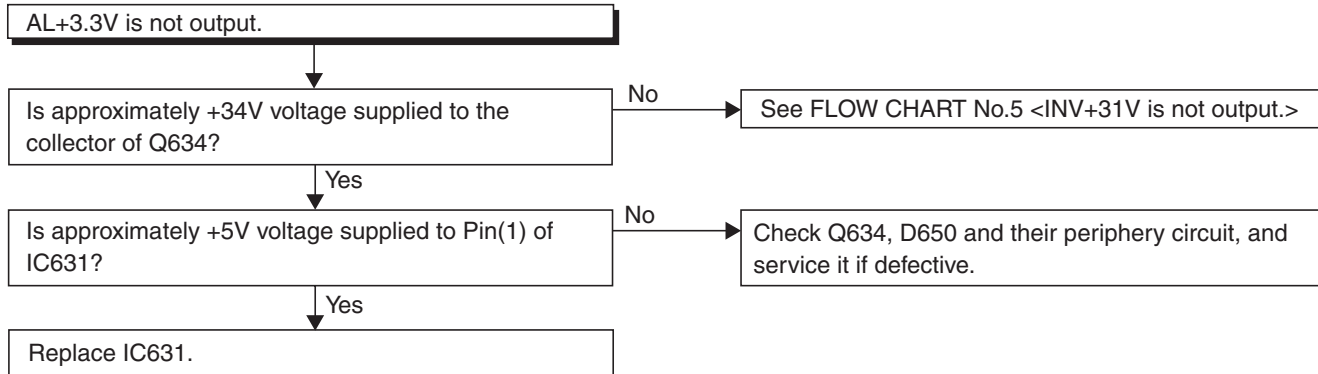


FLOW CHART NO.19

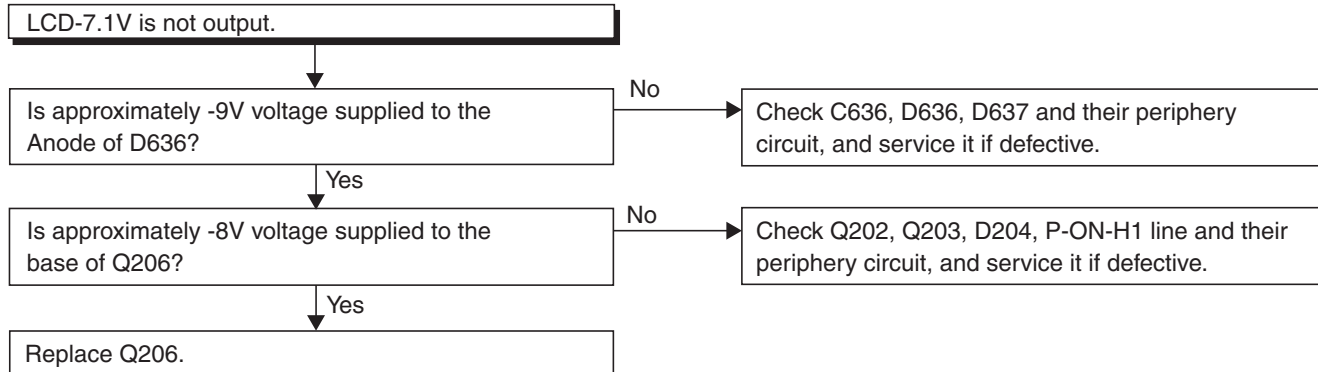


[Video Signal Section]


FLOW CHART NO.1

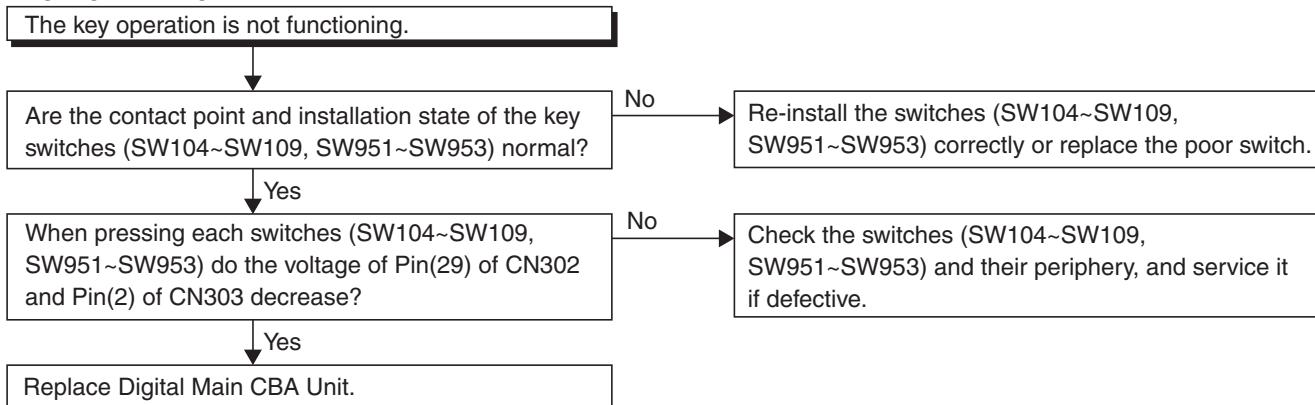


FLOW CHART NO.2

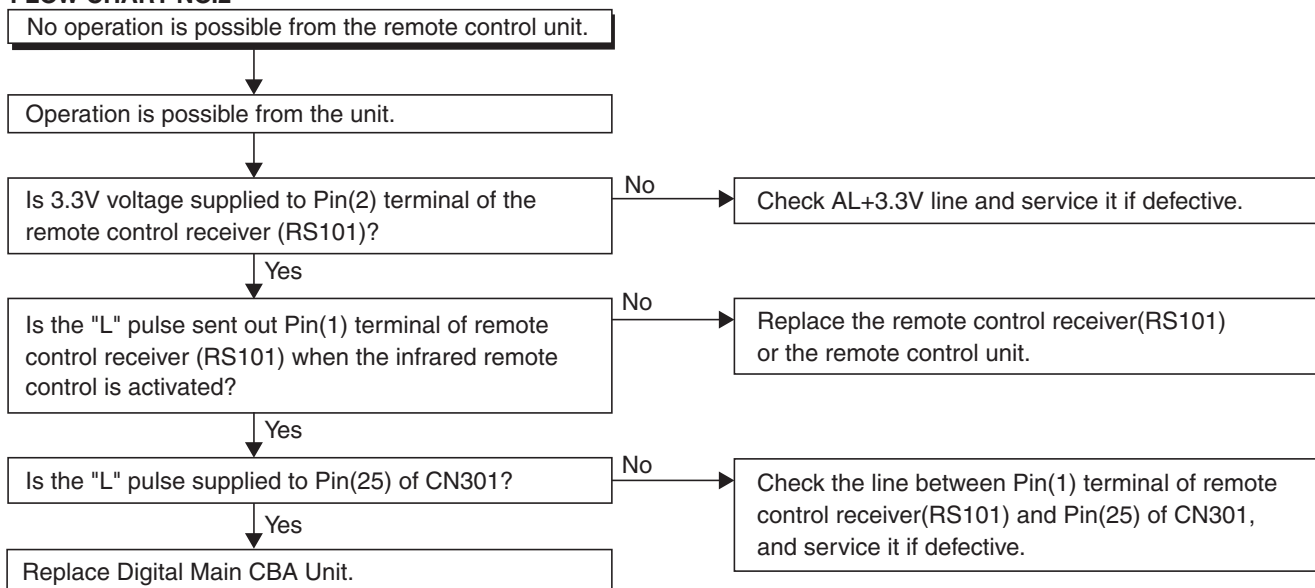


FLOW CHART NO.3

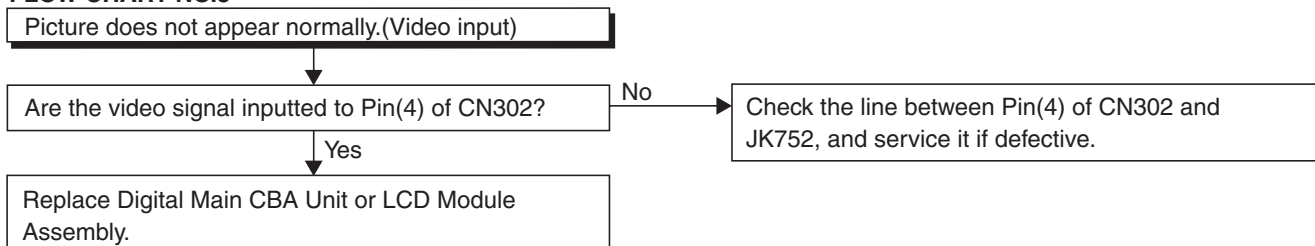


FLOW CHART NO.4

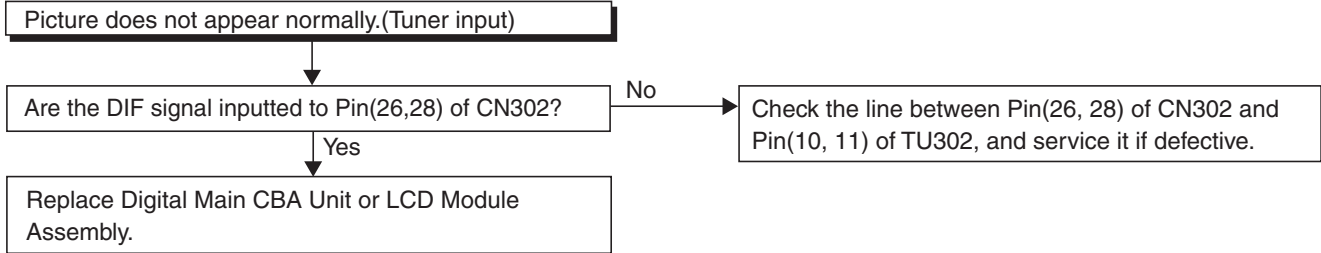


FLOW CHART NO.5

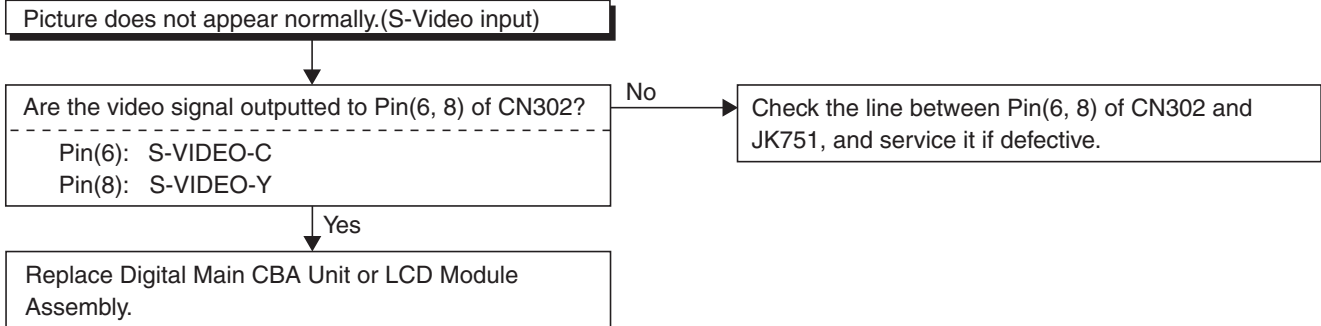


FLOW CHART NO.6

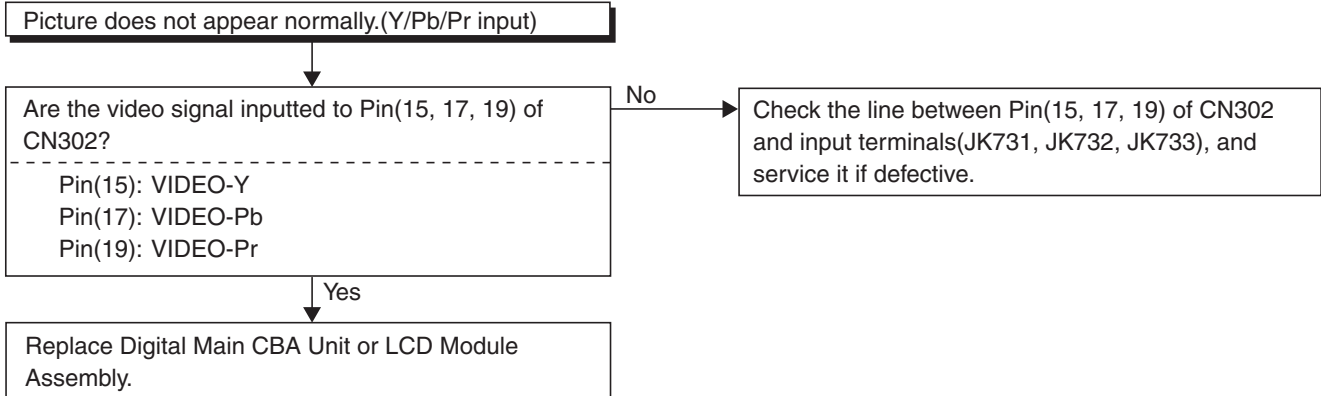


FLOW CHART NO.7

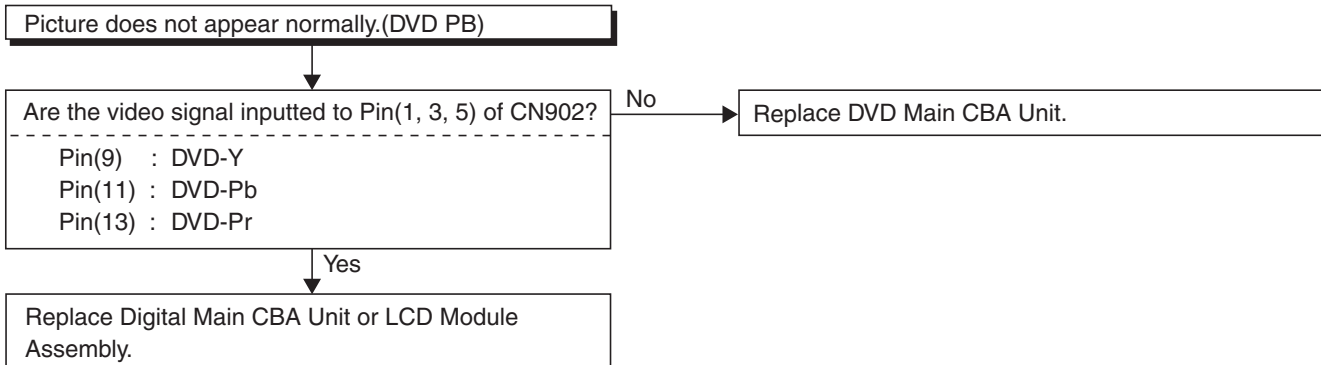

FLOW CHART NO.5

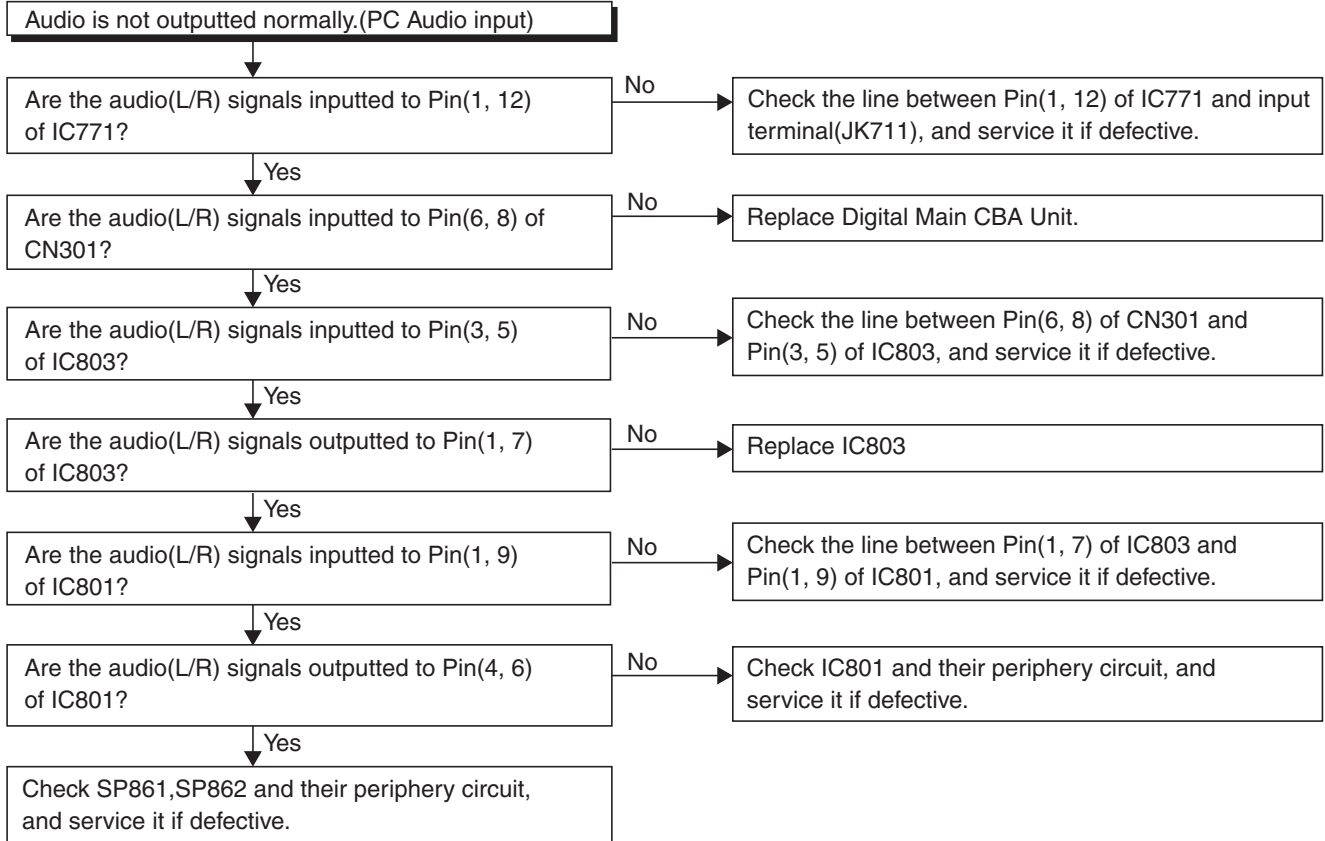

2. Video Block Diagram

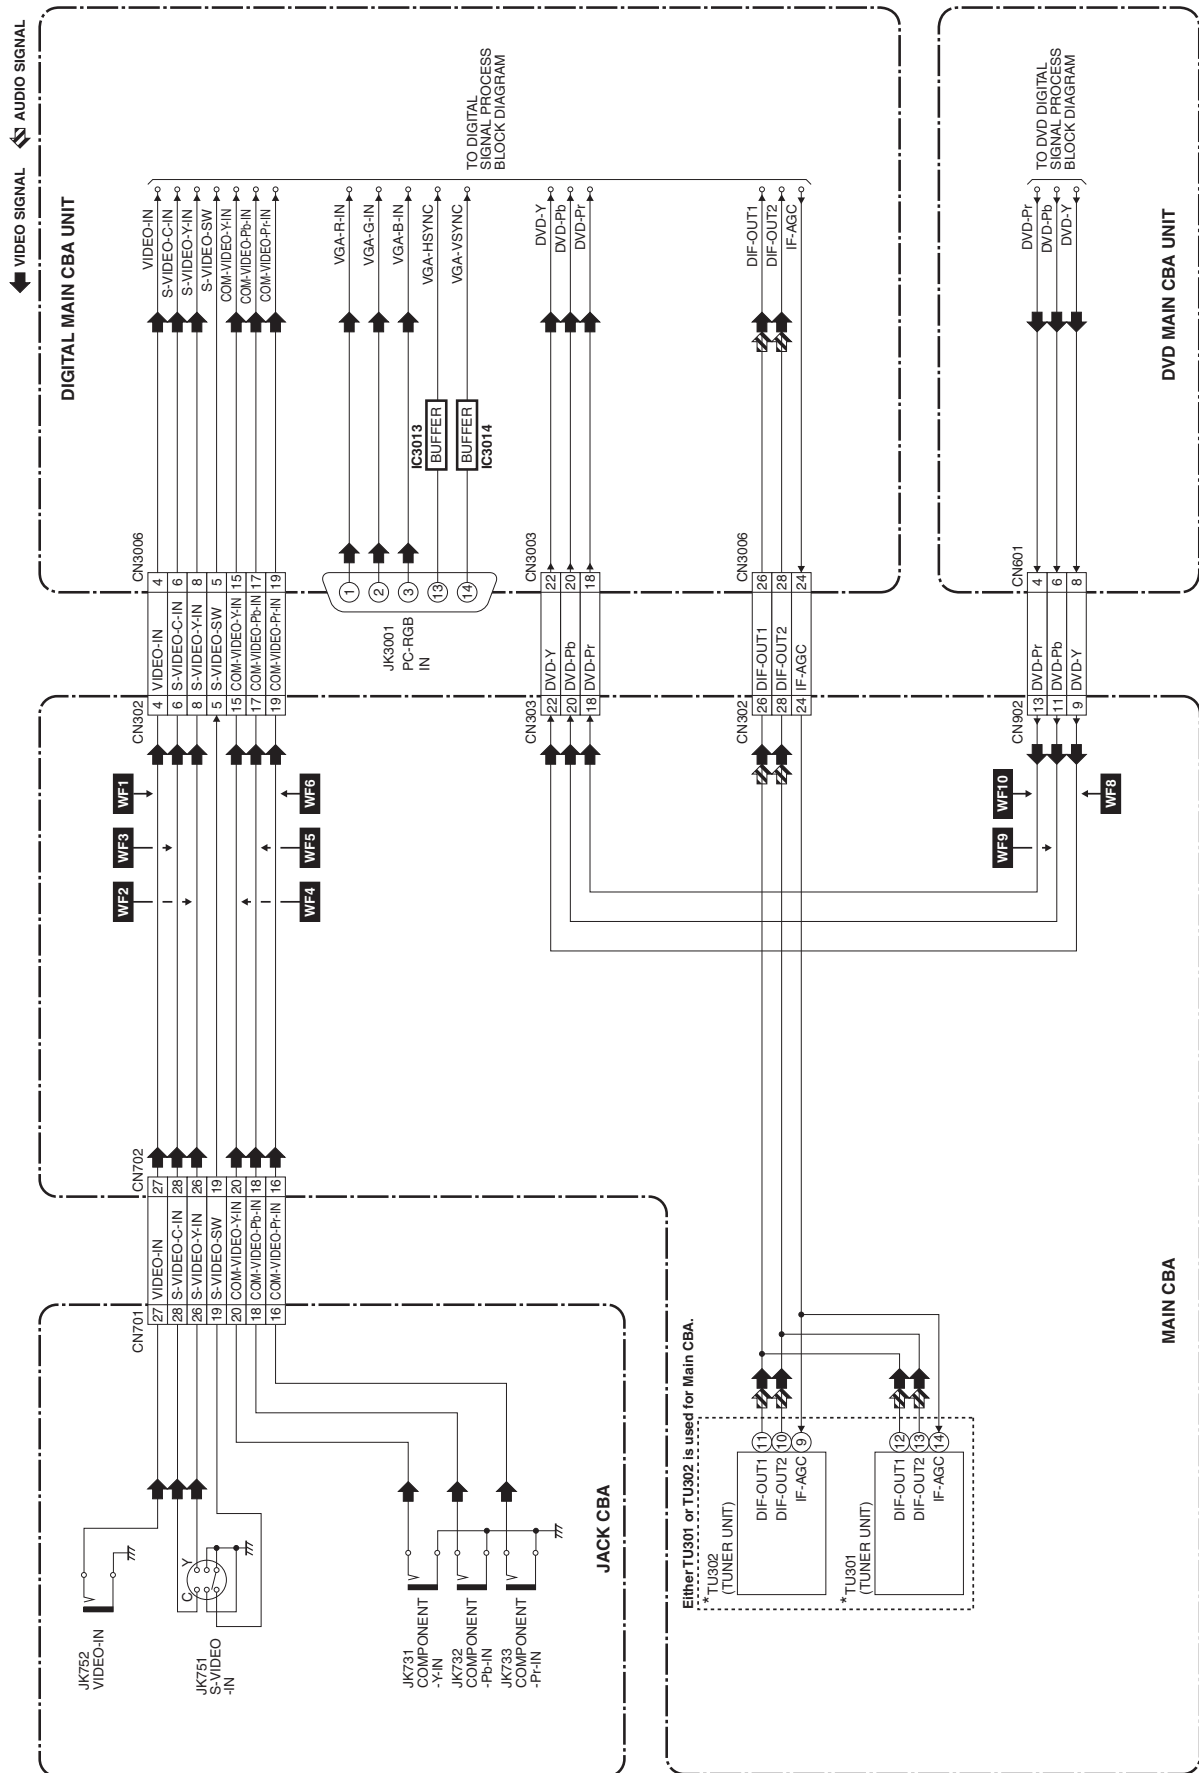

5. Inverter Block Diagram

