


Scattergrain Grain Spreader Installation & Operating Instructions

MODEL # FFD-120-WH

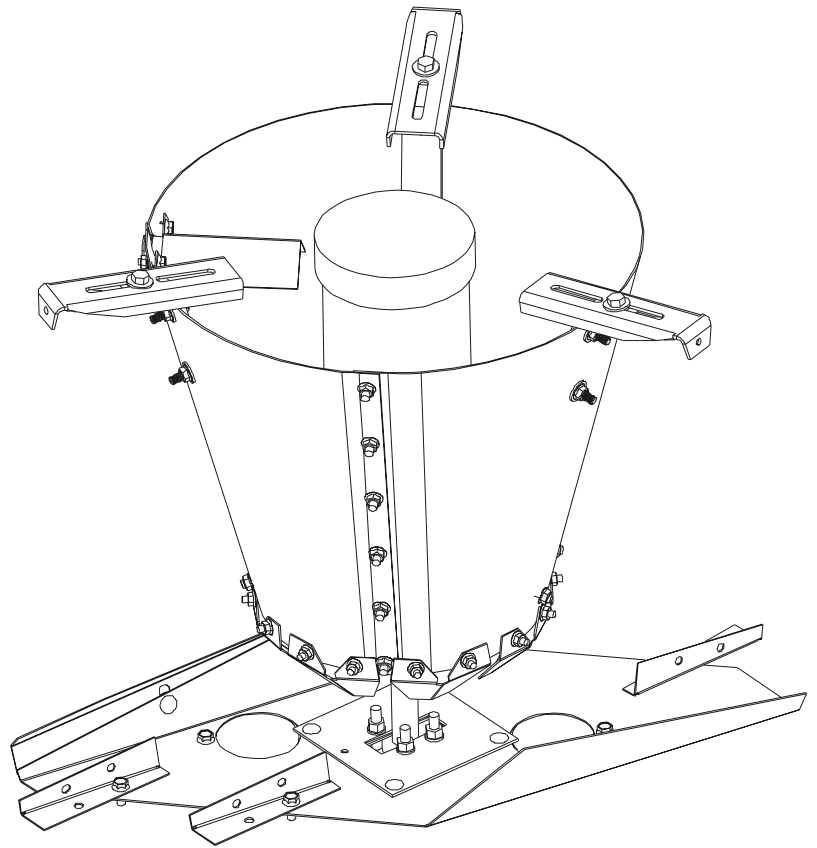

Owner's
Manual

MANUAL # PNEG-258



PNEG-258

POWER SPREADER OPERATING INSTRUCTIONS

TABLE OF CONTENTS

Warranty	4
Roof Warning, Operation & Safety	5
Safety Alert Decals	6
Grain Spreader Assembly Instructions	7
Grain Spreader Installation	10
Operating Instructions	11
Adjustment For Bin Fill	12
Maintenance	13
Correct Spreading Pattern	14
Power Spread Parts Assembly	15
Notes	16

WARRANTY

THE GSI GROUP, INC. ("GSI") WARRANTS ALL PRODUCTS MANUFACTURED BY GSI TO BE FREE OF DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL USAGE AND CONDITIONS FOR A PERIOD OF 12 MONTHS AFTER RETAIL SALE TO THE ORIGINAL END USER OF SUCH PRODUCTS. GSI'S ONLY OBLIGATION IS, AND PURCHASER'S SOLE REMEDY SHALL BE FOR GSI, TO REPAIR OR REPLACE, AT GSI'S OPTION AND EXPENSE, PRODUCTS THAT, IN GSI'S SOLE JUDGMENT, CONTAIN A MATERIAL DEFECT DUE TO MATERIALS OR WORKMANSHIP. ALL DELIVERY AND SHIPMENT CHARGES TO AND FROM GSI'S FACTORY WILL BE PURCHASER'S RESPONSIBILITY. EXPENSES INCURRED BY OR ON BEHALF OF THE PURCHASER WITHOUT PRIOR WRITTEN AUTHORIZATION FROM AN AUTHORIZED EMPLOYEE OF GSI SHALL BE THE SOLE RESPONSIBILITY OF THE PURCHASER.

EXCEPT FOR THE ABOVE STATED EXPRESS LIMITED WARRANTIES, GSI MAKES NO WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE IN CONNECTION WITH (i) PRODUCT MANUFACTURED OR SOLD BY GSI OR (ii) ANY ADVICE, INSTRUCTION, RECOMMENDATION OR SUGGESTION PROVIDED BY AN AGENT, REPRESENTATIVE OR EMPLOYEE OF GSI REGARDING OR RELATED TO THE CONFIGURATION, INSTALLATION, LAYOUT, SUITABILITY FOR A PARTICULAR PURPOSE, OR DESIGN OF SUCH PRODUCT OR PRODUCTS.

IN NO EVENT SHALL GSI BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOSS OF ANTICIPATED PROFITS OR BENEFITS. PURCHASER'S SOLE AND EXCLUSIVE REMEDY SHALL BE LIMITED TO THAT STATED ABOVE, WHICH SHALL NOT EXCEED THE AMOUNT PAID FOR THE PRODUCT PURCHASED. THIS WARRANTY IS NOT TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER. GSI SHALL HAVE NO OBLIGATION OR RESPONSIBILITY FOR ANY REPRESENTATIVE OR WARRANTIES MADE BY OR ON BEHALF OF ANY DEALER, AGENT OR DISTRIBUTOR OF GSI.


GSI ASSUMES NO RESPONSIBILITY FOR FIELD MODIFICATIONS OR ERECTION DEFECTS WHICH CREATE STRUCTURAL OR STORAGE QUALITY PROBLEMS. MODIFICATIONS TO THE PRODUCT NOT SPECIFICALLY COVERED BY THE CONTENTS OF THIS MANUAL WILL NULLIFY ANY PRODUCT WARRANTY THAT MIGHT HAVE BEEN OTHERWISE AVAILABLE.

THE FOREGOING WARRANTY SHALL NOT COVER PRODUCTS OR PARTS WHICH HAVE BEEN DAMAGED BY NEGLIGENT USE, MISUSE, ALTERATION OR ACCIDENT. THIS WARRANTY COVERS ONLY PRODUCTS MANUFACTURED BY GSI. THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED. GSI RESERVES THE RIGHT TO MAKE DESIGN OR SPECIFICATION CHANGES AT ANY TIME.

PRIOR TO INSTALLATION, PURCHASER HAS THE RESPONSIBILITY TO RESEARCH AND COMPLY WITH ALL FEDERAL, STATE AND LOCAL CODES WHICH MAY APPLY TO THE LOCATION AND INSTALLATION.

ROOF WARNING, OPERATION & SAFETY

ROOF DAMAGE WARNING AND DISCLAIMER

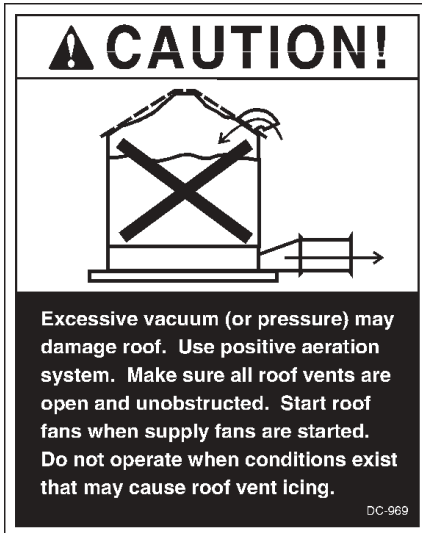

GSI DOES NOT WARRANT ANY ROOF DAMAGE CAUSED BY EXCESSIVE VACUUM OR INTERNAL PRESSURE FROM FANS OR OTHER AIR MOVING SYSTEMS. ADEQUATE VENTILATION AND/OR "MAKEUP AIR" DEVICES SHOULD BE PROVIDED FOR ALL POWERED AIR HANDLING SYSTEMS. GSI DOES NOT RECOMMEND THE USE OF DOWNWARD FLOW SYSTEMS (SUCTION). SEVERE ROOF DAMAGE CAN RESULT FROM ANY BLOCKAGE OF AIR PASSAGES. RUNNING FANS DURING HIGH HUMIDITY/COLD WEATHER CONDITIONS CAN CAUSE AIR EXHAUST OR INTAKE PORTS TO FREEZE.

POWER GRAIN SPREADER OPERATION

Thank you for choosing our product. It is designed to give excellent performance and service for many years.

This manual describes the installation and operation of the Scattergrain Grain Spreader. It is designed to spread grain and fines evenly throughout the bin.

The principal concern of the GSI Group, Inc. ("GSI") is your safety and the safety of others associated with grain handling equipment. This manual is written to help you understand safe operating procedures, and some of the problems that may be encountered by the operator or other personnel.

As owner and/or operator, it is your responsibility to know what requirements, hazards and precautions exist, and to inform all personnel associated with the equipment, or who are in the area. Avoid any alterations to the equipment. Such alterations may produce a very dangerous situation, where serious injury or death may occur.

SAFETY ALERT SYMBOL

The symbol shown is used to call your attention to instructions concerning your personal safety. Watch for this symbol; it points out important safety precautions. It means "ATTENTION", "WARNING", "CAUTION", and "DANGER". Read the message and be cautious to the possibility of personal injury or death.




WARNING! BE ALERT!

Personnel operating or working around electric fans should read this manual. This manual must be delivered with the equipment to its owner. Failure to read this manual and its safety instructions is a misuse of the equipment.

SAFETY ALERT DECALS

Grain Systems, Inc. recommends contacting your local power company, and having a representative survey your installation so the wiring is compatible with their system, and adequate power is supplied to your unit.

Safety decals should be read and understood by all people in the grain handling area. The bottom right decal (DC-552) should be present on the inside bin door cover of the two ring door, 24" porthole door cover and the roof manway cover. DC-466 and DC-465, or similar decals, should be present on the bin. Please contact the dealer or factory for free replacements. All decals must be replaced if they are destroyed, missing, painted over or can no longer be read.

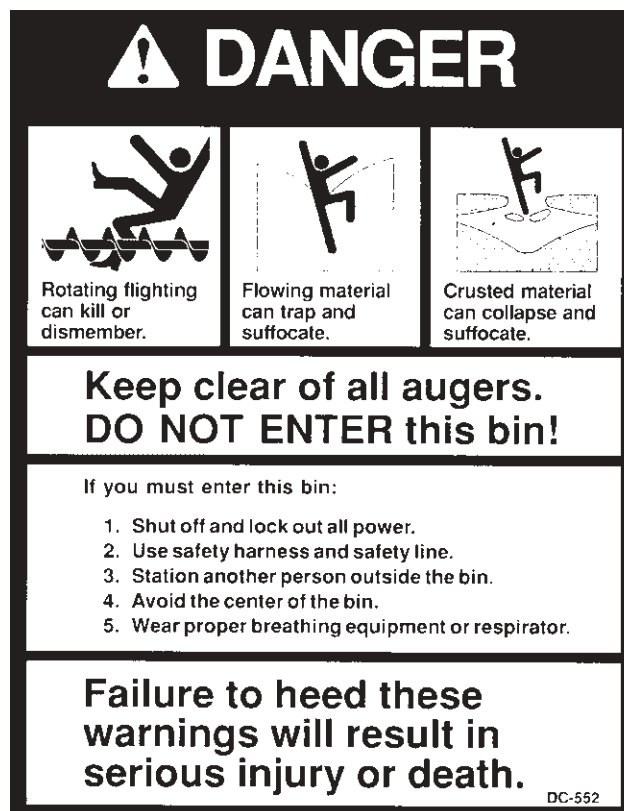

SAFETY ALERT DECALS

If a decal is damaged or is missing contact:


Grain Systems, Inc.
1004 E. Illinois St.
Assumption, IL 62510
217-226-4421

A free replacement will be sent to you.

NOTE: Decals not to scale.



DC-1639
Located on the Cone Segment.

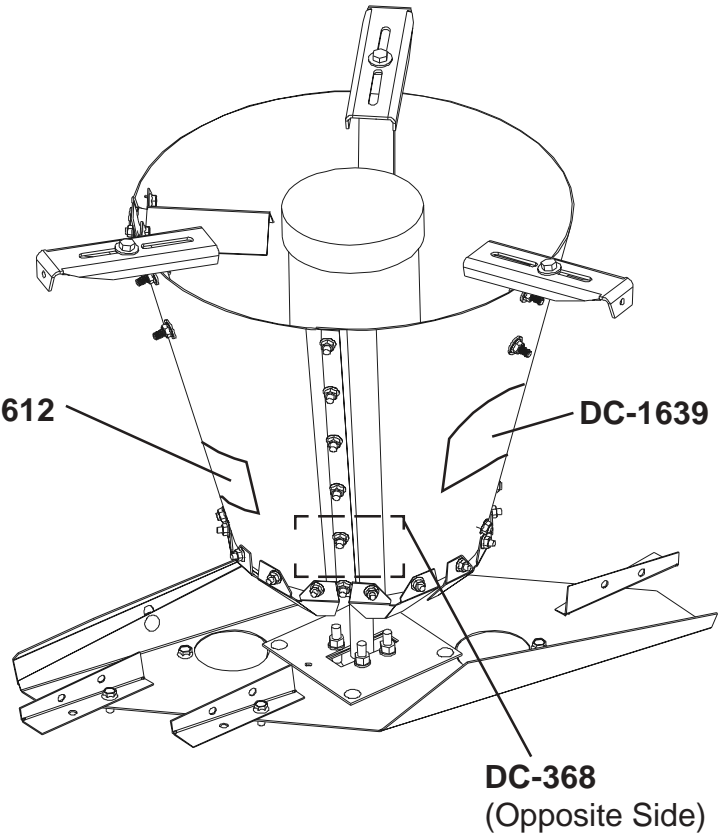

DC-368
Located on the Cone Segment.



DC-1612
Located on the Cone Segment.

GRAIN SPREADER ASSEMBLY INSTRUCTIONS

1. Carefully unpack the unit and inspect for shipping damage.
2. Check tightness of all bolts in the cone and blade assemblies.
3. Select the proper number of diverter segments required (See Diverter Segments chart).

Note: The various types of grain, moisture content, bin diameter, and capacity of fill auger are all conditions that change the evenness of spread. Some experimentation is needed to attain the proper spread pattern.

DIVERTER SEGMENTS CHART

Fill Auger (diameter)	Diverter Segments (# required)
6"	8
8"	4 (equally spaced)
10" or larger	0

GRAIN SPREADER INSTALLATION

1. Adjust hanger extensions to fit roof opening and install the power spread unit.
2. Use the 9/32" hole at the end of each hanger extension and bolt hanger extensions to hatch collar.
3. Then tighten all bolts holding hanger extensions.
4. Once unit is installed, use a carpenter's level across the top of the spreader cone to make sure it is level in all directions (Figure 1).
5. If required, add spacer washers between hanger brackets and hanger extensions to level unit (Figure 2).



The Scattergrain 1/2 HP motor is protected with an internal automatic reset overload. Before servicing, all power to the unit must be disconnected and locked out to avoid a possible reset/restart and serious injury.

Before connecting and applying power, rotate the spreader blade by hand to be certain it rotates freely without obstruction. The motor turns the spreader blade counter-clockwise as viewed from above the unit. The power spread unit requires 115

volt power supply. The minimum wire size is 14 gauge for runs up to 200 feet. It is advisable to provide additional protection such as 15 amp slow blow fuses or 20 amp circuit breaker. Consult a licensed electrician for wire size on longer runs. Regardless of grain type and bin size, the grain flow must be directly down (vertical) and centered (horizontal) within the spreader cone (Figure 3). This has to be done to prevent high and low grain surface areas from one side of the bin to the other.

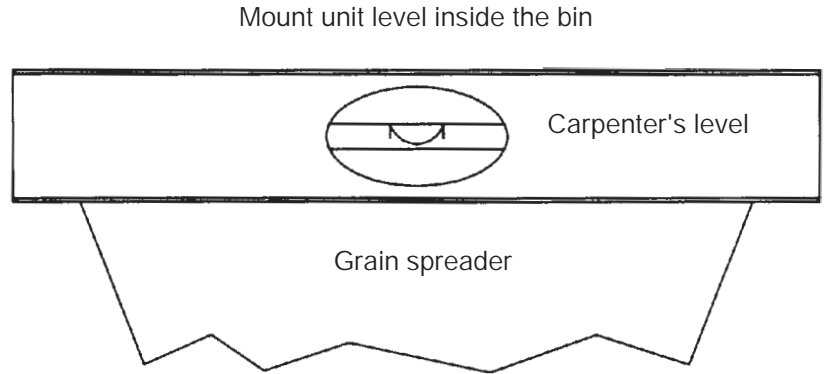


Figure 1: Mount spreader and check with level.

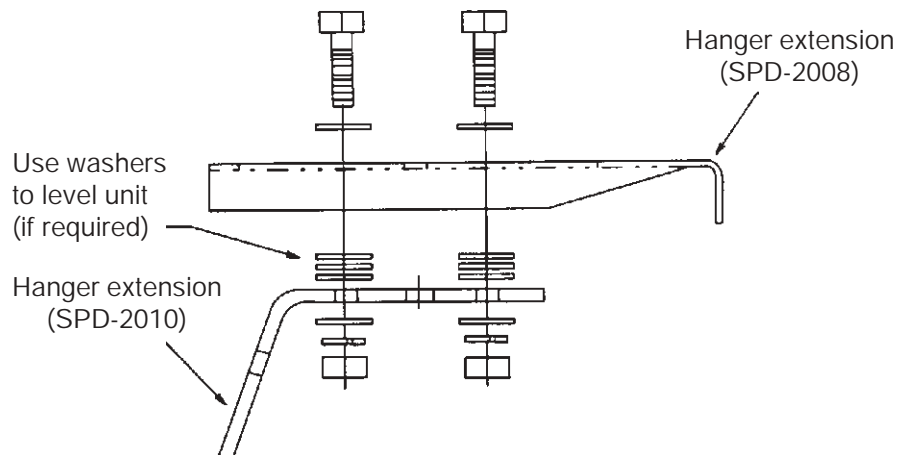


Figure 2: Use washers to level unit.


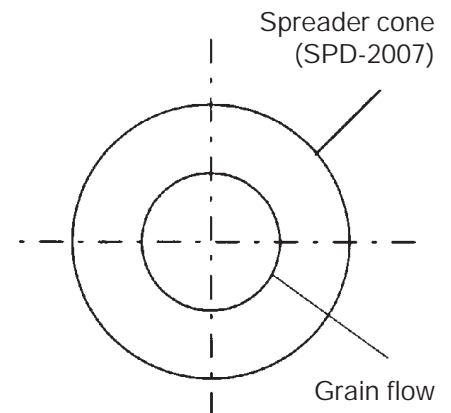


Figure 3: Grain flow must be centered within the spreader cone.

OPERATING INSTRUCTIONS

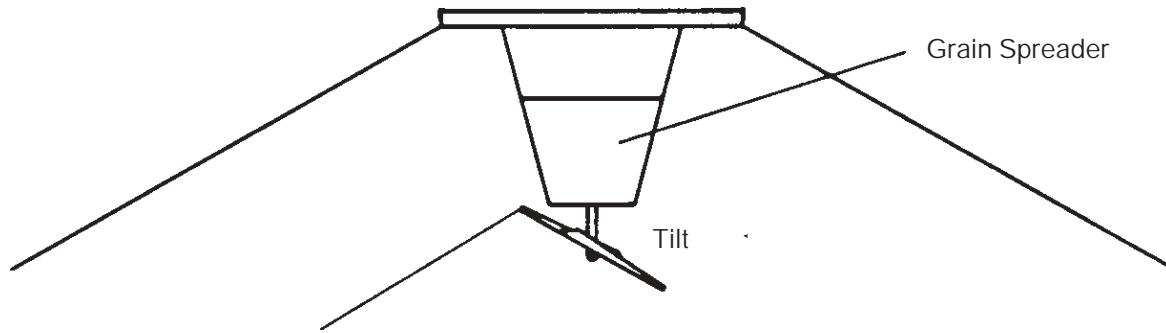

Single spreader diverter end up for desired grain spread.

Figure 4: Adjustment of the tilt.

The grain spreader blade assembly has four features for adjusting grain flow pattern.

1. Tilt is the adjustment of the entire spreader blade, which controls overall grain spreading. Tilt is adjusted by loosening the two U-bolts that allow the tipping of

the blade up and down. This may vary according to bin diameter and fill rate (Figure 4).

2. Spreader diverters are used to increase or decrease grain flow resistance over spreader blade. With the diverters straight (Figure 5) the grain will travel fur-

ther. Angled grain diverters will reduce the throwing distance.

3. Blade extension is used when extra throwing distance is required for larger bins.
4. Dampers are used to control center filling.

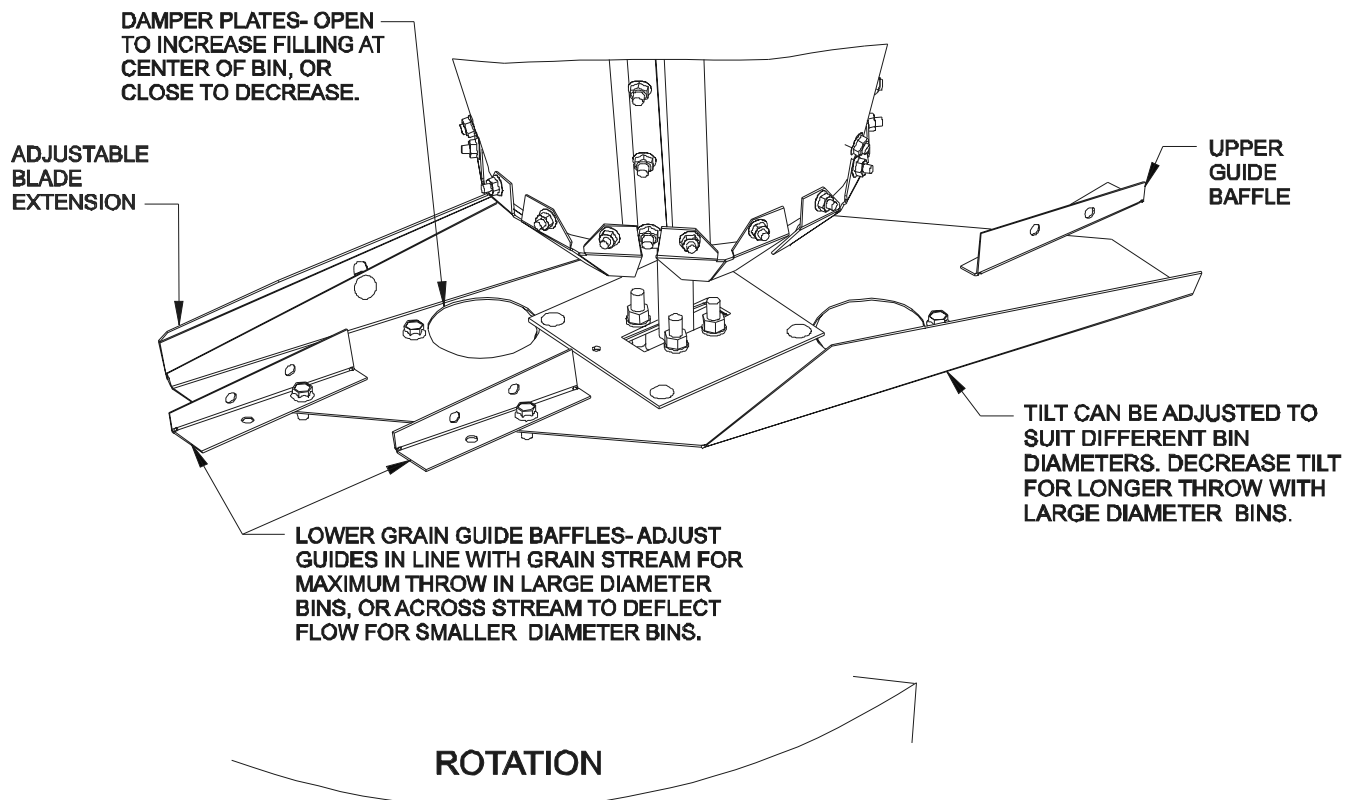


Figure 5: Four features for adjusting the grain flow pattern.

OPERATING INSTRUCTIONS

ADJUSTMENT FOR BIN FILL

			LARGE BIN 36" DIA. AND GREATER	SMALL BIN 24" DIA. AND LESS
REF #	PART	TYPE	OPERATION/PROCEDURE	OPERATION/PROCEDURE
1	Spreader Blade	Tilt	Decrease (flatten)/loosen U-bolts and pivot the blade to horizontal. Always refer to single diverter side as gauge.	Increase/loosen U-bolts and pivot the blade (single diverter side) upward.
2	Spreader Diverter	Single Side	Decrease (center filling)/loosen bolts and rotate diverter clockwise.	Increase (center filling)/loosen bolt and rotate diverter counter-clockwise.
		Dual Side	Decrease (center filling)/loosen bolts and rotate diverters clockwise to direct flow in line with grain stream.	Increase (center filling)/loosen bolt and rotate diverters counter-clockwise to direct flow across grain stream.
3	Blade Extension	Tilt	Increase/loosen bolt and pivot the extension upward to maximum allowance in slotted hole.	Remove blade extension.
4	Damper	Opening	Decrease (center filling)/loosen bolts and pivot dampers to nearly closed position.	Increase (center filling)/loosen bolts and pivot dampers to almost fully open position.

1. Rotation is always viewed from top of the unit looking down onto the blade.
2. Be sure to fully tighten all bolts after each adjustment is made.
3. These adjustments describe the requirements for both extremes of bin sizes. For bin sizes between 24' and 36' in diameter start with intermediate adjustments, then vary slightly as required.

OPERATING INSTRUCTIONS

MAINTENANCE

For normal operation, annually relubricate both motor bearings with approximately ten drops of 5W-30 oil. The gears of the gear box assembly are lubricated with a special high temperature, food grade lubricant (SPD-2109) at the time of manufacturing. The level of grease in the gear box should be checked annually and will normally not require further lubrication unless seal breakage occurs. After the grease has settled to the bottom of the gear box, the grease level can be checked. The grease level should

not be more than 1/4" below the vent plug (Figure 6). It may be necessary to insert a wire through vent plug hole to find the grease level. The level also can be checked by removing motor and viewing grease level through hole for motor pinion gear.


Inspect seals annually for signs of leakage (check bearings annually for tightness).

In the event the motor fails to start, check power supply to the motor. If power supply exists and motor still fails to start, disconnect power and check blade for freedom

of rotation. If power does not exist, check for blown fuse or flipped circuit breaker.

If motor stops operating for no apparent reason, wait approximately five minutes for the automatic overload protection device to reset and reattempt operation. If problem continues, check power supply for voltage and check blade of unit for freedom of rotation.

If motor pinion requires removal for any reason, it must be properly installed and located, as shown in the parts assembly on page 14.

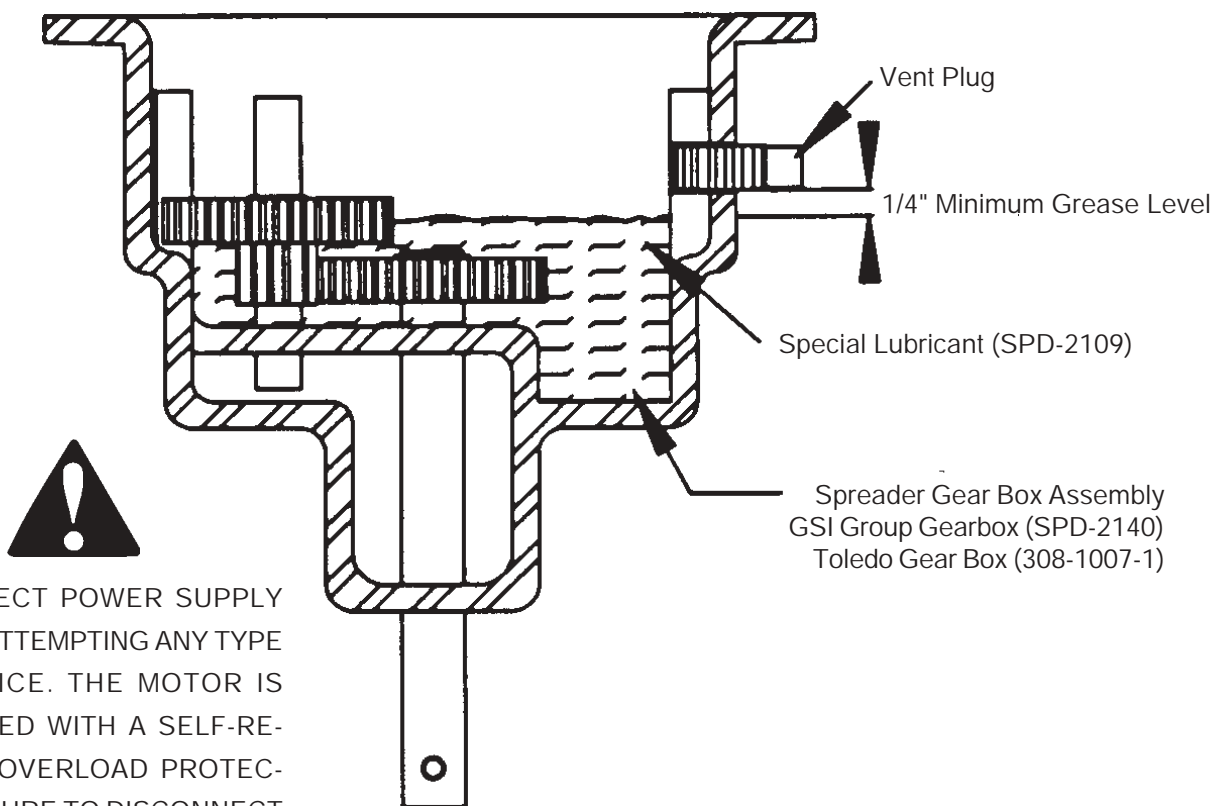


DISCONNECT POWER SUPPLY BEFORE ATTEMPTING ANY TYPE OF SERVICE. THE MOTOR IS PROTECTED WITH A SELF-RESETTING OVERLOAD PROTECTION. FAILURE TO DISCONNECT POWER CAN RESULT IN SERIOUS INJURY OR DEATH.




Figure 6: The gear box assembly showing grease level.

TROUBLESHOOTING GUIDE

CORRECT SPREADING PATTERN

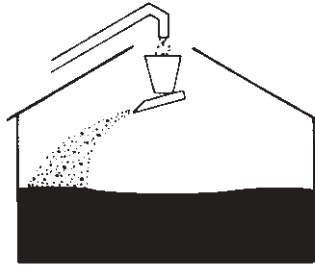

Grain is slightly depressed in the center, grain flow is centered and the spreader is level.

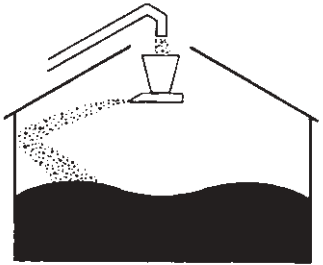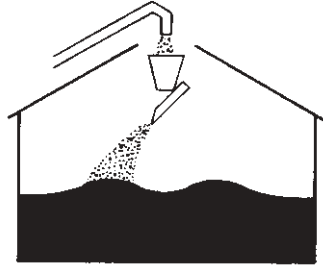Trouble	Probable Cause	
Large doughnut shaped ring caused by grain hitting high on bin wall.	Tilt blade downward, decrease bite. Remove blade extension.	 <p>Spreader blade too flat.</p>
Grain is high in center of bin, small doughnut.	Flatten blade, increase bite, decrease grain flow to spreader. Add blade extension.	 <p>Spreader blade too steep.</p>
Grain is high on one side of bin.	Level spreader, correct grain flow to spreader, (never allow grain to flow into spreader at an angle or off center).	 <p>Not level, not centered.</p>

POWER SPREAD PARTS ASSEMBLY

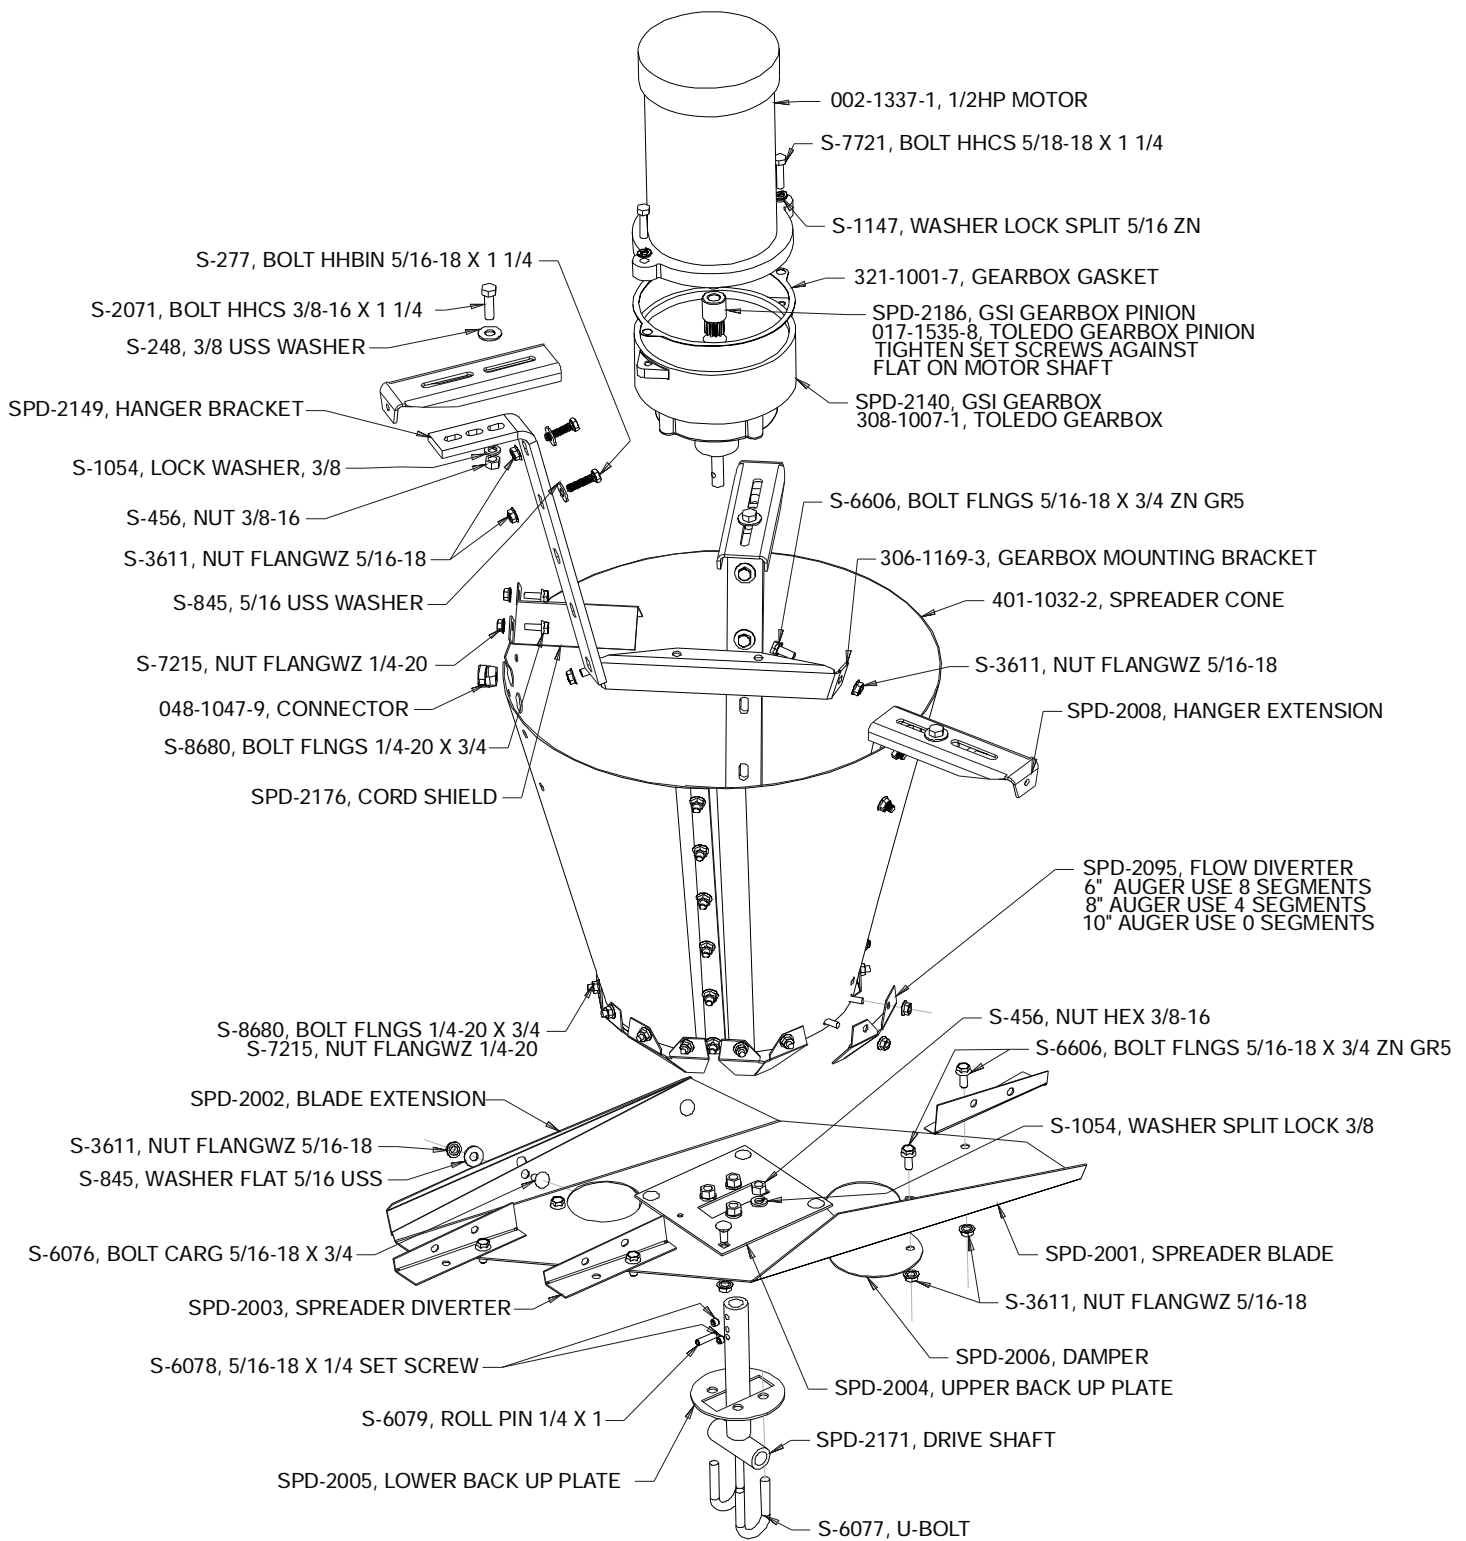


Figure 7: FFD-120-WH Scattergrain Spreader 1/2 HP

GRAIN CONDITIONING SYSTEMS

THE GSI GROUP



1004 E. Illinois St.
Assumption, IL 62510
Phone 217-226-4421
Fax:1-800-800-5329

September 8, 2003