

# INVERTER FR-D700-SC-EC

## **Safety stop function instruction manual**

### CONTENTS

1. General description .....	1
2. Installation and wiring .....	2
3. Example of safety system configuration .....	5
4. Test and checking failure .....	7
5. Safety parameters of FR-D700-SC .....	8

## **Compliance with the EU Machinery Directive – Functional Safety**

### **WARNING**

Any misuse of safety function could lead to personal injury or death, property damage, or economic loss. To ensure that the system complies fully with requirement of safety, make a system-level risk assessment. Mitsubishi Electric Co. cannot assume responsibility for any system to comply with safety directive.

### **CAUTION**

The information of this manual is merely a guide for proper installation. Mitsubishi Electric Co. cannot assume responsibility for the compliance or the noncompliance to any code, national, local or otherwise for the proper installation of this equipment. A hazard of personal injury and/or equipment damage exists if codes are ignored during installation.

### **WARNING**

To avoid an electric shock hazard, verify that the voltage on the bus capacitors has discharged before performing any work on the drive. Measure the DC bus voltage at the P(+) and N(-) terminals or test points (refer to your drive's *User Manual* for locations and discharging time). The voltage must be zero.

### **WARNING**

The safety stop function do not isolate electrically between drive and motor. To avoid an electric shock hazard, disconnect/isolate power to the drive and verify to ensure that the voltage is zero before performing any work on the motor (refer to your drive's *User Manual* for discharging time).

### **CAUTION**

This instruction manual is compatible with FR-D700-SC-EC source-logic safety terminal model. For FR-D700-EC sink-logic safety terminal model, refer to the FR-D700 safety stop function instruction manual (BCN-A211508-000).

## 1. General description

### Features

Mitsubishi FR-D700-SC safety stop function prevents a drive from supplying rotational energy to motors. Dual safety channels 'S1' and 'S2' cut off the gate-drive power for IGBT to turn off.

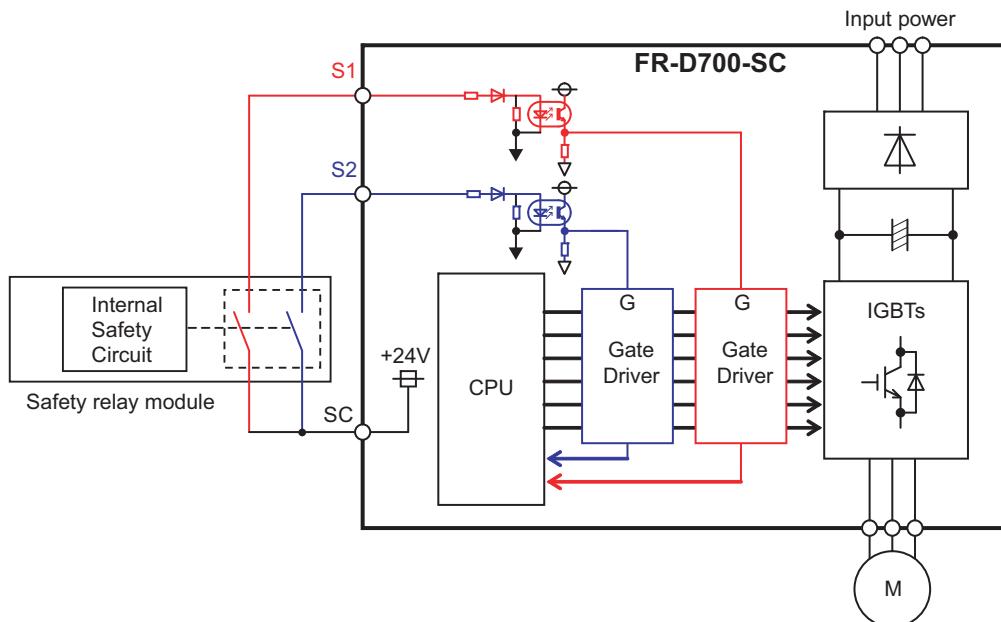


Fig.1 FR-D700-SC safety stop function diagram

### WARNING

The safety stop function doesn't isolate electrically between drive and motor. To avoid an electric shock hazard, disconnect power to the drive and verify that the voltage is zero before performing any work on the motor (refer to your drive's *User Manual* for discharging time).

### Directives

Mitsubishi FR-D700-SC safety stop function meets the following directives and categories.

ISO13849-1:2008 Category 3/PLd

IEC62061:2005 / IEC61800-5-2:2007 / IEC61508 SIL2

IEC60204-1:2006 / IEC61800-5-2:2007 Stop category 0

### WARNING

The misuse of safety function leads to personal injury or death, property damage, or economic loss.

To ensure that the system complies fully with requirement of safety, make a system-level risk assessment.

Mitsubishi Electric Co. cannot assume responsibility for any system to comply with safety directive.

## **2. Installation and wiring**

### **CAUTION**

The following information is merely a guide for proper installation.

Mitsubishi Electric Co. cannot assume responsibility for the compliance or the noncompliance to any code, national, local or otherwise for the proper installation of this equipment.

A hazard of personal injury and/or equipment damage exists if codes are ignored during installation.

### **CAUTION**

Ensure the safety relay unit and the FR-D700-SC unit is mounted closely in enclosure meeting IP54 and all interconnection wiring is short and protected against open and short circuit faults.

Refer EN/ISO13849-2.

#### **Installation**

Mitsubishi FR-D700-SC safety stop function should be used under following condition and environment.

Table.1 The condition and environment for using safety stop function

Item		Condition
Temperature range	Operation	-10°C to +50°C (non-freezing)
	Storage	-20°C to +65°C
Ambient humidity		90%RH maximum (non-condensing)
Vibration		5.9m/s <sup>2</sup> or less
Altitude		maximum 1000m above sea level
Atmosphere		Indoors (without corrosive gas, flammable gas, oil mist, dust and dirt etc.)
Over voltage category		II or less
Pollution degree		II or less
Mounting		wall mounting / vertical orientation

### **CAUTION**

In order to meet safety stop, an approved safety relay unit to ISO13849-1/EN954-1 safety category 3 or better shall be used in conjunction with FR-D700-SC as shown in example1,2.

In addition, all other components with in the safety stop loop shall be 'safety approved' types.

### **WARNING**

To avoid an electric shock hazard, insert the magnetic contactor (MC) between power source and drive. Open the contact of MC and keep away from drive for discharging time (refer to your drive's *User Manual* for information) before performing any work on the drive.

And verify that the voltage on the bus capacitors has discharged before Measure the DC bus voltage at the P(+) and N(-) terminals or test points (refer to your drive's *User Manual* for locations). The voltage must be zero.

### **CAUTION**

To avoid systematic faults, a test even for faulty demands of the safety function has to be performed in order to check the correct function of the monitor signal. This test shall be carried out at system installation, any software changes, parameterization changes, and/or at least once per year.

Refer to '4. Test and checking failure'.

## Wiring

The safety related terminals are described in Table.2 and Table.3

Table.2 The safety related terminals

Terminal Symbol	Description	Rating
S1	For input of safety stop channel1. S1-SC is Open: In safety stop mode. Short: Non safety stop mode.	Input resistance:4.7kΩ Current : 4 to 6 mA (In case of shorted to SC) Voltage : 21 to 26 V (In case of open from SC)
S2	For input of safety stop channel2. S2-SC is Open: In safety stop mode. Short: Non safety stop mode.	
SC	Common terminal for S1, S2 terminals. *SC is connected terminal PC internally.	
SO (SAFE)	As output for safety stop condition. SO terminal type is 'Open collector output'. SO-SE is OFF(Open): Drive enabled, or drive shutoff (with internal circuit fault) ON(Close): Drive shutoff (no internal circuit fault) <b>Important:</b> SO terminal should be used for monitoring safety stop condition only. SO terminal cannot be used for safety function.	
RUN (SAFE2)	As output for failure detection and alarm. RUN terminal type is 'Open collector output'. RUN-SE is OFF(Open): Detect failure or Alarm. ON(Close): No failure detected.  <b>Attention:</b> To use RUN terminal for monitor output of failure detection, <u>The parameter No.190 should be set 81 (Safety monitor 2).</u> <b>Note:</b> This terminal can be used for alarm or to prevent restart only, no other safety function.	Load: 24VDC/0.1A max. Voltage drop: 3.4V max. (In case of 'ON' state)
SE	Common terminal for safety RUN and SO terminal.	

Table.3 Truth table of Safety related signals

Input power	S1-SC	S2-SC	Internal safety circuit fault *1	SO (SAFE)	RUN (SAFE2) *2	Drive state
OFF	-	-	-	OFF(Open)	OFF(Open)	Drive shutoff (Safe state)
ON	Short	Short	No failure	OFF(Open)	ON(Close)	Drive enable
			Detected	OFF(Open)	OFF(Open)	Drive shutoff (Safe state)
	Open	Open	No failure	ON(Close)	ON(Close)	Drive shutoff (Safe state)
			Detected	OFF(Open)	OFF(Open)	Drive shutoff (Safe state)
	Short	Open	N/A	OFF(Open)	OFF(Open)	Drive shutoff (Safe state)
	Open	Short	N/A	OFF(Open)	OFF(Open)	Drive shutoff (Safe state)

" N/A " denotes a condition where circuit fault does not apply.

\*1 At an internal safety circuit fault, one of E.SAF or E.CPU is displayed on the operation panel. SA is displayed on the operation panel while S1 and S2 signals are both open and the safety function operates (without internal safety circuit fault).

\*2 To use RUN terminal for monitor output of failure detection, the parameter No.190 should be set 81 (Safety monitor 2).

### Wire and ferrule specification

Table.4 wire and ferrule specification

Wire size (mm <sup>2</sup> )	Ferrule with insulation collar *	Crimping tool *
0.3 / 0.5	AI 0,5-10WH	CRIMPFOX 6
0.75	AI 0,75-10GY	
1	AI 1-10RD	
1.25 / 1.5	AI1,5-10BK	
0.75 (combined 2 wire)	AI TWIN 2 X 0,75-10GY	

\*Ferrules and tools are distributed by Phoenix Contact.

### Jumper cable

The jumper cable between S1,S2 and SC terminal has been installed in the factory as shown in Fig.2.

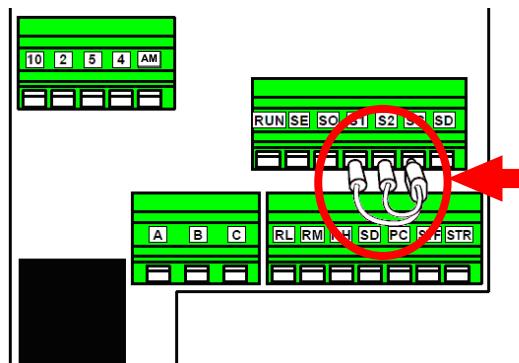


Fig.2. Short wire

Before connecting safety input wire to S1,S2 and SC terminal, remove this jumper cable.

### 3. Example of safety system configuration

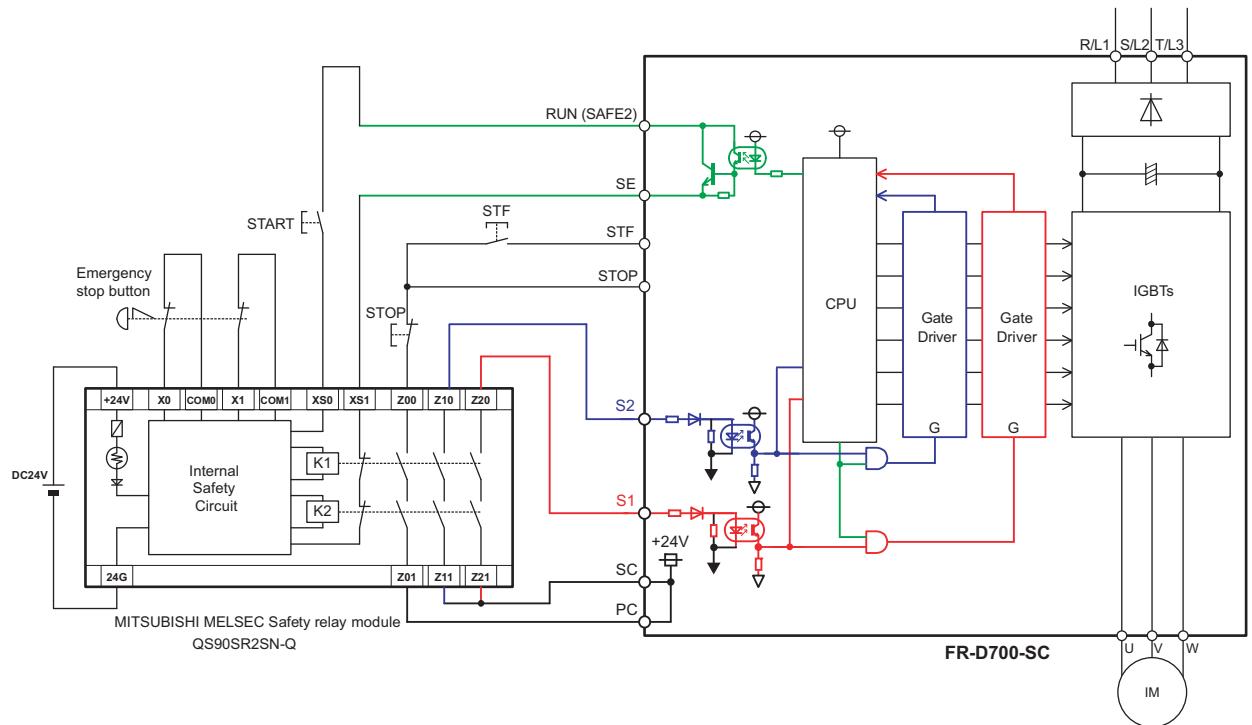


Fig.3 Safety system example – STOP synchronous with emergency stop button and fault detection through RUN output.

For safety stop, configure the wiring as shown in Fig.3 above.

Note: the above wiring is configured to prevent restart in case of a fault.

XS0 should be connected to RUN terminal and XS1 should be connected to SE, because polarity of XS0 is positive, XS1 is negative.

The parameter No.190 (RUN terminal function selection) must be set to '81'. This setting makes the RUN output to turn off in case of failure.

After the power-up, to reset the safety stop mode, press the START switch, and also press the STF switch, then start the motor rotation.

In the above Fig.3, wired example, in the event of reset of 'safe-condition' the motor rotation will not occur until STF is pressed.

(for normal 'non-safety' STF/STOP function, please refer to your drive's *User Manual*)

#### CAUTION

To prevent restart in case of recovering from input power loss of drive, 3-wired connection for STF/STOP control is recommended.

In case of 2-wire connection and using latching type switch to short between STF and PC for starting, ensure the compliance with safety requirement for the restarting when the drive recover from input power loss.

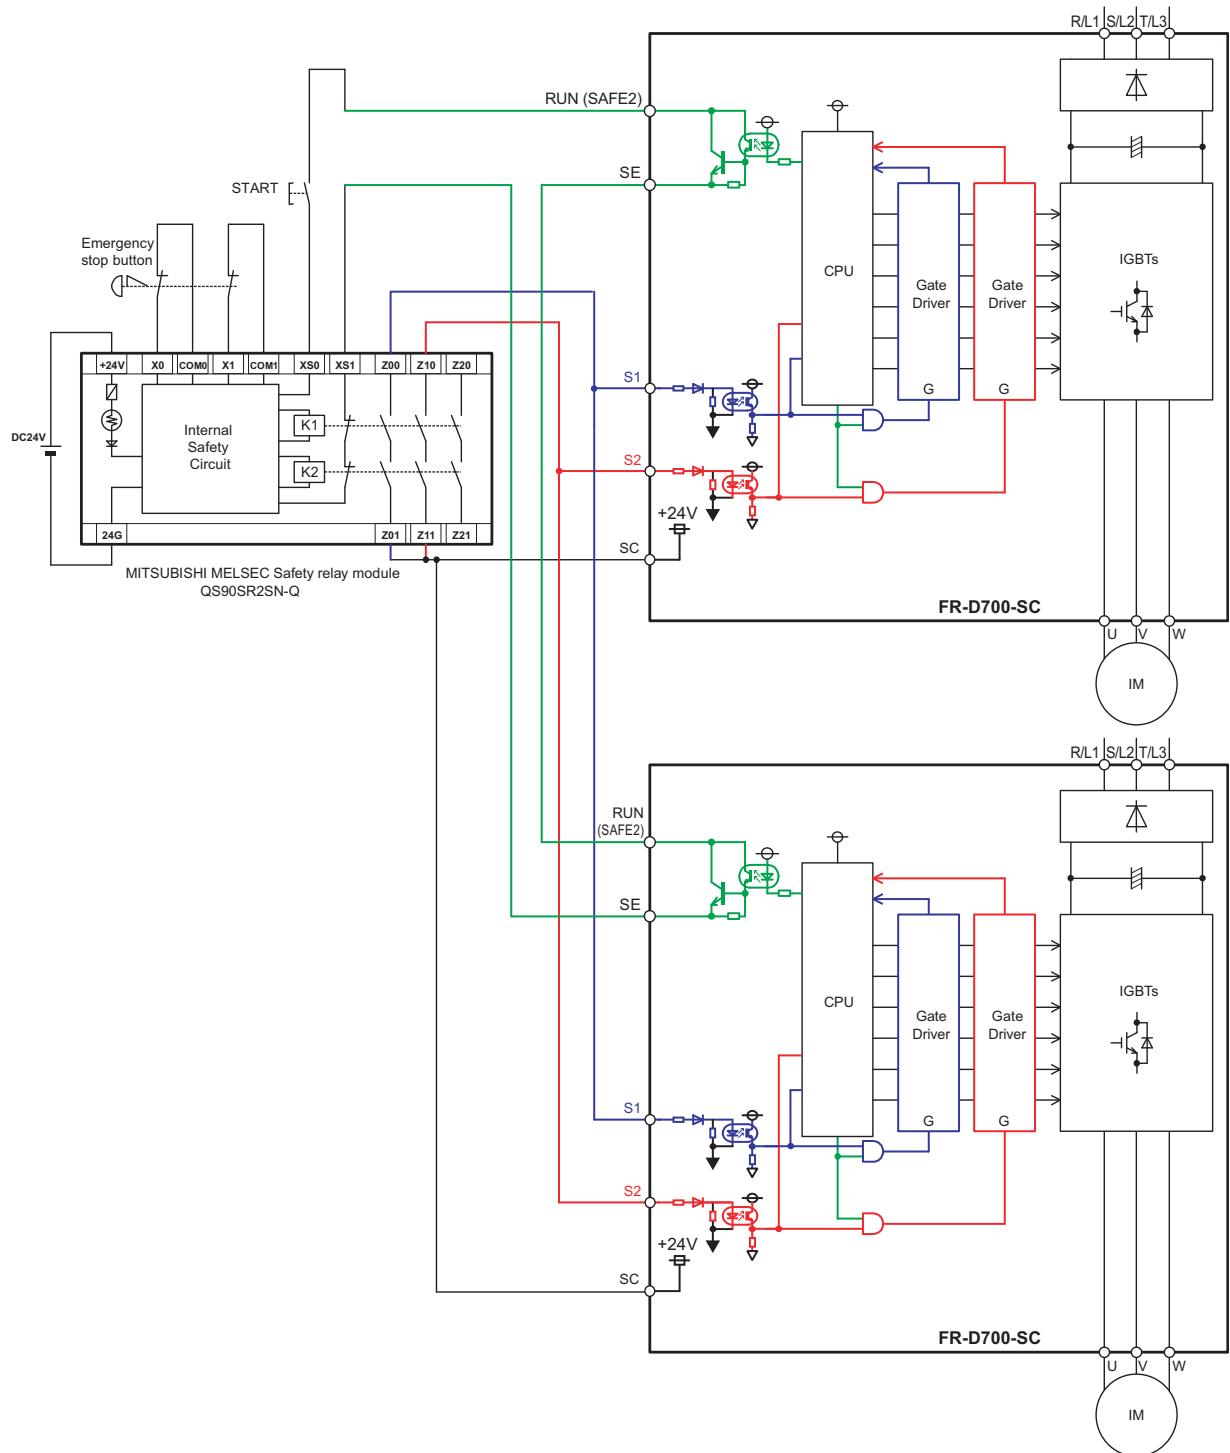


Fig.4 Example when using multiple FR-D740-SC inverters for the safety stop function

The parameter No.190 (RUN terminal function selection) must be set to '81'. This setting makes the RUN output to turn off in case of failure.



#### NOTE

**Do not connect the FR-D700 sink-logic safety terminal model together with FR-D700-SC source-logic safety terminal model. If connected together, the safety stop function does not work properly.**

## 4. Test and checking failure

### CAUTION

To avoid systematic faults, a test even for faulty demands of the safety function has to be performed in order to check the correct function of the monitor signal. This test shall be carried out at system installation, any software changes, parameterization changes, and/or at least once per year.

### I/O status and failure

FR-D700-SC safety related I/O status obeys the following truth table.

Table.5 Truth table of Safety related signals

Input power	S1-SC	S2-SC	Internal safety circuit fault *1	SO (SAFE)	RUN (SAFE2) *2	Drive state
OFF	-	-	-	OFF(Open)	OFF(Open)	Drive shutoff (Safe state)
ON	Short	Short	No failure	OFF(Open)	ON(Close)	Drive enable
			Detected	OFF(Open)	OFF(Open)	Drive shutoff (Safe state)
	Open	Open	No failure	ON(Close)	ON(Close)	Drive shutoff (Safe state)
			Detected	OFF(Open)	OFF(Open)	Drive shutoff (Safe state)
	Short	Open	N/A	OFF(Open)	OFF(Open)	Drive shutoff (Safe state)
	Open	Short	N/A	OFF(Open)	OFF(Open)	Drive shutoff (Safe state)

" N/A " denotes a condition where circuit fault does not apply.

\*1 At an internal safety circuit fault, one of E.SAF or E.CPU is displayed on the operation panel. SA is displayed on the operation panel while S1 and S2 signals are both open and the safety function operates (without internal safety circuit fault).

\*2 To use RUN terminal for monitor output of failure detection, the parameter No.190 should be set 81 (Safety monitor 2).

In case of diagnostic or functionality test, check the I/O state whether it is same or not as Table.5.

### Diagnostic

If the failure detected, FR-D700-SC output alarm signal and indicate 'E.SAF' at the display.

In case of FR-D700-SC output the alarm, please take following action.

- (1) Check the S1-SC and S2-SC input signal logic is the same. If these are different logic, correct the input signal and reset the FR-D700-SC.
- (2) Disconnect the wire from S1, S2, SC terminal, then reset or power-off and on, If the 'SA' letter is flashed up at display, there is failure in system except FR-D700-SC. But, still 'E.SAF' is displayed and alarm output, there is malfunction on FR-D700-SC.

### Self diagnostic test

FR-D700-SC does the self-diagnostic test on the power-ON.

If FR-D700-SC output alarm at power-ON, please take the action described in 'Diagnostic' at above.

### Test procedure for functionality

As depicted 'ATTENTION' in above, the test for the functionality is important.

Please do the test following procedure.

- (1) Please make each state of S1-SC and S2-SC depicted at Table.5.
- (2) If there is any different state from Table.5, FR-D700-SC has some malfunction.
- (3) If there is no different state from Table.5, check the systematic performance, such as, press the Emergency switch, press the start/restart button at the failure detected (RUN-SE opened), and so on.
- (4) Finally clear the error record of the FR-D700-SC (see the user manual how to clear the error record).

## **5. Safety parameters of FR-D700-SC**

FR-D700-SC safety related I/O status obeys the following truth table.

Table.6 Safety parameters of FR-D700-SC

Parameter	Value
PFD <sub>Avg</sub>	$2.06 \times 10^{-4}$
PFH <sub>D</sub>	$2.35 \times 10^{-9}$
PL	d
MTTF <sub>D</sub>	725 years
DC <sub>Avg</sub>	60%

## REVISIONS

Print Date	Manual Number	Revision
Jan. 2012	BCN-A211508-005-A	First edition

HEADQUARTERS		EUROPEAN REPRESENTATIVES		EUROPEAN REPRESENTATIVES		EUROPEAN REPRESENTATIVES	
MITSUBISHI ELECTRIC EUROPE EUROPE B.V. German Branch Gothaer Straße 8 <b>D-40880 Ratingen</b> Phone: +49 (0) 21 02 / 486-0 Hotline: +49 2102 1805 000-765 /-766 Fax: +49 (0) 21 02 / 4 86-1 12 0 e mail: megfa-mail@mee.mee.com www.mitsubishi-automation.com		GEVA Wiener Straße 89 <b>A-2500 Baden</b> Phone: +43 (0) 2252 / 85 55 20 Fax: +43 (0) 2252 / 488 60 e mail: office@geva.co.at	AUSTRIA	MITSUBISHI ELECTRIC IRELAND EUROPE B.V.-Irish Branch Westgate Business Park Ballymount <b>IRL-Dublin 24</b> Phone: +353 (0) 1 / 419 88 00 Fax: +353 (0) 1 / 419 88 90 e mail: sales.info@meuk.mee.com		Beijer Electronics AB SWEDEN Box 426 <b>S-20123 Malmö</b> Phone: +46 (0) 40 / 35 86 00 Fax: +46 (0) 40 / 93 23 02 e mail: —	
MITSUBISHI ELECTRIC FRANCE FRANCE 25, Boulevard des Bouvets <b>F-92741 Nanterre Cedex</b> Phone: +33 1 55 68 55 68 Fax: +33 1 49 01 07 25 e mail: factory.automation@fra.mee.com		Getronics b.v. Control Systems Pontbeeklaan 43 <b>B-1731 Asse-Zellik</b> Phone: +32 (0) 2 / 4 67 17 51 Fax: +32 (0) 2 / 4 67 17 45 e mail: infoautomation@getronics.com	BELGIUM	ALFATRADE LTD. MALTA 99 Paola Hill <b>Paola PLA 08</b> Phone: +356 / 697816 Fax: +356 / 697817 e mail: paul.licari@alfatr.com		ECONOTEC AG SWITZERLAND Postfach 282 <b>CH-8309 Nürensdorf</b> Phone: +41 (0) 1 / 838 48 11 Fax: +41 (0) 1 / 838 48 12 e mail: —	
MITSUBISHI ELECTRIC ITALY EUROPE B.V. Italian Branch C.D. Colleoni-P. Perseo Ing. 2 Via Paracelso 12 <b>I-20041 Agrate Brianza (MI)</b> Phone: +39 (0) 39 / 60 53 1 Fax: +39 (0) 39 / 60 53 312 e mail: factory.automation@it.mee.com		TELECON CO. 4, A. Ljapchev Blvd. <b>BG-1756 Sofia</b> Phone: +359 92 / 97 44 05 8 Fax: +359 92 / 97 44 06 1 e mail: —	BULGARIA	Getronics bv NETHERLANDS Control Systems Donauweg 10 <b>NL-1043 AJ-Amsterdam</b> Phone: +31 (0) 20 / 586 15 92 Fax: +31 (0) 20 / 586 19 27 e mail: infoautomation@getronics.com		GTS TURKEY Darülaceze Cad. No. 43A KAT: 2 <b>TR-80270 Okmeydani-Istanbul</b> Phone: +90 (0) 212 / 320 1640 Fax: +90 (0) 212 / 320 1649 e mail: —	
MITSUBISHI ELECTRIC SPAIN EUROPE B.V. Pol. Ind. Can Magi-C. Calle Joan Buscallà, 2-4 AC 420 <b>E-08190 Sant Cugat del Vallès</b> Phone: +34 (9) 3 / 565 31 31 Fax: +34 (9) 3 / 589 29 48		AutoCont Control Systems s.r.o. Nemocnici 12 <b>CZ-70200 Ostrava 2</b> Phone: +420 (0) 69 / 615 21 11 Fax: +420 (0) 69 / 615 21 12 e mail: —	CZECHIA	Beijer Electronics AS NORWAY Teglverksveien 1 <b>N-3002 Drammen</b> Phone: +47 (0) 32 / 24 30 00 Fax: +47 (0) 32 / 84 85 77 e mail: —		EURASIAN REPRESENTATIVES RUSSIA MITSUBISHI ELECTRIC RUSSIA EUROPE B.V. 12/1 Goncharnaya St, suite 3C <b>RUS-109240 Moskow</b> Phone: +7 (0) 95 / 915-8624/02 Fax: +7 (0) 95 / 915-8603 e mail: —	
MITSUBISHI ELECTRIC UK EUROPE B.V. UK Branch Travellers Lane <b>Hatfield, Hertfordshire, AL10 8 XB</b> Phone: +44 (0) 1707 / 27 61 00 Fax: +44 (0) 1707 / 27 86 95		louis poulsen industri & automation Geminivej 32 <b>DK-2670 Greve</b> Phone: +45 (0) 43 / 95 95 95 Fax: +45 (0) 43 / 95 95 91 e mail: lpia@lpmail.com	DENMARK	MPL Technology SP.Z.o.o POLAND ul.Wroclawska 53 <b>PL-30-011 Kraków</b> Phone: +48 (0) 12 / 632 28 85 Fax: +48 (0) 12 / 632 47 82 e mail: krakow@mpl.com.pl		STC Drive Technique RUSSIA Poslannikov per., 9, str. 1 <b>RUS-107005 Moskow</b> Phone: +7 (0) 95 / 786 21 00 Fax: +7 (0) 95 / 786 21 01 e mail: —	
MITSUBISHI ELECTRIC JAPAN CORPORATION Tokyo Bldg. 2-7-3 Marunouchi Chiyoda-Ku <b>Tokyo 100-8310</b> Phone: +81 (0) 3 / 32 18 31 76 Fax: +81 (0) 3 / 32 18 24 22		UTU Elektrotehnika AS ESTONIA Pärnu mnt. 160i <b>EE-10621 Tallinn</b> Phone: +372 6 / 51 72 80 Fax: +372 6 / 51 72 88 e mail: utu@utu.ee		Sirius Trading&Services srl ROMANIA Bd. Ghica nr. 112, Bl. 41 <b>RO-72335 Bucaresti 2</b> Phone: +40 (0) 1 / 210 55 11 Fax: +40 (0) 1 / 210 55 11 e mail: sirius_t_s@fx.ro		JV-CSC Automation UKRAINE 15, M. Raskovoyi St., Floor 10, Office 1010 <b>U-02002 Kiev</b> Phone: +380 (4) 4 / 238 83 16 Fax: +380 (4) 4 / 238 83 17 e-Mail: mk1@csc-a.kiev.ua	
MITSUBISHI ELECTRIC USA AUTOMATION 500 Corporate Woods Parkway <b>Vernon Hills, Illinois 60061</b> Phone: +1 (0) 847 / 478 21 00 Fax: +1 (0) 847 / 478 03 27		URHO TUOMINEN OY FINLAND Hevoshaankatu 3 <b>FIN-28600 Pori</b> Phone: +358 (0) 2 / 55 08 00 Fax: +358 (0) 2 / 55 088 41 e mail: —		ACP AUTOCOMP a.s. SLOVAKIA Chalupkova 7 <b>SK-81109 Bratislava</b> Phone: +421 (0) 7 592 22 54 Fax: +421 (0) 7 592 22 48 e mail: —		MIDDLE EAST REPRESENTATIVE ISRAEL SHERF Motion Techn. LTD Rehov Hamerkava 19 <b>IL-58851 Holon</b> Phone: +972 (0) 3 / 559 54 62 Fax: +972 (0) 3 / 556 01 82 e mail: —	
		UTECO A.B.E.E. GREECE 5, Mavrogenous Str. <b>GR-18542 Piraeus</b> Phone: +30 (0) 1 / 42 10 050 Fax: +30 (0) 1 / 42 12 033 e mail: uteco@uteco.gr		INEA d.o.o. SLOVENIA Ljubljanska 80 <b>SI-1230 Domžale</b> Phone: +386 (0) 17 21 80 00 Fax: +386 (0) 17 24 16 72 e mail: inea@inea.si			



**MITSUBISHI ELECTRIC CORPORATION**

HEAD OFFICE: TOKYO BUILDING 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN