

# USER'S INFORMATION, MAINTENANCE AND SERVICE MANUAL

## HIGH EFFICIENCY TUBULAR HEAT EXCHANGER SERIES

### MODELS: GY9S / GM9S / GF9S (Single Stage Upflow)



#### TABLE OF CONTENTS

CONTACT INFORMATION .....	1	FURNACE MAINTENANCE SECTION .....	5
USER'S INFORMATION .....	1	FURNACE CLEANING SECTION .....	5
SAFETY .....	1	Burner Removal/Cleaning .....	5
INSTRUCTIONS FOR EXAMINING THE		Cleaning the Heat Exchanger .....	5
FURNACE INSTALLATION .....	2	Cleaning the Secondary Heat Exchanger .....	5
HOW YOUR GAS FURNACE WORKS .....	3	SEQUENCE OF OPERATION .....	5
START-UP AND SHUTDOWN INSTRUCTIONS .....	3	Continuous Blower .....	5
Read the Instructions Below Before Trying to		Intermittent Blower - Cooling .....	5
Start the Furnace .....	3	Heating Cycle .....	6
Operating Instructions: .....	3	Hot Surface Ignition System .....	6
To Turn Off the Appliance: .....	3	TROUBLESHOOTING .....	6
FURNACE USER MAINTENANCE .....	4	FURNACE CONTROL DIAGNOSTICS .....	6
Air Filters .....	4	DIAGNOSTIC FAULT CODE STORAGE AND RETRIEVAL .....	7
Replacing Filters .....	4	REPLACEMENT PARTS LIST .....	8
Blower Care .....	4	FIELD INSTALLED ACCESSORIES - NON-ELECTRICAL .....	10
Motor Lubrication .....	4	REPLACEMENT PART CONTACT INFORMATION .....	10
SERVICE AND MAINTENANCE MANUAL .....	5	WIRING DIAGRAM .....	11
SAFETY SECTION .....	5	LIMITED WARRANTY .....	12

#### CONTACT INFORMATION

- Go to website at [www.york.com](http://www.york.com) click on "contact", then click on "contact form" and follow the instructions.
- Contact us by mail:

York International  
Consumer Relations  
5005 York Drive  
Norman, OK 73069

The manufacturer recommends that the user read all sections of this manual and keep the manual for future reference.

### **⚠ WARNING**

**FIRE OR EXPLOSION HAZARD** - Failure to follow safety warnings exactly could result in serious injury, death, or property damage.

— **Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.**

— **WHAT TO DO IF YOU SMELL GAS:**


- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone (included cell phone) in your building.
- Leave the building immediately.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

— **Installation and service must be performed by a qualified installer, service agency or the gas supplier.**

## SECTION I: USER'S INFORMATION

### SAFETY

1. The furnace area must be kept clear and free of combustible materials, gasoline and other flammable vapors and liquids.
2. Insulating materials may be combustible. The furnace must be kept free and clear of insulating materials. The furnace area must be examined when installed in an attic or other insulated space or when insulation is added to be sure that the insulation material has been kept away from the furnace.
3. The furnace needs air for combustion in order to operate properly and safely. Do not block or obstruct air openings on the furnace, air openings to the area where the furnace is installed, or spaces around the furnace.
4. Follow the instructions exactly as shown on the OPERATING INSTRUCTION LABEL or the Start-up and Shutdown Instructions on Page 3 of this manual when lighting the furnace or turning the furnace off.
5. Should the gas supply fail to shut off or if overheating occurs, shut off the gas valve to the furnace before shutting off the electrical supply.
6. Do not use this furnace if any part has been under water. A flood-damaged furnace is extremely dangerous. Attempts to use the furnace can result in fire or explosion. A qualified service agency should be contacted to inspect the furnace and replace all gas controls, control system parts, electrical parts that have been wet or the furnace if deemed necessary.

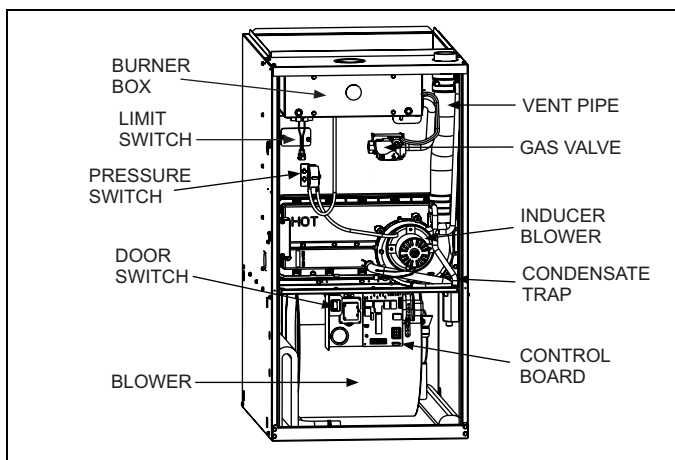

**FIGURE 1: Component Locations**

7. NEVER . . . Store flammable materials of any kind near your furnace. Gasoline, solvents, and other volatile liquids should be stored only in approved containers outside your home. These materials vaporize easily and are extremely dangerous.
8. NEVER . . . Store cleaning materials near your furnace. Materials such as bleaches, detergents, powdered cleansers, etc., can cause corrosion of the heat exchangers.
9. NEVER . . . Use the area around your furnace as a storage area for items which could block the normal flow of air. This flow of air is required for ventilation of the various furnace components.

## ⚠ WARNING

### **FIRE OR EXPLOSION HAZARD**


***This furnace is designed and approved for use with Natural Gas and (LP) Propane Gas ONLY. DO NOT BURN ANY LIQUID FUEL OR SOLID FUEL IN THIS FURNACE.***

***Burning any unapproved fuel will result in damage to the furnace heat exchanger, which could result in Fire, Personal Injury, and/or Property Damage.***


## **INSTRUCTIONS FOR EXAMINING THE FURNACE INSTALLATION**

It is the owner's responsibility to ensure that an annual inspection of the entire heating portion of the unit is made by a qualified service agency.

1. Examine the heat exchanger, vent/combustion air piping, vent connectors and chimney to be sure they are clear and free of obstructions.
2. Examine the vent pipe making sure it is firmly in place, that it slopes slightly upward and is physically sound without holes and all of the connections are secure.
3. Examine the return-air duct connections to make sure they are physically sound, sealed to the furnace casing, and the ducts terminate outside the space containing the furnace.
4. Examine the furnace casing making sure the physical support is sound without sagging, cracks or gaps. Examine the furnace base making sure it is physically sound without cracks, gaps or sagging and has a good seal.
5. Examine the furnace casing for obvious signs of deterioration.
6. Examine the burner flames to make sure they are in good adjustment. Refer to the pictorial sketch shown in Figure 2 as a comparison to the actual flame.
7. Examine the furnace as outlined above in steps "1 - 6" before each heating season. Use Figure 3 for visual reference.

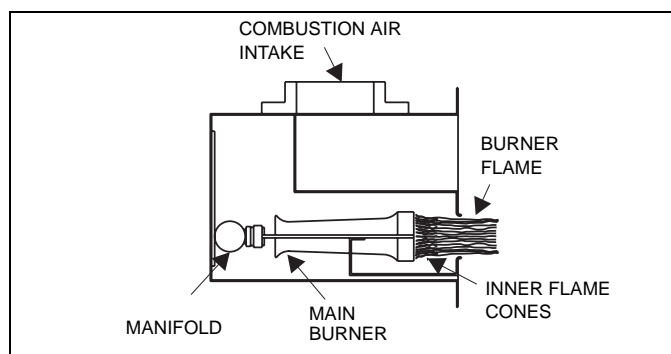

**FIGURE 2: Burner Flame Drawing**

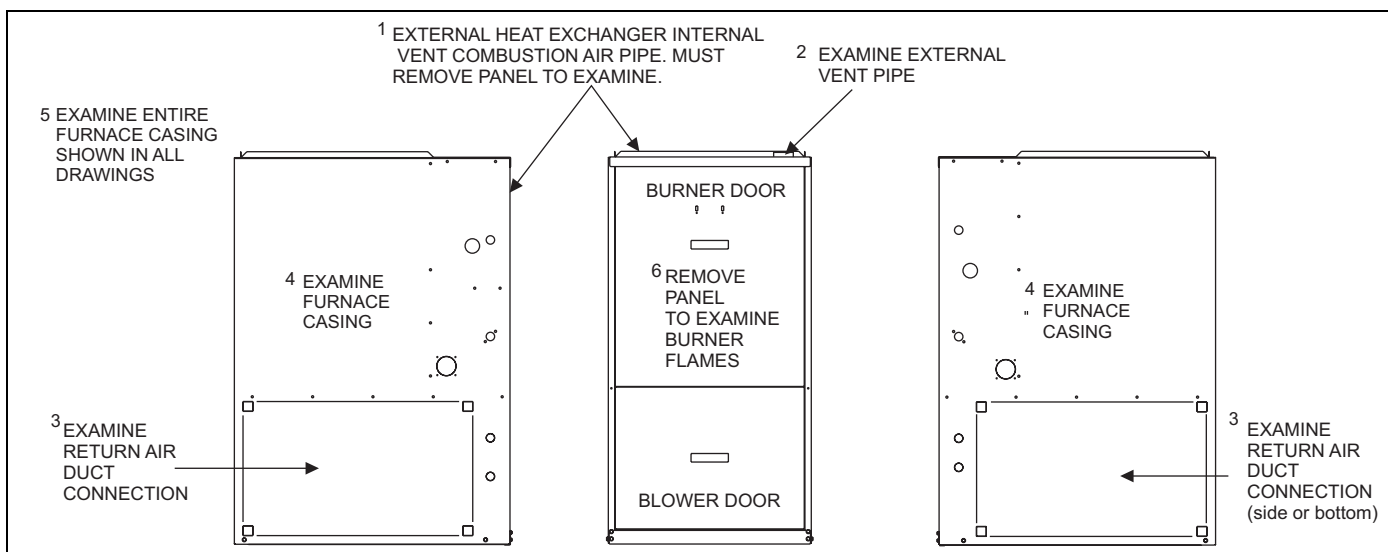

**FIGURE 3: Furnace Examination Checkpoints**

## HOW YOUR GAS FURNACE WORKS

Your furnace is a very easy appliance to take for granted. Season after season, it sits there in your home, keeping you warm and comfortable. For this reason, you may never have given much thought to the way your furnace operates. In order to get the safest and most efficient operation from your furnace, you should understand how your furnace does its job.

When you set your thermostat to provide more heat in your home, you are starting the heating cycle of the furnace. First, the inducer motor starts to purge the heat exchanger of any remaining gases. Next, the hot surface ignitor glows and after a warm-up period the gas valve opens and ignition occurs. A short time later, the blower starts and distributes the warm air throughout the home. When the temperature setting on your thermostat is reached, the gas valve closes, the main burners are turned off, and the blower continues to run until the remaining warm air in the system is distributed. When the blower stops, the heating cycle has ended.

## START-UP AND SHUTDOWN INSTRUCTIONS

### Read the Instructions Below Before Trying to Start the Furnace

#### **WARNING**

*If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury, and/or loss of life.*

- This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
- BEFORE OPERATING**; smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.
- Use only your hand to push the gas control switch to the "on" position. Never use tools. If the switch will not operate by hand, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.
- Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control, which has been under water.

### Operating Instructions:

- STOP! Read the safety information above.
- Set the thermostat to the lowest setting.
- Turn off all electric power to the appliance.
- Remove burner door.
- Move gas control switch to the "OFF" position. Do not force. See Figure 4.
- Wait five (5) minutes to clear out any gas. If you then smell gas, STOP! Follow "B" in the safety information above. If you don't smell gas, go to next step.
- Move gas control switch to the "ON" position. Do not force. See Figure 4.
- Replace burner door.
- Turn on all electric power to the appliance.
- Set thermostat to the desired setting. Burner will light, which may take 30-60 seconds.
- After three (3) trials for ignition, if the appliance will not operate follow the instructions, "TO TURN OFF THE APPLIANCE" and call your service technician or gas supplier.

### To Turn Off the Appliance:

- Set the thermostat to lowest setting.
- Turn off all electric power to the appliance if service is to be performed.
- Remove upper access panel.
- Move gas control switch to the "OFF" position. See Figure 4.
- Replace burner access panel.

#### **WARNING**

*Should overheating occur, or the gas valve fail to shut off, turn the external manual gas valve in the gas supply line to the furnace to the "off" position and let the furnace cool off before shutting off the electrical power supply. Refer to Figure 5.*

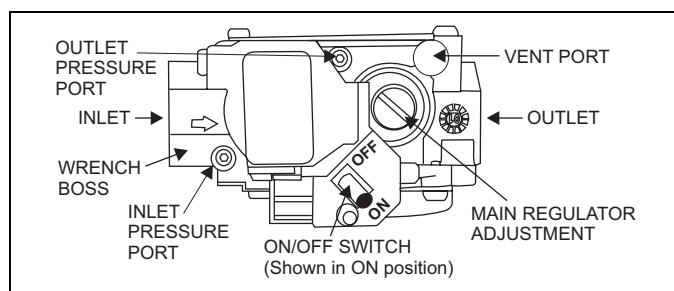


FIGURE 4: Gas Valve

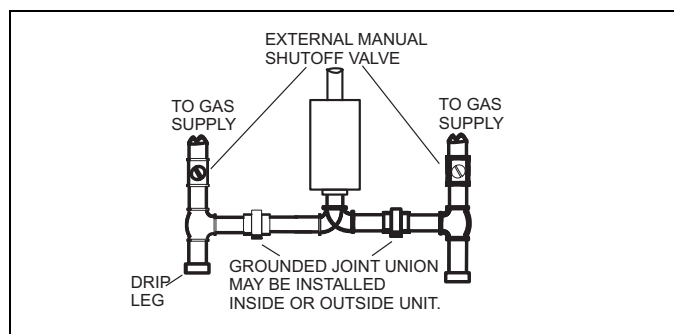


FIGURE 5: Gas Piping

**NOTE:** The spring-loaded safety cut-off switch, mounted under the blower deck will automatically cut off the electrical power supply to the furnace when the blower panel is removed. As a safety precaution, all electrical power and the gas supply to the furnace should be turned off before servicing.

## FURNACE USER MAINTENANCE

**WARNING**

**Before proceeding, be sure the area is well ventilated. Turn the thermostat OFF. If the blower is running, wait until it stops automatically. Turn OFF the gas and electrical power supplies to the furnace. Check all metal parts and surfaces to be sure they have cooled to room temperature before you begin.**

Every time the filters are changed the following items should be visually inspected:

- Check combustion air and vent pipe for blockage or leakage.
- Check all components to be sure they are in good condition and that there are no obvious signs of deterioration.
- Check the drain lines to make sure there are no cracks or leaks.
- Check for dirt or lint on any surfaces or on components. Do not try to clean any of the surfaces or components. Cleaning of the furnace and its components must be done by a qualified service professional.

If, during the inspection of your furnace, you find any of the following conditions:

- Excessive amounts of dust and lint on components.
- Damaged or deteriorated components or surfaces.
- Leaks or blockage in the vent pipe passages.
- Water on any surface inside or outside of the furnace.

Do not operate the furnace, call a certified dealer / servicing contractor to check and / or clean your furnace, or for more information if you have questions about the operation of your furnace.

If all components appear to be in good operating condition, replace the front panels. Turn ON the gas and electrical power supplies to the furnace, and set thermostat to the desired temperature.

**Air Filters**

Dirty filters greatly restrict the flow of air and may cause damage to the moving parts of the furnace. If the filters become clogged the heat exchangers and blower motor could overheat resulting in a potentially dangerous situation. The filters should be checked every 3 months. On new construction, check the filters every week for the first four weeks and every three weeks after that, especially if the indoor fan is running continuously. When replacing the filter(s) you must use filters that are the same size as those recommended in Table 1. Use the following procedure to determine the filter size. Never operate your furnace without a suitable air filter.

1. Measure the furnace width and use that measurement to determine the cabinet width.
  - A 14-1/2" wide cabinet is a "A" cabinet.
  - A 17-1/2" wide cabinet is a "B" cabinet.
  - A 21" wide cabinet is a "C" cabinet.
  - A 24-1/2" wide cabinet is a "D" cabinet.
2. Locate the cabinet size on Table 1 then determine whether you have a bottom or side return air duct using the following method.
  - a. If the return air filter is on the left or right side of the furnace it is a side return
  - b. If the air filter is on the bottom of the furnace then you have a bottom return.

- c. If the air filters are on the bottom and the side of the furnace then you have a bottom and side return. You must replace both air filters. Table 1 will indicate 2 filters by using brackets with the number two (2).
  - d. If the air filters are on both sides of the furnace then you have a two sided return. You must replace both air filters. Table 1 will indicate 2 filters by using brackets with the number two (2).
3. After you determine the cabinet size and what return configuration you have, look up the recommended filter size from Table 1.

**Replacing Filters**

Filters used with this furnace must be installed external to the furnace casing. DO NOT attempt to install filters inside the furnace cabinet.

Some installations may have the air filter in a rack attached to the casing of the furnace or placed in the return air duct. If the filter location or replacement process is not obvious, contact your installer or service technician for assistance. Replace throw away filter(s) with the same size new filter(s). Throw away filter(s) may be replaced with cleanable filter(s) at this time. Cleanable filter(s) may be cleaned as described in the manufacturer instructions or as described below and then re-installed.

**TABLE 1: Filter Sizes**

Cabinet Size	Side (in)	Side (mm)	Bottom (in)	Bottom (mm)
14-1/2" (A)	16 x 25	406 x 635	14 x 25	406 x 635
17-1/2" (B)	16 x 25	406 x 635	16 x 25	406 x 635
17-1/2" (B)	16 x 25	406 x 635	16 x 25	406 x 635
21" (C)	16 x 25	406 x 635	20 x 25	508 x 635
21" (C)	16 x 25	406 x 635	20 x 25	508 x 635
24-1/2" (D)	(2) 16 x 25*	(2) 406 x 635*	22 x 25	559 x 635

\* Some installations of this model require only one filter.

**How to Clean your Filter**

High-velocity filters may be cleaned with a vacuum cleaner or washed with a garden hose. Be sure to shake off excess water and allow filter to completely dry before re-installing the filter.

**Blower Care**

Even with good filters properly in place, blower wheels and motors will become dust laden after long months of operation. The entire blower assembly should be inspected annually. If the motor and wheel are heavily coated with dust, they can be brushed and cleaned with a vacuum cleaner. If the blower cannot be properly cleaned without removing it from the furnace, then this service must be performed by a qualified service agency.

**WARNING**

**Make sure you DO NOT move the clip on weight on the indoor fan wheel when cleaning the wheel. This weight is used to balance the wheel. Moving the weight will cause the fan wheel to vibrate.**

**Motor Lubrication**

The motors in these furnaces are permanently lubricated, and do not require periodic oiling.

## SECTION II: SERVICE AND MAINTENANCE MANUAL

### SAFETY SECTION

The following safety rules must be followed when servicing the furnace.

#### **WARNING**

##### **ELECTRIC SHOCK, FIRE OR EXPLOSION HAZARD**

*Failure to follow safety warnings exactly could result in dangerous operation, serious injury, death or property damage.*

*Improper servicing could result in dangerous operation, serious injury, and death or property damage.*

- Before servicing, disconnect all electrical power to the furnace.
- When servicing controls, label all wires prior to disconnecting. Reconnect wires correctly.
- Verify proper operation after servicing.

### FURNACE MAINTENANCE SECTION

The furnace should be cleaned and adjusted by a certified dealer or qualified service contractor once a year or before the start of every heating season. The following items must be cleaned and serviced or replaced if there are signs of deterioration.

1. The vent terminal.
2. The furnace vent and combustion air intake passageways. Should it be necessary to service the vent/air intake system, the manufacturer recommends this service be conducted by a qualified service agency. The operation of this appliance requires the reassembly and resealing of the vent/air intake system.
3. The furnace burners, ignitor and flame sensor.
4. The condensate collection and disposal system. If any disassembly of components containing flue or vent gases is required, a qualified service agency must perform the service.

### FURNACE CLEANING SECTION

**NOTE:** The cleaning operations listed below must be performed only by a qualified service agency.

#### **Burner Removal/Cleaning**

The main burners should be checked periodically for dirt accumulation. If cleaning is required, follow this procedure:

1. Turn off the electrical power to the unit.
2. Turn off the gas supply at the external manual shut-off valve and loosen the ground union joint.
3. Remove the burner door and remove the burner box cover.
4. Disconnect wires from flame sensor, rollout switch and HSI igniter. Remove igniter carefully, as it is easily broken.
5. Remove the screws that hold the burner box assembly to the vest panel and remove the assembly.
6. Remove burners from the burner assembly.
7. Burners may be cleaned by rinsing in hot water.
8. Reassemble the burners in the reverse order.

### Cleaning the Heat Exchanger

1. Turn off the electrical power to the unit.
2. Turn off the gas supply at the external manual shut-off valve and loosen the ground union joint.
3. Remove the burner door and remove the burner box cover.
4. Disconnect wires from flame sensor, rollout switch and HSI igniter. Remove igniter carefully, as it is easily broken.
5. Remove the screws that hold the burner box assembly to the vest panel and remove the assembly.
6. Remove the vent pipe assembly, vent blower and condensate pan.
7. The heat exchanger is now exposed.
8. With a long flexible wire brush, clean inside each tube at both the top and bottom. The brush must pass around the rear heat exchanger tubes. Then vacuum loose the scale and dirt from each tube.
9. Replace all components in reverse order. Reconnect all wiring.
10. Restore electrical power and gas supply to the furnace.
11. Check furnace operation.

#### **CAUTION**

*Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.*

### Cleaning the Secondary Heat Exchanger

1. Follow steps 1 - 7 under cleaning the Heat Exchanger.
2. Remove the vent piping from the vent blower housing. Disconnect the drain lines from the vent blower housing and from the condensate drain pan. Remove the vent blower housing blower and the condensate pan.
3. Using a stiff wire brush, remove the loose scale or soot from each tube.
4. Vacuum the secondary heat exchanger.
5. Finish the cleaning procedure by following steps 9 - 11 under cleaning the Heat Exchanger.

### SEQUENCE OF OPERATION

The following describes the sequence of operation of the furnace. Refer to Figure 1 for component location.

#### **Continuous Blower**

Cooling/heating thermostats have a fan switch that has an ON and AUTO position. In the ON position the thermostat circuit is completed between terminals R and G. The motor will operate on the speed tap that is connected to the cooling terminal on the control board.


#### **Intermittent Blower - Cooling**

Cooling/heating thermostats have a fan switch that has an ON and AUTO position. In the AUTO position the thermostat circuit is completed between terminals R and G when there is a call for cooling. The motor will operate on the speed tap wire that is connected to the HI COOL terminal on the control board. The fan off setting is fixed at 60 seconds for SEER enhancement.



## Heating Cycle

When the thermostat switch is set on HEAT and the fan is set on AUTO, and there is a call for heat, a circuit is completed between terminals R and W of the thermostat. When the proper amount of combustion air is being provided, the pressure switch will close, the ignition control provides a 17-second warm-up period, the gas valve then opens, the gas starts to flow, ignition occurs and the flame sensor begins its sensing function. The blower motor will energize 30 seconds after the gas valve opens, if a flame is detected. Normal furnace operation will continue until the thermostat circuit between R and W is opened, which causes the ignition system and gas valve to de-energize and the burner flames to be extinguished. The vent motor will operate for an additional 15 seconds and the blower motor will operate for the amount of time set by the fan-off delay jumper located on the control board. See Figure 6. The heating cycle is complete, and ready for the start of the next heating cycle.

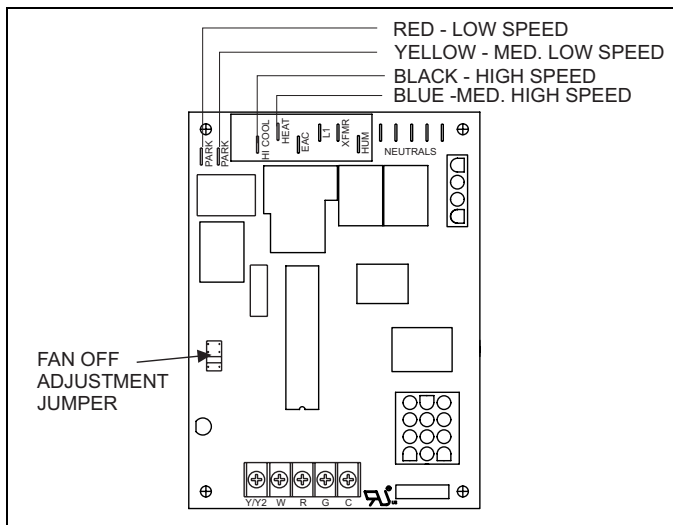

**FIGURE 6:** Typical Heat/Cool Speed Tap Connections

If the flame is not detected within 7 seconds of the gas valve opening, the gas valve is shut off and a retry operation begins. If the flame is lost for 2 seconds during the 10-second stabilization period, the gas valve is shut off and a retry operation begins. During a retry operation, the vent motor starts a 15 second inter-purge and the ignitor warm-up time is extended to 27 seconds. If the flame is established for more than 10 seconds after ignition during a retry, the control will clear the ignition attempt (retry) counter. If three retries occur during a call for heat, the furnace will shut down for one hour. If at the end of the one hour shut down there is a call for heat, the furnace will initiate a normal start cycle. If the problem has not been corrected the furnace will again lockout after three retries.

A momentary loss of gas supply, flame blowout, or a faulty flame probe circuit will result in a disruption in the flame and be sensed within 1.0 seconds. The gas valve will de-energize and the control will begin a recycle operation. A normal ignition sequence will begin after a 15 second inter-purge. If during the five recycles the gas supply does not return, or the fault condition is not corrected the ignition control will lockout for 60 minutes.

During burner operation, a momentary loss of power for 50 milliseconds or longer will de-energize the gas valve. When the power is restored, the gas valve will remain de-energized and the ignition sequence will immediately restart.

## Hot Surface Ignition System

### **WARNING**

#### **HOT SURFACE IGNITION SYSTEM**

***Do not attempt to light this furnace by hand (with a match or any other means). There may be a potential shock hazard from the components of the hot surface ignition system. The furnace can only be lit automatically by its hot surface ignition system.***

## TROUBLESHOOTING

The following visual checks should be made before troubleshooting:

1. Check to see that the power to the furnace and the ignition control module is ON.
2. The manual shut-off valves in the gas line to the furnace must be open.
3. Make sure all wiring connections are secure.
4. Review the sequence of operation. Start the system by setting the thermostat above the room temperature. Observe the system's response. Then use the troubleshooting section in this manual to check the system's operation.

### **WARNING**

***Never bypass any safety control to allow furnace operation. To do so will allow furnace to operate under potentially hazardous conditions.***

***Do not try to repair controls. Replace defective controls with UPG Source 1 Parts.***

***Never adjust pressure switch to allow furnace operation.***

## FURNACE CONTROL DIAGNOSTICS

The furnace has built-in, self-diagnostic capability. If a system problem occurs, a blinking LED shows a fault code. The LED can flash red, green or amber to indicate various conditions. It is located behind a clear view port in the blower compartment door.

The control continuously monitors its own operation and the operation of the system. If a failure occurs, the LED will indicate the failure code. If the failure is internal to the control, the light will stay on continuously. In this case, the entire control should be replaced, as the control is not field repairable.

Flash sequence codes 1 through 10 are as follows: LED will turn "on" for 1/4 second and "off" for 1/4 second. This pattern will be repeated the number of times equal to the code. For example, six "on" flashes equals a number 6 fault code. All flash code sequences are broken by a 2 second "off" period.

**SLOW GREEN FLASH:** Normal operation.

**SLOW AMBER FLASH:** Normal operation with call for heat.

**RAPID RED FLASH:** Twinning error, incorrect 24V phasing. Check twinning wiring.

**RAPID AMBER FLASH:** Flame sense current is below 1.5 microamps. Check and clean flame sensor. Check for proper gas flow.

**1 RED FLASH:** This indicates that flame was sensed when there was not a call for heat. With this fault code the control will turn on both the inducer motor and supply air blower. A gas valve that leaks through or is slow closing would typically cause this fault.

**2 RED FLASHES:** This indicates that the normally open pressure switch contacts are stuck in the closed position. The control confirms these contacts are open at the beginning of each heat cycle. This would indicate a faulty pressure switch or miswiring.

**3 RED FLASHES:** This indicates the normally open pressure switch contact did not close after the inducer was energized. This could be caused by a number of problems: faulty inducer, blocked vent pipe, broken pressure switch hose or faulty pressure switch.

**4 RED FLASHES:** This indicates that a primary or auxiliary limit switch has opened its normally closed contacts. With this fault code the control will operate the supply air blower and inducer. This condition may be caused by: dirty filter, improperly sized duct system, incorrect blower speed setting, incorrect firing rate or faulty blower motor.

**5 RED FLASHES:** This fault is indicated if the normally closed contacts in the rollout switch opens. The rollout control is manually reset. If it has opened, check for proper combustion air, proper inducer operation, and primary heat exchanger failure or burner problem. Be sure to reset the switch after correcting the failure condition.

**6 RED FLASHES:** This indicates that after the unit was operating, the pressure switch opened 4 times during the call for heat. If the main blower is in a "Delay on" mode it will complete it, and any subsequent delay off period. The furnace will lock out for one hour and then restart.

**7 RED FLASHES:** This fault code indicates that the flame could not be established. This no-light condition occurred 3 times (2 retries) during the call for heat before locking out. Low gas pressure, faulty gas valve, faulty hot surface ignitor or burner problem may cause this. The furnace will lock out for one hour and then restart.

**8 RED FLASHES:** This fault is indicated if the flame is lost 5 times (4 recycles) during the heating cycle. This could be caused by low gas pressure or faulty gas valve. The furnace will lock out for one hour and then restart.

**9 RED FLASHES:** Indicates reversed line voltage polarity or grounding problem. Both heating and cooling operations will be affected. Check polarity at furnace and branch. Check furnace grounding. Check that flame probe is not shorted to chassis.

**10 RED FLASHES:** Gas valve energized with no call for heat. Check gas valve and gas valve wiring.

**11 RED FLASHES:** This indicates that a primary or auxiliary limit switch has opened its normally-closed contacts and has remained open for more than five minutes. This condition is usually caused by a failed blower motor or blower wheel.

**4 AMBER FLASHES:** Y present with no G call. Normally, both Y and G are energized on call for cooling. If a Y signal is present with no G signal, check to see that the wire from the G terminal on the board to the wall thermostat has not broken or disconnected.

**STEADY ON RED:** Control failure. Replace control board.

**60-MINUTE AUTOMATIC RESET FROM LOCKOUT:** This control includes a "watchdog" type circuit that will reset from a lockout condition after 60 minutes. Operational faults 6,7,8 will be reset. This provides protection to an unoccupied structure if a temporary condition exists causing a furnace malfunction. An example would be a low incoming gas supply pressure preventing unit operation. When the gas pressure is restored, at some point the "watchdog" would restart the unit and provide heat for the house.

**NOTE:** If a flame is detected the control flashes the LED for 1/8 of a second and then enters a flame stabilization period.

IGNITION CONTROL (P/N 031-01973-000)  
Normal flame sense current is approximately  
3.7 microamps DC ( $\mu$ A)  
Low flame signal warning starts at 1.5 microamps.  
Low flame signal control lockout point is  
0.9 microamps DC ( $\mu$ A)

## DIAGNOSTIC FAULT CODE STORAGE AND RETRIEVAL

The control in this furnace is equipped with memory that will store up to five error codes to allow a service technician to diagnose problems more easily. This memory will be retained even is power to the furnace is lost. **This feature should only be used by a qualified service technician.**

The control stores up to five separate error codes. If more than five error codes have occurred since the last reset, only the five most recent will be retained. The furnace control board has a button, labeled "LAST ERROR" that is used to retrieve error codes. This function will only work if there are no active thermostat signals. So any call for heating, cooling or continuous fan must be terminated before attempting to retrieve error codes.

To retrieve the error codes, push the LAST ERROR button. The LED on the control will then flash the error codes that are in memory, starting with the most recent. There will be a two-second pause between each flash code. After the error codes have all been displayed, the LED will resume the normal slow green flash after a five second pause. To repeat the series of error codes, push the button again.

If there are no error codes in memory, the LED will flash two green flashes. To clear the memory, push the LAST ERROR button and hold it for more than five seconds. The LED will flash three green flashes when the memory has been cleared, then will resume the normal slow green flash after a five-second pause.




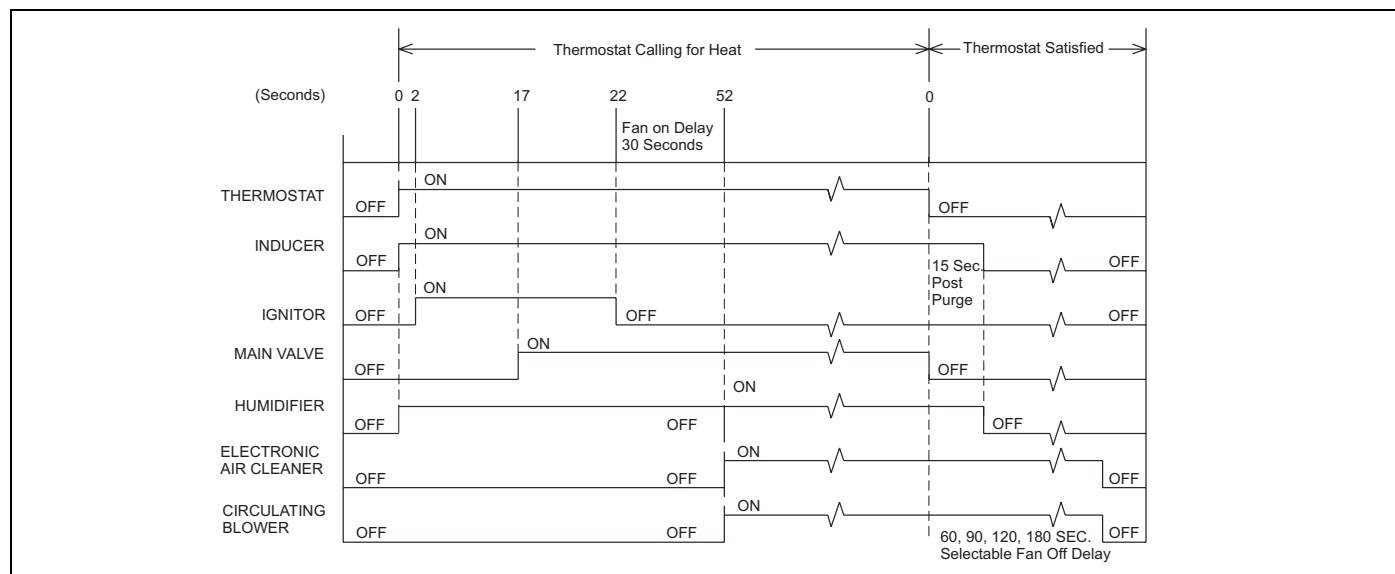


FIGURE 7: Furnace Control Event Schedule

## SECTION III: REPLACEMENT PARTS LIST

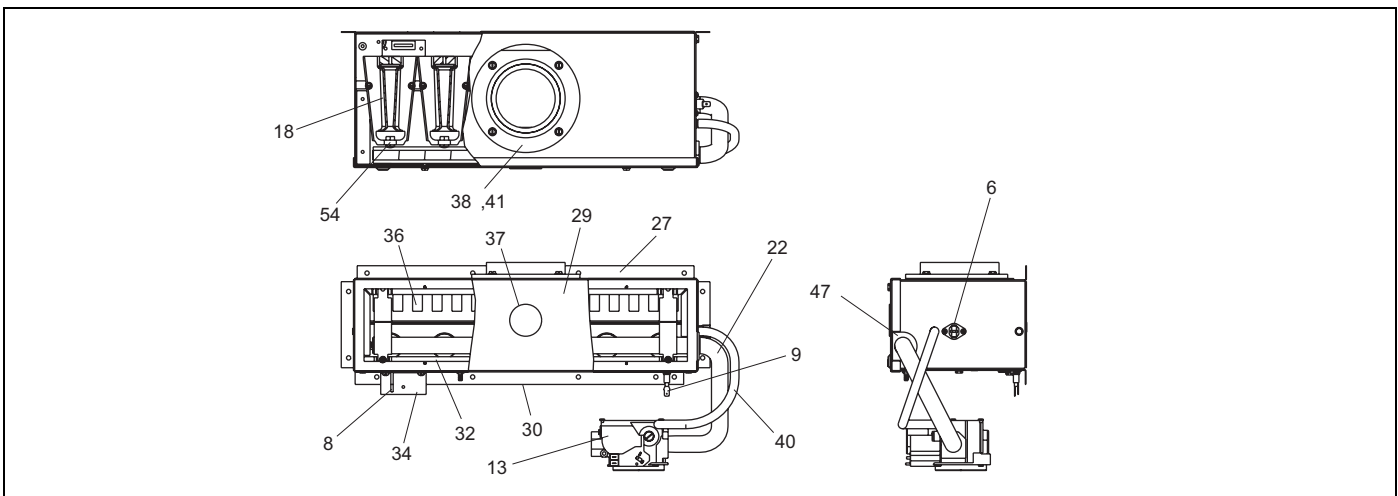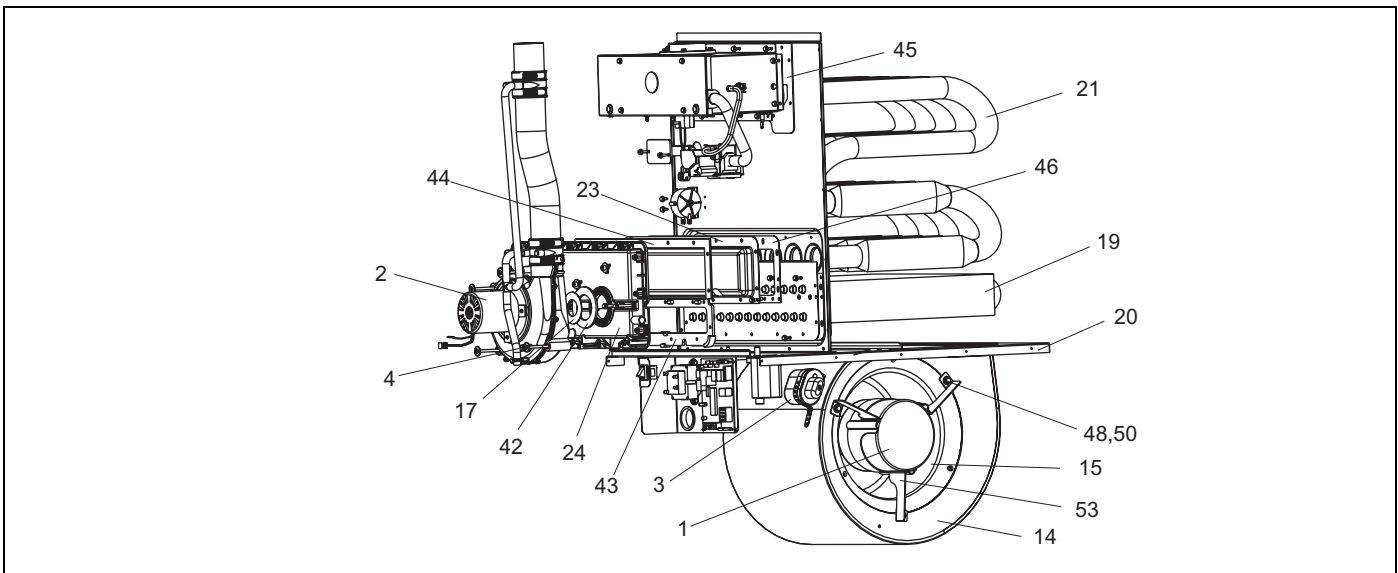

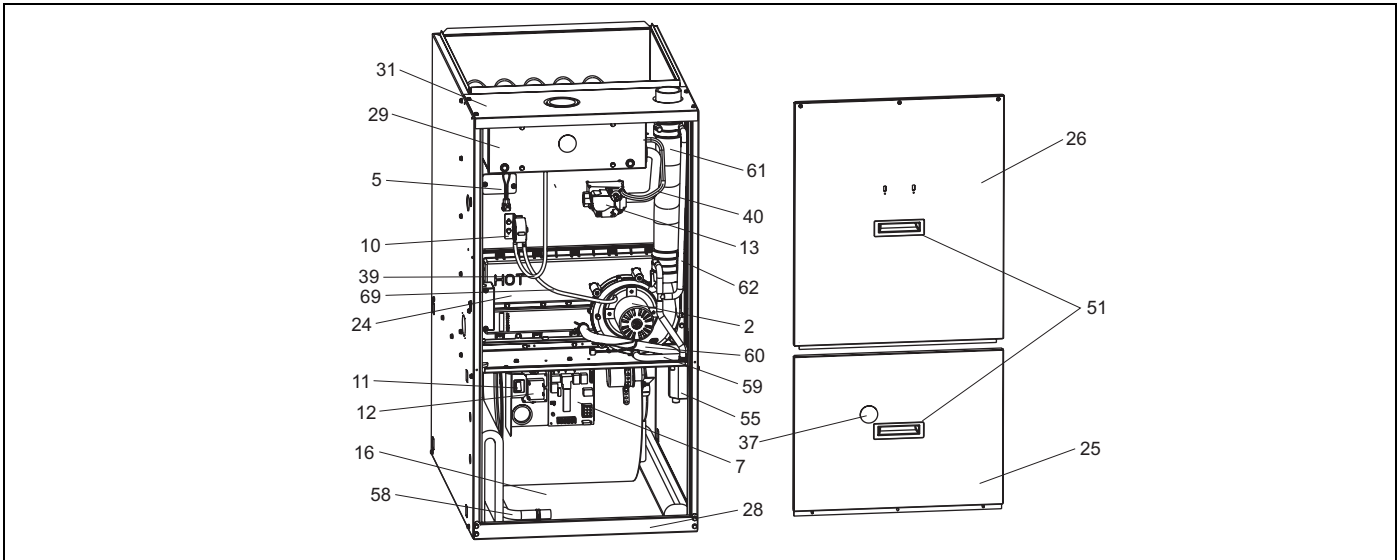

ITEM	DESCRIPTION
<b>MOTOR</b>	
1	MOTOR,DIRECT DRIVE BLOWER
2	MOTOR, INDUCER ASS'Y
<b>ELECTRICAL</b>	
3	CAPACITOR, RUN
4	SWITCH, LIMIT (INDUCER)
5	LIMIT, TEMPERATURE (Primary)
6	LIMIT, FLAME ROLL-OUT
7	CONTROL, FURNACE MODULE
8	IGNITER
9	SENSOR, FLAME
10	SWITCH, PRESSURE
11	SWITCH, DOOR
12	TRANSFORMER
13	VALVE, GAS
<b>AIR MOVING</b>	
14	HOUSING, BLOWER
15	WHEEL, BLOWER
<b>FABRICATED PARTS</b>	
16	PANEL, BLOCK-OFF
17	COMBUSTION BLWR RESTRICTOR
18	BURNER, MAIN GAS
19	COIL, CONDENSING
20	SHELF, BLOWER
21	HEAT EXCHANGER ASS'Y
22	MANIFOLD, GAS
23	SHIELD, PAN
24	PAN, CONDENSATE
25	PANEL, BLOWER ACCESS
26	ACCESS PANEL, UPPER
27	WRAPPER, BURNER BOX
28	CHANNEL, TOE PLATE
29	COVER, GAS CONTROL
30	BOTTOM PANEL, BURNER BOX
31	PANEL, TOP
32	SUPPORT, BURNER
33	PLATE, DIFFUSER
34	BRACKET, IGNITER
35	
36	

ITEM	DESCRIPTION
<b>MISCELLANEOUS</b>	
37	PLUG, WINDOW, CLEAR -1.5"
38	CONNECTOR AIR INTAKE 2"
39	TUBING, SILICONE (Gray, .188 ID, 2 ft. Req'd)
40	TUBING, PREFORMED
41	GASKET, AIR INTAKE
42	GASKET, COMBUSTION BLOWER
43	GASKET, CONDENSATE PAN
44	GASKET, UPPER CONDENSATE PAN
45	GASKET, GAS CONTROLS
46	GASKET (COND. COIL/LOWER PAN) (2 Req'd)
47	GROMMET, MANIFOLD SEAL
48	GROMMET, MOTOR (3 Req'd)
49	GROMMET, 1/2" DIA.
50	FERRULE, MOTOR MOUNT(3 Req'd)
51	HANDLE, DOOR (2 Req'd)
52	HARNESS, MAIN WIRING
53	MOUNT, 1 PC. MOTOR
54	ORIFICE, BURNER (Natural #45)
55	TRAP, CONDENSATE
56	WIRING DIAGRAM
57	DRAIN TUBE ASSY, DOUBLE GUTTER
58	DRAIN TUBE, CONDENSATE TRAP
59	DRAIN TUBE, COMBUSTION BLOWER
60	DRAIN TUBE, CONDENSATE PAN
61	VENT TUBE
62	DRAIN ASSY, BLOWER EXHAUST
63	LOCKNUT, CONDUIT (1/2")
64	ADAPTER, INSERT
65	BUSHING, THREADED
66	WASHER, FLAT FIBERGLASS (2 Req'd)
67	2" PVC
68	LOGO/BEZEL PLATE ASSY
69	TUBING, SILICONE (Gray, .188 ID, 1.25 ft. Req'd)
70	FILTER (.75 x 16 x 25)
71	FILTER RACK

NOTE: \*Not Shown

Major components and suggested stocking items are shown with shaded item number.



## FIELD INSTALLED ACCESSORIES - NON-ELECTRICAL

FIELD INSTALLED ACCESSORIES - NON-ELECTRICAL		
MODEL NO.	DESCRIPTION	USED WITH
1NP0347	PROPANE (LP) CONVERSION KIT	ALL MODELS EXCEPT 135 MBH
1NP0349		135 MBH ONLY
1CT0302	CONCENTRIC INTAKE/VENT 2"	40, 60, 80, 100 INPUT MBH
1CT0303	CONCENTRIC INTAKE/VENT 3"	120, 135 MBH
1PS0307	HIGH ALTITUDE PRESSURE SWITCH KIT (Does Not Include Orifices)	80, 100 MBH
1PS0309		60, 120 MBH
1PS0322		40, 135 MBH
1BR0414	EXTERNAL BOTTOM FILTER RACK	14-1/2" CABINETS
1BR0417		17-1/2" CABINETS
1BR0421		21" CABINETS
1BR0424		24-1/2" CABINETS
1NK0301	CONDENSATE NEUTRALIZER KIT	ALL MODELS
1SF0101	EXTERNAL SIDE RETURN FILTER RACK	ALL MODELS
1HT0901	SIDEWALL VENT TERMINATION KIT	ALL MODELS

## REPLACEMENT PART CONTACT INFORMATION

This is a generic parts list. To request a complete parts list, refer to the contact information below:

- Visit our website at [www.source1parts.com](http://www.source1parts.com) for the following information:
  1. Search for a part or browse the catalog.
  2. Find a dealer or distributor.
  3. Customer Service contact information.
    - a. Click on the "Brand Links" button
    - b. Click on the "Customer Service" button
- You can contact us by mail. Just send a written request to:

**York International**  
**Consumer Relations**  
**5005 York Drive**  
**Norman, OK 73069**

## SECTION IV: WIRING DIAGRAM

BLOWER SPEED CHART  
(CHARTE DE VITESSE  
DE LA SOUFFLERIE)

INPUT (ENTRÉE)	ON (MARCHÉ)	COOL (FROID)	HEAT (CHAUD)
040	1200	BLK (NOIR)	YEL (JAUNE)
060	1200	BLK (NOIR)	YEL (JAUNE)
080	1200	BLK (NOIR)	YEL (JAUNE)
080	1600	BLK (NOIR)	YEL (JAUNE)
080	2000	BLK (NOIR)	YEL (JAUNE)
100	1600	BLK (NOIR)	YEL (JAUNE)
100	2000	BLK (NOIR)	YEL (JAUNE)
120	2000	BLK (NOIR)	YEL (JAUNE)
135	2000	BLK (NOIR)	YEL (JAUNE)

WIRE COLOR KEY  
(CODE DE COULEUR  
DU FILAGE)

BLK (NOIR)	BLK (NOIR)
BLU (BLEU)	BLU (BLEU)
BRN (BRUN)	BRN (BRUN)
GRN (VERT)	GRN (VERT)
WHT (BLANC)	WHT (BLANC)
YEL (JAUNE)	YEL (JAUNE)
RED (ROUGE)	RED (ROUGE)
PRP (POURPRE)	PRP (POURPRE)


CAUTION -  
OPEN ALL DISCONNECTS BEFORE  
SERVICING THIS UNIT

PRÉCAUTION -  
OUVREZ LES DISJONCTEURS AVANT  
DE PROCÉDER AVEC LE SERVICE

90+ UPFLOW FURNACE  
(90+ FOURNAISE VENTILÉE  
PAR LE HAUT)

105210-UWD-A-1204

LADDER DIAGRAM  
(DIAGRAMME ÉLÉMENTAIRE)

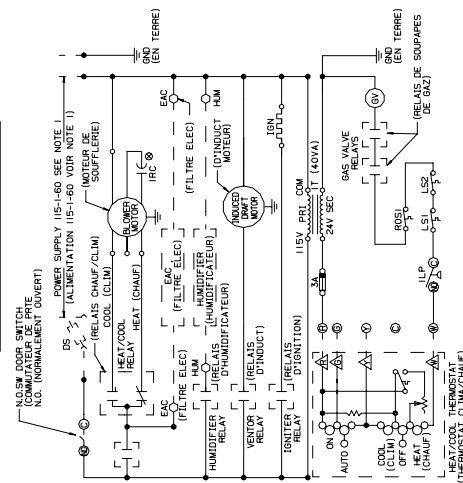


# NOTES:

1. ALL FIELD WIRING PER (A) NATIONAL ELEC. CODE (NEC) AND/OR (B) LOCAL OR CITY CODES.
2. IF ANY OF THE ORIGINAL WIRING IS SUPPLIED WITH THE FURNACE MUST BE MAINTAINED IN PLACE. ANY REPLACEMENT WIRING MUST BE IDENTICAL TO THE ORIGINAL WIRING. THE REPLACEMENT WIRING MUST BE IDENTICAL TO THE ORIGINAL WIRING. THE REPLACEMENT WIRING MUST BE IDENTICAL TO THE ORIGINAL WIRING.
3. CONNECTORS SUITABLE FOR COPPER CONDUCTORS ONLY.
4. ALL REPLACEMENT COMPONENTS MUST BE PROPERLY GROUNDED.
5. PROVIDE DISCONNECTS FOR ALL POWER SUPPLIES.
6. MOTORS ARE INHERENTLY PROTECTED.

# NOTES:

1. TOUT FILAGE EN CHANTIER SELON: (A) CODE ÉLEC. NATIONAL (NEC) ET/OU (B) CODE ÉLEC. LOCAL ET MANIPULAIRE.
2. SI LE FILAGE DOIT ÊTRE REMPLACÉ, LE REMPLACEMENT DOIT ÊTRE IDENTIQUE AU FILAGE D'ORIGINE. LE REMPLACEMENT DOIT ÊTRE IDENTIQUE AU FILAGE D'ORIGINE. LE REMPLACEMENT DOIT ÊTRE IDENTIQUE AU FILAGE D'ORIGINE.
3. SEULEMENT DES MÂTTES POUR FIL DE CUivre.
4. TOUTE COMPOSANTE DE REMPLACEMENT DOIT ÊTRE BIEN MISSE EN TERRE.
5. FOURNISSEZ LES DISJONCTEURS POUR L'ALIMENTATION.
6. LES MOTEURS SONT PROTÉGÉS DE PAR LEUR CONCEPTION.

CONNECTION DIAGRAM  
(DIAGRAMME DE RACCORDEMENT)

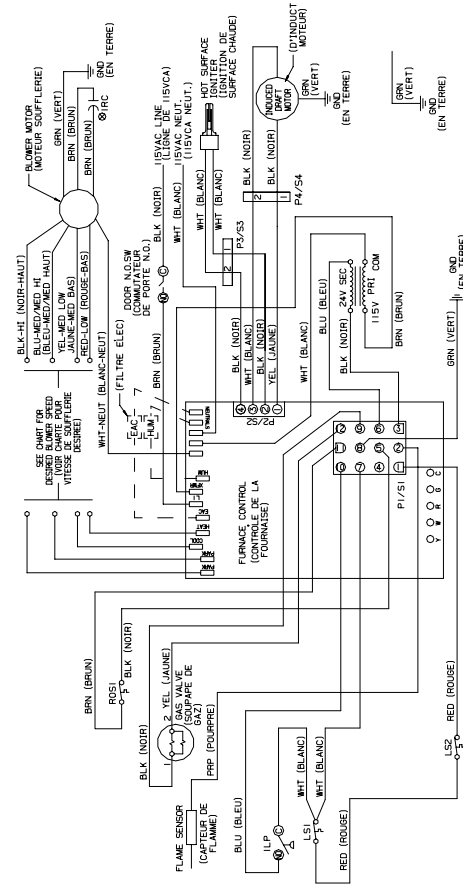

# LEGÈND

- DS DISCONNECT SWITCH  
GV GAS VALVE  
IPV PRESSURE SWITCH BURNER BOX/VENTOR  
IRV PRESSURE SWITCH BURNER BOX/VENTOR  
IT TRANSFORMER, 40VA  
P1/S1 12 PIN PLUS & SOCKET ON IGNITION CONTROL BOARD  
P2/S2 4 PIN PLUS & SOCKET ON IGNITION CONTROL BOARD  
P3/S3 2 PIN PLUS & SOCKET AT HOT SURFACE IGNITOR  
P4/S4 2 PIN PLUS & SOCKET AT HOT SURFACE IGNITOR  
LS1 PRIMARY LIMIT SWITCH  
LS2 PRIMARY LIMIT SWITCH  
RS1 ROLL OUT SWITCH

- DS DISCONNECT SWITCH  
GV GAS VALVE  
IPV PRESSURE SWITCH BURNER BOX/VENTOR  
IRV PRESSURE SWITCH BURNER BOX/VENTOR  
IT TRANSFORMER, 40VA  
P1/S1 12 PIN PLUS & SOCKET ON IGNITION CONTROL BOARD  
P2/S2 4 PIN PLUS & SOCKET ON IGNITION CONTROL BOARD  
P3/S3 2 PIN PLUS & SOCKET AT HOT SURFACE IGNITOR  
P4/S4 2 PIN PLUS & SOCKET AT HOT SURFACE IGNITOR  
LS1 PRIMARY LIMIT SWITCH  
LS2 PRIMARY LIMIT SWITCH  
RS1 ROLL OUT SWITCH

# LEGÈND

- DS DISCONNECT SWITCH  
GV GAS VALVE  
IPV PRESSURE SWITCH BURNER BOX/VENTOR  
IRV PRESSURE SWITCH BURNER BOX/VENTOR  
IT TRANSFORMER, 40VA  
P1/S1 12 PIN PLUS & SOCKET ON IGNITION CONTROL BOARD  
P2/S2 4 PIN PLUS & SOCKET ON IGNITION CONTROL BOARD  
P3/S3 2 PIN PLUS & SOCKET AT HOT SURFACE IGNITOR  
P4/S4 2 PIN PLUS & SOCKET AT HOT SURFACE IGNITOR  
LS1 PRIMARY LIMIT SWITCH  
LS2 PRIMARY LIMIT SWITCH  
RS1 ROLL OUT SWITCH

- DS DISCONNECT SWITCH  
GV GAS VALVE  
IPV PRESSURE SWITCH BURNER BOX/VENTOR  
IRV PRESSURE SWITCH BURNER BOX/VENTOR  
IT TRANSFORMER, 40VA  
P1/S1 12 PIN PLUS & SOCKET ON IGNITION CONTROL BOARD  
P2/S2 4 PIN PLUS & SOCKET ON IGNITION CONTROL BOARD  
P3/S3 2 PIN PLUS & SOCKET AT HOT SURFACE IGNITOR  
P4/S4 2 PIN PLUS & SOCKET AT HOT SURFACE IGNITOR  
LS1 PRIMARY LIMIT SWITCH  
LS2 PRIMARY LIMIT SWITCH  
RS1 ROLL OUT SWITCH

# Limited Warranty

UPG warrants this product to be free from defects in factory workmanship and material under normal use and service and will, at its option, repair or replace any parts that prove to have such defects according to the terms outlined on this warranty. This warranty covers only the equipment described by the Product Model Number and Serial Number listed on the Warranty Registration Card.

UPG warrants the primary heat exchangers in the product to be free from defects in factory workmanship and material under normal use and service and will at its option, repair or furnish a replacement heat exchanger, either new or reconditioned, that meets the intended fit, use and function of the original heat exchanger for any heat exchanger furnished by UPG which proves to have such defects within the duration of warranty coverage. Alternatively, UPG may, at its option, extend a replacement allowance to be applied toward the purchase of a new furnace or packaged unit marketed by UPG. The exact amount of the allowance will be determined at the discretion of UPG, based upon current market conditions, but in no case shall this allowance exceed thirty (30) percent of the original consumer purchase price of the furnace, excluding such items as ductwork, wiring, piping and installation costs. UPG shall have no responsibility hereunder for installation, shipping, handling or other charges except as specifically provided herein.

For your benefit and protection, return the Warranty Registration Card to UPG promptly after installation. This will initiate the warranty period and allow us to contact you, should it become necessary. In the absence of a recorded Warranty Registration Card, the warranty period will begin upon product shipment from UPG.

This warranty extends only to the original consumer purchaser and is non-transferable. For this warranty to apply, the product must be installed according to UPG recommendations and specifications, and in accordance with all local, state, and national codes; and the product must not be removed from its place of original installation. The warranty period for repair or replacement parts provided hereunder shall not extend beyond the warranty period stated on this warranty

FURNACE TYPE		HEAT EXCHANGER			PARTS
		Residential Applications		Non-Residential Applications	
		Original Owner	Subsequent Owner		
90%	GM9 / GY9	Lifetime	20	10	5
	GF9	20	N/A	10	5

UPG strongly recommends regular periodic preventative maintenance on this equipment. The person most familiar with the equipment in your HVAC system is a UPG dealer. The UPG dealer can ensure your maintenance program meets the conditions of the "UPG Warranty", maximize the efficiency of the equipment, and service your unit within the mandated guidelines with regard to unlawful discharge of refrigerants into the atmosphere.

This warranty applies only to products installed in the United States and Canada.

## EXCLUSIONS

This warranty does not cover any:

1. Shipping, labor, or material charges.
2. Damages resulting from transportation, installation, or servicing.
3. Damages resulting from accident, abuse, fire, flood, alteration, or acts of God (tampering, altering, defacing or removing the product serial number will serve to void this warranty).
4. Damages resulting from use of the product in a corrosive atmosphere.
5. Damages resulting from inadequacy or interruption of electrical service or fuel supply, improper voltage conditions, blown fuses, or other like damages.
6. Cleaning or replacement of filters.
7. Damages resulting from failure to properly and regularly clean air and/or water side of condenser and evaporator.
8. Damages resulting from: (I) freezing of condenser water or condensate; (II) inadequate or interrupted water supply; (III) use of corrosive water; (IV) fouling or restriction of the water circuit by foreign material or like causes.
9. Damages resulting from operation with inadequate supply of air or water.
10. Damages resulting from use of components or accessories not approved by UPG (vent dampers, etc.).
11. Increase in fuel or electric cost.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

SOME STATES DO NOT ALLOW THE DISCLAIMER OF IMPLIED WARRANTY, SO THAT THE ABOVE DISCLAIMER MAY NOT APPLY TO YOU.

SOME STATES ALLOW ONLY A PARTIAL LIMITATION ON IMPLIED WARRANTIES TO LIMIT THE DURATION OF IMPLIED WARRANTIES TO THE DURATION OF THE EXPRESS WARRANTY. IN SUCH STATES, THE DURATION OF IMPLIED WARRANTIES IS HEREBY EXPRESSLY LIMITED TO THE DURATION OF THE EXPRESS WARRANTY ON THE FACE HEREOF.

IN NO EVENT, WHETHER AS A RESULT OF BREACH OF WARRANTY OR CONTRACT, TORT (INCLUDING NEGLIGENCE) STRICT LIABILITY OR OTHERWISE, SHALL UPG BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF USE OF THE EQUIPMENT OR ASSOCIATED EQUIPMENT, LOST REVENUES OR PROFITS, COST OF SUBSTITUTE EQUIPMENT OR COST OF FUEL OR ELECTRICITY. THE ABOVE LIMITATIONS SHALL INURE TO THE BENEFIT OF UPG'S SUPPLIERS AND SUBCONTRACTORS. THE ABOVE LIMITATION ON CONSEQUENTIAL DAMAGES SHALL NOT APPLY TO INJURIES TO PERSONS IN THE CASE OF CONSUMER GOODS.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, OR FOR STRICT LIABILITY IN TORT, SO THAT THE ABOVE EXCLUSIONS AND LIMITATIONS MAY NOT APPLY TO YOU.

UPG DOES NOT ASSUME, OR AUTHORIZE ANY OTHER PERSON TO ASSUME FOR UPG, ANY OTHER LIABILITY FOR THE SALE OF THIS PRODUCT.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

For Owner's Information:

PRODUCT MODEL NO. \_\_\_\_\_ INSTALLATION DATE \_\_\_\_\_  
UNIT SERIAL NO. \_\_\_\_\_ INSTALLING DEALER \_\_\_\_\_