



MOTO™ EM28 / EM330


Quick Ref User Guide

HELLOMOTO

Introducing your new **MOTO™** EM330 wireless phone! It's packed with entertainment and music features.

- **Hi-Speed Music on the Highway** – Use the music player (page 50) to set your playlist for your morning commute. Or, use the FM Radio (page 54) to listen to your favourite music or news programmes. With a stereo wired headset or high quality **Bluetooth®** stereo headset, listening has never been easier.
- **Dedicated Music Keys and Touch-Sensitive Keys** – When your phone is **open**, use the dedicated music key (page 50) or when your phone is **closed** use the touch-sensitive music keys (page 51), to control music play.
- **EDGE Hi-Speed Transfer** – Quickly transfer music and media from your PC to your phone (page 49).
- **Connect on So Many Levels** – Whether it's with work or friends, stay connected with voice (page 37) and messaging (page 46).
- **Camera** – Capture key moments with **photos** (page 55) and **videos** (page 57).
- **My Phone, My Way** – Customise the look and sound of your phone (page 32).
- **Convenient Extras** – Whether your at work or home, make use of handy tools like Contacts, Calculator, Alarm Clock, Calendar and others (page 61).

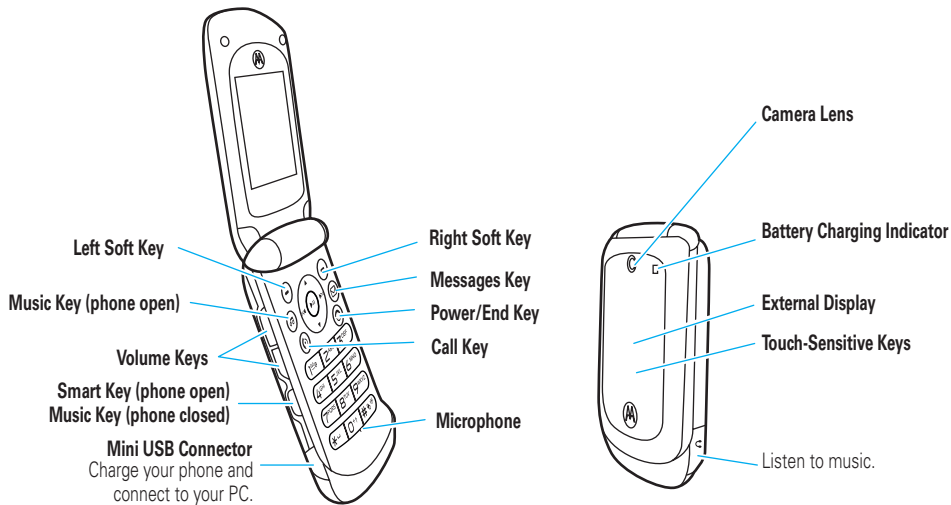

Here's a quick anatomy lesson:




A few menu basics:





Home Screen

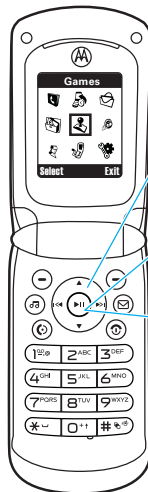

- 1 Press & hold the **Power Key**  until the display lights up to turn on your phone.
- 2 Press the **Centre Key**  to open the **Main Menu**.

Main Menu



- 3 Press the **Navigation Key**  up/down/left/right to highlight a menu feature.
- 4 Press the **Centre Key**  to select it.
- 5 In some list views, such as your Message Inbox or Contacts list, the  symbol shows at the bottom of the screen. This indicates that menu options are available. Press the centre key  to display the menu options.

This is a typical home screen and main menu layout. **Your phone may be a little different.**

www.hellomoto.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft and Windows are registered trademarks of Microsoft Corporation; and Windows XP and Windows Media are trademarks of Microsoft Corporation. Macintosh is a registered trademark of Apple Computer, Inc. All other product or service names are the property of their respective owners. **WiFi** is a Certification Mark of the Wireless Fidelity Alliance, Inc.

© 2008 Motorola, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel or otherwise, any license under the copyrights, patents or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 68004098015

contents

menu map	7	store a number	24	answer options	32
Safety and		call a stored number	24	wallpaper	32
General Information	9	basics	25	screen saver	33
FCC Notice	13	home screen	25	colour setting	33
Use and Care	14	external display	26	display settings	33
EU Conformance	15	side keys	27	backlight	33
get started	17	hands-free	27	MyMenu	34
about this guide	17	codes & passwords	28	more customising	34
SIM card	18	lock & unlock phone	28	calls	37
memory card	18	memory card	29	redial a number	37
battery	19	tips & tricks	30	recent calls	37
turn it on & off	23	customise	31	return a missed call	38
make a call	23	change home screen		call waiting	38
answer a call	23	shortcuts	31	quick dial	38
adjust volume	24	change main menu		notepad	39
change ring alert	24	appearance	31	emergency calls	39
		ring styles & alerts	31	call times	39

headset	40	camera	55
more calling	41	video camera	57
enter text	42	WebAccess	58
set entry modes	42	fun & games	59
iTAP™ method	44	tools	61
tap method	44	contacts	61
numeric method	45	personal organiser	61
symbol method	45	network	63
delete letters & words	45	connections	64
messages	46	Bluetooth® wireless	64
send a message	46	cable connections	67
receive a message	47	SAR Data	70
voicemail	47	OSS Information	71
more messaging	47	WHO Information	73
entertainment	49	Driving Safety	74
get music	49	index	75
music player	50		
music	51		
sounds	52		
FM radio	54		

menu map

main menu



Contacts



Recent calls

- Received calls
- Dialed calls
- NotePad
- Call times
- Call cost
- Data times
- Data volumes



Messages

- Create
- Inbox
- Draft
- Outbox
- Quick notes
- Voicemail
- Browser msgs
- Info services
- MMS templates



Extras

- Calculator
- MyMenu
- Alarm clock
- Stop watch
- Chat *
- Dialling services *
- Calendar



Games & Apps



WebAccess

- Start browser
- Web shortcut
- Go to URL
- Web session
- Stored pages
- History
- General setting



Multimedia

- Camera
- Pictures
- Sounds
- Music
- FM radio
- Video Camera
- Videos



Personalise

- Home screen
- Main menu
- Colour Setting
- Greeting
- Wallpaper
- Screensaver
- Quick dial







Settings

- (see next page)


* Network Dependent


This is the standard main menu layout.
Your phone's menu may be different.

settings menu


-  **Easy menu ***
-  **Ring style**
 - Style
 - Style Detail
-  **Call divert**
 - Voice calls
 - Fax calls *
 - Data calls *
 - Cancel all
 - Divert status
-  **In-call setup**
 - In-call timer
 - My caller ID
 - Call cost *
 - Answer options
 - Call waiting
 - Hearing aid *


* Network Dependent

-  **Initial setup**
 - Time and date
 - Auto Redial
 - Display settings
 - Backlight
 - Scroll
 - Language
 - DTMF
 - TTY setup *
 - Master reset
 - Master clear
 - Format additional storage device


-  **Phone status**
 - My numbers
 - Active line *
 - Battery meter

-  **Headset**
 - Auto answer

-  **Network**
 - New network
 - Network setup
 - Avail. networks
 - My network list
 - Service tone
 - Call drop tone
 - Band selection

-  **Security**
 - Phone lock
 - Lock Smart Key
 - Call barring
 - SIM PIN
 - New passwords
 - Restrict Calls
 - Block List

-  **Easy Prefix ***
 - Auto change *
 - Pref. op *

-  **Java Settings**
 - Java System
 - InvisibleNET
 - Delete All Apps
 - App Backlight
 - App Vibration
 - App Volume
 - Java DNS Address

-  **Bluetooth Link**
 - Find me
 - Audio devices
 - Device history
 - Setup

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.¹

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate using your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of antennas, modifications or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case or body harness. If you do not use a body-worn accessory supplied or approved by Motorola - or if you hang your mobile device from a lanyard around your neck - keep the mobile device and its antenna at least 2.5 centimetres (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimetres (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

¹ The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2007.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in-flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your doctor before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimetres (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimise the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your health care provider.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue use if you cannot concentrate on driving.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- Do not place a mobile device in the airbag deployment area. Responsible driving practices can be found in the “Smart Practices While Driving” section at the end of this guide and/or at the Motorola web site: www.motorola.com/callsmart.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Operational Warnings

Obey all posted signs when using mobile devices in public areas.







Potentially Explosive Atmospheres


Areas with potentially explosive atmospheres are often but not always posted and can include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities or areas where the air contains chemicals or particles, such as grain, dust or metal powders.

When you are in such an area, turn off your mobile device and do not remove, install or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in a rubbish bin.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger or mobile device get wet.

Symbol	Definition
	Listening at full volume to music or voice through a headset may damage your hearing.

Batteries and Chargers

Caution: Improper treatment or use of batteries may present a danger of fire, explosion, leakage or other hazard. For more information, see the "Battery Use & Battery Safety" section in this user's Guide.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service centre.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts or if you have a family history of such occurrences, please consult with your doctor before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour and stop use if you are very tired.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a doctor.

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.

- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use and Care

To care for your Motorola phone, please keep it away from



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.



extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



microwaves

Don't try to dry your phone in a microwave oven.



dust and dirt

Don't expose your phone to dust, dirt, sand, food or other inappropriate materials.



cleaning solutions

To clean your phone, use only a dry soft cloth. Do not use alcohol or other cleaning solutions.



the ground


Don't drop your phone.

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

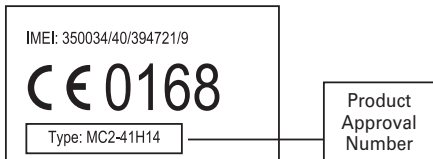

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

Disposal of your Mobile Device and Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets or batteries) with your household waste. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Centre in your region. Details of Motorola approved national recycling schemes and further information on Motorola recycling activities can be found at: www.motorola.com/recycling.

Disposal of your Mobile Device Packaging and User's Guide

Product packaging and user's guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.





get started


about this guide

This guide shows how to locate a menu feature as follows:

Find it:  >  **Recent calls** > **Received calls**

This means that, from the home screen:

- 1 Press the *centre key*  to open the main menu.
- 2 Scroll to  **Recent calls** and press the centre key .
- 3 Scroll to **Received calls** and press the centre key .

Tip: Press the centre key  or **Select** to select a highlighted option.

symbols



This means a feature is network/subscription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

SIM card


Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and contacts. It can also contain your voicemail and text message settings.

If you put your SIM card in another phone, that phone uses your phone number.


Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water and dirt.

Tip: Make sure your SIM card is fully inserted into the phone before installing the battery.


1

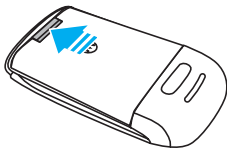

2

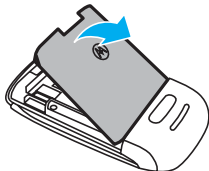

3

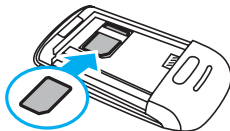

Tip: There is a small hole at the side of the battery door that you can use to help remove the battery door.

memory card

You can use a removable microSD memory card (up to 2 GB) with your phone to store and retrieve multimedia objects, such as music and pictures.




Note: Your phone supports up to 2 GB microSD memory cards (greater than 1 GB capacity is guaranteed for SanDisk microSD cards only). We recommend that you use Motorola approved memory cards only, such as SanDisk memory cards. Other

memory cards may not be compatible with your phone.

To install the memory card, make sure the memory card's metal contacts are facing down.

Slide the top of the memory card under the metal band and into the holder. **To remove the memory card**, slide the card back out of the holder.

Tip: You do not need to remove the battery to install or remove the memory card.

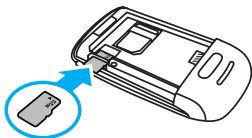

battery issues arise from improper handling of batteries and particularly from the continued use of damaged batteries.

DON'Ts

- **Don't disassemble, crush, puncture, shred or otherwise attempt to change the form of your battery.**
- **Don't let the phone or battery come in contact with water.** Water can get into the phone's circuits, leading to corrosion. If the phone and/or battery get wet, have them checked by your service provider or contact Motorola even if they appear to be working properly.
- **Don't allow the battery to touch metal objects.** If metal objects, such as jewellery, stay in prolonged contact with the battery contact points, the battery could become very hot.

battery

battery use and safety

IMPORTANT: HANDLE AND STORE BATTERIES PROPERLY TO AVOID INJURY OR DAMAGE. Most

- **Don't place your battery near a heat source.** Excessive heat can damage the phone or the battery. High temperatures can cause the battery to swell, leak or malfunction. Therefore:
 - Do **not** dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.
 - Avoid leaving your phone in your car in high temperatures.

DOs

- **Do avoid dropping the battery or phone.** Dropping these items, especially on a hard surface, can potentially cause damage.
- **Do contact your service provider or Motorola if your phone or battery has been damaged from dropping or high temperatures.**

IMPORTANT: USE MOTOROLA ORIGINAL PRODUCTS FOR QUALITY ASSURANCE AND SAFEGUARDS.

To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection), Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a “Motorola Original” hologram.

Motorola recommends you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as **Invalid Battery** or **Unable to charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a “Motorola Original” hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and retry charging it;

- If the message remains, contact a Motorola Authorised Service Centre.

Important: Motorola's warranty does not cover damage to the phone caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage or other hazard.

PROPER AND SAFE BATTERY DISPOSAL AND RECYCLING

Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web:

- www.motorola.com/recycling
- www.rbrc.org/call2recycle/ (in English only)


Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling centre or national recycling organisations for more information on how to dispose of batteries.




Warning: Never dispose of batteries in a fire because they may explode.

install the battery


1

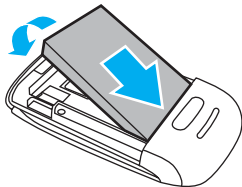

2

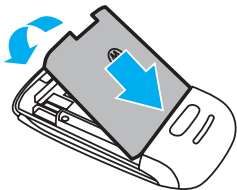

remove the battery

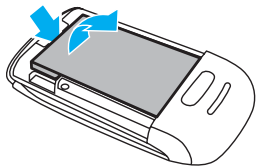


Note: Your battery is intentionally tight fitting to ensure consistent connection.

charge the battery

New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take

several seconds to start charging the battery. When the battery starts charging the battery charging indicator (see page 2) comes on. The phone shows **Charge complete** when finished.

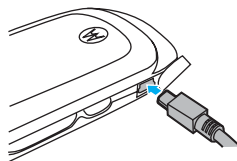

Tip: You can also use a PC USB port to charge your phone battery. Before connecting your phone to your PC, download and install the charging software driver from www.motorola.com/support.


Notes for charging your phone's battery:


- When charging your battery, keep it near room temperature. Never expose batteries to

temperatures below 0°C (32°F) or above 45°C (113°F) when charging.

- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.


turn it on & off

To turn on your phone, press and hold  for a few seconds or until the display turns on.

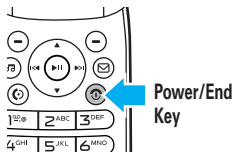



If prompted, enter your four-digit unlock code. Your phone's four-digit **unlock code** is originally set to **1234**

or the last four digits of your phone number (see page 28).

To turn off your phone, press and hold  for a few seconds.


make a call


Enter a phone number and press  to make a call. See page 37 for more calling features.

To hang up, press .


Tip: Is your caller saying they can't hear you? Make sure your finger is not covering the microphone (see page 2).

answer a call

When your phone rings and/or vibrates, press  to answer. See page 32 for answer options.

To hang up, press .

adjust volume

You can adjust the volume during a call by pressing the up or down volume keys on the side of the phone (see page 2) or by pressing  up or down. To mute a call, press **Options** > **Mute**.


change ring alert

Find it:  >  **Settings** > **Ring style**

Available options are **Loud ring**, **Soft ring**, **Vibrate**, **Vibrate & ring**, **Vibrate then ring** or **Silent** (see page 31).




store a number

You can store up to 1000 phone numbers in **Contacts** (see page 61 for more contact features):

- 1 Enter a phone number in the home screen and press **Store**.
- 2 Enter a name and other details for the phone number, press **OK**. To select a highlighted item, press the centre key .


24 [get started](#)

- 3 Press **Done** to store the number.

To store an email address for a new contact, press  >  **Contacts** >  > **New** > **Email**. Enter the name and email address, then press **OK** > **Done**.

call a stored number

Find it:  >  **Contacts**

- 1 Scroll to the entry.
- 2 Press  to call the entry.

Shortcut: In **Contacts**, enter the letters of an entry to get to it quickly.

Tip: Set the **Contacts** icon as a **Home Screen** navigation key for even faster access (see page 31).

Note: You can change the search method to **Find** to search for a contact name by typing it in:


Find it:  >  **Contacts** >  > **Setup** > **Search method**

basics

See page 2 for a basic phone diagram.


home screen

When you turn on your phone, the *home screen* displays.

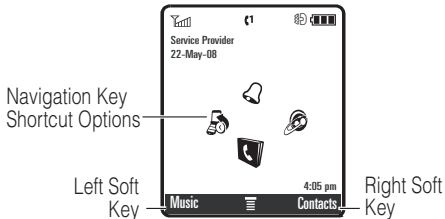











Note: Your home screen might look a little different from this example.




Soft key labels show the current soft key functions. For soft key locations, see page 2.

Press the *navigation key*  up, down, left or right to select shortcut items in the home screen.

Status indicators can appear across the top of the home screen:


indicator	
 Signal Strength	Vertical bars show the strength of the network connection.
 Roaming	Indicates phone is in a digital coverage area and is roaming off home network.



indicator	
 Voice Call/ Incoming Call	Shows during an active voice call.
 Battery Level	Shows battery charge level. The more bars, the greater the charge.
 Loud ring	Indicates Style (in Ring style) is set to Loud ring .
 Soft ring	Indicates Style (in Ring style) is set to Soft ring .
 Vibrate	Indicates Style (in Ring style) is set to Vibrate .
 Vibrate & Ring	Indicates Style (in Ring style) is set to Vibrate & ring .
 Vibrate then Ring	Indicates Style (in Ring style) is set to Vibrate then ring .
 Silent	Indicates Style (in Ring style) is set to Silent .

indicator	
 New Text or MMS Message	Appears when you receive a new text or multimedia message.
 New Voicemail Message	Appears when you receive a new voicemail message.
 Bluetooth	Appears when you turn Bluetooth® on.

external display

When the phone flip is closed, the following indicators can appear on the external display:

indicator	
 Incoming Calls	Shows an incoming call.

indicator	
 New Messages	Appears when you receive a new text or multimedia message.
 Battery Charging Status	Shows during battery charging.

side keys



volume keys

Press the volume keys on the side of the phone to:


- Turn off an incoming call alert
- Change earpiece or speakerphone volume during a call
- Change volume for a song.

music/smart key


The external *music key* gives you a way to access your music with the phone closed.

The *smart key* gives you a way to access the feature you set with the phone open. To set the *smart key* feature press  >  **Personalise** > **Home screen** > **Home keys** > **Smart key**.

Note: With your phone closed, the smart key locks and unlocks your external keys.

Tip: Press  to access your music with the phone open.

hands-free

You can use your phone's hands-free speaker to make calls without holding the phone to your ear. To turn the speaker on, during a call, press  **Spkr on**. To turn the speaker off, press **Spkr off**.

Note: The hands-free speaker won't work when your phone is connected to a hands-free car kit or headset or if your phone is closed.

You can also use an optional 3.5 mm wired headset to go hands-free.

Note: Mini USB headsets are not supported.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234** or to the last four digits of your phone number. The six-digit **security code** is originally set to **000000**.

Your service provider may reset these codes. If not, you should change them to protect your personal information. The unlock code must contain four digits. The security code must contain six digits.

To change a code or password:

Find it:  >  Settings > Security > New passwords

Note: If you forget your security code, contact your service provider.

lock & unlock phone

You can lock your phone with a four-digit code to keep others from using it.

Note: You can make emergency calls on a locked phone (see page 39). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer**.

To lock your phone:

Find it:  >  Settings > Security > Phone lock > Lock now or Automatic lock

Enter the four-digit unlock code and press **OK**. Your phone first displays **Phone locked** and then shows **Enter unlock code:** until the next time you unlock your phone. **To unlock your phone**, enter your four-digit code and press **OK**.

To change your unlock code:

Find it:  >  Settings > Security > New passwords
> Unlock code

memory card

You can store multimedia content, such as songs and pictures, on your phone's internal memory or on an optional memory card.

Note: If you download a file or copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy or change copyrighted files.

format memory card




You will need to format the memory card (**using the phone**) before using it for the first time. This essential procedure creates the **picture, video, java** and **music**

folders and ensures your phone can read the contents of the card.

Caution: Formatting the memory card erases all content on the card.




Find it:  >  Settings > Initial setup




- 1 Scroll to **Format additional storage device** and press **Select**.
- 2 When prompted, press **Yes** to continue or **No** to cancel formatting.

Tip: To access data stored on your microSD memory card, with your phone in the home screen, press  >  Multimedia > **Pictures** or **Sounds** or **Music** or **Videos** and then press  > **Switch storage devices**. If there are no files stored on your memory card then your phone will automatically switch to its internal memory.

tips & tricks

From the home screen (page 25), you can use shortcuts:


To...	Do this...
play music (phone open)	Press  to activate the music player.
play music (phone closed)	Press the external <i>music key</i> to activate the music player. You can then use the touch-sensitive keys to control music.
see recently dialled numbers	Press  .
use shortcuts	Press the left and right soft keys or the navigation key  .

To...	Do this...
access messages	Press  .
access voicemail	Press and hold  .
change ring style	Press and hold  to change between vibrate and the set ring style.
wake up external display (phone closed)	Press anywhere on the external display.



customise

change home screen shortcuts

Find it:  >  Personalise > Home screen > Home keys

options	
Icons	Show or hide the home screen shortcut icons.
Up, Down, Left, Right	Choose the features that open when you press the navigation key () up, down, left or right in the home screen.
Right soft key	Choose the feature that opens when you press the <i>right soft key</i> .
Smart key	Choose the feature that opens when you press the <i>smart key</i> .

change main menu appearance


To change your main menu appearance to icons or a list, press  >  Personalise > Main menu > View.


ring styles & alerts

Your phone rings and/or vibrates to notify you of an incoming call or to signal certain other events. This ring or vibration is called an *alert*.

set a style

Find it:  >  Settings > Ring style




- 1 Select **Style** by pressing .

2 Scroll to a ring style and press .

set alerts

Set alerts for different events, such as getting a message in your inbox or receiving a call.

Find it:  >  Settings > Ring style

- 1 Scroll to *Style Detail* and press .
- 2 Scroll to an alert type and press .
- 3 Scroll to the desired detail setting and press .

Note: Your phone plays a sample of each highlighted setting. Ringtones play through the speakerphone, unless you're using a headset.

answer options

Set your phone to one of the following answer options: **Multi-key on**, **Multi-key off** or **Open to answer**.



Find it:  >  Settings > In-call setup > Answer options

wallpaper

Set a picture as a wallpaper (background) image in your home screen.

Find it:  >  Personalise > Wallpaper



To select a wallpaper image:

- 1 Scroll to **Picture** and press .
- 2 Scroll to the picture you want and press .

or

Select **None** to turn off wallpaper.

To adjust wallpaper image layout:

- 1 Scroll to **Set layout** and press .
- 2 Scroll to **Tile**, **Centre** or **Fit-to-screen** and press .

screen saver



Set a picture as a screen saver image. The screen saver displays when there is no phone activity.

Find it:  >  Personalise > Screensaver



To select a screen saver:

- 1 Scroll to **Type** and select **Animation**.

Tip: You can also select **Analogue clock**.



- 2 Scroll to **Animation** and press .
- 3 Scroll to the animation or picture you want and press .

To specify how long your phone must be inactive before it displays the screen saver:



- 1 Scroll to **Idle time** and press .
- 2 Select a time period and press .

Note: To conserve battery life, turn off the screen saver.



colour setting

To choose a **Colour Setting** (or skin) that sets the look and feel of your phone's display, press  >  Personalise > **Colour Setting**.

display settings

To select a time period that the display light remains on, press  >  Settings > **Initial setup** > **Display settings**.


backlight


To select a time period that the backlight remains on, press  >  Settings > **Initial setup** > **Backlight**.


MyMenu

Create a custom menu of your favourite phone features and tools.




assign an item to MyMenu

- 1 Press  then scroll to a desired menu or submenu item.

For example, if you want to assign the **Messages** menu to **MyMenu**, scroll to the messages icon () on the main menu. If you want to assign the **Calculator** function to **MyMenu**, scroll to and select **Extras** (on the main menu) then scroll to **Calculator**.

- 2 With the desired option highlighted, press and hold  until the **MyMenu** confirmation appears, then select **OK**.
- 3 Press **Done** to accept the assigned key number or scroll to **Key:** and press **Change** to assign a different one.

use MyMenu

From the home screen, open the main menu, then simply press the number key you assigned to the feature. For example, if you assigned **Messages** to  then press  > .

more customising

features

ring volume

 >  **Settings** > **Ring style** > *Style Detail* > **Ring volume**

keypad volume

 >  **Settings** > **Ring style** > *Style Detail* > **Key volume**

features

reminders

Set your phone to play reminder alerts for unread messages, missed calls or voicemail messages that you receive:



 >  Settings > Ring style > *Style Detail* > Reminder

set time and date

 >  Settings > Initial setup > Time and date



text layout

Set home screen text to be **Left justified** or **Centred**:

 >  Personalise > Home screen > Layout



clock view

Set digital or analogue clock on the home screen:

 >  Personalise > Home screen > Clock set

features

language

 >  Settings > Initial setup > Language

master reset

Reset all options except unlock code, security code and lifetime timer:

 >  Settings > Initial setup > Master reset

To reset all options, you need to enter the **Unlock code** (**default 1234**).

features

master clear

Clear all options except unlock code, security code and lifetime timer and clear all user settings and entries.

This option erases all user-entered information stored in your phone memory, including Contacts entries and downloaded files. Once you erase the information, it cannot be recovered. It resets all options to their factory settings except for the unlock code, security code and lifetime timer.



 >  Settings > Initial setup > Master clear

To reset all options, you need to enter the **Unlock code (default 1234)**.

calls


To make and answer calls, see page 23.


redial a number


- 1 From the home screen, press  to see a list of recently dialled calls.
- 2 Scroll to the entry you want to call and press .

recent calls

Your phone keeps lists of the calls you recently received and dialled, even if the calls didn't connect. The lists are sorted from newest to oldest calls. The oldest calls are deleted as new calls are added.

Find it:  >  Recent calls > Received calls or Dialed calls




- 1 Scroll to an entry.
Note: A ✓ next to a call means that the call connected.
- 2 Press  to call the number.
To see call details (such as time and date), press **View**.

Press the centre key  while viewing a list of recent calls to see these options:

option	
Delete	Delete the entry.
Delete all	Delete all entries in the list.
Show ID / Hide ID	Show or hide your phone number when making a call.

option	
Send message	Create a new text message with the number in the To: field.
Add digits	Add digits after the number.
Attach number	Attach a number from the Contacts or recent calls lists.

return a missed call

When you miss a call, your phone plays an alert, displays the  (missed call) indicator on the home screen and displays the  indicator on the external display of your phone. Press **View** to see the details and press  to call the number.

To view your missed calls at any time:


Find it:  >  **Recent calls** > **Received calls**

To hear a voicemail message, see page 47.

call waiting

If you **receive a second call** while you are already on a call:



- To answer the second call and put the first call on hold, press  or the left soft key, **Answer**. To switch between the calls, press **Swap** again.
- To send the second call to your voicemail, press **Ignore**.

quick dial

Your phone can store nine phone numbers that you can call with a single key press. To **store** a quick dial phone number:

 >  **Personalise** > **Quick dial**


To **call** a quick dial phone number, press and hold the single-digit quick dial number from the home screen.

notepad

The most recent set of digits that you entered are stored in your phone's *notepad* memory.


To retrieve a number in the notepad:

Find it:  >  Recent calls > NotePad

Press  to call the number or press **Store** to store the number in **Contacts**.


emergency calls

Your service provider programmes emergency phone numbers, (such as 999, 112 or 911), that you can call under any circumstances, even when your phone is locked.

- 1 Enter the emergency number.
- 2 Press .



Note: Emergency numbers vary by country. Your phone's pre-programmed emergency number(s) may not work in all locations and sometimes an emergency call cannot be placed due to network, environmental or interference issues.

call times


Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your

service provider. For billing information, please contact your service provider directly.

features	
set in-call timer	
•• > ⚙️ Settings > In-call setup > In-call timer	
call cost setup	
•• > ⚙️ Settings > In-call setup > Call cost setup	
view call times	
•• > 📞 Recent calls > Call times	
Scroll to Last call , Dialled calls , Received calls , All calls or Lifetime and press Select .	

headset

features	
auto answer	
Automatically answer calls when connected to a headset:	
•• > ⚙️ Settings > Headset > Auto answer	
Note: mono and stereo headsets are supported for voice only.	
change volume	
Press up or down on the volume keys, on the side of the phone or press •• up or down to change the headset volume during a call.	

more calling

features

international calls



If your phone service includes international dialling, press and hold **0** to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.

call divert

Set up or cancel call forward:



 >  **Settings** > **Call divert**

features

restrict calls



Restrict outgoing or incoming calls:

 >  **Settings** > **Security** > **Call barring**

Select **Outgoing calls**, **Incoming calls** or **Cancel all** and press **Select**.

When prompted, enter the unlock code (supplied by your service provider) and press **OK**.

enter text





Some screens allow you to use the keypad to enter text, such as when you compose a message.

set entry modes

Multiple text entry modes make it easy for you to enter names, numbers and messages:


entry mode	
Primary	Enter text using a method that you set.
Secondary	
Number	Enter numbers only (see page 45).
Symbol	Enter symbols only (see page 45).

To assign a Primary or Secondary text entry mode:


- 1 In a text entry screen, press .
- 2 Scroll to **Entry setup** and press .
- 3 Scroll to **Primary setup** or **Secondary setup** and press .
- 4 Scroll to one of the following choices and press .

options	
iTap™	Let the phone predict each word as you press keys.
Tap	Enter letters and numbers by pressing a key one or more times.
Tap extended	Enter letters, numbers and symbols by pressing a key one or more times.


To change the text entry mode:

Press  in the text entry screen to change the text entry until the desired mode is displayed.

To select or edit a text entry mode

Press  in any text entry screen, scroll to and select **Entry mode**, then scroll to and select the desired entry mode.







capitalisation

Press  in any text entry screen to change the text case. These indicators show capitalisation status:

indicator	
ab	No capital letters
AB	All capital letters
Ab	Capitalise next letter only

text entry mode indicators

When you select the **Primary** or **Secondary** text entry mode, the following indicators identify the text entry setting:


primary	secondary	
1	2	Tap, no capital letters
1↑	2↑	Tap, capitalise next letter
1↑	2↑	Tap, all capital letters
		iTAP™, no capital letters
		iTAP, capitalise next letter
		iTAP, all capital letters

These indicators identify **Numeric** or **Symbol** entry mode:

indicator	
12	Number mode
@	Symbol mode


iTAP™ method





The iTAP software combines your single key presses into common words and predicts each word as you enter it. This can be faster than the **Tap** method.


- 1 Press  right or left to scroll through the possible letter combinations and highlight the combination you want.
- 2 Press **Select** to enter the highlighted combination.

You can press keys to add more letters to the end of the combination.


or

Press  to insert a space.

For example, if you press    , your phone displays the corresponding letter combinations:

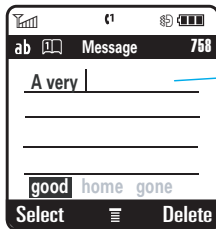

Press **Select** to accept **good**.

Press  right or left to see other word suggestions.

tap method


This is the standard method for entering text on your phone.

Regular **Tap** method cycles through the letters and numbers of the key you press. The **Tap extended** method cycles through letters, numbers, **and** symbols.

- 1 Press a key one or more times to cycle through its characters.


2 Repeat the step above to enter all characters.

Tip: Press  to insert a space.



In a text entry screen you can press  to switch entry modes. If **Tap** or **Tap extended** is not available as the **Primary** or **Secondary** entry mode, see page 42.

numeric method

In a text entry screen, press  to switch entry methods until your phone displays the **12** (numeric) indicator.

Press keypad keys to enter numbers. When finished, press  to switch entry modes.

symbol method

In the text entry screen, press  to switch entry methods until your phone displays the  (symbol) indicator.

- 1 Press a key one or more times to show possible symbol combinations at the bottom of the screen.
- 2 Scroll left or right to highlight a symbol and press **Select** to enter it.

delete letters & words


Move the cursor to the right of the text you want to delete and then:

- Press **Delete** to delete one letter at a time.
- Press and hold **Delete** to delete the entire message.

messages

You can send and receive text (SMS/EMS) and multimedia (MMS) messages as well as access your voicemail from the Messages menu. Each message type allows you to attach different objects. The available options are displayed in the **Insert** menu.



Tip: Press  to go to the messages menu.

Note: Your phone can store a maximum of 750 messages, shared between the **Inbox**, **Outbox** and **Draft** folders.


send a message



Find it:  >  Messages > Create > Create message


- 1 Select a message type and enter the message text.

- 2 To insert a picture, sound or other object, press **Insert**.
- 3 When you finish the message, press **OK**. Choose one or more people to send to.
- 4 Press **Send**.


quick text

Set your home screen to access the  **Quick txt** option so that you can send messages faster.

Find it:  >  Personalise > Home screen > Home keys > Up, Down, Left or Right > Quick txt

After setup you can quickly access the text entry screen by pressing the navigation key direction you set for  **Quick txt**.

receive a message

When you receive a message, your phone plays an alert, flashes  (new message) on the external display and displays a new message notification on the home screen. Press the **Read** softkey to read the message immediately or the **Exit** softkey to save it in your message inbox for viewing later. To read messages in your message inbox:

Find it:  >  Messages > Inbox

Scroll to the message you want to read. Press **Select** to open the message. For MMS messages, your phone displays the media object, then the message.

voicemail


Your network stores the voicemail messages you receive.



When you **receive** a voicemail message, your phone shows an indicator and **New voicemail message**. Press **Call** to call your voicemail.

To check your voicemail messages at any time:

Find it:  >  Messages > Voicemail > Call

Note: Your service provider may have assigned quick dial number  for calling voicemail and may provide additional information about using voicemail.

more messaging

features



use MMS template

Select a multimedia template with preloaded media:

 >  Messages > Create > Create message
> MMS templates

features

view sent, received and draft messages

 >  Messages > Inbox, Draft or Outbox



erase messages

Delete all messages or only messages from one folder:

 >  Messages > Create > Cleanup messages

Select All, Inbox, Browser msgs, Info services, Outbox or Drafts.

view the message memory status

 >  Messages > Create > Memory Status

entertainment

get music

Copy music to an optional memory card.

Connect:

- 1 With a memory card inserted and your phone in the home screen, insert the USB cable in your phone (see page 67) and your Windows PC.
Note: Your phone supports Microsoft™ Windows XP™ and Windows Vista™. Other operating systems may not be compatible with your phone.
- 2 On your phone, press **Yes** to connect your phone as a storage device.
Note: For USB cable connection details, see page 67.

- 3 Now that you are connected, use USB drag and drop to copy your music to the memory card.

USB drag and drop:


- 1 Use the My Computer window to find Removable Device. The **picture**, **video**, **java** and **music** folders are automatically available.
- 2 Drag and drop your music, photos, videos and other items that you want to copy into the **picture**, **video**, **java** and **music** folder.
Note: A file name (including the path) must be less than 255 characters. For example, if you copy songs into a folder you create that is named "MyMotoSongs," the name of any song PLUS the name of the folder "MyMotoSongs" must be less than 255 characters.

- 3 When you're done, use the **Safely Remove Hardware** feature on the computer to finish.

music player

Use your phone to play, AAC, AAC+, eAAC+, MIDI, MP3, RA, WAV and WMA music file types:

Find it: 

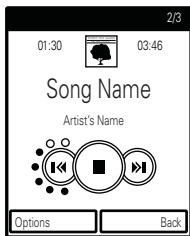









Note: Your phone may not play MP3 files that have a bit rate higher than 320 kbps. If you try to download or

play one of these files, your phone may display an error message or ask you to delete the file.

Tip: Connect a stereo or Bluetooth® headset for high quality music playback.

music player controls

function	
scroll through song list	Before music playback, press  up or down.
play	Press  or Play .
pause/resume	Press  .
fast forward	Press & hold  right.
next song	Press  right.
rewind	Press & hold  left.
previous song	Press  left.
turn off	Press  .

Tip: You can listen to music as you travel. Use Bluetooth® A2DP enabled devices, such as stereo headphones, for enhanced music quality and use Bluetooth AVRCP enabled devices, such as car stereos, to control playback.

touch-sensitive music keys

function	
play or pause	Press ►
next song	Press ►►
previous song	Press ◄◄

music

Find it:  >  Multimedia > Music


From the **Music** menu select one of the following:

option	
All	Shows list of all songs.
Playlists	Play and manage your playlists.
Artists	Select artists to show or play their songs.
Albums	Select an album to show or play its songs.
Genres	Select a genre of music to show or play its songs.
Search	Search for a song title or keyword.
Shuffle all	Play all songs in a random order.

playlists


Find it:  >  Multimedia > Music > Playlists

- To create a new playlist press **New playlist**.

- To edit an existing playlist, scroll to the playlist and press .
- To play a playlist, scroll to the playlist and press **Options > Play**.


music playlist options

option	
Play	Play a song or playlist.
New playlist	Add a new playlist.
Delete Playlist	Remove an existing playlist.
Apply to Playlist	Add a song to an existing playlist.
Save Playlist As	Save your current playlist as a different name.
Rename	Change the name of playlist.
Reorder	Change the order of your songs.
Search	Search for a song title or keyword.

option	
Music store	Open the music store. 
Setup	Change settings, such as, Auto repeat , Shuffle and Equaliser .
View free space	Shows the Free , Used , Total and Tracks on your storage device.

sounds

Find it:  >  **Multimedia > Sounds**



From the **Sounds** menu press  and select one of the following:

option	
Apply as ring tone	Select song as your ringtone.
New	Create new playlist or iMelody.

option	
Details	Show song information.
Manage	Delete, Move, Copy or Rename a song.
Mark	Select a song.
Mark all	Select all songs.
Setup	Change Auto repeat on or off.
View free space	Shows the Free, Used and Total space on your storage device.
Switch storage devices	Change between phone memory and memory card.

playlists

Find it:  >  Multimedia > Sounds

- To create a new playlist press  > **New** > **Playlist**.
- To edit an existing playlist, scroll to the playlist and press  > **Edit**

- To play a playlist, scroll to the playlist and press **Play**.





sounds playlist options

option	
New	Add a playlist.
Manage	Delete a playlist.
Edit	Edit an existing playlist.
Reorder	Change the order of your songs.
Setup	Change settings, such as, Auto repeat and Shuffle .
View free space	Shows the Free, Used and Total space on your storage device.
Switch storage devices	Change between phone memory and memory card.


FM radio

Find it:  >  **Multimedia** > **FM radio**

To use the RDS **FM radio** you need to connect a stereo headset to the 3.5 mm headset jack.



- Press  or  to change the frequency.
- Press the up or down volume keys on the side of the phone or press  or  up or down to adjust the volume.
- Press **Options** > **Mute** to mute the radio.

use the radio presets

- 1 Tune in the desired frequency by pressing  left or right or press **Options** > **Scan** to scan for all available radio stations. You can also use the keypad keys to enter a frequency by pressing **Options** > **Set frequency**.

- 2 Press and hold a number key to save that number as the preset.

select a radio preset

- 1 Press **Options** > **Station presets** to view a list of all radio presets.
- 2 Press  or  to select a preset.

Tip: If you know the number assigned to the preset station, press the keypad number to select it.

record FM radio clips

- 1 Press **Options** > **Record**.

Note: The maximum recording length is 100 seconds.

- 2 Press **Options** > **Stop recording** to stop the recording. The clip is saved in  **Multimedia** > **Sounds**.

Note: The unauthorised copying of copyrighted materials is contrary to the provisions of the Copyright

Law of the United States and other countries. This device is designed solely for copying non-copyrighted materials, materials which you own the copyright or materials which you are authorised or legally permitted to copy. If you are uncertain about your right to copy any material, please consult your legal advisor.

Note: Playback of recorded radio clips is in mono sound format only.

turn radio off

To turn the radio off press **Options > FM radio off**.

hide radio

To hide the radio press **Options > Hide**. Press **Radio** softkey to see the radio again.

Note: You can close the phone and use the touch-sensitive keys to **stop**  the radio and to change frequency  or .

share a radio station

Share your favourite radio stations with friends:

Find it:  >  **Multimedia > FM radio > Options > Send station info**

Use the message screen to send the station frequency. Your friend can access the station with a single click.

select the radio output

You can play the radio through a stereo headset or a speaker. Press **Use headset** or **Use speaker**.


camera

Find it:  >  **Multimedia > Camera**

Your camera lens is on the front of your phone (see page 2). **To get the clearest pictures, wipe the lens clean with a soft dry cloth before you take a picture.**

take a photo

With the viewfinder open, press **Capture** to take the photo.

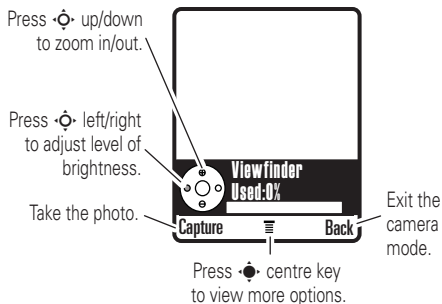

To **view your photos** at any time, press **Home** > **Multimedia** > **Pictures**.

Tip: Press **Store** > **Send in message** to share it with your friends.

photo features

Before you capture your photo, you can press **Home** to open the camera menu:

options	
Go to pictures	Switch to the Pictures menu.
Auto-timed capture	Set to auto-timer.
Auto-Save	Automatically save your photos to the Pictures menu.
Picture setup	Set the Lighting conditions , Special effect , Exposure , Resolution , Shutter tone , Image quality or Flicker settings.
Switch storage devices	Switch between the Phone memory and Memory card .
View free space	Shows the Free , Used and Total space on your storage device.

You can also use the navigation keys to change the **Zoom** and **Brightness** settings:

options	
Zoom	Set the zoom for your photo.
Brightness	Set the brightness for your photo.

After you capture your photo, you can press **Store** to open the **Store options** menu:


options	
Send in message	Send your photo in a message.
Store only	Saves the photo in the Pictures menu.
Apply as	Set the photo as a wallpaper (background) image or screen saver or a Contacts entry.

video camera

Find it:  **Multimedia > Video Camera**

Your camera lens is on the front of your phone (see page 2). **To get the clearest video clips, wipe the lens clean with a soft dry cloth before you use the camcorder.**

record a video

Press  to start or pause recording, press the left soft key to **Stop**.

play a video

Press  **Multimedia > Videos** select video and press **View**.

video features

Before you capture your video, you can press **Options** to open the video recorder menu:



options	
Go to videos	View a list of recorded video clips.
Video camera setup	Set your video quality, length and sounds.
Switch Storage Device	Change the storage location of your video (Phone memory, Memory card).
Free space	View the storage space available on the selected location.

After you capture your photo, you can press **Stop** to open the **Options** menu:

options	
Save	Saves the video in the Videos menu.
Discard	Discard the video and return to viewfinder.
Preview	Play the video without saving.
Send	Send your video in a message or via Bluetooth®.

WebAccess

Use your EDGE-enabled phone to access Web pages.

Find it:  >  WebAccess

WebAccess options



option	
Start browser	Open the Web browser.
Web shortcut	Access a preset shortcut to a Web page.
Go to URL	Enter a Web page URL.
Web session	Access a stored Web session.
Stored pages	Access your stored pages.
History	Access a list of recently viewed Web sites.
General setting	Clear history, reset cache, clear cookies or enable progressive downloads.

open a Web page

- 1 Press  >  **WebAccess** > **Go to URL** and enter the Web address, such as www.motorola.com.

- 2 If necessary, select **Options** > **Open in new page**.
- 3 Press **Options** > **Open**.

manage bookmarks

To see your bookmarks press  **WebAccess** > **Web shortcut**. To manage your bookmarks press  to open the bookmarks menu:

options	
[New entry]	Add a bookmark.
Edit	Edit a bookmark.
Delete	Delete a bookmark.

fun & games

features

play a game

 >  **Games & Apps**

features

manage pictures

 >  Multimedia > Pictures

manage music

 >  Multimedia > Music



manage sounds


 >  Multimedia > Sounds

manage videos

 >  Multimedia > Videos

Note: To access pictures, sounds or videos stored on your microSD memory card, press

 >  **Multimedia > Pictures** or **Sounds** or **Videos** and press

 > **Switch storage devices**. If there are no files stored on your memory card then your phone will switch to internal memory.

tools

contacts

features

create entry

•◂◃ >  Contacts > •◂◃ > New

edit entry

•◂◃ >  Contacts

Scroll to the entry and press •◂◃ > **Edit** to edit the entry. Scroll up or down and press •◂◃ to edit fields. Press **Done** to save your changes.

delete entry

•◂◃ >  Contacts

Scroll to the entry and press •◂◃ > **Delete**

personal organiser

features

add calendar event

•◂◃ >  Extras > Calendar

Scroll to the desired day and press •◂◃, then scroll to **New** and press **Select**.

view calendar event

View or edit event details:


•◂◃ >  Extras > Calendar

Scroll to the desired day and press •◂◃, then scroll to the event and press **Select**.


features

add calendar reminder

 >  Extras > Calendar

Scroll to the desired day and press , then scroll to **New** and press **Select**. Scroll to **Reminder** and set the required time to be reminded before the event.


event reminder

When an event reminder occurs, press  to view it. Press **Exit** to dismiss it.

copy calendar event

Copy a datebook event to another date and/or time:

 >  Extras > Calendar

Scroll to the desired day and press **Select**, then scroll to the event and press . Scroll to **Copy** and press **Select**.

features

set alarm

 >  Extras > Alarm clock

Note: You can set the FM radio as your alarm device by selecting **Alert > Radio** from **Alarm details**.

calculator


 >  Extras > Calculator

stop watch

 >  Extras > Stop watch

convert currency

 >  Extras > Calculator

Press  and select **Convert currency**.

network

features

network settings

View network information and adjust network settings:

 >  Settings > Network

select a band

 >  Settings > Network > Band selection



connections


Bluetooth® wireless

Your phone supports Bluetooth wireless connections with audio devices, such as a hands-free headset or music system.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.


For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.


connect to an audio device

Before you try to connect your phone with an audio device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user guide for the device). 

Find it:  >  **Settings** > **Bluetooth Link** > **Audio devices**

If Bluetooth is off, you will be prompted to turn it on. Your phone lists the devices it finds within range:

- 1 Scroll to a device in the list and press the *centre key* .
- 2 If necessary, press the **Yes** or **OK** key to connect to the device.
- 3 If necessary, enter the device passkey (such as **0000**) and press the **OK** key.

When your phone is connected, the Bluetooth indicator  is highlighted in the status bar and displayed on the top of the phone.

Shortcut: When your phone's Bluetooth power is on, your phone can automatically connect to a hands-free device you have used before. Just turn on the device or move it near the phone. If the device doesn't connect, turn it off and back on.

send files to another device

You can send a media file, contacts entry, agenda event and more from your phone to a computer or other device.




Note: You can't copy some copyrighted objects.


- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press **Options > Send > To Bluetooth**.

- 3 Select a recognised device name or **[Look for device]** to search for the device where you want to copy the file.

If your phone could not send the file to the other device, make sure the device is **on** and **ready** in *discoverable* mode (see the user guide for the device). Also, make sure the device is not busy with another similar Bluetooth connection.

Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. When your phone is connected, the Bluetooth indicator  is highlighted in the status bar and displayed on the top of the phone.



receive files from another device

If you do not see the Bluetooth indicator  in the status bar, turn on your phone's Bluetooth feature by pressing

 >  **Settings > Bluetooth Link > Setup > Power > On**



- 1 Place your phone near the device and send the file from the device.

If your phone and the sending device don't recognise each other, place your phone in discoverable mode so the sending device can locate it: Press  >  **Settings** > **Bluetooth Link** > **Find me**.

- 2 Press the **Accept** key on your phone to accept the file from the other device.

Your phone notifies you when file transfer is complete.

more Bluetooth features

Note: A device is *recognised* after you have paired or bonded with it (see page 64).

features

change your phone's name

 >  **Settings** > **Bluetooth Link** > **Setup** > **Name**

make phone visible to other devices

Allow a Bluetooth device to discover your phone:

 >  **Settings** > **Bluetooth Link** > **Find me**.

connect to recognised device

Connect your phone to a recognised device:

 >  **Settings** > **Bluetooth Link** > **Device history**
> *device name*

features

disconnect a headset or hands-free device



Settings > Bluetooth Link > Audio devices

Scroll to the device name and press

Options > Disconnect.

switch to headset or hands-free device during call




During a call, press Options > Audio > *device name*, to switch to a recognised headset or car kit.

cable connections



You can use your phone's mini USB port to connect to a computer.

Note: Motorola Original™ USB data cables and supporting software may

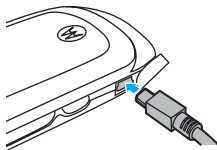

be sold separately. You can buy a cable from Motorola (see direct.motorola.com/hellomoto).

If you use a USB cable connection:

- Be sure to connect the phone to a high-power USB port **on your computer** (not a low-power one, such as the USB port on your keyboard or bus-powered USB hub).

Note: If you connect your phone to a low-power USB port, the computer may not recognise your phone.

- Make sure both your phone and the computer are turned on and the phone is in the home screen.

Note: When your phone is plugged into a computer and is being used for mass storage, it cannot be used for anything else, including making emergency calls. To restore the phone to normal use, disconnect it from the PC.

- Your phone currently supports Microsoft™ Windows XP™ and Windows Vista™. Other operating systems may not be compatible with your phone.

Attach the Motorola Original USB cable to the mini USB port on your phone and to an available USB port on your computer.

Note: The battery will start charging.

On your computer:

- 1 Open your “My Computer” window, where your phone’s memory card shows as a “Removable Disk” icon.
- 2 Click on the “Removable Disk” icon to access the memory card.
- 3 If necessary, in the “Removable Disk” (memory card) window, create one or more folders for the files you will copy onto the memory card.

- 4 To copy files between your computer and phone, drag and drop into the appropriate folders.
- 5 When you’re finished, remove the device by selecting the “Safely Remove Hardware” icon at the bottom of your computer screen, then select “USB Mass Storage Devices” and “Stop”.

Note: To help manage your files, you can also create new folders in the existing folders.

Use these folders on your memory card for the file types indicated:

- picture files (JPG, PNG or BMP): **picture**
- video files (MIDI and WAV): **video**
- java apps & games: **java**
- music files (MP3): **music**
(see page 49).



Tip: You can store music on your phone or memory card. You do not have to use the **music** folder but **do not copy files to the main directory.**

Note: The maximum single picture file size is 600 kB. A file name (including the path) must be less than 255 characters. For example, if you copy songs into a folder you create that is named “MyMotoSongs,” the name of any song PLUS the name of the folder “MyMotoSongs” must be less than 255 characters.

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobiles devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.8 W/kg.¹

As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.² In this case, the highest tested SAR value is 0.31 W/kg.¹

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that

indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

-
- 1 The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
 - 2 Please see the Safety and General Information section about body worn operation.

OPEN SOURCE SOFTWARE INFORMATION

This Motorola mobile device may contain portions of UCL RTP STACK open source software package.

Copyright (c) 1998-2000 University College London
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, is permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement:
This product includes software developed by the Computer Science Department at University College London.
4. Neither the name of the University nor of the Department may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHORS AND CONTRIBUTORS "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A

PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHORS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This Motorola mobile device may contain portions of EXPATH - XML PARSER TOOLKIT open source software package.
Copyright (c) 1998, 1999, 2000 Thai Open Source Software Center Ltd

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT.

IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information:

<http://www.who.int./peh-emf>

Smart practices while driving

Drive Safe, Call Smart SM

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Go to www.motorola.com/callsmart for more information.

Your mobile device lets you communicate by voice and data, almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a hands-free device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original hands-free accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.



- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 999 or other local emergency number in the case of fire, traffic accident, or medical emergencies.¹
- **Use your mobile device to help others in emergencies.** If you see a road accident, crime in progress, or other serious emergency where lives are in danger, call 999 or other local emergency number, as you would want others to do for you.¹
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.¹

¹ Wherever wireless phone service is available.

index

A

- add calendar event 61
- add calendar reminder 62
- adjust volume 24
- alarm set 62
- alerts 31
- analogue clock 35
- answer
 - automatic 40
 - call 23
 - options 32
- attach a number 38

B

- backlight 33
- band selection 63
- battery 19

- charge 22
- install 21
- level indicator 26
- remove 22

battery charging indicator 2, 27

Bluetooth

- change your phone's name 66
- connect to a recognised device 66
- connection
 - description 64
- disconnect a headset or hands-free device 67
- indicator 65
- make phone visible to other devices 66
- receive files 65

- send files 65
- switch audio during a call 67

bluetooth indicator 26

bookmarks 59

C

- cable connections 67
- calculator 62
- calendar event
 - add 61
 - copy 62
 - reminder 62
 - view 61
- calendar reminder
 - add 62
- call
 - answer 23

- end 23
- international 41
- make 23
- recent 37
- restrict 41
- stored number 24
- times 39
- view times 40
- waiting 38
- camera lens 2
- capitalise text 43
- change
 - ring alert 24
 - volume 40
- charge battery 22
- codes 28
- colour setting 33
- contacts 38, 61
 - create entry 61
 - delete entry 61

- edit entry 61
- controls, music player 50
- convert currency 62
- copy
 - calendar event 62
 - files 65
 - music 49
- costs, tracking 40
- currency converter 62
- customise 31

D

- date 35
- delete text 45
- dial a phone number 23
- dialled calls 37
- digital clock 35
- display 25
- drag and drop files 49

E

- emergency number 39
- end a call 23
- end key 23
- erase messages 48
- external display 2, 26

F

- FM radio 54
- format memory card 29

G

- games & apps 59
- get music 49

H

- hands-free 27
- headset 40
- home screen 25
 - shortcuts 31

I

- in-call
 - cost 40
 - timer 40
- incoming calls indicator 26
- indicators
 - battery charging 27
 - battery level 26
 - bluetooth 26
 - incoming calls 26
 - message 26
 - new message 27
 - roaming 25
 - signal strength 25
 - sound & vibrate on 26
 - sounds loud 26
 - sounds off (silent) 26
 - sounds soft 26
 - status 25
 - text entry mode 43

- vibrate on 26
- voice call 26

- install
 - battery 21
 - memory card 19
- international access code 41
- iTAP text entry method 44

K

- keypad
 - volume 34

L

- language 35
- layout text 35
- linking. See Bluetooth
- lock
 - phone 28

M

- make a call 23
- manage
 - music 60
 - pictures 60
 - sounds 60
 - videos 60
- master clear 36
- master reset 35
- memory card 29
 - format 29
 - install 19
 - remove 19
- menu 31
- menu icons 31
- message indicator 26
- messages
 - delete text 45
 - erase 48
 - memory status 48

- MMS 47
- numeric entry 45
- receive 47
- send 46
- set entry mode 42
- symbol entry 45
- tap text entry 44
- text capitalisation 43
- text entry 42
- text entry mode indicators 43
- text template 47
- view sent message 48
- messages key 2
- microphone 2
- Missed Calls message 38
- MMS 47
- music 51, 60
 - copy 49
 - player 50
 - controls 50

- playlist 51
- playlist 52
- music key 27
- music keys 2
 - music player controls
 - touch-sensitive 51
- MyMenu 34

N

- navigation key 25
- network settings 63
- new message indicator 27
- notepad 39
- number redial 37
- numeric entry method 45

O

- object exchange 65
- open web page 59
- options, music playlist 52
- options, sounds playlist 53

P

- pairing. See Bluetooth
- passwords. See codes
- personal organiser 61
- phone lock
 - change code 28
- phone number store 24
- photos 55
- pictures 60
- play a video 57
- playlists 51, 53
- power key 23
- preset radio stations 54
- primary text entry mode 42

Q

- quick dial 38
- quick text 46

R

- radio 54
- radio hide 55
- radio turn off 55
- receive a message 47
- received calls 37
- recent calls 37
- record a video 57
- record radio clips 54
- redial 37
- reminder 35, 62
- remove
 - battery 22
- restrict calls 41
- return a call 38
- ring
 - alert 24
 - style 31
 - volume 34
- roaming indicator 25

S

- safety information 9
- screen saver 33
- secondary text entry mode 42
- security codes 28
- select network band 63
- send
 - key 23
 - message 46
- set
 - alarm 62
 - alerts 32
 - reminder 35
 - screen saver 33
 - style 31
 - time & date 35
 - wallpaper 32
- shortcuts 30
- signal strength indicator 25
- SIM
 - install 18
- skin 33
- smart key 27
- soft keys 2, 25
- sound 60
- sound & vibrate on indicator 26
- sounds 52
 - loud indicator 26
 - player
 - playlist 53
 - playlist 53
 - soft indicator 26
- sounds off (silent) indicator 26
- speaker
 - hands-free 27
- status indicators 25
- stop watch 62
- storage 29
- stored
 - files 60

- phone number 24
 - call 24
- style setting 31
- symbol entry method 45

T

- take a photo 56
- tap text entry method 44
- template 47
- text
 - delete 45
 - entry 42
 - capitalisation 43
 - mode indicators 43
 - layout 35
 - set mode 42
- time 35
- tips & tricks 30
- touch-sensitive keys 2
- turn phone on/off 23

U

- unlock
 - code 28
 - phone 28
- USB
 - cables 67
 - drag and drop 49

V

- vibrate on indicator 26
- video 57, 60
- video camera 57
- view
 - calendar event 61
 - messages 48
- voice call indicator 26
- voicemail 47
- volume
 - adjust 24
 - change 40

- keypad 34
- keys 2
- ring 34

W

- wallpaper 32
- WebAccess 58

- US patent Re. 34,976

www.motorola.com



68004098015