

ACCUSPLIT®

ACCUSPLIT® AX120 Activity Pedometer

INSTRUCTIONS



RESET


WEARING YOUR Pedometer

Clip the pedometer firmly and level at your waist, above one knee. The pedometer should be as vertical as possible. Walkers with larger stomachs may find it helpful to wear the pedometer farther back, toward one hip.

The cover must be closed for the pedometer to work. To avoid losing or dropping your pedometer, use the included leash and clip to fasten the pedometer securely to your clothing. (See leash instructions on reverse.)

VIEWING YOUR RESULTS

Once you put on your pedometer with the case closed, it will automatically begin to record your steps. Most people prefer to reset their step count daily. Simply press RESET each morning to reset step count to 0.

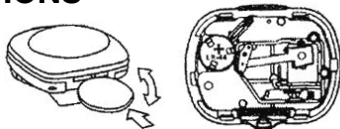


REPLACING THE BATTERY

When the display starts to dim or goes blank, replace the battery with one LR-44 battery. Insert a coin into the slot on the bottom of the case (above leash slot), and twist counterclockwise to pop open the case. Replace battery with positive (+) terminal FACE UP. Put the cover back on and press to close.

Then use Power Reset:

Push the RESET button for 3 seconds and release. (The display will be ON and then OFF.) Press RESET button again to turn display ON.

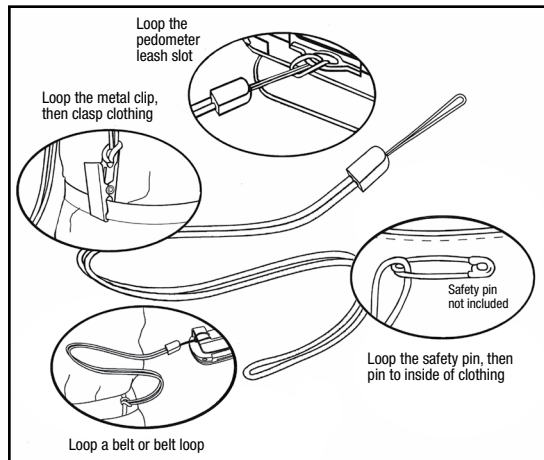

Eat Right! Walk More! Live Well! The ACCUSPLIT Lifestyle

REGISTER NOW Please return your AX120 pedometer registration to the Repair Center address in the warranty, and we will let you know about future products.

Email (preferred)

User _____

NO-PROOF-OF-PURCHASE LIMITED WARRANTY

Free service for first year of ownership;
\$12 fee for service thereafter. See label inside unit for date.
See www.ACCUSPLIT.com/support for details

ACCUSPLIT, Inc. • 3090 Independence Drive, Suite 148 • Livermore, CA 94551 USA
800-935-1996 • 925-290-1900 • FAX 925-290-1930 • www.ACCUSPLIT.com • support@ACCUSPLIT.com