



Heating and Air Conditioning

CONTENTS

SAFETY INFORMATION

FOR YOUR SAFETY 2

SYSTEM OPERATION 2

THERMOSTATS 2

INTERMITTENT IGNITION DEVICE 2

OPERATING INSTRUCTIONS 3

TO SHUT DOWN THE FURNACE: 3

TO LIGHT THE FURNACE: 3

VENT SAFETY SYSTEM: 3

100% SHUT OFF: 3

EXPLAIN UNIT FUNCTION 4

GENERAL MAINTENANCE 4

HEATING SYSTEM INSPECTION 4

BURNER AND PILOT CHECK 5

CLEANING BURNERS 5

CLEANING FLUE PASSAGES AND

HEATING ELEMENTS 5

AIR FILTERS 5

BLOWER ASSEMBLY 6

MOTORS 6

CONDENSER COIL 7

REGISTERS 7

TROUBLESHOOTING 7

BEFORE CALLING A SERVICE

TECHNICIAN: 7

REPLACEMENT PARTS 8

**USER'S, MAINTENANCE
and
SERVICE INFORMATION
MANUAL**

**SINGLE PACKAGE
AIR CONDITIONER
GAS/ELECTRIC**

The manufacturer recommends that the "User" read all sections of this manual and keep the manual for future reference.

▲WARNING

FIRE OR EXPLOSION HAZARD

Failure to follow safety warnings exactly could result in serious injury, death, or property damage.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

- WHAT TO DO IF YOU SMELL GAS:

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Leave the building immediately.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

SAFETY INFORMATION

FOR YOUR SAFETY

- Make sure that the furnace area is clear and free of combustible materials, gasoline and other flammable vapors and liquids.
- Be sure the furnace is free and clear of insulating material. Examine the furnace area after installation of the furnace or the installation of additional insulation. Some types of insulation are combustible.
- For proper operation of this furnace, air for combustion and ventilation is required. Make sure that these openings are not obstructed.
- For lighting or shutting down this furnace, refer to the lighting instructions provided adjacent to the burners and also located in this manual.
- A blocked vent roll-out switch is provided in the burner compartment. This switch is a manual reset. If the furnace fails to operate, contact a qualified service technician.
- Should the gas supply fail to shut off or if overheating occurs, shut off the gas valve to the furnace before shutting off the electrical supply. Then call a qualified service technician.
- Do not use this furnace if any part has been under water. A flood-damaged furnace is extremely dangerous. Attempts to use the furnace can result in fire or explosion. A qualified service technician should be contacted to inspect the furnace and to replace all gas controls, control system parts, electrical parts that have been wet or the furnace if deemed necessary.
- Determine the integrity of the installation regarding the flue gas vent, the return and supply air duct. Confirm the equipment is well supported and there are no signs of deterioration. The manufacturer recommends that main burner, ignition device and controls are inspected by a qualified service technician before each heating season.

SYSTEM OPERATION

THERMOSTATS

Set your thermostat for either heating or cooling then set it for the desired temperature. **DO NOT MOVE THE THERMOSTAT RAPIDLY ON AND OFF, OR BACK AND FORTH FROM HEAT TO COOL. THIS COULD DAMAGE YOUR EQUIPMENT.**

Always allow at least 5 minutes between changes. Find the temperature that is most comfortable to you, and then **LEAVE YOUR THERMOSTAT ALONE.** (Exception is for night or vacation “set back” to conserve energy).

Manually moving the thermostat up or down will not speed up temperature changes in your rooms. This only causes the thermostat switch to function at your command rather than responding to room temperature.

Heat generated by devices other than the furnace may interfere with thermostat performance. Therefore, lamps, radios, television sets, etc. should not be placed near the thermostat.

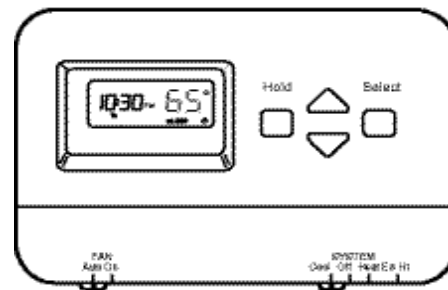


FIGURE 1: TYPICAL THERMOSTAT

INTERMITTENT IGNITION DEVICE

Your unit is equipped with a cycling pilot burner. It has a Pilot Relight control designed to automatically light the pilot burner each time the thermostat “calls” for heat.

CAUTION

This furnace is equipped with an intermittent pilot and automatic re-ignition system. **Do Not** attempt to manually relight the pilot. Personal injury could result.

When the thermostat calls for heat, pilot gas is supplied and at the same time, sparking occurs to light the pilot gas. With the pilot lit, the flame sensor rod closes a circuit to the ignitor control which then opens the gas valve to admit main burner gas.

When the room thermostat is satisfied, the electrical circuit to the gas valve is opened, closing off both main burner and pilot gas simultaneously. If the pilot burner should fail to light, contact your heating contractor or gas utility for service to insure that proper operating conditions are restored.

INPUT

The correct heat capacity of the furnace is regulated by the burner orifices and the gas pressure. The proper orifices are furnished but the gas pressure regulator must be adjusted by the installer or gas utility service technician.

OPERATING INSTRUCTIONS

TO SHUT DOWN THE FURNACE:

1. Close the main gas shutoff valve(s).
2. Turn off the electric power supply.

TO LIGHT THE FURNACE:

1. Do not attempt to light manually.
2. Open the main gas shutoff valve(s).
3. Adjust the set point of the room thermostat above the temperature in the space.
4. Turn on the electric power supply.
5. The draft fan will operate. After an adequate purge time, the electric spark igniter will light the burners.
6. The burners will extinguish and relight automatically upon the demand of the room thermostat.

VENT SAFETY SYSTEM:

This gas furnace is equipped with an automatic reset high temperature sensor or rollout switch which in the unlikely event of a sustained main burner flame rollout will shut off the flow of gas by closing the main gas valve. The ignition modules will also be disabled, preventing the flow of gas to the valves. The switch is located inside the gas heat access panel above the burner inlet. Flame rollout can be caused by blockage of the power vent system, improper gas pressure or adjustment. If this event occurs the furnace will not operate properly, gas supply to the furnace should be shut off and no attempt should be made to place the furnace in operation. The system should be inspected by a qualified service technician. Refer to Figure 2 for a typical installation.

100% SHUT OFF:

The ignition modules are designed for 100% shut-off. If the furnace fails to ignite within 85 seconds after a call for heat, the flow of gas (including pilot) will be shut off and the ignition module will lock out. The module can be reset by:

- A. Turning the system switch on the room thermostat to the "OFF" position and back to the "HEAT" position.
- B. Decreasing the set point of the room thermostat below the temperature in the conditioned space and returning it to its original setting.
- C. Opening and closing the unit's main disconnect switch.

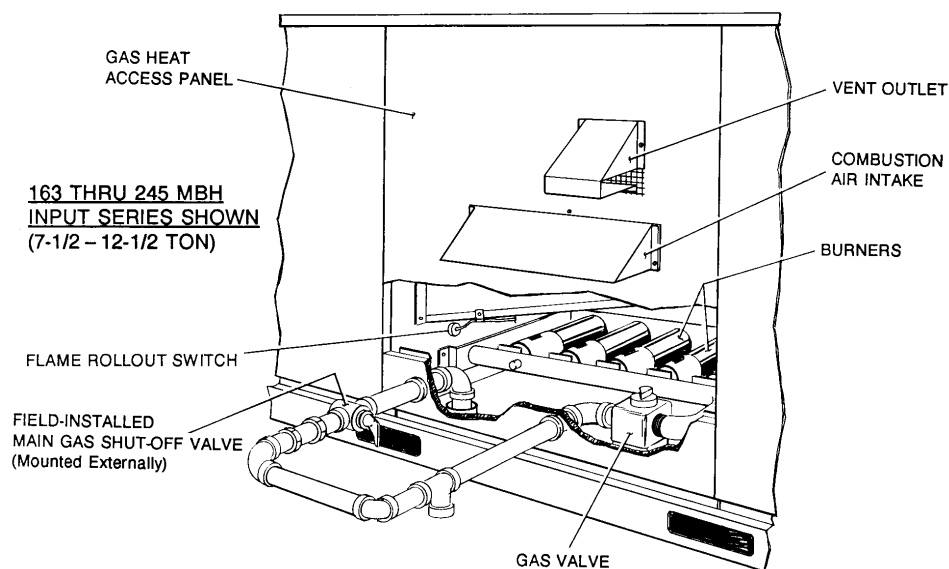


FIGURE 2: TYPICAL INSTALLATION

If the furnace continues to lock out, a qualified service technician should be called to determine the cause of the problem.

▲WARNING

ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD

Failure to follow safety warnings exactly could result in dangerous operation, serious injury, death or property damage.

Improper servicing could result in dangerous operation, serious injury, death or property damage.

- Before servicing, disconnect all electrical power to furnace.
- When servicing controls, label all wires prior to disconnecting. Reconnect wires correctly.
- Verify proper operation after servicing.

▲WARNING

PRIOR TO ANY OF THE FOLLOWING MAINTENANCE PROCEDURES, SHUT OFF ALL POWER TO THE UNIT, TO AVOID PERSONAL INJURY.

EXPLAIN UNIT FUNCTION

When the system is functioning properly, show the owner the location of all disconnect switches and the thermostat. Explain how to start and stop the unit and how to adjust temperature settings within the limitations of the system. Advise that the flue exhaust hood surface and the immediate area will experience high temperatures during the heating cycle, and that all unauthorized personnel and debris must be kept away from this area.

GENERAL MAINTENANCE

In order to insure long and trouble free service from your system, we recommend periodic inspection, cleaning, lubrication and adjustment by your installing Dealer/Contractor. Be sure to ask about this service. For those who prefer to do-it-yourself, please follow the instructions listed below to care for your system.

Snow or debris should not be allowed to accumulate in or around the unit. Do not permit overhanging structures or shrubs to obstruct outdoor air discharge, com-

busation air inlets or vent outlets on your unit. These provide air for combustion and ventilation. Adequate air is important to the safe and proper operation of the unit.

HEATING SYSTEM INSPECTION

It is the owner's responsibility to insure that an annual inspection of the entire heating portion of the unit is made by a qualified service technician. This should include inspection of the burner, heating element and flue for any corrosion or soot accumulation which may require cleaning and also checking of burner and controls for proper operation.

In addition, at least once during the heating season, the owner shall make a visual inspection of the flue outlet for evidence of black soot or blockage of flue outlet by leaves or other debris. If any soot is found, it is recommended a qualified service technician be called immediately. If any blockage is found, it must be cleared immediately.

Check for obvious signs of deterioration of the unit. Check that the return and supply ducts attached to the unit are sound and air tight. Check that the unit's physical support, concrete slab or roof curb, is sound and not in need of repair. Make sure there are no gaps between the roof curb and the unit where rain could leak into the building.

Start the furnace. The vent motor should start, the igniter will start to spark and ignite the pilot flame. After a short delay the main burner should ignite. If it does not, contact a qualified service technician for assistance. Check the appearance of the main burner flame. Adjust burner shutters so no yellow flame is observed in the heat exchanger tubes. (See Figure 3.) If flame adjustment cannot be made, obtain the assistance of a qualified service technician and refer to the PILOT CHECKOUT and BURNER AIR SHUTTER ADJUSTMENT sections in the UNIT INSTALLATION INSTRUCTION.

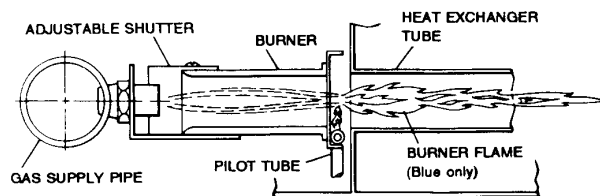


FIGURE 3: TYPICAL FLAME APPEARANCE

BURNER AND PILOT CHECK

Periodically (at least annually at the beginning of each heating season) make a visual check of the pilot and main burner flame. If necessary, adjust main burner pri-

mary air shutters to give a distinct, sharp blue flame as explained under BURNER AIR SHUTTER ADJUSTMENT. If it is not possible to adjust for the proper flame, the burners may need cleaning.

CLEANING BURNERS

Remove them from the furnace as explained in BURNER INSTRUCTIONS section in the Unit Installation Instructions. Clean burners with wire brush and vacuum as needed.

CLEANING FLUE PASSAGES AND HEATING ELEMENTS

With proper combustion adjustment, the heating element of a gas fired furnace will seldom need cleaning. If the element should become sooted, it can be cleaned as follows:

1. Remove the burner assembly as outlined in "BURNER INSTRUCTIONS" of the unit installation instructions.
2. Remove the unit roof from over the gas heat section.
3. Remove the top plate and the top draft blower wheel from the upper draft blower housing.
4. Remove the screws holding the top of the flue collector box. Carefully remove the top of the flue collector box without ripping the adjacent insulation. Then remove the center divider plate separating the upper and lower flue boxes.
5. On the inside of the flue collector box, remove the flue baffles from the tube interiors. Note the last bend of the baffle fits tightly against the tube forcing the end of the baffle to lock into the tube collar. This collar is formed when the tube is expanded into the end sheet. To remove, move the end of the baffle toward the center of the tube releasing the end of the baffle from the tube collar, then pull straight out of the tube. Refer to Figure 4.
6. Using a wire brush on a flexible wand, brush out the inside of each heat exchanger from the burner inlet and flue outlet ends.
7. Brush out the inside of the flue collector box and the flue baffles.
8. Run the wire brush down the vent hoods from the flue collector end.
9. If soot build-up is particularly bad, remove the vent motor and clean the wheel and housings. Run the wire brush down the flue extensions at the outlet of the vent housings.

10. After brushing is complete, blow all brushed areas with air or nitrogen. Vacuum as needed.

11. Replace parts in the order they were removed in Steps 1 thru 5.

12. When replacing the center and top of the flue collector box, be careful not to tear the adjoining insulation.

13. Ensure that all seams on the vent side of the combustion system are air tight. Apply a high temperature (+500°F) sealing compound where needed.

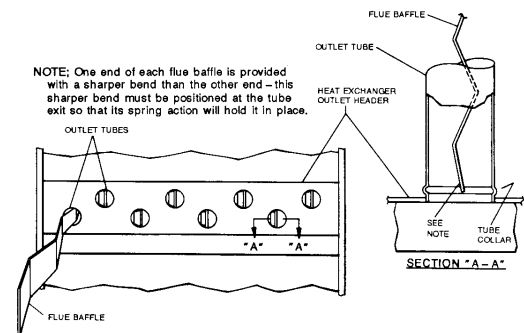


FIGURE 4: TYPICAL FLUE BAFFLE INSTALLATION

AIR FILTERS

Units up through 125 MBH input (3-6 Ton) are shipped with 1" throwaway type air filters. All other units contain 2" filters. The filter racks on 3-6 ton units will receive 1" or 2" filters. Filters can also be installed in the building at a suitable return air location if an economizer or outside air accessory is not used. Filters must always be used. They should be inspected once a month and thoroughly cleaned or replaced if it appears they are beginning to accumulate excessive dirt. Filter sizes and quantities are shown in the following table.

THROW AWAY FILTER SIZES (Inches)	QUANTITY PER UNIT (Nom, Tons)				
	3 - 6 TON	15 TON STD & HIGH EFF.	20 TON STD & HIGH EFF.	25 TON STD EFFICIENCY	15 - 25 TON ULTRA HIGH EFFICIENCY
14 x 20	2	~	~	~	~
14 x 25	1	~	~	~	~
12 x 24	~	~	~	12	12
16x 20	~	~	4	~	~
16 x 25	~	~	4	~	~
18 x 24	~	5	~	~	~

To install the filters, remove the filter access panel located to the left of the condensate drain connection as shown in Figure 5.

NOTE: Filters must be installed with "Air Flow" arrows pointing inward -- toward the indoor coil. In the event the spacers in the filter section are removed, they must be reinstalled in their original position.

Slide filters all the way into the filter racks provided. When more than one filter in a filter rack is required, they must butt each other when sliding into position. Replace the filter access panel.

BLOWER ASSEMBLY

Even with good filters properly in place, blower wheels and motors will become dust laden after many months of operation. The entire blower assembly should be inspected annually. If the motor and wheel are heavily coated with dust, they can be brushed and cleaned with a vacuum cleaner.

These units are supplied with blower shaft bearings that do not require maintenance but may be relubricated if desired. Every three years, using a low pressure grease gun, pump grease into the bearing grease fitting until grease just begins to show at the seals. Do not over lubricate. Use any lithium base grease recommended for ball bearing service.

WARNING

Perform all maintenance operations on the blower motor with electric power disconnected from the unit. Do not attempt to lubricate bearings with the unit in operation.

MOTORS

Outdoor fan motors are permanently lubricated and require no maintenance.

Ventor motor is factory lubricated for an estimated 10 year life.

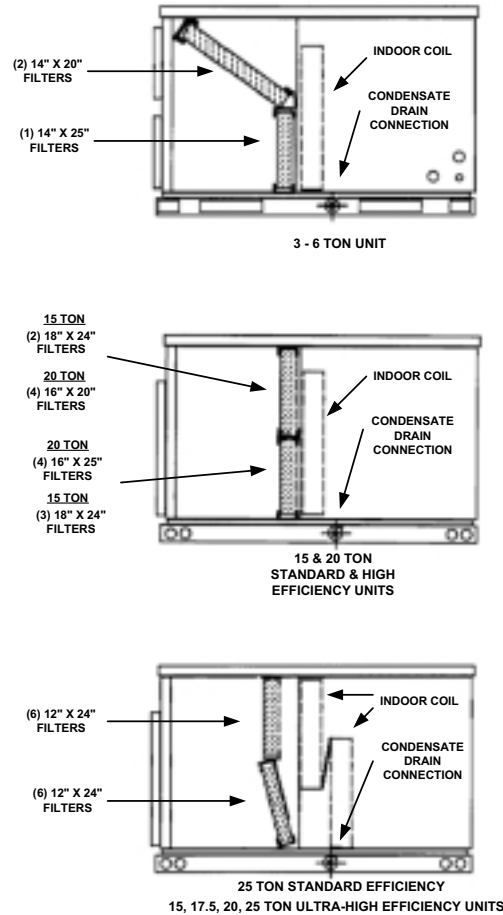


FIGURE 5: END VIEW LESS FILTER ACCESS PANEL

Indoor Blower Motor and Drive - The indoor blower motor features ball bearings that do not require periodic lubrication. Periodic lubrication of the motor and bearings can extend the life of components but is optional.

If desired, every three years, using a low pressure grease gun, pump grease into the bearing grease fitting until grease just begins to show at the seals. Do not over lubricate. Use any lithium base grease recommended for ball bearing service.

CONDENSER COIL

An annual check and cleaning, if necessary, of the outdoor coil should be done. Cleaning should be as often as necessary to keep the coil clean. Clean any debris and dirt from the outside coil face with a brush being careful not to damage the fins. If extremely dirty, a hose can be used to wash the coil from the inside out while brushing a soapy solution on the outside.

 **CAUTION**

Damage can occur if the bearings are overlubricated. Use grease sparingly.

REGISTERS

Supply and return air registers must be open when the unit is in operation. Obstructions must not be allowed to block airflow in or out of the registers.

TROUBLESHOOTING

BEFORE CALLING A SERVICE PERSON:

- A. Check thermostat setting and insure thermostat is calling for heat or cooling.
- B. Check thermostat for lint, etc.
- C. Check fuses or circuit breakers.
- D. Check filters for excessive dust accumulation.

REPLACEMENT PARTS

REPLACEMENT PARTS

SINGLE PACKAGE AIR CONDITIONER GAS/ELECTRIC (3 TON)

RENEWAL PARTS FORM No.	RESPECTIVE MODEL No.
530.18-RP2.1Y	D1CG036***
530.22-RP1Y	D1EG036***
530.18-RP6Y	D2CG036***
530.22-RP9Y	D2EG036***
530.18-RP8Y	D3CG036***
530.18-RP7.71Y	D4CG036***
530.18-RP8Y	D6CG036***
530.18-RP9Y	D7CG036***

SINGLE PACKAGE AIR CONDITIONER GAS/ELECTRIC (4 TON)

530.18-RP2.2Y	D1CG048***
530.22-RP3Y	D1EG048***
530.18-RP2.8Y	D2CG048***
530.22-RP10Y	D2EG048***
530.8-RP6.1Y	D3CG048***
530.18-RP6.8Y	D4CG048***
530.18-RP8.1Y	D6CG048***
530.18-RP9.2Y	D7CG048***

SINGLE PACKAGE AIR CONDITIONER GAS/ELECTRIC (5 TON)

530.18-RP2.3Y	D1CG060***
530.18-RP2.9Y	D2CG060***
530.22-RP11Y	D2EG060***
530.18-RP6.2Y	D3CG060***
530.18-RP6.9Y	D4CG060***
530.18-RP7.4Y	D6CG060***
530.18-RP8.2Y	D6CG060***
530.18-RP9.4Y	D7CG060***

SINGLE PACKAGE AIR CONDITIONER GAS/ELECTRIC (6 TON)

530.18-RP2.31Y	D1CG072***
----------------	------------

SINGLE PACKAGE AIR CONDITIONER GAS/ELECTRIC (6.3 TON)

RENEWAL PARTS FORM No.	RESPECTIVE MODEL No.
530.18-RP2.6Y	D2CG076***
530.18-RP6.3Y	D3CG076***
530.18-RP6.10Y	D4CG076***
530.18-RP8.3Y	D6CG076***

SINGLE PACKAGE AIR CONDITIONER GAS/ELECTRIC (15 TON)

530.18-RP 4.6Y	D1CG180***
530.18-RP 2.16Y	D2CG180***
530.22-RP 7Y	D1EG180***
	D1HG180***
035-18898-000	DJ180 ***

SINGLE PACKAGE AIR CONDITIONER GAS/ELECTRIC (17.5 TON)

035-18898-000	DJ210***
---------------	----------

SINGLE PACKAGE AIR CONDITIONER GAS/ELECTRIC (20 TON)

530.18-RP 4.7Y	D1CG240***
530.18-RP 2.16Y	D2CG240***
530.22-RP 8Y	D1EG240***
	D1HG40***
035-18898-000	DJ240 ***

SINGLE PACKAGE AIR CONDITIONER GAS/ELECTRIC (25 TON)

530.18-RP4.8Y	D1CG300***
035-17321-000	D2CG300***
035-18898-000	DJ300***

All forms referenced in this instruction may be ordered from:

Standard Register
 Norman, OK 73069
 Toll Free: 877-318-9575 Fax: 877-379-7920

OWNER please have your installer fill in the following information immediately after unit has been installed and properly operating.

Installed by _____

Installer's Address _____

Installation Date _____

Owner's Name _____

Owner's Address _____

Equipment installed at (address) _____

Model Number _____ Serial Number _____

Distributor from whom the equipment was purchased _____

The owner should keep this information in a place where it can be found if needed for warranty purposes.



Subject to change without notice. Printed in U.S.A.
 Copyright © by Unitary Products Group 2002. All rights reserved.

035-18843-000-A-0402
 Supersedes: Nothing

Unitary
 Products
 Group

5005
 York
 Drive

Norman
 OK
 73069