

FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler – features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

ACCESSORIES AND CONSUMABLES

In the AEG webshop, you'll find everything you need to keep all your AEG appliances looking spotless and working perfectly. Along with a wide range of accessories designed and built to the high quality standards you would expect, from specialist cookware to cutlery baskets, from bottle holders to delicate laundry bags...



Visit the webshop at:
www.aeg-electrolux.com/shop

CONTENTS

4	Safety information
7	Product description
8	Before first use
8	Daily use
10	Using the accessories
10	Additional functions
10	Helpful hints and tips
19	Care and cleaning
21	What to do if..
22	Environment concerns

The following symbols are used in this user manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance.



General information and tips



Environmental information

Subject to change without notice



SAFETY INFORMATION

Before the installation and use, read this manual carefully:

- For your personal safety and the safety of your property
- For the respect of the environment
- For the correct operation of the appliance.

Always keep these instructions with the appliance also if you move or sell it.

The manufacturer is not responsible if incorrect installation or use results in damage.

Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved. Children shall not play with the appliance.
- Keep all packaging away from children. There is the risk of suffocation or physical injury.
- Keep children and animals away from the appliance when the door is open or the appliance is in operation. There is the risk of injury or other permanent disability.
- If the appliance has Child Lock or Key Lock (Control Lock) function, use it. It prevents children and animals from accidental operation of the appliance.

General safety

- Do not change the specifications of this appliance. There is the risk of injury and damage to the appliance.
- Do not let the appliance stay unattended during operation.
- Switch off the appliance after each use.

Installation

- Only an approved electrician can install and connect the appliance. Contact an approved service centre. This is to prevent the risks of structural damage or physical injury.
- Make sure that the appliance is not damaged because of transport. Do not connect a damaged appliance. If necessary, contact the supplier.
- Remove all packaging, stickers and layers from the appliance before first use. Do not remove the rating plate. It can invalidate the guarantee.
- Make sure that the appliance is disconnected from the power supply during the installation.
- Be careful when you move the appliance. The appliance is heavy. Always use safety gloves. Do not lift the appliance by the handle.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.
- You must have correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- Before the installation, make sure that the kitchen cabinet has the recess dimensions applicable.

- Make sure that the appliance is installed below and adjacent safe structures.
- Keep the minimum distances to the other appliances and units.
- The appliance cannot be positioned on a base.
- Built in ovens and built in cooking surfaces are attached with special connection system. To prevent damage to the appliance, only use an appliance with the appliances from the same manufacturer.

Electrical connection

- The appliance must be earthed.
- Make sure that the electrical data on the rating plate agree with your domestic power supply.
- Information on the voltage is on the rating plate.
- Always use a correctly installed shockproof socket.
- Do not use multi-way plugs, connectors and extension cables. There is the risk of fire.
- Do not replace or change the mains cable. Contact the service centre.
- Make sure not to squash or cause damage to the mains plug (if applicable) and cable behind the appliance.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug – if applicable.

Use

- The appliance is only for domestic use. Do not use the appliance for commercial and industrial use.
- Only use the appliance for domestic cooking tasks. This is to prevent physical injury to persons or prevent damage to property.
- Do not use the appliance as a work surface or storage surface.
- The interior of the appliance and the accessories become hot during use. There is the risk of burns. Use safety gloves when you insert or remove the accessories or pots.
- Be careful when you remove or install the accessories to prevent damage to the oven enamel.
- Always stay away from the appliance when you open the door while the appliance is in operation. Hot steam can release. There is the risk of skin burns.
- To prevent damage or discoloration to the enamel:
 - do not put any objects directly on the appliance floor and do not cover it with aluminium foil;
 - do not put hot water directly into the appliance;
 - do not keep moist dishes and food in the appliance after you finish the cooking.
- Discoloration of the enamel has no effect on the performance of the appliance so it is not a defect in the sense of the warranty law.
- Do not apply pressure on the open door.
- Always close the appliance door when you cook, even while grilling.

Care and cleaning

- Before maintenance, switch off the appliance and disconnect the appliance from the power supply.
- Before maintenance, make sure that the appliance is cold. There is the risk of burns. There is the risk that the glass panels can break.
- Keep the appliance clean at all times. A build-up of fats or other foodstuff can result in a fire.
- Regular cleaning prevents the surface material from deteriorating
- Use a deep baking tray for very moist cakes to prevent that fruit juices cause stains that can be permanent.
- For your personal safety and the safety of your property, only clean the appliance with water and a soap. Do not use flammable products or products that can cause corrosion.
- Do not clean the appliance with steam cleaners, high-pressure cleaners, sharp objects, abrasive cleaning agents, abrasive sponges and stain removers
- If you use an oven spray, follow the instructions from the manufacturer.
- Do not clean the glass door with abrasive cleaning agents or metal scraper. Heat resistant surface of the inner glass can break and shatter.
- When the door glass panels are damaged they become weak and can break. You must replace them. Contact the service centre.
- Be careful when you remove the door from the appliance. The door is heavy!
- Do not clean catalytic enamel (if applicable).

Risk of fire

- Open the door carefully. The use of ingredients with alcohol can cause a mixture of alcohol and air. There is the risk of fire.
- Do not let sparks or open flames come near the appliance when you open the door.
- Do not put flammable products or items that are wet with flammable products, and/or fusible objects (made of plastic or aluminium) in, near or on the appliance.

Oven lamp

- Bulb lamps used in this appliance are special lamps selected for household appliances use only. They cannot be used for the full or partial illumination of a household room.
- If it becomes necessary to replace the lamp use one of the same power and specifically designed for household appliances only.
- Disconnect the appliance from the power supply before the replacement of the oven lamp. There is the risk of electrical shock.

Service centre

- Only an approved engineer can repair or work on the appliance. Contact an approved service centre.
- Use only original spare parts.


Disposal of the appliance

- To prevent the risk of physical injury or damage

- Disconnect the appliance from the power supply.
- Cut off the mains cable and discard it.
- Discard the door catch. This prevents children or small animals from being closed inside of the appliance. There is the risk of suffocation.

PRODUCT DESCRIPTION


General overview

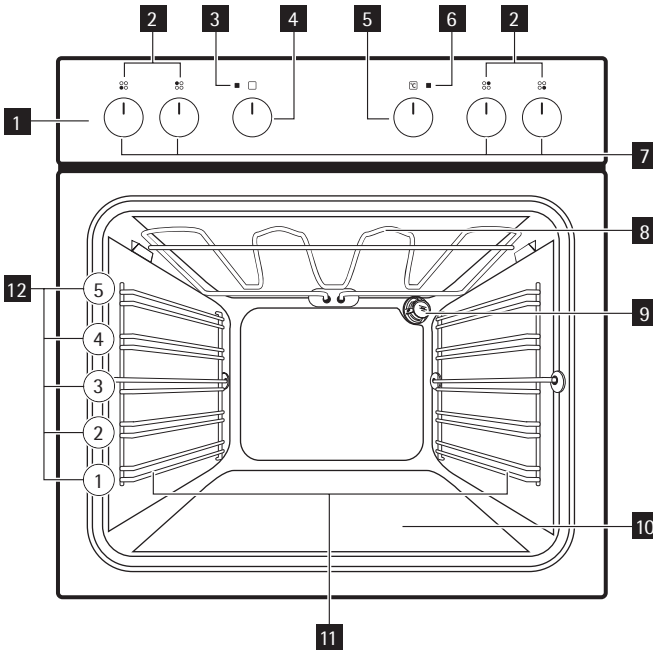


- 1** Control panel
- 2** Lamps/symbols of the cooking zones
- 3** Power lamp/symbol
- 4** Control knob for oven functions
- 5** Control knob for temperature
- 6** Temperature lamp/symbol/indicator
- 7** Control knobs for cooking zones
- 8** Heating element
- 9** Oven lamp
- 10** Bottom heat
- 11** Oven shelf runners, removable
- 12** Shelf positions

Oven accessories

- **Wire shelf**
For cookware, cake tins, roasts.

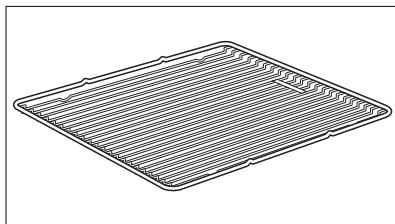

- **Baking tray**
For cakes and biscuits.

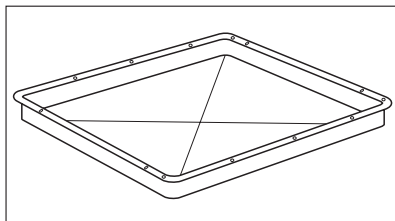

BEFORE FIRST USE



WARNING!

Refer to "Safety information" chapter.

Initial Cleaning

- Remove all parts from the appliance.
- Clean the appliance before first use.



Refer to chapter "Care and Cleaning".

DAILY USE



WARNING!

Refer to "Safety information" chapter.







Activating and deactivating the appliance

1. Turn the control knob for the oven functions to select an oven function.
2. Turn the control knob for the temperature to select a temperature.
3. To deactivate the appliance turn the control knobs for the oven functions and temperature to off position.

i Knob symbol, indicator or lamp (depends on the model – refer to the appliance overview):

- The indicator comes on when the oven heats up.
- The lamp comes on when the appliance operates.
- The symbol shows whether the knob controls one of the cooking zones, the oven functions or the temperature.

Oven Functions


	Oven function	Application
	Light	Use this function to light up the oven interior.
	Conventional Cooking	To bake and roast on one oven level.
	Top Heat	To brown bread, cakes and pastries.
	Bottom Heat	To bake cakes with crispy or crusty bases and to preserve food.
	Grilling	To grill flat food in the middle of the grill and to toast.
	Fast Grilling	To grill flat food in large quantities and to toast.

Cooking zones

i You can operate the hob with the control knobs for the cooking zones. Refer to the user manual for hob.

Hob cooking zones

i Indicators for the cooking zones (refer to "General overview ") show which zone you set.

Control knob	Function
	Keep warm setting
0	Off position
1-9	Heat settings (1 = lowest heat setting; nine = highest heat setting)

Operating the hob:

1. Turn the temperature control knob to set the temperature.
2. To end the cooking process, turn the control knob to the off position.

Automatic heat-up function

i This information is applicable only if you install the hob with Automatic heat up function!

The automatic heat-up function heats the cooking zone with full power for some time.

Activating heat-up function:

1. To activate the function turn the control knob clockwise as far as possible (beyond the highest heat setting).
2. To continue the cooking process turn the control knob to set the temperature.
3. To end the cooking process turn the control knob to the off position.

USING THE ACCESSORIES




WARNING!

Refer to "Safety information" chapter.

Inserting the Oven Accessories



The wire shelf has side edges. These edges and the shape of the guide-bars causes the anti-tilt safety for the oven accessories.

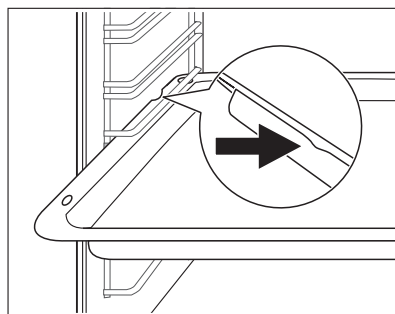

ADDITIONAL FUNCTIONS

Cooling fan

When the appliance operates, the cooling fan activates automatically to keep the surfaces of the appliance cool. If you deactivate the appliance, the cooling fan can continue to operate until the appliance cools down.

HELPFUL HINTS AND TIPS

Examples of cooking applications

The data in the table is for guidance only.

Heat setting	Use to:	Time	Hints
1	Keep cooked foods warm	as required	Cover
1-2	Hollandaise sauce, melt: butter, chocolate, gelatine	5-25 min	Mix occasionally

Heat setting	Use to:	Time	Hints
1-2	Solidify: fluffy omelettes, baked eggs	10-40 min	Cook with a lid on
2-3	Simmer rice and milkbased dishes, heating up ready-cooked meals	25-50 min	Add at least twice as much liquid as rice, stir milk dishes part way through
3-4	Steam vegetables, fish, meat	20-45 min	Add a few tablespoons of liquid
4-5	Steam potatoes	20-60 min	Use max. ¼ l water for 750 g of potatoes
4-5	Cook larger quantities of food, stews and soups	60-150 min	Up to 3 l liquid plus ingredients
6-7	Gentle fry: escalope, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts	as required	Turn halfway through
7-8	Heavy fry, hash browns, loin steaks, steaks	5-15 min	Turn halfway through
9	Boil large quantities of water, cook pasta, sear meat (goulash, pot roast), deep fry chips		



The temperature and baking times in the tables are guidelines only. They depend on the recipes, quality and quantity of the ingredients used.

Baking

General instructions

- Your new oven may bake or roast differently to the appliance you had before. Adapt your usual settings (temperature, cooking times) and shelf levels to the values in the tables.
- With longer baking times, the oven can be switched off about 10 minutes before the end of baking time, to use the residual heat.

When you use frozen food, the trays in the oven can twist during baking. When the trays get cold again, the distortion will be gone.

How to use the Baking Tables

- We recommend to use the lower temperature the first time.
- If you cannot find the settings for a special recipe, look for the one that is almost the same.
- Baking time can be extended by 10-15 minutes, if you bake cakes on more than one level.
- Cakes and pastries at different heights do not always brown equally at first. If this occurs, do not change the temperature setting. The differences equalize during the baking procedure.

Baking in tins

Type of baking	Oven function	Oven level	Temperature °C	Time Hours:mins.
Ring cake or brioche	Conventional Cooking	1	160-180	0:50-1:10
Madeira cake/ fruit cakes	Conventional Cooking	1	150-170	1:10-1:30
Sponge cake	Conventional Cooking	2	160-180	0:30-0:45
Flan base - short pastry	Conventional Cooking	2	190-210 ¹⁾	0:10-0:25
Flan base - sponge mixture	Conventional Cooking	2	170-190	0:20-0:25
Apple pie (2tins Ø20cm, diagonally off set)	Conventional Cooking	1	180	1:10-1:30
Savoury flan (e. g. quiche lorraine)	Conventional Cooking	1	180-200	0:40-1:00
Cheesecake	Conventional Cooking	1	160-180	1:00-1:30

1) Pre-heat the oven

Cakes/pastries/breads on baking trays

Type of baking	Oven function	Oven level	Temperature °C	Time Hours:mins.
Plaited bread/ bread crown	Conventional Cooking	2	170-190	0:40-0:50
Christmas stollen	Conventional Cooking	2	160-180 ¹⁾	0:50-1:10
Bread (rye bread): 1. First part of baking process. 2. Second part of baking process.	Conventional Cooking	1	1. 230 ¹⁾ 2. 160-180	1. 00:25 2. 0:30-1:00
Cream puffs/ eclairs	Conventional Cooking	3	190-210 ¹⁾	0:20-0:35
Swiss roll	Conventional Cooking	3	180-200 ¹⁾	0:10-0:20
Cake with crumble topping (dry)	Conventional Cooking	3	150-160	0:20-0:40
Buttered almond cake/sugar cakes	Conventional Cooking	3	190-210 ¹⁾	0:15-0:30

Type of baking	Oven function	Oven level	Temperature °C	Time Hours:Mins.
Fruit flans (made with yeast dough/ sponge mixture) ²⁾	Conventional Cooking	3	170	0:35-0:50
Fruit flans made with short pastry	Conventional Cooking	3	170-190	0:40-1:00
Yeast cakes with delicate toppings (e.g. quark, cream, custard)	Conventional Cooking	3	160-180 ¹⁾	0:40-1:20
Pizza (with a lot of topping) ²⁾	Conventional Cooking	1	180-200 ¹⁾	0:30-0:50
Pizza (thin crust)	Conventional Cooking	1	220-250 ¹⁾	0:15-0:25
Unleavened bread	Conventional Cooking	1	230-250	0:10-0:15
Tarts (CH)	Conventional Cooking	1	210-230	0:35-0:50

1) Pre-heat the oven

2) Use deep pan

Biscuits

Type of baking	Oven function	Oven level	Temperature °C	Time Hours:Mins.
Short pastry biscuits	Conventional Cooking	3	170-190	0:10-0:20
Short bread/ Pastry Stripes	Conventional Cooking	3	160 ¹⁾	0:20-0:30
Biscuits made with sponge dough	Conventional Cooking	3	170-190	0:20-0:30
Pastries made with egg white, meringues	Conventional Cooking	3	80-100	2:00-2:30
Macaroons	Conventional Cooking	3	120-130	0:30-0:60
Biscuits made with yeast dough	Conventional Cooking	3	170-190	0:20-0:40
Puff pastries	Conventional Cooking	3	190-210 ¹⁾	0:20-0:30
Rolls	Conventional Cooking	3	190-210 ¹⁾	0:10-0:25

Type of baking	Oven function	Oven level	Temperature °C	Time Hours:mins.
Small cakes (20per tray)	Conventional Cooking	3	170 ¹⁾	0:20-0:30

1) Pre-heat the oven

Tips on baking

Baking results	Possible cause	Remedy
The cake is not browned enough underneath	Wrong oven level	Place cake lower
The cake sinks (becomes soggy, lumpy, streaky)	Oven temperature too high	Use a slightly lower setting
The cake sinks (becomes soggy, lumpy, streaky)	Baking time too short	Set a longer baking time. Baking times cannot be reduced by setting higher temperatures
The cake sinks (becomes soggy, lumpy, streaky)	Too much liquid in the mixture	Use less liquid. Pay attention to mixing times, especially if using mixing machines
Cake is too dry	Oven temperature too low	Set oven temperature higher
Cake is too dry	Baking time too long	Set a shorter baking time
Cake browns unevenly	Oven temperature too high and baking time too short	Set a lower oven temperature and a longer baking time
Cake browns unevenly	Mixture is unevenly distributed	Spread the mixture evenly on the baking tray
Cake does not cook in the baking time given	Temperature too low	Use a slightly higher oven setting

Bakes and gratins table

Dish	Oven function	Shelf position	Temperature °C	Time Hours:mins.
Pasta bake	Conventional Cooking	1	180-200	0:45-1:00
Lasagne	Conventional Cooking	1	180-200	0:25-0:40
Vegetables au gratin ¹⁾	Turbo Grilling	1	160-170	0:15-0:30
Baguettes topped with melted cheese ¹⁾	True Fan Cooking	1	160-170	0:15-0:30
Sweet bakes	Conventional Cooking	1	180-200	0:40-0:60
Fish bakes	Conventional Cooking	1	180-200	0:30-1:00

Dish	Oven function	Shelf position	Temperature °C	Time Hours:mins.
Stuffed vegetables	True Fan Cooking	1	160-170	0:30-1:00

1) Pre-heat the oven

Roasting

Roasting dishes

- Use heat-resistant ovenware to roast (please read the instructions of the manufacturer).
- Large roasting joints can be roasted directly in the deep pan or on the wire shelf above the deep pan (if present).
- Roast lean meats in a roasting tin with a lid. This will keep the meat more succulent.
- All types of meat, that can be browned or have crackling, can be roasted in the roasting tin without the lid.

Roasting with Conventional Cooking

Beef

Type of meat	Quantity	Oven function	Shelf position	Temperature °C	Time mins.
Pot roast	1-1.5 kg	Conventional Cooking	1	230	120-150
Roast beef or fillet: rare	per cm. of thickness	Conventional Cooking	1	230-250 ¹⁾	6-8
Roast beef or fillet: medium	per cm. of thickness	Conventional Cooking	1	220-230 ¹⁾	8-10
Roast beef or fillet: well done	per cm. of thickness	Conventional Cooking	1	200-220 ¹⁾	10-12

1) Pre-heat the oven

Pork

Type of meat	Quantity	Oven function	Shelf position	Temperature °C	Time mins.
Shoulder, neck, ham joint	1-1.5 kg	Conventional Cooking	1	210-220	90-120
Chop, spare rib	1-1.5 kg	Conventional Cooking	1	180-190	60-90
Meat loaf	750 g - 1 kg	Conventional Cooking	1	170-190	50-60
Porkknuckle (precooked)	750 g - 1 kg	Conventional Cooking	1	200-220	90-120

Veal

Type of meat	Quantity	Oven function	Shelf position	Temperature °C	Time mins.
Roast veal	1 kg	Conventional Cooking	1	110-220	90-120
Knuckle of veal	1.5-2 kg	Conventional Cooking	1	200-220	150-180

Lamb

Type of meat	Quantity	Oven function	Shelf position	Temperature °C	Time mins.
Leg of lamb, roast lamb	1.5-2 kg	Turbo Grilling	1	210-220	90-120
Saddle of lamb	1.5-2 kg	Turbo Grilling	1	210-220	40-60

Game

Type of meat	Quantity	Oven function	Shelf position	Temperature °C	Time mins.
Saddle of hare, leg of hare	up to 1 kg	Conventional Cooking	1	220-240 ¹⁾	30-40
Saddle of venison	1.5-2 kg	Conventional Cooking	1	210-220	60-90
Haunch of venison	1.5-2 kg	Conventional Cooking	1	180-210	90-120

1) Pre-heat the oven

Poultry

Type of meat	Quantity	Oven function	Shelf position	Temperature °C	Time mins.
Poultry portions	200-250g each	Conventional Cooking	1	220-250	20-40
Half chicken	400-500g each	Conventional Cooking	1	220-250	35-50
Chicken, pou-lard	1-1.5 kg	Conventional Cooking	1	220-250	50-70
Duck	1.5-2 kg	Conventional Cooking	1	210-220	80-100
Goose	3.5-5 kg	Conventional Cooking	1	200-210	150-180
Turkey	2.5-3.5 kg	Conventional Cooking	1	200-210	120-180

Type of meat	Quantity	Oven function	Shelf position	Temperature °C	Time mins.
Turkey	4-6 kg	Conventional Cooking	1	180-200	180-240

Fish

Type of meat	Quantity	Oven function	Shelf position	Temperature °C	Time mins.
Whole fish	1-1.5 kg	Conventional Cooking	1	210-220	40-70

Grilling

Always grill with the maximum temperature setting.



CAUTION!

Always grill with the oven door closed.



Always pre-heat the empty oven with the grill functions for 5 minutes.

- Set the shelf in the shelf level as recommended in the grilling table.
- Always set the pan to collect the fat into the first shelf level.
- Grill only flat pieces of meat or fish.

Grilling

Food to be grilled	Temperature	Oven level	Grilling time (mins.)	
			1st side	2nd side
Roast beef	210-230	2	30-40	30-40
Filet of beef	230	3	20-30	20-30
Back of pork	210-230	2	30-40	30-40
Back of veal	210-230	2	30-40	30-40
Back of lamb	210-230	3	25-35	20-25
Whole Fish, 500-1000g	210-230	3/4	15-30	15-30

Fast Grilling

Food to be grilled	Oven level	Grilling time(mins.)	
		1st side	2nd side
Burgers	4	8-10	6-8
Pork fillet	4	10-12	6-10
Sausages	4	10-12	6-8
Fillet steaks, veal steaks	4	7-10	6-8
Toast ¹⁾	5	1-3	1-3

Food to be grilled	Oven level	Grilling time(mins.)	
		1st side	2nd side
Toast with topping	4	6-8	-

1) Pre-heat the oven

Preserving

Things to note:

- Use only preserve jars of the same dimensions available on the market.
- Do not use jars with twist-off and bayonet type lids, or metal tins.
- Use the first shelf from the bottom for this function.
- Put no more than six one-litre preserve jars on the baking tray.
- Fill the jars up to the same level and close with a clamp.
- The jars cannot touch each other.
- Put approximately 1/2 litre of water into the baking tray to give sufficient moisture in the oven.
- When the liquid in the jars starts to simmer (after approx. 35-60 minutes with one-litre jars), stop the oven or decrease the temperature to 100°C (see the table).

Soft fruit

Preserve	Temperature in °C	Cooking time until simmering in mins.	Continue to cook at 100°C in mins.
Strawberries, blueberries, raspberries, ripe gooseberries	160-170	35-45	-

Stone fruit

Preserve	Temperature in °C	Cooking time until simmering in mins.	Continue to cook at 100°C in mins.
Pears, guinces, plums	160-170	35-45	10-15

Vegetables

Preserve	Temperature in °C	Cooking time until simmering in mins.	Continue to cook at 100°C in mins.
Carrots ¹⁾	160-170	50-60	5-10
Cucumbers	160-170	50-60	-
Mixed pickles	160-170	50-60	5-10
Kohlrabi, peas, asparagus	160-170	50-60	15-20

1) Leave standing in oven when switched off

Information on acrylamides

Important! According to the newest scientific knowledge, if you brown food (specially the one which contains starch), acrylamides can pose a health risk. Thus, we recommend that you cook at the lowest temperatures and do not brown food too much.

CARE AND CLEANING



WARNING!

Refer to "Safety information" chapter.

Notes on cleaning:



- Clean the front of the appliance with a soft cloth with warm water and cleaning agent.
- To clean metal surfaces use a usual cleaning agent
- Clean the oven interior after each use. Thus you can remove dirt more easily and it does not burn on.
- Clean stubborn dirt with a special oven cleaner.
- Clean all oven accessories (with a soft cloth with warm water and cleaning agent) after each use and let them dry.
- If you have nonstick accessories, do not clean them using an aggressive agents, sharp edged objects or dishwasher. It can cause a damage to the nonstick coating.

Shelf support

You can remove the shelf support to clean the side walls.

Removing the shelf support

1. Pull the front of the shelf support away from the side wall.
2. Pull the shelf support from the back of the side wall to remove it.

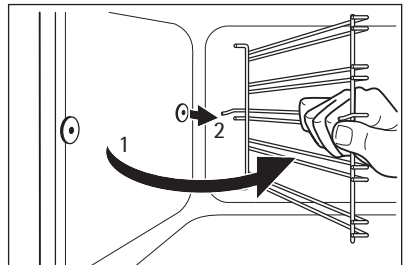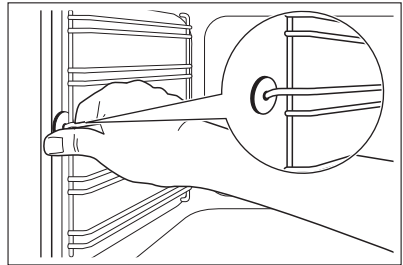

To install the shelf support follow the procedure in reverse.



Valid with telescopic runners:
The retaining pins on the telescopic shelf runners must point to the front!

Oven lamp



WARNING!

There is a risk of electrical shock.
Oven lamp and the lamp glass cover can be hot.

Before you change the oven lamp:

- Deactivate the appliance.
- Remove the fuses from the fuse box or deactivate the circuit breaker.



CAUTION!

Put a cloth on the bottom of the interior of the appliance. It prevents damage to the lamp glass cover and the cavity.

Replacing the oven lamp:

1. You can find the lamp glass cover at the back of the cavity.
Turn the lamp glass cover counterclockwise to remove it.
2. Clean the glass cover.
3. If necessary, replace the oven lamp with applicable 300°C heat-resistant oven lamp.



Use the same oven lamp type.

4. Install the glass cover.

Oven Ceiling

You can fold down the heating element on the oven ceiling to clean the oven ceiling easily.




WARNING!

Before you fold down the heating element deactivate the appliance. Make sure that the appliance is cold. There is a risk of burns!

Folding down the heating element

1. Remove the shelf support.
2. Hold the heating element with the two hands at the front
3. Pull it forwards against the spring pressure and out along the support on both sides.
4. The heating element folds down.
The oven ceiling is ready to clean.

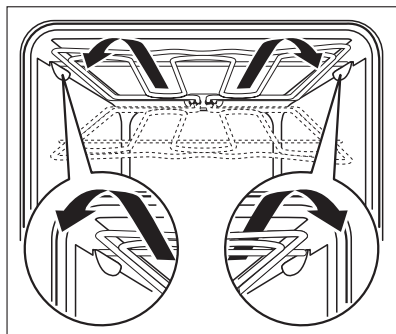

Installing the heating element

1. Install the heating element in opposite sequence.



Install the heating element correctly on the two sides above the support on the inner wall of the appliance.

2. Install shelf support.

Oven door and glass panels

To clean the oven door remove it.




CAUTION!

Be careful when you remove the door from the appliance. The door is heavy!

Removing the oven door

1. Open the oven door as far as it goes.
2. Lift up clamping levers (A) on the two door hinges fully.
3. Close the oven door until the first position (angle approximately 45°).
4. Hold of the oven door with one hand on each side and pull it away from the oven at an upwards angle.
5. Now you can remove the inner glass panels and clean them.

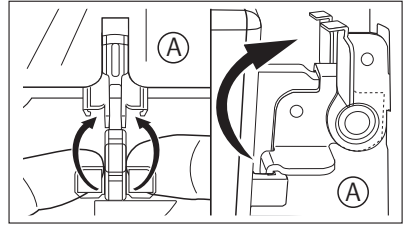


i To install the door follow the procedure in reverse.

i The number of glass panels depends on the model.


! **CAUTION!**
Put the oven door with the outer side down on a soft and level surface to prevent scratches

Removing and cleaning the door glass panels

1. Remove the oven door.
2. Hold the door t (B) on the top edge of the door at the two sides and push inwards to release the clip seal.
3. Pull the door t to the front to remove it.

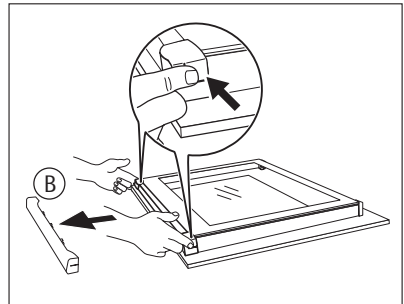

4. Hold the door glass panels on their top edge one by one and pull them up out of the guide
5. Clean the door glass panels.

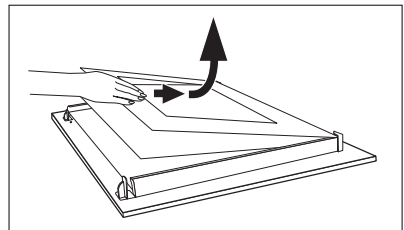

i To install panels follow the procedure in reverse. Install the smaller panel first, then the larger.

WHAT TO DO IF...

! **WARNING!**
Refer to "Safety information" chapter.

Problem	Possible cause	Remedy
The cooking zones do not operate	Consult the operating instructions for the built-in cooking surface	
The oven does not heat up	The oven is not switched on	Switch on the oven (refer to chapter "Daily use")
The oven does not heat up	The fuse in the fuse box is released	Control the fuse. If the fuse is released more than one time, refer to a qualified electrician.
The oven lamp does not operate	The oven lamp is defective	Replace the oven lamp
Steam and condensation settle on the food and in the oven cavity	You left the dish in the oven for too long	Do not leave the dishes in the oven for longer than 15-20 minutes after the cooking process ends

If you cannot find a solution to the problem yourself, contact your dealer or the service centre.

The necessary data for the service centre is on the rating plate. The rating plate is on the front frame of the oven cavity.


We recommend that you write the data here:

Model (MOD.)

Product number (PNC)

Serial number (S.N.)

ENVIRONMENT CONCERNS

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.



Packaging material

The packaging material is environmentally-friendly and recyclable. Plastic parts are marked with international abbreviations such as PE, PS, etc. Dispose of the packaging material in the containers provided for this purpose at your local waste management facility.

www.aeg-electrolux.com/shop

892944983 - D - 392010

