

Low Pressure

# Fluid Regulators

309474K

EN



**Important Safety Instructions**

Read all warnings and instructions in this manual.  
Save these instructions.



Model 233757 Shown

# Contents

|   |           |  |           |
|---|-----------|--|-----------|
| <b>List of Models</b> .....   | <b>3</b>  | Mechanical Fluid Pressure Regulators<br>Part Nos. 233757, 233774, 234263, and<br>234273 .....                | 16        |
| <b>Introduction</b> .....   | <b>6</b>  | Mechanical Back Pressure Regulators<br>Part Nos. 233758, 233811, 233950, 234255,<br>234261, and 234262 ..... | 17        |
| Back Pressure Regulators .....  | 6         | Pneumatic Fluid Pressure Regulators<br>Part Nos. 233773, 233809, 234272, and<br>234256 .....                 | 18        |
| Fluid Pressure Regulators .....   | 6         | Pneumatic Back Pressure Regulators<br>Part Nos. 233810 and 234257 .....                                      | 19        |
| <b>Installation</b> .....   | <b>8</b>  | <b>Technical Data</b> .....  | <b>20</b> |
| <b>Operation</b> .....  | <b>11</b> | <b>Accessory Gauges</b> .....  | <b>21</b> |
| Flush Before First Use .....  | 11        | <b>Flow Rate Data</b> .....  | <b>21</b> |
| Pressure Relief Procedure .....   | 11        | <b>Mounting Dimensions</b> .....   | <b>22</b> |
| Adjusting the Regulator .....   | 11        | <b>Graco Warranty</b> .....  | <b>24</b> |
| <b>Troubleshooting</b> .....  | <b>12</b> |  |           |
| <b>Maintenance</b> .....  | <b>13</b> |  |           |
| Flushing .....  | 13        |  |           |
| Cleaning and Repair .....   | 13        |  |           |
| <b>Parts</b> .....  | <b>14</b> |  |           |
| Mechanical Fluid Pressure Regulators<br>Part Nos. 233759 and 234267 ..... | 14        |  |           |
| Mechanical Back Pressure Regulators<br>Part Nos. 233812 and 234258 .....  | 15        |  |           |

## Manual Conventions

### Warning

**WARNING**

A warning alerts you to the possibility of serious injury or death if you do not follow the instructions.

Symbols, such as fire and explosion (shown above), alert you to a specific hazard and direct you to read the indicated hazard warnings (pages 4-5) for detailed information.

### Caution

**CAUTION**


A caution alerts you to the possibility of damage to or destruction of equipment if you do not follow the instructions.

# List of Models

| Fluid Pressure Regulators |        |                                |                               |                                   |   |
|---------------------------|--------|--------------------------------|-------------------------------|-----------------------------------|---|
| Part No.                  | Series | Model                          | Type                          | Maximum Fluid Inlet Pressure      | Regulated Pressure Range                  |
| 233757<br>234263          | B<br>B | P20-VM<br>P20-VM npt           | Mechanical,<br>fluid pressure | 580 psi (4000 kPa, 40 bar)        | 15-290 psi<br>(100-2000 kPa, 1-20 bar)    |
| 233759<br>234267          | B<br>B | P50-VM<br>P50-VM npt           | Mechanical,<br>fluid pressure | 1015 psi (7000 kPa, 70 bar)       | 145-725 psi<br>(1000-5000 kPa, 10-50 bar) |
| 233773<br>234272          | B<br>B | P10-VP<br>P10-VP npt           | Pneumatic,<br>fluid pressure  | 580 psi (4000 kPa, 40 bar)        | 6-145 psi<br>(40-1000 kPa, 0.4-10 bar)    |
| 233774<br>234273          | B<br>B | P10-VM<br>P10-VM npt           | Mechanical,<br>fluid pressure | 580 psi (4000 kPa, 40 bar)        | 15-145 psi<br>(100-1000 kPa, 1-10 bar)    |
| 233809<br>234256          | B<br>B | P10-VP, OEM<br>P10-VP, OEM npt | Pneumatic,<br>fluid pressure  | 580 psi (4000 kPa, 40 bar)        | 6-145 psi<br>40-1000 kPa, 0.4-10 bar)     |
| Back Pressure Regulators  |        |                                |                               |                                   |   |
| Part No.                  | Series | Model                          | Type                          | Maximum Permanent Supply Pressure | Regulated Pressure Range                  |
| 233758<br>234262          | B<br>B | P10-RM<br>P10-RM npt           | Mechanical,<br>back pressure  | 145 psi (1000 kPa, 10 bar)        | 15-145 psi<br>(100-1000 kPa, 1-10 bar)    |
| 233810<br>234257          | B<br>B | P10-RP<br>P10-RP npt           | Pneumatic,<br>back pressure   | 145 psi (1000 kPa, 10 bar)        | 15-145 psi<br>(100-1000 kPa, 1-10 bar)    |
| 233811<br>234255          | B<br>B | P20-RM DN13<br>P20-RM DN13 npt | Mechanical,<br>back pressure  | 290 psi (2000 kPa, 20 bar)        | 29-290 psi<br>(200-2000 kPa, 2-20 bar)    |
| 233812<br>234258          | B<br>B | P50-RM<br>P50-RM npt           | Mechanical,<br>back pressure  | 725 psi (5000 kPa, 50 bar)        | 73-725 psi<br>(500-5000 kPa, 5-50 bar)    |
| 233950<br>234261          | B<br>B | P20-RM DN1<br>P20-RM DN1 npt   | Mechanical,<br>back pressure  | 290 psi (2000 kPa, 20 bar)        | 15-290 psi<br>(100-2000 kPa, 1-20 bar)    |

## Key to Model Designation

Pressure regulation valve e.g.

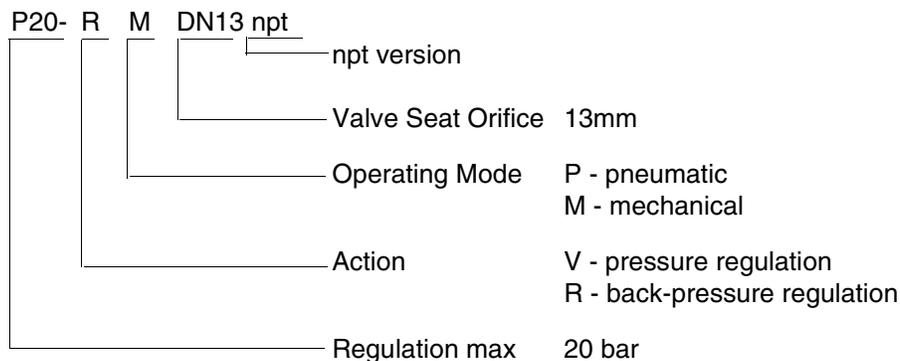

 **WARNING**



**EQUIPMENT MISUSE HAZARD**

Equipment misuse can cause the equipment to rupture or malfunction and result in serious injury.

- This equipment is for professional use only.
- Read all instruction manuals, tags, and labels before operating the equipment.
- Use the equipment only for its intended purpose. If you are not sure, call your Graco distributor.
- Do not alter or modify this equipment. Use only genuine Graco parts and accessories.
- Check equipment daily. Repair or replace worn or damaged parts immediately.
- Do not exceed the maximum working pressure of the lowest rated system component. Refer to the **Technical Data** on page 20 for the maximum working pressure of this equipment.
- Use fluids and solvents which are compatible with the equipment wetted parts. Refer to the **Technical Data** section of all equipment manuals. Read the fluid and solvent manufacturer's warnings.
- Route hoses away from traffic areas, sharp edges, moving parts, and hot surfaces. Do not expose Graco hoses to temperatures above 180°F (82°C) or below -40°F (-40°C).
- Wear hearing protection when operating this equipment.
- Never use 1,1, 1-trichloroethane, methylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents in pressurized aluminum equipment. Such use could result in a chemical reaction, with the possibility of explosion.
- Comply with all applicable local, state, and national fire, electrical, and safety regulations.



## WARNING



### PRESSURIZED EQUIPMENT HAZARD

Spray from the gun, hose leaks, or ruptured components can splash fluid in the eyes or on the skin and cause serious injury.

- Do not point the gun at anyone or at any parts of the body.
- Do not stop or deflect leaks with your hand, body, glove, or rag.
- Follow the **Pressure Relief Procedure** on page 11 whenever you are instructed to relieve pressure; stop spraying; clean, check, or repair the equipment; and install or clean the spray nozzle.
- Tighten all fluid connections before operating the equipment.
- Check the hoses, tubes, and couplings daily. Replace worn, damaged, or loose parts immediately. Permanently coupled hoses cannot be repaired; replace the entire hose.



### TOXIC FLUID HAZARD

Hazardous fluid or toxic fumes can cause serious injury or death if splashed in the eyes or on the skin, inhaled, or swallowed.

- Know the specific hazards of the fluid you are using. Read the fluid manufacturer's warnings.
- Store hazardous fluid in an approved container. Dispose of hazardous fluid according to all local, state and national guidelines.
- Always wear protective eyewear, gloves, clothing and respirator as recommended by the fluid and solvent manufacturer.

# Introduction

A fluid pressure regulator is used in air spray systems to ensure accurate, positive control of fluid pressure to an air spray gun or to a low pressure dispensing valve or atomizing head.

A regulator installed at a circulating line take-off or pump reduces main line pressure to maintain the desired fluid pressure to the air spray gun or to a low pressure dispensing valve or atomizing head.

## Back Pressure Regulators

Models 233810, 233811, 233812, 233950, 234255, 234257, 234258, 233758, 234261, and 234262, are back pressure regulators that limit the supply pressure to a set value by opening an outlet and guiding back excess material when the predetermined pressure has been achieved. These valves are used in circulating systems. Model 233810 pneumatic back pressure regulator is shown in FIG. 1.

## Fluid Pressure Regulators

Models 233757, 233759, 233774, 234263, 234267, and 234273 (FIG. 2.) are mechanically operated fluid pressure regulators designed primarily for use with low to medium viscosity fluids.

Models 233773, 233809, 234256, and 234272 (FIG. 3.) are pneumatically operated fluid pressure regulators designed primarily for use with highly viscous coatings.



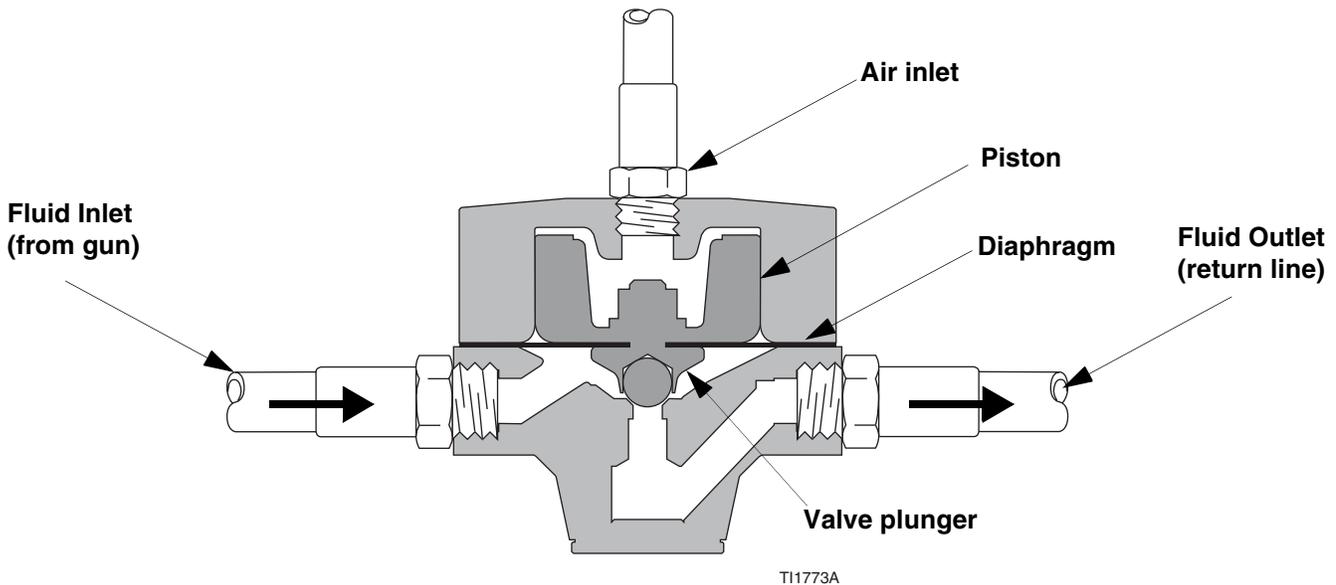


Fig. 1. Cutaway of Pneumatic Back Pressure Regulator

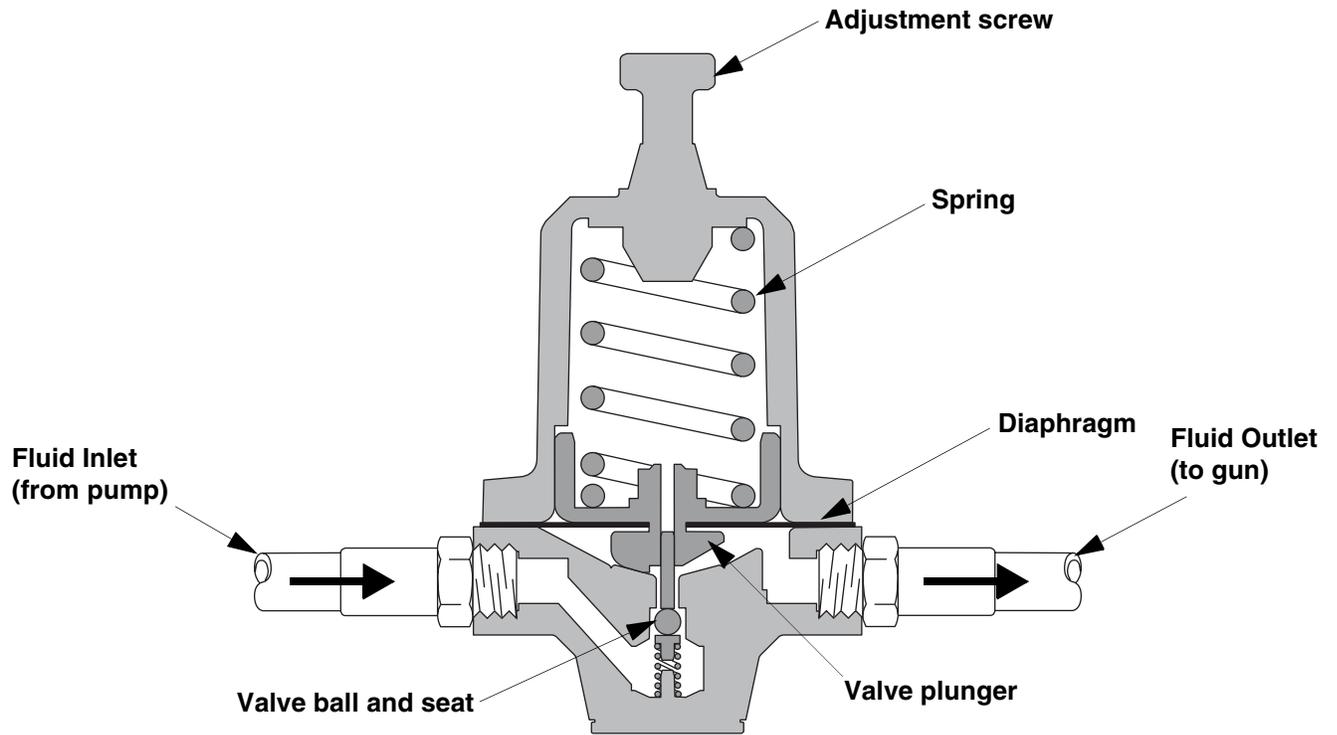

TI1772B

Fig. 2. Cutaway of Mechanical Fluid Pressure Regulator

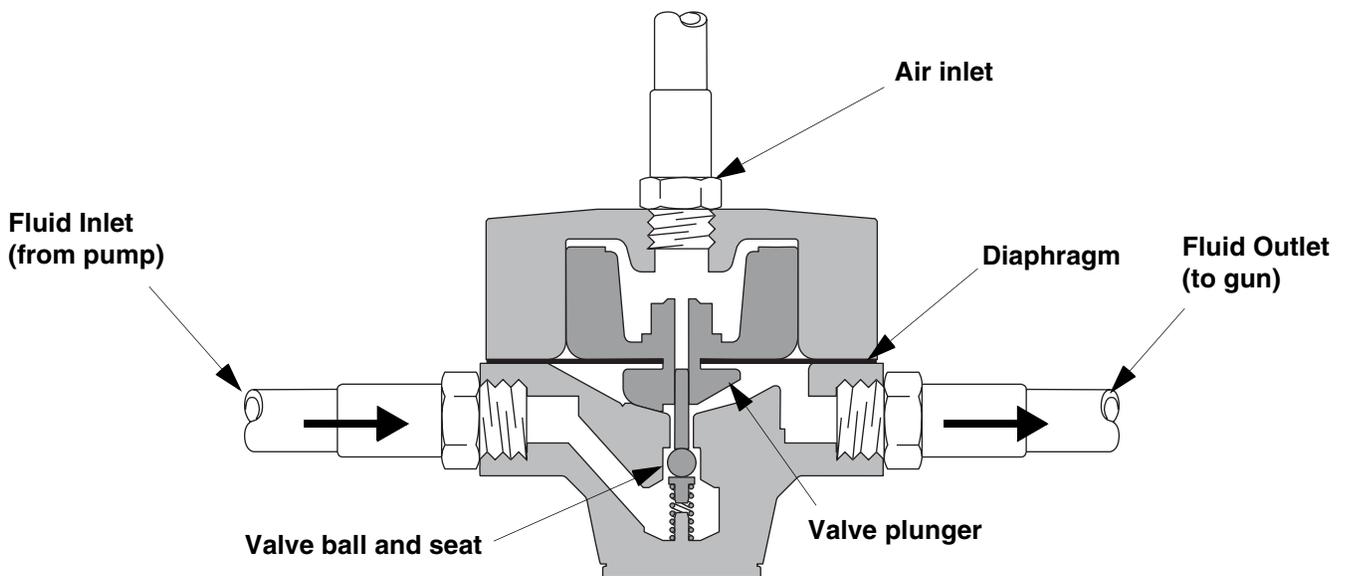


TI1771B

Fig. 3. Cutaway of Pneumatic Fluid Pressure Regulator

# Installation

1. Install one regulator for each spray gun.
2. Apply thread sealant to connections as necessary.
3. Make sure that the direction of fluid flow agrees with the flow direction markings on the regulator body.
  - a. Install a fluid pressure regulator *upstream* of the gun: Connect the fluid line from the pump to the inlet of the fluid regulator. Connect the fluid line to the gun to the regulator's outlet.
  - b. Install a back pressure regulator *downstream* of the gun. Connect the fluid return line from the gun to the inlet of the back pressure regulator. Connect the fluid return line to the pump to the regulator's outlet.
4. Flush and test the entire system.

FIG. 4., FIG. 5., and FIG. 6. show possible configurations for installing a system. They do not depict actual system designs. Consult your Graco distributor for assistance in designing a system that meets your specific requirements.

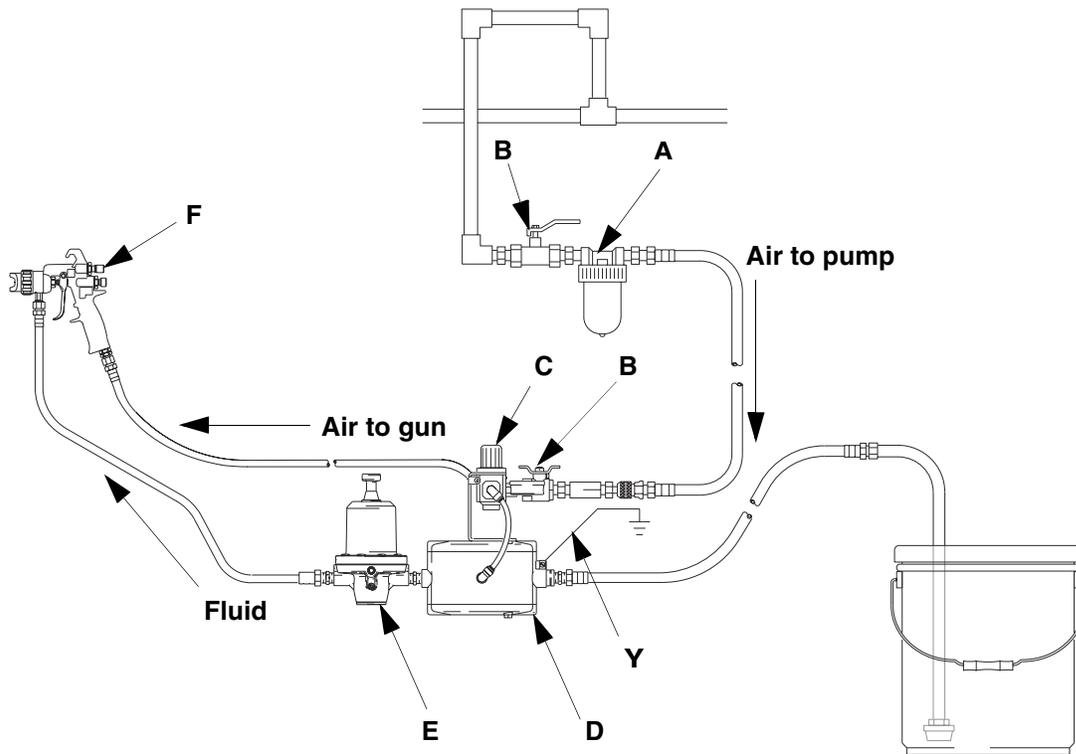


T11767A

**Fig. 4. Low pressure, non-circulating system, mechanical fluid regulator**

**Key**

|   |                                |
|---|--------------------------------|
| A | Air line filter                |
| B | Bleed-type air shut-off valve  |
| C | Air regulator for pump and gun |
| D | Pump                           |

|   |                  |
|---|------------------|
| E | Fluid regulator  |
| F | Air spray gun    |
| Y | Pump ground wire |

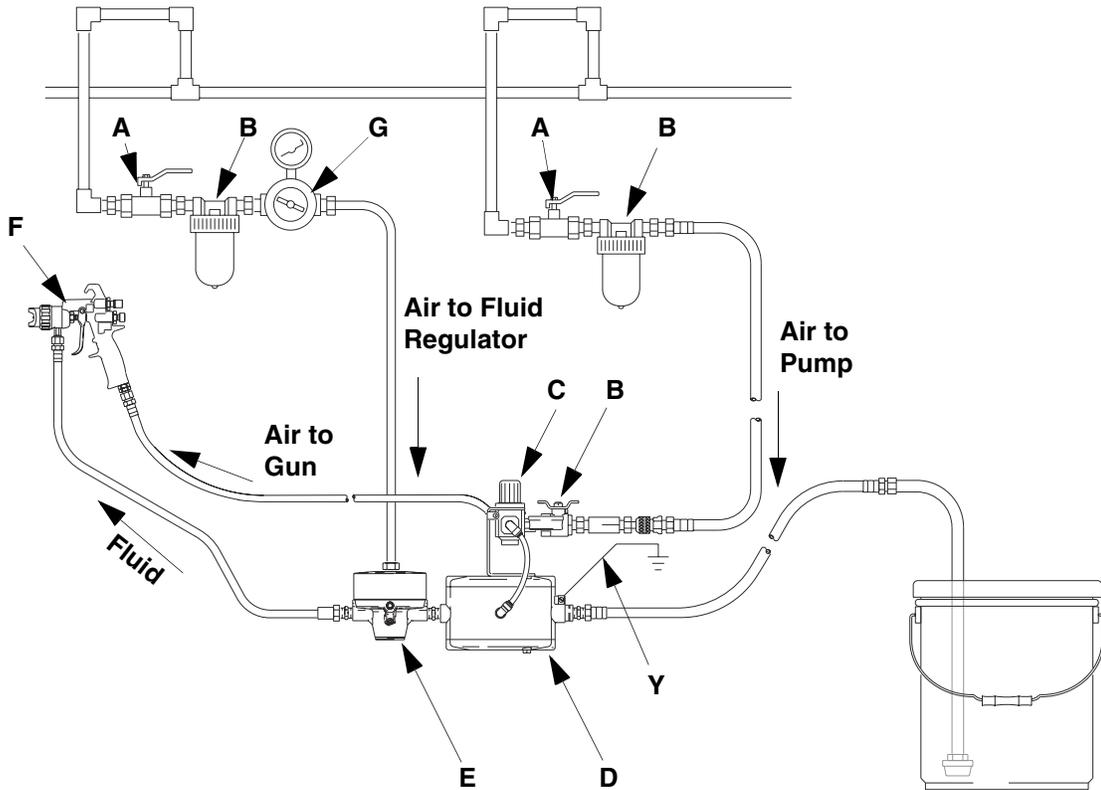


TI1766A

**Fig. 5. Low pressure, non-circulating system, pneumatic fluid regulator**

**Key**

|   |                                |
|---|--------------------------------|
| A | Air line filter                |
| B | Bleed-type air shut-off valve  |
| C | Air regulator for pump and gun |
| D | Pump                           |

|   |                                   |
|---|-----------------------------------|
| E | Fluid regulator                   |
| F | Air spray gun                     |
| G | Air regulator for fluid regulator |
| Y | Pump ground wire                  |

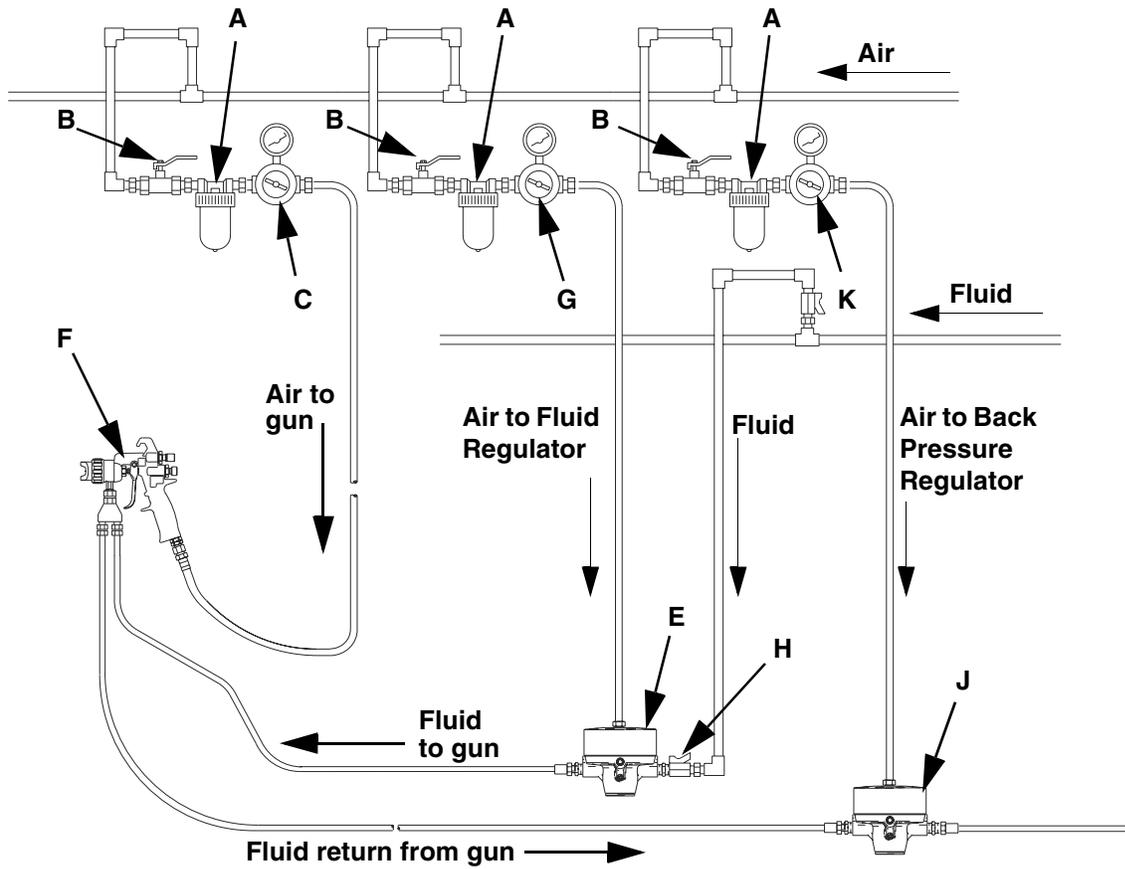

TI1768A

Fig. 6. Low Pressure circulating system, pneumatic fluid regulator and back pressure regulator

Key

|   |                                |
|---|--------------------------------|
| A | Air line filter                |
| B | Bleed-type air shut-off valve  |
| C | Air regulator for pump and gun |
| E | Fluid regulator                |
| F | Air spray gun                  |

|   |   |
|---|---|
| G | Air regulator for fluid regulator         |
| H | Fluid shutoff valve                       |
| J | Back pressure regulator                   |
| K | Air regulator for back pressure regulator |
| Y | Pump ground wire                          |

# Operation

## Flush Before First Use

Your pressure regulator has been tested in the factory with an anti-corrosion liquid. Before using the regulator, thoroughly flush the system with a solvent to remove residue of this liquid as well as any contaminants that have been introduced during assembly of the system.

## Pressure Relief Procedure


**WARNING**



Read the warnings on page 5, and follow the Pressure Relief Procedure below whenever you:

- are instructed to relieve pressure
- stop spraying
- check or service any of the equipment
- install or clean the fluid nozzle.

1. Shut off the air to the pump.
2. Trigger the air spray gun to relieve the fluid pressure.
3. Open the fluid drain valve to relieve all fluid pressure, having a container ready to catch the drainage.

## Adjusting the Regulator

The fluid pressure regulator controls pressure downstream from its outlet. The inlet fluid pressure should always be higher than the outlet fluid pressure.

If you are using an accessory fluid pressure gauge, trigger the air spray gun to relieve pressure in the line when reducing the pressure, to ensure a correct gauge reading.

Adjust the pump air pressure and the fluid pressure regulator for the best spraying combination.

In a circulating system, the back pressure valve controls the fluid pressure upstream of its inlet in the same way.

## Mechanical Regulator

1. Back out the adjustment screw until there is no spring pressure.
2. Turn on the fluid supply, to admit fluid to the regulator.
3. Turn the screw clockwise to adjust fluid pressure to the desired level.

## Pneumatic Regulator

1. With the fluid supply shut off, turn on the air pressure to the regulator.
2. Turn on the fluid supply, to admit fluid to the regulator.
3. Increase the fluid inlet pressure. When the fluid outlet pressure is at the desired level, shut off the air to the fluid regulator.

# Troubleshooting

Relieve the pressure (page 11) before checking or repairing the equipment.

To repair the regulator, refer to page 13.

| Problem   | Cause   | Solution   |
|---|---|--|
| Drop in fluid outlet pressure.                                    | Ruptured diaphragm (15).                            | Replace diaphragm.   |
|   | Air escaping (pneumatic regulators only).           | Check air hose and connections.<br>Replace piston seal (21). |
| Fluid outlet pressure increases to level of fluid inlet pressure. | Valve ball (5) and seat (2) are worn or stuck open. | Clean ball and seat. Replace worn or damaged parts.          |
| Fluid leaking from upper housing.                                 | Ruptured diaphragm (15).                            | Replace diaphragm.   |

# Maintenance

## Flushing

Flush before changing colors, at the end of the day, before storing, and before repairing the equipment.

Flush with a fluid that is compatible with the fluid you are pumping and with the wetted parts of your system. Check with your fluid manufacturer or supplier for recommended flushing fluids and flushing frequency. Relieve the pressure after flushing.

Do not allow paint or solvent to sit in the system for extended periods. Fluid could dry in the regulator and cause leakage. If leakage occurs, relieve pressure, then disassemble and clean the regulator.

## Cleaning and Repair

When changing fluids or colors, the regulator should be disassembled and cleaned. Regular cleaning and inspection of the internal parts is necessary to keep the fluid regulator working properly.


1. Relieve all air and fluid pressure in the system.
2. Remove the regulator from the system.
3. Disassemble the regulator (see the parts drawings on pages 14 through 19).
4. Clean and inspect all parts.

| CAUTION  |
|--|
| Be very careful when handling the carbide balls and seats. Damage will cause poor operation and leakage. |

5. Inspect the diaphragm, packings, o-rings, and seals for wear. Check the ball and seat for nicks, wear, or other damage.
6. Lubricate packings, o-rings and seals when reassembling the regulator.

# Parts

## Mechanical Fluid Pressure Regulators Part Nos. 233759 and 234267

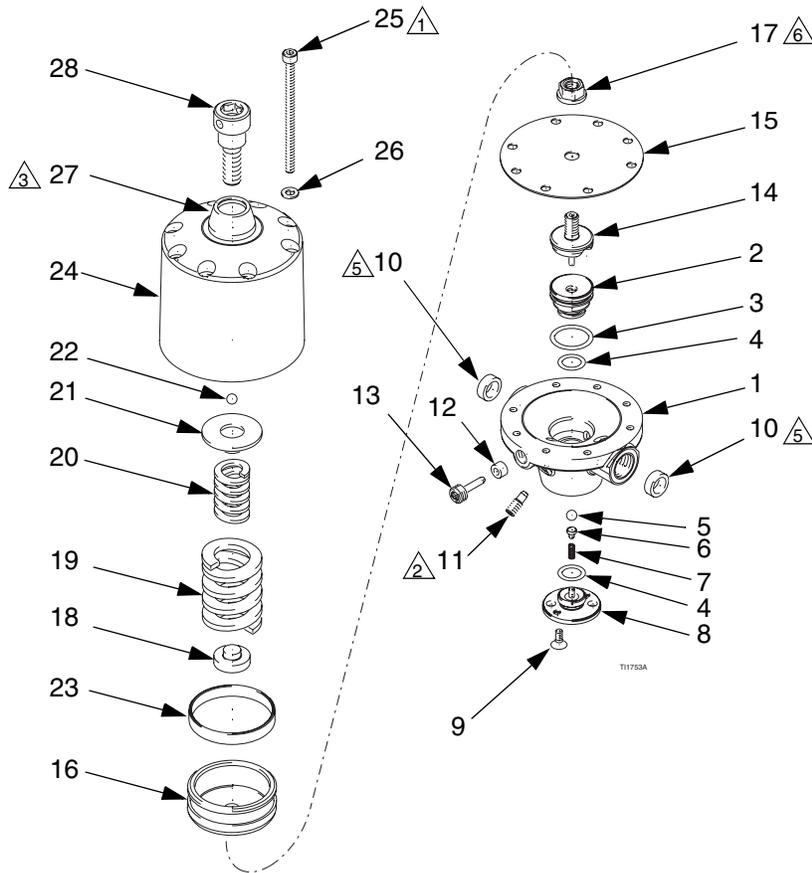


- Torque to 6 N•m (53 in-lb).
- Torque to 2 N•m (18 in-lb).
- Fill internal cavity with grease.
- Used only on non-npt model 233759.
- Torque to 5 N•m (44in-lb).

| Ref. No. | Part No. | Description                         | Qty | Ref. No. | Part No. | Description               | Qty |
|----------|----------|-------------------------------------|-----|----------|----------|---------------------------|-----|
| 1        |          | HOUSING, lower, for 233759          | 1   | 14       | 245372   | PLUNGER, valve            | 1   |
|          |          | HOUSING, lower, for 234267          | 1   | 15       | 15A179   | DIAPHRAGM                 | 1   |
| 2        | 245368   | SEAT, valve                         | 1   | 16       | 15A173   | CAP, spring               | 1   |
| 3        | 15Y036   | O-RING                              | 1   | 17       | 117122   | NUT, seal-lock            | 1   |
| 4        | 15Y035   | O-RING                              | 1   | 18       | 15A175   | PLATE, spring, bottom     | 1   |
| 5        | 117106   | BALL, 6 mm, carbide                 | 2   | 19       | 117096   | SPRING, compression       | 1   |
| 6        | 15A205   | SUPPORT, ball                       | 1   | 20       | 117092   | SPRING, compression       | 1   |
| 7        | 117090   | SPRING, compression                 | 1   | 21       | 15A176   | PLATE, spring, top        | 1   |
| 8        | 15A144   | COVER                               | 1   | 22       | 117105   | BALL, 6 mm                | 1   |
| 9        | 117123   | SCREW, fhms, M4x10                  | 2   | 23       | 15A186   | PACKING, PTFE with carbon | 1   |
| 10       | 15A219   | RING, for non-npt model 233759 only | 2   | 24       | 245366   | HOUSING, upper            | 1   |
| 11       | 117101   | PLUG, threaded                      | 2   | 25       | 117129   | SCREW, shcs, M5x80        | 8   |
| 12       | 117085   | SEAL, ring                          | 1   | 26       | 117017   | WASHER                    | 8   |
| 13       | 117099   | PLUG, threaded                      | 1   | 27       | 15A141   | BONNET, cover             | 1   |
|          |          |                                     |     | 28       | 15A242   | SCREW, custom             | 1   |

# Mechanical Back Pressure Regulators

## Part Nos. 233812 and 234258

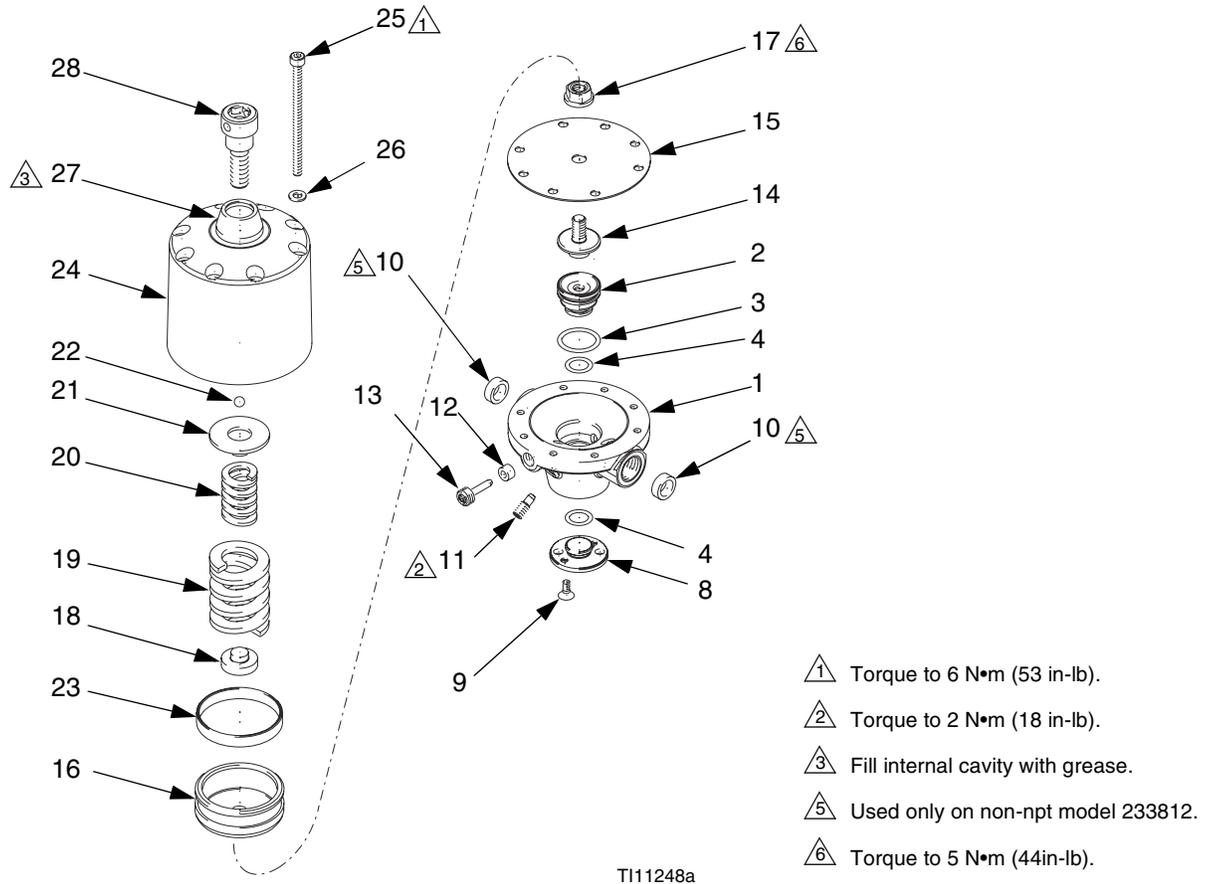


T111248a

| Ref. No. | Part No. | Description  | Qty | Ref. No. | Part No. | Description               | Qty |
|----------|----------|--|-----|----------|----------|---------------------------|-----|
| 1        |          | HOUSING, lower, for 233812<br>HOUSING, lower, for 234258 | 1   | 15       | 15A179   | DIAPHRAGM                 | 1   |
| 2        | 245369   | SEAT, valve  | 1   | 16       | 15A173   | CAP, spring               | 1   |
| 3        | 15Y036   | O-RING   | 1   | 17       | 117122   | NUT, seal-lock            | 1   |
| 4        | 15Y035   | O-RING   | 1   | 18       | 15A175   | PLATE, spring, bottom     | 1   |
| 8        | 15A143   | COVER  | 2   | 19       | 117096   | SPRING, compression       | 1   |
| 9        | 117123   | SCREW, fhms, M4x10                                       | 1   | 20       | 117092   | SPRING, compression       | 1   |
| 10       | 15A219   | RING, for non-npt model 233812 only                      | 2   | 21       | 15A176   | PLATE, spring, top        | 1   |
| 11       | 117101   | PLUG, threaded   | 2   | 22       | 117108   | BALL, 8 mm                | 1   |
| 12       | 117085   | SEAL, ring   | 1   | 23       | 15A186   | PACKING, PTFE with carbon | 1   |
| 13       | 117099   | PLUG, threaded   | 1   | 24       | 245366   | HOUSING, upper            | 1   |
| 14       | 245373   | PLUNGER, valve   | 1   | 25       | 117129   | SCREW, shcs, M5x80        | 8   |
|          |          |  |     | 26       | 117017   | WASHER                    | 8   |
|          |          |  |     | 27       | 15A141   | BONNET, cover             | 1   |
|          |          |  |     | 28       | 15A242   | SCREW, custom             | 1   |

# Mechanical Fluid Pressure Regulators


## Part Nos. 233757, 233774, 234263, and 234273

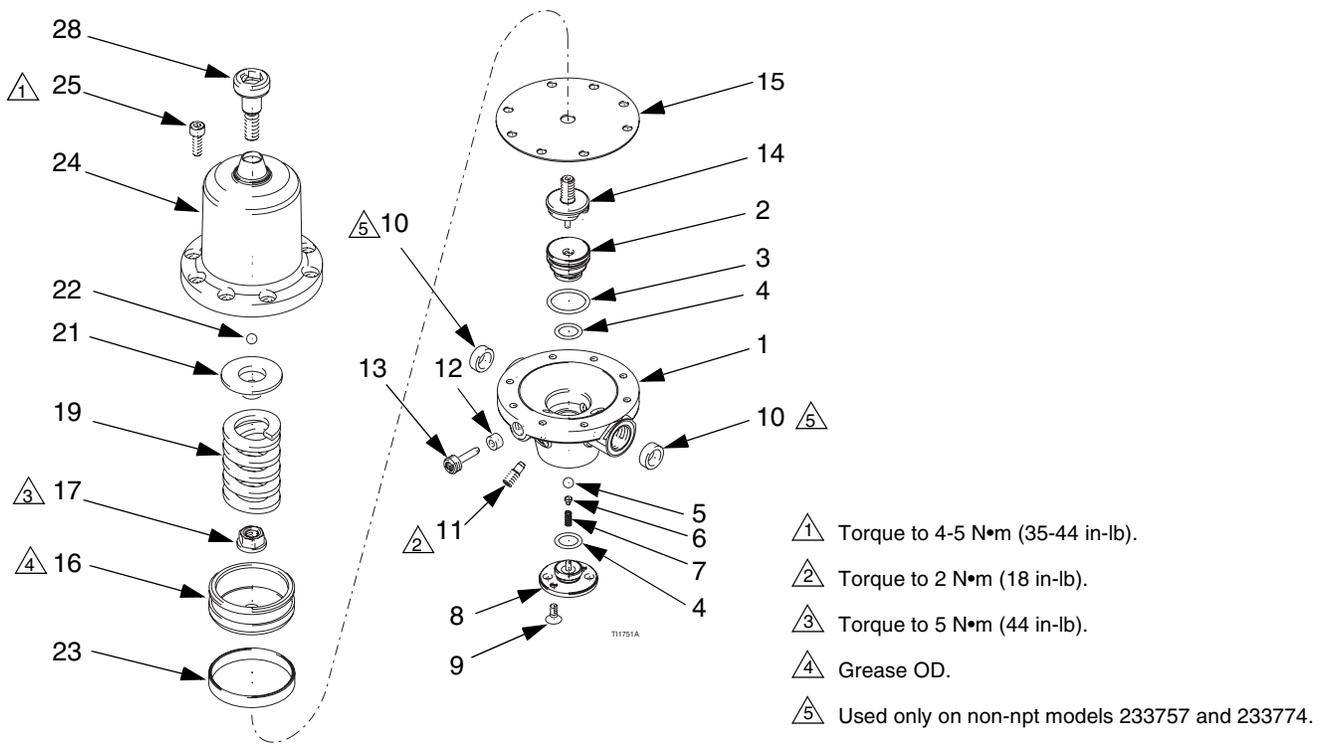

| Ref. No. | Part No. | Description                                     | Qty | Ref. No. | Part No. | Description                                | Qty |
|----------|----------|---|-----|----------|----------|--|-----|
| 1        |          | HOUSING, lower, for 233757 and 233774           | 1   | 13       | 117099   | PLUG, threaded                             | 1   |
|          |          | HOUSING, lower, for 234263 and 234273           | 1   | 14       | 245372   | PLUNGER, valve                             | 1   |
| 2        | 245368   | SEAT, valve                                     | 1   | 15       | 15A179   | DIAPHRAGM                                  | 1   |
| 3        | 15Y036   | O-RING  | 1   | 16       | 15A172   | CAP, spring                                | 1   |
| 4        | 15Y035   | O-RING  | 2   | 17       | 117122   | NUT, seal-lock                             | 1   |
| 5        | 117106   | BALL, 6 mm, carbide                             | 1   | 19       | 117087   | SPRING, compression, for 233774 and 234273 | 1   |
| 6        | 15A205   | SUPPORT, ball                                   | 1   |          | 117095   | SPRING, compression, for 233757 and 234263 | 1   |
| 7        | 117090   | SPRING, compression                             | 1   | 21       | 15A177   | PLATE, spring, top                         | 1   |
| 8        | 15A144   | COVER   | 1   | 22       | 117105   | BALL, 6 mm                                 | 1   |
| 9        | 117123   | SCREW, fhms, M4x10                              | 2   | 23       | 15A185   | PACKING, PTFE with carbon                  | 1   |
| 10       | 15A219   | RING, for non-npt models 233757 and 233774 only | 2   | 24       | 245365   | HOUSING, upper                             | 1   |
| 11       | 117101   | PLUG, threaded                                  | 2   | 25       | 117126   | SCREW, shcs, M5x16                         | 8   |
| 12       | 117085   | SEAL, ring                                      | 1   | 28       | 15A241   | SCREW, custom                              | 1   |

# Mechanical Back Pressure Regulators

## Part Nos. 233758, 233811, 233950, 234255, 234261, and 234262

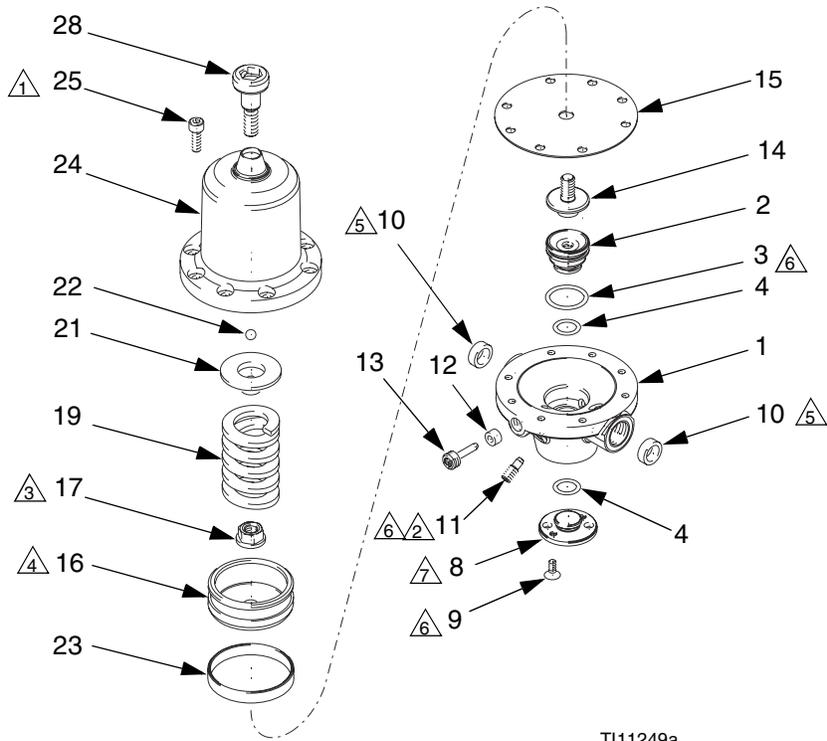


- △1 Torque to 4-5 N•m (35-44 in-lb).
- △2 Torque to 2 N•m (18 in-lb).
- △3 Torque to 5 N•m (44 in-lb).
- △4 Grease OD.
- △5 Used only on non-npt models 233758, 233950, and 233811.
- △6 Not used on models 233811 and 234255.
- △7 Models 233811 and 234255 use a plug and retaining ring (not shown).

TI11249a

| Ref. No. | Part No. | Description  | Qty | Ref. No. | Part No. | Description   | Qty |
|----------|----------|--|-----|----------|----------|---|-----|
| 1        |          | HOUSING, lower, for 233758 and 233950                    | 1   | 11       | 117101   | PLUG, threaded, not used on models 233811 and 234255        | 2   |
|          |          | HOUSING, lower for 234262 and 234261                     | 1   | 12       | 117085   | SEAL, ring  | 1   |
|          | 15A198   | HOUSING, lower, for 233811                               | 1   | 13       | 117099   | PLUG, threaded  | 1   |
|          | 15C303   | HOUSING, lower, for 234255                               | 1   | 14       | 245373   | PLUNGER, valve, for 233758, 233950, 234261, and 234262      | 1   |
| 2        | 245369   | SEAT, valve, for 233758, 233950, 234261, and 234262      | 1   |          | 245378   | PLUNGER, valve, for 233811 and 234255                       | 1   |
|          | 15A228   | SEAT, valve, for 233811 and 234255                       | 1   | 15       | 15A179   | DIAPHRAGM   | 1   |
| 3        | 15Y036   | O-RING, not used on models 233811 and 234255             | 1   | 16       | 15A172   | CAP, spring   | 1   |
| 4        | 15Y035   | O-RING, for 233758, 233950, 234261, and 234262           | 2   | 17       | 117122   | NUT, seal-lock  | 1   |
|          | 15Y031   | O-RING, for 233811 and 234255                            | 2   | 19       | 117087   | SPRING, compression, for 233758 and 234262                  | 1   |
| 8        | 15A143   | COVER, for 233758, 233950, 234261, and 234262            | 1   |          | 117095   | SPRING, compression, for 233811, 233950, 234261, and 234255 | 1   |
|          | 15A222   | PLUG, for 233811 and 234255                              | 1   | 21       | 15A177   | PLATE, spring, top  | 1   |
| 9        | 117123   | SCREW, fhms, M4x10, not used on models 233811 and 234255 | 2   | 22       | 117105   | BALL, 6 mm  | 1   |
| 10       | 15A219   | RING, for non-npt models 233758, and 233950              | 2   | 23       | 15A185   | PACKING, PTFE with carbon                                   | 1   |
|          | 15A221   | RING, for non-npt model 233811                           | 2   | 24       | 245365   | HOUSING, upper  | 1   |
|          |          |  |     | 25       | 117126   | SCREW, shcs, M5x16  | 8   |
|          |          |  |     | 28       | 15A241   | SCREW, custom   | 1   |
|          |          |  |     | 29       | 117124   | RING, retaining, 233811 and 234255 only                     | 1   |

# Pneumatic Fluid Pressure Regulators

## Part Nos. 233773, 233809, 234272, and 234256

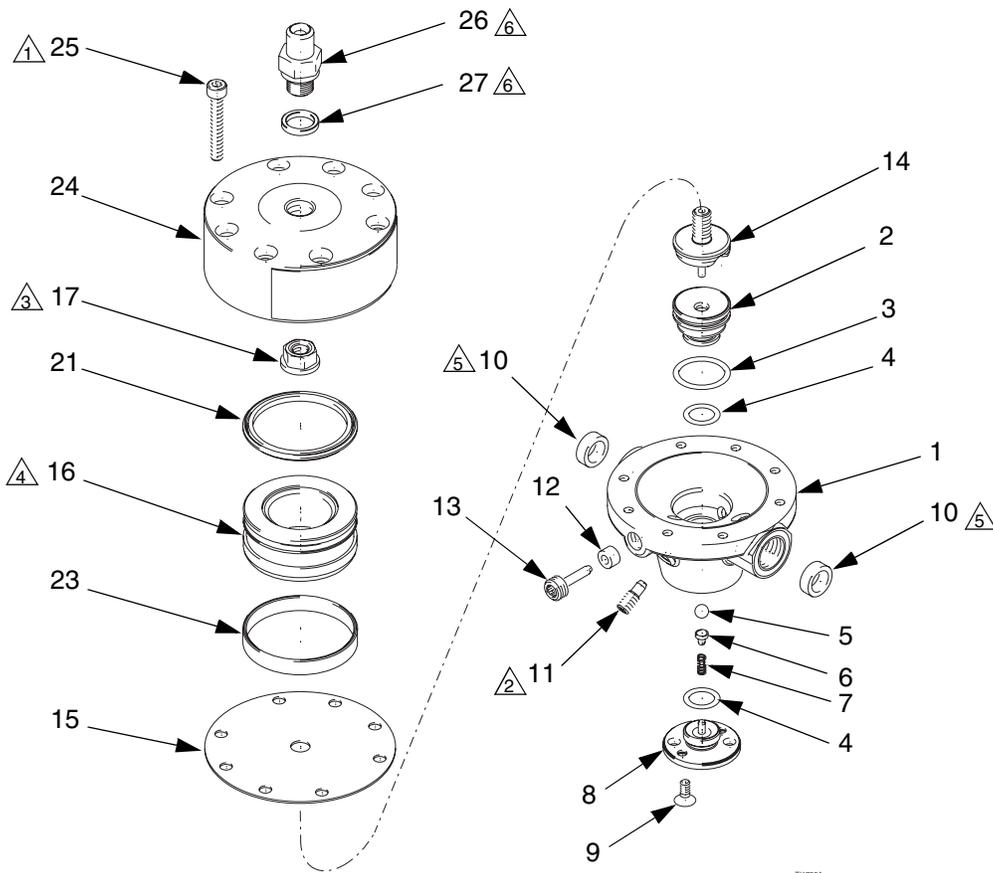

△1 Torque to 4-5 N•m (35-44 in-lb).

△2 Torque to 2 N•m (18 in-lb).

△3 Torque to 5 N•m (44 in-lb).

△4 Grease OD.


△5 Used only on non-npt models 233773 and 233809.

△6 Used only on npt models 234272 and 234256.

| Ref. No. | Part No. | Description                                | Qty. | Ref. No. | Part No. | Description                                    | Qty. |
|----------|----------|--|------|----------|----------|--|------|
| 1        |          | HOUSING, lower, for 233773 and 233809      | 1    | 9        | 117123   | SCREW, fhms, M4x10                             | 2    |
|          |          | HOUSING, lower, for 234272 and 234256      | 1    | 10       | 15A219   | RING, for non-npt models 233773 and 233809     | 2    |
| 2        | 245368   | SEAT, valve, for 233773 and 234272         | 1    | 11       | 117101   | PLUG, threaded                                 | 2    |
|          | 245371   | SEAT, valve, for 233809 and 234256         | 1    | 12       | 117085   | SEAL, ring                                     | 1    |
| 3        | 15Y036   | O-RING                                     | 1    | 13       | 117099   | PLUG, threaded                                 | 1    |
| 4        | 15Y035   | O-RING                                     | 1    | 14       | 245372   | PLUNGER, valve                                 | 1    |
| 5        | 117106   | BALL, 6 mm, carbide, for 233773 and 234272 | 1    | 15       | 15A179   | DIAPHRAGM                                      | 1    |
|          | 117110   | BALL, 6 mm, for 233809 and 234256          | 1    | 16       | 15A204   | PISTON   | 1    |
| 6        | 15A205   | SUPPORT, ball                              | 1    | 17       | 117122   | NUT, seal-lock                                 | 1    |
| 7        | 117090   | SPRING, compression                        | 1    | 21       | 117102   | SEAL, flat                                     | 1    |
| 8        | 15A144   | COVER                                      | 1    | 23       | 15A185   | PACKING, PTFE with carbon                      | 1    |
|          |          |  |      | 24       | 15A191   | HOUSING, upper                                 | 1    |
|          |          |  |      | 25       | 117127   | SCREW, shcs, M5x35                             | 8    |
|          |          |  |      | 26       | 15C332   | FITTING, for npt models 234272 and 234256 only | 1    |
|          |          |  |      | 27       | 15C333   | WASHER, for npt models 234272 and 234256 only  | 1    |

# Pneumatic Back Pressure Regulators

## Part Nos. 233810 and 234257

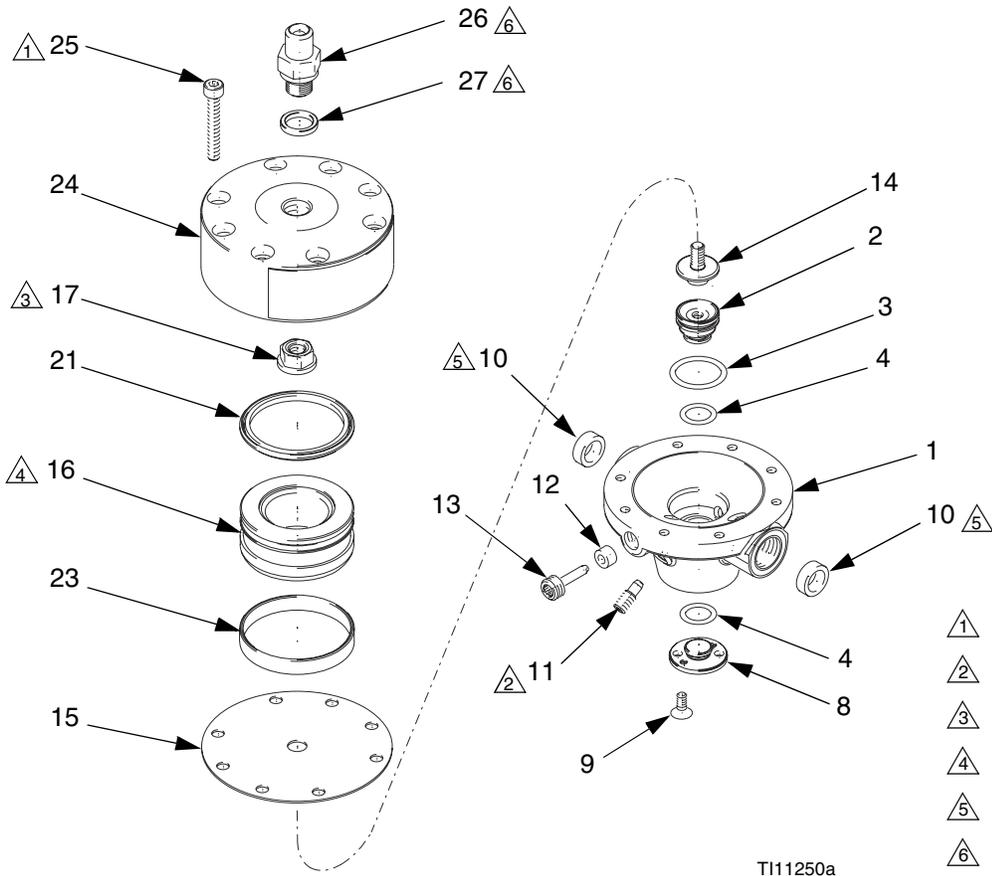

T111250a

| Ref. No. | Part No. | Description                    | Qty. | Ref. No. | Part No. | Description                        | Qty. |
|----------|----------|--------------------------------|------|----------|----------|------------------------------------|------|
| 1        |          | HOUSING, lower, for 233810     | 1    | 15       | 15A179   | DIAPHRAGM                          | 1    |
|          |          | HOUSING, lower, for 234257     | 1    | 16       | 15A204   | PISTON                             | 1    |
| 2        | 245369   | SEAT, valve                    | 1    | 17       | 117122   | NUT, seal-lock                     | 1    |
| 3        | 15Y036   | O-RING                         | 1    | 21       | 117102   | SEAL, flat                         | 1    |
| 4        | 15Y035   | O-RING                         | 1    | 23       | 15A185   | PACKING, PTFE with carbon          | 1    |
| 8        | 15A143   | COVER                          | 1    | 24       | 15A191   | HOUSING, upper                     | 1    |
| 9        | 117123   | SCREW, fhms, M4x10             | 1    | 25       | 117127   | SCREW, shcs, M5x35                 | 8    |
| 10       | 15A219   | RING, for non-npt model 233810 | 2    | 26       | 15C332   | FITTING, for npt model 234257 only | 1    |
| 11       | 117101   | PLUG, threaded                 | 2    | 27       | 15C333   | WASHER, for npt model 234257 only  | 1    |
| 12       | 117085   | SEAL, ring                     | 1    |          |          |                                    |      |
| 13       | 117099   | PLUG, threaded                 | 1    |          |          |                                    |      |
| 14       | 245373   | PLUNGER, valve                 | 1    |          |          |                                    |      |

# Technical Data

| Category  | Data  |
|---|---|
| Maximum Fluid Inlet Pressure<br>(Fluid Pressure Regulators)     | 233757, 233773, 233774, 233809,<br>234256, 234263, 234272, 234273 : 580 psi (4000 kPa, 40 bar)<br><br>233759, 234267: 1015 psi (7000 kPa, 70 bar)   |
| Maximum Permanent Supply Pressure<br>(Back Pressure Regulators) | 233758, 233810, 234257, 234262: 145 psi (1000 kPa, 10 bar)<br><br>233811, 233950, 234255, 234261: 290 psi (2000 kPa, 20 bar)<br><br>233812, 234258: 725 psi (5000 kPa, 50 bar)  |
| Pressure Range  | 233773, 233809, 234272, 234256: 6-145 psi (40-1000 kPa, 0.4-10 bar)<br><br>233758, 233774, 233810,<br>234257, 234262, 234273 : 15-145 psi (100-1000 kPa, 1-10 bar)<br><br>233757, 234263: 15-290 psi (100-2000 kPa, 1-20 bar)<br><br>233811, 233950, 234255, 234261: 29-290 psi (200-2000 kPa, 2-20 bar)<br><br>233812, 234258: 73-725 psi (500-5000 kPa, 5-50 bar)<br><br>233759, 234267: 145-725 psi (1000-5000 kPa, 10-50 bar) |
| Maximum Operating Air Pressure<br>(Pneumatic Regulators Only)   | 145 psi (1 MPa, 10 bar)   |
| Maximum Flow Rate   | See chart on page 21.   |
| Temperature Range   | 233757, 233758, 233759, 233773, 233774, 233809, 233810, 233811, 233950,<br>234255, 234256, 234261, 234262, 234263, 234273: 32-194°F (0-90°C)<br><br>233812, 234258: 50-176°F (10-80°C)  |
| Fluid inlet and outlet  | 233757, 233758, 233759, 233773, 233774,<br>233809, 233810, 233812, 233950: 3/8 in. BSPP(F)<br><br>234256, 234257, 234258, 234261,<br>234262, 234263, 234267, 234272, 234273: 3/8 in. npt(f)<br><br>233811: 1 in. BSPP(F)<br><br>234255: 1 in. npt(f)  |
| Air inlet   | 233773, 233809, 233810: 1/4 in. BSPP(F)<br><br>234256, 234257, 234272: 1/4 in. npt(m)   |
| *Gauge port   | 1/8 in. BSPP(F)   |
| Wetted Parts  | Stainless steel, tungsten carbide, PTFE, chemically resistant fluoroelastomer,<br>PEEK (233809 and 234256 only)   |

\* Accessory gauges available.

# Accessory Gauges


| Part No. | Gauge  | Part No. | Gauge  |
|----------|--------|----------|--------|
| 233774   | 118338 | 233758   | 118338 |
| 243273   | 118338 | 234262   | 118338 |
| 233757   | 118338 | 233950   | 118338 |
| 234262   | 118338 | 234261   | 118338 |
| 233759   | 118339 | 233811   | 118338 |
| 234267   | 118339 | 234255   | 118338 |
| 234773   | 118338 | 233812   | 118339 |
| 234272   | 118338 | 234258   | 118339 |
| 233809   | 118338 | 233810   | 118338 |
| 234273   | 118338 | 234257   | 118338 |

## Flow Rate Data

Maximum fluid flow with 10 weight oil, regulator wide open and no downstream restrictions.

| Part No.         | Inlet Fluid Test Pressure   | Inlet/Outlet Size             | Seat Size | Fluid Flow          |
|------------------|-----------------------------|-------------------------------|-----------|---------------------|
| 233757<br>234263 | 580 psi (4000 kPa, 40 bar)  | 3/8 BSPP(F)<br>3/8 npt(f)     | 5 mm      | 7.0 gpm (26.6 lpm)  |
| 233758<br>234262 | 145 psi (1000 kPa, 10 bar)  | 3/8 BSPP(F)<br>3/8 npt(f)     | 6.5 mm    | 4.6 gpm (17.5 lpm)  |
| 233759<br>234267 | 1015 psi (7000 kPa, 70 bar) | 3/8 BSPP(F)<br>3/8 npt(f)     | 5 mm      | 9.8 gpm (37.2 lpm)  |
| 233773<br>234272 | 580 psi (4000 kPa, 40 bar)  | 3/8 BSPP(F)<br>3/8 npt(f)     | 5 mm      | 7.0 gpm (26.6 lpm)  |
| 233774<br>234273 | 580 psi (4000 kPa, 40 bar)  | 3/8 BSPP(F)<br>3/8 npt(f)     | 5 mm      | 7.0 gpm (26.6 lpm)  |
| 233809<br>234256 | 580 psi (4000 kPa, 40 bar)  | 3/8 BSPP(F)<br>3/8 npt(f)     | 5 mm      | 7.0 gpm (26.6 lpm)  |
| 233810<br>234257 | 145 psi (1000 kPa, 10 bar)  | 3/8 BSPP(F)<br>3/8 npt(f)     | 6.5 mm    | 4.6 gpm (17.5 lpm)  |
| 233811<br>234255 | 290 psi (2000 kPa, 20 bar)  | 1 in. BSPP(F)<br>1 in. npt(f) | 13 mm     | 7.8 gpm (29.6 lpm)  |
| 233812<br>234258 | 725 psi (5000 kPa, 50 bar)  | 3/8 BSPP(F)<br>1 in. npt(f)   | 6.5 mm    | 11.5 gpm (43.7 lpm) |
| 233950<br>234261 | 290 psi (2000 kPa, 20 bar)  | 3/8 BSPP(F)<br>1 in. npt(f)   | 6.5 mm    | 5.7 gpm (21.7 lpm)  |

# Mounting Dimensions

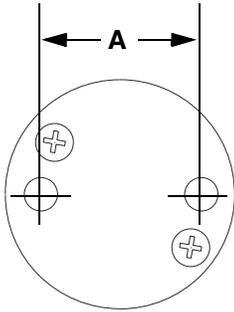

| Part No.         | Thread | Dimension A      |
|------------------|--------|------------------|
| 233757<br>234263 | M5     | 24 mm (0.95 in.) |
| 233758<br>234262 | M5     | 24 mm (0.95 in.) |
| 233759<br>234267 | M5     | 24 mm (0.95 in.) |
| 233773<br>234272 | M5     | 24 mm (0.95 in.) |
| 233774<br>234273 | M5     | 24 mm (0.95 in.) |
| 233809<br>234256 | M5     | 24 mm (0.95 in.) |
| 233810<br>234257 | M5     | 24 mm (0.95 in.) |
| 233811<br>234255 | M5     | 36 mm (1.42 in.) |
| 233812<br>234258 | M5     | 24 mm (0.95 in.) |
| 233950<br>234261 | M5     | 24 mm (0.95 in.) |



# Graco Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

**THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.**

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

**GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO.** These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

## **FOR GRACO CANADA CUSTOMERS**

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

## Graco Information

For the latest information about Graco products, visit [www.graco.com](http://www.graco.com).

For patent information, see [www.graco.com/patents](http://www.graco.com/patents).

**TO PLACE AN ORDER**, contact your Graco distributor or call to identify the nearest distributor.

**Phone:** 612-623-6921 **or Toll Free:** 1-800-328-0211 **Fax:** 612-378-3505

*All written and visual data contained in this document reflects the latest product information available at the time of publication.  
Graco reserves the right to make changes at any time without notice.*

*This manual contains English. MM 309474*

**Graco Headquarters:** Minneapolis  
**International Offices:** Belgium, China, Japan, Korea

**GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA**

Copyright 2002, Graco Inc. is registered to ISO 9001

[www.graco.com](http://www.graco.com)

Revision K, September 2014