User's Manual

1 Getting Started

1.1 Understanding Hardware Components

NOTE: Depending upon the specific model purchased, the color of your device may not exactly match the device shown in this manual.

Front Components

Ref	Component	Description
❶	Touch Screen	Displays the output of your device. Tap the screen with your stylus to select menu commands or enter information.
❷	Charge Indicator	Flashes bright amber to indicate that the battery is charging, and turns green when the battery is fully charged.

Ref	Component	Description
❶	SD/MMC Slot	Accepts an SD (Secure Digital) or MMC (MultiMedia Card) card for accessing data such as map data.
❷	Headphone Connector	Connects to stereo headphones.

Top Components

Ref	Component	Description
❶	External Antenna Connector	This connector (under rubber dust cover) allows use of an optional external GPS antenna with magnetic mount, which may be positioned on top of the car for better GPS signal reception in areas with poor reception.
❷	Power Button	Turns on and off the device.

Bottom Components

Ref	Component	Description
❶	Mini-USB Connector	Connects to the USB cable or in-car power cable.

1.2 Performing the Initial Start Up

1. Make sure that power is supplied to your device. (See the next section.)
2. For the initial start up, press the power button for 10 seconds to turn on your device.

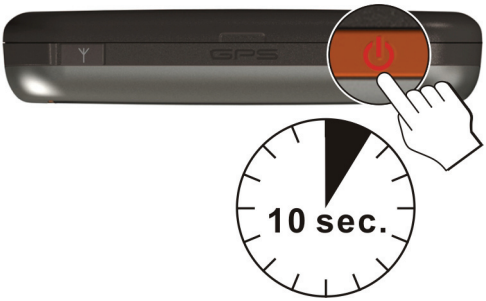

NOTE: For normal operation, briefly press the power button to turn on and off your device.

3. The “Change Language” screen appears. Tap the left/right arrow button to select the desired language. Then, tap the button.



4. The “Date&Time” screen appears. Tap the appropriate arrow button to select the time zone, date, and time. Then, tap the button.

1.3 Using Your Device in a Vehicle

Using the Device Holder

CAUTION:
- Select an appropriate location for the device holder. Never place the holder where the driver's field of vision is blocked.
- If the car's windshield is tinted with a reflective coating, an external antenna (optional) may be needed to route the antenna to the top of the car through a window. When closing the car window, be careful not to pinch the antenna cable

Use the device holder to fix your device in a vehicle. Make sure that the GPS antenna has a clear view of the sky.

Connecting the Car Charger

The car charger supplies power to your device when you are using the device in a car.

CAUTION: To protect your device against sudden surges in current, connect the car charger only after the car engine has been started.

1. Connect one end of the car charger to the power connector of your device.
2. Connect the other end to the cigarette lighter in the car to power and charge your device. The indicator on the car charger lights in green to indicate that power is being supplied to your device.

- Drag
  Hold your fingertip on the screen and drag up/down/left/right or across the screen.
- Tap and hold
  Tap and hold your fingertip until an action is complete, or a result or menu is shown.

1.5 Inserting a SD/MMC Card

Your device has a SD/MMC slot where you can insert an optional Secure Digital or MultiMediaCard storage card.

To use a SD/MMC card, insert it into the slot, with the connector pointing to the slot and its label facing the front of the device.

To remove a card, first make sure that no application is accessing the card, then slightly push the top edge of the card to release it and pull it out of the slot.

NOTE:
- Make sure that no foreign objects enter the slot.
- Keep a SD or MMC card in a well-protected box to avoid dust and humidity when you are not using it.

- The screen surface can easily be scratched. Avoid touching it with sharp objects. Non-adhesive generic screen protectors designed specifically for use on portable devices with LCD panels may be used to help protect the screen from minor scratches.
- Never clean your device with it powered on. Use a soft, lint-free cloth moistened with water to wipe the screen and the exterior of your device.
- Do not use paper towels to clean the screen.
- Never attempt to disassemble, repair or make any modifications to your device. Disassembly, modification or any attempt at repair could cause damage to your device and even bodily injury or property damage and will void any warranty.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as your device, its parts or accessories.

3 Regulatory Information

NOTE: Marking labels located on the exterior of your device indicate the regulations that your model complies with. Please check the marking labels on your device and refer to the corresponding statements in this chapter. Some notices apply to specific models only.

3.1 Regulations Statements

Class B Regulations

USA
Federal Communications Commission Radio Frequency Interference Statement

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.