



Portable CD Player

Operating Instructions / Használati útmutató / Instrukcja obsługi /
Návod k obsluze / Návod na obsluhu / Инструкция по эксплуатации

"WALKMAN" is a registered trademark of Sony Corporation to represent Headphone Stereo products.


is a trademark of Sony Corporation.

D-EJ000
D-EJ001



Printed on 100 % recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink.
<http://www.sony.net/>

©2005 Sony Corporation Printed in China

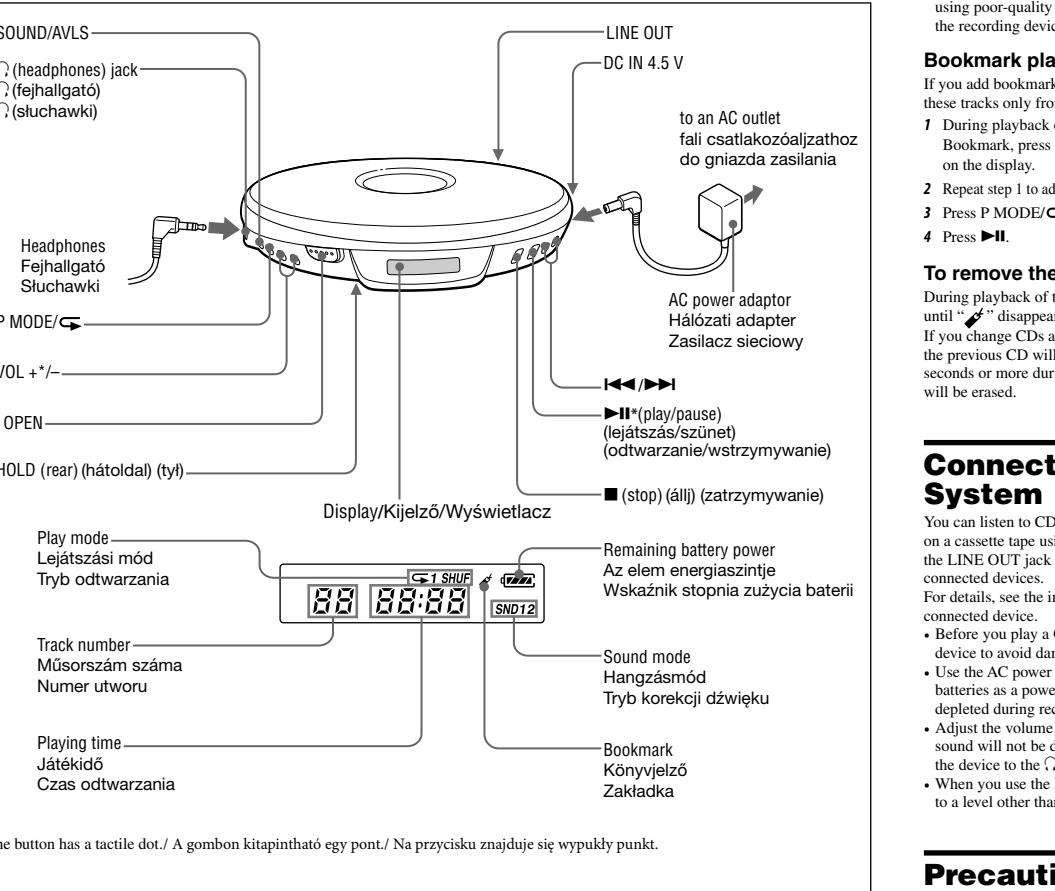

* The button has a tactile dot. / A gombon kitűnhető pont van. / Na przycisku znajduje się wypukły punkt.

English

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not place objects filled with liquids, such as vases, on the apparatus.

CAUTION
The use of optical instruments with this product will increase eye hazard.

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Applicable Accessories: Headphones

2-631-684-23 (1)

Power Sources

To use the batteries (not supplied)

- Slide OPEN to open the player lid and open the battery compartment lid inside the CD player.
- Insert two LR6 (size AA) alkaline batteries by matching the to the diagram inside the CD player and close the lid until it clicks into place. Insert the end first (for both batteries).

Battery life* (approx. hours)

(When the CD player is used on a flat and stable place.) Playing time varies depending on how the CD player is used.

To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not place objects filled with liquids, such as vases, on the apparatus.

CAUTION
The use of optical instruments with this product will increase eye hazard.

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Applicable Accessories: Headphones

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)


2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

2-631-684-23 (1)

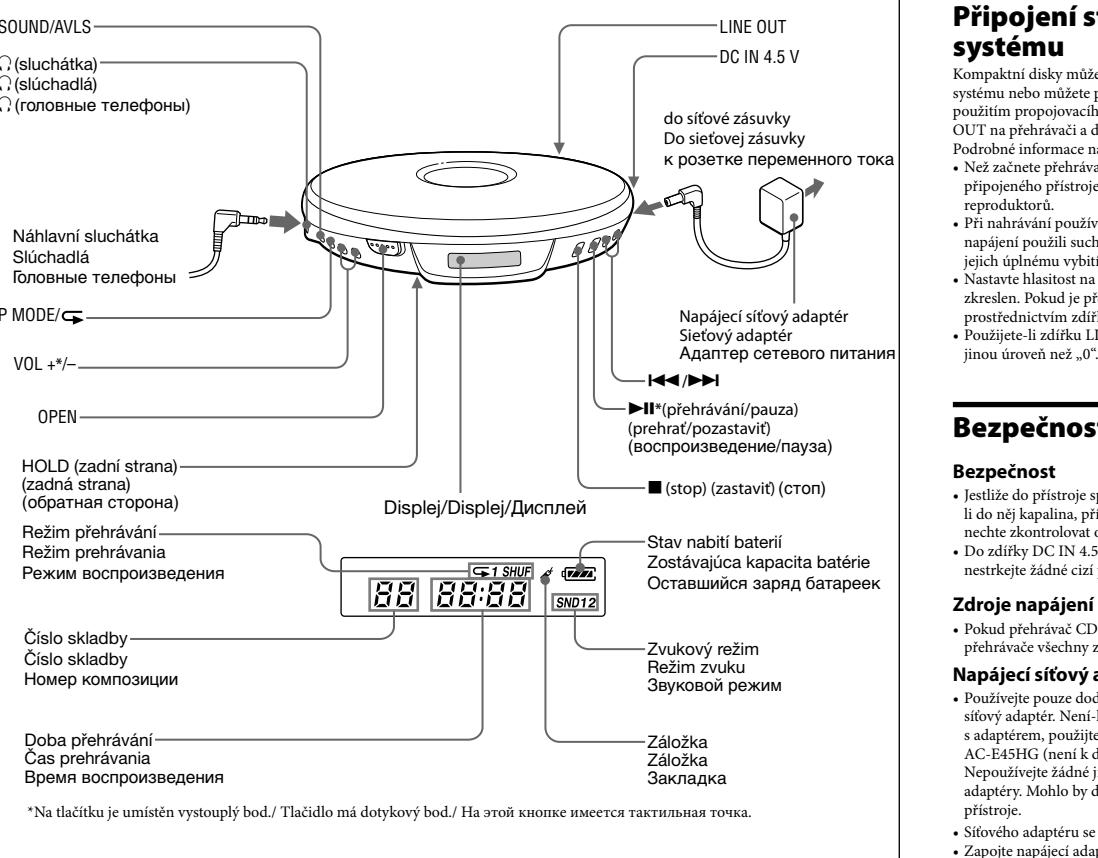

Cesky

VAROVÁNÍ

Nevystavujte prístroj dešti ani vlnkam, aby ste snížili riziko vzniku nebezpečného požiaru či úrazu elektrickým proudom.

Neinstalujte prístroj v užívateľských prostoroch, ktoré sú kabinový alebo vestená skriňky.

Tento výrobok je určený pre prehrávanie diskov odpovedajúcich štandardu Compact Disc (CD).
Nášteré hudebné spoločnosti vydávajú v poslednej dobe zvukové disky kódované pomocou technológií záujemnejšej ako napríklad CD. Môžete na pamäti, že nášteré takové disky nedopadajú štandardu CD, a nelson je proto prehrávať na tomto zařízení.

Používanie stereosystému

Během přehrávání opakovaným stisknutím tlačítka SOUND/AVLS vyberte „SND 1“ nebo „SND 2“.

Abyste snížili riziko nebezpečného požáru či úrazu elektrickým proudom, nepokládajte na přístroj předměty naplněné kapalinami, například vodu.

V některých zemích může být předepsán způsob likvidace baterií používaných k napájení tohoto přístroje. Informujte se laskavě u místních úřadů.

Platnotvořený znak CE se vztahuje pouze na zemi, kde je toto označení zákonné, zejména na zemi Evropského společenství (EU).

Funkce AMS* / vyhledávání

Automatic Music Sensor (automatický hudební senzor)

Cheste-li vyhledávací zařízení a aktuálně aktuální/základní/následující skladby, stiskněte opakováním tlačítka ▶▶▶▶. Cheste-li rytmus případně, stiskněte a podržte opakování tlačítka ▶▶▶▶.

Funkce P MODE (režim přehrávání)

Tato funkce poskytuje ochranu proti přeskakování svého během přehrávání.

Je využíván tím, že výrobek upozorňuje, že je s výrobkem po ukončení jeho životnosti neměřit během odložení z dočasnouho místu. Místo toho můžete během přehrávání využít funkci hudebního senzoru.

Recyklovací materiál, v nichž je vyroben, pomůže zachovat přírodní zdroje. Pro získání dalších informací o recyklaci tohoto výrobku kontaktujte prosím, místní orgány státní správy, místní firmy zabezpečující likvidaci a sber odpadu nebo prodejnu, v níž jste výrobek zakoupili.

Odpovídající příslušenství: Sluchátka

Zdroje napájení

Použití baterií (nejsou součástí dodávky)

1 Posunutím tlačítka OPEN otevřete kryt přehrávače a pak otevřete kryt bateriového prostoru uvnitř přehrávače CD.

2 Zložte dve alkaličke baterie LR6 (AA), aby jejich polárna odpovídala schématu uvnitř přehrávače CD, a zaverte kryt, až zaklapne. Vložte nejprve konec \ominus (plati pro obě baterie).

Zivotnost baterií* (příb. v hodinách)

(Příborek je přehrávač CD používán na rovném a stabilním povrchu.)

3 Použití napájecího síťového adaptéru

Připojte napájecí síťový adaptér podle ilustrace.

Přehrávání disku CD

Systém

Digitalní audio systém pro kompaktní disky

Vlastnosti laserového diody

Režim využívání: kontinuální

Upravitelný výkon laseru: menší než 446 μ W (Hodnota naměřena ve vzdálenosti 200 mm od povrchu objektivu v optické skrzině)

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g

Číslo výrobku: 139,8 x 27,9 x 139,8 mm

Číslo výrobku: 196 g