


Media interface for iPod and USB


North American (Impreza with Navigation) Audio

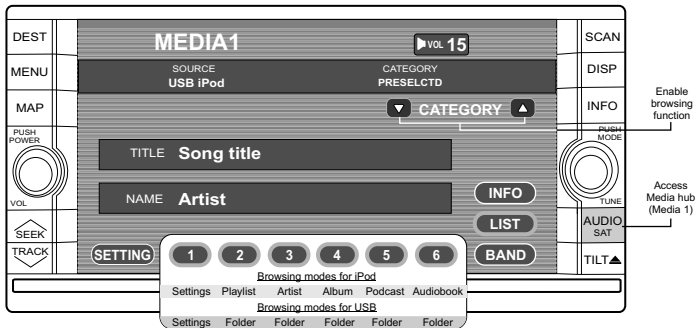

iPod (Media 1)	USB (Media 1)
PRESETS	
Preset 1 - Shuffle▲ Repeat▼ <u>Browsing/Modes:</u> <u>Browsing hierarchy</u> Preset 2 - Playlist └─> Preset 3 - Artist └─> Preset 4 - Album To reset hierarchy, select to Mode 2 and choose another Playlist. Preset 5 - Podcast Preset 6 - Audiobook	Preset 1 - Shuffle▲ Repeat▼ <u>Browsing/Modes:</u> Preset 2 Preset 3 Preset 4 } Folder Preset 5 } (Presets 2-6 have Preset 6 } the same function)
BROWSING	
1. Access Media 1 → 2. Select Mode 3. Enable browsing 4. Within 5 seconds start browsing	1. Access Media 1 → 2. Select Mode 3. Enable browsing 4. Within 5 seconds start browsing

Interface Média pour Lecture audio iPod et USB

Audio Amérique du Nord (Impreza avec Navigation)

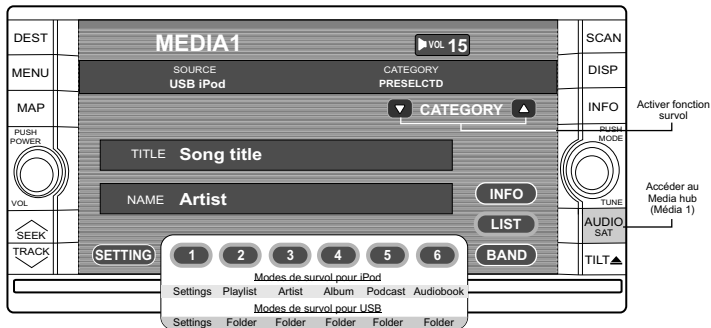

iPod (Média 1)	USB (Média 1)
PRESETS	
<p>Présélection 1 - Aléatoire ▲ Répétition ▼ Survol/Modes:</p> <p style="text-align: center;"><u>Survol hiérarchie</u></p> <p>Présélection 2 - Liste de lecture ↳ Présélection 3 - Artiste ↳ Présélection 4 - Album Pour réinitialiser, sélectionner mode 2.</p> <p>Preset 5 - Balado Preset 6 - Livre audio</p>	<p>Présélection 1 - Aléatoire ▲ Répétition ▼ Survol/Modes:</p> <p>Présélection 2 Présélection 3 Présélection 4 — Dossier Présélection 5 (Présélections 2-6 ont la même fonction) Présélection 6</p>
BROWSING	
<p>1. Accéder Média 1</p> <p>2. Sélectionner Mode</p> <p>3. Activer navigation</p> <p>4. En dedans de 5 sec débuter navigation</p>	<p>1. Accéder Média 1</p> <p>2. Sélectionner Mode</p> <p>3. Activer navigation</p> <p>4. En dedans de 5 sec débuter navigation</p>