


IMPORTANT MANUAL

Do Not Throw Away

Poulan PRO

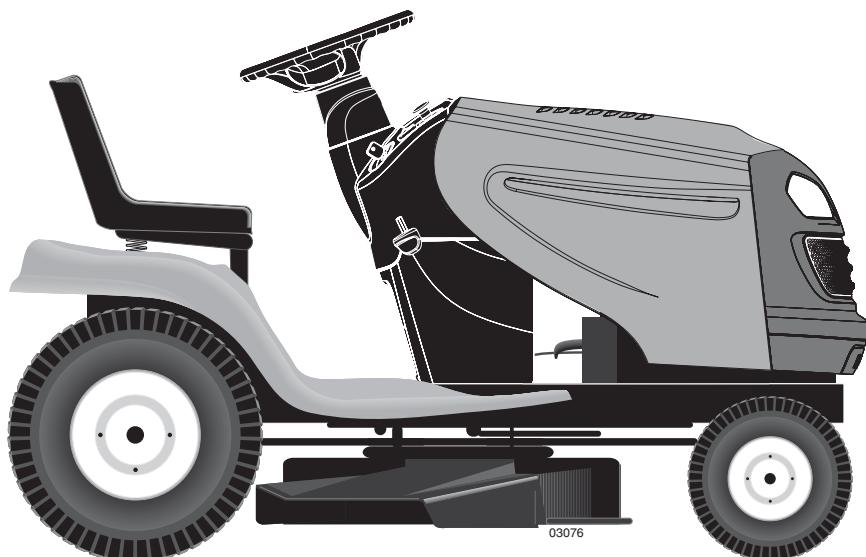

OPERATOR'S MANUAL

MODEL:

PB24H54YT
LAWN TRACTOR

ALWAYS WEAR EYE PROTECTION DURING OPERATION

Visit our website: www.poulan-pro.com

WARNING:

Read this Manual and follow all Warnings and Safety Instructions. Failure to do so can result in serious injury.

SAFETY RULES

Safe Operation Practices for Ride-On Mowers

DANGER: THIS CUTTING MACHINE IS CAPABLE OF AMPUTATING HANDS AND FEET AND THROWING OBJECTS. FAILURE TO OBSERVE THE FOLLOWING SAFETY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.



WARNING: In order to prevent accidental starting when setting up, transporting, adjusting or making repairs, always disconnect spark plug wire and place wire where it cannot contact spark plug.



WARNING: Do not coast down a hill in neutral, you may lose control of the tractor.



WARNING: Tow only the attachments that are recommended by and comply with specifications of the manufacturer of your tractor. Use common sense when towing. Operate only at the lowest possible speed when on a slope. Too heavy of a load, while on a slope, is dangerous. Tires can lose traction with the ground and cause you to lose control of your tractor.



WARNING

Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.



WARNING

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

I. GENERAL OPERATION

- Read, understand, and follow all instructions on the machine and in the manual before starting.
- Do not put hands or feet near rotating parts or under the machine. Keep clear of the discharge opening at all times.
- Only allow responsible adults, who are familiar with the instructions, to operate the machine.
- Clear the area of objects such as rocks, toys, wire, etc., which could be picked up and thrown by the blades.
- Be sure the area is clear of bystanders before operating. Stop machine if anyone enters the area.
- Never carry passengers.
- Do not mow in reverse unless absolutely necessary. Always look down and behind before and while backing.
- Never direct discharged material toward anyone. Avoid discharging material against a wall or obstruction. Material may ricochet back toward the operator. Stop the blades when crossing gravel surfaces.

- Do not operate machine without the entire grass catcher, discharge guard, or other safety devices in place and working.
- Slow down before turning.
- Never leave a running machine unattended. Always turn off blades, set parking brake, stop engine, and remove keys before dismounting.
- Disengage blades when not mowing. Shut off engine and wait for all parts to come to a complete stop before cleaning the machine, removing the grass catcher, or unclogging the discharge guard.
- Operate machine only in daylight or good artificial light.
- Do not operate the machine while under the influence of alcohol or drugs.
- Watch for traffic when operating near or crossing roadways.
- Use extra care when loading or unloading the machine into a trailer or truck.
- Always wear eye protection when operating machine.
- Data indicates that operators, age 60 years and above, are involved in a large percentage of riding mower-related injuries. These operators should evaluate their ability to operate the riding mower safely enough to protect themselves and others from serious injury.
- Follow the manufacturer's recommendation for wheel weights or counterweights.
- Keep machine free of grass , leaves or other debris build-up which can touch hot exhaust / engine parts and burn. Do not allow the mower deck to plow leaves or other debris which can cause build-up to occur. Clean any oil or fuel spillage before operating or storing the machine. Allow machine to cool before storage.

II. SLOPE OPERATION

Slopes are a major factor related to loss of control and tip-over accidents, which can result in severe injury or death. Operation on all slopes requires extra caution. If you cannot back up the slope or if you feel uneasy on it, do not mow it.

- Mow up and down slopes, not across.
- Watch for holes, ruts, bumps, rocks, or other hidden objects. Uneven terrain could overturn the machine. Tall grass can hide obstacles.
- Choose a low ground speed so that you will not have to stop or shift while on the slope.
- Do not mow on wet grass. Tires may lose traction. Always keep the machine in gear when going down slopes. Do not shift to neutral and coast downhill.
- Avoid starting, stopping, or turning on a slope. If the tires lose traction, disengage the blades and proceed slowly straight down the slope.
- Keep all movement on the slopes slow and gradual. Do not make sudden changes in speed or direction, which could cause the machine to roll over.
- Use extra care while operating machine with grass catchers or other attachments; they can affect the stability of the machine. Do no use on steep slopes.
- Do not try to stabilize the machine by putting your foot on the ground.
- Do not mow near drop-offs, ditches, or embankments. The machine could suddenly roll over if a wheel is over the edge or if the edge caves in.



SAFETY RULES

Safe Operation Practices for Ride-On Mowers



III. CHILDREN

Tragic accidents can occur if the operator is not alert to the presence of children. Children are often attracted to the machine and the mowing activity. *Never assume that children will remain where you last saw them.*

- Keep children out of the mowing area and in the watchful care of a responsible adult other than the operator.
- Be alert and turn machine off if a child enters the area.
- Before and while backing, look behind and down for small children.
- Never carry children, even with the blades shut off. They may fall off and be seriously injured or interfere with safe machine operation. Children who have been given rides in the past may suddenly appear in the mowing area for another ride and be run over or backed over by the machine.
- Never allow children to operate the machine.
- Use extra care when approaching blind corners, shrubs, trees, or other objects that may block your view of a child.

IV. TOWING

- Tow only with a machine that has a hitch designed for towing. Do not attach towed equipment except at the hitch point.
- Follow the manufacturer's recommendation for weight limits for towed equipment and towing on slopes.
- Never allow children or others in or on towed equipment.
- On slopes, the weight of the towed equipment may cause loss of traction and loss of control.
- Travel slowly and allow extra distance to stop.

V. SERVICE

SAFE HANDLING OF GASOLINE

To avoid personal injury or property damage, use extreme care in handling gasoline. Gasoline is extremely flammable and the vapors are explosive.

- Extinguish all cigarettes, cigars, pipes, and other sources of ignition.
- Use only approved gasoline container.
- Never remove gas cap or add fuel with the engine running. Allow engine to cool before refueling.
- Never fuel the machine indoors.
- Never store the machine or fuel container where there is an open flame, spark, or pilot light such as on a water heater or other appliances.
- Never fill containers inside a vehicle or on a truck or trailer bed with plastic liner. Always place containers on the ground away from your vehicle when filling.
- Remove gas-powered equipment from the truck or trailer and refuel it on the ground. If this is not possible, then refuel such equipment with a portable container, rather than from a gasoline dispenser nozzle.
- Keep the nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete. Do not use a nozzle lock-open device.
- If fuel is spilled on clothing, change clothing immediately.
- Never overfill fuel tank. Replace gas cap and tighten securely.

GENERAL SERVICE

- Never operate machine in a closed area.
- Keep all nuts and bolts tight to be sure the equipment is in safe working condition.
- Never tamper with safety devices. Check their proper operation regularly.
- Keep machine free of grass, leaves, or other debris build-up. Clean oil or fuel spillage and remove any fuel-soaked debris. Allow machine to cool before storing.
- If you strike a foreign object, stop and inspect the machine. Repair, if necessary, before restarting.
- Never make any adjustments or repairs with the engine running.
- Check grass catcher components and the discharge guard frequently and replace with manufacturer's recommended parts, when necessary.
- Mower blades are sharp. Wrap the blade or wear gloves, and use extra caution when servicing them.
- Check brake operation frequently. Adjust and service as required.
- Maintain or replace safety and instruction labels, as necessary.



- Be sure the area is clear of bystanders before operating. Stop machine if anyone enters the area.
- Never carry passengers.
- Do not mow in reverse unless absolutely necessary. Always look down and behind before and while backing.
- Never carry children, even with the blades shut off. They may fall off and be seriously injured or interfere with safe machine operation. Children who have been given rides in the past may suddenly appear in the mowing area for another ride and be run over or backed over by the machine.
- Keep children out of the mowing area and in the watchful care of a responsible adult other than the operator.
- Be alert and turn machine off if a child enters the area.
- Before and while backing, look behind and down for small children.
- Mow up and down slopes (15° Max), not across.
- Choose a low ground speed so that you will not have to stop or shift while on the slope.
- Avoid starting, stopping, or turning on a slope. If the tires lose traction, disengage the blades and proceed slowly straight down the slope.
- If machine stops while going uphill, disengage blades, shift into reverse and back down slowly.
- Do not turn on slopes unless necessary, and then, turn slowly and gradually downhill, if possible.

PRODUCT SPECIFICATIONS

Gasoline Capacity and type:	3 Gallons Unleaded Regular
Oil Type (API-SG-SL):	SAE 30 (above 32°F) SAE 5W-30 (below 32°F)
Oil Capacity:	W/ Filter: 64 oz W/O Filter: 60 oz
Spark Plug: (Gap: .040")	Champion QC12YC
Ground Speed (MPH):	Forward: 0 – 5.5 Reverse: 0 – 2.4
Charging System:	16 AMPS @ 3600 RPM
Battery:	AMP/H.R.: 35 MIN. CCA: 280 Case Size: U1R
Blade Bolt Torque:	45-55FT. LBS.

CONGRATULATIONS on your purchase of a new tractor. It has been designed, engineered and manufactured to give you the best possible dependability and performance.

Should you experience any problem you cannot easily remedy, please contact your nearest authorized servicecenter/department. We have competent, well-trained technicians and the proper tools to service or repair this tractor.

Please read and retain this manual. The instructions will enable you to assemble and maintain your tractor properly. Always observe the "SAFETY RULES".

CUSTOMER RESPONSIBILITIES

- Read and observe the safety rules.
- Follow a regular schedule in maintaining, caring for and using your tractor.
- Follow the instructions under "Maintenance" and "Storage" sections of this owner's manual.

WARNING: This tractor is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator.


In the state of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands.

A spark arrester for the muffler is available through your nearest authorized service center/department (See REPAIR PARTS section of this manual).

TABLE OF CONTENTS

SAFETY RULES	2-3
PRODUCT SPECIFICATIONS.....	4
CUSTOMER RESPONSIBILITIES.....	4
ASSEMBLY	6-8
OPERATION	9-15
MAINTENANCE SCHEDULE	16
MAINTENANCE	16-19
SERVICE AND ADJUSTMENTS	20-24
STORAGE.....	25
TROUBLESHOOTING	26-27
WARRANTY.....	28

UNASSEMBLED PARTS

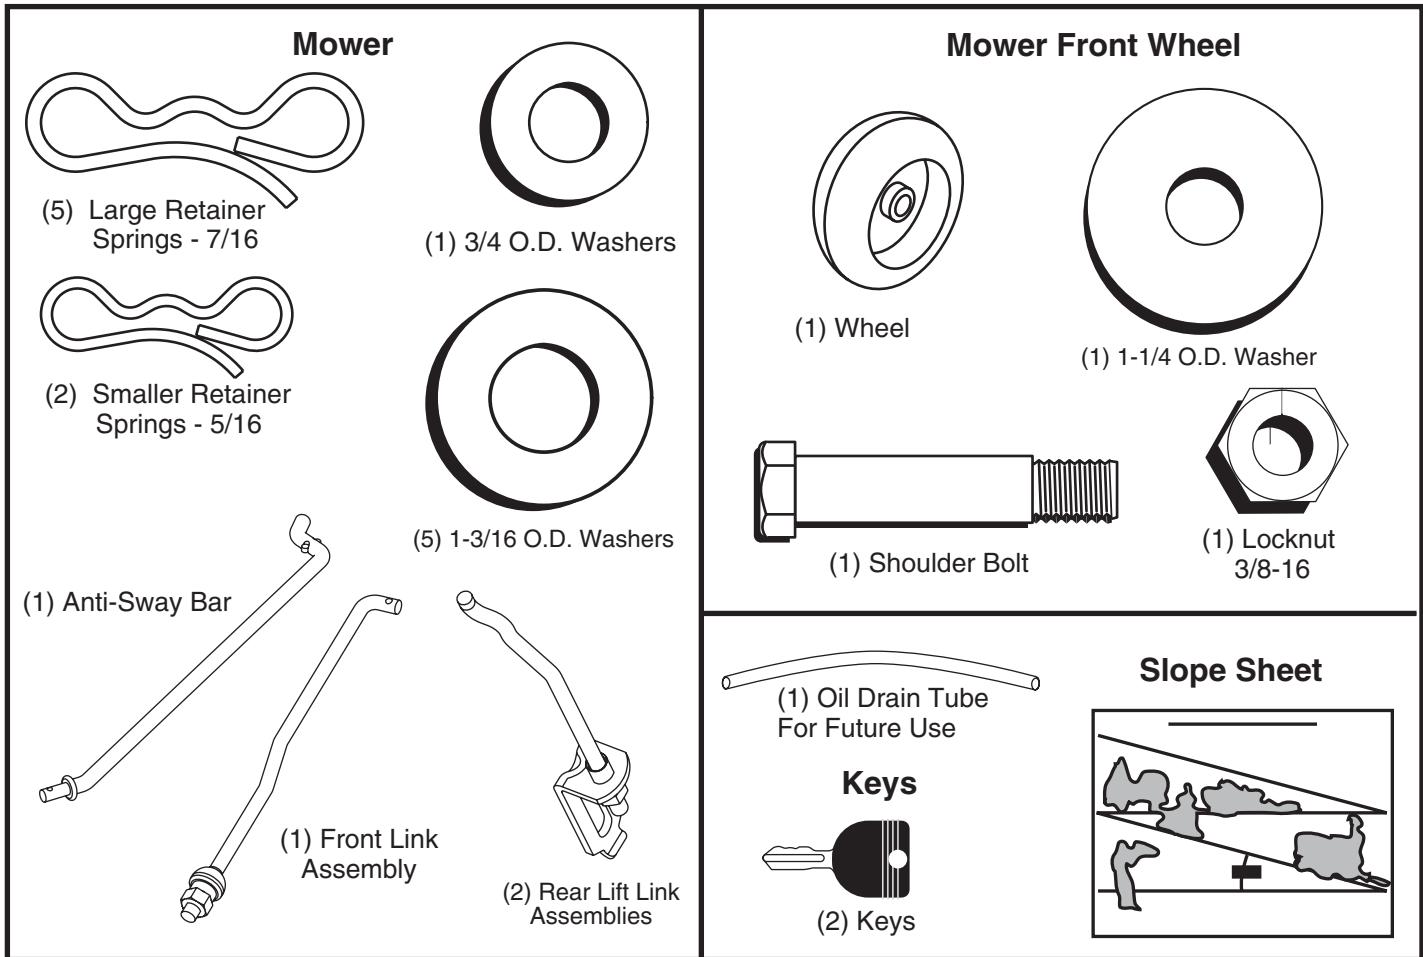

ASSEMBLY

Your new tractor has been assembled at the factory with exception of those parts left unassembled for shipping purposes.

When right or left hand is mentioned in this manual, it means from your point of view, when you are in the operating position (seated behind the steering wheel).

TO REMOVE TRACTOR FROM CARTON


UNPACK CARTON

- Remove all accessible loose parts and parts cartons from carton .
- Cut along dashed lines on all four panels of carton. Remove end panels and lay side panels flat.
- Check for any additional loose parts or cartons and remove.

CHECK BATTERY (See Fig. 1)

- Lift hood to raised position.

NOTE: If this battery is put into service after month and year indicated on label (L) (label is located between terminals) charge battery for minimum of one hour at 6-10 amps. (See "BATTERY" in Maintenance section of this manual for charging instructions).

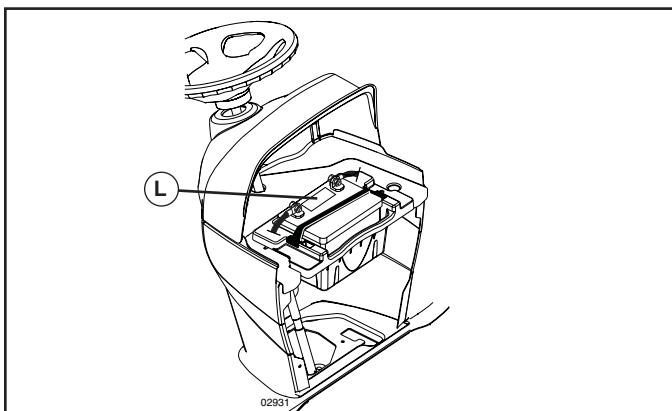

ADJUST SEAT (See Fig. 2)

- Sit in seat.
- Lift up adjustment lever (A) and slide seat until a comfortable position is reached which allows you to press clutch/brake pedal all the way down.
- Release lever to lock seat in position.

ASSEMBLY

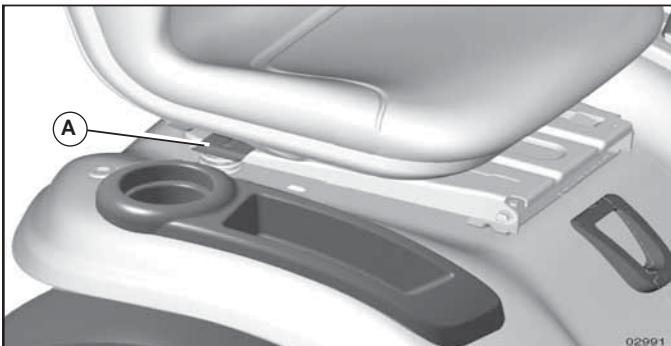


FIG. 2

NOTE: You may now roll or drive your tractor off the skid. Follow the appropriate instruction below to remove the tractor from the skid.

⚠ WARNING: Before starting, read, understand and follow all instructions in the Operation section of this manual. Be sure tractor is in a well-ventilated area. Be sure the area in front of tractor is clear of other people and objects.

TO ROLL TRACTOR OFF SKID (See Operation section for location and function of controls)

- Raise attachment lift lever to its highest position.
- Release parking brake by depressing brake pedal.
- Place freewheel control in disengaged position to disengage transmission (See "TO TRANSPORT" in the Operation section of this manual).
- Roll tractor forward off skid.

TO DRIVE TRACTOR OFF SKID (See Operation section for location and function of controls)

- Be sure all the above assembly steps have been completed.
- Check engine oil level and fill fuel tank with gasoline.
- Place freewheel control in "transmission engaged" position (see "TO TRANSPORT" in Operation section of this manual).
- Sit on seat in operating position, depress brake pedal and set the parking brake.
- Raise attachment lift lever to its highest position.
- Remove key from bag and start the engine (see "TO START" in the Operation section of this manual). After engine has started, move throttle control to idle (slow) position.
- Release parking brake.
- Slowly depress forward drive pedal and drive tractor off skid.
- Apply brake to stop tractor and set parking brake.
- Turn ignition key to "STOP" position.

Continue with the instructions that follow.

ASSEMBLE FRONT WHEEL TO MOWER (See Fig. 3)

- Using shoulder bolt, washer and locknut from parts bag, assemble front wheel to mower as shown. Tighten securely.



FIG. 3

INSTALL MOWER AND DRIVE BELT (See Figs. 4-12)

See MOWER AND DRIVE BELT ASSEMBLY Supplement Sheet for additional guidance on this assembly.

Be sure tractor is on level surface and engage parking brake.

- Lower attachment lift lever to it's lowest position.



CAUTION: Lift lever is spring loaded. Have a tight grip on lift lever, lower it slowly and engage in lowest position.

- Turn steering wheel to the left as far as it will go and position mower on right side of tractor with deflector shield to the right.

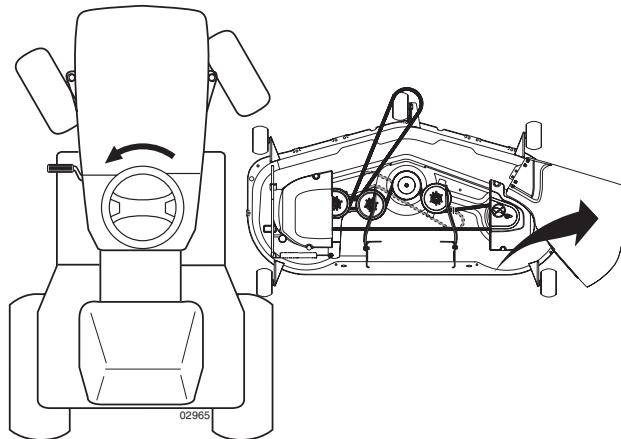


FIG. 4

- Remove plastic tie securing belt, bring belt forward and check belt for proper routing in all mower pulley grooves.

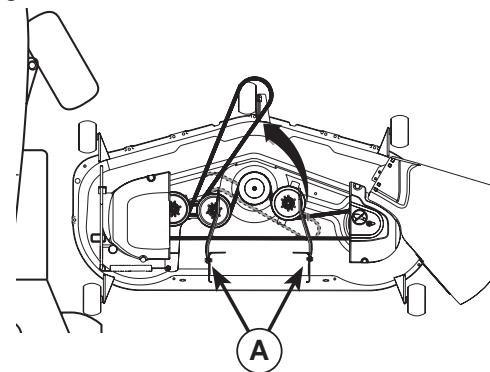


FIG. 5

ASSEMBLY

NOTE: Be sure mower side suspension arms (A) are pointing forward before sliding mower under tractor.

- Slide mower under tractor until it is centered under tractor.
- FIRST INSTALL ANTI-SWAY BAR (S).
- From right side of mower, insert anti-sway bar into hole in transmission bracket (T).

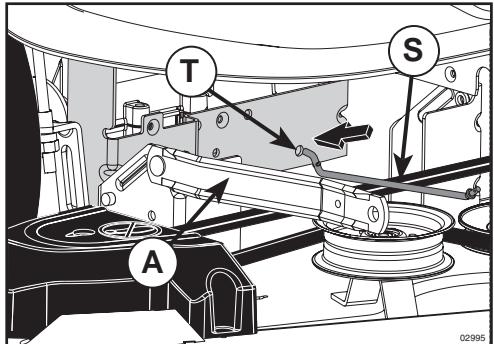


FIG. 6

- Pivot bar towards you and insert other end of bar into hole in rear mower bracket (D). Move mower as needed to insert bar.
- Secure with washer and retainer spring as shown using small 5/16 retainer spring.

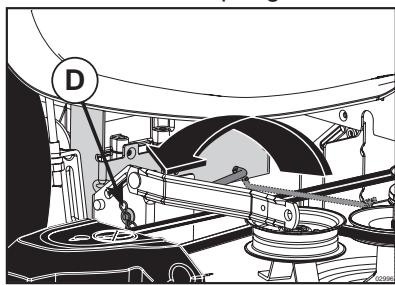


FIG. 7

- ATTACH MOWER SIDE SUSPENSION ARMS (A) TO CHASSIS - Position hole in arm over pin (B) on outside of tractor chassis and secure with washer and retainer spring.
- Repeat on opposite side of tractor.

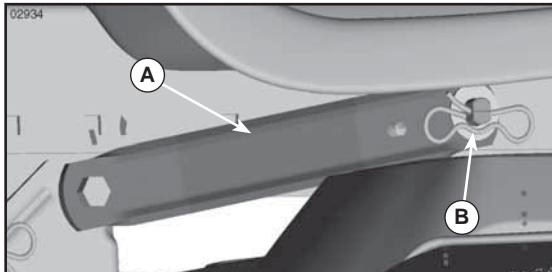


FIG. 8

- ATTACH REAR LIFT LINKS (C) - Insert rod end of lift link assembly into hole in tractor lift shaft suspension arm (L) and pivot link down to mower. Lift rear corner of mower and position slot in link assembly over pin on rear mower bracket (D) and secure with washer and retainer spring.
- Repeat on opposite side of tractor.

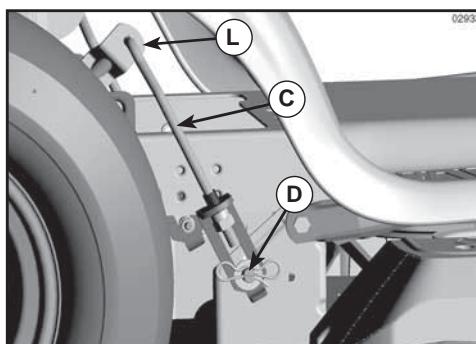


FIG. 9

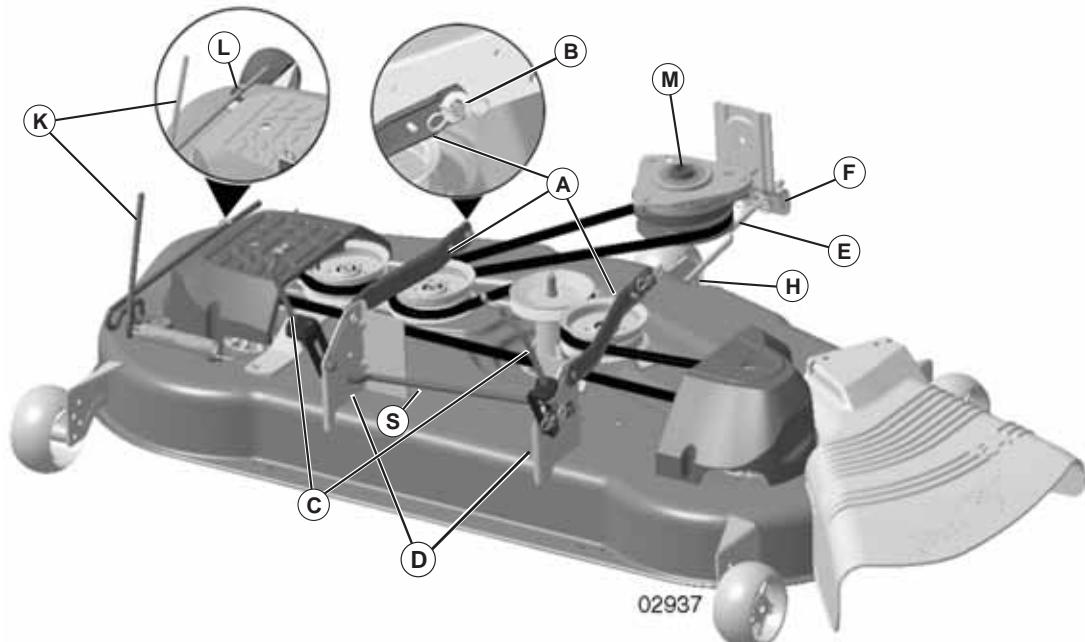


FIG. 10

ASSEMBLY

- Turn steering wheel to position wheels straight forward.
- ATTACH FRONT LINK (E) - Work from left side of tractor. Insert rod end of link assembly through front hole in tractor front suspension bracket (F) and secure with 7/16 retainer spring (G) through hole in link located behind the bracket.
- Insert other end of link (E) into hole in front mower bracket (H) and secure with washer and 5/16 retainer spring (J).

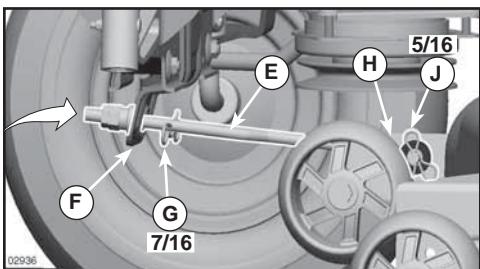


FIG. 11

- Disengage belt tension rod (K) from locking bracket (L).
- Install belt onto engine clutch pulley (M).

IMPORTANT: Check belt for proper routing in all mower pulley grooves.

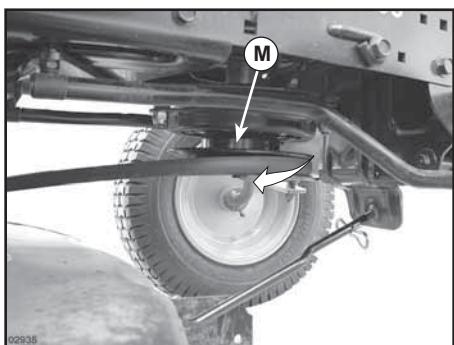


FIG. 12

- Engage belt tension rod (K) on locking bracket (L).



CAUTION: Belt tension rod is spring loaded. Have a tight grip on rod and engage slowly.

- Raise attachment lift lever to highest position.
- If necessary, adjust gauge wheels before operating mower as shown in the Operation section of this manual.

CHECK TIRE PRESSURE

The tires on your tractor were overinflated at the factory for shipping purposes. Correct tire pressure is important for best cutting performance.

- Reduce tire pressure to PSI shown on tires.

CHECK DECK LEVELNESS

For best cutting results, mower housing should be properly leveled. See "TO LEVEL MOWER HOUSING" in the Service and Adjustments section of this manual.

CHECK FOR PROPER POSITION OF ALL BELTS

See the figures that are shown for replacing motion and mower blade drive belts in the Service and Adjustments section of this manual. Verify that the belts are routed correctly.

CHECK BRAKE SYSTEM

After you learn how to operate your tractor, check to see that the brake is operating properly. See "TO CHECK BRAKE" in the Service and Adjustments section of this manual.

✓ CHECKLIST

BEFORE YOU OPERATE YOUR NEW TRACTOR, WE WISH TO ASSURE THAT YOU RECEIVE THE BEST PERFORMANCE AND SATISFACTION FROM THIS QUALITY PRODUCT.

PLEASE REVIEW THE FOLLOWING CHECKLIST:


- ✓ All assembly instructions have been completed.
- ✓ No remaining loose parts in carton.
- ✓ Battery is properly prepared and charged.
- ✓ Seat is adjusted comfortably and tightened securely.
- ✓ All tires are properly inflated. (For shipping purposes, the tires were overinflated at the factory).
- ✓ Be sure mower deck is properly leveled side-to-side/front-to-rear for best cutting results. (Tires must be properly inflated for leveling).
- ✓ Check mower and drive belts. Be sure they are routed properly around pulleys and inside all belt keepers.
- ✓ Check wiring. See that all connections are still secure and wires are properly clamped.
- ✓ Before driving tractor, be sure freewheel control is in "transmission engaged" position (see "TO TRANSPORT" in the Operation section of this manual).

WHILE LEARNING HOW TO USE YOUR TRACTOR, PAY EXTRA ATTENTION TO THE FOLLOWING IMPORTANT ITEMS:

- ✓ Engine oil is at proper level.
- ✓ Fuel tank is filled with fresh, clean, regular unleaded gasoline.
- ✓ Become familiar with all controls, their location and function. Operate them before you start the engine.
- ✓ Be sure brake system is in safe operating condition.
- ✓ Be sure Operator Presence System and Reverse Operation System (ROS) are working properly (See the Operation and Maintenance sections in this manual).
- ✓ It is important to purge the transmission before operating your tractor for the first time. Follow proper starting and transmission purging instructions (See "TO START ENGINE" and "PURGE TRANSMISSION" in the Operation section of this manual).

OPERATION

These symbols may appear on your tractor or in literature supplied with the product. Learn and understand their meaning.

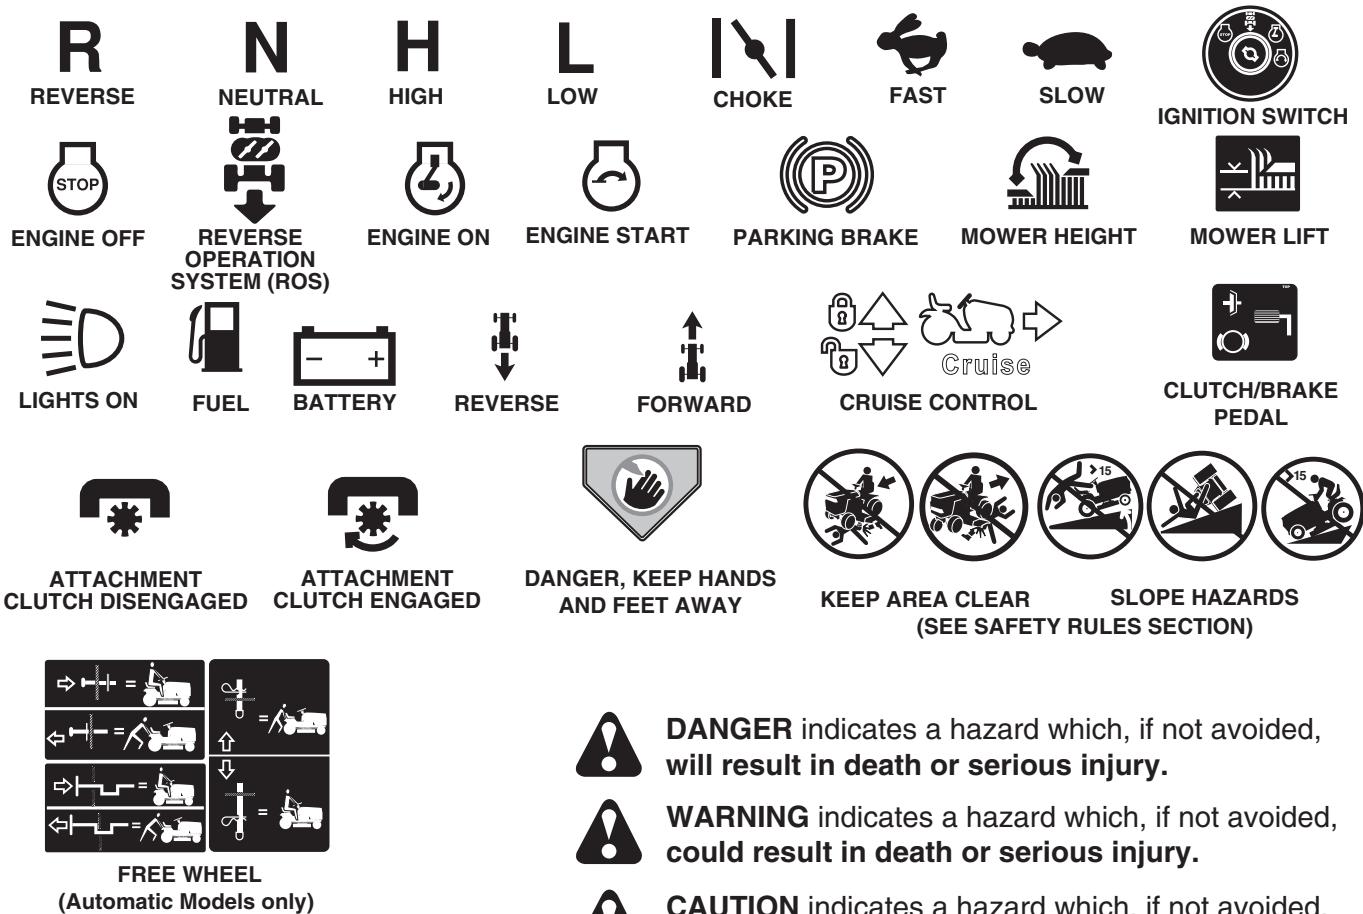

Failure to follow instructions could result in serious injury or death. The safety alert symbol is used to identify safety information about hazards which can result in death, serious injury and/or property damage.



DANGER indicates a hazard which, if not avoided, will result in death or serious injury.



WARNING indicates a hazard which, if not avoided, could result in death or serious injury.



CAUTION indicates a hazard which, if not avoided, might result in minor or moderate injury.

CAUTION when used without the alert symbol, indicates a situation that could result in damage to the tractor and/or engine.



HOT SURFACES indicates a hazard which, if not avoided, could result in death, serious injury and/or property damage.



FIRE indicates a hazard which, if not avoided, could result in death, serious injury and/or property damage.

OPERATION

KNOW YOUR TRACTOR

READ THIS OWNER'S MANUAL AND SAFETY RULES BEFORE OPERATING YOUR TRACTOR

Compare the illustrations with your tractor to familiarize yourself with the locations of various controls and adjustments. Save this manual for future reference.

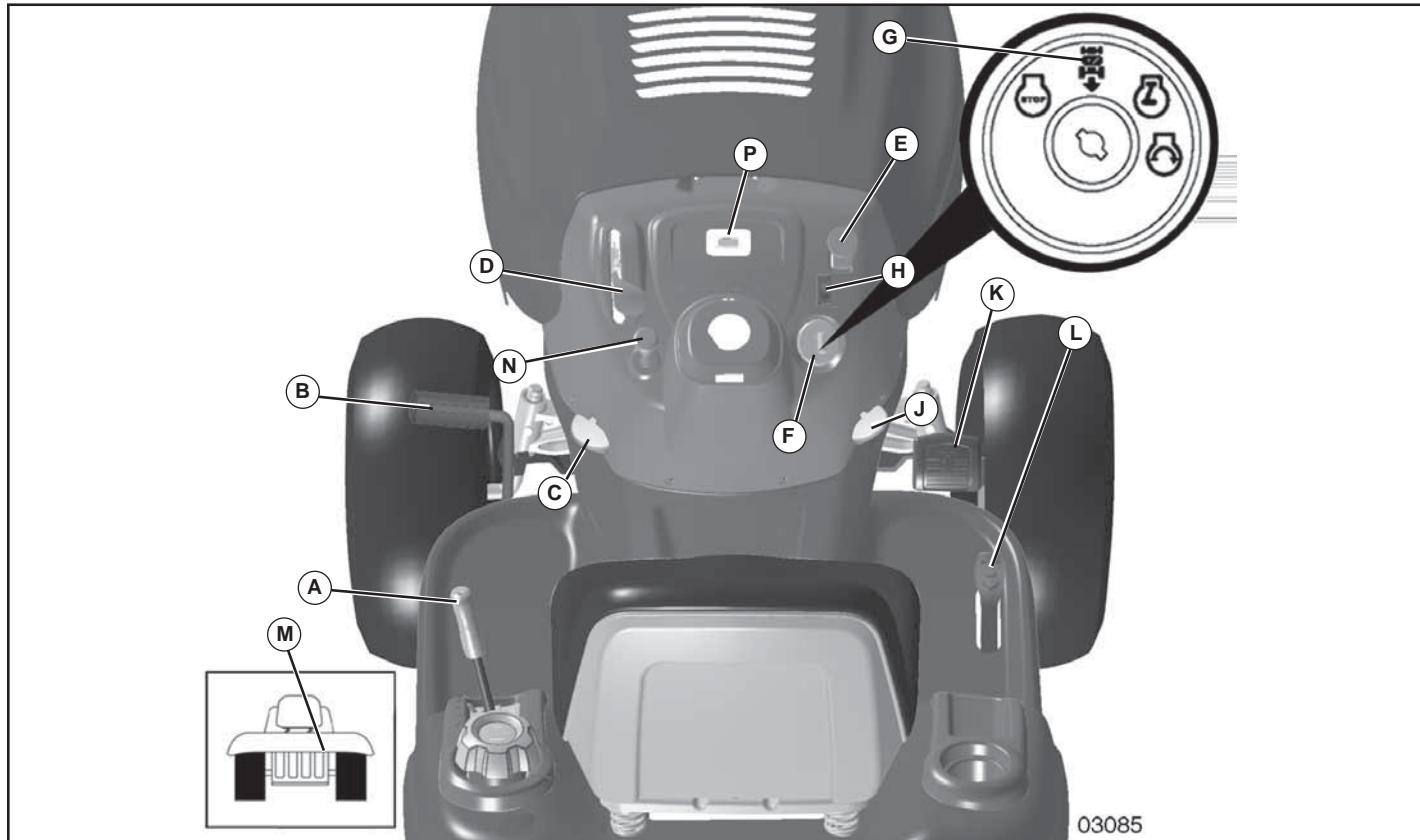


FIG. 13

Our tractors conform to the applicable safety standards of the American National Standards Institute.

- (A) **ATTACHMENT LIFT LEVER** – Used to raise and lower the mower or other attachments mounted to your tractor.
(B) **BRAKE PEDAL** – Used for braking the tractor and starting the engine.
(C) **PARKING BRAKE** – Locks clutch/brake pedal into the brake position.
(D) **THROTTLE CONTROL** – Used to control engine speed.
(E) **ATTACHMENT CLUTCH SWITCH** – Used to engage the mower blades, or other attachments mounted to your tractor.
(F) **IGNITION SWITCH** – Used for starting and stopping the engine.
(G) **REVERSE OPERATION SYSTEM (ROS) "ON" POSITION** – Allows operation of mower or other powered attachment while in reverse.

- (H) **LIGHT SWITCH** – Turns the headlights on and off.
(J) **CRUISE CONTROL LEVER** – Used to set forward movement of tractor at desired speed without holding the forward drive pedal.
(K) **FORWARD DRIVE PEDAL** – Used for forward movement of tractor.
(L) **REVERSE DRIVE PEDAL** – Used for reverse movement of tractor.
(M) **FREEWHEEL CONTROL** – Disengages transmission for pushing or slowly towing the tractor with the engine off.
(N) **CHOKE CONTROL** – Used when starting a cold engine.
(P) **SERVICE REMINDER / HOUR METER** – Indicates when service is required for the engine and mower.

OPERATION



The operation of any tractor can result in foreign objects thrown into the eyes, which can result in severe eye damage. Always wear safety glasses or eye shields while operating your tractor or performing any adjustments or repairs. We recommend standard safety glasses or a wide vision safety mask worn over spectacles.

HOW TO USE YOUR TRACTOR

TO SET PARKING BRAKE(See Fig. 14)

Your tractor is equipped with an operator presence sensing switch. When engine is running, any attempt by the operator to leave the seat without first setting the parking brake will shut off the engine.

- Depress brake pedal (B) all the way down and hold.
- Pull parking brake lever (C) up and hold, release pressure from brake pedal (B), then release parking brake lever. Pedal should remain in brake position. Make sure parking brake will hold tractor secure.

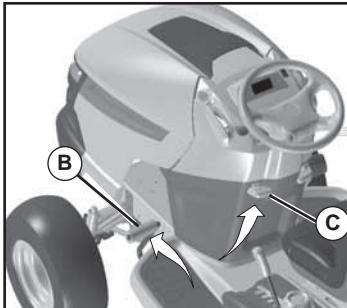


FIG. 14

STOPPING

MOWER BLADES

- To stop mower blades, push attachment clutch switch in to disengaged position (O).

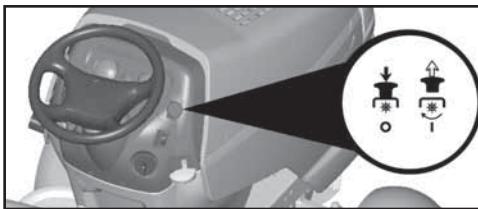


FIG. 15

GROUND DRIVE -

- To stop ground drive, depress brake pedal all the way down.

ENGINE -

- Move throttle control (D) between half and full speed (fast) position.

NOTE: Failure to move throttle control between half and full speed (fast) position, before stopping, may cause engine to "backfire".

- Turn ignition key (F) to "STOP" position and remove key. Always remove key when leaving tractor to prevent unauthorized use.
- Never use choke (N) to stop engine.

IMPORTANT: Leaving the ignition switch in any position other than "STOP" will cause the battery to discharge and go dead.

NOTE: Under certain conditions when tractor is standing idle with the engine running, hot engine exhaust gases may cause "browning" of grass. To eliminate this possibility, always stop engine when stopping tractor on grass areas.



CAUTION: Always stop tractor completely, as described above, before leaving the operator's position.

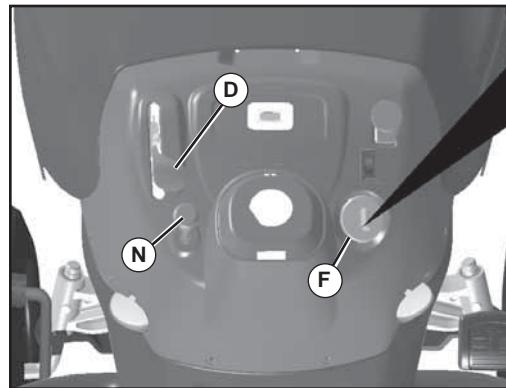


FIG. 16

TO USE THROTTLE CONTROL (See Fig. 16)

Always operate engine at full speed (fast).

- Operating engine at less than full speed (fast) reduces engines operating efficiency.
- Full speed (fast) offers the best bagging and mower performance.

TO USE CHOKE CONTROL -D (See Fig. 16)

Use choke control whenever you are starting a cold engine. Do not use to start a warm engine.

- To engage choke control, pull knob out. Slowly push knob in to disengage.

TO MOVE FORWARD AND BACKWARD -N (See Fig. 17)

The direction and speed of movement is controlled by the forward and reverse drive pedals.

- Start tractor and release parking brake.
- Slowly depress forward (K) or reverse (L) drive pedal to begin movement. Ground speed increases the further down the pedal is depressed.

OPERATION

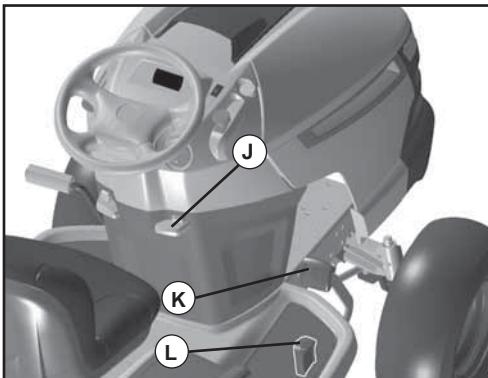


FIG. 17

TO USE CRUISE CONTROL -J (See Fig. 17)

The cruise control feature can be used for forward travel only.

SYSTEM CHARACTERISTICS

The cruise control should only be used while mowing or transporting on relatively smooth, straight surfaces. Other conditions such as trimming at slow speeds may cause the cruise control to disengage. Do not use the cruise control on slopes, rough terrain or while trimming or turning.

- With forward drive pedal depressed to desired speed, pull cruise control lever (J) up and hold while lifting your foot off the pedal, then release the lever.

To disengage the cruise control, depress the brake pedal or tap on forward drive pedal.

TO ADJUST MOWER CUTTING HEIGHT (See Fig. 7)

The position of the attachment lift lever (A) determines the cutting height.



FIG. 18

- Put attachment lift lever in desired cutting height slot.
- Slide pointer tab (T) to desired cutting height as a reminder for next time you mow.

The cutting height range is approximately 1" to 4". The heights are measured from the ground to the blade tip with the engine not running. These heights are approximate and may vary depending upon soil conditions, height of grass and types of grass being mowed.

- The average lawn should be cut to approximately 2-1/2 inches during the cool season and to over 3 inches during hot months. For healthier and better looking lawns, mow often and after moderate growth.

- For best cutting performance, grass over 6 inches in height should be mowed twice. Make the first cut relatively high; the second to desired height.

TO ADJUST GAUGE WHEELS (See Fig. 19)

Gauge wheels are properly adjusted when they are slightly off the ground when mower is at the desired cutting height in operating position. Gauge wheels then keep the deck in proper position to help prevent scalping in most terrain conditions.

NOTE: Adjust gauge wheels with tractor on a flat level surface.

- Adjust mower to desired cutting height (See "TO ADJUST MOWER CUTTING HEIGHT" in this section of manual).
- With mower in desired height of cut position, gauge wheels should be assembled so they are slightly off the ground. Install gauge wheel in appropriate hole. Tighten securely.
- Repeat for all, installing gauge wheel in same adjustment hole.

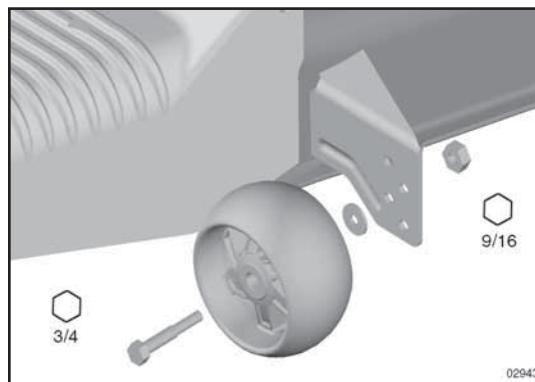


FIG. 19

TO OPERATE MOWER

Your tractor is equipped with an operator presence sensing switch. Any attempt by the operator to leave the seat with the engine running and the attachment clutch engaged will shut off the engine. You must remain fully and centrally positioned in the seat to prevent the engine from hesitating or cutting off when operating your equipment on rough, rolling terrain or hills.

- Select desired height of cut with attachment lift lever.
- Start mower blades by engaging attachment clutch control.

TO STOP MOWER BLADES -
disengage attachment clutch control.



CAUTION: Do not operate the mower without either the entire grass catcher, on mowers so equipped, or the deflector shield (S) in place.

OPERATION

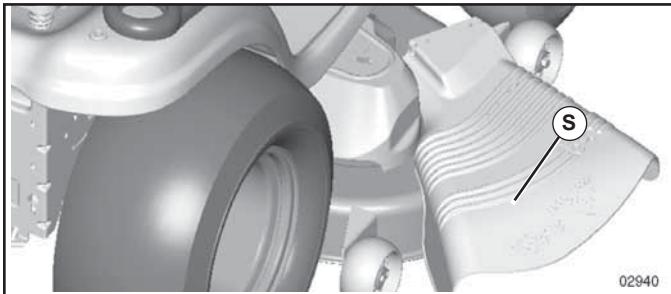


FIG. 20

REVERSE OPERATION SYSTEM (ROS)

Your tractor is equipped with a Reverse Operation System (ROS). Any attempt by the operator to travel in the reverse direction with the attachment clutch engaged will shut off the engine unless ignition key is placed in the ROS "ON" position.

WARNING: Backing up with the attachment clutch engaged while mowing is strongly discouraged. Turning the ROS "ON", to allow reverse operation with the attachment clutch engaged, should only be done when the operator decides it is necessary to reposition the machine with the attachment engaged. **Do not mow in reverse unless absolutely necessary.**

USING THE REVERSE OPERATION SYSTEM -
Only use if you are certain no children or other bystanders will enter the mowing area.

- Depress brake pedal all the way down.
- With engine running, turn ignition key counterclockwise to ROS "ON" position.
- Look down and behind before and while backing.
- Slowly depress reverse drive pedal to start movement.
- When use of the ROS is no longer needed, turn the ignition key clockwise to engine "ON" position.

ROS "ON" POSITION



ENGINE "ON" POSITION
(NORMAL OPERATING)



TO OPERATE ON HILLS



CAUTION: Do not drive up or down hills with slopes greater than 15° and do not drive across any slope.

- Choose the slowest speed before starting up or down hills.
- Avoid stopping or changing speed on hills.
- If stopping is absolutely necessary, push brake pedal quickly to brake position and engage parking brake.

- To restart movement, slowly release parking brake and brake pedal.
- Slowly depress appropriate drive pedal to slowest setting.
- Make all turns slowly.

TO TRANSPORT (See Figs. 13 and 21)

When pushing or towing your tractor, be sure to disengage transmission by placing freewheel control in freewheeling position. Free wheel control is located at the rear drawbar of tractor.

- Raise attachment lift to highest position with attachment lift control.
- Pull freewheel control out and down into the slot and release so it is held in the disengaged position.
- Do not push or tow tractor at more than two (2) MPH.
- To reengage transmission, reverse above procedure.

NOTE: To protect hood from damage when transporting your tractor on a truck or a trailer, be sure hood is closed and secured to tractor. Use an appropriate means of tying hood to tractor (rope, cord, etc.).

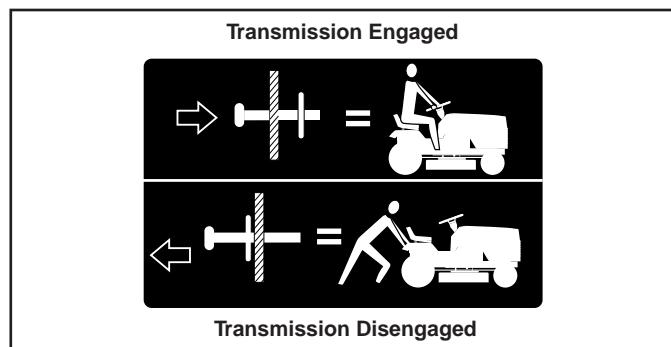


FIG. 21

SERVICE REMINDER/HOUR METER

Service reminder shows the total number of hours the engine has run and flashes to indicate that the engine or mower needs servicing. When service is required, the service reminder will flash for two hours. To service engine and mower, see the Maintenance section of this manual.

NOTE: Service reminder runs when the ignition key is in any position but "STOP". For accurate reading, be sure key remains in the "STOP" position when engine is not running.

TOWING CARTS AND OTHER ATTACHMENTS

Tow only the attachments that are recommended by and comply with specifications of the manufacturer of your tractor. Use common sense when towing. Too heavy of a load, while on a slope, is dangerous. Tires can lose traction with the ground and cause you to lose control of your tractor.

OPERATION

BEFORE STARTING THE ENGINE

CHECK ENGINE OIL LEVEL

The engine in your tractor has been shipped, from the factory, already filled with summer weight oil.

- Check engine oil with tractor on level ground.
- Remove oil fill cap/dipstick and wipe clean, reinsert the dipstick and screw cap tight, wait for a few seconds, remove and read oil level. If necessary, add oil until "FULL" mark on dipstick is reached. Do not overfill.
- For cold weather operation you should change oil for easier starting (See "OIL VISCOSITY CHART" in the Maintenance section of this manual).
- To change engine oil, see the Maintenance section in this manual.

ADD GASOLINE

- Fill fuel tank to bottom of filler neck. Do not overfill. Use fresh, clean, regular unleaded gasoline with a minimum of 87 octane. (Use of leaded gasoline will increase carbon and lead oxide deposits and reduce valve life). Do not mix oil with gasoline. Purchase fuel in quantities that can be used within 30 days to assure fuel freshness.



CAUTION: Wipe off any spilled oil or fuel. Do not store, spill or use gasoline near an open flame.

IMPORTANT: WHEN OPERATING IN TEMPERATURES BELOW 32°F(0°C), USE FRESH, CLEAN WINTER GRADE GASOLINE TO HELP INSURE GOOD COLD WEATHER STARTING.

CAUTION: Alcohol blended fuels (called gasohol or using ethanol or methanol) can attract moisture which leads to separation and formation of acids during storage. Acidic gas can damage the fuel system of an engine while in storage. To avoid engine problems, the fuel system should be emptied before storage of 30 days or longer. Drain the gas tank, start the engine and let it run until the fuel lines and carburetor are empty. Use fresh fuel next season. See Storage Instructions for additional information. Never use engine or carburetor cleaner products in the fuel tank or permanent damage may occur.

TO START ENGINE (See Fig. 13)

When starting the engine for the first time or if the engine has run out of fuel, it will take extra cranking time to move fuel from the tank to the engine.

- Be sure freewheel control is in the transmission engaged position.
- Sit on seat in operating position, depress brake pedal and set parking brake.
- Move attachment clutch to "DISENGAGED" position.
- Move throttle control to fast position
- Pull choke control out for a cold engine start attempt. For a warm engine start attempt the choke control may not be needed.

NOTE: Before starting, read the warm and cold starting procedures below.

- Insert key into ignition and turn key clockwise to "START" position and release key as soon as engine starts. Do not run starter continuously for more than fifteen seconds per minute. If the engine does not start after several attempts, push choke control in, wait a few minutes and try again. If engine still does not start, pull the choke control out and retry.

WARM WEATHER STARTING (50° F and above)

- When engine starts, slowly push choke control in until the engine begins to run smoothly. If the engine starts to run roughly, pull the choke control out slightly for a few seconds and then continue to push the control in slowly.
- The attachments and ground drive can now be used. If the engine does not accept the load, restart the engine and allow it to warm up for one minute using the choke as described above.

COLD WEATHER STARTING (50° F and below)

- When engine starts, slowly push choke control in until the engine begins to run smoothly. Continue to push the choke control in small steps allowing the engine to accept small changes in speed and load, until the choke control is fully in. If the engine starts to run roughly, pull the choke control out slightly for a few seconds and then continue to push the control in slowly. This may require an engine warm-up period from several seconds to several minutes, depending on the temperature.

AUTOMATIC TRANSMISSION WARM UP

- Before driving the unit in cold weather, the transmission should be warmed up as follows:
 - Be sure the tractor is on level ground.
 - Release the parking brake and let the brake slowly return to operating position.
 - Allow one minute for transmission to warm up. This can be done during the engine warm up period.
- The attachments can be used during the engine warm-up period after the transmission has been warmed up and may require the choke control be pulled out slightly.

NOTE: If at a high altitude (above 3000 feet) or in cold temperatures (below 32 F) the carburetor fuel mixture may need to be adjusted for best engine performance. See "TO ADJUST CARBURETOR" in the Service and Adjustments section of this manual.

PURGE TRANSMISSION



CAUTION: Never engage or disengage freewheel lever while the engine is running.

To ensure proper operation and performance, it is recommended that the transmission be purged before operating tractor for the first time. This procedure will remove any trapped air inside the transmission which may have developed during shipping of your tractor.

IMPORTANT: SHOULD YOUR TRANSMISSION REQUIRE REMOVAL FOR SERVICE OR REPLACEMENT, IT SHOULD BE PURGED AFTER REINSTALLATION BEFORE OPERATING THE TRACTOR.

- Place tractor safely on level surface with engine off and parking brake set.

OPERATION

- Disengage transmission by placing freewheel control in freewheeling position (See "TO TRANSPORT" in this section of manual).
- Sitting in the tractor seat, start engine. After the engine is running, move throttle control to slow position. Disengage parking brake
- Depress forward drive pedal to full forward position, hold for five (5) seconds and release pedal. Depress reverse drive pedal to full reverse position, hold for five (5) seconds and release pedal. Repeat this procedure three (3) times.

NOTE: During this procedure there will be no movement of drive wheels. The air is being removed from hydraulic drive system.

- Shut- off engine and set parking brake.
- Engage transmission by placing freewheel control in engaged position (See "TO TRANSPORT" in this section of manual).
- Sitting in the tractor seat, start engine. After the engine is running, move throttle control to half (1/2) speed. Disengage parking brake.
- Drive tractor forward for approximately five feet then backwards for five feet. Repeat this driving procedure three times.

Your transmission is now purged and now ready for normal operation.

MOWING TIPS

- Mower should be properly leveled for best mowing performance. See "TO LEVEL MOWER HOUSING" in the Service and Adjustments section of this manual.
- The left hand side of mower should be used for trimming.
- Drive so that clippings are discharged onto the area that has been cut. Have the cut area to the right of the machine. This will result in a more even distribution of clippings and more uniform cutting.
- When mowing large areas, start by turning to the right so that clippings will discharge away from shrubs, fences, driveways, etc. After one or two rounds, mow in the opposite direction making left hand turns until finished (See Fig. 22).

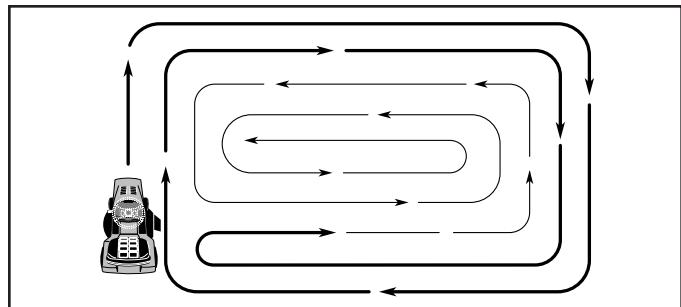


FIG. 22

- If grass is extremely tall, it should be mowed twice to reduce load and possible fire hazard from dried clippings. Make first cut relatively high; the second to the desired height.
- Do not mow grass when it is wet. Wet grass will plug mower and leave undesirable clumps. Allow grass to dry before mowing.
- **Always operate engine at full throttle when mowing** to assure better mowing performance and proper discharge of material. Regulate ground speed by selecting a low enough gear to give the mower cutting performance as well as the quality of cut desired.
- When operating attachments, select a ground speed that will suit the terrain and give best performance of the attachment being used.

MAINTENANCE

MAINTENANCE SCHEDULE		BEFORE EACH USE	EVERY 8 HOURS	EVERY 25 HOURS	EVERY 50 HOURS	EVERY 100 HOURS	EVERY SEASON	BEFORE STORAGE
TRACTOR	Check Brake Operation	✓	✓					
	Check Tire Pressure	✓	✓					
	Check Operator Presence & ROS Systems	✓						
	Check for Loose Fasteners	✓				✓		✓
	Check/Replace Mower Blades			✓ 3				
	Lubrication Chart			✓				✓
	Check Battery Level			✓ 4				
	Clean Battery and Terminals			✓				✓
	Check Transaxle Cooling			✓				
	Check Mower Levelness				✓			
	Check V-Belts					✓		
ENGINE	Check Engine Oil Level	✓	✓					
	Change Engine Oil (with oil filter)				✓ 1,2			✓
	Change Engine Oil (without oil filter)			✓ 1,2				✓
	Clean Air Filter			✓ 2				
	Clean Air Screen			✓ 2				
	Inspect Muffler/Spark Arrester				✓			
	Replace Oil Filter (If equipped)					✓ 1,2		
	Clean Engine Cooling Fins					✓ 2		
	Replace Spark Plug					✓	✓	
	Replace Air Filter Paper Cartridge					✓ 2		
	Replace Fuel Filter						✓	

1 - Change more often when operating under a heavy load or in high ambient temperatures.

2 - Service more often when operating in dirty or dusty conditions.

3 - Replace blades more often when mowing in sandy soil.

4 - Not required if equipped with maintenance-free battery.

GENERAL RECOMMENDATIONS

The warranty on this tractor does not cover items that have been subjected to operator abuse or negligence. To receive full value from the warranty, operator must maintain tractor as instructed in this manual.


Some adjustments will need to be made periodically to properly maintain your tractor.

At least once a season, check to see if you should make any of the adjustments described in the Service and Adjustments section of this manual.

- At least once a year you should replace the spark plug, clean or replace air filter, and check blades and belts for wear. A new spark plug and clean air filter assure proper air-fuel mixture and help your engine run better and last longer.

BEFORE EACH USE

- Check engine oil level.
- Check brake operation.
- Check tire pressure.
- Check operator presence and ROS systems for proper operation.
- Check for loose fasteners.

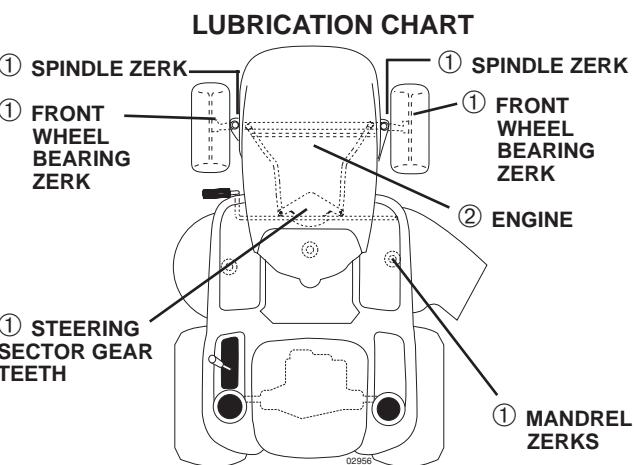

① General Purpose Grease

② Refer to Maintenance "ENGINE" Section

IMPORTANT: DO NOT OIL OR GREASE THE PIVOT POINTS WHICH HAVE SPECIAL NYLON BEARINGS. VISCOUS LUBRICANTS WILL ATTRACT DUST AND DIRT THAT WILL SHORTEN THE LIFE OF THE SELF-LUBRICATING BEARINGS. IF YOU FEEL THEY MUST BE LUBRICATED, USE ONLY A DRY, POWDERED GRAPHITE TYPE LUBRICANT SPARINGLY.

MAINTENANCE

TRACTOR

Always observe safety rules when performing any maintenance.

BRAKE OPERATION

If tractor requires more than five (5) feet to stop at highest speed in highest gear on a level, dry concrete or paved surface, then brake must be serviced. (See "TO CHECK BRAKE" in the Service and Adjustments section of this manual).

TIRES

- Maintain proper air pressure in all tires (See PSI on tires).
- Keep tires free of gasoline, oil, or insect control chemicals which can harm rubber.
- Avoid stumps, stones, deep ruts, sharp objects and other hazards that may cause tire damage.

NOTE: To seal tire punctures and prevent flat tires due to slow leaks, tire sealant may be purchased from your local parts dealer. Tire sealant also prevents tire dry rot and corrosion.


OPERATOR PRESENCE SYSTEM AND REVERSE OPERATION SYSTEM (ROS)

Be sure operator presence and reverse operation systems are working properly. If your tractor does not function as described, repair the problem immediately.

- The engine should not start unless the brake pedal is fully depressed, and the attachment clutch control is in the disengaged position.

CHECK OPERATOR PRESENCE SYSTEM

- When the engine is running, any attempt by the operator to leave the seat without first setting the parking brake should shut off the engine.
- When the engine is running and the attachment clutch is engaged, any attempt by the operator to leave the seat should shut off the engine.
- The attachment clutch should never operate unless the operator is in the seat.

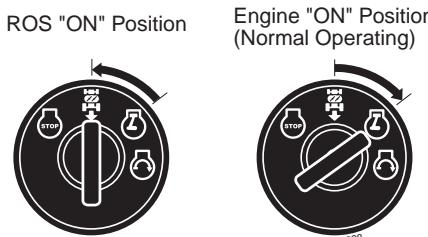

CHECK REVERSE OPERATION (ROS) SYSTEM

- When the engine is running with the ignition switch in the engine "ON" position and the attachment clutch engaged, any attempt by the operator to shift into reverse should shut off the engine.
- When the engine is running with the ignition switch in the ROS "ON" position and the attachment clutch engaged, any attempt by the operator to shift into reverse should NOT shut off the engine.

BLADE CARE

For best results mower blades must be sharp. Replace worn, bent or damaged blades.



CAUTION: Use only a replacement blade approved by the manufacturer of your tractor. Using a blade not approved by the manufacturer of your tractor is hazardous, could damage your tractor and void your warranty.

BLADE REMOVAL (See Fig. 23)

- Raise mower to highest position to allow access to blades.

NOTE: Protect your hands with gloves and/or wrap blade with heavy cloth.

- Remove blade bolt by turning counterclockwise.
- Install new blade with stamped "GRASS SIDE" facing the ground.

IMPORTANT: To ensure proper assembly, center hole in blade must align with star on mandrel assembly.

- Install and tighten blade bolt securely (45-55 Ft. Lbs. torque).

IMPORTANT: Special blade bolt is heat treated.

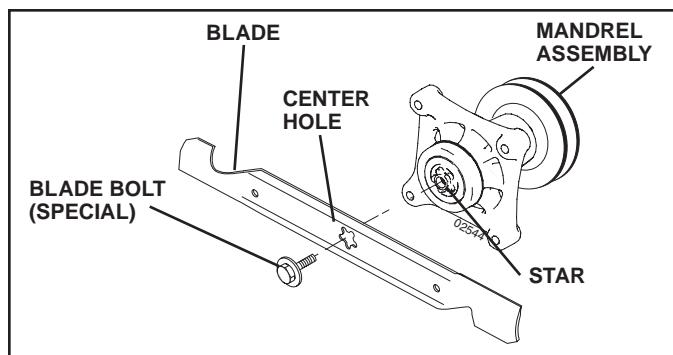


FIG. 23

BATTERY

Your tractor has a battery charging system which is sufficient for normal use. However, periodic charging of the battery with an automotive charger will extend its life.

- Keep battery and terminals clean.
- Keep battery bolts tight.
- Keep small vent holes open.
- Recharge at 6-10 amperes for 1 hour.

NOTE: The original equipment battery on your tractor is maintenance free. Do not attempt to open or remove caps or covers. Adding or checking level of electrolyte is not necessary.

TO CLEAN BATTERY AND TERMINALS

Corrosion and dirt on the battery and terminals can cause the battery to "leak" power.

- Remove terminal guard.
- Disconnect BLACK battery cable first then RED battery cable and remove battery from tractor.

MAINTENANCE

- Rinse the battery with plain water and dry.
- Clean terminals and battery cable ends with wire brush until bright.
- Coat terminals with grease or petroleum jelly.
- Reinstall battery (See "REPLACING BATTERY" in the SERVICE AND ADJUSTMENTS section of this manual).

V-BELTS

Check V-belts for deterioration and wear after 100 hours of operation and replace if necessary. The belts are not adjustable. Replace belts if they begin to slip from wear.

TRANSAXLE COOLING

The transmission fan and cooling fins should be kept clean to assure proper cooling.

Do not attempt to clean fan or transmission while engine is running or while the transmission is hot. To prevent possible damage to seals, do not use high pressure water or steam to clean transaxle.

- Inspect cooling fan to be sure fan blades are intact and clean.
- Inspect cooling fins for dirt, grass clippings and other materials. To prevent damage to seals, do not use compressed air or high pressure sprayer to clean cooling fins.

TRANSAXLE PUMP FLUID

The transaxle was sealed at the factory and fluid maintenance is not required for the life of the transaxle. Should the transaxle ever leak or require servicing, contact your nearest authorized service center/department.

ENGINE

LUBRICATION

Only use high quality detergent oil rated with API service classification SG-SL. Select the oil's SAE viscosity grade according to your expected operating temperature.

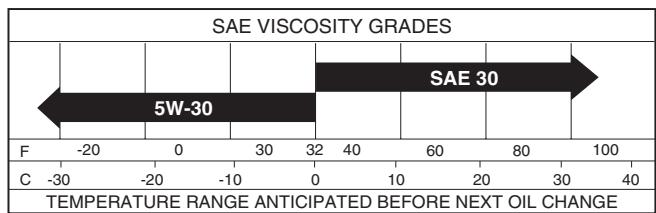


FIG. 24

NOTE: Although multi-viscosity oils (5W30, 10W30 etc.) improve starting in cold weather, they will result in increased oil consumption when used above 32°F. Check your engine oil level more frequently to avoid possible engine damage from running low on oil.

Change the oil after every 50 hours of operation or at least once a year if the tractor is not used for 50 hours in one year.

Check the crankcase oil level before starting the engine and after each eight (8) hours of operation. Tighten oil fill cap/dipstick securely each time you check the oil level.

TO CHANGE ENGINE OIL (See Figs. 24 and 25)

Determine temperature range expected before oil change. All oil must meet API service classification SG-SL.

- Be sure tractor is on level surface.
- Oil will drain more freely when warm.
- Catch oil in a suitable container.
- Remove oil fill cap/dipstick. Be careful not to allow dirt to enter the engine when changing oil.
- Remove yellow cap from end of drain valve and install the drain tube onto the fitting.

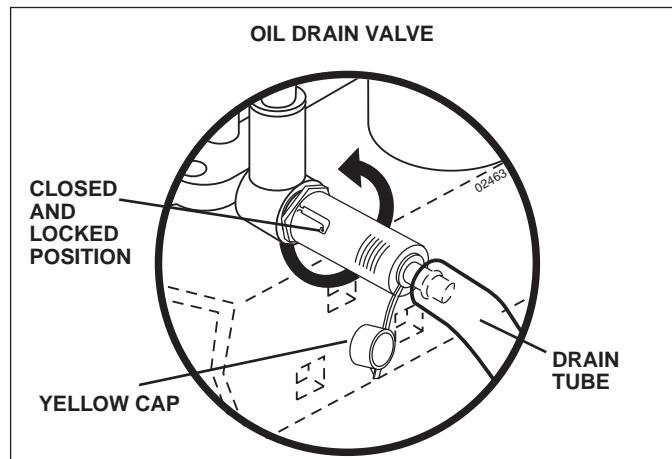


FIG. 25

- Unlock drain valve by pushing inward and turning counterclockwise.
- To open, pull out on the drain valve.
- After oil has drained completely, close and lock the drain valve by pushing inward and turning clockwise until the pin is in the locked position as shown.
- Remove the drain tube and replace the cap onto to the bottom fitting of the drain valve.
- Refill engine with oil through oil fill dipstick tube. Pour slowly. Do not overfill. For approximate capacity see "PRODUCT SPECIFICATIONS" section of this manual.
- Use gauge on oil fill cap/dipstick for checking level. Be sure dipstick cap is tightened securely for accurate reading. Keep oil at "FULL" line on dipstick. Tighten cap onto the tube securely when finished.

CLEAN AIR SCREEN

Air screen must be kept free of dirt and chaff to prevent engine damage from overheating. Clean with a wire brush or compressed air to remove dirt and stubborn dried gum fibers.

AIR FILTER

Your engine will not run properly using a dirty air filter. Service air cleaner more often under dusty conditions. See Engine Manual.

MAINTENANCE

ENGINE OIL FILTER

Replace the engine oil filter every season or every other oil change if the tractor is used more than 100 hours in one year.

MUFFLER

Inspect and replace corroded muffler and spark arrester (if equipped) as it could create a fire hazard and/or damage.

SPARK PLUGS

Replace spark plugs at the beginning of each mowing season or after every 100 hours of operation, whichever occurs first. Spark plug type and gap setting are shown in "PRODUCT SPECIFICATIONS" section of this manual.

IN-LINE FUEL FILTER (See Fig. 26)

The fuel filter should be replaced once each season. If fuel filter becomes clogged, obstructing fuel flow to carburetor, replacement is required.

- With engine cool, remove filter and plug fuel line sections.
- Place new fuel filter in position in fuel line with arrow pointing towards carburetor.
- Be sure there are no fuel line leaks and clamps are properly positioned.
- Immediately wipe up any spilled gasoline.

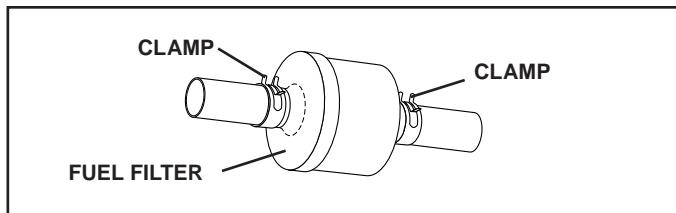


FIG. 26

CLEANING

- Clean engine, battery, seat, finish, etc. of all foreign matter.
- Keep finished surfaces and wheels free of all gasoline, oil, etc.
- Protect painted surfaces with automotive type wax.

We do not recommend using a garden hose or pressure washer to clean your tractor unless the engine and transmission are covered to keep water out. Water in engine or transmission will shorten the useful life of your tractor. Use compressed air or a leaf blower to remove grass, leaves and trash from tractor and mower.

SERVICE AND ADJUSTMENTS



WARNING: TO AVOID SERIOUS INJURY, BEFORE PERFORMING ANY SERVICE OR ADJUSTMENTS:

- Depress brake pedal fully and set parking brake.
- Place attachment clutch in "DISENGAGED" position.
- Turn ignition key to "STOP" and remove key.
- Make sure the blades and all moving parts have completely stopped.
- Disconnect spark plug wire from spark plug and place wire where it cannot come in contact with plug.

TRACTOR (See Fig. 27)

TO REMOVE MOWER

- Place attachment clutch in "DISENGAGED" position.
- Lower attachment lift lever to its lowest position.
- Disengage belt tension rod (K) from lock bracket (L).



CAUTION: Belt tension rod is spring loaded. Have a tight grip on rod and release slowly.

- Remove mower belt from electric clutch pulley (M).
- Disconnect front link (E) from mower - remove retainer spring and washer.
- Go to either side of mower and disconnect mower suspension arm (A) from chassis and rear lift link (C) from rear mower bracket (D) - remove retainer springs and washers.
- Go to other side of mower and disconnect the suspension arm and rear lift link.



CAUTION: After rear lift links are disconnected, the attachment lift lever will be spring loaded. Have a tight grip on lift lever when changing position of the lever.

- From right side of mower, disconnect anti-sway bar (S) from right rear mower bracket (D) - remove retainer spring and washer and pull mower toward you until the bar falls from the hole in bracket.
- Turn tractor steering wheel to the left as far as it will go.
- Slide mower out from under right side of tractor.

TO INSTALL MOWER

Follow procedure described in "INSTALL MOWER AND DRIVE BELT" in the Assembly section of this manual.

TO LEVEL MOWER

Make sure tires are properly inflated to the PSI shown on tires. If tires are over or under inflated, it may affect the appearance of your lawn and lead you to think the mower is not adjusted properly.

VISUAL SIDE-TO-SIDE ADJUSTMENT (See Fig. 28)

- With all tires properly inflated and if your lawn appears unevenly cut, determine which side of mower is cutting lower.

NOTE: As desired, you can raise the low side of mower or lower the high side.

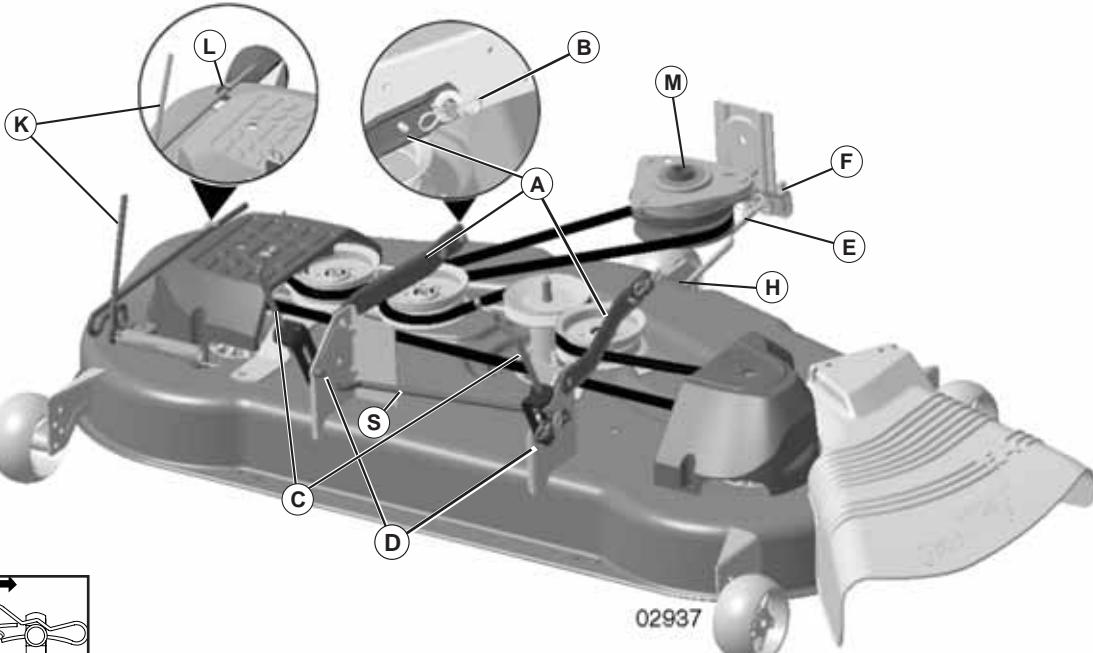


FIG. 27

SERVICE AND ADJUSTMENTS

- Go to side of mower you wish to adjust.
- With a 3/4" or adjustable wrench, turn lift link adjustment nut (A) to the left to lower the mower, or, to the right to raise the mower.

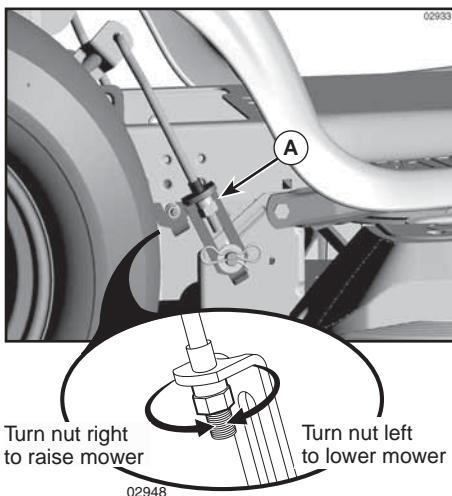


FIG. 28

NOTE: Each full turn of adjustment nut will change mower height about 3/16".

- Test your adjustment by mowing some uncut grass and visually checking the appearance. Readjust, if necessary, until you are satisfied with the results.

PRECISION SIDE-TO-SIDE ADJUSTMENT

(See Fig. 29)

- With all tires properly inflated, park tractor on level ground or driveway.



CAUTION: Blades are sharp. Protect your hands with gloves and/or wrap blade with heavy cloth.

- Raise mower to its highest position.
- At both sides of mower, position blade at side and measure the distance (A) from bottom edge of blade to the ground. The distance should be the same on both sides.
- If adjustment is necessary, see steps 2 and 3 in Visual Adjustment instructions above.
- Recheck measurements, adjust if necessary until both sides are equal.

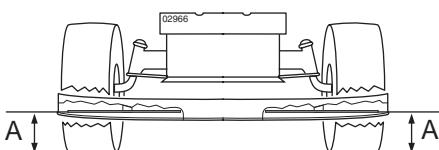


FIG. 29

FRONT-TO-BACK ADJUSTMENT (See Figs. 30 and 31)

IMPORTANT: Deck must be level side-to-side.

To obtain the best cutting results, the mower blades should be adjusted so the front tip is 1/8" to 1/2" lower than the rear tip when the mower is in its highest position.



CAUTION: Blades are sharp. Protect your hands with gloves and/or wrap blade with heavy cloth.

- Raise mower to highest position.
- Position any blade so the tip is pointing straight forward. Measure distance (B) to the ground at front and rear tip of the blade.
- If front tip of blade is not 1/8" to 1/2" lower than the rear tip, go to the front of tractor.
- With an 11/16" or adjustable wrench, loosen jam nut A several turns to clear adjustment nut B.
- With a 3/4" or adjustable wrench, turn front link adjustment nut (B) clockwise (tighten) to raise the front of mower, or, counterclockwise (loosen) to lower the front mower.

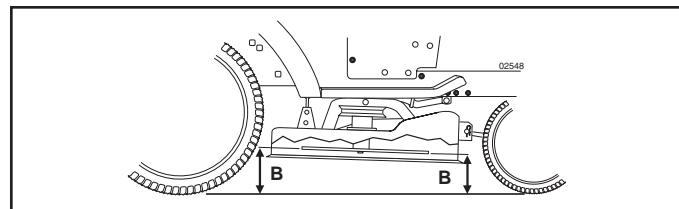


FIG. 30

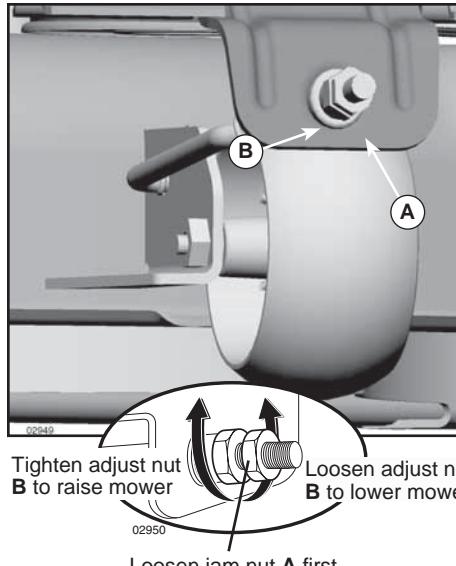


FIG. 31

NOTE: Each full turn of the adjustment nut will change mower height about 1/8".

- Recheck measurements, adjust if necessary until front tip of blade is 1/8" to 1/2" lower than the rear tip.
- Hold adjustment nut in position with wrench and tighten jam nut securely against adjustment nut.

SERVICE AND ADJUSTMENTS

TO REPLACE MOWER BLADE DRIVE BELT

MOWER DRIVE BELT REMOVAL (See Fig. 32)

- Park tractor on a level surface. Engage parking brake.
- Lower attachment lift lever to its lowest position.
- Disengage belt tension rod (K) from lock bracket (L).



CAUTION: Belt tension rod is spring loaded. Have a firm grip on rod and release slowly.

- Remove screws (P) from mandrel covers (Q) and remove covers.
- Remove any dirt or grass clippings which may have accumulated around mandrels and entire upper deck surface.
- Remove belt from electric clutch pulley (M), both mandrel pulleys (R) and all idler pulleys (S).

MOWER DRIVE BELT INSTALLATION

- Install belt around all mandrel pulleys (R) and around idler pulleys (S) as shown.
- Install belt onto electric clutch pulley (M).

IMPORTANT: Check belt for proper routing in all mower pulley grooves.

- Reassemble mandrel covers (Q). Securely tighten all screws.
- Engage belt tension rod (K) on locking bracket (L).



CAUTION: Belt tension rod is spring loaded. Have a tight grip on rod and engage slowly.

- Raise attachment lift lever to highest position.

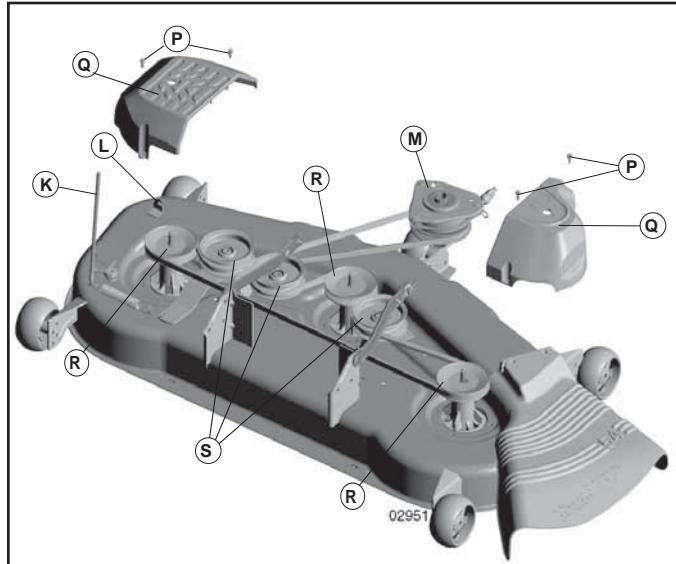


FIG. 32

TO CHECK BRAKE

If tractor requires more than five (5) feet to stop at highest speed in highest gear on a level, dry concrete or paved surface, then brake must be serviced.

You may also check brake by:

- Park tractor on a level, dry concrete or paved surface, depress brake pedal all the way down and engage parking brake.
- Disengage transmission by placing freewheel control in "transmission disengaged" position. Pull freewheel control out and into the slot and release so it is held in the disengaged position.

The rear wheels must lock and skid when you try to manually push the tractor forward. If the rear wheels rotate, then the brake needs to be serviced. Contact a qualified service center.

TO REPLACE MOTION DRIVE BELT

(See Fig. 33)

Park the tractor on level surface. Engage parking brake. For assistance, there is a belt installation guide decal on bottom side of left footrest.

BELT REMOVAL -

- Remove mower (See "TO REMOVE MOWER" in this section of manual).

NOTE: Observe entire motion drive belt and position of all belt guides and keepers.

- Disconnect clutch wire harness (A).
- Remove anti-rotation link (B) on right side of tractor.
- Remove belt from stationary idler (C) and clutching idler (D).
- Remove belt from centerspan idler (E).
- Pull belt slack toward rear of tractor. Carefully remove belt upwards from transmission input pulley and over cooling fan blades (F).
- Remove belt downward from engine pulley and around electric clutch (G).
- Slide belt toward rear of tractor, off the steering plate (H) and remove from tractor.

BELT INSTALLATION -

- Install new belt from tractor rear to front, over the steering plate (H) and above clutch brake pedal shaft (J).
- Pull belt toward front of tractor and roll belt around electric clutch and onto engine pulley (G).
- Pull belt toward rear of tractor. Carefully work belt down around transmission cooling fan and onto the input pulley (F). Be sure belt is inside the belt keeper.
- Install belt on centerspan idler (E).
- Install belt through stationary idler (C) and clutching idler (D).
- Reinstall anti-rotation link (B) on right side of tractor. Tighten securely.
- Reconnect clutch harness (A).
- Make sure belt is in all pulley grooves and inside all belt guides and keepers.
- Install mower (See "TO INSTALL MOWER" in this section of manual).

SERVICE AND ADJUSTMENTS

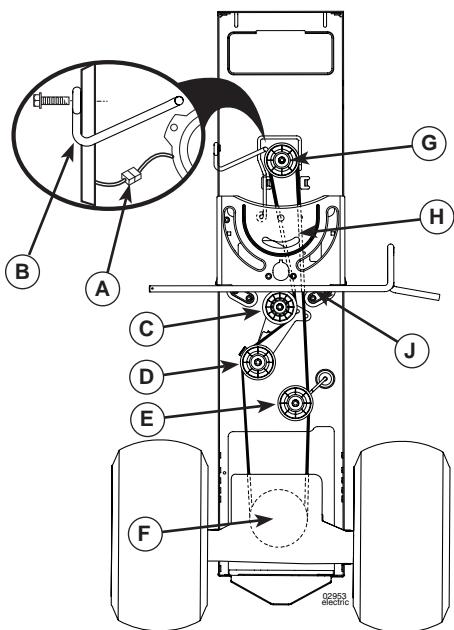


FIG. 33

FRONT WHEEL TOE-IN/CAMBER

Your new tractor front wheel toe-in and camber is set at the factory and is normal. The front wheel toe-in and camber are not adjustable. If damage has occurred to affect the factory set front wheel toe-in or camber, contact a qualified service center.

TO REMOVE WHEEL FOR REPAIRS (See Fig. 34)

- Block up axle securely.
- Remove axle cover, retaining ring and washers to allow wheel removal (rear wheel contains a square key - Do not lose).
- Repair tire and reassemble.
- On rear wheels only: align grooves in rear wheel hub and axle. Insert square key.
- Replace washers and snap retaining ring securely in axle groove.
- Replace axle cover.

NOTE: To seal tire punctures and prevent flat tires due to slow leaks, tire sealant may be purchased from your local parts dealer. Tire sealant also prevents tire dry rot and corrosion.

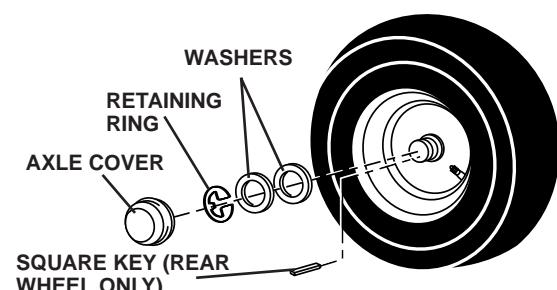


FIG. 34

TO START ENGINE WITH A WEAK BATTERY (See Fig. 35)



WARNING: Lead-acid batteries generate explosive gases. Keep sparks, flame and smoking materials away from batteries. Always wear eye protection when around batteries.

If your battery is too weak to start the engine, it should be recharged. (See "BATTERY" in the MAINTENANCE section of this manual).

If "jumper cables" are used for emergency starting, follow this procedure:

IMPORTANT: YOUR TRACTOR IS EQUIPPED WITH A 12 VOLT SYSTEM. THE OTHER VEHICLE MUST ALSO BE A 12 VOLT SYSTEM. DO NOT USE YOUR TRACTOR BATTERY TO START OTHER VEHICLES.

TO ATTACH JUMPER CABLES -

- Connect one end of the RED cable to the POSITIVE (+) terminal of each battery (A-B), taking care not to short against tractor chassis.
- Connect one end of the BLACK cable to the NEGATIVE (-) terminal (C) of fully charged battery.
- Connect the other end of the BLACK cable (D) to good chassis ground, away from fuel tank and battery.

TO REMOVE CABLES, REVERSE ORDER -

- BLACK cable first from chassis and then from the fully charged battery.
- RED cable last from both batteries.

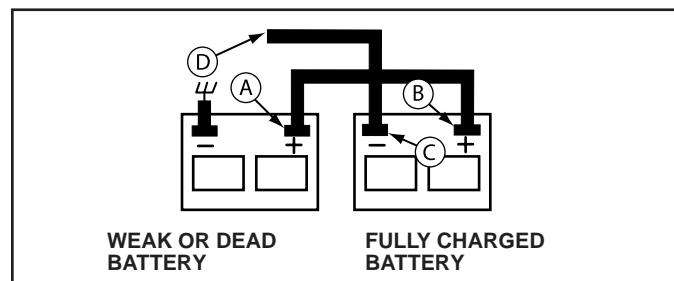


FIG. 35

SERVICE AND ADJUSTMENTS

REPLACING BATTERY (See Fig. 36)

WARNING: Do not short battery terminals by allowing a wrench or any other object to contact both terminals at the same time. Before connecting battery, remove metal bracelets, wristwatch bands, rings, etc.

Positive terminal must be connected first to prevent sparking from accidental grounding.

- Lift hood to raised position.
- Disconnect BLACK battery cable (A) then RED battery cable and carefully remove battery from tractor.
- Install new battery with terminals in same position as old battery.
- First connect RED battery cable (B) to positive (+) battery terminal with hex bolt and keps nut as shown. Tighten securely. Slide terminal cover (C) over terminal.
- Connect BLACK grounding cable to negative (-) battery terminal with remaining hex bolt and keps nut. Tighten securely.
- Close hood.

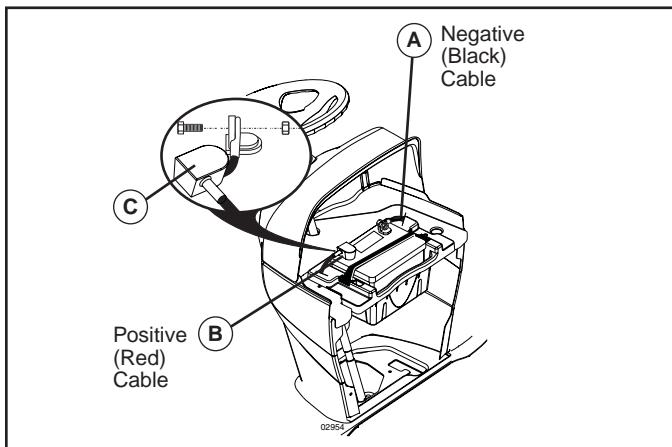


FIG. 36

TO REPLACE HEADLIGHT BULB

- Raise hood.
- Pull bulb holder out of the hole in the backside of the grill.
- Replace bulb in holder and push bulb holder securely back into the hole in the backside of the grill.
- Close hood.

INTERLOCKS AND RELAYS

Loose or damaged wiring may cause your tractor to run poorly, stop running, or prevent it from starting.

- Check wiring. See electrical wiring diagram in the Repair Parts section.

TO REPLACE FUSE

Replace with 20 amp automotive-type plug-in fuse. The fuse holder is located behind the dash.

TO REMOVE HOOD AND GRILL ASSEMBLY (See Fig. 37)

- Raise hood.
- Unsnap headlight wire connector.
- Stand in front of tractor. Grasp hood at sides, tilt toward engine and lift off of tractor.
- To replace, reverse above procedure.

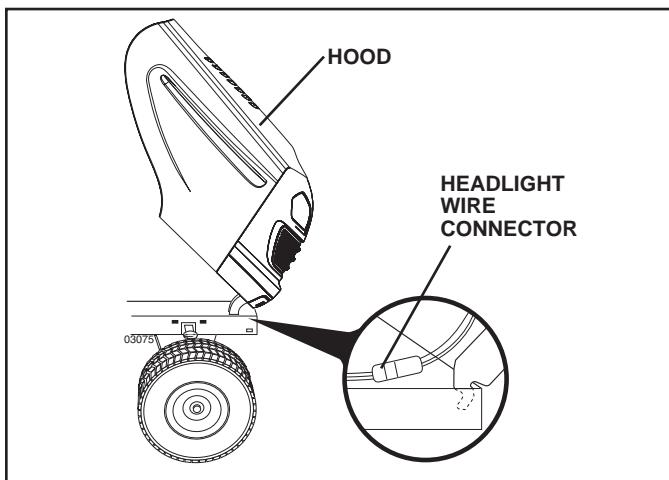


FIG. 37

ENGINE

TO ADJUST THROTTLE CONTROL CABLE

The throttle control has been preset at the factory and adjustment should not be necessary. If adjustment is necessary, see engine manual.

TO ADJUST CHOKE CONTROL

The choke control has been preset at the factory and adjustment should not be necessary. If adjustment is necessary, see engine manual.

TO ADJUST CARBURETOR

Your carburetor is not adjustable. If your engine does not operate properly due to suspected carburetor problems, take your tractor to an authorized service center for repair and/or adjustment.

STORAGE

Immediately prepare your tractor for storage at the end of the season or if the tractor will not be used for 30 days or more.



WARNING: Never store the tractor with gasoline in the tank inside a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure.

TRACTOR

Remove mower from tractor for winter storage. When mower is to be stored for a period of time, clean it thoroughly, remove all dirt, grease, leaves, etc. Store in a clean, dry area.

- Clean entire tractor (See "CLEANING" in the Maintenance section of this manual).
- Inspect and replace belts, if necessary (See belt replacement instructions in the Service and Adjustments section of this manual).
- Lubricate as shown in the Maintenance section of this manual.
- Be sure that all nuts, bolts and screws are securely fastened. Inspect moving parts for damage, breakage and wear. Replace if necessary.
- Touch up all rusted or chipped paint surfaces; sand lightly before painting.

BATTERY

- Fully charge the battery for storage.
- After a period of time in storage, battery may require recharging.
- To help prevent corrosion and power leakage during long periods of storage, battery cables should be disconnected and battery cleaned thoroughly (see "TO CLEAN BATTERY AND TERMINALS" in the Maintenance section of this manual).
- After cleaning, leave cables disconnected and place cables where they cannot come in contact with battery terminals.
- If battery is removed from tractor for storage, do not store battery directly on concrete or damp surfaces.

ENGINE

FUEL SYSTEM

IMPORTANT: IT IS IMPORTANT TO PREVENT GUM DEPOSITS FROM FORMING IN ESSENTIAL FUEL SYSTEM PARTS SUCH AS CARBURETOR, FUEL FILTER, FUEL HOSE, OR TANK DURING STORAGE. ALSO, EXPERIENCE INDICATES THAT ALCOHOL BLENDED FUELS (CALLED GASOHOL OR USING ETHANOL OR METHANOL) CAN ATTRACT MOISTURE WHICH LEADS TO SEPARATION AND FORMATION OF ACIDS DURING STORAGE. ACIDIC GAS CAN DAMAGE THE FUEL SYSTEM OF AN ENGINE WHILE IN STORAGE.

- Empty the fuel tank by starting the engine and let it run until the fuel lines and carburetor are empty.
- Never use engine or carburetor cleaner products in the fuel tank or permanent damage may occur.
- Use fresh fuel next season.

NOTE: Fuel stabilizer is an acceptable alternative in minimizing the formation of fuel gum deposits during storage. Add stabilizer to gasoline in fuel tank or storage container. Always follow the mix ratio found on stabilizer container. Run engine at least 10 minutes after adding stabilizer to allow the stabilizer to reach the carburetor. Do not empty the gas tank and carburetor if using fuel stabilizer.

ENGINE OIL

Drain oil (with engine warm) and replace with clean engine oil. (See "ENGINE" in the Maintenance section of this manual).

CYLINDER(S)

- Remove spark plug(s).
- Pour one ounce of oil through spark plug hole(s) into cylinder(s).
- Turn ignition key to "START" position for a few seconds to distribute oil.
- Replace with new spark plug(s).

OTHER

- Do not store gasoline from one season to another.
- Replace your gasoline can if your can starts to rust. Rust and/or dirt in your gasoline will cause problems.
- If possible, store your tractor indoors and cover it to give protection from dust and dirt.
- Cover your tractor with a suitable protective cover that does not retain moisture. Do not use plastic. Plastic cannot breathe which allows condensation to form and will cause your tractor to rust.

IMPORTANT: NEVER COVER TRACTOR WHILE ENGINE AND EXHAUST AREAS ARE STILL WARM.

TROUBLESHOOTING POINTS

PROBLEM	CAUSE	CORRECTION
Will not start	<ol style="list-style-type: none"> 1. Out of fuel. 2. Engine not "CHOKED" properly. 3. Engine flooded. 4. Bad spark plug. 5. Weak or dead battery. 6. Dirty air filter. 7. Dirty fuel filter. 8. Water in fuel. 9. Loose or damaged wiring. 10. Carburetor out of adjustment. 11. Engine valves out of adjustment. 	<ol style="list-style-type: none"> 1. Fill fuel tank. 2. See "TO START ENGINE" in Operation section. 3. Wait several minutes before attempting to start. 4. Replace spark plug. 5. Recharge or replace battery. 6. Clean/replace air filter. 7. Replace fuel filter. 8. Empty fuel tank and carburetor, refill tank with fresh gasoline and replace fuel filter. 9. Check all wiring. 10. See "To Adjust Carburetor" in Service Adjustments section. 11. Contact an authorized service center/department.
Hard to start	<ol style="list-style-type: none"> 1. Dirty air filter. 2. Bad spark plug. 3. Weak or dead battery. 4. Dirty fuel filter. 5. Stale or dirty fuel. 6. Loose or damaged wiring. 7. Carburetor out of adjustment. 8. Engine valves out of adjustment. 	<ol style="list-style-type: none"> 1. Clean/replace air filter. 2. Replace spark plug. 3. Recharge or replace battery. 4. Replace fuel filter. 5. Empty fuel tank and refill tank with fresh, clean gasoline. 6. Check all wiring. 7. See "To Adjust Carburetor" in Service Adjustments section. 8. Contact an authorized service center/department.
Engine will not turn over	<ol style="list-style-type: none"> 1. Brake pedal not depressed. 2. Attachment clutch is engaged. 3. Weak or dead battery. 4. Blown fuse. 5. Corroded battery terminals. 6. Loose or damaged wiring. 7. Faulty ignition switch. 8. Faulty solenoid or starter. 9. Faulty operator presence switch(es). 	<ol style="list-style-type: none"> 1. Depress brake pedal. 2. Disengage attachment clutch. 3. Recharge or replace battery. 4. Replace fuse. 5. Clean battery terminals. 6. Check all wiring. 7. Check/replace ignition switch. 8. Check/replace solenoid or starter. 9. Contact an authorized service center/department.
Engine clicks but will not start	<ol style="list-style-type: none"> 1. Weak or dead battery. 2. Corroded battery terminals. 3. Loose or damaged wiring. 4. Faulty solenoid or starter. 	<ol style="list-style-type: none"> 1. Recharge or replace battery. 2. Clean battery terminals. 3. Check all wiring. 4. Check/replace solenoid or starter.
Loss of power	<ol style="list-style-type: none"> 1. Cutting too much grass/too fast. 2. Throttle in "CHOKE" position. 3. Build-up of grass, leaves and trash under mower. 4. Dirty air filter. 5. Low oil level/dirty oil. 6. Faulty spark plug. 7. Dirty fuel filter. 8. Stale or dirty fuel. 9. Water in fuel. 10. Spark plug wire loose. 11. Dirty engine air screen/fins. 12. Dirty/clogged muffler. 13. Loose or damaged wiring. 14. Carburetor out of adjustment. 15. Engine valves out of adjustment. 	<ol style="list-style-type: none"> 1. Raise cutting height/reduce speed. 2. Adjust throttle control. 3. Clean underside of mower housing. 4. Clean/replace air filter. 5. Check oil level/change oil. 6. Clean and regap or change spark plug. 7. Replace fuel filter. 8. Empty fuel tank and refill tank with fresh, clean gasoline. 9. Empty fuel tank and carburetor, refill tank with fresh gasoline and replace fuel filter. 10. Connect and tighten spark plug wire. 11. Clean engine air screen/fins. 12. Clean/replace muffler. 13. Check all wiring. 14. See "To Adjust Carburetor" in Service Adjustments section. 15. Contact an authorized service center/department.
Excessive vibration	<ol style="list-style-type: none"> 1. Worn, bent or loose blade. 2. Bent blade mandrel. 3. Loose/damaged part(s). 	<ol style="list-style-type: none"> 1. Replace blade. Tighten blade bolt. 2. Replace blade mandrel. 3. Tighten loose part(s). Replace damaged parts.

TROUBLESHOOTING POINTS

PROBLEM	CAUSE	CORRECTION
Engine dies when tractor is shifted into reverse	1. Reverse operation system (ROS) is not "ON" while mower or other attachment is engaged.	1. Turn ignition key to ROS "ON" position. See Operation section.
Engine continues to run when operator leaves seat with attachment clutch engaged	1. Faulty operator-safety presence control system.	1. Check wiring, switches and connections. If not corrected, contact an authorized service center/department.
Poor cut - uneven	1. Worn, bent or loose blade. 2. Mower deck not level. 3. Buildup of grass, leaves, and trash under mower. 4. Bent blade mandrel. 5. Clogged mower deck vent holes from buildup of grass, leaves, and trash around mandrels.	1. Replace blade. Tighten blade bolt. 2. Level mower deck. 3. Clean underside of mower housing. 4. Replace blade mandrel. 5. Clean around mandrels to open vent holes.
Mower blades will not rotate	1. Obstruction in clutch mechanism. 2. Worn/damaged mower drive belt. 3. Frozen idler pulley. 4. Frozen blade mandrel.	1. Remove obstruction. 2. Replace mower drive belt. 3. Replace idler pulley. 4. Replace blade mandrel.
Poor grass discharge	1. Engine speed too slow. 2. Travel speed too fast. 3. Wet grass. 4. Mower deck not level. 5. Low/uneven tire air pressure. 6. Worn, bent or loose blade. 7. Buildup of grass, leaves and trash under mower. 8. Mower drive belt worn. 9. Blades improperly installed. 10. Improper blades used. 11. Clogged mower deck vent holes from buildup of grass, leaves, and trash around mandrels.	1. Place throttle control in "FAST" position. 2. Shift to slower speed. 3. Allow grass to dry before mowing. 4. Level mower deck. 5. Check tires for proper air pressure. 6. Replace blade. Tighten blade bolt. 7. Clean underside of mower housing. 8. Replace mower drive belt. 9. Reinstall blades sharp edge down. 10. Replace with blades listed in this manual. 11. Clean around mandrels to open vent holes.
Headlight(s) not working (if so equipped)	1. Light switch is "OFF". 2. Bulb(s) or lamp(s) burned out. 3. Faulty light switch. 4. Loose or damaged wiring. 5. Blown fuse.	1. Turn light switch "ON". 2. Replace bulb(s) or lamp(s). 3. Check/replace light switch. 4. Check wiring and connections. 5. Replace fuse.
Battery will not charge	1. Bad battery cell(s). 2. Poor cable connections. 3. Faulty regulator (if so equipped). 4. Faulty alternator.	1. Replace battery. 2. Check/clean all connections. 3. Replace regulator. 4. Replace alternator.
Loss of drive	1. Freewheel control in "disengaged" position. 2. Motion drive belt worn, damaged, or broken. 3. Air trapped in transmission during shipment or servicing.	1. Place freewheel control in "engaged" position. 2. Replace motion drive belt. 3. Purge transmission.
Engine "backfires" when turning engine "OFF"	1. Engine throttle control not set between half and full speed (fast) position before stopping engine.	1. Move throttle control between half and full speed (fast) position before stopping engine.

LIMITED WARRANTY

The Manufacturer warrants to the original consumer purchaser that this product as manufactured is free from defects in materials and workmanship. For a period of two (2) years from date of purchase by the original consumer purchaser, we will repair or replace, at our option, without charge for parts or labor incurred in replacing parts, any part which we find to be defective due to materials or workmanship. This Warranty is subject to the following limitations and exclusions.

1. This warranty does not apply to the engine, transaxle/transmission components, battery (except as noted below) or components parts thereof. Please refer to the applicable manufacturer's warranty on these items.
2. Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by the manufacturer.
3. Battery Warranty: On products equipped with a Battery, we will replace, without charge to you, any battery which we find to be defective in manufacture, during the first ninety (90) days of ownership. After ninety (90) days, we will exchange the Battery, charging you 1/12 of the price of a new Battery for each full month from the date of the original sale. Battery must be maintained in accordance with the instructions furnished.
4. The Warranty period for any products used for rental or commercial purposes is limited to 90 days from the date of original purchase.
5. This Warranty applies only to products which have been properly assembled, adjusted, operated, and maintained in accordance with the instructions furnished. This Warranty does not apply to any product which has been subjected to alteration, misuse, abuse, improper assembly or installation, delivery damage, or to normal wear of the product.
6. Exclusions: Excluded from this Warranty are belts, blades, blade adapters, normal wear, normal adjustments, standard hardware and normal maintenance.
7. In the event you have a claim under this Warranty, you must return the product to an authorized service dealer.

Should you have any unanswered questions concerning this Warranty, please contact:

Poulan Pro
Outdoor Products Customer Service Dept.
1030 Stevens Creek Road
Augusta, GA 30907 USA


In Canada contact:
Poulan Pro
7075 Ordan Drive
Mississauga, Ontario
L5T 1K6

giving the model number, serial number and date of purchase of your product and the name and address of the authorized dealer from whom it was purchased.

THIS WARRANTY DOES NOT APPLY TO INCIDENTAL OR CONSEQUENTIAL DAMAGES AND ANY IMPLIED WARRANTIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN FOR OUR EXPRESSED WARRANTIES. Some areas do not allow the limitation of consequential damages or limitations of how long an implied Warranty may last, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may have other rights which vary from locale to locale.

This is a limited Warranty within the meaning of that term as defined in the Magnuson-Moss Act of 1975.

SUGGESTED GUIDE FOR SIGHTING SLOPES FOR SAFE OPERATION

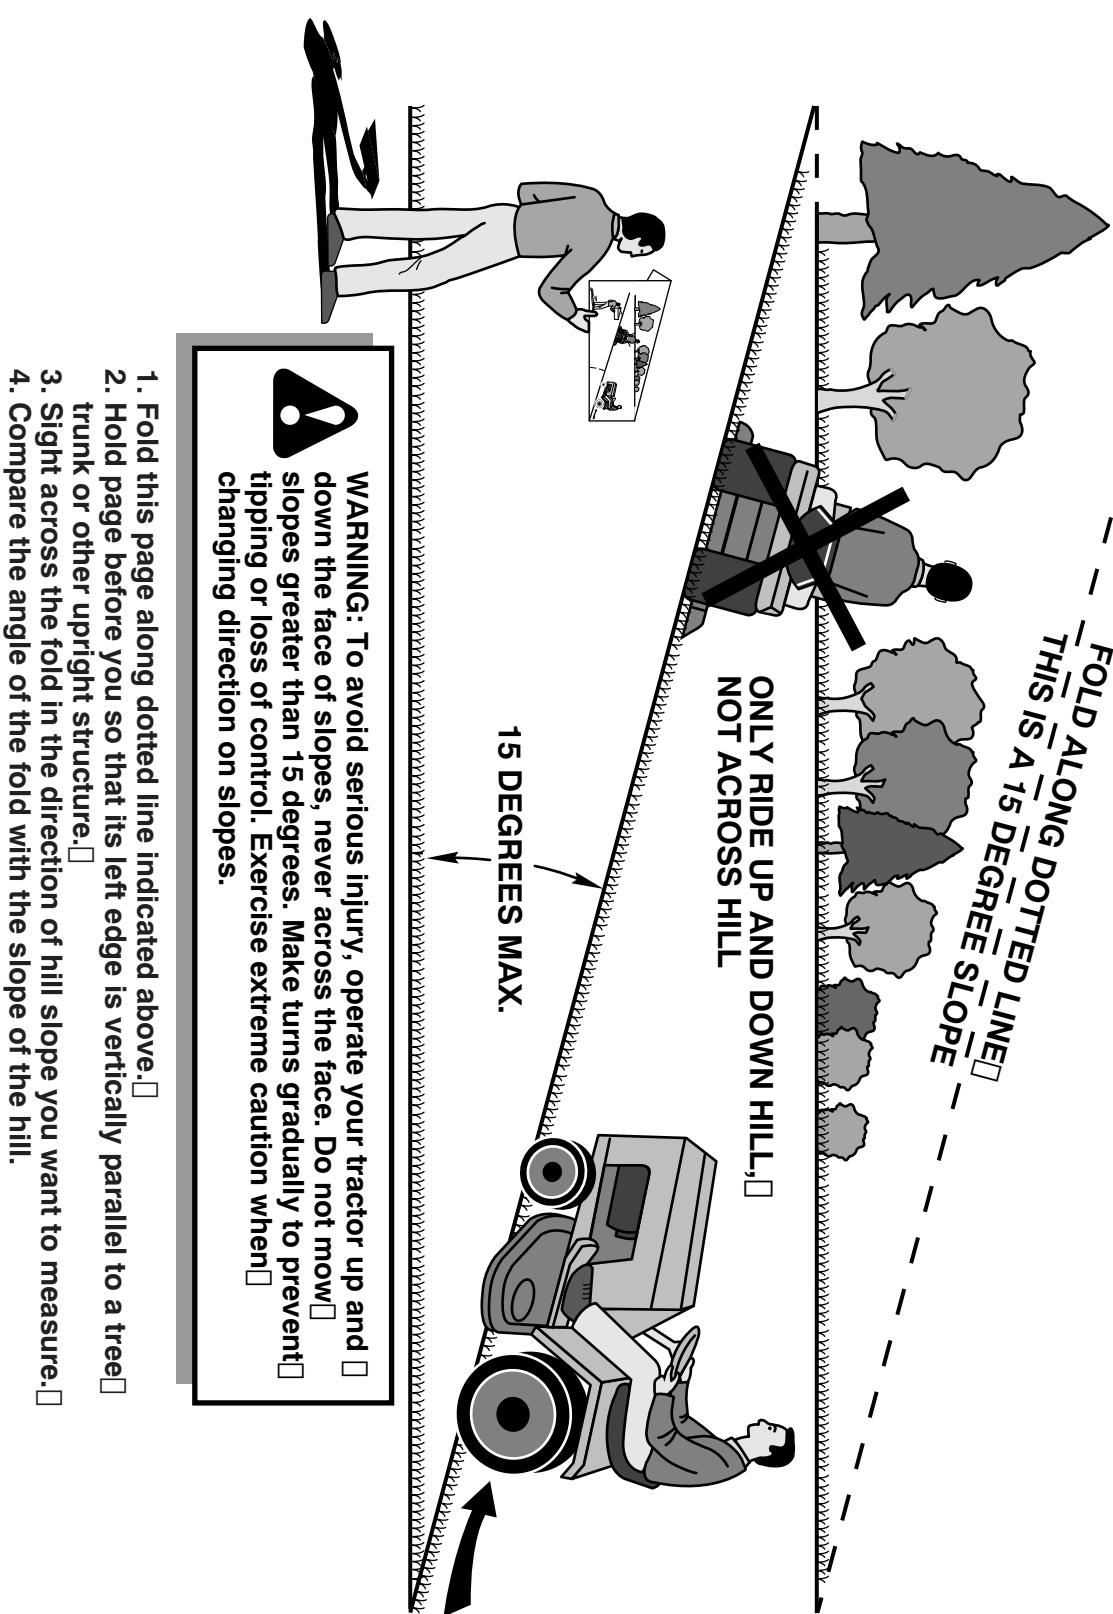

1. Fold this page along dotted line indicated above.□
2. Hold page before you so that its left edge is vertically parallel to a tree□ trunk or other upright structure.□
3. Sight across the fold in the direction of hill slope you want to measure.□
4. Compare the angle of the fold with the slope of the hill.□

SERVICE NOTES

SERVICE NOTES

Poulan PRO

PARTS AND SERVICE

This product has been expertly engineered and carefully manufactured to rigid quality standards. As with all mechanical products, some adjustments or part replacement may be necessary during the life of your unit.

For Parts and service, contact our authorized distributor: call 1-800-849-1297

- For replacement parts, have available the following information:
 - a. Model Number/Manufacturer's I.D. Number
 - b. Description of part.

For Technical Assistance: call 1-800-829-5886

For a Parts Manual, go to our website: www.poulan-pro.com/support.asp

NOTE: HOP provides parts and service through its authorized distributors and dealers; therefore, all requests for parts and service should be directed to your local dealer(s). The philosophy of HOP is to continually improve all of its products. If the operating characteristics or the appearance of your product differs from those described in this Manual, please contact your local dealer for updated information and assistance.

Ce produit, conçu avec les soins les plus attentifs, est fabriqué en accord avec des standards stricts. Comme pour tous les produits avec des parties mobiles, il peut être nécessaire pendant la durabilité de votre machine d'effectuer des ajustements ou le remplacement de certaines pièces.

Pour les pièces de rechange et l'entretien, contactez notre concessionnaire autorisé :appelez 1-800-849-1297

Pour l'assistance technique :appelez 1-800-829-5886


A. Numéro du modèle/Référence numéro du fabricant
B. Description de la pièce

• Pour les pièces de rechange, ayez près de vous :

N.B.: HOP assure la distribution des pièces de rechange et l'entretien de ses produits par l'intermédiaire des concessionsnaires et des distributeurs agréés; par conséquent toute demande de pièces ou d'entretien doit être adressée directement au distributeur agréé le plus proche. La philosophie de HOP est d'améliorer en permanence la gamme complète de ses produits. Si les caractéristiques ou l'apparence de votre outil sont différentes de celles décrites dans ce Manuel, contactez S.V.P. votre concessionnaire pour les informations et l'assistance concernant les mises à jour.

GUIDE SUGGÈRE POUR L'ÉVALUATION DES PENTES AFIN D'AMÉLIORER LA SÉCURITÉ D'UTILISATION

3

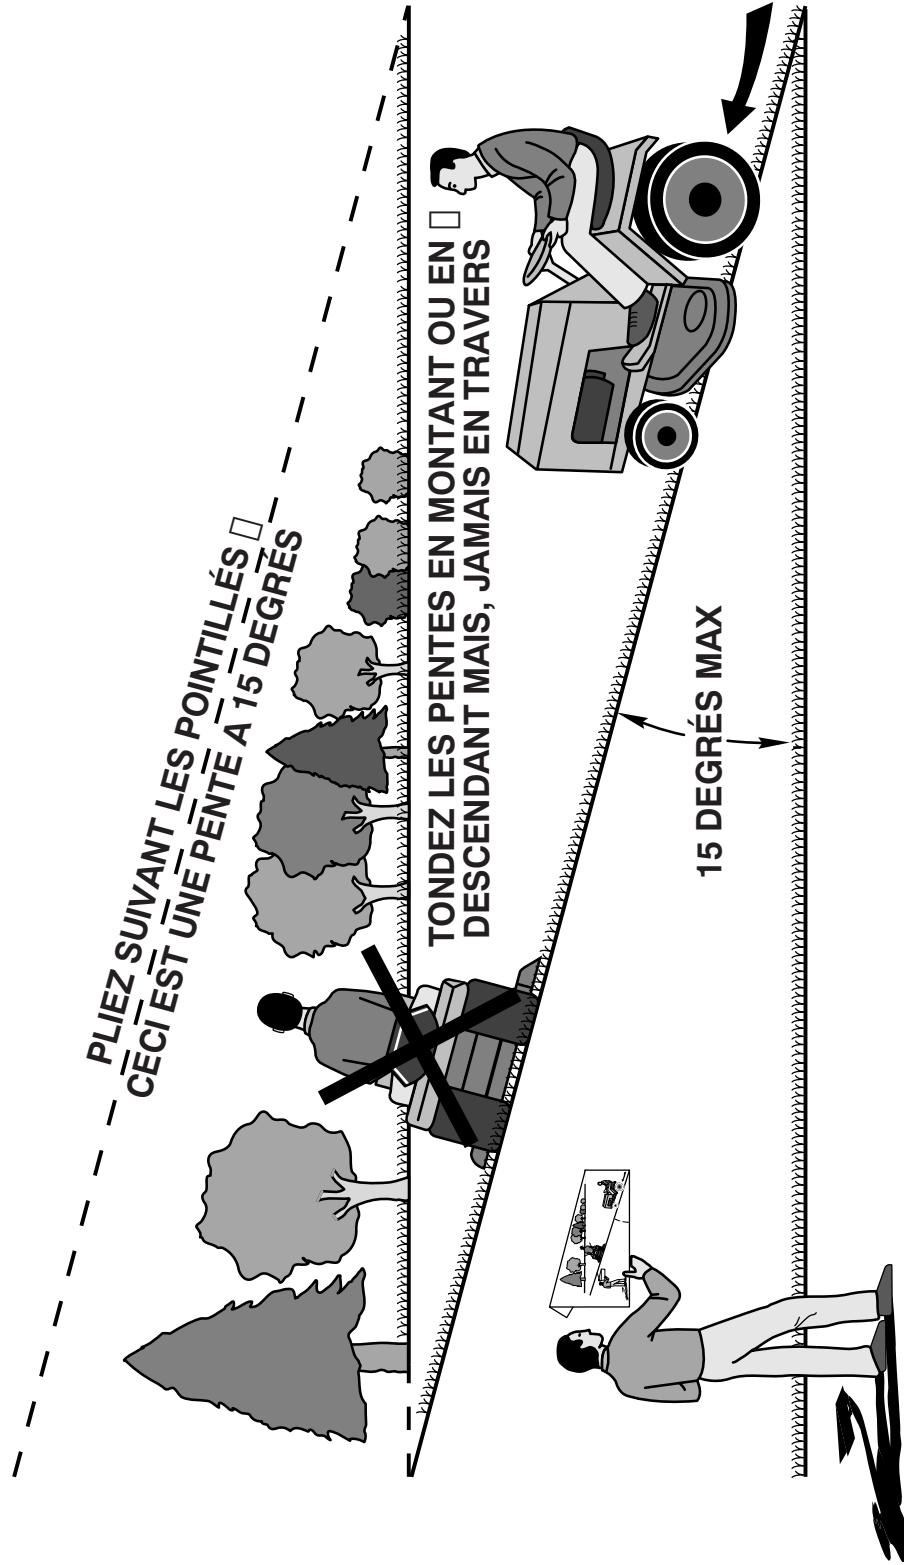

AVERTISSEMENT: Pour éviter de vous blesser gravement, utilisez votre tracteur parallèlement à la pente, jamais transversalement. N'affrontez pas de pentes de plus de 15 degrés. Effectuez les virages graduellement afin d'éviter le renversement ou la perte de contrôle. Soyez extrêmement prudent quand vous changez de directions sur les pentes.

1. Pliez cette page suivant les pointillées, comme précédemment.
2. Tenez cette page devant vous, avec le côté gauche parallèle à un tronc d'arbre ou à tout autre structure verticale.
3. Regardez à travers la pliure dans la direction de la pente que vous entendez mesurer.
4. Comparez l'angle de la pliure avec la pente de la colline.

GARANTIE LIMITÉE

1. Cette garantie ne couvre pas le moteur, la transmission/composants, la batterie (sauf comme mentionnée ci-dessous) ou les pièces détachées. Veuillez-vous consulter la garantie applicable du fabricant des articles.
 2. L'acheteur est responsable des frais du transport de tous les équipements nécessaires pour monter ou remplacer les accessoires. L'acheteur est responsable des frais aussi du transport de toutes les pièces (couvertes par cette garantie) soumis pour le remplacement à moins que manufacutre demande à l'acheteur de renvoyer les pièces.
 3. Garantie de la batterie: Pour les produits équipés d'une batterie, nous remplaçons, gratuitement, toute batterie estimée défectueuse pendant les quatre-vingt-dix (90) jours initiaux suivant l'achat. Après quatre-vingt-dix (90) jours, nous échangeons la batterie, le coût pour vous être 1/2 du prix d'une nouvelle batterie pour chaque mois complèt à commander à quatre-vingt-dix (90) jours à compter de la date d'achat.
 4. La période de garantie applicable aux produits proposés en location ou à des fins commerciales est limitée à quatre-vingt-dix (90) jours à compter de la date d'achat initiale.
 5. Cette garantie ne s'applique qu'aux produits correctement montés, réglés, utilisés et entretenus conformément aux instructions d'entretien normal sont exclus de cette garantie.
 6. Exclusions: Les courroies, les lames, les adaptateurs de lame, l'usage normal, les reglages normaux, la visserie standard, et l'entretien normal sont exclus de cette garantie.
 7. En cas de problème entrant dans le cadre de cette garantie, veuillez-vous retourner votre machine à un concessionnaire autorisé.
 - Si vous auriez une question sans réponse concernant cette garantie, s'il vous plaît contactez:
- en nous donnant le numéro du modèle, le numéro de série, la date d'achat de votre machine ainsi que l'adresse du concessionnaire autorisé.

CE TERME GARANTIE NE COUVE AUCUN DOMMAGE INCIDENTEL OU CONSÉQUENT ET TOUTE GARANTIE IMPLICITE EST LIMITÉE AUX MÊMES PÉIODES PRÉCISES ICI POUR LES GARANTIES EXPLICITES DU FABRICANT. Certaines lois limitent la durée de la garantie et vous pouvez aussi avoir d'autres droits d'un endroit à un autre.

Cette garantie est une garantie limitée comme définie dans la loi Magnuson-Moss Act de 1975.

Le fabricant garantit à l'acheteur initial que son produit tel que manufacture est libre de défaut de matière et d'ouvrage. Pendant deux (2) ans, à compter de la date d'achat de la partie d'acheteur initial, nous réparons ou remplaçons à notre choix, grattitements, toute pièce, sur laquelle nous estimons qu'il existe un défaut de matière ou d'ouvrage. Cette garantie est soumise aux limitations et exceptions suivantes:

Poulan Pro
Outdoor Products Customer Service Dept.
1030 Stevens Creek Road
7075 Oldman Pro
Au Canada:
Poulan Pro
Misisipiaga, Ontario
Augusta, GA 30907 USA
L5T 1K6

PROBLEME	CAUSE	CORRECTION
La tondeuse (ou son accessoire) s'arrête lorsqu'un conducteur quitte le siège avec l'embarayage	1. Vérifiez le câblage, les interrupteurs et les connexions. Si le problème n'est pas corrigé, contactez un centre d'entretien autorisé.	
La tondeuse (ou son accessoire) s'arrête lorsqu'un conducteur quitte le siège avec l'embarayage	1. Le système qui détecte la présence du conducteur est défectueux.	
La tondeuse (ou son accessoire) s'arrête lorsqu'un conducteur quitte le siège avec l'embarayage	1. Tonnez le ROIS sur ON.	1. Système de fonctionnement en marche arrête (ROIS) est sur OFF n'est pas sur ON.
La tondeuse		
Coupe inégale	1. La lame est usée, tordue ou lâche. 2. Nivelez le carter de tondeuse. 3. Nettoyez dessous la lame. Serrez le boulon de lame. 4. La vitesse de course est trop rapide. 5. Changez à une vitesse plus lente. 6. Remplacez sécher l'herbe avant de tondre. 7. Nivelez sécher l'herbe avant de tondre. 8. Remplacez la courroie d'entraînement de tondeuse. 9. Les lames sont usées. 10. Remplacez les lames avec les lames recommandées. 11. Les trous d'évent du carter de tondeuse sont obstrués par l'accumulation d'herbe, de feuilles, et de débris autour des mandrins.	1. Déplacez la lame trop lentement. 2. La vitesse de moteur est trop rapide. 3. Remplacez sécher l'herbe avant de tondre. 4. Remplacez la courroie d'entraînement de tondeuse. 5. Remplacez la lame avec une lame neuve. 6. Remplacez la lame avec une lame neuve. 7. Il y a une accumulation d'herbe, de feuilles, et de débris sous la lame. 8. Remplacez la lame avec une lame neuve. 9. Remplacez la lame avec une lame neuve. 10. Remplacez les lames avec les lames recommandées. 11. Remplacez les lames avec les lames recommandées.
Mauvaise décharge de l'herbe	1. La vitesse de moteur est trop lente. 2. La vitesse de course est trop rapide. 3. Changez à une vitesse plus lente. 4. Herbe humide. 5. Nivelez sécher l'herbe avant de tondre. 6. Remplacez sécher l'herbe avant de tondre. 7. Nivelez sécher l'herbe avant de tondre. 8. Remplacez la courroie d'entraînement de tondeuse. 9. Remplacez la lame avec une lame neuve. 10. Remplacez la lame avec une lame neuve. 11. Remplacez la lame avec une lame neuve.	1. Déplacez la lame dans la position rapide (FAST). 2. Changer à une vitesse plus lente. 3. Nivelez sécher l'herbe avant de tondre. 4. Nivelez sécher l'herbe avant de tondre. 5. Vérifiez la tension des pneus. 6. Remplacez la lame avec une lame neuve. 7. Remplacez la lame avec une lame neuve. 8. Remplacez la lame avec une lame neuve. 9. Remplacez la lame avec une lame neuve. 10. Remplacez la lame avec une lame neuve. 11. Remplacez la lame avec une lame neuve.
Les lames de tondeuse	1. Une obstruction dans les mécanismes d'embarayage. 2. Enlevez l'obstruction. 3. Remplacez la lame.	1. La lame est usée, tordue ou lâche. 2. Nivelez le carter de tondeuse. 3. Nettoyez dessous la lame. Serrez le boulon de lame. 4. La lame est usée, tordue ou lâche. 5. Vérifiez la tension des pneus. 6. Remplacez la lame avec une lame neuve. 7. Remplacez la lame avec une lame neuve. 8. Remplacez la lame avec une lame neuve. 9. Remplacez la lame avec une lame neuve. 10. Remplacez la lame avec une lame neuve. 11. Remplacez la lame avec une lame neuve.
Mauvaise décharge de l'herbe	1. La vitesse de moteur est trop lente. 2. La vitesse de course est trop rapide. 3. Changez à une vitesse plus lente. 4. Herbe humide. 5. Nivelez sécher l'herbe avant de tondre. 6. Remplacez sécher l'herbe avant de tondre. 7. Nivelez sécher l'herbe avant de tondre. 8. Remplacez la courroie d'entraînement de tondeuse. 9. Remplacez la lame avec une lame neuve. 10. Remplacez la lame avec une lame neuve. 11. Remplacez la lame avec une lame neuve.	1. Déplacez la lame dans la position rapide (FAST). 2. Changer à une vitesse plus lente. 3. Nivelez sécher l'herbe avant de tondre. 4. Nivelez sécher l'herbe avant de tondre. 5. Vérifiez la tension des pneus. 6. Remplacez la lame avec une lame neuve. 7. Remplacez la lame avec une lame neuve. 8. Remplacez la lame avec une lame neuve. 9. Remplacez la lame avec une lame neuve. 10. Remplacez la lame avec une lame neuve. 11. Remplacez la lame avec une lame neuve.
Les phares n'allument pas (si mun)	1. L'interrupteur est dans la position arrêt (OFF). 2. Ampoule(s) ou lampe(s) grillées. 3. Versez/remplacez l'interrupteur des phares. 4. Versez/remplacez la batterie.	1. Mettez l'interrupteur dans la position marche (ON). 2. Remplacez l'amphoule(s) ou lampe(s). 3. Versez/remplacez l'interrupteur des phares. 4. Versez/remplacez la batterie.
La batterie ne charge pas (si mun)	1. Mauvais élément(s) de la batterie. 2. Mauvaises connexions du câble. 3. Versez/remplacez toutes les connexions.	1. Remplacez la batterie. 2. Remplacez l'amphoule(s) ou lampe(s).
Une perte d'entraînement	1. La commande de la roue libre est en position déengageée. 2. Courroie d'entraînement de remplacement la courroie de entraînement de remplacement. 3. Purgez la transmission.	1. Mettez la commande de la roue libre en position engagée. 2. Remplacez la courroie de entraînement de remplacement.
Pétralade au silencieux quand le moteur est coupé (OF).	1. La commande des gaz dans la position avant de couper le moteur.	1. Déplacez la commande des gaz dans la position intermédiaire (entre rapide et lent) avant de couper le moteur.

GUIDE DE DÉPANNAGE

PROBLEME	CAUSE
Le moteur refuse de démarrer	<p>1. Sans essence.</p> <p>2. Le moteur n'est pas démarré à froid correctement.</p> <p>3. Le moteur est noyé.</p> <p>4. Mauvaise bougie d'allumage.</p> <p>5. Batterie faible ou à plat.</p> <p>6. Filtre à air sale.</p> <p>7. Filtre d'essence sale.</p> <p>8. Il y a de l'eau dans l'essence.</p> <p>9. Le câble est lâche ou endommagé.</p> <p>10. Le carburateur demande un réglage.</p> <p>11. Les soupapes de moteur demandent un réglage.</p>
Démarrage difficile	<p>1. Filtre à air sale.</p> <p>2. Mauvaise bougie d'allumage.</p> <p>3. Rechargez la batterie.</p> <p>4. Rechargez ou remplacez la batterie.</p> <p>5. Démarrer.</p> <p>6. Nettoyez/remplacez le filtre d'allumage.</p> <p>7. Nettoyez/remplacez la batterie.</p> <p>8. Remplacez la batterie.</p> <p>9. Remplacez l'embryagée d'accessoire.</p> <p>10. Appuyez sur la pédale de frein.</p> <p>11. La pédale de frein n'est pas pressée.</p>
Moteur ne tourne pas au ralenti	<p>1. Appuyez sur la pédale de frein.</p> <p>2. L'embryagée d'accèssoire est à la position basse.</p> <p>3. Démarrer.</p> <p>4. Embryagée.</p> <p>5. Batterie faible ou à plat.</p> <p>6. Rechargez ou remplacez la batterie.</p> <p>7. Rechargez la batterie.</p> <p>8. Rechargez ou remplacez la batterie.</p> <p>9. Rechargez la batterie.</p> <p>10. Rechargez la batterie.</p> <p>11. Rechargez la batterie.</p>
Il y a un déclic mais le moteur ne démarre pas	<p>1. Batterie faible ou à plat.</p> <p>2. Rechargez ou remplacez la batterie.</p> <p>3. Les bornes de batterie sont corrodées.</p> <p>4. Verifiez/tout le câbleage.</p> <p>5. Verifiez les bornes de batterie.</p> <p>6. Verifiez les bornes de batterie.</p> <p>7. Verifiez tout le câbleage.</p> <p>8. Verifiez/tout le câbleage.</p> <p>9. Les bornes de batterie sont corrodées.</p> <p>10. Verifiez/tout le câbleage.</p> <p>11. Verifiez/tout le câbleage.</p>
Le moteur manque de puissance	<p>1. Mettez en position de coupe plus haute ou réduisez la vitesse.</p> <p>2. La commande des gaz est à la position de feuilles, et de débris sous la botte de tondueuse.</p> <p>3. Il y a une accumulation d'herbe, de feuilles, et de débris sous la botte de tondueuse.</p> <p>4. Filtre à air sale.</p> <p>5. Niveau d'huile bas/huile sale.</p> <p>6. La bougie d'allumage est défectueuse.</p> <p>7. Vérifiez le niveau d'huile/chancre/l'huile.</p> <p>8. Vérifiez le niveau d'huile/chancre/l'huile.</p> <p>9. Vérifiez le niveau d'huile/chancre/l'huile.</p> <p>10. Vérifiez le niveau d'huile/chancre/l'huile.</p> <p>11. Nettoyez/remplacez le filtre à air.</p> <p>12. Nettoyez/remplacez le silencieux.</p> <p>13. Verifiez tout le câbleage.</p> <p>14. Voyez la section "Pour Réglir le Carburateur" dans la section Entretien et Réglages.</p> <p>15. Contactez un centre d'enrteilien autrefois.</p>
Vibrations excessives de la tondueuse	<p>1. Lamme est usée, tordue, ou lâche.</p> <p>2. Un manchon de lame est trôndu.</p> <p>3. Des pièces sont lâches ou endommagées.</p> <p>4. Remplacez la lame.</p> <p>5. Remplacez le mandrin de lame.</p> <p>6. Remplacez les pièces lâches. Remplacez les pièces endommagées.</p>

GUIDE DE DÉPANNAGE

Votre carburateur n'est pas réglable. Si votre moteur ne fonctionne plus correctement à cause des problèmes avec le carburateur, vérifiez si l'ensemble de carburateur est démonté et si les pièces sont correctement remontées.

POUR RÉGLER LE CARBURATEUR

La commande du moteur a été pré-réglée à l'usine et un réglage manuel du moteur n'est pas nécessaire. Si un réglage est nécessaire, voir le manuel du moteur.

La commande des gaz a été pré-réglée à l'usine et un réglage n'est pas nécessaire. Si un réglage est nécessaire, voir le manuel du moteur.

Le dévrait pas être nécessaire. Si un réglage est nécessaire, voir le manuel du moteur.

La commande des gaz a été pré-réglée à l'usine et un réglage n'est pas nécessaire. Si un réglage est nécessaire, voir le manuel du moteur.

Le dévrait pas être nécessaire. Si un réglage est nécessaire, voir le manuel du moteur.


La commande des gaz a été pré-réglée à l'usine et un réglage n'est pas nécessaire. Si un réglage est nécessaire, voir le manuel du moteur.

POUR RÉGLER LE CÂBLE DE LA

COMMANDÉ DES GAZ

MOTEUR

FIG. 37

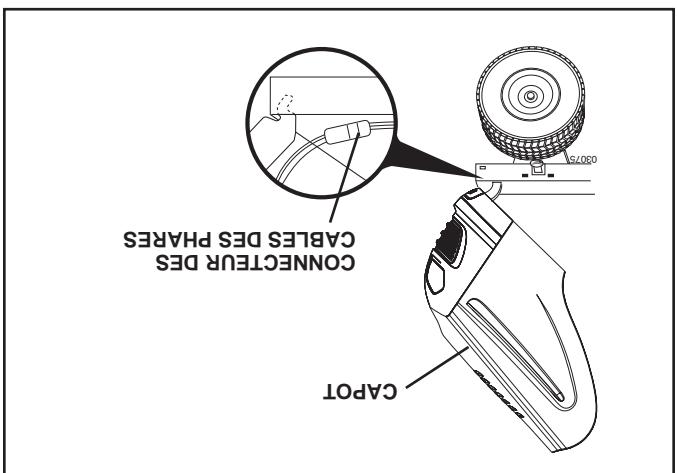

- Pour le réinstaller, inversez les étapes ci-dessus.

- Placez-vous au devant du tracteur. Empoignez le capot et soulevez-le du tracteur.

- Debarrachez le connecteur des câbles des phares.

- Soulevez le capot.

CALANÇAGE (Voir la Fig. 37)

POUR ENLEVER LE CAPOT ET LA

REEMPLACER LA BATTERIE (Voir la Fig. 36)

porte-fusible est située directement derrière le tableau de bord. Remplacez par un fusible enfilchable de type automobile, de 20A. Le

POUR REMPLACER LE FUSIBLE

- Vérifiez le câblage. Voir le schéma du câblage électrique.

Un câblage desserré ou serré peut être la cause du mauvais fonctionnement, de l'arrêt ou du non-démarrage du tracteur.

• Remplacez l'amphoule dans la douille d'origine à l'arrière de la

• Douille d'amphoule dans la douille d'origine à l'arrière de la

• Remplacez l'amphoule dans la douille d'origine à l'arrière de la


• Dégagiez de la douille d'amphoule de l'orifice à l'arrière de la

• Soulevez le capot.

POUR REMPLACER L'AMPOULE DES

PHARES

FIG. 36

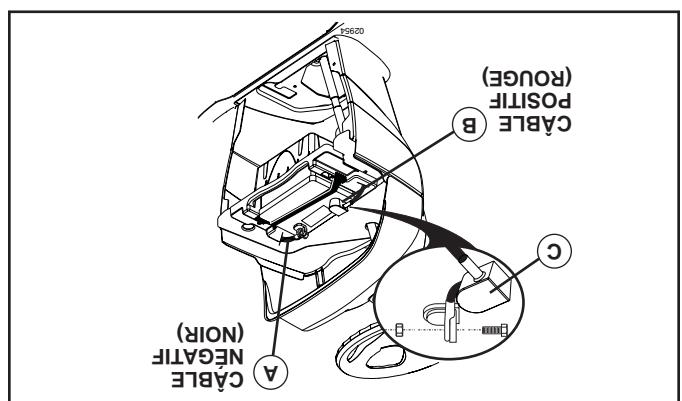

- Fermez le capot.

- Serrez à fond.

- Branchez le câble de masse de batterie NOIR à la borne négative (-) avec le boulon H et écrou à taques qui restent.

- Branchez le câble de masse de batterie ROUGE à la borne positive (+) avec un boulon H et écrou à taques comme montre. Serrez à fond. Glissez la couverture boîte au-dessus de la borne.

- Prenez également brancher le câble de batterie ROUGE à la borne positive (+) avec un boulon H et écrou à taques comme montre. Serrez à fond. Glissez la couverture boîte au-dessus de la borne.

- Installez la nouvelle batterie avec les bornes dans la même place comme vieille batterie.

- Assurez le câble de batterie ROUGE et batterie NOIR et du tracteur.

- Prenez également débrancher le câble de batterie ROUGE et batterie NOIR et enlever la batterie.

- Soulevez le capot.

AU DÉBUT LA BORNE POSITIVE DOIT ÊTRE BRANCHÉE


POUR PRÉVENIR LES ÉTINCELLES D'UNE MISE À LA MASSÉ ACCIDENTELLE.

AVERTISSEMENT: NE COURT-CIRCUITEZ PAS LES BORNES DE BATTERIE PAR PERMETTEZ QU'UNE CLÉ OU AUTRES OBJETS ENTRENT EN CONTACT AVEC LES DEUX BORNES A LA MÊME FOIS. AVANT D'INSTALLER LA BATTERIE, ENLEVEZ TOUS LES BIJOUX, LES BRACELETS DE MONTRE, LES BAGUES METALLIQUES, ETC.



REVISIION ET RÉGLAGES

FIG. 35

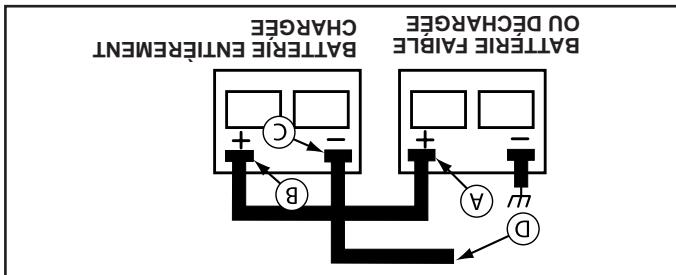


- PROCÉDURES -
- POUR ENLEVER LES CÂBLES, RENVERSEZ LES BORNES (A-B) et de la batterie.
- Branchez l'autre extrémité du câble NOIR à la borne (C) NEGATIVE (-) de la batterie complètement chargée.
- Branchez une extrémité du câble ROUGE à la borne (C) NEGATIVE (-) de la batterie complètement chargée.
- Branchez l'autre extrémité du câble ROUGE à la borne (A-B) à la masse. Maintenez les câbles loin du service (D) au chassis mis à la masse.
- Débranchez la batterie charge complète du câble NOIR (D) au chassis et ensuite de la batterie complètement chargée.
- Débranchez ensuite le câble ROUGE des deux batteries.
- Remarque: Pour boucler les cravaisons de pneus et pour éviter la corrosion du pneu.

POUR ATTACHER LES CÂBLES DE DEMARRAGE -


IMPORTEMENT: VOTRE TRACTEUR EST MUNI D'UN SYSTÈME DE 12 VOLTS. L'AUTRE VÉHICULE DOIT AUSSI AVOIR UN SYSTÈME DE 12 VOLTS. UTILISEZ PAS LA BATTERIE DU TRACTEUR POUR DEMARRER L'AUTRE VÉHICULE. Si vous utilisez des "câbles de survoltage" pour un démarrage d'urgence, veillez à procéder à suivre:

Si votre batterie est trop faible pour démarrer le moteur, elle devrait être rechargée. (Voir "BATTERIE" dans la section Entretien de ce manuel).

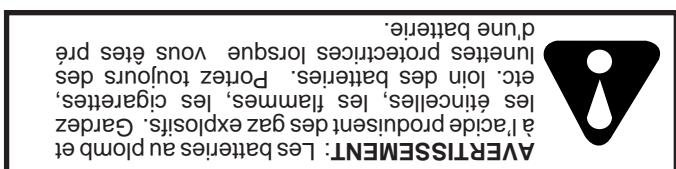

POUR DEMARRER LE MOTEUR AVEC UNE BATTERIE FAIBLE (Voir la Fig. 35)

FIG. 34

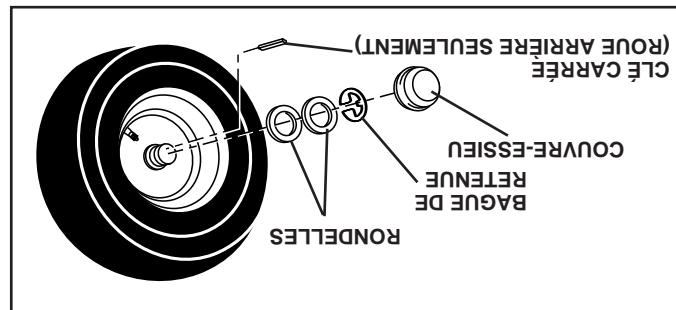


REMARQUE: Pour boucler les cravaisons de pneus et pour éviter la corrosion du pneu.

- Réinstallez le couvre-essieu.
- Réinstallez les rondelles et insérez à fond la baguette de retenue dans la rainure de l'essieu. Insérez la clé Carrée.
- Sur les roues arrêter seulement: alignez les rainures dans le moyen de roue arrêter et l'essieu. Alignez les rainures dans les roues arrêter seulement - ne la perez pas.
- Préparez le pneu et rassemblez-le.
- Fixez solidement des câbles sous l'essieu.
- Enlevez le couvre-essieu, la baguette de retenue et les rondelles pour permettre l'enlèvement de la roue (la roue arrête de rouler et l'essieu peut être ajusté). Ces car-
- Si votre tracteur a subi des dommages ayant affecté le fonctionnement/carrage de la roue avant, communiquer avec l'entretien professionnel.

POUR ENLEVER LES ROUES POUR LES PRÉPARATIONS (Voir la Fig. 34)

Le princement et le carrossage de la roue avant sont déterminés lors de la fabrication de votre tracteur et sont soit normaux. Ces caractéristiques ne peuvent être ajustées. Si votre tracteur a subi des dommages ayant affecté le fonctionnement/carrage de la roue avant, communiquer avec l'entretien professionnel.

PINCEMENT/CARRAGE DE LA ROUE AVANT

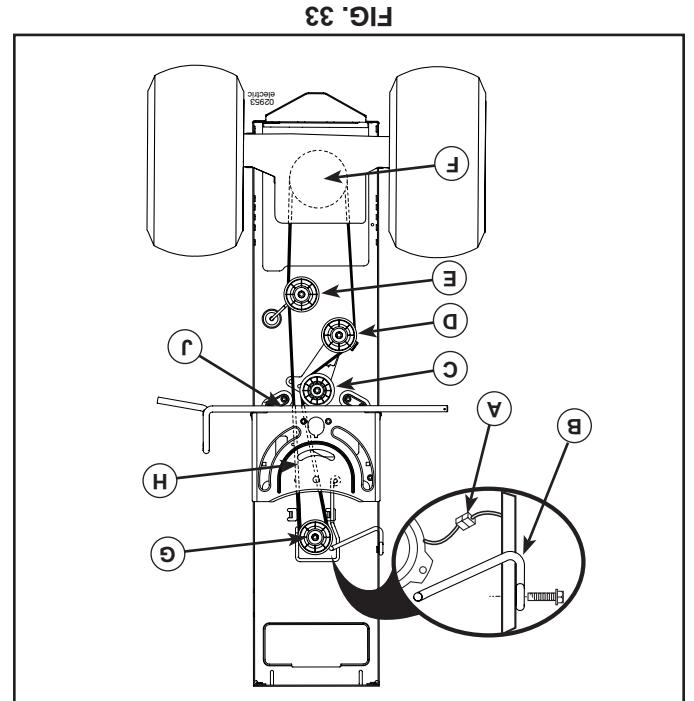

REVISION ET REGLAGES

POUR VERIFIEUR LES FREINS

parée, si plus de 5 pieds (1,5 mètre) sont nécessaires pour arrêter le tracteur, vous devrez faire vérifier les freins.

parée, si plus de 5 pieds (1,5 mètre) sont nécessaires pour arrêter le tracteur, vous devrez faire vérifier les freins.

RETRIEVER LA COURROIE (Voir la Fig. 33)

RETRIEZ LA TONDEUSE (VOIR « POUR ENLEVER LA TON-

REMARQUE: Jetez un œil sur l'ensemble de la courroie et la

position de tous les guides et dispositifs de retenue;

• Deboutchez le faisceau de câbles de l'embarquage (A).

• Retirez la bieille anti rotation (B) à la droite du tracteur.

• Retirez la courroie de la poulie de tension fixe (C) et la poulie d'embrayage (D).

• Retirez la courroie de la poignée de tension centrale (E).

• Irez la courroie libre vers l'arrière du tracteur. Retirez soi-
gneusement la courroie de la poulie d'entree de la transmis-

sion vers le haut et sur les lames du ventilateur (F).

de l'embaragge électrique (G). De plus, la courroie de la pompe manuelle vers le bas et aussi

Faites glisser la courroie vers l'arrière du tracteur, à l'extrêmeur de la plaque de direction (H) et retirez-la du tracteur.

INSTALACION DE LA COURROIE -

POUR REMPLACER LA COURROIE

Les routes sont arrêtées pour éviter les embouteillages et déranger les usagers.

Désenclenchement de transmission par propagation de roue libre à la position de transmission désenclenchée. Transmission désenclenchée. Tirez sur le contrôle de roue libre (le pédalier) dans la position désenclenchée.

Stationnez le véhicule sur une surface de niveau en évitant d'embryagé et actionnez le frein de stationnement.

Vous pouvez également vérifier les amis :

pavée, si plus de 5 plis (1,5 mètre) sont nécessaires pour arrêter le tracteur, vous devrez faire vérifier les amis.

• Soulvez le levier de levage à sa position la plus haute.




ATTENTION : La tige de tension de la courroie possède un mécanisme à ressort. Tenez fermement la tige et enclez-la entièrement.

- **RETRIEZ LES VIS (P)** DES COUVERCLES DES MANDRINS GAUCHE ET DROIT, PUIS RETRIEZ (Q) LES COUVERCLES.
 - **RETRIEZ LA TERRE ET L'HERBE POURVANT ÊTRE ACCUMULÉ AUTOUR DES MANDRINS ET SUR LA SURFACE DES PLATEAUX SUPÉRIEURS.**
 - **REFILER LA COURROIE DE LA COURROIE D'ENTRAÎNEMENT** DES DEUX POUILLES DES MANDRINS (R) ET TOUTES LES POUILLES (M), LES DEUX POUILLES DES MANDRINS (R) ET TOUTES LES POUILLES (M), LES DEUX POUILLES DES MANDRINS (R) ET TOUTES LES POUILLES (M). INSTALLEZ LA COURROIE AUTOUR DES POUILLES DES MANDRINS (R) ET AUTOUR DES POUILLES DE TENSION (S) TEL QU'INDICÉ.
 - **INSTALLEZ LA COURROIE SUR LA POUILLE DE L'EMBRAYAGE ÉLECTRIQUE (M).** ASSUREZ-VOUS QUE LA COURROIE EST BIEN EN PLACE DANS LES SILLOONS DES POUILLES DE LA TONDUEUSE.
 - **IMPORTENT :** REMPLACER LES COUVERCLES DES MANDRINS GAUCHE ET DROIT (Q). VISEZ FERMEMENT TOUTES LES VIS.
 - **ENCLENCHEZ LA TIÈGE DE TENSION DE LA COURROIE (K) DE LA MANETTE DE VERROUILLAGE (L).**



ATTENTION : La tige de tension de la courroie possède un mécanisme à ressort. Tenez fermement la tige et relâchez-la lentement.

- RETIRER LA COURROIE D'ENTRAÎNEMENT DE LA DEUSE (Voir la Fig. 32) TONDREUSE (Voir la Fig. 32)
 - Stationnez le tracteur sur une surface de niveau. Actionnez le frein de stationnement.
 - Abaissez le levier le levage à sa position la plus basse.
 - Déagarez la tige de tension de la courroie (k) de la manette de verrouillage (l).

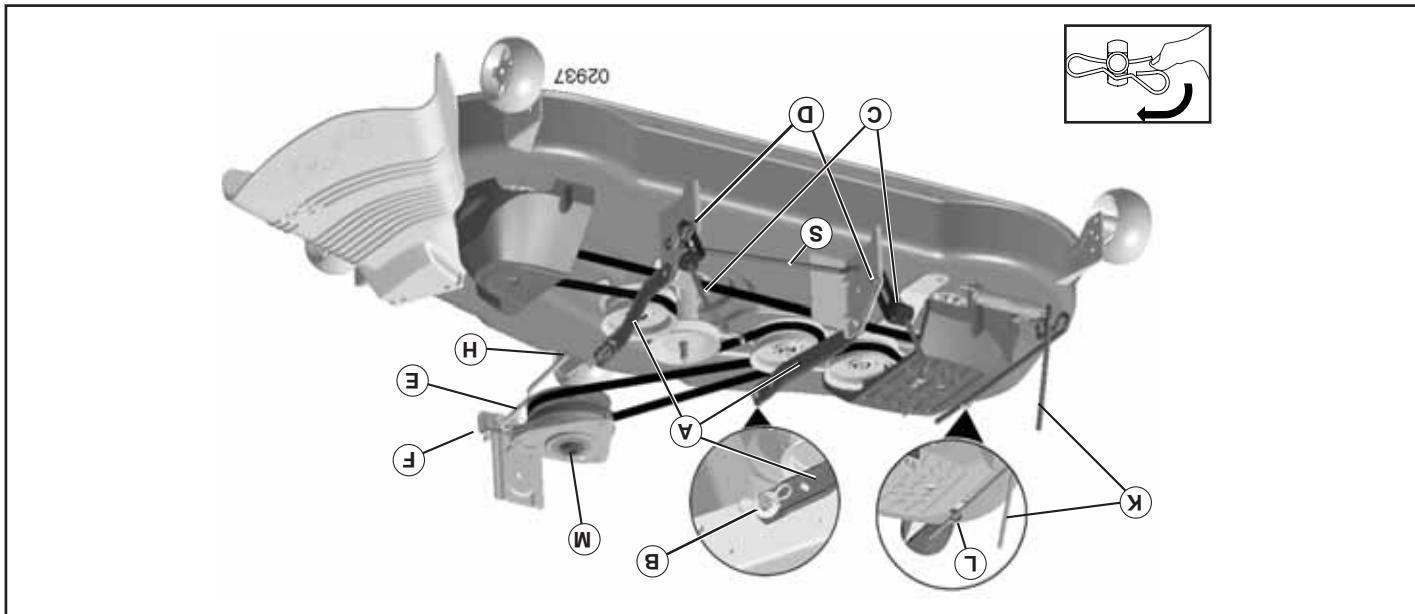

A l'aide d'une clé ajustable ou de 3/4", tournez l'écroûte régulière de la bille de levage (A) vers la gauche pour abaisser la tondeuse, ou vers la droite pour la soulever.

- AJOUTS / ELEMENTS LIAISONS VISUELLES (Voir la Fig. 28)
 - Assurez-vous que vos pneus soient garnis adéquatement.
 - Si votre pelouse ne semble pas coupée de façon uniforme, déterminez quel côté de la tondeuse coupe plus bas.
 - REMARQUE : Vous pouvez soulever le côté basse de la tondeuse ou abaisser le côté supérieure, tel que désiré.
 - Allez du côté où un ajustement est nécessaire.
 - Aide d'une équerre ajustable ou de 3/4", tournez l'écoru de

POUR AJUSTER LE NIVEAU LA TONDEUSE

Suivez la procédure décrite sous « INSTALLER LA TONDEUSE COURROIE » dans la section Assemblage de ce manuel.

- A la droite de la tondueuse, dessenagez la barre anti-tourbillon (S) du support arrière droit de la tondueuse (D) — retirez le ressort-arrestoir et la barre puis ritez vers vous jusqu'à ce que la barre tombe de l'officine du support.
 - Tournez le volant du tracteur aussi loin que possible vers la gauche.
 - Glissez la tondueuse du dessous du tracteur.

FOUR ENNEVEER LA JOURNALISTE
(Varia la Féia 27)

- APPUYEZ SUR LA PÉDALE DE FREIN ET ENGAGEZ LE FREIN DE STATIONNEMENT.
- PLACER L'EMBRAYAGE D'ACCESOIRE EN POSITION DÉBRAYÉE (DISENGAGED).
- TOURNEZ LA CLÉ DE CONTACT À LA POSITION D'ARRÊT (STOP) ET ENLEVÉZ-LA.
- ASSUREZ-VOUS QUE LES LAMES ET TOUTES LES PIÈCES TOURMANTEES SE SOIENT ARRÊTÉES.
- DÉBRANchez LE CÂBLE DE BOUTIGE D'ALUMINAGE ET POSEZ-LE DE TELLE FAÇON QU'IL NE PUISSE PAS ENTRER EN CONTACT AVEC LA BOUTIGE D'ALUMINAGE.

REVISION ET REGLAGES

FILTRE D'HUILE DE MOTEUR

- Le filtre d'essence devrait être remplacé au moins chaque saison.
- Si le filtre d'essence est bloqué et obstrue l'écoulement d'essence au carburateur, il faut le remplacer.
- Ouvrez le moteur sous froid, enlevez le filtre et bouchez les trougous de conducteur d'essence.
- Posez le nouveau filtre dans la conduite d'essence avec la flèche pointant vers le carburateur.
- Assurez-vous qu'il n'y ait pas de fuites de la conduite d'essence et que les brides de serrage soient bien placées.
- Nettoyez immédiatement l'essence renversée.
- Remplacez les bougies d'allumage au début de chaque saison de toute ou presque toutes les 100 heures d'utilisation selon qui se présente en premier. Pour le type de bougie d'allumage régulage PRODUIX™, de ce manuel.

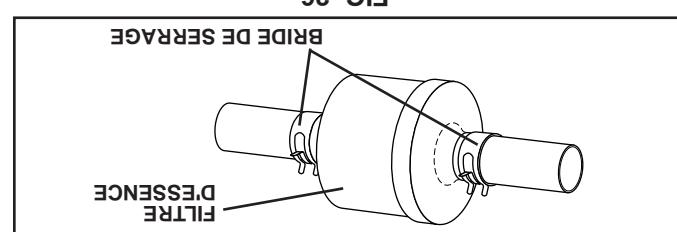



FIG. 26

NETTOYAGE

- Nettoyez le moteur, la batterie, le siège, et la finition, etc. de toutes les matières étrangères.
- Conservez la propriété de la finition et des roues en enlevant soigneusement l'essence, l'huile etc.
- Protégez les surfaces peintes avec une cire d'auto.
- Nous ne recommandons pas l'utilisation d'un tuyau d'arrosage ou d'un système de lavage sous pression pour nettoyer votre tracteur, à moins que le moteur et la transmission soient recouverts pour éviter l'infiltration de l'eau à l'intérieur. Si de l'eau s'infiltra à l'intérieur du moteur ou de la transmission, cela abragera la durée de vie de votre tracteur et de votre compresseur d'air.
- Les feuilles ainsi que les débris de votre tracteur et de votre tondeuse.

- Remplacez le silencieux et le pare-étincelles (s'il y a lieu) et inspectez le silencieux et le pare-étincelles (s'il y a lieu) et remplacez-les. Ils pourraient créer des risques d'incendie et/ou d'endommagement.
- Remplacez le filtre d'huile de moteur chaque saison ou tous les deux (2) changements d'huile si le tracteur a été utilisé plus de 100 heures dans une (1) année.
- Si le filtre d'essence devrait être remplacé au moins chaque saison.

FILTRE D'ESSENCE INSTALLE EN LIGNE

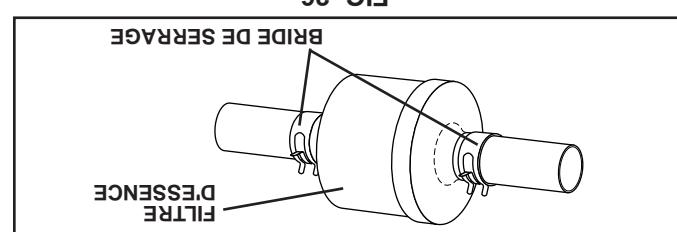

ENTRETIEN

Votre moteur ne fonctionne pas correctement avec un filtre à air sale. Nettoyez le filtre à air plus souvent si il utilise des endroits très poussiéreux ou sales. Voir le manuel du moteur.

FILTRE A AIR


NETTOYER LE TAMIS D'AIR

Utilisez le cailibre du bouchon de remplissage d'huile avec la jauge d'huile pour vérifier la niveau d'huile. Assurez-vous que la jauge d'huile soit serrée à fond pour obtenir une indication correcte du niveau d'huile. Maintenez le niveau d'huile à la marque pleine (FULL) de la jauge d'huile. Serrez à fond le bouchon sur le tube quand vous avez fini.

Les tamis d'air doit être libre de saleté et de ballle de céréale pour éviter d'endommager le moteur à cause du surchauffage. Nettoyez-les avec une brosse en fer ou de l'air comprimé pour enlever toutes les saletés, la paille, et les fibres de gomme seches.

- Deverrouillez la souppape de vidange en posasant vers l'intérieur et en tournant dans les sens contraire des aiguilles d'une montre.
 - Pour ouvrir, tirez sur la souppape de vidange.
 - Après que l'huile se soit écoulée complètement, serrez et verrouillez la souppape de vidange en posasant vers l'intérieur jusqu'à ce que la cheville soit en position verrouillée comme montré.
 - Retirez le tube de vidange et remettez le bouchon sur le racord inférieur de la souppape de vidange.
 - Remplissez le moteur avec l'huile dans le tube de la jauge de remplissage d'huile. Versez lentement. N'en mettez pas trop. Voir la section de "SPECIFICATIONS DU PRODUIT".
 - Pour la capacité approximative.

FIG. 25

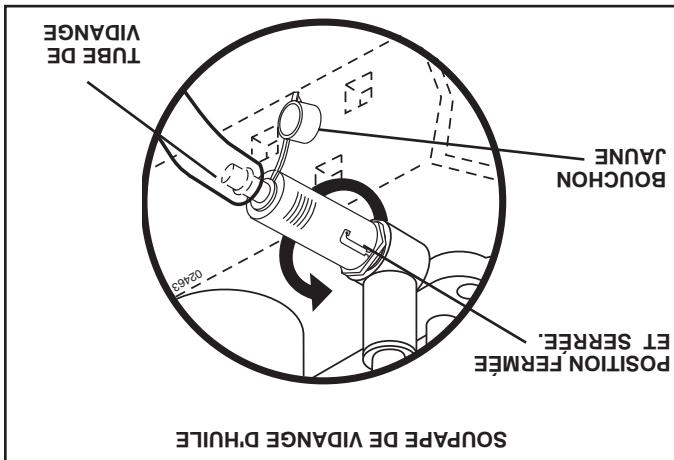


- POUR CHANGER L'HUIILE DE MOTEUR
 - Voir les Figs. 24 et 25) -
 - Détéminez la gamme de température prévue avant le changement d'huile. Toute l'huile doit avoir la classification API SG-SL.
 - Assurez-vous que le tracteur soit stationné sur un terrain plat.
 - Récollez l'huile dans un récipient approprié.
 - Étirez le bouchon de remplissage d'huile avec la jauge moteur quand vous changez l'huile.
 - • • • •
- Enlevez le bouchon jaune du raccord inférieur de la souape de vidange et installez le tube de vidange sur le raccord fileté.

POUR CHANGER L'HUILE DE MOTEUR

Changée l'huile toutes les 50 heures d'opération ou au moins une fois par an si le tracteur est utilisé moins de 50 heures par an. Vérifiez le niveau d'huile avant de démarrer le moteur et toutes les huit (8) heures d'utilisation. Serrez le bouchon de remplissage d'huile avec la jauge d'huile chaque fois que vous démontez le moteur.

REMARQUE: Bien que les huiles de mélange par temps froid, ces huiles 10W30 etc), améliorent le démarrage par temps froid, elles sont utilisées à augmenter la consommation d'huile quand elles sont utilisées à plus de $0^{\circ}\text{C}/32^{\circ}\text{F}$. Veuillez le niveau d'huile de moteur plus fréquemment pour éviter l'endommagement du moteur de lubrification avec un niveau d'huile bas.

FIG. 24

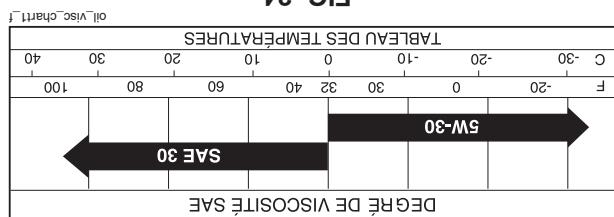

Utilisez seulement l'huile détergente de qualité supérieure de classe API SG-SL. Choisissez le degré de viscosité SAE 10W-30 selon la température d'utilisation prévue.

LUBRIFICATION

MOTEUR

La transmission a été scellée à l'aide d'un ruban de soudure et est étanche à l'eau. Si la transmission est endommagée ou cassée, contactez votre centre d'entretien autorisé pour la réparer, contactez votre centre d'entretien autorisé pour la réparer, contactez votre centre d'entretien autorisé pour la réparer.

FLUIDE MOTEUR DE LA TRANSMISSION

- Inspectez le ventilateur de refroidissement pour s'assurer qu'e
 - que les lames de ventilateur soient propres et intactes.
 - Inspectez le ventiloextracteur de refroidissement pour s'assurer qu'il est propre et intact.
 - Inspectez les ailettes de refroidissement pour la salesie, l'herbe et autres débris qui peuvent empêcher le flux d'air.
 - Utilisez un aspirateur à haute pression pour nettoyer les ailettes de refroidissement.

N'essayerez pas de nettoyer le ventilateur ou la transmission pendant que l'électeur fonctionne ou pendant que la transmission soit correct.

REFRIGERATION EQUIPMENT DE LA TRANSMISSION

- Récitez la date avec l'eau naturelle, et sciez-la.
 - Nettoyez les bouteilles des capsules de batterie avec une brosse métallique jusqu'à ce qu'ils brillent.
 - Enduissez les bornes avec la graisse ou le pétrolium.
 - Réinstallez la batterie (voir "REPLACER LA BATTERIE", dans la section ENTRETIEN ET REGLAGES de ce manuel).
 - Enduez les courroies trapezoidales pour la déterioration et l'usure avec un lubrifiant.
 - Après les 100 heures d'utilisation, Remplacez-les si nécessaire.
 - Les courroies ne sont pas réglables. Remplacez-les si nécessaire.
 - Si elles glissent à cause de l'usure.

IMPORTANT: NE METTEZ NI HUILE NI GRAISSE SUR LES POINTS DE PIÈVOT QUI ONT LES PAILLERS EN NYLON. LES LUBRIFIANTS QUI ATTRIENT LA POUSSEE ET LES SALTÉS DIMINUENT LA DURABILITÉ DES CES PAILLERS A LUBRIFICATION AUTOMATIQUE. SI VOUS PENSEZ QU'ILS DOIVENT ÊTRE LUBRIFIÉS, UTILISEZ SEULEMENT UN LUBRIFIANT UNI LUBRIFIANT SEC, EN Poudre DE TYPE GRAPHITE.

② RÉFÉREZ-VOUS À LA SECTION ENTRETIEN SOUS MOTEUR
① LUBRIFIANT A TOUT USAGE

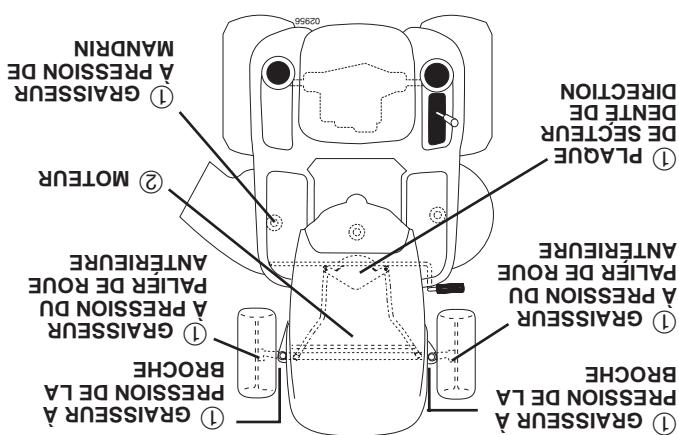


TABLEAU DE LUBRIFICATION

- 1- Changez-les plus souvent qu'aujourd'hui pour établir fonctionne avec un chargement lourd ou permanent les températures ambiantes élevées.
 - 2- Réparez plus souvent si les conditions sont possibles ou sales.
 - 3- Remplacez plus souvent les lames en cas d'utilisation sur un terrain sablonneux.
 - 4- Pas exigez si équipée avec une batterie sans entretenir.


CONSEILS DE TUNDBE

UTILISATION

Si le gazon est très haut, il faut le tondre deux fois pour réduire la charge et la possibilité d'incendie de l'herbe sèche. La deuxième fois, reglez l'appareil pour une coupe assez haute. La deuxième passe doit se faire à la hauteur désirée. Ne tondez pas l'herbe quand elle est mouillée. L'herbe mouillée boudure la tondeuse. Laissez sécher l'herbe avant de tondre. Tondez toujours avec la commande des gaz à plein gaz pour assurer le meilleur rendement de tondeuse et le chargement correct du matériel. Choisissez une tondeuse dont le meilleur rendement de tondeuse et la meilleure coupe.

Quand vous utilisez les accessoires, choisissez toujours une vitesse de course qui convient au terrain et à l'accessoire utilisé.

FIG. 22

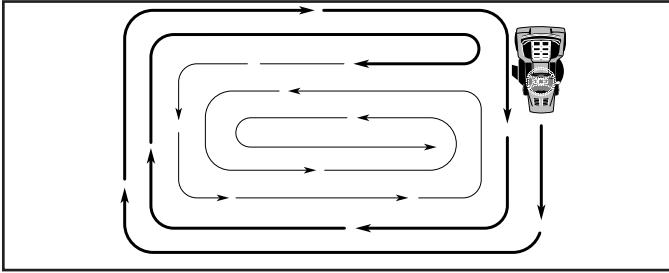

- Assurez-vous que votre tondeuse soit correctement réglée pour le meilleur rendement. (Voir la section de "Pour Niveler le Carré de Tonduse", sous Entrerien et Réglagages de ce manuel). Vous devrez utiliser le côté gauche de la tondeuse pour la conduisez de manière à ce que l'herbe coupée soit déversée sur la zone à être tondue. La zone coupée doit être située à la droite du tondeur. Vous obtiendrez ainsi une coupe plus uniforme et une meilleure répartition de l'herbe coupée.

Pour tondre une grande surface, on vous conseille de commencer par tourner à droite, de façon à ce que l'herbe ne soit pas déversée sur les arbustes, les clôtures, les allées, etc. Après un ou deux tours, tondre en sens inverse en tournant à gauche jusqu'à ce que le travail soit achevé (Voir la Fig. 22).

Votre tracteur est maintenant purgé et prêt pour l'utilisation normale.

Pour assurer l'utilisation correcte et le rendement, il recommande que la transmission soit purgée avant d'utiliser le tracteur pour la première fois. Procéde enlevée empirisonne à l'intérieur de la transmission qui se développe pendant l'expédition de votre tracteur.

IMPORТАНТ! SI VOUS TRANSFÉREZ D'UN AUTRE RÉGION, IL FAUT VÉRIFIER SI LA TRANSMISSION A BESOIN D'UNE REMPLACEMENT, CELLE-DÈSQUE LA REINSTITUTION ET L'UTILISATION DU TRACTEUR.

ATTENTION: N'engagez jamais ou ne dégagerez jamais le levier de la roue libre pendant que le moteur fonctionne.



PURGER LA TRANSMISSION

UTILISATION

AVANT DE DEMARER LE MOTEUR

- Déplacez l'embaragle d'accessoire à la position débrayée (DISENGAGED).
- Déplacez la commande des gaz à la position rapide.
- Tirez la commande d'étrangleur pour tenir de faire un démarrage à froid. Pour le démarrage d'un moteur chaud ceci sera pas nécessaire.
- REMARQUE : Avant de commencer, lisez les instructions suivantes.

VÉRIFIER LE NIVEAU D'HUILE DU MOTEUR

AVANT DE DEMARRER LE MOTEUR

- Déplacez l'embâlage d'accessoire à la position débrayée (DISENGAGED).
- Déplacez la commande des gaz à la position rapide.
- Tirez la commande d'étrangleur pour tenir de faire un démarrage à froid. Pour le démarrage d'un moteur chaud celle ne sera pas nécessaire.
- REMARQUE: Avant de commencer, lisez les instructions suivantes.

VERIFIEZ LE NIVEAU D'HUILE DU MOTEUR

- Ce moteur a été rempli à l'usine avec l'huile d'être avant l'expédition.
- Stationnez le tracteur sur un terrain plat avant de vérifier le niveau d'huile du moteur.

REMPILER LE RÉSERVOIR D'ESSENCE

AVANT DE DEMARRER LE MOTEUR

- Déplacez l'embryage d'accessoire à la position débrayée (DISENGAGED).
- Déplacez la commande des gaz à la position rapide.
- Tirez la commande débrayeur pour tenir de faire un démarrage à froid. Pour le démarrage d'un moteur chaud celle ne sera pas nécessaire.
- REMARQUE: Avant de commencer, lisez les instructions suivantes.
- Enlevez le bouchoin de remplissage d'huile avec la jauge niveau d'huile du moteur.
- Si l'instruction le traîneau sur un terrain plat avant de vérifier le niveau d'huile du moteur.
- Enlevez le bouchoin de remplissage d'huile avec la jauge niveau d'huile jusqu'à la marque pleine (FULL) sur la jauge d'huile déterminer le niveau d'huile. Si nécessaire, remplissez avec bouchoin. Attendez quelques secondes puis enlevez-la pour monter à la position de démarrage (START) et relâchez la clé dès que le moteur démarre. Utilisez pas le démarreur sans interruptrions pendant plus de quinze secondes par minute. Si le moteur ne démarre pas après avoir essayé quatre ou cinq fois, enfonsez la commande débrayeur et essayez encore.
- Pour faciliter le démarrage pendant l'hiver, vous devriez tirer de la commande débrayeur et essayer encore.
- Quand vous démarrez le moteur, enfoncez la commande débrayeur lentement jusqu'à ce que le moteur commence à fonctionner mieux. Si le moteur marche mal, tirez la commande à ce manuel.

VERIFIEZ LE NIVEAU D'HUILE DU MOTEUR

- Ce moteur a été rempli à l'usine avec l'huile d'été avant l'expédition.
- Si l'instruction le tracteur sur un terrain plat avant de vérifier le niveau d'huile du moteur.
- Enlevez le bouchoin de remplissage d'huile avec la jauge niveau d'huile du moteur.
- Attendez quelques secondes puis enlevez-la pour monter à la position de démarrage (START) et relâchez la clé dès que le moteur démarre. Utilisez pas le démarreur sans interruptrions pendant plus de quinze secondes par minute. Si le moteur ne démarre pas après avoir essayé quatre ou cinq fois, enfonsez la commande débrayeur et essayez encore.
- Pour faciliter le démarrage pendant l'hiver, vous devriez tirer de la commande débrayeur et essayer encore.
- Quand vous démarrez le moteur, enfoncez la commande débrayeur lentement jusqu'à ce que le moteur commence à fonctionner mieux. Si le moteur marche mal, tirez la commande à ce manuel.

REMPILER LE RESERVOIR D'ESSENCE

- Pour changer l'huile de moteur, voir la section Entretien de la section de l'huile. (Voir le "Tableau de Viscosité d'Huile", dans la section de l'huile de l'huile de moteur et essayer de ce manuel.)
- Pour changer le réservoir de carburant, vous devriez tirer de la commande débrayeur et essayer encore.
- Quand vous démarrez le moteur, enfoncez la commande débrayeur lentement jusqu'à ce que le moteur commence à fonctionner mieux. Si le moteur marche mal, tirez la commande à ce manuel.

mettrez pas trop. Utilisez de l'essence sans plomb, rendez propre avec un indicice d'octane au moins 91.

- AVANT DE DEMARRER LE MOTEUR**
 - Déplacez l'embaragle d'accessoire à la position débrayée (DISENGAGED).
 - Déplacez la commande des gaz à la position rapide.
 - Tirez la commande débragagleur pour tenir de faire un démarrage à froid. Pour le démarrage d'un moteur chaud ceci ne sera pas nécessaire.
 - REMARQUE: Avant de commencer, lisez les instructions suivantes.
 - Insérez et tournez la clé dans le sens des aiguilles d'une montre à la position de démarrage (START) et relâchez la clé des que le moteur démarre. N'utilisez pas le démarreur sans interruptions pendant plus de quinze secondes par minute. Si le moteur ne démarre pas après avoir essayé quatre fois, renforcez la commande pas après avoir essayé une fois de la commande d'étrangleur et essayez encore.
 - DÉMARRAGE PAR TEMPS CHAUD (50° F et moins)
 - Quand vous démarrez le moteur, renoncez la commande débragagleur lentement jusqu'à ce que le moteur commence à fonctionner mieux. Si le moteur marche mal, tirez la commande à fond et répétez le processus.
 - Si le moteur ne démarre pas après avoir essayé quatre fois, éteignez le moteur et attendez quelques minutes avant de tenter de démarrer à nouveau.
 - Alors maintenant, les accessoires et la commande débragagleur peuvent être utilisés. Si le moteur ne peut démarrer, éteignez le moteur et attendez quelques minutes avant de tenter de démarrer à nouveau.
- VÉRIFIER LE NIVEAU D'HUILE DU MOTEUR**
 - Utilisez le tracéur sur un terrain plat avant de vérifier le niveau d'huile du moteur.
 - Stationnez le tracteur sur un terrain plat avant de vérifier le niveau d'huile du moteur.
 - Enlevez le bouchon de remplissage d'huile avec la jauge détachable.
 - Détendez quelques secondes puis enlevez-la pour déterminer le niveau d'huile. Si nécessaire, remplissez avec huile jusqu'à la marque pleine (FULL) sur la jauge d'huile.
 - Pour faciliter le démarrage pendant l'hiver, vous devriez changer l'huile. Voir le "Tableau de Viscosité d'Huile" dans la section de l'huile. Pour le démarrage pendant l'hiver, vous devriez utiliser l'huile qui a la meilleure viscosité pour faciliter le démarrage.
 - Pour changer l'huile, suivez les instructions suivantes.
- REMPILLER LE RÉSERVOIR D'ESSENCE**
 - Pour changer l'huile de moteur, voir la section Entretien de la section de l'huile.
 - Pour changer l'huile, suivez les instructions suivantes.
 - Remplissez le réservoir d'essence. Remplissez le réservoir d'essence jusqu'au fond soit jusqu'à la ligne de remplissage. Ne mettez pas trop. Utilisez de l'essence sans plomb, régulière, fraîche, et propre avec un indice d'octane au moins 87.

que l'essence utilisee soit trache, achetez des quantites suffisantes de charbon.

ou l'essence renversée. Vous ne devrez jamais emmagasiner, répandre ou utiliser

AVANT DE DEMARRER LE MOTEUR		VERIFIEZ LE NIVEAU D'HUILE DU MOTEUR		REMPLIR LE RESERVOIR D'ESSENCE	
• Déplacez l'embaragle d'accèssoire à la position débrayée (DISENGAGED).	• Déplacez la commande des gaz à la position rapide.	• Tirez la commande d'étrangleur pour tenir de faire un démarrage à froid. Pour le démarrage d'un moteur chaud ceci ne sera pas nécessaire.	• REMARQUE : Avant de commencer, lisez les instructions suivantes.	• Insérez et tournez la clé dans le sens des aiguilles d'une montre à la position de démarrage (START) et relâchez la clé des que le moteur démarre. Utilisez pas le démarreur sans interruptrions pendant plus de quinze secondes par minute. Si le moteur ne démarre pas après avoir essayé deux minutes et essayez encore. Si le moteur ne démarre pas, attendez quelques minutes et essayez encore. Si le moteur ne démarre pas, tirez de la commande d'étrangleur une dernière fois.	• REMARQUE : Utilisez toujours la position de démarrage (50° F et moins) lorsque vous démarrez le moteur, enfonsez la commande d'étrangleur lentement jusqu'à ce que le moteur commence à fonctionner mieux. Si le moteur marche mal, tirez la commande d'étrangleur lentement jusqu'à ce que la commande démarre le moteur, enfonsez la commande d'étrangleur lentement.
• DÉMARRAGE PAR TEMPS CHAUD (50° F et moins)	• DÉMARRAGE PAR TEMPS CHAUD (50° F et moins)	• DÉMARRAGE PAR TEMPS FROID (50° F et plus)	• DÉMARRAGE PAR TEMPS FROID (50° F et plus)	• REMPLISSEZ LE RÉSERVOIR D'ESSENCE	• ATTENTION : Essayez toujours l'huile ou l'essence renversée. Vous ne devrez jamais emmagasiner, réparer ou utiliser de l'essence utilisée dans les trente jours suivant l'achat.
• • • • •	• • • • •	• • • • •	• • • • •	• • • • •	• • • • •

IMPORTEZ : POUR ASSURER UN BON DEMARRAGE, LAISSEZ LE SOUS-LETS A 32°F/0°C, VOUS DEVEZ UTILISER TEMPS FROID (SOUS-LETS 32°F/0°C).

POUR DÉMARRER LE MOTEUR

- DEMARAGE PAR TEMPS FROID (50° F et plus)**

Quand vous démarrez le moteur, enfonnez doucement la commande d'embrayage jusqu'à ce que le moteur marche bien. Continuez à enfourcer la commande petit à petit en permettant que le moteur accélère petit à petit de vitesses et de charge, jusqu'à ce que la commande soit complètement éliminée. Si le moteur commence à marquer puis révomme dans la position d'opération.

 - Assurez-vous que le tracteur soit garé sur un terrain plat.
 - Relâchez le frein de stationnement et permettez que frein retombe dans la position d'opération.
 - Permettez que la transmission se réchauffe pendant une minute. Ceci peut être fait pendant le temps d'échauffe pendant que la transmission se réchauffe.
 - Les accessoires peuvent être utilisés pendant le temps d'échauffe pour obtenir le meilleur rendement du moteur si les altitudes sont supérieures à 914,4 mètres (3000 pi) ou si les températures sont inférieures à 32° F/0°C. Consultez la section "Pour régler le Carburateur" à la section Entretien et Réglages de ce manuel.

REMARQUE: Le mélange de carburant demandera un réglage un peu plus petit.

AUTOMATIQUE RECHAUFFEMENT DE LA TRANSMISSION

Avant de conduire le tracteur l'hiver, la transmission doit être chauffée comme suit:

 - Avant de conduire le tracteur l'hiver, la transmission doit être chauffée quelques minutes pour que le moteur se chauffe, selon la température.
 - Permettez que la commande de petits changements de vitesses et de charge, jusqu'à ce que la commande soit complètement éliminée. Si le moteur commence à marquer alors, il faut que la commande prende quelques minutes pour se réchauffer à l'enfoncer. Il faut que la commande se réchauffe pendant quelques minutes, mais, tirez un peu la commande pour la réchauffer.
 - Assurez-vous que le tracteur est placé sur un terrain plat.
 - Relâchez le frein de stationnement et permettez que le frein retombe dans la position d'opération.
 - Permettez que la transmission se réchauffe pendant une minute.
 - Les accessoires peuvent être utilisés pendant le temps d'échauffe pour obtenir le meilleur rendement du moteur si les altitudes sont supérieures à 914,4 mètres (3000 pi) ou si les températures sont inférieures à 32° F/0°C. Consultez la section "Pour régler le Carburateur" à la section Entretien et Réglages de ce manuel.

ATTENTION: L'expérience indique que les combusribles mélanger avec l'alcool (appelés gazosol ou utilisant l'éthanol ou le méthanol) peuvent attirer l'humidité qui cause la dégradation des autres renseignements. N'utilisez jamais de Reportez-vous aux instructions sur l'emballage pour les autres renseignements. Utilisez de l'essence fraîche la saison suivante. Vides, conduttes de combustible et le réservoir doivent être vidangé avant tout l'entreposage de 30 jours ou plus. Vidangez le réservoir d'essence, démarrez le moteur de quelques minutes et laissez-le refroidir jusqu'à ce que les conduttes de combustible et le réservoir soient vides. Utilisez de l'essence fraîche la saison suivante.

- Quand vous démarrez le moteur pour la première fois ou si le moteur est sans essence, il faut plus de temps pour déplacer

Assseyez-vous sur le siège, enfoncez la pédale frein et emmenez le frein de stationnement.

- Engagez la pédale de frein jusqu'à sa position de freinage. Engagez la pédale de frein la plus longtemps nécessaire à arrêter, enfonnez rapidement le frein de manière à réduire la vitesse ou déplacez dans une autre.
- Si l'estabilisement nécessite une position de freinage, choisissez la vitesse la plus élevée avant de commencer à monter ou descendre une côte.
- Choisissez la vitesse la plus élevée la plus longtemps nécessaire à la fin du mouvement.

REMARQUE : L'indicateur d'entretien se trouve à la clé de serrure en position « STOP ». Pour une lecture réaliste, assurez-vous que la clé d'allumage est dans un poste d'imposte ouverte position, à l'exception de la position de freinage.

INDICATEUR D'ENTRETIEN/HOROMÈTRE


L'indicateur d'entretien montre le temps total d'utilisation recommandé, dans les spécifications du fabricant de votre tracteur. Faites preuve de la même attention que vous remorquez un accessoire. Il est dangereux de remonter des chariots trop lourds dans une pente. Les jaugeons sont conçus pour être utilisés avec le terrain et vous faire perdre la maîtrise de votre tracteur.

AUTRES ACCESSOIRES

Remorquez seulement les accessoires recommandés, dans les spécifications du fabricant de votre tracteur. Faites preuve de la même attention que vous remorquez un accessoire. Il est dangereux de remonter des chariots trop lourds dans une pente. Les jaugeons sont conçus pour être utilisés avec le terrain et vous faire perdre la maîtrise de votre tracteur.

POUR REMORQUER DES CHARRETTES ET

FIG. 21

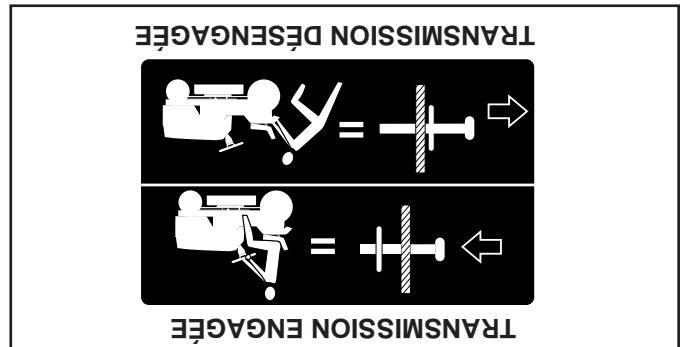

REMARQUE: Pour protéger le captor des dommages pendant le transport de votre tracteur sur un camion ou une remorque, assurez-vous que le captor soit fermé au fixe au tracteur. Utilisez les moyens appropriés (cordes, câble, etc.).

REMARQUE: Pour protéger le transmission, inversez le procédé ci-dessus. Pour renverser la transmission, inversez le procédé ci-dessus.

- Ne remorquez pas de poste possessez jamais votre tracteur à une vitesse de plus de 3,21 km/h (2 mph).
- Très la commande de roue libre au dehors et vers le bas à l'intérieur de la ramure et relâchez-la pour qu'elle soit à la position de désengagement.
- Soulevez le mécanisme de levage d'accèssoire à la position la plus haute avec la barre d'attelage arrête du tracteur.
- Soutenez le mécanisme de levage d'accèssoire à la position est située sur la barre d'attelage arrête du tracteur.

Quand vous possédez ou remorquez le tracteur, assurez-vous que la transmission soit désengagée en déplaçant la commande de roue libre à la position à roue libre. La roue libre la commande de roue libre est située à la position de la pédale de marche avant jusqu'à ce que la roue soit libérée.


POUR TRANSPORTER LE TRACTEUR

- Virez tous les trés progressivement.
- Appuyez lentement sur la pédale de marche avant jusqu'à ce que la pédale de frein.
- Pour redémarrer, dégaggez lentement le frein de stationnement.

UTILISATION

AVERTISSEMENT: N'utilisez jamais le tracteur dans les cotés de plus de 15°. Ne le conduisez jamais en travers des surfaces en pente.

POUR UTILISER DANS LES PENTES

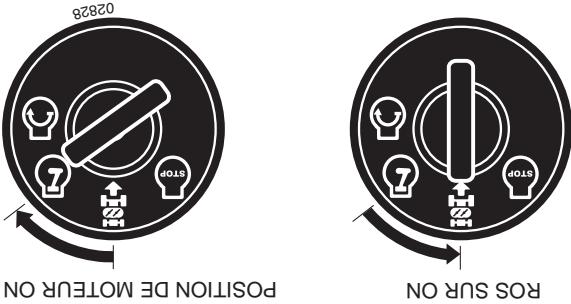

- Tournez la clé de contact en sens horaire sur ON.
- Lorsque l'utilisation du ROS n'est plus nécessaire, faites déplacer lentement le levier de vitesse sur la marche arrière (R) pour commander le mouvement.
- Regardez sur le sol et derrière vous avant de reculer, et tout en reculant.
- Avec le moteur en marche, introduisez la clé dans le bouton de commande ROS et faites-la tourner en sens anti-horaire sur ON.
- Enfonnez complètement la pédale de embrayage/frein sans la lâcher.
- Utilisez que si vous êtes certain qu'un enfant ou tiers n'est présent sur la surface à tondre.
- MARCHE ARRIÈRE
- Utilisation du système de fonctionnement en avec l'embrayage de la commande du système de fonctionnement avec l'embrayage. L'opérateur ne doit pas utiliser ROS sur ON. Pour pouvoir reculer lorsque le tracteur est équipé d'un ROS, il faut déconnecter le système de fonctionnement avec l'embrayage de la commande du système de fonctionnement avec l'embrayage.
- AVERISSEMENT: Il est formellement déconseillé de faire reculer avec l'embrayage ROS "ON".

Votre tracteur est équipé d'un système de fonctionnement avec l'embrayage qui permet de tenir l'embrayage soit placé dans la position ROS "ON". L'arête du moteur à moins que la clé d'allumage soit placée dans arrête avec l'embrayage de la commande du système de fonctionnement avec l'embrayage. Si l'opérateur tente de circuler en marche arrière avec l'embrayage de la commande du système de fonctionnement avec l'embrayage, il provoquera arrête avec l'embrayage, qui est nécessaire avec l'embrayage de la commande du système de fonctionnement avec l'embrayage.

MARCHE ARRIÈRE (ROS)

SYSTÈME DE FONCTIONNEMENT EN

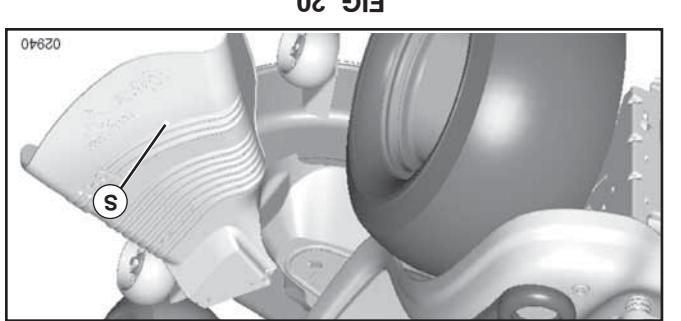



FIG. 20



- Déplacez la commande d'embrayage d'accessoire à la position débrayée (DISENGAGED).
- Engagez les lames de tondeuse en déplaçant la commande d'embrayage à la position embrayée (ENGAGED).
- Sélectionnez la hauteur de tondeuse désirée à l'aide du levier d'accrochage.
- Votre tracteur est utilisé sur un terrain accidenté ou des collines. Le siège pour éviter que le moteur hésite ou s'arrête quand le tracteur est engagé. Vous devrez rester bien assis au milieu du siège pendant que le moteur fonctionne et que l'embrayage d'accessoire est engagé. Le moteur s'arrête si l'opérateur essaie de quitter du siège pendant que le tracteur est utilisé. L'interrupteur de détection de présence du tracteur est munie d'un interrupteur de détection de présence qui opère lorsque la tondeuse est utilisée.

POUR UTILISER LA TONDEUSE

FIG. 19

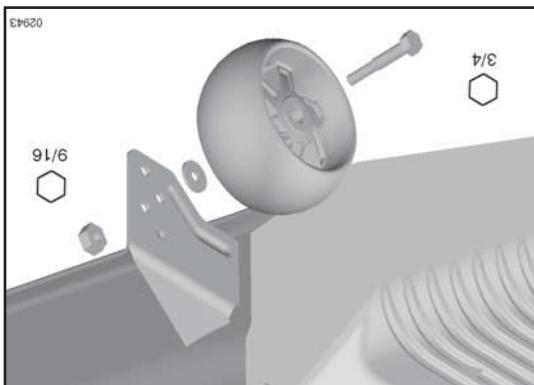

- Répétez de l'autre côté. Installez la roue dans le même trou régulable.
- Quand la tondeuse est à la hauteur de coupe désirée pour la hauteur de coupe dessus du sol. Installez la roue dans le trou approprié. Serrez dessus à fond.
- Quand la tondeuse est à la hauteur de coupe désirée pour la hauteur de coupe dessus du sol. Installez la roue dans le trou approprié. Serrez dessus à fond.
- Réglez la tondeuse à la hauteur de coupe désirée (Voyez la section de "POUR RÉGLER LA HAUTEUR DE COUPE" à la page 17).
- Réglez la tondeuse à la hauteur de coupe désirée (Voyez la section de "POUR RÉGLER LA HAUTEUR DE COUPE" à la page 17).
- REMARQUE: Réglez les roues quand le tracteur est sur un terrain plat.
- Les roues sont bien réglées quand elles se trouvent légèrement au-dessus du sol lorsque la tondeuse est à la hauteur de coupe désirée. Dans ce cas, les roues gardent le centre en place pour prévenir le dégazonnement de la tondeuse.
- REMARQUE: Réglez les roues quand elles se trouvent légèrement au-dessus du sol lorsque la tondeuse est à la hauteur de coupe désirée. Dans ce cas, les roues gardent le centre en place pour prévenir le dégazonnement de la tondeuse.


POUR RÉGLER LES ROUES DE JARGE (Voir la Fig. 19)

- Pour une meilleure rendement, si l'herbe mesure plus de 15,24 cm (6 po.), vous devrez la tondeuse deux fois. La première fois laissez-la plutôt longue; et la deuxième fois à la hauteur désirée.

- La plage de réglage de la hauteur de coupe est environ de 3,81 cm (1-1/2 po.) à 10,16 cm (4 po.). Les hautes sont mesurées du terrain à l'extrême de la lame quand le moteur ne marche pas. Ces hautes sont appréciables et elles pourraient changer à cause des conditions extrêmes et elles pourraient changer à cause des types d'herbe qui sont tendus.
- La saison fraîche et à plus de 7,62 cm (3 po.) pendant la saison chaude. Tondez souvent pour les meilleurs résultats.

- Placez le levier d'accrochage dans la rainure correspondant à la hauteur désirée.

FIG. 18

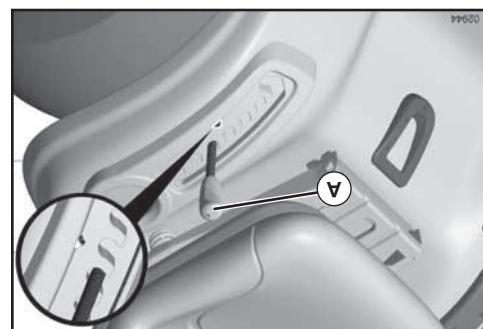

- La position du levier d'accrochage (B) détermine la hauteur de la tondeuse.

POUR RÉGLER LA HAUTEUR DE COUPE DE LA TONDEUSE (Voir la Fig. 18)


- Appuyez sur la pédale de marche avant jusqu'à ce que la pédale soit engagée. Pour désengager le régulateur, tirez le levier vers l'arrière sur "OFF", ou appuyez à fond sur la pédale de frein.
- Appuyez sur la pédale de marche avant jusqu'à ce que la pédale soit engagée. Pour désengager le régulateur, tirez le levier vers l'arrière sur "SET", et maintenez-le tout en soulevant le régulateur sur (J) "SET".
- Pour désengager le régulateur, tirez le levier vers l'arrière sur "OFF", ou appuyez à fond sur la pédale de frein.

- Les régulateurs rocallieux ou lors du découpage de finition ou en finition à vitesses droites. D'autres conditions telles que le découpage de ou transsport du tracteur sur des surfaces qui sont relativement tournantes.
- Les régulateurs rocallieux ou lors du dévrait être utilisé que lors du fauchage de vitesses. Ne pas utiliser le régulateur de vitesses sur les pentes, et maintenez-le tout en soulevant le régulateur sur (J) "SET".
- Pour désengager le régulateur, tirez le levier vers l'arrière sur "OFF", ou appuyez à fond sur la pédale de frein.

- Les régulateurs de vitesses peuvent faire décoller le régulateur de vitesses lorsque la tondeuse n'est utilisable ou en marche avant.

COMMENT UTILISER LE RÉGULATEUR DE VITESSE - J (Voir la Fig. 17)

FIG. 17

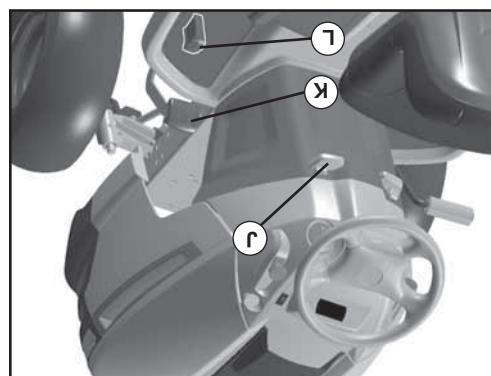

Appuyez doucement sur la pédale de marche avant (**k**) ou sur la pédale de marche arrière (**L**) pour commencer à vous déplacer. Plus vous appuyez sur la pédale, plus la vitesse au sol augmentera.

- 1

La direction et la vitesse du déplacement sont contrôlées par les pédales de marche avant et de marche arrière.

POUR AVANGER ET POUR REGULER

- Utilisez l'étrangleur quand vous démarrez un moteur froid. Ne utilisez pas pour démarrer un moteur chaud.
- Pour engager l'étrangleur (N), tirez du bouton. Poussez le bouton pour dégager l'étrangleur.

-

(voir la Fig. 16)


- d

- Faire fonctionner le moteur à une vitesse inférieure à sa vitesse maximale (rapide) réduit l'efficacité du moteur (D).
- Une pleine vitesse (rapide) permet une meilleure performance de la tondeuse.

- 1

POUR UTILISER LA COMMANDE DES GAZ-D

Fig. 16

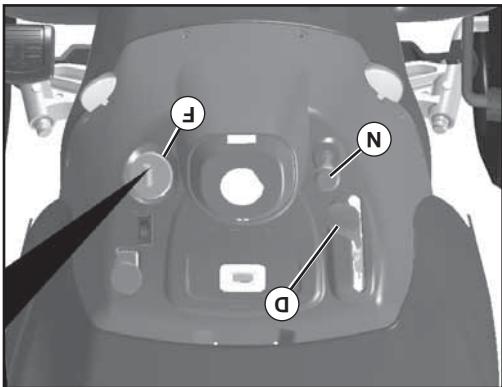

ALLIENATION: Arrêtez tousjours le tracteur complètement, comme décrit ci-dessus, avant de quitter le tracteur; de vider le ramasse-herbe, etc.

REMARQUE: Quand le tracteur marche au ralenti, les gaz d'échappement d'un moteur chaud peuvent causer des dommages au gazon. Pour éviter les dommages, coupez toujours le moteur quand vous arrêtez le tracteur sur le gazon.

IMPORTANT: SI LE CONTACT D'ALLUMAGE EST LASISSE A UNE AUTRE POSITION QUE OFF, LA BATTERIE SE DÉCHARGERA (A PLAT)

POUR ENGAGER LE FREIN DE STATIONNEMENT (Voir la Fig. 14)

L'utilisation d'un tracteur présente le risque de projection des particules dans les yeux qui peuvent causer des blessures sérieuses. Portez toujours des lunettes de sécurité ou une visière lorsque vous utilisez, ou que vous faites régâges ou des préparations au tracteur. Nous recommandons des lunettes de sécurité ou un masque large de sécurité porte au-dessus des jouettes.




UTILISATION

- (A) LEVIER DE LEVAGE D'ACCESOIRE** - permet de soulever et de basculer le carter de tondeuse ou les autres accessoires montés au tracteur.
- (B) PEDALE DE FREIN** - permet de débrayer la transmission, d'arrêter le tracteur et de démarrer le moteur.
- (C) LEVIER DU FREIN DE STATIONNEMENT** - bloque la pédale de frein/embrayage en position de frein (BRAKE).
- (D) COMMANDE DES GAZ** - permet de commander la vitesse de moteur.
- (E) INTERUPTEUR D'EMBRAYAGE D'ACCESOIRE** - est utilisé pour engager les lames de tondeuse ou les autres accessoires montés sur le tracteur.
- (F) COMMUTATEUR DU SYSTEME DE PRESSE** - permet de faire fonctionner la pompe à eau.
- (G) OPERATEUR (ROS) POSITION "ON"** - permet le fonctionnement de la plate-forme de fauchuse ou de tout autre attachement actionnée tandis qu'à l'envers.
- (H) LINTERRUPTEUR DES LUMIERES** - permet d'allumer/éteindre les phares du tracteur.
- (I) LEVIER DE COMMANDE DE VITESSE** - Sert à faire avancer le tracteur à la vitesse souhaitée sans appuyer sur la pédale de marche avant.
- (J) PEDALE DE MARCHE AVANT** - Sert à faire avancer le tracteur.
- (K) PEDALE DE MARCHE ARRIERE** - Sert à faire reculer le tracteur.
- (L) PEDALE DE MARCHE ARRIERE** - permet de faire reculer le tracteur.
- (M) COMMANDE DELAROUELIBRE** - débraye la transmission pour le transport ou le remorquage du tracteur quand le moteur ne fonctionne pas.
- (N) COMMANDE DETERANGLEUR** - permet de démarrer un moteur froid.
- (P) INDICATEUR D'ENTRETIEN/HOROMETRE** - indique l'heure d'entretien du moteur et de la tondeuse est nécessaire.

Nos tracteurs sont conformément aux normes de sécurité de l'American National Standards Institute.

FIG. 13

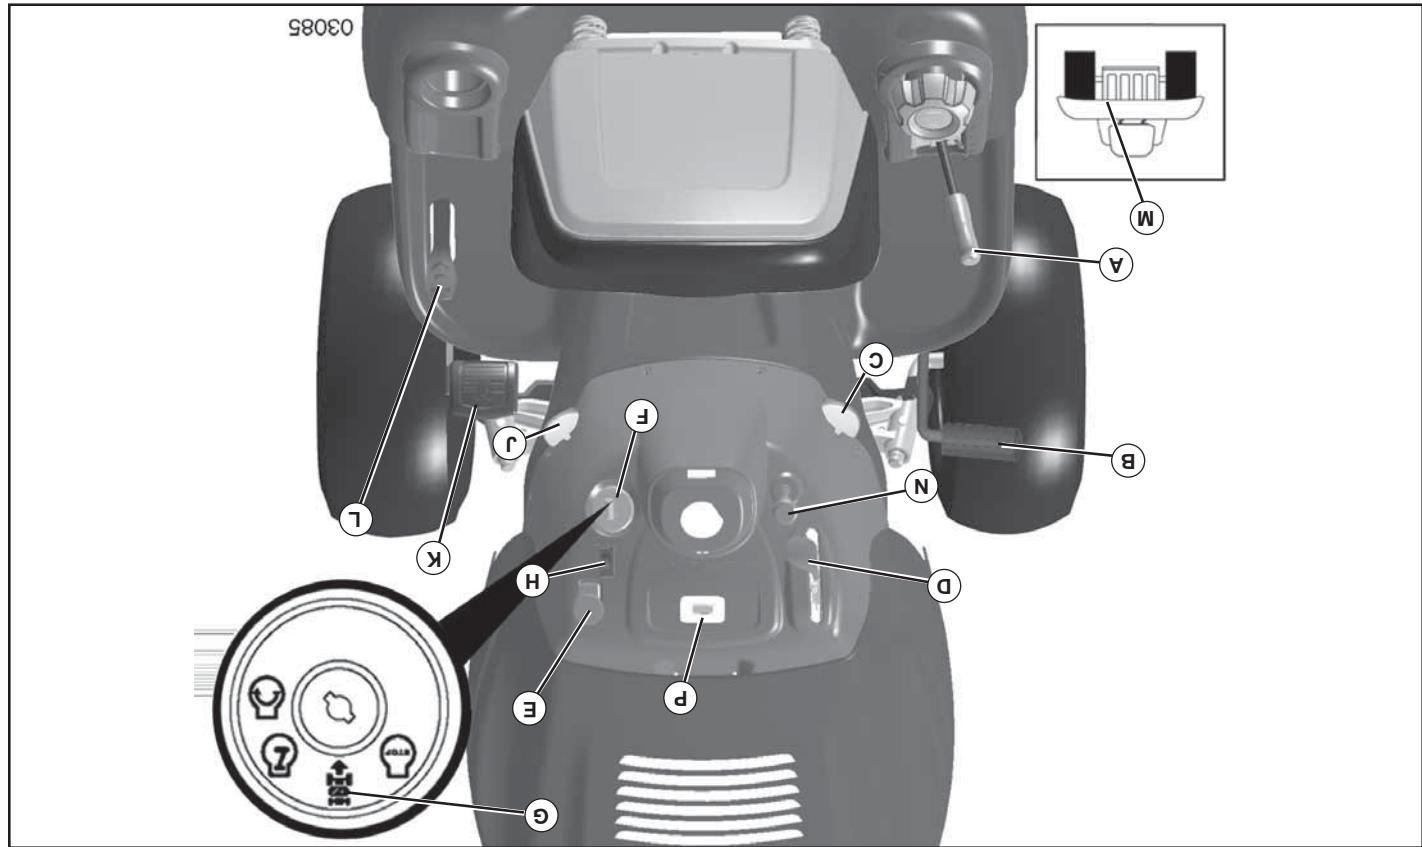

CONNAISSEZ VOTRE TRACTEUR, LISSEZ CE MANUEL DE PROPRIÉTAIRE ET LES RÈGLES DE SECURITE AVANT D'UTILISER VOTRE TRACTEUR, COMPAREZ LES ILLUSTRATIONS CI-DESSOUS À CELLES DU VOTRE TRACTEUR AFIN DE VOUS FAMILIARISER AVEC L'EMPLACEMENT DES DIFFÉRENTES COMMANDES ET AVEC LES RÈGLAGES. GARDEZ CE MANUEL POUR RÉFÉRENCE.

UTILISATION

FEU indique un risque où, si il n'est pas évité, pourraient avoir comme conséquence la mort, des blessures sérieuses et/ou l'endommagement de la propriété.



la mort, des blessures sérieuses et/ou l'endommagement de la propriété.



SURFACES CHAUDES indique un risque où, si l'heure n'est pas évidée, pourrait avoir comme conséquence le moteur.

ATTENTION lorsqu'il est utilisé sans le symbole d'alerte, indique une situation qui pourrait résulter en un endommagement du tracteur et/ou du



ATTENTION indique un risque qui, s'il n'est pas évité, pourraient causer des blessures mineures ou



AVERTISSEMENT Indique un risque qui, si il n'est pas évité, pourrait avoir comme conséquence la mort ou des blessures sérieuses



DANGERS indique un risque qui, si il n'est pas évité, aura comme conséquence la mort ou des blessures sérieuses.

GARDER LAIRÉ LIBRE RISQUE DE PENTE (VOYEZ SECURITE REGLES PARTIE)



PÉDALE DE FREIN / D'EMBRAYAGE



LEVAGE DE
TONDEUSE



30
H



ST



5



DOCUMENTATION
EN MARCHE
ARRIÈRE (ROS)




EN ARRÈRE

Ces symboles peuvent se montrer sur votre tracteur ou dans les publications fournies avec le produit. Apprenez et comprenez la signification des symboles.


UTILISATION

MONTAGE




- Soulvez le levier de levage à sa position la plus haute.
 - Si nécessaire, ajustez les roues de réglage avant d'utiliser la tondueuse, tel que montre dans la section Fonctionnement de ce manuel.
 - Pour les meilleures résultats de tondeuse, le boîtier de tondueuse doit être correctement nivelé. Référez-vous à la section "POUR NIVELER LA TONDEUSE" dans la section Entretien.
 - Pour les meilleures résultats de tondeuse, le boîtier de tondueuse doit être correctement nivelé. Référez-vous à la section "POUR NIVELER LA TONDEUSE" dans la section Entretien.
 - Rédiguez la pression à l'intérieur des pneus à la valeur en PSI indiquée sur ceux-ci.
 - Les pneus de votre tracteur ont été surgonflés à l'usine pour l'expédition. La pression de pneu correcte est importante pour les meilleures résultats de tondeuse.
 - Rédiguez la pression à l'intérieur des pneus à la valeur en PSI indiquée sur ceux-ci.

FIG. 12

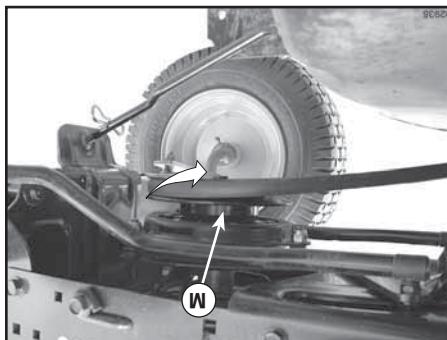

- Désaggelez la tige de tension de la courroie (k) de la manette de verrouillage (L).
 - Désinstallez la courroie sur la Pouille de l'embrayage avant (M).
 - Assurez-vous que la courroie est bien en place dans les sillons des pouilles de la tonduse.

Fig. 11

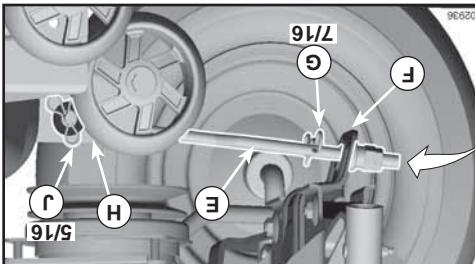

- FIXELLA BIELLE AVANT (E) - Comme celle à la gauche du tracé, l'insérer l'embout de l'assemblyage de la bielle dans l'orifice avant du support de suspension avant du tracteur (F) et fixez fermement à l'aide d'un 7/16 ressort-arrestoir (G) par l'officine de la bielle située derrière le support.
 - INSERER L'AUTRE EMBOUT DE LA BIELLE (E) - dans l'orifice du support avant de la tonduseuse (H) et fixez fermement à l'aide d'une rondelle et d'un 5/16 ressort-arrestoir (J).

FIG. 10


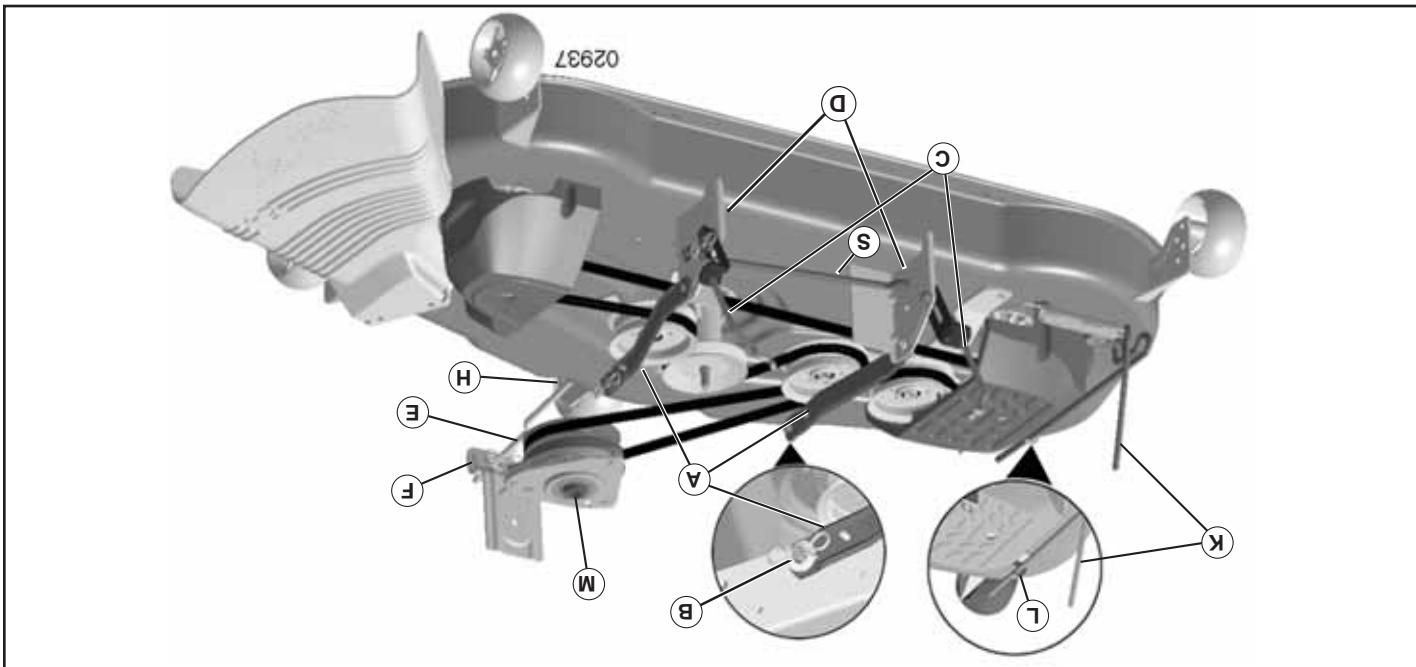


Fig. 9

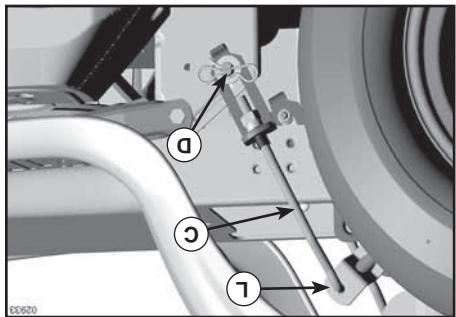


Répétez de l'autre côté du tracteur.

d'un ressort-arrestoir.

- Faites pivoter la barre vers vous et insérez l'autre extrémité dans l'orifice à l'arrière du support arrière de la tondueuse (D). Bougez la tondueuse au besoin pour insérer la barre. Fixez solidement en place à l'aide d'une rondelle et d'un

Fig. 8

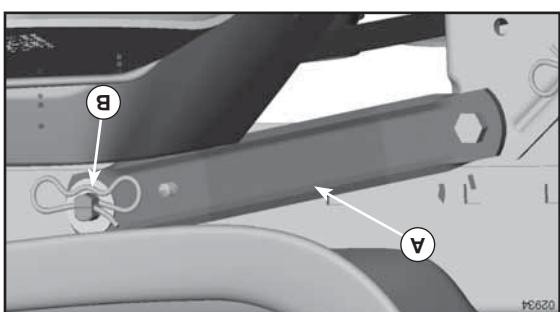


Repétez de l'autre côté du tracteur.

a l'aide d'une rondelle et d'un ressort

- Gissier la tendueuse sous le tracteur, jusqu'à ce qu'elle soit au centre de celle-ci.
 - Inclinez l'arbre à pâquerette vers l'arrière.

FIG. 6

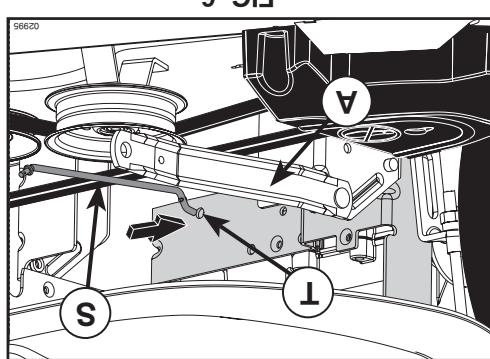

•(⊥)

- INSISTEZ D'ABORD LA BAAKKE ANTI-KOULIS (S). En combinant par le côté droit de la tondeuse, insérez la bâche anti-roulis dans l'orifice du support de transmission (T).

MONTAGE

MONTAGE

Retirez l'attache de plastique retenant la courroie, ramenez-la courroie vers l'avant et assurez-vous qu'elle est bien en place dans les sillons de toutes les poulies.


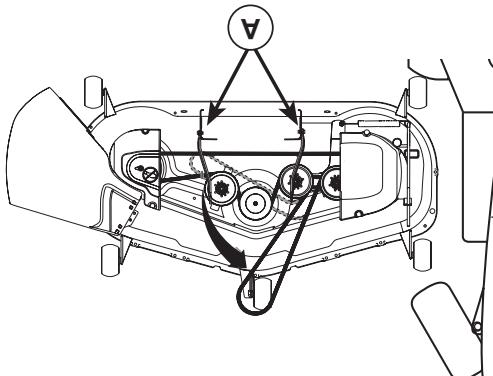


Fig. 4

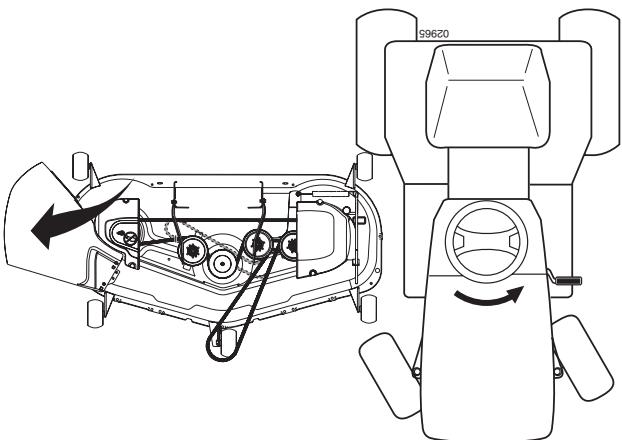


Tournez le volant aussi loin que possible vers la gauche et positionnez la tonduse à la droite du tracteur, le déflecteur

ATTENTION : Le levier possède un mécanisme à ressort. Tenez fermement le levier le levage, abaissez-le lentement et enclenchez-le à sa position la plus basse.



Fig. 3

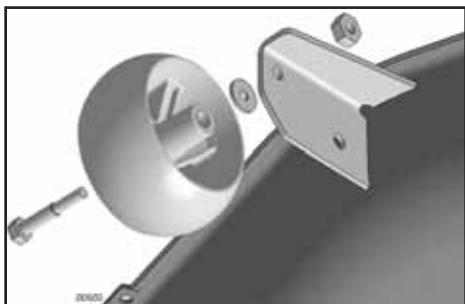

INSTALLEER LA TONDUSE ET LA COURROIE D'ENTRAÎNEMENT (Voir les Figs. 4-12)

Voir le document ASSEMBLAGE DE LA TONDUSE ET DE LA COURROIE D'ENTRAÎNEMENT pour en savoir plus sur cette assemblage.

Assurez-vous que le tracteur se trouve sur une surface de niveau et actionnez le frein de stationnement.

Abaissez le levier de levage à sa position la plus basse.

- **ASSEMBLÉZ LA ROUTE AVANT DE LA TONDEUSE (Voir la Fig. 3)**
- Continuez selon les instructions suivantes.
- **Tournez la clé à "Stop".**
- **Appliquez le frein pour arrêter le tracteur, actionnez le frein de stationnement et placez le levier de vitesse au neutre.**
- **Déplacez l'ensemble devant le levier de vitesse vers l'avant et dirigez déboulonner le frein de stationnement.**
- **Après le démarrage du moteur, déplacer la commande des gaz au point mort.**
- **Retirez la clé du sac et démarrez le moteur (voir POUR DÉMARRER) dans la section Fonctionnement de ce manuel).**
- **Relever du levage d'accèssoire dans la position la plus haute, presser le piston du levier de levage et placer le dispositif du levage sur le siège, presser la pédale de frein/embrayage et appuyer sur le levier de vitesse en position neutre (N).**
- **Placer le levier de vitesse en position neutre.**
- **S'assoir sur le siège, presser la pédale de frein/embrayage et enclencher le controllor de la roue libre en position "transmission desserrée".**
- **Vérifiez le niveau de l'huile du moteur et remplissez le réservoir d'essence.**
- **S'assurer d'avoir terminé toute phase d'assemblage.**
- **Verifiez le niveau de l'huile du moteur et remplissez le réservoir de graisse.**
- **Placer le levier de contrôle de la roue libre en position "transmission serrée".**
- **S'assoir sur le siège, presser la pédale de frein/embrayage et enclencher le controllor de la roue libre en position "transmission serrée".**
- **Placer le levier de levage et placer le dispositif du levage sur le siège, presser la pédale de frein/embrayage et appuyer sur le levier de levage et placer le levier de levage dans la position la plus haute.**
- **Appuyez sur le levier de levage et déplacer la commande des gaz au point mort.**
- **Retirez la clé du sac et démarrez le moteur (voir POUR DÉMARRER) dans la section Fonctionnement de ce manuel).**
- **Relever du levage d'accèssoire dans la position la plus haute, déplacez l'ensemble devant le levier de levage et dirigez le levier de levage et déboulonner le frein de stationnement.**
- **Après le démarrage du moteur, déplacer la commande des gaz au point mort.**
- **Appliquez le frein pour arrêter le tracteur, actionnez le frein de stationnement et placez le levier de vitesse au neutre.**
- **Continuez selon les instructions suivantes.**
- **Tournez la clé à "Stop".**
- **Assemblez la tonduse tel que montré. Serrez fermement.**
- **A l'aide de la vis à épaulement, de la rondelle et du contre-**

POUR RETIRER LE TRACTEUR DE LA PALLETTE ENLE CONDUISANT (Voir la section fonctionnement pour connaître l'emplacement et la fonction des commandes.)

- POUR RETIRER LE TRACTEUR DE LA PAL-ETTE ENLEVE FASANT ROULER (Voir la section fonctionnement pour connaître l'emplacement et la fonction des commandes.)
- Abaissez le levier de levage du piston et, placez le levier de levage d'accrosseur à la position la plus haute.
- Appuyez sur la pédale de frein/embrayage pour dégager le frein de stationnement.
- Déplacez la commande de roue libre à la position roue libre pour débrayer la transmission. (Voir "POUR TRANSPORTER" dans la section fonctionnement de ce manuel).
- Retirez le tracteur hors de la palette en le faisant rouler.

Avertissement : avant le démarrage, nous vous prions de lire, comprendre et suivre toutes les instructions dans la section Fonctionnement de ce manuel d'instructions. S'assurer que le tracteur soit placé dans une zone bien dégagée. S'assurer qu'il y a aucune personne ou objet.

This image shows a close-up of the rear side panel of a vehicle. A metal bracket is attached to the panel, and a callout labeled 'A' points to the area where the rear door handle would be located.

ASSEMBLEZ LA ROUTE AVANT DE LA


TONDUEUSE (Voir la Fig. 3)

- **et la fonction des commandes.**
 - *S'assurer d'avoir terminé toute phase d'assemblage.*
 - *Vérifier le niveau de l'huile du moteur et remplir le réservoir d'essence.*
 - *Placer le contrôle de la roue libre en position "transmission enclenchée".*
 - *S'asseoir sur le siège, presser la pédale de frein/embrayage et appuyer le frein de stationnement.*
 - *Placer le levier de vitesse en position neutre (N).*
 - *Presser le piston du levier de levage et placer le dispositif du levier du levage d'accessoire dans la position la plus haute.*
 - *Mettre la clé du sac et démarrez le moteur (voir "POUR DÉ-ARMER") dans la section Fonctionnement de ce manuel).*
 - *Apres les démarques du moteur, déplacer la commande des gaz au point mort.*
 - *Débloquer le frein de stationnement.*
 - *Déplacez lentement le levier de vitesse vers l'avant et diriger lentement le tracteur hors de la palette.*
 - *Appliquer le frein pour arrêter le tracteur, actionner le frein de stationnement et placer le levier de vitesse au neutre.*
 - *Tournez la clé à "Stop".*

- Relâchez du levier pour assurer le siège en position.
- Soulevez le levier de réglage (a) et glissez le siège jusqu'à ce que vous soyez dans une position confortable qui vous permet d'appuyer complètement sur la pédale de frein.
- Assoyez-vous sur le siège.

AJUSTEZ LE SIÈGE (Voir la Fig. 2)

FIG. 1

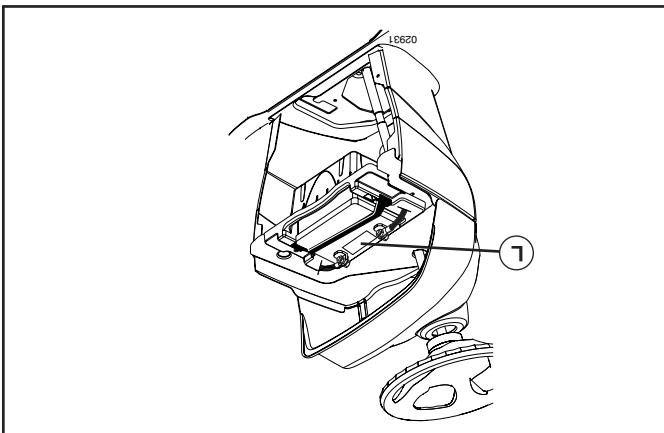

REMARQUE: Si cette batterie est mise en service après les mois d'janvier incluant la batterie (L) (évidemment localisée entre les bormes), chargez la batterie pour un minimum d'une heure à 6-10 amps. (Voir "BATTERIE" dans la section Entretien de ce manuel).

- Leviez le capot.
- Vérifiez si il y a des pièces détachées et conservez-les.
- Étendre à plat les panneaux situés à chaque bout et de carton. Enlever les lignes pointillées sur les quatre surfaces pour le long des plis des pièces détachées et les petites boîtes contenants les pièces détachées et les petites boîtes.
- Couper le long des lignes pointillées sur les quatre surfaces de carton. Enlever les lignes pointillées sur les quatre surfaces pour le long des plis des pièces détachées et les petites boîtes.
- Vérifiez si il y a des pièces détachées et conservez-les.


DEBALLER LE CARTON

CARTON POUR SORTIR LE TRACTEUR DU

Quand on utilise l'expression "DROITE" ou "GAUCHE", elle signifie la droite ou la gauche à partir de la position derrière le volant de direction.

Votre nouveau tracteur a été monté à l'usine sauf les pièces qui ne sont pas montées pour l'expédition.

MONTAGE

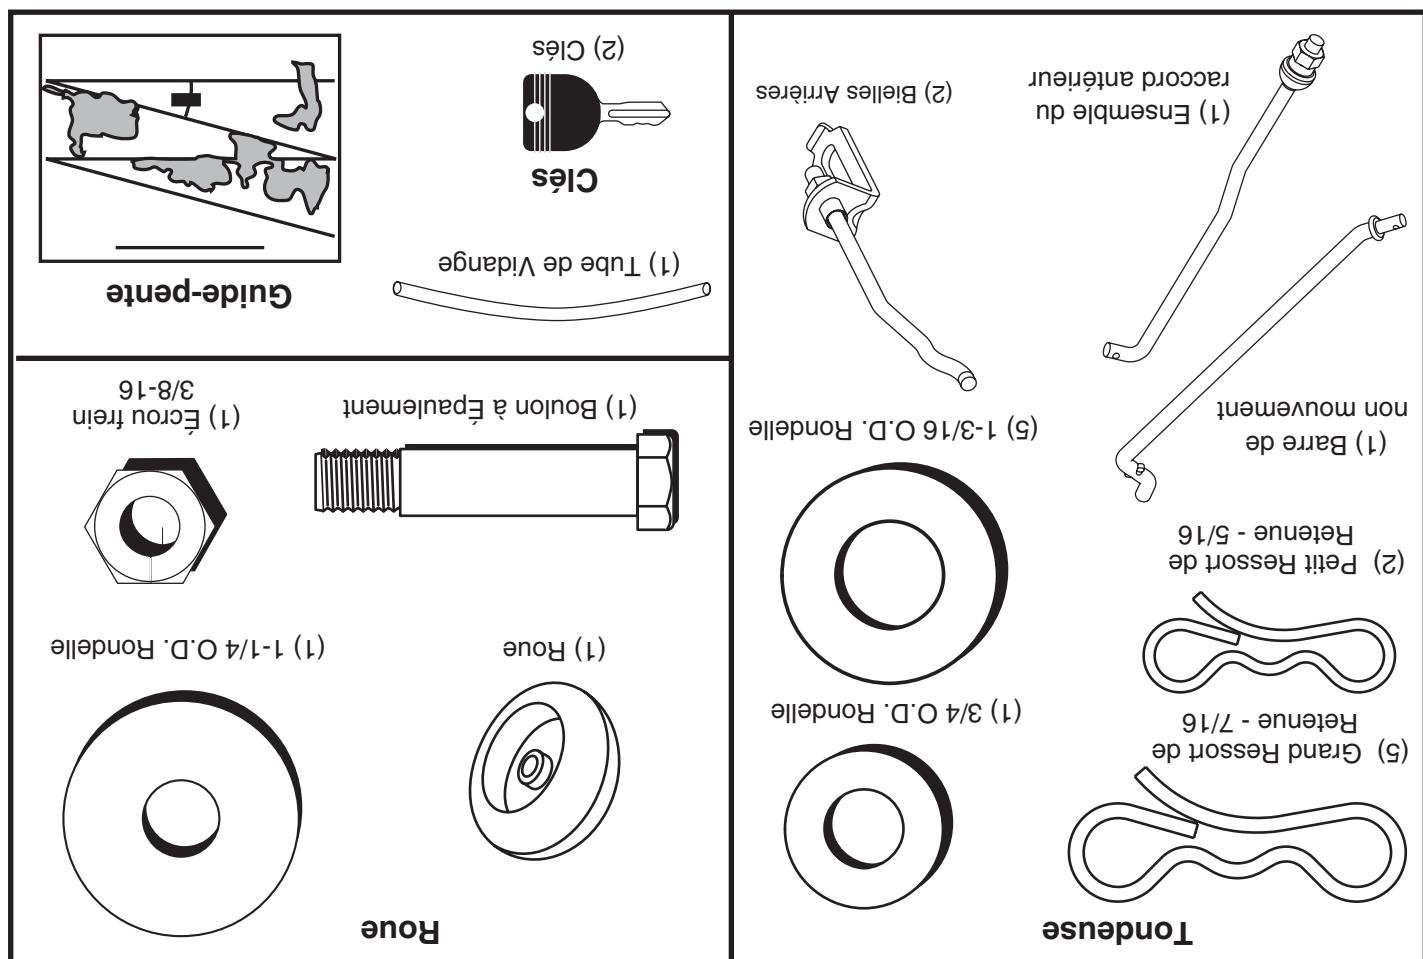

PièCES NON MONTÉES

SPÉCIFICATIONS DE PRODUIT	3,0 Gallons	d'essence	Lessence sans plomb normale	Capacité et le type
(API-SG-SL):	SAE 30	(Supérieure de 32°F/0°C)	Type d'huile	
Veuillez lire et conserver ce manuel. Les instructions qu'il contient vous permetront de monter, et démonter correctement votre tracteur. Observer toujours les "RÈGLES DE SECURITÉ".	AVERTISSEMENT:			
• Lisez et observez les règles de sécurité.	AVERTISSEMENT:			
• Suivez un programme régulier d'entretien, et d'utilisation du tracteur.	AVERTISSEMENT:			
• Suivez les instructions dans les sections Entretien et Entreposage de ce manuel du propriétaire.	AVERTISSEMENT:			
Un pare-éclaboussure pour le silencieux est disponible au centre fonctionnement par l'opérateur.	RECHANGÉ de ce manuel).			
d'entretien autorisé le plus proche (Voir la section PIÈCES DE RÉPARATION).	RÈGLES DE SECURITÉ			
ENTRETIEN ET RÉGLAGES 2-3	ENTRETIEN 2-3			
RÉVISION ET RÉGLAGES 4	RÉVISION ET RÉGLAGES 4			
ENTRETIEN 26-27	ENTRETIEN 26-27			
GARANTIE 29	GARANTIE 29			
MONTAGE 25	MONTAGE 25			
UTILISATION 25	UTILISATION 25			
GUIDE D'ENTRETIEN 16	GUIDE D'ENTRETIEN 16			

SOMMAIRE

Un pare-éclaboussure pour le silencieux est disponible au centre fonctionnement par l'opérateur.

d'entretien autorisé le plus proche (Voir la section PIÈCES DE RÉPARATION).

- Suivez les instructions dans les sections Entretien et Entreposage de ce manuel du propriétaire.
- Suivez un programme régulier d'entretien, et d'utilisation du tracteur.
- Suivez les instructions dans les sections Entretien et Entreposage de ce manuel du propriétaire.

RESPONSABILITÉS DU CLIENT

Si survient d'un problème que vous ne pouvez pas résoudre, contactez le centre d'entretien autorisé le plus proche. Vous y trouverez des techniques qualifiées équipées des outils appropriés pour faire l'entretien et la réparation de ce tracteur.

Veuillez lire et conserver ce manuel. Les instructions qu'il contient vous permettent de monter, et démonter correctement votre tracteur. Observer toujours les "RÈGLES DE SECURITÉ".

Perfectionnez, et fabriquez pour assurer un rendement et sûreté maximum.

Spécifications de produit	3,0 Gallons	d'essence	Lessence sans plomb normale	Capacité et le type
(API-SG-SL):	SAE 30	(Supérieure de 32°F/0°C)	Type d'huile	Type d'huile
Veuillez lire et conserver ce manuel. Les instructions qu'il contient vous permettent de monter, et démonter correctement votre tracteur. Observer toujours les "RÈGLES DE SECURITÉ".	AVC un filtre 1,96 L	Sans filtre 1,77 L	Capacité d'huile:	Capacité d'huile:
• Lisez et observez les règles de sécurité.	Champignon QC12YC	(Ecart: 0,040 po/1,20 mm)	Bougie d'allumage:	Bougie d'allumage:
• Suivez un programme régulier d'entretien, et d'utilisation du tracteur.	Marche en avant: 5,5/8,9	Marche en arrière: 2,4/3,9	Vitesse de marche	Vitesse de marche
• Suivez les instructions dans les sections Entretien et Entreposage de ce manuel du propriétaire.	16 ampères @ 3600 RPM	16 ampères @ 3600 RPM	Système de chargement:	Système de chargement:
• Suivez les instructions dans les sections Entretien et Entreposage de ce manuel du propriétaire.	AMPA/HR: 35	MIN. CCA: 280	Batterie:	Batterie:
• Suivez les instructions dans les sections Entretien et Entreposage de ce manuel du propriétaire.	DIMENSION: U1R	bouilon de lame: 45-55 ft.-lbs. (61-75 N/m)	Coupling de rotation au	Coupling de rotation au

ENTRETIEN GÉNÉRAL

- Ne faites jamais déborder le réservoir. Remettez le capuchon de gaz en place et serrez solidement.

REGLES DE SECURITE



III. ENFANTS

- MANIPULATION SURE DE LESSENCE**

V. ENTRETIEN

IV. REMOORAGE

III. SÉCURISATION DES ENFANTS

II. SECURISATION DES PERSONNES

I. SECURISATION DES BIENS

III. ENFANTS



V. ENTRETIEN

- # MANIPULATION SURE DE LESSENCE


V. ENTRETIEN

Portez toujours des lunettes de sécurité lors de l'utilisation.

TRACTEUR DE PELOUSE **PB24H54YT**

MODÈLE:

MANUEL DU PROPRIÉTAIRE

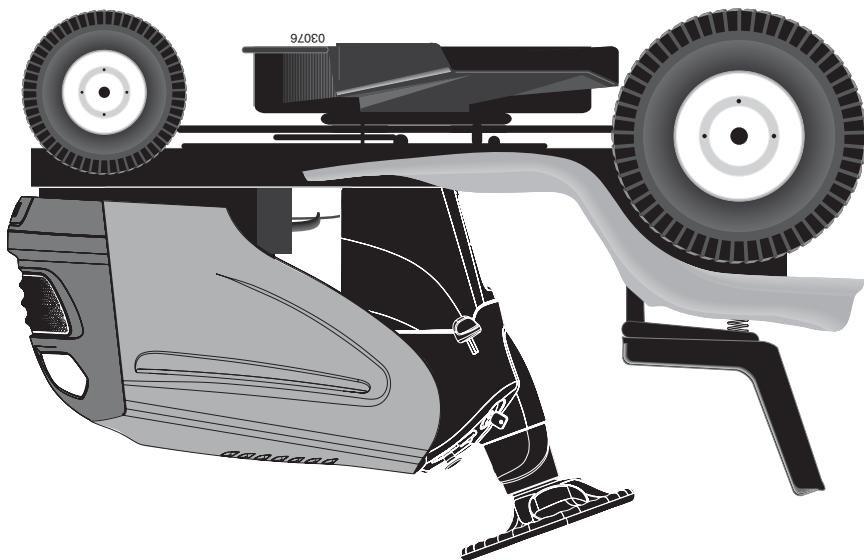

Poulan Pro